
SIEMENS


TRIM & HINGE INSTALLATION INSTRUCTIONS



TRIM

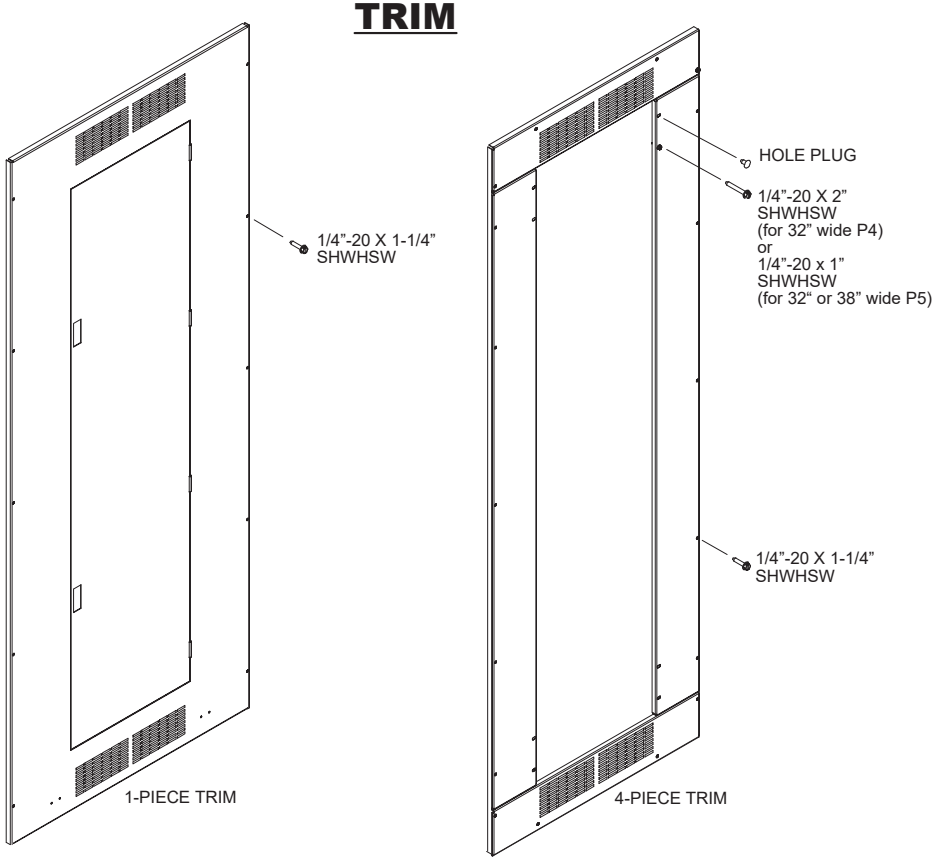

HINGED GUTTER COVERS

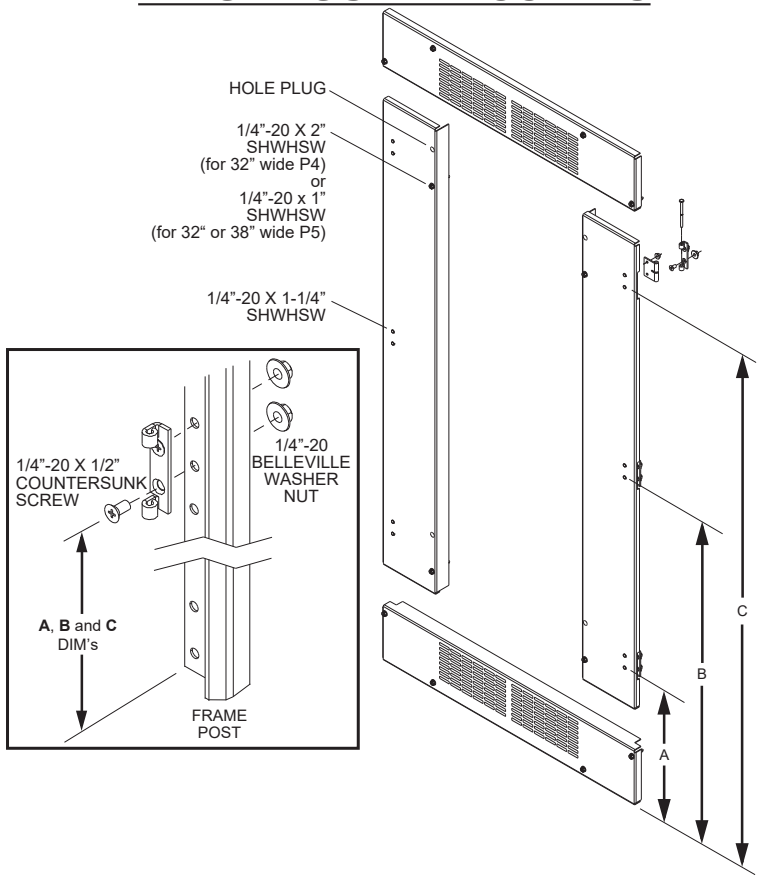

1. Attach the trims to the box using the 1/4”-20 washer-head, thread-forming screws provided.
2. All 1-piece trims use ONLY 1-1/4” long screws.
3. All 4-piece trims use 1-1/4” long screws on the EXTERIOR edges.
4. 32” wide **P4** trims with DEEP inner flanges (1.56”) use 2” long screws on INTERIOR edges.
5. 32“ or 38” wide **P5** trims with SHALLOW inner flanges (0.60”) use 1” long screws on INTERIOR edges.
6. Hinged gutter covers use the same interior edge screws as standard 4-piece trims.
7. Hinges mount with 1/4”-20 x 1/2” countersunk screws and 1/4”-20 belleville washer nuts.
8. Field measure hinge locations to establish positions on frame posts (see **A**, **B** & **C** above).
9. Torque trim cover screws to **50 in-lb**.

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser’s purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks-Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

11-A-1078-01 Rev. 02