INSTALLING THE NEUTRALS:

(Refer to Fig. 6 for Panelboard, Fig. 7 for Switchboard)

20. The Neutral is located at the bottom of the Z-rails, or mirrored at the top of the Z-rails depending upon the feed cable location. For Panelboard applications, use the Panelboard Neutral Lug Assemblies (Item 8); for Switchboard applications, use the Switchboard Neutral Lug Assemblies (Item 9). Mount as shown or mount to any other available hole on either side of the Neutral and oriented to best fit the cable feed direction.

21. Tighten the screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

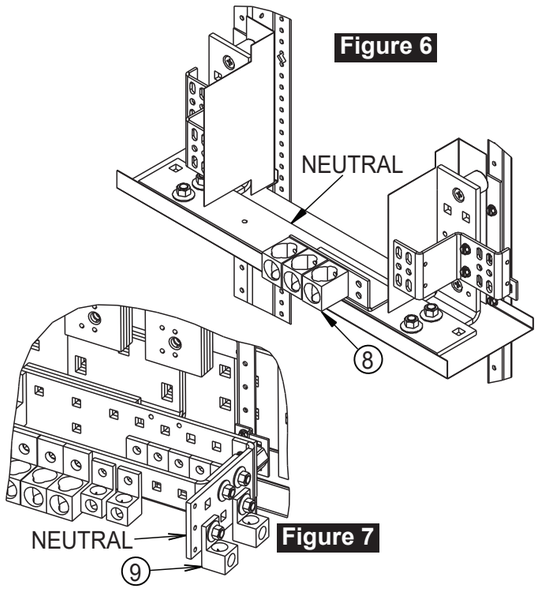


Figure 6

Figure 7

INSTALLING THE CABLES:

(Skip this section for provisions)

22. Insert and loosely secure the cables to the lugs on the neutral lugs and the “OFF”-side of the breaker.

23. Tighten to the torque noted in the lug instruction sheet, on the device or specified on the torque label on the rear of the deadfront.

24. Install the lug terminal shield on the “OFF”-side by sliding it into the grooves, per lug kit instructions.

25. Re-install the “OFF”-side and “ON”-side shield covers by placing them over the proper ends, inserting the shield cover screws and tightening to 11 lb-in.

INSTALLING FILLER PLATE TO COVER PLATE:

(Skip this section for installed breaker)
(Refer to Figure 10)

26. Orient the Provision Filler Plate (Item 10) to the Cover Plate (Item 11) as shown. (The Filler Plate comes with a pre-applied label. That label should face the exterior, and be oriented such that it can be read when this assembly is installed onto the deadfront supports.)

27. Secure the Provision Filler Plate (Item 10) to the Cover Plate (Item 11) with a pair of round head screws and locknuts (part of Item 10), one set at each corner.

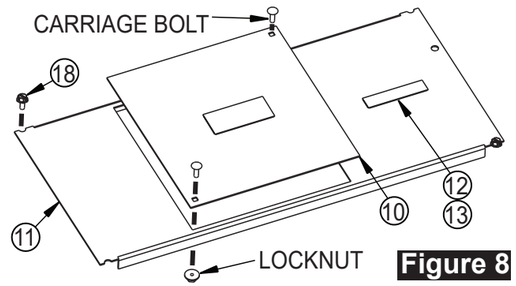


Figure 8

INSTALLING THE COVER PLATE:

28. Install the Cover Plate (Item 11) by aligning it over the breaker mounting provision and loosely secure it to the deadfront support rails with the pair of 1/4”-20 x 3/8” screws (Item 18).

29. Once all the covers are in place, tighten all the fasteners to the torque specified on the rear of the deadfront or noted in the table on page 2.

HANDLE EXTENSION:

(Refer to Figure 9)

30. Follow the instructions provided with the Handle Extension Holder Assembly (Item 14) to locate and install it.

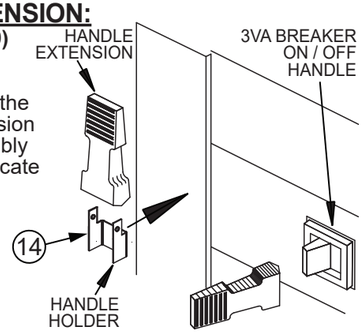


Figure 9

COMPLETING THE INSTALLATION:

31. **Ensure that any bus or breaker hardware is torqued as specified on the rear of the deadfront. Then replace all the cover plates and gutter covers. Finally, ensure any fillers are in place BEFORE re-energizing the equipment.**

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser’s purposes, the matter should be referred to the local **Siemens** sales office. The contents of this instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of **Siemens**. The warranty contained in the contract between the parties is the sole warranty of **Siemens**. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks - Unless otherwise noted, all names identified by ® are registered trademarks of **Siemens AG** or **Siemens Industry, Inc**. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

SIEMENS

S3VA57TD

Switchboard / P5 Powerpanel Strap Mounting Kit for a 1,200A 3VA57 or 3VA67 Breaker in Unit Space

Installation Instructions

Installation Instructions

The following instructions are for the installation of Siemens strap kit **S3VA57TD** in a Switchboard or P5 Power Panel. It is for use with a **Siemens Type 3VA57 (MNAS, HNAS** or **CNAS)** or **Type 3VA67** (**MNAE**, **HNAE** or **CNAE**) breaker as a Branch device in a **1,200A** application. The parts provided in this kit connect these breakers to a 3-phase, 3 or 4-wire system. This kit requires **10”** of unit space, and a minimum 38” wide enclosure for lugs up to 600 kcmil, or 46” wide for either 750 kcmil lugs or SEM3 applications.

NOTE: The breakers and breaker lugs are <u>NOT</u> included in this kit and must be purchased separately.

THIS KIT CONTAINS THE FOLLOWING ITEMS:

ITEM	DESCRIPTION	QTY	TORQUE
1	Long Strap	1	N/A
2	Medium Strap	1	N/A
3	Short Strap	1	N/A
4	Breaker Mounting Bracket	1	N/A
5	Phase Bracket	1	N/A
6	Phase Brace	1	N/A
7	Gutter Barrier	1	N/A
8	Panelboard Neutral Lug Assembly	4	N/A
9	Switchboard Neutral Lug Assembly	4	N/A
10	Filler Plate Assembly	1	N/A
11	Cover Plate	1	N/A
12	Circuit ID Card	1	N/A
13	Card Holder	1	N/A
14	Handle Holder Kit	1	N/A
15	Bus Hardware Kit, Strap to Section*	1	72 lb-in
16	5/16”-18 x 1-3/8” SEMS Screw	6	144 lb-in
17	5/16” Narrow Washer	6	N/A
18	1/4”-20 x 3/8” Screw	2	72 lb-in
19	1/4”-20 x 1/2” Screw	7	72 lb-in
20	1/4”-20 x 5/8” Screw	6	72 lb-in
21	1/4”-20 x 3-3/4” Screw**	2	72 lb-in

* This sub-kit of parts is packaged in a bag labeled “Standard Bus Hardware Kit”. It includes an instruction card and 18 fasteners (of three different lengths). Select fasteners per the instruction card and discard the rest.

** Breakers ship with four long 1/4”-20 Screws; those should be discarded. Instead, use the pair of 1/4”-20 x 3-3/4” Screws included with this kit.

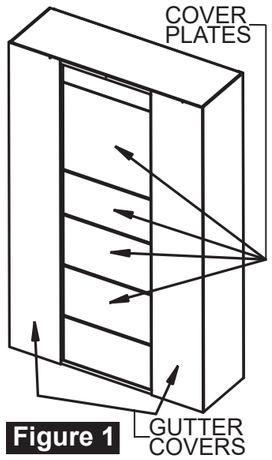


Figure 1

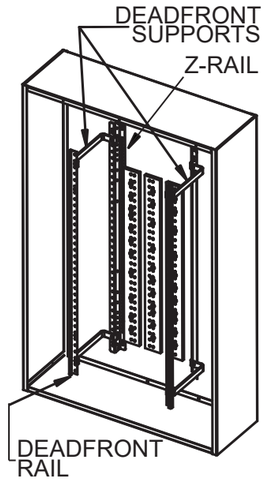


Figure 2



⚠ DANGER

Hazardous voltage. Will cause death or serious injury.

Keep out.
Qualified personnel only.
Disconnect and lock off all power before working on this equipment.

NOTE: A Qualified Person is one who has the skills and knowledge related to the construction and operation of electrical equipment and installations and has received safety training to recognize and avoid the hazards involved.

PREPARING THE EQUIPMENT:

(Refer to Figures 1 and 2)

1. **Lock off the power supplying this equipment before working on it.**
2. Remove the two gutter covers.
3. This kit requires 10” of empty unit space. To locate the proper mounting position, measure from the top deadfront support to the top of the empty unit space filler on the deadfront. Transfer this dimension from the deadfront support along the Z-rail and mark. This will be the unit space. After marking the Z-rail, remove the deadfront.
4. If an existing branch module occupies the same location chosen for this kit, remove all of its devices and components.

PREPARING THE STRAP ASSEMBLY:


(Refer to Figure 3)

5. Loosely attach the plastic Phase Brace (Item 6) to the bottom of each Strap (Items 1, 2 & 3) by using two 1/4”-20 x 5/8” Screws (Item 20) per phase through the Phase Brace, through the 5/16” Narrow Washers (Item 17) and into the bottom of each Strap, as shown.

Narrow Washers are critical to maintain creepage distance.

6. Keeping the Phase Brace perpendicular to the three Straps, and the Straps parallel to each other, tighten the 1/4”-20 x 5/8” Screws to the torque specified on the rear of the deadfront or noted in the table on page 2.
7. Assemble the Gutter Barrier (Item 7) and the Phase Bracket (Item 5) to the Phase Brace (Item 6) using three 1/4”-20 x 1/2” Screws (Item 19) through the Barrier then through the Brace and into the Bracket.
8. Tighten the three screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

Figure 3

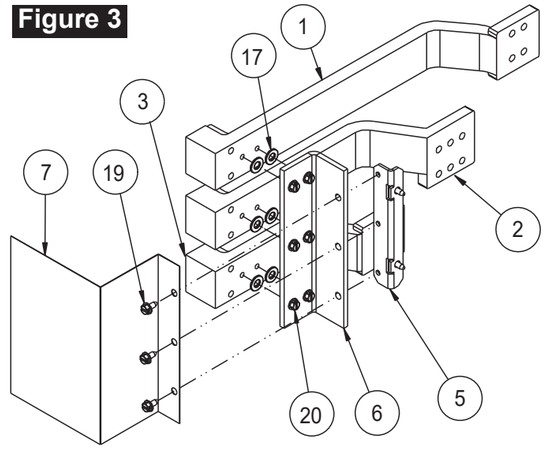

MOUNTING THE STRAP ASSEMBLY:

(Refer to Figure 4)

9. Orient the Strap Assembly and position it in the vertical center of the 10” unit space required. The Straps should land and align on bus mounting holes, and the Phase Bracket should land and align on the top surface of the Z-rail.
10. Loosely fasten the Phase Bracket to the Z-rail using a pair of 1/4”-20 x 1/2” Screws (Item 19).
11. Loosely fasten each of the Straps to the bus using four screws per phase from the Bus Hardware Kit (Item 15). (NOTE: Refer to the 5” x 7” instruction card packaged with the Bus Hardware Kit to select the twelve screws of the proper length for the number of bus laminations.)
12. Tighten the screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

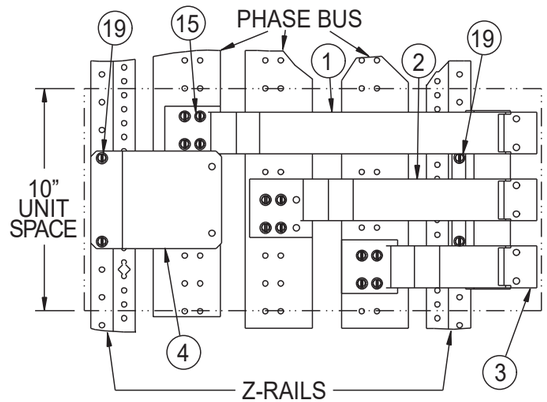


Figure 4

INSTALLING THE BREAKER LUGS:

(Skip this section for provisions)

(Lugs sold separately)

13. Install the lug kit (NOT INCLUDED) per lug installation instructions onto the “OFF” end of the breaker (marked 2, 4, 6). Do NOT install lug covers at this time.
14. Tighten the lug mounting screws to the torque specified in the lug kit instructions.

INSTALLING THE SIEMENS BREAKER:


(Skip this section for provisions)
(Refer to Figure 5)

(Breaker sold separately)

15. Loosely fasten the Breaker Mounting Bracket (Item 4) to the other Z-rail, centered in the 10” unit space, with a pair of 1/4”-20 x 1/2” Screw (Item 19).
16. Position the 3VA breaker over the 10” unit space, with the lug end sitting on the Breaker Mounting Bracket and the other end sitting on the three Strap ends.
17. Loosely secure the lug end of the 3VA breaker to the Breaker Mounting Bracket using the two 1/4”-20 x 3-3/4” Screws (Item 21).
18. Loosely secure the other end of the 3VA breaker to the Strap ends using a pair of 5/16”-18 Screws (Item 16) per phase.
19. Tighten the screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

Figure 5

Gutter Barrier NOT shown for clarity

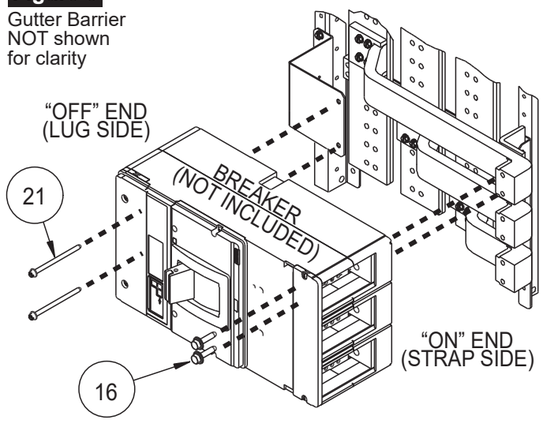

(Instructions continue on next page)