SIEMENS

SEBPPVA1

Installation Instructions for Service Entrance Barrier Kit for Horizontally-Mounted 3VA53 / 63 / 54 / 64 Breaker in Siemens Power Panels or Switchboards



⚠ DANGER


Hazardous voltage. Will cause death or serious injury.


Keep out.
Qualified personnel only.
Disconnect and lock off all power before working on this equipment.


This instruction sheet is to support the field installation of a Service Entrance Barrier Kit into a Siemens Switchboard or P4 / P5 Power Panelboard. Kit is for three-phase, top or bottom fed, single, horizontally-mounted 3VA53 / 63 / 54 / 64 breakers.


ITEM	DESCRIPTION	QTY	TORQUE
1	Barrier	1	N/A
2	P4 Barrier Bracket	1	N/A
3	P5 / Switchboard Barrier Bracket	1	N/A
4	Service Entrance Barrier Label	1	N/A
5	Plastic Tree Rivet	2	N/A
6	1/4"-20 x 7/16" Screws	3	30 lb-in

1. **Lock off ALL power supplying this equipment before working on it.**
2. Remove the panelboard front cover and deadfront.
3. Locate the Service Terminal End of the Service Main, the end with terminals marked 2, 4 & 6. Note the center hole on the breaker mounting bracket base.
4. Select the proper Barrier Mounting Bracket (Item 2 or Item 3), depending on the panel type -- P4 (shallow) or P5/Switchboard (deep), and loosely assemble it thru the center hole on the breaker mounting bracket base and into the Base Rail with a 1/4"-20 screw (Item 6). Note that the two cut-outs at the base of the Barrier Mounting Bracket nestle around the two screws that attach the breaker mounting bracket to the Base Rail.
5. Place the formed Barrier (Item 1) onto the Barrier Mounting Bracket (Item 2 or 3). Note that the two Plastic Tree Rivets (Item 5) will need to be pushed into the small holes on either side of the Barrier Mounting Bracket (Item 2 or 3).
6. Drive two 1/4"-20 screws (Item 6) through the top of the Barrier (Item 1) and into the top of the Barrier Mounting Bracket (Item 2 or 3).
7. Adjust the Barrier (Item 1) until it sits properly over the Service Terminal End of the breaker, then tighten the three 1/4"-20 screws to 30 lb-in.
8. Ensure the Label (Item 4) is applied and visible on the finished assembly.
9. **Before energizing the panel, ensure that ALL connections have been properly torqued, that the service entrance barrier is in place and secure, that the deadfront is installed and that all fillers are in place.**

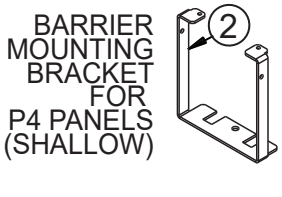

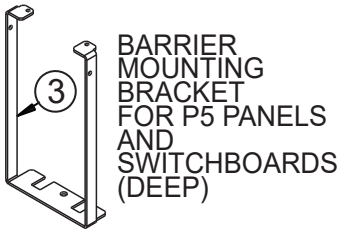

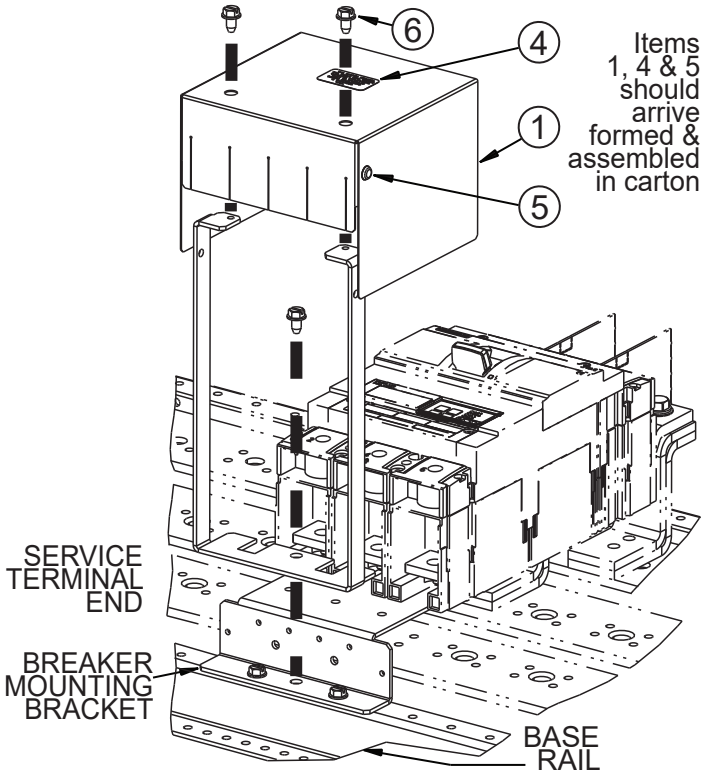

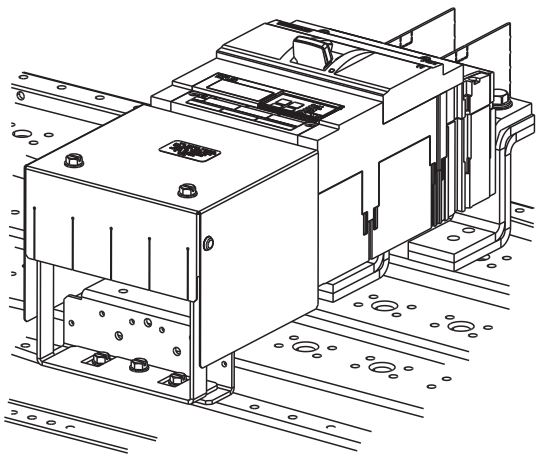

Contact Siemens Sales Office if considering usage in applications other than as shown.

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks-Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.