# SIEMENS

# BBKVA5262P2HW

**Instructions to mount 3VA52 / 3VA61 / 3VA62 Breakers in Lighting Panels that already have provisions for these**



**⚠ DANGER**

**Hazardous voltage. Will cause death or serious injury.**
Keep out.
Qualified personnel only.
Disconnect and lock off all power before working on this equipment.

**KIT INCLUDES:** Qty. (3) 3VA52 Nut Keepers; Qty. (3) 3VA61/62 Nut Keepers; Qty. (3) Bus Extensions; Qty. (2) Pan-Head Screws; Qty. (3) Socket-Head Screws


1. **Lock off ALL power supplying this equipment before working on it.**
2. Remove the panelboard front cover and deadfront.
3. Prepare the planned location for this new/replacement breaker. This includes:
   a. Removing strap kit line-side connection screws (set aside for use in Step 11)
   b. Loosening the strap kit to panel bus connection screws (which will be re-secured in Step 12)
4. Locate the breaker **(PURCHASED SEPARATELY)** and the components that came with this kit.
5. Identify the proper Nut Keepers for your specific breaker. The images to the right show some of the differences between the two types. (They are designed to fully seat properly only in the breaker cavity they are designed for.)
6. Slide a Nut Keeper under each phase of the breaker stabs on the "ON" side of the breaker. They "click" into place when properly inserted.
7. Place a Bus Extension on top of each phase of the breaker stabs with the anti-turn protrusions down, engaging with top surface of the stabs. The smaller hole should be towards the breaker, with the offset going up away from the breaker. (Refer to the Extension Bus detail and assembly images.)
8. Loosely secure each Bus Extension to each Nut Keeper with a Socket-Head Screw.
9. Orient the breaker such that:
   a) The side with the bus extensions is aligned with the strap kit straps
   b) The slots in the breaker engage the phase fins of the top barrier
   c) The mount holes in the breaker align with the correct threaded inserts in the top barrier
10. Fasten the breaker to the top barrier with the two Breaker Mounting Screws. (**NOTE:** Dispose of any breaker mounting screws that shipped with the breaker.)
11. Align the Bus Extension holes with the holes in the strap kit straps and fasten each phase with the strap kit line-side connection screws (removed in Step 3).
12. Tighten all screws to the torque values from this table or from the Hardware Tightening Torque label affixed to the rear of the deadfront:

| DESCRIPTION | TORQUE |
|---|---|
| #8-32 x 3" SHRMS | 13.3±1.8 lb-in |
| 5/16"-18 x 3/4" Machine Screw | 177 lb-in |


(Including screws from Step 3, which are also 5/16"-18)

13. **Before energizing the panel, ensure that the deadfront, barriers and fillers are all in place and secure, that the panelboard front cover is properly installed and that the door is closed/latched/locked.**

**3VA52 Nut Keeper**

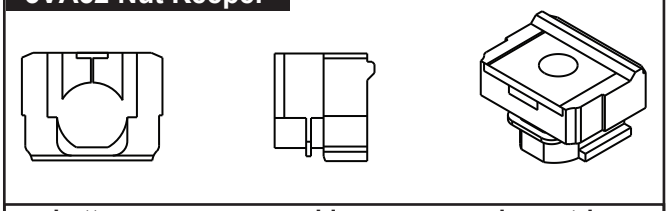


bottom side isometric

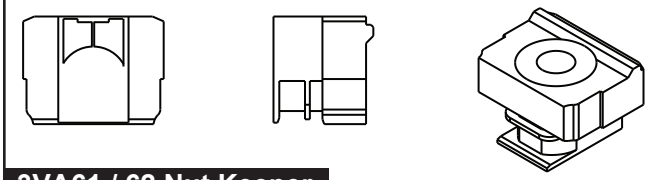


**3VA61 / 62 Nut Keeper**

**Extension Bus**

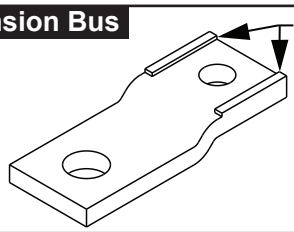


**(VIEW SHOWN IS UPSIDE DOWN, RELATIVE TO THE ASSEMBLY BELOW)**

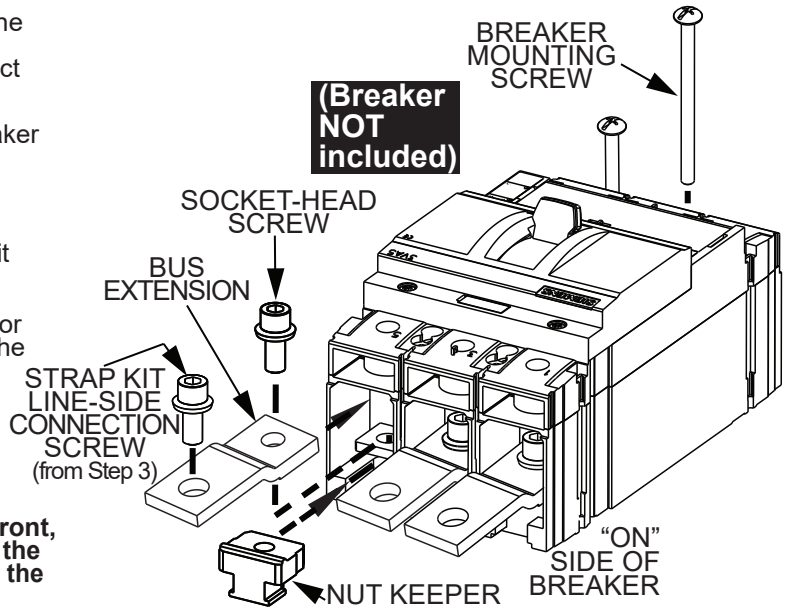


## Contact Siemens Sales Office if considering usage in applications other than as shown.

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks-Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.