NEUTRAL ASSEMBLY (additional details for P3 Panels):

15. If this kit is installed in a panel with a neutral, fasten the branch neutral lugs (Item 8) to any of the eight indicated sites on the upper or lower neutral cross bus with 1/4"-20 x 3/4" screws (Item 13). (Refer to Fig. 6)

16. For 30" wide enclosures, larger panels may have auxiliary neutral lug mounting locations on the vertical neutral riser bus, as shown on each side. If present, each of these 3-hole patterns can be used to mount one neutral lug. Place a neutral lug on the 3-hole mounting area, using the two holes that orient the lug towards the top or bottom of the panel. Use a pair of 1/4"-20 screws (Item 13) to secure the neutral lug to the vertical neutral riser bus. (Refer to Fig. 6 & 7) (NOTES: 1. Shorter interiors will not have these auxiliary locations. 2. These auxiliary locations should NOT be used with 24" wide enclosures due to wire bending guidelines.)

17. Tighten all screws to the torque values specified on the back of the deadfront (or the table on page 2).

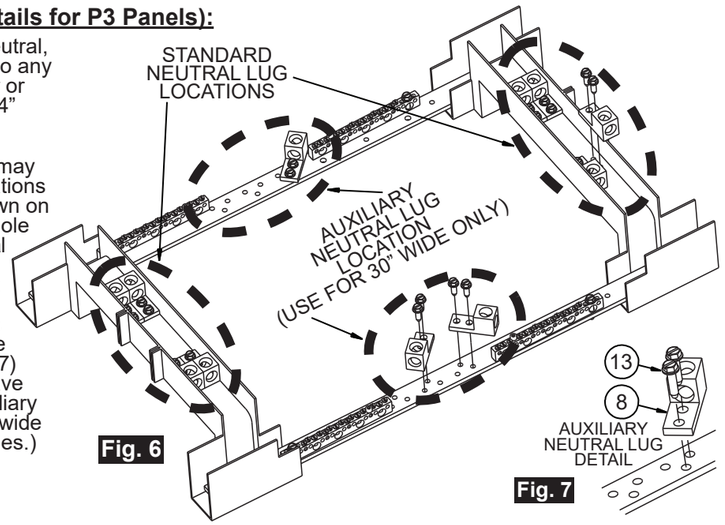


Fig. 6

Fig. 7

DEADFRONT MODIFICATIONS & PANEL RE-ASSEMBLY:

18. Identify the deadfront area that will cover the 6" kit unit space. Measure the unit space locating dimension **D** directly from the deadfront end plate (as shown). (Refer to Fig. 8)

19. Remove any full width plate and any center strip covering the deadfront area for the 6" kit unit space.

20. Fasten the proper deadfront plate (Item 5 for P2 panels; Item 6 for P3 panels) to the deadfront side rails with four #8-32 screws (Item 10) as shown.

21. Install the Escutcheon Plate (Item 7) by orienting it such that the "ON" marked on the Escutcheon Plate is over the ON side of the breaker and then inserting the clips on the opposite side and then rocking the "ON" side into position until it firmly "clicks" into place.

22. If the installed kit does not completely fill the unit space of removed modules, a deadfront filler plate kit is required to cover unit space where no branch components are installed. Use kit **DFFP3** for 3" gaps and kit **DFFP6** for 6" gaps.

23. If a deadfront center strip was removed to make space for this kit, and a shorter strip is needed to cover remaining dual-mounted branch modules, use kit **DFK1** to install the appropriate length strip.

24. Replace the deadfront using screws removed during disassembly.

25. Tighten all hardware to torque values on the back of the deadfront.

26. **Before energizing the panel, ensure that any barriers and fillers are in place and secure, that the deadfront is installed, that the trim is in place, and the door is closed and locked.**

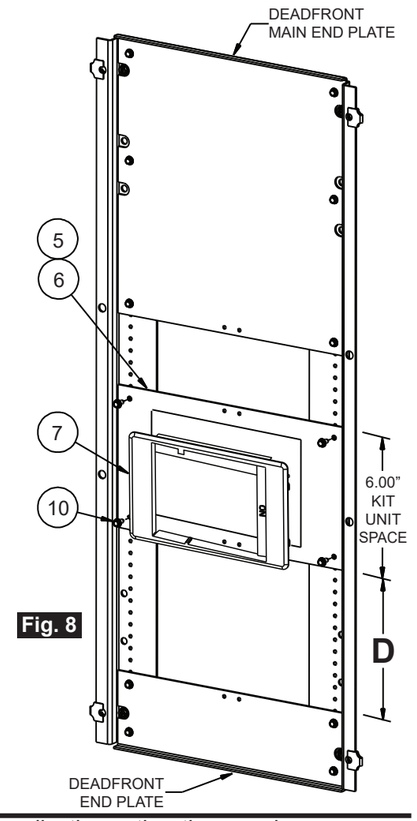


Fig. 8

Contact Siemens Sales Office if considering usage in applications other than as shown.

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks - Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

SIEMENS

BBKVA5262P2S

P2 / P3 Panelboard Kit for Branch Mounting 3VA52 / 3VA61 / 3VA62 Circuit Breakers

Installation Instructions

Installation Instructions

The following instructions are for the installation of a Siemens branch breaker kit for **3VA52 / 3VA61 / 3VA62** breakers in Type P2 or P3 Panelboards. The parts provided in this kit connect a 3VA breaker to a 1-phase, 2 or 3-wire system or a 3-phase, 3 or 4-wire system. This kit requires 6" of branch unit space. If any part of the unit space for this kit is presently covered on the deadfront by a center strip for dual mounted breakers, the deadfront may require modifications using kit **DFK1**. The deadfront will need a blank filler plate if this kit does not completely fill the unit space of any removed branch module(s). These deadfront filler kits are **DFFP3** for a 3" gap and **DFFP6** for a 6" gap. The breaker is NOT included with this kit and must be purchased separately. Be sure to choose the appropriate breaker for the system in use. For systems without neutrals, disregard the neutral instructions.



THIS KIT CONTAINS THE FOLLOWING ITEMS:

ITEM	DESCRIPTION	QTY	TORQUE
1	3VA52/61/62 Top Barrier	1	N/A
2	A-phase Connector Bus	1	N/A
3	B-phase Connector Bus	1	N/A
4	C-phase Connector Bus	1	N/A
5	P2 Deadfront Plate	1	N/A
6	P3 Deadfront Plate	1	N/A
7	Escutcheon Plate	1	N/A
8	Neutral Lug	1	N/A
9	3VA52/62 Hardware Kit	1	N/A
10	#8-32 x 9/32" Hex Washerhead Screw	4	30 lb-in
11	1/4"-20 x 1/2" SHWHSW	1	72 lb-in
12	1/4"-20 x 5/8" SHWHSW	3	72 lb-in
13	1/4"-20 x 3/4" SHWHSW	2	72 lb-in
14	1/4"-20 x 1" Machine Screw	4	72 lb-in
15	5/16"-18 x 3/4" Machine Screw	3	144 lb-in

NOTE: Instructions are provided for kit installation into 1-phase or 3-phase panels. Each application uses some -- but not all -- of the above listed parts.

PREPARE PANEL:

1. **Lock off all power supplying this equipment before working on it.**
2. Remove the panelboard front cover and deadfront.
3. This kit requires 6" of unit space. Determine the location where the kit is to be installed. The kit locating dimension **D** in Figure 1 must be a multiple of 3" (0", 3", 6", 9", etc.). This measurement can be taken directly from a neutral barrier if present, or from a bus support in panels without a neutral. Note that 0.25" must be added to dimension **D** when taking measurements from the bus support (0.25", 3.25", 6.25", 9.25", etc.). (Refer to Fig. 1)
4. If an existing branch module occupies the location chosen for this kit, remove all of its devices, components and parts.

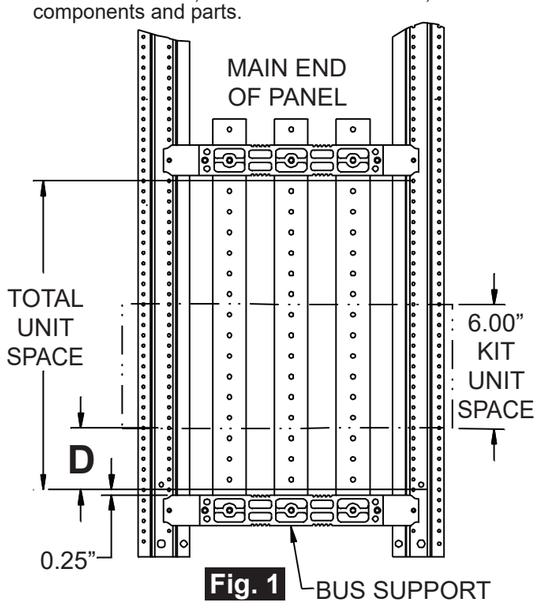


Fig. 1

BREAKER INSTALLATION:

5. Locate the Top Barrier (Item 1) vertically centered within the 6" unit space, using the pin feature on the back of the Top Barrier. Then fasten it to the bus with the 1/4"-20 x 1/2" screw (Item 11) for single-lamination phase bus or the 1/4"-20 x 1" screw (Item 14) for double-lamination phase bus. Do not tighten at this time. (Refer to Fig. 2)
   NOTE #1: Rotate 180° for alternative orientation. (Load-side of the breaker can be oriented towards the right or left gutter.)
   NOTE #2: If multiple large breakers (above 125A frame) are in a panel, an effort should be made to balance the use of gutter space by breaker orientation.

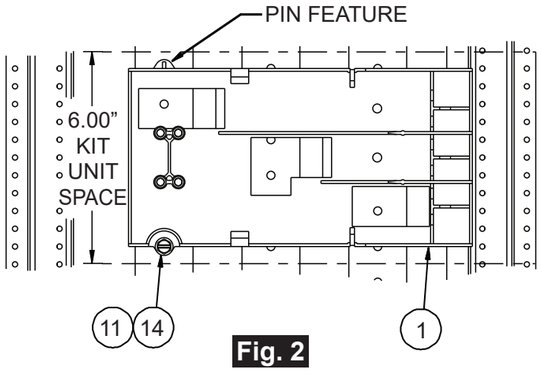


Fig. 2

6. Position the needed Connector Bus (Items 2, 3 & 4) onto the Top Barrier (Item 1) and fasten them to the phase bus using the proper 1/4"-20 screws:
   5/8" long (Item 12) for single-lamination phase bus;
   1" long (Item 14) for double-lamination phase bus.
   Do not tighten at this time.
   NOTE: Single-phase systems will omit the B-phase Connector Bus (Item 3). (Refer to Fig. 3)

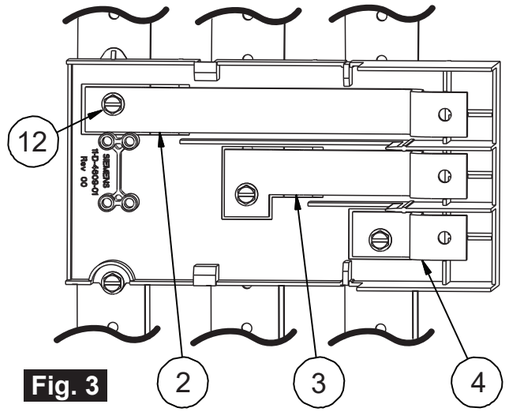


Fig. 3

7. Keeping the connectors aligned and their breaker connection holes spaced 1.38" apart, tighten all of the screws from Steps 5 and 6 to the torque values specified on the back of the deadfront (or the table on page 2).
8. If a breaker will NOT be mounted at this time, then order and install the components from Provision Kit **DFFPVA5262P2B**.
9. Prepare the breaker (purchased separately), using the Hardware Kit (Item 9) and the included instructions.
   NOTE: Hardware Kit includes two sets of Nut Keepers; one set clicks into place on the 3VA52 breakers, the other clicks into 3VA62 breakers. Attach Bus Extensions with included screws per instructions. (Refer to Fig. 4)

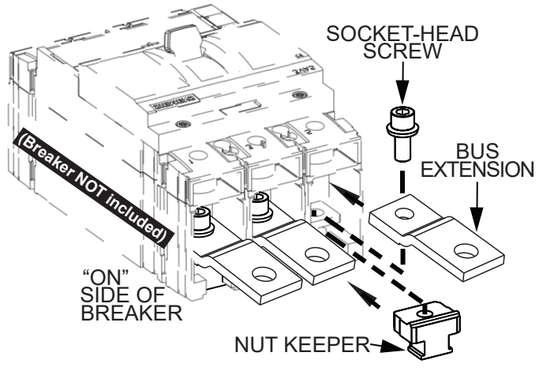


Fig. 4

10. Locate breaker assembly onto Top Barrier (Item 1) by aligning the Bus Extensions (mounted to the breaker) to the Connector Bus (Items 2, 3 and 4) and loosely secure with the 5/16"-18 x 3/4" screws (Item 15).
11. Fasten the breaker to the Top Barrier using the pair of #8-32 x 3" screws from the Hardware Kit (Item 9). (Refer to Fig. 5)

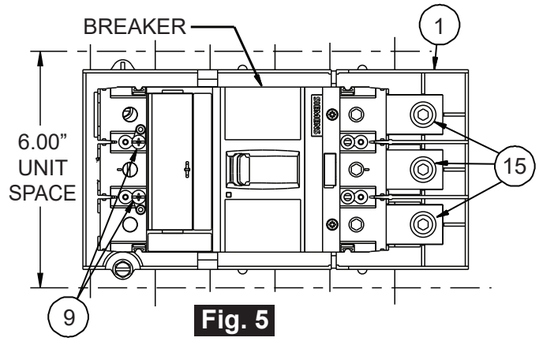


Fig. 5

12. On 1-phase 3-wire and 3-phase 4-wire systems, a neutral lug is required. For the 350 kcmil Neutral Lug (Item 8), place it on the neutral bus and fasten with the two 1/4"-20 x 3/4" screws (Item 13). (See Step 15 for additional details and alternate locations.)
13. Attach the main cables to the breaker and neutral terminal and torque connections to values specified on the device. If no values are listed on the device, refer to the Hardware Tightening Torque label affixed to the rear of the deadfront.
14. Tighten all of the screws from Steps 9 thru 13 to the torque values specified on the back of the deadfront (or the table on page 2).

continues on the next page