SIEMENS

SEBKRP1V7

Installation Instructions for Service Entrance Barrier Kit for Horizontally-Mounted 3VA52/61/62 Breaker in RP1 Panelboards




⚠ DANGER


Hazardous voltage. Will cause death or serious injury.
Keep out.
Qualified personnel only.
Disconnect and lock off all power before working on this equipment.


This instruction sheet is to support the field installation of a Service Entrance Barrier Kit into a Siemens RP1 Panelboard. Kit SEBKRP1V7 is for a Horizontally-mounted 3VA52/61/62 Breaker. This covers both single and three phase panels, either top or bottom fed units.

1. **Lock off ALL power supplying this equipment before working on it.**
2. Remove the panelboard front cover and deadfront.
3. If the breaker has a communications T-connector mounted at the breaker cable end, the flexible barrier must be modified. Locate and remove the tab on the support bracket side by tearing along the score lines. The barrier tab on the other side should be left in place.
4. Locate the Service Terminal End of the Service Main and note the empty hole on the Breaker Barrier nearest the Deadfront Support. This is the location to mount the Service Entrance Barrier.
5. Place the base of the Service Barrier Assembly (Item 1) on the Breaker Barrier, aligning the two holes. The Service Barrier Assembly should be vertically centered on the Service Terminal End of the Service Main. Ensure the service entrance barrier completely covers the previously exposed breaker lugs.
6. Drive the metal screw (Item 2) through the aligned bracket base and Breaker Barrier clearance holes into the Base Rail hole. Torque the screw to 30 lb-in.
7. **Before energizing the panel, ensure that ALL connections have been properly torqued, that the service entrance barrier is in place and secure, that the deadfront is installed and that all fillers are in place.**

THIS KIT CONTAINS THE FOLLOWING ITEMS:		
ITEM	**DESCRIPTION**	**QTY**
1	Service Barrier Assembly	1
2	#10-24 IHWHSW Screw	1

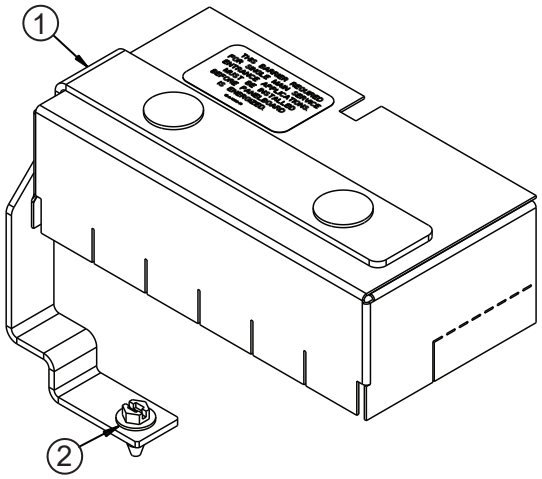

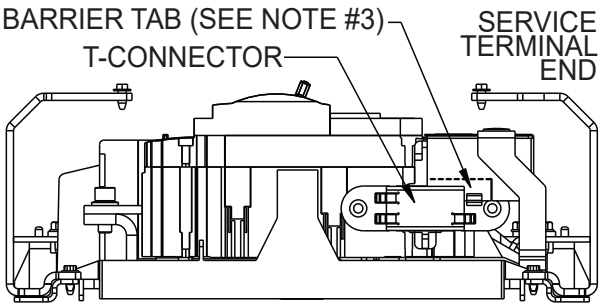

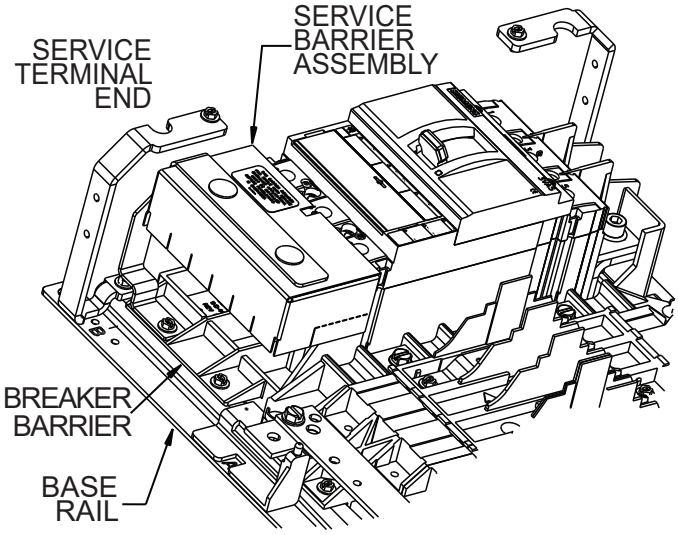

Contact Siemens Sales Office if considering usage in applications other than as shown.

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks-Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.