(continued from the previous page)


10. Mount the interior:
Lower the modified interior into the 3R/12 enclosure and secure with enclosure hardware.

11. Re-install the deadfront:
Re-attach the deadfront to the deadfront supports using the 1/4”-20 screws removed in Step 3. Tighten the hardware.

12. Re-install the cover: (Refer to Fig. 8)
Place the enclosure cover onto the enclosure and secure with the appropriate hardware. Tighten.

13. **Before energizing the equipment, ensure that the deadfront, barriers and fillers are in place and secure, and that all the covers are properly installed.**

Figure 8

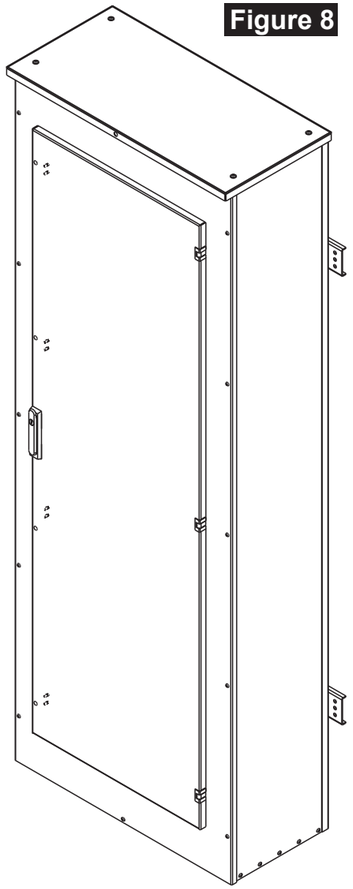

Type 3R/12 Enclosure


These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser’s purposes, the matter should be referred to the local Siemens sales office. The contents of this Instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of Siemens. The warranty contained in the contract between the parties is the sole warranty of Siemens. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks - Unless otherwise noted, all names identified by ® are registered trademarks of Siemens AG or Siemens Industry, Inc. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

SIEMENS

Unassembled P5 Power Panels, 32” wide or 38” wide:
P5X60MC120EH32
P5X75MC120EH32
P5X90MC120EH32
P5X90MC120EH

Installation Instructions

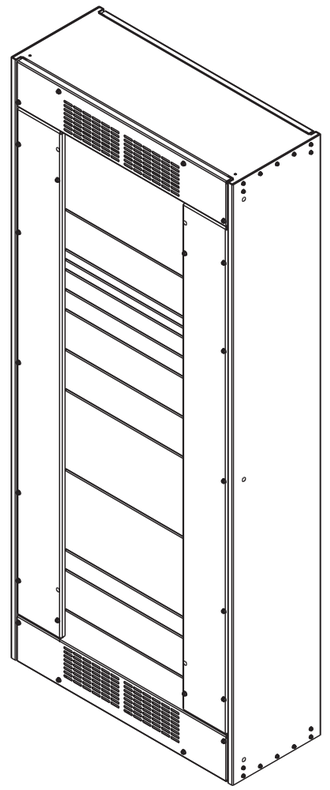

Type 1 Enclosure

This device / system may only be set up and used in conjunction with these instructions. Installation, maintenance and operation of this device / system may only be performed by qualified personnel. Within the context of these instructions, qualified persons are defined as persons who have the skills and knowledge related to the construction and operation of the electrical equipment and installations and have received safety training to recognize and avoid the hazards involved.

11-D-1013-01 Rev. 00

Installation Instructions

The following instructions are for the general use of a Siemens P5 32” or 38” wide Power Panel. The panelboard is designed for use in a 3-phase, 4-wire system with density-rated bus. Not for temperature-rated bus. The panelboard is dual voltage rated at 208Y/120V or 480Y/277V. The interior ships with a Type 1 enclosure; however, it can be field converted to a Type 3R/12 enclosure if the application requires. Type 3R/12 enclosure and Type 3R/12 conversion kit sold separately.

This panelboard requires either a Main Lug Kit for main lug only applications, a Main Breaker Kit for main breaker applications, or a Main Switch Kit for an application requiring a main switch. See label on the back of the deadfront cover for available kit information.


This panelboard may be used as Service Equipment if equipped with a single Main device (Breaker or Switch). This panelboard may also be used as Service Equipment if a maximum of six Breakers or six Fusible Switches are installed. If the panelboard is used as Service Equipment, bond the neutral using the instructions provided. The instruction card is located in an envelope on the right side of the panelboard box. The “Service Disconnect” labels (also provided in the envelope) must be applied as shown on instruction card.

This panelboard comes with a deadfront composed of removable filler plates. When installing main and branch kits, remove the filler plates that cover the “unit space” being used by the kit. Use the filler plate provided with the kit to cover the opening after the kit has been installed.



This panelboard is shipped for top feed, indoor applications (Type 1 enclosure). It can be converted to bottom feed if the application requires (reference Steps 1 - 7 and 13).
Or it can be moved into a different enclosure to meet Type 3R/12 ratings (reference Steps 1 - 4 and then 8 - 13).
Or it can be modified in both ways (by following all the steps).

Figure 1

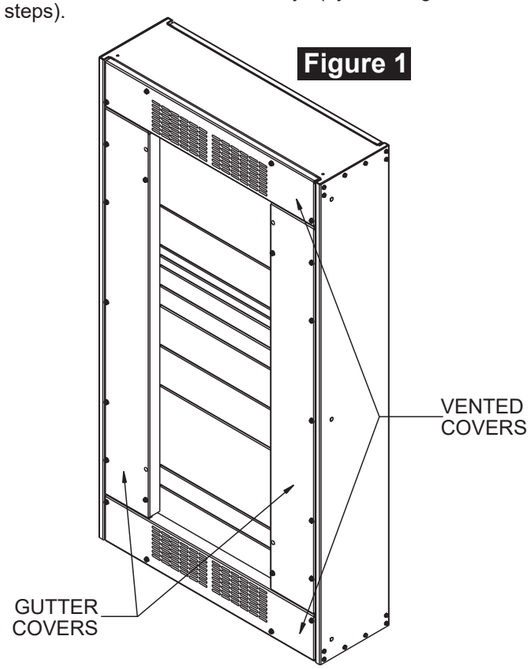

1. First, lock off power supplying this equipment.

To remove the gutter and vented covers and deadfront:

2. Remove the covers: (Refer to Fig. 1)
   Remove the two gutter covers and the two vented covers.
   NOTE: Dispose of these covers if changing to a 3R/12 enclosure.

3. Remove the deadfront: (Refer to Fig. 2)
   Remove the deadfront by removing the four 1/4”-20 screws that attach the deadfront to the deadfront supports and lifting it off of the interior.

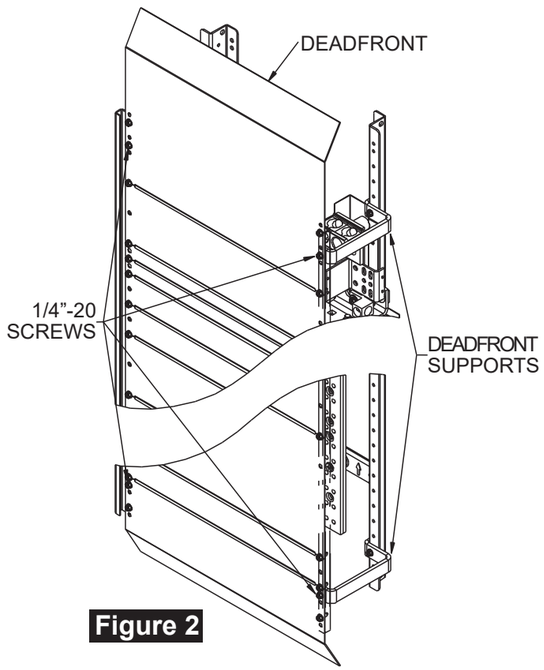


Figure 2

To remove the interior:

4. Remove the interior: (Refer to Fig. 3)
   Remove the four 1/4”-20 screws that secure the interior to the enclosure. Also remove the four 1/4” Belleville washer nuts. Lift the interior out of the enclosure.

Skip next three steps if keeping it as top feed.

To reverse the incoming feed:

5. Rotate the interior: (Refer to Fig. 3)
   Rotate the interior 180 degrees. Re-attach the interior to the enclosure using the hardware removed. Tighten the hardware.

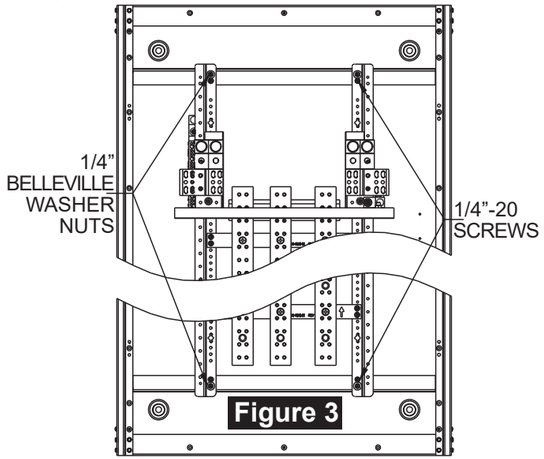


Figure 3

6. Rotate the deadfront: (Refer to Fig. 4)
   Orient the deadfront such that the large angled filler plate is closest to the planned bottom of the enclosure. To verify the large angle filler, measure from the flanged end of the filler plate to the end of the deadfront rail. The measured distance should be roughly 5.63”. Re-attach the deadfront to the deadfront supports using the 1/4”-20 screws removed in Step 3. Tighten the hardware.

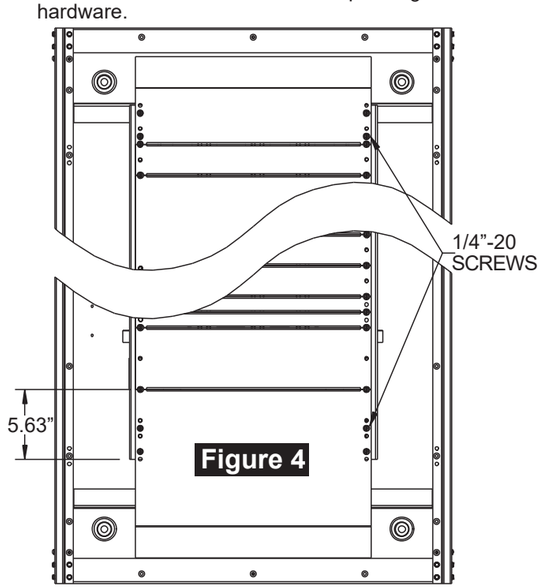


Figure 4

7. Orient label cover plate: (Refer to Fig. 5)
   Remove the four 1/4”-20 screws that secure the 5” tall cover plate with the rating label to the deadfront. Rotate and re-install the cover plate so that the text on the label will end up right-side up using the hardware previously removed. Tighten the hardware.

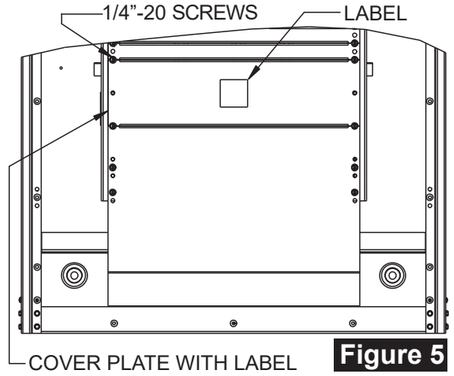


Figure 5

Skip next five steps if not moving to 3R/12 enclosure.

To convert panel from Type 1 to Type 3R/12 enclosure:

8. Dispose of NEMA 1 enclosure:
   Old enclosure not needed if moving into a new one.

9. Modify the interior: (Refer to Fig. 6 & 7)
   Interior mounting for Type 1 and Type 3R/12 enclosures are different. When moving from a Type 1 enclosure to a Type 3R/12 enclosure, kit **P53RCONVKIT** must be used to modify the interior. Attach the four L-shaped brackets to the sides of the interior as shown, using the hardware provided with the kit.

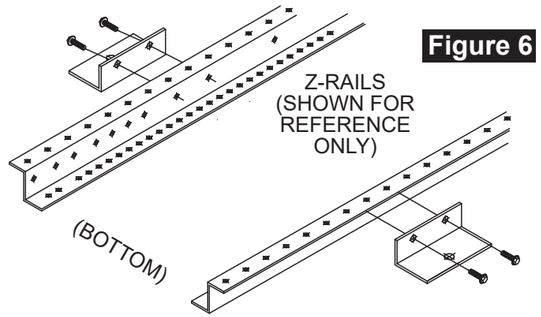


Figure 6




Figure 7

(continued on the next page)

11-D-1013-01 Rev. 00