INSTRUCTIONS FOR PROVISIONS:

If straps are installed but the breaker will NOT be at this time, provision barriers MUST be installed. (Skip this section if the breaker is installed.)

PREPARING THE EQUIPMENT FOR PROVISIONS:

(Refer to Figures 1 thru 5)

A. Follow Steps 1 thru 11 from page 2 and page 3 of this instruction sheet.

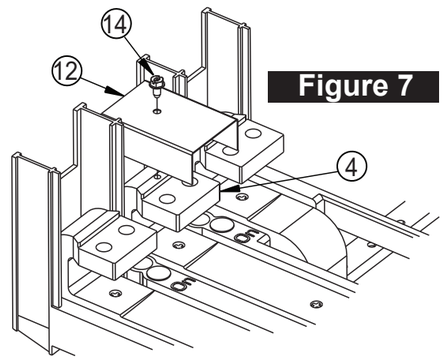


Figure 7

INSTALLING THE PROVISION STRAP BARRIER:

(Refer to Figure 7)

B. To install the Provision Barrier (Item 12), form the barrier as shown, orient it as shown (longer side towards inside), align the barrier hole with the hole in the Medium Strap (Item 4), and secure with the #10-32 screw (Item 14).

INSTALLING FILLER TO THE COVER PLATE:

(Refer to Figure 8)

C. Orient the Provision Filler Plate (Item 13) to the Cover Plate (Item 6) as shown. (The Filler Plate comes with a pre-applied label. That label should face the exterior, and be oriented such that it can be read when this assembly is installed onto the deadfront supports.)

D. Secure the Provision Filler Plate (Item 13) to the Cover Plate (Item 6) with a pair of Round Head Screws (Item 15) and Locknuts (Item 16), one set at each corner.

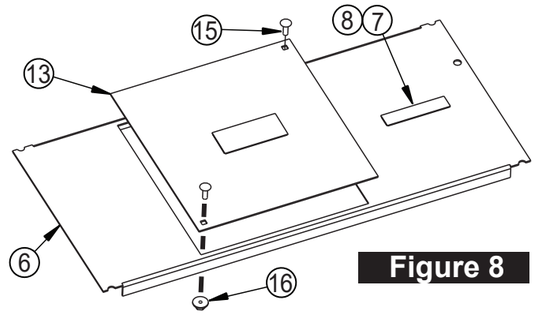


Figure 8

INSTALLING THE COVER PLATE:

(Refer to Figure 9)

E. Install the Cover Plate (Item 6) by aligning it over the breaker mounting provision and loosely secure it to the deadfront support rails with the four 1/4"-20 x 3/8" screws (Item 18).

F. Once all the covers are in place, tighten all the fasteners to the torque specified on the rear of the deadfront or noted in the table on page 2.

COMPLETING THE INSTALLATION:

G. **Ensure that any bus or breaker hardware is torqued as specified on the rear of the deadfront. Then replace all the cover plates and gutter covers. Finally, ensure any fillers are in place BEFORE re-energizing the equipment.**

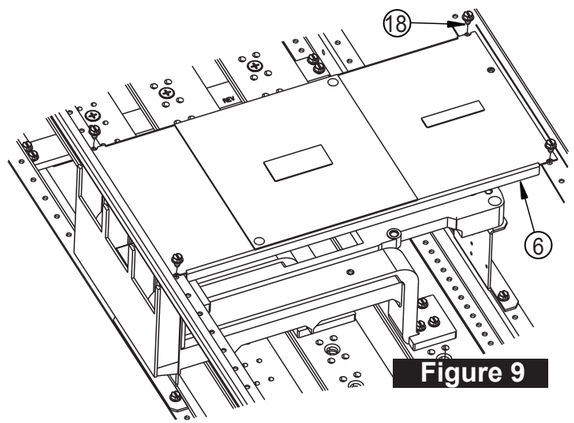


Figure 9

These instructions do not purport to cover all details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise, which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local **Siemens** sales office. The contents of this instruction manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The sales contract contains the entire obligation of **Siemens**. The warranty contained in the contract between the parties is the sole warranty of **Siemens**. Any statements contained herein do not create new warranties or modify the existing warranty.

Trademarks - Unless otherwise noted, all names identified by ® are registered trademarks of **Siemens AG** or **Siemens Industry, Inc**. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

SIEMENS

S3VA55TD

Distribution Switchboard or P5 Power Panel Strap Mounting Kit for 800A 3VA55/65 or 1000A 3VA66 Breaker in Unit Space

Installation Instructions

11-B-1097-01 Rev. 00

Installation Instructions

The following instructions are for the installation of Siemens strap kit **S3VA55TD** in a Distribution Switchboard or P5 Power Panel. It is for use with a **Siemens Type 3VA55 (MMAS, HMAS** or **CMAS)** or **Type 3VA65** (**MMAE**, **HMAE** or **CMAE**) breaker as a Main or Branch device in an **800A** application, or **Type 3VA66** (**MMNAE**, **HMNAE** or **CMNAE**) breaker as a Main or Branch device in a **1000A** application. The parts provided in this kit connect these breakers to a 1-phase, 2 or 3-wire system or a 3-phase 3 or 4-wire system. This kit requires **8.75"** of unit space. Breaker kit can be installed as shown or rotated 180°. (If rotated, interchange A-phase and C-phase references in the assembly instructions.)

NOTE: The breakers and breaker lugs are NOT included in this kit and must be purchased separately.



⚠ DANGER

Hazardous voltage. Will cause death or serious injury.


Keep out.
Qualified personnel only.
Disconnect and lock off all power before working on this equipment.

THIS KIT CONTAINS THE FOLLOWING ITEMS:

ITEM	DESCRIPTION	QTY	TORQUE
1	Mounting Bracket	2	N/A
2	Barrier	1	N/A
3	Short Strap	1	N/A
4	Medium Strap	1	N/A
5	Long Strap	1	N/A
6	Cover Plate	1	N/A
7	Circuit ID Card	1	N/A
8	Card Holder	1	N/A
9	Handle Extension Holder Assembly	1	N/A
10	Panelboard Neutral Branch Lug Assy.	4	N/A
11	Switchboard Neutral Branch Lug Assy.	4	N/A
12	Provision Strap Barrier	1	N/A
13	Provision Filler	1	N/A
14	#10-32 Thread-forming Screw	1	20 lb-in
15	#10-24 x 5/8" Round-head Screw	2	N/A
16	#10 Locknut	2	30 lb-in
17	Bus Hardware Kit, Strap to Section *	1	72 lb-in
18	1/4"-20 x 3/8" Hex Head Washer Screw	4	40 lb-in
19	1/4"-20 x 1/2" Hex Head Washer Screw	4	72 lb-in
20	1/4"-20 x 1/2" Tall Hex Washer Screw	4	72 lb-in
21	M10 SEMS Screw **	6	275 lb-in

* This sub-kit of parts is packaged in a bag labeled "Standard Bus Hardware Kit". It includes an instruction card and 18 fasteners (of three different lengths). Select fasteners per the instruction card and discard the rest.
** Breakers ship with six M10 Screws; those should be discarded. Instead, use the six M10 SEMS Screws included with this kit.

Figure 1

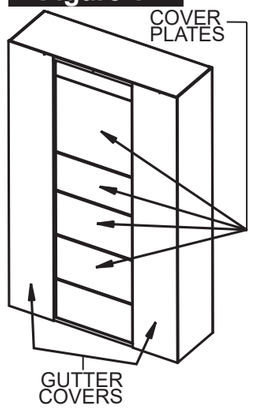

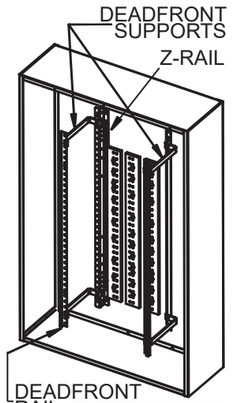


Figure 2

PREPARING THE EQUIPMENT:

(Refer to Figures 1, 2 and 3)

1. **Lock off power supplying this equipment before working on it.**
2. Remove the two gutter covers.
3. This kit requires 8.75" of empty unit space. To locate the proper mounting position, measure from the top deadfront support to the top of the empty unit space filler on the deadfront. Transfer this dimension from the deadfront support along the Z-rail and mark. This will be the unit space (as shown in Figure 3). After marking the Z-rail, remove the deadfront.
4. If an existing branch module occupies the same location chosen for this kit, remove all of its devices, components and parts.

INSTALLING THE MOUNTING BRACKETS:

(Refer to Figure 3)

5. Orient one of the Mounting Brackets (Item 1) as shown and attach it to the Z-rail with two 1/4"-20 screws (Item 19).
6. Repeat for the second Mounting Bracket.
7. Tighten the four screws to the torque specified on the rear of the deadfront or noted in the table on this page.

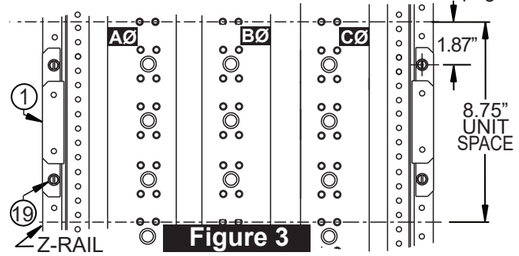


Figure 3

INSTALLING THE BARRIER:

(Refer to Figure 4)

8. Align the Barrier (Item 2) to the Mounting Brackets (Item 1) as shown and loosely fasten with the four 1/4"-20 tall hex screws (Item 20).

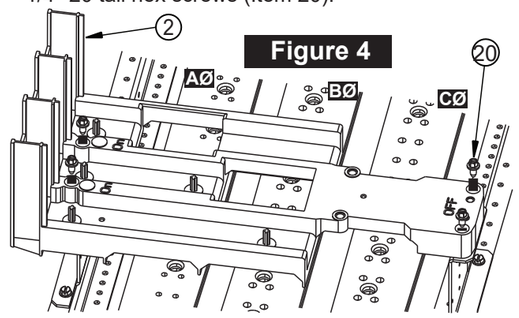


Figure 4

INSTALLING THE BREAKER STRAPS:

(Refer to Figure 5)

9. **For three-phase installation ONLY:**
   (Skip to Step 10 for single-phase systems)
   To install the (B-phase) Medium Strap (Item 4), locate it as shown, aligning the holes in the strap to the posts on the barrier, and loosely attach it to the B-phase bus with the four appropriate 1/4"-20 screws from the Bus Hardware Kit (Item 17) thru the strap and into the bus.
10. To install the (A-phase) Short Strap (Item 3) and the (C-phase) Long Strap (Item 5), locate them as shown, aligning the holes in the straps to the posts on the barrier, and loosely attach them to the A and C-phase bus (respectively) with the four appropriate 1/4"-20 screws from the Bus Hardware Kit (Item 17) each, thru the straps and into the bus.
11. Tighten all the Barrier and Strap screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

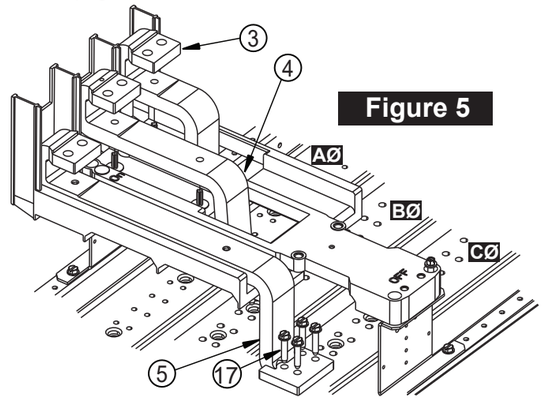


Figure 5

INSTALLING THE SIEMENS BREAKER:

(Refer to Figure 6)

(Breaker sold separately)

12. Remove the breaker "OFF"-side shield cover and nut keepers, per the breaker instructions.
13. Install lug kit (NOT INCLUDED) per lug installation instructions. (Do NOT install lug covers at this time.)
14. Remove the breaker "ON"-side shield cover, and clip off just enough mesh to clear the straps. (Leave the nut keepers in place.)
15. Slide the breaker "ON"-side stabs under the bus straps, aligning the holes, and loosely fasten with the M10 SEMS Screws (Item 21).
16. Loosely secure the breaker "OFF"-side to the Barrier (Item 2) using the pair of M6 x 80mm mounting screws that came with the breaker.
17. Tighten all the screws to the following torque:
    M10 screws: 275 lb-in M6 screws: 18 lb-in
18. Insert and secure the cables to the lugs on the "OFF"-side of the breaker, and tighten to the torque noted in the lug instruction sheet, on the device or specified on the rear of the deadfront.
19. Re-install the "OFF"-side and modified "ON"-side shield covers by sliding them down over the proper ends, inserting the shield cover screws and tightening to 13 lb-in.

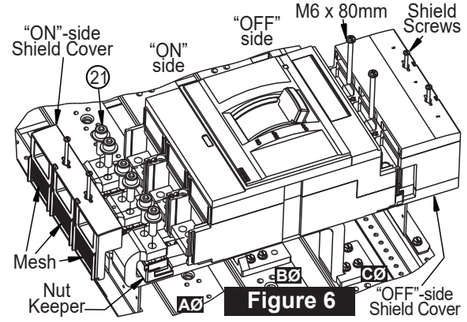


Figure 6

INSTALLING THE NEUTRAL LUG:

(Refer to Figures 7a and 7b)

20. If this kit is installed in a panelboard, install the Panelboard Neutral Lug Assembly (Item 10). If this kit is installed in a switchboard, install the Switchboard Neutral Lug Assembly (Item 11).

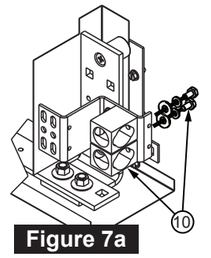


Figure 7a

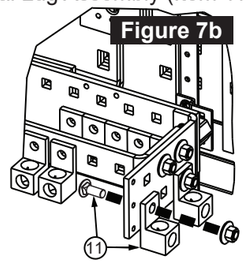


Figure 7b

INSTALLING THE COVER PLATE:

(Refer to Figure 8)

21. Install the Cover Plate (Item 6) by aligning the opening over the breaker and loosely secure it to the deadfront support rails with the four 1/4"-20 x 3/8" screws (Item 18).
22. Once all the covers are in place, tighten all the screws to the torque specified on the rear of the deadfront or noted in the table on page 2.

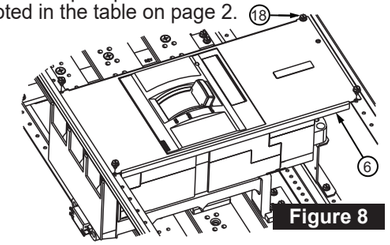


Figure 8

HANDLE EXTENSION:

(Refer to Figure 9)

23. Follow the instructions provided with the Handle Extension Holder Assembly (Item 9) to locate and install it.

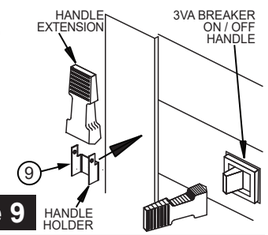


Figure 9

COMPLETING THE INSTALLATION:

24. **Ensure that any bus or breaker hardware is torqued as specified on the rear of the deadfront. Then replace all the cover plates and gutter covers. Finally, ensure any fillers are in place BEFORE re-energizing the equipment.**

(Provision instructions on following page)