Fast local-VBAT collapse: external-network sensitivity

SW1 ON | Local VBAT forced from 25.2 V to 0 V in 10 us | IC clamps omitted

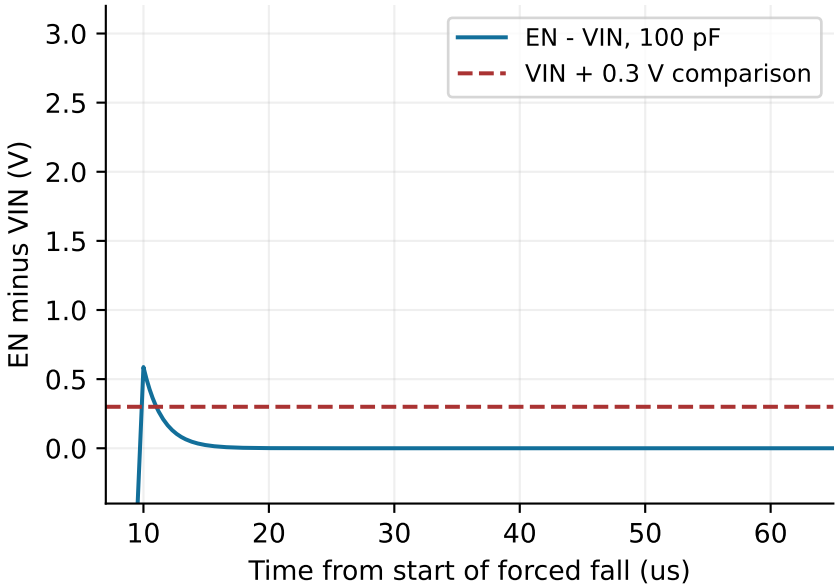

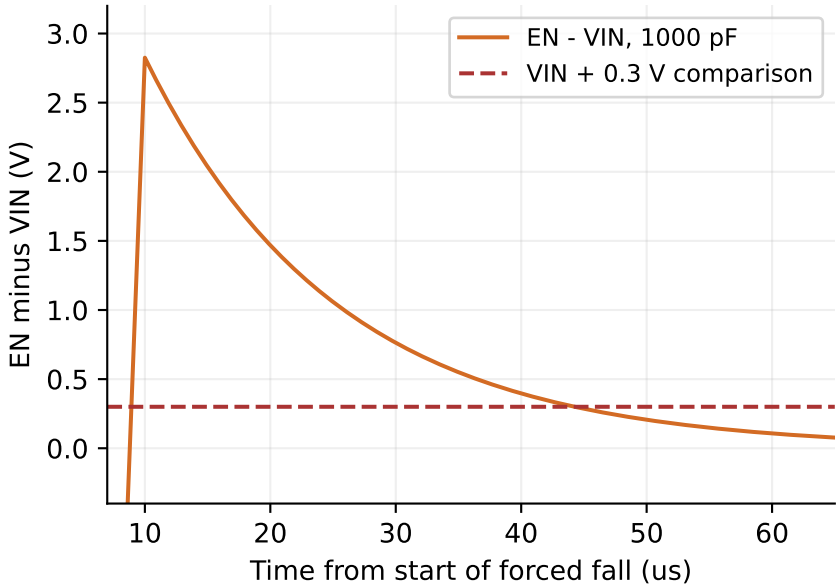

The external network retains charge during an imposed rapid input collapse.
This is not normal battery-unplug prediction or a damage simulation. A 1 ms fall gives much smaller differences.