
VEPOLINK
MONITORING PURITY

ENVIRONMENTAL INTELLIGENCE × CONNECTED MONITORING

INDUSTRIAL IOT DATA LOGGER · CPCB API READY

IoT Data Logger *Every reading, everywhere*

A palm-sized industrial logger that collects from analyzers and instruments over RS-485, RS-232, analog and Ethernet, stores locally, and pushes to your server and to CPCB and SPCB over SIM, LAN or Wi-Fi.

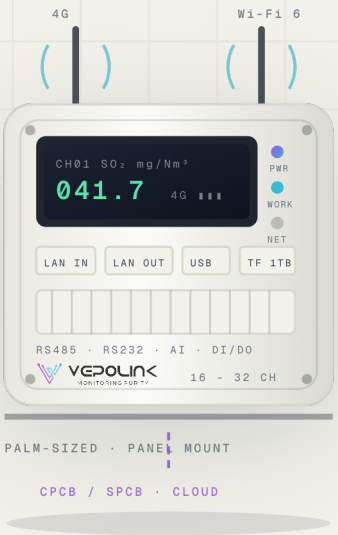

16 →32 ch
INPUT CHANNELS

1 TB
LOCAL STORAGE, TF CARD

4G / Wi-Fi 6
PLUS LAN AND OPTIONAL 5G

CPCB API READY | **RS-485 / RS-232** · ANALOG | **AUTO** RECONNECT

16ch
INPUTS, TO 32 CHANNELS

1TB
EXPANDABLE STORAGE

4GB
RAM

3paths
SIM · LAN · WI-FI

01 OVERVIEW

The link between the instrument *and the authority.*

An industrial-grade data acquisition and remote monitoring device for continuous instrument logging, system status monitoring and real-time transmission.

It reads field instruments over RS-485, RS-232, analog and Ethernet, writes every value to local storage, and forwards data over SIM, LAN or Wi-Fi — including CPCB API transmission and CPCB/SPCB data updates. If the link drops, logging continues and the device reconnects on its own.

AT A GLANCE

- RS-485 · RS-232
- ANALOG IN
- DIGITAL I/O
- 4G CAT4
- WI-FI 6
- GIGABIT ETHERNET
- CPCB / SPCB
- OLED STATUS

· PRODUCT FEATURES

Real-Time Acquisition

Continuous instrument data and system status logging with configurable 1, 5, 15 and 60-minute averaging, transmitted live over the available network.

Network That Recovers Itself

SIM, LAN and Wi-Fi with automatic reconnection and weak-network handling; optional 5G, overseas 4G modules and satellite communication.

Local Storage First

TF card storage expandable to 1 TB, with optional 15 GB eMMC. Data is written locally before it leaves, so an outage costs nothing.

CPCB and SPCB Ready

CPCB API-based transmission and CPCB/SPCB data update support, with calibration, abnormality and fault reporting built into the record.

02 HOW IT WORKS

Acquire, store, *transmit.*

The logger sits between the field instruments and everything that needs their data — your SCADA, your server and the pollution control board — and it is built so that no link in that chain is a single point of failure.

DATA PATH

Instrument to Authority

ACQUIRE · LOG · TRANSMIT · REPORT




Values are read from connected analyzers and meters, timestamped and written to local storage, then forwarded to the monitoring platform and to CPCB and SPCB endpoints in the required format.

`One device, whole chain`

I/O

Sixteen Channels, Expandable

RS-485 · RS-232 · ANALOG · DIGITAL I/O

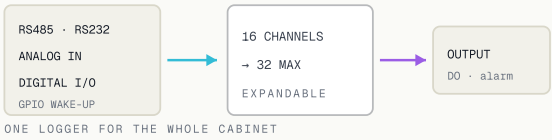


Sixteen input channels as standard, expandable to thirty-two. Digital outputs and alarm outputs act on conditions locally, and GPIO or network signals can wake the device.

`16 → 32 channels`

CONNECTIVITY

Three Ways Out

SIM · LAN · WI-FI 6 · OPTIONAL 5G

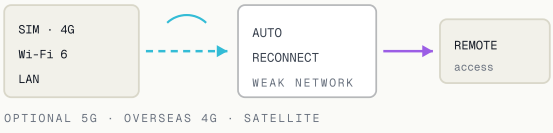

4G CAT4 cellular, gigabit Ethernet in and out, and Wi-Fi 6. Weak-network handling and automatic reconnection keep the stream alive; LAN remote access allows control from the control room.

`Reconnects without a visit`

STORAGE

Logged Locally, Reported Fully

TF TO 1 TB · 15 GB EMMC OPTIONAL



Averaging intervals of 1, 5, 15 and 60 minutes or user configurable, with daily, weekly and monthly reports plus calibration, abnormality and fault records held on the device.

`Nothing is lost offline`

03 INTERFACES & DATA

What it connects to, *what it keeps.*

Wired and wireless interfaces on one board, and a logging regime that satisfies both the plant engineer and the regulator.

INTERFACE	DETAIL
Serial	RS-485 and RS-232 instrument communication
Analog	Analog input acquisition from field signals
Digital	Digital input, digital output and alarm output
Ethernet	1 gigabit input + 1 gigabit output
Wireless	4G CAT4, Wi-Fi 6, optional 5G, SIM
USB	USB 3.0 and USB-C UART-to-USB

DATA	DETAIL
Averaging	1, 5, 15, 60 minutes or user configurable
Reports	Daily, weekly and monthly
Records	Calibration, system abnormality and fault reports
Storage	TF card up to 1 TB; 15 GB eMMC optional
Transmission	CPCB API, CPCB and SPCB data update
Access	Remote monitoring and LAN remote control

NETWORK OPTIONS

CONFIGURED TO THE SITE, NOT THE OTHER WAY ROUND

4G CAT4	Wi-Fi 6	LAN	SIM	Ethernet
Optional 5G	Overseas 4G	Satellite	Weak network	Auto reconnect

STEP 01

Connect

Wire analyzers and meters to the serial, analog and digital channels; assign each channel its parameter and unit.

STEP 02

Configure

Set averaging intervals, alarm limits and report schedules; point the device at your server and the board endpoint.

STEP 03

Log

Every value is written to local storage first, so a network outage never becomes a gap in the record.

STEP 04

Transmit

Data flows out over SIM, LAN or Wi-Fi, with automatic reconnection and catch-up when the link returns.

04 SPECIFICATIONS

Technical *specifications.*

HARDWARE

Device Type	Industrial IoT data logger
RAM	4 GB
Input Channels	16 channels, expandable to 32
Communication Ports	RS-485 · RS-232
Network Interface	1 gigabit Ethernet in + 1 gigabit Ethernet out
USB	USB 3.0 · USB-C UART-to-USB
Storage	TF card up to 1 TB
Internal Storage	15 GB eMMC, optional
Display	OLED / TFT LCD
Status Indicators	Power · Work · Network
Form Factor	Palm-sized compact design

CONNECTIVITY · SOFTWARE

Internet Connectivity	SIM / LAN / Wi-Fi
Wireless	4G CAT4 · Wi-Fi 6 · optional 5G
Network Options	Overseas 4G modules, satellite, weak-network support
Recovery	Automatic network reconnection
Wake-Up	GPIO and network based
Inputs	Analog, digital, RS-485, RS-232, GPIO
Outputs	Digital output, alarm output
Averaging	1, 5, 15, 60 min or user configurable
Reporting	Daily, weekly, monthly, calibration, fault
Regulatory	CPCB API ready, CPCB & SPCB data update
Diagnostics	Alarm management, fault diagnostics, auto calibration

PANEL LAYOUT


FRONT DISPLAY & STATUS · REAR INTERFACES

palm-sized enclosure



FRONT · OLED & STATUS

16 channels, expandable to 32

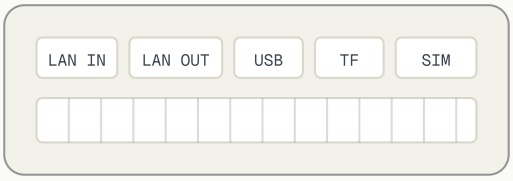

REAR · RS485 / RS232 / AI / DI / DO

05 DEPLOYMENT & UPKEEP

Commissioned once, *reporting daily.*

> Three things decide whether a monitoring station stays compliant: **every instrument actually mapped to a channel**, **local storage sized for the longest credible outage**, and **alarms that tell you the data stopped** — not a monthly report that reveals it later.

01 · MOUNTING

Inside the panel

Palm-sized industrial enclosure mounts in the analyzer shelter or control cabinet, close to the instruments it reads.

02 · FIELD WIRING

Serial, analog, digital

RS-485 and RS-232 for smart instruments, analog inputs for 4–20 mA signals, digital inputs for status contacts.

03 · CHANNEL MAP

Parameter by parameter

Each channel is assigned its parameter, unit, scaling and alarm limits so reports read the way the authority expects.

04 · NETWORK

Primary and fallback

LAN where it exists, cellular where it does not, Wi-Fi where cabling is impractical — with automatic reconnection throughout.

05 · TRANSMISSION

Server and board

Your monitoring platform and the CPCB/SPCB endpoint receive the same verified data stream, in their required format.

06 · UPKEEP

Remote first

Status, diagnostics and fault records are visible remotely; LAN remote control and network wake-up reduce site visits.

BUILT FOR THE WEAK-SIGNAL SITE

Monitoring stations are rarely where the network is good. Weak-network handling, automatic reconnection and generous local storage mean the device keeps logging through the outage and catches up when the link returns — the record stays complete even when the connection does not.

ONE LOGGER ACROSS THE FLEET

The same device serves a CEMS stack, a CAAQMS cabin, a weather mast or a production line. Standardising on one logger means one configuration method, one spare on the shelf and one set of reports across every site you operate.

06 APPLICATIONS

Where it *works.*

Anywhere an instrument produces a number that somebody elsewhere needs to see.

Environmental Monitoring	CEMS Stations	CAAQMS Cabins
Industrial Automation	Remote Equipment Monitoring	Meteorological Monitoring
Factory Monitoring	Industrial IoT	SCADA Integration

COMPLIANCE WITHOUT A PERSON IN THE LOOP

CPCB API transmission and CPCB/SPCB data updates run automatically, with calibration, abnormality and fault reports forming part of the same record. The engineer's job becomes reviewing exceptions rather than assembling submissions.

SPECIFYING A STATION

Tell us the instruments and their protocols, the number of parameters per station, the reporting endpoints you must satisfy and the network available on site. We return the channel count, storage, connectivity and configuration as one package.

07 FAQ

Frequently asked *questions.*

Q What is an IoT data logger?

A device that collects data from sensors, analyzers, meters and field instruments, stores it and transmits it to remote monitoring platforms over the internet.

Q What is it used for?

Real-time data acquisition, instrument monitoring, data logging and remote transmission — in environmental monitoring, industrial automation, CEMS, CAAQMS and other IoT monitoring applications.

Q Which communication interfaces are supported?

RS-485, RS-232 and Ethernet, plus Wi-Fi and cellular communication depending on the configuration.

Q Does it support 4G?

Yes, through 4G CAT4. Customised configurations such as 5G and other cellular modules are available depending on the application.

Q Can it work with environmental monitoring systems?

Yes. It integrates with environmental monitoring instruments for collecting, logging and transmitting data — suitable for CEMS, CAAQMS and similar systems.

Q Does it support CPCB and SPCB transmission?

Yes. The logger supports CPCB API-based transmission and CPCB/SPCB data update requirements for connected environmental monitoring applications.

Q How much data can it store?

Local storage on a TF card expandable up to 1 TB, with an optional 15 GB eMMC internal storage configuration.

Q How many input channels does it have?

Sixteen input channels in the standard configuration, with expansion capability up to thirty-two depending on the configuration required.

Q Can it be monitored remotely?

Yes. Remote monitoring and data access over 4G, Wi-Fi and LAN, with remote device control and automatic network reconnection.

Q What happens if the network drops?

Logging continues to local storage and the device reconnects automatically, so the record remains complete and is transmitted when the link returns.

This brochure is general product information. Channel count, storage, connectivity options and reporting configuration are indicative and confirmed at order against the instruments, network and regulatory endpoints of the site. Specifications may change without notice as the product is improved.

VEPOLINK
MONITORING PURITY

FROM THE PANEL TO THE PORTAL

Get your data *where it has to go.*

Send us your instrument list, parameters per station and the endpoints you report to — we'll return channels, storage, connectivity and configuration as one package. Pick how you'd like to start.

01 **Talk to our engineers**
Speak directly to the team that configures loggers, channel maps and CPCB transmission. No call centre.
+91 99538 86178 →

02 **Request a configuration** RECOMMENDED
Share instruments, protocols, parameters and reporting endpoints — we'll spec channels, storage and connectivity.
sales@vepolink.com →

03 **Book a demonstration**
See live acquisition, local logging, an outage and recovery, and data landing on a portal.
Request a demo →

WWW.VEPOLINK.COM · SALES@VEPOLINK.COM