R8 Collet & Arbor Use

⚠ The anti-rotation pin will be sheared off if the drawbar is not tightened ⚠


R8 collet anti-rotation pins are installed in the manual mill spindles to make it easier for shop denizens to tighten the drawbar.

However, this means that all arbors and collets must meet the R8 collet spec. When the slot on the shaft is too shallow, the shaft will not slide past the pin. There is considerable variation of slot depth across manufacturers. Many cheapo imports do not meet the spec.

If a shop tool does not seat properly, please tag it out.

If your personal tool does not slide into the spindle or otherwise fails to seat properly, please consult w/the shop lead for possible solutions.

The diagram below highlights the dimensions to check first. Use a micrometer for the OD. A 3/32" drill makes for a quick go/no-go reference.

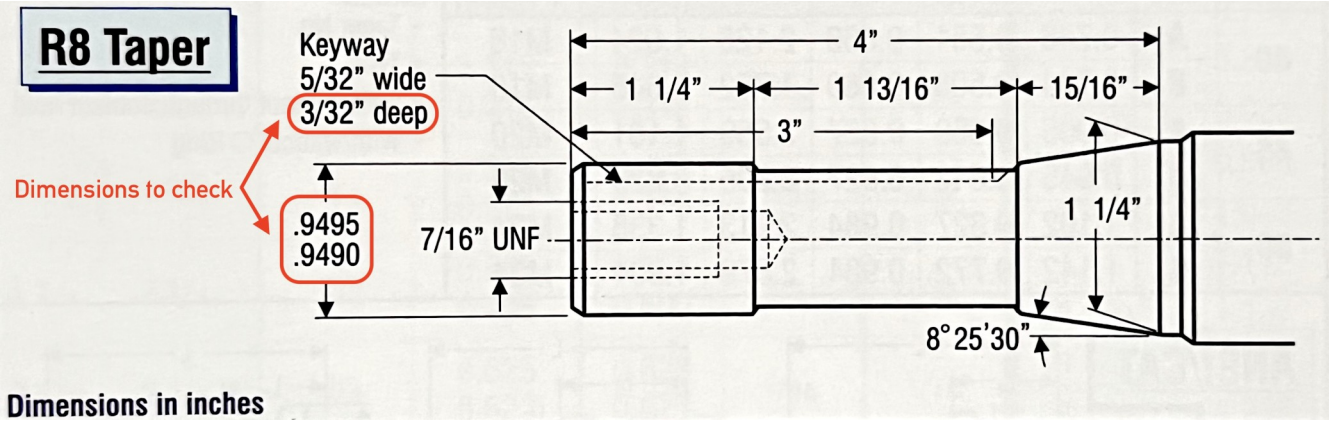

Source: *Engineers Black Book, 3rd edition,* p. 85

Rev. X0.6 on 6/17/2026