AirMaster Rev C: LED drill template, 1593K base, floor

Print at 100 % / Actual size. The bar below must measure 50 mm; if not, do not use the print.



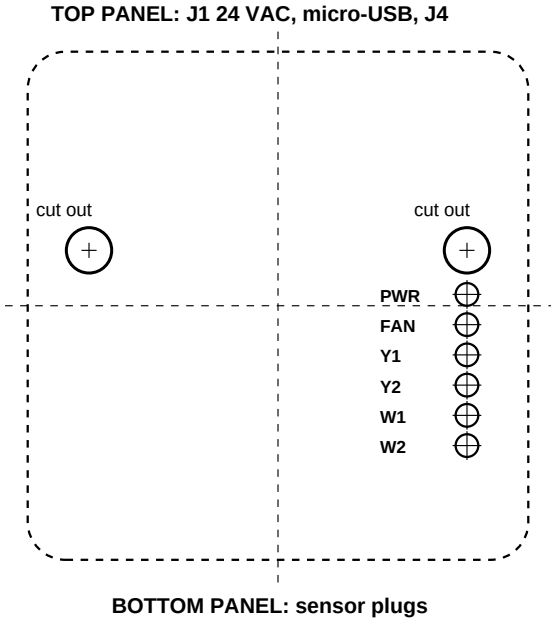

1. Cut out the template along the dashed outline, then cut out the two screw circles.
2. Close the box with its two cover screws. Lay the template on the floor, outside, TOP PANEL toward the end with J1, the micro-USB and J4, the screw circles seated round the two screw heads. Tape it down.
3. Open the box and take the board out. Centre-punch each cross on the floor, drill 1.5 mm, then 3 mm. Plastic: low speed, light pressure. Deburr inside, where the LEDs face the holes.
4. The column is 4 mm pitch, straight below the right-hand screw; PWR's centre is 5.83 mm below the screw's. From the top: PWR green, FAN yellow, Y1 blue, Y2 blue, W1 red, W2 red.
5. Fit the Rev C label afterwards: its right slot runs from that screw to the bottom edge, over the holes.

Generated by hardware/ahpc-led-template.py.