


AIS AssetTrack · Process Flows

server v1.8.1 · HHT v1.9.1 · Developed by DT


How a returnable pallet moves through AssetTrack, who scans it where, what the system does at each point, and how to check each step on the HHT and the web. Use the checklist at the end during the trial.

00 System map

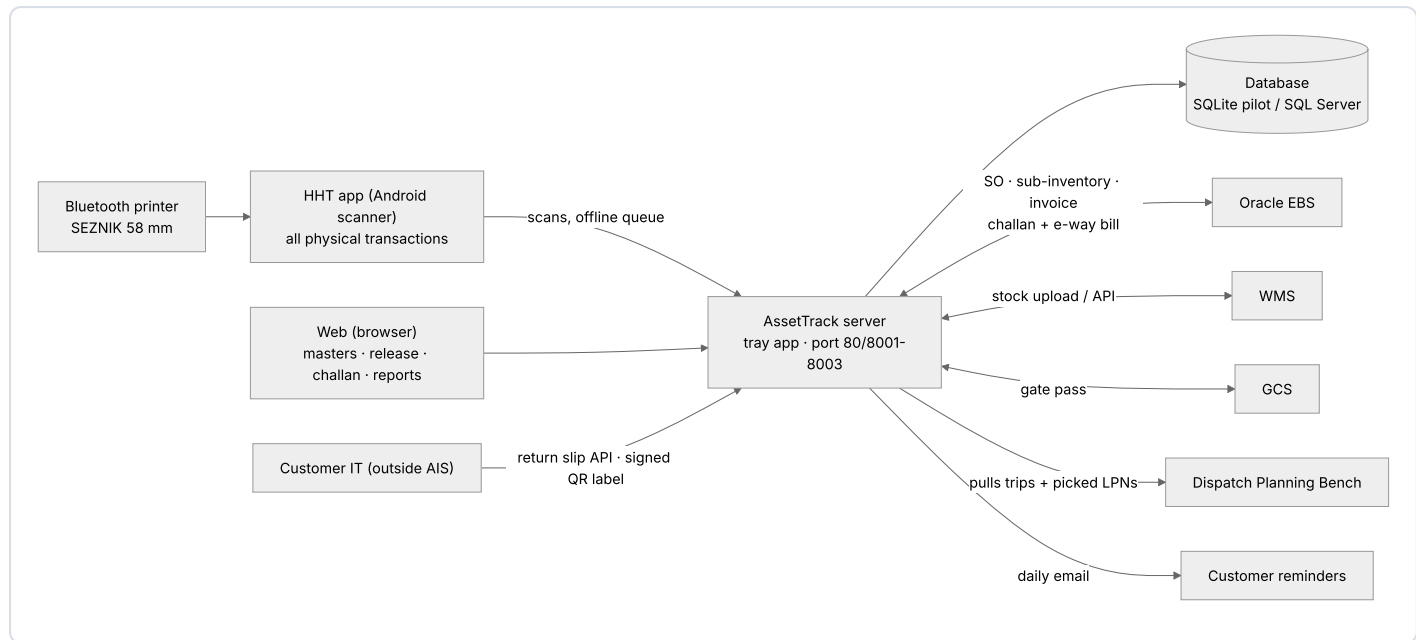

Rule of the system: **only the HHT may do a physical transaction** (scan, move, PDI, gate, slip). The web is for masters, uploads, release, challan, approval, reports and monitoring.

01 Pallet lifecycle

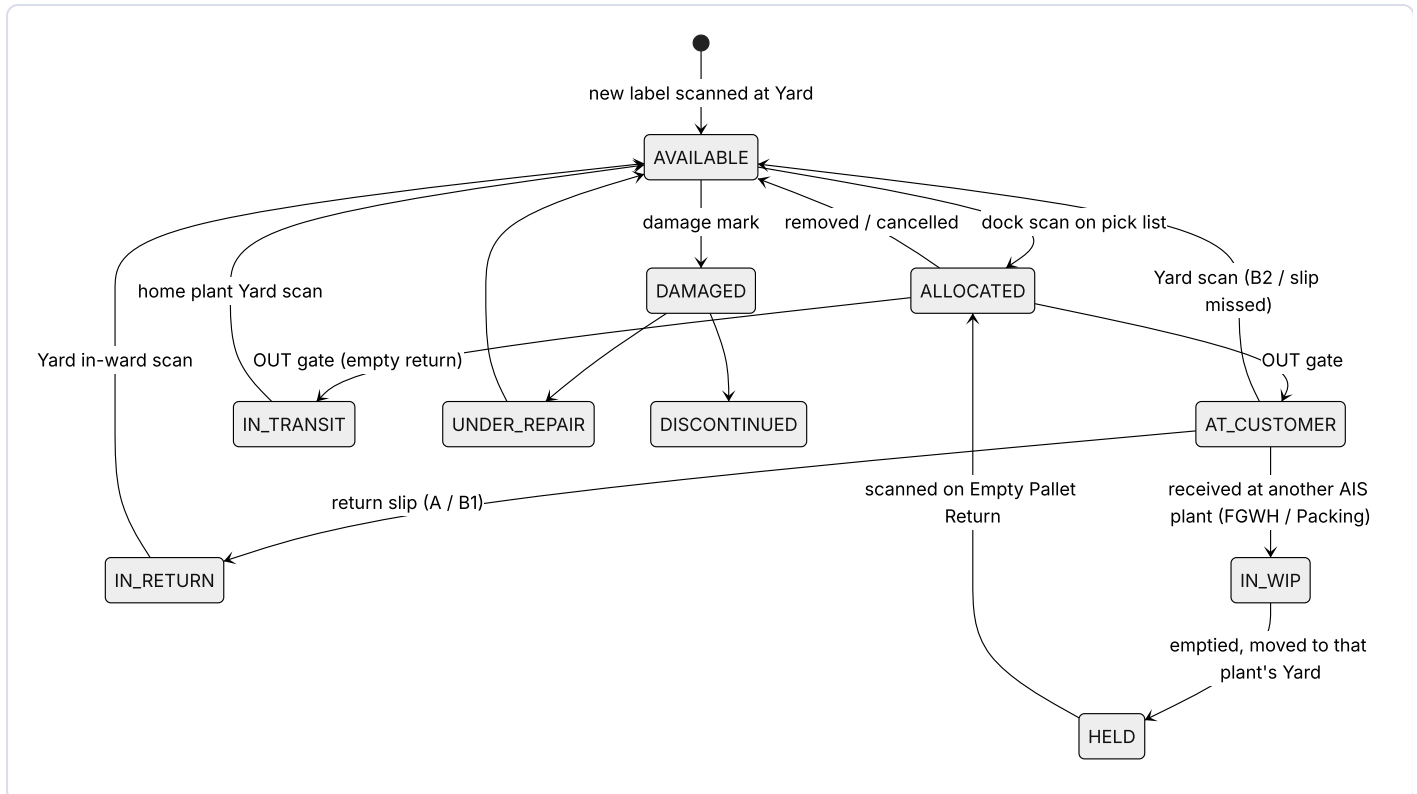

Alongside the status, every pallet carries a **zone** inside the plant (Yard · Production · FGWH · Packing) and a **load state** (LOADED / EMPTY). The Yard holds empty pallets only.

02 Roles and scan points

Scan point	Device	Role (default)	HHT tile	What it changes
Dock out-ward	HHT	FG Warehouse	Dock Out-ward Scan	LPN ↔ pallet bound to the pick list; pallet ALLOCATED, LOADED
PDI	HHT	QA / PDI	PDI Check	LPN OK / reject → EBS sub-inventory move (two confirmations)
OUT gate	HHT	Security OUT	OUT Gate	GCS / challan QR verified; pallets AT_CUSTOMER or IN_TRANSIT
IN gate	HHT	Security IN	IN Gate · Return Slip	Return slip QR check code verified; slip IN_GATE
Yard in-ward	HHT	Pallet Yard	Yard In-ward Scan	Pallet AVAILABLE / HELD in Yard, EMPTY; slip reconciled; new labels registered
Internal move	HHT	per route (Yard / Production / FGWH / Packing)	Internal Movement	Zone and load state; skipped moves recorded
Other-plant receipt	HHT	FG Warehouse / Packing	Other-plant Receipt	Foreign pallet IN_WIP, LOADED at FGWH / Packing
Empty pallet return	HHT	Pallet Yard	Empty Pallet Return	Other plant's empties loaded at the Yard; challan + e-way bill on finish
Release · challan · approve	Web	FG Warehouse · Logistics	Pick Lists	Pick list created; challan (with invoice); vehicle approved (GCS)

Access is given per user by the central admin (plant + each movement). A role is only the starting set.

1 Parts dispatch to a customer or another plant

Web: FG Warehouse


HHT: Dock

HHT: PDI

EBS

Web: Logistics

HHT: OUT gate

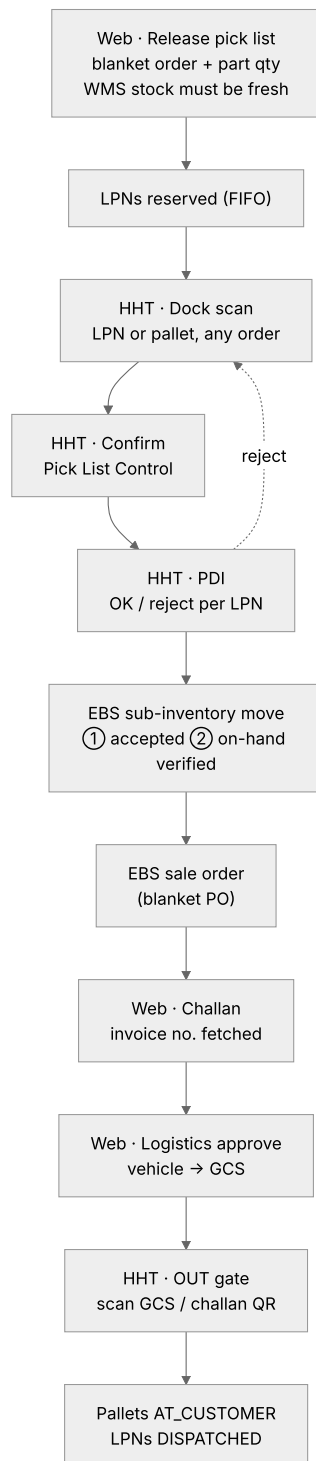

- 1 **Web > Pick Lists > New:** type CUSTOMER or STOCK_TRANSFER, blanket order, part qty, pallet qty.

System: refuses if WMS stock is older than the plant limit or the blanket has no open qty. Reserves LPNs oldest first. Status OPEN.

- 2 HHT > Dock Out-ward Scan:** pick the list, scan the LPN label or the pallet. One pallet can carry several LPNs.
System: LPN fetches its pallet; pallet fetches its LPNs. Pallet must be in FGWH / Packing (a skipped move is recorded and corrected). Pallet ALLOCATED, LOADED. A rejected scan disappears from the HHT list.

- 3 HHT > Confirm → send to PDI** when picked qty = part qty.
Status PDI_PENDING.

- 4 HHT > PDI Check:** mark each LPN OK or reject; complete.
Rejected LPNs go to the reject sub-inventory and the list reopens for the balance. OK LPNs move to the customer / part sub-inventory; each move needs EBS acceptance and an on-hand read-back. Then the SO is pushed. Status READY.


- 5 Web > Challan.**
Invoice number fetched from EBS first; challan printed from the web (A4) with invoice and LPN lines.

- 6 Web > Approve:** vehicle, transporter.
GCS outward gate pass created. Status APPROVED.

- 7 HHT > OUT Gate:** scan the GCS / challan QR.
Must match the pick list (supervisor PIN to override). Pallets AT_CUSTOMER with dispatch date; LPNs DISPATCHED. Status DISPATCHED.

2 Dispatch Planning Bench trip (all customers)


Bench | HHT: Dock | Web: Challan · Approve | HHT: OUT gate

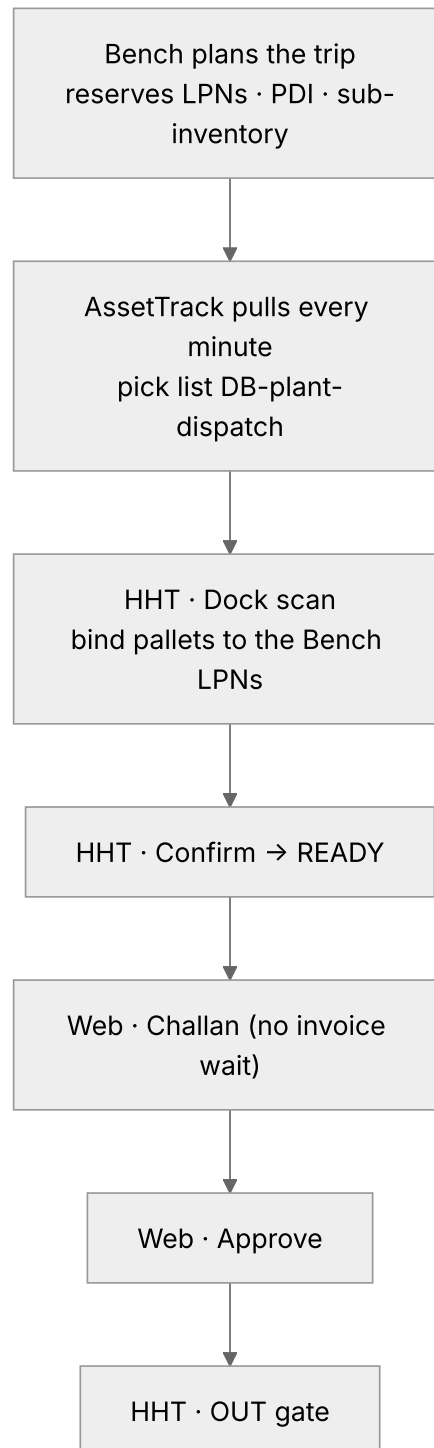

The Bench owns reservation, PDI and sub-inventory. AssetTrack only binds pallets and runs challan, gate and the return cycle. Only LPNs picked on that trip are accepted at the dock. Settings: **Masters > Dispatch Bench link.**

3 Return from customer


Customer IT / driver HHT: IN gate HHT: Yard

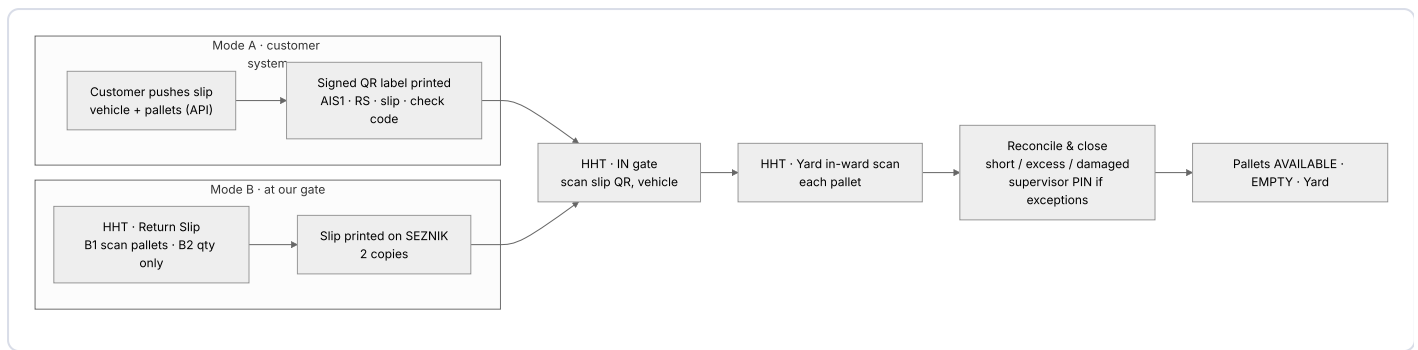

- 1 Slip:** Mode A comes from the customer's system with a signed QR; Mode B1/B2 is made on the HHT at the IN gate and printed on the portable printer.
Pallets on an A / B1 slip go IN_RETURN. A label without a valid check code is refused at the gate ("HOLD VEHICLE").
- 2 HHT > IN Gate:** scan the slip QR; optionally type the vehicle number.
Check code, plant, customer and vehicle verified; GCS inward pass; slip IN_GATE.
- 3 HHT > Yard In-ward Scan:** open the slip, scan every pallet; mark damaged if needed.
Pallet AVAILABLE (or DAMAGED), EMPTY, zone Yard. Not on the slip → EXCESS / CROSS_CUSTOMER; another plant's → HELD. A pallet that was never gated out is accepted and the missed OUT-gate scan recorded.
- 4 Reconcile & close.**
Short pallets go back to AT_CUSTOMER keeping their aging; open exceptions need a supervisor PIN. Slip CLOSED.

4 Other-plant material and empty pallet return

HHT: FGWH / Packing HHT: Production HHT: Yard EBS challan + e-way bill
HHT: OUT gate

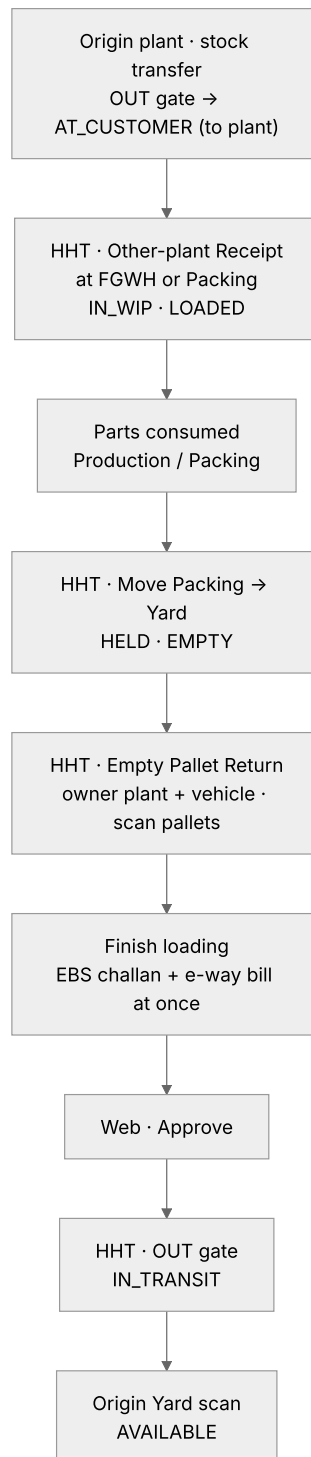

- 1 HHT > Other-plant Receipt at FGWH (or Packing):** scan the loaded pallets.
Pallet IN_WIP, LOADED, zone FGWH / Packing. The Yard refuses loaded other-plant pallets.
- 2 HHT > Internal Movement** as the material is used, ending with Packing → Yard.
Pallet HELD, EMPTY in the Yard.


- 3 HHT > Empty Pallet Return > New:** pick the owner plant (count shown), enter the vehicle, scan the pallets as they are loaded.

Only that plant's empty pallets are accepted; open quantity. A pallet not scanned into the Yard is still loaded and the missed move recorded.

- 4 Finish loading → make challan.**

EBS delivery challan and e-way bill created for the scanned pallets (no SO, no invoice). Print from Web > Pick Lists. Then approve and OUT gate as usual.

5 Internal movement and missed scans

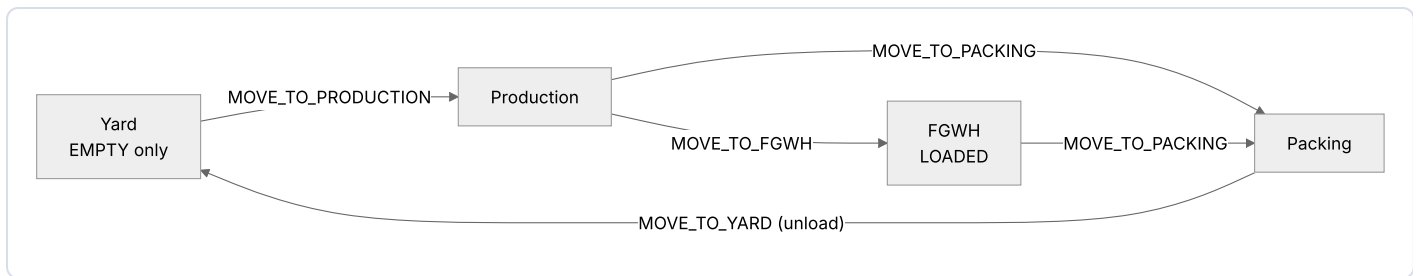

Each route is a separate right granted per user. When a scan point finds a pallet where it should not be, the system takes the safe reading, corrects the ledger and writes a **Missed Scan** with the responsible role. The HHT shows the alert at once; the web lists them under Stock & Movement › Missed Scans and on the Daily Exception Report.

Found at	Situation	Action
Dock	Pallet still AT_CUSTOMER / IN_RETURN	Received now; missed return slip / yard scan recorded
Dock	Pallet shown in Yard / Production	Moved to FGWH; each skipped route recorded
Yard	Pallet on a pick list not yet gated out	BLOCKED: check the vehicle
Return slip	Pallet never dispatched in the ledger	Accepted; missed OUT gate recorded
Empty return	Pallet shown LOADED but no live LPN	Accepted as empty; WIP consumption not recorded
PDI	LPN never dock-scanned	BLOCKED

6 New pallet label and pallet care

The pallet label QR holds a record: `uniquePalletID AIS-<plant>-<type>-<serial>-<global>` , `ownerPlant` , `palletType` , `mfgDate` . Every scan point reads it.

1 HHT > Yard In-ward Scan (no slip): scan each new label.

Pallet created from the QR: own plant → AVAILABLE in the Yard; another plant's → HELD here. Owner plant not in the Plant master → quarantined with the reason.

2 HHT > Damage / Tag issue: mark damaged or request a tag replacement.

DAMAGED → UNDER_REPAIR → AVAILABLE or DISCONTINUED (web, central).

7 Daily routine

When	Who	Where	What
Shift start	FG Warehouse	Web > WMS Stock & LPN	Upload WMS stock (release is blocked when it is stale)
Morning meeting	Plant admin	Web > Reports > Daily exception report	Missed scans, rejected scans, slips with issues, overdue pallets, stuck pick lists
09:00 automatic	Server	Monitor > Customer Reminders	Email to customers holding pallets past the limit; escalation copies plant admins
Any time	Management	Web > Dashboard · Plant Position	Where the pallets are, holding by age, dispatch / return trend, turnaround, missed scans
Night	Server	backups folder	Database backup, 14 days kept

T Test checklist

Run on one plant with two or three pallets, one LPN pick list and one return. Tick as you go; ticks are kept on this device only.

- ☐ **SETUP** Server running (tray icon), web opens at <http://assettrack> or the PC name, HHT logs in with a plant user.Expected: HHT Home shows ONLINE; Settings > About on the tray lists the ports.

- ☐ **SETUP** HHT Settings > Printer: pair SEZNIK, Test print.Expected: logo, text and QR printed.

- ☐ **6** Yard In-ward Scan: scan a new pallet label QR.Expected: "NEW pallet ... registered"; Web > Pallets shows it AVAILABLE, zone YARD, type from the label.

- ☐ **5** Internal Movement: Yard → Production → FGWH with a user who has both routes; then try a route the user does not have.Expected: zone changes; the missing route is refused with "MOVE_TO... required".

- ☐ **1** Web: upload WMS stock, create a blanket order, release a CUSTOMER pick list.Expected: LPNs reserved; releasing without a fresh WMS upload is refused.

- ☐ **1** Dock scan: LPN first, then its pallet; scan a second LPN on the same pallet; remove one by long-press.Expected: both LPNs listed under the pallet; ring shows picked qty; removal frees the LPN (RESERVED again).

- ☐ **1** Confirm → PDI: reject one LPN, OK the rest, complete.Expected: list reopens for the balance; after re-pick and PDI OK, Web > PDI Status shows ① accepted ② verified; status READY with an SO number.

- ☐ **1** Web: Challan, Approve (vehicle); HHT: OUT gate scan of the challan QR.Expected: challan print shows invoice and LPN lines; pallets AT_CUSTOMER; LPNs DISPATCHED.

- ☐ **3** HHT: Return Slip B1 for that customer, scan the pallets, print; IN gate scan of the printed QR; Yard scan; close.Expected: two copies printed; gate accepts the slip; pallets AVAILABLE in Yard; slip CLOSED with no exceptions.

- ☐ **3** Yard scan a pallet that is still AT_CUSTOMER without any slip.Expected: accepted with a warning; Missed Scans shows RETURN_SLIP for role SEC_IN.

- ☐ **4** Second plant user: Other-plant Receipt at FGWH of a pallet dispatched by stock transfer; move Packing → Yard; Empty Pallet Return; Finish loading.Expected: pallet IN_WIP then HELD; challan and e-way bill numbers shown on the HHT; pick list CHALLANED with YARD LOAD badge on the web.

- ☐ **2** Masters > Dispatch Bench link: fill URL and login, Pull now.Expected: trips appear as DB-plant-id pick lists with LPN qty; dock scan accepts only those LPNs.

- ☐ **OFFLINE** Switch the HHT to flight mode, do three yard scans, switch back.Expected: Pending count rises then drops to 0; Web > Sync Monitor shows the device ONLINE; no duplicate history lines.

- ☐ **7** Web: Dashboard, Plant Position, Daily exception report, an Excel export, Customer Reminders preview.Expected: numbers match the test above; the reminder preview lists the AT_CUSTOMER pallets once

their days exceed the limit.

□ **ACCESS** Central admin: create a user with one movement right only; try other tiles on the HHT.Expected: only the allowed tile appears; the web refuses scans ("Operations are allowed only from the HHT").

When a step fails, note the HHT message word for word and the time; the server's Activity and Sync Monitor pages show the same event with the reason.

AIS AssetTrack · Asahi India Glass Ltd. · Developed by DT · flows reflect server 1.8.1 and HHT 1.9.1