



FR-2 · FR-2 one piece (top + 2 U legs)

10 ga 0.135” (3.42 mm) · HR steel sheet A1011 CS · flat blank 22.078” × 3.250” · ≈ 2.55 lb each · QTY 1 FR + 1 FL = 2 per vehicle

FLAT PATTERN (as laser-cut, marked side up)

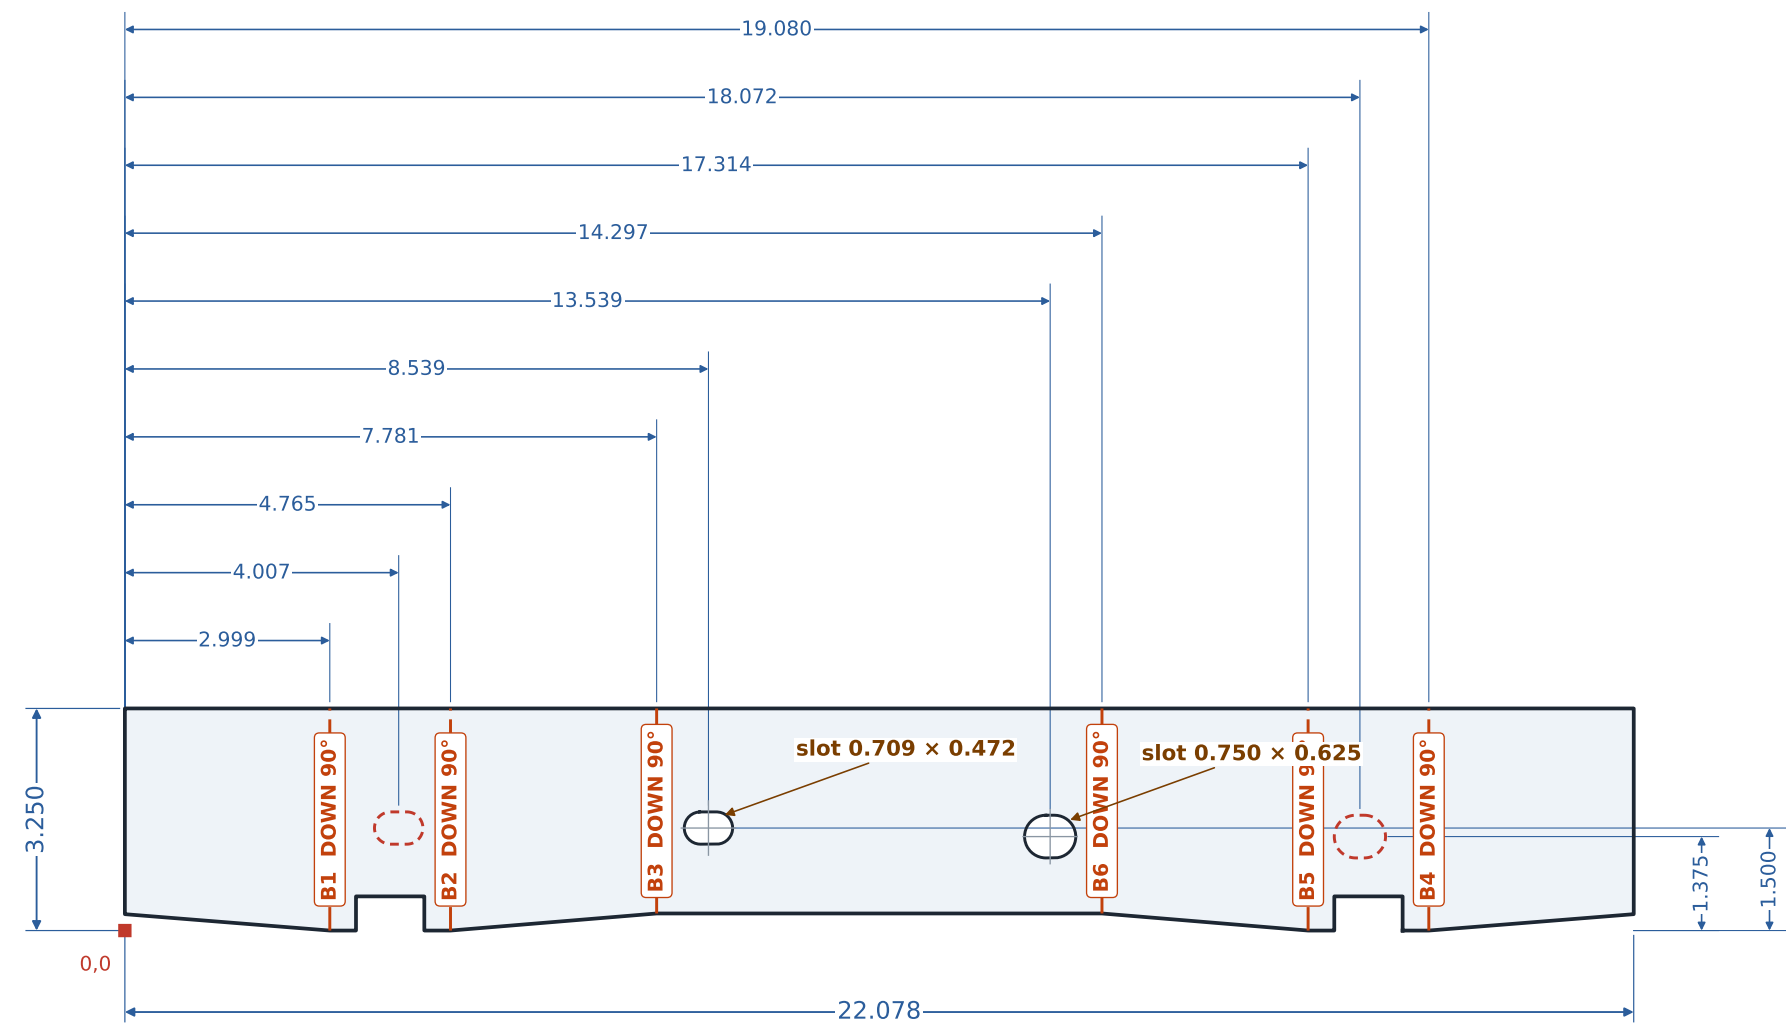

FORMED PART (after bending)

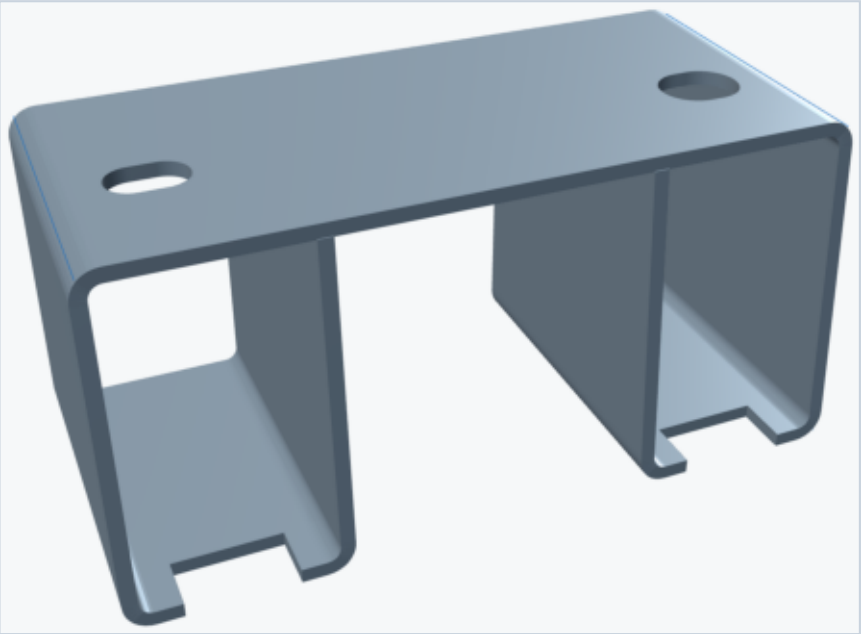

BEND TABLE

Bend	Angle	Direction	Inside R	Order	Bend line position
B1	90.0°	DOWN (away)	R=t 0.135	1	X = 2.999
B2	90.0°	DOWN (away)	R=t 0.135	3	X = 4.765
B3	90.0°	DOWN (away)	R=t 0.135	5	X = 7.781
B4	90.0°	DOWN (away)	R=t 0.135	2	X = 19.080
B5	90.0°	DOWN (away)	R=t 0.135	4	X = 17.314
B6	90.0°	DOWN (away)	R=t 0.135	6	X = 14.297

HOLES (centre from 0,0)

Hole	Size	X	Y	Made by
H1	slot 0.709×0.472	8.539	1.500	laser
H2	slot 0.750×0.625	13.539	1.375	laser
D1	slot 0.709×0.472	4.007	1.500	DRILL LATER
D2	slot 0.750×0.625	18.072	1.375	DRILL LATER

FILES

- FR-2_FR_cut.dxf (right, qty 1 / vehicle)
- FR-2_FL_cut.dxf (left = mirror, qty 1 / vehicle)
- FR-2_ref.dxf (reference: + bend lines, drill-later)

NOTES

- Laser cut from the *_cut.dxf file (1:1, inch). The DXF governs the geometry; dimensions here are for checking.
 - Bend allowance (K = 0.44, inside radius = t) is already in the flat. Bend on the orange lines; UP = toward you when the part lies as drawn.
 - Holes marked DRILL LATER (red dashed) are not laser cut — drill after bending/welding.
 - Deburr all edges, remove dross.
 - Right part (FR) shown. Left part (FL) = mirror: cut *_FL_cut.dxf, bend the same UP/DOWN.
- * one blank, 6 bends 90° the same way (R = t): inner walls first, then the bottoms, then the outer walls; top ovals laser cut; do NOT cut the leg-bottom ovals — drill after welding through the top ovals; ½" notch at the front edge of each bottom

FR-2 Bridge bracket (top + 2 U legs)	HR steel sheet A1011 CS 10 ga 0.135” (3.42 mm)	Units: inch · NOT TO SCALE	Sienna WAV frame	REV A
FR-2 · FR-2 one piece (top + 2 U legs)	QTY 1 FR + 1 FL = 2 per vehicle	Tol.: cut ±0.010” · bend ±1° · IR = t	2026-10-03	SHEET 1/1