


FR-7 · FR-7 one piece (back + bottom + 2 sides)

10 ga 0.135" (3.42 mm) · HR steel sheet A1011 CS · flat blank 9.801" × 8.160" · ≈ 1.61 lb each · QTY 1 FR + 1 FL = 2 per vehicle


FLAT PATTERN (as laser-cut, marked side up)

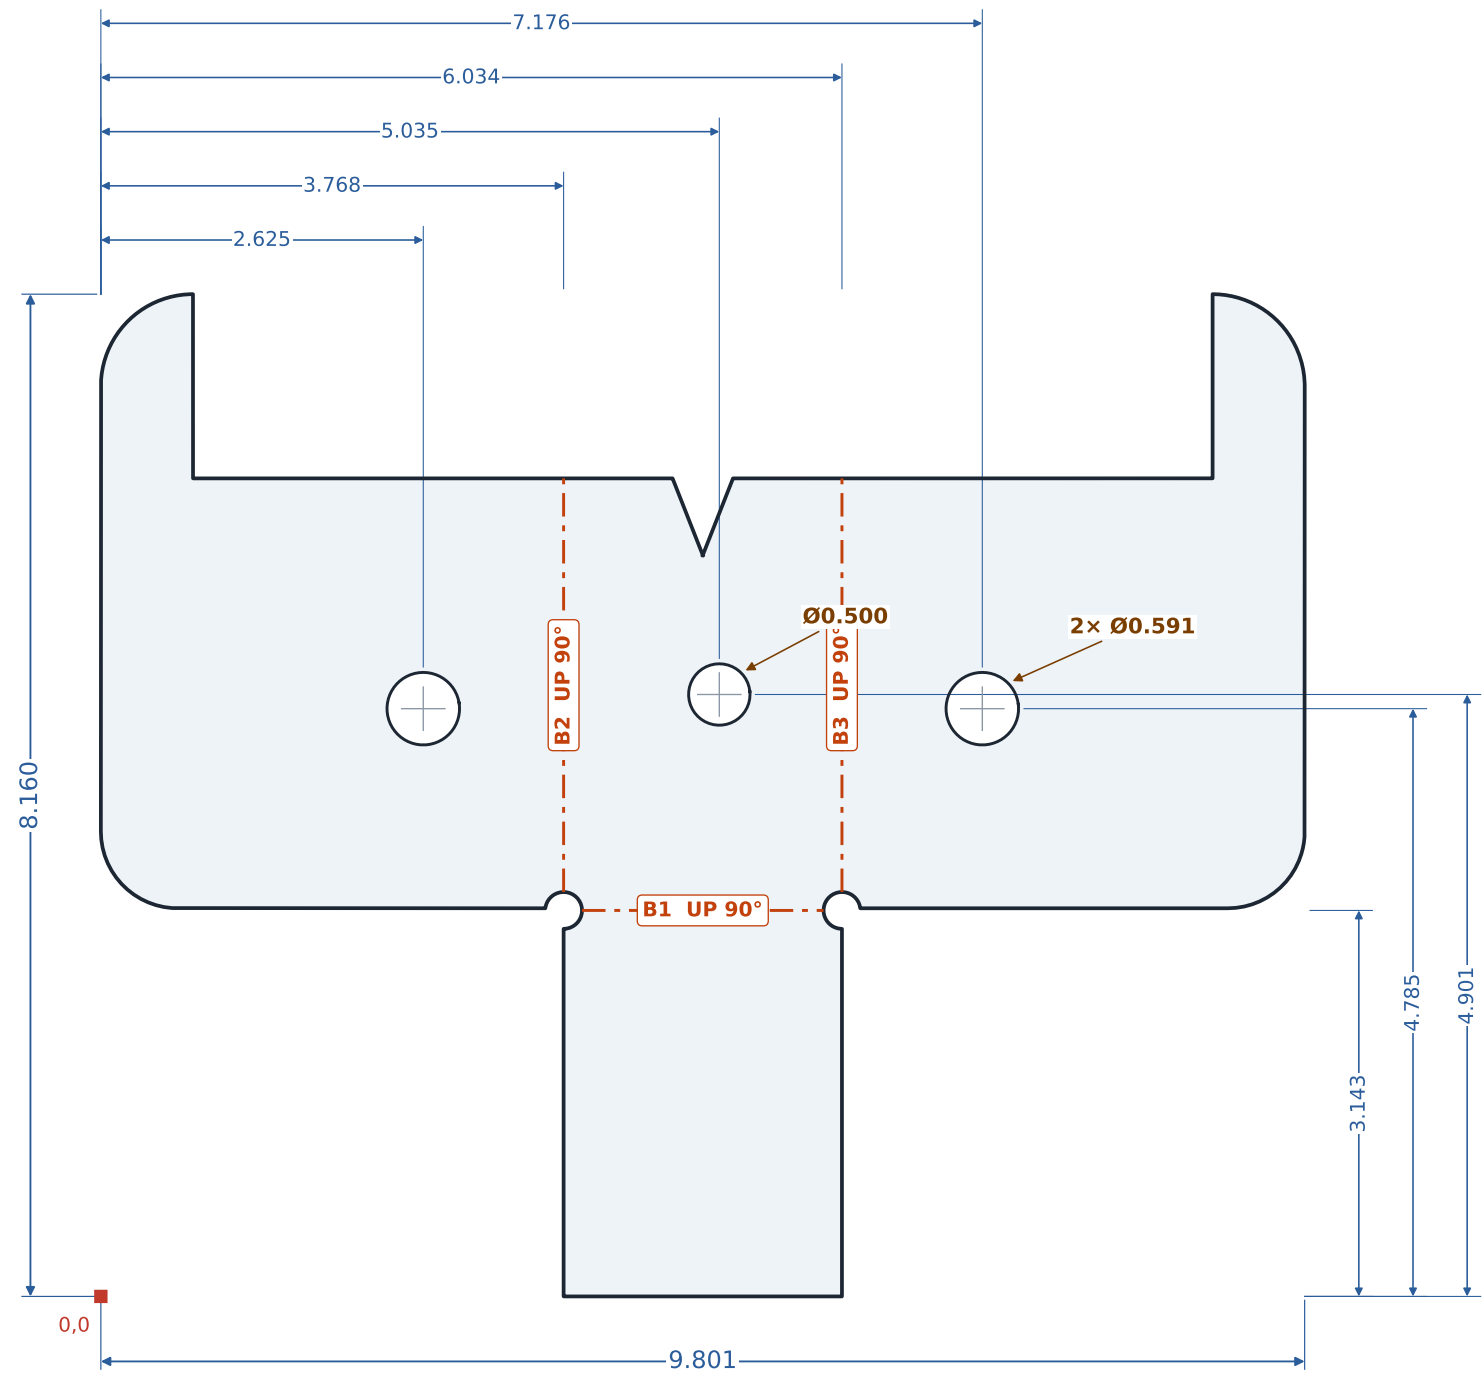

NOTES

- 1. Laser cut from the *_cut.dxf file (1:1, inch). The DXF governs the geometry; dimensions here are for checking.
 - 2. Bend allowance (K = 0.44, inside radius = t) is already in the flat. Bend on the orange lines; UP = toward you when the part lies as drawn.
 - 3. Holes marked DRILL LATER (red dashed) are not laser cut — drill after bending/welding.
 - 4. Deburr all edges, remove dross.
 - 5. Right part (FR) shown. Left part (FL) = mirror: cut *_FL_cut.dxf, bend the same UP/DOWN.
- * one blank, 3 bends 90° the same way (R = t): bottom first, then the sides; Ø0.3 round reliefs in the two corners; after bending weld the side-to-bottom seams; V notch and Ø0.5 hole in the back, Ø0.591 holes in the sides

FORMED PART (after bending)

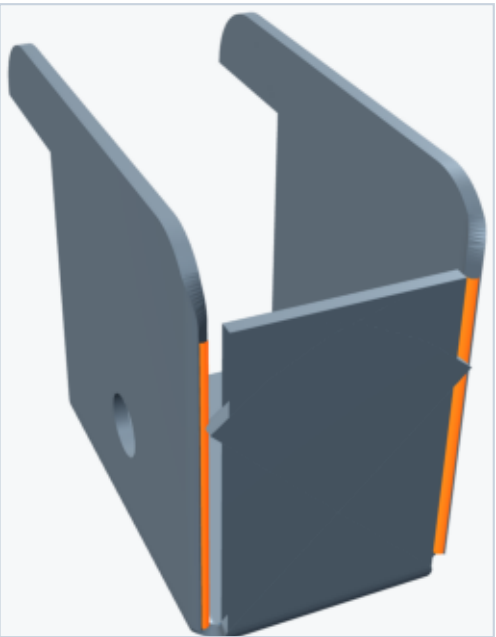

BEND TABLE

Bend	Angle	Direction	Inside R	Order	Bend line position
B1	90.0°	UP (toward)	R=t 0.135	1	Y = 3.143
B2	90.0°	UP (toward)	R=t 0.135	2	X = 3.768
B3	90.0°	UP (toward)	R=t 0.135	3	X = 6.034

HOLES (centre from 0,0)

Hole	Size	X	Y	Made by
H1	Ø0.591	2.625	4.785	laser
H2	Ø0.591	7.176	4.785	laser
H3	Ø0.500	5.035	4.901	laser

FILES

- FR-7_FR_cut.dxf (right, qty 1 / vehicle)
- FR-7_FL_cut.dxf (left = mirror, qty 1 / vehicle)
- FR-7_ref.dxf (reference: + bend lines, drill-later)

FR-7	Tray bracket (back + bottom + 2 sides)	HR steel sheet A1011 CS 10 ga 0.135" (3.42 mm)	Units: inch · NOT TO SCALE	Sienna WAV frame	REV A
FR-7 · FR-7 one piece (back + bottom + 2 sides)		QTY 1 FR + 1 FL = 2 per vehicle	Tol.: cut ±0.010" · bend ±1° · IR = t	2026-10-03	SHEET 1/1