


FF-1 — blank 1 of 1

Channel half with ears — flat pattern (2 bends 90°, web on top) · blank 10.000" × 6.396" · HR steel sheet 0.138" · 2 per vehicle

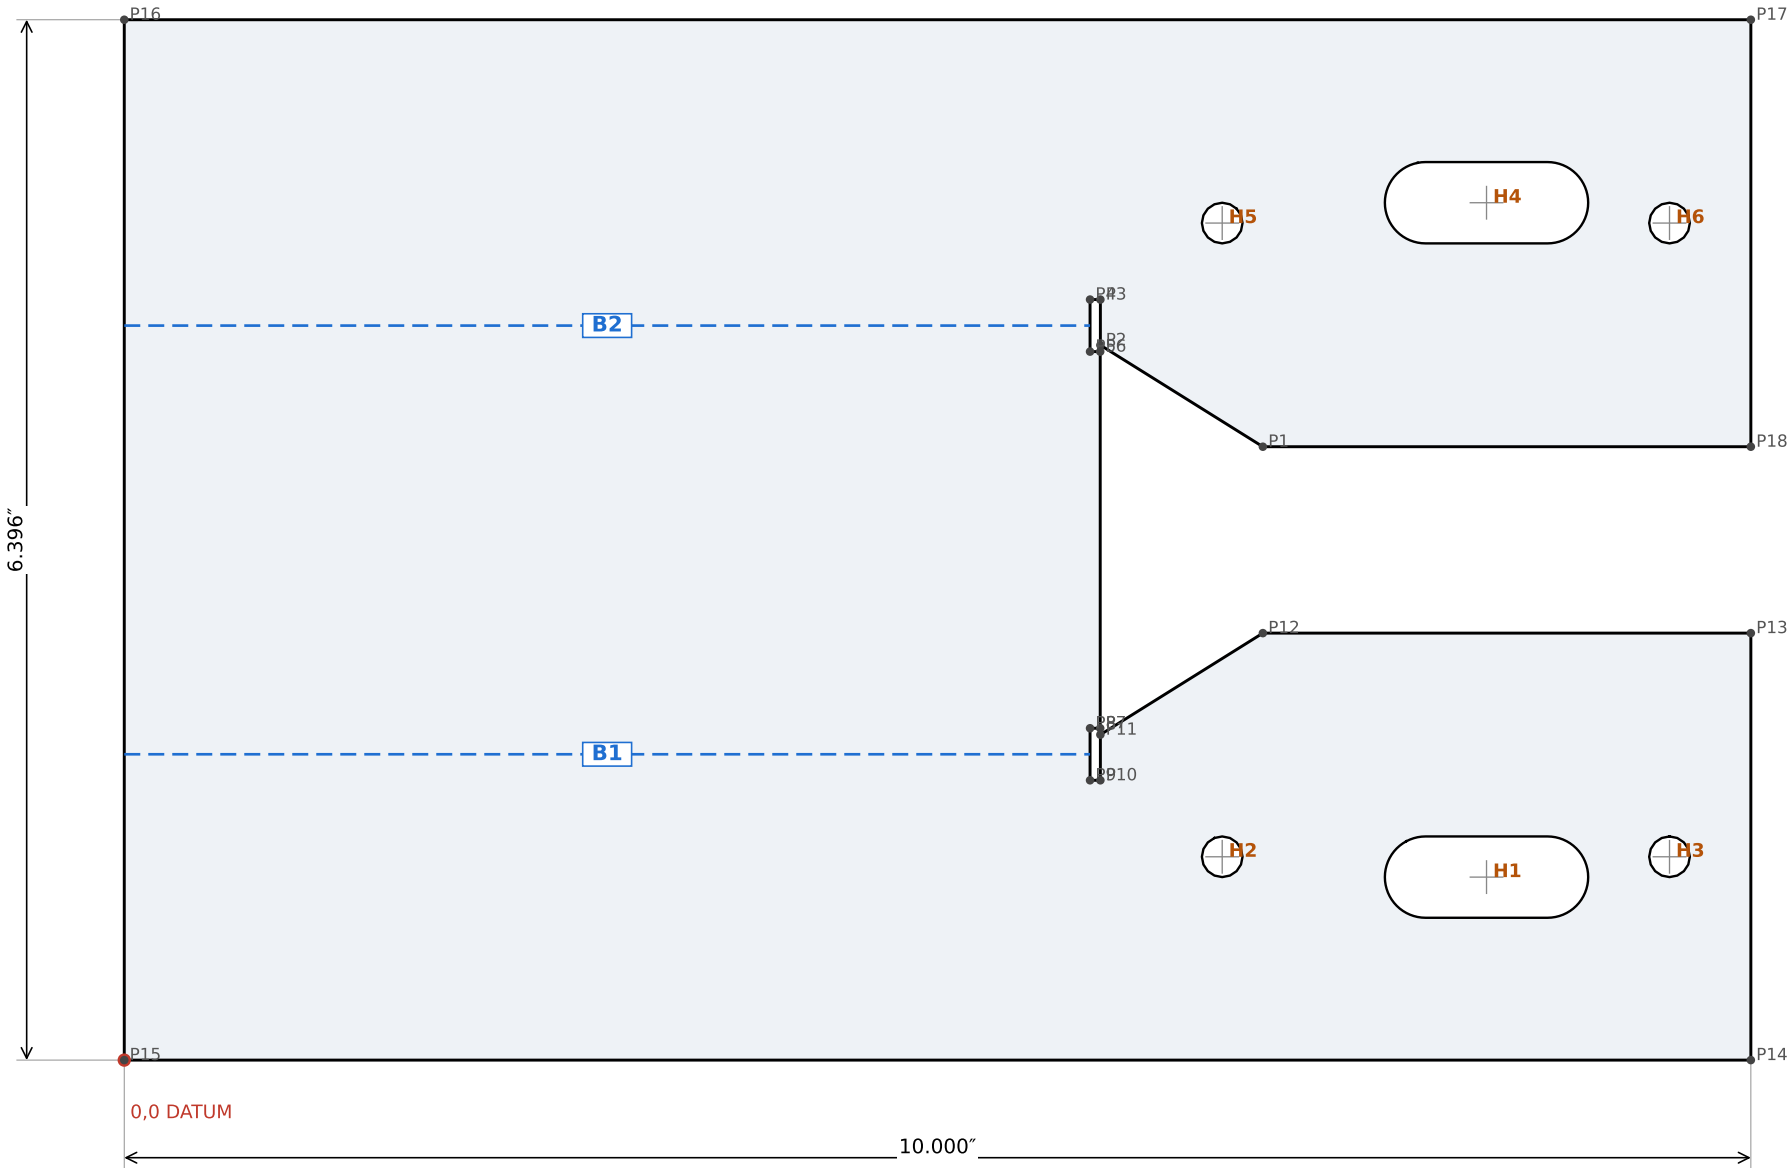

HOLES (centre X, Y from datum)				
H1	slot 1.250 × 0.500"	@0°	X 8.375	Y 1.125
H2	Ø0.250"		X 6.750	Y 1.250
H3	Ø0.250"		X 9.500	Y 1.250
H4	slot 1.250 × 0.500"	@0°	X 8.375	Y 5.271
H5	Ø0.250"		X 6.750	Y 5.146
H6	Ø0.250"		X 9.500	Y 5.146
BENDS (bend centre line, from datum) IR = t = 0.138"				
B1	(1)/(3) 90°		(0.000, 1.880) → (5.938, 1.880)	
B2	(2)/(4) 90°		(0.000, 4.516) → (5.938, 4.516)	

OUTLINE POINTS (X, Y from datum)

P1	7.000	3.771
P2	6.001	4.395
P3	6.001	4.676
P4	5.938	4.676
P5	5.938	4.356
P6	6.000	4.356
P7	6.000	2.040
P8	5.938	2.040
P9	5.938	1.720
P10	6.001	1.720
P11	6.001	2.001
P12	7.000	2.625
P13	10.000	2.625
P14	10.000	0.000
P15	0.000	0.000
P16	0.000	6.396
P17	10.000	6.396
P18	10.000	3.771

NOTES

1. Cut from the DXF file (1:1, inches). This sheet is for checking.
2. Material: HR steel sheet 0.138" (t). Inside bend radius = t.
3. Flat pattern already includes bend allowance (K = 0.44, R = t).
4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * web on top, level with D; bend the walls 90° down on the dashed lines; the ears reach past the bend line (no web there); 1/16" relief slit at the bend end; weld the two halves in the middle at ~175° (ends ¼" out)

FF-1 — blank 1 of 1	HR steel sheet 0.138"	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Channel half with ears — flat pattern (2 bends 90°, web on top)	QTY: 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 1