


FR-10 (bent version) — blank 1 of 2

Part 1 "U-body" — 2 sides + wall A-H + flange E-F (3 bends) · blank 12.287" × 11.214" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

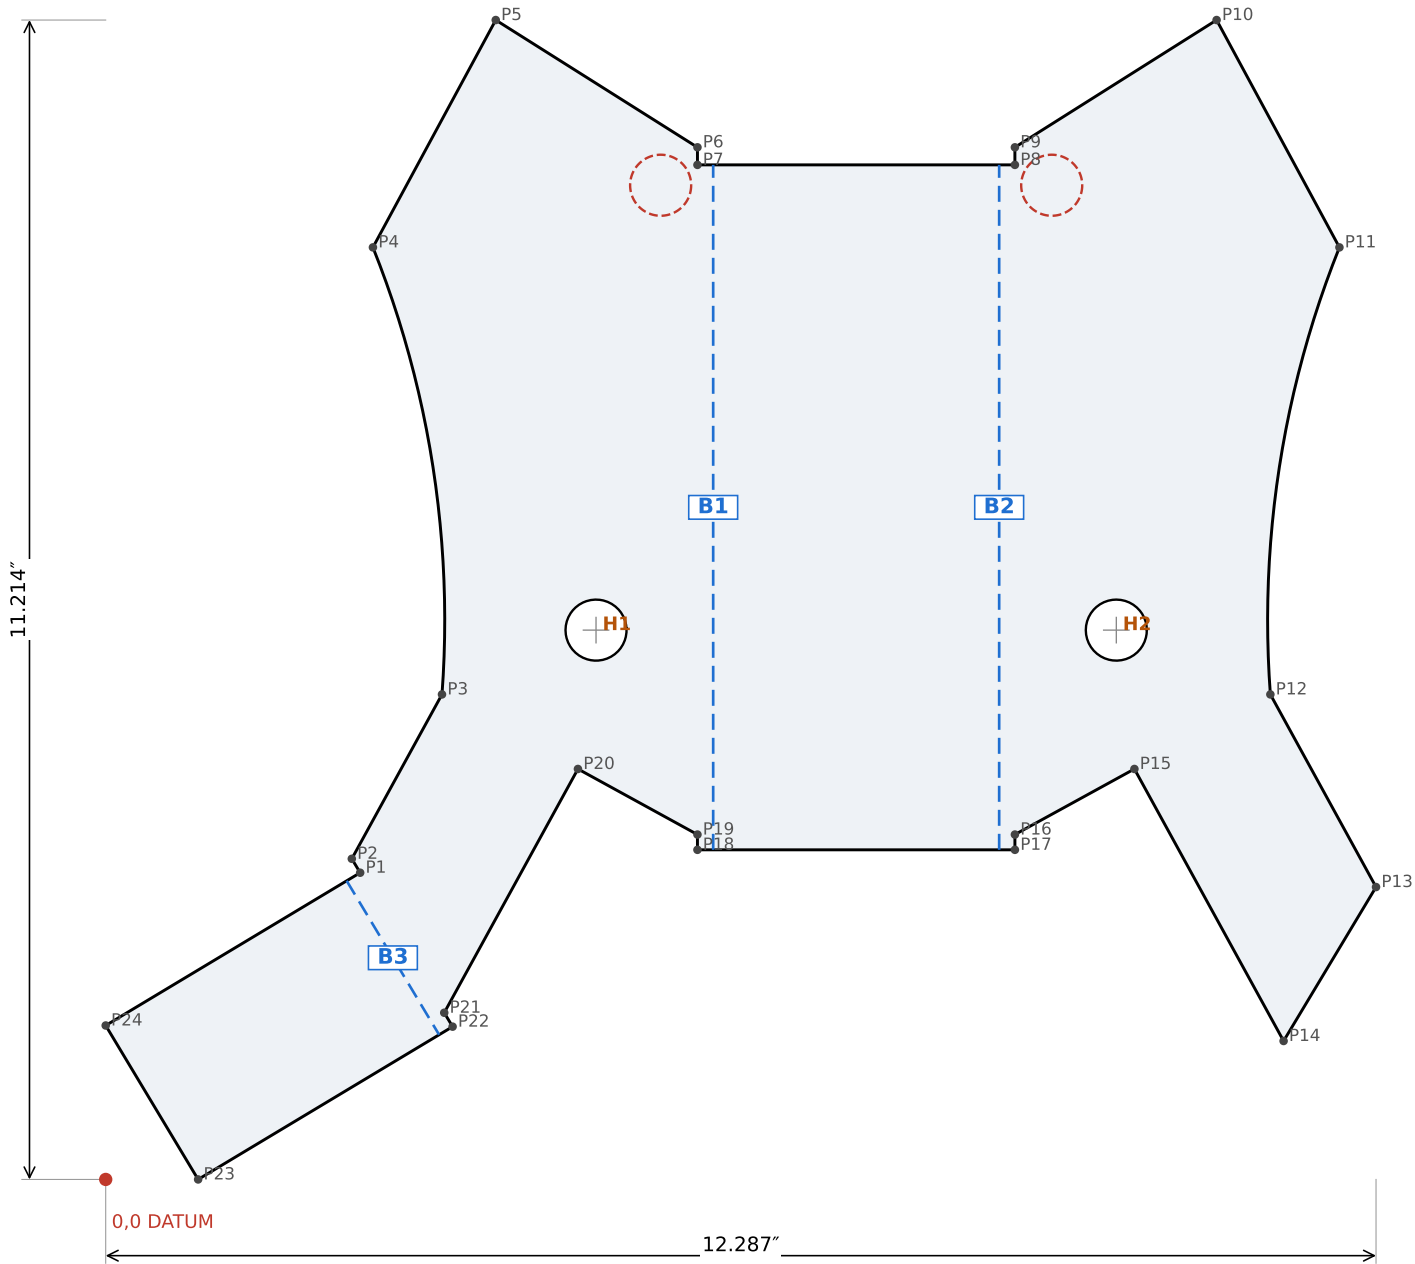

HOLES (centre X, Y from datum)

H1 Ø0.591" X 4.743 Y 5.313
H2 Ø0.591" X 9.775 Y 5.313

DRILL AFTER WELDING (red dashed — do NOT laser cut)

D1 Ø0.591" X 5.368 Y 9.616
D2 Ø0.591" X 9.150 Y 9.616

BENDS (bend centre line, from datum) IR = t = 10 ga (0.135")

B1 (2) 90° (5.876, 3.188) → (5.876, 9.813)
B2 (3) 90° (8.642, 3.188) → (8.642, 9.813)
B3 (1) 90° (2.331, 2.888) → (3.225, 1.399)

CURVED EDGES (radius, centre X, Y)

R1 R 9.700" centre -6.421, 5.410
R2 R 9.701" centre 20.940, 5.410

OUTLINE POINTS (X, Y from datum)

P1 2.461 2.967
P2 2.380 3.101
P3 3.253 4.691
P4 2.585 9.015
P5 3.773 11.214
P6 5.724 9.983
P7 5.724 9.813
P8 8.794 9.813
P9 8.794 9.983
P10 10.745 11.214
P11 11.933 9.015
P12 11.265 4.691
P13 12.287 2.828
P14 11.393 1.339
P15 9.950 3.970
P16 8.794 3.336
P17 8.794 3.188
P18 5.723 3.188
P19 5.723 3.336
P20 4.568 3.970
P21 3.274 1.612
P22 3.355 1.478
P23 0.894 0.000
P24 0.000 1.489

NOTES

1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 6. FR side as drawn; FL side = mirror image (flip the blank).
- * bends (1)(2)(3) 90° up, R = t; the 2 Ø0.591 holes near A (½" from A-B, ⅝" from A-H) are not in the flat — drill after bending

FR-10 (bent version) — blank 1 of 2	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Part 1 "U-body" — 2 sides + wall A-H + flange E-F (3 bends)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 3

FR-10 (bent version) — blank 2 of 2

Part 2 "strip" — A-B · B-C · shelf · inner plate (3 bends) · blank 12.478" × 2.716" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

HOLES (centre X, Y from datum)


H1	Ø1.510"	X 1.110	Y 1.358
H2	Ø1.510"	X 5.809	Y 1.358

BENDS (bend centre line, from datum) IR = t = 10 ga (0.135")

B1	(5) B 93.9°	(2.337, 0.000) → (2.337, 2.716)
B2	(6) C 86.1°	(4.736, 0.000) → (4.736, 2.716)
B3	(4) X 79.2° ↓	(7.044, 0.000) → (7.044, 2.716)

OUTLINE POINTS (X, Y from datum)

P1	0.000	2.526
P2	0.190	2.716
P3	12.288	2.716
P4	12.478	2.526
P5	12.478	0.190
P6	12.288	0.000
P7	0.190	0.000
P8	0.000	0.190

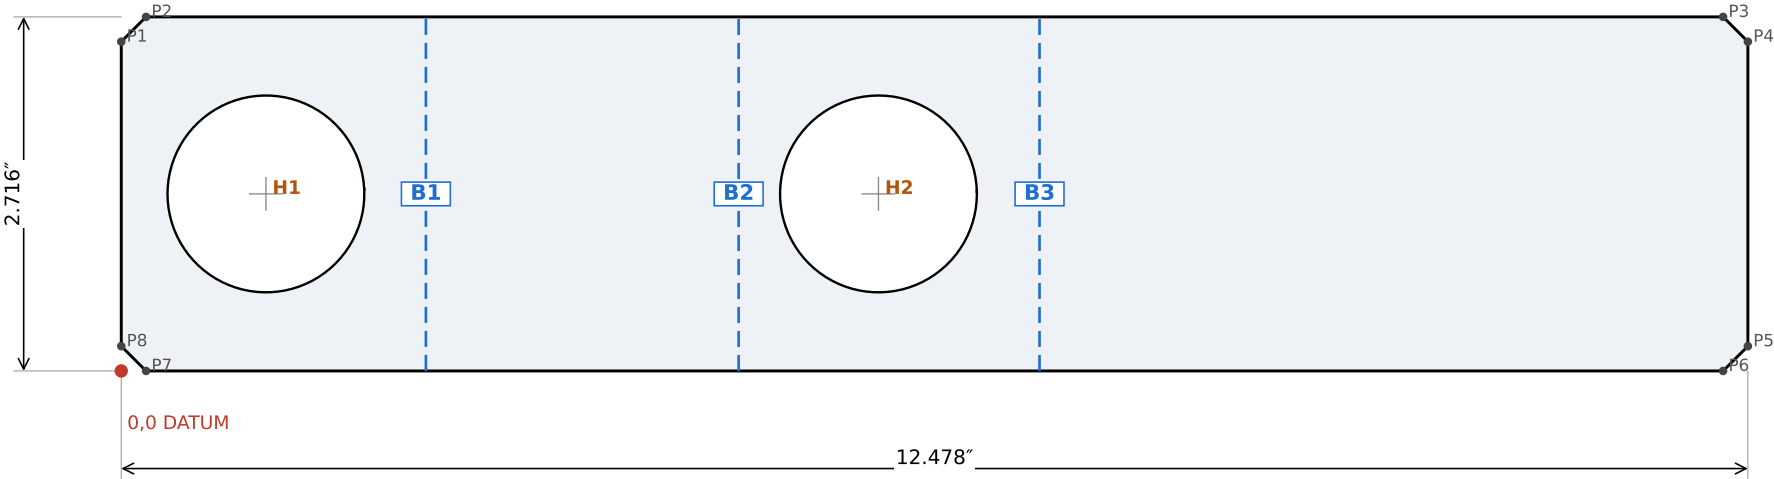

NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
- 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
- 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
- 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
- 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- 6. FR side as drawn; FL side = mirror image (flip the blank).
- * (4) X 79.2° opposite way; (5) B 93.9°, (6) C 86.1° up; corners 3/16"×45°

FR-10 (bent version) — blank 2 of 2	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Part 2 "strip" — A-B · B-C · shelf · inner plate (3 bends)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 2 / 3

FR-10 (bent version) — cut list (tubes)

- **Tube OD 1.5 / ID 1.181 — cut 3.42” (through A-B and the shelf)**

Stock: DOM round tube · cut length 3.420” · QTY 1 per side · FR + FL (mirror) = 2 per vehicle

Cut square, ±1/32”. Deburr. Lengths in inches.

FR-10 — tubes		inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Tube OD 1.5 / ID 1.181 — cut 3.42” (through A-B and the shelf)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010” · bends ±1° · IR = t	SHEET 3 / 3