
FR-7 · FR-7 one piece (back + bottom + 2 sides)

11 ga 0.120″ (3.04 mm) · HR steel sheet A1011 CS · flat blank 9.853″ × 8.186″ · ≈ 1.45 lb each · QTY 1 FR + 1 FL = 2 per vehicle


MATERIAL: HR steel sheet A1011 CS
THICKNESS: 11 ga t = 0.1196″ (3.04 mm)

FLAT PATTERN (as laser-cut, marked side up)

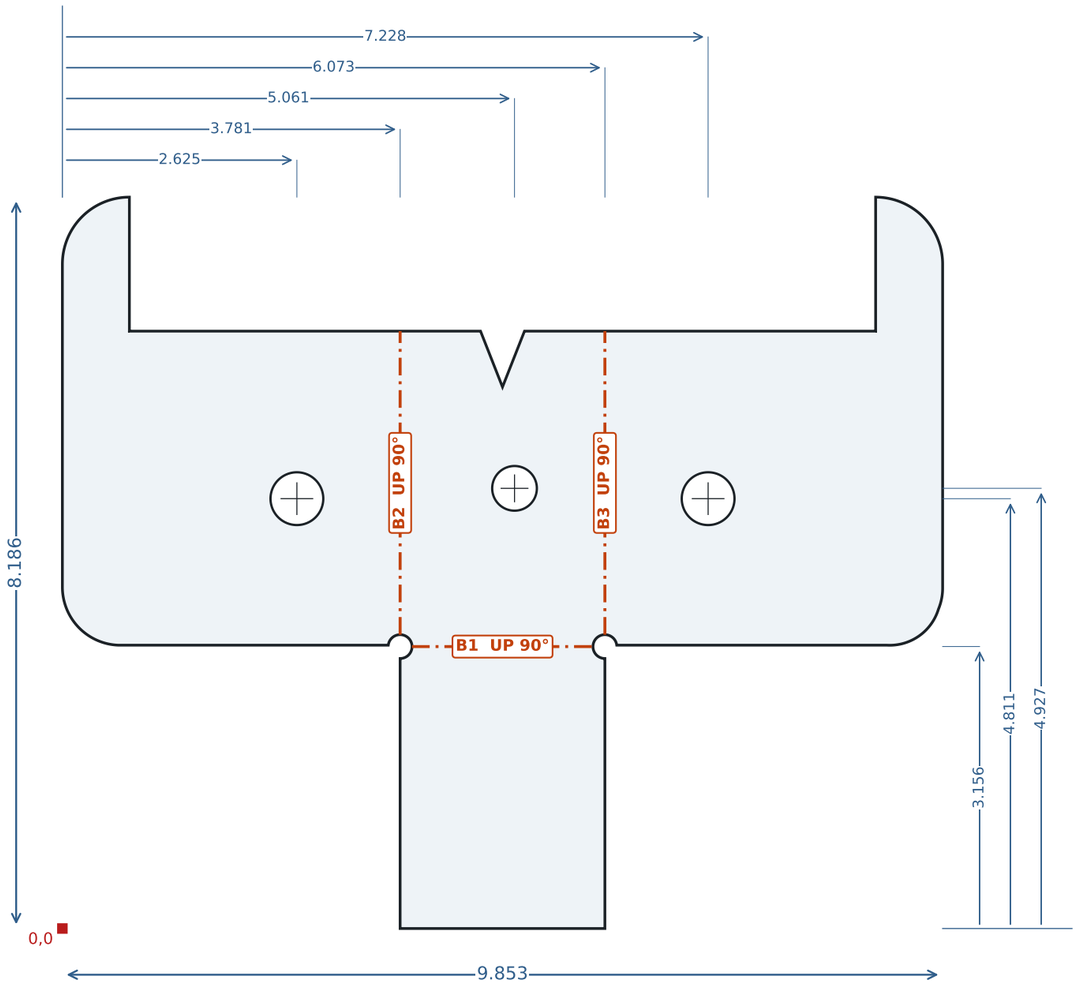

FR-7 · 11 ga 0.120″ (3.04 mm) · HR steel sheet A1011 CS

FORMED PART (after bending)

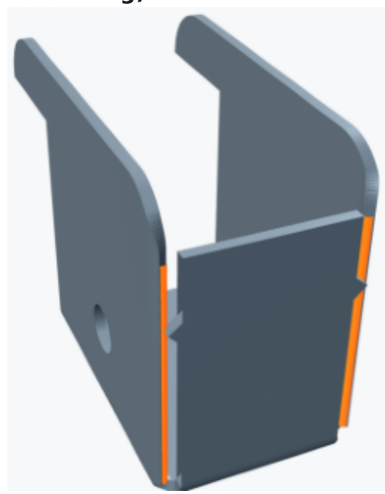

(shape; thickness now 11 ga 0.120″)

BEND TABLE

Bend	Angle	Direction	Inside R	Order	Bend line position
B1	90.0°	UP (toward)	R=t 0.120	1	Y = 3.156
B2	90.0°	UP (toward)	R=t 0.120	2	X = 3.781
B3	90.0°	UP (toward)	R=t 0.120	3	X = 6.073

HOLES (centre from 0,0)

Hole	Size	X	Y	Made by
H1	Ø0.591	2.625	4.811	laser
H2	Ø0.500	5.061	4.927	laser
H3	Ø0.591	7.228	4.811	laser

FILES

- FR-7_FR_cut.dxf (right, qty 1 / vehicle)
- FR-7_FL_cut.dxf (left = mirror, qty 1 / vehicle)
- FR-7_ref.dxf (reference: + bend lines, drill-later, material notes)

NOTES

1. Laser cut from the *_cut.dxf file (1:1, inch). The DXF governs the geometry; dimensions here are for checking.
2. MATERIAL HR steel sheet A1011 CS, 11 ga t = 0.1196″ (3.04 mm). Bend allowance (K = 0.44, inside radius = t) is already in the flat.
   Bend on the orange lines; UP = toward you when the part lies as drawn.
3. Holes marked DRILL LATER (red dashed) are not laser cut - drill after bending/welding.
4. Deburr all edges, remove dross.
5. Right part (FR) shown. Left part (FL) = mirror: cut *_FL_cut.dxf, bend the same UP/DOWN.

* one blank, 3 bends 90° the same way (R = t): bottom first, then the sides; Ø0.3 round reliefs in the two corners; after bending weld the side-to-bottom seams; V notch and Ø0.5 hole in the back, Ø0.591 holes in the sides

FR-7 Tray bracket (back + bottom + 2 sides)	**HR steel sheet A1011 CS 11 ga 0.120″ (3.04 mm)**	Units: inch · NOT TO SCALE	Sienna WAV frame	**REV B**
FR-7 · FR-7 one piece (back + bottom + 2 sides)	**QTY 1 FR + 1 FL = 2 per vehicle**	Tol.: cut ±0.010″ · bend ±1° · IR = t	2026-10-31	**SHEET 1/1**