


FF-1 — blank 1 of 1

Channel half with ears — flat pattern (2 bends 90°, web on top) · blank 10.000" × 6.407" · HR steel sheet 10 ga (0.135") · 2 per vehicle

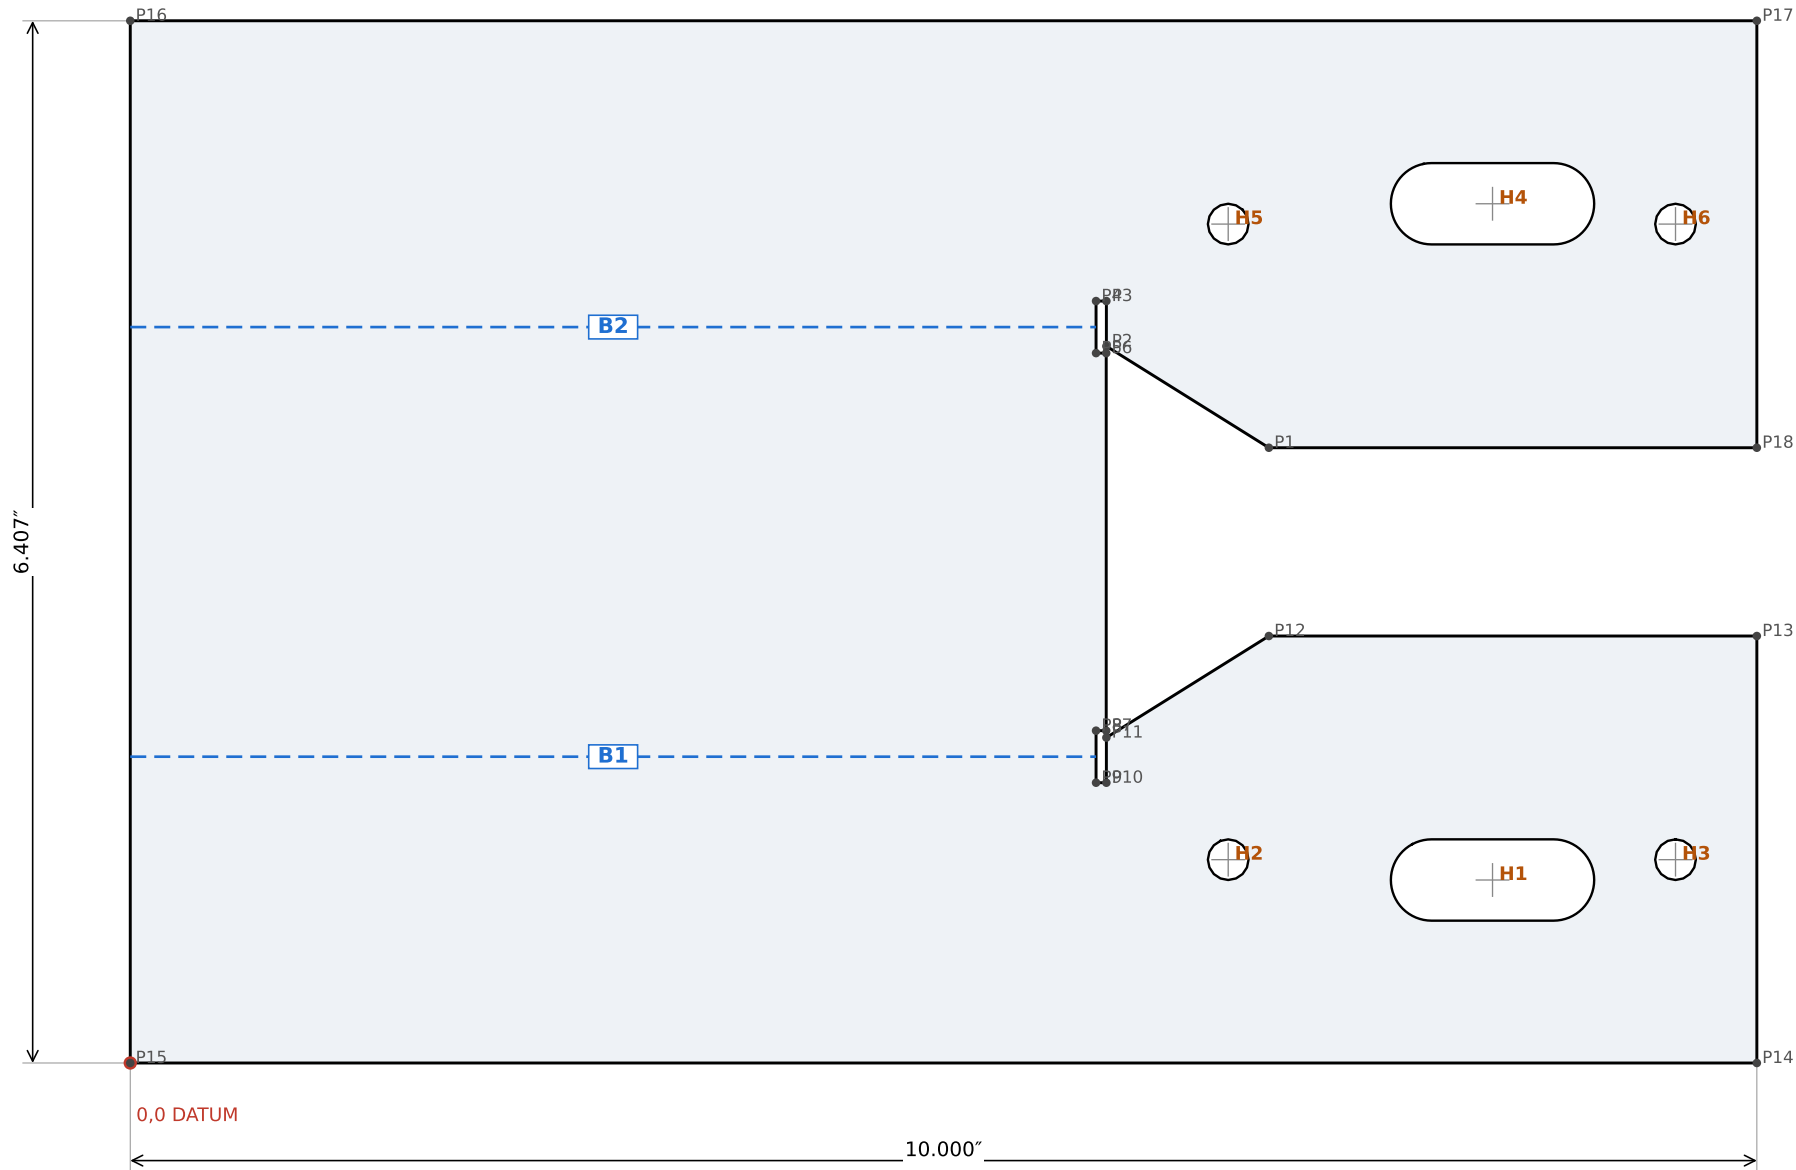

HOLES (centre X, Y from datum)

H1	slot 1.250 × 0.500"	@0°	X 8.375	Y 1.125
H2	Ø0.250"		X 6.750	Y 1.250
H3	Ø0.250"		X 9.500	Y 1.250
H4	slot 1.250 × 0.500"	@0°	X 8.375	Y 5.282
H5	Ø0.250"		X 6.750	Y 5.157
H6	Ø0.250"		X 9.500	Y 5.157

BENDS (bend centre line, from datum) IR = t = 10 ga (0.135")

B1	(1)/(3)	90°	(0.000, 1.883) → (5.938, 1.883)
B2	(2)/(4)	90°	(0.000, 4.524) → (5.938, 4.524)

OUTLINE POINTS (X, Y from datum)

P1	7.000	3.783
P2	6.001	4.407
P3	6.001	4.684
P4	5.938	4.684
P5	5.938	4.364
P6	6.000	4.364
P7	6.000	2.043
P8	5.938	2.043
P9	5.938	1.723
P10	6.001	1.723
P11	6.001	2.001
P12	7.000	2.625
P13	10.000	2.625
P14	10.000	0.000
P15	0.000	0.000
P16	0.000	6.407
P17	10.000	6.407
P18	10.000	3.783

NOTES

1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * web on top, level with D; bend the walls 90° down on the dashed lines; the ears reach past the bend line (no web there); 1/16" relief slit at the bend end; weld the two halves in the middle at ~175° (ends ¼" out)

FF-1 — blank 1 of 1	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Channel half with ears — flat pattern (2 bends 90°, web on top)	QTY: 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 1