


FF-3 — blank 1 of 4

FF3-1 top plate — flat pattern, 10 bends 90° down · blank 39.403” × 15.073” · HR steel sheet 11 ga (0.120”) · 1 per vehicle

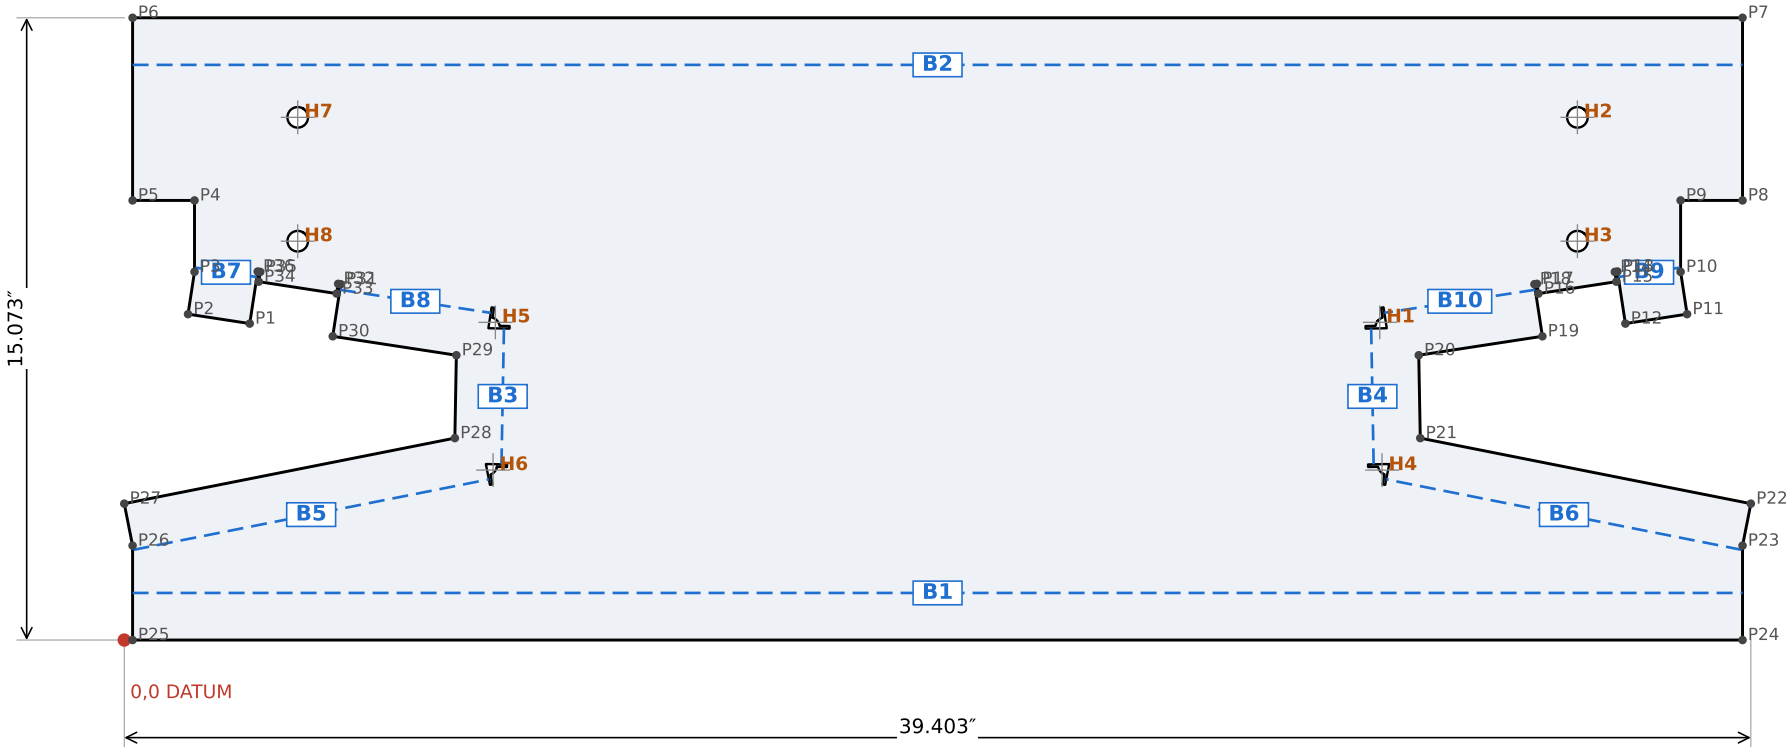

HOLES (centre X, Y from datum)

H1	slot	0.512 × 0.508"	@1°	X	30.413	Y	7.696
H2	Ø0.500"			X	35.202	Y	12.662
H3	Ø0.500"			X	35.202	Y	9.662
H4	slot	0.514 × 0.502"	@79°	X	30.469	Y	4.117
H5	slot	0.512 × 0.508"	@-1°	X	8.990	Y	7.696
H6	slot	0.514 × 0.502"	@-79°	X	8.934	Y	4.117
H7	Ø0.500"			X	4.202	Y	12.662
H8	Ø0.500"			X	4.202	Y	9.662

BENDS (bend centre line, from datum) IR = t = 11 ga (0.120")

B1	(3)	90° ↓	(0.202, 1.141) → (39.202, 1.141)
B2	(4)	90° ↓	(0.202, 13.933) → (39.202, 13.933)
B3	(5)	90° ↓	(9.138, 4.256) → (9.197, 7.546)
B4	(6)	90° ↓	(30.265, 4.256) → (30.206, 7.546)
B5	(7)	90° ↓	(0.222, 2.185) → (8.833, 3.892)
B6	(8)	90° ↓	(39.181, 2.185) → (30.570, 3.892)
B7	(9)	90° ↓	(1.717, 9.022) → (3.212, 8.793)
B8	(10)	90° ↓	(5.223, 8.486) → (8.878, 7.926)
B9	(11)	90° ↓	(37.686, 9.022) → (36.191, 8.793)
B10	(12)	90° ↓	(34.180, 8.486) → (30.526, 7.926)

OUTLINE POINTS (X, Y from datum)

P1	3.039	7.666
P2	1.545	7.895
P3	1.702	8.920
P4	1.702	10.649
P5	0.202	10.649
P6	0.202	15.073
P7	39.202	15.073
P8	39.202	10.649
P9	37.702	10.649
P10	37.702	8.920
P11	37.859	7.895
P12	36.364	7.666
P13	36.171	8.927
P14	36.109	8.918
P15	36.145	8.681
P16	34.258	8.392
P17	34.222	8.629
P18	34.160	8.619
P19	34.353	7.358
P20	31.358	6.899
P21	31.395	4.891
P22	39.403	3.304
P23	39.202	2.287
P24	39.202	0.000
P25	0.202	0.000
P26	0.202	2.287
P27	0.000	3.304
P28	8.008	4.891
P29	8.045	6.899
P30	5.050	7.358
P31	5.243	8.619
P32	5.181	8.629
P33	5.145	8.392
P34	3.258	8.681
P35	3.294	8.918
P36	3.232	8.927


NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
- 2. Material: HR steel sheet 11 ga (0.120") (t). Inside bend radius = t.
- 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
- 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
- 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * rims 1½" bent down on the long sides and around the whole notch; leg ends open; in the 4 inner notch corners the rims are mitred — a gap stays in the corner; 1/16" reliefs at the bend ends; the 4 Ø½ holes are cut right away

FF-3 — blank 1 of 4	HR steel sheet 11 ga (0.120")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
FF3-1 top plate — flat pattern, 10 bends 90° down	QTY: 1 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 4

FF-3 — blank 2 of 4

FF3-2 lower plate — flat pattern, 2 bends 90° up · blank 39.000″ × 14.595″ · HR steel sheet 11 ga (0.120″) · 1 per vehicle

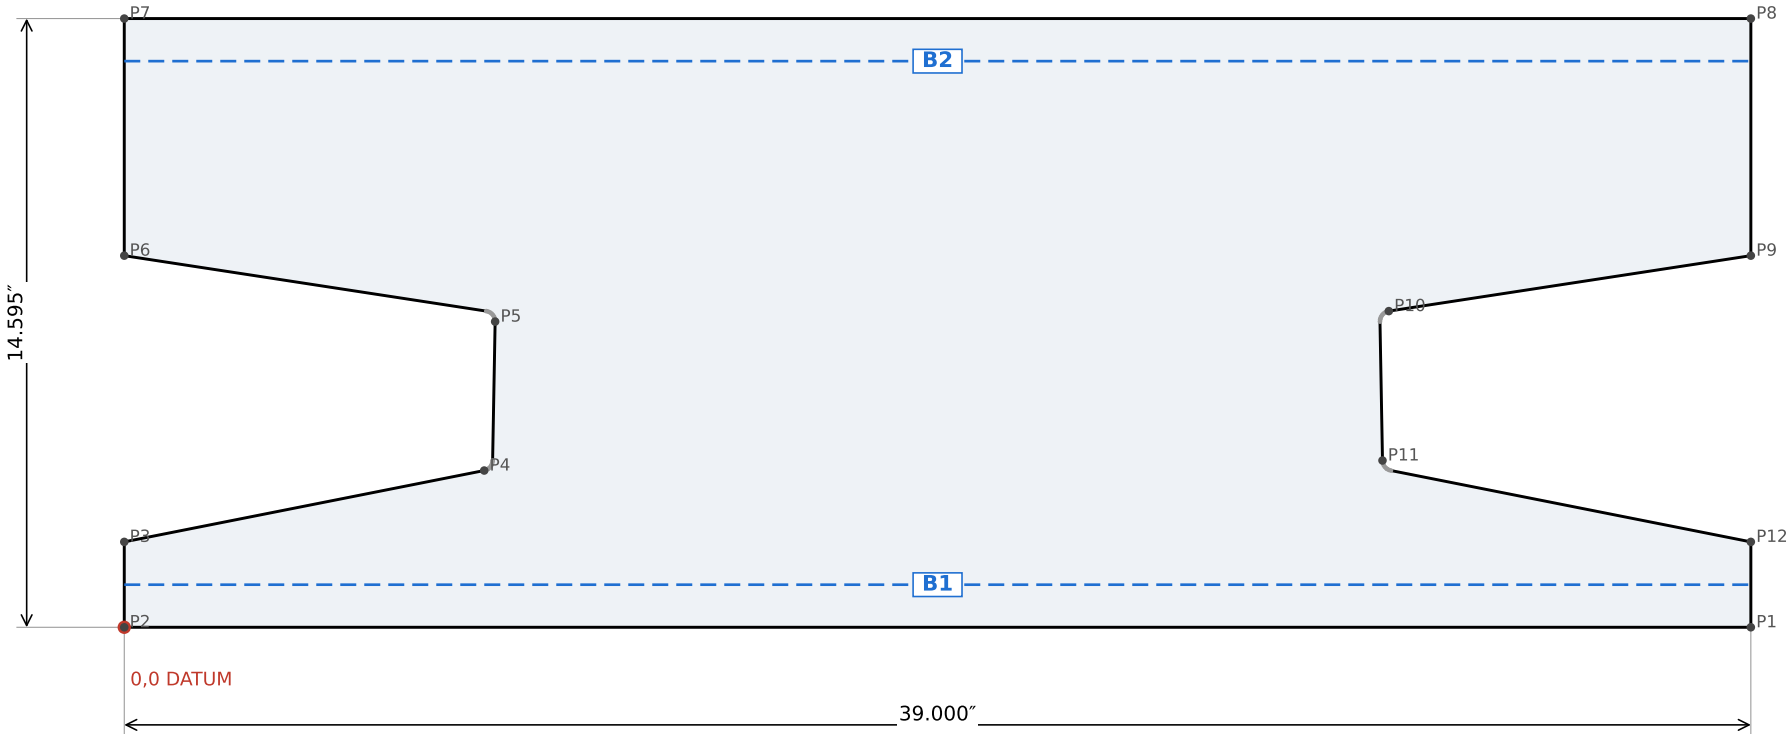

HOLES (centre X, Y from datum)

none

BENDS (bend centre line, from datum) IR = t = 11 ga (0.120″)

B1 (1) 90° (0.000, 1.021) → (39.000, 1.021)

B2 (2) 90° (0.000, 13.574) → (39.000, 13.574)

OUTLINE POINTS (X, Y from datum)

P1	39.000	0.000
P2	0.000	0.000
P3	0.000	2.047
P4	8.630	3.758
P5	8.892	7.329
P6	0.000	8.910
P7	0.000	14.595
P8	39.000	14.595
P9	39.000	8.910
P10	30.320	7.581
P11	30.168	3.999
P12	39.000	2.047

FREE-FORM CURVE 1 (grey dots, follow DXF) — points X, Y

8.677	3.772
8.720	3.795
8.739	3.809
8.774	3.843
8.801	3.883
8.820	3.928
8.830	3.975
8.832	3.999

FREE-FORM CURVE 2 (grey dots, follow DXF) — points X, Y

8.889	7.377
8.883	7.400
8.866	7.445
8.841	7.485
8.808	7.520
8.770	7.549
8.726	7.569
8.680	7.581

FREE-FORM CURVE 3 (grey dots, follow DXF) — points X, Y

30.273	7.569
30.230	7.549
30.192	7.520
30.159	7.485
30.134	7.445
30.117	7.400
30.111	7.377
30.108	7.329

FREE-FORM CURVE 4 (grey dots, follow DXF) — points X, Y

30.170	3.975
30.180	3.928
30.199	3.883
30.226	3.843
30.261	3.809
30.280	3.795
30.323	3.772
30.369	3.758

NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
- 2. Material: HR steel sheet 11 ga (0.120″) (t). Inside bend radius = t.
- 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
- 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
- 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * rims on the long sides bent up 1″ (to the FF3-1 underside), set in by t inside the FF3-1 rims; 1/16″ reliefs at the bend ends

FF-3 — blank 2 of 4	HR steel sheet 11 ga (0.120″)	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
FF3-2 lower plate — flat pattern, 2 bends 90° up	QTY: 1 per vehicle	cut ±0.010″ · bends ±1° · IR = t	SHEET 2 / 4

FF-3 — blank 3 of 4

Passage wall 1⅞ × 4.69" (instead of the tube) · blank 4.687" × 1.125" · HR steel sheet 11 ga (0.120") · 2 per vehicle

HOLES (centre X, Y from datum)

none

OUTLINE POINTS (X, Y from datum)

P1	4.687	0.000
P2	4.687	1.125
P3	0.000	1.125
P4	0.000	0.000



NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 11 ga (0.120") (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * stands on FF3-2 under FF3-1, on the old tube wall line; weld top and bottom

FF-3 — blank 3 of 4	HR steel sheet 11 ga (0.120")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Passage wall 1⅞ × 4.69" (instead of the tube)	QTY: 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 3 / 4

FF-3 — blank 4 of 4

Passage wall 1⅞ × 5.01″ (instead of the tube) · blank 5.013″ × 1.125″ · HR steel sheet 11 ga (0.120″) · 2 per vehicle

HOLES (centre X, Y from datum)

none

OUTLINE POINTS (X, Y from datum)

P1	5.013	0.000
P2	5.013	1.125
P3	0.000	1.125
P4	0.000	0.000



NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 11 ga (0.120″) (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- * stands on FF3-2 under FF3-1, on the old tube wall line; weld top and bottom

FF-3 — blank 4 of 4	HR steel sheet 11 ga (0.120″)	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Passage wall 1⅞ × 5.01″ (instead of the tube)	QTY: 2 per vehicle	cut ±0.010″ · bends ±1° · IR = t	SHEET 4 / 4