


FR-3 — blank 1 of 1

Channel — flat pattern (2 bends 90°) · blank 4.084" × 7.734" · HR steel sheet 11 ga (0.120") · 1 per side · FR + FL (mirror) = 2 per vehicle

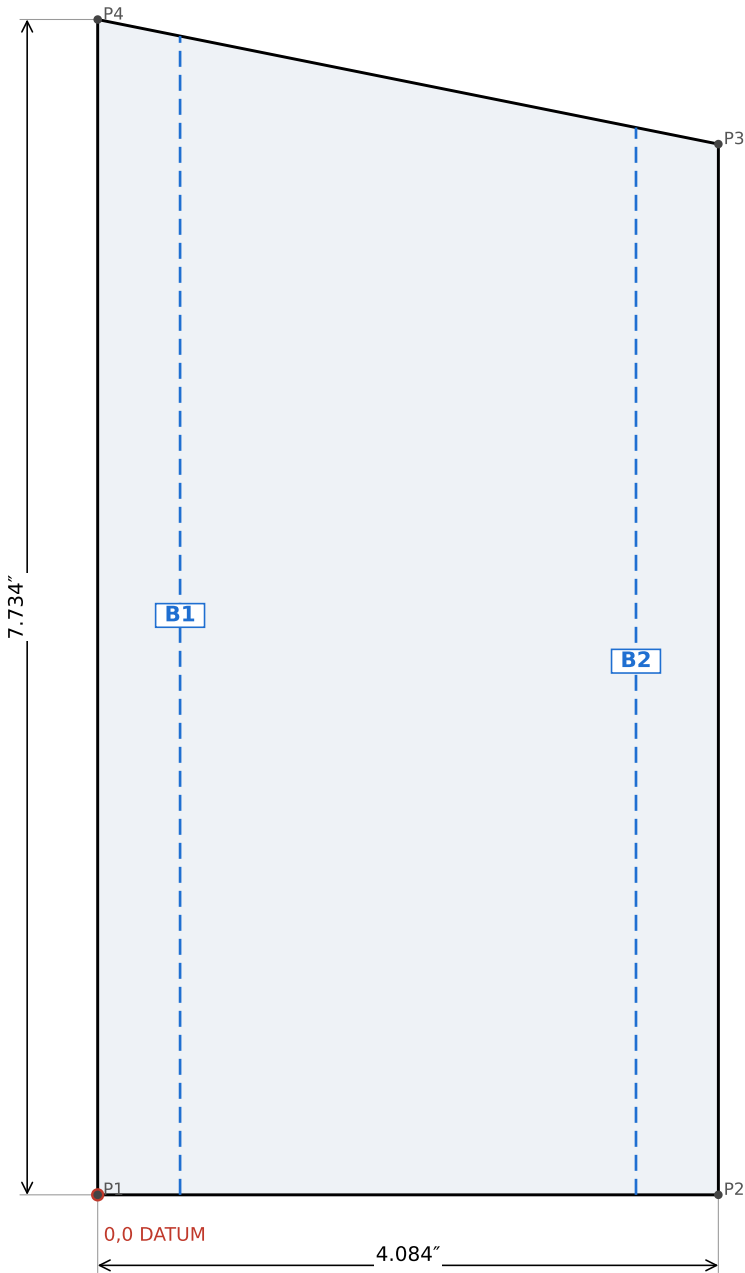

HOLES (centre X, Y from datum)

none

BENDS (bend centre line, from datum) IR = t = 11 ga (0.120")

B1 (1) 90° (0.542, 0.000) → (0.542, 7.625)

B2 (2) 90° (3.542, 0.000) → (3.542, 7.023)

OUTLINE POINTS (X, Y from datum)

P1 0.000 0.000

P2 4.084 0.000

P3 4.084 6.914

P4 0.000 7.734

NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 11 ga (0.120") (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 - 6. FR side as drawn; FL side = mirror image (flip the blank).
- * bend 90° on dashed lines, 3/4 flanges inward

FR-3 — blank 1 of 1	HR steel sheet 11 ga (0.120")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Channel — flat pattern (2 bends 90°)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 1