

FR-4 (bent version) — blank 1 of 3

Wrap strip (ear, top, front, bottom, slant) · blank 18.746" × 2.716" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

HOLES (centre X, Y from datum)


H1	Ø1.500"	X 6.274	Y 1.358
H2	Ø1.500"	X 11.932	Y 1.358

BENDS (bend centre line, from datum) IR = t = 10 ga (0.135")

B1	(5) 60°	(14.878, 0.000) → (14.878, 2.716)
B2	(4) 90°	(10.549, 0.000) → (10.549, 2.716)
B3	(3) 90°	(7.657, 0.000) → (7.657, 2.716)
B4	(2) 90° ↓ R0.38	(4.308, 0.000) → (4.308, 2.716)
B5	radius-bend edge	(3.967, 0.000) → (3.967, 2.716)
B6	radius-bend edge	(4.649, 0.000) → (4.649, 2.716)
B7	(1) 126.9° R0.49	(0.609, 0.000) → (0.609, 2.716)
B8	radius-bend edge	(0.000, 0.000) → (0.000, 2.716)
B9	radius-bend edge	(1.217, 0.000) → (1.217, 2.716)
radius-bend edge = start/end of a large-radius bend (bump bend between them)		

OUTLINE POINTS (X, Y from datum)

P1	18.746	2.526
P2	18.746	0.190
P3	18.556	0.000
P4	0.000	0.000
P5	0.000	1.248
P6	0.625	1.358
P7	0.000	1.468
P8	0.000	2.716
P9	18.556	2.716

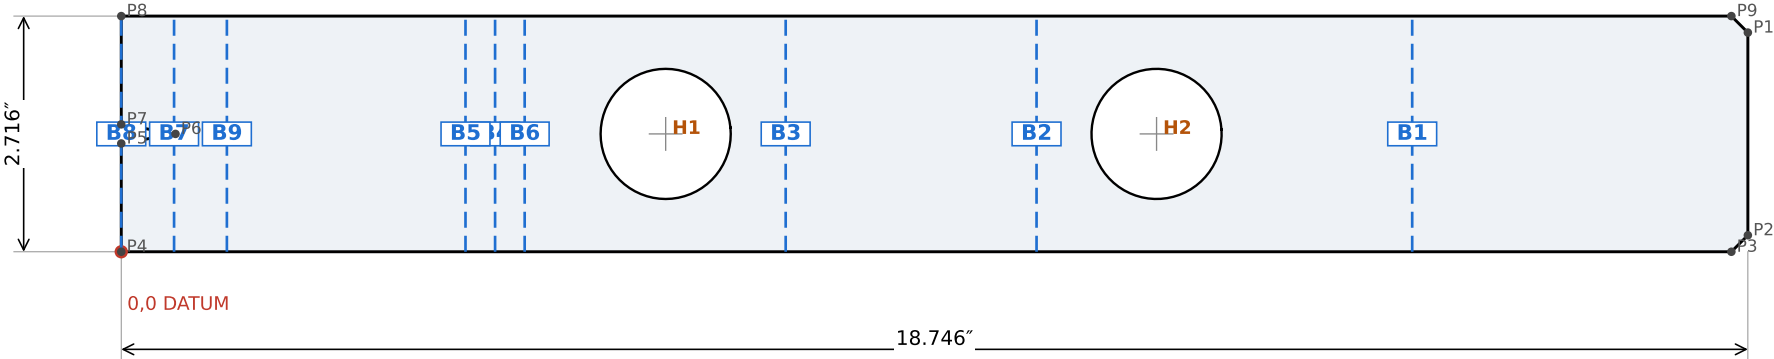


NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
- 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
- 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
- 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
- 5. Deburr all edges. Curved edges: smooth arcs per DXF.
- 6. FR side as drawn; FL side = mirror image (flip the blank).
- * arc C-D bent over R 0.48; R ⅜" at E; no corner reliefs

FR-4 (bent version) — blank 1 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Wrap strip (ear, top, front, bottom, slant)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 4

FR-4 (bent version) — blank 2 of 3

Side plate FR-4 (holes 0.512) · blank 6.500" × 6.875" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

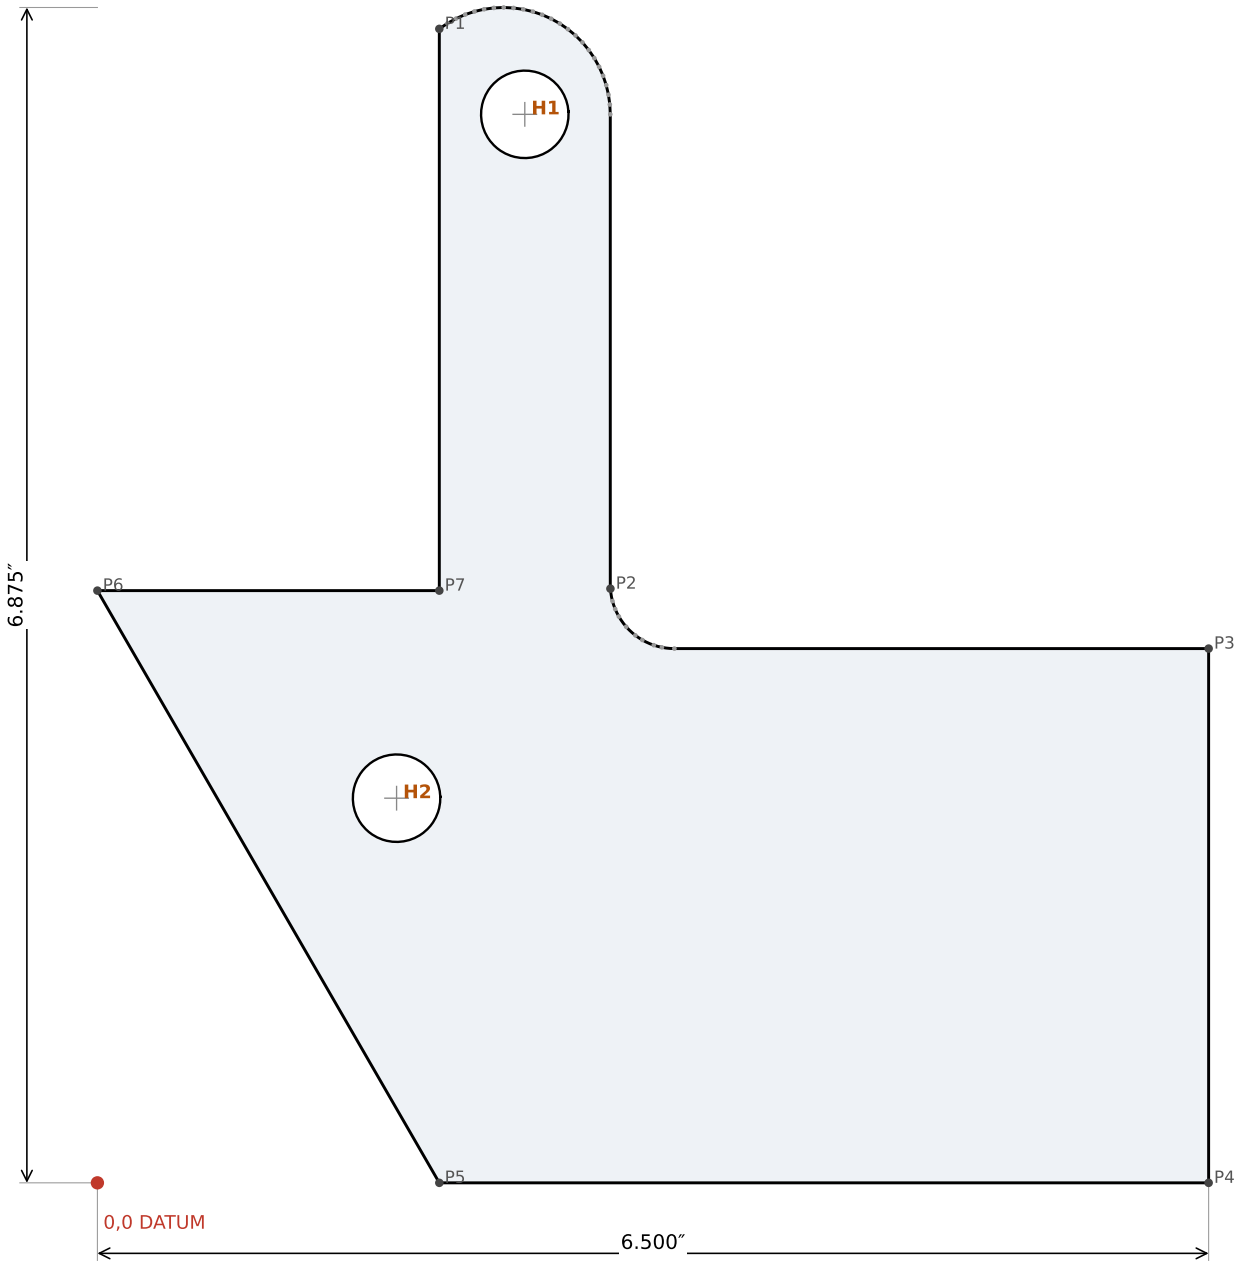

HOLES (centre X, Y from datum)

H1	Ø0.512"	X 2.500	Y 6.250
H2	Ø0.512"	X 1.750	Y 2.250

OUTLINE POINTS (X, Y from datum)

P1	2.000	6.750
P2	3.001	3.475
P3	6.500	3.125
P4	6.500	0.000
P5	2.000	0.000
P6	0.000	3.464
P7	2.000	3.464

FREE-FORM CURVE 1 (grey dots, follow DXF) — points X, Y

2.048	6.782
2.098	6.810
2.151	6.833
2.206	6.852
2.262	6.865
2.319	6.872
2.377	6.875
2.434	6.872
2.491	6.864
2.547	6.851
2.602	6.832
2.655	6.809
2.705	6.781
2.752	6.748
2.797	6.711
2.837	6.671
2.874	6.626
2.907	6.579
2.935	6.528
2.958	6.476
2.976	6.421
2.989	6.365
2.997	6.308
3.000	6.250

FREE-FORM CURVE 2 (grey dots, follow DXF) — points X, Y

3.013	3.403
3.029	3.357
3.050	3.312
3.093	3.253
3.147	3.203
3.188	3.175
3.255	3.145
3.302	3.132
3.375	3.125


NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 - 6. FR side as drawn; FL side = mirror image (flip the blank).
- * flat, no bends

FR-4 (bent version) — blank 2 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Side plate FR-4 (holes 0.512)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 2 / 4

FR-4 (bent version) — blank 3 of 3

Side plate FL-4 (holes 0.512 and 0.34) · blank 6.500" × 6.875" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

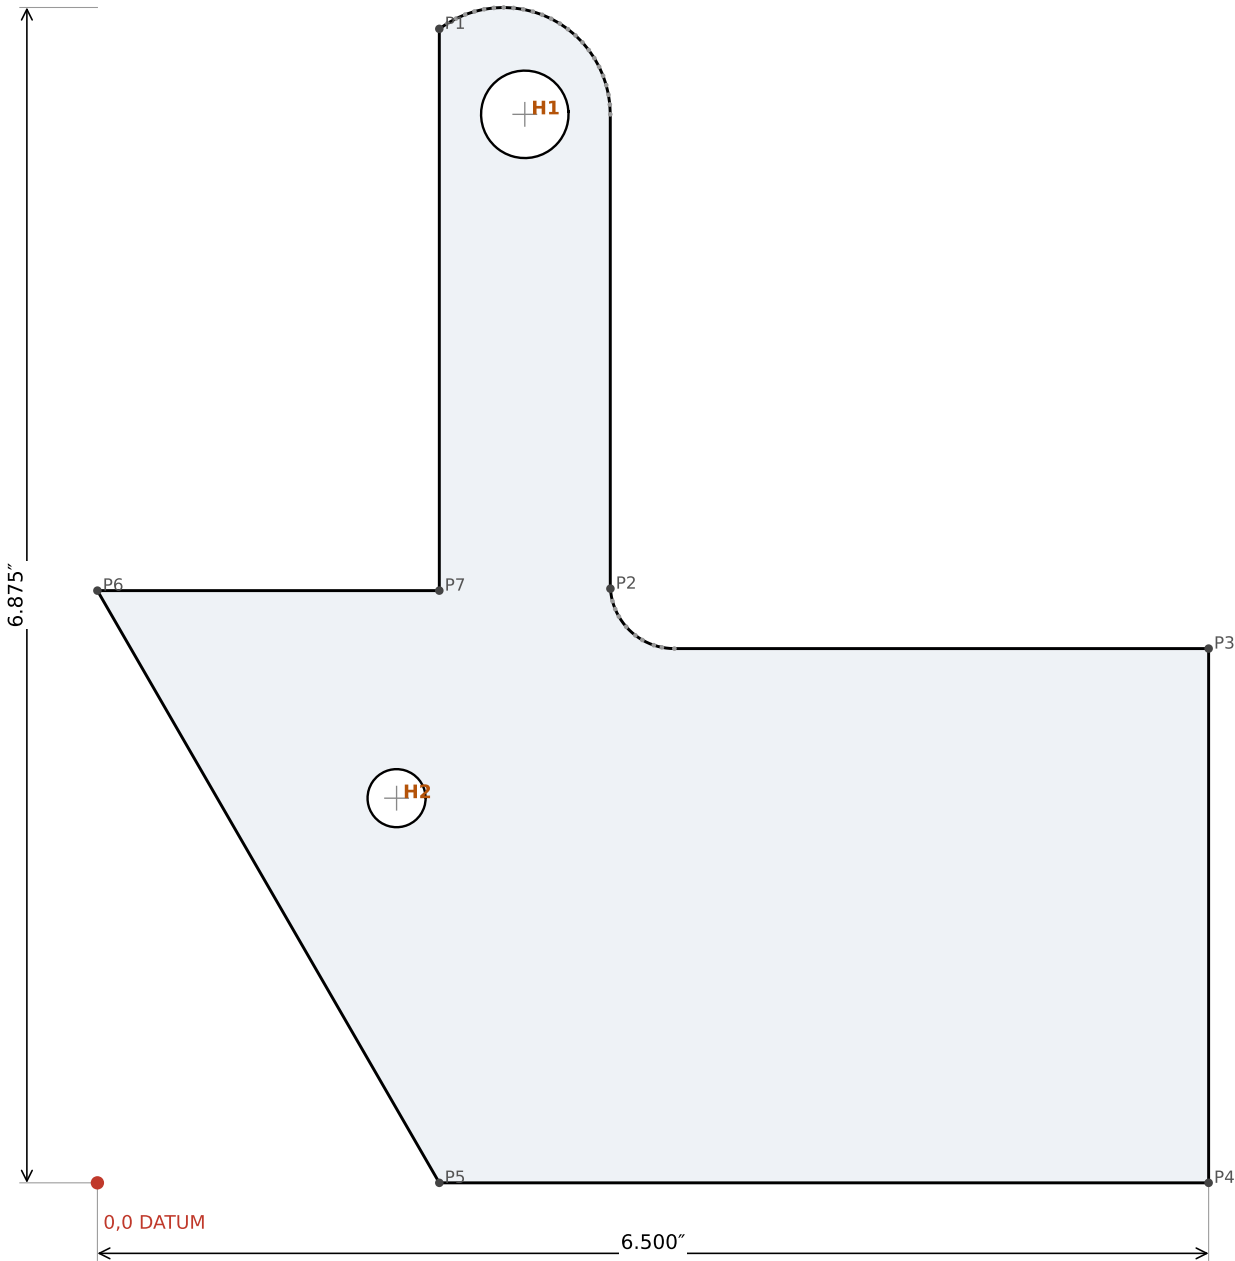

HOLES (centre X, Y from datum)

H1	Ø0.512"	X 2.500	Y 6.250
H2	Ø0.340"	X 1.750	Y 2.250

OUTLINE POINTS (X, Y from datum)

P1	2.000	6.750
P2	3.001	3.475
P3	6.500	3.125
P4	6.500	0.000
P5	2.000	0.000
P6	0.000	3.464
P7	2.000	3.464

FREE-FORM CURVE 1 (grey dots, follow DXF) — points X, Y

2.048	6.782
2.098	6.810
2.151	6.833
2.206	6.852
2.262	6.865
2.319	6.872
2.377	6.875
2.434	6.872
2.491	6.864
2.547	6.851
2.602	6.832
2.655	6.809
2.705	6.781
2.752	6.748
2.797	6.711
2.837	6.671
2.874	6.626
2.907	6.579
2.935	6.528
2.958	6.476
2.976	6.421
2.989	6.365
2.997	6.308
3.000	6.250

FREE-FORM CURVE 2 (grey dots, follow DXF) — points X, Y

3.013	3.403
3.029	3.357
3.050	3.312
3.093	3.253
3.147	3.203
3.188	3.175
3.255	3.145
3.302	3.132
3.375	3.125

NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 - 6. FR side as drawn; FL side = mirror image (flip the blank).
- * flat, no bends

FR-4 (bent version) — blank 3 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Side plate FL-4 (holes 0.512 and 0.34)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 3 / 4

FR-4 (bent version) — cut list (tubes)

- **Tube OD 1.5 / ID 1.181 — cut 3.689” (through bottom and top)**

Stock: DOM round tube · cut length 3.689” · QTY 1 per side · FR + FL (mirror) = 2 per vehicle

Cut square, ±1/32”. Deburr. Lengths in inches.

FR-4 — tubes		inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Tube OD 1.5 / ID 1.181 — cut 3.689” (through bottom and top)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010” · bends ±1° · IR = t	SHEET 4 / 4