


FR-7 (bent version) — blank 1 of 3

L-strip (back + bottom) · blank 6.651" x 2.216" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

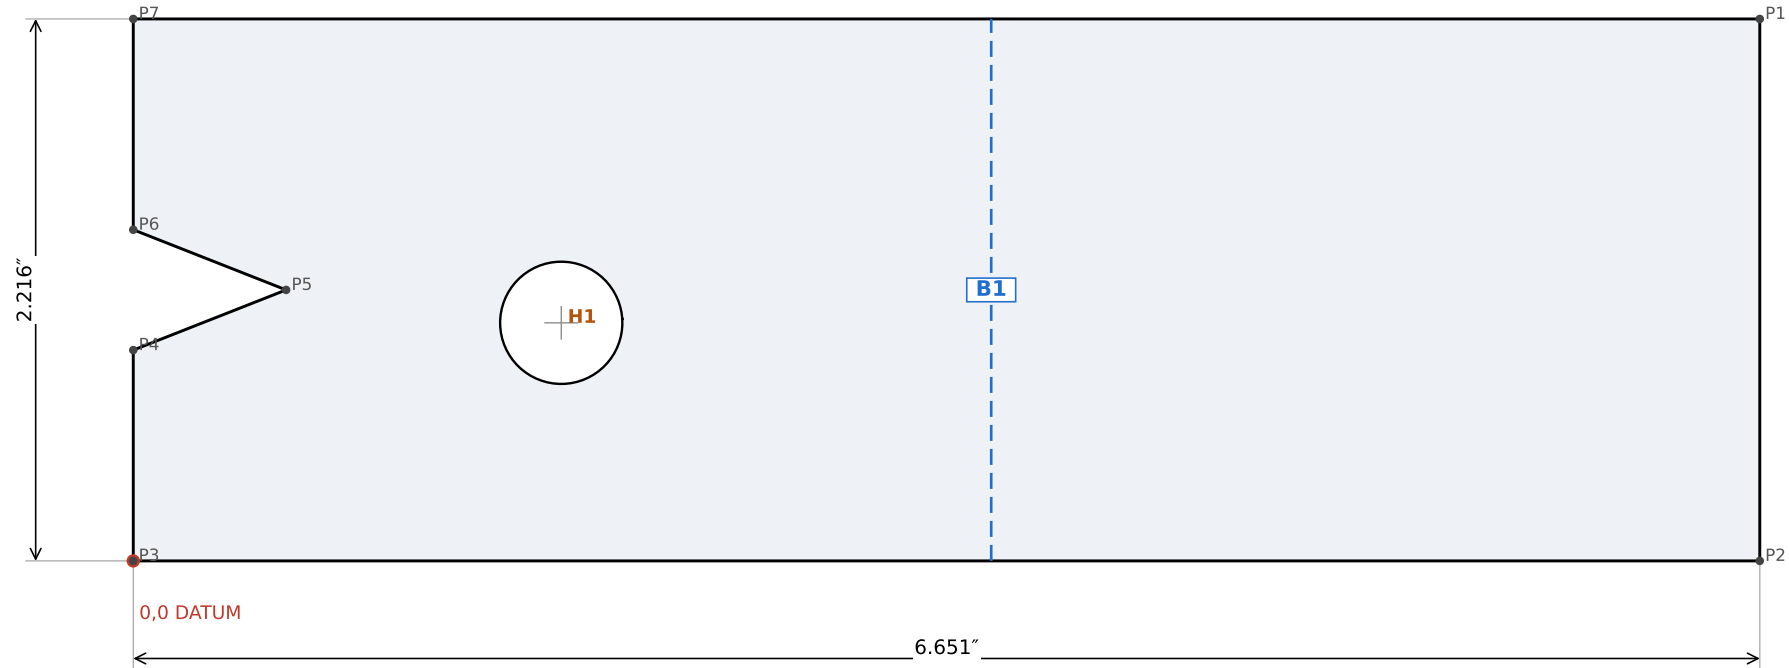

HOLE (centre X, Y from datum)

H1 Ø0.500" X 1.750 Y 0.974

BENDS (bend centre line, from datum) IR = t = 10 ga (0.135")

B1 (1) 90° (3.508, 0.000) $\rightarrow$ (3.508, 2.216)

OUTLINE POINTS (X, Y from datum)

P1	6.651	2.216
----	-------	-------

P2	6.651	0.000
----	-------	-------

P3	0.000	0.000
----	-------	-------

P4	0.000	0.862
----	-------	-------

P5	0.625	1.108
----	-------	-------

P6	0.000	1.354
----	-------	-------

P7	0.000	2.216
----	-------	-------


NOTES

1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 3. Flat pattern already includes bend allowance ($K = 0.44$, $R = t$).
 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 6. FR side as drawn; FL side = mirror image (flip the blank).
- * one 90° bend, $R = t$; V notch and Ø0.5 hole in the back

FR-7 (bent version) — blank 1 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
L-strip (back + bottom)	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 1 / 3

FR-7 (bent version) — blank 2 of 3

Side plate · blank 3.750" x 5.000" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

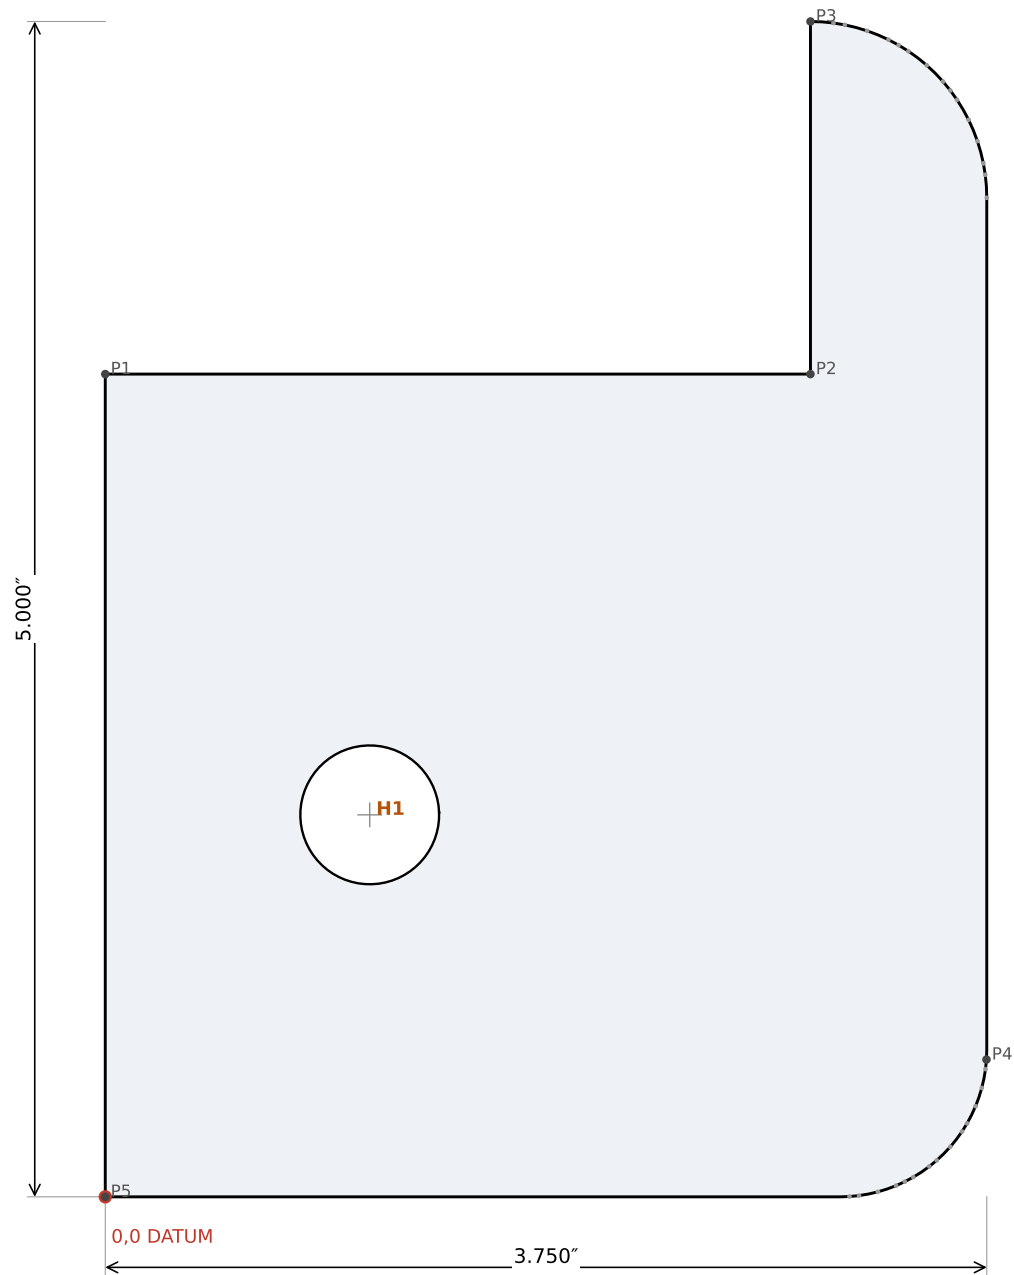

HOLE (centre X, Y from datum)

H1 Ø0.591" X 1.125 Y 1.625

OUTLINE POINTS (X, Y from datum)

P1	0.000	3.500
P2	3.000	3.500
P3	3.000	5.000
P4	3.749	0.584
P5	0.000	0.000

FREE-FORM CURVE 1 (grey dots, follow DXF) — points X, Y

3.098	4.994
3.146	4.986
3.241	4.960
3.332	4.923
3.375	4.899
3.417	4.874
3.494	4.814
3.564	4.745
3.595	4.707
3.624	4.667
3.673	4.582
3.710	4.491
3.736	4.396
3.744	4.348
3.750	4.250

FREE-FORM CURVE 2 (grey dots, follow DXF) — points X, Y

3.745	0.543
3.729	0.463
3.702	0.386
3.666	0.312
3.645	0.278
3.595	0.213
3.537	0.155
3.506	0.129
3.438	0.084
3.401	0.065
3.364	0.048
3.287	0.021
3.207	0.005
3.166	0.001


NOTES

1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 3. Flat pattern already includes bend allowance ($K = 0.44$, $R = t$).
 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 6. FR side as drawn; FL side = mirror image (flip the blank).
- * flat, no bends

FR-7 (bent version) — blank 2 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Side plate	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 2 / 3

FR-7 (bent version) — blank 3 of 3

Second side plate · blank 3.750" × 5.000" · HR steel sheet 10 ga (0.135") · 1 per side · FR + FL (mirror) = 2 per vehicle

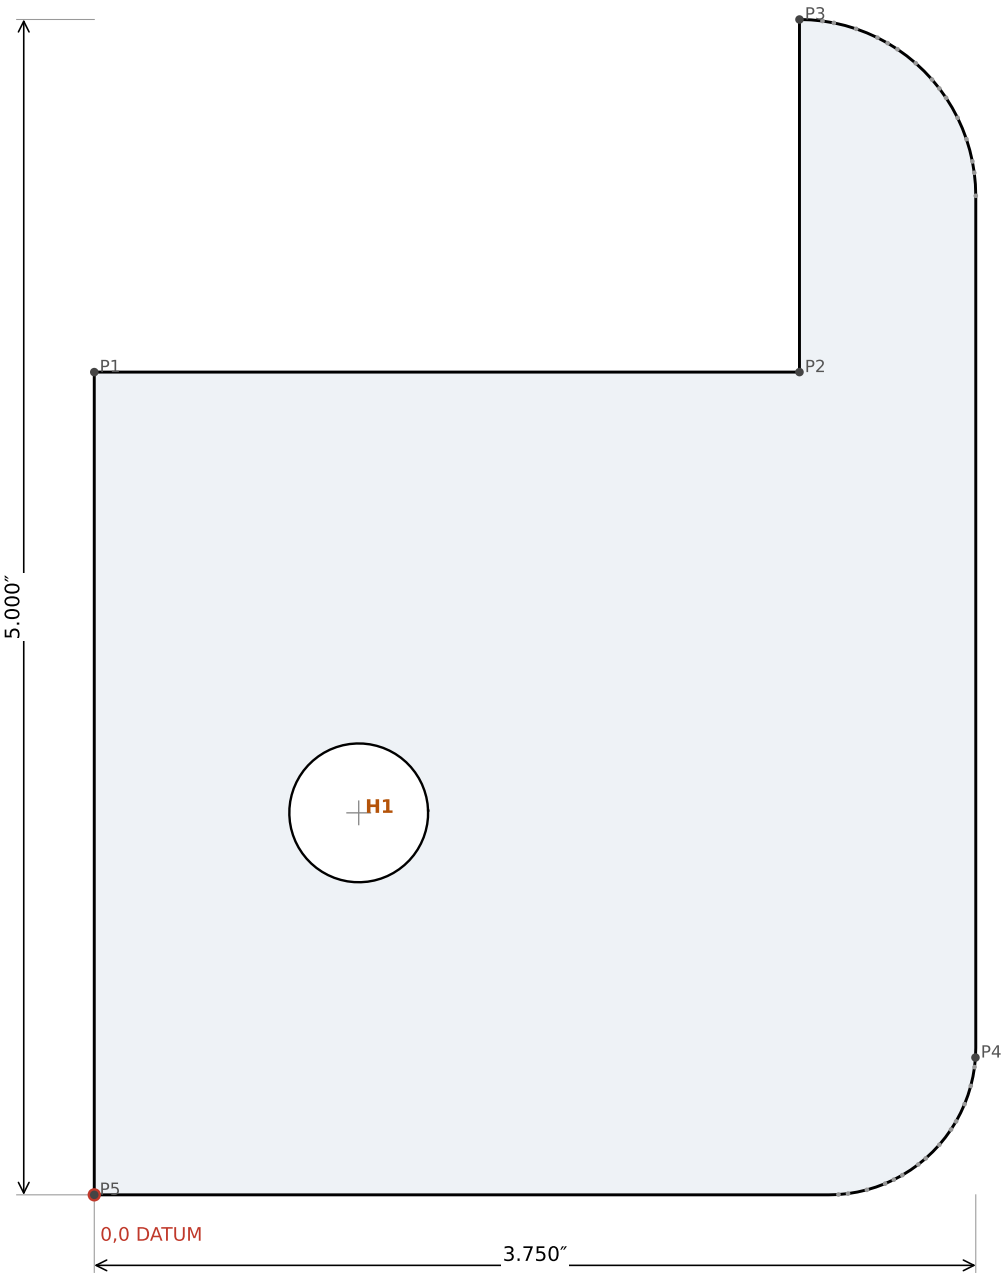

HOLES (centre X, Y from datum)

H1 Ø0.591" X 1.125 Y 1.625

OUTLINE POINTS (X, Y from datum)

P1	0.000	3.500
P2	3.000	3.500
P3	3.000	5.000
P4	3.749	0.584
P5	0.000	0.000

FREE-FORM CURVE 1 (grey dots, follow DXF) — points X, Y

3.098	4.994
3.146	4.986
3.241	4.960
3.332	4.923
3.375	4.899
3.417	4.874
3.494	4.814
3.564	4.745
3.595	4.707
3.624	4.667
3.673	4.582
3.710	4.491
3.736	4.396
3.744	4.348
3.750	4.250

FREE-FORM CURVE 2 (grey dots, follow DXF) — points X, Y

3.745	0.543
3.729	0.463
3.702	0.386
3.666	0.312
3.645	0.278
3.595	0.213
3.537	0.155
3.506	0.129
3.438	0.084
3.401	0.065
3.364	0.048
3.287	0.021
3.207	0.005
3.166	0.001

NOTES

- 1. Cut from the DXF file (1:1, inches). This sheet is for checking.
 - 2. Material: HR steel sheet 10 ga (0.135") (t). Inside bend radius = t.
 - 3. Flat pattern already includes bend allowance (K = 0.44, R = t).
 - 4. Blue dashed = bend centre lines (B1, B2 ...). ↓ = bend DOWN (away from you), no arrow = bend UP. Red dashed = drill later.
 - 5. Deburr all edges. Curved edges: smooth arcs per DXF.
 - 6. FR side as drawn; FL side = mirror image (flip the blank).
- * flat, no bends

FR-7 (bent version) — blank 3 of 3	HR steel sheet 10 ga (0.135")	inches · flat blank, 1:1 in DXF	Sienna WAV frame · 2026-10-02
Second side plate	QTY: 1 per side · FR + FL (mirror) = 2 per vehicle	cut ±0.010" · bends ±1° · IR = t	SHEET 3 / 3