Digilock

DRILL TEMPLATE

Using a pencil,
mark the door edge
on the template and also
mark the centerline on the
door edge. Open door,
remove template.

Center the template over the strike plate and align edge of strike plate with the line on template, and close door while holding the template in place


Edge of Strike Plate

Strike Plate


++<l

Centerline


3

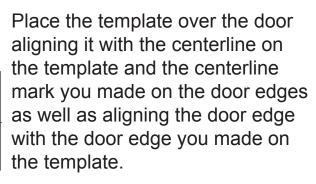

Mark the centers of all three holes and drill the holes as defined on the template.

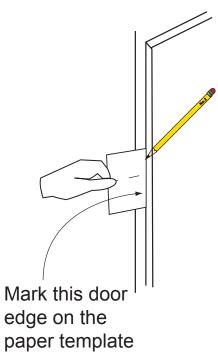

Digilock by: SECURITY PEOPLE INC.

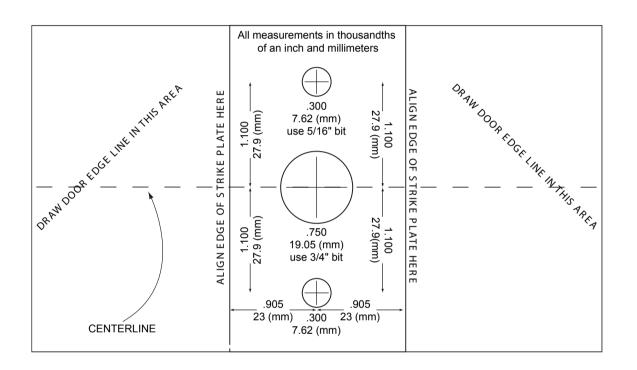

*NOTE: FILE MAY NOT PRINT TO SCALE.

DOUBLE CHECK ALL MEASUREMENTS BEFORE DRILLING DOOR.