



## DRILL TEMPLATE - HORIZONTAL UNIT


Using a pencil,
mark the door edge
on the template and also
mark the centerline on the
door edge. Open door,
remove template.

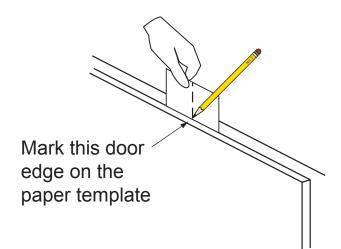

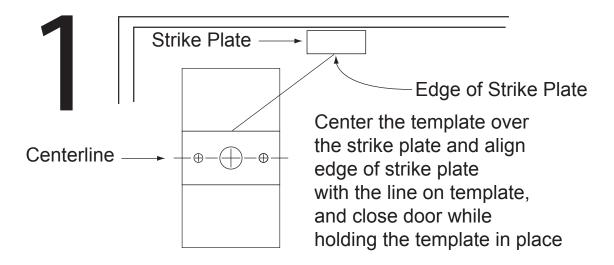


Place the template over the door aligning it with the centerline on the template and the centerline mark you made on the door edges as well as aligning the door edge with the door edge you made on the template.

Mark the centers of all three holes and drill the holes as defined on the template.

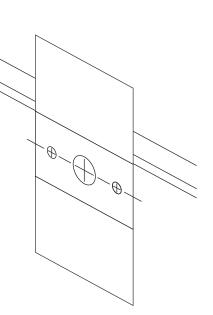

## Digilock by: SECURITY PEOPLE INC.

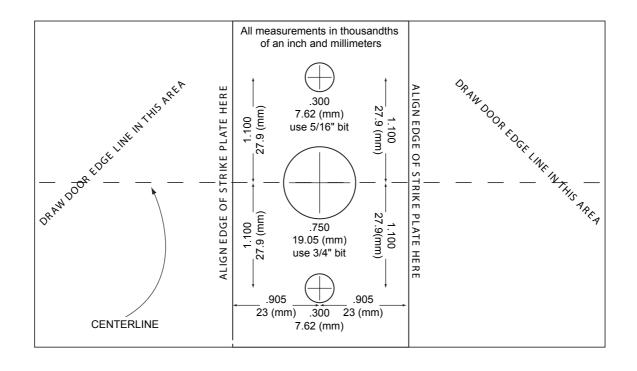

\*NOTE: FILE MAY NOT PRINT TO SCALE.

DOUBLE CHECK ALL MEASUREMENTS BEFORE DRILLING DOOR.