MPLAB® PICkit™ 4 In-Circuit Debugger

QUICK START GUIDE



GETTING STARTED

1

Install the Latest Software

Download the MPLAB X IDE software from www.microchip.com/mplabx and install onto your computer. The installer automatically loads the USB drivers. Launch MPLAB X IDE.


2 Connect to Target Device

- 1. Connect the MPLAB PICkit 4 to the computer using the supplied Micro-B USB cable.
- 2. Attach the communications cable between the debugger and target board.
- 3. Connect external power to target board.

Typical Debugger System – Device with On-Board Debug Circuitry



Alternative Debugger System - ICE Device



*External target board power supply to be provided by user.

3 Create, Build and Run Project

- 1. Refer to the MPLAB X IDE User's Guide or online help for instructions to install language tools, create or open a project, and configure project properties.
- 2. Check that the configuration bits in your code match the Recommended Settings below.
- 3. To execute your code in Debug mode, perform a debug run. To execute your code in Non-Debug (release) mode, perform a run. To hold a device in Reset after programming, use the Hold in Reset icon in the toolbar.

Recommended Settings

Component	Setting		
Oscillator	OSC bits set properly Running		
Power	Supplied by target		
WDT	Disabled (device dependent)		
Code-Protect	Disabled		
Table Read Protect	Disabled		
LVP	Disabled		
BOD	VDD > BOD VDD min.		
JTAG	Disabled		
AVDD and AVss	Must be connected		
PGCx/PGDx	Proper channel selected, if applicable		
Programming	VDD voltage levels meet programming spec		

Note: See MPLAB PICkit 4 In-Circuit Debugger online help for more information.


Reserved Resources

For information on reserved resources used by the debugger, see the MPLAB PICkit 4 In-Circuit Debugger online help.



ADDITIONAL INFORMATION

Circuitry and Connector Pinouts

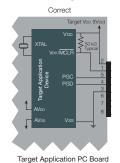


Connect Pin 1 to Pin 1



Typical 6-Pin ICSP Pinout

Pin	Target	MPLAB® PICkit 4	
1	MCLR/VPP	NMCLR	
2	V _{DD} Target	VDD	
3	Vss (ground)	Ground	
4	PGD (ICSPDAT)	PGD	
5	PGC (ICSPCLK)	PGC	
6	Do Not Connect	Do Not Connect	
7		Reserved for Future use	
8		Reserved for Future use	

Target Circuit Design Precautions



Target Application PC Board

- **Do not use pull-ups on PGC/PGD:** they will disrupt the voltage levels, since these lines have programmable pull-down resistors in the debugger.
- **Do not use capacitors on PGC/PGD:** they will prevent fast transitions on data and clock lines during programming and debug communications.
- Do not use capacitors on MCLR: they will prevent fast transitions of VPP. A simple pull-up resistor is generally sufficient.
- **Do not use diodes on PGC/PGD:** they will prevent bidirectional communication between the debugger and the target device.
- Do not exceed recommended cable lengths: Refer to the Hardware Specification of the MPLAB PICkit 4 online help or user's guide for cable lengths.

Pinouts for Additional Interfaces

MPLAB® PICkit 4	Debugging and Programming			Data Stream	
Pin #	ICSP	MIPS EJTAG	Cortex® SWD	DMCI/DGI U(S)ART/CDC	DGI SPI
1	Vpp/NMCLR				
2	VDD	VIO_REF	VTG	VTG	
3	GND	GND	GND	GND	
4	PGD	TDO	SWo		MISO
5	PGC	TCK	SWCLK		SCK
6	AUX	NRESET	NRST	(SCK)	
7	TDI	TDI		TX	MOSI
8	TMS	TMS	SWDIO	RX	SS

^{**} Target device must be running with an oscillator for the debugger to function as a debugger.

The Microchip name and logo, the Microchip logo, MPLAB and PICkit are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries. All other trademarks mentioned herein are property of their respective companies. © 2018, Microchip Technology Incorporated. All Rights Reserved. 2/18

DS50002721A



^{***} If the device has AVop and AVss lines, they must be connected for the debugger to operate.