



Add slave device and edit it

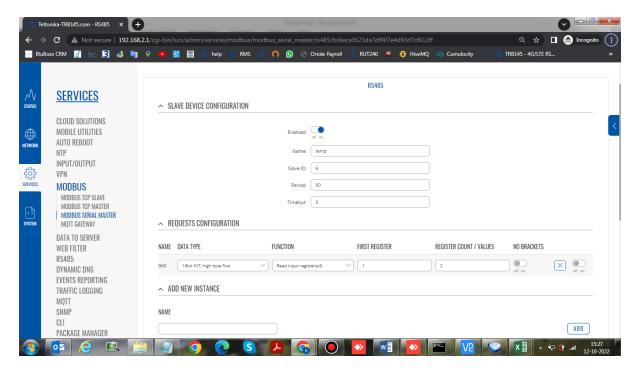


Configure as per slave device

Parameter

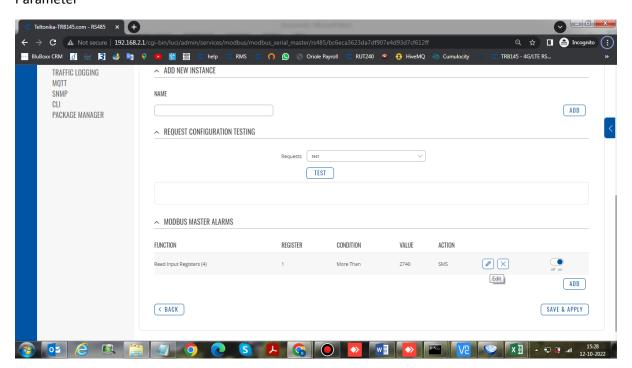

Edit the Modbus master alarm

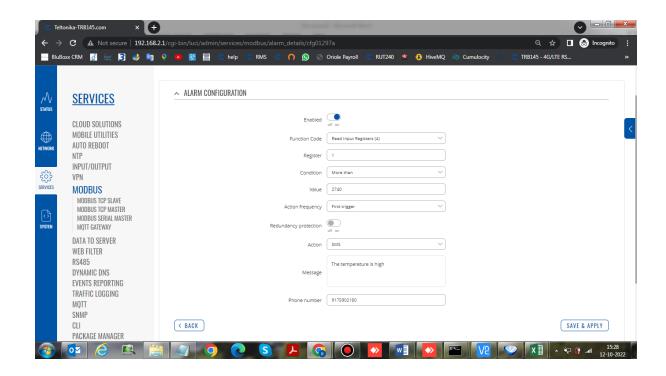

Save and apply all setting and configuration

Test the SMS alert