



Article Number - 00072-2026

Date - 29th April 2026

Article applies to - Digital Yacht NjordLink+ product

ISSUE: Creating NjordLink+ SD Card Procedure

NjordLink+ features a Micro SD Card that has a complete custom LINUX image on it and all of the NjordLink+ and Viam software. In the event that an SD Card fails or Digital Yacht publishes a major Long Term stable release, it is possible to download the latest SD Card Image and copy it to your existing or a new SD card.

NjordLink+ SD Card Creation Procedure

There are a number of different SD Card creation applications available for various platforms, but the one that we have tested and had the most reliable results with is “Rufus” which is available for Windows and can be downloaded for free at <https://rufus.ie/en/>

Download the latest release and install it on your Windows computer. Also download the latest NjordLink+ image which is approximately 5GB so make sure to do this on a fast, non-metered internet connection. Currently the latest image is V7 (see download link below), but email support@digitalyacht.co.uk to confirm what the latest version is.

<https://drive.google.com/file/d/1x1FYZ1x0Xbk9FsKfqBVXUbQiSRHT6EKp/view>


Once the download is complete, insert the SD Card that you will copy the image to and then run Rufus.



Click the “SELECT” button to browse for and select the NjordLink+ image that you downloaded and make sure your SD Card is shown as the Device to copy the image to.

The Rufus defaults are good for everything else and once you have selected the image the START button will be active and you can click it to start creating the SD Card.


You will be warned that all data will be lost and also if the SD card had already been used with NjordLink you will be warned that it has multiple partitions. Say OK to both warnings and creation will start.

A status bar will inform you of progress.

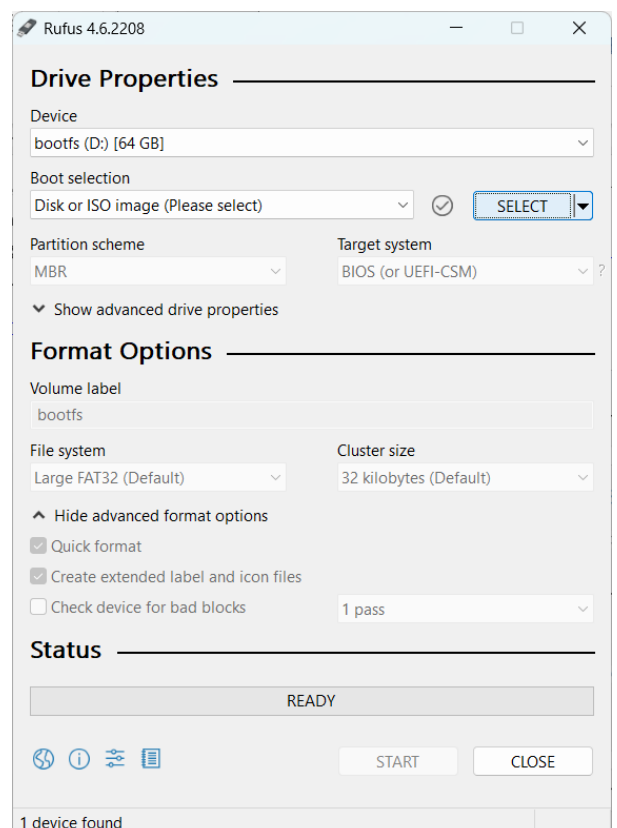

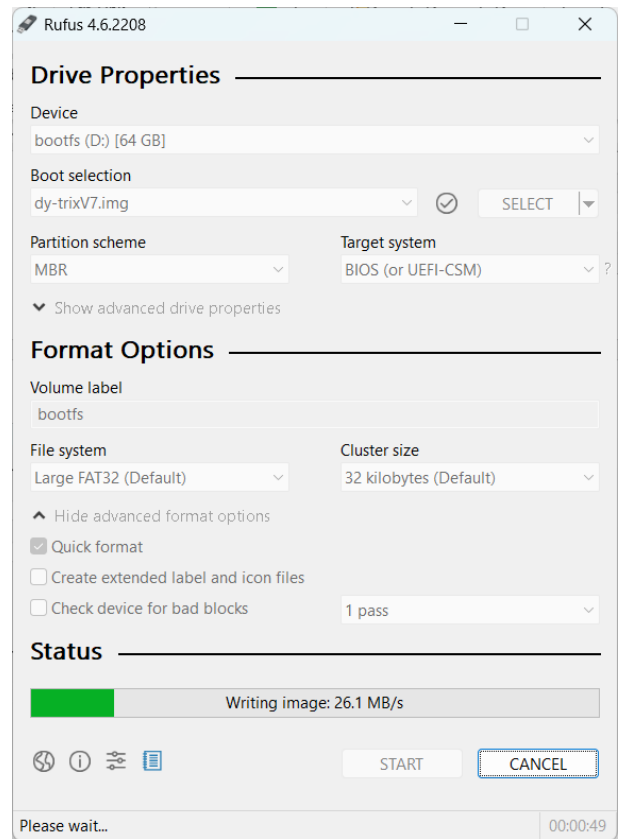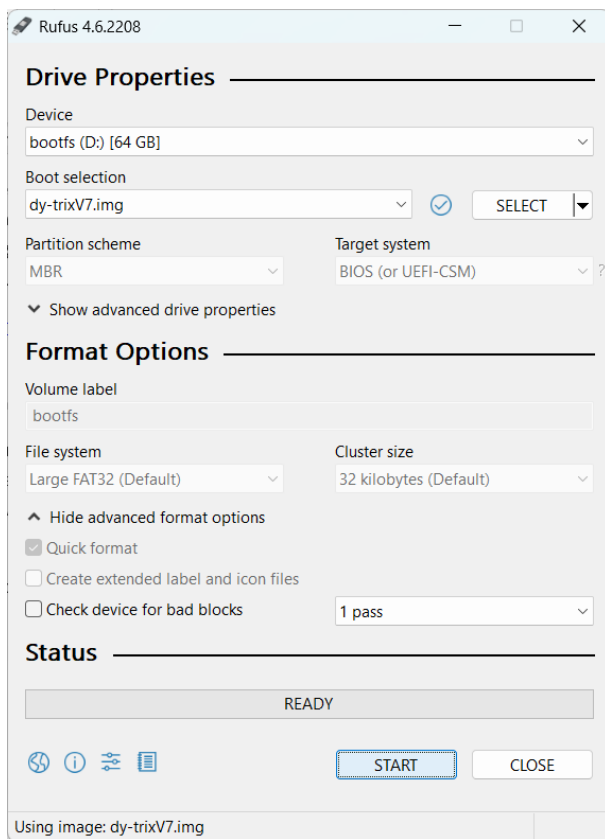

Once the creation is complete the green status bar will have reached the end and you may get a Windows Pop-Up saying that a new disk has been detected. Eject your new SD Card, close Rufus and with your NjordLink+ powered OFF, insert the new SD card.

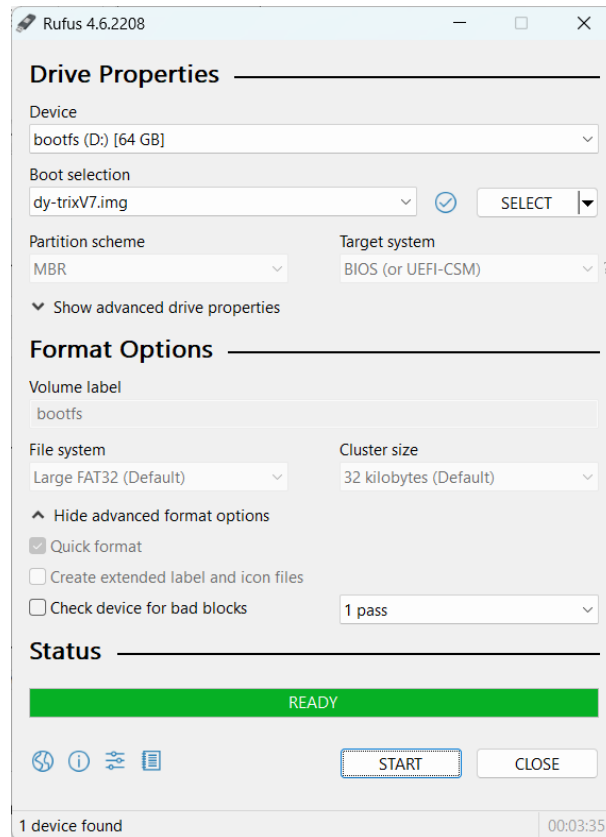

Finally, turn on the power to the NjordLink+ and wait 3 minutes for the device to power up, make the final changes to the SD Card and resume normal operation. Process is complete.