


Pouch Side Cut one on right side of fabric for a left bag right side of fabric for a right bag. Align end of zipper to seam allowance I

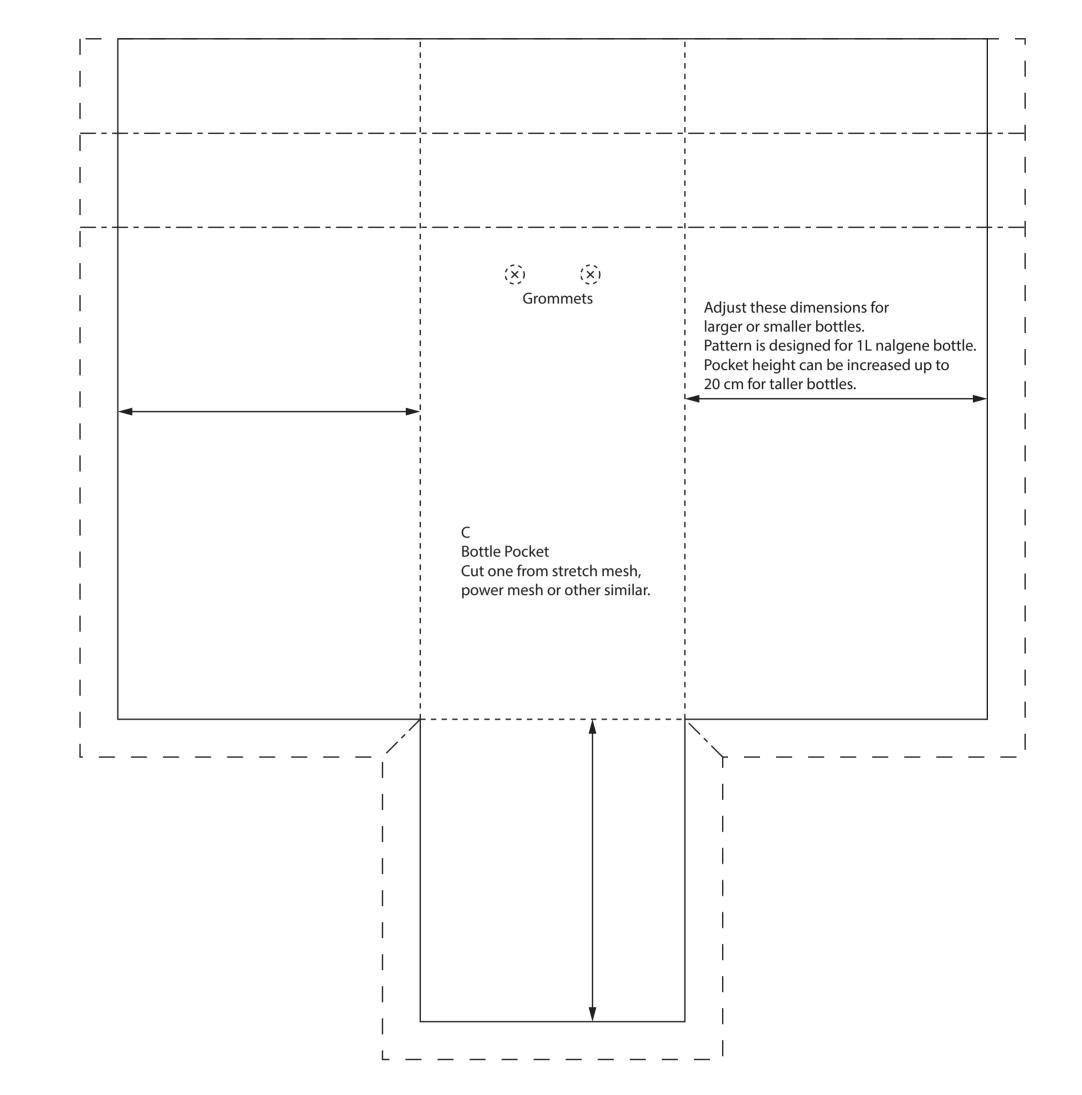

All seam allowances 1 cm, pattern designed for a 33 cm/1.5 inch wide zipper adjust side to account for any discrepancy.

- 1. Install grommets on C where indicated.
- 2. Fold top of bottle pocket along dashed lines to create a rolled hem. Grommets should be on the outside of the pocket. Sew along bottom edge of hem with narrow zigzag or stretch stitch.
- 3. Install stretch cord by feeding through grommets, install a cord lock and bead or toggle to prevent cordlock from falling off. Sew to secure cord along seam allowances. 4. Fold pocket along 45 degree lines right sides together between bottom tab and sides and sew or serge (recomended) sides of pocket C to bottom. Bartack the corners of the pocket to strengthen
- 5. Sew C to B wrong side of C to right side of B.
- 6. Sew dart on front right sides together.
- 7. Cut two 7 cm peices of 20 mm or 25 mm grosgrain and fold in half. Baste to front where indicated. 8. Cut zipper to 45.5 cm.
- 9. Sew zipper to front aligning zipper ends to marks right sides together. Notch zipper as needed to fit to curve. 10. Sew zipper to side aligning zipper end to flat end seam allowance.
- 11. Bind zipper seam allowance if desired & topstitch zipper.
- 12. Install two zipper sliders onto zipper ends.
- 13. Cut two 5 cm peices of 20mm webbing and fold in half. Cut 35 cm length of 20mm webbing for front strap 14. Baste webbing loops and strap on back where indicated. If using non-releaseable sternum sliders install sliders prior to basting.
- 16. Bartack webbing loops and front strap in seam allowance 17. Bartack corners

15. Sew front and side to back.

18. Trim excess seam allowance and zipper and bind all raw edges if desired. 19. Sew a loop of 20mm grosgrain to bottle pocket where front strap crosses the pocket to support the bottle on the front webbing strap.