ThryvoPDF Markup Studio User Manual

A practical guide to viewing, marking up, measuring, and reviewing PDF drawings

Version 1.0 · Updated November 2026

This manual follows the current ThryvoPDF Markup Studio 1.0 desktop build. It explains how to install and activate the app, work with drawing PDFs, and collaborate through a shared server.

Contents

- Before you begin
- Install, activate, and start the app
- Understand the workspace
- Open and read PDFs
- Add and edit markups
- Measure drawings
- Compare drawing revisions
- Organize pages and bookmarks
- Search text in open PDFs
- Shared documents and review assignments
- Notifications
- Administrator: users and server setup
- Shortcuts and menus
- Troubleshooting
- Data, compatibility, and limitations

1. Before you begin

ThryvoPDF Markup Studio is a Windows desktop application for viewing, marking up, measuring, comparing, and organizing PDF drawing sets.

- **Local PDFs:** Opening and viewing a PDF never requires an account. A license unlocks paid local features independently of server sign-in.
- **Shared documents:** Collaboration requires an account on your organization's ThryvoPDF server. Sign in only when you open a shared feature; choose **Continue locally** to stay in the local workspace.
- **Remembered sign-in:** The app securely stores the server session on this device when operating-system secure storage is available.

Keep original PDFs or backups before making significant changes. Markups, measurements, bookmarks, and sheet information are stored in the saved PDF. Page organization operations change the document when you save it.

2. Install, activate, and start the app

Install

1. Run the ThryvoPDF Markup Studio installer provided by your administrator.
2. Follow the setup prompts and launch **ThryvoPDF Markup Studio**.
3. If Windows displays an unsigned-app warning, verify that the installer came from your trusted software administrator before choosing to continue.

Import a license

If you see **Unlicensed viewing - editing is disabled**:

1. Choose **Import license...** in the top toolbar, or open **Help > License...**.
2. In the License information window, copy the **Device request** and send it to the software owner through the agreed secure channel.
3. The owner returns a license file issued for this device.
4. Choose **Import license file...**, select that file, and wait for the activation status to update.
5. Restart the application if requested.

To license another computer, repeat the process on that computer and send its own device request. A license for one computer cannot be reused on another.

Sign in for collaboration

To open shared documents or use collaboration:

1. Choose **Shared Documents...**. Local PDFs and licensed features remain available while you sign in.
2. If prompted, enter the server address supplied by your administrator, such as `https://pdf-server.example.com:8787` or `192.168.1.10:8787`.
3. Choose **Test connection** to check the address.
4. Choose **Connect**.
5. Sign in with your company account, or choose **Register another user** if registration is open.
6. Choose **Continue locally** at any time to return to the PDF workspace without signing in.
7. Server registrations may require administrator approval before the account can sign in.

When registering, choose your discipline from the list; it includes Instrumentation, Process, and Piping.

Use **Change** on the sign-in screen to update the server address. A successful sign-in is remembered securely on this device when supported.

Sign in and password

Enter your email and password when using a server feature. If an administrator issued a temporary password, the app requires you to choose a new password before server collaboration can continue; you can still choose **Continue locally**. Use **Option > Password...** to change your password later. There is no self-service password recovery; contact your administrator if you cannot sign in.

3. Understand the workspace

The main workspace has:

- **Toolbars:** The workspace has four independent groups: **File management** (file actions, clockwise/counter-clockwise rotation of the current page, Viewer, and Compare), **Content tools** (Select, Pan, Undo, Redo, Text, Symbol, and Signatures), **Markup tools**, and **Measurement tools**. Toolbars appear only when a PDF is open. Use **View > Toolbars** in the native application menu to show or hide them; the former inline restore buttons are not displayed. Each toolbar has a named header; hold and drag anywhere in the header to move it, and use the close button to hide it. Right-click a toolbar header to lock or unlock its position; a locked toolbar cannot be moved. Drag near a window edge or another toolbar to snap it there; snapped toolbars remain independent and can be moved separately. When snapped along a docked toolbar's edge, a toolbar inherits that dock area's orientation and viewer-space reservation without following the other toolbar's position. Commands wrap onto additional rows when narrowed. When a toolbar is made taller, its buttons switch to icon-only mode with command-name tooltips, a minimum 35 × 35-pixel button size, and a maximum of two icons per row. Drag the lower-right resize handle to adjust width and height. Top/bottom docking reserves vertical viewer space, while left/right docking reserves horizontal viewer space independently; the PDF tab strip follows the same left/right reservation as the viewer. Freely moved toolbars do not reserve space. Each group can be restored independently; its position, size, docking, visibility, and locked state are saved on this device across launches.
- **Tabs:** Each open PDF has a tab. A dot indicates unsaved changes. Double-click a local PDF tab name to rename it; shared-document names cannot be renamed here.
- **Markup toolbar:** Markup tools such as Line, Cloud, Rectangle, and Stamp.
- **Measure toolbar:** Choose Length, PolyLength, Spline, Radius, Diameter, Area, Perimeter, Angle, or Count here. Choosing a measurement tool does not open the Measurements window.
- **Left panel:** Project, Pages, and Bookmarks tabs.
- **Right panel:** Markups and comment properties. The **Measurements...** button opens calibration and takeoff controls when you want them.
- **Floating controls:** Select/Pan, page navigation, continuous-scroll toggle, zoom, Fit Width, and Fit Page at the bottom of the viewer.
- **Search Text:** The fixed search bar at the upper-right of the PDF tabs finds complete words in the active PDF and highlights every match in yellow. Use the previous/next arrows to navigate matches.
- **Status bar:** Save and operation messages. After saving a local PDF, choose **Open saved PDF** in the status bar to open the saved file.

The side-panel toggles at the viewer edges, or **Ctrl+Alt+L** and **Ctrl+Alt+R**, show or hide the left and right panels.

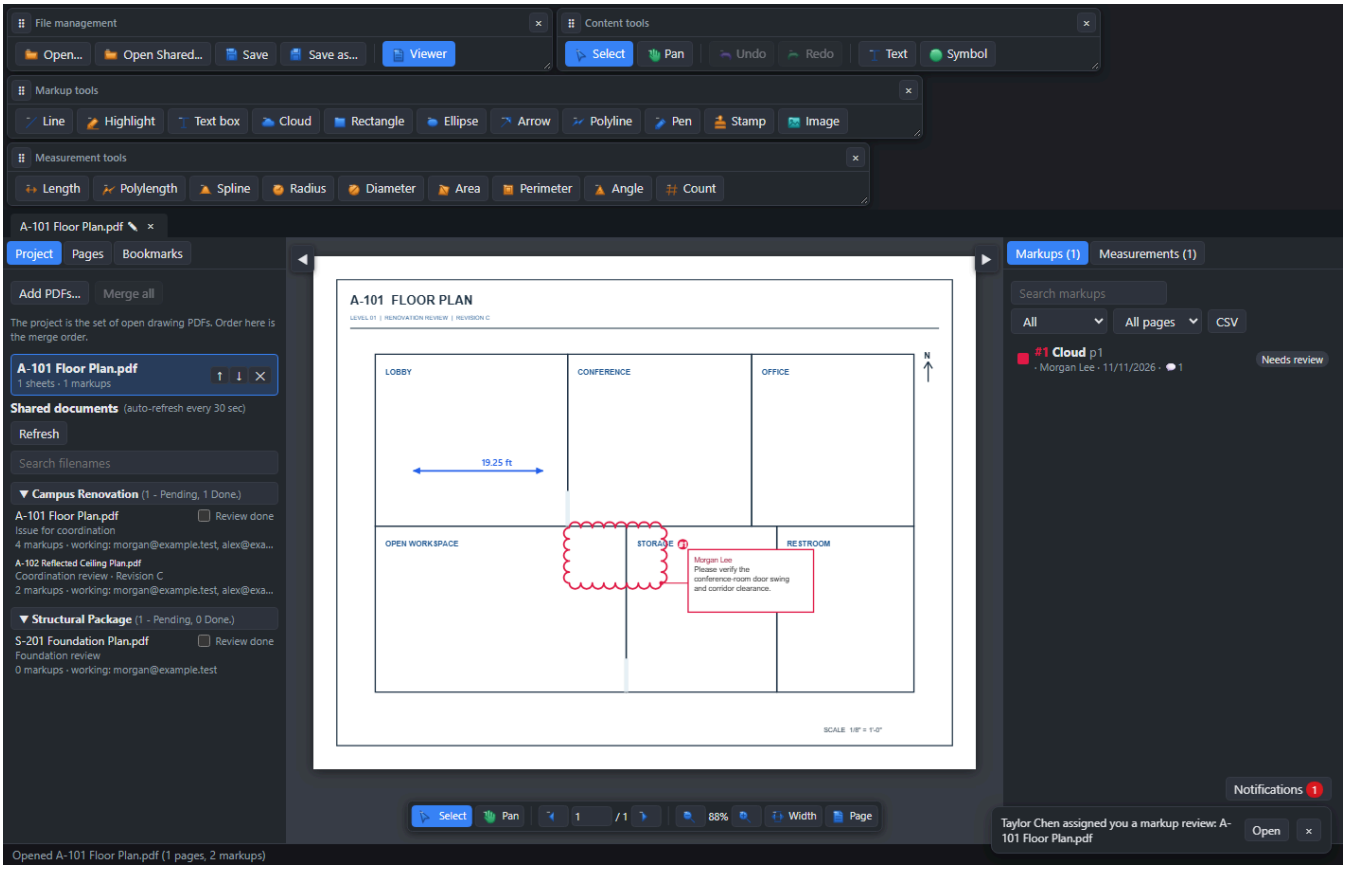


Figure 1. Main workspace: document navigation at left, the drawing canvas in the center, and markup properties at right.

4. Open and read PDFs

1. Choose **Open...** or **Open PDF...** and select one or more PDF files. You can also drag PDF files onto the app window.
2. Switch between documents using their tabs.
3. Change pages using the page-number field or the previous/next buttons. **PageUp** and **PageDown** also navigate pages.

Continuous scrolling is on by default; scroll vertically through the document. Use **Continuous** in the floating controls to switch to a single-page view.

1. Zoom with the plus/minus controls, **Ctrl+=** / **Ctrl+-**, or Ctrl+mouse wheel.
2. Choose **Width** or **Page** in the floating controls to fit the page to the viewer.
3. PDFs opened directly from Windows start in **Fit Page** preview. PDFs opened from inside ThryvoPDF restore their last zoom level; shared PDFs also remember zoom on this device.
4. To move around a zoomed page, select **Pan**, hold the middle mouse button, or hold **Space** temporarily while dragging.
5. Open the **Pages** tab in the left panel and select a thumbnail to jump to that page.
6. To search the active PDF, enter a complete word in **Search Text** and press **Enter** or **Find**. All exact-word matches are highlighted in yellow at 50% opacity. After the first search, each **Enter** press advances to the next match; use the arrows to move forward or backward. Search works in unlicensed viewing mode, but scanned pages without a text layer cannot be searched.

To close a document, choose the **X** on its tab or **File > Close Document**. To close ThryvoPDF with unsaved PDF changes, choose **Save All**, **Don't Save**, or **Cancel**; canceled or failed saves keep the app open.

5. Add and edit markups

Add a markup

1. Open a PDF and choose a tool from the **Markup** toolbar.
2. Draw on the page:
   - **Highlight, Text, Rectangle, Ellipse, Line, Arrow:** click and drag to define the shape.
   - **Cloud:** click to add each vertex around the area, then press **Enter**, double-click, or right-click to finish.
   - **Pen:** click and drag to draw freehand.
   - **Polyline:** click to add points, then press **Enter**, double-click, or right-click to finish.
   - **Angle:** click three points to finish.
   - **Stamp**, **Image**, and **Note:** click to place. For Image, choose a PNG or JPEG file; the image is added as a review markup and opens the comment dialog.
9. For a Text box, edit the displayed text in the properties panel.
10. To choose another color, width, or opacity, set it in the toolbar before drawing or select the markup and change its properties in the right panel. Color controls include a **Standard** palette as well as custom colors.
11. After placing a review markup, the **Add comment** dialog appears. Enter a comment and choose **Add comment**; press **Enter** to submit or **Shift+Enter** for a new line. **Cancel** leaves the markup without a comment.

Line and Stamp markups do not open the comment dialog. To add a comment later, select a review markup and use **Add a comment / reply** in the right panel.

There is no standalone Callout drawing tool. Comment boxes are attached to review markups when you add comments.

Select, move, resize, or delete

1. Choose **Select** or press **V**.
2. Click a markup to select it. Drag the markup to move it; use its handles to resize supported shapes.
3. To move or resize a comment box, select its markup and drag the box. Drag the square at the lower-right corner to resize it.
4. To delete a selected markup, press **Delete** or use **Edit > Delete selected markup**. Deleting a markup also deletes its comments.
5. Use **Ctrl+Z** to undo or **Ctrl+Y** / **Ctrl+Shift+Z** to redo.

For shared documents, you can select markups by any author from the Markups list to locate them on the drawing. You can edit only your own markups and comments. The server checks this permission as well as the app. A markup can be deleted only by its author; only a comment's author can edit or delete that comment.

Review markups, statuses, and comments

1. Open the **Markups** panel on the right.
2. Use **Search markups** to find markups by type, text, author, status, or comment text.
3. Choose a status filter or **All pages / This page** to narrow the list.

4. Select a markup in the list to select it on the drawing and show its properties.
5. Change its status, color, width, opacity, fill, or text in the properties panel when you have permission.
6. Add a comment in the comment box and press **Enter**. Use **Shift+Enter** for a new line; drag the box corner to resize it. A comment's author and timestamp are shown in the panel. When signed out, new markups and comments use the current Windows logon name; when signed in, they use the account name.
7. To change the comment-box display, use **Show comment box on drawing**. Hiding the box does not delete comments.
8. Use **Comment text size** to adjust comment text size. The setting is remembered on this PC and used for the drawing and saved PDF.
9. Choose **CSV** in the Markups panel to export the current document's markup list.

The red numbered comment ID appears beside the comment box and in the Markups panel. It is not drawn at the corner of the markup. Stamps and drawing-only Line markups are not assigned review numbers.

Spell checking is available in comment, markup-text, watermark, shared-document description, and editable PDF text fields. Misspellings are underlined as you type. Open **Option > Spell check language** to choose English (US) or English (UK), then right-click an underlined word for suggestions or **Add to dictionary**. The first use of a language may require an internet connection to download its Chromium dictionary; added words are saved in the operating-system spell-check dictionary. To scan existing PDF text, use **Edit > Check spelling in PDF...**; this is a separate command.

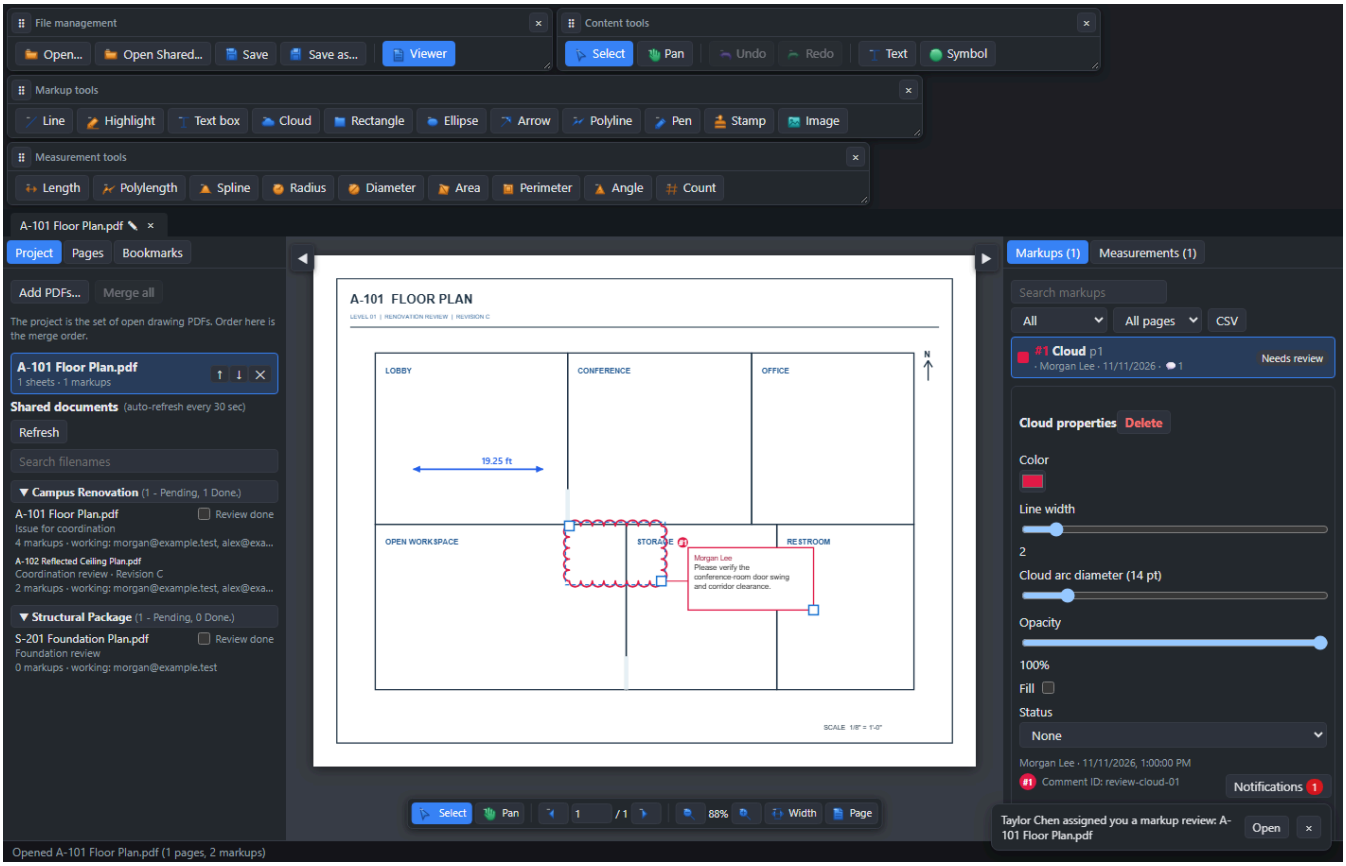


Figure 2. Select a markup to see its properties and associated comments.

Custom stamps

1. Choose **Stamp**.
2. Choose **Import stamp...** or use **Option > Tool defaults** to select a stamp image or a page from a PDF.

3. For a multi-page PDF stamp, choose the page to use.
4. Click the drawing to place the stamp, then use Select to move or resize it.

Supported stamp sources include common image formats and PDF files up to 20 MB. Imported PDF pages and animated images become still images.

Image markups

1. Choose **Image** in the Markup toolbar.
2. Click the page where the image should be centered, then choose a PNG or JPEG file.
3. Enter a comment in the dialog to describe the image; canceling leaves the image markup without a comment.
4. Select the image to move or resize it. Its aspect ratio is preserved.

The image is embedded in the markup and saved into the PDF, so the annotation does not depend on the original image file. Image markups can also be shared in shared documents.

Watermarks

1. Choose **Watermark** in the content toolbar and select **Text**, **Image**, or **PDF page**.
2. Enter the text or choose a source file. For a multi-page PDF source, choose the page to use as the watermark.
3. Enter pages as individual page numbers or ranges, such as `1-3, 5`. Leave the page range covering the document to apply it to every page.
4. Set the starting opacity, rotation, and (for text) color, then choose **Add watermark**.
5. Open **Watermarks** in the right panel to use the **Watermarks Manager**. Select a watermark there to edit its text, color, opacity, and rotation, replace its image/PDF source, or delete it from all pages where it was placed. Choose **Select on page to resize**, then drag its page handles.

Watermarks are embedded in the document and remain editable markups until flattened. Image and PDF sources are converted to bounded PNG images when imported. Standard color swatches are available in the color controls.

Cloud arc size

Create a Cloud by clicking each vertex around the area to outline, then press **Enter**, double-click, or right-click to finish. Select a Cloud markup and adjust **Cloud arc diameter** in the right-side properties. Smaller values make tighter, more frequent scallops; larger values make broader arcs. The setting is saved with the markup.

Object stacking order

Right-click a placed Stamp, Text, Symbol, or Signature and choose **Bring to Front** or **Bring to Back** to change its drawing order relative to other stackable objects on that page. This order is preserved in saved PDFs by flattening these objects together as page content; other markups and comments remain PDF annotations. These commands are unavailable in read-only or live shared documents.

Selecting multiple items

With the **Select** tool active, hold **Ctrl** (or **Command** on macOS) and click items to add or remove them one at a time; **Shift-click** also adds items. Alternatively, drag a selection window across the page to select annotations, measurements, comment boxes, Stamps, Text, Symbols, and Signatures. Drag any selected item to move the

selection together. Right-click a selection and choose **Group** to keep its items selected and moving together; choose **Ungroup** to release a grouped selection. Comment boxes remain attached to their markup and can also be selected and repositioned separately. Double-click a comment box to edit comments you authored.

Text, symbols, and signatures

The **Text**, **Symbol**, and **Signatures** buttons are in the **Content tools** toolbar group, alongside Select and Pan. These tools write to PDF page content rather than creating markup annotations, so they do not appear in the Markups list or markup count. Use them on local PDFs; live shared documents do not support these page-content edits.

- **Text:** Choose its size and color, then click the page to create a text object and enter its content. Press **Enter** to apply it; use **Shift+Enter** for a new line. Select and drag it to move, drag its corner to resize, and double-click to edit. It is regular PDF text content, not a text-box annotation, and can be searched or edited with a PDF editor that supports editing page content.
- **Symbol:** Choose a check, X, star, circle, plus/minus, question mark, or exclamation mark, set its size and color, then click the page. Select and drag the symbol to move or drag its corner to resize it. Symbols are flattened into page graphics when saved.
- **Signatures:** Choose **Signatures**, then upload one or more PNG files. For an image with a white paper background, select **Remove white background from uploaded PNGs** before uploading; white and near-white pixels become transparent. Leave it unchecked for PNGs that already have transparency or contain white ink. Manage the saved names and entries on this device. Choose **Place selected signature**, then click the page. Select and drag the signature to move or drag its corner to resize it. Signatures are flattened into PDF page content when saved.
- **Cut, copy, and paste:** Right-click a selected Text, Symbol, Signature, Stamp, or markup and choose **Cut**, **Copy**, or **Paste**. **Ctrl/Cmd+X**, **Ctrl/Cmd+C**, and **Ctrl/Cmd+V** work for the current selection too. A right-click Paste places the copied items around the clicked point; keyboard Paste offsets them from their original position.

Save the PDF after placing page content to keep the changes in the output file. Stamps, Text, Symbols, and Signatures are combined in their selected stacking order when saved; the original objects are no longer editable in the saved copy. Other markups and comments remain PDF annotations. The signature list is stored locally on the current device and is not synchronized to the shared server.

6. Measure drawings

Calibrate each page before relying on measurement values. Uncalibrated values represent paper size, not real-world dimensions.

Measurement tools are available in the **Measurement tools** toolbar group and from **View > Measurements**. You can start a measurement from the toolbar without opening the Measurements window. The separate **Measurements...** toolbar button or **View > Open measurements panel...** opens calibration and takeoff controls.

Measurements are drawing checks, not review comments: placing one does not open a comment dialog, and measurements are excluded from the markup-comment CSV. The calibration and appearance are saved with the PDF so the displayed and reopened saved measurements use the same value and unit formatting.

Calibrate from a known distance

1. Open the **Measurements...** panel from the toolbar, or choose **View > Open measurements panel...**.
2. Choose **Calibrate (pick 2 points)**.

3. Click and drag between two points on a dimension whose real-world length you know.
4. Enter the known distance and unit (ft, in, m, or mm), then choose **Apply**.
5. Select **Apply to all pages** first if the same scale applies throughout the document.

Calibrate from a drawing scale

1. In Measurements, enter the real-world length represented by **1 in on paper**.
2. Choose the scale unit and choose **Set scale**.
3. Select **Apply to all pages** if appropriate.

Create takeoffs

1. In Measurements, enter a **New measurement subject**, such as `Exterior wall` or `Doors`.
2. Choose a measurement tool: Length, PolyLength, Spline, Radius, Diameter, Area, Perimeter, Angle, or Count.
3. Draw the measurement on the page. Multi-point tools are finished with **Enter**, double-click, or right-click; Angle finishes after its third point. For Spline, click at least three points along the curve.
4. The measurement appears on the drawing. The Measurements panel stays closed unless you open it; the tool remains active for another measurement.
5. Open **Measurements…** to review entries and totals in the **Takeoff** table, choose an output unit, or export the takeoff.
6. Choose **Export CSV** to save the takeoff. The date column uses local time in `M/D/YYYY HH:mm` format.

The Takeoff table is separate from the Markups panel. Measurement entries are not comments and are not included in markup-comment CSV exports. Page calibration is saved in the PDF, but is not synchronized to other collaborators on a shared document. Coordinate measurement assumptions with your team before sharing quantities.

The subject remains the default while you continue using the same measurement tool, so repeated Count placements can share a subject such as `D2`. Choosing a different measurement tool clears the subject for the new takeoff type.

For Length, PolyLength, Spline, Area, Perimeter, Angle, and calibration, clicks snap to nearby vector line endpoints or intersections. The snap marker shows the target before you click. Snapping works on vector drawing geometry; scanned or image-only pages do not contain line endpoints to snap to.

To add arrowheads to a Length measurement, select it and choose **Start**, **End**, or **Both** under **Endpoint arrowheads** in the properties panel. Adjust **Arrow size** there as needed. The arrows appear in the viewer and saved PDF.

Read the measurement labels

- **Length** shows the calibrated distance between the two picked points.
- **PolyLength** totals the connected segments you draw.
- **Spline** draws a smooth curve through the control points and reports its calibrated length. Add at least three points, then press **Enter**, double-click, or right-click to finish.
- **Area** reports the enclosed area, using a squared unit (for example, `mm²`).
- **Perimeter** reports the total boundary length of a closed shape.
- **Radius**: click the circle center, then a point on its edge. The displayed value is the calibrated center-to-edge distance.

- **Diameter**: click two opposite points on the circle edge. The displayed value is the calibrated distance across the circle.
- **Angle** reports the angle formed by three points.
- **Count** places a numbered marker. The Takeoff table groups counts by subject.

In the example, labels are shown directly on the drawing. Counts are numbered in the drawing and summarized by subject in Takeoff. Multiple measurement markups can also be selected together and moved as a group. Always confirm the active page's calibration and unit before using quantities.

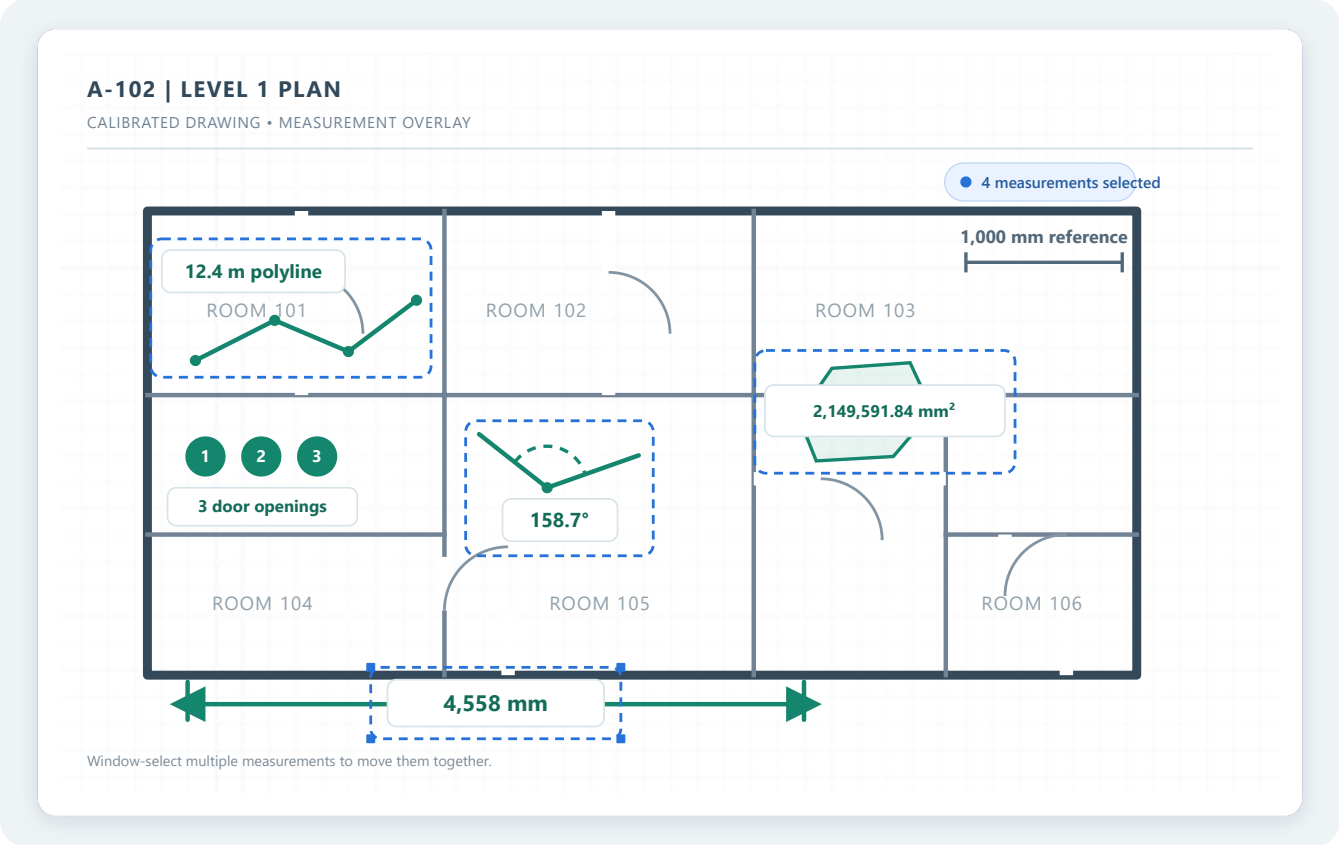


Figure 3. Measurement overlay with a group of selected measurements. Values are illustrative; calibrate your own drawing before measuring.

7. Compare drawing revisions

1. Open both PDFs as tabs. For a revision not yet open, choose **Open revision...** from Compare.
2. Choose **Compare** in the top toolbar.
3. Select the older drawing as **A (old)** and the newer drawing as **B (new)**. Set the page number for each.
4. Choose **Compare** to calculate visual differences.
5. Select a display mode:
   - **Overlay differences:** red indicates removed content (A only), blue indicates added content (B only), and gray indicates unchanged content.
   - **Differences on faded A:** shows the changes over a faded view of A.
   - **Side by side:** displays both pages next to each other.
9. Adjust **Tolerance** if small raster differences create too much noise.

10. Choose **Auto-align** if the pages are shifted. Use the arrow buttons to nudge the alignment one pixel at a time.
11. Use the plus/minus buttons to zoom the comparison.
12. In Overlay or Ghost mode, choose **Export PNG** or **Export PDF** to save the result.

Compare is raster-based and finds visual differences; it does not interpret drawing objects or text semantics.

8. Organize pages and bookmarks

Organize pages

1. Open **View > Organize pages...**.
2. Select one or more page thumbnails. Use Ctrl or Shift for multi-selection; drag a page to reorder it.
3. Choose Rotate left/right, Delete, Duplicate, or **Extract → new PDF**.
4. To split, enter page ranges such as `1-3, 4, 5-`, or choose an interval in **or every ... pages**, then choose **Split to folder...**.
5. To insert pages, choose another open PDF or **Browse for file...**, enter page ranges if needed, then choose where to insert.
6. Save the PDF to preserve page changes.

If no page is selected, applicable actions can apply to all pages. The app prevents deleting every page.

Bookmarks

1. Select the **Bookmarks** tab in the left panel.
2. Enter a title and choose **Add**. If the title is blank, the app uses the sheet title or page number.
3. Use a page button to navigate to a bookmark.
4. Edit a title, move it up/down, indent/outdent it, or delete it.
5. Save the PDF to store the bookmark outline.

9. Search text in open PDFs

1. Open a PDF, switch to **Viewer** if needed, and choose **View > Search text in open PDFs...** or press **Ctrl+Shift+F**.
2. Enter the text to find and choose **Search** or press **Enter**.
3. Leave **All open documents** checked to search every open PDF; uncheck it to search only the active PDF.
4. Select a result to navigate to its page.

Text search is available in unlicensed viewer mode as well as licensed mode. It searches PDF text layers; scanned pages without OCR text cannot be searched.

Check spelling in an open PDF

1. Open a PDF in **Viewer**, then choose **Edit > Check spelling in PDF...** or press **Ctrl+Shift+K**.
2. The checker scans selectable text page by page and lists possible misspellings with suggested corrections and page links. Each occurrence is highlighted translucent red in the viewer.

3. Select a page link to navigate to that page. Choose **Add to dictionary** for a valid name or technical term, or **Clear highlights** to remove the red marks.

The scan works without a license and does not change PDF contents. It uses the selected English dictionary. Scanned pages or image-only text require OCR before they can be checked.

10. Shared documents and review assignments

Choose **Shared Documents...** to connect to the company server; the app asks for sign-in only when you use this server feature. A signed-in user can browse shared PDFs in read-only mode without a license. A license is required to upload, edit, or update review status.

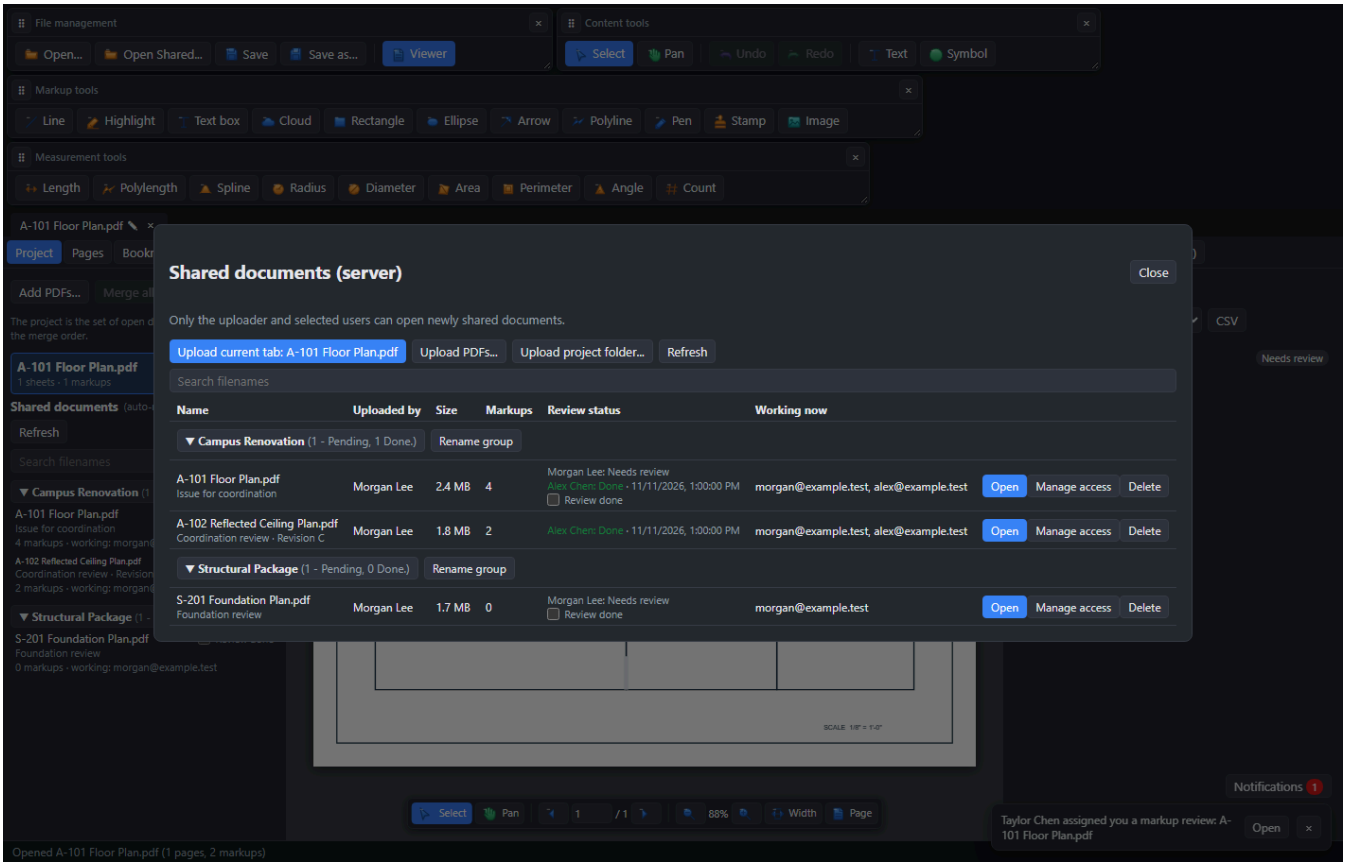


Figure 4. Shared-document groups and reviewer status are visible in the library.

Find and open shared PDFs

1. Choose **Open Shared...** in the toolbar, **Shared Documents...** on the welcome screen, or **File > Open Shared...**.
2. Use **Search filenames** to filter by document filename. The search is case-insensitive. Clear the field to see all files.
3. Documents are grouped by project. Expand or collapse a group with its arrow.
4. The group heading shows counts such as **(4 - Pending, 1 Done.)**. A document is Done only if it has assigned reviewers and every assigned reviewer is done; mixed or unassigned reviews count as Pending. Counts update for the current search results.
5. Select **Open** to open a shared PDF. The currently open shared PDF is highlighted.

6. In the left **Project** panel, the shared list also refreshes automatically about every 30 seconds while visible. Use **Refresh** to reload immediately.

Upload a PDF or project folder

1. Open **Shared Documents**.
2. Choose **Upload current tab**, **Upload PDFs...**, or **Upload project folder...**.
3. Choose a group (existing, new, or no group) and optionally enter a description.
4. In **Users allowed to access these documents**, optionally filter the list by discipline or search names and email addresses, then select the users who should have access. Select-all applies to the users currently matching the filters. The uploader retains access; without selecting others, only the uploader can access the new document.
5. Choose **Upload** and review the result or per-file upload status.

Uploads must be PDFs no larger than 150 MB each. Folder upload retains subfolder names as labels; it does not create separate folder permissions. Selection is limited to 500 PDFs. An upload with a large number of existing markups may take longer to complete.

Manage access

Only the uploader can change a document's access list:

1. In Shared Documents, find the uploaded document and choose **Manage access**.
2. Optionally filter by discipline or search names and email addresses, then select or clear the users who should have access. Select-all applies to the users currently matching the filters.
3. Choose **Save access**.

The administrator can delete a document or group only where they have the required access. Group rename and deletion permissions depend on the uploader/admin role and access to the documents in the group. Deleting a document or group removes it for everyone and cannot be undone.

Mark your review done or reopen it

1. In the left **Project** panel or Shared Documents window, find a document assigned to you.
2. Tick **Review done** when your review is complete. Untick it to reopen your review.
3. Your status is separate from other reviewers' statuses. A document's group count becomes Done only after every assigned reviewer has completed their review.
4. If markup content changes after completion, the server reopens reviews for the updated markup revision.

Newly assigned reviewers receive an in-app alert and, if the administrator has configured email, an assignment email. When a reviewer marks a review done or reopens it, the uploader and other assigned reviewers receive an in-app alert. The uploader also receives an email for either status change, with the assigned reviewers copied, if email is configured. Completion and reopening status is visible in the document list.

Work in a shared PDF

1. Open the document from Shared Documents.
2. Add and edit markups using the same viewer tools as a local PDF.
3. Changes sync automatically. The shared-document banner shows who is working in the document and whether your connection is live.

4. If offline or your session expires, the banner displays a warning. Keep the document open and restore the connection so pending changes can sync.
5. You can select any markup to locate it on the drawing, but you can move, resize, edit, or delete only markups and comments you authored. The server enforces these restrictions.

Shared documents sync markups and comments, not page calibration, bookmarks, or page organization. Page reorder, rotate, and insert are unavailable on shared tabs. If two people edit the same markup at the same time, the last change accepted by the server wins.

11. Notifications

In server mode, choose **Notifications** in the top-right area:

- The unread count appears on the button.
- Assignment, review, and pending-registration alerts appear in the inbox. Newly assigned reviewers are notified in-app; they also receive an email when the administrator has enabled and configured assignment email.
- Notifications are pushed to signed-in users as soon as the server records them. The app also refreshes periodically as a fallback.
- Choose **Open** on an alert to go to Shared Documents or, for a registration alert, user management.
- Choose **Mark read** on an alert or **Mark all read** in the inbox.
- Choose **Clear all notifications** to remove all current inbox entries. This is separate from **Mark all read**.
- The inbox refreshes automatically about every 30 seconds.

Assignment and review alerts always appear in-app. Email is optional and is configured by the server administrator. Email delivery problems do not prevent document uploads or review-status changes. Clearing notifications requires the current ThryvoPDF Server Manager on the shared server.

12. Administrator: users and server setup

Approve and manage accounts

Administrators can open **Option > Users...**:

1. Review the **Pending approval** list.
2. Choose **Approve** or **Reject** for a registration.
3. Use the user table to change a role, disable/enable an account, reset a password, or delete an account.
4. A reset password is shown once; securely give it to the user. The user must change it at next login.

Use **Option > Password...** to change your own password. New server installations create an administrator; its initial password is generated by the server or configured by the installer/admin. Change it at first sign-in and have the administrator remove any initial-password file as directed by the server setup process.

Install or update Server Manager

Server Manager runs the collaboration service as an automatic-start Windows service:

1. Install **ThryvoPDF Server Manager** on the server PC.
2. Open it and choose a dedicated local **Server data folder** and port.

3. Choose **Install service...** and approve the Windows administrator prompt.
4. Wait for the service status and health check to show that it is running.
5. Provide client users with the server address and port.
6. Configure Windows Firewall and network access only as required for your trusted network; the manager does not create firewall rules automatically.

For an existing deployment, update Server Manager while reusing the same data folder to retain users and documents. Do not delete the data folder. Before upgrading the manager, stop and uninstall the Windows service, install the new manager, then install the service again with the same port and data folder. Uninstalling the service does not delete its data. Stop and uninstall the service before changing its port/data folder or uninstalling the manager.

The server data folder contains user accounts, shared PDFs, markup data, and notification/email settings. Restrict its access and back up the entire folder with the service stopped. Do not run another server process against that folder at the same time.

The server uses HTTP unless an administrator separately configures TLS. Plain HTTP exposes credentials and documents to other parties on the network; use only on a trusted network or configure HTTPS and certificates appropriate for your organization.

Configure assignment email

1. Start the server service and open Server Manager.
2. In **Assignment notifications**, enable email and select a provider.
3. For Gmail/Google Workspace, use `smtp.gmail.com`, port `587`, STARTTLS, the full mailbox address, and an App Password. Google requires 2-Step Verification to create an App Password; a normal account password will not work.
4. For Outlook.com, use `smtp-mail.outlook.com`, port `587`, STARTTLS, the full mailbox address, and an app password if two-step verification requires it.
5. For Microsoft 365, prefer **Microsoft 365 - Microsoft Graph** if SMTP authentication is blocked. An Entra administrator must register an application, provide its tenant ID, client ID, and client secret value, grant Microsoft Graph application permission `Mail.Send`, and grant admin consent. Set **From** to an existing Exchange Online mailbox.
6. If using SMTP for Microsoft 365, the administrator must allow Authenticated SMTP (SMTP AUTH) for the mailbox and satisfy the tenant's authentication policy.
7. Enter the sender address, save the settings, then send a test email to verify the configuration.

The manager saves email credentials in the server data folder's `notify.json`; limit access to that folder. Graph `Mail.Send` can permit sending as other mailboxes in the tenant unless an administrator restricts it. Follow the organization's security policy when creating and limiting the mail application.

13. Shortcuts and menus

Shortcut	Action
`Ctrl+O`	Open PDF
`Ctrl+S`	Save
`Ctrl+Shift+S`	Save As

Shortcut	Action
`Ctrl+Shift+Right`	Rotate the current page clockwise
`Ctrl+Shift+Left`	Rotate the current page counter-clockwise
`Ctrl+Z`	Undo
`Ctrl+Y` or `Ctrl+Shift+Z`	Redo
`Delete`	Delete selected markup
`V`	Select tool
`H`	Toggle Pan
Hold `Space` while dragging	Temporary Pan
`Ctrl+=` / `Ctrl+-`	Zoom in / out
`Ctrl+Alt+L`	Show or hide left panel
`Ctrl+Alt+R`	Show or hide right panel
`Ctrl+Shift+F`	Search text in open PDFs
`Ctrl+Shift+K`	Check spelling in PDF
`PageUp` / `PageDown`	Previous / next page
`Enter` / double-click / right-click	Finish multi-point markup

On Windows, use **Alt+F**, **Alt+E**, **Alt+O**, **Alt+V**, or **Alt+H** to open the File, Edit, Option, View, or Help menus. Shortcuts are ignored while focus is in text fields.

14. Troubleshooting

Problem	What to try
Cannot connect to the server	Check the server address and port with your administrator. Use **Test connection**. Confirm the service is running and the port is allowed through the firewall.
Sign-in says approval is pending	Ask a server administrator to approve the account in **Option > Users...**.
Shared Documents is unavailable	Confirm that you are connected in server mode, signed in, and using a current server build. Ask the administrator to update the server files/service if the server does not support a feature.
Assigned user does not appear	The uploader should open **Manage access**, select the user, and choose **Save access**. Verify that the user is signing in with the assigned email address.
Review checkbox is missing	Only assigned reviewers have a completion checkbox. Confirm the current user is assigned and refresh the list.

Problem	What to try
Review count does not show Done	Every assigned reviewer must mark their own review done. Documents with no assigned reviewers count as Pending.
Markup is not editable in a shared PDF	Shared markups can only be changed by their author. Verify the signed-in account and select your own markup.
Shared changes are not syncing	Check the collaboration banner for Offline or Session expired. Restore the network connection, sign in again if required, and allow the pending changes to sync.
Email test fails	Check provider host/port, sender, mailbox credentials, and provider-specific requirements. For Graph, confirm the secret **value** is current and `Mail.Send` admin consent was granted.
Search finds no text	Text search requires a text layer. Run OCR on scanned PDFs in another tool if searchable text is needed. Filename search in Shared Documents is separate from drawing text search.
Measurements look wrong	Recalibrate the page using a known distance or drawing scale, and confirm the units.
PDF opens but editing is disabled	Import a valid license for this device. Unlicensed mode is read-only.
Changes are missing after closing	Save the PDF before closing. A dot on the tab indicates unsaved changes.

15. Data, compatibility, and limitations

- Save local document changes with **Save** or **Save As...**. Markups are written as PDF annotations and ThryvoPDF also stores private metadata used to restore editable app data.
- CSV exports are separate files and do not replace the PDF.
- Annotations made by other PDF applications may display read-only, depending on their format and PDF.js support. Rich-text editing of external annotations is not supported.
- Other PDF viewers can display saved appearances, but comment popups may look different. Appearance rendering has not been verified in every third-party PDF reader.
- Shared documents contain copies of PDFs and cannot be remotely revoked after a user has downloaded them.
- Local-account mode does not share accounts, files, or markups with other computers.
- The Windows installer is unsigned.

For server installation details, backup procedures, network security, and service maintenance, ask your administrator to follow the deployment documentation provided with the current ThryvoPDF Server Manager.