TT 520
.M 655
1921

THE NEW STANDARD WORK ON DESIGNING — PATTERN-MAKING

of

LADIES' TAILORMADE GARMENTS

REVISED NEW EDITION



Class TT520
Book .M655
Copyright No. 1921

COPYRIGHT DEPOSIT.

The NEW STANDARD

WORK ON DESIGNING

AND

PATTERN-MAKING

of

LADIES' TAILOR-MADE GARMENTS

NEW REVISED EDITION

PUBLISHERS

Mitchell Publications, Inc.

912-920 Broadway

NEW YORK

TT 520
.M655
1921

Copyrighted 1921

BY

MITCHELL PUBLICATIONS, Inc.

912-920 Broadway

New York

JUN 20 1921

©Cl. A617629

21-11654

CHS 14 Jul 1921

INDEX

How to take measures 11
How to take measures, continued 13
Box Coat Foundation 17
Box Coat 19
Kimona Box Coat 21
Kimona Box Coat, continued 23
Kimona Box Coat, continued 25
Set-in Kimona Sleeve 27
Set-in Kimona Sleeve, continued 29
Balmacaan Sleeve 31
Balmacaan Sleeve, continued 32
Balmacaan Sleeve, continued 35
Semi-fitted Jacket Foundation 37
Semi-fitted Jacket 39
Semi-fitted Kimona Jacket 41
Tight-fitted Jacket Foundation 43
Tight-fitted Jacket—Single Dart 45
Tight-fitted Jacket—Double Dart 47
"Prince Albert" cut tight-fitted Jacket 49
"Prince Albert" cut tight-fitted Jacket, continued, 51
Mannish Jacket 53
Semi-fitted Jacket—erect form 55
Semi-fitted Jacket—stooping form 57
The Cape 59
Two piece Sleeve 61
Raglan Sleeve 63
Raglan Sleeve, continued 65
Large size two piece Sleeve 67
Two piece Bell-Sleeve 69
One piece coat sleeve 71
Bell cuff for one piece sleeve 73

INDEX

continued

Cuffs for two piece sleeve 75
Darted Shawl Collar 77
Shawl Collar 79
Different types of collars 81
Different types of collars, continued 83
Skirt Foundation 85
Two piece Skirt 87
Two piece high-waisted Skirt 89
Five gored Skirt 91
Seven gored Skirt 93
Nine gored Skirt 95
Eleven gored Skirt 97
Thirteen gored Skirt 99
Fifteen gored Skirt 101
Pleated Skirt Foundation 103
Side pleated Skirt 105
Box pleated Skirt 107
One piece Skirt 109
Two piece circular skirt 111
Two piece circular skirt, continued 113
Gored Flare Skirt 115
Divided Riding Skirt 117
Ladies' Apron Riding Skirt 119
Ladies' Apron Riding Skirt, continued 121
Ladies' Riding Breeches 123
Ladies' Riding Breeches, continued 125
Manipulation of the Semi-fitted pattern 127
Manipulation of the Semi-fitted pattern, continued, 129
Manipulation of the Semi-fitted pattern, continued, 130
Manipulation of the Semi-fitted pattern, continued, 133
Manipulation of the Semi-fitted pattern, continued 134

PREFACE

An enduring system of garment designing must be founded upon principles applicable to all variations of the human form and the ever-changing vagaries of fashion.

There are departments in designing in which the conditions and requirements render measures wholly unnecessary. Then proportions form the basis of procedure, and the data thus obtained is adequate to the end in view. Proportions determine the lengths and widths of the parts that are adapted to a large proportion of forms of any given height and circumference. They are the outgrowth of experience, but vary in different localities according to conditions of physical development. Nevertheless their field of usefulness is a broad one.

In custom designing, the requirements and conditions are widely different from those which obtain in the wholesale trade. In the former there are presented an almost infinite variety of forms, the requirements of each of which must be adequately met by the method employed. Proportions alone are therefore insufficient for the custom designer. For every average quantity there are two extremes between which the average has been established. For this reason there will always be a necessity for a comprehensive measurement of the parts into which the height and circumference of the whole may be properly divided.

The value of both proportions and measurements depends upon their approximate correctness, without which there is no choice between them. A correct measure is preferable to a false proportion, and also to an average proportion, when the form is not within the prescribed limits of an average form. On the other hand, an average proportion is more desirable and reliable than a false measure. It is folly to condemn either *per se.*

As the whole is greater than any part, so is a system of garment designing which is alike applicable to all forms superior, for the needs of the custom designer, to one applicable to a large number only. While it is true that very many of the divergencies in shape from that of an average form may be ascertained and accommodated at the first or the second try-on, experience demonstrates that they can be more readily ascertained at the outset by a proper measurement of each form as presented to the designer. The original pattern can then be made more closely to conform to the requirements of the wearer, thus minimizing the changes at the try-on.

For this reason we have endeavored, in the preparation of this work, to present and expound correct principles for all sizes and forms, and to provide a method by which they can be successfully applied. We have not undertaken to construct a system by which the unskilled can, with the aid of a try-on, produce suitable garments for even a large proportion of forms, but to construct one which, used by skilful designers, will greatly lessen the changes at the try-on, and make garment designing both pleasant and profitable.

We believe that the principles upon which this system have been built are the most scientific yet employed in garment designing; but even a perfect system will not be a guarantee of success to the designer who is deficient in those qualities necessary to its intelligent utilization. No system will ever be invented that will supply any one with an equivalent for brains, or enable him to be successful in garment designing unless he was born with an aptitude for the trade.

In the nature of the case there cannot be a "science" of garment designing, either for men or women, by which right results are infallibly secured. A system may very nearly approach the scientific but even then it may not be rightly used. Two students of the same system will attain different degrees of proficiency because they differ in aptitude and intuition to readily and rightly grasp and utilize the principles on which the system is based.

It is the novice only who prates about the "science" of garment designing. It is a highly honorable and useful occupation, in which one who has artistic taste and right methods can find a wide field for their cultivation and employment.

Are you a student in garment designing? Are you looking for some method by which you can, with but a little effort on your part, float into fame and meritorious achievement? If so, you are chasing a phantom. The best things in life are those which demand our greatest efforts if we would secure them. Those which cost the least of effort are of the least value.

There are many who plod along with no clearly defined principles or rules of action. How all their work might be changed from a menial drudgery into an intellectual and pleasant development of the best that lies dormant within them if they would but choose the right path and follow the progressive steps necessary to their best unfolding.

To be a successful designer is not difficult when one has aptitude and pursues his studies upon principles which are logical and clear to his powers of comprehension.

The subject herein brought to the attention of those who aspire to be successful designers will be taken up at the beginning and followed in progressive steps to the end. While it is intended to be especially adapted to the needs of the custom designer, it is also for those who wish to prepare themselves for the wholesale trade, as it combines the drafting of patterns by the measures taken on the form to be fitted, as well as by the proportionate measures suitable for forms of all sizes of proportionate development.

When dealing with forms of average or normal development in heights and widths, and of the most common variations from the normal form, these proportionate measures can be absolutely relied upon and are adequate to meet all requirements in such cases.

A knowledge of what are the measures for a normal form of any given height and circumference is of great value to the novice in measuring. They will be a guide to correct measures and a guard against wrong measures when measurements are required, as in custom designing.

One who does not know how to measure had better let measures alone until he has learned. A good proportionate measure is safer than a false measure taken on the form to be fitted. But one who has an aspiration to excel in skill as a designer, enlarge his power of usefulness and earning power, must practice measuring until he has become proficient in that. Because when dealing with forms of variable degrees in development, the lengths and widths of the whole and its part can best be determined by a right measurement of the form. His methods used in drafting must be logical and such as will enable him to put into the draft the right quantities in the several parts, and in their right relation to the whole. He must cultivate and infuse into his draft the highest art qualities. His production must be befitting and conformable to a standard of right and appropriateness.

In the study of the diagrams and explanations which accompany this work, the thoughtful student will see the reasonableness of each step taken.

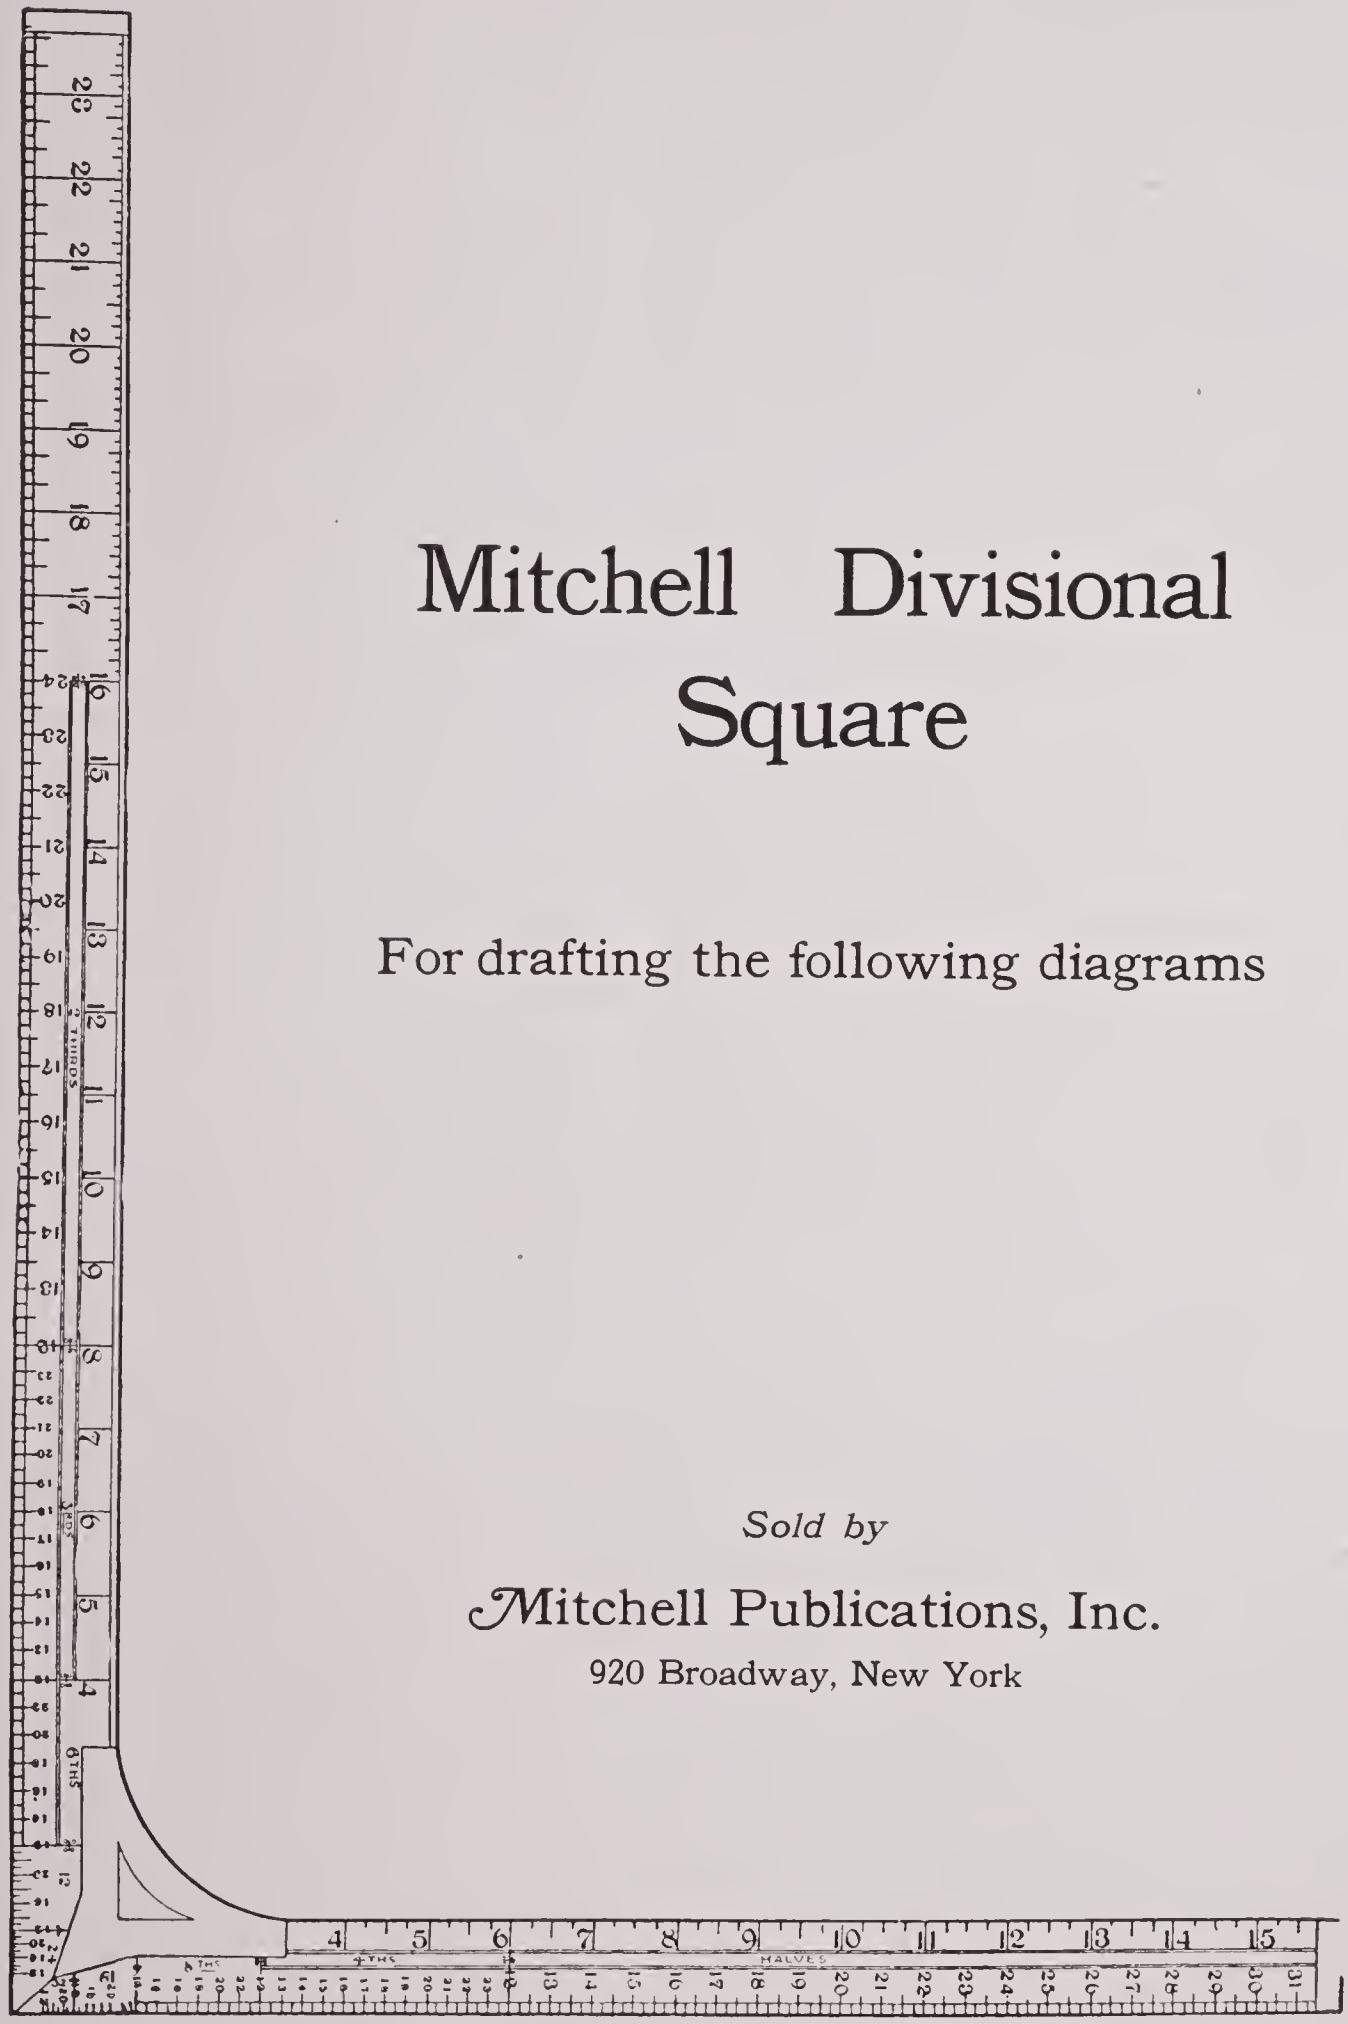
The principles herein expounded are correct and applicable to any and all of fashion's caprices.

That this work may prove an inspiration and a valuable helper to all engaged in the production of women's tailor-made garments is the sincere wish and expectation of

THE PUBLISHERS.

PART I

MEASURING



Mitchell Divisional Square

For drafting the following diagrams

Sold by

Mitchell Publications, Inc.
920 Broadway, New York

MITCHELL IMPLEMENTS

KNOWN AND RELIED UPON EVERYWHERE

MADE OUT OF THE FINEST MATERIAL.

PRICE LIST.

"Mitchell" Divisional Square, best boxwood, 24x16	$4.50
Boxwood Divisional Squares, 24x12, reg. or reversed	2.25
Boxwood Divisional Squares, 24x14, reg. or reversed	2.50
Boxwood Divisional Squares, 24x16, reg. or reversed	2.75
(Reversed means with the divisions of halves on long arm.)	
Patent Folding Arm, Div. Square, 24x14, boxwood	4.00
Standard Measuring Sq. with brass attachment and tape.	4.00
Standard Measuring Sq. with celluloid attachment & tape	4.00
Standard Measuring Sq. jointed for folding and intended for taking orders on the road, with brass or celluloid attachment and tape.	5.00
Sliding Arm Measuring Sq., double brass arm (also known as the "Sherman") with tape	3.00
Sliding Arm Measuring Sq., best boxwood with folding brass arm	4.00
6-4 Bevel Straight Edge—Jointed	3.00
5-4 Bevel Straight Edge—Plain	$1.50
Trousers Measuring Device with ring for securing tape.	1.75
Blade Measuring Sq., best boxwood with tape	1.75
Blade Measuring Sq., folding arm with tape	2.25
Reduced Divisional Sq. for half-sized drafts	1.75
Reduced Divisional Sq. for quarter drafts	1.75
Celluloid or Brass Attachment for standard measuring sq.	.75
Forksticks, with tape for measuring inseam of trousers	.75
Curved Rules, best boxwood, reg. shape	.75
Curved Rules, best boxwood, Special	1.00
Best Sateen Inch-Measure, 60 ins. long, per doz	2.00
Best Sateen Inch-Measure, 60 ins. long, Single, by mail	.25
Graphite Crayons, blue black, red or assorted, box, 1 doz.	1.20
Mitchell Tracers, Single	.50
Handled Tracers, Straight, ea.	1.00

TO THE RIGHT KIND OF IMPLEMENTS

Don't be satisfied with inferior tools. Our name assures the quality of our goods.

Reme nber –Send in your remittance with the order as the sole object of this department is to supply our patrons with absolutely accurate and reliable merchandise at a nominal cost.

MITCHELL PUBLICATIONS, Inc. **912-920 Broadway, New York City**

E X T R A!

AT LAST WE ARE IN A POSITION TO OFFER YOU

The Famous **"MITCHELL TRACER"** Made Better Than Ever Before. Don't Delay in Sending in Your Order. The Demand will be Great. Get Yours.

50c. Each
PREPAID



50c. Each
PREPAID

The Handiest, Most Serviceable, Most Convenient Tool of Its Kind Ever Devised.

Nickel Plated, Rust Proof, Pressed Steel Wheel, Will Last Forever.

Every Tailor Needs One. ItFitsin the Vest Pocket. There is Nothing Like It on the Market.

SEND YOUR REMITTANCE WITH YOUR ORDER

MITCHELL PUBLICATIONS, Inc.

Tel. Stuyvesant 8383 **920 BROADWAY** **NEW YORK CITY**

SYSTEM OF TAKING MEASURES

The measurements necessary for the system as described in this book are as follows:

Bust, waist, hips, back depth, back waist length, full length, half back width, blade, front depth, sleeve length, top of dart, front waist length, front length of skirt, back length of skirt.

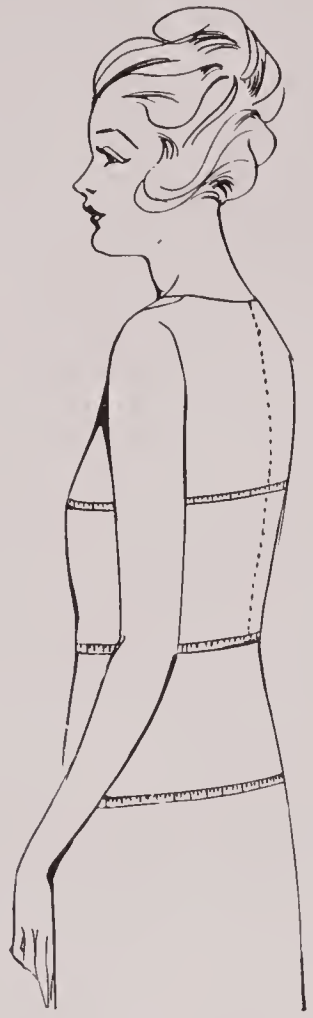
It is necessary for the sake of efficiency and of convenience to the one taking the same, that the measures are taken in one and the same routation at all times. It is also necessary and still more important that the measures are taken correctly, if a good pattern is to be the result. To facilitate this some of the measures are to be taken with the aid of the measuring square, the use of which will be described on the pages following.

The first three measures, the bust, waist and hip measures are illustrated in Fig. I. The bust measure is taken over the highest part of the bust slanting upward slightly towards the back. The waist measure is taken over the smallest part of the waist and the hip measure is taken between 7 to 9 inches below the waist line.

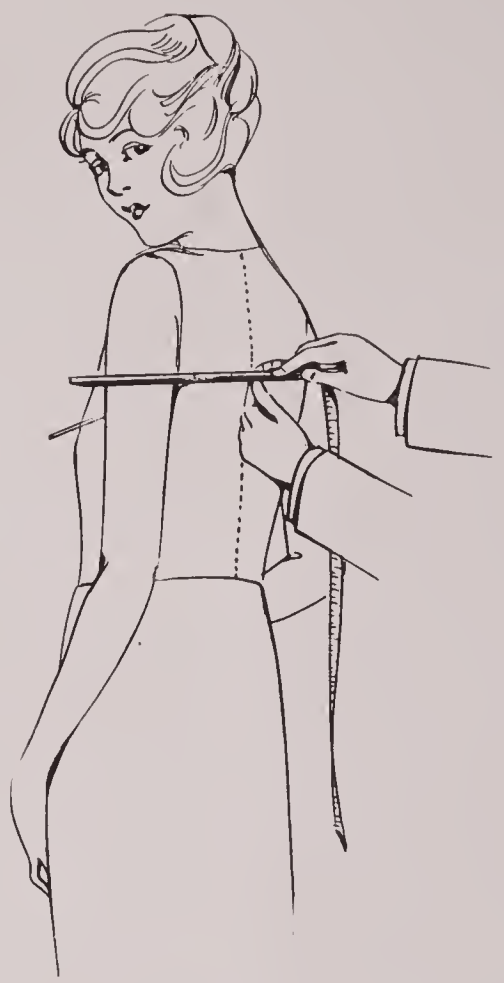
Fig. II illustrates the locating of the back or scye depth with the aid of the measuring square. The two brass rods are placed under the arm pointing downward towards the highest part of the bust, the center back is then located and marked with chalk or with a pin.

Fig. III illustrates the measuring of the back depth, the back waist length and the full length of the garment, all taken from the same point, the base of the neck.

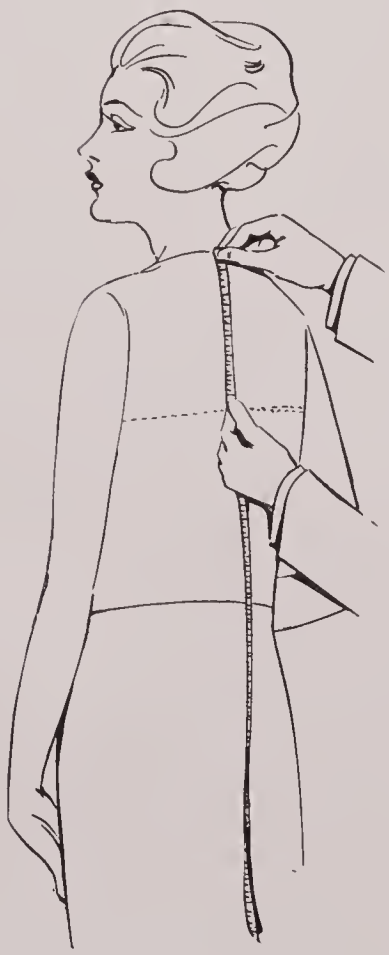
Fig. IV illustrates the taking of the half back width. The full back width is taken about 4 inches below the neck but only ½ the amount taken is put in your measure chart.



I



II



III



IV

SYSTEM OF TAKING MEASURES

continued

Fig. V illustrates the taking of the blade with the measuring square. Place the brass rode under the arm as illustrated and with the aid of the tap attached to the square the blade is taken backward to the mark made previously in locating the back depth.

Fig. VI illustrates the measuring of the front depth. After the blade has been taken and without removing the measuring square, the tap is dropped and swung from in front of the arm over the shoulder and the front depth taken to the center back as illustrated. The inside sleeve length may also be taken in connection with the front depth, drop the tap once more and let the same hang down along the arm, locate the elbow and full or any length of sleeve desired.

Fig. VII illustrates the taking of the top of dart, which is to be taken from the center back to the highest part of the bust about 4 inches from the center front, and the front waist length taken from the center back to the waist line at the center front marked X.

The skirt length is taken at the front and back from the waist line down to as many inches above the floor as desired.



V



VI



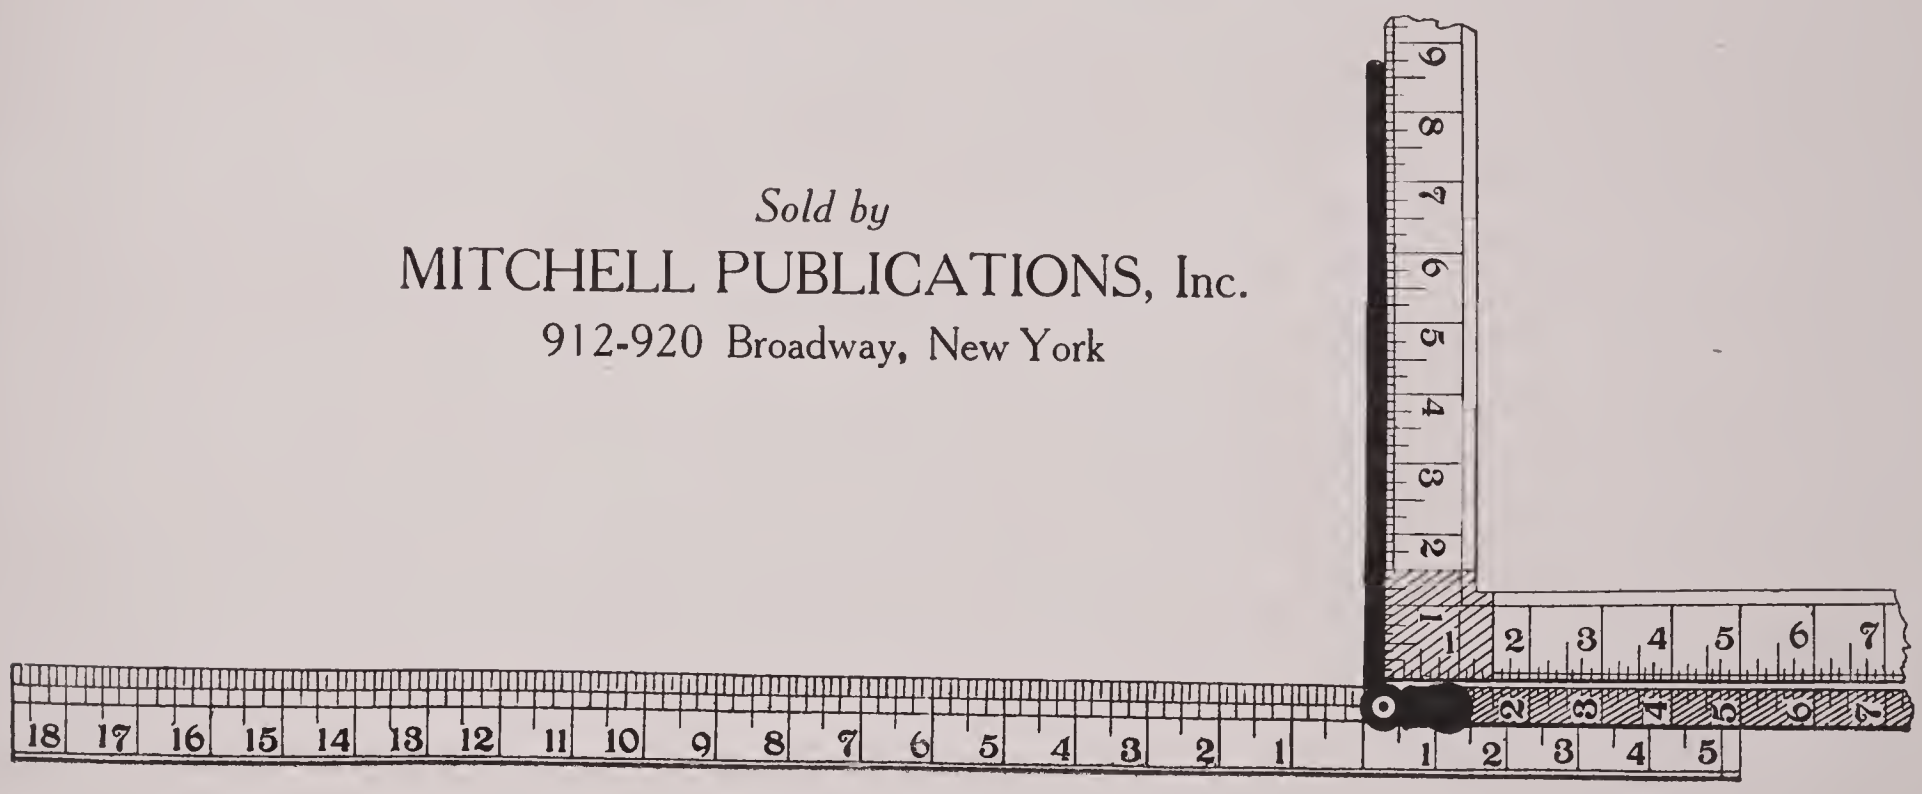
VII

PART II

DRAFTS

MITCHELL SLIDING ARM OR MEASURING SQUARE

For taking measures as explained in the following pages



Sold by

MITCHELL PUBLICATIONS, Inc.

912-920 Broadway, New York

BOX COAT FOUNDATION

This diagram illustrates the construction of the foundation for any style box coat.

The construction of this foundation, as well as of any other, is of vital importance, and great care must be exercised in applying the different measurements and squaring out the different lines, as the foundation establishes the principal points in the making of any size or style pattern The construction points are numbered in rotation to facilitate the drafting of this diagram in all the stages of its construction.

The measures are as follows:

39	Bust
40	Hips
7	Back depth
15	Back waist length
7	Half back width
10½	Blade
12½	Front depth

To Draft

A is the point from which to square both ways.

2 from A is ½ the bust measure on the 24ths less 2.

3 from 2 is the back depth.

4 from 2 is the back waist length.

5 from 4 is 7 inches. Square forward from 3, 4 and 5.

6 from 5 is ½ inch.

7 from 4 is ½ inch. Connect 6 to 7 and 7 to 2.

8 is a point on the line 7-2.

9 from A is ½ bust on the 8ths less 2; shape the back part of the neck from 2 to 9.

10 from 8 is the half back width and

11 from A is the same. Connect 10 and 11.

12 from 8 is the blade, square downward.

13 from 12 is 1¼ inch, square up.

14 is a point half way between 12 and 13.

15 from 13 is 1¼ inch.

16 from 12 is ½ bust on the 6ths.

17 from 16 is 1¼ inch, square up.

18 from 8 is ½ bust.

19 from 18 is ½ inch, connect 9 and 19.

20 from 14 is the front depth, gained by applying it, less the width of the back part of the neck, 9-2 at 14, as to where it falls on the line squared up from 17; connect 14 and 20, and square forward.

21 from 20 is ½ bust on the 6ths; draw a line from 21 through 19 downward.

22 from 21 is ½ bust on the 8ths, shape the front part of the neck from 20 to 22, as per diagram.

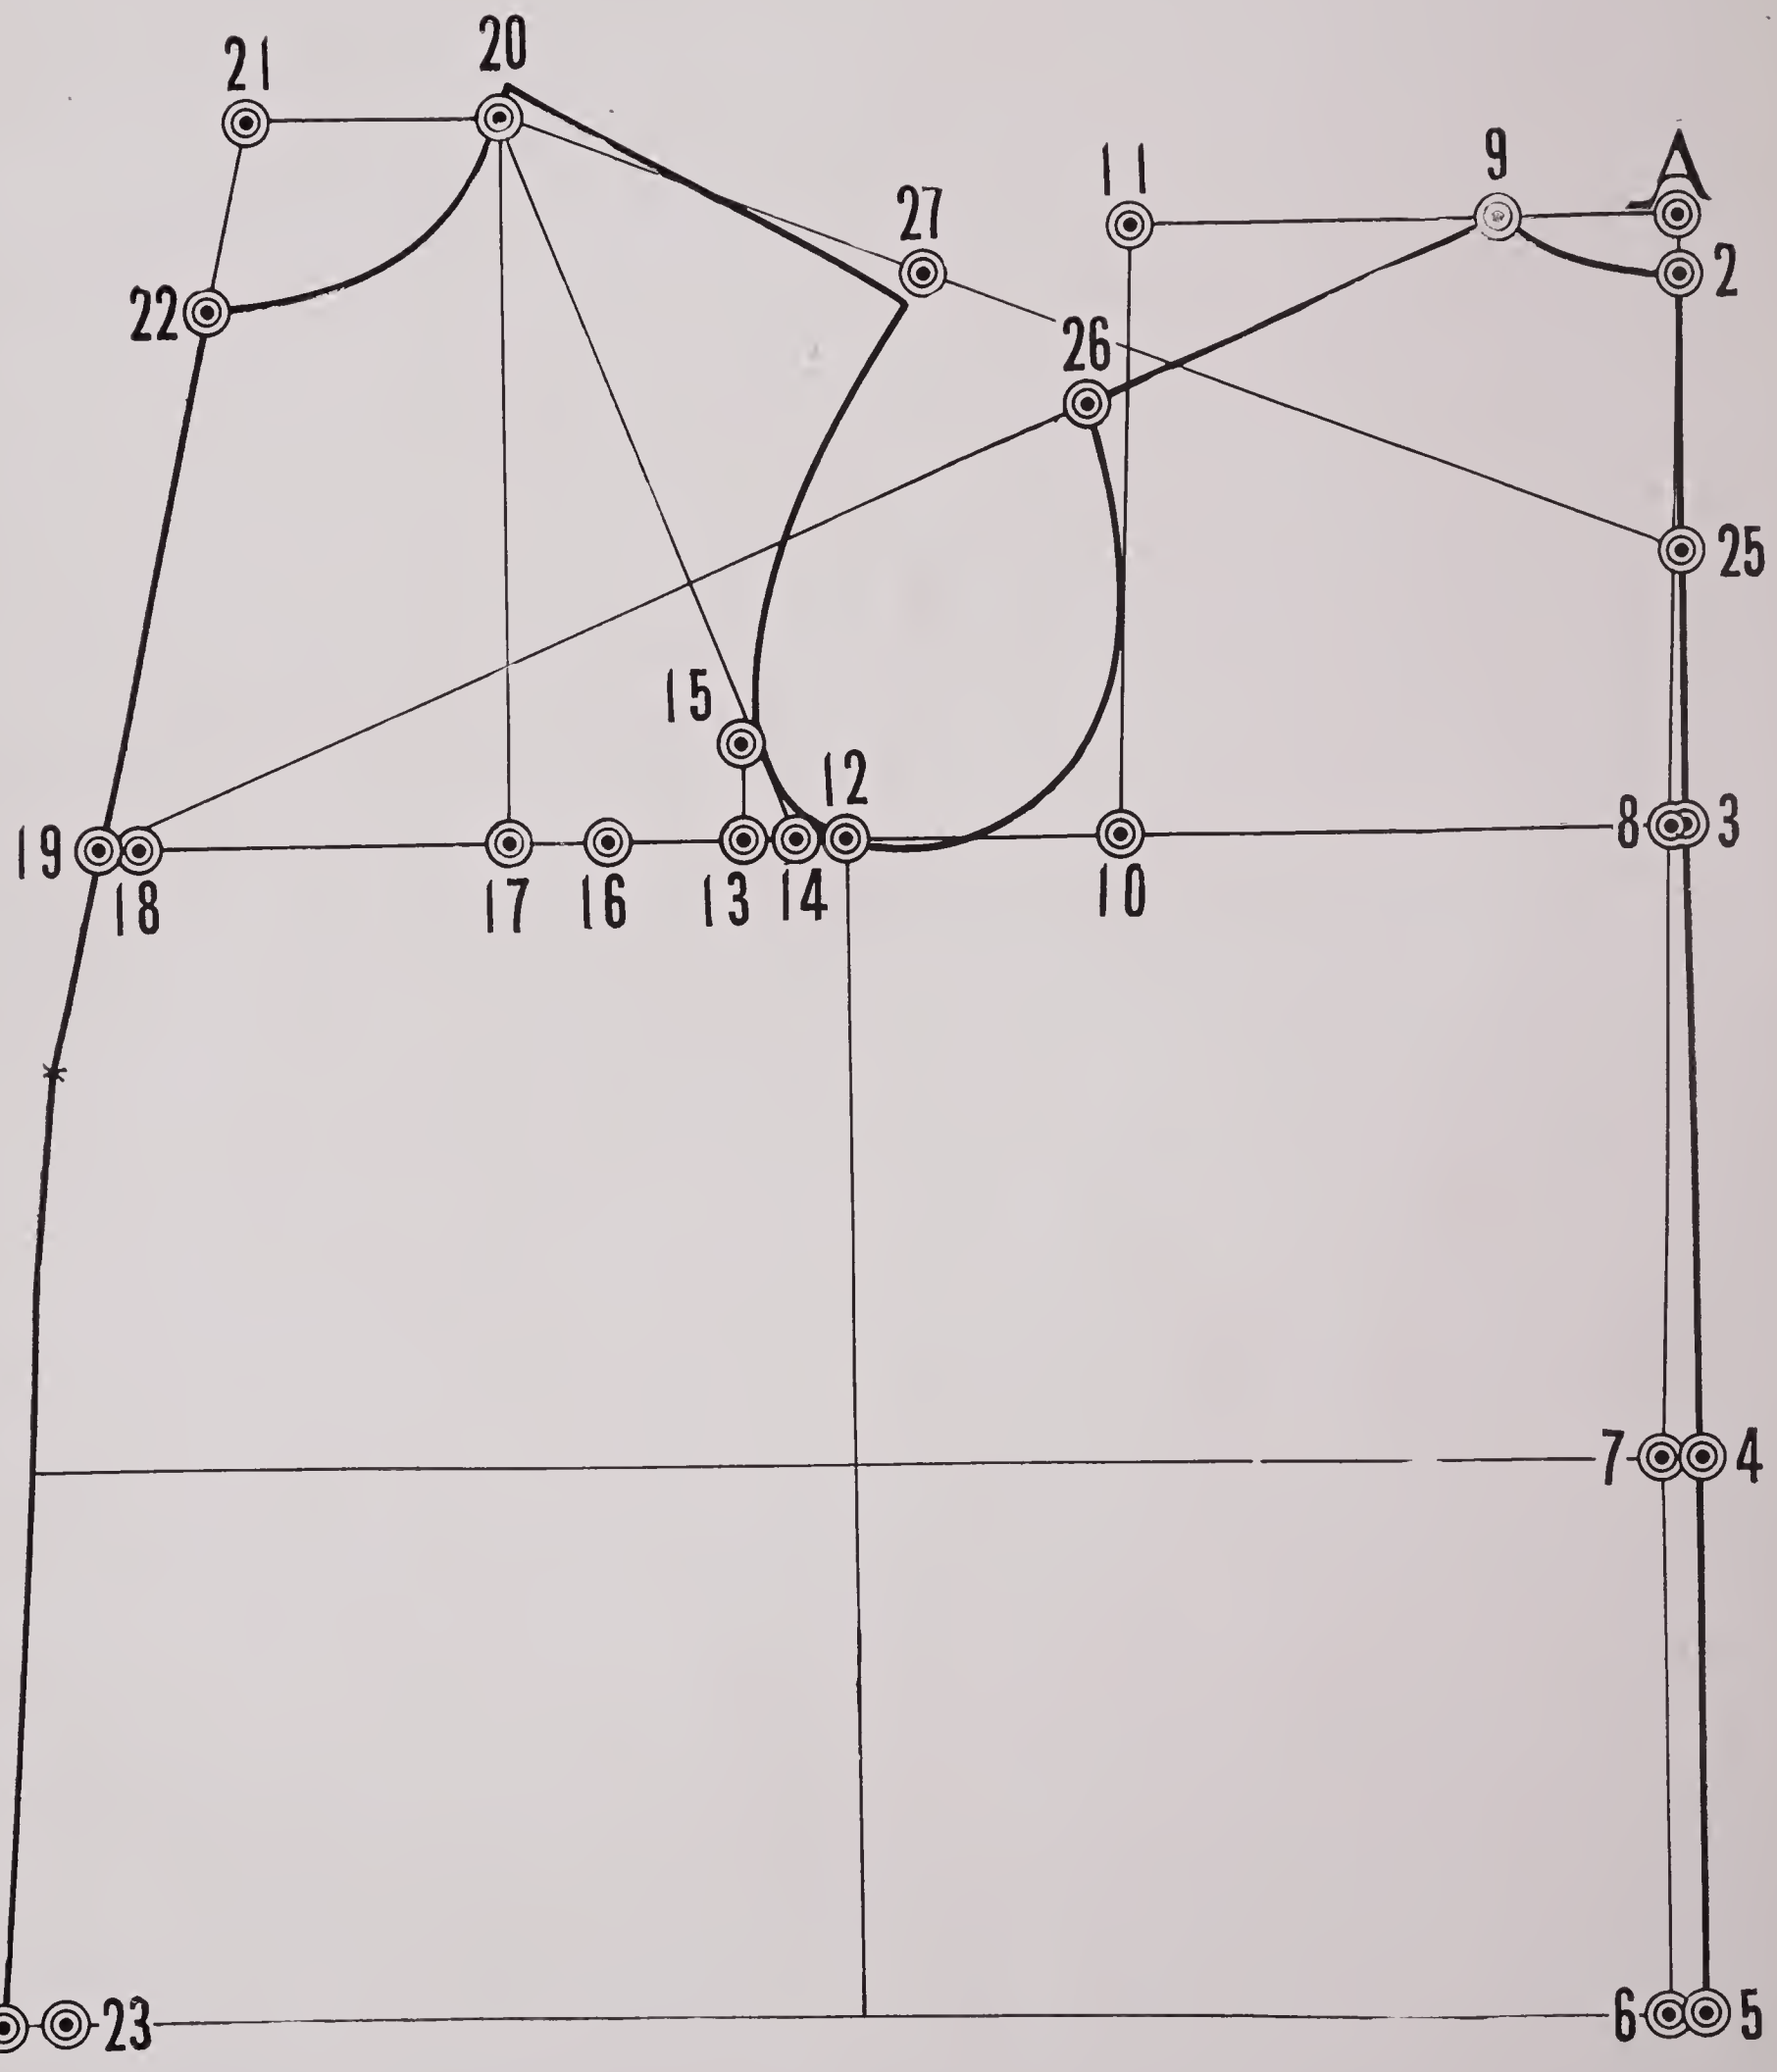
23 is a point gained by squaring from the bust line through a point about 3 inches below 19 marked by a cross mark.

24 from 23 is ¾ inch, draw a line from the cross mark to 24.

25 is a point half way between 2 and 3, connect 25 and 20.

26 from 9 is the shoulder width, which is 6 inches in this case; shape the back scye from 26 to 12, as per diagram.

27 from 20 is the shoulder width; shape the front scye from 27 to 12, and the front shoulder from a point ½ inch below 27 to a point ⅜ inch above 20.


21
20
27
11
9
A
22
2
26
25
15
12
19
18
17
16
13
14
10
8
3
7
4
24
23
6
5

BOX COAT

The feature of this garment, as the name indicates, is a loose hanging effect. Only a medium amount of looseness or fullness is allowed at the bottom of this coat, as illustrated in this diagram. If more fullness is desired, it is better obtained by manipulation, namely, by cutting out the pattern first as drafted, then cut through wherever fulness is desired and spread to the amount necessary.

To Draft

The foundation of this diagram and the measures of the same up to and including point 27 are the same as illustrated and described on the preceding page.

28 is a point halfway between 13 and 10, square downward.

29 is a point on the line squared down from 28.

30 from 29 is 1¼ inches, and

31 from 29 is the same; draw a line from 28 through 30 and from 28 through 31 downward, as illustrated.

The center back line as represented by the heavy line formation is drawn from 2 through a point ½ inch in back of 5, downward, and measure the length of the coat as desired.

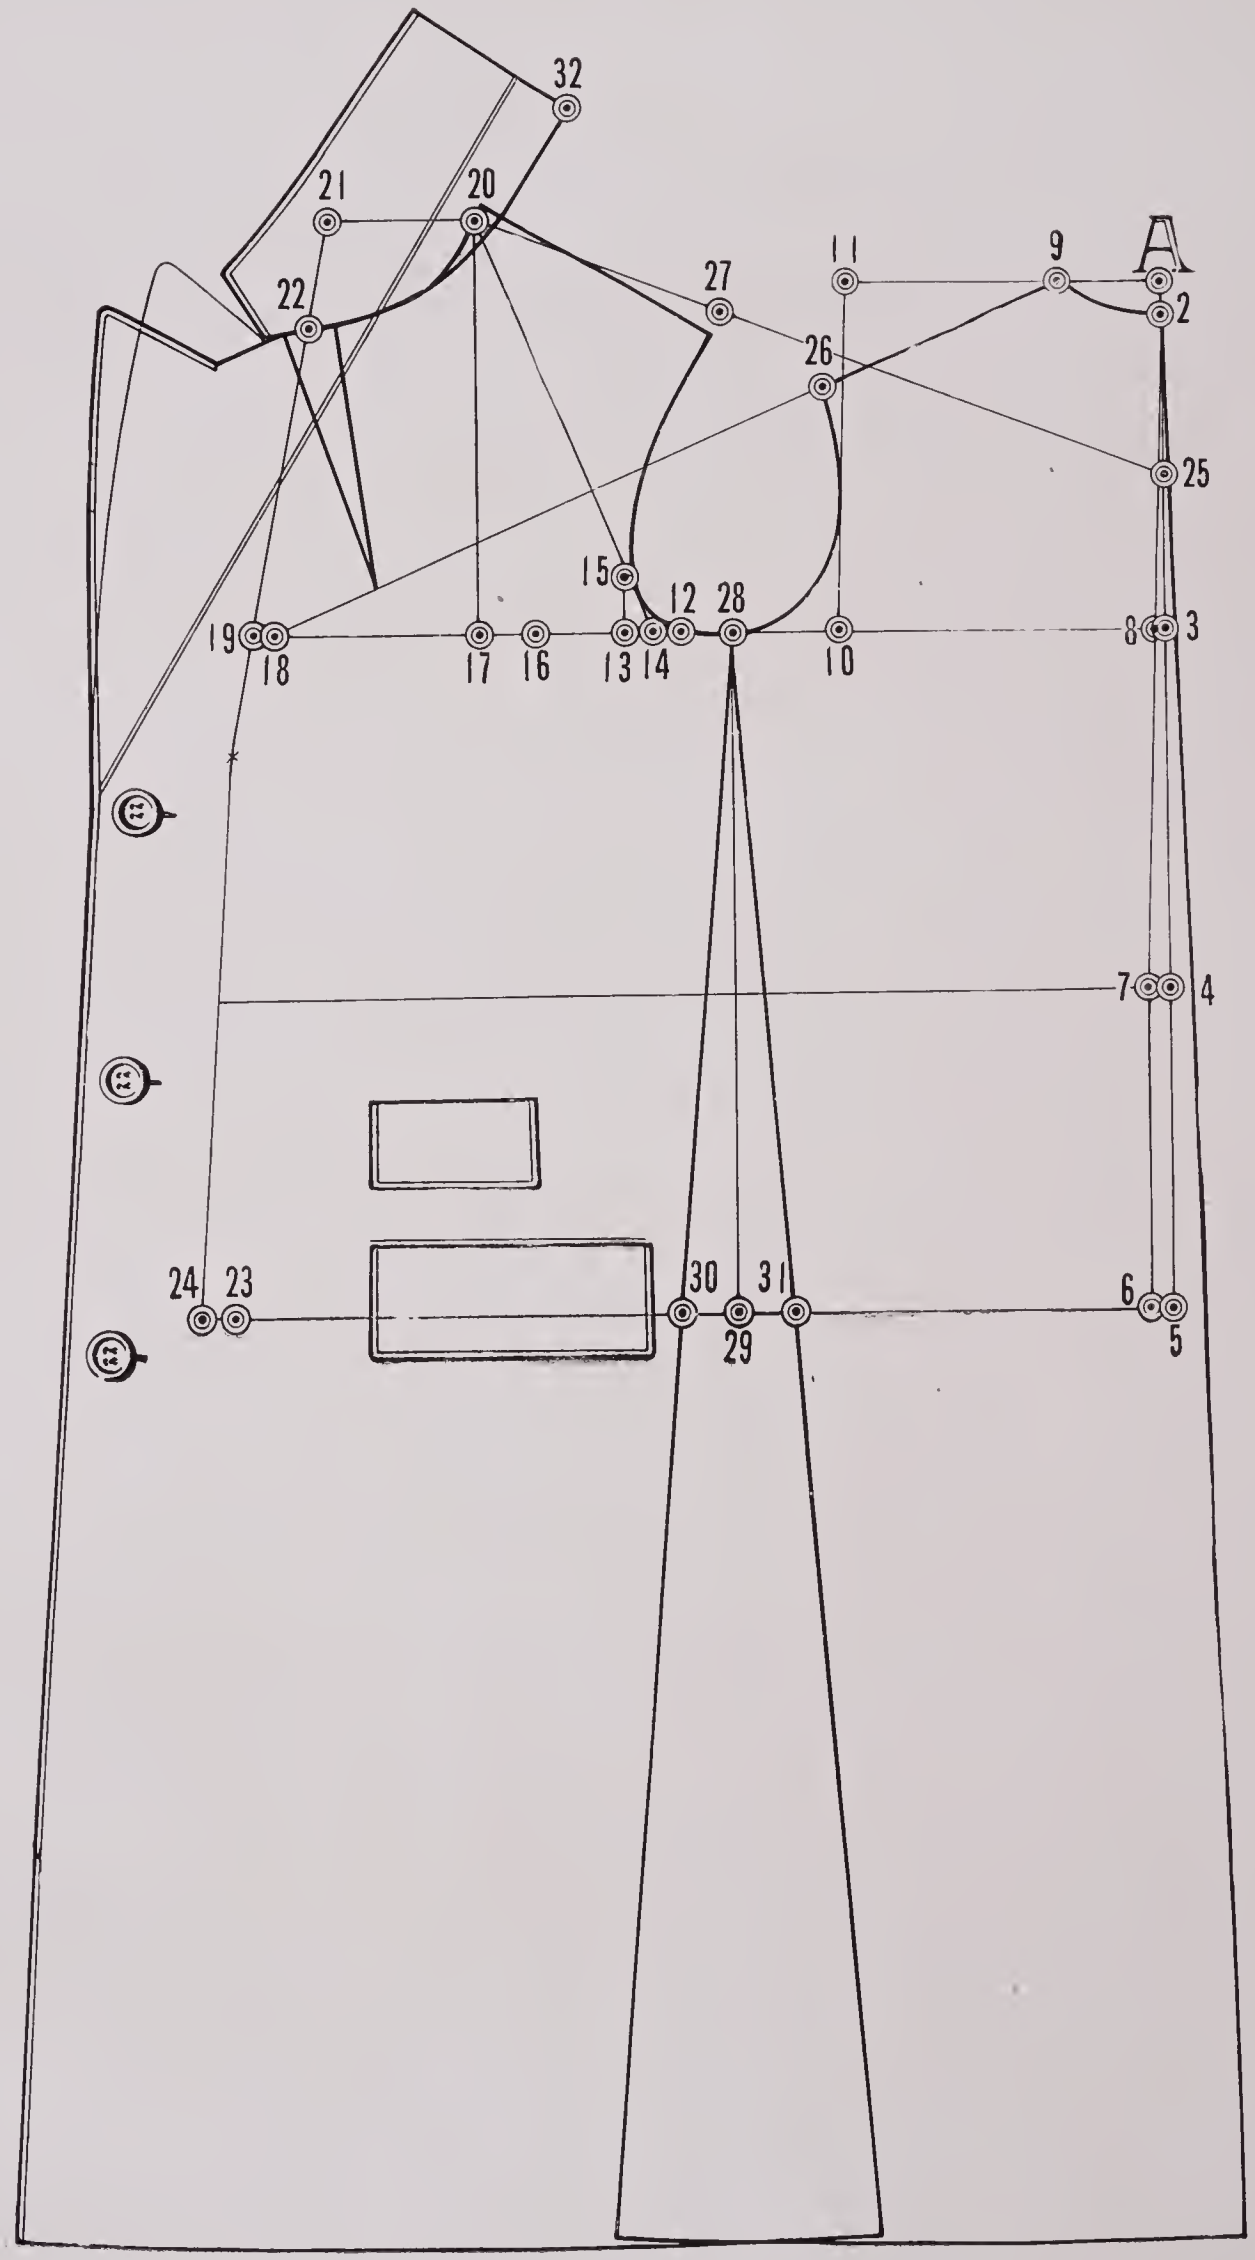
A lap of 3 inches is allowed to the front, although less may be taken if so desired.

All box coat fronts are long and require either to be pulled in with tape or to be shortened with a dart, which is more satisfactory in all cases. The dart, as illustrated, is 1¼ inches wide at 22 and is about 6 inches long. The lapel may be shaped to any size or style required. The crease line of the front and collar, as indicated by the double line formation, is drawn from a point about 3½ inches below the bust line through a point ¾ inch in front of 20 upward.

The neck line of the collar is drawn from a point half way between 20-22 through a point ½ inch in back of 20 upward.

32 from 20 is ¼ inch more than 9 from 2.

Shape the width style of the collar to harmonize with the shape of the lapel and finish as represented.


32
21
20
22
27
11
9
A
2
26
25
15
12
28
19
18
17
16
13
14
10
8
3
7
4
24
23
30
31
6
29
5

KIMONO BOX COAT

This coat is drafted the same way as the box coat on the previous page, the only different feature in this coat is, that the sleeves are drafted in one with the body part.

The foundation up to and including point 23 and the measures of the same are identical to the box coat foundation described on a previous page. The sleeves in this diagram are not drafted to the full length on account of lack of space.

To Draft

24 from 3 is ¼ of the line 3-2; draw a line from 19 through 24 backward; measure the length of the sleeve 29 inches in this case, from 19 through 24, square downward, and measure the width of the s'eeve about 7 inches.

25 from 21 is the same as 24 from A; draw a line from 9 through 25 forward, and measure the length and width of the sleeve the same as on the front part.

26 is a point halfway between 13 and 10, square downward.

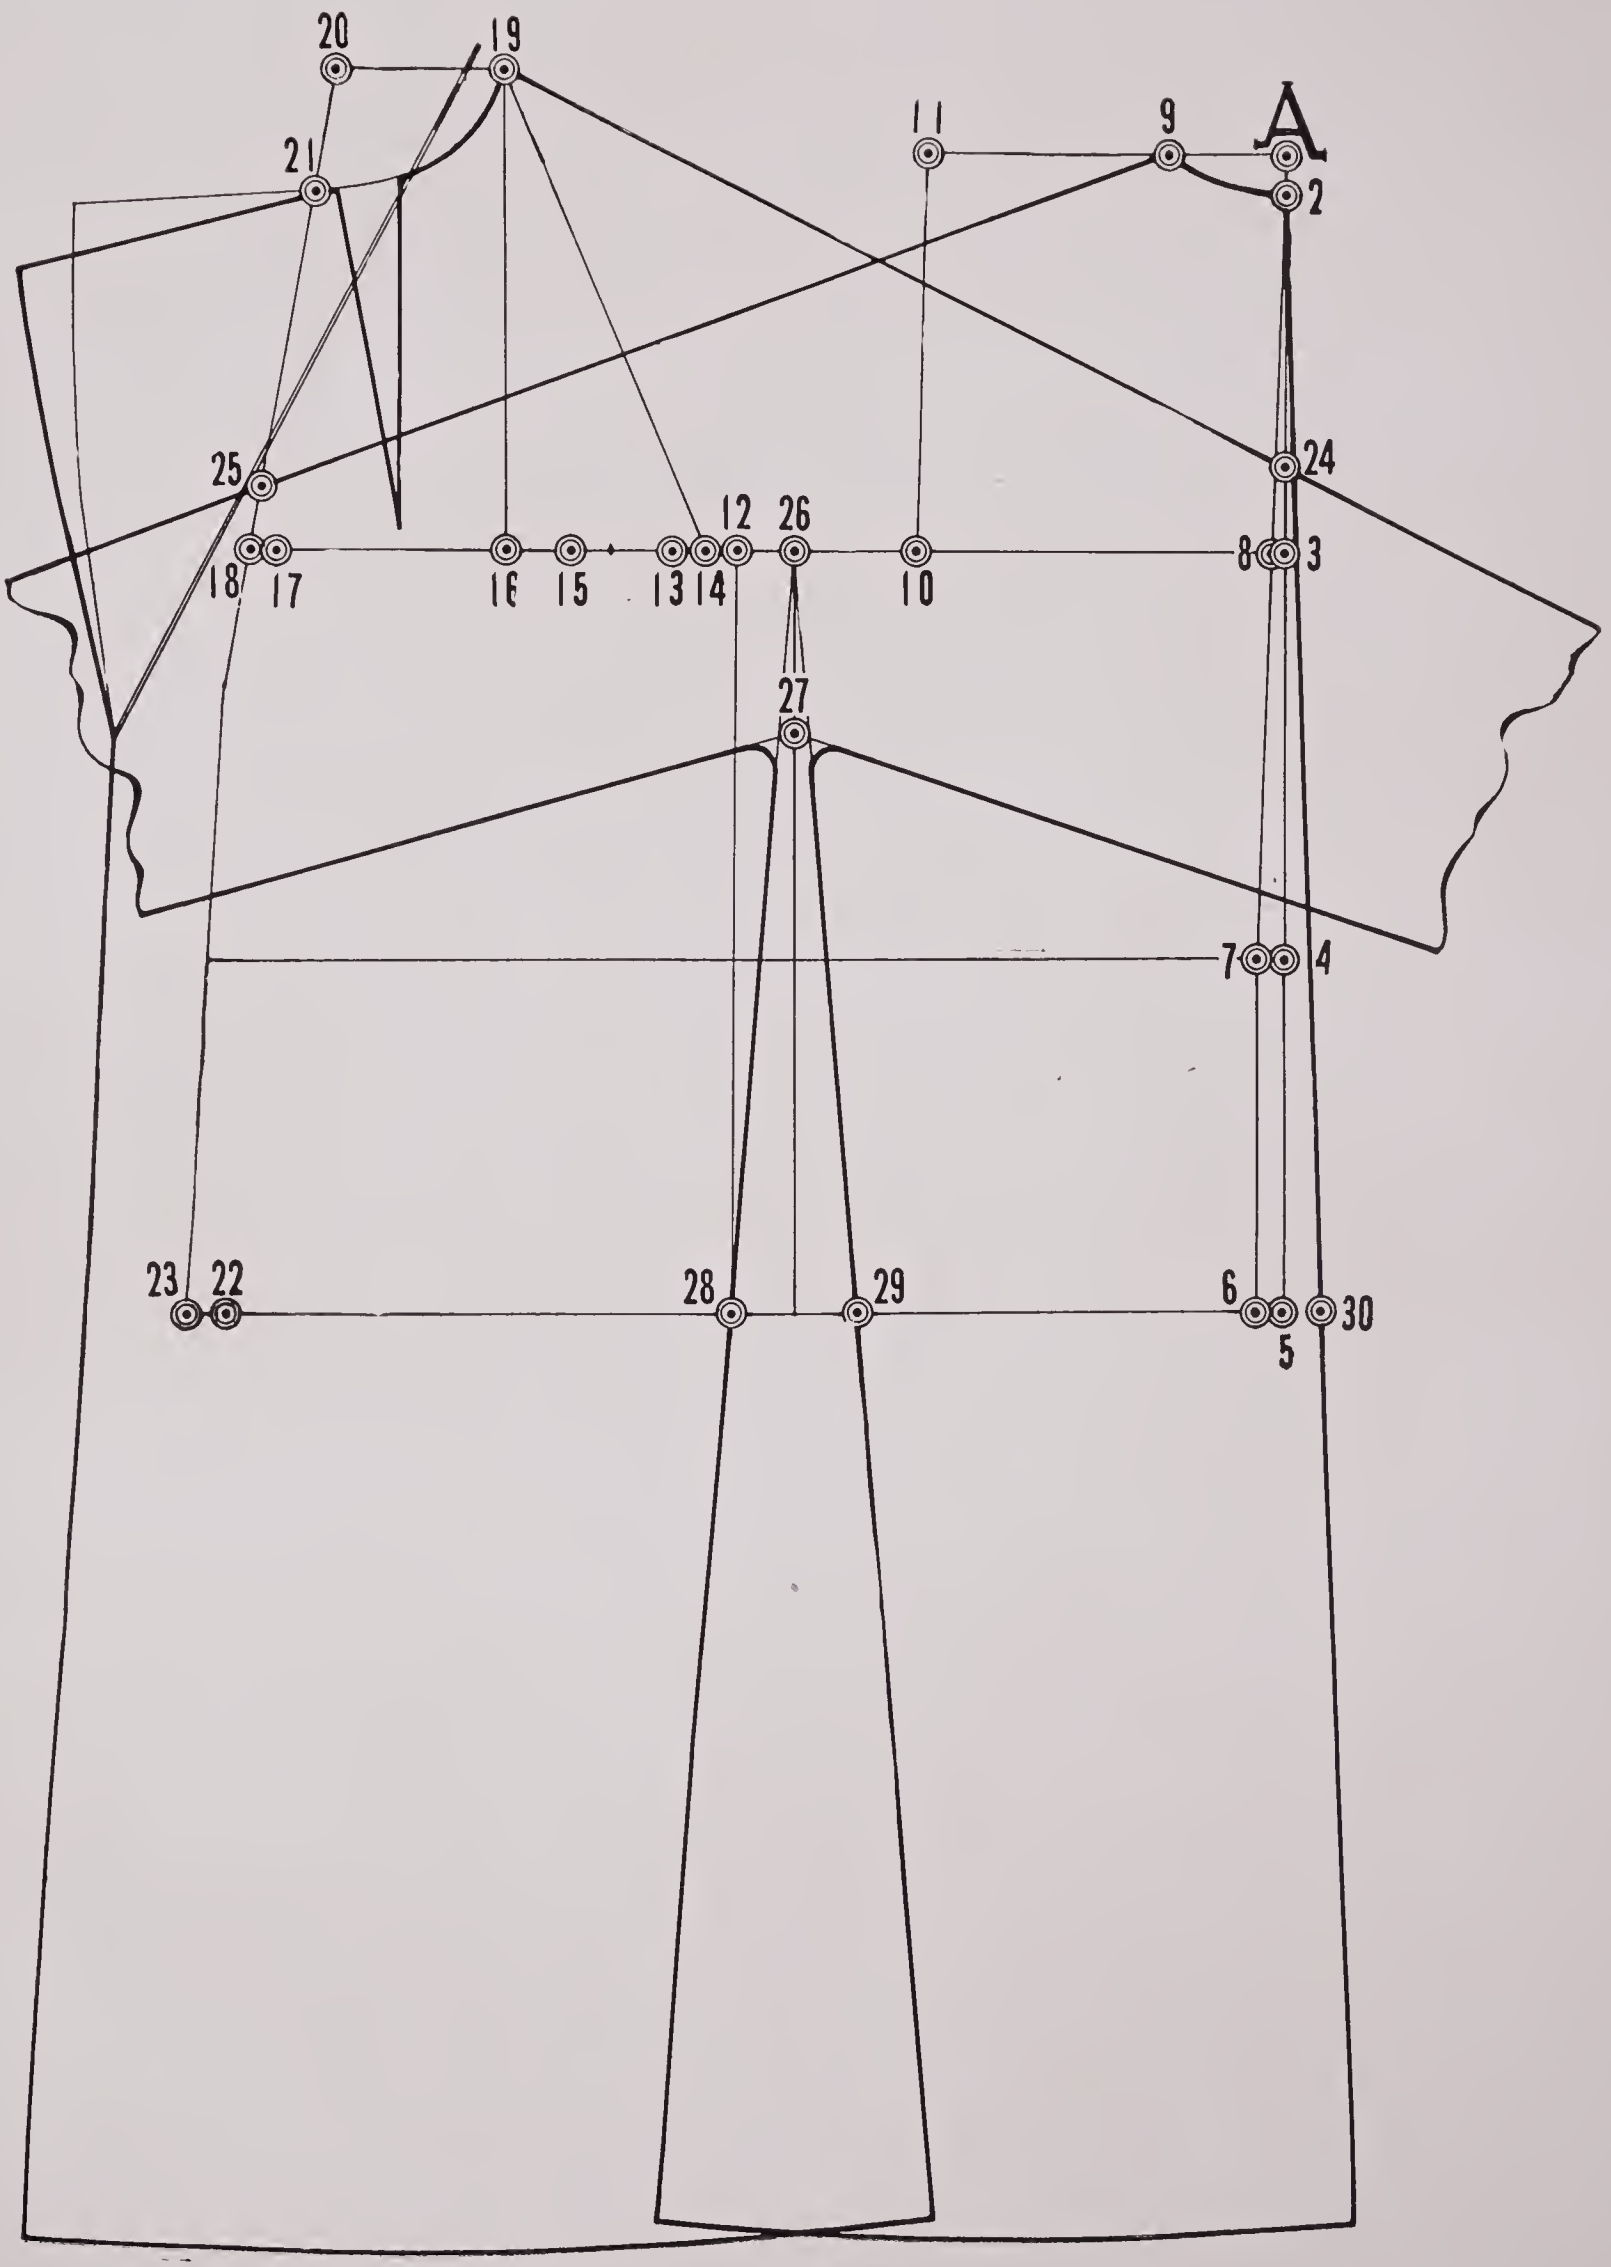
27 from 26 is 3½ inches, connect 27 with the width mark of both the front and back part of the sleeve.

28 from the line squared down from 26 is 1¼ inch, and

29 from the same line is the same. Draw a line from 26 through 28 and from 26 through 29 downward.

A lap of 2 inches is allowed to the front of this coat. The top of the front part is shaped for a shawl collar, although any style collar or lapel may be drafted to this coat. Finish as represented.

The cutting out of this coat is described on the pages following.


20
19
21
11
9
A
2
25
24
12
26
18
17
16
15
13
14
10
8
3
27
7
4
23
22
28
29
6
5
30

KIMONO BOX COAT

continued

To cut out the Kimono Coat, the following instructions are to be observed.

The back part of this coat with the sleeve of the same are to be traced and cut out on another paper, the back part is then pasted, with the back shoulder line 9-25 to the front shoulder line 19-24, as illustrated, the paper having first been cut away above the front shoulder line 19-24, leaving just enough to be able to paste the back part on to it. See the following page.

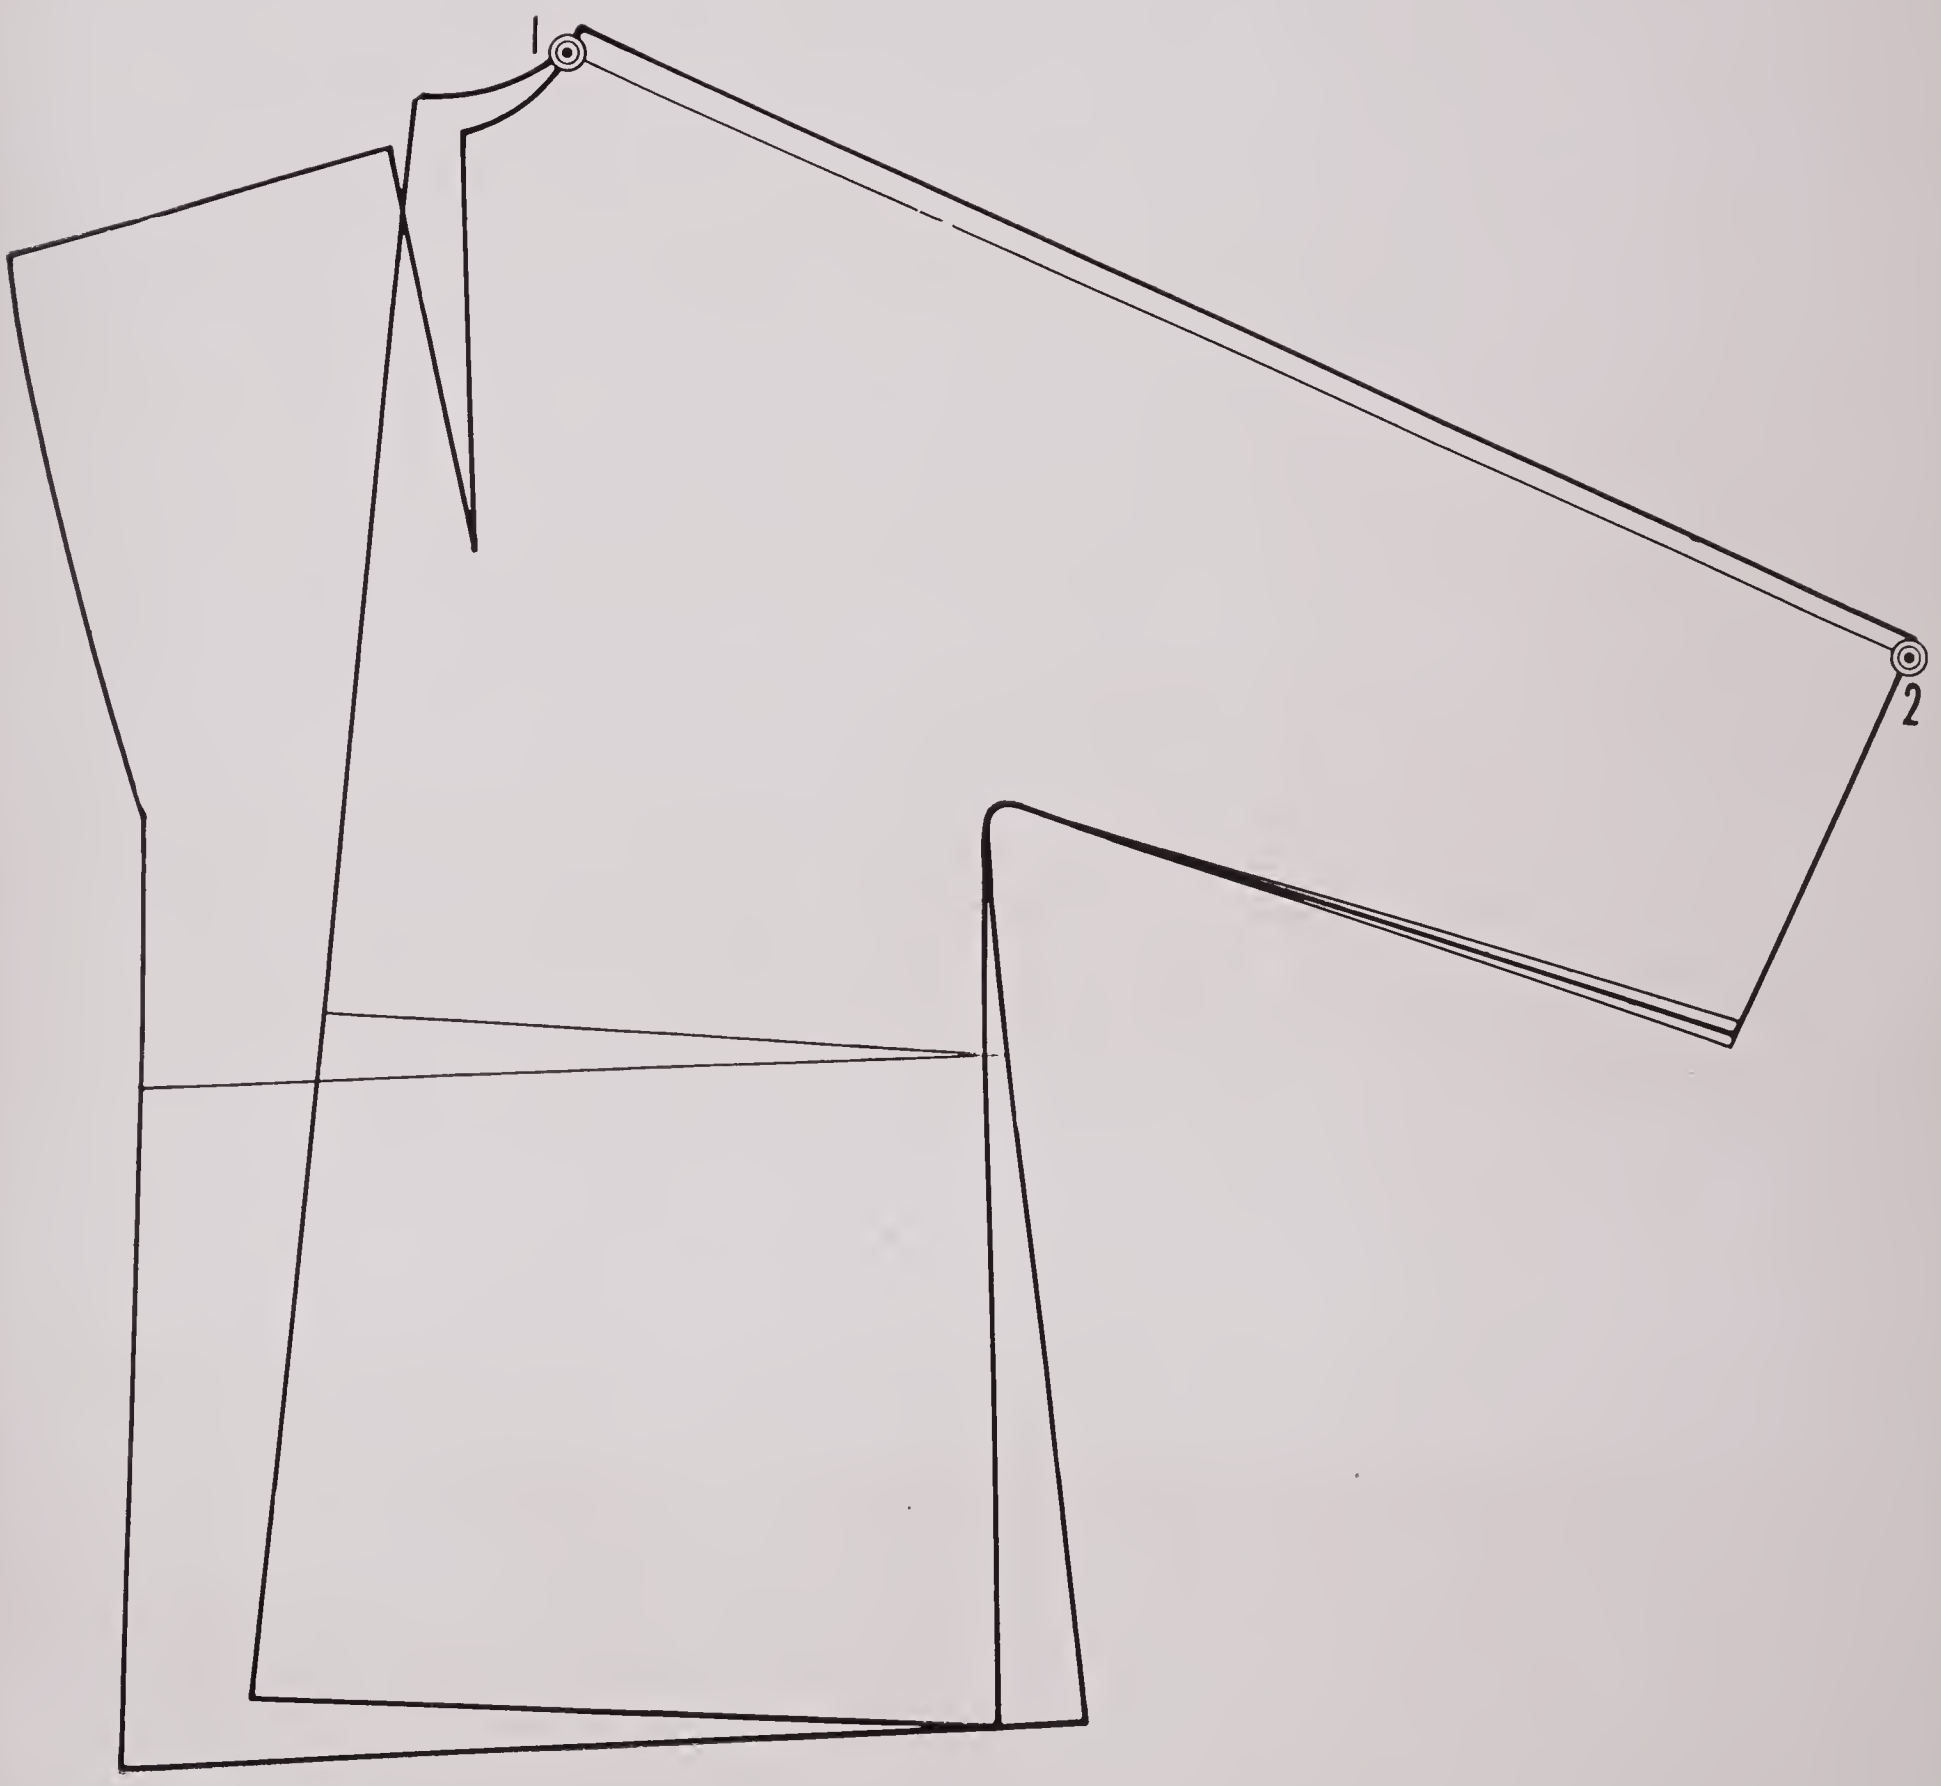


KIMONO BOX COAT

continued

After the back part has been pasted on to the front part, and before cutting out the complete pattern, the back part must be folded over on top of the front part so that they meet at point 27, as illustrated on this diagram.

The line between points 1 and 2 indicates the former shoulder line; the heavy line formation above line 1-2 indicates where the front is folded over, and at the same time the shoulder seam, if any is desired. The thin lines at the under arm indicate the relative position of the sleeve lines of the front and back parts, the higher line being front line in all cases. The heavy line formation half way between the two lines illustrates how the sleeve is to be evened out. Cut the remainder of the front out on the regular front lines of the diagram.


1
2

SET IN KIMONO SLEEVE

This sleeve, as the name indicates, is a kimono effect and is manipulated exclusively from a box kimono pattern.

A box kimono is first drafted to any size or measure required, cut out and the back part folded over on top of the front part as illustrated in the accompanying diagram.

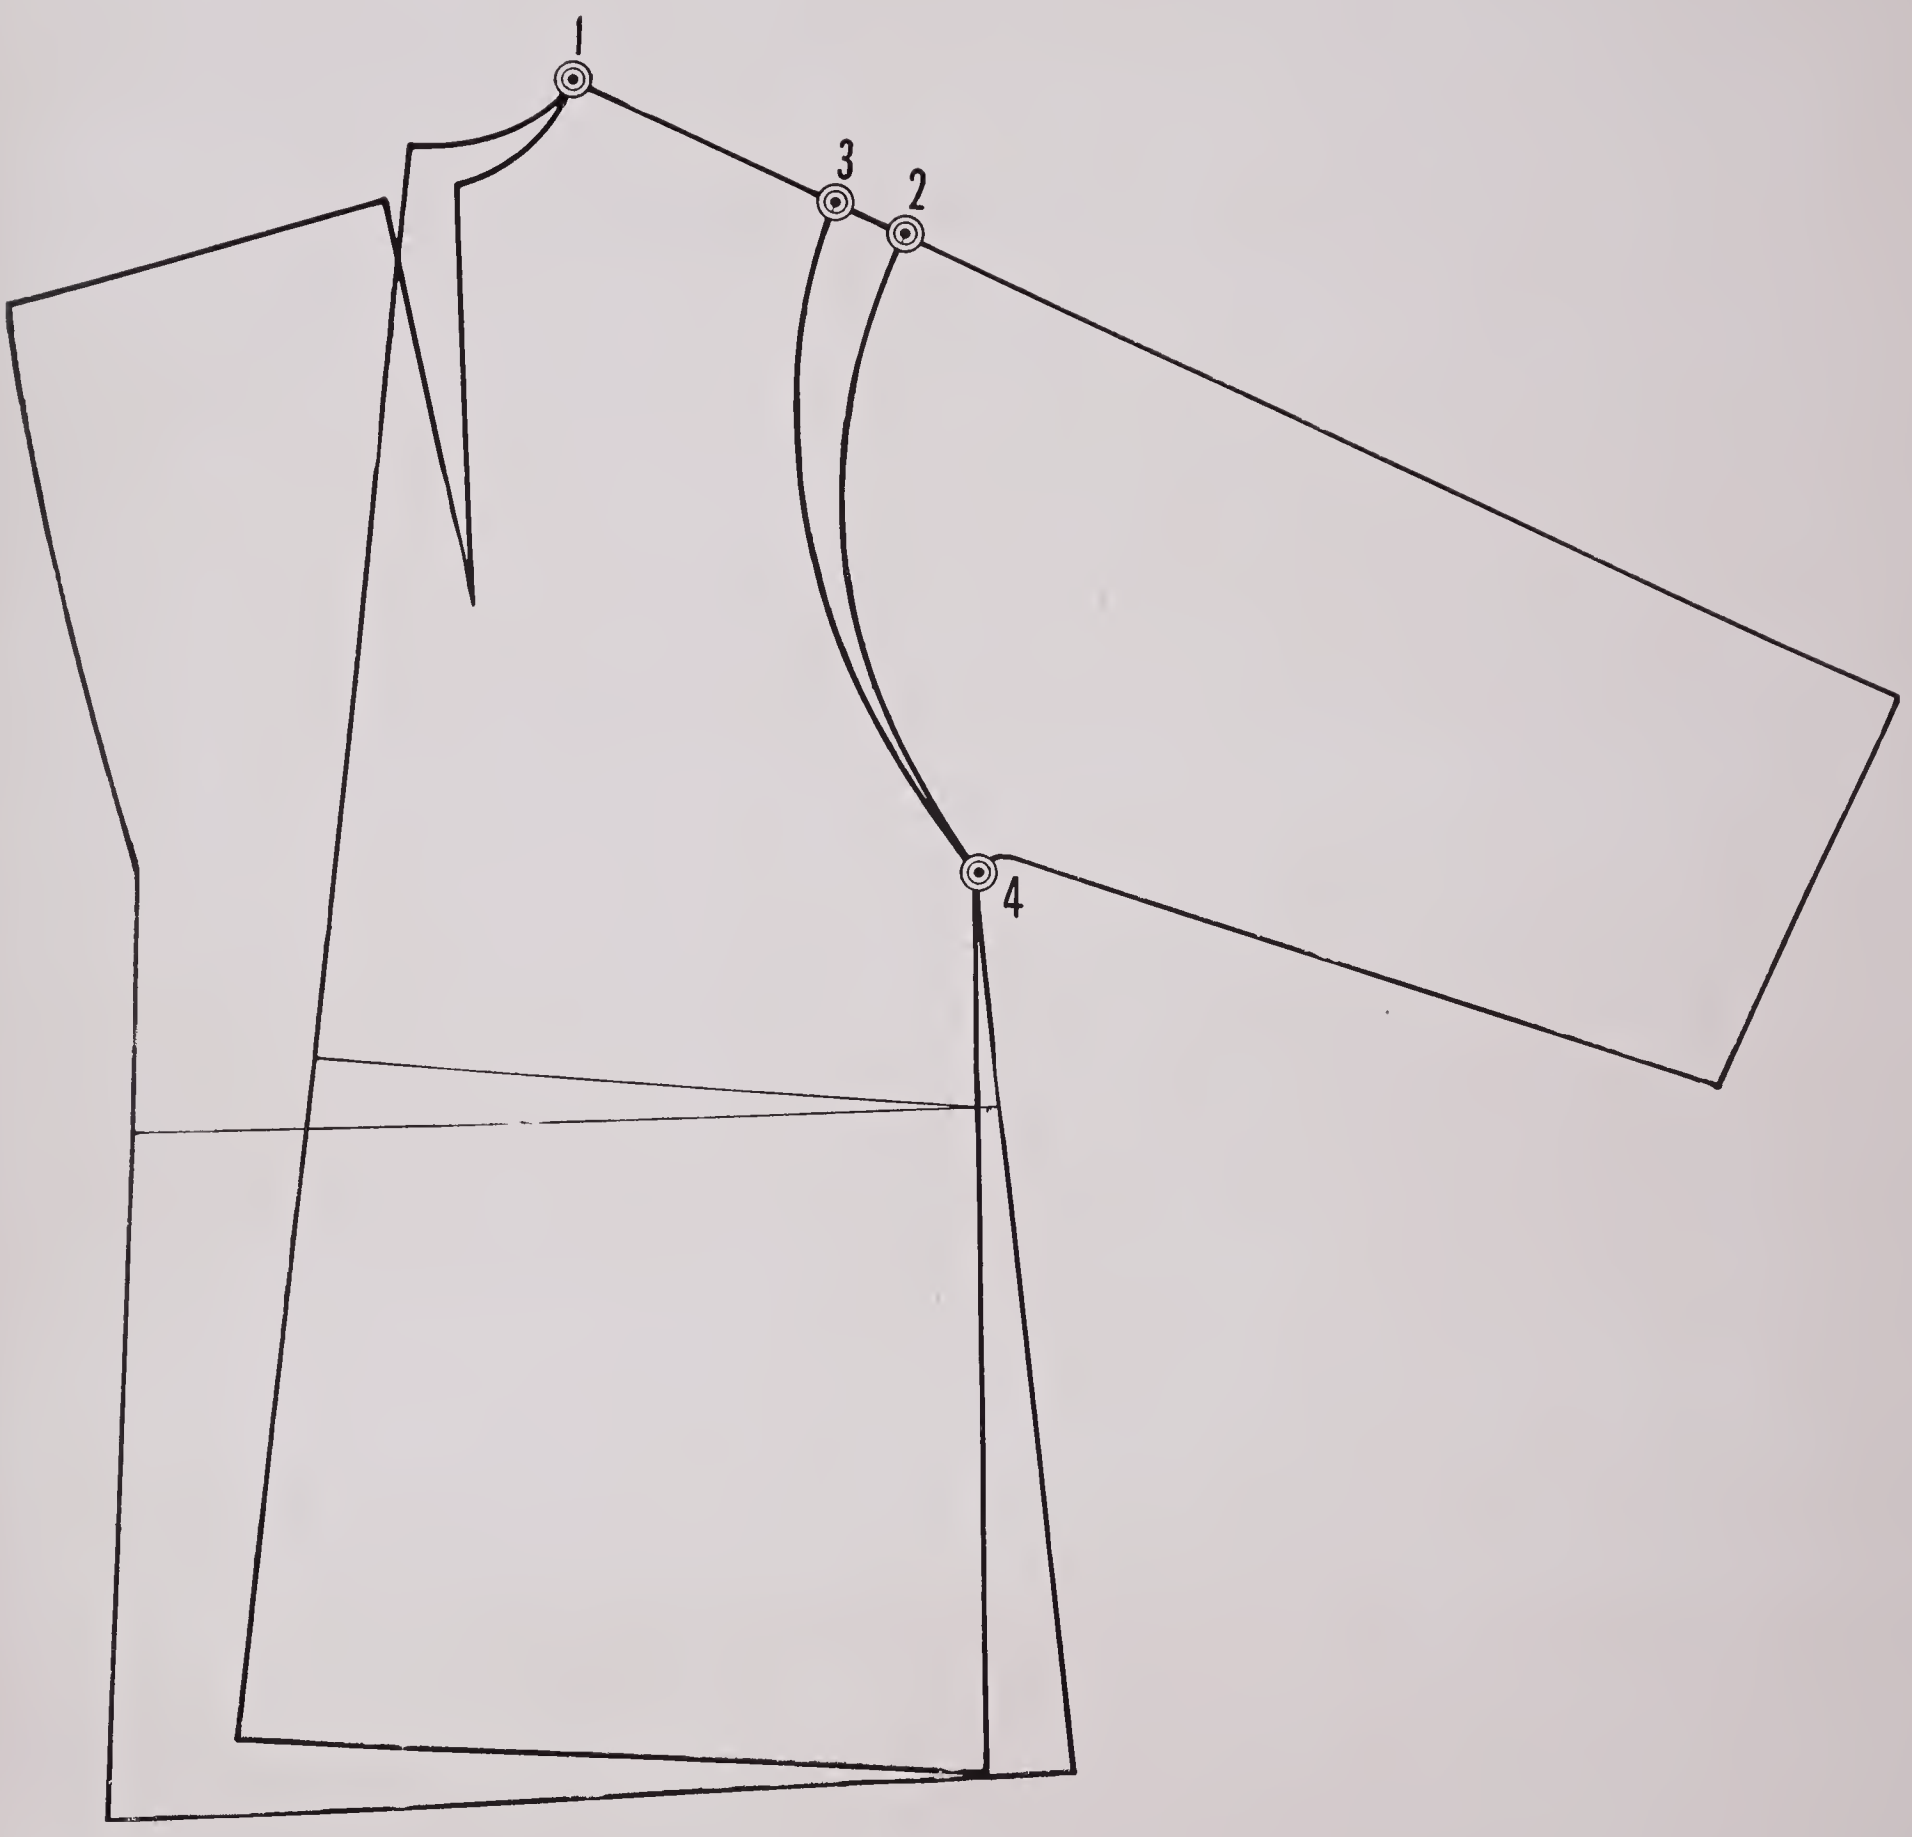
1 is the neck point of the front and back parts.

2 from 1 is the shoulder width, 6 inches in this case.

3 from 2 is 1¼ inch.

4 is a point on the underarm seam; shape the arm scye from 2 to 4 and the sleeve line from 3 to 4 as represented.

A piece of paper, large enough for a sleeve, is then taken and folded in the center. Lay the pattern with the line 1-2 to the fold of the paper and trace the sleeve line 3-4, this done, cut out the arm scye 2-4. The drafting of the sleeve itself is illustrated and described on the next page.


1
3
2
4

SET IN KIMONO SLEEVE

continued

After the arm scye is cut out, lay the pattern with the points 2-4 on the tracing line and measure.

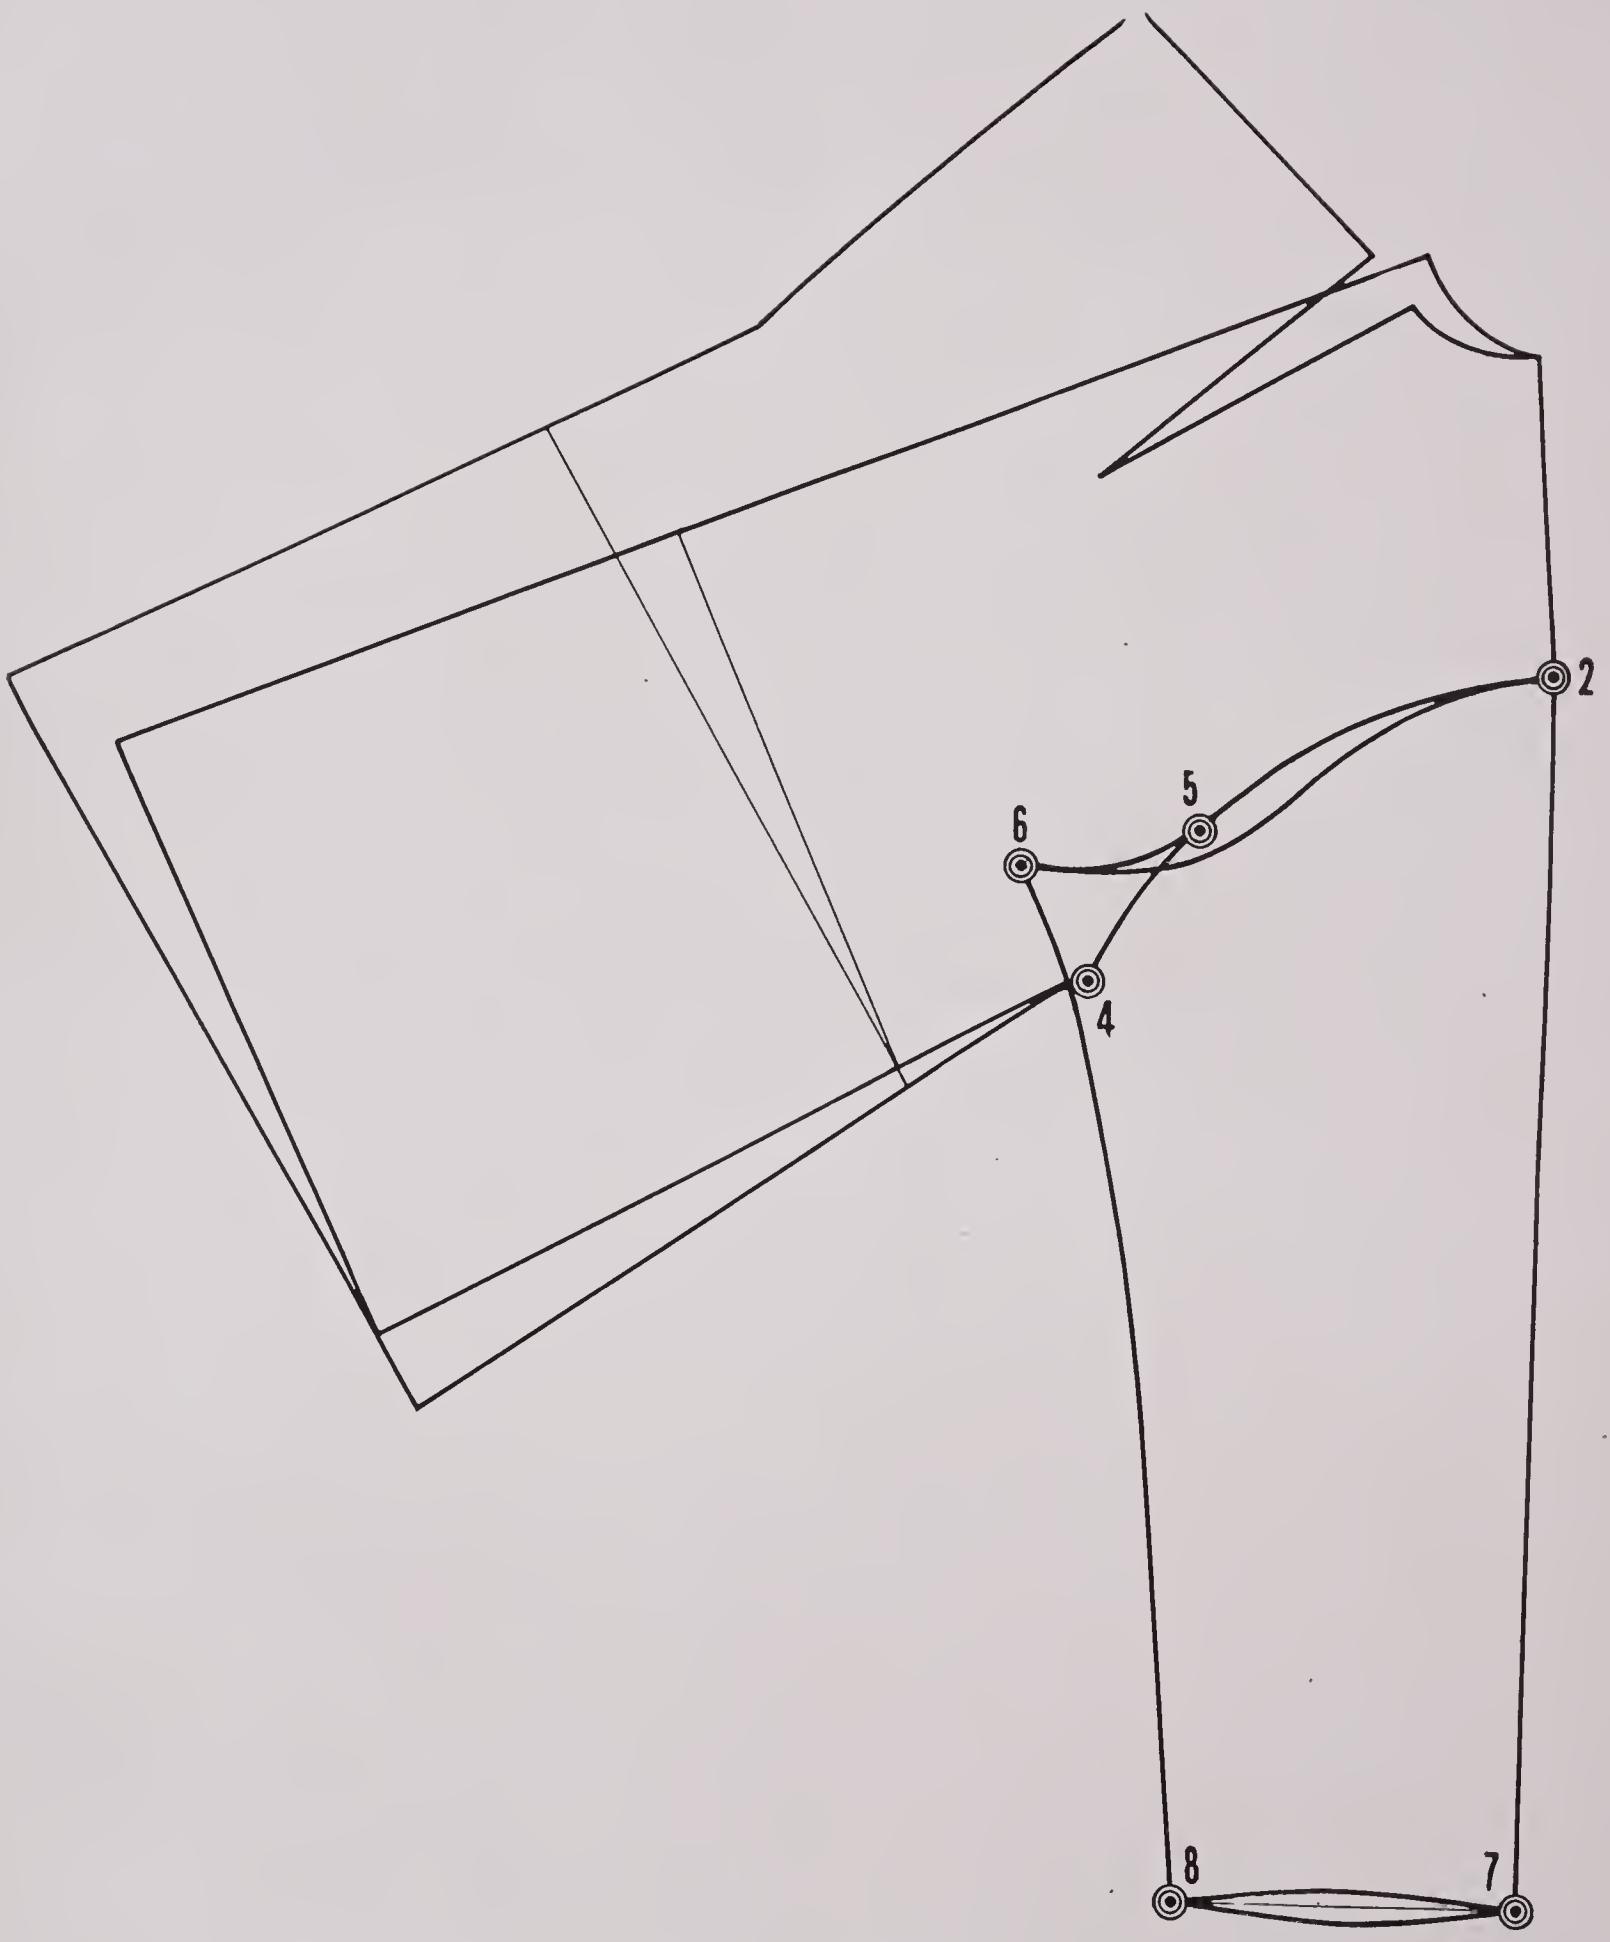
5 from 4 is 3½ inches; mark this point on the arm scye as well as on tracing line and point 4 on the tracing line. This done, remove the front and back parts from the sleeve draft.

6 from 4 is 2½ inches and measures the same from 5 as 5 from 4; shape the back part of the sleeve from 2 through 5 to 6 and the front part from 2 through a point ½ inch below 5 to 6 as represented.

7 from 2 is the sleeve length less the shoulder width, square out.

8 from **7** is 6½ inches; shape the bottom of the back part of the sleeve about ⅜ inch below the squared line, and the front part ⅜ inch above the straight line.

Shape the under arm seam from 6 to 8 as illustrated and cut out.


2
5
6
4
8
7

BALMACAAN SLEEVE

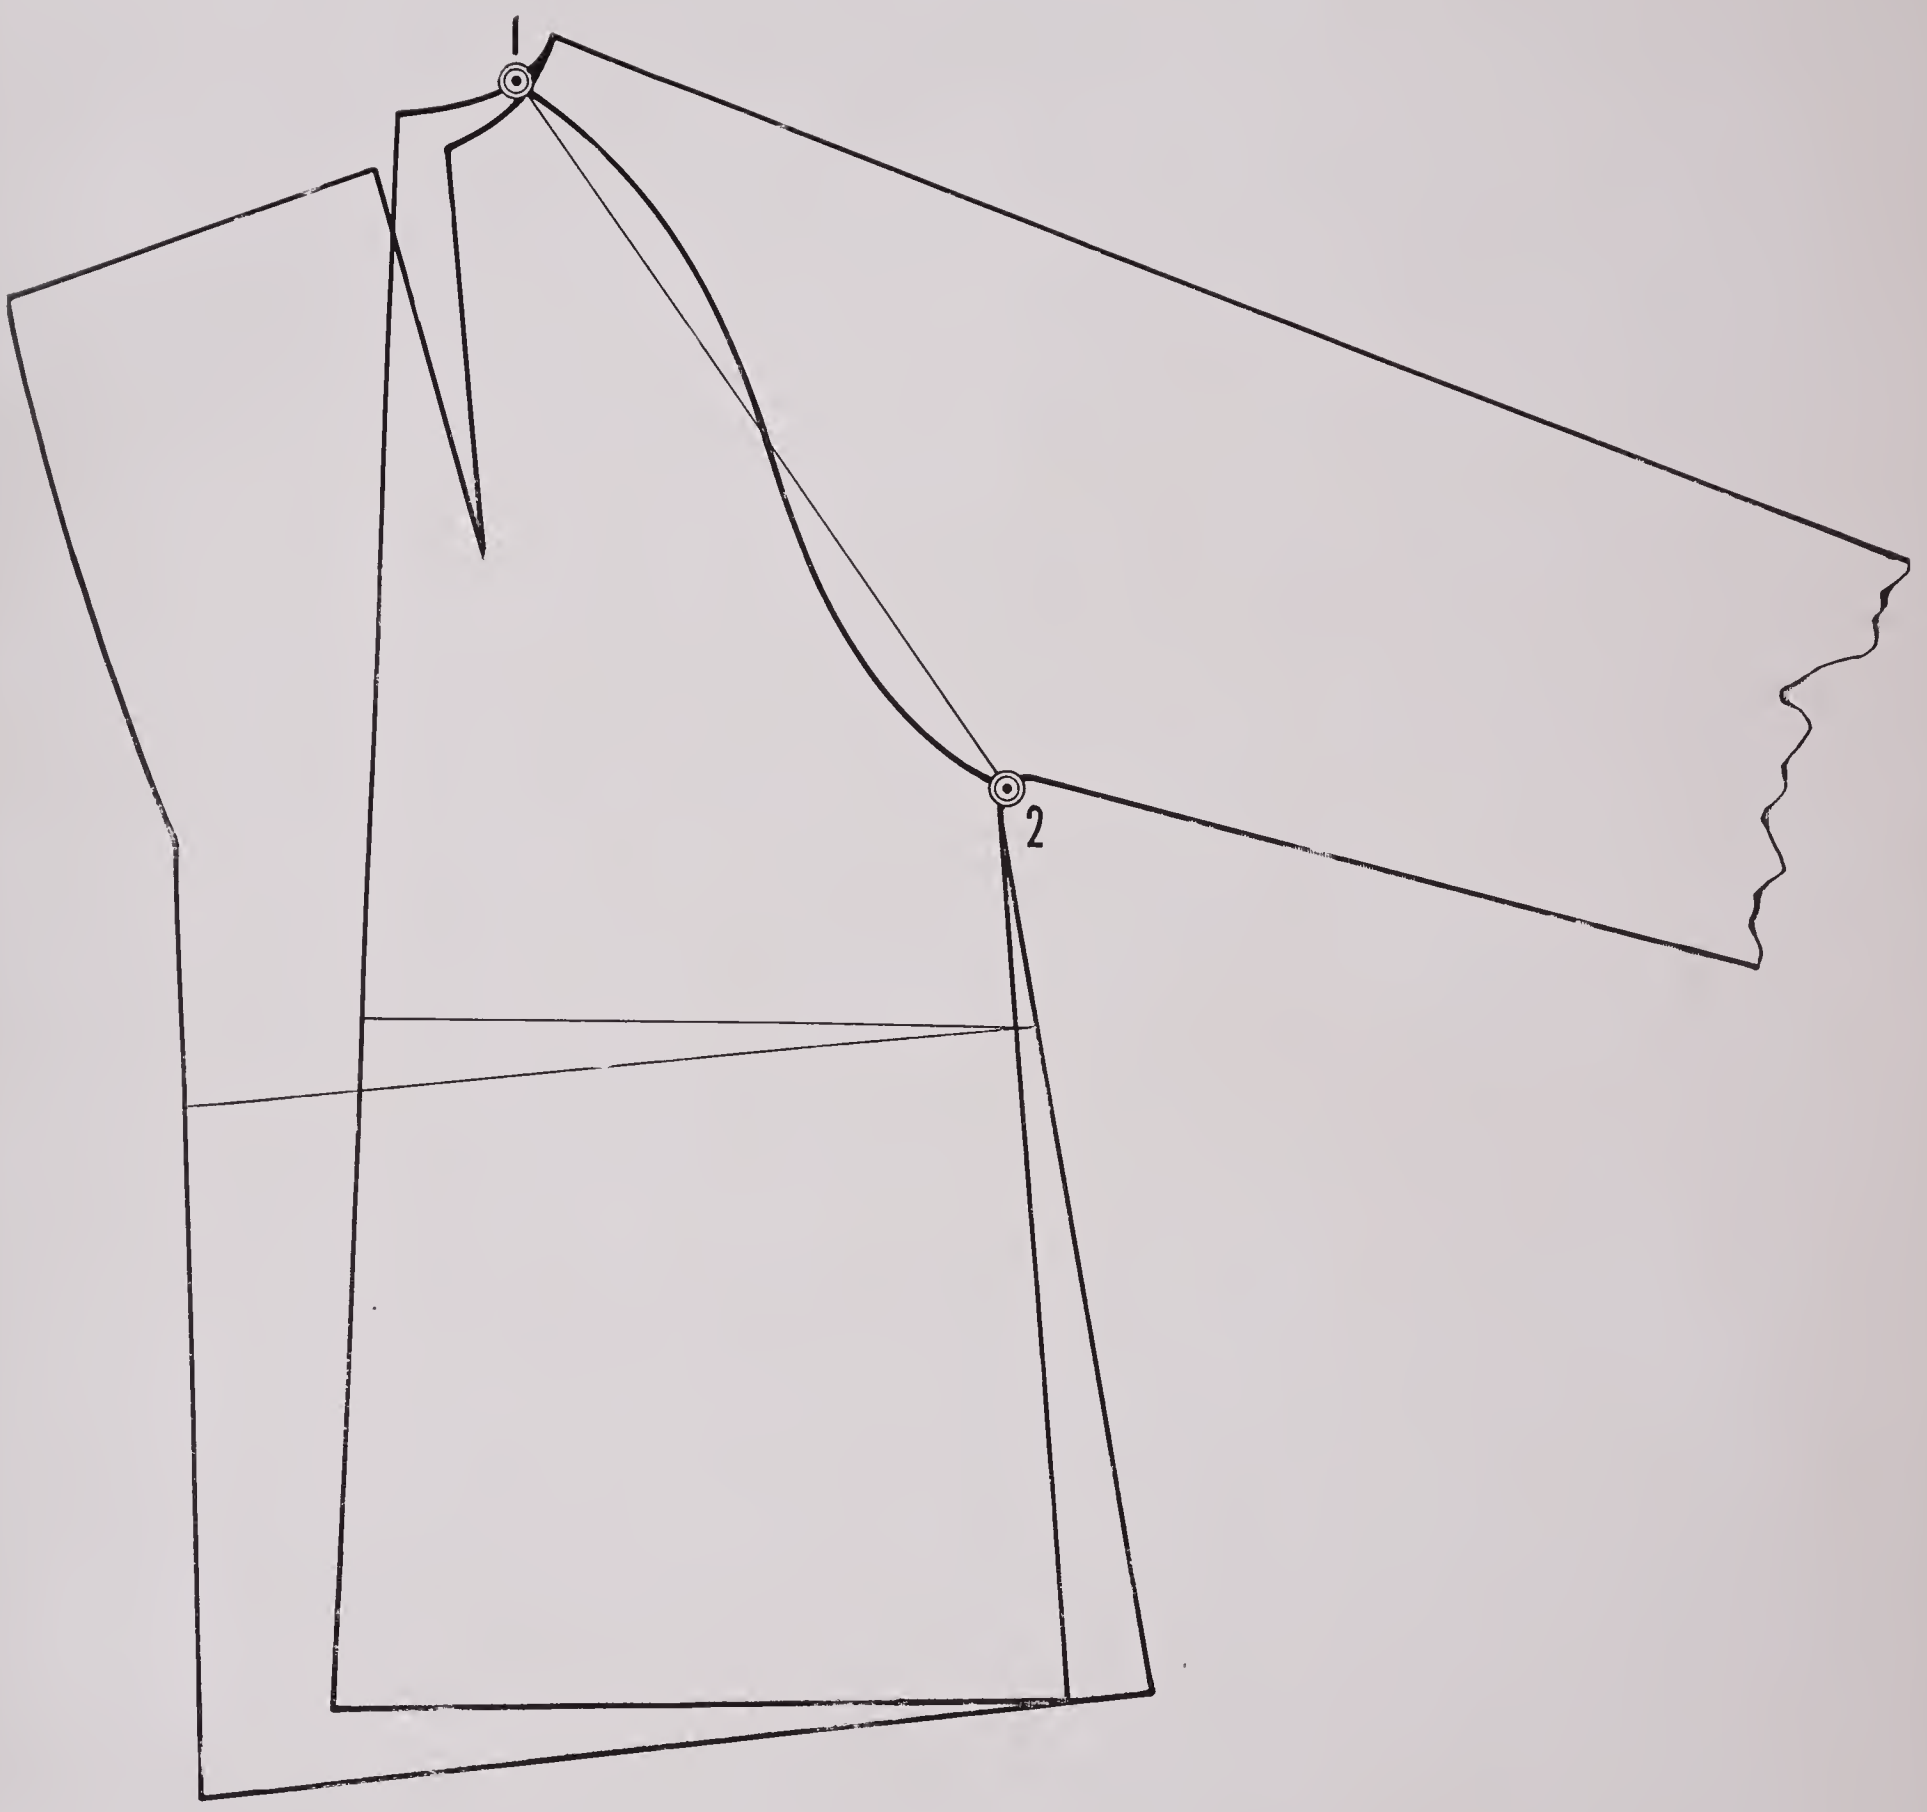
This sleeve, as the "Set in Kimono Sleeve," on the previous page, is manipulated from the box kimono block pattern.

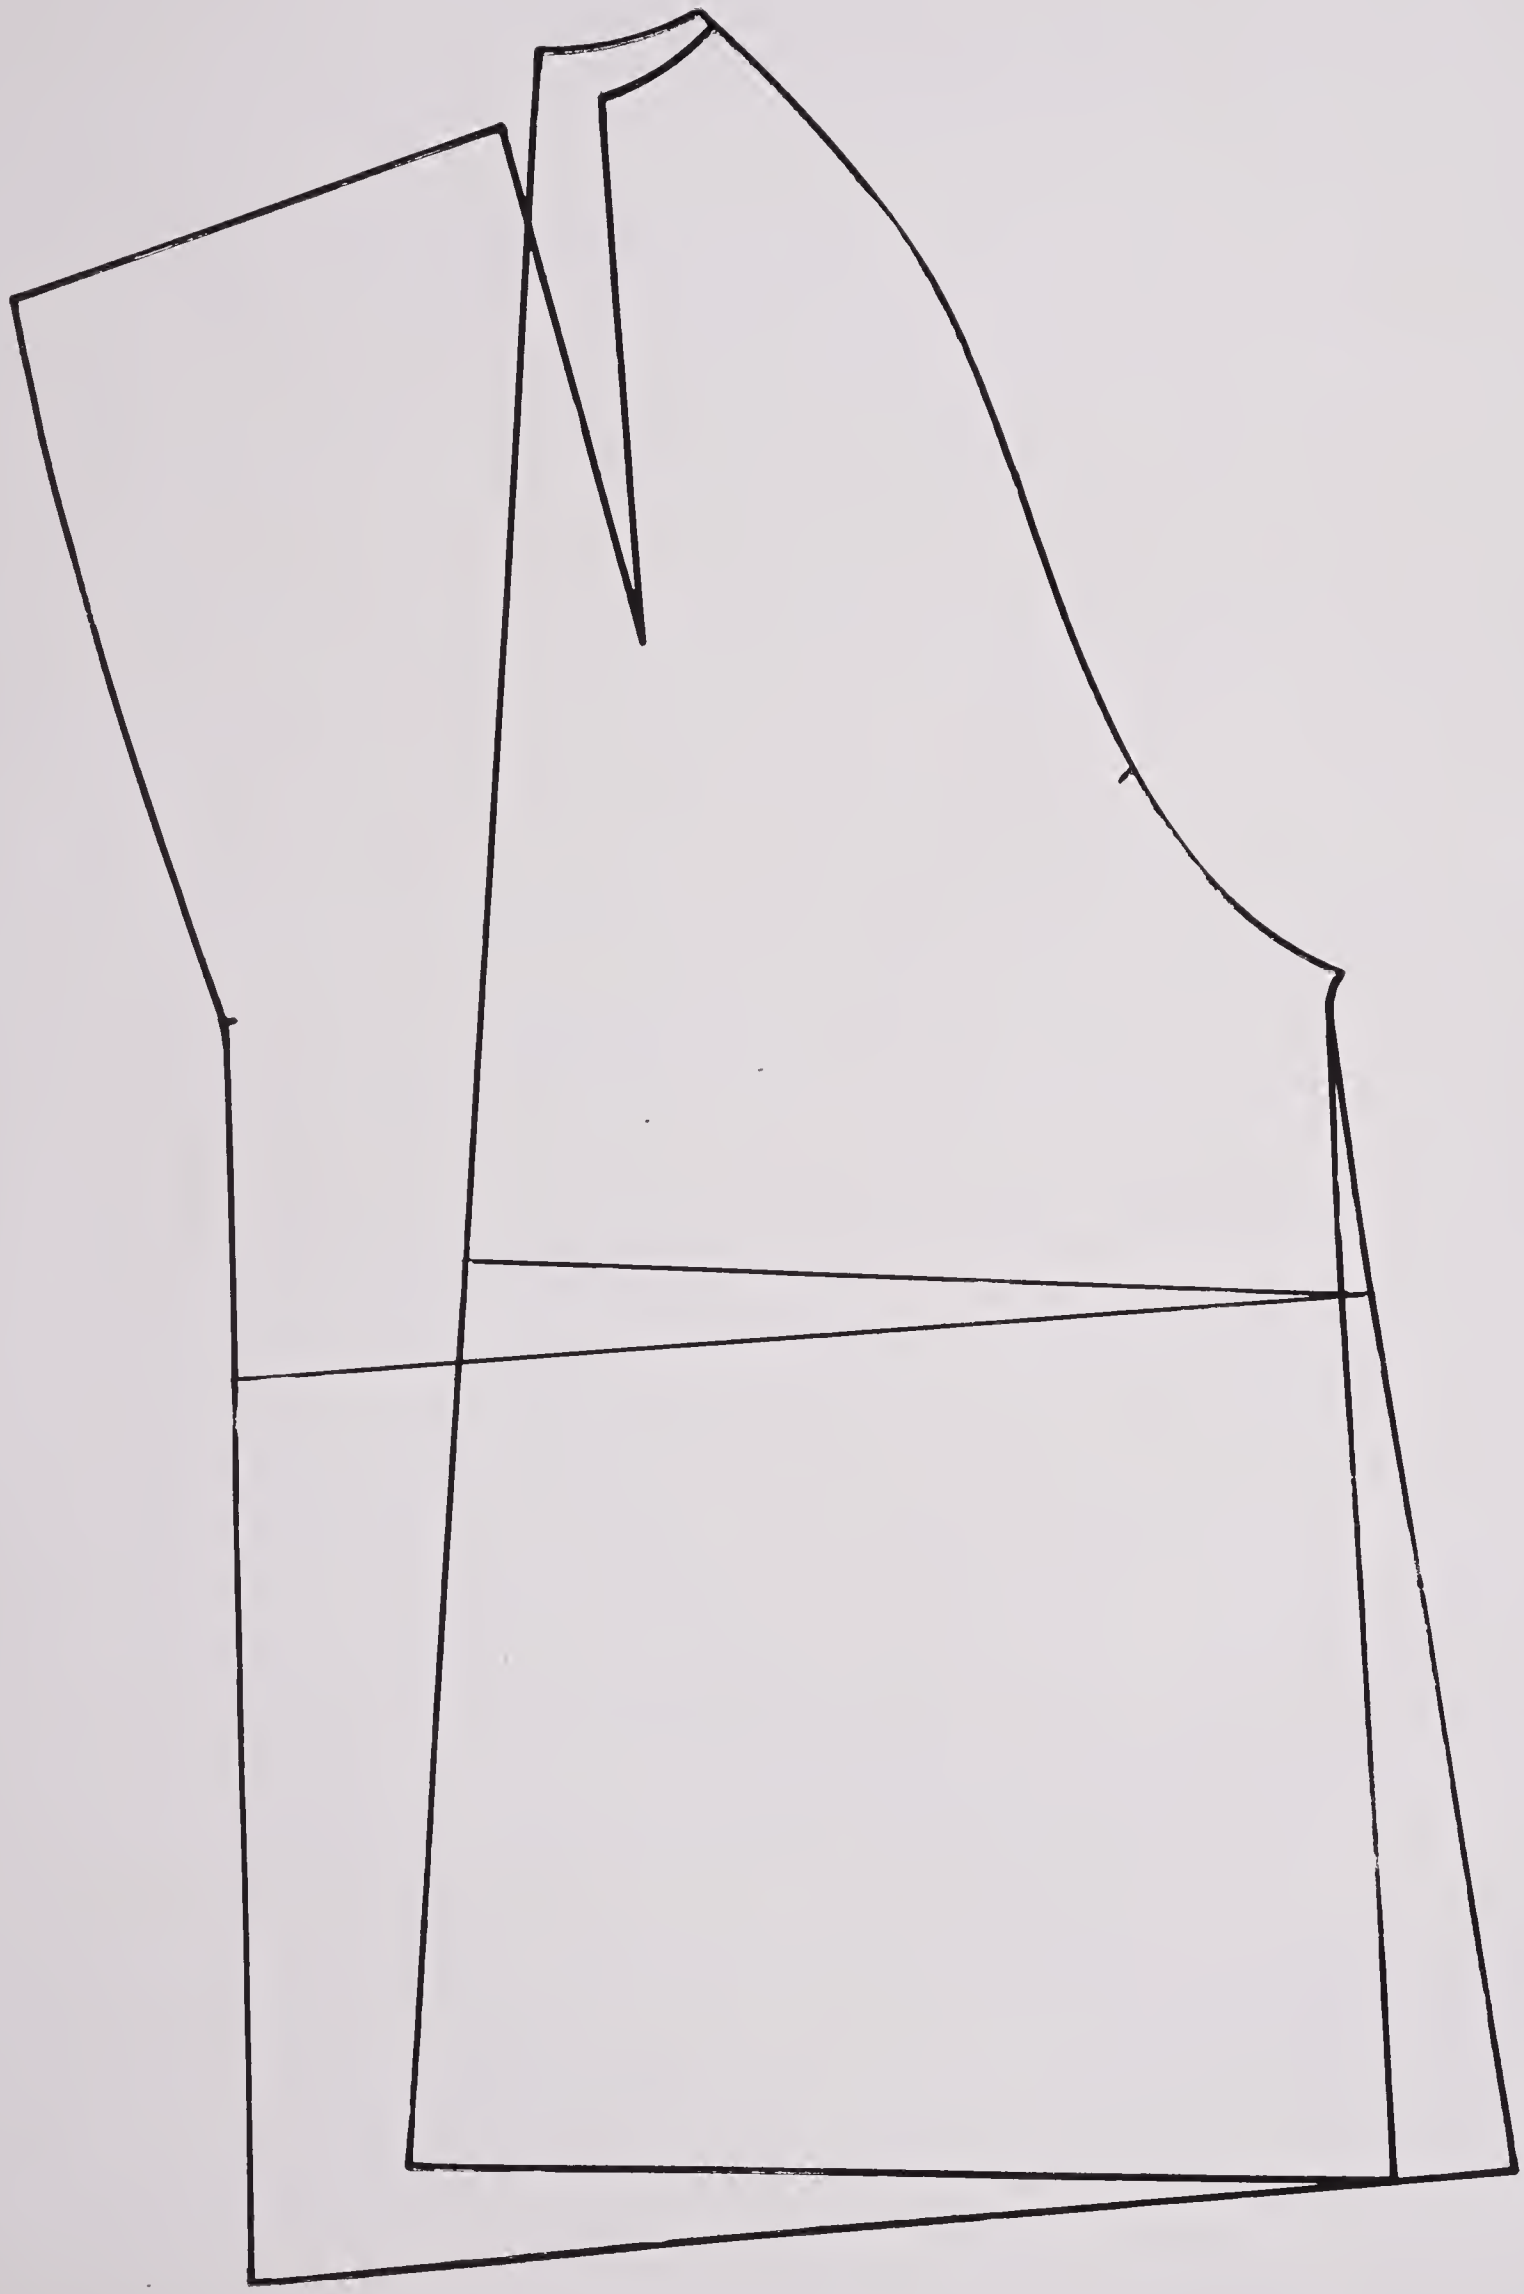
After the kimono block has been cut out and folded as per accompanying diagram, the sleeve line may be drawn as described below.

1 is a point about 1 inch from the shoulder line.

2 is a point on the under arm seam or as many inches below that point to give the desired effect; connect 1 and 2, and shape the sleeve line from 1, crossing the guide line at about the center mark, to 2 as represented.

The sleeve part is then cut away along the sleeve line, leaving the front and back parts as represented in figure 2. The manipulation of the sleeve is illustrated and described on the pages following.


1
2





Think It Over NOW
Make Up Your Mind

TAKE A COURSE OF INSTRUCTION IN THE MITCHELL SCHOOL OF DESIGNING, PATTERN MAKING, GRADING AND FITTING of LADIES TAILORMADE GARMENTS

IN THE mind of the average young man who wishes to become a designer, grader, cutter and fitter, the most important question is: "Can I get a position?" The man who is a designer, but is not quite satisfied, asks: "Can I get a better position?"

¶ Both make a mistake. The most important thing is: ARE YOU READY FOR the position? You will get it easily enough when you are ready. The good positions are hunting for good men to fill them: the demand is greater than the supply.

¶ To get the position you must be eompetent. To be competent you must take time to learn. That takes six or eight weeks, depending upon the student, and so it is advisable to think the matter over and come to a decision. Don't put it off. It is too important to you.

¶ Now keep this fact always before you in making up your mind. There is no certainty of proper results, no positive assurance of expert skill for you unless you are trained in the Mitchell Method.

¶ This method is the most thorough and efficient ever originated. Our system is the simplest ever devised to produce perfect results. It is easy to learn and just as easy to use. It leads the world in all the advantages that a system offers.

¶ Whether you are an experienced designer, anxious for improvement, or are only thinking of beginning, take our earnest assurance that our method of instruction has in it the elements of success and we know how to impart them to you.

¶ Make up your mind that nothing but the best is good enough for you.

¶ Make an effort now: it is well worth while. You seek success, this is the road to it. We can help you realize your ambition if you give us the chance.

¶ Come to our school: take a course and when you are ready we will do what we can in helping you to get a good position.

¶ The outlay is small: the first year you are employed will repay you, as you will be a trained expert in a profession where good men are always in demand and well paid.

Mitchell Designing School

912-920 BROADWAY NEW YORK

Telephone Stuyvesant 8383

BALMACAAN SLEEVE

continued

The sleeve part as cut away from the front and back parts is outlined with a thin line, points 1, 2 and 3.

Lay the sleeve part with the shoulder line to the fold of the paper and weigh it down.

1 and 2 are the same points as described on the dia gram of the preceding page.

3 is the neck point at the shoulder line.

4 from 3 is 6 inches.

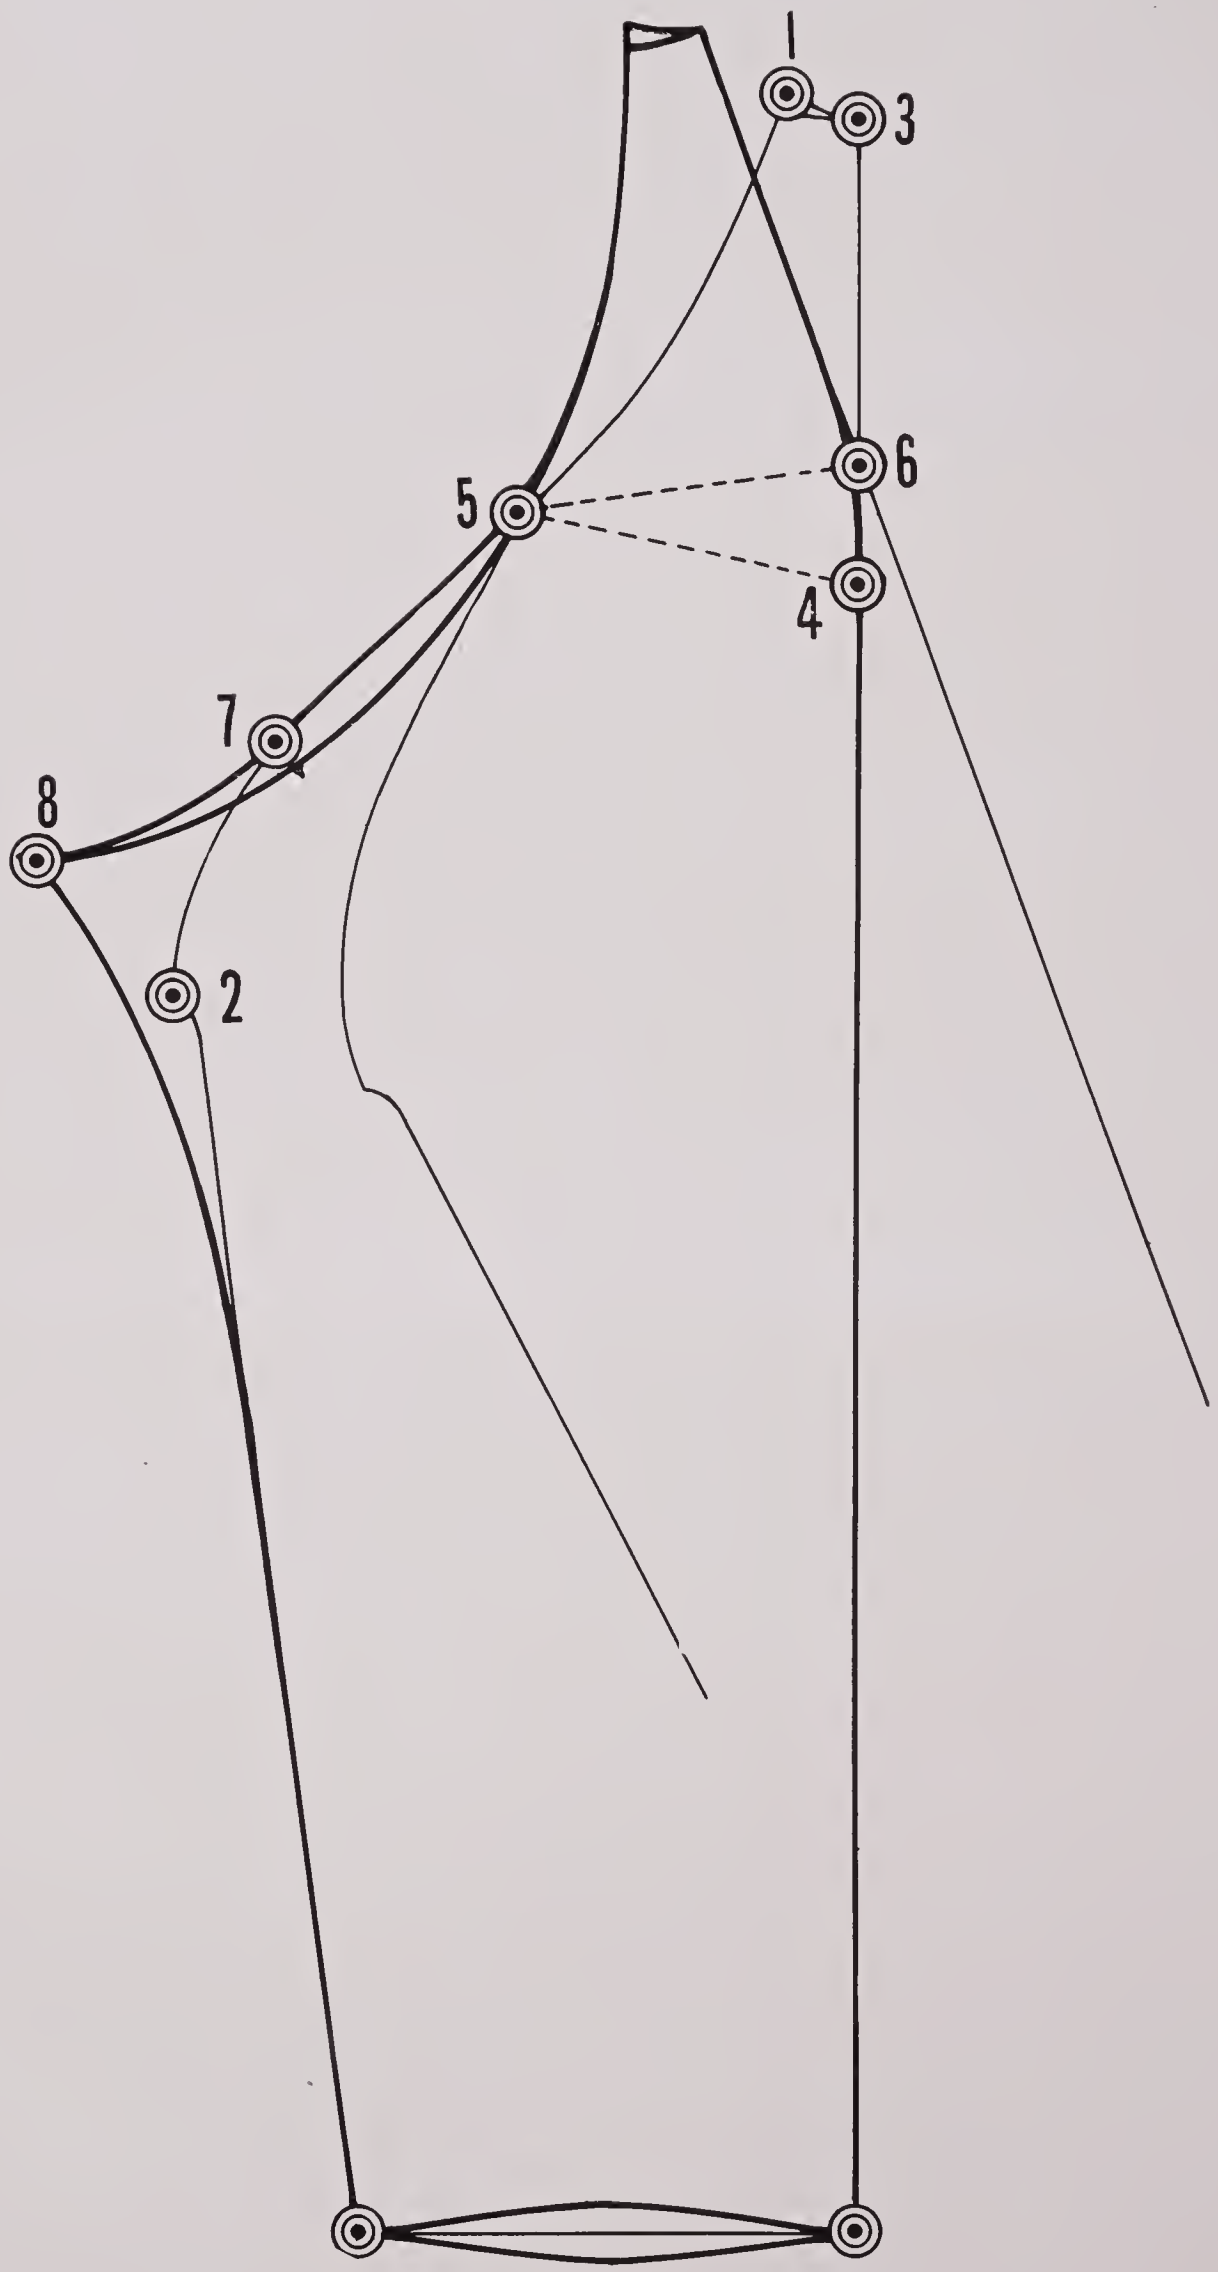
5 from 1 is 6½ inches.

6 from 4 is 1½ inches; copy the sleeve from 5 to 2 and from 2 down to full length, hold the sleeve at 5, swing it with point 4 to point 6 and copy the shoulder part of the sleeve from 4 to 3-1 and 5 as per heavy line formation.

7 from 2 is 3½ inches.

8 is a point 3 inches from 2 and 3½ inches from 7.

Shape the back part of the sleeve from 5 through 7 to 8 and the front part from a point about 1 inch above 5 through a point about ½ inch below 7 to 8, and the under arm seam from 8 downward as per diagram; finish as represented.


1
3
6
5
4
7
8
2

SEMI-FITTED JACKET FOUNDATION

This diagram represents the foundation for any style semi-fitted jacket or coat.

The different construction points of this diagram, as well as on all the following ones, are numbered in rotation to facilitate the following up of the diagram in all the stages of its construction.

The measures used for this diagram are as follows:

39 Bust
7 Back depth
15 Back waist length
7 Half back width
10½ Blade
12½ Front depth
14½ Top of dart
22 Front waist length

To Draft

A is the point from which to square both ways.
2 from A is ½ the bust measure on the 24ths less 2.
3 from 2 is the back depth.
4 from 2 is the back waist length.
5 from 4 is 7 inches. Square forward from 3, 4 and 5.
6 from 5 is ½ inch.
7 from 4 is 1 inch. Connect 6 and 7 to 2.
8 is a point on the line 7-2.
9 from A is ½ bust on the 8th less 2. Connect 9 and 2.
10 from 8 is the half back width, and
11 from A is the same. Connect 10 and 11.
12 from 8 is the blade, square downward.
13 from 12 is 1¼ inch, square up.
14 is a point half way between 12 and 13.
15 from 13 is 1¼ inch.
16 from 12 is ½ bust on the 6ths.
17 from 16 is 1¼ inch, square up.
18 from 19 is ½ bust. Connect 18 and 19.
19 from 18 is ½ inch.

20 from 14 is the front depth applied less the width of the back part of the neck 9 to 2 at 14 as to where it fals on the line squared up from 17; square forward.

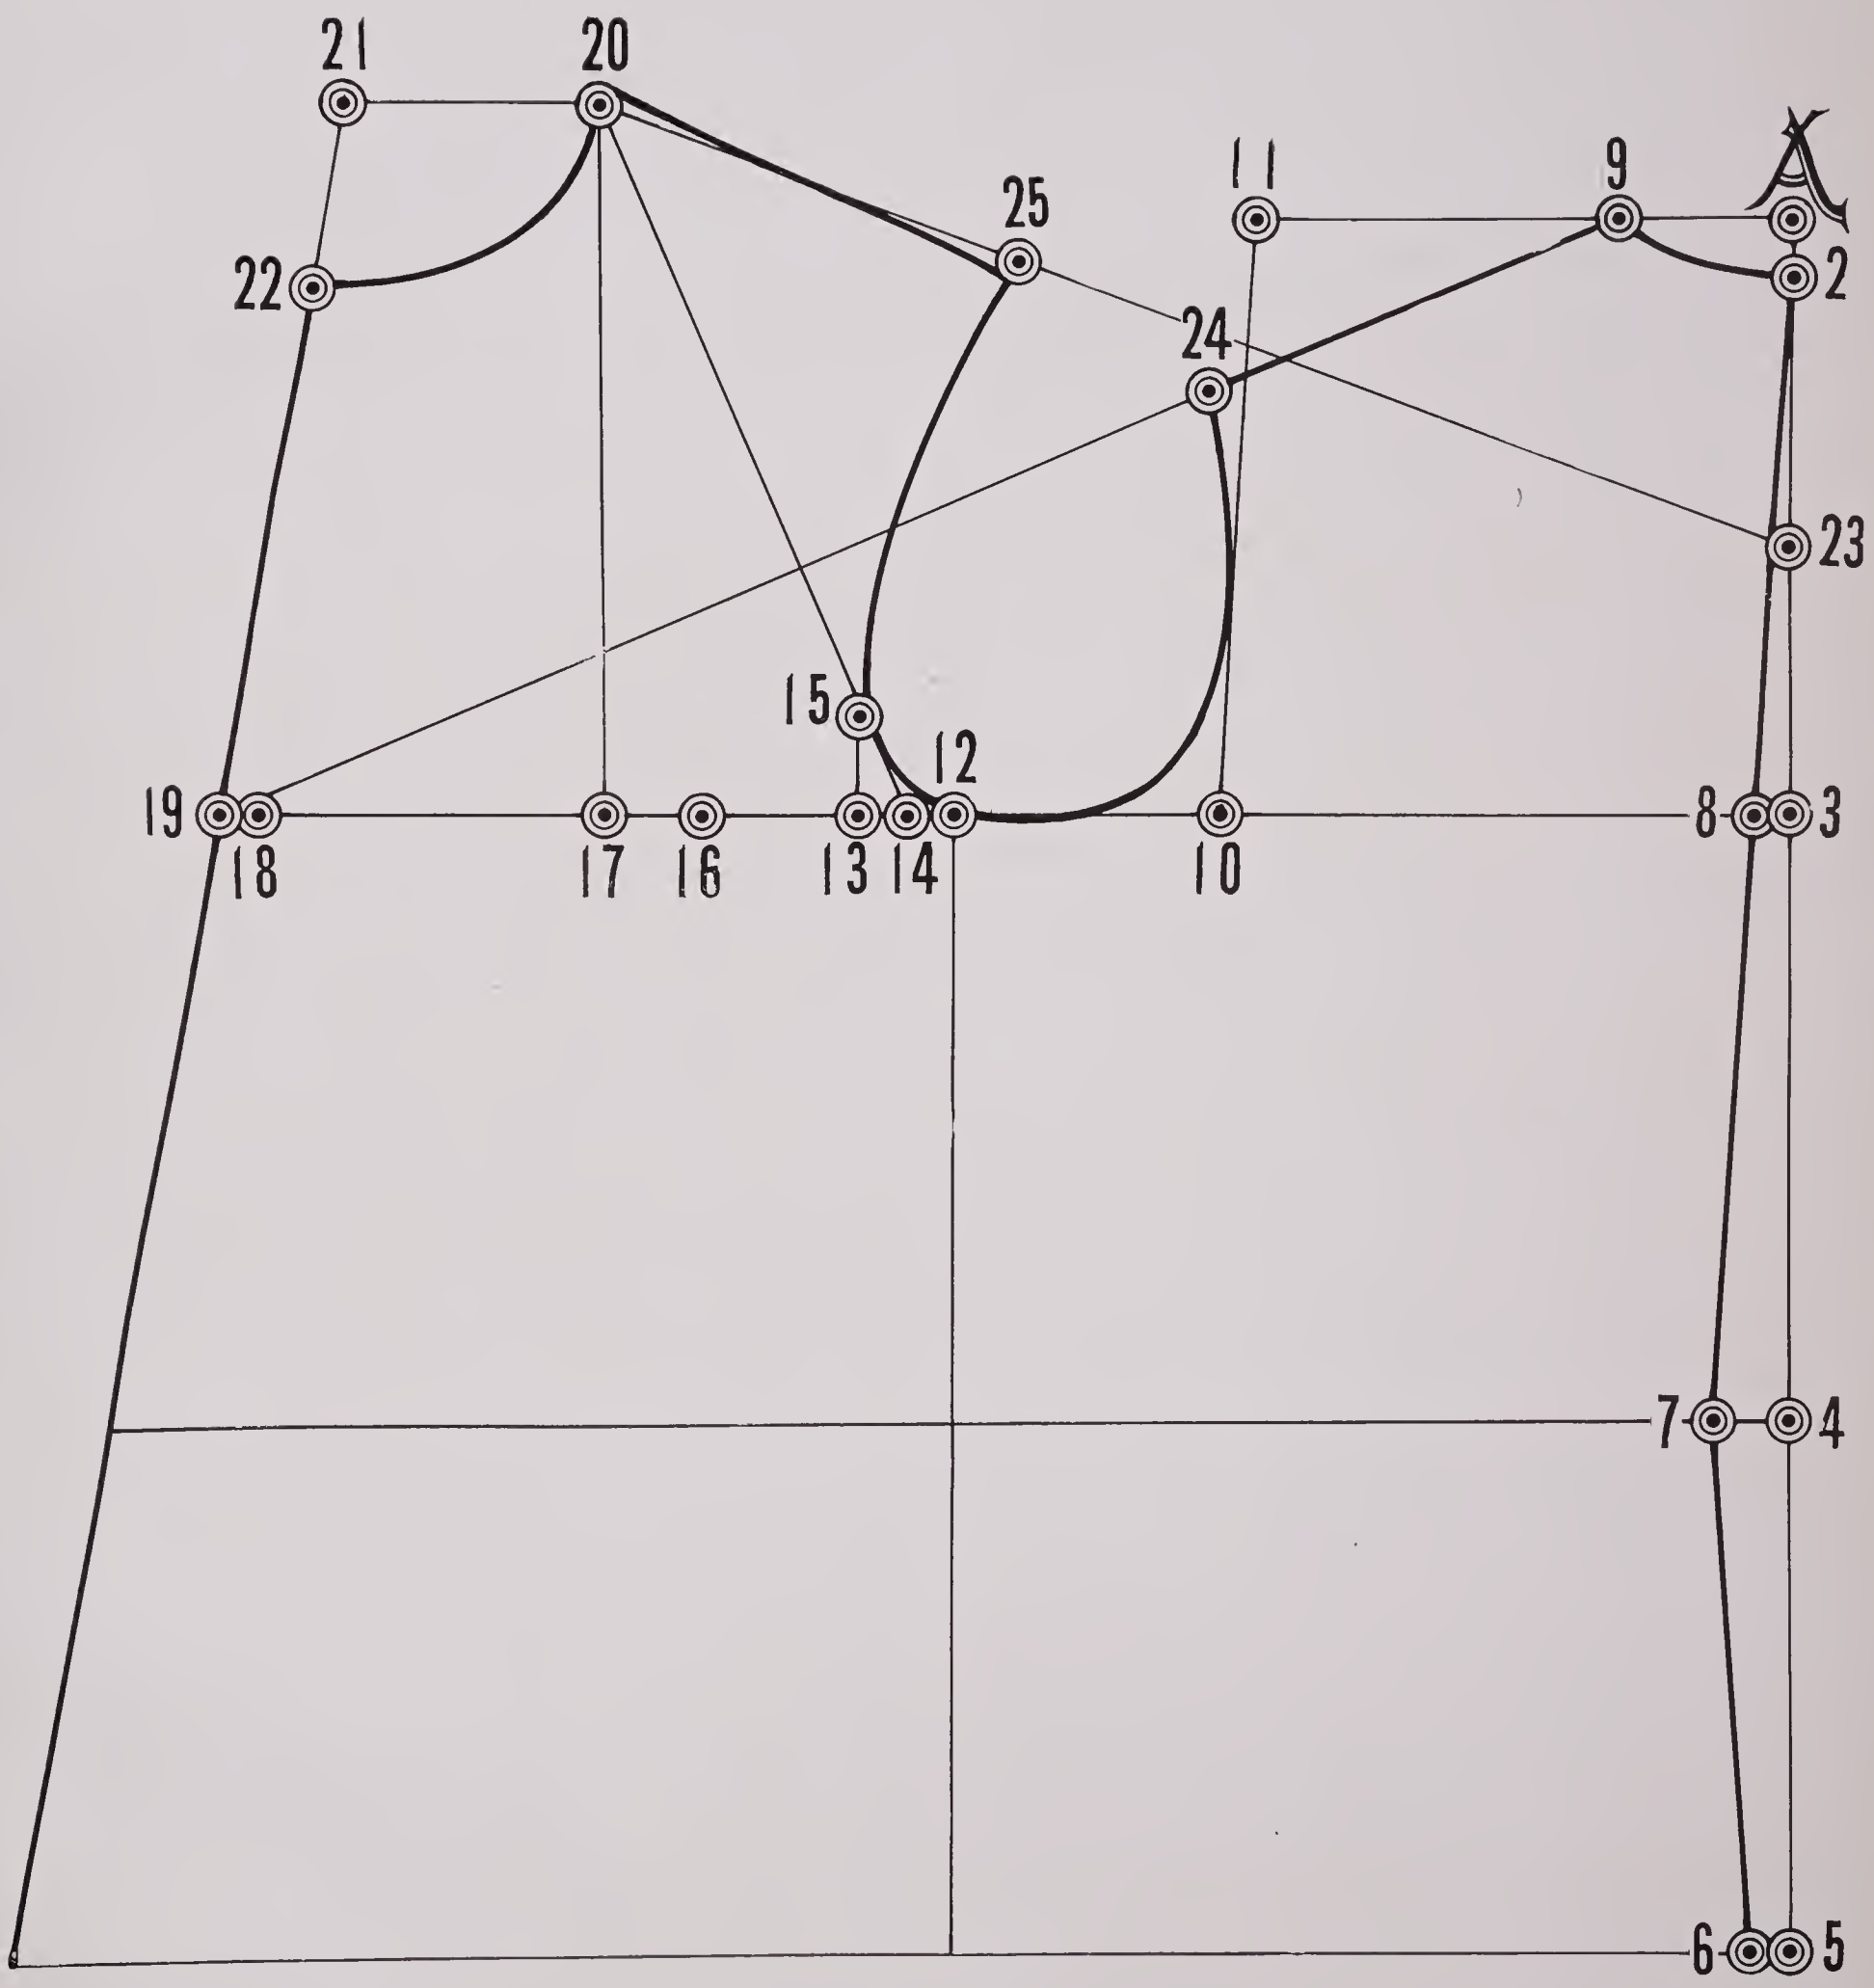
21 from 20 is ½ the bust on the 6th, draw line from 21 down through 19.

22 from 21 is ½ the bust on the 8th, shape the front part of the neck as represented.

23 is a point half way between 2 and 3. Connect 23 and 20.

24 from 9 is the shoulder width, in this case 6 inches; shape the scye from 24 down to 12, as represented.

25 from 20 is the same as 24 from 9; shape the front scye from 25 to 12, as per diagram, and shape the front shoulder from a point ⅜ inch above 20 to a point ¼ inch below 25.


21
20
11
9
25
22
2
24
23
15
12
19
18
17
16
13
14
10
8
3
7
4
6
5

SEMI-FITTED JACKET

This diagram illustrates a single-breasted, semi-fitted jacket with a peak lapel and a mannish collar.

The foundation of this jacket and the construction points up to and including point 25 of same are identical as foundation on preceding page.

To Draft

26 from 7 is 3½ inches.

27 from 6 is ¾ inch more than 26 from 7; draw line from 26 through 27 downward.

28 from 9 is halfway Letween 24 and 9; connect 28 to 26.

29 is a point on the line 28-26.

30 from 26 is 1 inch. Draw a line from 30 through 29 upward to a point ¼ inch in front of 28 and add ¼ inch in front of 24, as indicated by the heavy line formation.

31 from 27 is ½ inch; draw a line from 30 to 31 downward.

32 is a point on the line squared down from 12.

33 is a point on the same line.

34 from 12 is ½ inch.

35 from 32 is ½ inch; connect 34 to 35.

36 from 32 is ½ inch; connect 34 to 36.

37 from 33 is ⅝ inch; draw a line from 36 through 37 downward.

38 from 33 is ⅝ inch; draw a line from 35 through 38 downward.

39 is the top of dart, gained by applying it less the width of the back part of the neck 9-2 at 20 as to where it falls 4 inches in back of center front line.

40 is the front waist length gained by applying it less the width of the back part of the neck 9-2 at 20, as to where it falls on the center front line; connect 40 and 36.

41 from 40 is the same as 26 from 7; connect 41 and 39.

42 from the center front line is ¼ inch more than 41 from 40; draw a line from 41 through 42 downward.

43 from 20 is halfway between 25 and 20; connect 43 and 39.

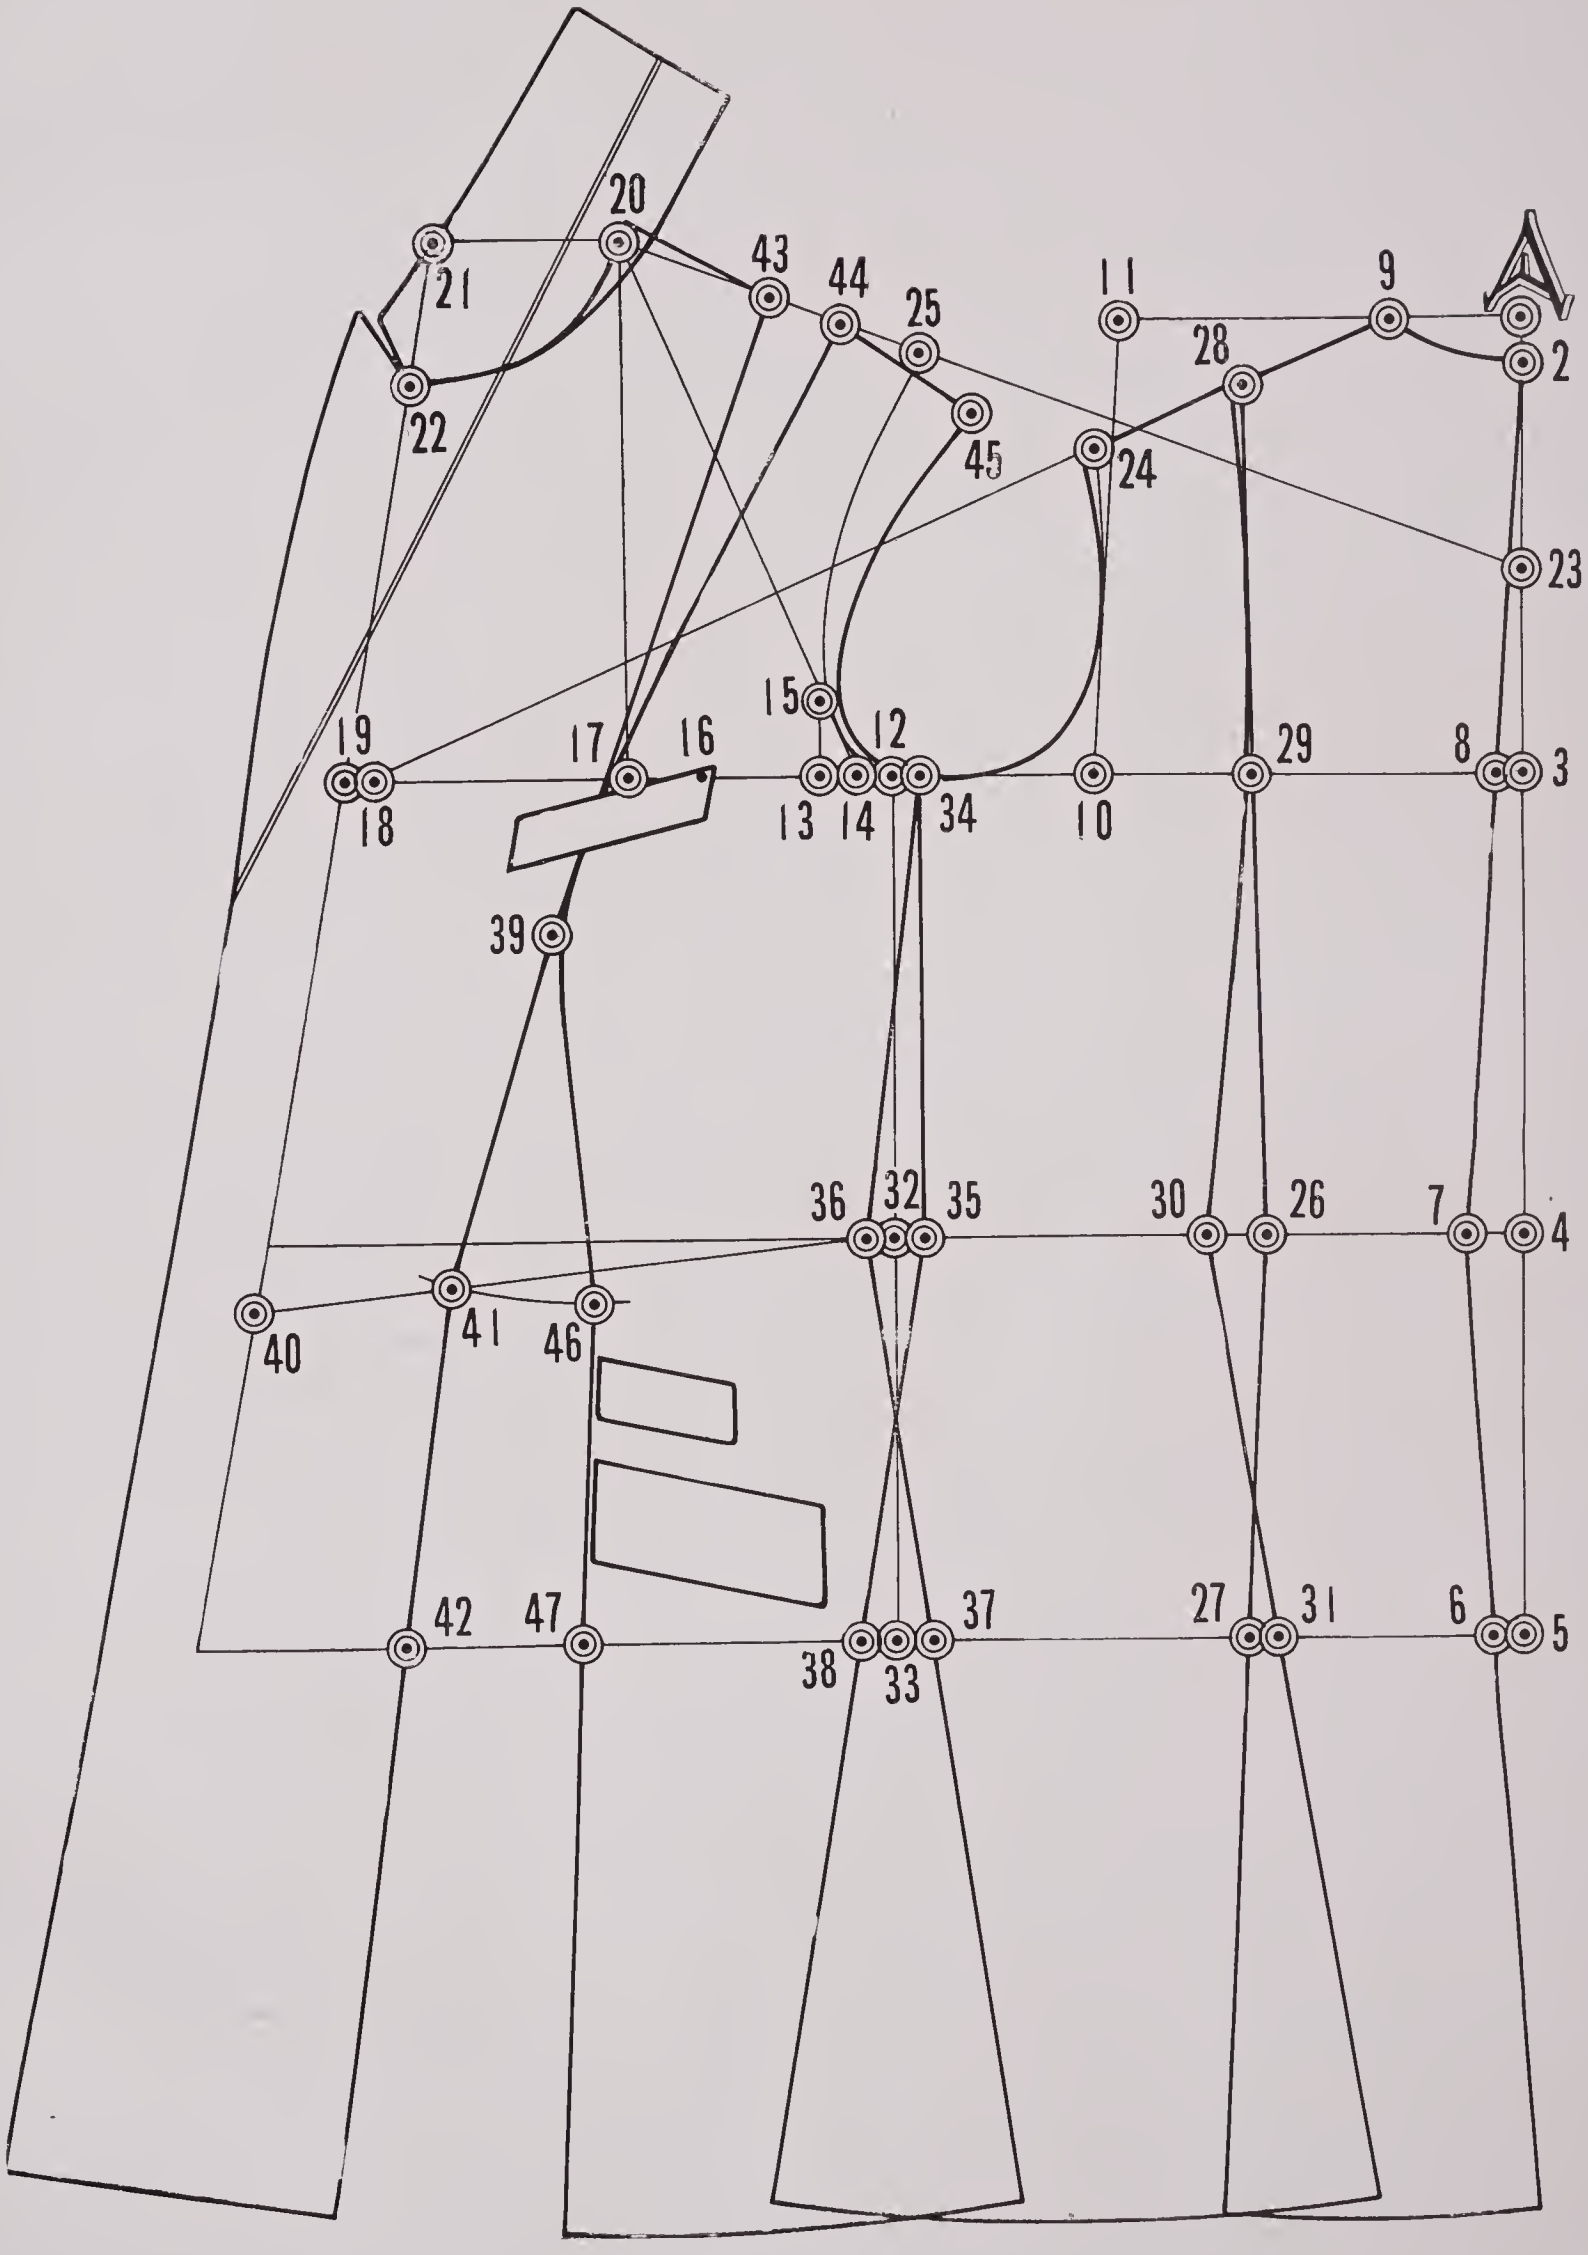
44 from 43 is 1¼ inches; shape the front seam from 44 to 39 as represented.

45 is a point ⅝ inch below the line 20 and 23, and is the same from 44 as 25 from 43; shape the front scye from 45 to 34 as represented.

46 from 36 on a sweep cast at 41 and pivoted, at 39, is the same from 36 as 35 from 30; connect 46 and 39.
from 36 as 35 from 30; connect 46 and 39.

47 from 42 is ½ inch more than 46 from 41; draw a line from 46 through 47 downward.

The length of this jacket is 32 inches. To shape the bottom in this case, the back measures from 7 to full length, 17 inches, that same measurement must be applied from 26, 30, 35 and 36, downward. From 46 and 41 downward the measurement will be ½ inch less than on the previous numbers. This should in all cases give an even bottom. A lap of 1¼ inches is allowed on the front. The crease line of the lapel, and collar as indicated by the double line formation, is drawn from a point about 3 inches below 19 through a point ¾ inch in front of 20. The stand of the collar is 1¼ inches. The length of the collar from 20 upward is 2¾ inches. Finish as represented.


20
21
43
44
25
11
9
A
28
2
22
45
24
23
15
19
17
16
12
29
8
3
18
13
14
34
10
39
36
32
35
30
26
7
4
40
41
46
42
47
37
27
31
6
5
38
33

SEMI-FITTED KIMONA JACKET

The foundation of this jacket is the semi-fitted foundation up to and including point 21 as described on a previous page.

22 from 8 is ¼ of the line 8-2; connect 22 and 19.

23 from 21 is the same as 22 from A; connect 23 and 9.

24 is a point halfway between 10 and 13; square downward.

25 is a point on the line squared down from 24, and

26 is a point on the same line.

27 from 7 is 3½ inches.

28 from 6 is ½ inch more than 27 from 7; draw a line from 27 through 28 downward.

29 from 9 is 3 inches; connect 27 and 29.

30 is a point on the line 27-29.

31 from 27 is 1 inch; shape side part from 31 through 30 to a point ¼ inch in front of 29.

32 from 28 is ½ inch; draw a line from 31 through 32 downward.

33 from 25 is ½ inch; connect 33 and 24.

34 from 26 is ⅝ inch; draw line from 33 through 34 downward.

35 from 26 is ⅝ inch; draw a line from a point ½ inch in front of 25 through 35 downward and a line from the same point to 24.

36 from 24 is 3 inches.

37 from 23 is ½ inch; draw a line from a point ¼ inch in front of 29 through 37, thus giving the sleeve line of the back part.

38 is the top of dart gained by applying it, less the width of the back part of the neck 9-2 at 19, as to where it falls 4 inches in back of the center front line.

39 is the front waist length gained by applying it, less the width of the back part of the neck 9-2 at 19, as to where it falls on the center front line; connect 39 and 25.

40 from 39 is the same as 27 from 7.

41 from the center front line is ¼ inch more than 40 from 39; draw a line from 40 through 41 downward.

42 from 19 is 3 inches; draw a line from 40 through 38 to 42 and reshape the front shoulder from 42 to a point ⅜ inch above 19.

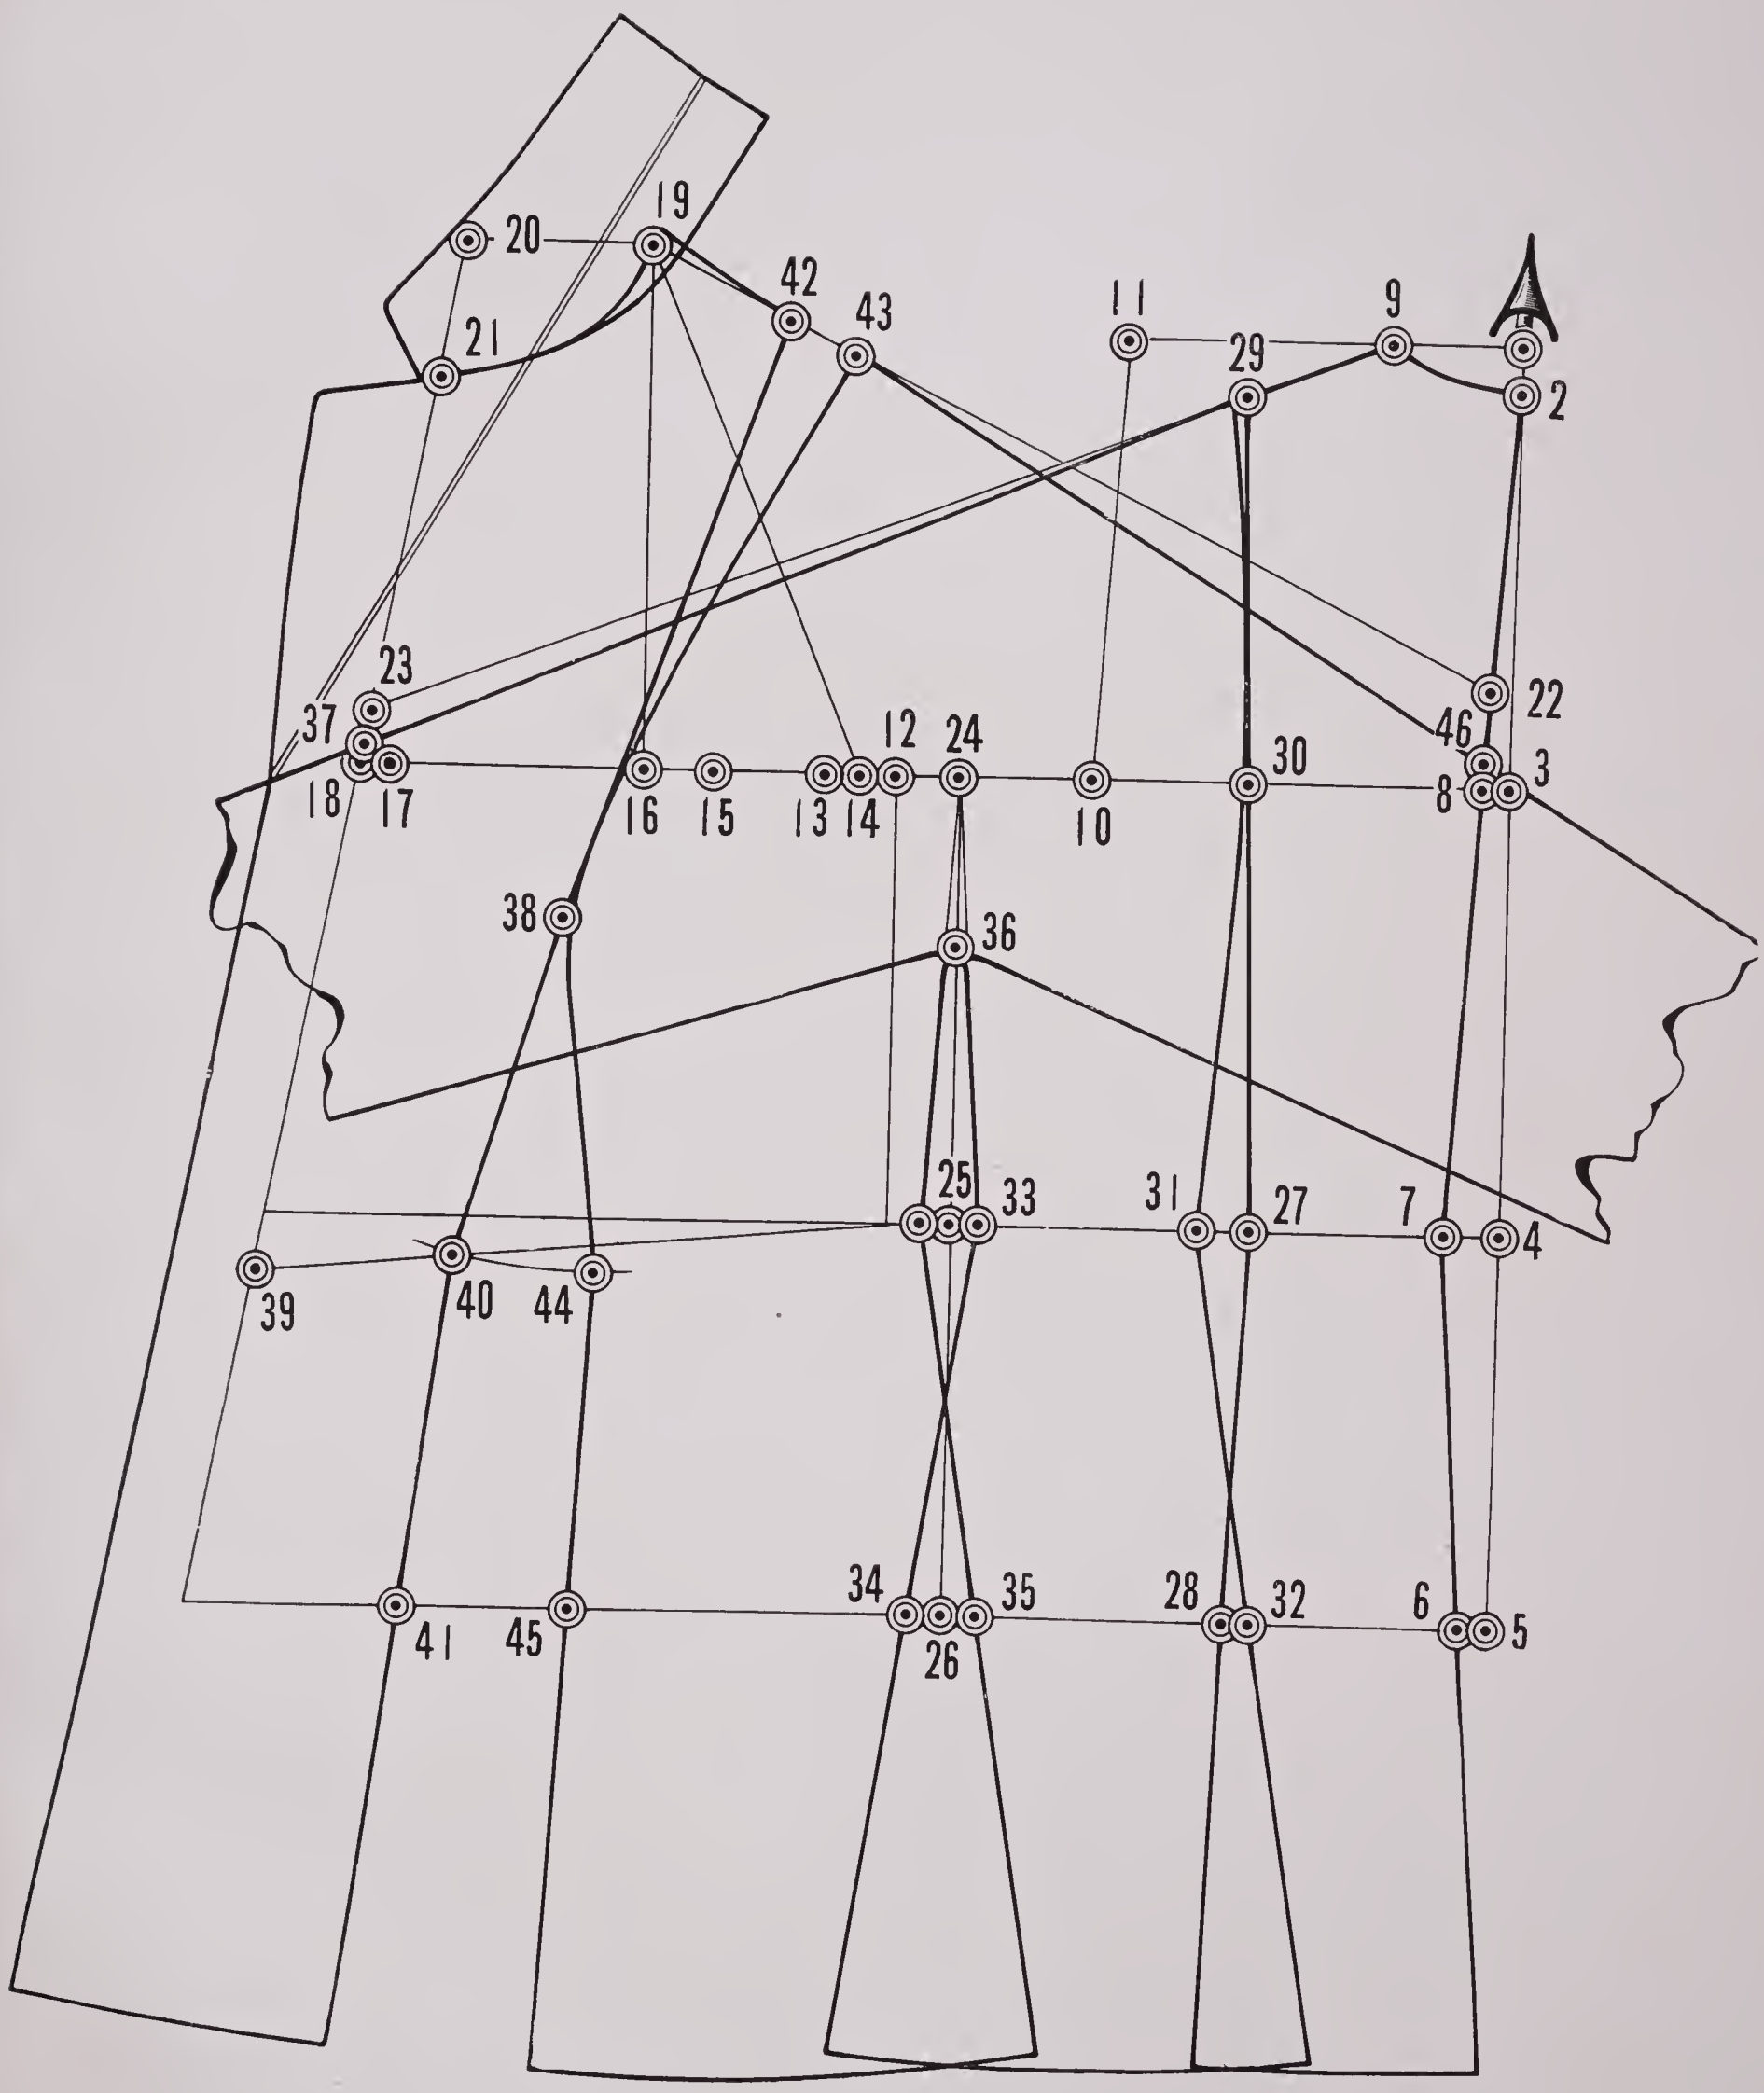
43 from 42 is 1¼ inches.

44 from 40 is 2½ inches on a sweep cast at 40 pivoted at 38; shape the front part from 44 through 38 to 43 as represented.

45 from 41 is ½ inch more than 44 from 40; draw a line from 44 through 45 downward.

46 from 22 is 1¼ inches; draw a line from 43 through 46, thus giving the sleeve line of the front part.

The sleeve length which is 29 inches is to be measured from 19 to 42 and from 43 along the front sleeve line and the bottom of the sleeve to be squared out from the line 43-46, and the width of the sleeve to be connected with 36. The same is to be done with the back part of the sleeve; finish as represented.

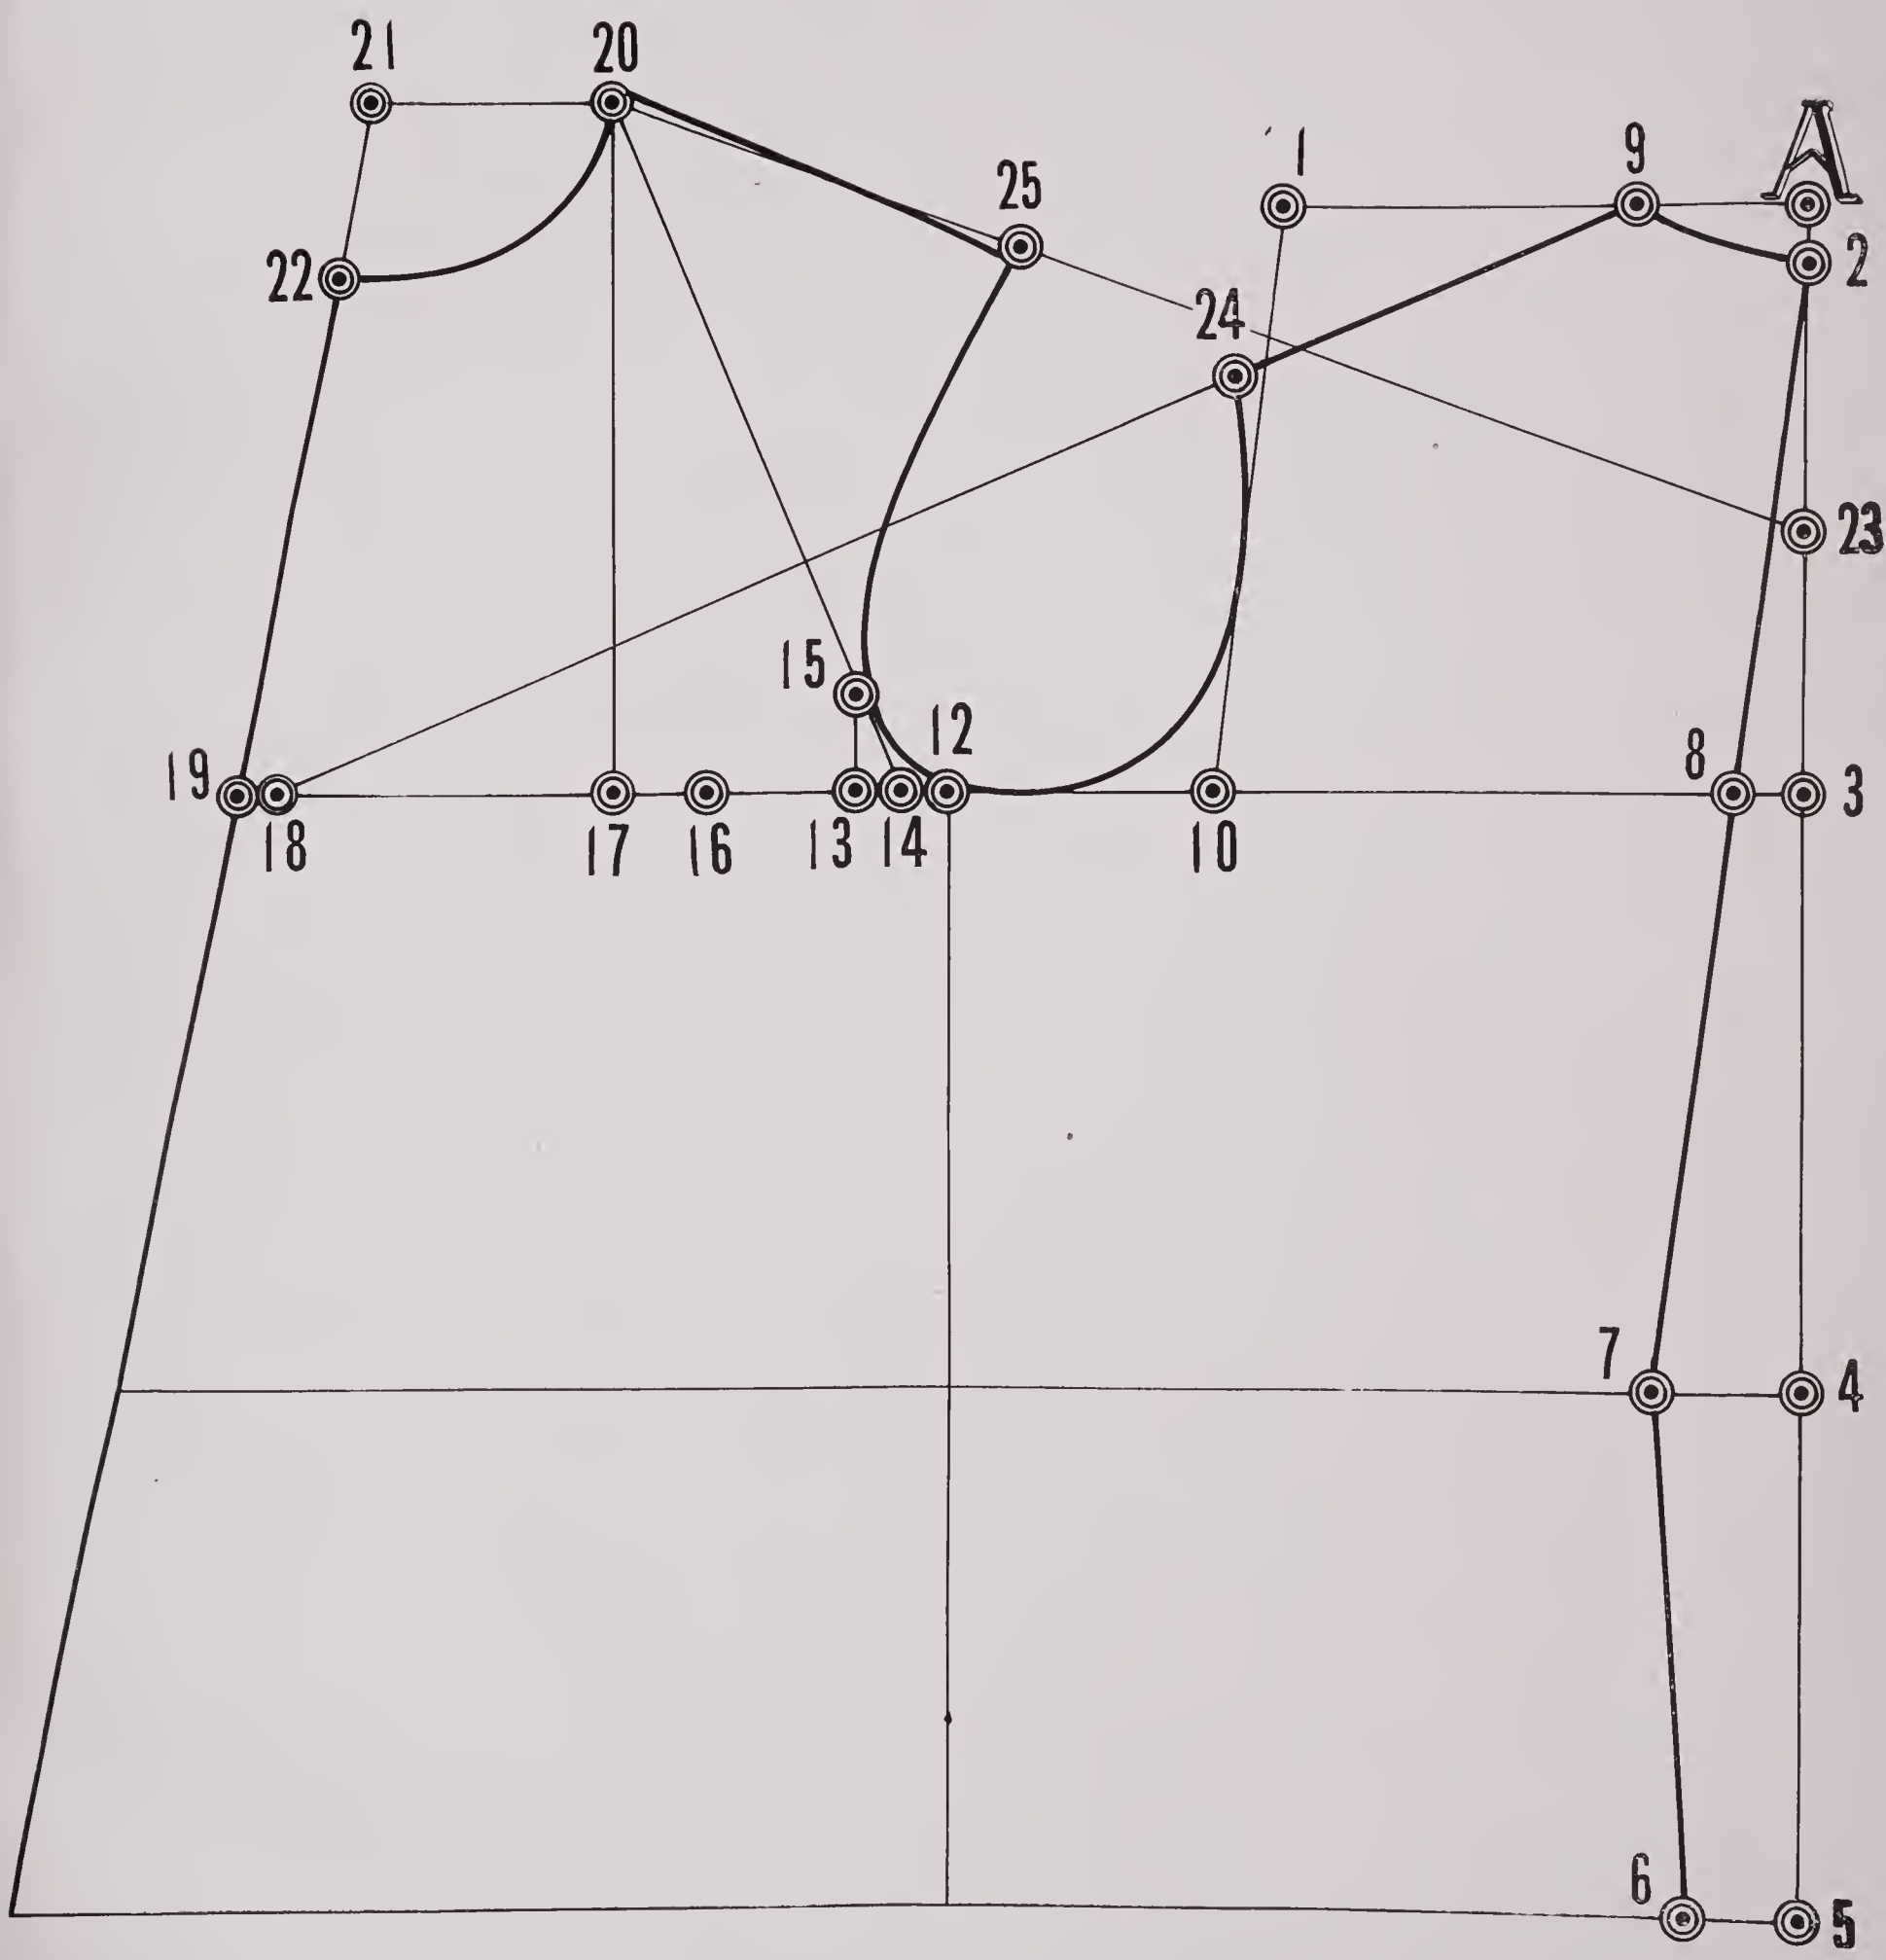

20
19
42
43
21
11
29
9
2
23
37
22
46
12
24
30
3
18
17
16
15
13
14
10
8
38
36
25
33
31
27
7
4
39
40
44
34
35
28
32
6
5
41
45
26

TIGHT-FITTED JACKET FOUNDATION

All the construction points of this foundation are the same as on diagram page 36, and have the same measurements. This being a tight-fitted jacket foundation, the suppression of the center back line consequently is greater than on the previous foundations. The only measurements, therefore, to be altered are as follows:

6 from 5 is 1½ inches.

7 from 4 is 2 inches.


21
20
25
1
9
A
22
2
24
23
15
12
19
8
3
18
17
16
13
14
10
7
4
6
5

TIGHT-FITTED JACKET, SINGLE DART

The feature of this diagram is a tight-fitted, single-breasted jacket, with a shawl collar.

The foundation of same is identical to the one of the preceding page.

The construction points from A and up to and including 25 are described on page 36.

To Draft

26 from 7 is 1-3 of ¼ waist less ¼ inch.

27 from 6 is 1 inch more than 26 from 7; draw a line from 26 through 27 downward.

28 is a point halfway between 24 and 9; connect 26 and 28.

29 is a point on the line 26-28.

30 from 26 is 1 inch; shape back seam from 30 through 29 to a point ¼ inch in front of 28.

31 from 27 is ½ inch; shape the back seam from 30 through 31, downward.

32 from 12 is ½ inch.

33 from the line squared down from 12 is ½ inch; connect 33 and 32.

34 is a point halfway between 30 and 33; square downward.

35 from 34 is ⅝ inch; draw a line from 35 through 10 upward.

36 from 34 is ⅝ inch; draw a line from 36 to 10.

37 is a point on the line squared down from 34.

38 is a point on the line squared down from 12.

39 from the blade line is ¾ inch; connect 39 and 32.

40 is the top of dart gained by applying it, less the width of the back part of the neck 9-2 at 20, as to where it falls 4 inches in back of the center front line.

41 from 20 is the front waist length gained by applying it less the width of the back part of the neck 9-2 at 20, as to where it falls on the center front line; connect 41 and 39.

42 from 41 is ½ inch more than 26 from 7; connect 42 and 40.

43 from the center front line is ¼ inch more than 42 from 41; draw a line from 42 through 43 downward.

44 from 20 is the same as 28 from 9; shape the front shoulder from 44 to a point ⅜ inch above 20.

45 from 44 is 1¼ inch; shape the front seam from 45 to 40, as represented.

46 is a point ¾ inch below the line 20-23 and is the same from 45 as 24 from 28; shape the front scye from 46 to 12, as per diagram.

47 from 39 is ¼ waist less the front part 41-42; on a sweep cast at 42 and pivoted at 40; connect 47 and 40.

48 from 43 is ⅜ inch more than 47 from 42; draw a line from 47 through 48, downward.

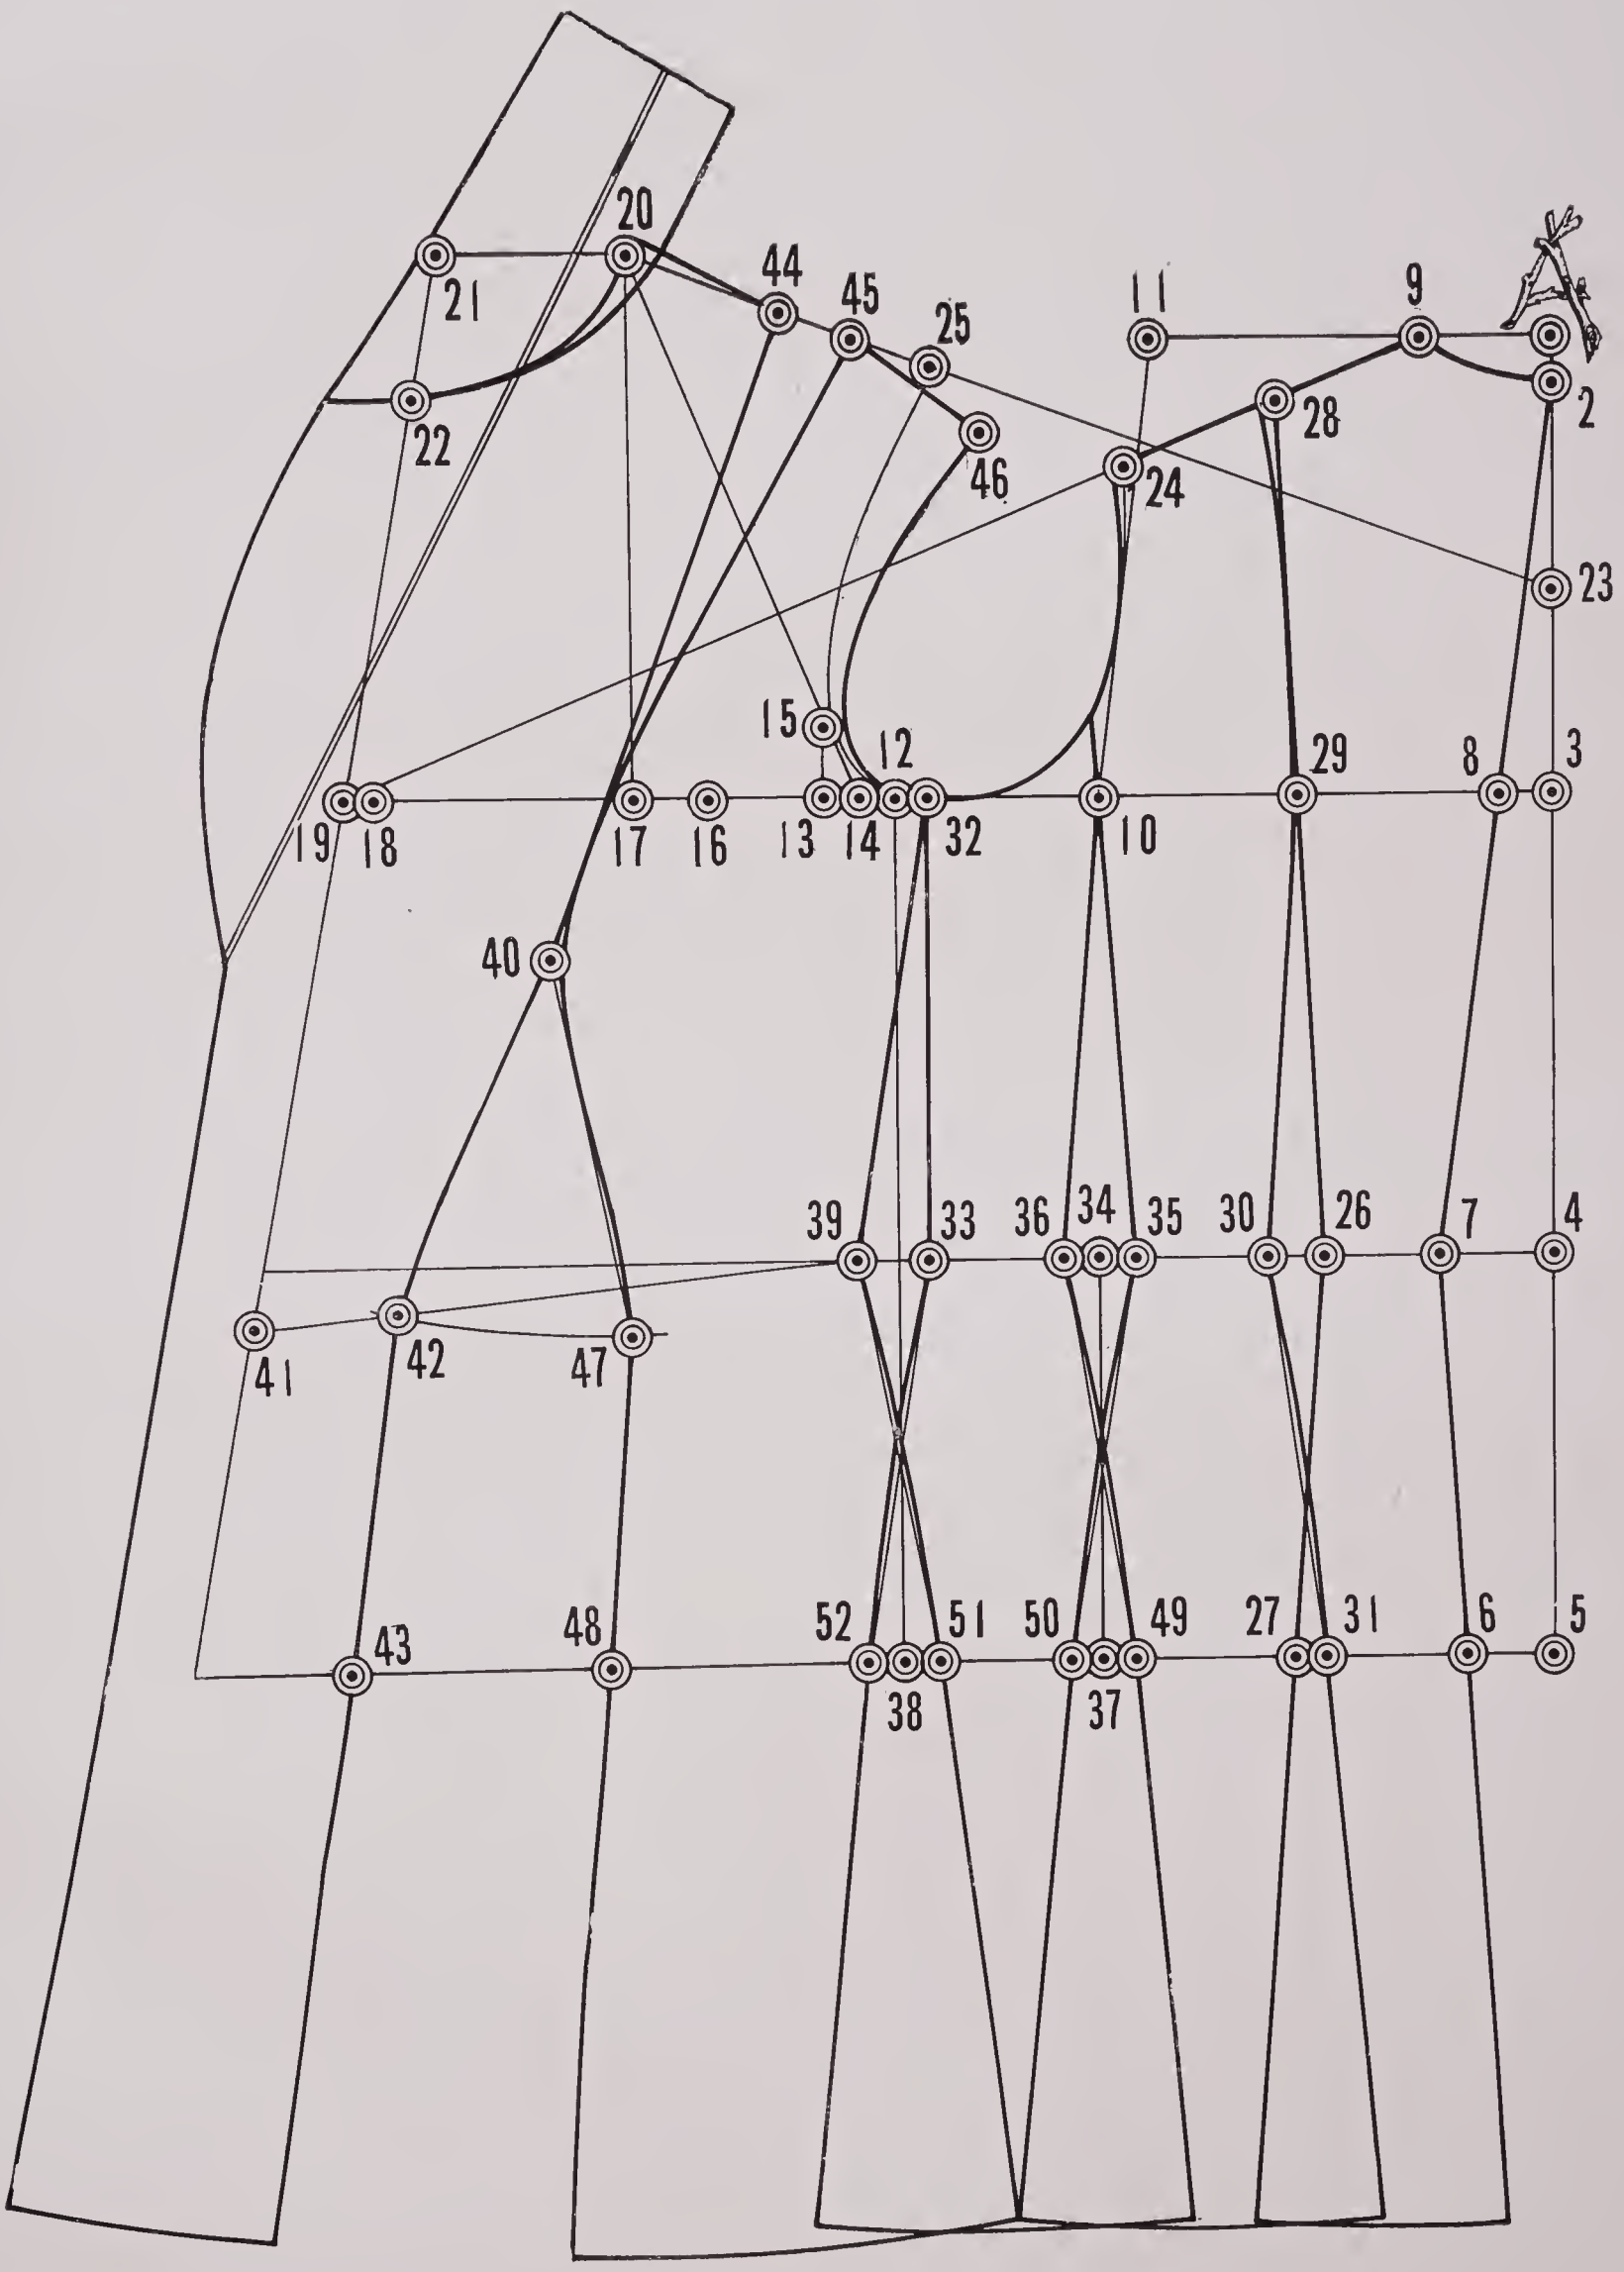
49 from 37 is ½ inch.

50 from 37 is ½ inch; draw a line from 36 through 49 and a line from 35 through 50 downward.

51 from 38 is ⅝ inch.

52 from 38 is ⅝ inch; draw a line through 51 and a line from 33 through 52 downward.

The construction of the collar is identical to the one described on a preceding diagram; finish as represented.


20
21
44
45
25
11
9
22
46
24
28
2
23
15
12
29
8
3
19
18
17
16
13
14
32
10
40
39
33
36
34
35
30
26
7
4
41
42
47
43
48
52
51
50
49
27
31
6
5
38
37

TIGHT-FITTED JACKET, DOUBLE DART

This diagram represents a tight-fitted jacket with two seams running over the shoulders and two darts at the front, ordinarily called "double-dart jacket."

The foundation up to and including point 25 is constructed as described on page 36. The measurements are also the same.

26 from 7 is ¼ of ¼ waist, less ⅛ inch.

27 from 6 is 1 inch more than 26 from 7; draw a line from 26 through 27, downward.

28 is a point on the line squared down from 12.

29 from 9 is ¼ of the shoulder width which is in this case 5½ inches; connect 26 and 29.

30 is a point on the line 26-29.

31 from 26 is ¾ inch; connect 31 and 30.

32 from 27 is ½ inch; draw a line from 31 through 32 downward.

33 from 31 is the same as 26 from 7.

34 from 24 is ¼ of the shoulder width; connect 34 and 33.

35 is a point on the line 34-33.

36 from 33 is ¾ inch; connect 36 and 35 and shape the back seams from 35 to a point ¼ inch in front of 34. Square down from a point halfway between 36 and 33.

37 from the line just squared down, and

38 from the same line is ¼ inch respectively; draw a line from 33 through 38 downward and a line from 36 through 37 downward.

39 from 10 is ½ inch.

40 is a point on the line squared down from 12.

41 from 12 is ½ inch.

42 from 28 is ½ inch; connect 41 and 42.

43 from 28 is ¾ inch; connect 41 and 43. Find the center between points 36 and 42 and square down from the waist line.

44 from the line just squared down and 45 from the same line is ⅜ inch respectively; connect 45 and 39 and 44 and 39.

46 from 20 is the top of dart gained by applying it less the width of the back part of the neck 9-2 at 20, as to where it falls 3 inches back of the center front line; draw a line from 8 through 46.

47 from 46 is 3 inches.

48 from 20 is the front waist length gained by applying it less the width of the back part of the neck 9-2 at 20, as to where it falls on the center front line; connect 48 and 43.

49 is a point on the center front line.

50 from 48 is ¼ inch more than 26 from 7; connect 50 and 46.

51 from 49 is ¼ inch more than 50 from 48; draw a line from 50 through 51 downward.

52 from 20 is the same as 29 from 9; connect 52 and 46.

53 from 50 is 2¼ inches on a sweep coat at 50, pivoted at 46; connect 53 and 46 and 53-43.

54 from 51 is ¼ inch more than 53 from 50; draw a line from 53 through 54 downward.

55 from 53 is ½ inch more than 50 from 48; connect 55 and 47.

56 from 54 is ¼ inch more than 55 from 53; draw a line from 55 through 56, downward.

57 from 25 is the same as 52 from 20; draw a line from 57 to 47.

58 from 57 is 1¼ inches; connect 58 and 47.

59 from 58 is the same as 25 from 57 at a point ¾ inch below the front shoulder line.

Reshape the front scye from 59 to 12 and from a point ¼ inch in front of 24 downward as represented.

60 from 43 is ¼ waist less the width of the two front parts. 53-55 and 50-48 on a sweep cast at 55 pivoted at 47; connect 60 and 47.

61 from 56 is ¼ inch more than 60 from 55; draw a line from 60 through 61 downward.

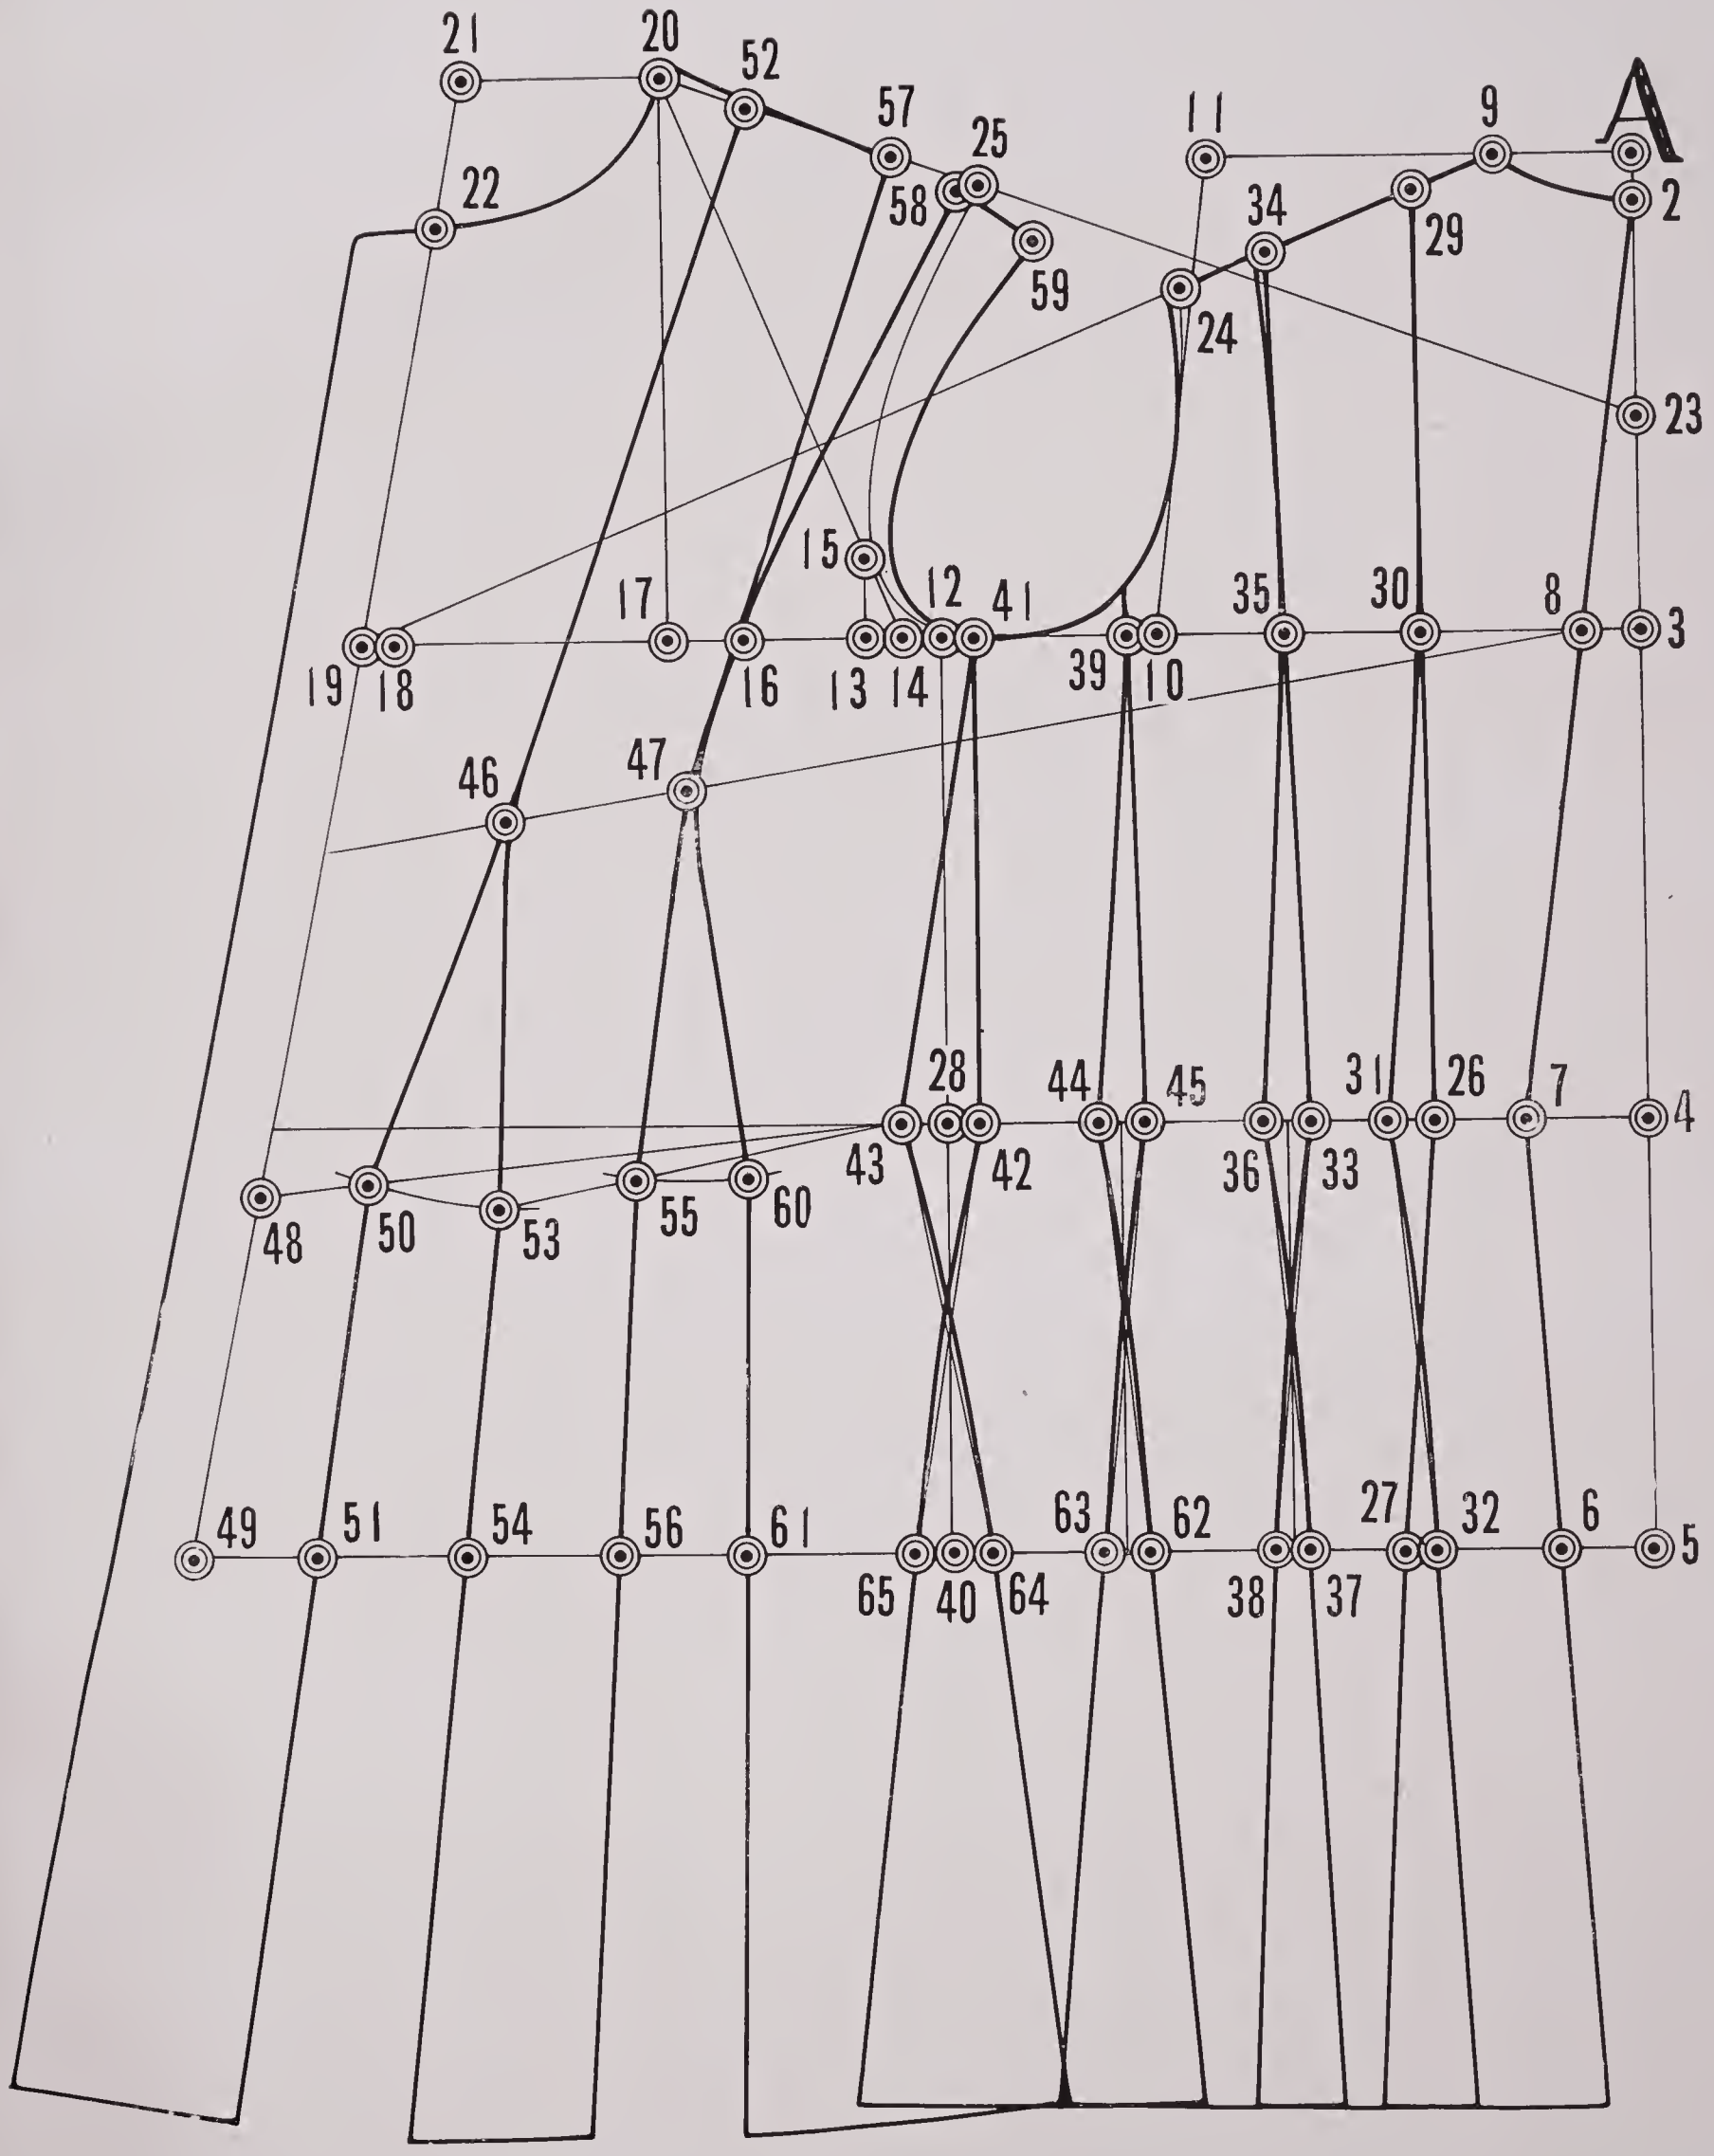
62 from the line squared down from the center between 44 and 45, and

63 from the same line is ⅜ inch respectively; draw a line from 45 through 63 and from 44 through 62 downward.

64 from 40 is ⅝ inch.

65 from 40 is ⅝ inch; draw a line from 52 through 65, and a line from 43 through 64 downward.

Finish as represented.


A
21
20
52
57
25
11
9
22
58
34
29
2
59
24
23
15
17
12
41
35
30
8
3
19
18
16
13
14
39
10
46
47
28
44
45
31
26
7
4
43
42
36
33
48
50
53
55
60
49
51
54
56
61
63
62
27
32
6
5
65
40
64
38
37

"PRINCE ALBERT" CUT TIGHT-FITTED JACKET

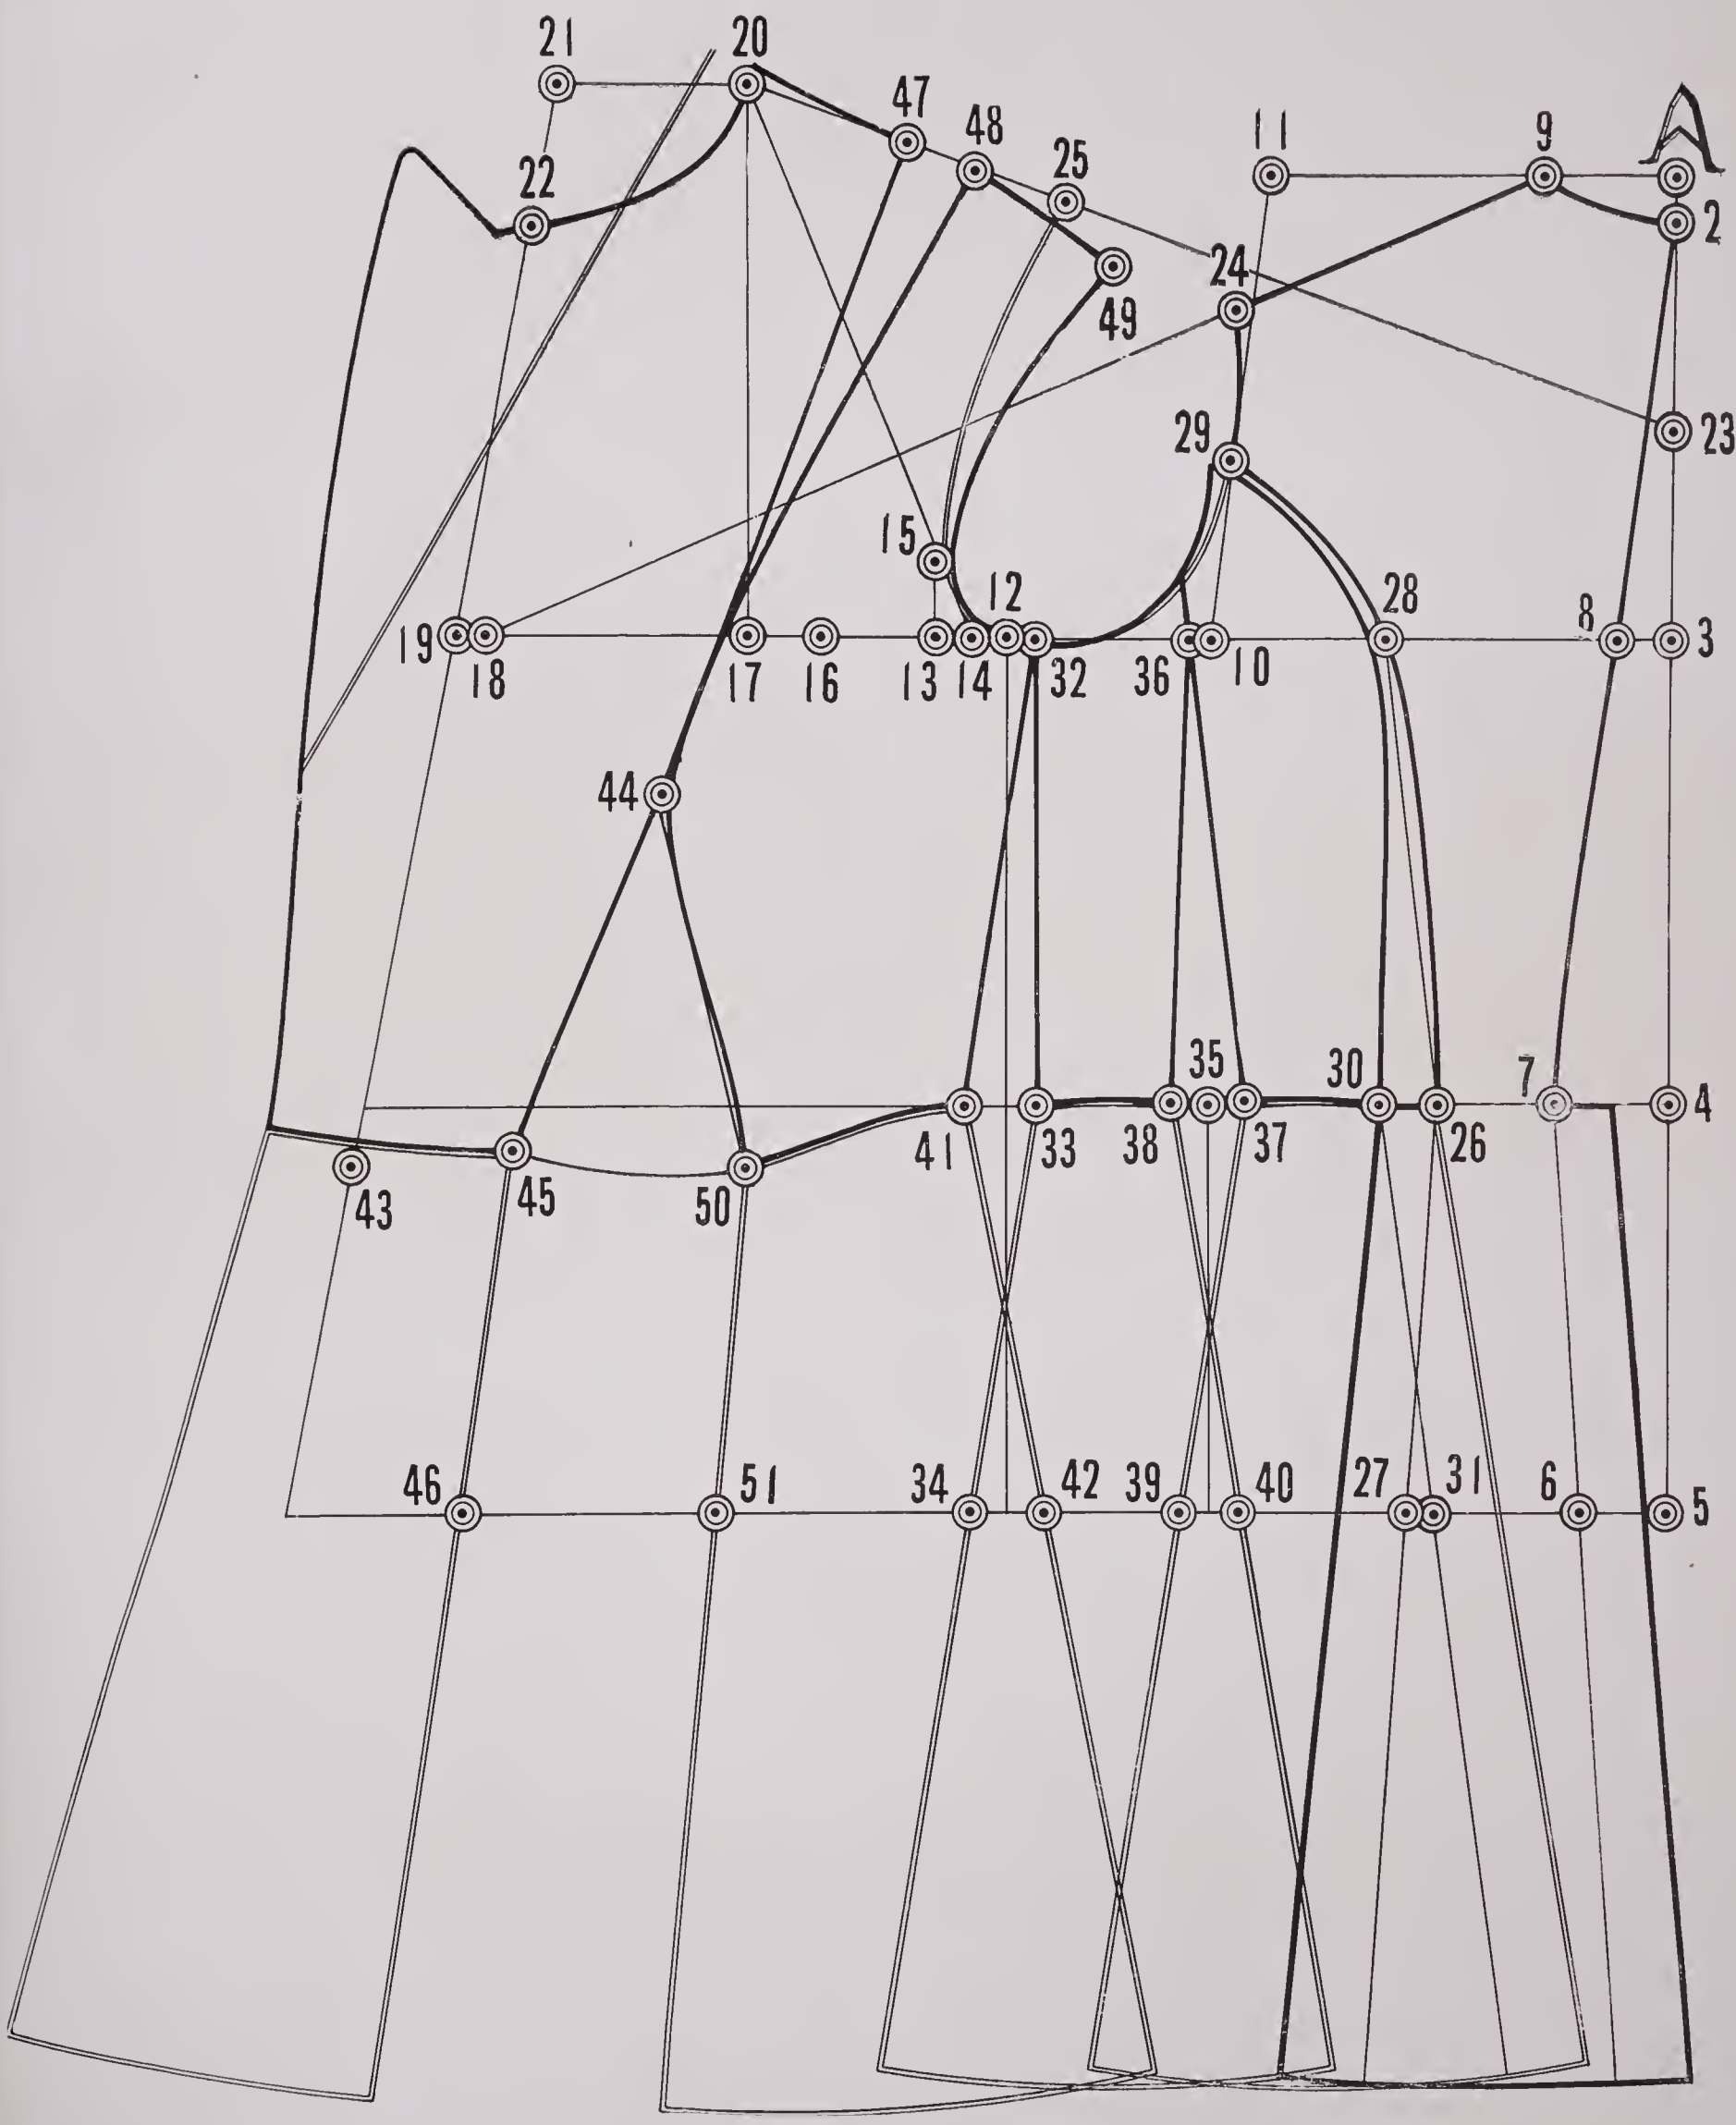
The feature of this diagram is a tight-fitted waist line, cut through at the waistline and the skirt part cut in one piece from the center front to the back seam. The foundation of this jacket and the points up to and including point 25, are the same as described under tight-fitted jacket foundation. The remainder of this diagram—that is, points 26-27 and points 30 to 51—are drafted and are identically the same as described under heading of tight jacket, single dart. The back seam as illustrated curves into the arm scye. A pleat of 1 inch at the waist line and 1½ inches at the bottom is allowed from points 26 and 30 downward. At the center back seam from 7 downward, 1 inch at the waist line and 1½ inches at the bottom is allowed for a vent.

28 from 8 is double the amount as 26 from 7. Connect 26 and 28.

29 from 10 is 3 inches, shape the back seam from 26 through 28 to 29 as represented and shape the side part from 30 through a point ¼ inch in front of 28 to a point ¼ inch in front of 29. Reshape the arm scye from that point to 32 as illustrated by the heavy line formation.

A lap of 2¼ inches at a point about 2½ inches below the bust line, 1½ inches at the waist line and 2¼ inches again at the hip line, is allowed, thus giving a semi-double breasted effect. A peak lapel is generally, although not exclusively, made for this style jacket.

The assembling of the different skirt parts as outlined by the double line formation is illustrated and described on the following page.


21
20
47
48
25
22
11
9
A
2
24
49
23
29
15
12
28
8
3
19
18
17
16
13
14
32
36
10
44
35
30
7
4
41
33
38
37
26
43
45
50
46
51
34
42
39
40
27
31
6
5

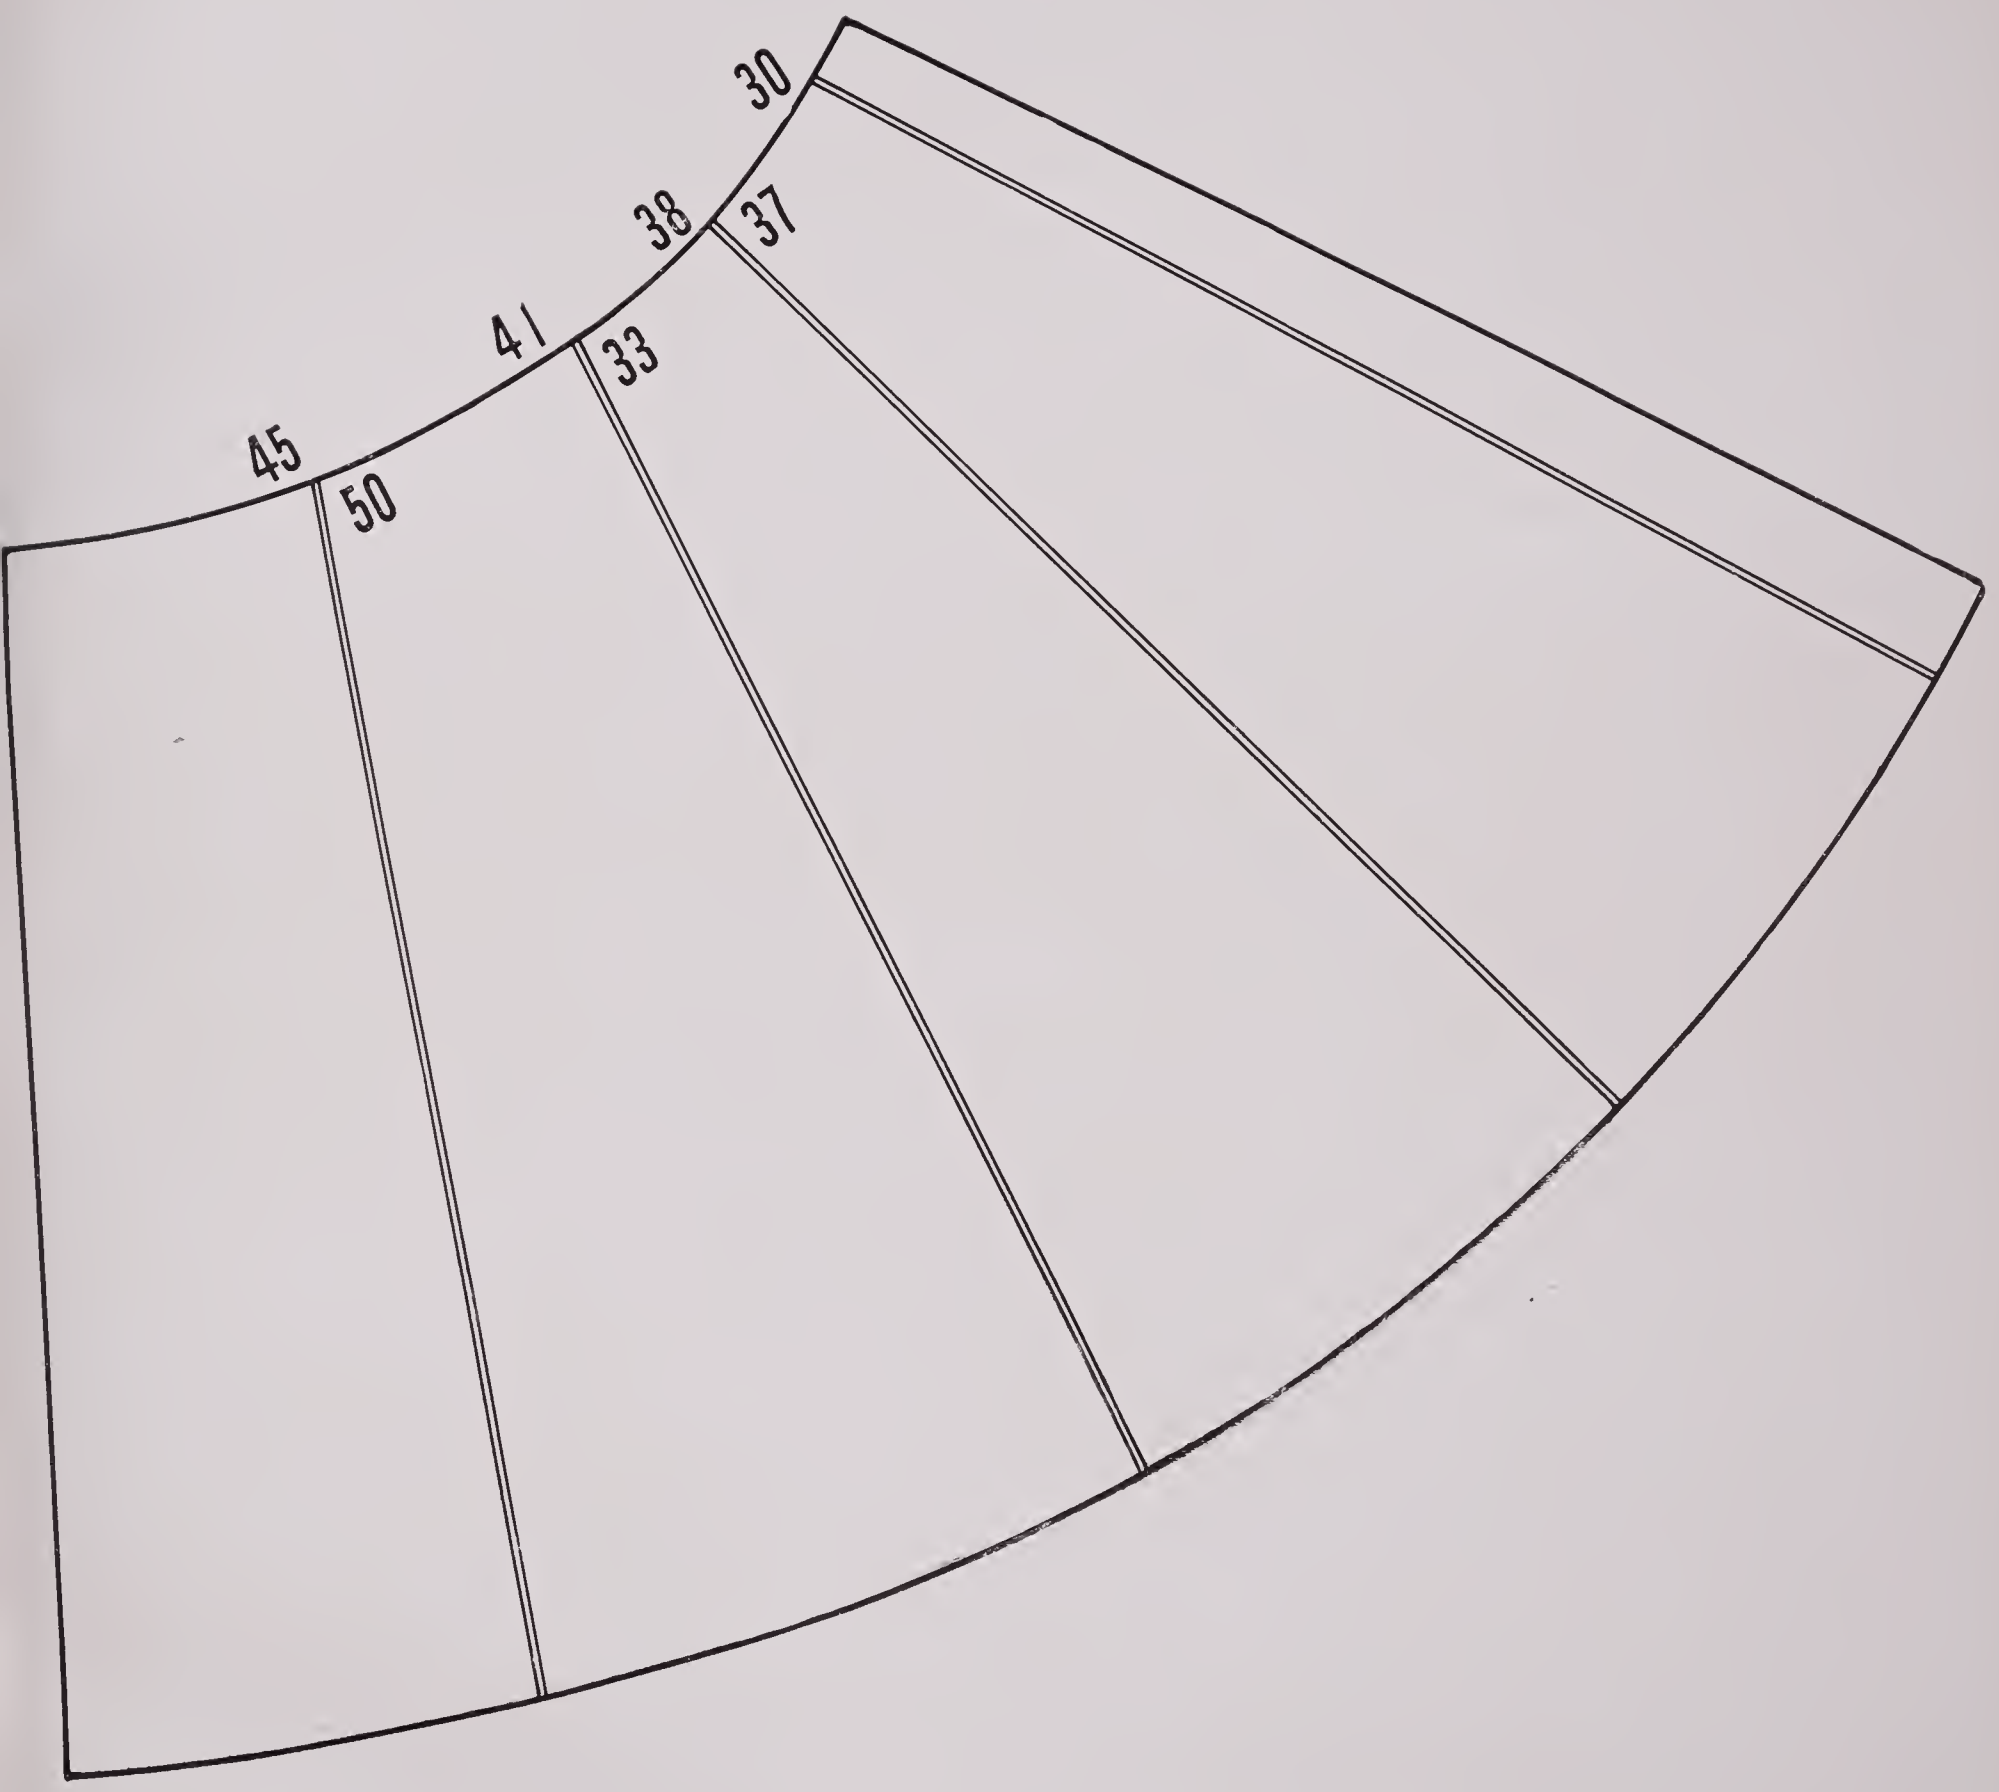
"PRINCE ALBERT" CUT TIGHT-FITTED JACKET

continued

The skirt part of the jacket from the preceding page is manipulated as follows:

The skirt parts of the different parts of the jacket from points 45-50, 41-33, 38-37 and 30 downward, after being traced and cut out, are laid together as indicated by the double line formation and copied as one piece.

Should extra fulness or flare be desired at the bottom of the skirt, the different parts must be spread at the bottom to the amount necessary to give the desired effect.


30
38
37
41
33
45
50

MANNISH JACKET

This diagram illustrates a strictly mannish cut in a lady's jacket.

The construction points up to and including point 25, and the measurements, are the same as described on page 36.

26 from 19 is 3 inches.

27 is a point gained by squaring from the bust line through point 26, downward.

28 from 7 is 2 inches less than 10 from 8.

29 from 6 is 1 inch more than 28 from 7; draw a line from 28 through 29 downward.

30 from 10 is 1 inch; connect 30 and 28.

31 from 10 is 1¾ inches; shape the back seam from 28 through 30 to 31, as represented.

32 from 28 is 1 inch; shape a line from 32 through a point ¼ inch in front of 30 to a point ¼ inch in front of 31, as indicated.

33 from 29 is ½ inch; draw a line from 32 through 33 downward.

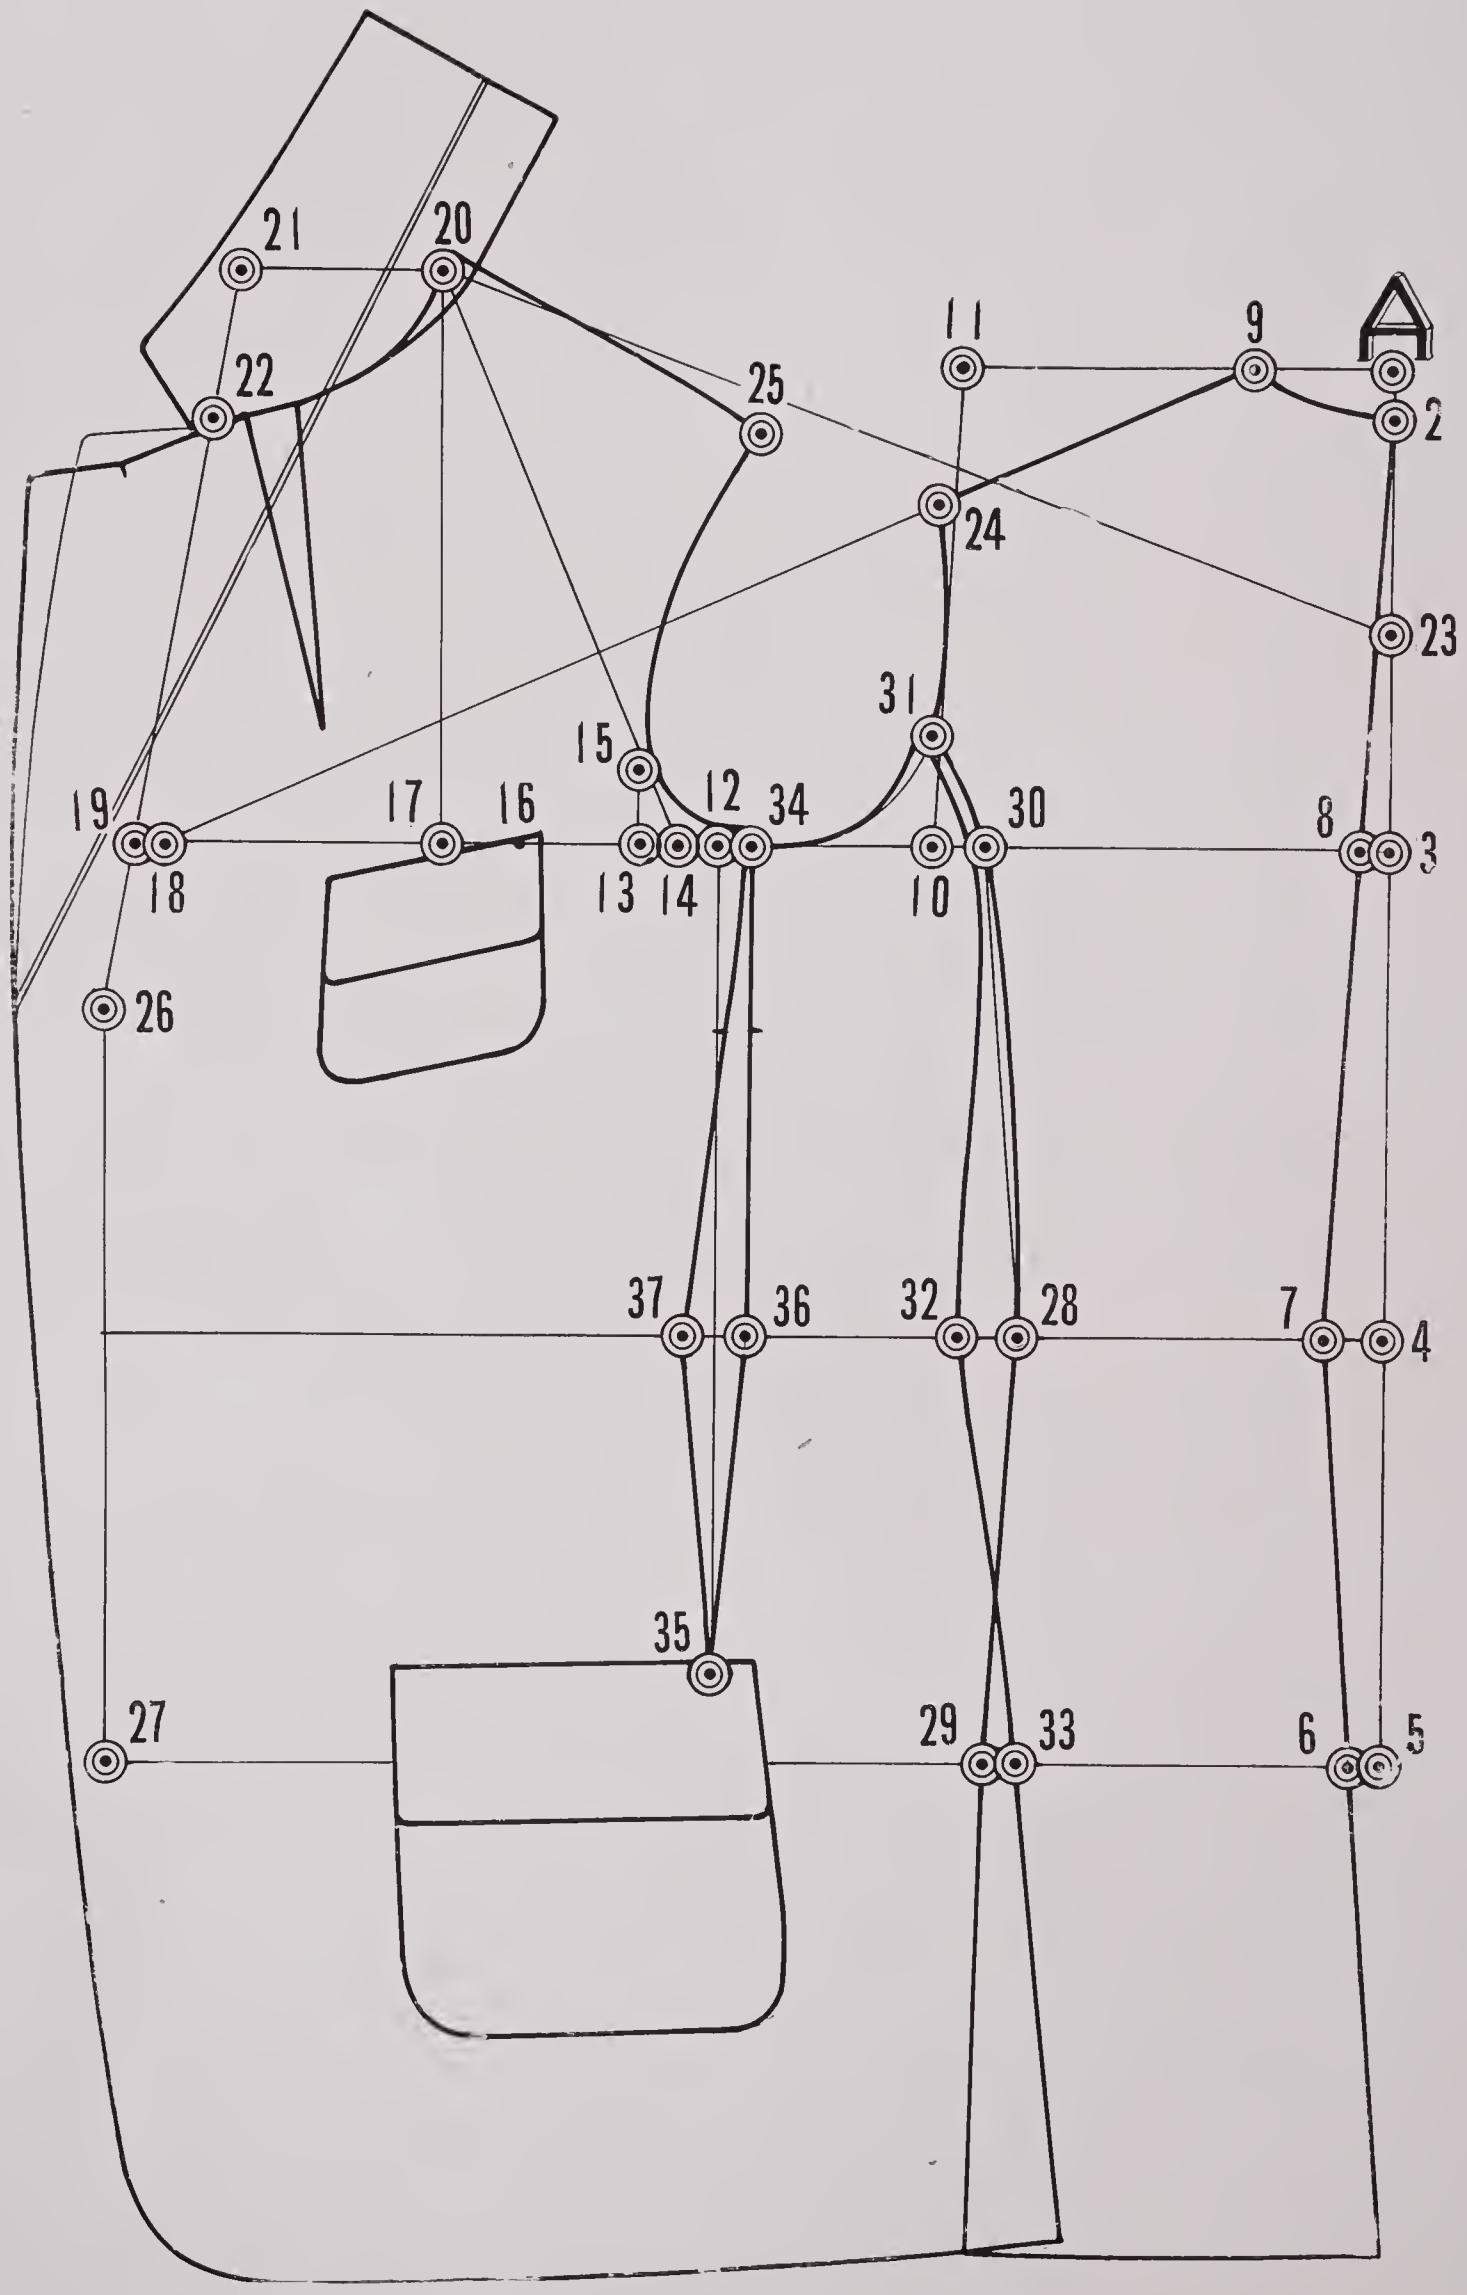
34 from 12 is ½ inch.

35 is a point on the line squared down from 12.

36 from the blade is ½ inch and 37 from the blade line is the same. Connect 36 and 37 to 34 and 36 and 37 to 35, as represented.

A dart of about 1 inch as illustrated is generally cut under the lapel to shorten the front.

Finish as per diagram.


21
20
22
25
11
9
A
2
24
23
31
15
19
17
16
12
34
30
8
3
18
13
14
10
26
37
36
32
28
7
4
35
27
29
33
6
5

SEMI-FITTED JACKET

Erect Form to Special Measures.

To illustrate the special features of this form to better advantage a large measurement has been selected. The principle laid down for the drafting of this pattern is identically the same as would be applied to a smaller measurement, it is therefore for the reason above mentioned that these comparatively large measurements are used for demonstration.

The measures are as follows:

51 bust	8 half back width
31 waist	12 blade
46 hips	14¾ front depth
7½ back depth	16½ top of dart
15½ back waist length	26 front waist length
32 full length	

To Draft.

A is the point from which to square both ways.

2 from A is ½ bust on the 24ths less two.

3 from 2 is the back depth.

4 from 2 is the back waist length.

5 from 4 is 8½ inches. The hip measures in this case have been taken 8½ inches below the waist line. Square forward from 3-4 and 5.

6 from 5 is ½ inch.

7 from 4 is 1 inch. Connect 7 to 2 and draw a line from 7 through 6 downward.

8 is a point on the line 7-2.

9 from A is ½ bust on the 8ths less two, shape the neck line from 9 to 2.

10 from 8 is the half back width, and

11 from A is the same. Connect 10 and 11.

12 from 8 is the blade, square downward.

13 from 12 is 1½ inch. 1/16 inch is added to 1¼ inch for every 2 inches more bust from 42 bust upward; square up from 13.

14 is half way between 12 and 13.

15 from 13 is 1¼ inch.

16 from 12 is ½ bust on the 6ths.

17 from 16 or 1¾ inch. ⅛ inch is added to 1¼ inch for every 2 inches more bust from 42 bust upward; square up from 17.

18 from 8 is ½ bust, connect 18 and 9.

19 from 18 is ½ inch.

20 from 14 is the front depth, as applied, less the width of the back part of the neck 9-2, at 14 to where it falls on the line squared up from 17; square forward.

21 from 20 is ½ bust on the 6ths, draw a line from 21 through 19 downward.

22 from 21 is ½ bust on the 8ths; shape the front neck line from 20 to 22.

23 is a point half way between 2 and 3; connect 23 and 20.

24 from 7 is 1½ inch less than 26 from 2 on a straight line.

25 from 6 is ½ more than 24-7; draw a line from 24 through 25 downward.

26 from 9 is ½ shoulder width, 3 inches; connect 24 and 26.

27 is a point on the line 24-26.

28 from 24 is 1 inch.

29 from 25 is ½ inch; draw a line from 28 through 29 downward.

30 from 26 is ½ inch. That amount of supression between the two points is taken on account of it being a large measurement. For a small, erect figure, ¼ inch or less is sufficient. Shape the back seam from 28 to 30 as per diagram.

31 from 30 is the same as 26-9; shape the back scye from 31 to ½ inch below 12 as illustrated.

32 is a point on the line squared down from 12.

33 is a point on the same line.

34 from 12 is ½ inch.

35 from 32 is ½ inch, and

36. from 32 is the same; connect 35 and 36 to 34.

37 is the top of dart gained by applying it less the width of the back part of the neck 9-2 at 20 as to where it falls 5¼ inches in back of the center front line.

39 is a point gained by squaring 37 from a point 1¼ in back of 38.

40 from 38 is 1¼ inch; draw a line from 39 through 40 downward.

41 from 40 is the same as 24 from 7.

42 from the center front line is ¼ inch more than 41 from 40.

43 from 20 is ½ shoulder width; shape the shoulder from 43 to a point ⅜ inch above 20 and the front from 43 through 37-41 and 42 downward.

44 from 43 is ½ bust on the 6ths on a sweep cast at 43 pivoted at 37; square back from points 44-37.

45 from 44 is ½ shoulder width; shape the front scye from 45 through 15-14, to ½ inch below 12.

46 from 36 is the same as 35 from 28, on a sweep cast at 41 pivoted at 37.

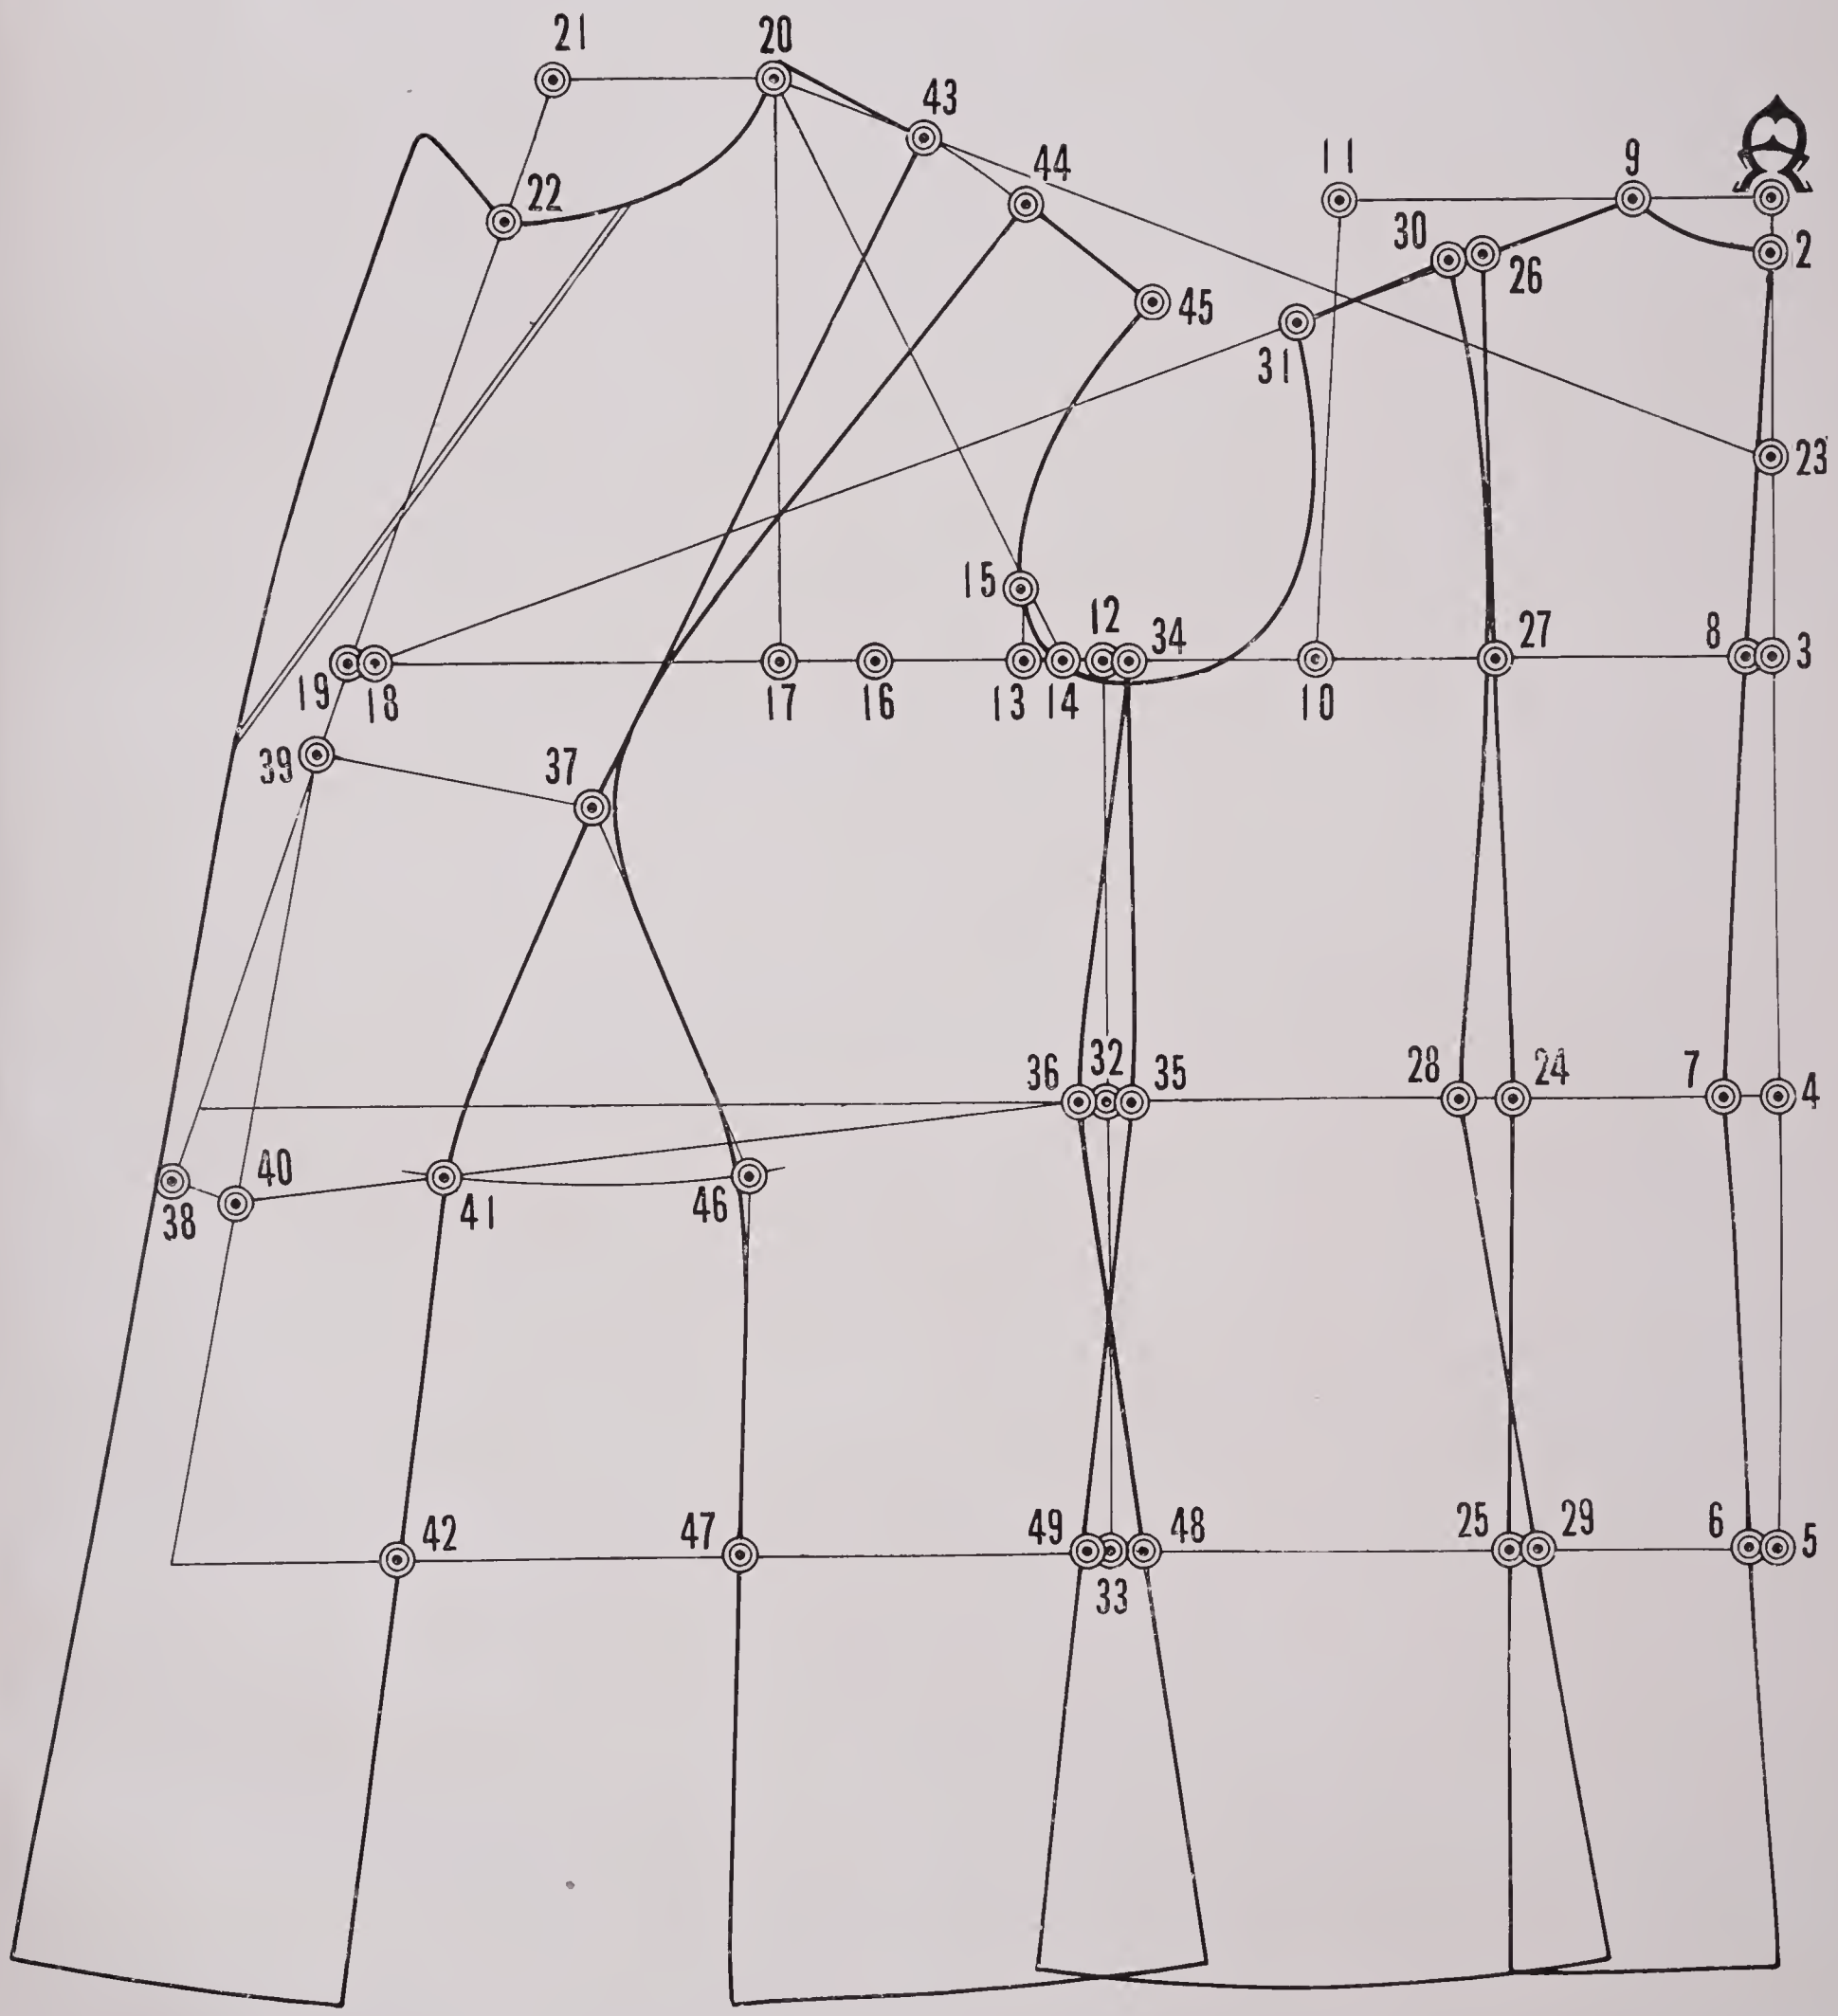
47 from 42 is ½ inch more than 46 from 41; draw a line from 46 through 47 downward and shape the front seam from 44 through a point about ⅜ inch back at 37 to a point about 2 inches below 46.

48 from 33 is ½ inch, and

49 from 33 is the same; draw a line from 36 through 48 and from 35 through 49 downward.

A lap of 1½ inches allowed to the front.

Finish as represented.


21
20
43
44
22
11
9
30
26
2
45
31
23
15
12
34
27
8
3
19
18
17
16
13
14
10
39
37
36
32
35
28
24
7
4
40
38
41
46
42
47
49
48
25
29
6
5
33

SEMI-FITTED JACKET

Stooping Form to Special Measure.

A semi-fitted jacket has been selected to illustrate the construction of a pattern for a stooping form principally for the reason that the position of the seams of this jacket is ideal and are very conveniently located to illustrate and to bring out the different characteristics of this form.

The measures are as follows:

43 bust	8 half back width
36 waist	11¾ blade
49 hips	12¾ front depth
7½ back depth	16 top of dart
16 back waist length	21½ front waist length

To Draft.

A is the point from which to square both ways.

2 from A is ½ bust on the 24ths less 2.

3 from 2 is the back depth.

4 from 2 is the back waist length.

5 from 4 is 8 inches; the hip measures having been taken 8 inches below the waist line.

6 from 5 is ½ inch.

7 from 4 is 1 inch; draw a line from 7 to 2, and from 7 through 5 downward.

8 is a point on the line 7-2.

9 from A is ½ bust on the 8ths less 2; shape the back part of the neck from 9 to 2.

10 from 8 is the half back width, and

11 from A is the same; connect 10 and 11.

12 from 8 is the blade; square downward.

13 from 12 is 1¼ inch; square up.

14 is a point half way between 12 and 13.

15 from 13 is 1¼ inch.

16 from 12 is ½ bust on the 6ths.

17 from 16 is 1¼ inch; square up.

18 from 8 is ½ bust; connect 18 and 9.

19 from 18 is ½ inch.

20 is the front depth gained, by applying it, less the width of the back part of the neck, 9-2 at 14 as to where it falls on the line squared up from 17; connect 14 and 20, and square forward.

21 from 20 is ½ bust on the 6ths, draw a line from 21 through 19 downward.

22 from 21 is ½ bust on the 8ths; shape the front part of the neck from 20 to 22.

23 is a point half way between 2 and 3; connect 23 and 20.

24 from 9 is the shoulder width plus 1 inch; the shoulder width is 6 inches. Shape the back scye from 24 to 12 as per diagram.

25 from 20 is the shoulder width; shape the front scye from 25 to 12.

26 from 7 is 1½ inch less than 28 from 2 on a straight line.

27 from 6 is ¾ inch more than 26 from 7; draw a line from 26 through 27 downward.

28 from 9 is ½ the shoulder width; connect 26 and 28.

29 is a point on the line 26-28.

30 from 26 is 1 inch.

31 from 27 is ⅝ inch; draw a line from 30 through 31 downward.

32 from 28 is 1 inch, and ¼ inch above the line 9-18; shape the back seam from 30 through 29 to 32 as represented. Note the big supression 32-28 thus giving a round or stooping back part.

33 from 12 is ½ inch.

34 is a point on the line squared down from 12.

35 is on the same line.

36 from 34 is ½ inch; connect 36 and 33.

37 from 35 is ¾ inch; connect 37 and 36.

38 from 34 is ½ inch; connect 38 and 33.

39 from 35 is ¾ inch; connect 39 and 38.

40 is a point on the line squared from 4.

41 is the top of dart, gained by applying it, less the width of the back part of the neck 9-2 at 20 as to where it falls 4½ inches in back of the center front line.

42 is the front waist length, gained by applying it, less the back part of the neck 9-2 at 20, as to where it falls on the center front line; connect 42 and 38.

In this case, it will be noted, the front waist length falls above the back waist line, illustrating a short front and a long back; in a normal or in an erect figure the front waist length falls in all cases below the back waist line.

43 from 42 is the same as 26 from 7.

44 from the center front line is ¼ more than 43 from 42; draw a line and 43 through 44 downward.

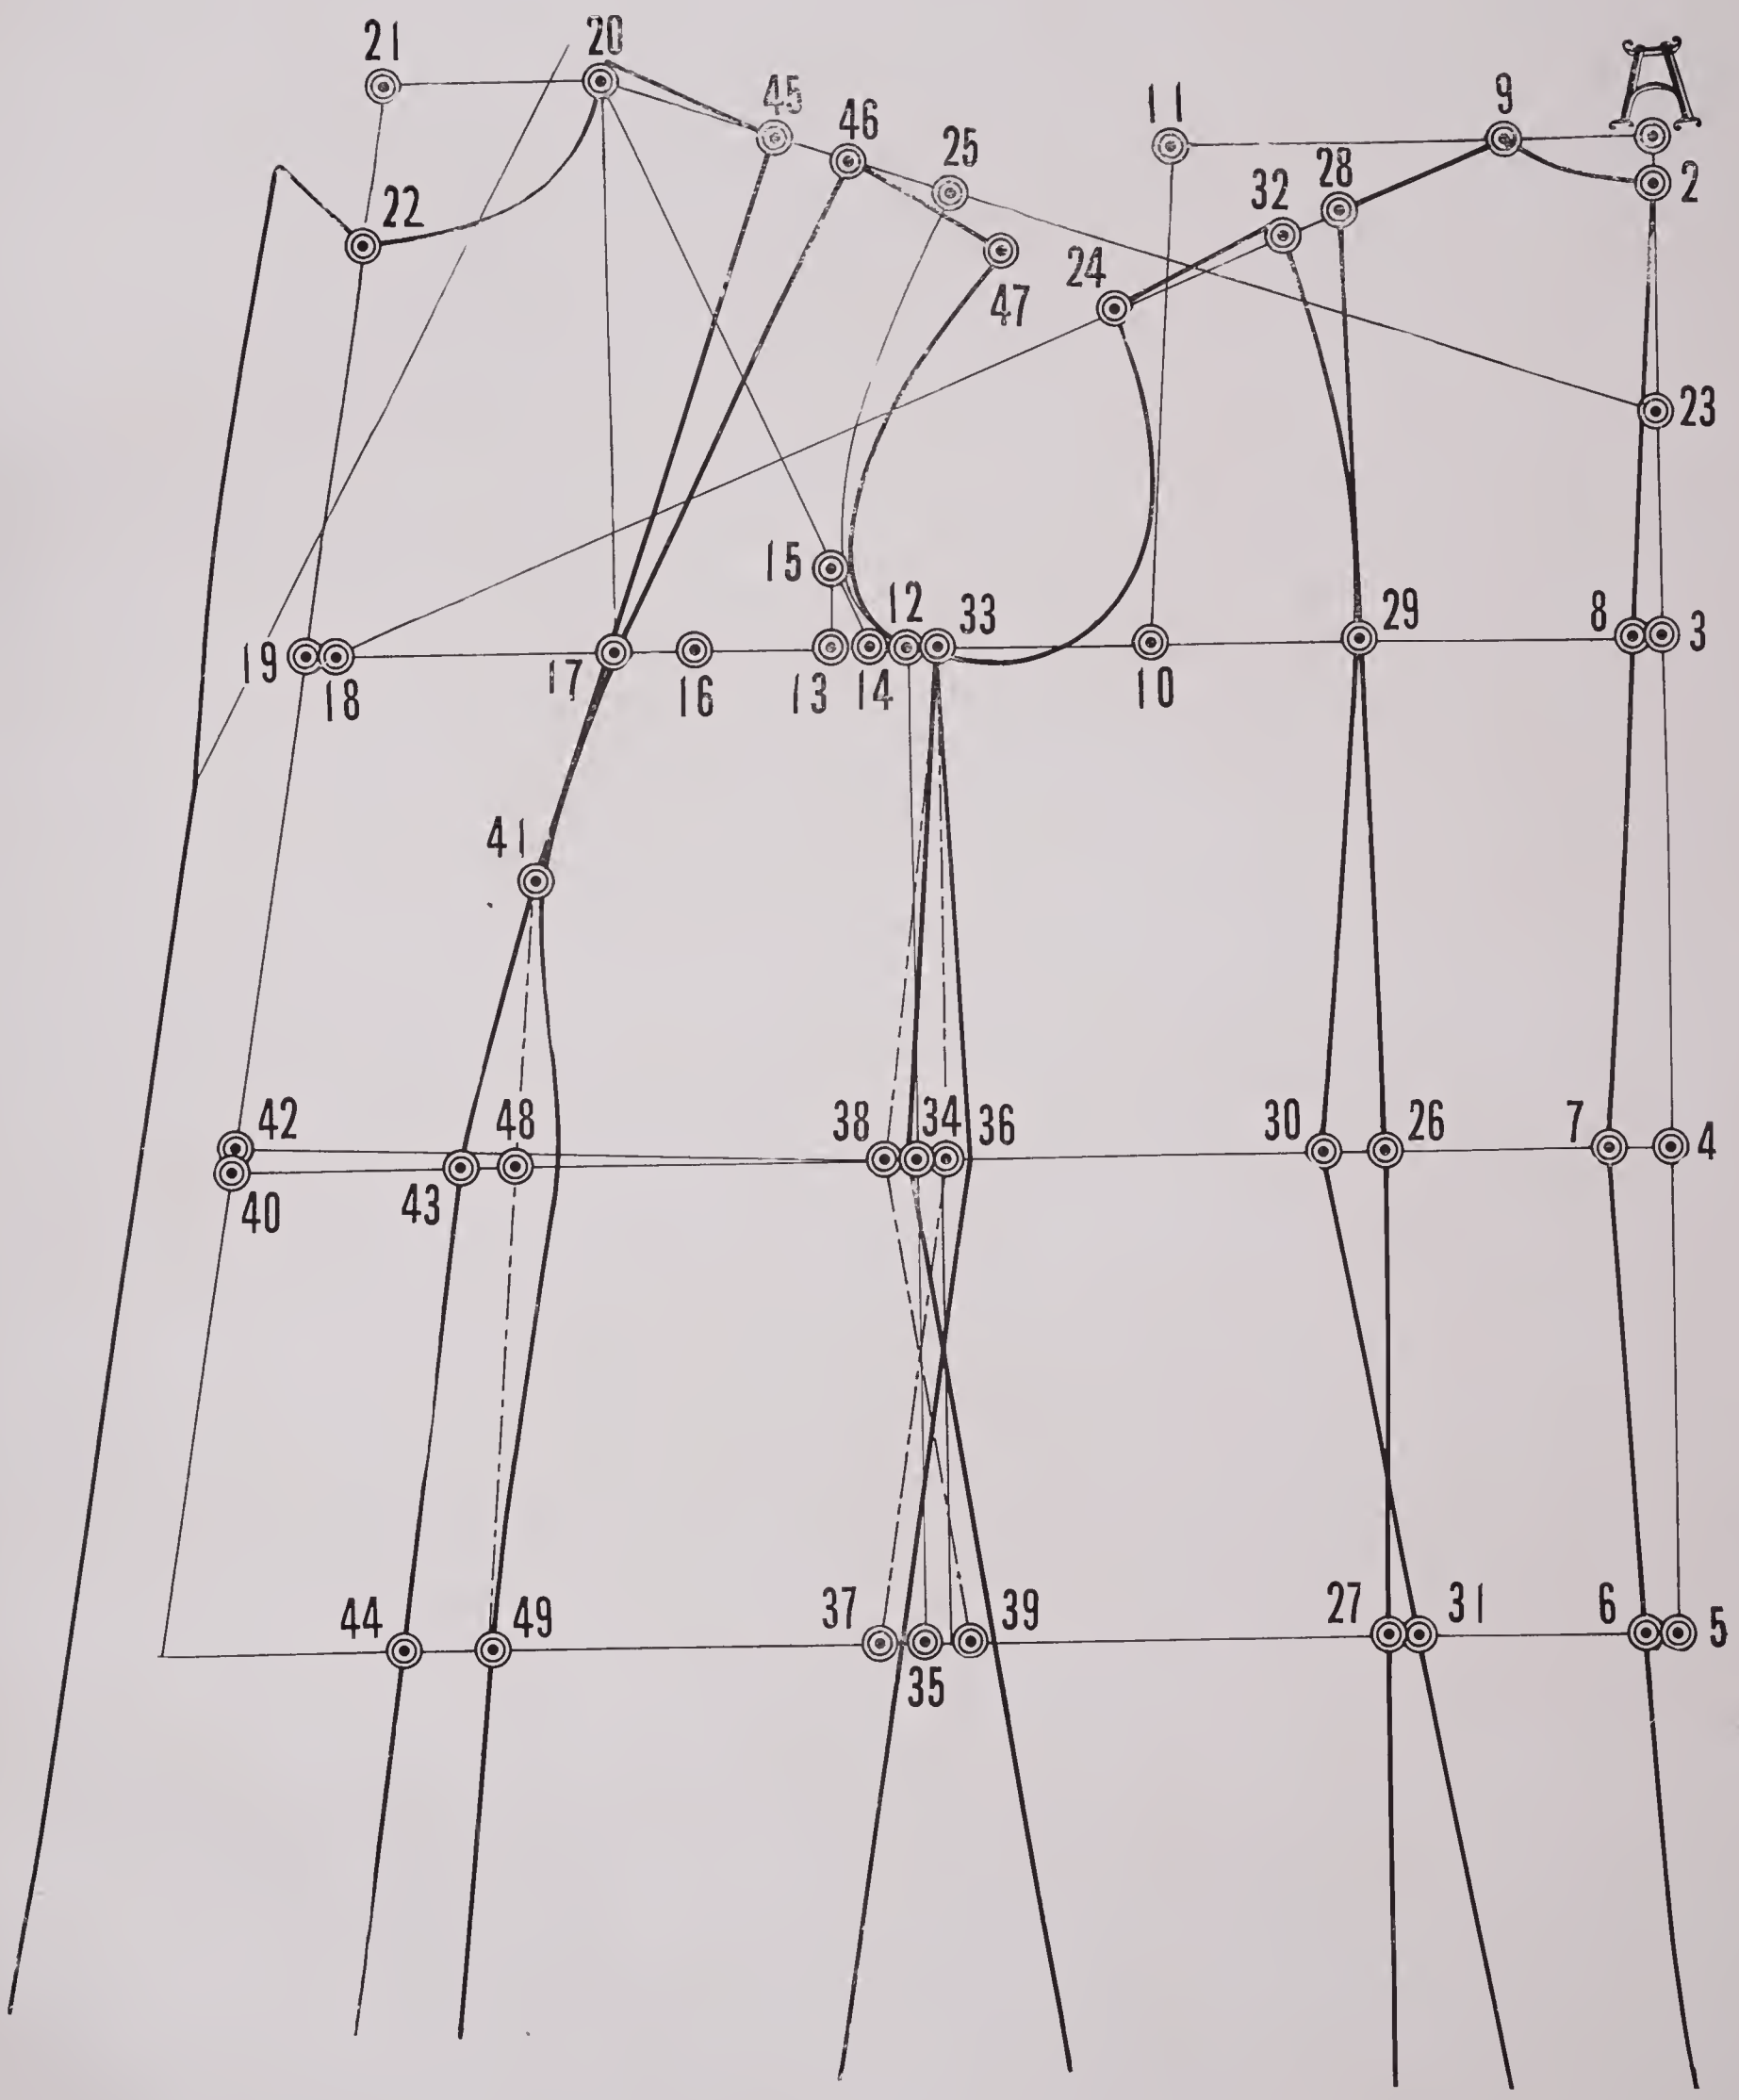
45 from 20 is ½ shoulder width; shape the front shoulder from 45 to a point ⅜ inch above 20 and draw a line from 45 through 41 to 43 as represented.

46 from 45 is 1¼ inch; shape the front seam from 46 to 41 as illustrated.

47 from 46 is ½ shoulder width at a point ¾ inch below the front shoulder line; connect 47 and 46 and reshape the front scye from 47 to 12 as per diagram.

48 from 38 is the same as 36 from 30.

49 from 44 is ½ inch more than 48 from 43; draw a line from 41 through and 49 downward. The broken line formation at the front and side seams indicate the points obtained by strictly following the measures and rule as used for normal figures. The front seam must now be reshaped from 41 through a point ¾ in back of 48 to 49 as indicated by the heavy line to give the front a semi-fitted effect, and the side seam shifted backward until both the front and back side parts measure the same at the waist line. The heavy line formation at the side seam clearly illustrate the manipulation of the same. Finish as per diagram.


21
20
45
46
25
11
9
22
32
28
2
47
24
23
15
12
33
29
8
3
19
18
17
16
13
14
10
41
42
48
38
34
36
30
26
7
4
40
43
44
49
37
39
27
31
6
5
35

THE CAPE

The construction of a cape is more or less of a manipulation, as it is not drafted directly as is a coat or jacket.

In the accompanying diagram a one and a two-piece cape is illustrated.

A plain box coat is first drafted to the required measures or size and cut out.

To Draft

A is the point from which to square both ways, the back part of the coat is then laid with the center back on the line A-2, and the front part of the coat with the center front on the line A-3 in such a way that the shoulder points of both back and front should be ¼ inch apart at point 8.

The neck and shoulder of the front and back parts is then copied.

2 is the neck point at the center back.

3 is the neck point at the center front; connect 2 and 3.

4 from 3 is ½ of the line 2-3 less ½ inch.

5 from 2 is the length of the cape.

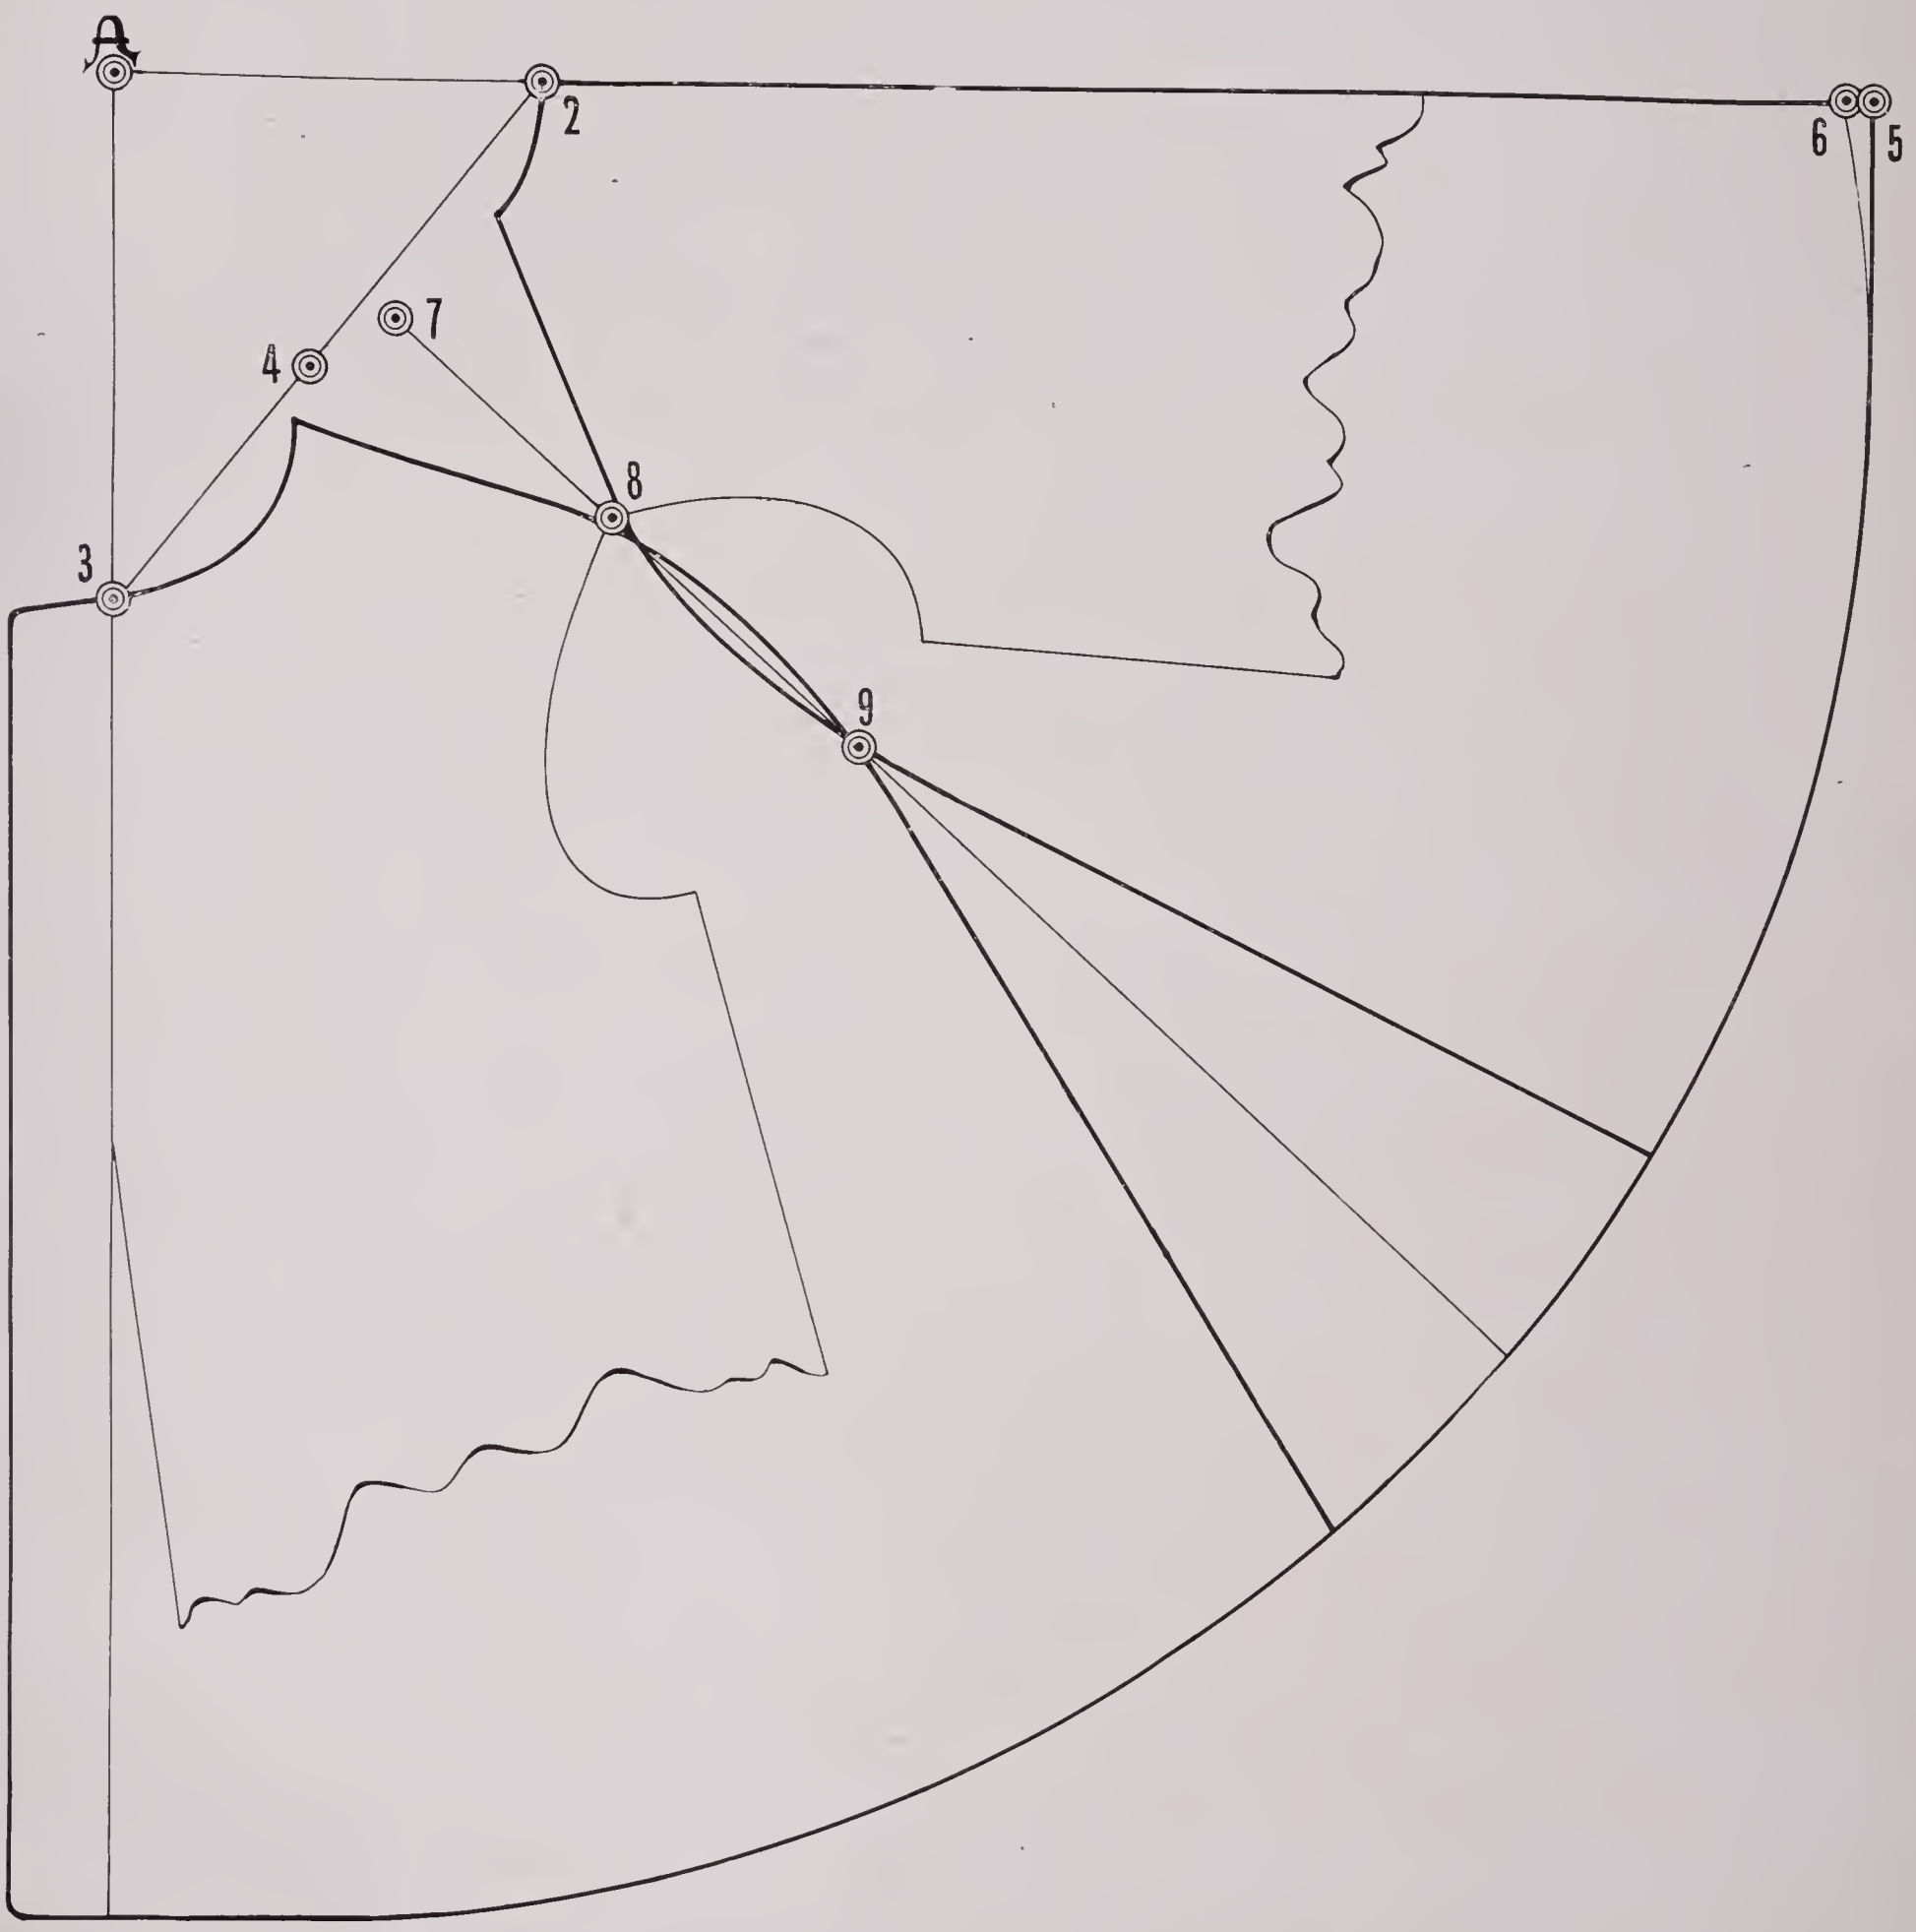
6 from 5 is ⅝ inch; cast a sweep from 6 forward, pivoting at 4, and connect 5 with the lowest part of the sweep. This concludes the one-piece cape.

While the one-piece cape is cut with a dart on the shoulder only, the two-piece cape is cut with a seam from the shoulder all the way down, as follows:

7 is a point halfway between the two neck points.

8 is a point halfway between the two shoulder points. Draw a line from 7 through 8 downward.

9 from 8 is 6 inches. Shape the side of the front and back parts from 8 through 9 downward, as illustrated, and finish as represented.


A
2
6
5
7
4
8
3
9

TWO-PIECE SLEEVE

To construct this sleeve the armhole of the jacket or coat for which this sleeve is intended is traced out, including the bust line, the front notch of the armhole, 1¼ inches above the bust line and another notch 1¾ inches above the bust line on the back part.

The Measurements are as follows:

From armpit to elbow, 7½ inches.
Inside sleeve length, 19 inches.
Width at elbow, 12 inches.
Width at wrist, 9 inches.

To Draft

A Line is drawn as indicated on diagram from 2 to 7.

1 is a point from which to square out both ways, holding the square at point 1 on the line 2-7 and ½ inch away from that line at a point 12 inches below 1 as indicated by the broken line formation. The armhole is then laid with the bust line on the line squared out from 1 with the front notch of the armhole crossing the line 2-7, as indicated by the broken line formation, the armhole is then copied between the front and back notch of the armhole.

The circumference of the armhole is then measured, deducting from same 2½ inches, thus giving the working number to construct the upper part of the sleeve, which in this case is 15.

2 from 1 is 15 on the 4ths; draw a line parallel to the line squared out from 1.

3 from 2 is 15 on the ½.

4 is a point half way between 2 and 3; square up.

5 from 4 is 15 on the 12ths.

6 from 1 is the elbow, 7½ inches; square backward.

7 from 1 is the full length, 19 inches.

8 from 6 is 1½ inches; connect 7 and 8 and draw a line from 8 to the front notch of the armhole.

Square backward from 8.

9 from 8 is half the elbow width.

10 from 9 is 1 inch.

11 from 9 is 1 inch; connect 10 and 3 and 11 and 3.

12 from 7 is 4½ inches on a sweep cast at 7 pivoted at 3; connect 10 and 11 to 12.

13 from the line drawn up from 8 is 1¼ inches, and

14 from the same line is 1¼ inches.

15 from 8 is 1 inch; connect 15 and 13.

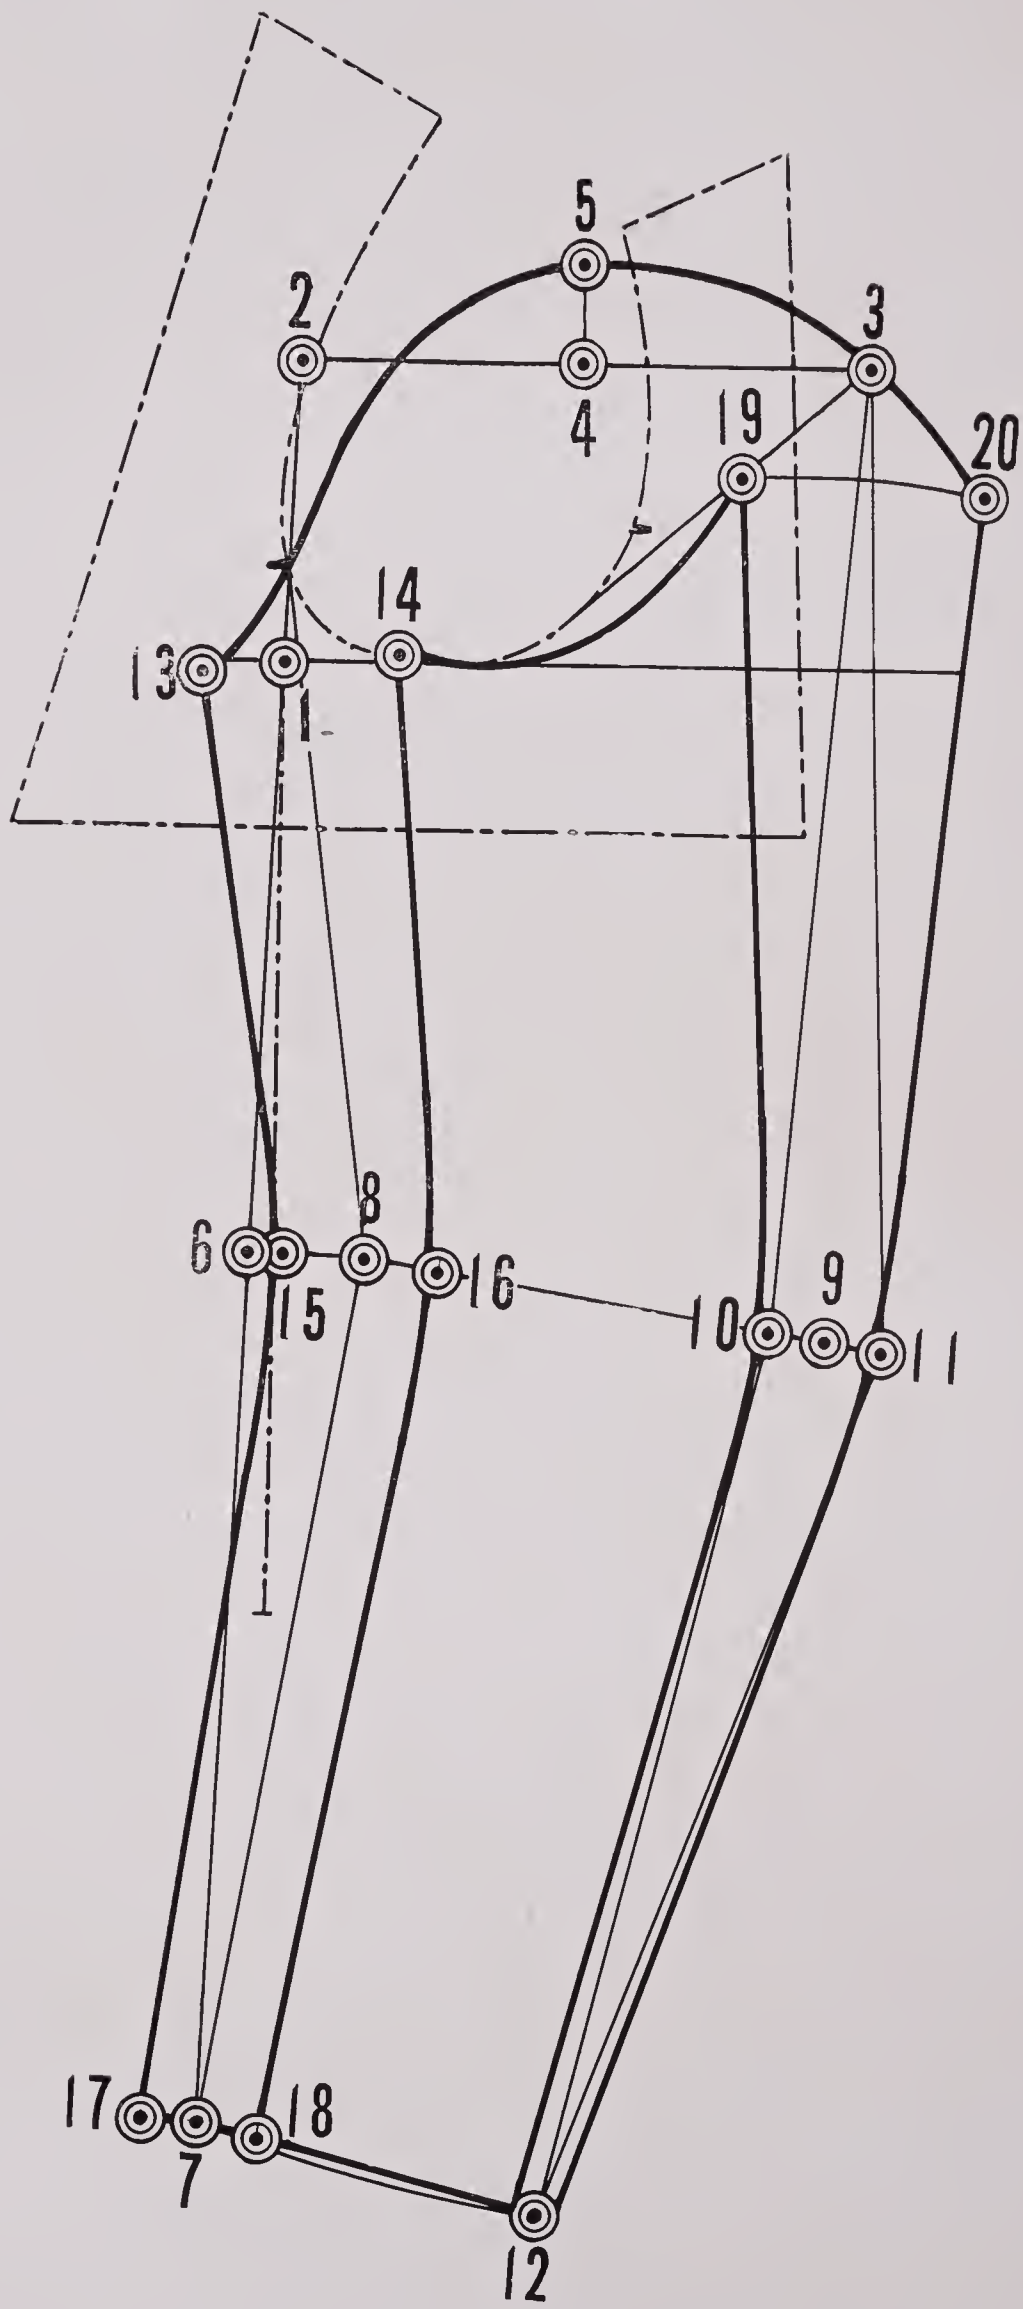
16 from 8 is 1 inch; connect 16 and 14.

17 from 7 is ¾ inch; connect 17 and 15.

18 from 7 is ¾inch, connect 18 and 16.

19 from the back notch on armhole is 1 inch on a line drawn from 3 to the armhole.

20 from the line 11-3 is the same as 19 from the line 10-3; on a sweep cast at 19 pivoted at 9. Shape the head of the top sleeve from 20 through 3-5 to 13 and the under sleeve from 19 to 14 as per diagram. Finish as represented.


5
2
3
4
19
20
14
13
1
8
6
15
16
10
9
11
17
18
7
12

THE RAGLAN SLEEVE

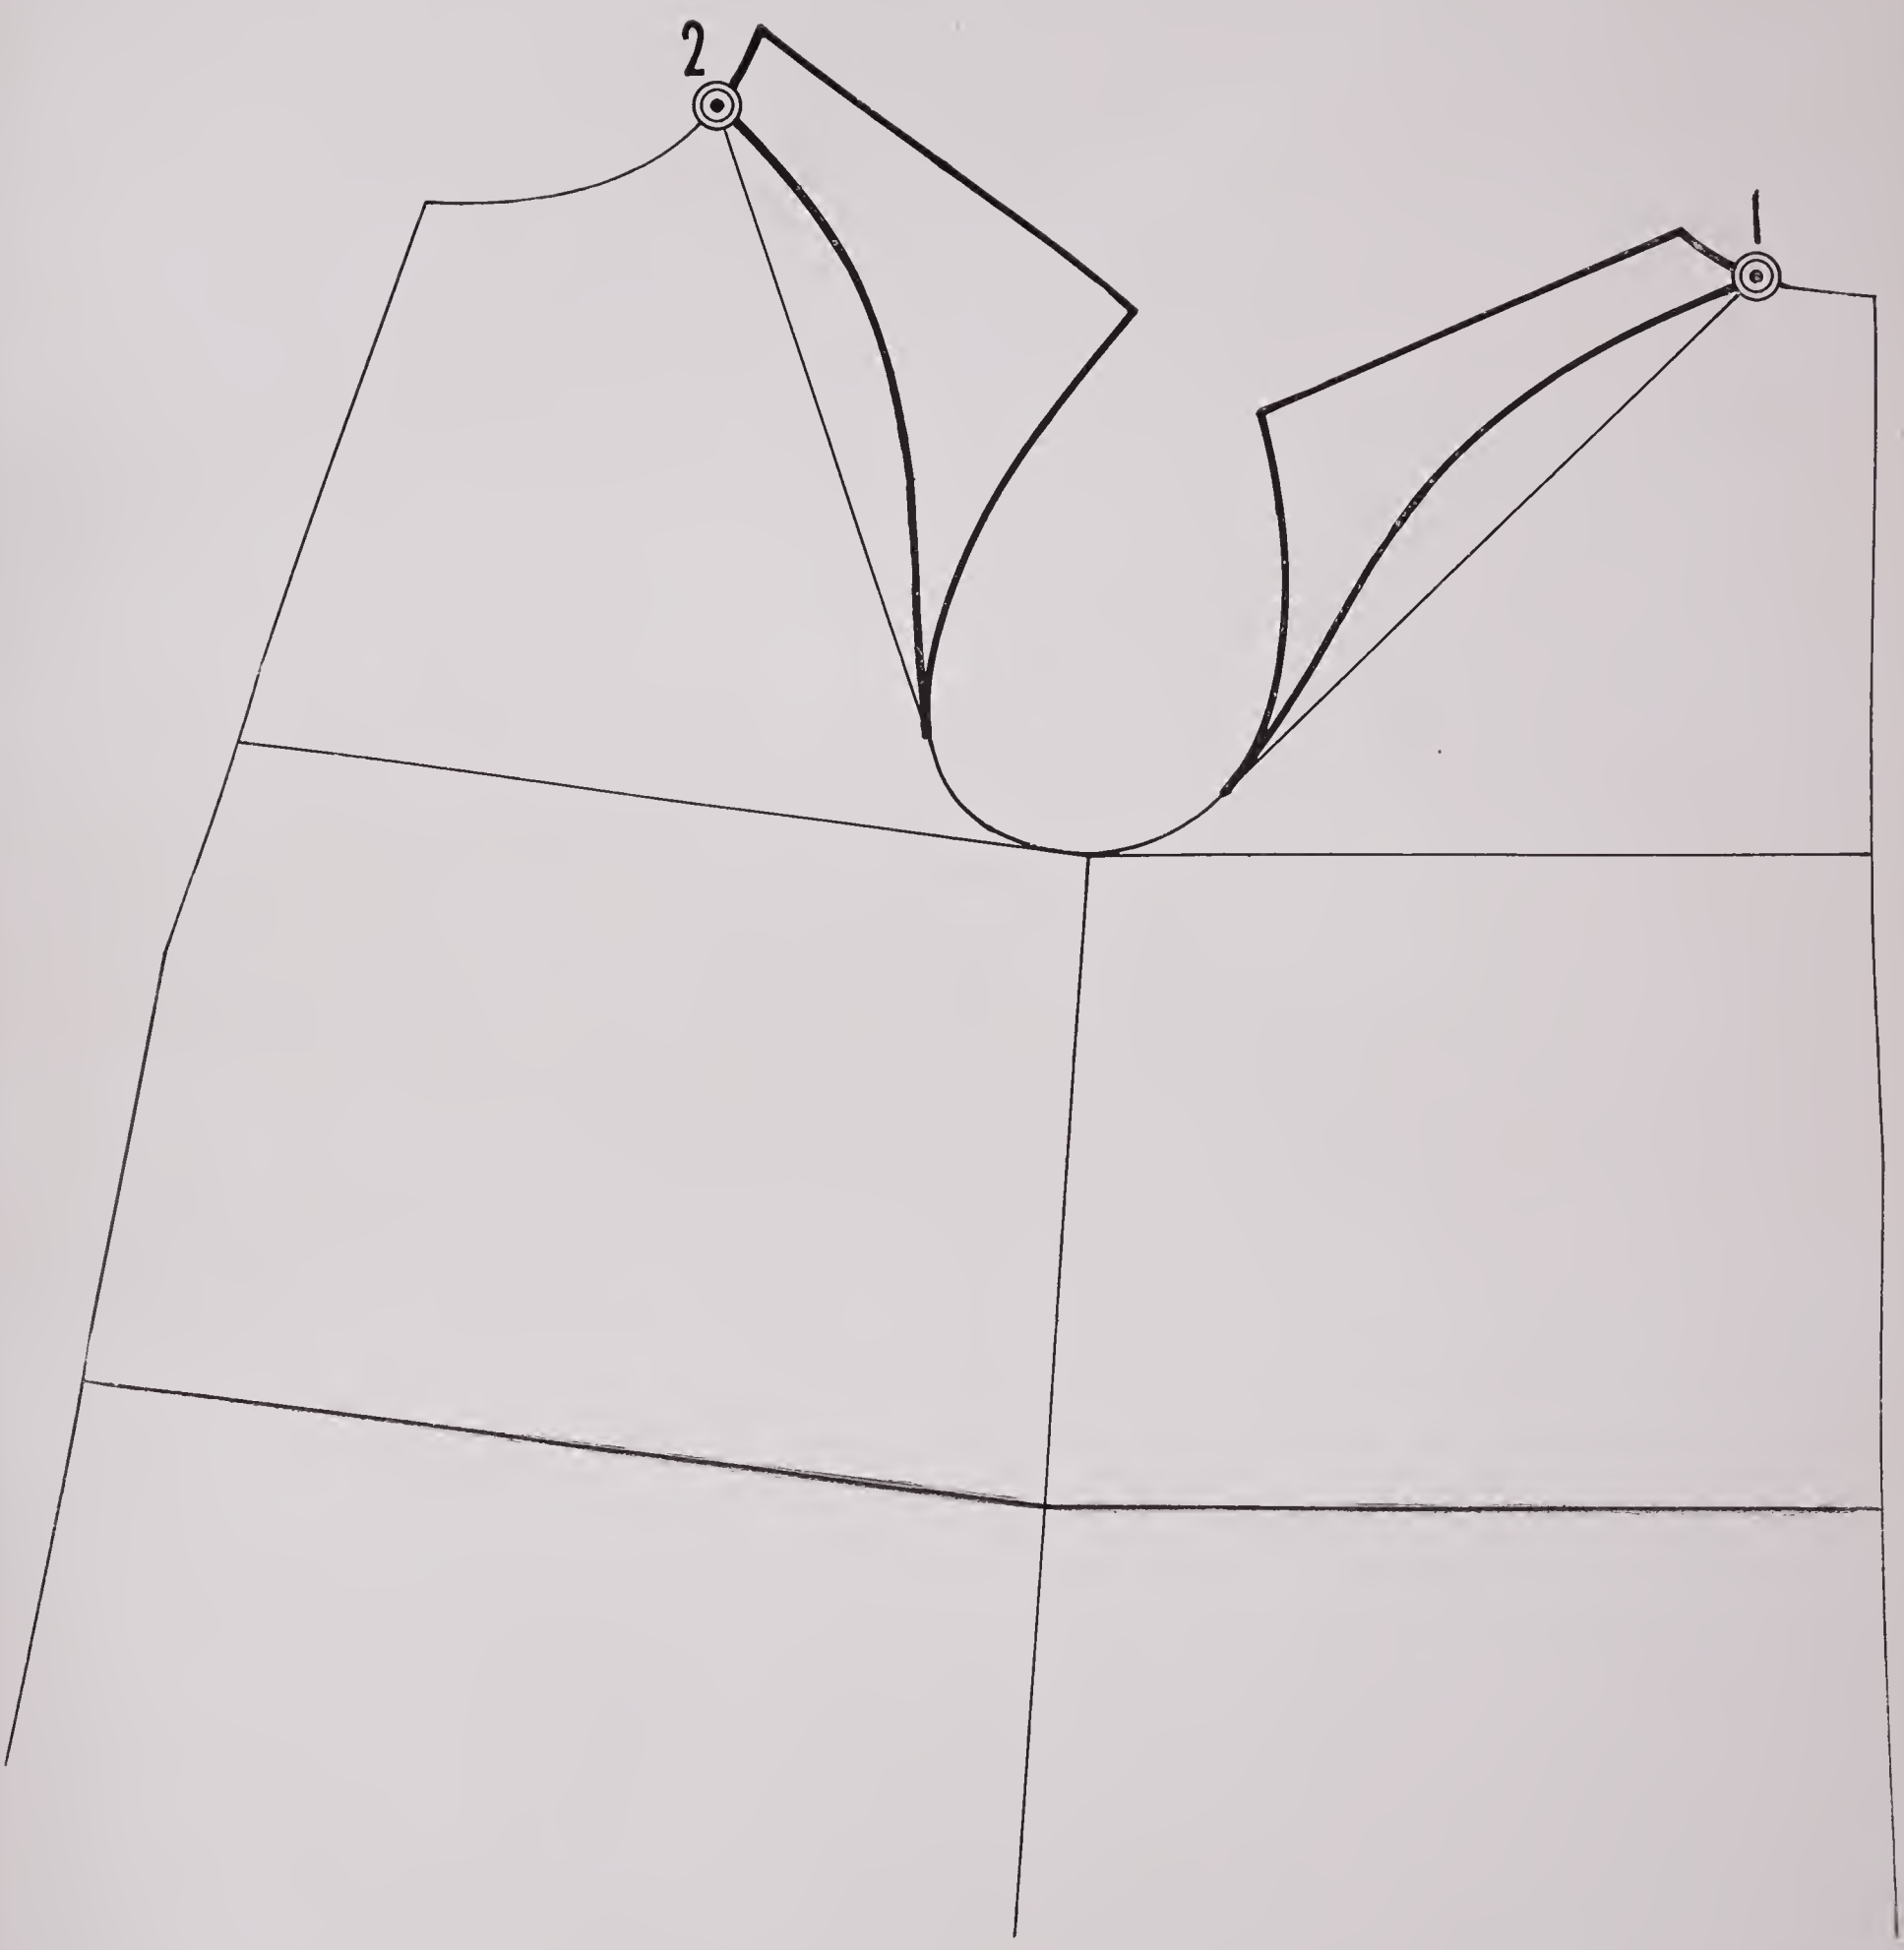
This sleeve in effect is an ordinary two-piece sleeve with a portion of the front and back shoulder added to the top sleeve. This pattern is manipulated generally from a box coat and a two-piece sleeve, as described in the following paragraphs.

After the front and back of the box coat is cut out a line is drawn from the neck of the front and back part downward to meet the armhole as follows:

1 from the neck point on the back part is 1 inch, draw a line from 1 downward as to where it will fall to the back scye about 1½ inch above the bust line; shape another line from 1 downward about 1 inch away from the straight line.

2 from the neck point on the front part is 1 inch. The same lines are drawn on the front part as on the back part.

The two shoulder parts, as outlined with the heavy line formation, are cut out and added to the sleeve, as illustrated and described on the following page.


2
1

RAGLAN SLEEVE
Continued

A two-piece sleeve, as illustrated on a previous page, is drafted first and the two portions of the front and back shoulder are added as follows:

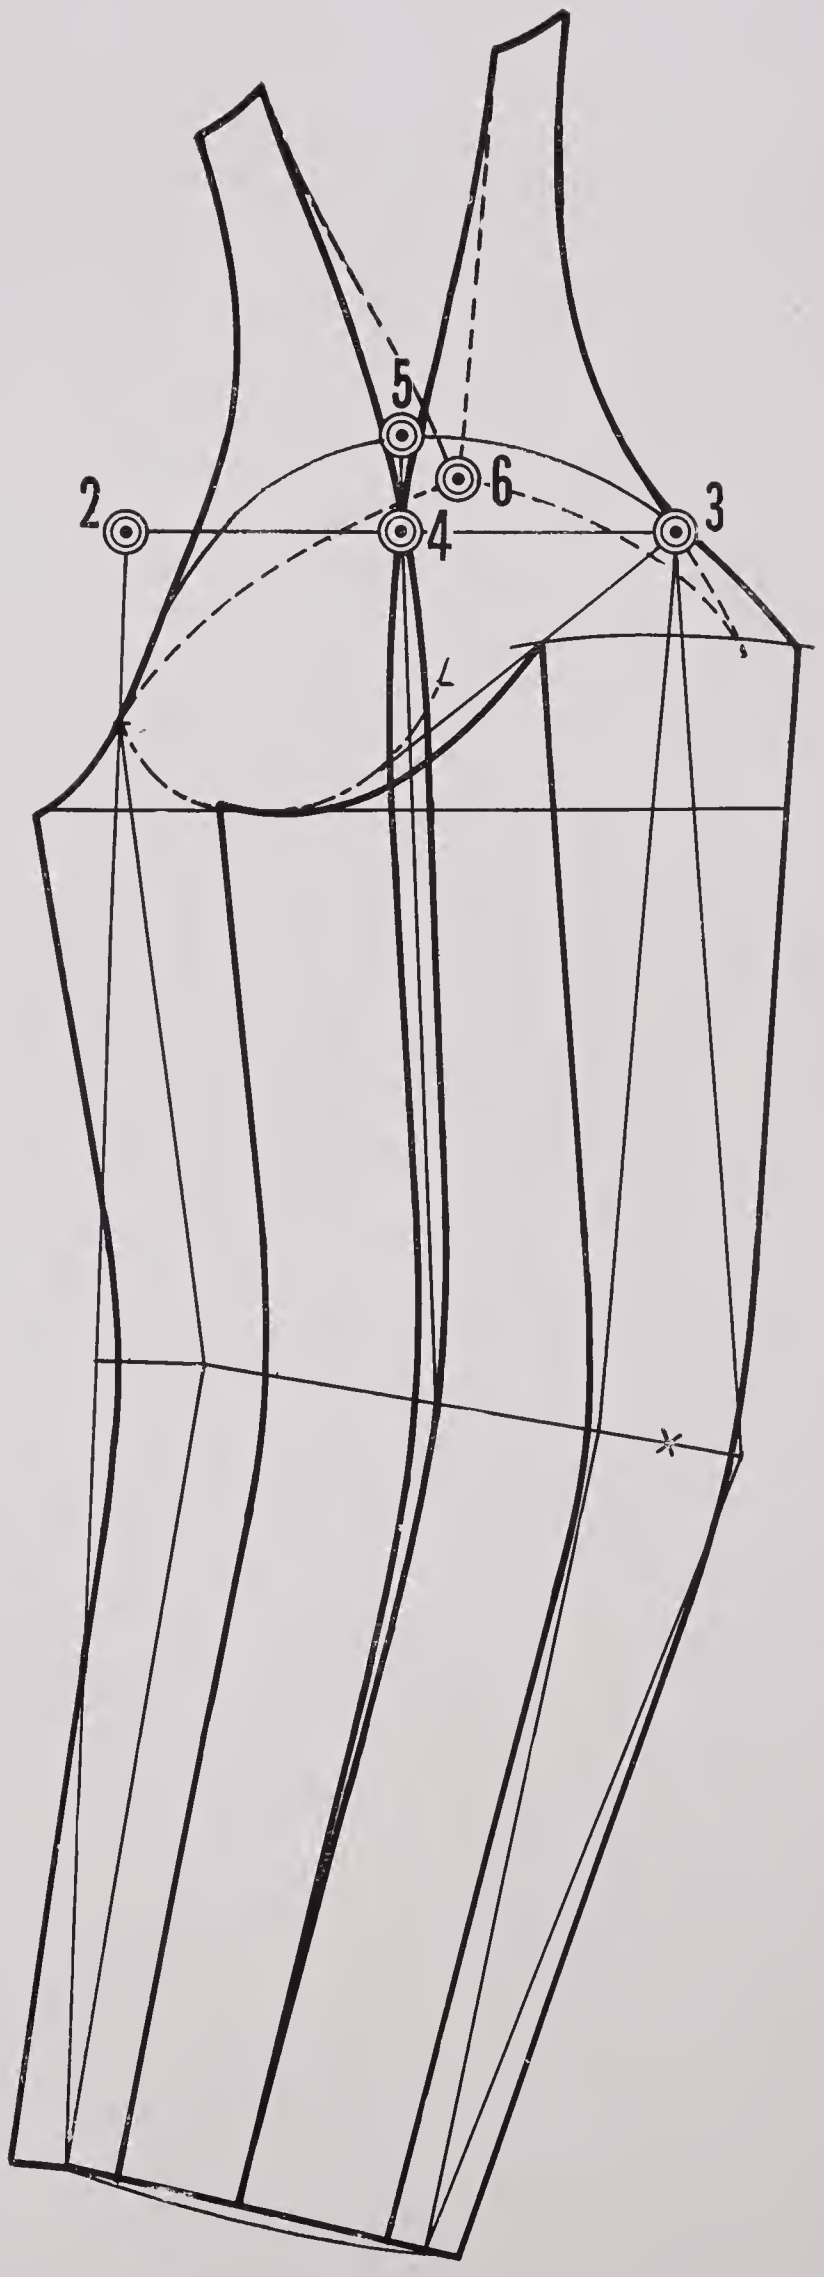
The points 2, 3, 4 and 5 are the same as used in drafting the two-piece sleeve.

6 is a point ¾ inch from the line 2-3, and ¾ inch from the line 4-5.

The front shoulder part is then laid with the shoulder point on 6, the other point on the sleeve line of the front part of the sleeve as illustrated by the broken line formation.

The back shoulder part is laid with the shoulder point on 6 and at 3, as illustrated.

A line is then drawn through the center of the top sleeve up through 4, to the neck point of the front shoulder part, and from 4 the neck point of the back shoulder part. Additional width to the top sleeve may be added, if desired, as illustrated by the heavy line formation on each side of the center line of the top sleeve. Finish as represented.


5
6
2
4
3

LARGE SIZE TWO-PIECE SLEEVE DRAFTED TO SPECIAL MEASURES

Width measures:
18 Upper arm
15 Elbow
11 Wrist

Length measures:
8 Elbow
18 Full length

To Draft

Draw a line as shown by numbers 2-7 and square from 1 both ways the same as described in the construction of the two-piece sleeve on a previous page.

2 from 1 is 18 on the 4ths; draw a line parallel to the line squared from 1.

3 from 2 is 18 on the halfs.

4 is a point half way between 2 and 3; square up.

5 from 4 is 18 on the 12ths.

6 from 1 is the elbow, 8 inches, square backward.

7 from 1 is the full length, 18 inches.

8 from 6 is 1½ inch, square backward from a line drawn from 8 to 7.

9 from 8 is ½ the elbow width, 7½ inches.

10 from 9 is 1 inch, and

11 from 9 is the same, connect 10 to 3 and 11 to 3.

12 from 7 is ½ wrist measure, 5½ inches, on a sweep cast at 7, pivoted at 3; connect 12 to 10 and 12 to 11. to 11.

13 from 12 is ½ inch, and

14 from 12 is the same.

15 from 1 is 1¼ inch; connect 8 and 15.

16 from the line 8-15 is 1¼ inch, and

17 from the same line is the same.

18 from 8 is 1 inch, and

19 from 8 is the same.

20 from 7 is ¾ inch, and

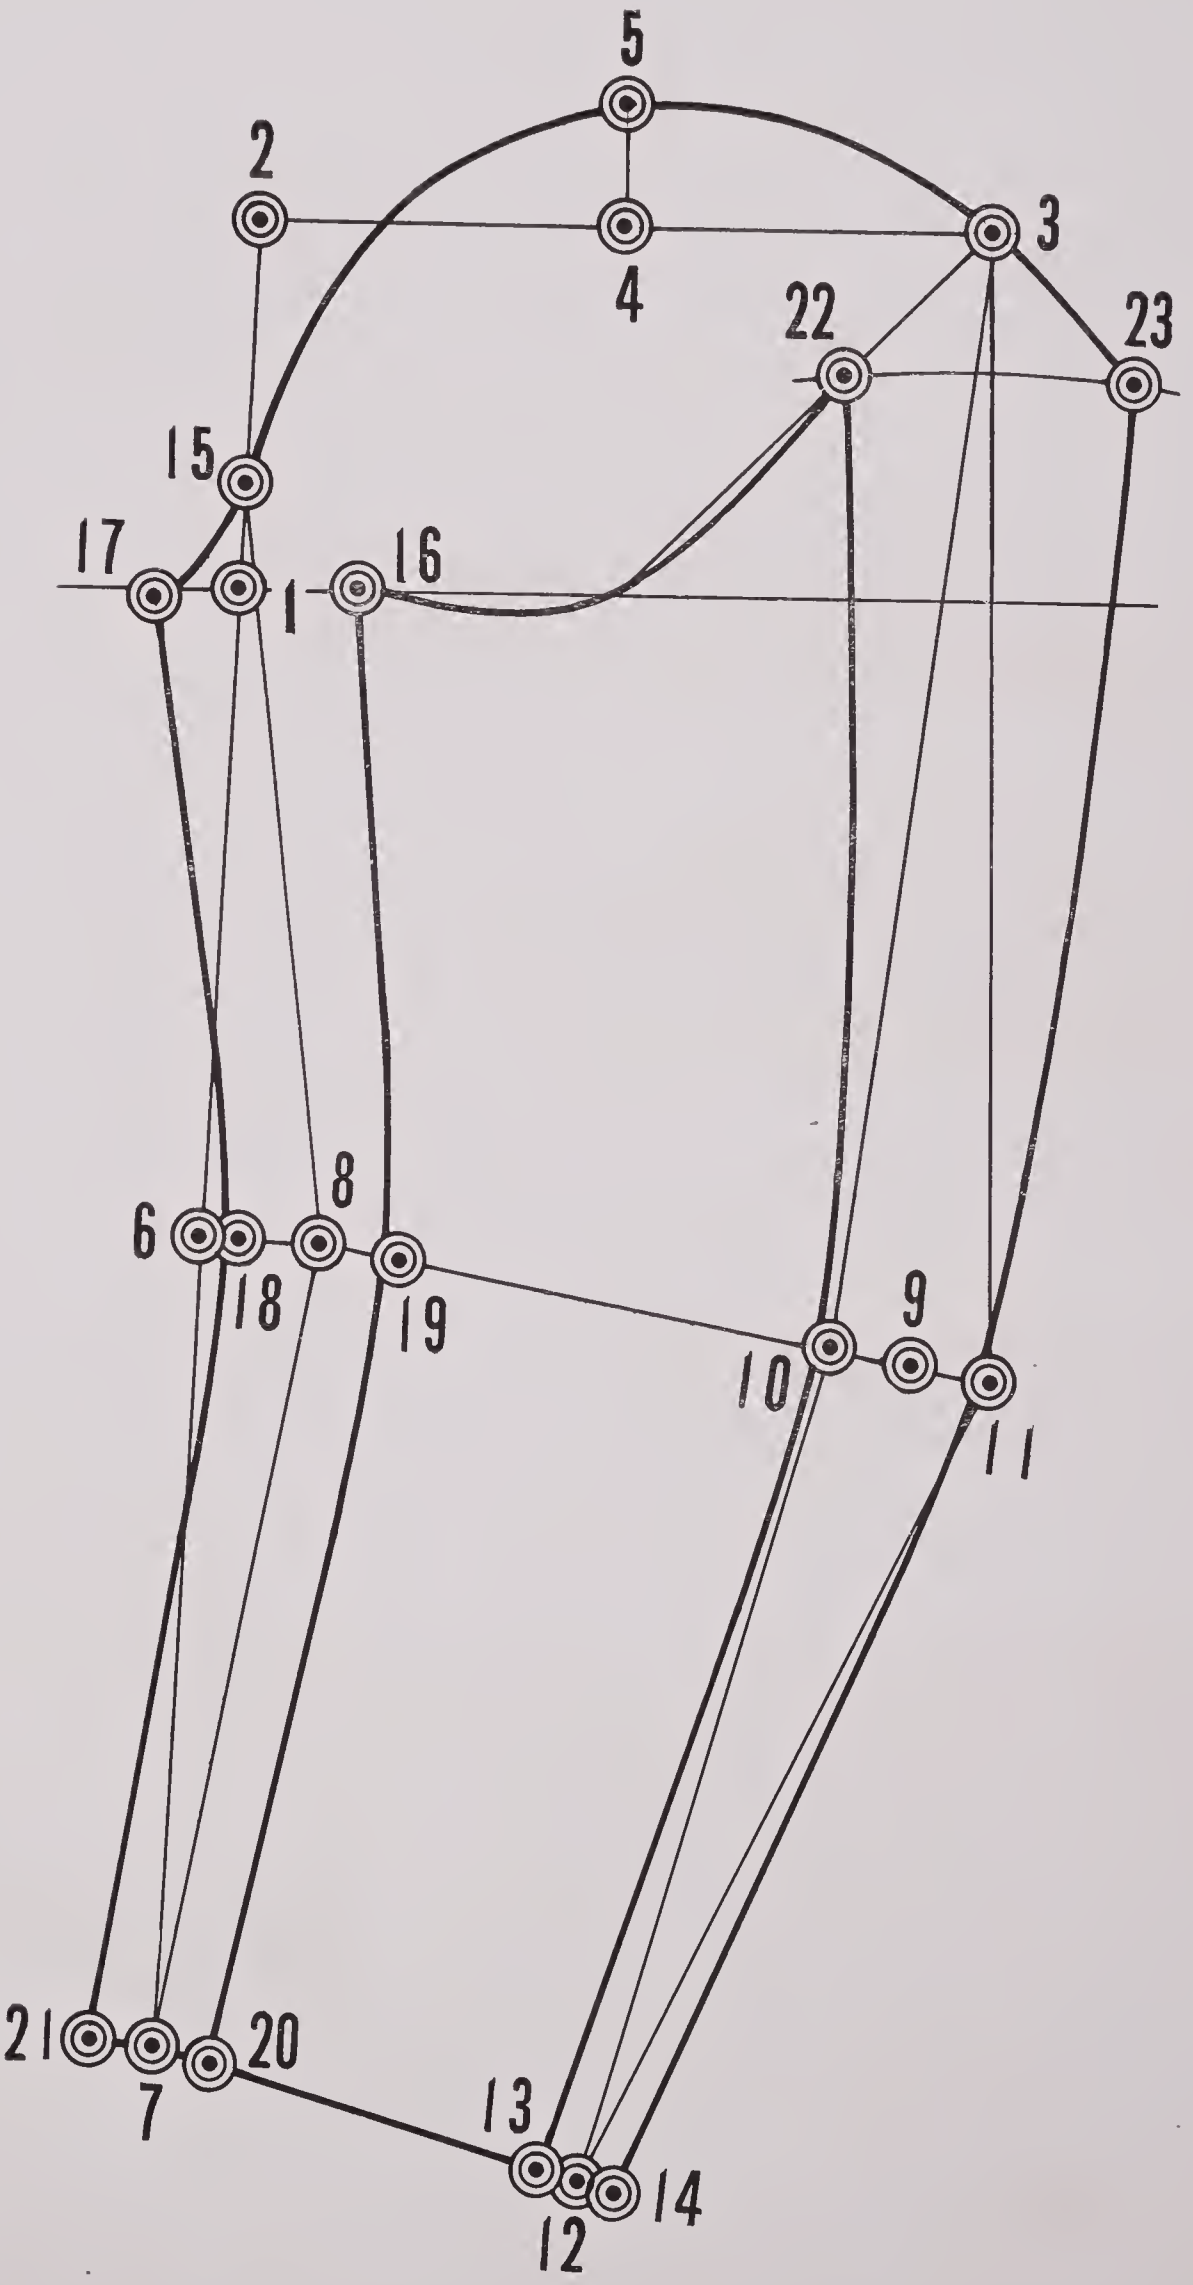
21 from 7 is the same; shape and front seam from 17 through 18 to 21, and from 16 through 19 to 20 as represented.

Draw a line from 3 to a point halfway between the line 10-3 and 1.

22 from the line 10-3 is about 2 inches, and

23 from the line 11-3 is the same, on a sweep cast at 22, pivoted at 9.

Shape the elbow seam from 22 through 10 to 13, and from 23 through 11 to 14. Finish as represented.

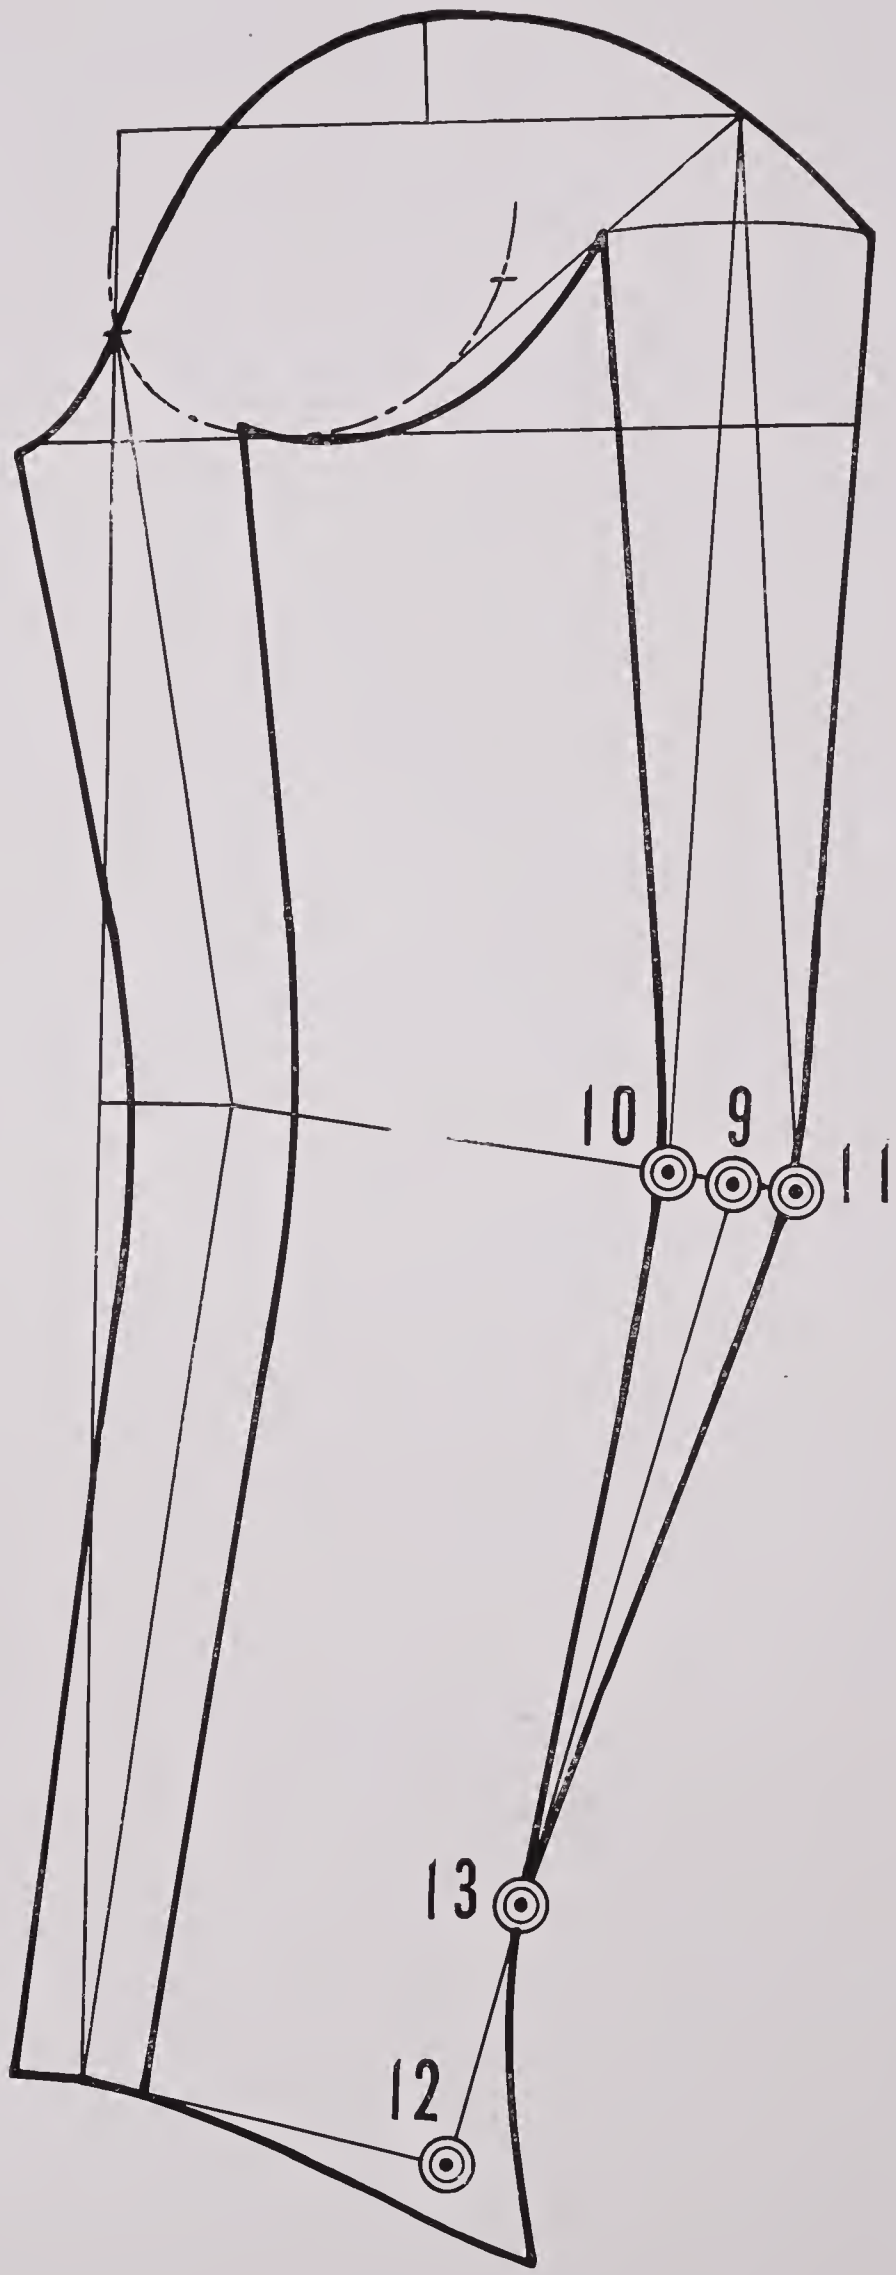

5
2
4
3
22
23
15
17
1
16
6
18
8
19
10
9
11
21
7
20
13
12
14

TWO-PIECE BELL SLEEVE

This sleeve, used almost exclusively on jackets, is drafted the same as the two-piece sleeve illustrated on a previous page. The bell effect is draftd as follows:

The points 9, 10, 11 and 12 are the same as used in drafting the two-piece sleeve.

13 from 12 is 3 inches. Connect 10 and 11 to 13 and shape the bell effect from 13 downward to any shape or length desired. The under sleeve and top sleeve from 13 downward have the same shape.


10
9
11
13
12

ONE-PIECE COAT SLEEVE

This sleeve is generally and almost exclusively drafted for coats where one of the features of the style is a deep armhole. The size armhole this sleeve is drafted for is 20 inches; the length of the sleeve as taken from the point of the shoulder down is 23 inches.

TO DRAFT

1 is the point from the which to square both ways.

2 from 1 is 5 inches.

3 from 1 is 4 inches.

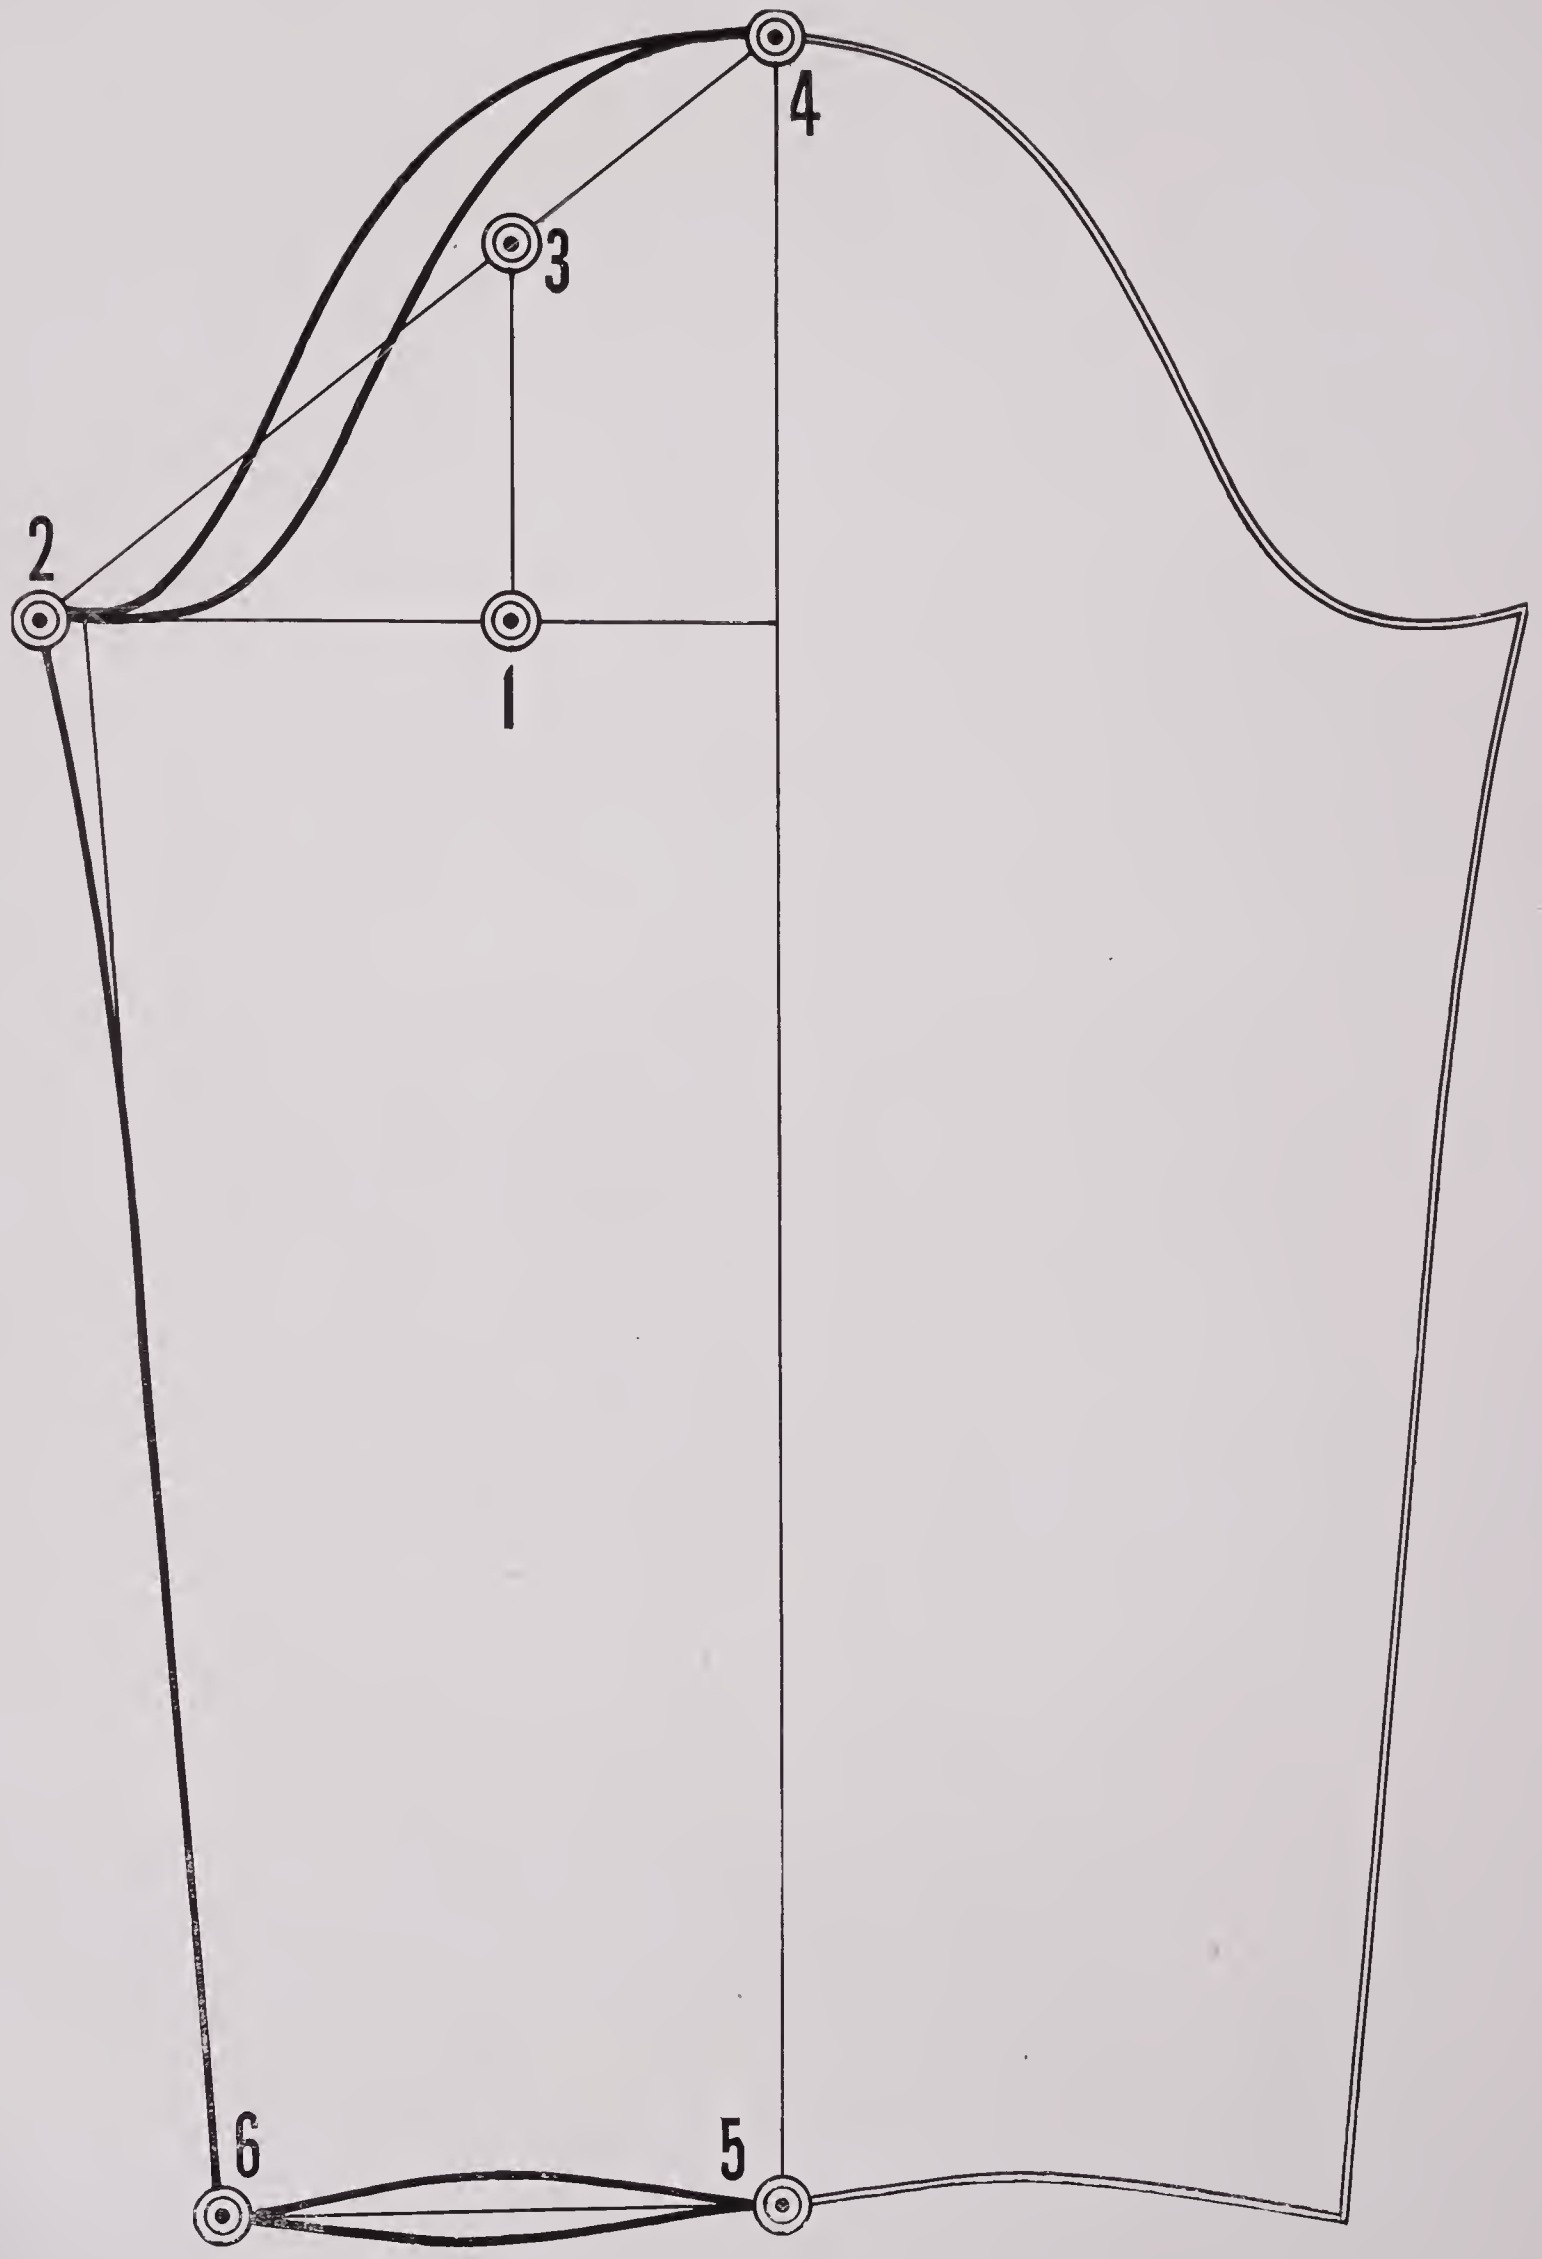
4 from 2 is ½ armhole measure. Connect 4 to 2 and square point 4 from the line 2-1.

5 from 4 is the sleeve length, square forward.

6 from 5 is 6½ inches, or any width desired. Draw a line from 6 to a point ¾ inch in back of 2, and shape the inside seam from 2 downward as represented. Shape the back part of the sleeve from 4 through a point 1¼ inches above 3, down to 2, and the front part of the sleeve about 1 inch below the line of the back part of the sleeve.

The bottom of the sleeve as illustrated is curved down ⅜ inch below the straight line for the back part, and ⅜ inch above the line for the front part of the sleeve.

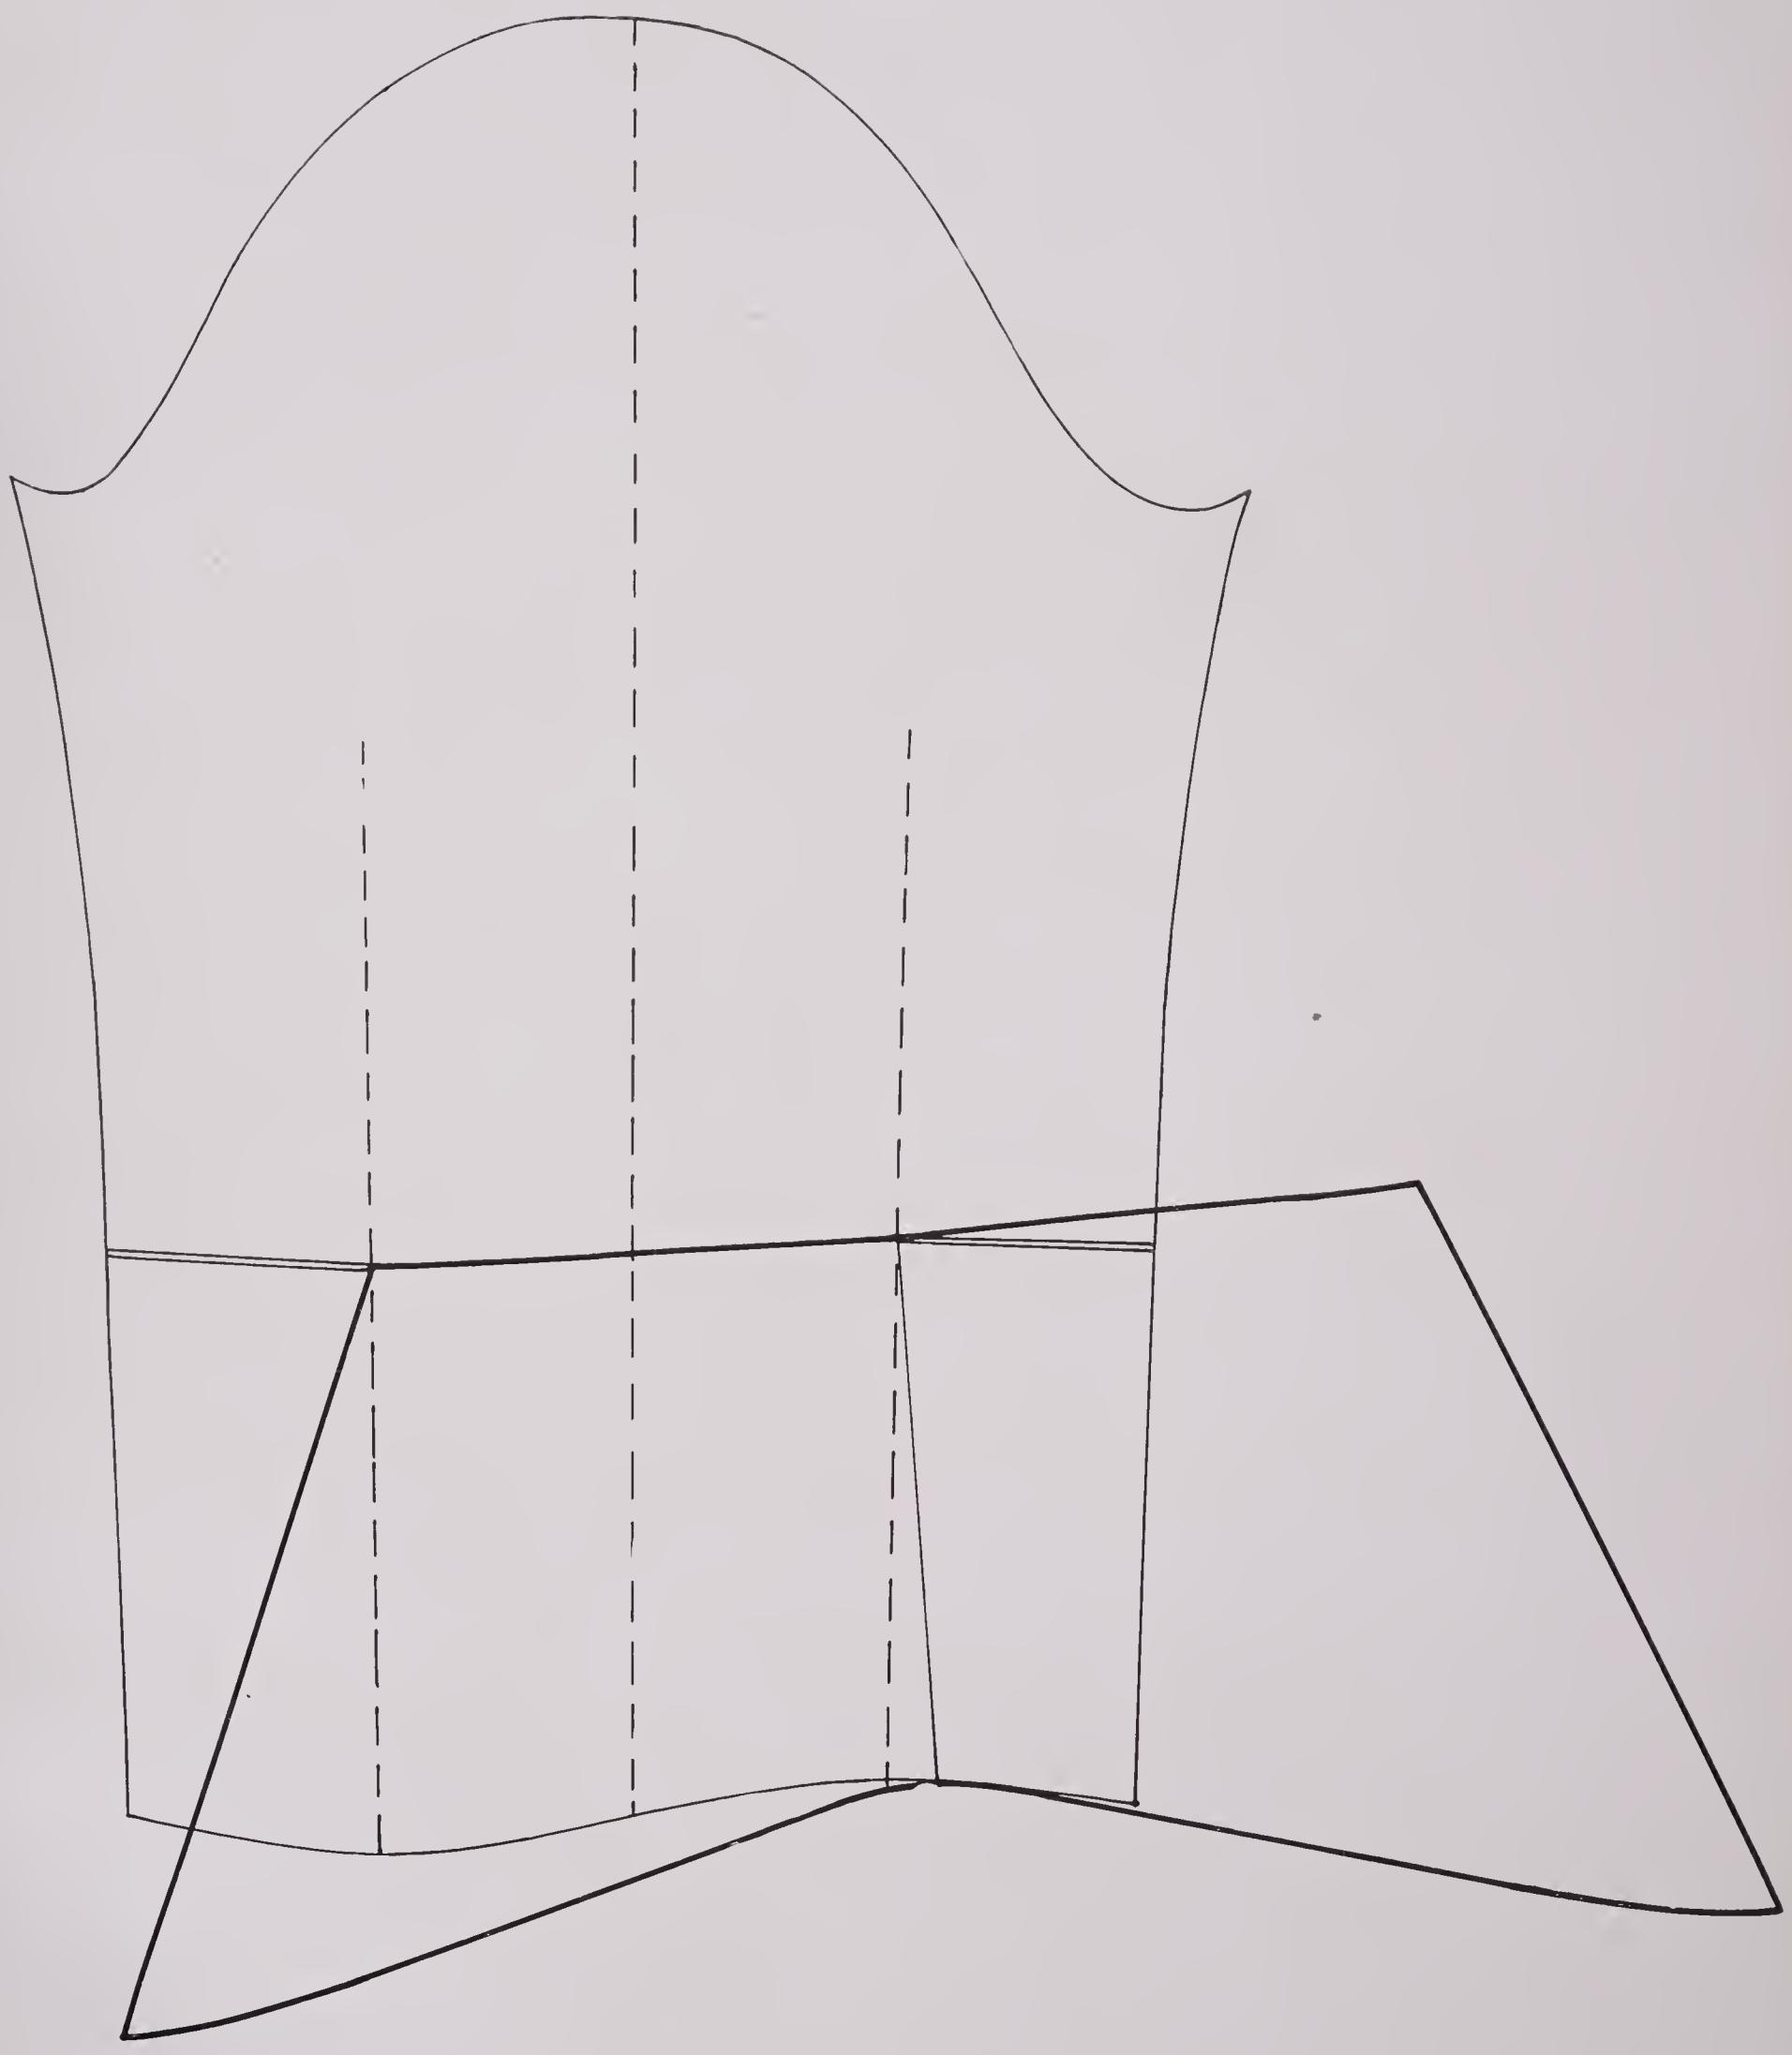
The heavy line on one side and the double line formation on the other side illustrate the sleeve when completed.


4
3
2
1
6
5

BELL CUFF FOR THE ONE-PIECE SLEEVE

The broken line formations on the sleeve part of this diagram indicate the place where lines should be drawn or the sleeve is to be folded to facilitate the drafting of the bell cuff. The depth of the cuff is generally about 6 or 7 inches. A line is drawn across the sleeve as indicated by the double line and the bottom portion cut off. At the bottom and front part of the cuff generally about ¾ inch is added to the back part, about 2½ inches more width and about 2½ inches more length is added to give the bell shape, or more or less to give the desired effect.

The heavy line formation illustrates the cuff when finished.



THE CUFF FOR A TWO-PIECE SLEEVE

The accompanying diagrams illustrate different style cuffs for different style two-piece sleeves. Very little description is needed to describe the construction of the different cuffs, as the diagrams speak for themselves.

The under sleeve is laid on top of the top sleeve in the same position as on the draft of the sleeve and the top sleeve folded over at the front and gack seam to meet the under sleeve. The front fold of the sleeve is then laid on to a folded piece of paper and the cuff is drawn to any width or style required.



DARTED SHAWL COLLAR

This collar is used sometimes where a low stand and a shaped collar is preferred. The thin outlines indicate the front and back parts of a box coat cut-out.

Front Part of Collar

1 is a point ⅜ inch below the neck point.

2 is a point 2 inches below the shoulder point. Draw a line from 2 through 1 outward.

3 from 1 is ¾ inch, the crease line is drawn as indicated by the double line formation.

4 from 3 to 1¼ inches. Shape the neck line of the collar from 4 down to meet the neck line of the front part, and a line from 4 to meet the line 2-1. Finish as outlined by the heavy line formation.

Back Part of Collar

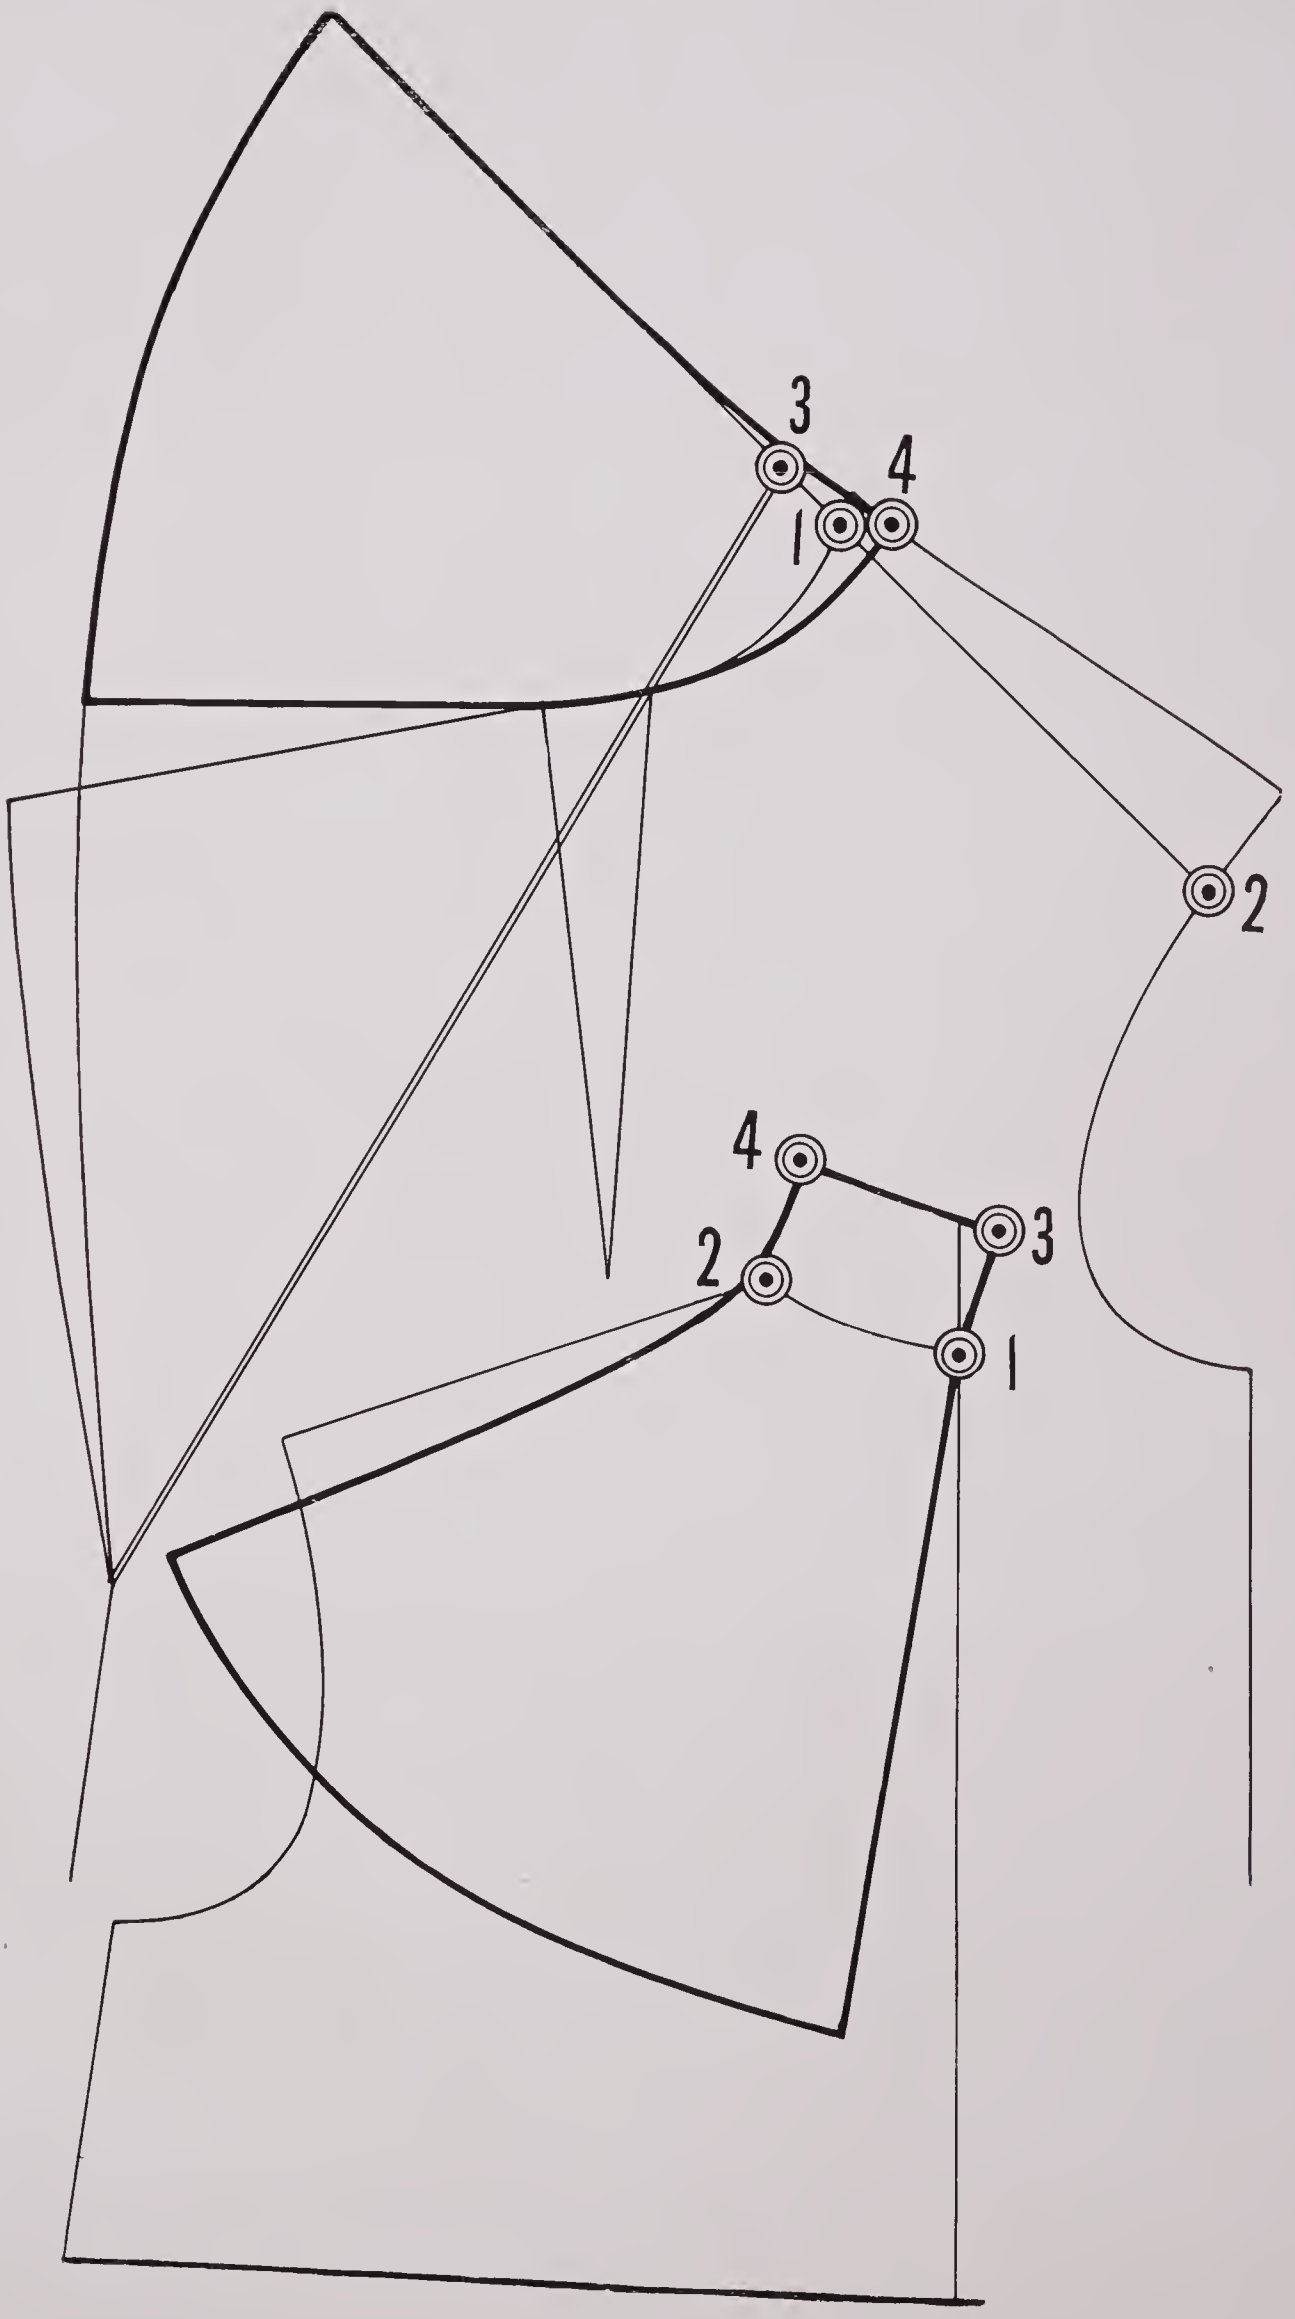
1 and 2 are points on the back part of the neck.

3 from 1 is 1¼ inches at a point ⅜ inch in back of a line drawn straight up with the center back line.

4 from 2 is 1¼ inches at a point 2½ inches in front of 3; connect 4 and 3.

Shape the center back of the collar from 3 through 1 down to a point 1 inch in front of the center of the back, and the shoulder seam of the collar from 4 through 2 down through a point ¾ inch below the shoulder point.

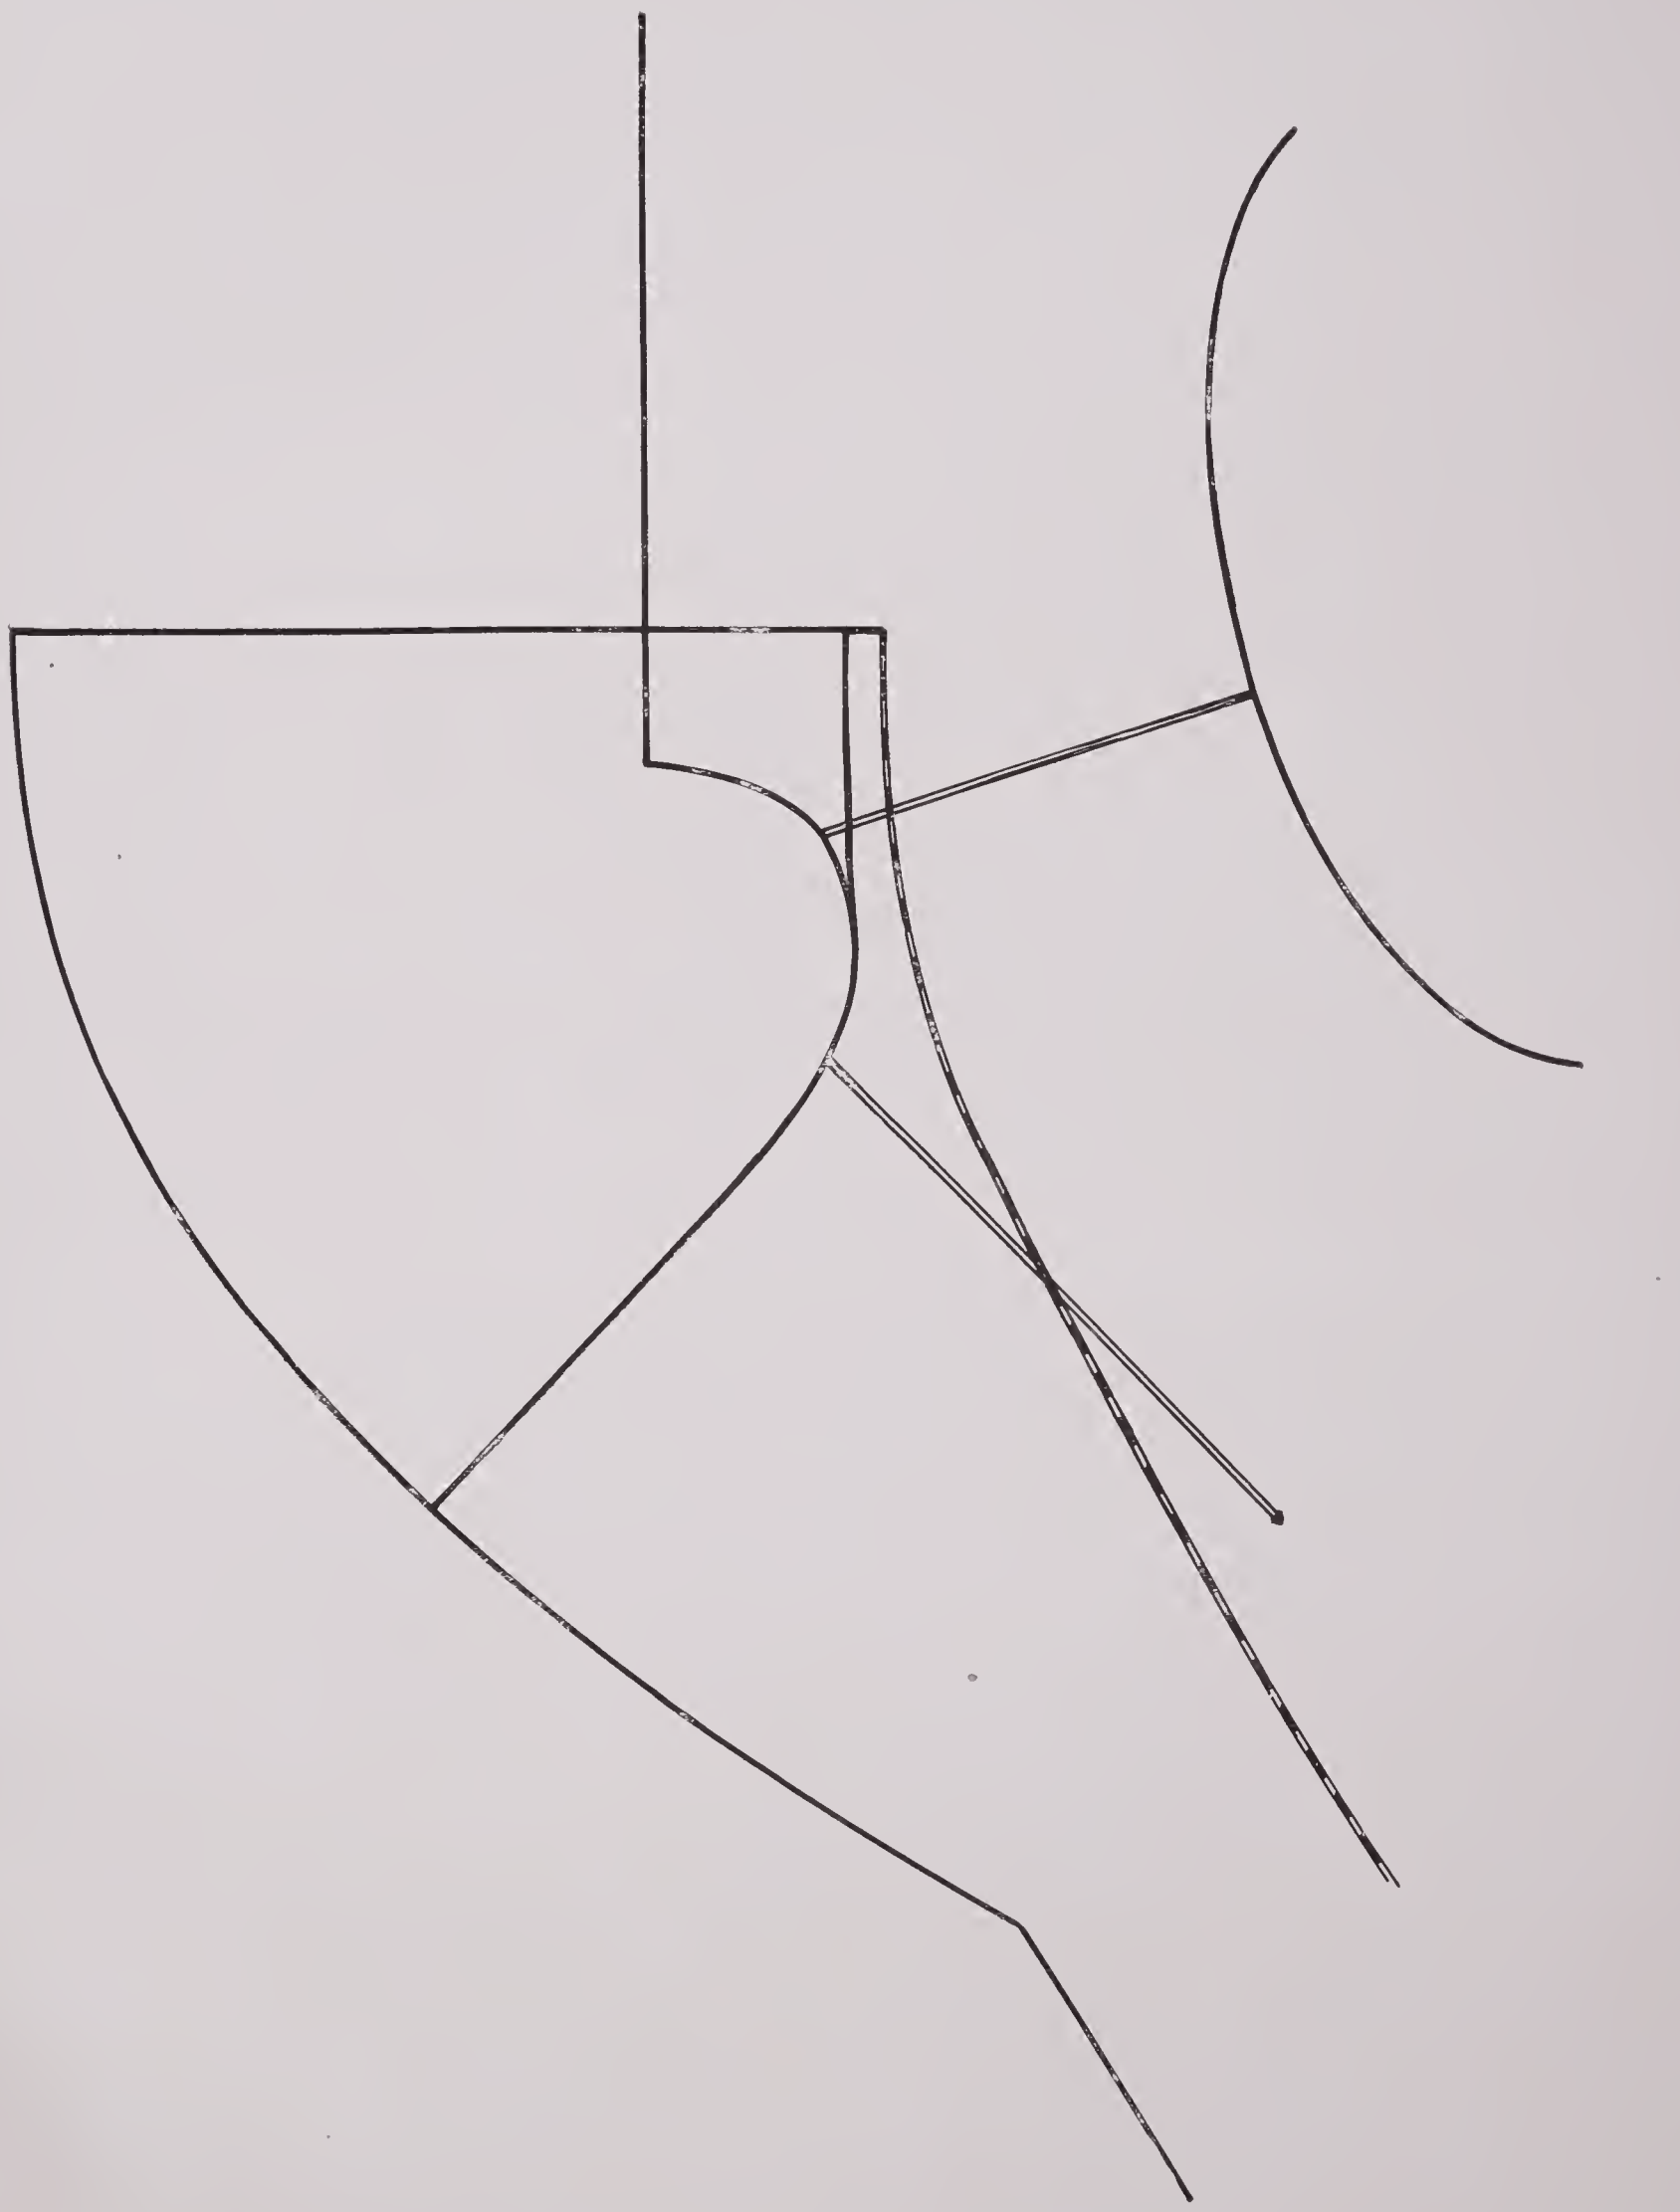
Measure the width of the collar to correspond to the width of the front part of the collar, shape and finish as represented.


3
4
1
2
4
2
3
1

SHAWL COLLAR

The accompanying diagram illustrates a shawl collar made for a different requirement and made in a different way than the one described on another page.

As illustrated, the back and the front of the coat this collar is needed for, is laid together at the shoulder line and copied. The neck line of the collar is then drawn from the neck line of the front part, backward, parallel with the center back line. The length of the collar is then measured along that line and the center back of the collar squared from the neck line. Measure the width of the collar from the neck line upward and shape as required. The broken line formation indicates the outline of the facing.



COLLARS

All the accompanying diagrams are foundations for different types of collars. A typical style of collar is drafted on each foundation, but practically all styles can be drafted on these foundations by modifying the outline of the collars, the foundation lines remaining the same in almost all cases.

Fig. I

Stand-Up or Flare Collar for a Low Neck

1 is the point from which to square both ways.

2 from 1 is 7 inches.

3 from 2 is 2½ inches.

4 from 1 is 5 inches; draw a line from 4 through 3, downward.

5 from 4 is 1 inch; draw the center back line from 1 to 5, and shape the neck line from 1 through a point about ½ inch in back of 3 as illustrated. Draft the length, width and shape of the collar as required.

Fig. II

Military or Turn-Over Collar

1 is the point from which to square both ways.

2 from 1 is 2¾ inches.

3 from 1 is 7 inches; square up.

4 from 3 is ½ inch; shape the neck line from 4 to a point about halfway between 3 and 1.

5 from 4 is 2½ inches at a point ½ inch in back of the line squared up from 3; connect 5 and 4 and 5 and 2. 6 from 2 is 2½ inches; draw a line from 2 through a point ⅝ inch in back of 6. Shape a line from 2 to 5 about ½ inch above the line first drawn.

Measure the width of the turn-over part of the collar and finish as represented.

Fig. III

Lay-Down Collar

1 Is the point from which to square both ways.

2 from 1 is 1½ inches.

3 from 2 is 7 inches; connect2 and 3, and shape the neck line from 2 to 3 as illustrated.

The double line formation above the neckline indicates the crease line of the collar which is as a rule about 1¼ inches above 2.

The style collar illustrated here is an ordinary lay-down collar, although it may be shaped to any width, length or style desired.

Fig. IV

Storm Collar

1 is the point from which to square both ways.

2 from 1 is 2½ inches.

3 from 2 is 7 inches; connect 2 and 3.

4 from 2 is 2½ inches at a point ¾ inch above the line 3-2. Shape the neck line from 2 to 4 and from 4 to 3 as per diagram.

Square out a line from a point ⅜ inch below 4 and from point 3 draw a dart from 4 upward about ⅜ inch on each side of the squared line and shape the center back from 2 to a point about 1 inch in back of the line 1-2. The width and shape of this collar is drafted according to style required.

Fig. V

Stand-Up or Flare Collar for the High Neck

1 is the point from which to square both ways.

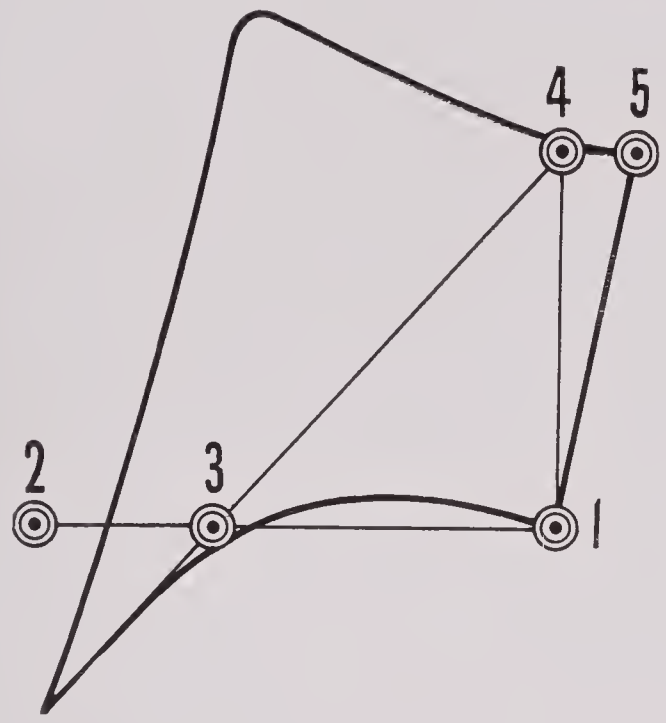
2 from 1 is 7 inches; shape the neck line from 1 to 2 about ⅜ inch above the straight line.

3 from 1 is 5 inches.

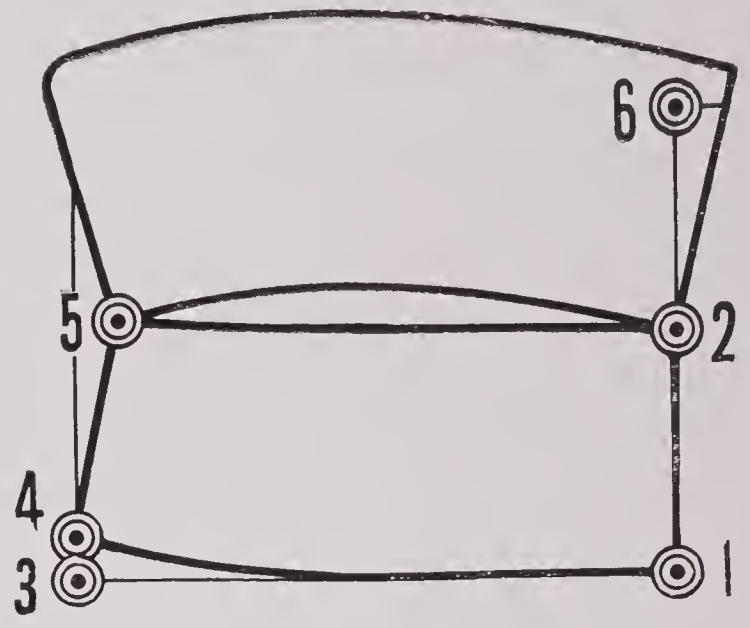
4 from 3 is 1 inch; draw the center back line from 1 to 4.

Shape and finish as per diagram.

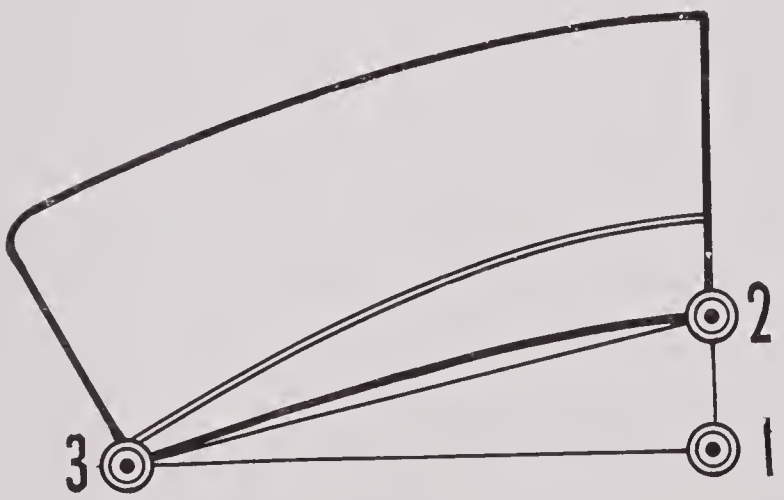
DIAGRAMS OF COLLARS



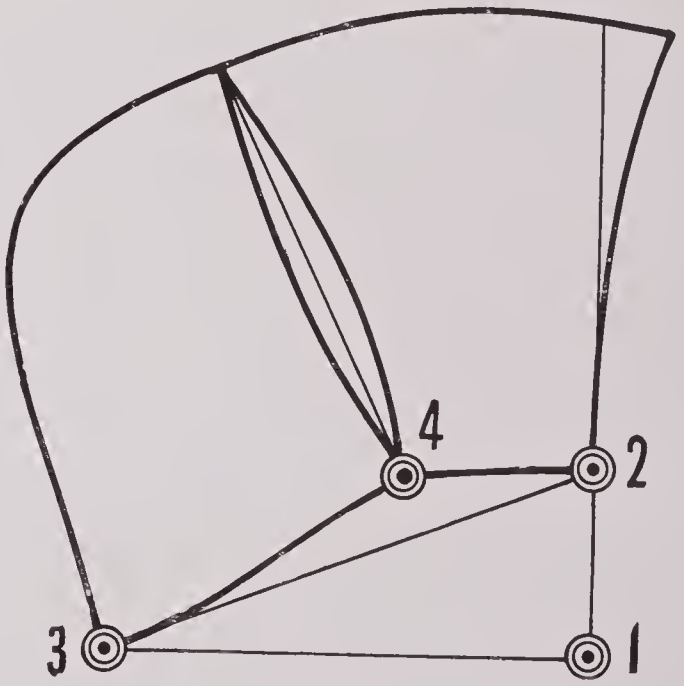
I



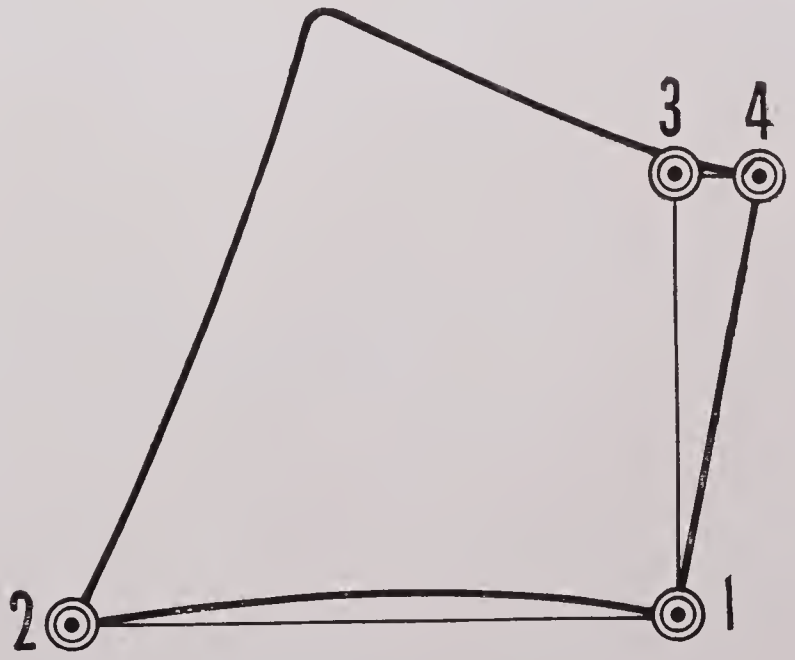
II



III



IV



V

COLLARS—continued

Fig. VI

Cape Collar

The collar drafted on this foundation is for a high stand in the back and a low sand in the front.

1 is the point from which to square both ways.

2 from 1 is 1½ inches.

3 from 1 is 1 inch.

4 from 2 is 7½ inches, shape the neckline from 3 to 4 as illustrated.

The double line formation above the neckline indicates the crease line, which is about 3 inches above 3.

Measure the width of the collar from 3 upward and shape the collar according to style desired.

Fig. VII

Cape Collar

This diagram illustrates a cape collar with a high stand front and back.

1 is the point from which to equare both ways.

2 from 1 is 1½ inches.

3 from 1 is 1 inch.

4 from 2 is 7½ inches; connect 2 and 4.

5 from 4 is 3¼ inches; shape the neck line from 3 through 5 as illustrated and measure the length of the collar desired.

The double line formation about 3½ inches above the neck line, indicates the crease line of the collar. Shape and finish as required.

Fig. VIII

Chin Collar

Draw a line as indicated by line 1-3.

1 is the point from which to equare both ways.

2 from 1 is 1¼ inch.

3 from 2 is 1 inch.

4 from 2 is 3½ inches, and

5 from 2 is the same; connect 5 to 2 and 4 to 2. Shape the neckline from 4 through 2 and to 5 as represented. Square out the center back line from the line 4-3, measure the width and shape according to style required.

Fig. IX

Shawl Collar

This collar is drafted for a Coat or Cape where a separate and an exceptionally wide collar is desirable.

1 is the point from which to equare both ways.

2 from 1 is 1½ inches.

3 from 1 is 1 inch.

4 from 2 is 7½ inches; connect 4 and 2.

5 from 4 is 2¾ inches; draw a line from a point 3 inches above 1 through 5 downward, and shape the neck line from 3 to 5 as per diagram.

Measure the length of the collar along the neck line and the width of the same from 3 upward.

Shape and finish as per style desired.

DIAGRAM OF COLLARS

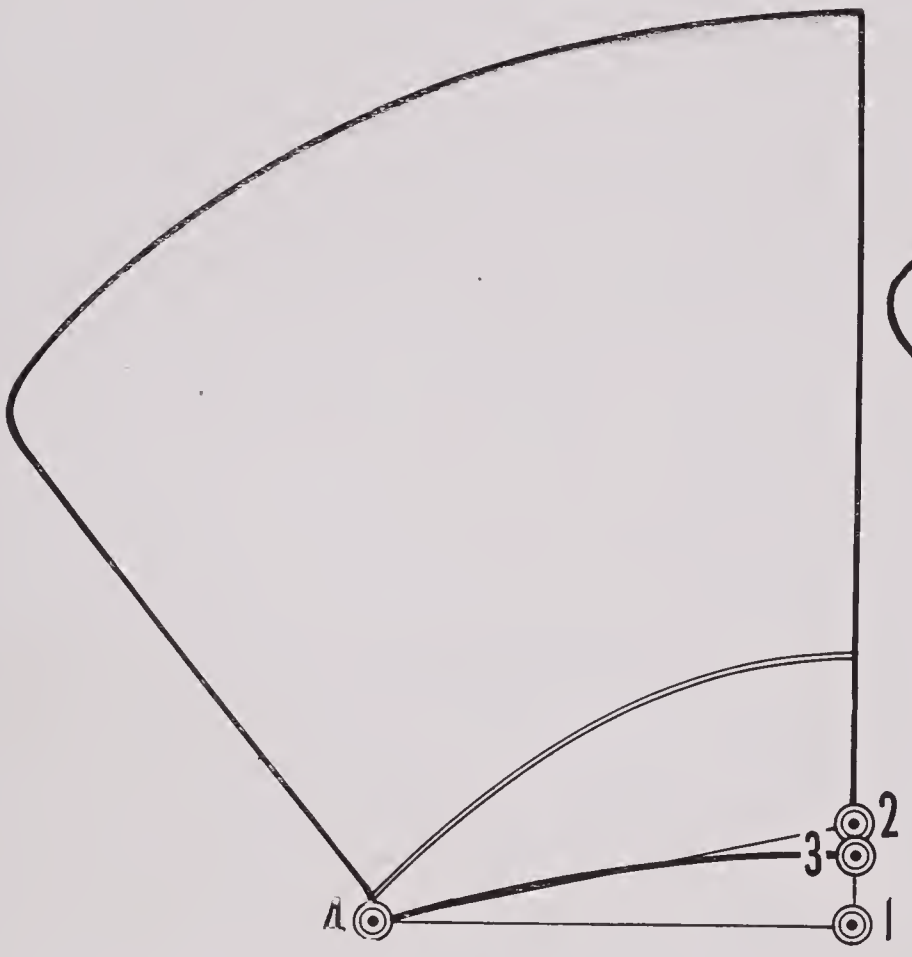


Fig. VI

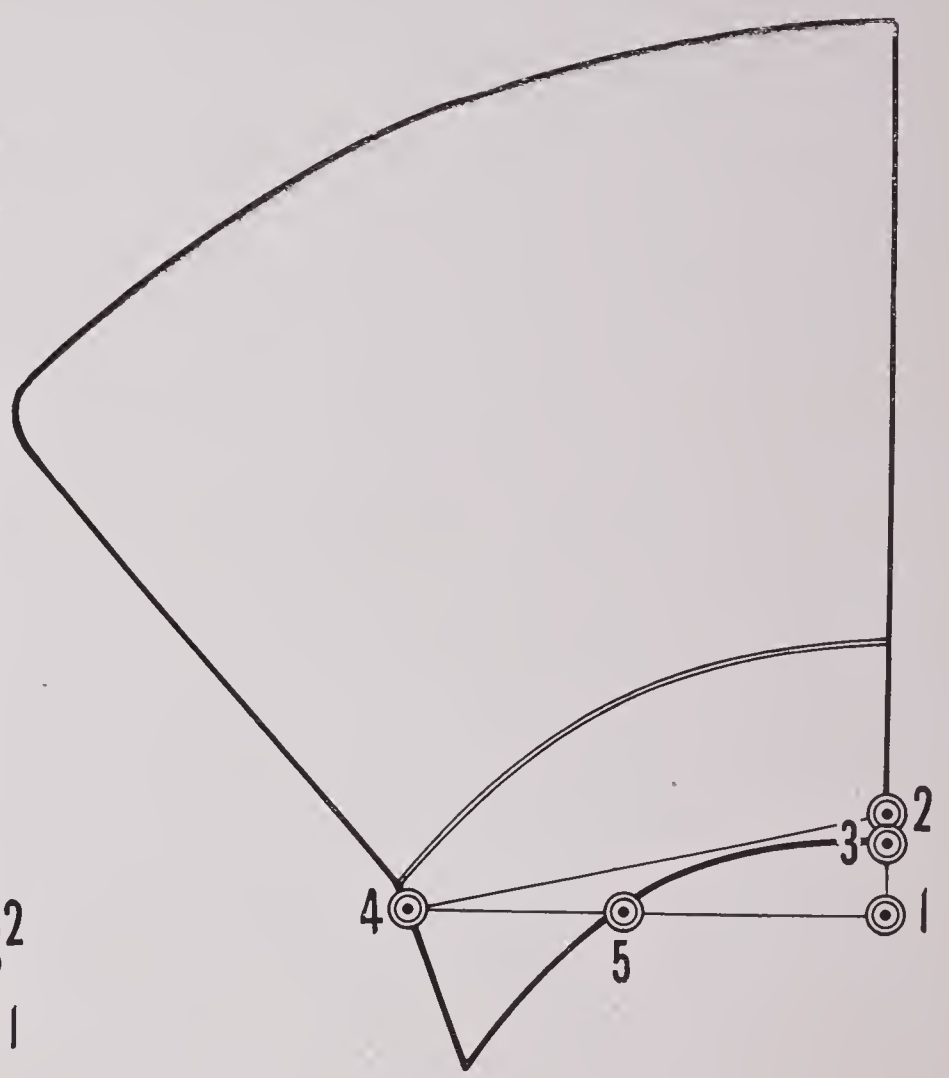


Fig. VII

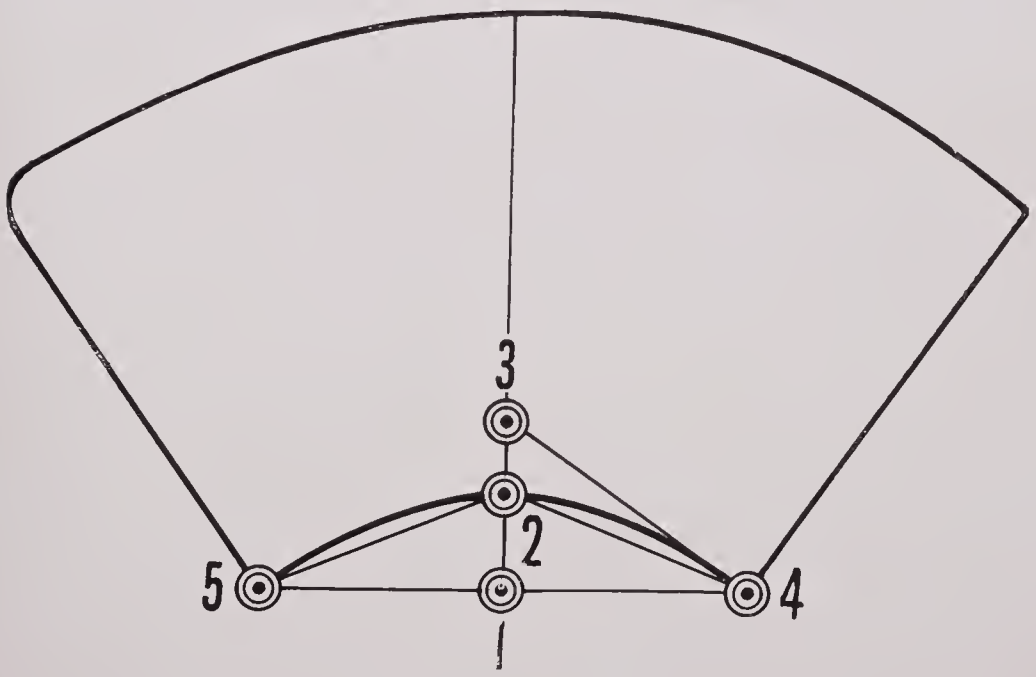


Fig. VIII

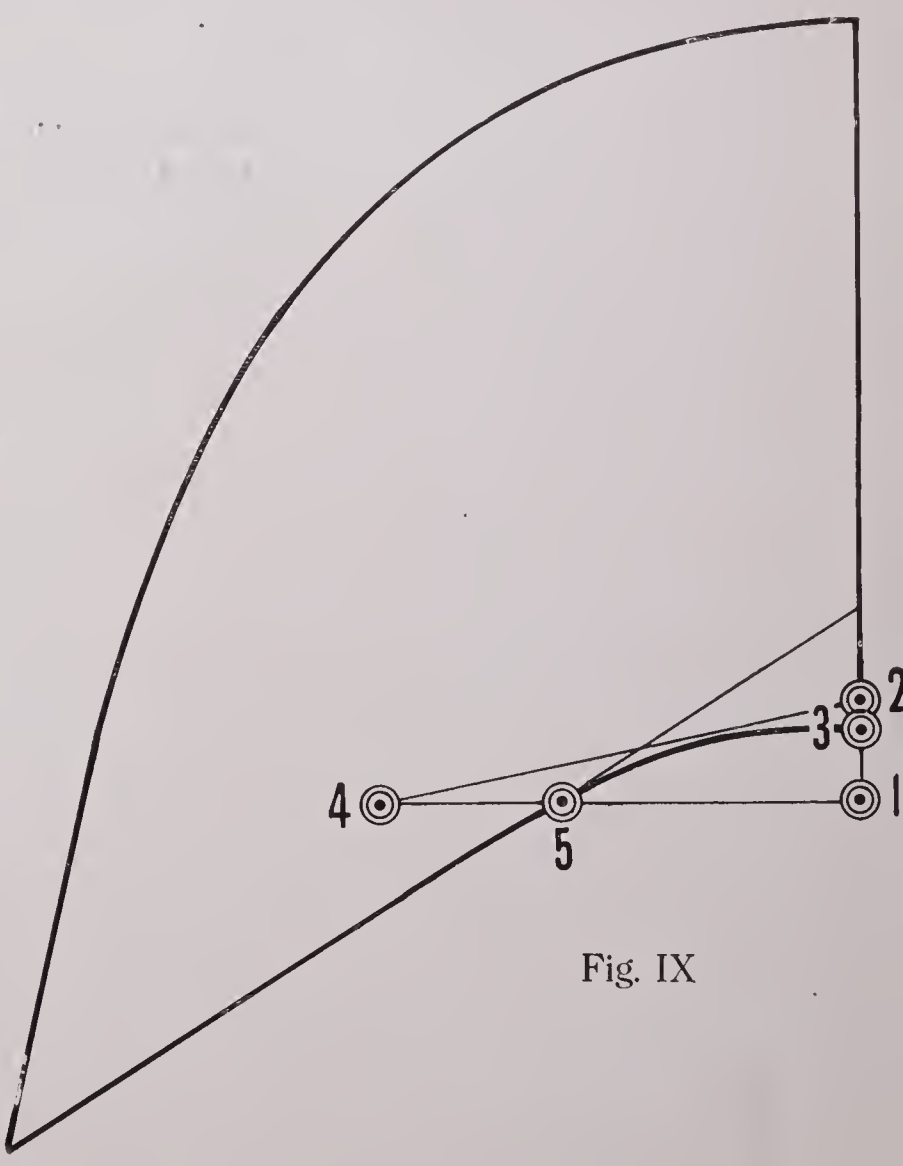


Fig. IX

SKIRT FOUNDATION

The construction of a Skirt Foundation as simple as it is, is of just as great an importance as the construction of a foundation for a Jacket or Coat, if a proper fit or hang of the skirt is expected, but unlike jackets or coats where there are three different foundations there is only one foundation from which any kind of a skirt is either drafted or manipulated with the exception of some types of draped skirts where a foundation is not necessary as they are draped entirely on the figure.

The measures are as follows:

26½ waist	38 front length
40 hips	39½ back length

To Draft

1 is a point from which a line is drawn downward, or the straight edge of the paper may be used instead of the line.

2 from 1 is the back length of the skirt.

3 from 2 is the front length of the skirt.

4 from 1 is 7 inches.

5 from 4 is 5 inches.

6 from 2 is 1½ inches; draw the center front line from 6 to 3.

The paper must now be laid straight and even with the line 1-2 to the edge of the table then measure from 1 straight upward along the edge one and one-half the waist measure, that is, 26½ and 13¼ added together, pin the tape measure to that point and sweep from 1 and 4 forward.

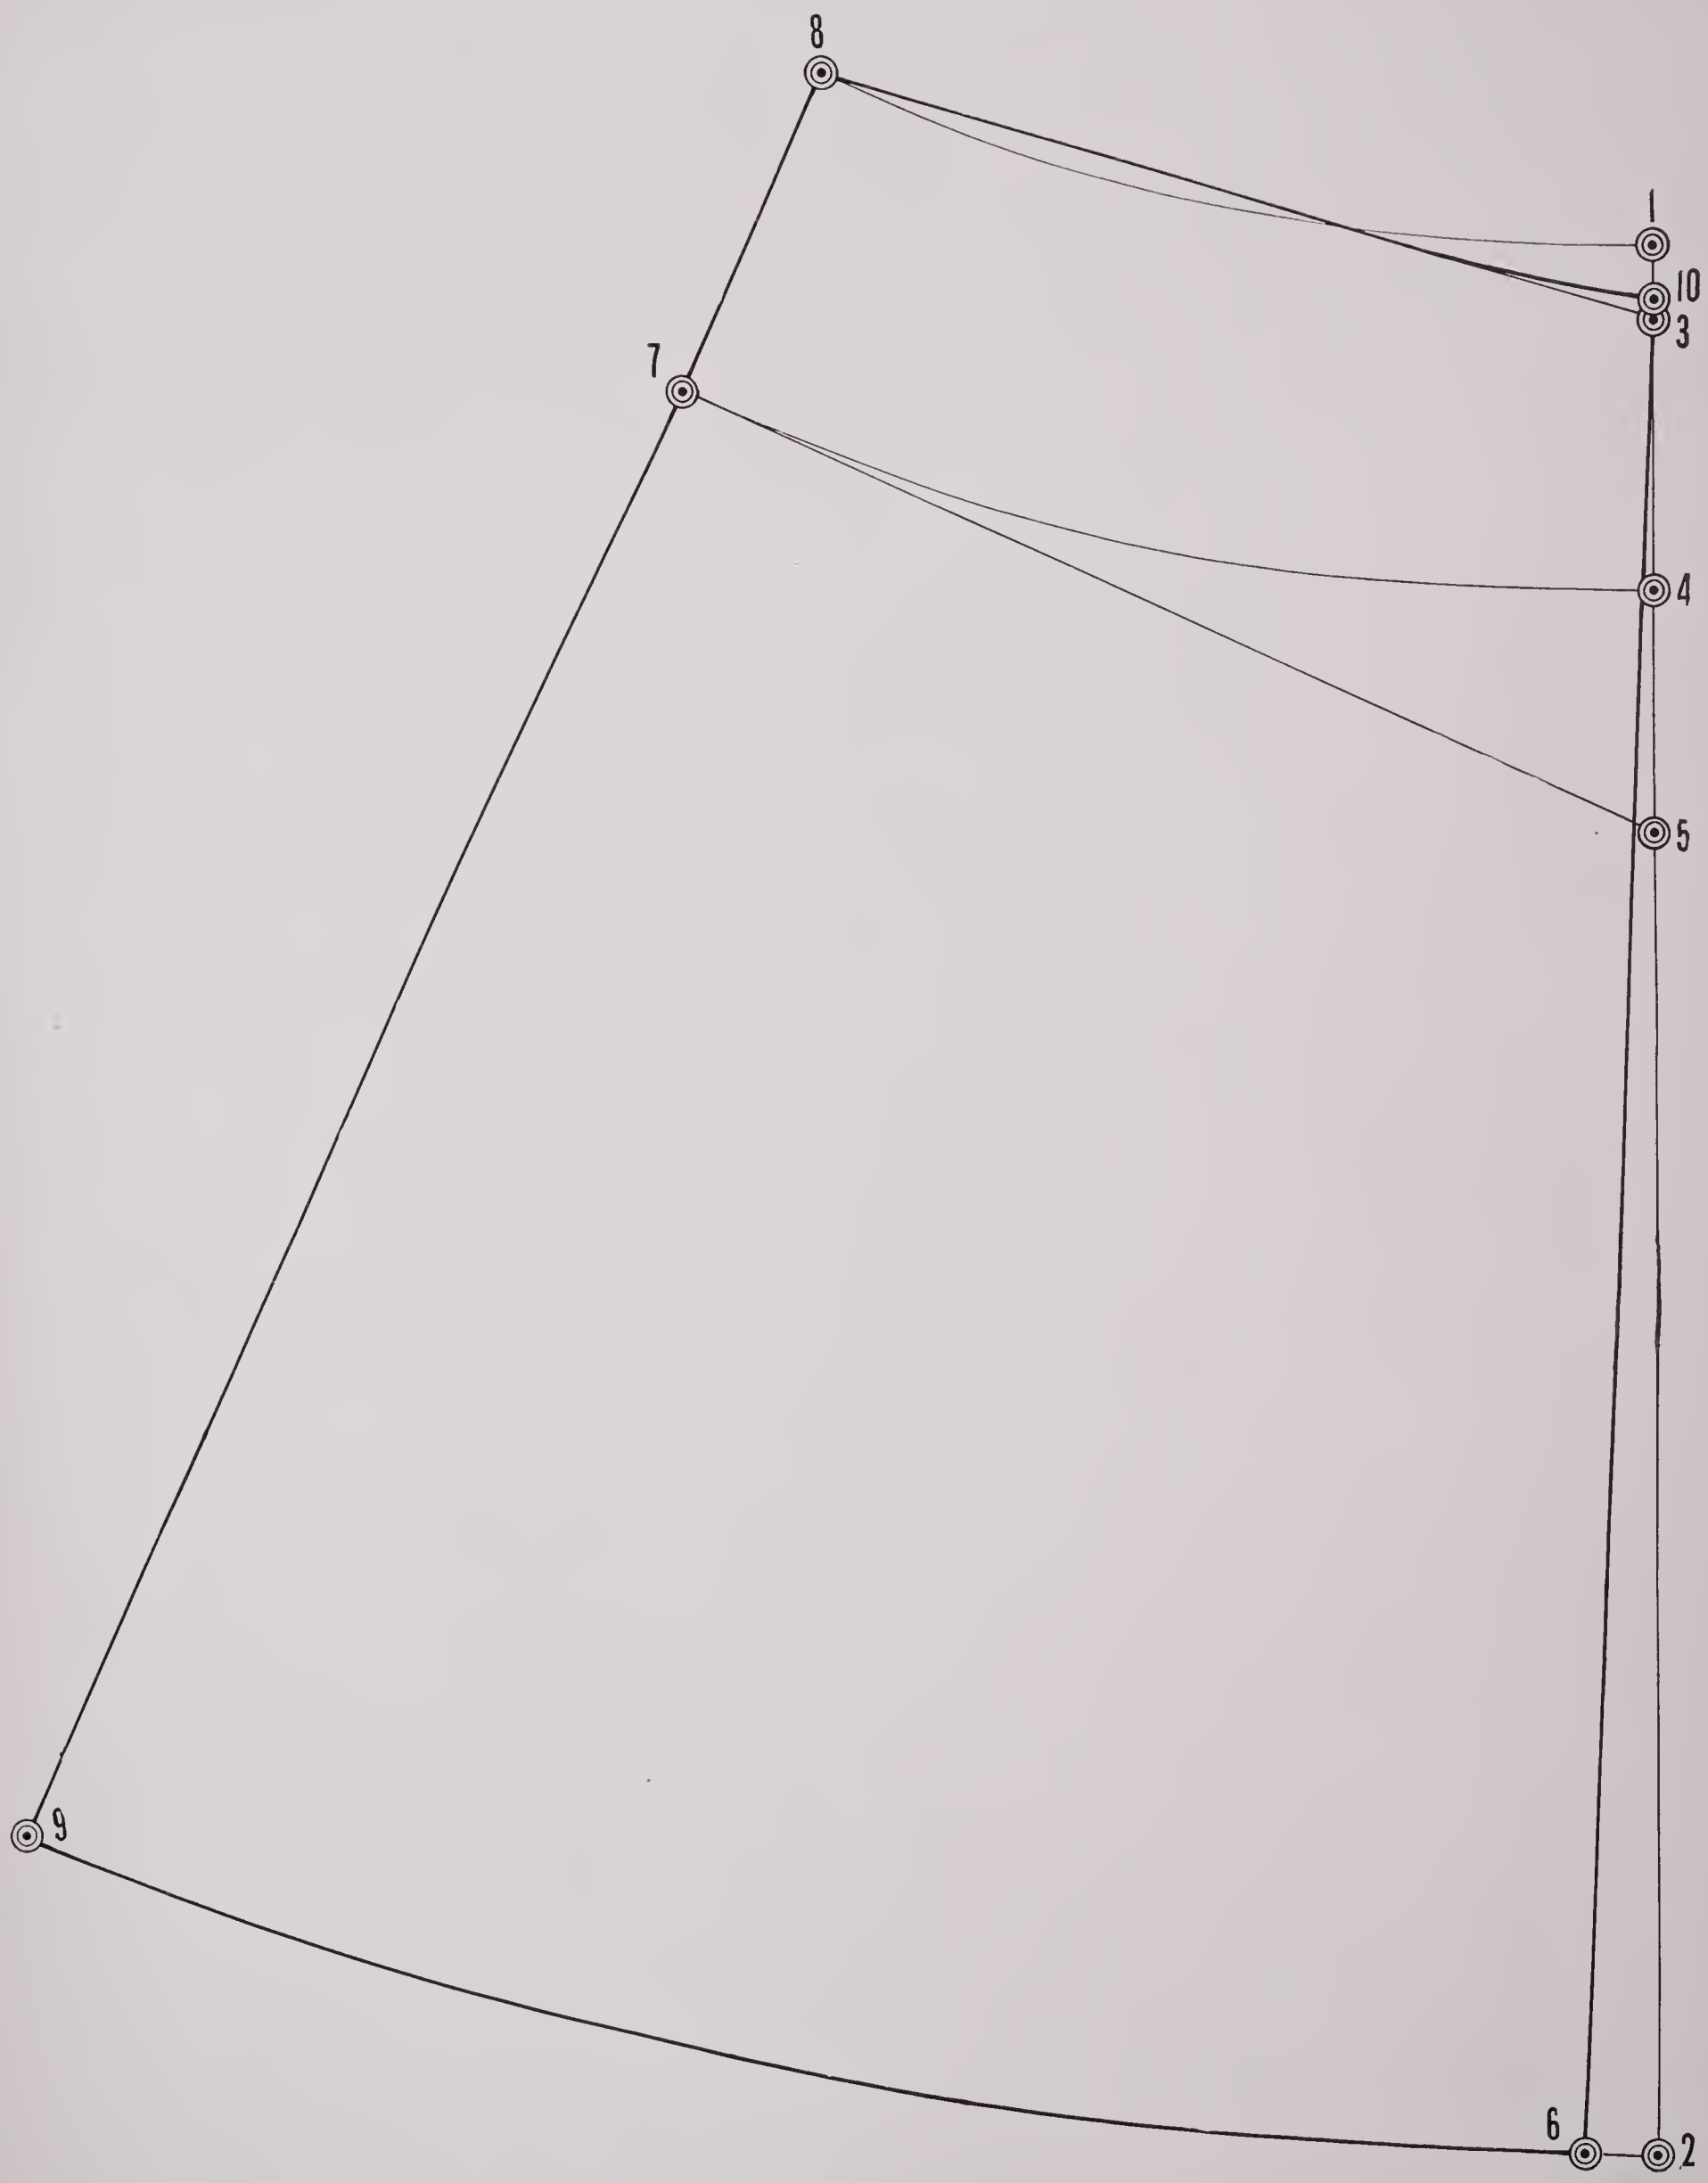
Sweep 1 serves as a guide for the waist line and sweep 4 establishes the hip line.

7 from 4 is ½ hip; square upward from 7 and 5.

8 is a point on the line just squared from 7; draw the waist line from 3 to 8 and continue the center back line 7-8 downward.

9 from 8 is the back length; measure the back length on about 2 or 3 places from sweep line 1 downward and shape the bottom from 9 through the points just gained to 6 as represented.

10 from 2 is ⅜ inch; reshape the waist line from 10 forward as per diagram.


8
1
10
3
7
4
5
9
6
2

TWO-PIECE SKIRT

This diagram represents a plain two-piece skirt, drafted to fit tight at the hips and waist line. The foundation up to and including point 10 is the same as described on the preceding page.

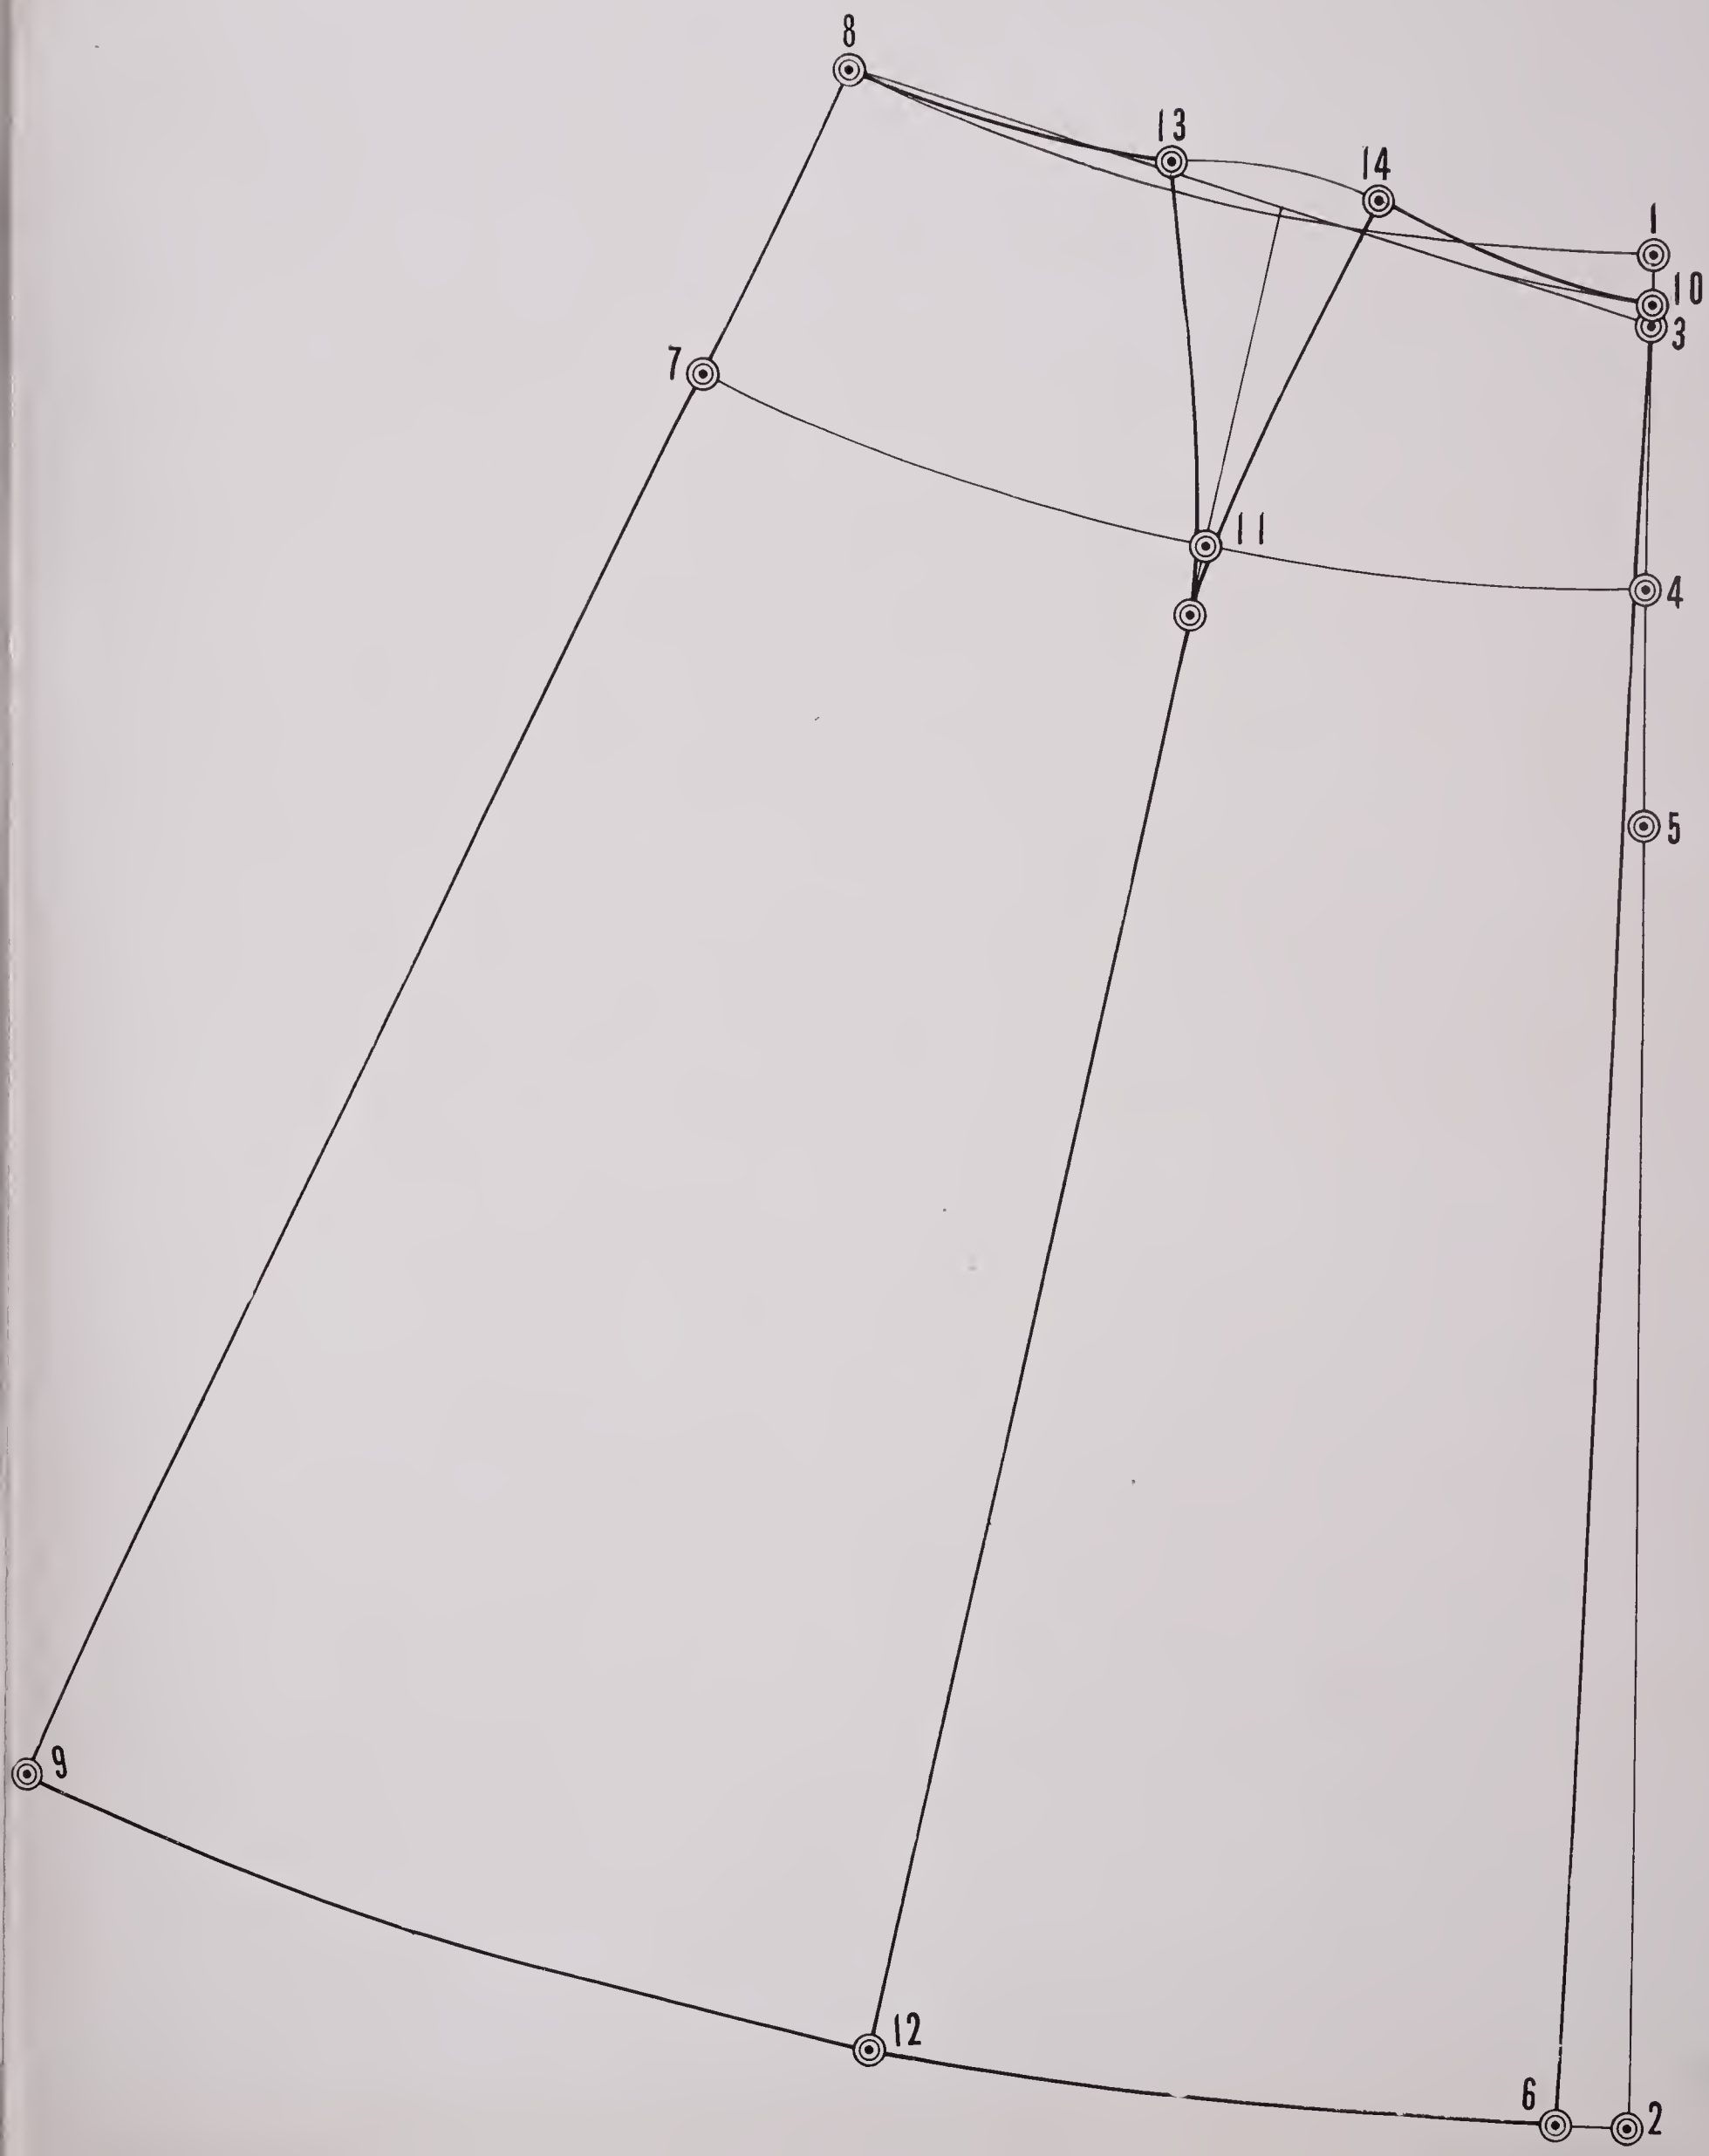
To Draft

11 from 4 is ½ of the line 4-7 less 1 inch.

12 from 6 is ½ of the line 6-9 less 2 inches; draw a line from 12 through 11 upward.

13 from 8 at a point ¼ inch above the line 8-3 is ¼ waist plus ⅜ inch; shape the waist line from 13 to 8 and the side seam from 13 to a point 1½ inch below 11.

14 from 10 on a sweep cast at 13 pivoted at 11 is ¼ waist less ⅜ inch; shape the waist line from 14 to 10 and the side seam from 14 to a point 1½ below 11, as per diagram.


8
13
14
1
10
3
7
11
4
5
9
12
6
2

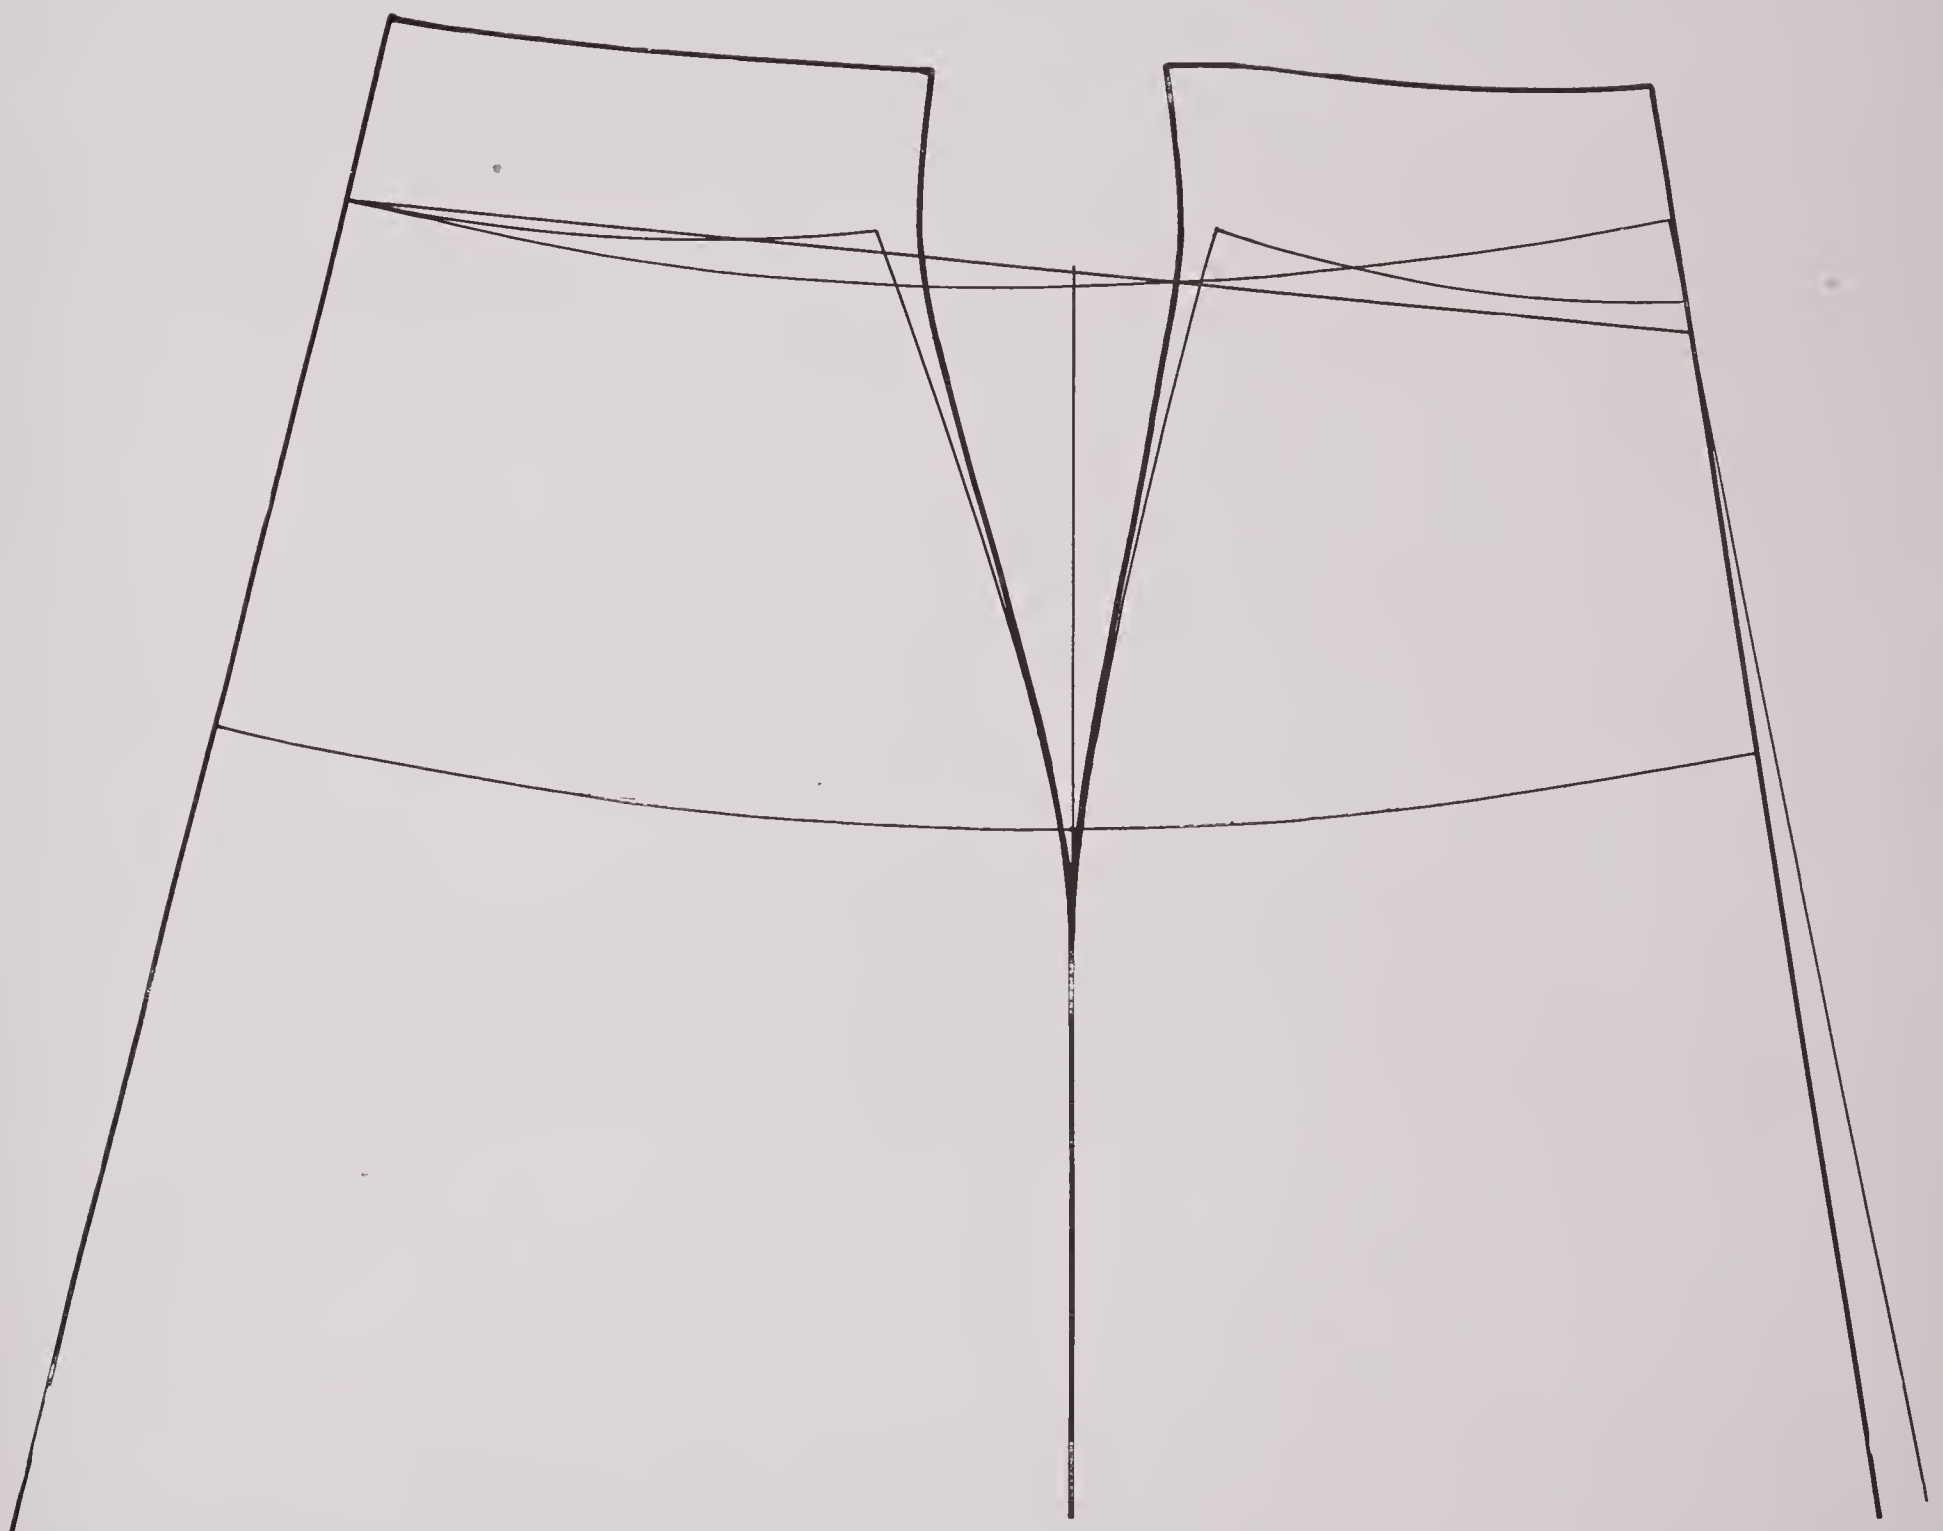
TWO-PIECE HIGH-WAISTED SKIRT

The accompanying diagram illustrates a manipulation from a plain two-piece skirt to a two-piece high-waisted skirt.

This simple manipulation does not require a lengthy description, as the diagram clearly illustrates how the amount added to the heighth of the skirt is allowed, a brief explanation though will be useful to those not acquainted with it.

Continue the center front and center back line to 2½ inches above the waist line or the amount desired, reshape the dart at the side seam to above the waist line adding ⅜ or ½ inch to the front and back parts at the waist line.

Shape the top of the front and back part as per heavy line formation.



FIVE GORED SKIRT

The skirt illustrated on the opposite page is cut in five pieces or gores, namely a front panel and four gores, two seams being on each side and one seam at the center back. The foundation points from 1 to 10 are obtained as described on a preceding page.

To Draft

11 from 4 is 1/5th of ½ hip measure less ½ inch.

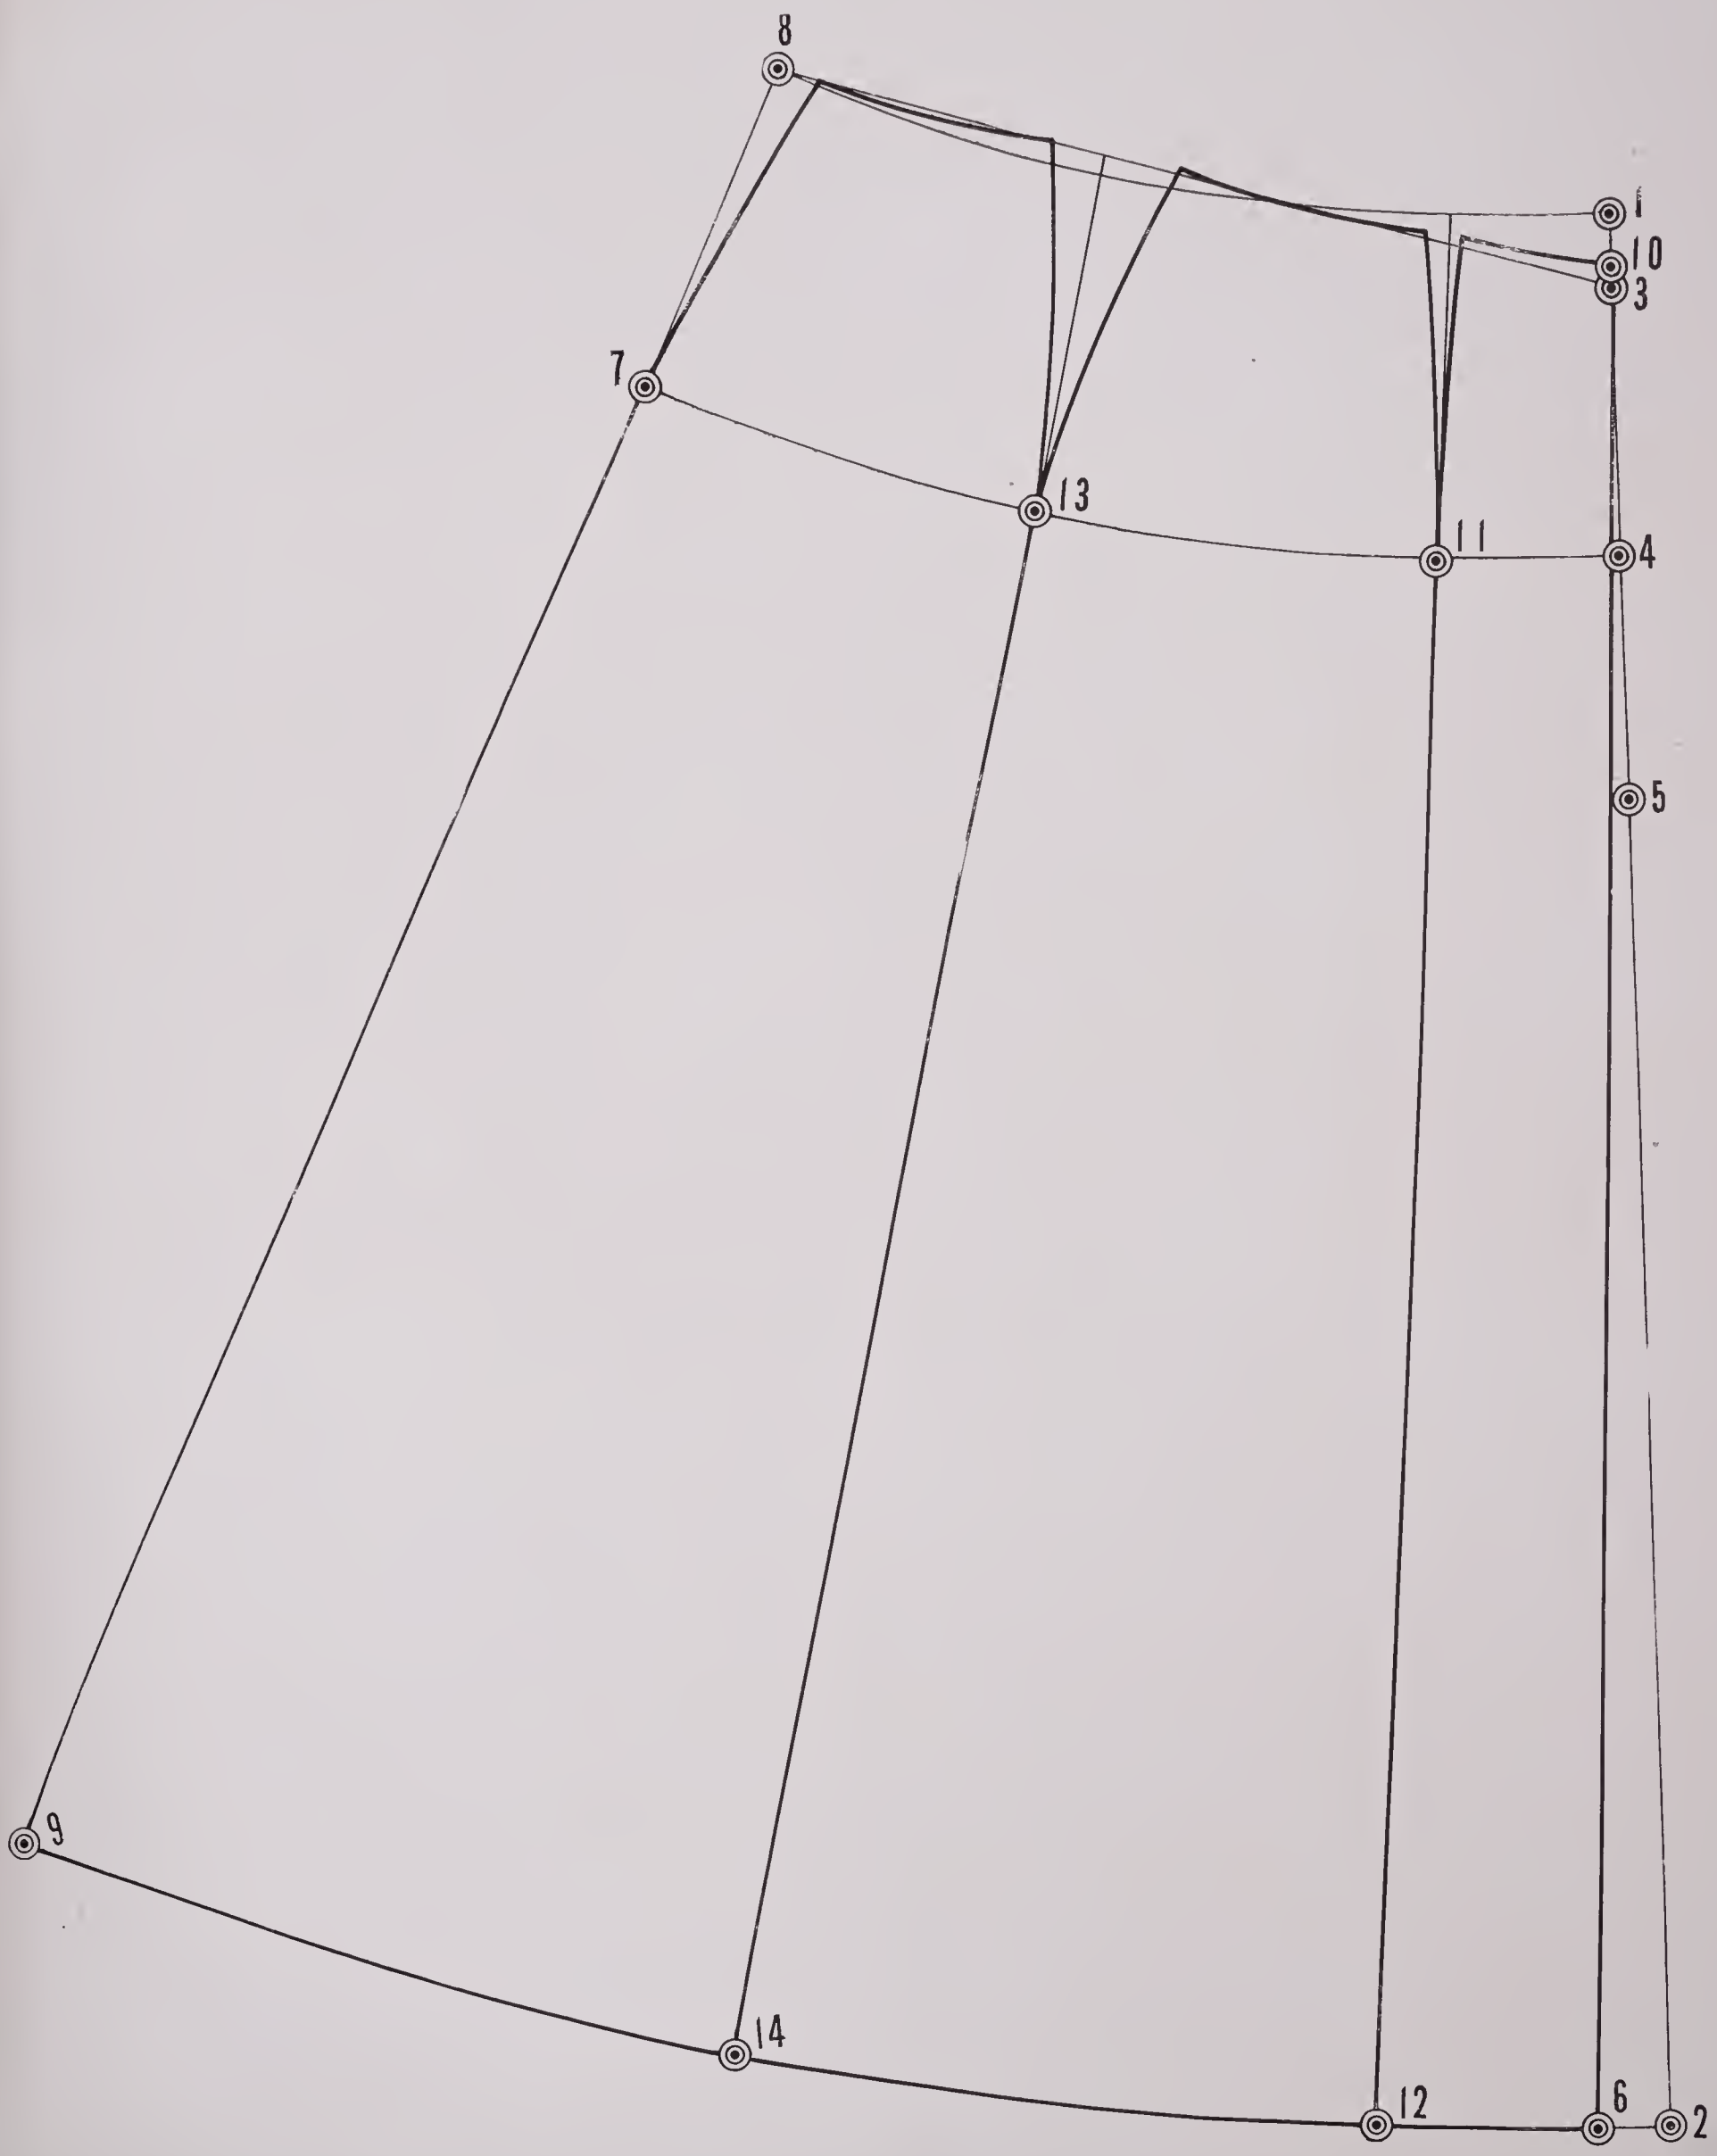
12 from 6 is 1 inch more than 11 from 4; draw a line from 12 through 11 upward.

13 is a point halfway between 7 and 11.

14 from 12 is 1 inch less than ½ of the line 9-12; draw a line from 14 through 13 upward.

The dart at the center back is ⅞ inch, and the dart at the front panel is ¼ inch in front of the panel line, and ½ inch in back of the panel line. The waist line is now measured, ½ waist measure being applied and the surplus taken out in a dart at the side seam, ½ inch more being taken towards the front than towards the back of the side seam line. The surplus in this case is 2½ inches. 1½ inches is taken out towards the front and 1 inch towards the back of the line.

Shape the darts at the front, side and back seams from the waist to the hip line, reshape the waist line between the darts and finish as per diagram.


8
1
10
3
7
13
11
4
5
9
14
12
6
2

SEVEN-GORED SKIRT

The skirt illustrated and described here, is divided into seven parts, one front panel and six gores. The foundation points up to and including point 10 are the same as illustrated and described on another page.

11 from the center front line is 1/7 of ½ hip measure less ½ inch.

12 from 6 is 1 inch more than 11 from the center front line; draw a line from 12 through 11 upward.

13 and 14 are points obtained by dividing the remainder of the skirt between 11-7 into three equal parts.

15 and 16 are points obtained by dividing the remainder of the bottom of the skirt 12-9 into three equal parts; draw lines from 15 through 13 and from 16 through 14 upward.

The surplus at the waistline is taken out in darts in the following manner:

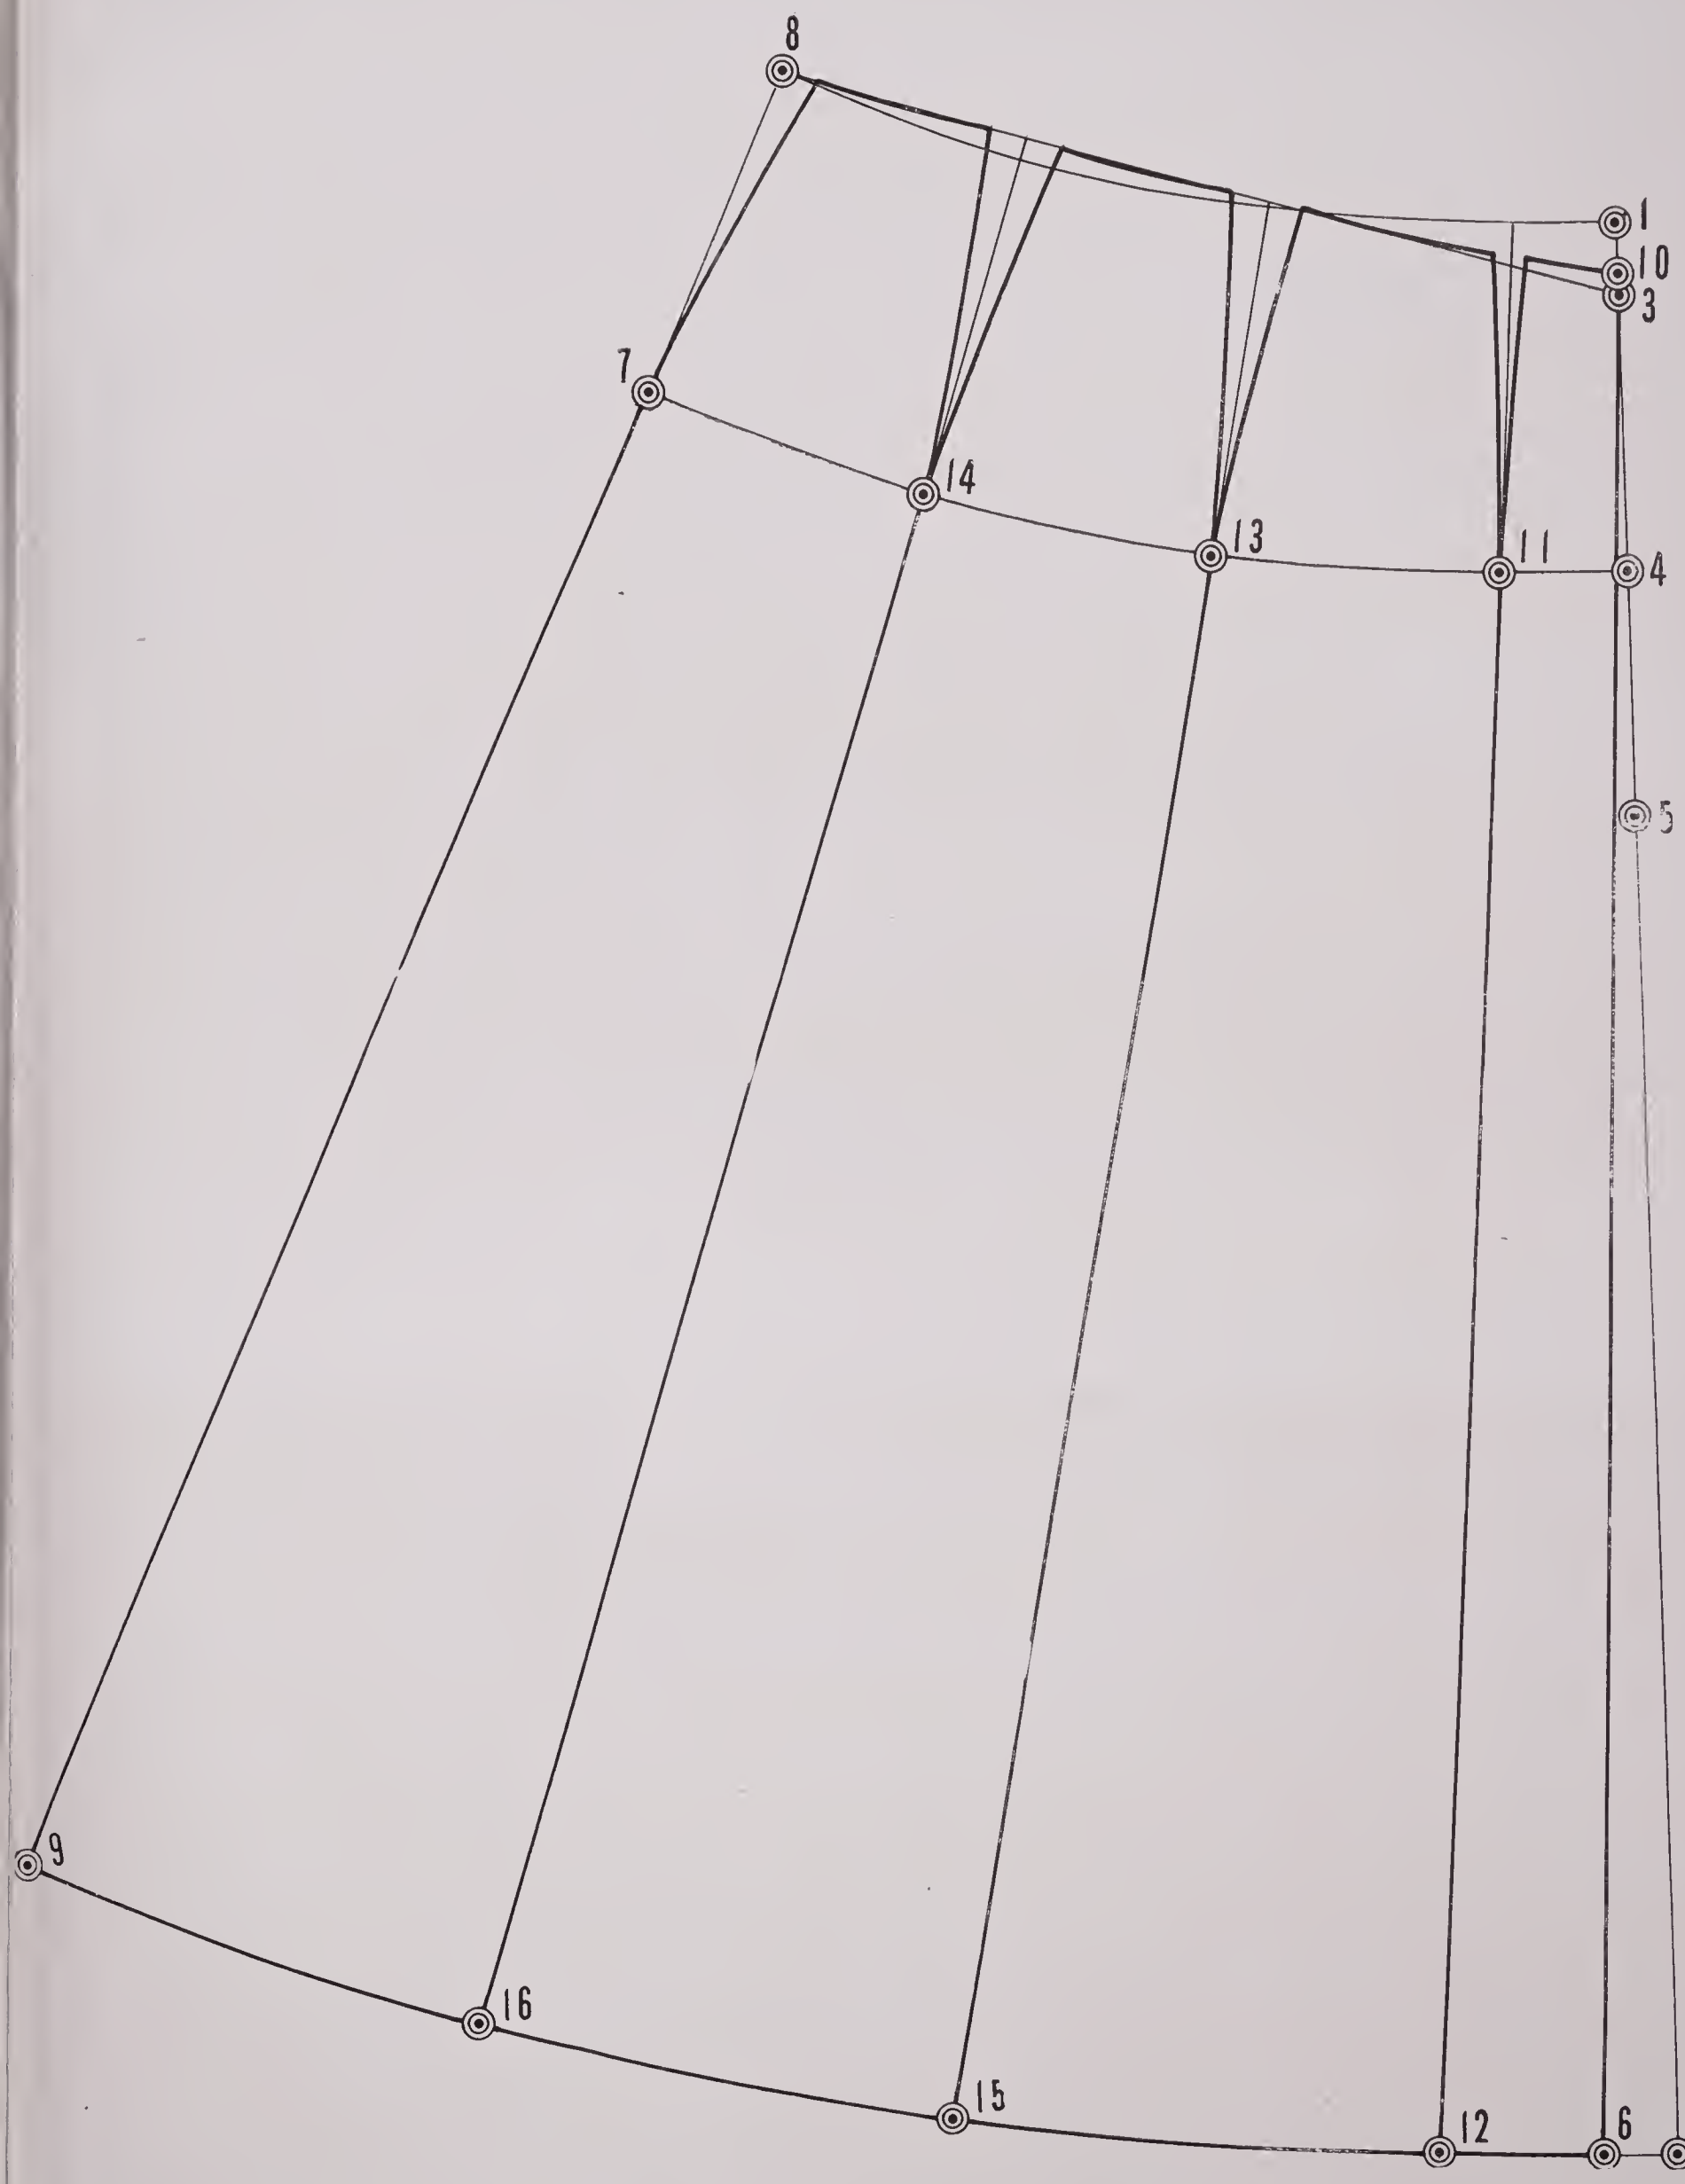
¼ inch is taken from the front panel.

⅜ inch is taken from the next gore in back of the panel line.

¾ inch is taken out at the center back.

Apply ½ waist measure at the waist line and the surplus obtained as a result therefrom is taken out equally divided in two darts at the side seams.

Shape the darts from the waist line to the hip line, and the waist line between the darts. Finish as per diagram.


8
1
10
3
7
14
13
11
4
5
9
16
15
12
6
2

NINE-GORED SKIRT

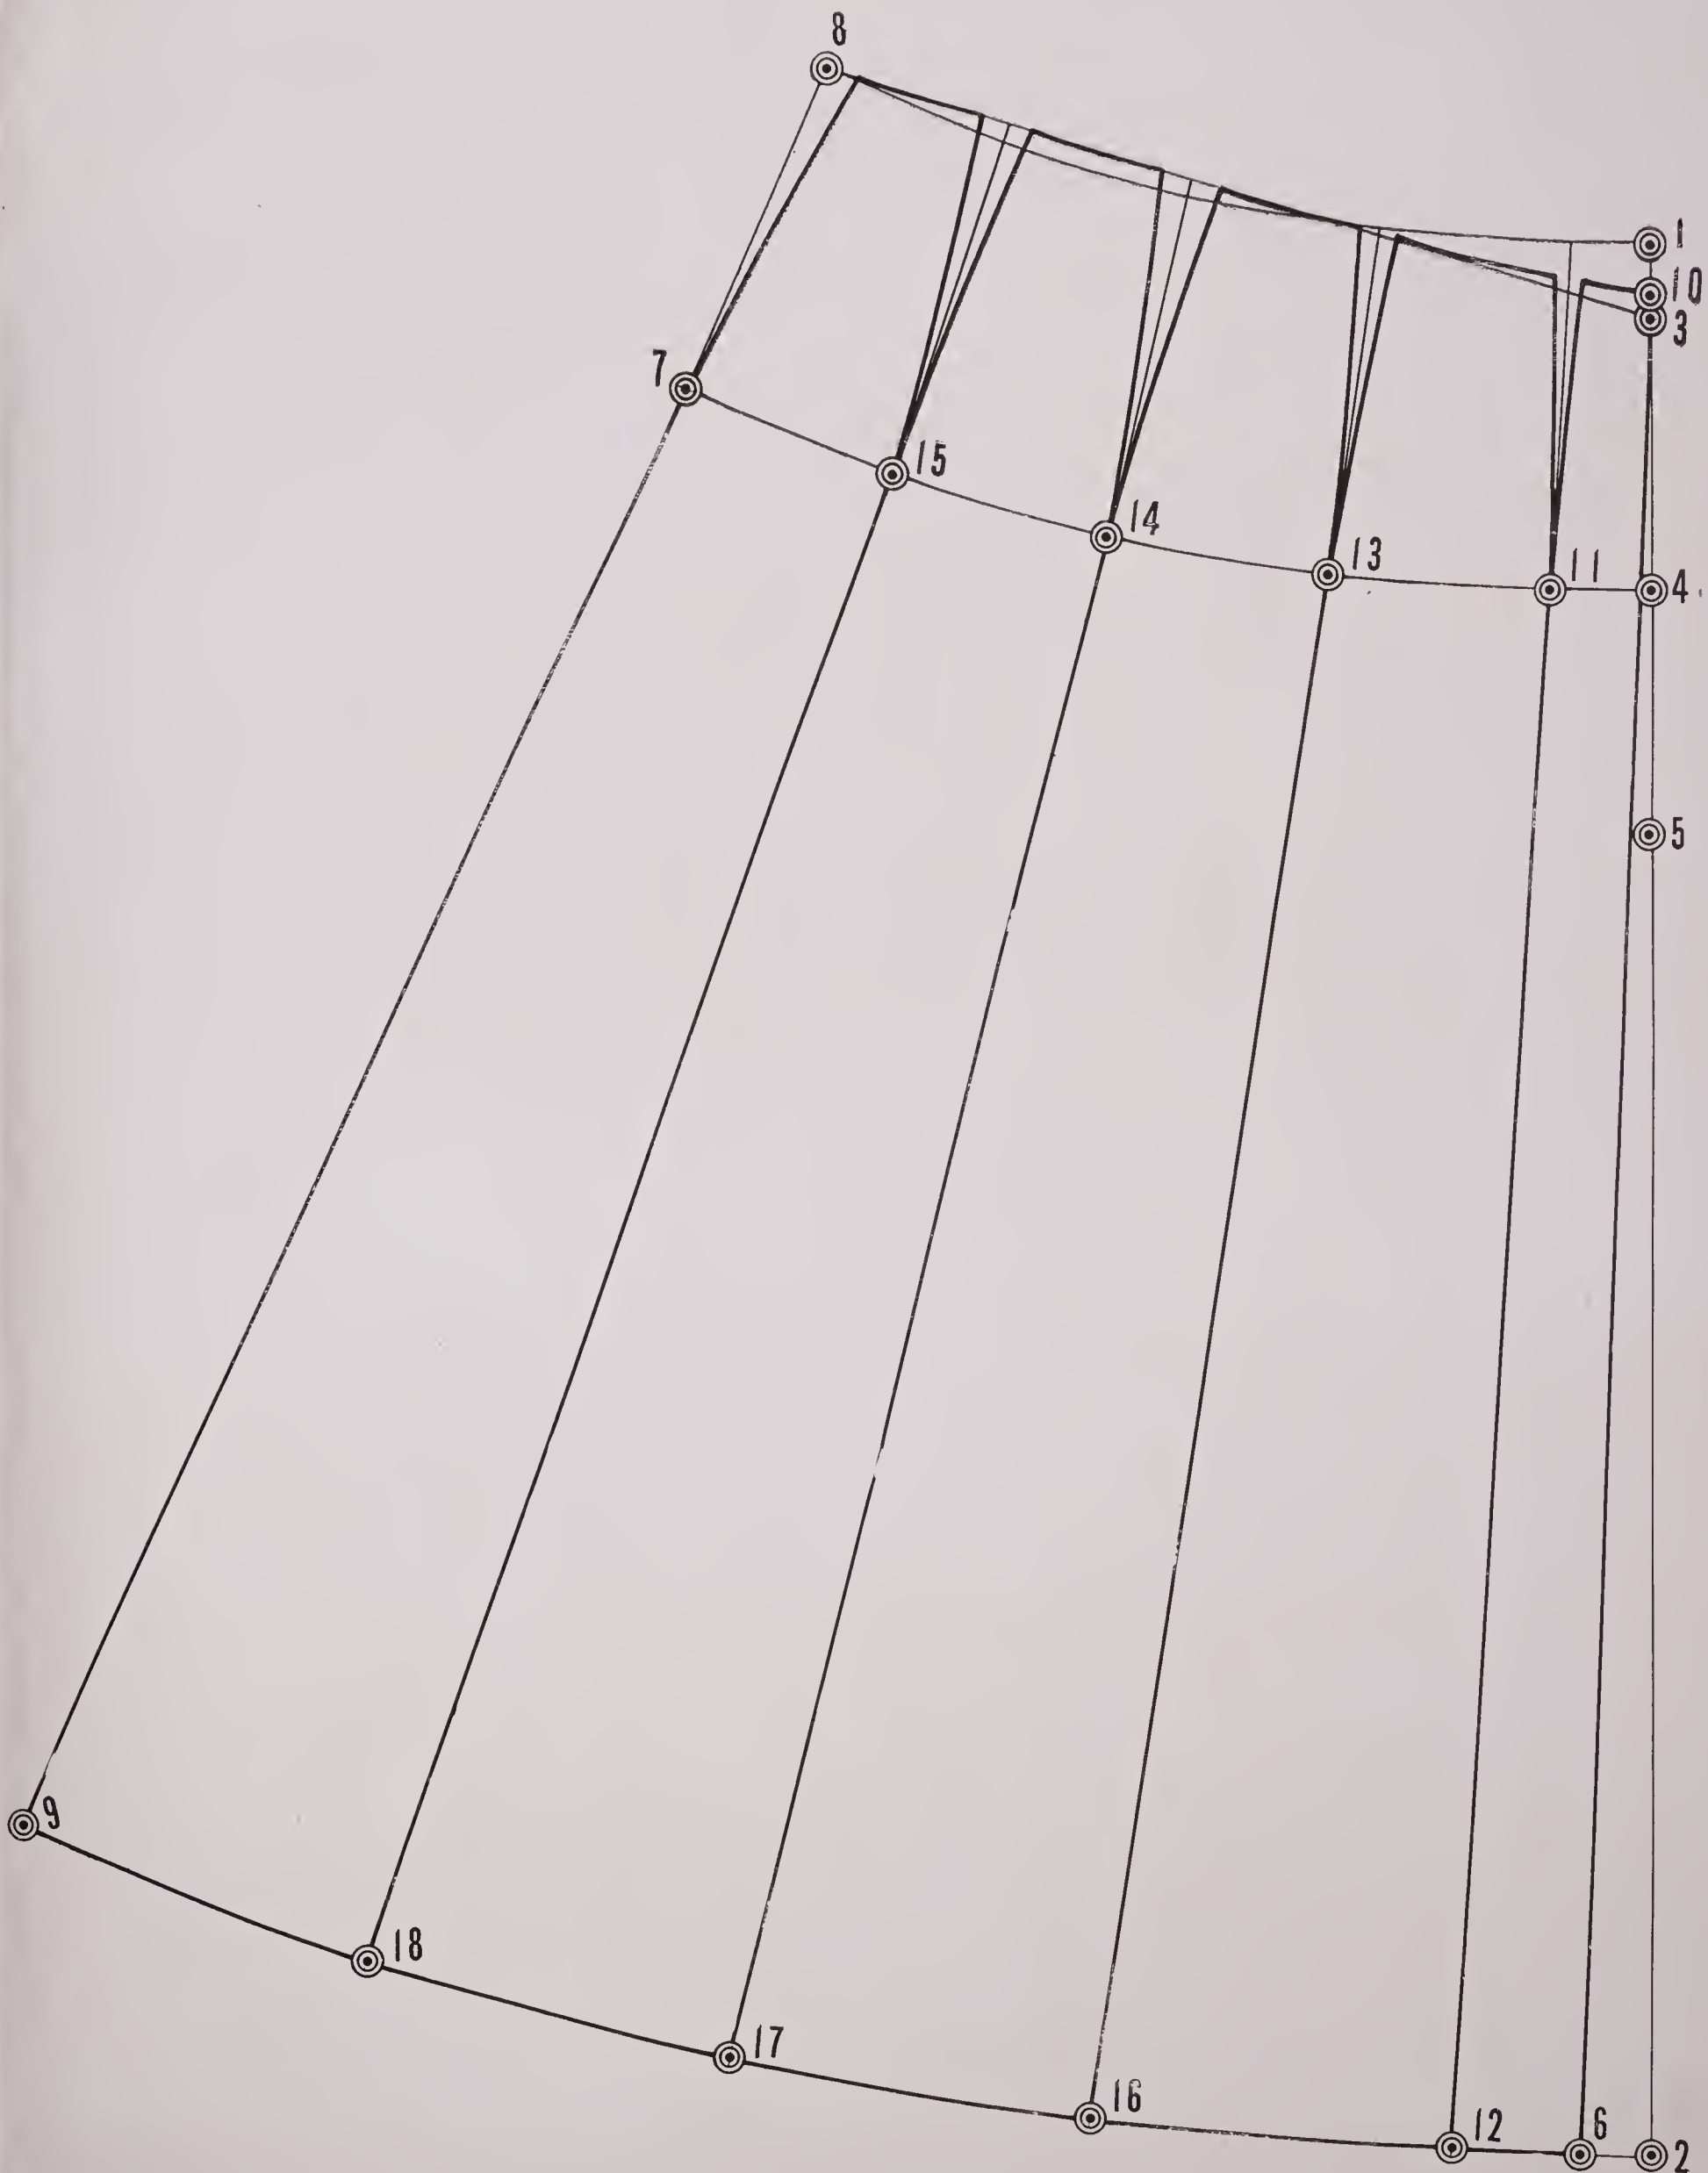
The skirt illustrated on the next page consists of nine parts—front panel and eight gores.

These skirts from about seven or nine gores up are not used extensively but are given room in this book for the benefit of those that do or will use them sooner or later for one reason and secondly for the purpose of illustrating the dividing of the surplus at the waist line into different size darts. It will also be noted in this diagram as well as in those following that the smaller darts are always towards the front and the larges darts towards the back part of the skirt, that is for normal figures, otherwise the darts are taken out when and where needed to conform with the figure and measurement.

11 from the center front line is 1/9 of ½ hip less ⅜ inch.

12 from 6 is ¾ inch more than 11 from the center front line; draw a line from 12 through 11 upward. 13, 14 and 15 are points gained by dividing the line 11-7 into 4 equal parts. 16, 17 and 18 are points gained by dividing the line 12-9 into 4 equal parts; draw lines upward from 16 through 13, from 17 through 14 and from 18 through 15. ¼ inch is taken out for a dart on each side of the front panel, ⅝ inch at the center back, apply ½ waist measure at the waist line, and divide the surplus gained into three unequal parts: that is, the dart at 14 being the largest at 15, ¼ inch smaller, and at 13, ¼ inch smaller than the one at 15.

Shape and finish as represented.


8
1
10
3
7
15
14
13
11
4
5
9
18
17
16
12
6
2

ELEVEN-GORED SKIRT

An eleven-gored skirt is herewith illustrated and described, consisting of 10 gores and front panel. A plain skirt foundation up to and including point 10 is used in the construction of this skirt.

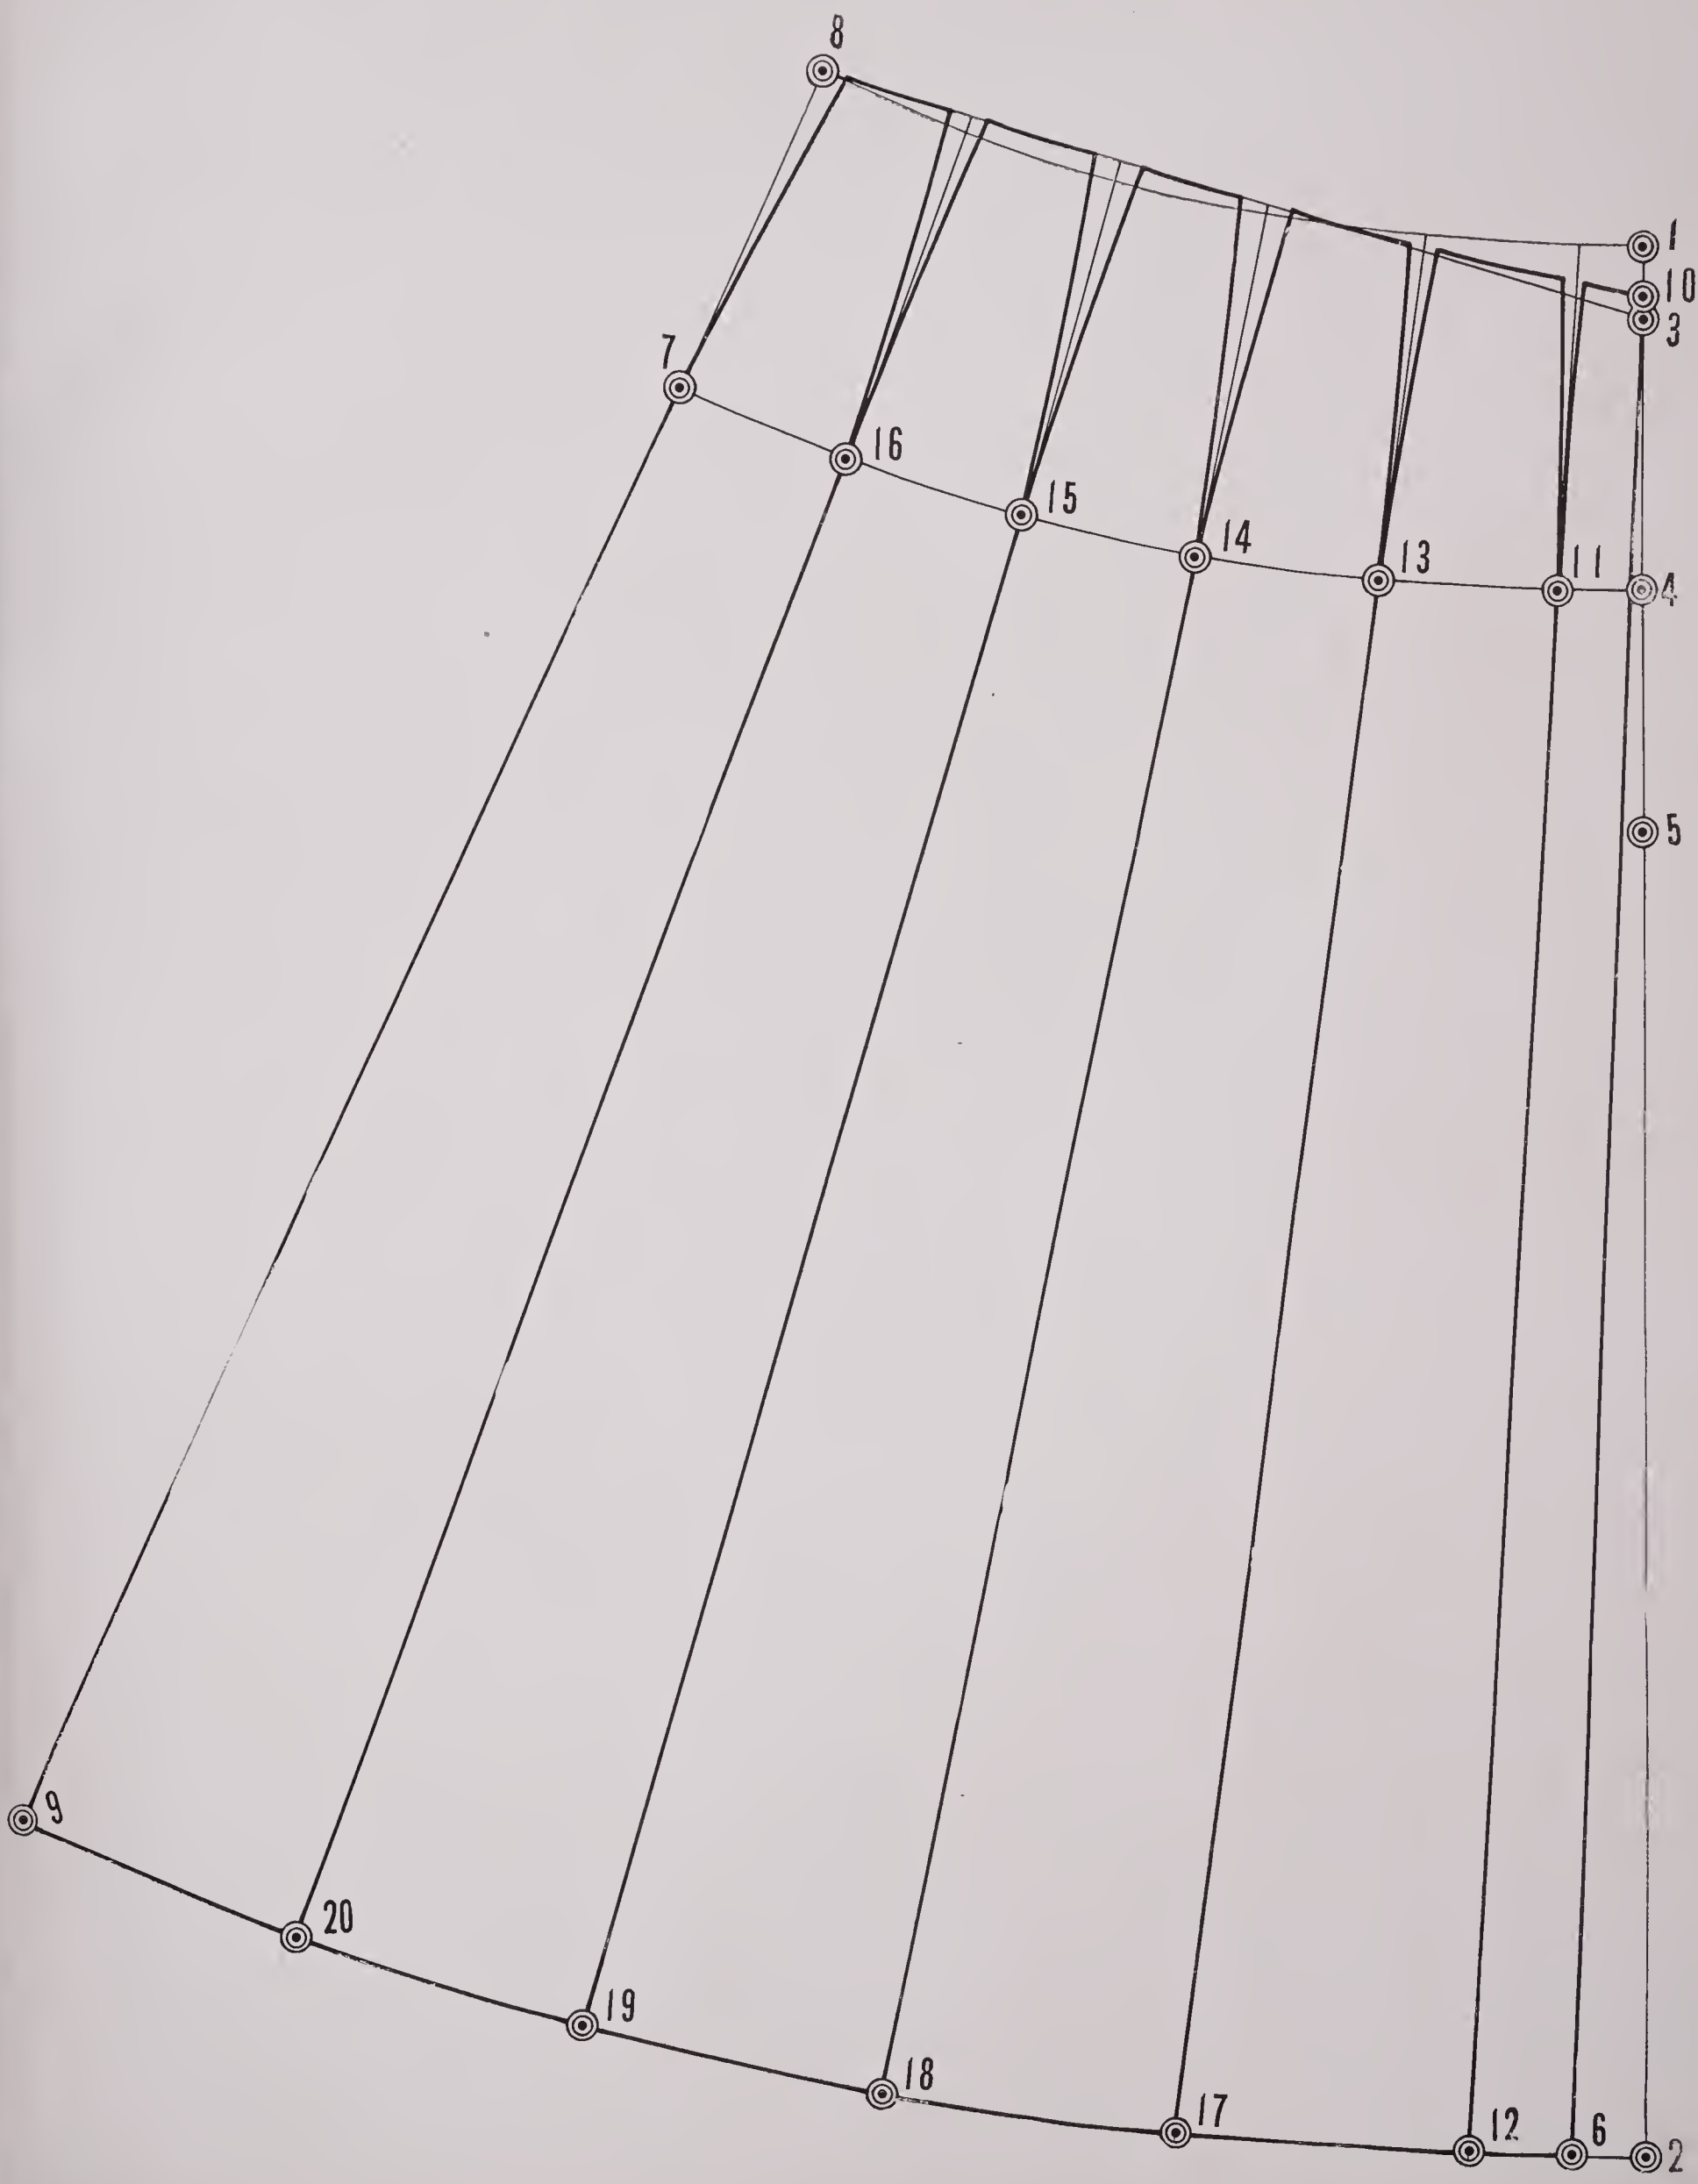
11 from the center front line is 1/11 part of ½ hip less 5/16 inch.

12 from 6 is ⅝ inch more than 11 from the center front line; draw a line from 12 through 11 upward. 13, 14, 15 and 16 are points gained by dividing the line 11-7 into five equal parts. 17, 18, 19 and 20 are points gained by dividing the line 12-9 into five equal parts; draw lines from 17 through 13, from 18 through 14, from 19 through 15 and from 20 through 16 upward.

A dart amounting to ½ inch is taken at the center back and a dart of ⅜ inch is taken at the front panel as illustrated.

Divide the remaining surplus at the waist line in such a way that the two center darts at 14 and 15 should be the largest, at 16 about 3/16 smaller and at 13 the smallest.

Shape the darts and waist line between the same as per diagram.


8
1
10
3
7
16
15
14
13
11
4
5
9
20
19
18
17
12
6
2

THIRTEEN-GORED SKIRT

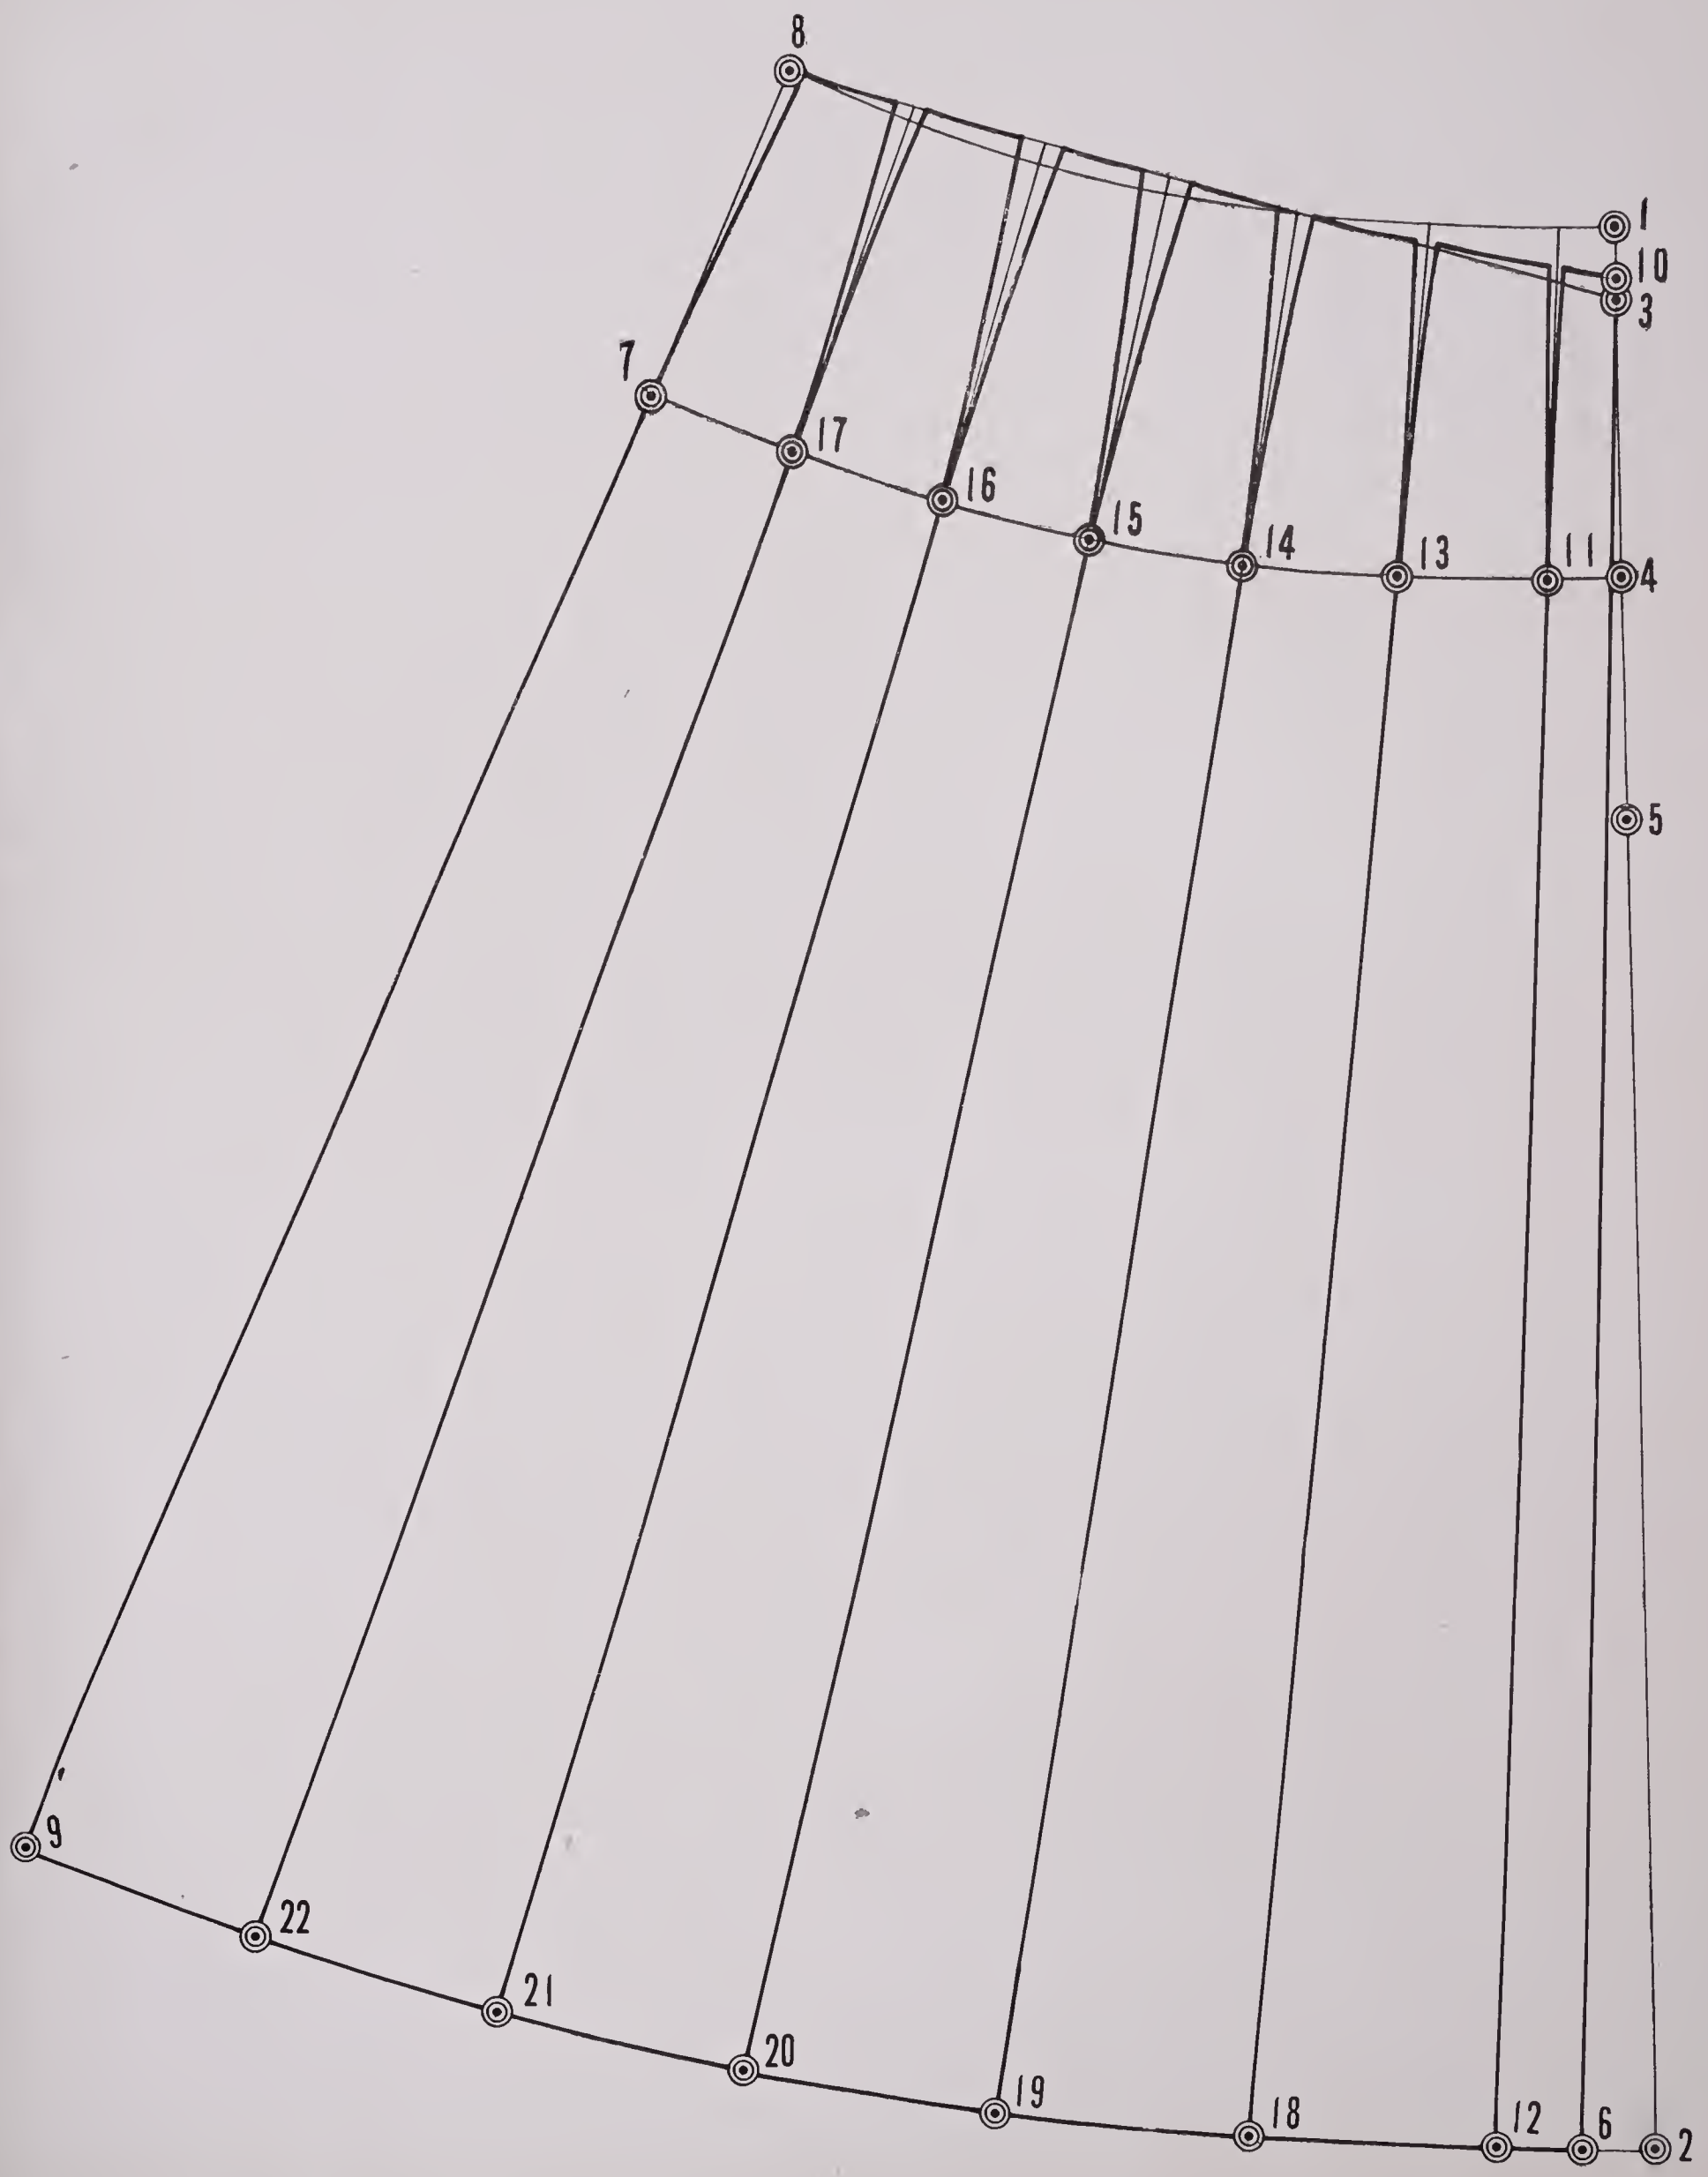
This skirt is divided into twelve equal gores and one front panel. The same foundation is used as in the other gored skirts up to and including point 10.

11 from the center front line is 1/13 of ½ inch hip measure less ¼ inch.

12 from 6 is ½ inch more than 11 from the center front line; draw a line from 12 through 11 upward.

Points 13, 14, 15, 16 and 17 are obtained by dividing the line 11-7 into six equal parts.

Points 18, 19, 20, 21 and 22 are obtained by dividing the bottom line 12-9 into six equal parts; draw lines from 18 through 13, 19 through 14, 20 through 15, 21 through 16 and 22 through 17, upward. ⅛ inch is taken out for a dart on each side of the panel line, and a dart of ⅜ inch is taken at the center back. The surplus obtained by applying ½ waist at the waist line is divided into five unequal parts, at 15 is the largest dart and decrease in size by ⅛ inch in the same order as the numbers put down run, 16 14, 17 and 13 the smallest. Finish the darts and waist line as represented.

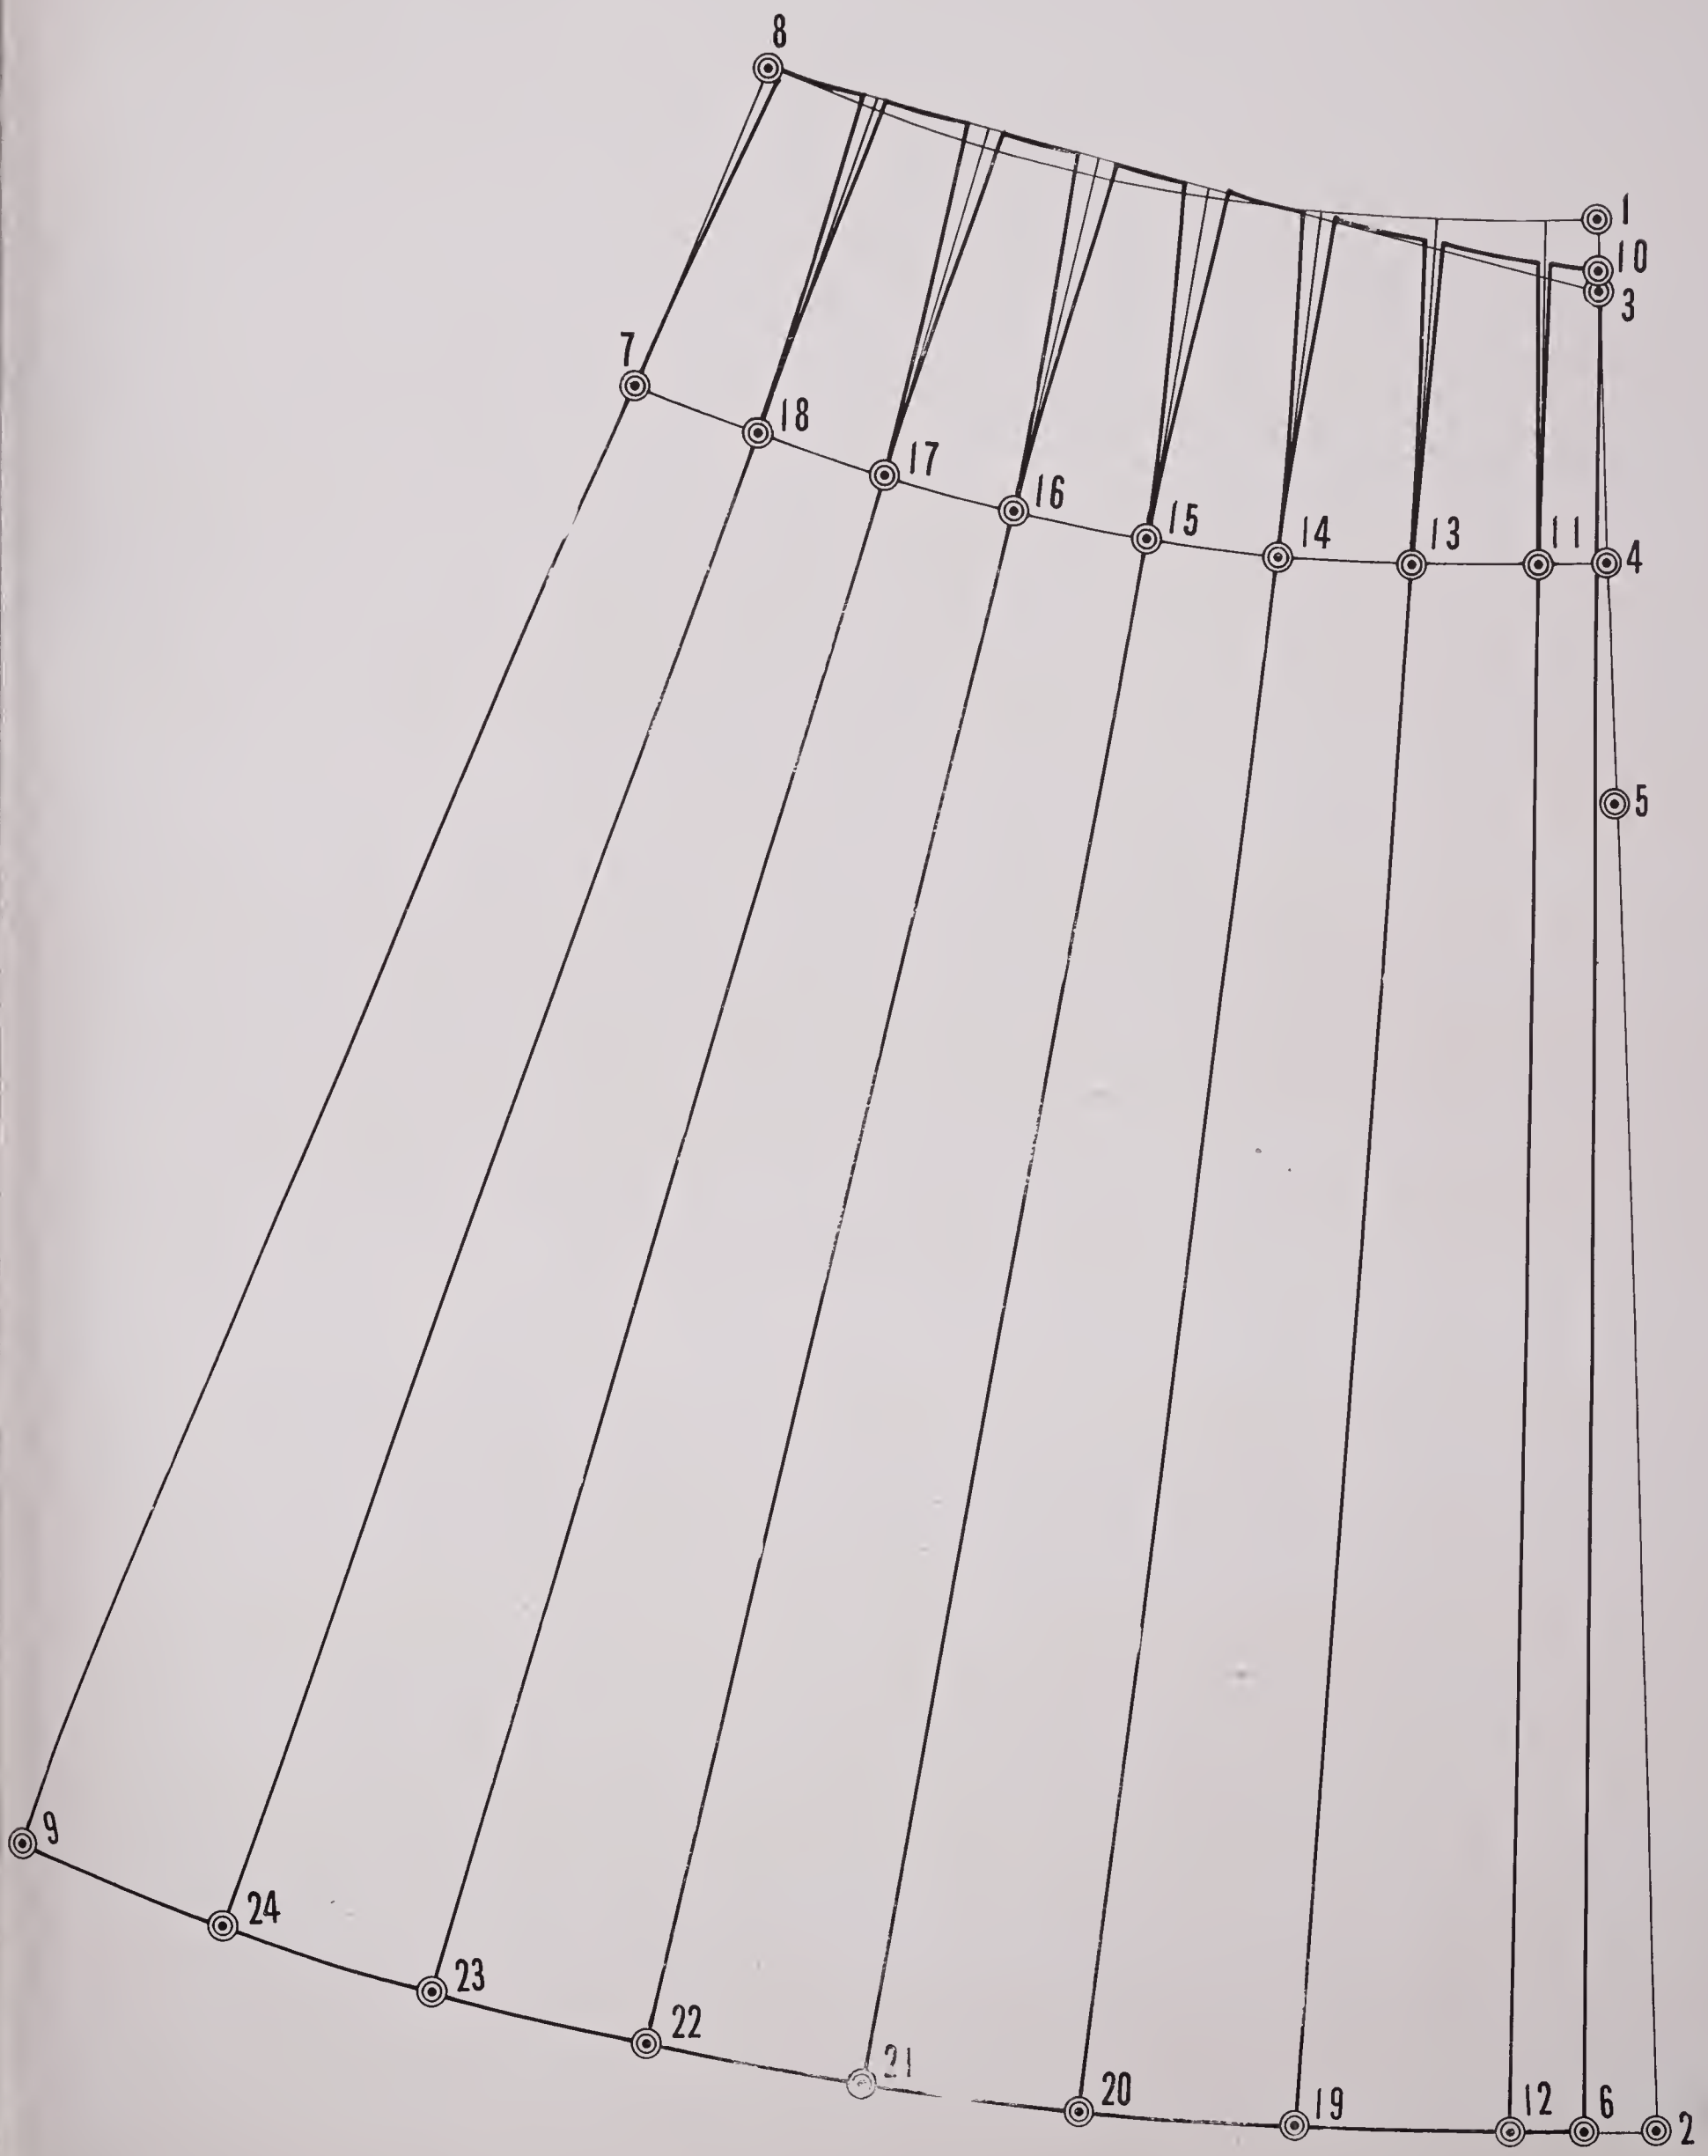

8
1
10
3
7
17
16
15
14
13
11
4
5
9
22
21
20
19
18
12
6
2

FIFTEEN-GORED SKIRT

A fifteen-gored skirt is illustrated in this diagram, fourteen gores and front panel. This skirt, as well as a thirteen-gored skirt, or from 15 gores upward, is useful also for practice in dividing the foundation for a side-pleated or box-pleated skirt.

11 from the center front line is 1/15 of ½ hip measure less ⅛ inch.

12 from 6 is ⅜ inch more than 11 from the center front line; draw a line from 12 through 11 upward. 13, 14, 15, 16, 17 and 18 are points obtained by dividing the hip line 11-7 into seven equal parts. 19, 20, 21, 22, 23 and 24 are points obtained by dividing the bottom line 12-9 into seven equal parts, draw lines from 19 through 13, 20 through 14, 21 through 15, 22 through 16, 23 through 17 and 24 through 18 upward. Shape a dart 1/16 inch on each side o fthe panel line, and ¼ inch at the center back. The remainder of the surplus at the waist line is divided in such a way that the two darts at 15 and 16 are the largest and equal and the others decrease by a little less than ⅛ inch in the same order as the numbers given below 17, 14, 18 and 13 shape the darts and the waist between the same as per diagram.


8
1
10
3
7
18
17
16
15
14
13
11
4
5
9
24
23
22
21
20
19
12
6
2

PLEATED SKIRT FOUNDATION

A pleated skirt foundation is a manipulation from a plain skirt foundation, that is, a plain foundation is drafted first and the pleated skirt foundation is manipulated from it afterward as described below.

To Draft

1 is a point on the plain skirt foundation at the center back and waist line.

2 from 1 is 1½ inch; draw a line from the front waist line through 2 backward, this is the new waist line.

3 is a point on the plain skirt foundation at the center back and hip line.

4 from 3 is 1½ inch; draw the new hip line from 4 forward to join the old hip line towards the front.

5 is a point half way between 3 and 4.

6 is a point at the center back and bottom line of the plain skirt foundation.

7 from 6 is ¼ of ½ hip measure plus 1 inch; draw a line from below and through 7, through 5 upward. This is the new center back line.

8 from 7 is 1½ inch; draw the new bottom line from 8 forward.

A fifteen gored skirt is then drafted on the new foundation following the same rule as illustrated and described on a preceding page. If desired either a larger or smaller amount of gores may be drafted depending upon the amount of pleats called for.

The skirt is then cut out, each gore separate or in sections of 2 or 3 gores and pleats added on to it as illustrated on the pages following.


1
2
3
5
4
6
7
8

SIDE PLEATED SKIRT

From the accompanying diagram it can be clearly seen how this simple manipulation is accomplished. In this illustration the pleats are allowed up to the hip line only although they may be allowed to the waist line if so desired.

1 and 2 are points at the hip line, and

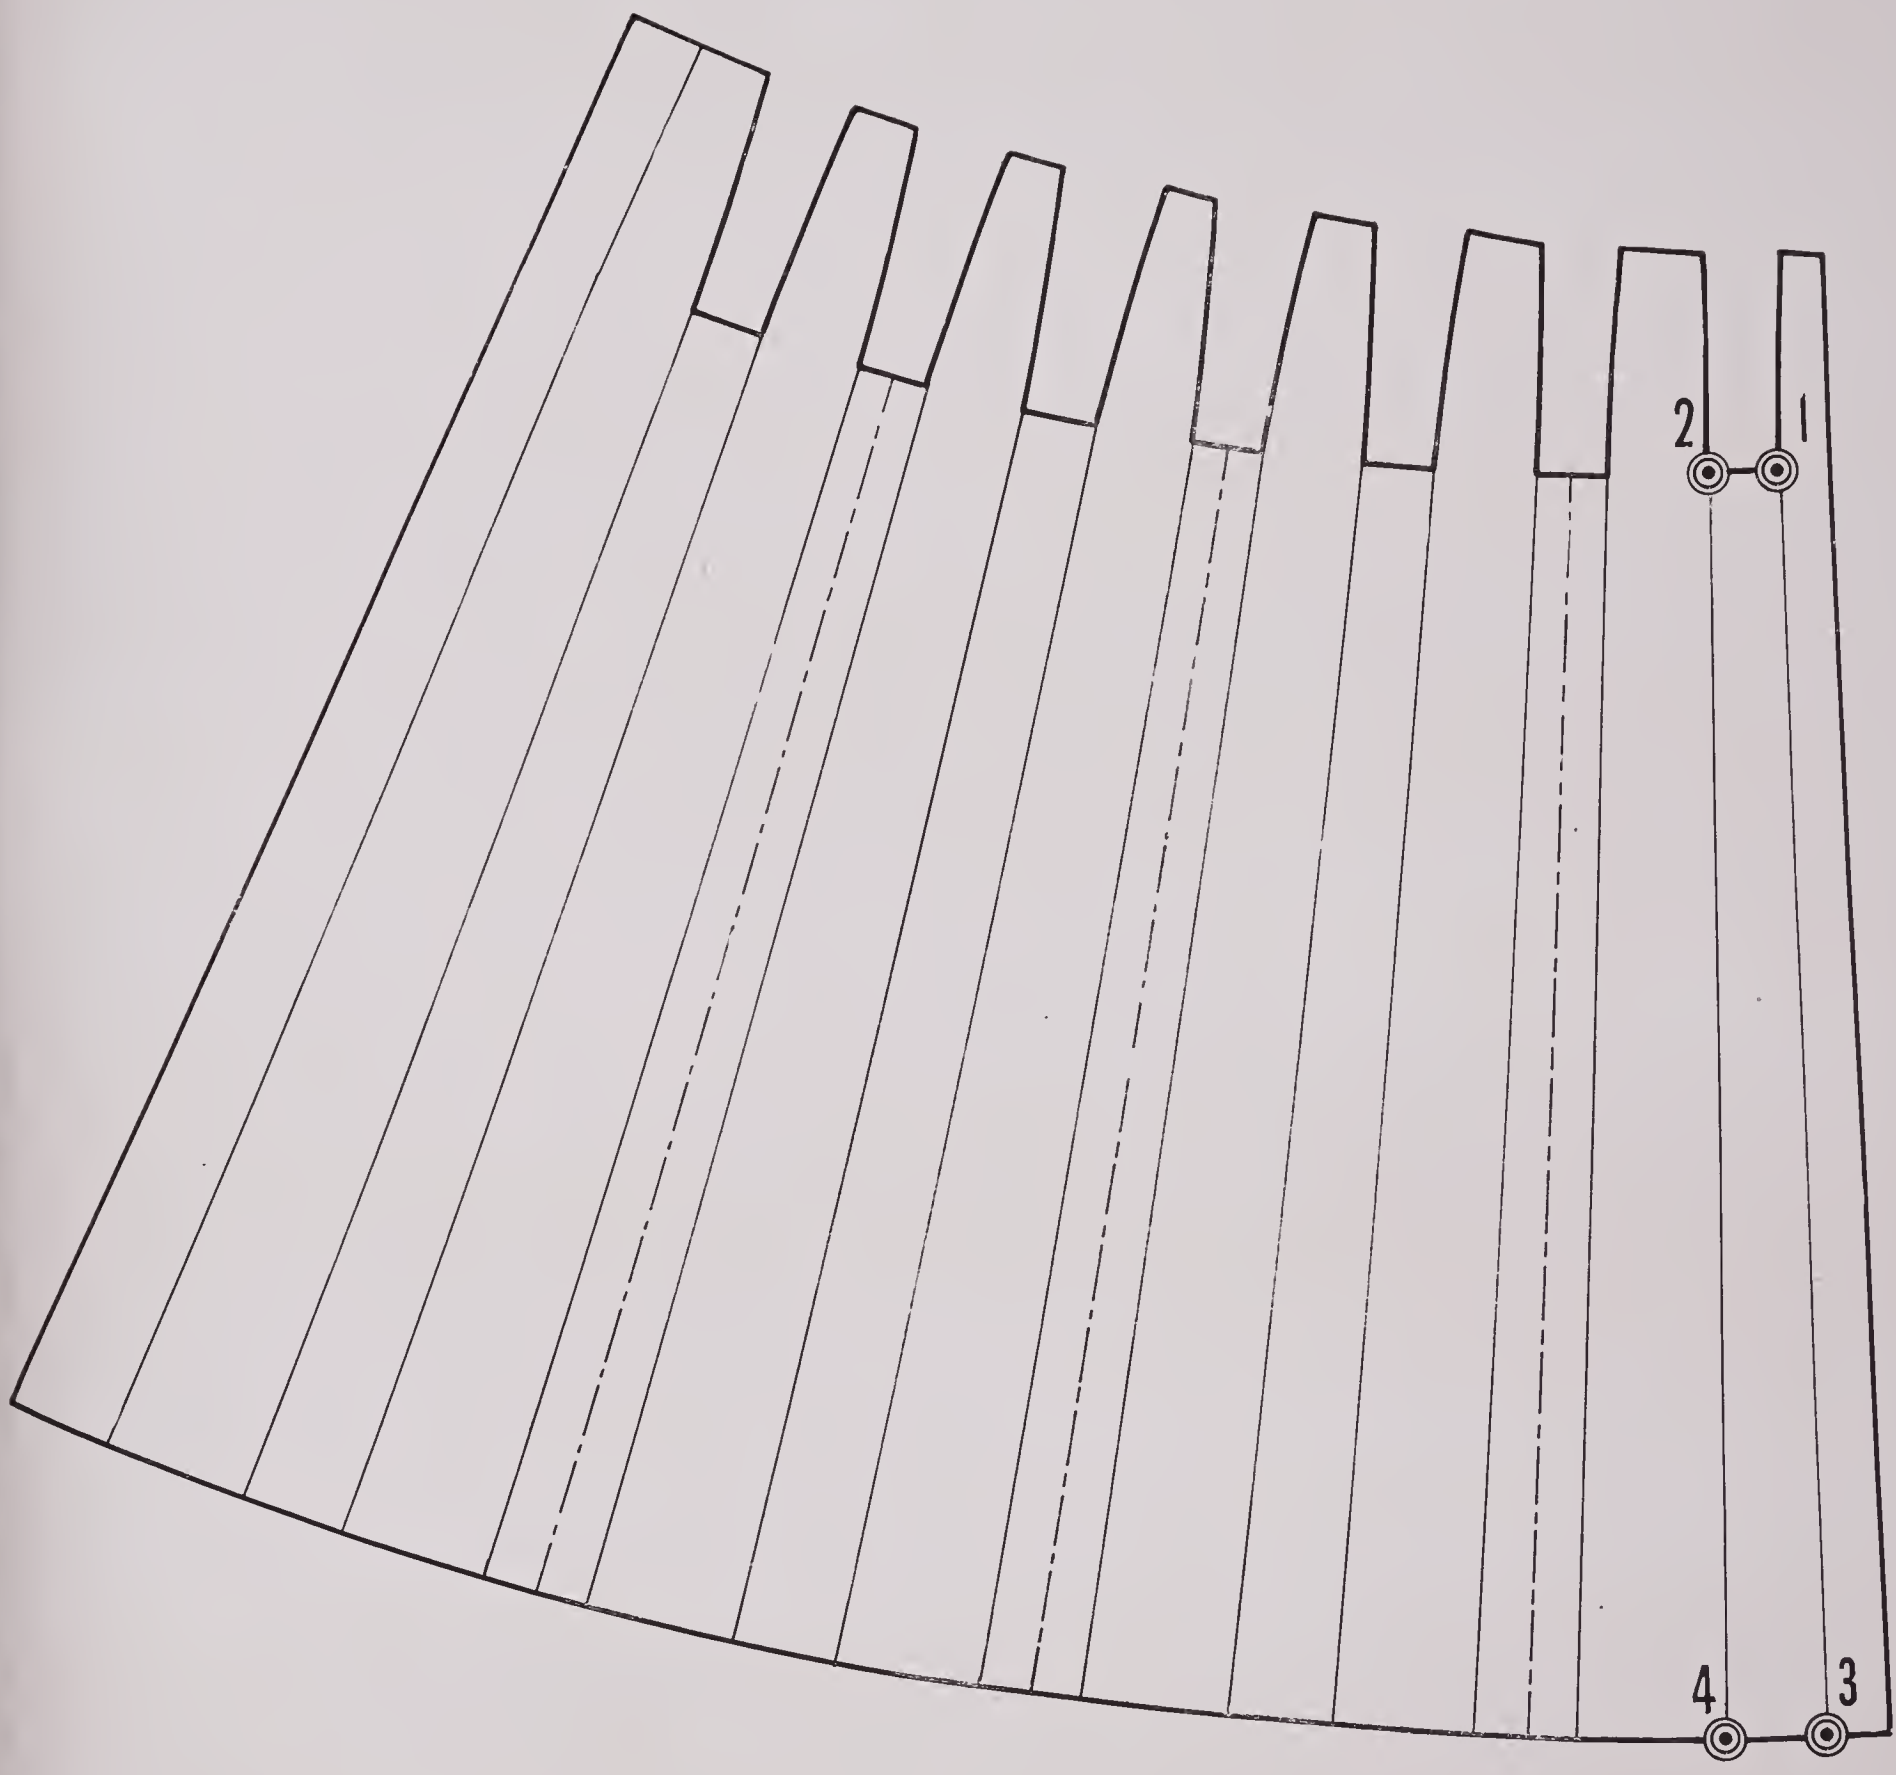
3 and 4 are points at the bottom of the skirt.

The front panel is copied first and the hip line marked giving point 1; square forward from 1.

2 from 1 is 2 inches, and

4 from 3 is 3 inches, this is the amount allowed for the pleats, either more or less may be allowed if desired.

The next gore is then copied, laying it with the hip line at 2 and with the bottom at 4. A pleat is added and the following gore copied, and so on until pleats are allowed between each and every gore including the center back. A suggestion as to where to seam the skirt is given and illustrated by the broken line formation.


2
1
4
3

BOX PLEATED SKIRT

The manipulation of a box pleated skirt is of the same character as of the ide pleated skirt illustrated on the preceding page. The pleats are allowed up to the hip line only but may be allowed to the waist line if desired.

1 and 5 are points at the hip line, and

3 and 6 are points at the bottom of the skirt.

Copy the front panel and square forward from 1.

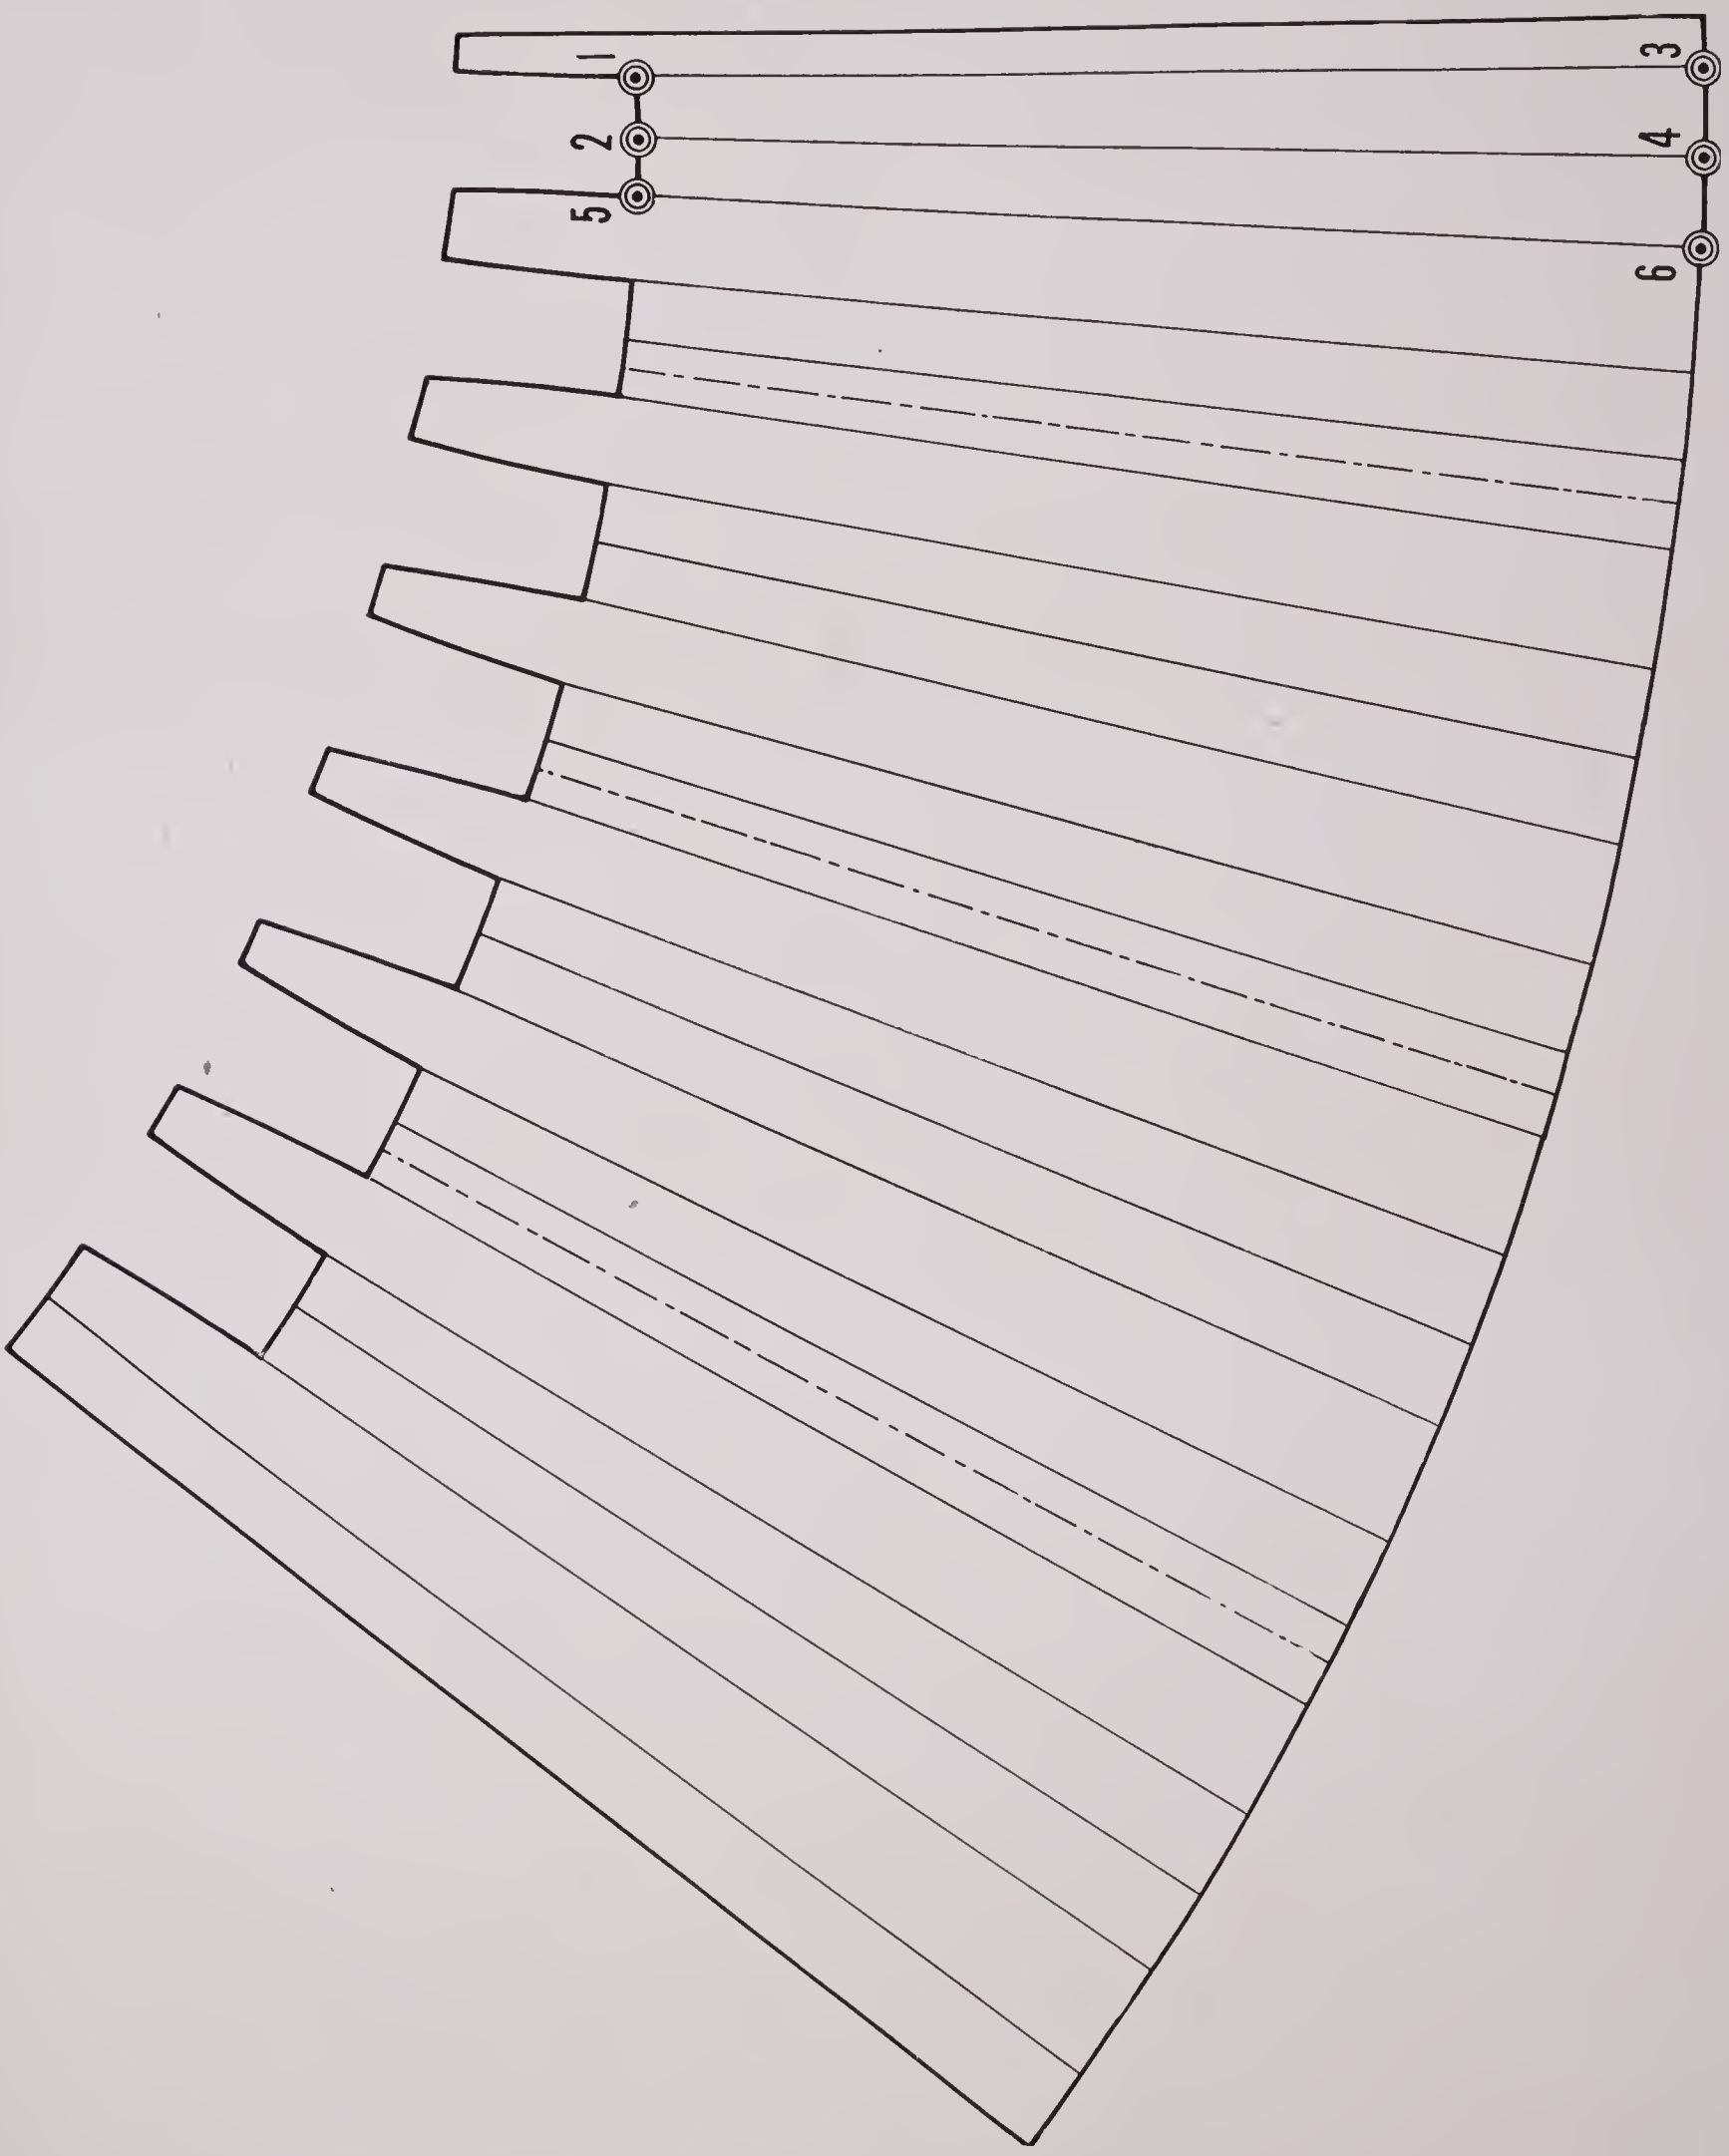
2 from 1 is 2 inches, and

4 from 3 is 3 inches; connect 2 and 4.

5 from 2 is 2 inches, and

6 from 4 is 3 inches; connect 5 and 6 and square the line 5-2 from the line 5-6 and 2.

The next gore is then laid with the hip line at 5 and with the bottom at 6, copy it and go through the same manipulation in allowing the pleat—and so forth through the whole skirt, each gore forming a box pleat. The broken line formations indicating the places where the skirt may be seamed.

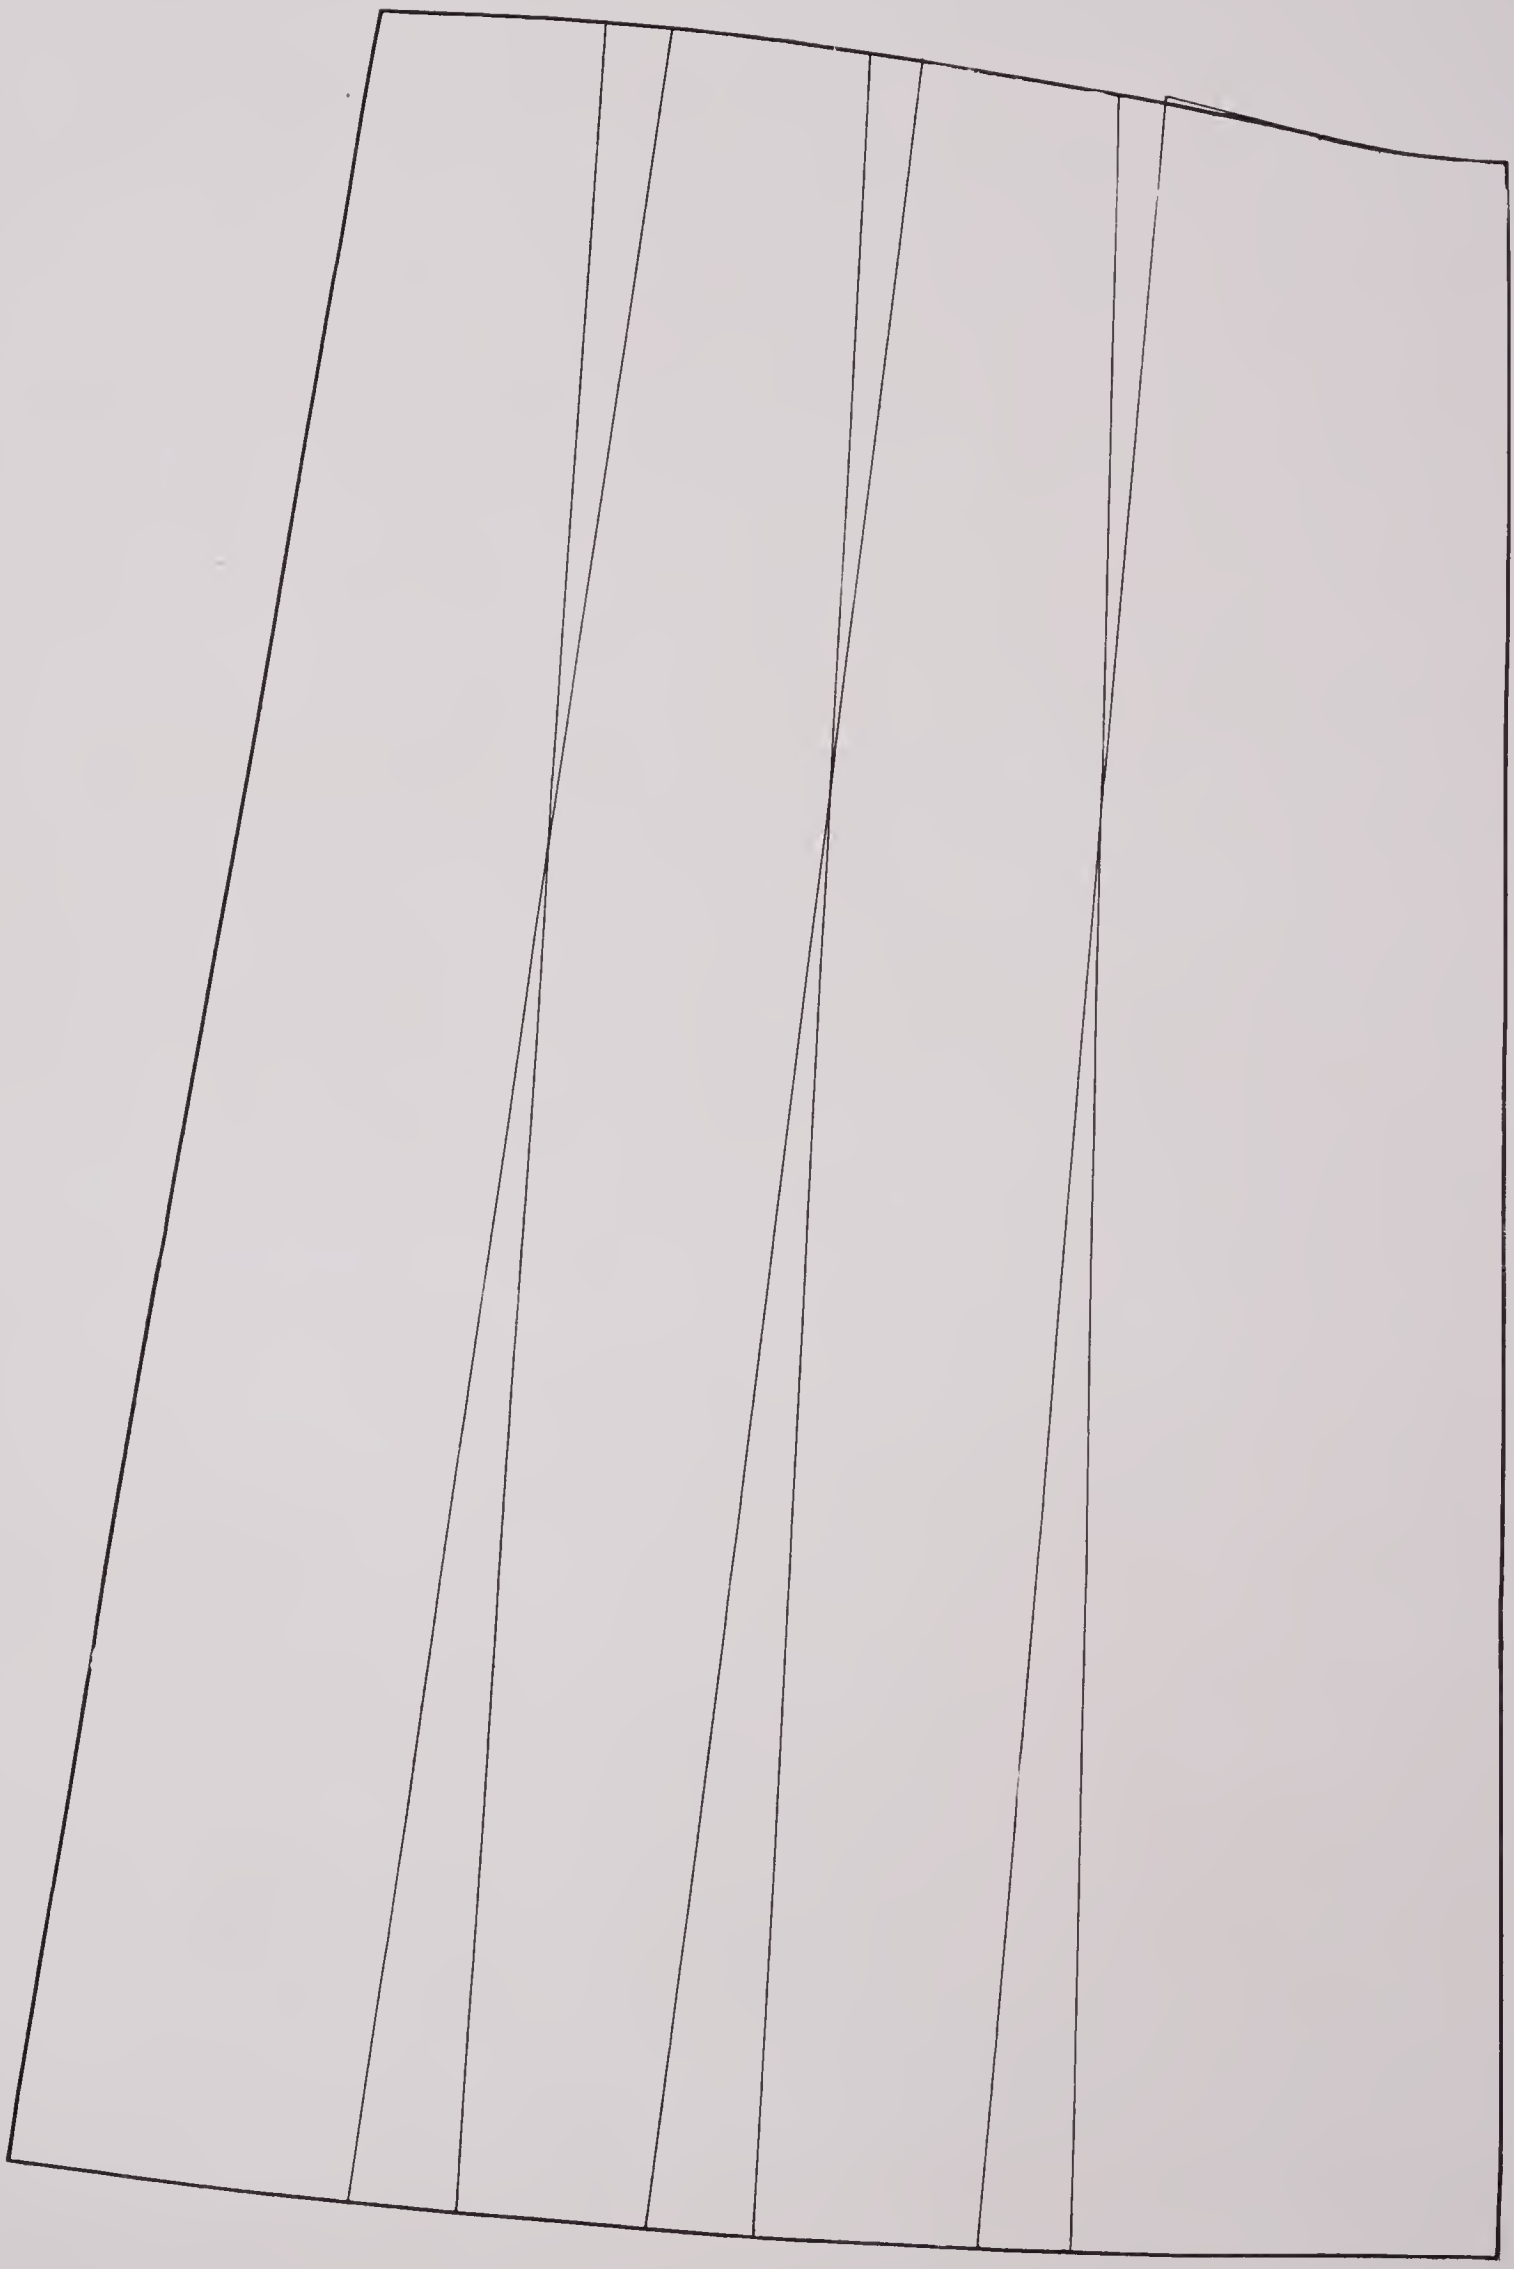

1
2
3
4
5
6

ONE-PIECE SKIRT

A one-piece skirt as illustrated in the accompanied diagram is manipulated from a plain skirt foundation.

The feature of this skirt is a shirred waist line and a tight bottom. Ordinarily a plain skirt foundation does not give this effect, therefore, it can only be gained by manipulation as described.

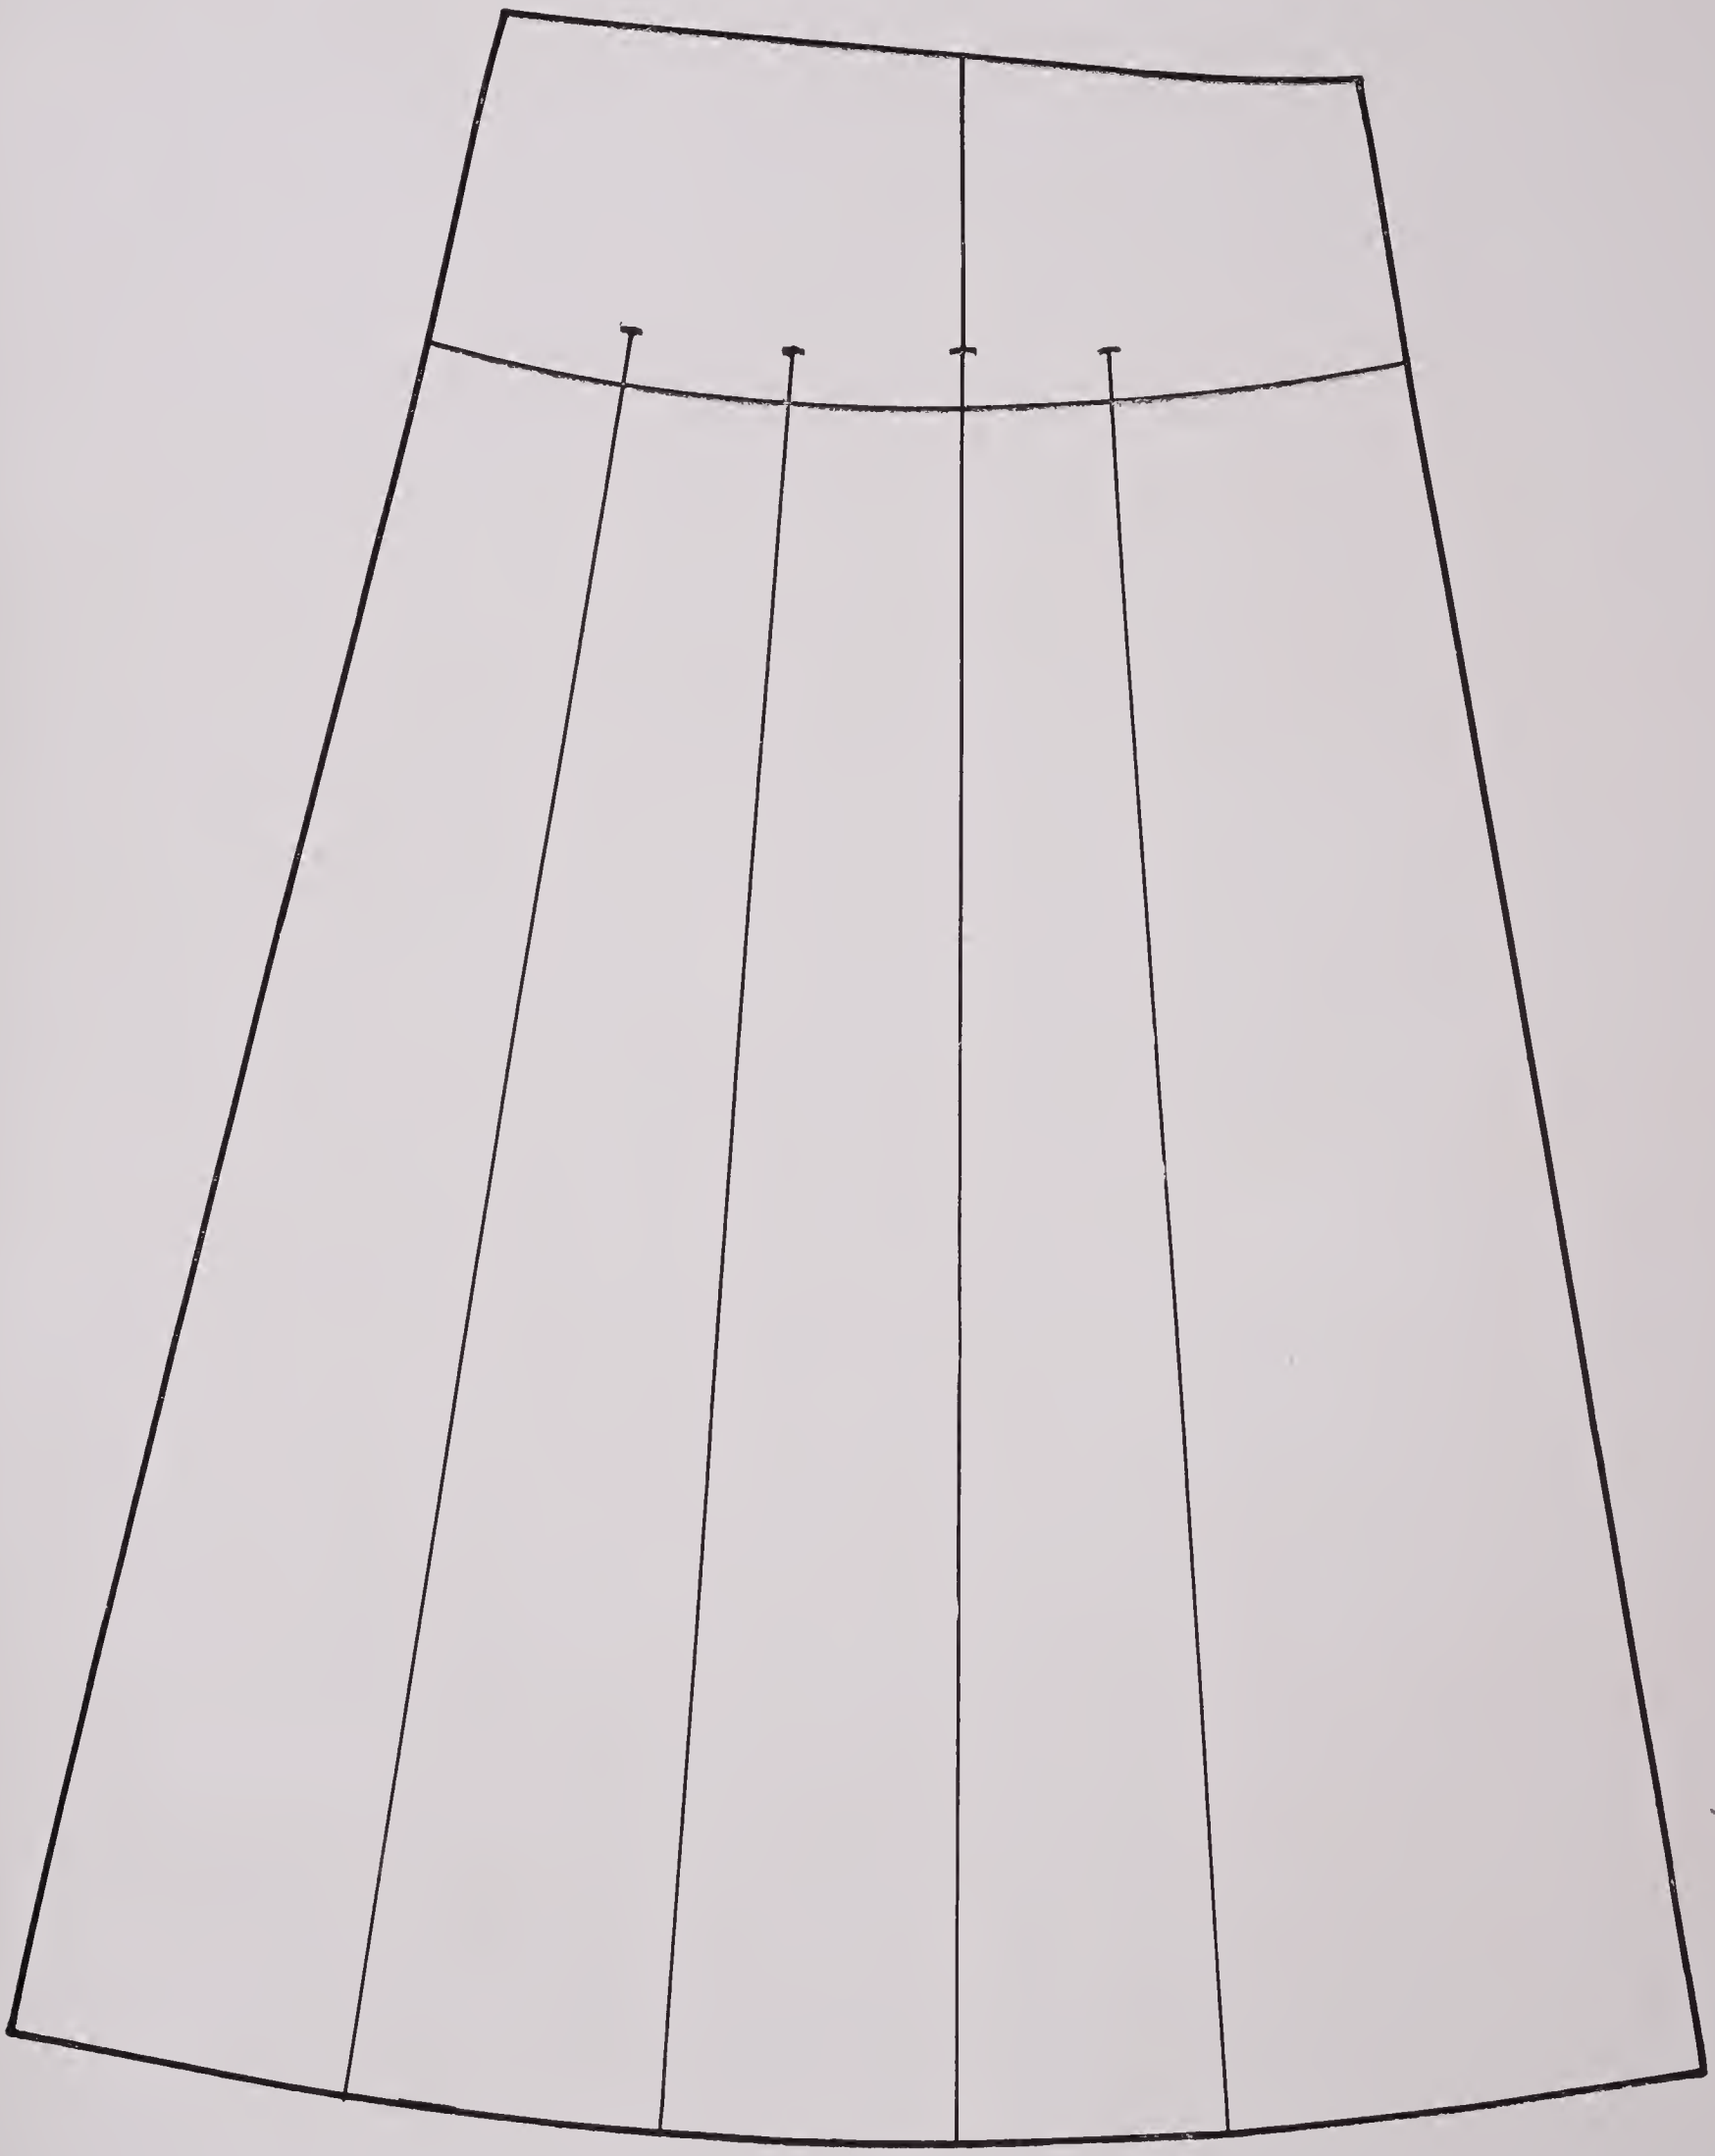
After the skirt foundation has been cut out, it is split from the waistline down to about 5 or 6 inches below the hipline on about 3 or 4 different places, as illustrated, spread at the top and folded up at the bottom, until the desired effect is obtained. It is evident, therefore, that the more the bottom is folded over, the more fulness is gained at the waistline, or vice versa.



TWO-PIECE CIRCULAR SKIRT

This skirt is cut, as the name indicates, in two pieces. A tight waist and hip line and a very wide bottom are the special features. A plain skirt foundation is drafted first and a line is drawn from the bottom up to the waist line as for a two-piece skirt. The back part of the skirt is divided into 3 parts and the resulting two lines drawn up to about 1 inch above the hip line. A corresponding line is drawn on the front part about the same distance from the side seam line as the first line of the back part. The skirt is then cut out in one piece as the accompanying diagram indicates and slashed along the four lines drawn to 1 inch above the hip line.

The manipulation of the circular skirt proper is illustrated and described in the pages following.

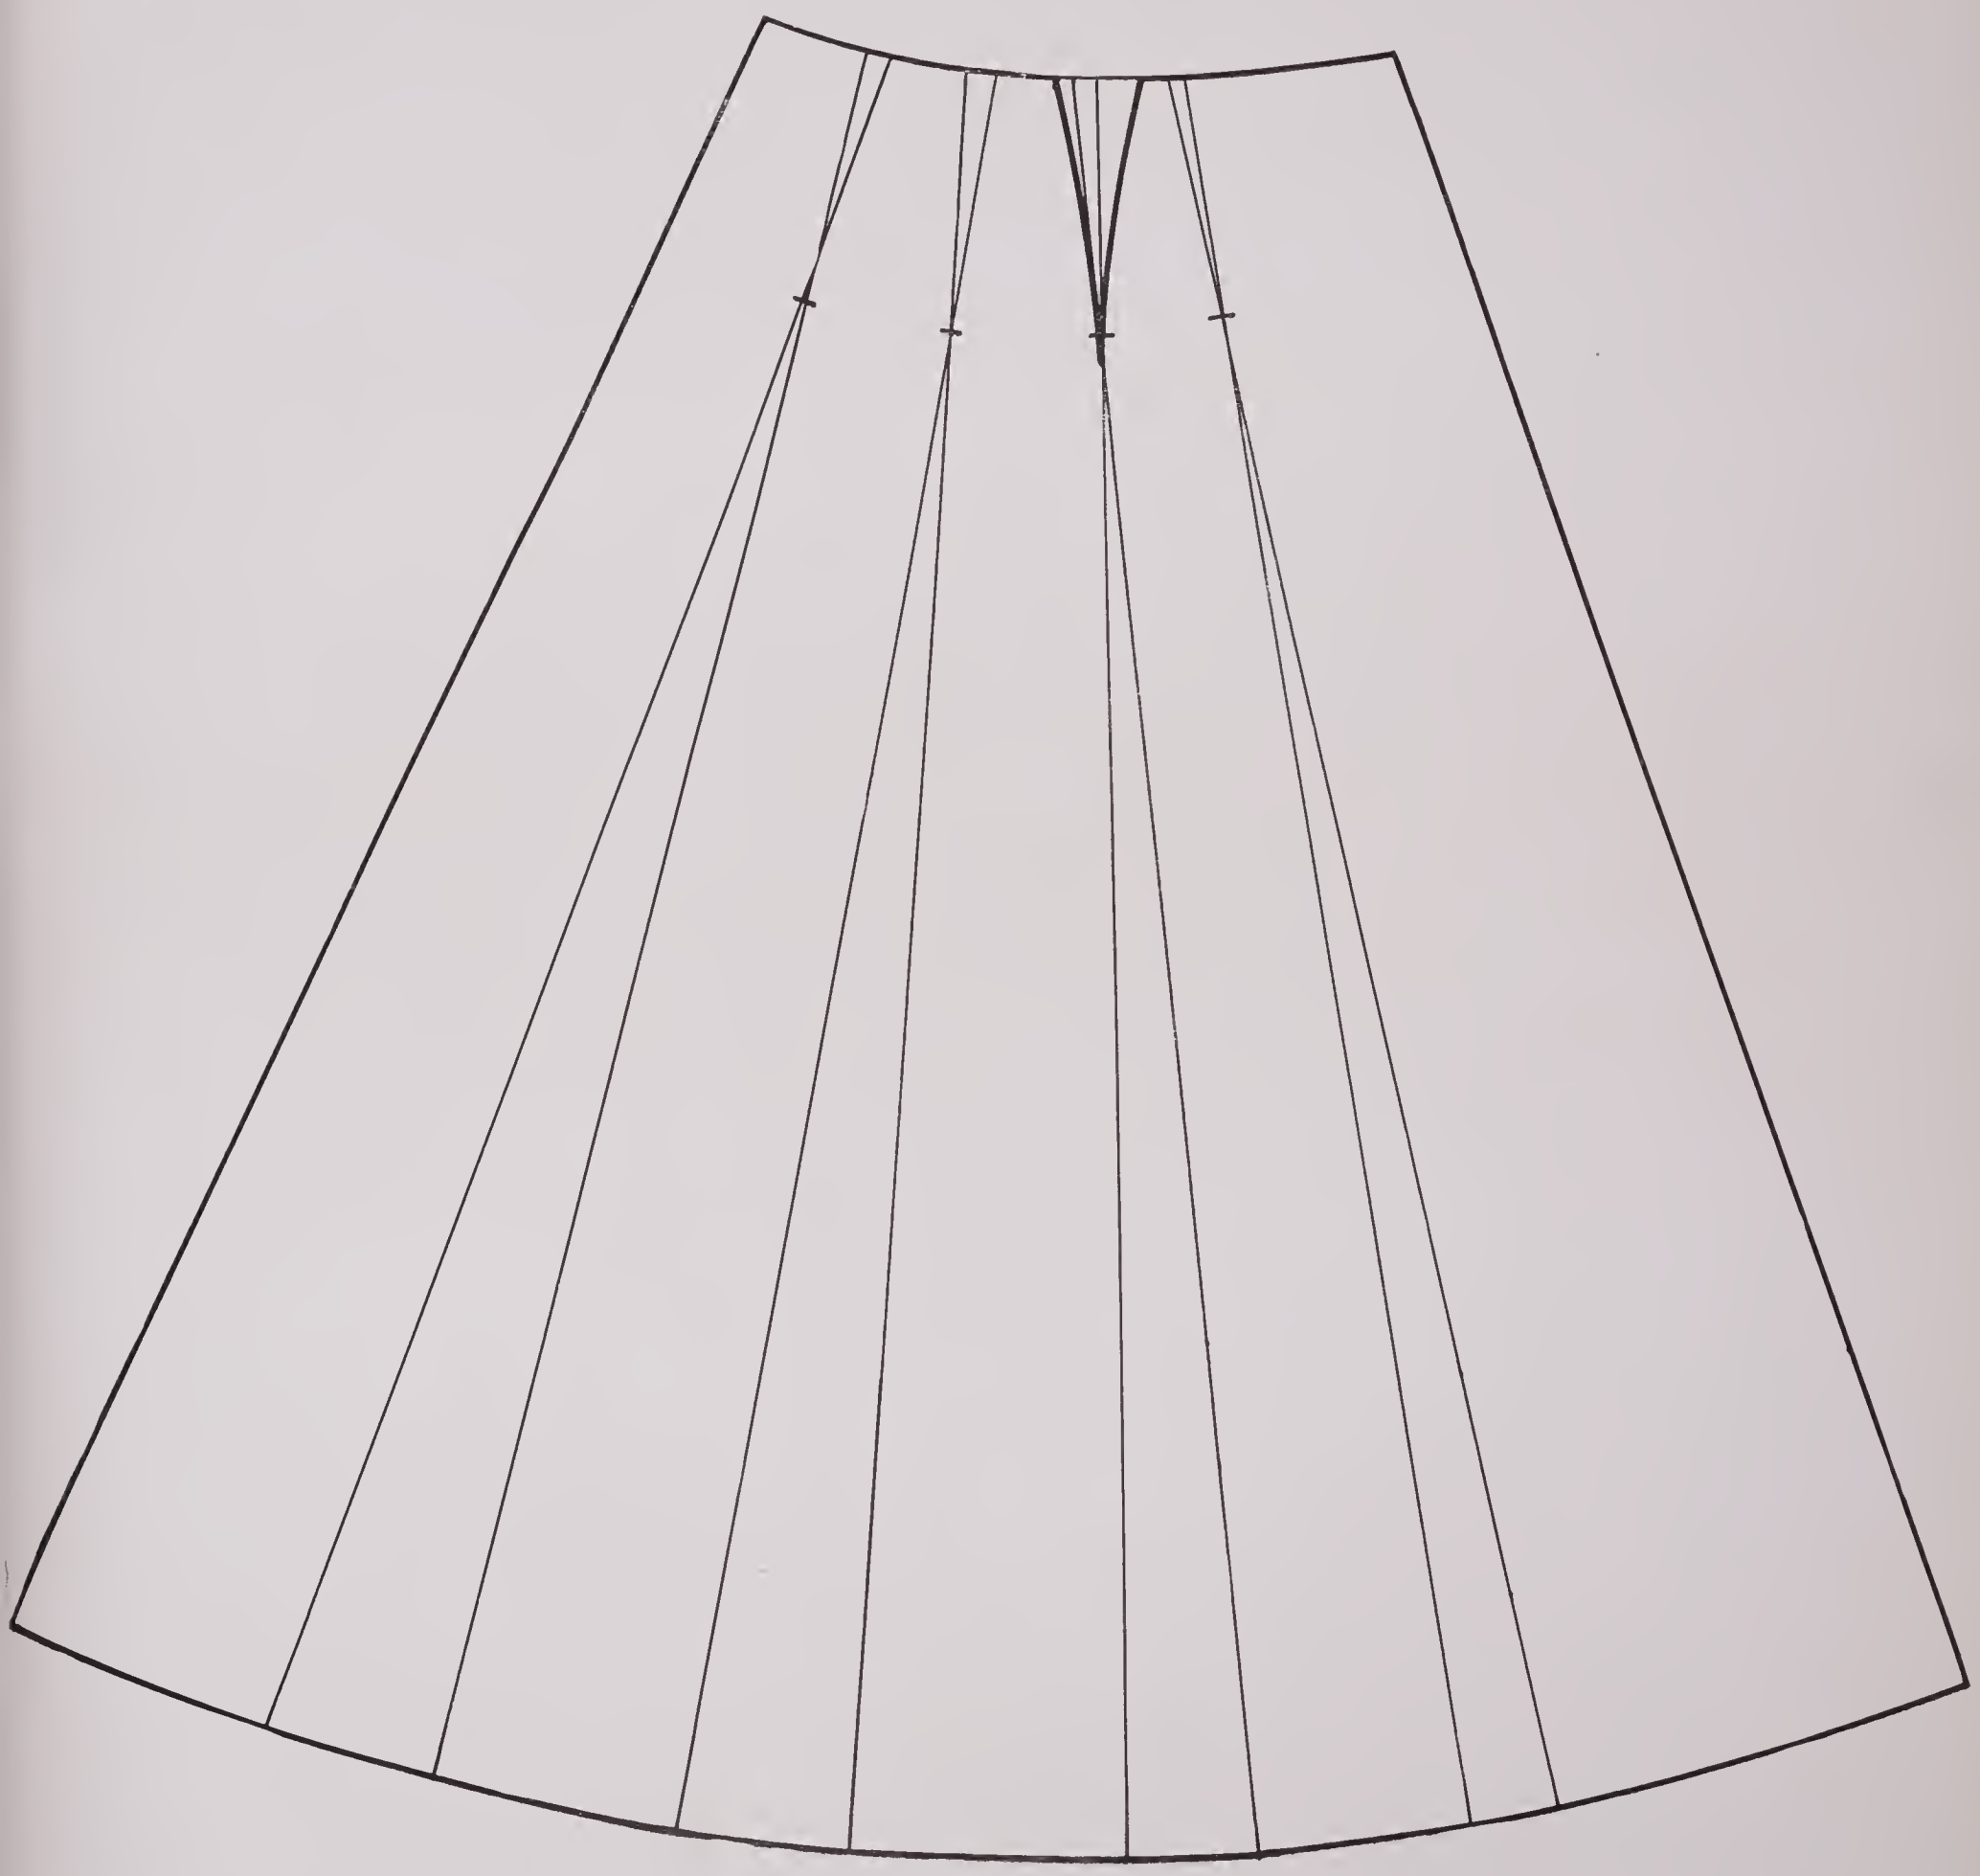


TWO-PIECE CIRCULAR SKIRT

continued

The pattern is now spread at the bottom and folded from 1 inch above the hip line up to the waist line until the desired width at the bottom is obtained. A certain rule is to be observed though in spreading the bottom as the accompanying diagram clearly illustrates and that is in distributing the width to be gained at the bottom in the proper way.

The least amount is always added to the front a little more at the side seam and the most at the back part; in this diagram for instance, is allowed, 2 inches at the front, 3 inches at the side seam and 4 inches in each of the cuts at the back parts. Either more or less may be added as desired as long as this rule is adhered too. Measure the waist line now as in the plain two-piece skirt, ¼ waist less ⅜ inch for the front part, and ¼ waist plus ⅜ inch for the back part. The side seam may be drawn from the dart down through the center between the third and fourth line. Finish, as represented and copy on another paper.

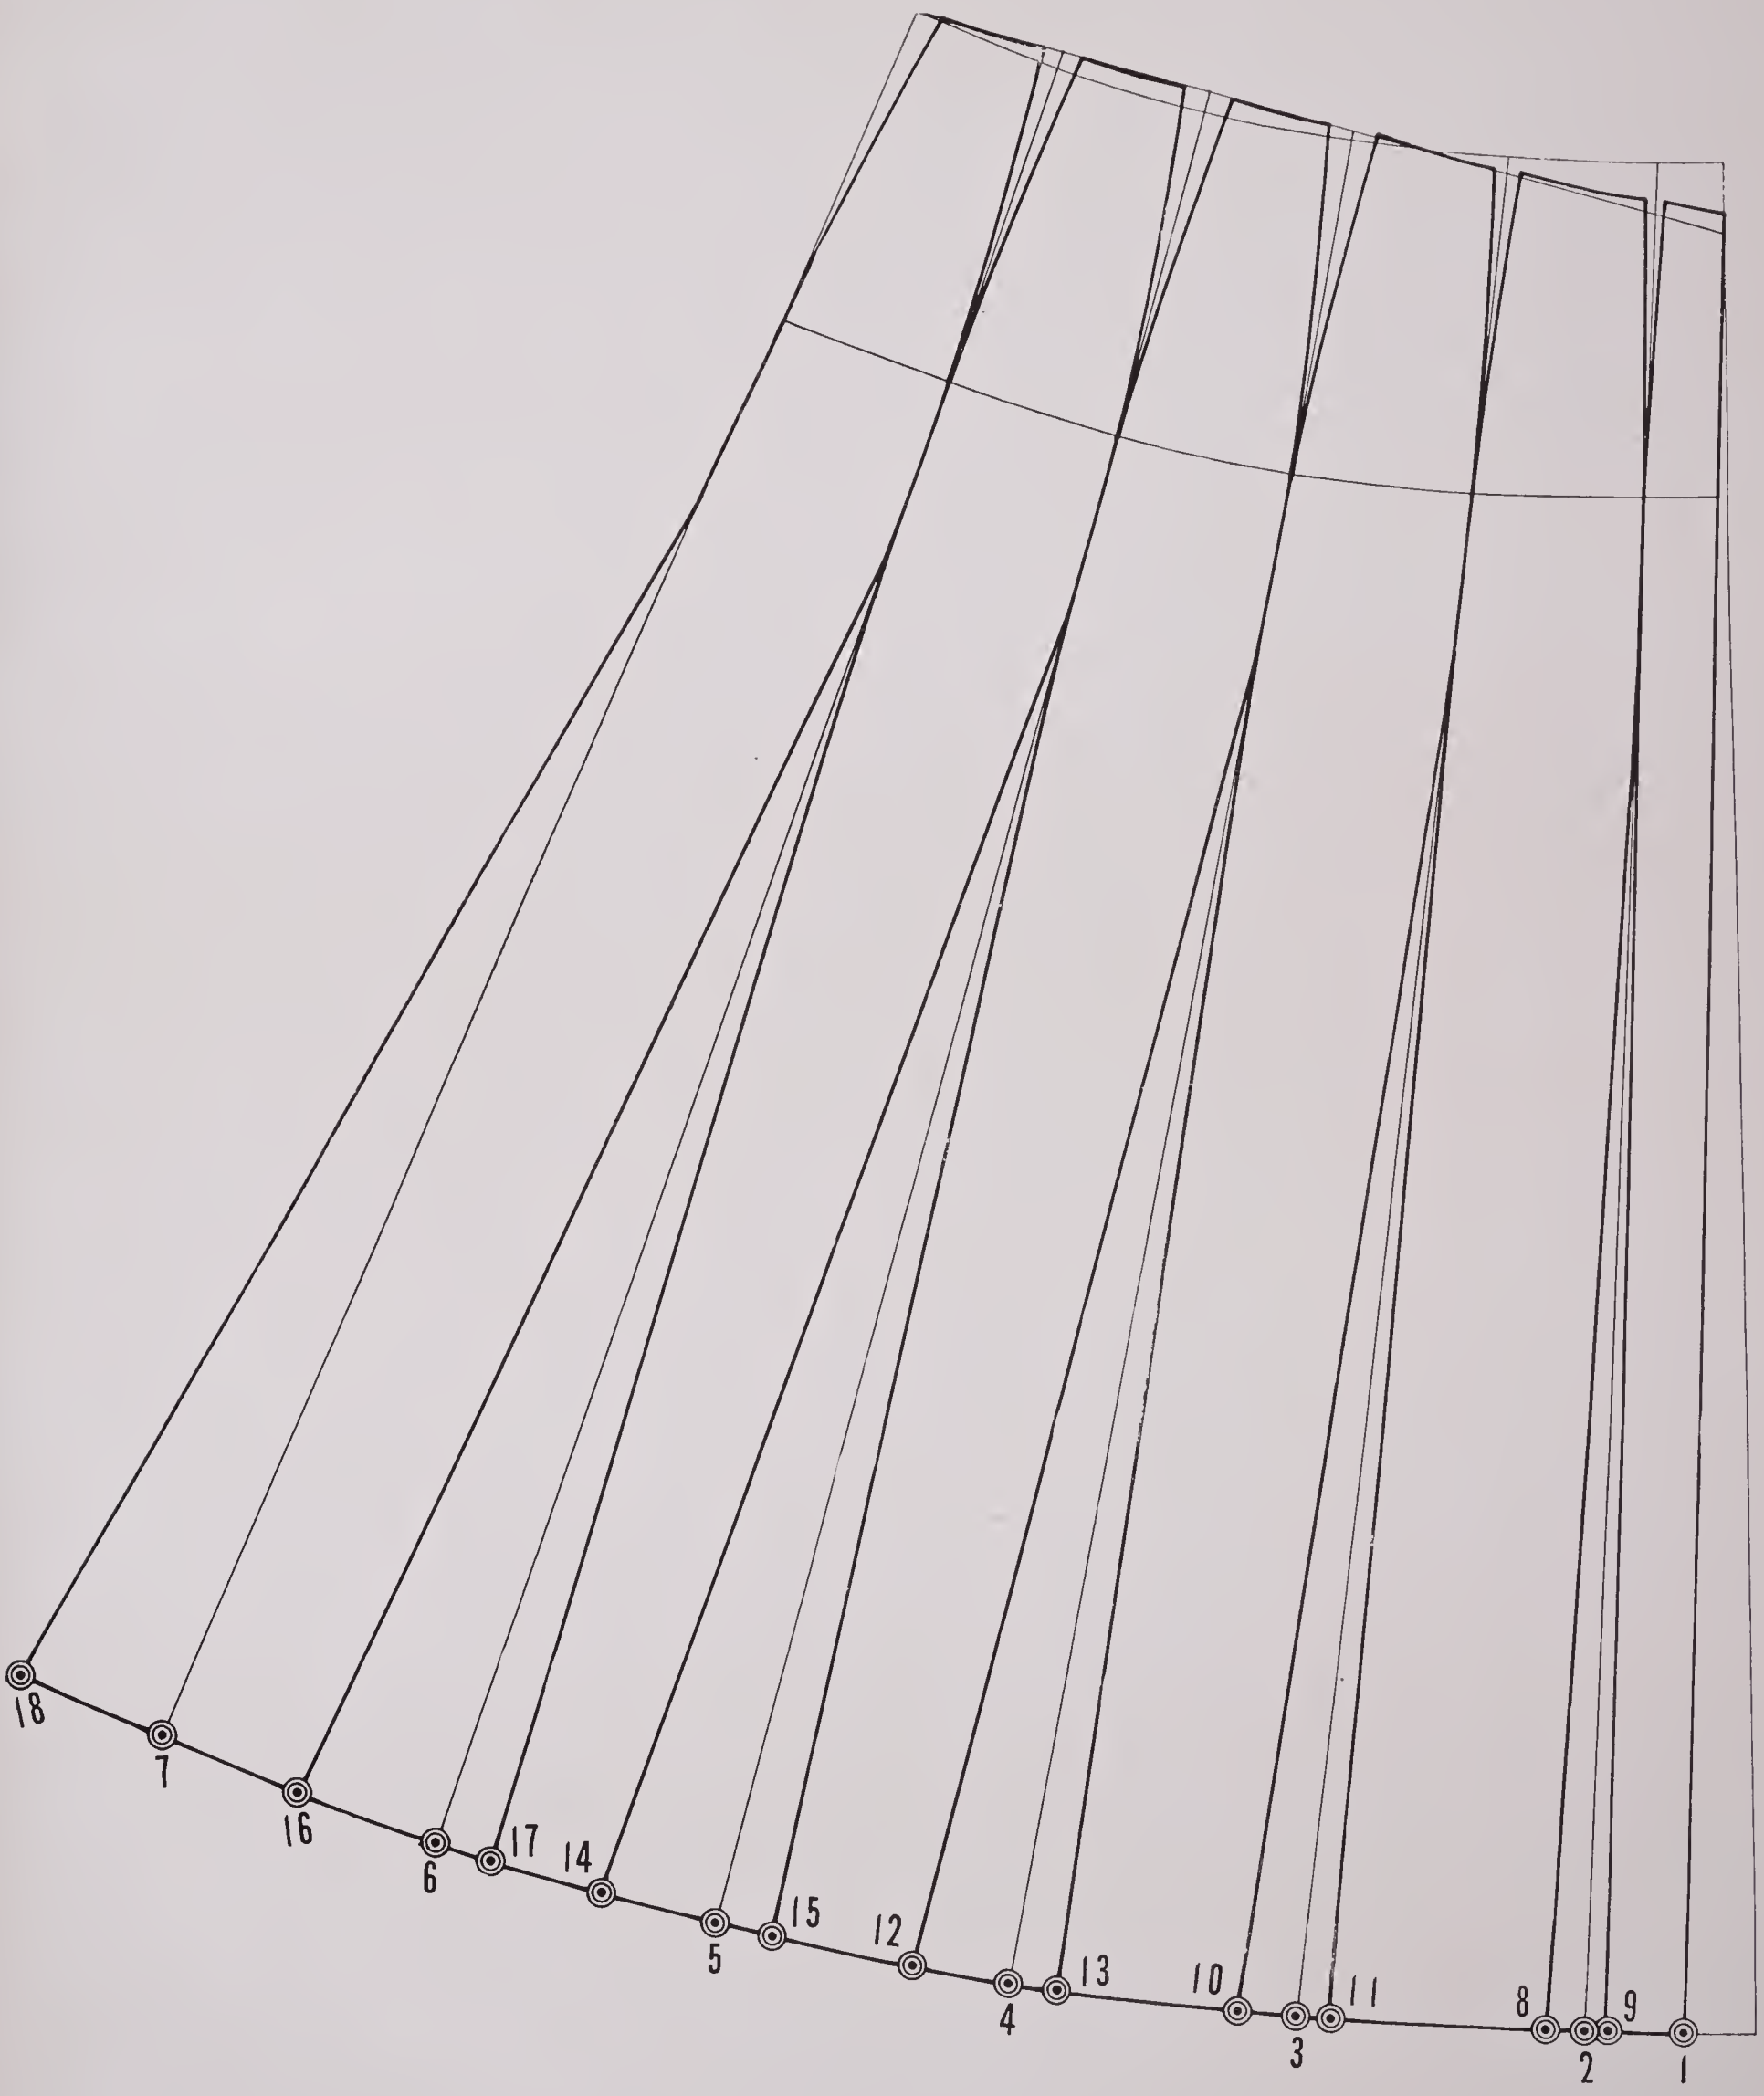


GORED FLARE SKIRT

Just to illustrate the system used in drafting this skirt a eleven-gore skirt has been selected to carry out this idea. Ordinarily any amount of gores may be used in this style skirt. As the diagram illustrates a certain amount of fullness or flare is allowed to each gore which must be added in such a way that to the back of each gore is allowed about two and one-half times more than the amount added to the front part of the same gore. To each consecutive gore starting from the front backward is allowed a certain amount more as it is not proper nor desirable to add the same amount of fulnes to the front and back parts of the skirt.

Point 1, 2, 3, 4, 5, 6 and 7 indicate the original lines of the eleven-gored skirt.

8 from 2 is ¾ inch.
9 from 2 is ½ inch.
10 from 3 is 1¼inch.
11 from 3 is ¾ inch.
12 from 4 is 1⅞ inches.
13 from 4 is 1 inch.
14 from 5 is 2½ inches.
15 from 5 is 1¼ inch.
16 from 6 is 3⅛ inches.
17 from 6 is 1¼ inches.
18 from 7 is 3⅛ inches; draw lines up from numbers 8, 9, 10, 11, 12, 13, 14, 15, 16, 17 and 18 to a point about 4 inches below the hip line on each dividing line. The amount added for flare as described above is given simply to illustrate the rule to be followed in enlarging each separate gore, either more or less may be added, depending upon the width of skirt desired. To cut this skirt every second gore must be traced as they overlap one another now.


18
7
16
6
17
14
5
15
12
4
13
10
3
11
8
2
9
1

DIVIDED RIDING SKIRT

This is a skirt used exclusively for equestration and sporting purposes. It is cut on the lines of a five gored skirt and resembles one when the skirt is worn for walking. A short explanation may be in place here in cutting out the skirt from the draft. The front panel between the points 10-14 and 6-12 is traced on another paper first and cut out. The front part of the skirt between the points 10, 23, 25, 18, 17 and 21 is cut out from the draft including the front dart, and the back part is cut from the draft between the points 20, 17, 18, 28, 27 and 16.

The points 1 to 10 are the construction points of the plain skirt foundation.

To Draft

11 from 4 is 3½ inches.

12 from 6 is 4½ inches; draw a line from 12 through 11 upward.

13 is a point on the line 12-11.

14 from 13 is ¼ inch; shape the dart line of the panel from 14 to 11.

15 from 13 is ½ inch; shape the dart line from 15 to 11.

16 from 8 is ⅞ inch; shape the dart of the back part from 16 to 7.

17 from 11 is ½ of the line 7-11.

18 from 12 is 1 inch less than ½ of the line 9-12; draw a line from 18 through 17 upward.

19 is a point on the line 17-18.

20 from 19 is 1 inch, and

21 from 19 is 1½ inch; shape the side dart from 20 and 21 to 17 as illustrated, and reshape the waist line of each gore between the dart.

22 from 1 is 13 inches square forward.

23 from 22 is ½ inch less than ¼th of ½ hip measure, shape the crotch from 23 to about 1 inch above 4 as illustrated.

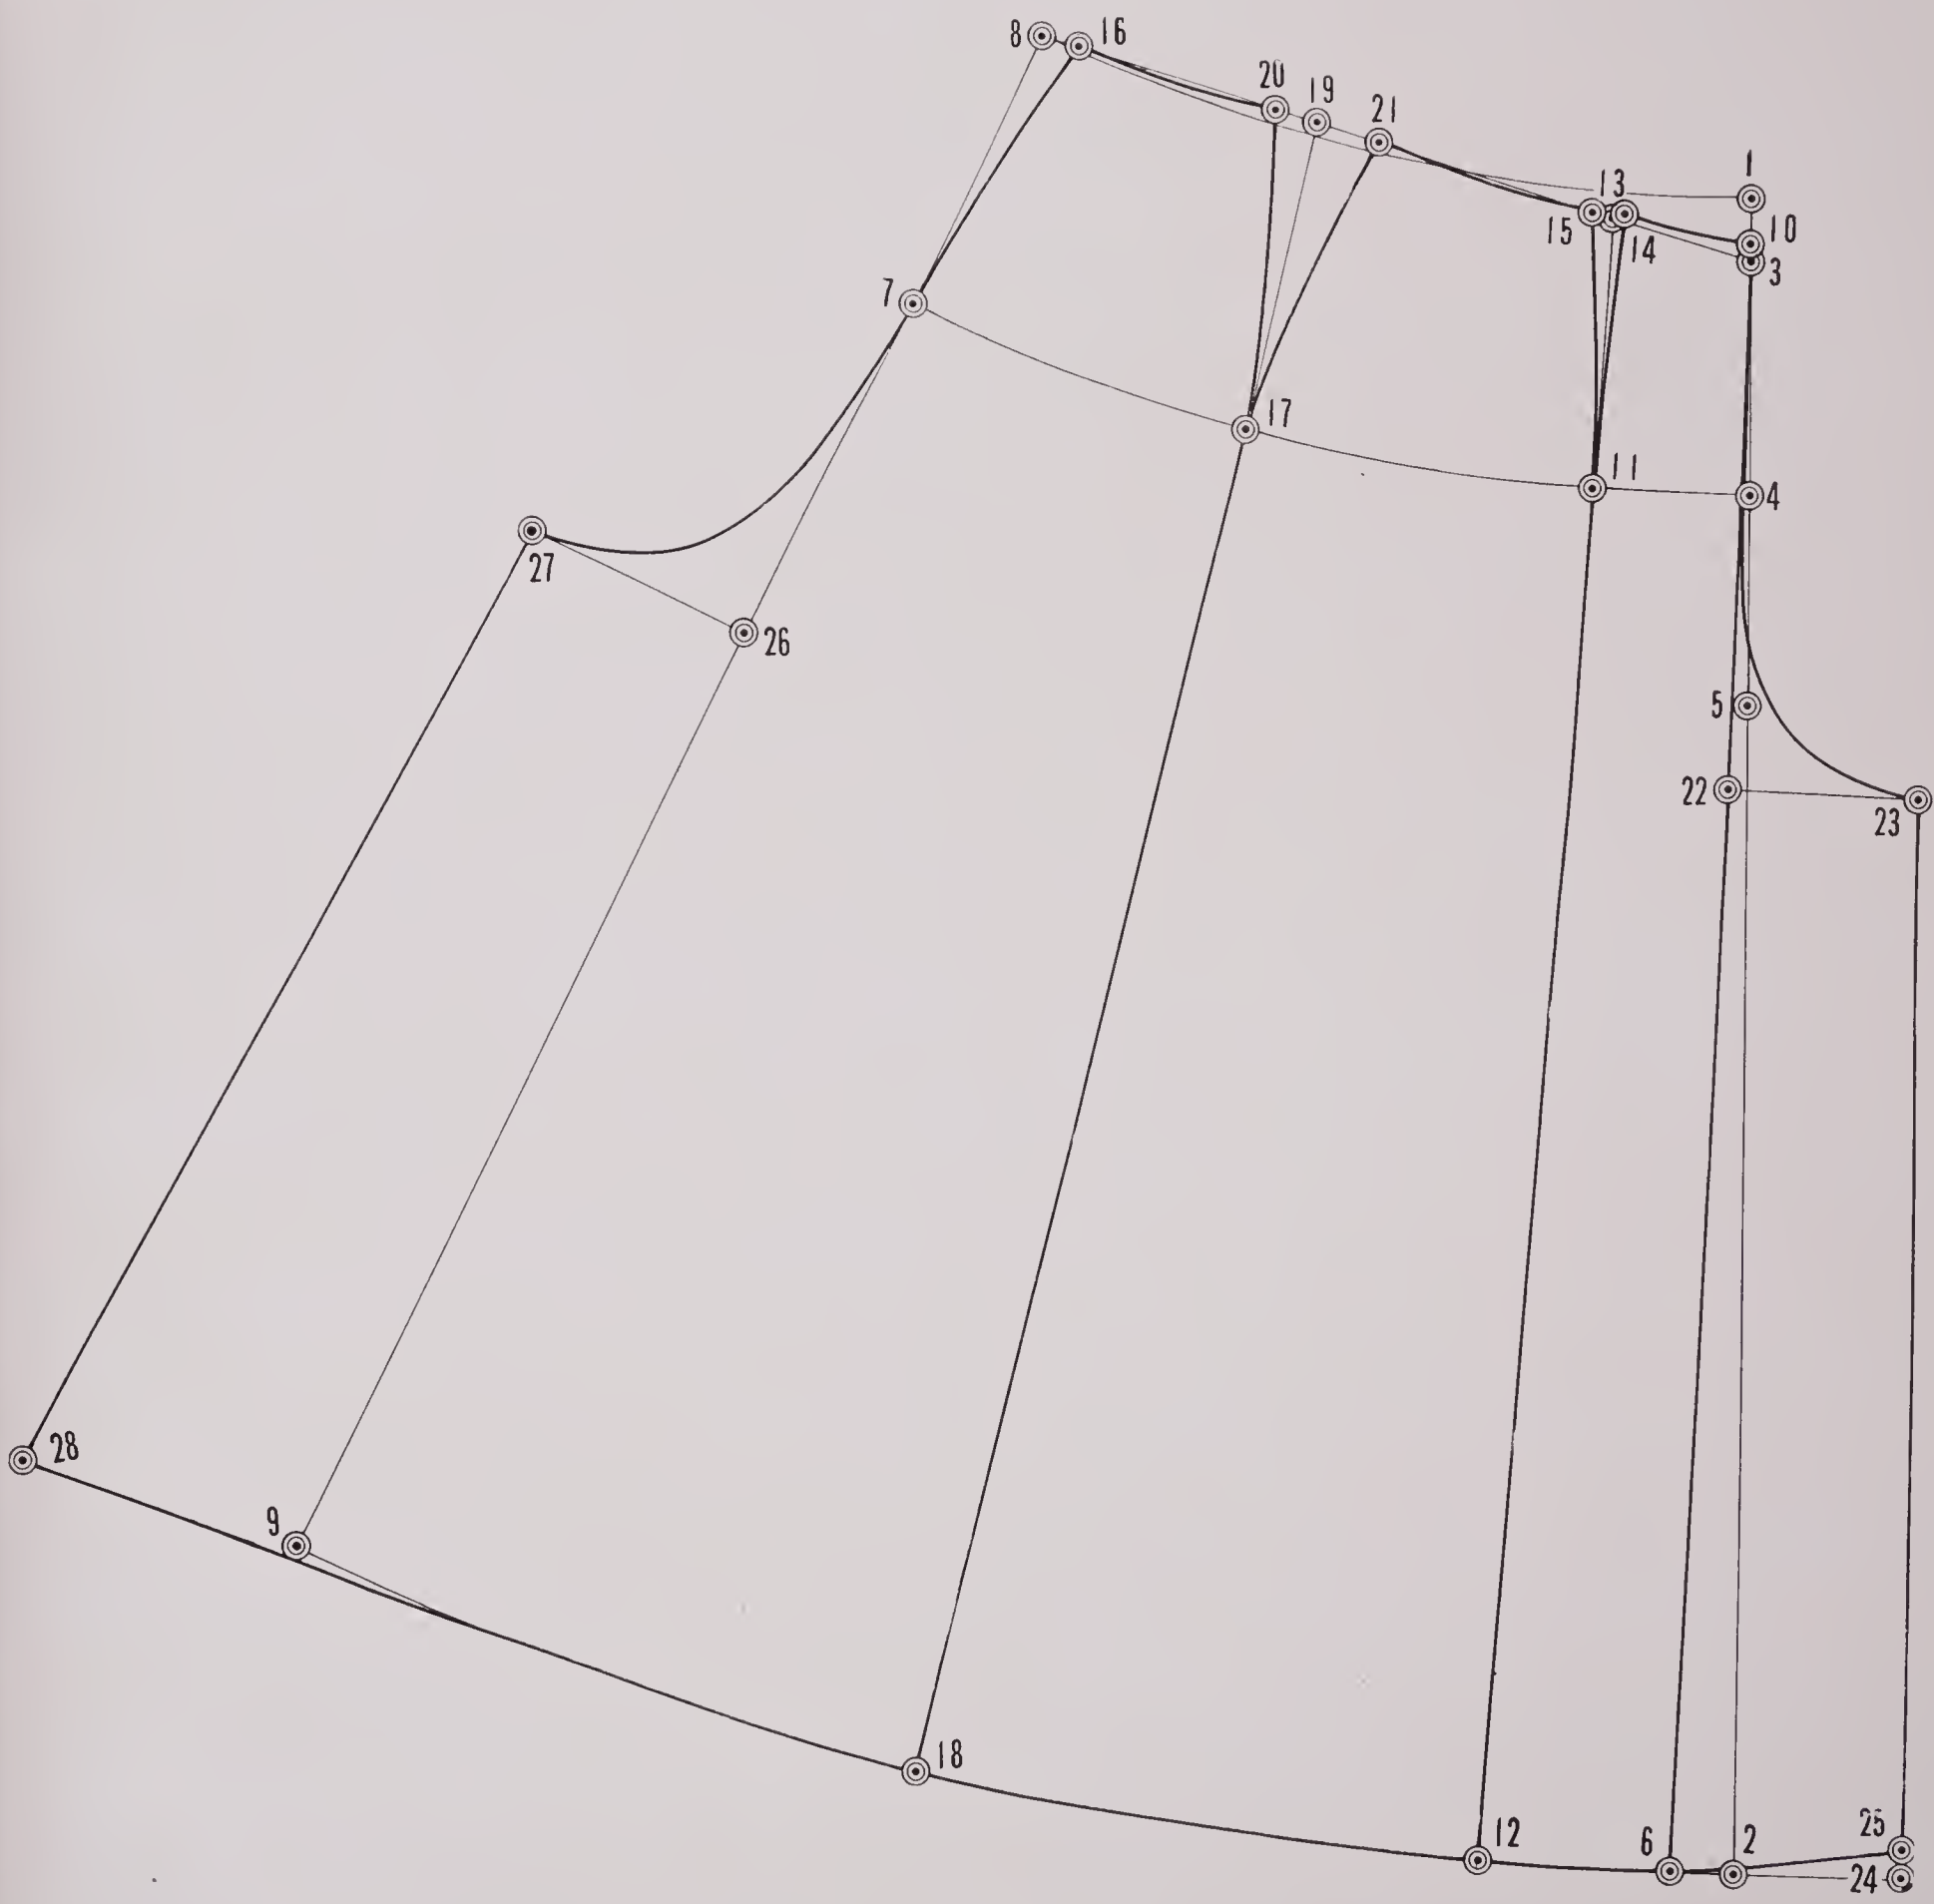
24 from 6 on a line squared from 2, is 1 inch more than 23 from 22; connect 24 and 23.

25 from 24 is ⅝ inch; reshape the bottom from 25 to 6.

26 from 8 is 1¾ inches more than 22 from 1; square backward.

27 from 26 is ½ inch more than ¼ of ½ hip; shape the back part from 27 to 7.

28 from 9 is 1 inch more than 27 from 26 and is the same from 27 as 25 from 23; connect 27 and 28 and reshape the bottom from 28 to a point 5 inches in front of 9, finish as represented.


8
16
20
19
21
13
1
15
14
10
3
7
17
11
4
27
26
5
22
23
28
9
18
12
6
2
25
24

LADIES APRON RIDING SKIRT

Part I

The description following, which is for the accompanying diagram, is for a ladies apron riding skirt.

The diagram was produced in accordance with the following measures:

26½ waist	37 front length
40 hip	38 back length

To Draft.

A is the point from which to square both ways from a line made previously; this is the center front line.

2 from A is 1 inch.

3 from A is 2 inches.

4 from A is 15½ inches.

5 from A is 33 inches.

6 from 5 is ¾ inch; square out from 2, 4, 5 and 6 as per diagram.

7 from A is 39 inches.

8 from A is 6⅜ inches; shape the waist line from 8 to 3.

9 from 8 is 1¼ inch.

10 from 5 is 22 inches; connect 9 and 10, draw a dart from 8 to a point about 7 inches below 9 and shape the bottom from 10 to 7 as illustrated.

11 from 2 is 3 inches; shape the waist line from 11 to 3.

12 from 4 is 14⅜ inches; square up and connect 12 and 11.

13 from 12 is ¾ inch; shape a line from 13 through 12 to 11, curving in above 12 and below 11 about ⅝ inch respectively.

14 from 4 is 19 inches.

15 from 14 is 1⅜ inch.

16 from 12 is 3½ inches; square out.

17 from 16 is 1½ inch.

18 is a point on the line squared up from 12.

19 from 18 is 3¾ inches; square out.

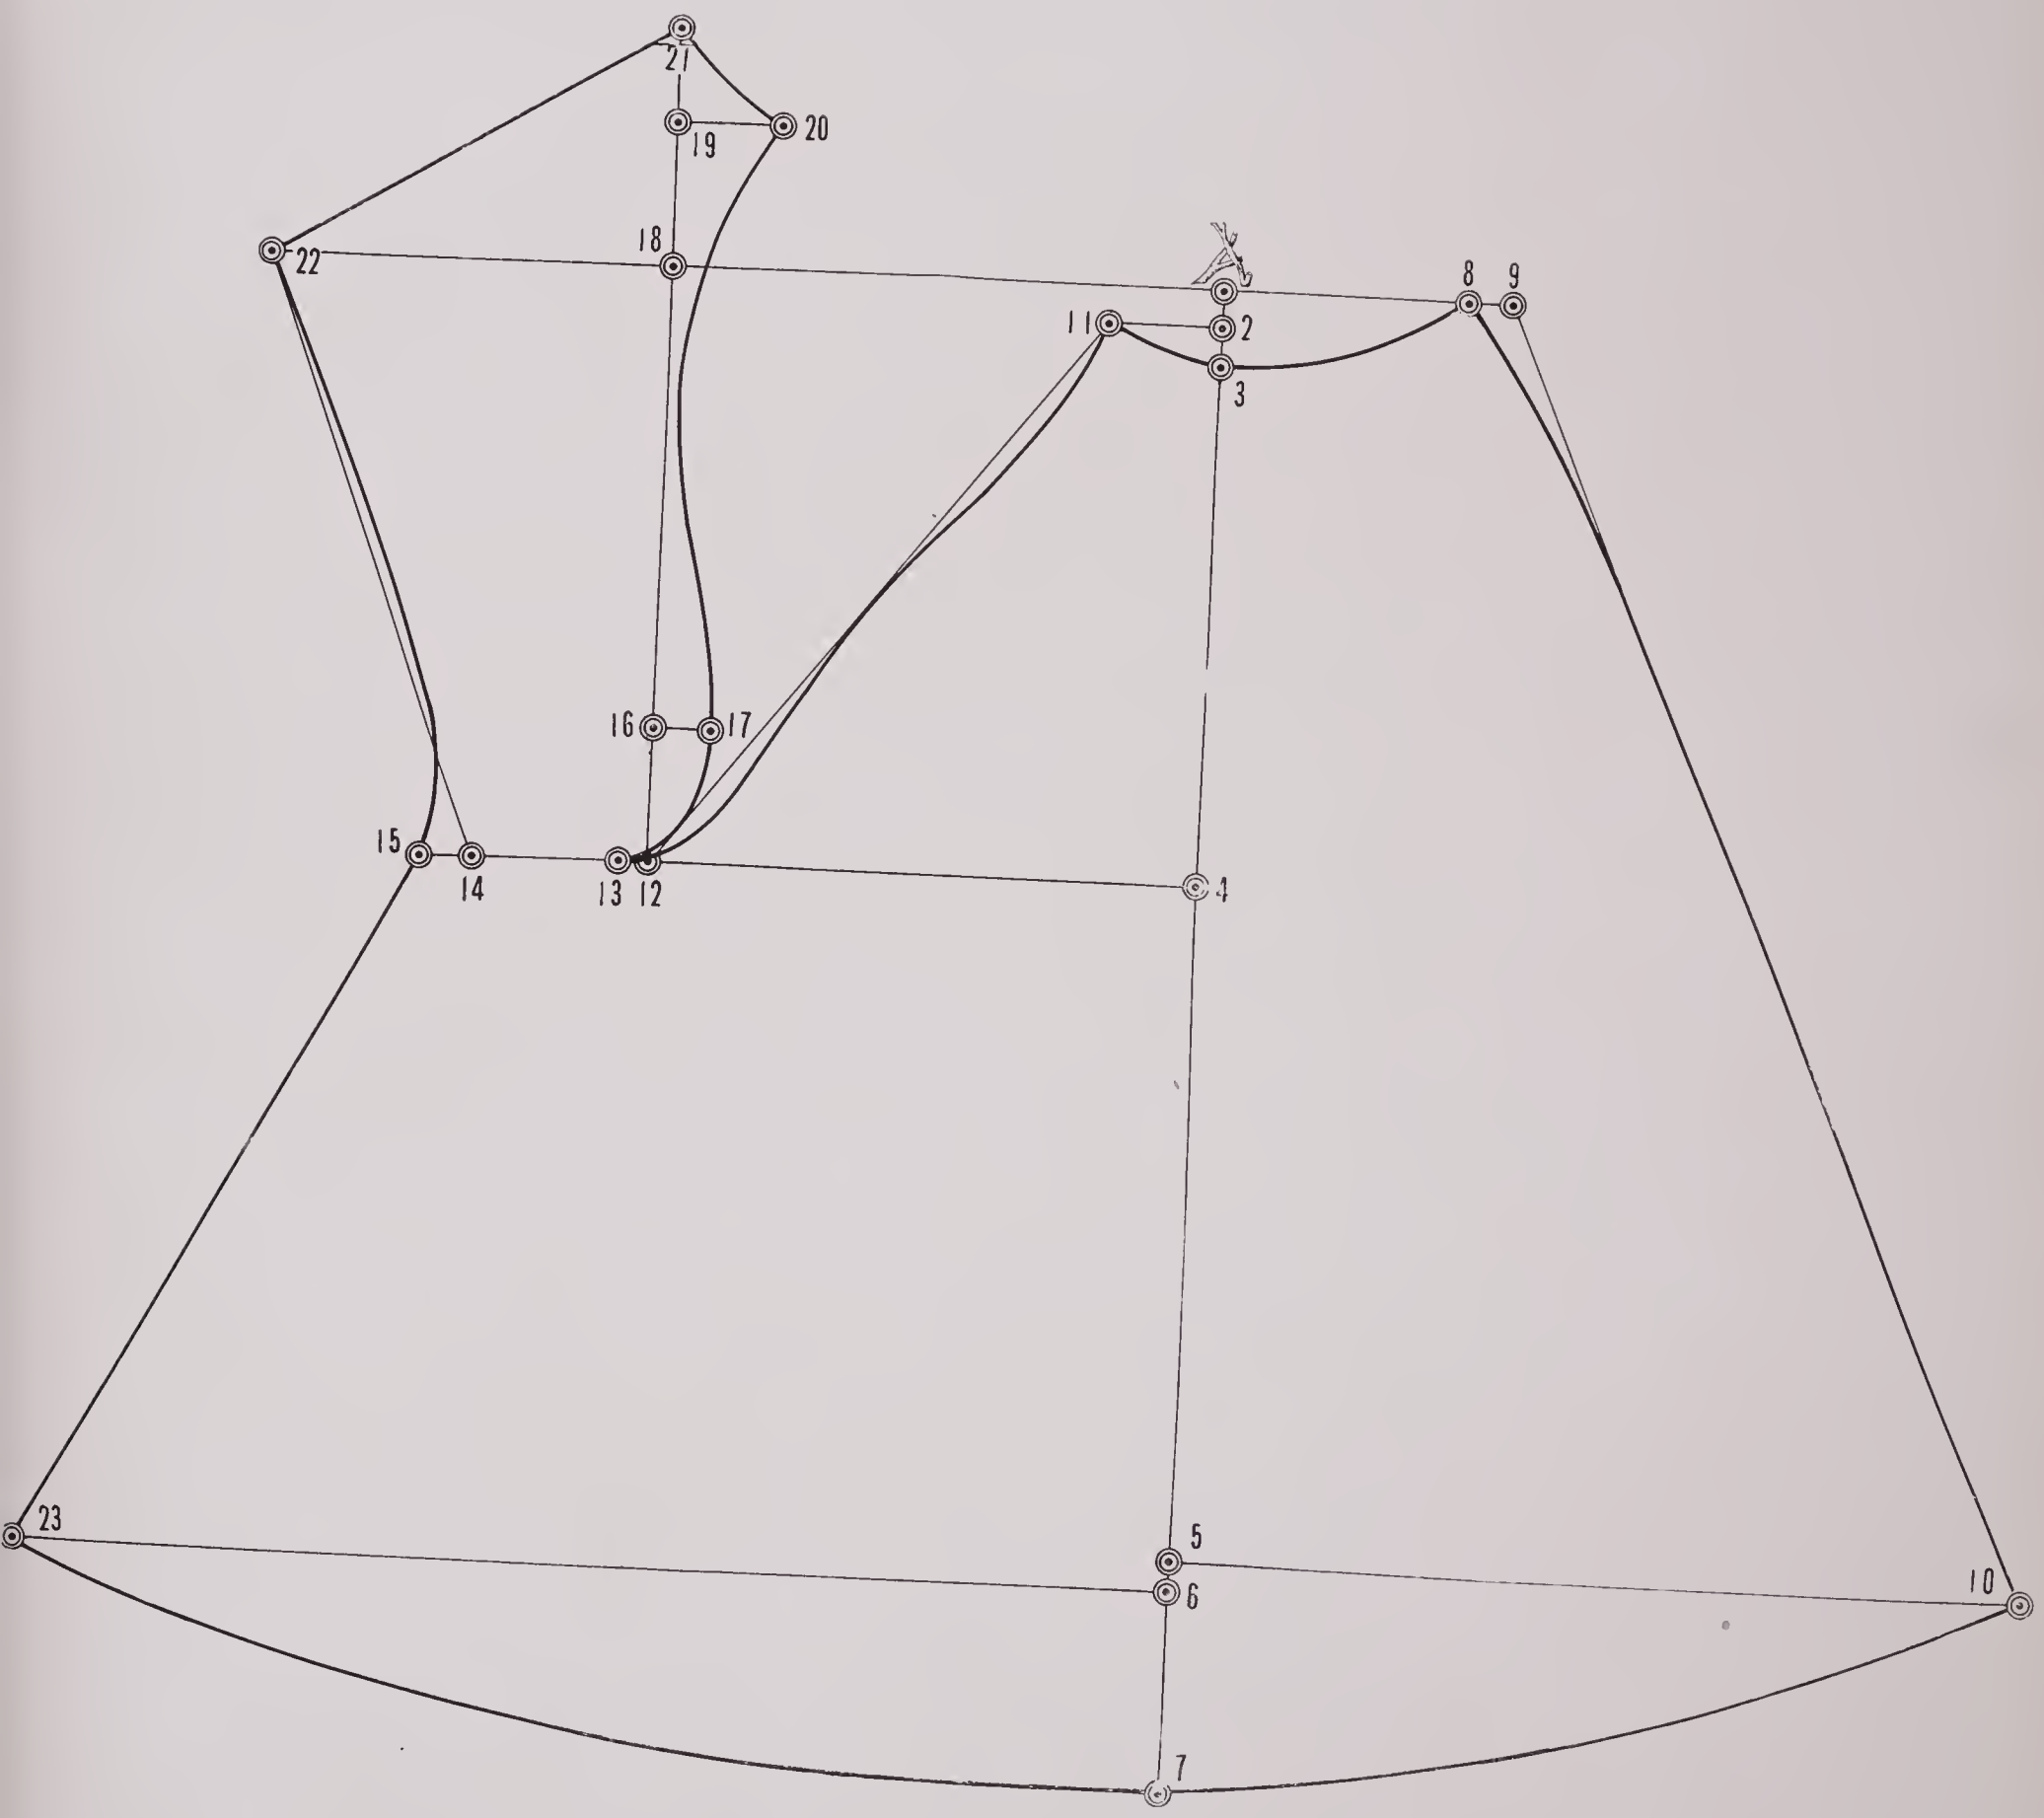
20 from 19 is 2¾ inches; draw a line from 13 through 17 within ¼ inch of the line 12-18 at a point about 3 inches below 18 and then to 20 as illustrated.

21 from 19 is 2½ inches; shape the waist line from 21 to 20.

22 from 18 is 10½ inches; connect 21 to 22, and 22 to 14. Shape a line from 22 to 15, crossing the line 22-14 about 2¾ inches above 14.

23 from 6 is 30¼ inches; connect 23 to 15 and shape the bottom from 23 to 7 as represented. Finish as per diagram.

Part I



LADIES APRON RIDING SKIRT

Part II

24 is a point on the center back line made previously.

25 from 24 is ⅝ inch.

26 from 24 is 1 inch.

27 from 24 is 12 inches.

28 from 24 is 36½ inches.

29 from 24 is 39 inches; square out from 24, 25, 27, 28 and 29.

30 from 24 is 7¼ inches; shape the waist line from 30 to 26.

31 from 30 is 1¼ inch.

32 from 27 is 10 inches; connect 32 to 31 and shape the dart from 30 to a point 6 inches below 31.

33 from 26 is 2¼ inches.

34 from 33 is 1⅜ inch.

35 from a point 3¼ inches from the line 26-27 and 6 inches below 33; shape the dart from 35 to 33 and 34 respectively.

36 from 27 is 3¼ inches.

37 from 29 is 5½ inches; connect 36 and 37 and shape a line from a point about 5½ inches below 36 to 32 as illustrated.

38 from 25 is 7⅜ inches; shape the waist line from 38 to 26.

39 from 38 is ⅝ inch.

40 from 26 is 2¼ inches.

41 from 40 is 1⅜ inch.

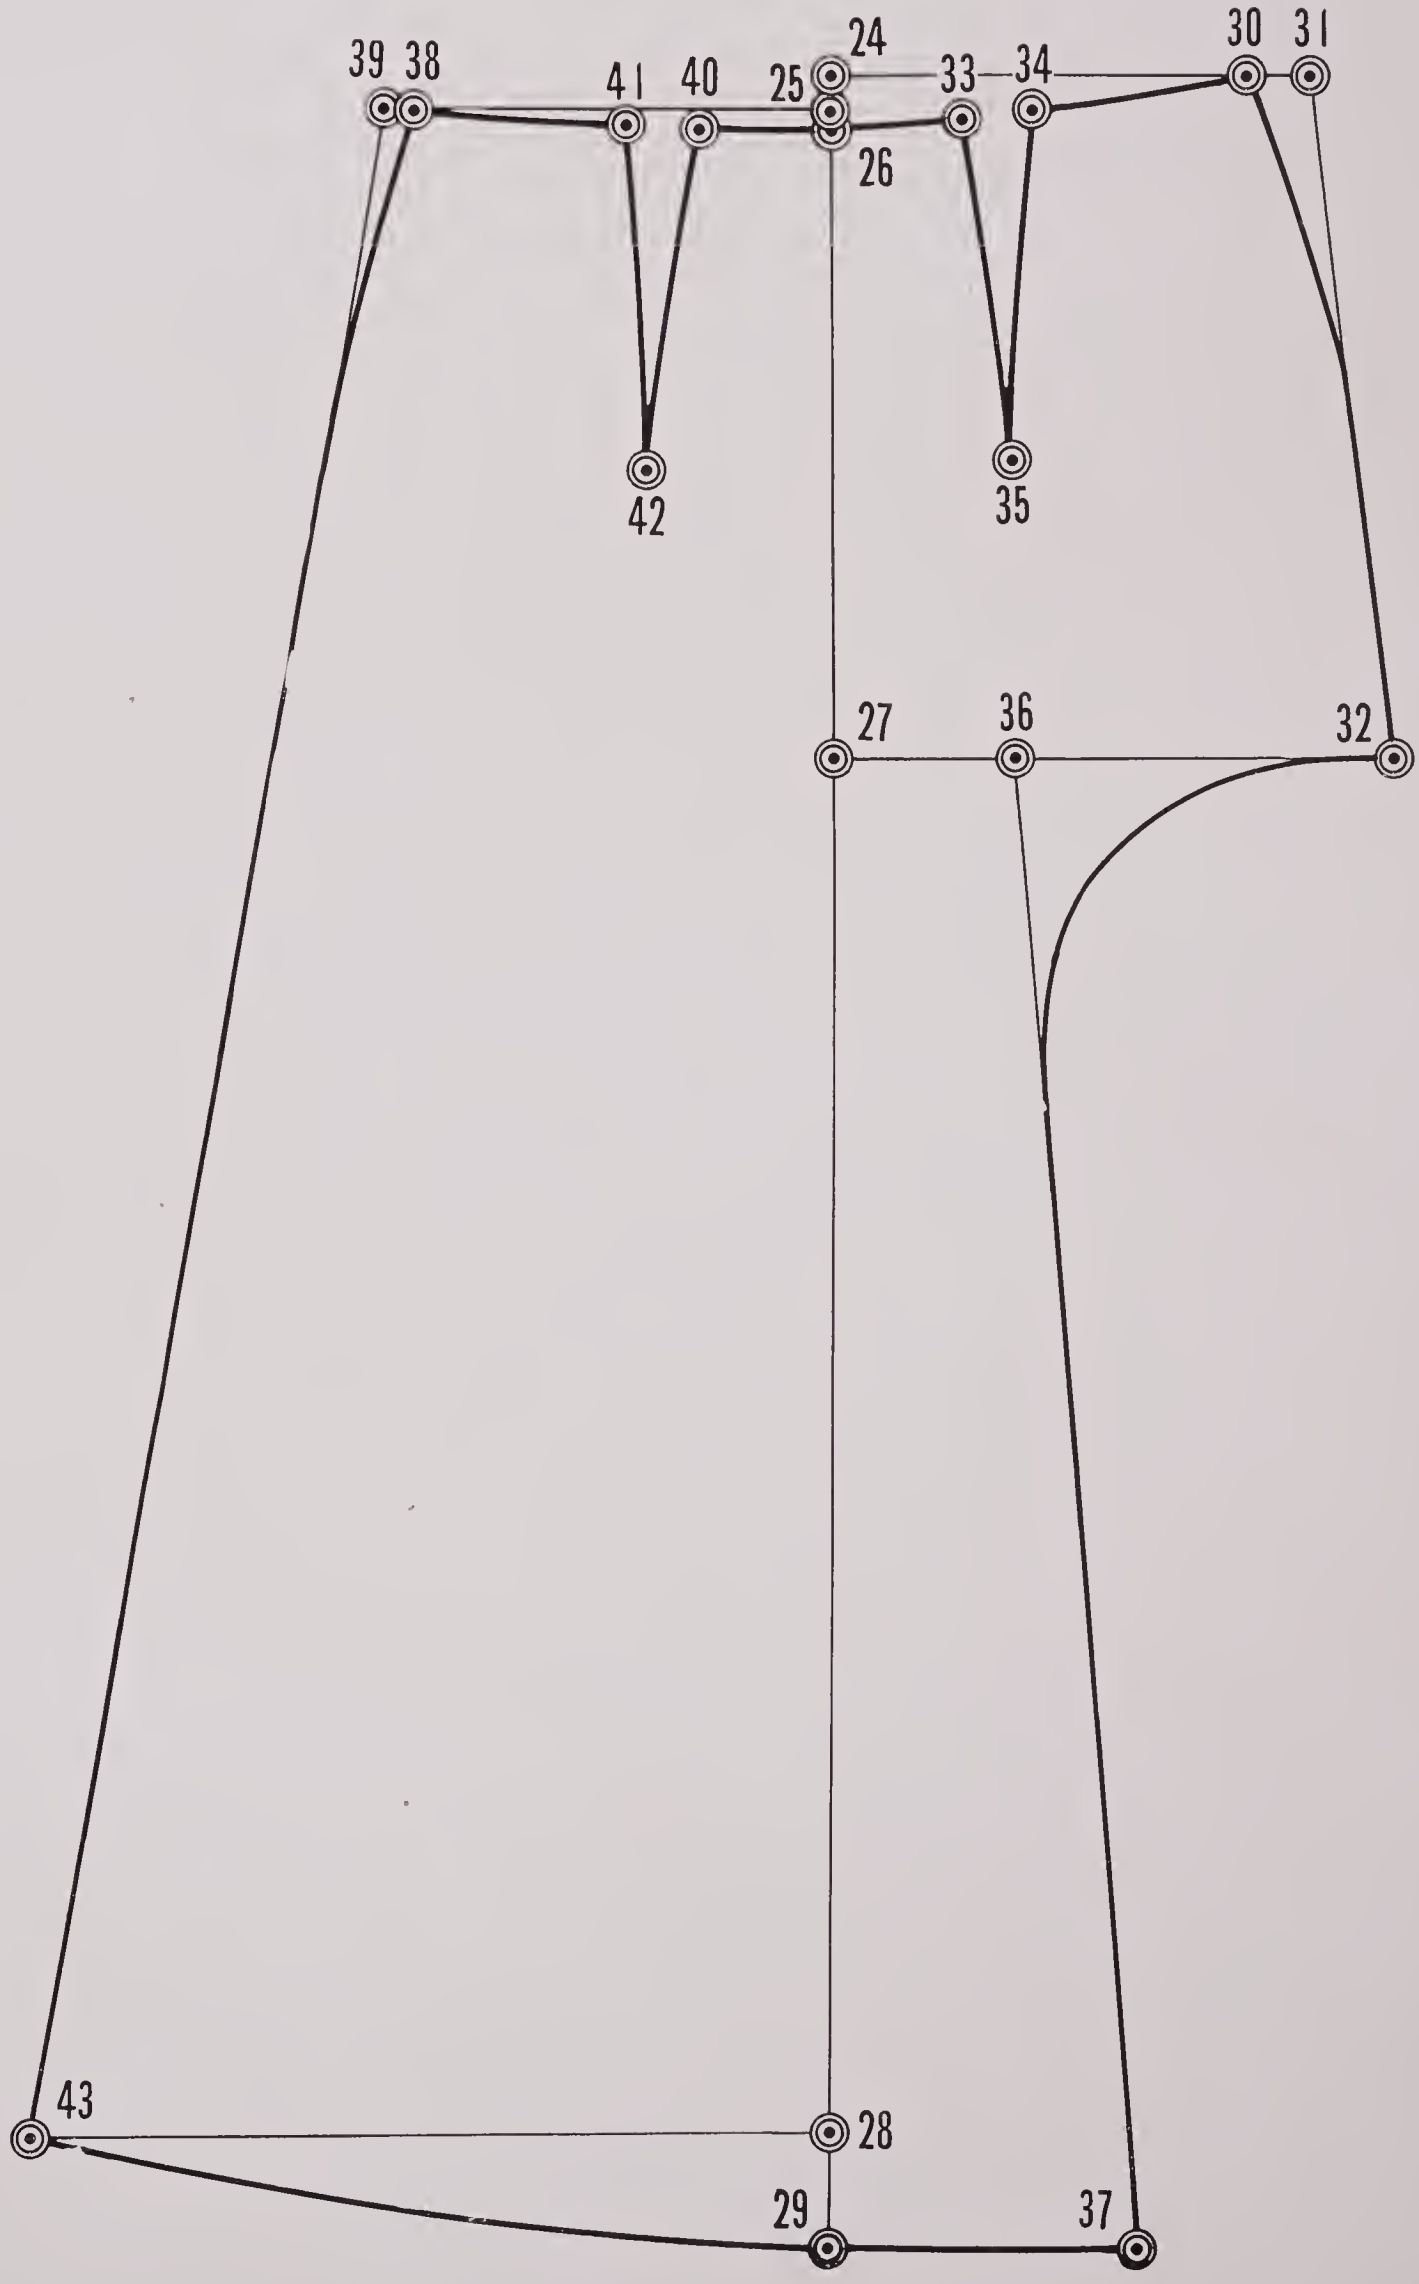
42 is a point 3¼ inches from the line 26-27 and 6 inches below 40; shape the dart from 42 to 40 and 41 respectively.

43 from 28 is 14¼ inches; shape the bottom from 43 to 29 and connect 43 and 39.

Shape a dart from 38 to a point 6 inches below 39.

The opening of the skirt is made from 38 to about 10 or 11 inches down the seam. A strap about 1½ inch wide should be attached on Part I at point 17, long enough to go around the leg a little above the knee to meet and button to a little strap 1½ inch long, attached to Part I from point 15 up. This little strap is buttoned to a button on Part II a little above point 36; the exact location of this button is to be determined and fitted when the lady is off the horse, while trying on the skirt.

PART II



LADIES RIDING BREECHES

Front Part

The drafting of a pattern for Ladies Riding Breeches is understood by comparatively few Ladies Tailors only. The diagrams and descriptions of the same on the following pages, therefore, should be very helpful to those that lacked that knowledge before.

The measures are as follows:

Width measures	Length measure
26½ waist	12½ hip rise
40 hip	24 to knee
15 knee	26 2 inch below knee
13½ 2 inches below knee	30½ to calf
15½ calf	35 full length
11½ bottom	

To Draft Front Part.

A is a point from which to draw a line downward .

2 from A is the hip rise.

3 from A is the knee.

4 from A is 2 inches below knee.

5 from A is the calf.

6 from 5 is ¾ inch.

7 from A is the full length.

8 from 7 is ¾ inch, square both ways from A, 2, 3, 4, 5, 6, 7 and 8.

9 from 2 is ⅛ hip, square upward.

10 from 2 in ⅛ hip.

11 from 10 is ½ of line 10-2, and

12 from 9 is the same.

13 is a point on the line squared up from 9.

14 from 13 is ¼ waist plus 2 inches.

15 from A is ½ inch.

16 from A is 1 inch.

17 from A is 6 inches, shape a dart from points 15 and 16 to 17, and the waist line from 15 to point ¼ inch above 14 and from 16 to a point ⅜ inch below 13.

Shape the front seam from a point ½ inch in back of 13 down to 12 as represented.

18 from 3 and

19 from 3 is ½ knee less 1 inch gained by applying the amount equally divided on each side of center mark 3.

20 from 4 and,

21 from 4 is ½ the measure below knee, less 1½ inch, gained and applied the same way as the knee measure square down from 20 and 21.

22 from the line squared down from 20, and

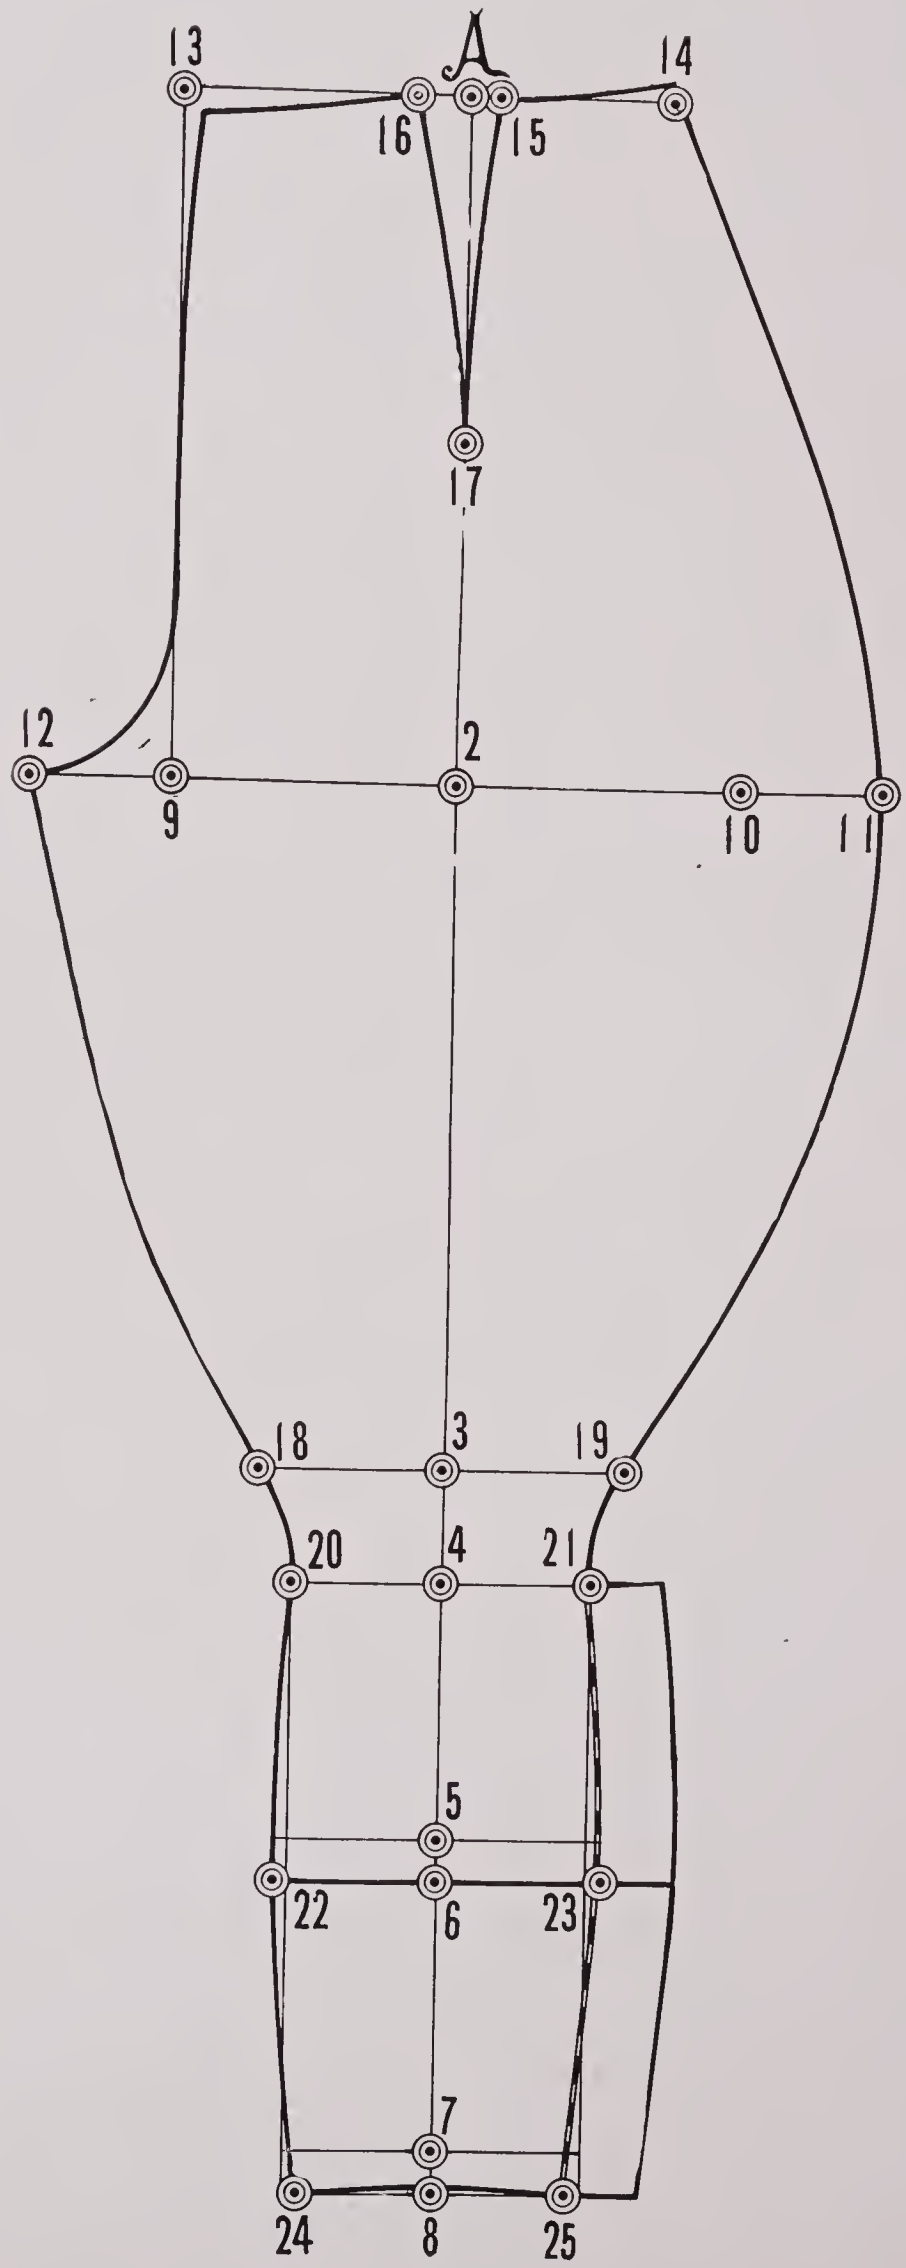
23 from the line squared down from 21 is ¼ respectively.

24 from the line squared down from 20, and

25 from the line squared down from 21 is ¼ respectively.

Shape the side seam from 14 through 11, 19, 21, 23 to 25 and the inside seam from 12 through 18, 20, 22 to 24 as represented. Shape the bottom from 24 to 25 and allow 1½ inch for a vent from 21 downward as per diagram. The construction of the back part is illustrated and described on the page following.

FRONT PART



LADIES RIDING BREECHES

Back Part

26 from 11 is the same as 11 from 10.

27 from 12 is the same as 12 from 9.

Draw a line from 12 through 16 upward.

Cast a sweep at 14, pivoting at a point half way between 11 and 26.

28 is a point gained by squaring from the center back line, touching the sweep line 14-29 at a point where it will measure ¼ waist plus 2 inches.

29 is the point just gained by squaring from 28.

30 is a point half way between 28 and 29; connect 30 and 2.

31 from 30 is 1 inch, and

32 from 30 is the same.

33 from 30 is 6 inches, shape a dart from 31 and 32 to 33 and the waist from 29 to 31 and from a point ¼ inch below 32 to a point ⅝ inch below 28.

34 from 18 is ½ inch, and

35 from 20 is the same.

36 from the front part, and

37 from 22 is ¾ inch.

38 from 24 is ½ inch; shape the back seam from the waist line below 28 to 27 and the inside seam from 27 through 34, 35 to 36 and from 37 to 38 as represented.

39 from 34 is the knee width, less the width of the front part 18-19.

40 from 35 is the measure below the knee less the width of the front part 20-21.

41 from 36 is the calf less the width of the front part 22-23.

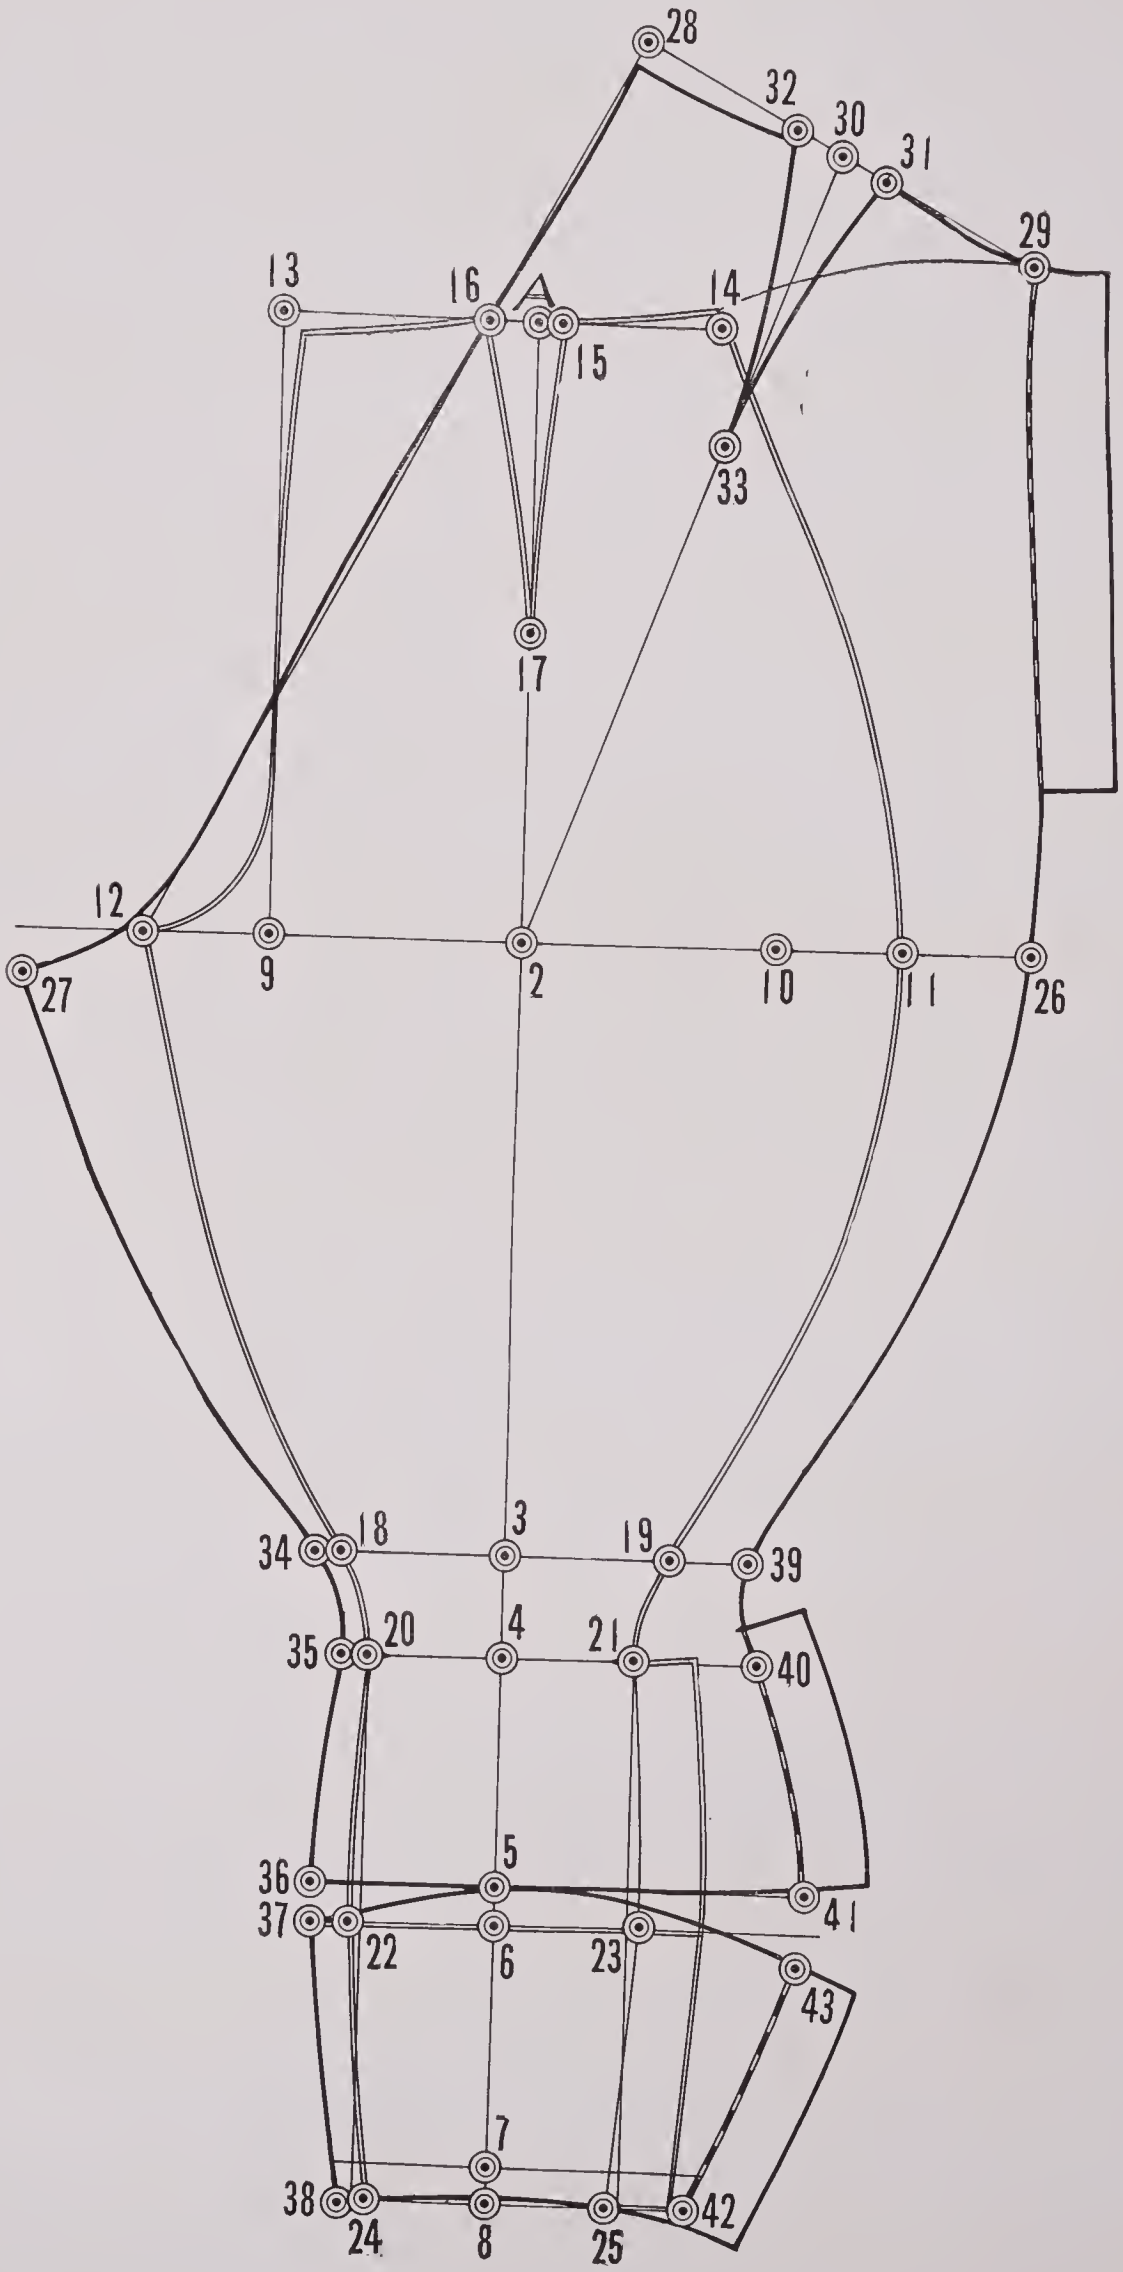
42 from 38, ½ inch below the 24-25 is the width of the bottom less the width of the front part 24-25.

43 from 42 is the same as 23 from 25 and the same from 5 as 41 from the same point.

Shape the side seam from 29 through 26, 39, 40 to 41 and from 43 to 42.

Shape the bottom from 38 to 42 and draw a line from 37 through 5 to 43, thus separating the cuff from the rest of the back part; the cut part of the front is outlined by points 22, 23, 24 and 25. The allowance for the vent at the side seam from 29 to a point about 9 inches below 29 is 1½ inch, the same amount is allowed from the knee down. Finish as represented.

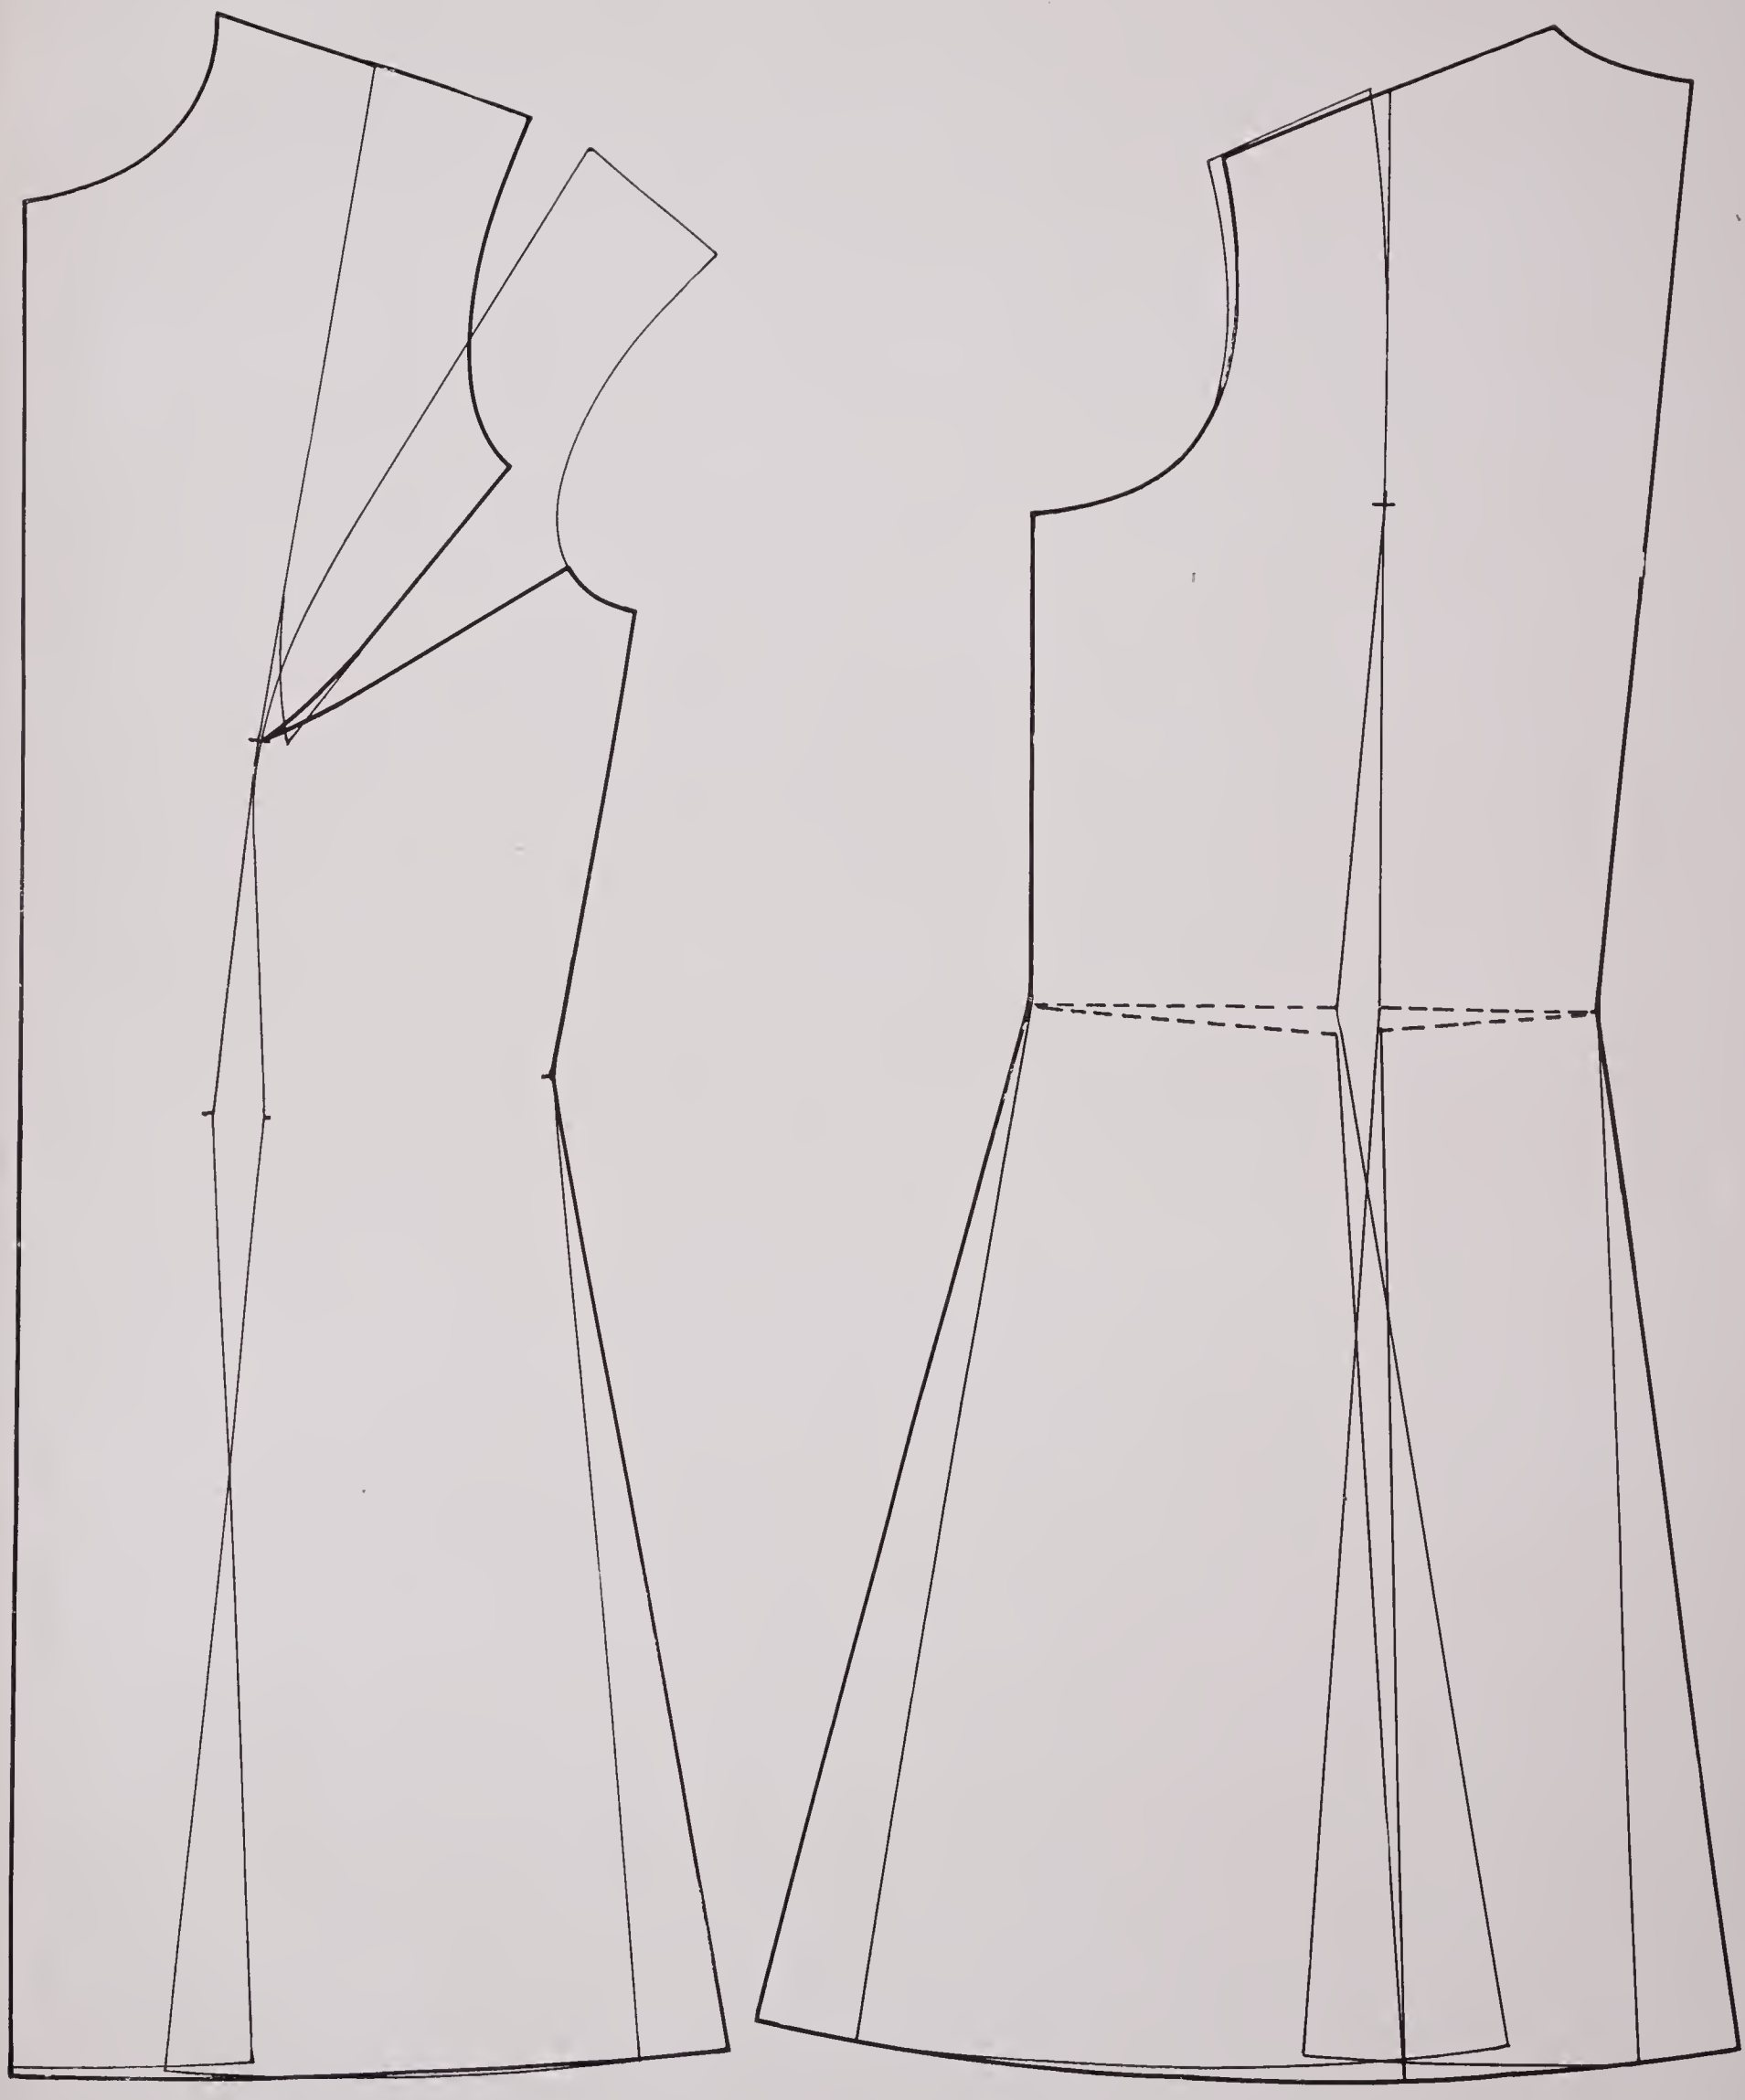
BACK PART


28
32
30
31
29
13
16
A
14
15
33
17
12
27
9
2
10
11
26
34
18
3
19
39
35
20
4
21
40
36
5
41
37
22
6
23
43
7
38
24
8
25
42

MANIPULATION OF THE SEMI-FITTED PATTERN

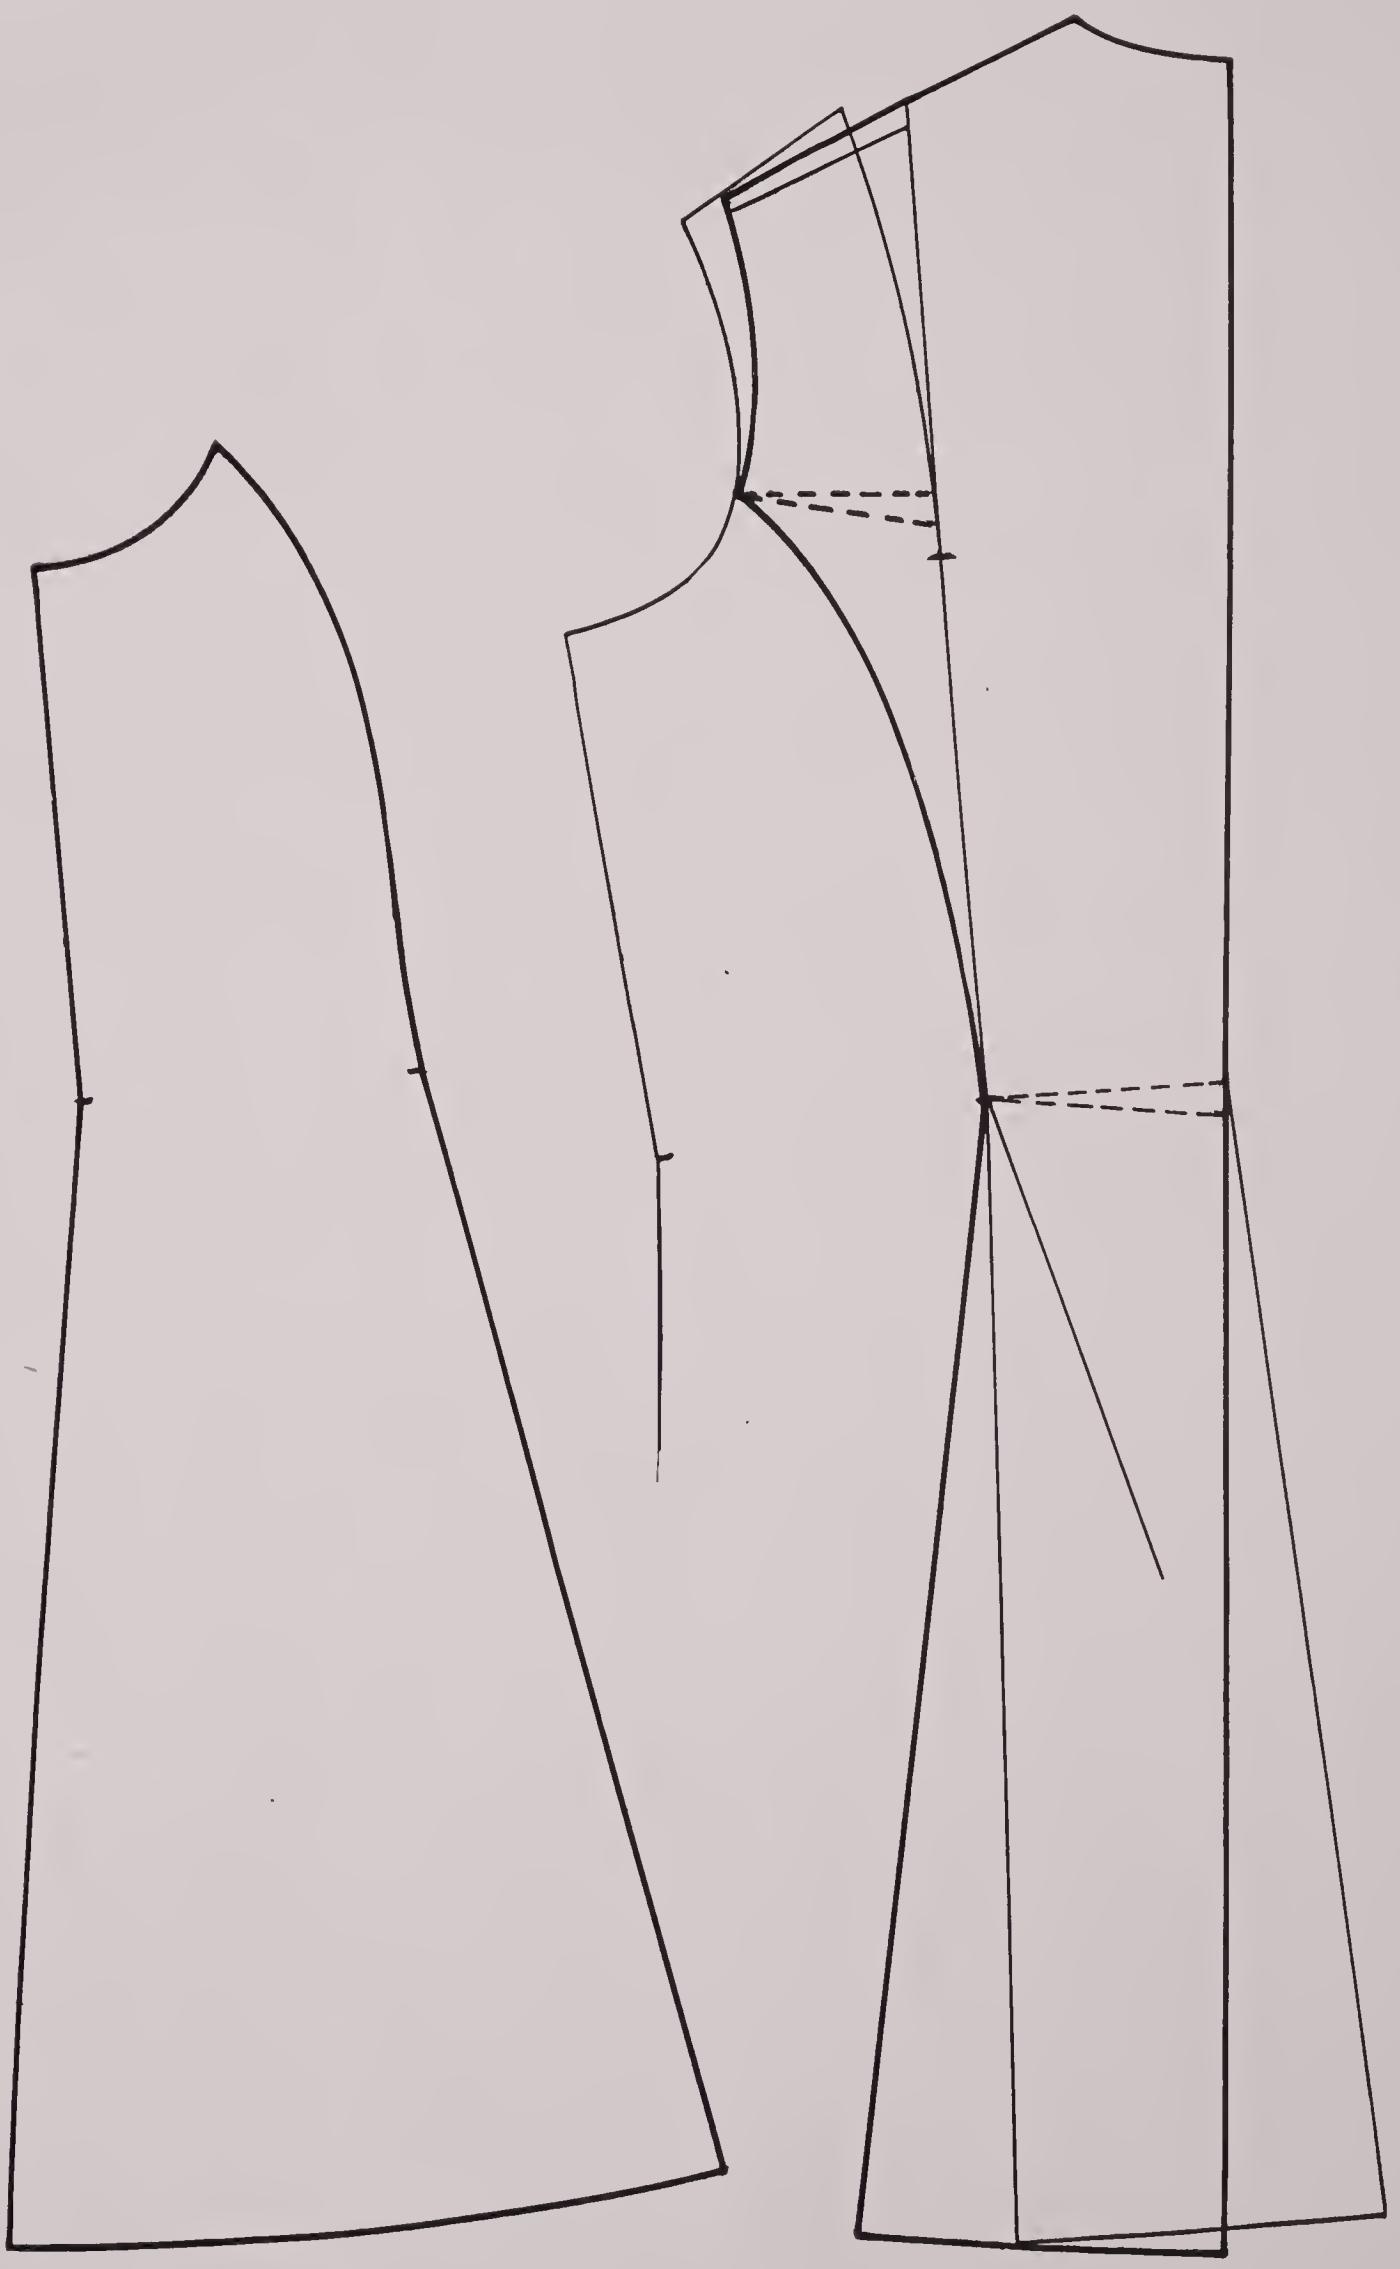
The manipulation of a block pattern is a comparatively easy matter if properly understood. In this book necessarily only a short treatise on this subject can be given, but it will be easily seen from the accompanying diagrams, how from one style pattern another style can be manipulated. The main point to be observed is that the general shape of the pattern and the principle points of the same should never under any circumstances be moved or changed. This principle must be adhered to in the manipulation of all and every style pattern. Great care must be exercised when shifting seams or splitting the different parts of the pattern while manipulating it so as not to lose the shape of the same. This is the point where many pattern makers even get mixed up, and the result is a bad fitting pattern.

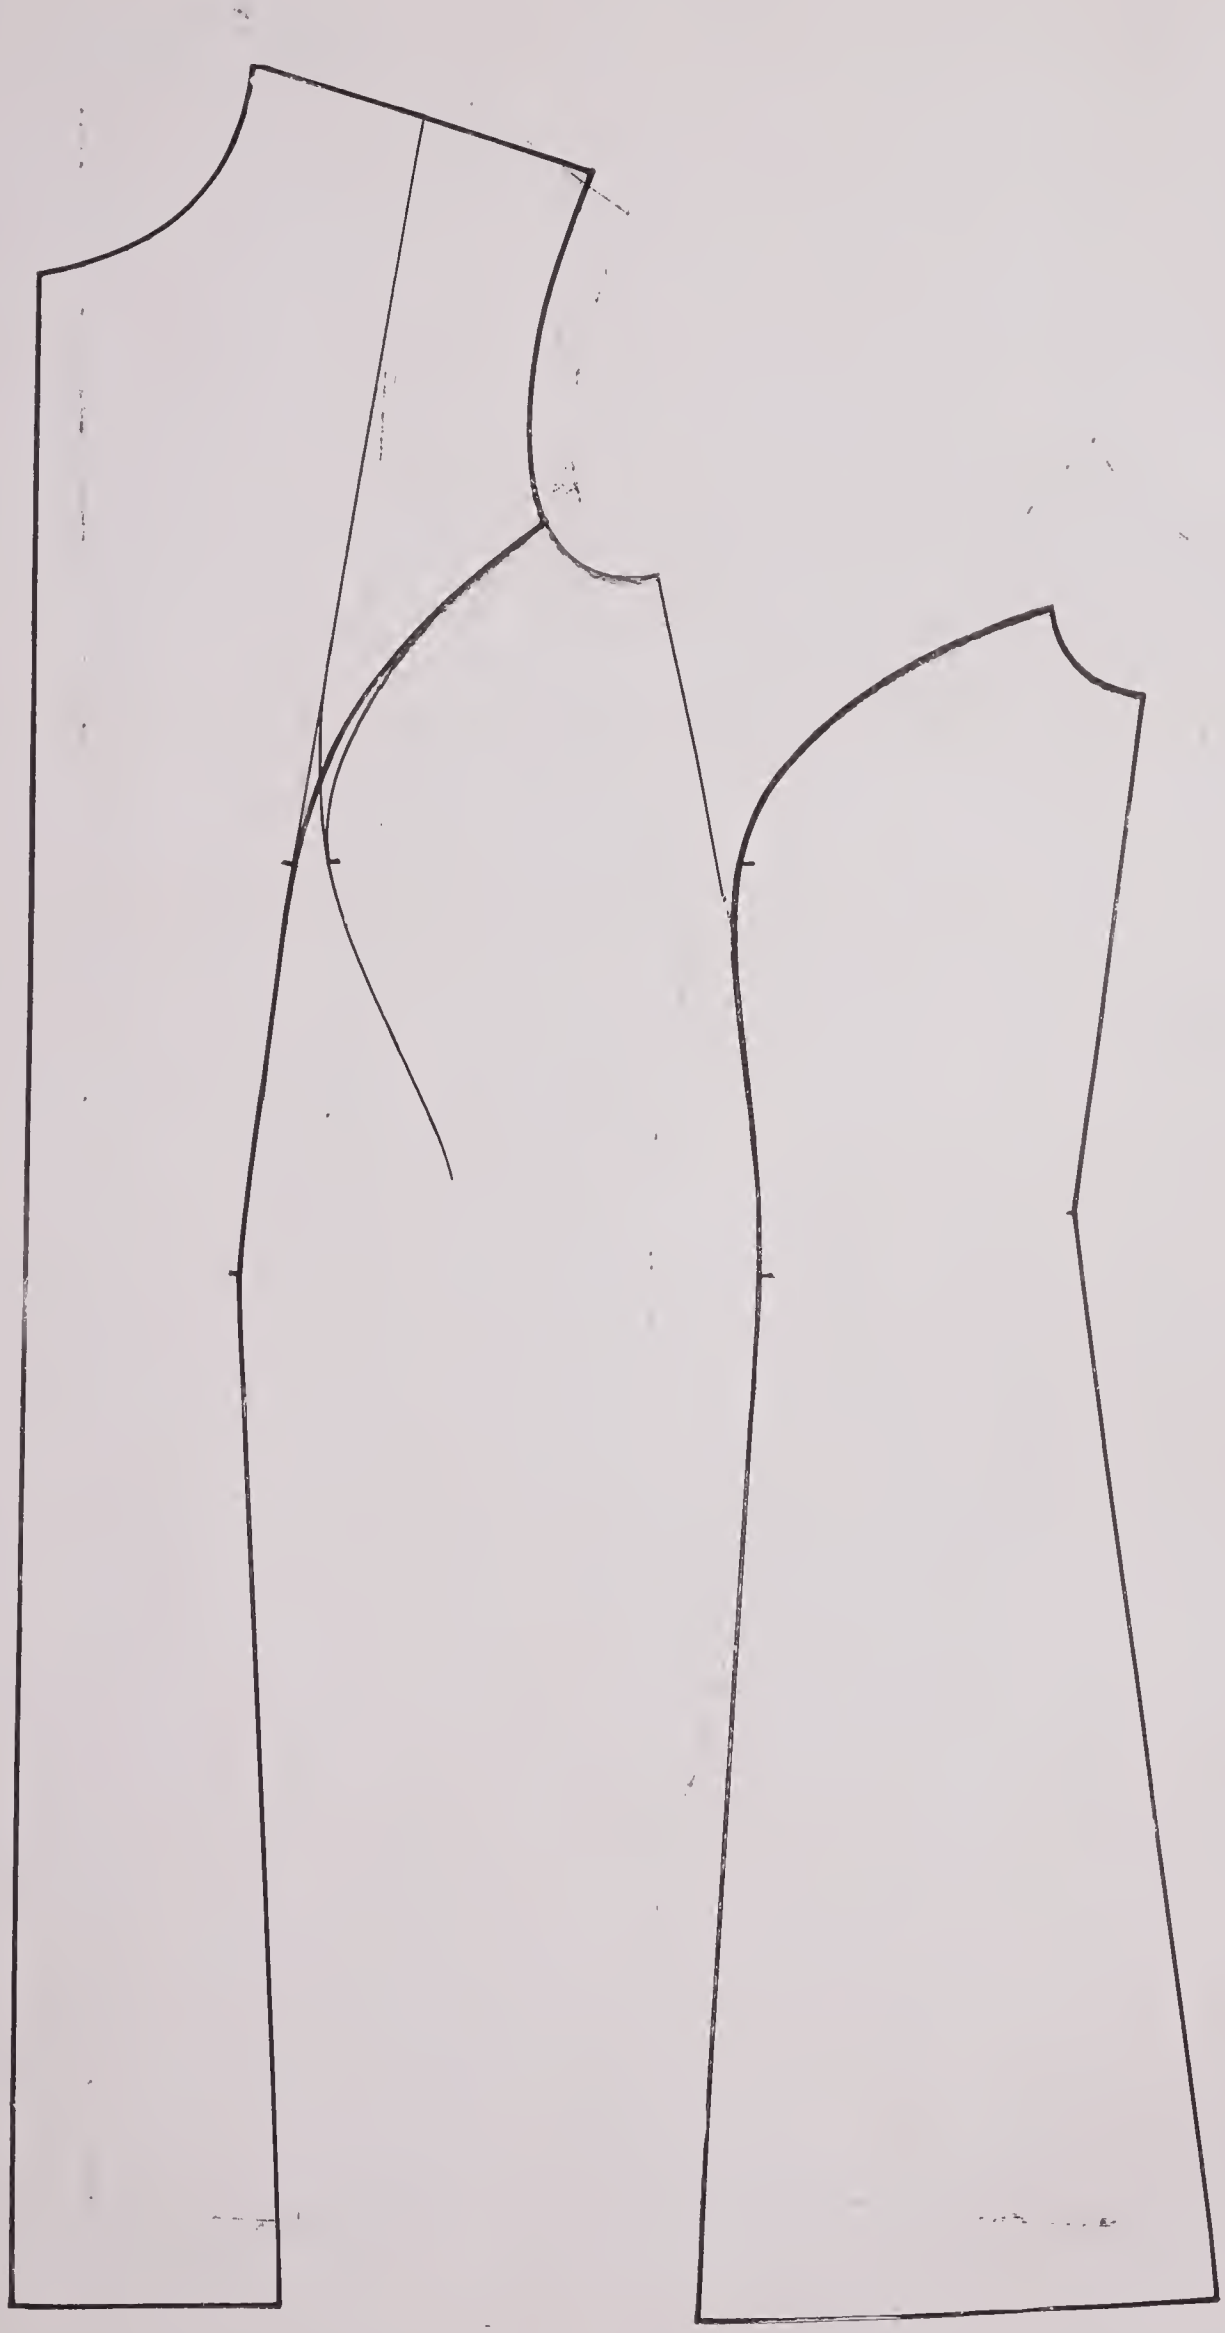
The accompanying diagram illustrates how a four-piece, semi-fitted, block pattern may be manipulated into a one-piece front and a one-piece back. The thin lines represent the original shape of the pattern and the broken lines represent how the pattern has been cut and spread to obtain the desired effect. The heavy lines show the finished pattern.

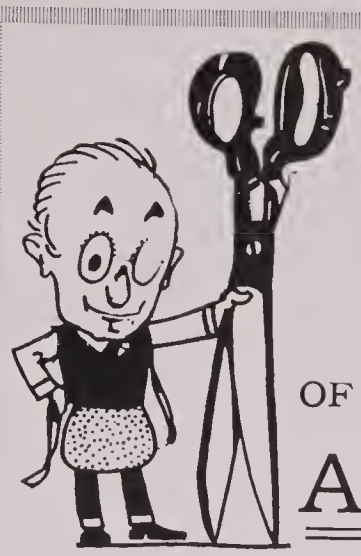


MANIPULATION OF THE SEMI-FITTED PATTERN

In this diagram a simple manipulation is illustrated. The two front parts of the pattern are laid together from the bust notch up and the seam shifted to run into the armhole as represented. The two back parts of the pattern are laid together from the waistline up and the seam shifted to run from the waistline gradually into the armhole at a point about 3½ inches below the shoulder point. The finished pattern is illustrated by the heavy line formation.







DESIGNERS

OF LADIES' COATS, SUITS, WAISTS, SKIRTS, DRESSES

ARE IN GREAT DEMAND

A Dignified Profession for Men or Women.
Easy to Learn, Pays Big Money.

TAKE A COURSE OF INSTRUCTION IN THE

Mitchell Designing School

OF PATTERN-MAKING, GRADING AND FITTING

Ladies' Tailor-made Garments

Established over fifty years.

NEW METHODS NEW SYSTEMS NEW IDEAS BEST RESULTS

In the modern construction of all kinds of women's apparel

INDIVIDUAL INSTRUCTION BY PRACTICAL EXPERTS

Day and Evening Classes Terms Reasonable Convenient Payments

A COURSE OF INSTRUCTION IN THE MITCHELL SCHOOL MEANS AN IMMEDIATE POSITION AND BIGGER PAY.

The System is Easily Grasped by Average Men and Women

Write, phone or call for free booklet, demonstration and full information.

Mitchell Designing School

912-920 BROADWAY (Cor. 21st Street) NEW YORK, N. Y.

Telephone Stuyvesant 8383

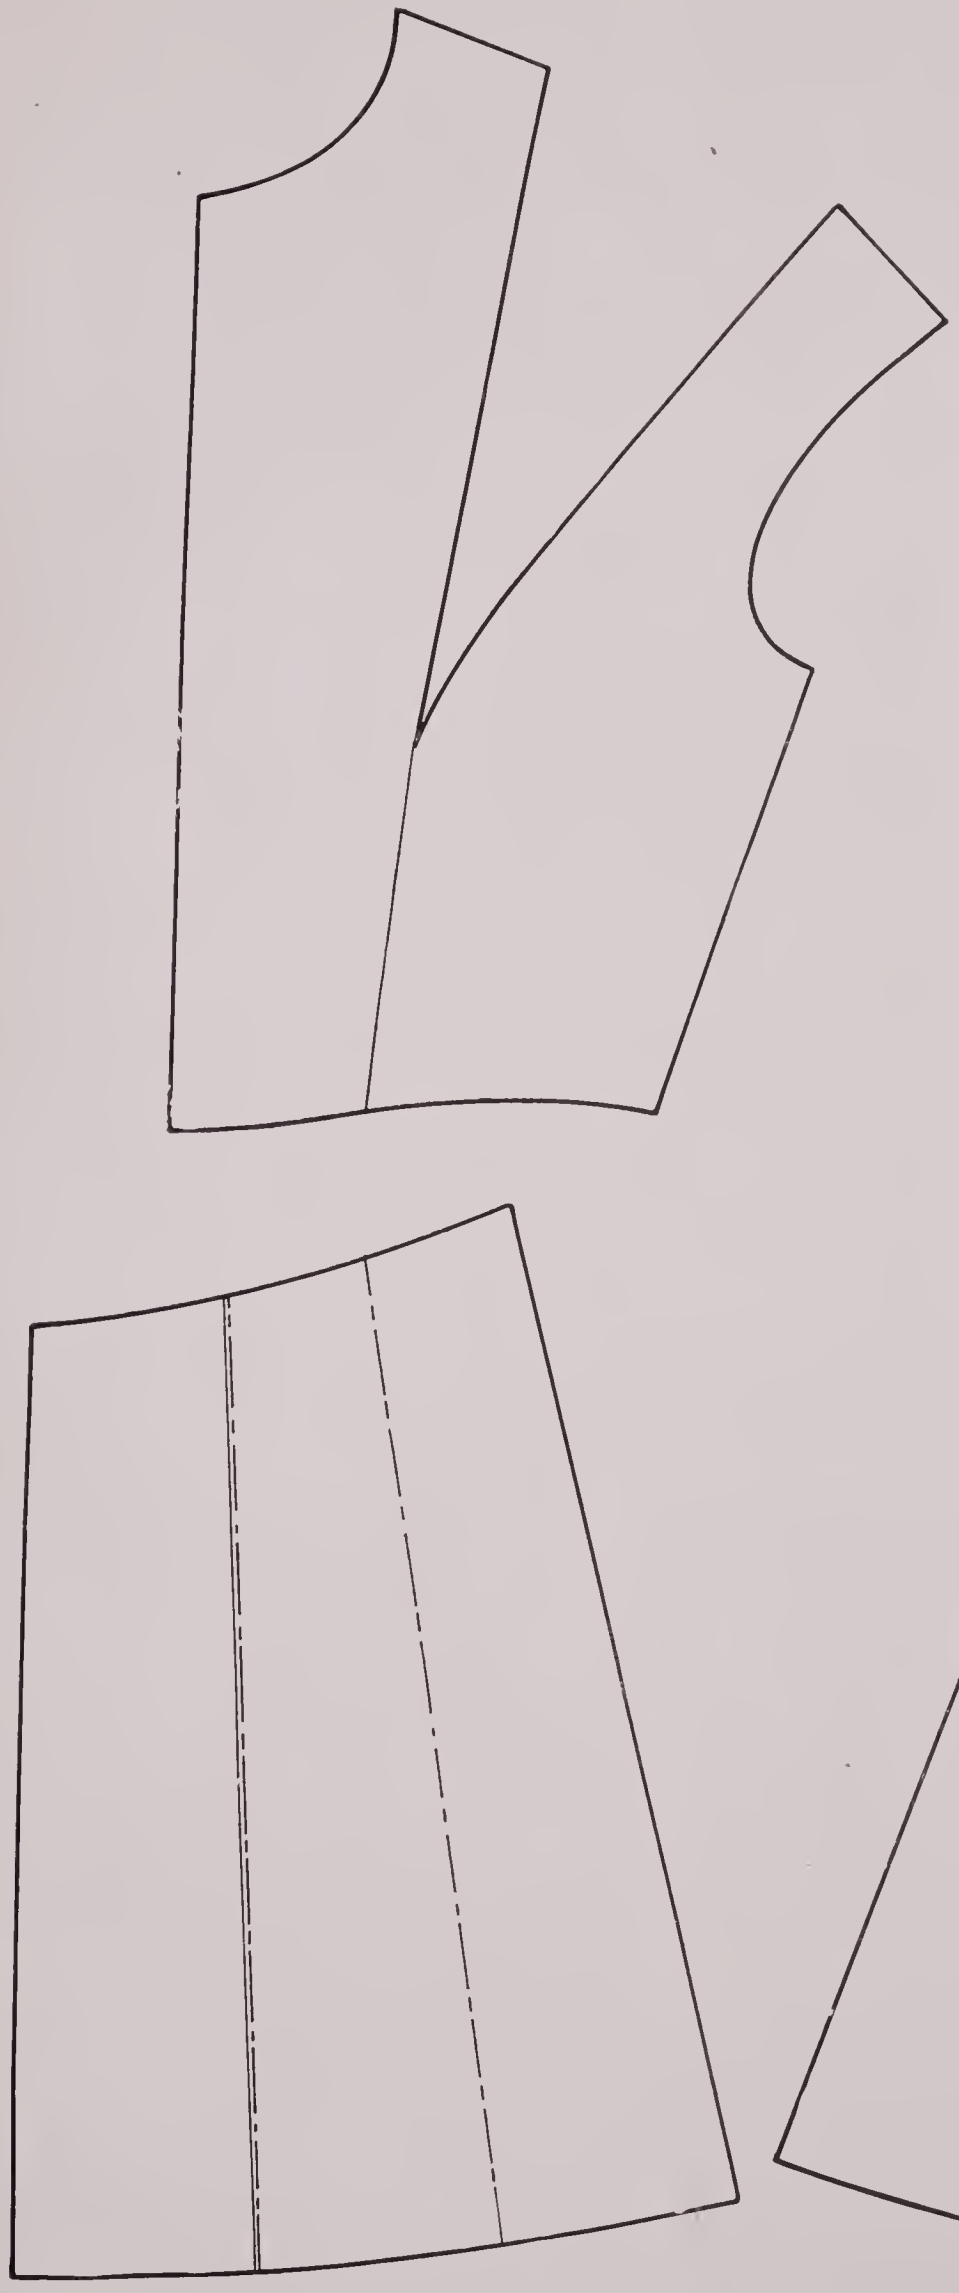
BOSTON BRANCH:
453 Washington Street, Dexter Building

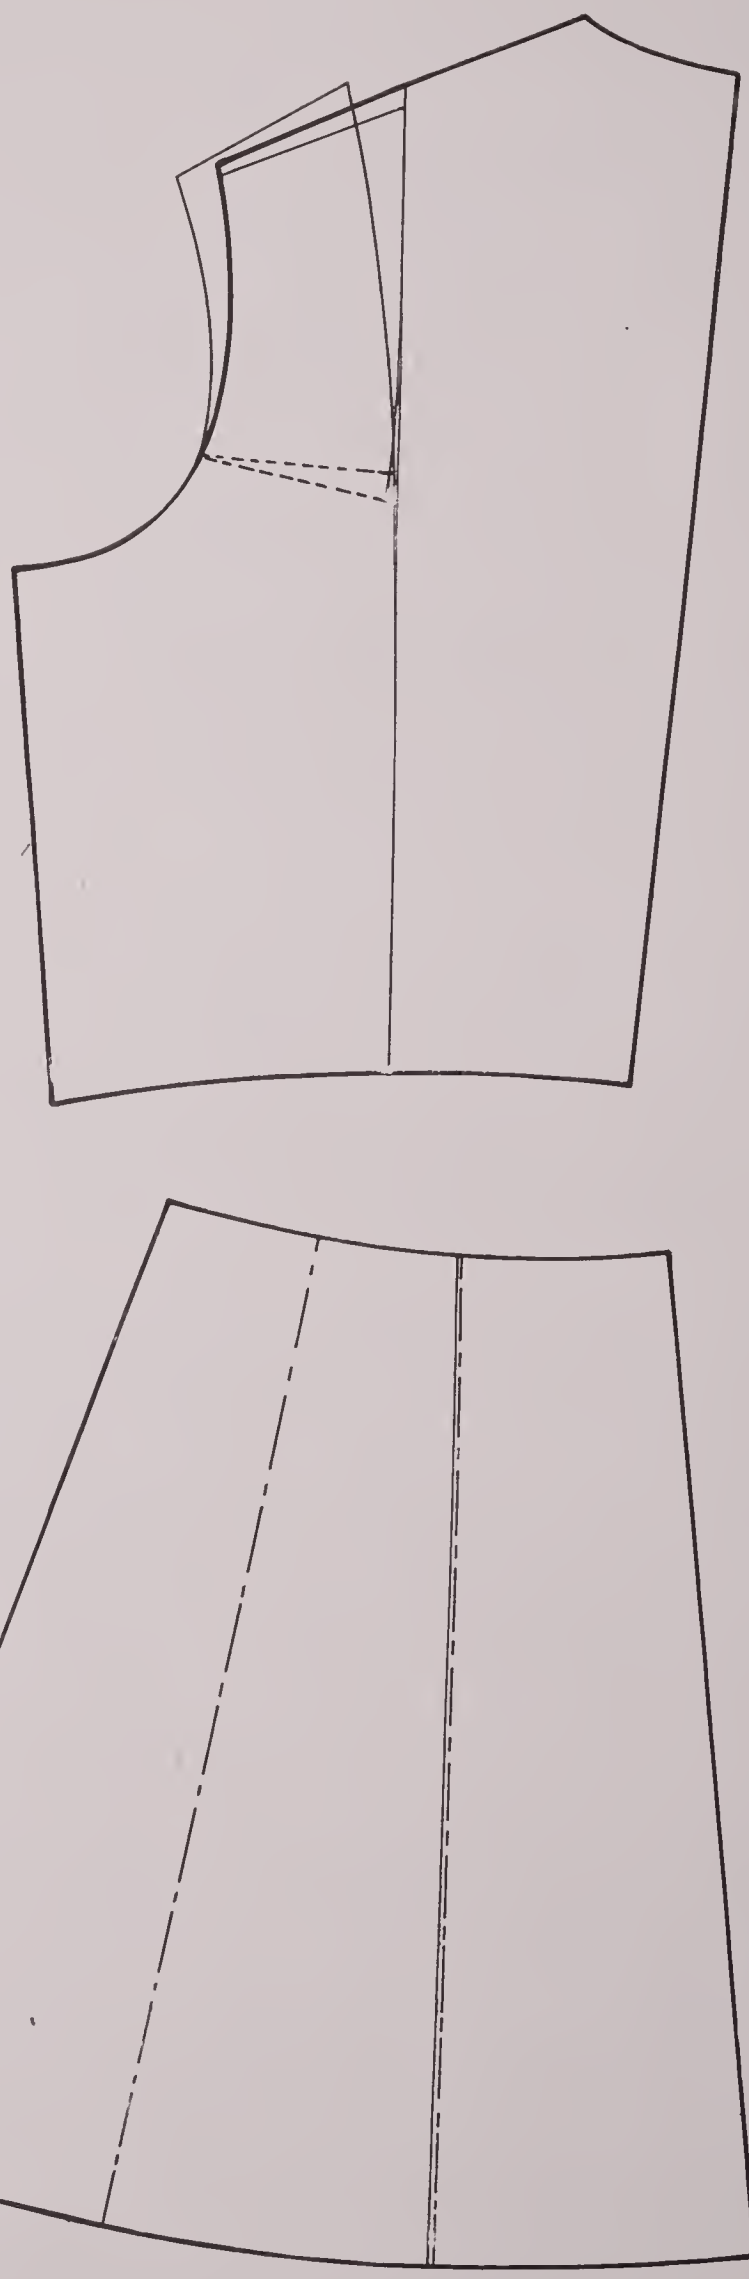


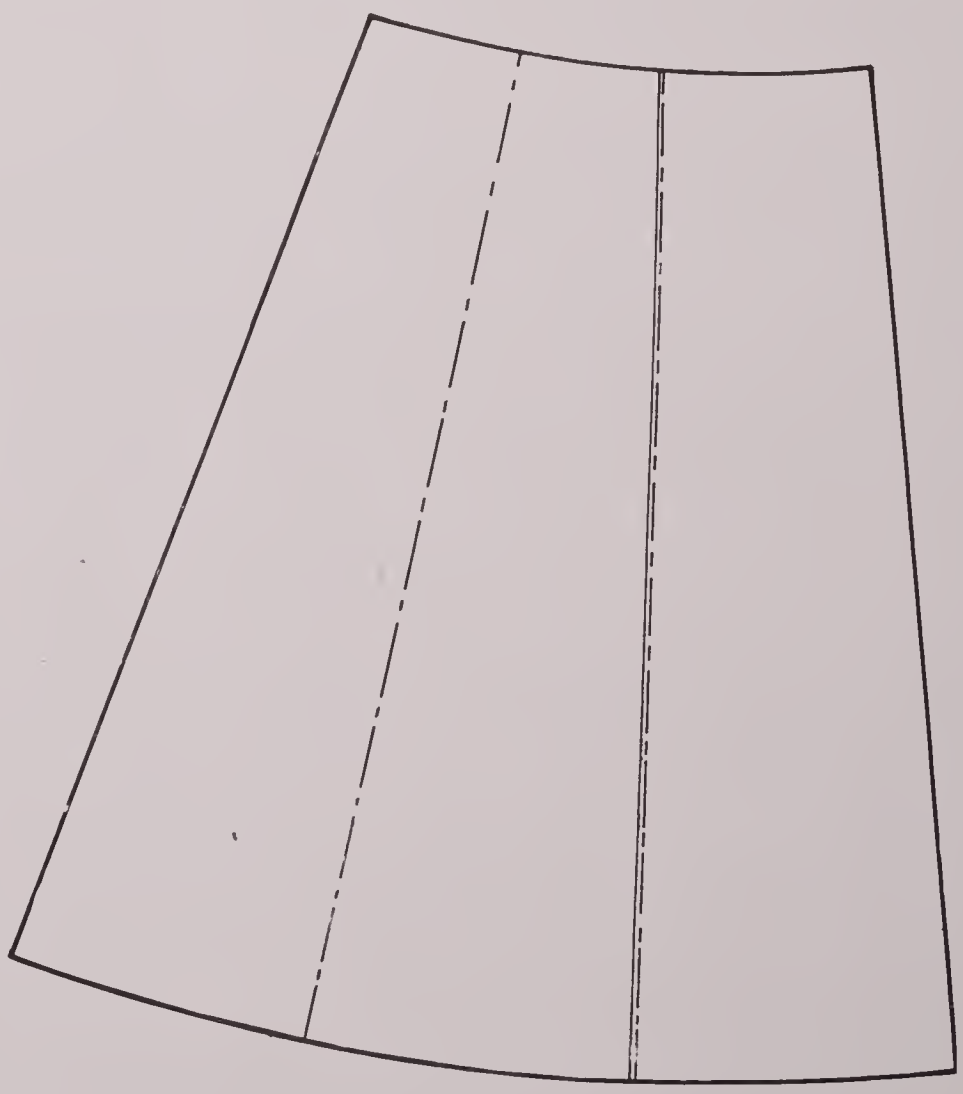
MANIPULATION OF THE SEMI-FITTED PATTERN

The diagrams on this page illustrate a semi-fitted pattern cut through at the waistline. The different parts are then taken and laid together to form a dart either from the bust line up or from the bust line down as illustrated by the heavy line formation. The skirt parts are then joined together to form a separate front and back part or they may be cut all in one piece as in some cases is done.

The broken lines on the skirt parts indicate the places where the pattern may be cut through and spread out at the bottom to give additional fulness if desired.











SOME FACTS

About the

MITCHELL SCHOOL

of Designing Ladies' Tailor-made Garments

¶Garment designing as we teach it does not involve the use of charts, or complicated devices of any kind. The common tape measure and ordinary divisional square are all that is required.

¶ The system itself and all that pertains to it is on the same simple order, so that anyone with average intelligence will have no difficulty in mastering the course chosen.

¶ At the same time this system is so practical that there can be no question as to your success, while the instruction is so thorough that there is no chance of the student lacking a complete expert knowledge of every principle and detail involved in the designing of ladies' cloaks and suits, skirts, waists and dresses; and the cutting and fitting of ladies' tailor-made garments and riding habits.

¶ There are no classes; each student is taught individually—personally. This individual attention insures progress and thorough understanding of the subject. The instruction carries the student systematically through all possible varieties of garments and every style effect, as shown on the latest fashion plates; so that, no matter what styles the future may bring, you know how to make them.

¶Designers of Cloaks, Suits, Dresses, Waist and Skirts, Ladies' Tailors, Furriers and Dressmakers are taught how to take measures, how to overcome difficulties arising from abnormal forms, deformities, etc.; how to fit so as to secure a perfect result, etc. In short, our full course of instruction covers everything that designers of ladies' outer garments and cutters and fitters should know.

¶ All necessary materials, and proper implements are supplied for use of students while learning. In addition, we furnish facilities.so that you can test your knowledge and progress with the system, by making models as you go on.

¶ These are a few of the characteristics that go to make the Mitchell Designing School the largest, the best equipped, the most modern, the most responsible, and the most successful in the world.

Mitchell Designing School

912-920 BROADWAY Telephone, STUYVESANT 8383 **NEW YORK**

Evening Classes: Mondays, Wednesdays and Fridays

BOSTON BRANCH: 453 Washington Street, Dexter Building



THE

"American Ladies Tailor"

FOR

The American Ladies Tailor

A Fashion Publication Devoted to Plain Practical, up-to-the-minute Tailor-made Styles:—

Designed by the Leading Fashion Artists with Styles that make and hold customers

FOR YOU

The Seasons' Display Panorama is always a masterpiece in style, color and design.

No other Publication gives you as reliable a service.

No other Publication gives you as many fashions.

No other Publication contains as many Practical Tailor-made Styles as the American Ladies Tailor.

Information Cheerfully Given, Write to Us To-day

MITCHELL PUBLICATIONS, Inc.

920 Broadway, New York

LIBRARY OF CONGRESS
0 013 973 093 8