

Distribution System Model and Data Specification

IEEE Task Force on Benchmarking Multiconductor OPF for Distribution Systems

September 24, 2026

Contents

Contents	ii
I Home	1
1 Distribution System Model and Data Specification	2
1.1 New here? Start with the Overview	2
1.2 Foundations	3
1.3 Components	3
1.4 Optimisation	3
1.5 Reference	3
1.6 Contributing	3
II Foundations	4
2 Overview	5
2.1 Model specification	5
3 Background & scope	8
3.1 Background and scope	8
4 Notation	11
4.1 Notation	11
5 Data input formatting	18
5.1 Data input formatting	18
6 Grounding	21
6.1 Grounding	21
7 Worked example	23
7.1 A worked network example	23
8 Document metadata	26
8.1 Document metadata	26
III Components	28
9 Buses	29
9.1 Buses	29
10 Lines	33
10.1 Lines	33
11 Switches	37
11.1 Switches	37
12 Loads	39
12.1 Loads	39
13 Generators	42
13.1 Generators	42
14 Shunts	44
14.1 Shunts	44

15	Capacitors	46
15.1	Capacitors	46
16	Voltage sources	49
16.1	Voltage sources	49
17	Transformers	52
17.1	Transformers	52
IV	Objective & feasibility	57
18	Objective	58
V	Reference	59
19	Modelling notes & FAQ	60
19.1	Modelling notes and FAQ	60
20	Nomenclature	62
20.1	Nomenclature	62
21	References	64
21.1	References	64
22	Glossary	65
22.1	Glossary	65

Part I

Home

Chapter 1

Distribution System Model and Data Specification

Welcome to the data specification of the four-wire distribution-system optimal power flow (OPF) model.

This site is the canonical, version-controlled home of the specification. Every page is Markdown, and the specification evolves through pull requests.

Download as PDF

The complete specification is also available as a single, print-ready document: [DistributionSystem-ModelSpecification.pdf](#).

The data specification is one of two outputs maintained by the IEEE PES Task Force on **Benchmarking Multi-conductor OPF (BMOPF) for Distribution Systems**:

- The **BMOPF data specification**. This defines the basic specification which must be met for a given dataset to be considered a network case.
- The **BMOPF network cases**. These are data instances which conform to the BMOPF data specification. Network cases are presently work-in-progress.

An JSON file representing a distribution system which meets the data specification is described as a *network model*. The *BMOPF networks cases* are the subset of network models which are curated by the BMOPF Task Force.

The BMOPF data specification is split across two resources:

- **This site** as the main data specification, capturing **data semantics and math model** and **further information** aspects, consisting of further subsections of [foundations](#), [components](#), [optimisation](#), [reference](#) (including FAQs), as well as [governance and contribution](#) guidelines.
- The **data schema**, which defines the basic structure of a JSON instance, including field names and some basic data contracts.

1.1 New here? Start with the Overview

Then work through the foundations before diving into individual components.

1.2 Foundations

The shared model that every component page builds on.

- [Overview](#): scope and structure of the specification
- [Background & scope](#): what is (and isn't) modelled, and why
- [Notation](#): symbols and mathematical conventions
- [Data input formatting](#): how a case is described
- [Grounding](#): neutral, earth, and return paths
- [Worked example](#): a small four-bus network end to end
- [Document metadata](#): provenance and versioning fields

1.3 Components

Per-element data models and equations.

- [Buses](#) · [Lines](#) · [Switches](#)
- [Loads](#) · [Generators](#) · [Shunts](#) · [Capacitors](#)
- [Voltage sources](#) · [Transformers](#)

1.4 Optimisation

- [Objective & feasibility](#)

1.5 Reference

- [Modelling notes & FAQ](#)
- [Nomenclature](#)
- [References](#)
- [Glossary](#)

1.6 Contributing

Corrections and refinements are welcome. See the [Contributing](#) guide. The "Edit on GitHub" link on any page takes you to its source file, and every push to main rebuilds and publishes this site automatically. Notable changes are recorded in the [Changelog](#).

Part II

Foundations

Chapter 2

Overview

2.1 Model specification

Status: prototype

This is a **prototype** of a self-contained model + data specification spanning the full network model: foundations ([Background & scope](#), [Notation](#), [Data input formatting](#), [Grounding](#), [Worked example](#), [Document metadata](#)); every component ([Buses](#), [Lines](#), [Switches](#), [Loads](#), [Generators](#), [Shunts](#), [Capacitors](#), [Voltage sources](#), [Transformers](#)); and the [Objective and feasibility](#) formulation.

Purpose

This is the mathematical and data-model specification for (up-to-) four-wire distribution system optimal power flow (OPF), developed by the IEEE PES Task Force on Benchmarking Multiconductor OPF (BMOPF) for Distribution Systems.

Two principles govern every page:

1. **The specification is the source of truth.** The equations, symbols, bounds, and data-model field names on these pages, together with the JSON Schema, form the normative contract that datasets and tools implement.
2. **SI units are used in place of per-unit.** Voltages in volts, currents in amperes, impedances in ohms, admittances in siemens, powers in watts/var/VA, angles in radians. Per-unit scaling may be applied by solvers internally but is **out of scope** of this specification.

How each component page is organised

Every component page follows the same five-part structure, so a reader always knows where to find the data fields, the physics, and the bounds.

The **cartesian vs engineering** split in the **inequality constraints** is deliberate. A *cartesian bound* constrains the real and imaginary components of a decision variable directly: a (convex) rectangle in the complex plane, used mainly to bound the search. An *engineering bound* constrains a quantity an engineer cares about (a voltage magnitude, a thermal current, a sequence-component unbalance) and is generally a circle (quadratic) or an angle sector (bilinear). Conflating the two would hide which limits enforce a physical limit and which serve numerical purposes.

Part	Question it answers
1. Data model	Which JSON fields describe this component, with types, units, and required/optional status.
2. Input symbols	The mathematical symbol each field maps to (a <i>parameter</i>).
3. Variables	The unknowns this component introduces (an optimization <i>variable</i>).
4. Equality constraints	The physical laws that define the <i>behaviour</i> of the component.
5. Inequality constraints	The bounds, split into cartesian variable bounds (box bounds on a variable's own components) and engineering bounds (physically meaningful magnitude/angle limits).

The mathematical model is stated in **complex phasors**. A solver typically works in **rectangular real** variables (each complex equation split into its real and imaginary parts, each complex variable becoming two real variables), but that realisation is a downstream implementation choice and is not part of this specification.

Model summary

The complete feasible set at a glance: the objective, every bound, and every device constraint, with the page that defines each. Bounds are optional (absent bounds are not enforced); constraints are always active for the elements present.

Amrit

Want to confirm we do not have a status feature that turns components on and off. The switch certainly does (open_switch). If any element can be switched out, is "always active for the elements present" really accurate?

Category	Item	Page
Objective	Minimise active-power dispatch cost	Objective
Voltage bounds	Phase-to-ground, -neutral, -phase, sequence, neutral cap, angle	Buses
Current bounds	Line / switch / transformer thermal, generator current	Lines , Switches , Generators
Power bounds	Generator P-Q box + apparent-power circle; transformer rating; line apparent power	Generators , Transformers , Lines
KVL / Ohm's law	Line series drop + π -shunt	Lines
KCL	Nodal current balance	Buses
Device behaviour	Load & generator power; control mode; transformer winding pairs; switch state; shunt/capacitor admittance current	Loads , Generators , Transformers , Switches , Shunts , Capacitors
Reference / grounding	Voltage-source fixing; perfect, floating or impedance (electrode) grounding	Voltage sources , Grounding

Amrit

On the **Objective** row: we will for sure move beyond just this objective, so do we want it in the model summary as *the* objective?

Reading order

Start with the **foundations**:

1. **Background & scope**: why the specification exists, what it covers, and the design choices behind it.
2. **Notation**: typography (variables vs parameters, real vs complex), the complex-phasor symbols and their rectangular realisation, transform matrices, the element-wise bound idiom, and the set/topology convention used on every later page.
3. **Data input formatting**: units, how complex numbers and matrices are encoded in JSON, and required-vs-optional field semantics.
4. **Grounding**: the common-reference ground model that the components apply locally.
5. **Worked example**: every set constructed for one small network, to practically illustrate the abstraction.

Then the **components** (start with **Buses** and **Lines**), the **Objective and feasibility** formulation, and the **Document metadata**. The **Modelling notes & FAQ** collects recurring case-building questions, and **References** points to the textbooks and papers behind the model.

Self-containment

This section links only within itself, so the whole spec/ folder can be moved to another repository without dangling references. **Please preserve this feature if you wish to contribute.**

Chapter 3

Background & scope

3.1 Background and scope

Why this specification exists, what it does and does not cover, and the design choices behind it. This page frames the rest of the specification; it introduces no model content.

Motivation

Distribution networks are unbalanced: single-phase loads, untransposed lines, and single-phase laterals mean the phases cannot be collapsed to a positive-sequence equivalent without losing physical details or accuracy. An optimal power flow (OPF) for distribution networks must therefore reason at the level of **individual conductors**.

At the same time, the range of utility problems posed as network-constrained optimisation has grown: power flow, state estimation, volt-var control, DER scheduling, dynamic operating envelopes, optimal droop settings. Yet there is little standardisation: few openly-licensed unbalanced network models exist, so papers rely on ad-hoc modified cases and results are hard to compare. This specification, with its companion data library, provides a **common, openly-licensed model** so approaches can be compared directly, the distribution analogue of transmission-side benchmark libraries such as [pglib](#).

Scope: beyond classical OPF

Although "OPF" names multiple sections of this document, the goal is broader than minimising generation cost. The unifying requirement of the target problems is **an accurate conductor-level representation of an unbalanced network subject to a selectable set of bounds**, i.e., it is not constrained to one single objective. Bounded cost minimisation is a convenient, solver-comparable starting point. With fixed demand and one uniform non-negative price on every real-power injection, minimizing total injection is equivalent to minimizing real losses. It does not make the nonconvex feasible set or optimum unique. The same physics underpins maximum load delivery, conservation voltage reduction, dynamic operating envelopes, and state estimation.

This is why **bounds are optional throughout the data model**: different problems activate different subsets of the feasible region. The specification is a reusable foundation, and not specialised for a single problem class.

Design choices

- **SI units.** All physical quantities in SI (see [Data input formatting](#)), so the data model commits to no per-unit base. Per-unit is a solver-internal convenience, out of scope here.

- **JSON schema.** Parseable from any programming language; key-value structure lets extensions add nested entries without breaking readers. A JSON Schema provides basic structural checks.
- **Real numbers, not complex.** Every complex quantity is a pair of real fields, and the model solves in real variables, for cross-language compatibility (see [Notation](#)).
- **Explicit buses.** Buses are a first-class list with their own terminals and bounds, unlike OpenDSS, where buses are implicit in element connectivity.
- **String identifiers.** Buses, lines, loads, etc. carry unique string IDs, not forced sequential integers (unlike MATPOWER).
- **Wire coordinates.** Quantities are per-conductor ("wire"), not sequence/symmetrical components, keeping the format flexible and extendable to any wire count.

What is modelled

The specification covers the common branch and nodal elements, with these capabilities:

- **Topology:** meshed networks, electrically parallel branches, radial or looped.
- **Conductors:** 1- to 4-wire lines with full mutual coupling; explicit neutral and earth (no Kron reduction); perfect grounding and grounding through impedance.

Amrit

Are we sticking to a maximum of 4 wires, or are we supporting general n-wire lines? Need to decide.

- **Branch elements:** [lines](#), [switches](#), and galvanically-isolated [transformers](#) (single-phase, centre-tap, wye-delta, delta-wye).
- **Nodal elements:** [loads](#) (constant-power and voltage-dependent ZIP/exponential), [generators](#), [shunts](#), [capacitors](#), and [voltage sources](#).
- **Impedance:** line series impedance and shunt admittance given directly, either as a shared linecode or as per-line matrices.

Present limitations

The model deliberately targets features universally required for distribution network OPF, not every possible problem specification. In this version:

- Only a **single voltage source** (one reference bus) is supported.
- **Snapshot** solves: no inter-temporal coupling (no storage state-of-charge dynamics, no OLTC time-domain control).
- Transformer **saturation**, magnetising/core losses, tap-changing, and detailed frequency-dependent effects are not modelled (the turns ratio is fixed by nameplate voltages, see [Transformers](#)); winding-neutral grounding is external to the element, like every other component (see [Grounding](#)).

- The default objective is linear generation/dispatch cost; quadratic cost terms are not included.

Amrit

Adding a quadratic cost term is trivial. Why are we excluding it? For the current cases we could simply include it with the coefficient set to 0.0.

Out of scope

The format is a model for OPF research. It does not aim to replace the Common Information Model (CIM), and it does not prescribe solver software. Its OPF formulation was inspired by [PowerModelsDistribution](#)'s `IVRENPowModel`, but extends it: native JSON data, the full set of element configurations above, and explicit grounding.

Chapter 4

Notation

4.1 Notation

This page defines the notation used throughout the [Model specification](#): the typography that distinguishes variables from parameters and real from complex, the voltage and current symbols and their rectangular realisation, the standard transform matrices, the element-wise idiom used to write magnitude bounds, and the set/topology machinery that links elements to buses.

All quantities are in **SI** units (V, A, Ω , S, W, var, VA, rad).

Typography

A symbol's *typeface* and *colour* encode its type. This lets an equation be read at a glance: whether a quantity is known input data or a solved unknown, and whether it is real or complex.

Symbol	Meaning
x	real scalar variable
$\mathbf{x}$	real vector/matrix variable
x	complex scalar variable
$\mathbf{x}$	complex vector/matrix variable
x	real scalar parameter
$\mathbf{x}$	real vector/matrix parameter
x	complex scalar parameter
$\mathbf{x}$	complex vector/matrix parameter
x	string parameter
$\mathbf{x}$	array of string parameters
$\mathcal{X}$	set

Amrit

$\mathcal{X}$

is double-booked: it is the generic "set" symbol here and the transformer set in the [Sets and indices](#) table below. Pick a different generic symbol.

Operators and accessors:

Symbol	Meaning
$\mathbf{X}^\top$	transpose
$\mathbf{X}^*$	(element-wise) complex conjugate
$\mathbf{X}^H$	conjugate transpose
$\circ$	element-wise (Hadamard) product
j	imaginary unit, $j^2 = -1$
$a \angle b$	polar form $a e^{jb}$
$\Re(\cdot), \Im(\cdot)$	real / imaginary part
$\mathbf{1}, \mathbf{0}$	all-ones / all-zeros vector

Colour in this web rendering

Colour is applied to **symbol and parameter definitions** and to the headline equations, exactly as in the Task Force PDF. In long derivations colour is sometimes dropped for legibility; the type of any symbol is always its type at definition. Nothing about the model depends on colour. It is a reading aid.

Voltage: complex phasor and its rectangular realisation

The primary voltage quantity at bus i is a **complex, stacked per-terminal vector**. For a four-terminal bus with phases a, b, c and neutral n ,

$$\mathbf{U}_i = \begin{bmatrix} U_{i,a} \\ U_{i,b} \\ U_{i,c} \\ U_{i,n} \end{bmatrix} \in \mathbb{C}^{|\mathcal{N}_i|},$$

where $U_{i,p}$ is the voltage of terminal p **to ground** (ground is a single 0 V reference across the network). The stacking order is the bus's declared terminal order (see [Terminal names](#)).

The complex vector decomposes into real components in rectangular or polar form:

$$\mathbf{U}_i = \mathbf{U}_i^{\Re} + j \mathbf{U}_i^{\Im} = \mathbf{U}_i^{\text{mag}} \angle \boldsymbol{\theta}_i,$$

with $\mathbf{U}_i^{\Re}, \mathbf{U}_i^{\Im} \in \mathbb{R}^{|\mathcal{N}_i|}$ the real and imaginary parts (black: real variables), $\mathbf{U}_i^{\text{mag}}$ the magnitude and $\boldsymbol{\theta}_i$ the angle.

Amrit

Bus and line indices are typeset red (i, ℓ) in this section and the next, but black in the sets table. Indices are not parameters; I suggest black everywhere.

The foundational model on each page is written with the **complex** vectors. The implementation solves in the **rectangular real** parts, one variable per part per terminal, so every complex equality becomes a pair of real equalities; this realisation is described in each page's *Implementation* section, not repeated in the physics.

Phase selection. $\mathbf{U}_i[\mathcal{P}]$ selects the phase (non-neutral) sub-vector $[U_{i,a}; U_{i,b}; U_{i,c}]$.

Currents

Complex current vectors follow the same stacking. The **terminal current flowing into element** at its bus is the primary quantity; for a line ℓ from bus i toward bus j it is $\mathbf{I}_{\ell ij}$, and it splits into a series and a shunt part (see [Lines](#)):

$$\mathbf{I}_{\ell ij} = \mathbf{I}_{\ell ij}^s + \mathbf{I}_{\ell ij}^{\text{sh}}.$$

The sign convention throughout is **positive current flows into the bus** at the terminal where it is summed by Kirchhoff's current law (KCL).

Amrit

This sentence is **wrong**. Reading the equations on the bus, line, load and shunt pages, the KCL convention is the opposite: **current leaving the bus into the element is positive**. The line series current flows $i \rightarrow j$ (leaves bus i), the line shunt and shunt-element currents are drawn out of the bus, and the load current with $P^{\text{nom}} > 0$ flows out of the bus; all enter KCL with $+$. The generator current is defined as an injection *into* the bus and is the only term entered with $-$. Rewrite this as: "positive current leaves the bus into the element; generators define their current as an injection and enter KCL negated." The earlier sentence ("terminal current flowing into element") already says this correctly.

Standard transforms and constants

Several fixed matrices recur. With the unit rotation $\alpha = e^{j2\pi/3}$:

Phase-to-neutral (four-terminal bus $\rightarrow$ three phase-to-neutral voltages):

$$\mathbf{M}^Y = \begin{bmatrix} 1 & 0 & 0 & -1 \\ 0 & 1 & 0 & -1 \\ 0 & 0 & 1 & -1 \end{bmatrix}.$$

Phase-to-phase / delta (line-to-line differences of the three phases):

$$\mathbf{M}^\Delta = \begin{bmatrix} 1 & -1 & 0 \\ 0 & 1 & -1 \\ -1 & 0 & 1 \end{bmatrix}.$$

Symmetrical components (Fortescue), mapping three phase quantities to zero/positive/negative sequence:

$$\mathbf{F} = \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & \alpha & \alpha^2 \\ 1 & \alpha^2 & \alpha \end{bmatrix}, \quad \mathbf{U}_i^{\text{sym}} = \begin{bmatrix} U_i^0 \\ U_i^1 \\ U_i^2 \end{bmatrix}.$$

The element-wise bound idiom

Magnitude bounds are written first as a vector inequality on magnitudes, then in an equivalent **smooth (quadratic) form** using the Hadamard product $\circ$ and the conjugate, which is what the solver receives. For a generic complex vector $\mathbf{z}$ with real bound vectors $\mathbf{z}^{\min}, \mathbf{z}^{\max}$:

$$\mathbf{z}^{\min} \leq |\mathbf{z}| \leq \mathbf{z}^{\max} \iff \mathbf{z}^{\min} \circ \mathbf{z}^{\min} \leq \mathbf{z} \circ \mathbf{z}^* \leq \mathbf{z}^{\max} \circ \mathbf{z}^{\max}.$$

The upper (circle) bound is convex; a non-zero lower bound is non-convex. Component k reads $(z_k^{\min})^2 \leq \Re(z_k)^2 + \Im(z_k)^2 \leq (z_k^{\max})^2$.

This is the **engineering-bound** idiom. It is distinct from a **cartesian bound**, which constrains a variable's own real/imaginary components with a box $\underline{x} \leq \Re(z_k) \leq \bar{x}$ (and likewise for $\Im$): a rectangle, not a circle. Both appear in part 5 of each component page and are kept separate.

Amrit

Can we confirm that **every bound is a real number (or a list of reals) and nothing is complex**? All $\cdot^{\min} / \cdot^{\max}$ symbols across the pages are typeset red (real parameter), so the intent seems right, but the only thing that says so is the colour. Reusing the same letter is confusing: $\mathbf{U}_i$ is complex while $\mathbf{U}_i^{\max}$ is a real magnitude vector, and the note above says colour is sometimes dropped in derivations. Suggest stating explicitly here that all bounds are real, and that $\mathbf{z}^{\max}$ bounds the **magnitude** $|\mathbf{z}|$, not the complex quantity.

Sets and indices

Finite sets collect the network's elements; each element is referenced by a unique string ID.

The **element sets** each collect one kind of network element:

Symbol	Represents	Index	Alt. index
$\mathcal{P}$	phases, e.g. $\{a, b, c\}$	p	q
$\mathcal{N}$	terminals (nodes), e.g. $\mathcal{P} \cup \{n\}$	p	q
$\mathcal{F}$	configurations, $\{\text{WYE}, \text{DELTA}, \text{SINGLE_PHASE}\}$	f	
$\mathcal{I}$	buses	i	j
$\mathcal{L}$	lines	ℓ	
$\mathcal{X}$	transformers	x	
$\mathcal{W}$	switches	w	
$\mathcal{S}$	voltage sources	s	
$\mathcal{G}$	generators	g	
$\mathcal{D}$	loads (demand)	d	
$\mathcal{H}$	shunts	h	
$\mathcal{K}$	capacitors	κ	

Amrit

Two index symbols are overloaded on other pages. κ is the capacitor index here but the KCL residual $\kappa_{i,p}^{\Re}$ on the **Objective** page, where it is never defined. s is the source index, the slack current $s_{i,p}$ in the feasibility relaxation, and the superscript in $U_{s,p}^s$ on the **Voltage sources** page. The transformer page also introduces $V_{x,k}^{\sigma}$, σ and b^{σ} that are not defined here.

$$\mathcal{N}_i \subseteq \mathcal{N}$$

denotes the terminals of bus i . (Libraries (linecodes, wire data, line geometries) are referenced by string id, not collected as topological sets.)

From these, **derived sets** capture how elements attach to buses. There are four families: topology, connectivity, terminal mappings, and configurations, summarised in one table at the [end of this section](#); the prose below defines each family, and $\mathcal{T}, \mathcal{C}, \mathcal{M}, \mathcal{R}$ are reserved for them (distinct from the element sets above).

Topology: linking branches to buses

Branch elements (lines, transformers, switches) connect two buses. A **triple index** ℓij names line ℓ oriented from bus i to bus j ; the *forward* topology set and its *reverse* are

$$\ell ij \in \mathcal{T}^{L\rightarrow} \subset \mathcal{L} \times \mathcal{I} \times \mathcal{I}, \quad \mathcal{T}^{L\leftarrow} = \{\ell ji \mid \ell ij \in \mathcal{T}^{L\rightarrow}\}, \quad \mathcal{T}^L = \mathcal{T}^{L\rightarrow} \cup \mathcal{T}^{L\leftarrow}.$$

The triple index allows parallel branches between the same bus pair. Transformer and switch topologies $\mathcal{T}^X, \mathcal{T}^W$ are defined identically, and the **network topology** is their union, $\mathcal{T} = \mathcal{T}^L \cup \mathcal{T}^X \cup \mathcal{T}^W$ (likewise for the forward and reverse senses).

Connectivity: linking nodal elements to buses

Nodal elements attach to a single bus, indexed by (element, bus):

$$di \in \mathcal{C}^D \subset \mathcal{D} \times \mathcal{I}, \quad gi \in \mathcal{C}^G, \quad hi \in \mathcal{C}^H, \quad ri \in \mathcal{C}^V, \quad \kappa i \in \mathcal{C}^K, \quad si \in \mathcal{C}^S.$$

Amrit

$$ri \in \mathcal{C}^V$$

looks like a leftover: sources are indexed by s with set $\mathcal{S}$, and $\mathcal{C}^V$ is not in the overview table below (though $\mathcal{M}^V$ is). Drop the V/r forms.

This model version permits a single voltage source, so the source bus set $\mathcal{I}^{\text{source}} = \{i : si \in \mathcal{C}^S\}$ has $|\mathcal{I}^{\text{source}}| = 1$.

Terminal names and maps

A bus declares an **ordered** list of terminal names $\mathbf{N}_i$ (terminal_names), e.g. ["a", "b", "c", "n"]. Element vectors and matrices stack in this order. Terminal names are strings; common conventions include $\{a, b, c, n\}$, $\{1, 2, 3, n\}$, and IEC $\{L1, L2, L3, N\}$.

Every element carries a **terminal map**, the string array $\mathbf{N}_{\ell i}$ (terminal_map_from), $\mathbf{N}_{\ell j}$ (terminal_map_to) for a line, listing which of its bus's terminals each conductor connects to, so per-phase properties align across the network. As a *set*, a terminal mapping is written $\mathcal{M}^\bullet$: a member dzp of the load mapping $\mathcal{M}^D$ says load d 's conductor at order z maps to bus terminal p ; branch mappings carry an extra bus index (ℓizp).

Amrit

The conductor-order index is z here, but every component page uses k . Pick one.

The **neutral terminal** n of a bus is identified by the bus's declaration (an explicit neutral field, or a terminal named "n"/"N"). If a bus has no neutral, all its terminals are treated as phases.

Configurations

Loads and generators declare a connection **configuration** $f \in \mathcal{F}$ (WYE / DELTA / SINGLE_PHASE). The configuration sets pair each element with its configuration: $df \in \mathcal{R}^D$ for loads, $gf \in \mathcal{R}^G$ for generators.

Grounding

Ground is a single 0 V reference. Terminals listed in a bus's `perfectly_grounded_terminals` form the ground mapping $ip \in \mathcal{M}^0 \subset \mathcal{I} \times \mathcal{N}$ have their voltage fixed to zero. Lines and shunts always carry an implicit ground connection (their shunt admittance is defined to ground). See [Grounding](#) for the full model.

Amrit

The first sentence of this paragraph is broken: "Terminals listed in ... form the ground mapping ... have their voltage fixed to zero" needs splitting into two sentences.

Overview of derived sets

All topology, connectivity, terminal-mapping, and configuration sets, with the tuple that indexes each:

Symbol	Represents	Member tuple
$\mathcal{T}^{L\rightarrow}, \mathcal{T}^{L\leftarrow}, \mathcal{T}^L$	line topology: forward, reverse, combined	ℓij
$\mathcal{T}^{X\rightarrow}, \mathcal{T}^{X\leftarrow}, \mathcal{T}^X$	transformer topology	xij
$\mathcal{T}^{W\rightarrow}, \mathcal{T}^{W\leftarrow}, \mathcal{T}^W$	switch topology	wij
$\mathcal{T}^{\rightarrow}, \mathcal{T}^{\leftarrow}, \mathcal{T}$	network topology (union of the above)	$\cdot ij$
$\mathcal{C}^S$	voltage-source-bus connectivity	si
$\mathcal{C}^G$	generator-bus connectivity	gi
$\mathcal{C}^D$	load-bus connectivity	di
$\mathcal{C}^H$	shunt-bus connectivity	hi
$\mathcal{C}^K$	capacitor-bus connectivity	κi
$\mathcal{I}^{\text{source}}$	source bus set ($ \cdot = 1$)	i
$\mathcal{M}^S, \mathcal{M}^G, \mathcal{M}^D, \mathcal{M}^H, \mathcal{M}^V, \mathcal{M}^K$	nodal terminal mappings	$\cdot z p$
$\mathcal{M}^L, \mathcal{M}^T, \mathcal{M}^W$	branch terminal mappings	$\cdot i z p$
$\mathcal{M}^0$	ground terminal mapping	ip
$\mathcal{R}^D, \mathcal{R}^G$	load / generator configurations	$\cdot f$

Amrit

Branch mappings use $\mathcal{M}^T$ for transformers, but the transformer set is $\mathcal{X}$ and $\mathcal{T}$ is reserved for topology. This should be $\mathcal{M}^X$.

Matrices (e.g. impedance) are stored **row-first** with an underscore delimiter: matrix entry A_{kj} is the field `A_k_j`, 1-indexed. So `R_series_1_2` is the (1, 2) entry of the series-resistance matrix.

A minimal example (bus + line)

Two four-terminal buses $\mathcal{I} = \{A, B\}$ joined by one line $\mathcal{L} = \{\ell\}$ from A to B, each terminal mapped straight through:

$$\mathcal{T}^{L\rightarrow} = \{\ell \text{ A B}\}, \quad \mathbf{N}_A = \mathbf{N}_B = [a, b, c, n], \quad \mathbf{N}_{\ell A} = \mathbf{N}_{\ell B} = [a, b, c, n].$$

If terminal n of bus B is perfectly grounded, $\mathcal{M}^\emptyset = \{B n\}$ and $U_{B,n} = 0$. This is the running example used on the [Buses](#) and [Lines](#) pages.

Chapter 5

Data input formatting

5.1 Data input formatting

This page defines how physical quantities are represented in the JSON data model: units, the encoding of complex numbers and matrices, worked unit-conversion examples, and the meaning of required vs optional fields. It underpins every component page. Symbols are defined in [Notation](#).

Units

All physical quantities are in **SI**, with two deliberate exceptions noted below. The data model carries no unit fields. Units are fixed by the field, per this table.

Quantity	Unit	Symbol
Voltage	volt	V
Current	ampere	A
Length	metre	m
Active power	watt	W
Reactive power	volt-ampere reactive	var
Apparent power	volt-ampere	VA
Conductance, susceptance	siemens	S
Resistance, reactance	ohm	Ω
Angle	radian	rad
Energy cost rate	US dollar per kilowatt-hour	\$/kWh

Non-SI exception. One quantity uses a customary unit for industry familiarity: **energy cost rate** in \$/kWh introduces two non-SI units for industry familiarity: currency(\$, which has no SI equivalent) and time in hours ($1 \text{ kWh} = 3.6 \times 10^6 \text{ J}$, whereas the SI base unit for energy is the Joule).

Per-unit normalisation is a solver-internal convenience and is **out of scope** here. No per-unit quantity appears in the data model.

Complex numbers, vectors, and matrices

JSON has only ordered lists of real numbers, so:

- A **complex** quantity is stored as a **pair of real fields** (rectangular or polar). For example a voltage source is given by `v_magnitude` and `v_angle`; an impedance by `R_series_*` and `X_series_*`. The model uses real variables throughout for the same reason (see [Notation](#)).

- A **matrix** is stored **row-first** with an underscore-delimited, **1-indexed** key: entry A_{kj} is the field `A_k_j`. So `R_series_1_2` is the (1, 2) entry of the series-resistance matrix, and `G_from_2_2` the (2, 2) from-side shunt conductance.
- A **vector** (e.g. `v_min`, `i_max`) is a JSON array, ordered to match the element's terminal map or phase order as stated on each component page.

Amrit

Why are the line resistance and reactance fields capitalised (`R_series_k_j`, `X_series_k_j`) while the transformer ones are lowercase (`r_series_from`, `x_series_to`)? The pattern appears to be that capitalised fields are matrix entries with a `_k_j` suffix (lines, linecodes, shunts) and lowercase fields are scalars or arrays. If that is the intended rule, state it here; otherwise pick one casing.

Conversion examples

Convert conventional power-systems quantities to SI before writing them. To allow exact cross-checks against tools that use other units (e.g. degrees), give constants to **at least 10 significant figures**.

Suggestion: use full floating-point precision where available, so the conversion itself does not introduce rounding error beyond what the source value already carries.

Quantity	Conventional	SI	Example → JSON
Active power	kilowatts (kW)	watts (W)	3 kW → 3000.0 (or 3.0e3)
Angle	degrees	radians	120° → 2.0943951023931953
Reactance	per-unit (on a Z -base)	ohms (Ω)	5 % on a 100 Ω base → 5.0 (Ω) on the winding field

Required and optional fields

Each component has required fields (listed with ✓ on its page) and optional ones. The interpretation of an **absent optional** field depends on its kind:

- **Absent constraint field** ⇒ that constraint is **unbounded**. A missing voltage upper bound means no upper bound is enforced; a missing `i_max` means no thermal limit.
- **Absent parameter field** ⇒ a **null / zero** value. A missing transformer `r_series_from` means that winding resistance is 0 Ω .

Permissible strings and string arrays

Several fields are string-valued. Some are free identifiers; others are restricted to an enumeration or must reference terminals declared elsewhere.

Terminal conventions

Terminal identifiers are **strings**; a component's terminal map carries no ordering semantics beyond the array order. The written form used in specification text is "1", "2", "3", "n", but the following conventions are also commonly used:

Because a label alone does not say which conductor is a phase and which is the neutral, a case may classify roles once for the whole network in an optional `terminal_conventions` block, for example:

Field	Restriction
terminal_names (a bus's conductor names)	Any strings; see the naming conventions below
configuration (load / generator / capacitor)	A nodal configuration string: WYE, DELTA, or SINGLE_PHASE (per element support: generators are WYE only)
model (load)	CONSTANT_POWER, CONSTANT_CURRENT, CONSTANT_IMPEDANCE, ZIP, EXPONENTIAL
perfectly_grounded_terminals	Array; every entry must be one of the bus's terminal_names
terminal_map,	Array; every entry must be one of the target bus's terminal_names
terminal_map_from,	
terminal_map_to	
source (linecode)	Free text (provenance note)

Convention	Phases	Neutral
OpenDSS numeric	"1" "2" "3"	"4" (positional)
Canonical	"1" "2" "3"	"n"
Letter	"a" "b" "c"	"n" / "N"
IEC 60445	"L1" "L2" "L3"	"N"

```
"terminal_conventions": { "phase": ["a", "b", "c"], "neutral": ["n"] }
```

Chapter 6

Grounding

6.1 Grounding

In a four-wire model, the neutral and earth are explicit, and how each element connects to ground determines the return paths for current. This page consolidates the grounding model that the component pages apply locally. Symbols are defined in [Notation](#).

Ground as a common reference

Ground is a single 0 V reference, a "copper plate" shared across the entire network. It is not a per-element node: elements connect to a **bus terminal**, and that terminal may (or may not) connect to ground. Because ground is a common reference, no separate ground node is indexed in element matrices, and the terminal name "g" is reserved for the common ground across all elements.

Two ways a terminal reaches ground

- **Perfect grounding**: a bus terminal listed in `perfectly_grounded_terminals` is pinned to the reference, $U_{i,p} = 0$. Current can still flow into earth there: a free earth-injection current balances the terminal's KCL (see [Buses](#)). This is a **bus property**.
- **Grounding through an impedance**: modelled as a [shunt](#) (or capacitor) between the terminal and ground, e.g. a single-entry admittance $Y_{h,nn}$ on the neutral grounds it through $1/Y_{h,nn}$.

An **ungrounded** terminal has neither; its voltage floats, determined by the network equations. A bus whose terminals are all ungrounded needs no grounding data.

Which elements connect to ground

The "always" elements (lines, shunts, voltage sources) carry an implicit ground connection and need no grounding declaration. The only element that *optionally* declares grounding is the **bus**. Everything else routes through a bus terminal or is intrinsic to the element.

In the mathematical model

Perfect grounding contributes the equality $U_{i,p} = 0$ for every $ip \in \mathcal{M}^0$ (the ground map) and a free earth current so KCL still balances. Impedance grounding contributes a linear admittance current $Y U$ to KCL, exactly like any [shunt](#). No grounding scheme reduces the conductor matrices. Neutrals and earth conductors stay explicit, which is what makes this a genuinely four-wire formulation.

Element	Connection to ground	Note
Load	never	Grounding is a bus property or a shunt
Generator	never	Grounding is a bus property or a shunt
Capacitor	never	Grounding is a bus property or a shunt
Trans-former	never	Grounding is a bus property or a shunt
Switch	never	Switches are not grounded
Bus terminal	optional	perfectly_grounded_terminals for perfect grounding; a shunt for impedance grounding
Line	always (implicit)	A non-zero shunt admittance passes current to ground
Shunt	always (implicit)	The admittance is defined between terminals and ground
Voltage source	always	Source voltages are defined line-to-ground

Chapter 7

Worked example

7.1 A worked network example

The [Notation](#) page defines the sets, topology, connectivity, and terminal-map machinery abstractly. This page makes them concrete by constructing every set from one small network, the fastest way to internalise how a case is assembled.

The network has four buses $\{A, B, C, D\}$ joined by a line, a transformer, and a switch, feeding single- and three-phase loads, a single-phase generator, a neutral-grounding shunt, and a voltage source, with a mix of grounded and ungrounded terminals. The circled numbers on the figure are element IDs.

Element sets

The branch and nodal elements (see the [classification](#) into branch vs nodal):

$$\begin{aligned} \mathcal{I} &= \{A, B, C, D\}, & \mathcal{L} &= \{2\}, & \mathcal{W} &= \{9\}, & \mathcal{X} &= \{6\}, \\ \mathcal{D} &= \{1, 5, 7\}, & \mathcal{G} &= \{3\}, & \mathcal{H} &= \{4\}, & \mathcal{S} &= \{8\}. \end{aligned}$$

Topology (branches $\rightarrow$ buses)

The forward topology orients each branch from its from bus to its to bus:

$$\mathcal{T}^{L \rightarrow} = \{2 \text{ A B}\}, \quad \mathcal{T}^{X \rightarrow} = \{6 \text{ C B}\}, \quad \mathcal{T}^{W \rightarrow} = \{9 \text{ C D}\}.$$

The combined line topology adds the reverse orientation, $\mathcal{T}^L = \{2 \text{ A B}, 2 \text{ B A}\}$, and likewise for the transformer and switch.

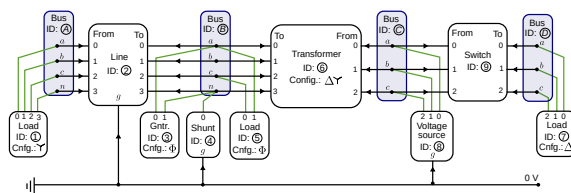


Figure 7.1: Example four-bus network with single- and three-phase elements.

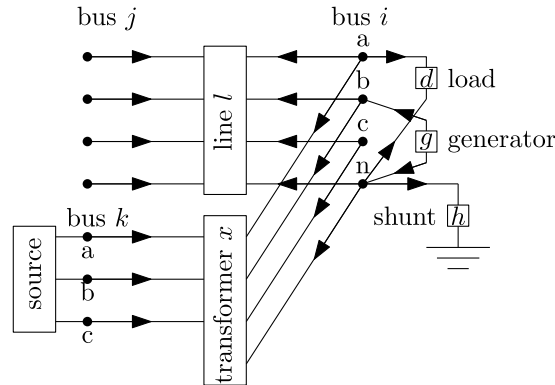


Figure 7.2: Terminal maps align an element's conductors to bus terminals.

Connectivity (nodal elements → buses)

$$\mathcal{C}^D = \{1 \text{ A}, 5 \text{ B}, 7 \text{ D}\}, \quad \mathcal{C}^G = \{3 \text{ B}\}, \quad \mathcal{C}^H = \{4 \text{ B}\}, \quad \mathcal{C}^S = \{8 \text{ C}\}.$$

The single voltage source fixes $|\mathcal{I}^{\text{source}}| = 1$ (bus C is the reference).

Terminal maps

Each element lists which bus terminals its conductors connect to, in order. As stored in the data model (terminal_map, or terminal_map_from/_to for branches):

Element	Map	Notes
Load 1 (bus A)	["a", "b", "c", "n"]	three-phase wye
Load 5 (bus B)	["c", "a"]	single-phase, across c-a
Load 7 (bus D)	["a", "b", "c"]	delta
Generator 3 (bus B)	["a", "n"]	single-phase
Shunt 4 (bus B)	["n"]	neutral grounding
Source 8 (bus C)	["a", "b", "c"]	
Line 2	from ["a", "b", "c", "n"], to ["a", "b", "c", "n"]	four-wire
Transformer 6	from ["a", "b", "c", "n"] (C, wye), to ["a", "b", "c"] (B, delta)	ΔY
Switch 9	from ["a", "b", "c"], to ["a", "b", "c"]	

Configurations

The nodal-element connection configurations:

$$\mathcal{R}^D = \{1: \text{WYE}, 5: \text{SINGLE_PHASE}, 7: \text{DELTA}\}, \quad \mathcal{R}^G = \{3: \text{SINGLE_PHASE}\}.$$

Grounding

Buses declare which terminals are perfectly grounded. In this network the source bus neutral and any explicitly-earthed terminals are pinned to 0 V (bus property), while the shunt at bus B grounds the neutral through

an impedance. See [Grounding](#) for the full model; the line and shunt additionally carry the implicit ground connection of their shunt admittances.

From these sets, the [component pages](#) instantiate the variables and constraints: a voltage vector per bus terminal, series currents on the line and transformer windings, load/generator/source currents, and one KCL equation per terminal tying them together.

Chapter 8

Document metadata

8.1 Document metadata

Every case may carry a top-level meta object providing provenance, licensing, and versioning. It is optional for backward compatibility.

Suggestion: populate the meta object where possible. Provenance, licensing, and versioning information helps downstream consumers of the dataset.

This is a *data-model* page: meta carries no OPF variables or constraints. Symbols are defined in [Notation](#).

The meta object

Field	Type	Description
\$schema	string (URI)	\$id of the JSON Schema document this file was validated against, released from dsopf-schema
version	string	Version of this dataset (not the schema)
title	string	Human-readable dataset name (distinct from the machine-readable root name)
description	string	Free-text notes or caveats
created	string (ISO 8601)	Creation timestamp, UTC
modified	string (ISO 8601)	Last-revision timestamp, UTC
license	string	SPDX identifier (e.g. CC-BY-4.0) or an https:// URI to the licence
frequency	number (Hz)	Nominal system frequency, check-only (validated against line_geometry/linecode derivation frequency; never rescales)
authors	object[]	Ordered authors (see below)
data_sources	object[]	Upstream data references (see below)
case_study_generator	object	Tool that wrote the file (see below)
provenance	object	Free-form conversion/audit notes written by tooling

authors[]: name, email, orcid (bare hyphenated form XXXX-XXXX-XXXX-XXXX, without the https://orcid.org/ prefix).

data_sources[]: name, url (dereferenceable https://), format (e.g. OpenDSS, PMD-JSON, MATPOWER), doi, version.

case_study_generator: tool, version.

Conformance notes

- `$schema` follows the JSON Schema `$schema` keyword convention; it should be a versioned, dereferenceable URI (a floating reference to `main` is acceptable in draft). The canonical schema documents live in the `dsopt-schema` repository, one immutable directory per version, so the URI has the form `https://raw.githubusercontent.com/distribution-system-opt/dsopt-schema/main/schema/bmopf/<version>/bmopf.json`. A reader selects the schema version from this field. The value in the example below stays a placeholder until a schema version is released from that repository.
- Dates must be UTC and should include a time component (THH:MM:SSZ); a date-only value is permitted when the time is unknown.
- `license` should be a URI when the licence needs specific attribution language beyond an SPDX identifier.
- Unknown fields may be present; conformant readers must ignore them.
- `frequency` is a consistency check only. It never defaults or rescales any quantity.

Example

```
{
  "name": "enwl_network1_feeder1",
  "meta": {
    "$schema": "https://example.org/bmopf/schema/v1/bmopf.json",
    "version": "1.0",
    "title": "ENWL LV Network 1, Feeder 1",
    "description": "Four-wire 230/400 V LV feeder from the ENWL LVNS dataset.",
    "created": "2026-06-15T10:00:00Z",
    "license": "https://creativecommons.org/licenses/by/4.0/",
    "frequency": 50.0,
    "authors": [
      { "name": "A. Researcher", "email": "a@example.org", "orcid": "0000-0001-9534-2265" }
    ],
    "data_sources": [
      { "name": "ENWL LVNS dataset", "url": "https://www.enwl.co.uk/lvns", "format": "OpenDSS" }
    ],
    "case_study_generator": { "tool": "example-writer", "version": "0.1.0" }
  },
  "bus": { "...": {} },
  "line": { "...": {} }
}
```

Part III

Components

Chapter 9

Buses

9.1 Buses

A **bus** is a set of electrical terminals sharing a location. The network's voltage variables are defined per bus, and it is here that Kirchhoff's current law is enforced. Parts 1–5 state the foundational (physics) model. Symbols are defined in [Notation](#).

1. Data model

A bus is an entry of the top-level bus object, keyed by its string ID i .

Field	Type	Unit	Req.	Description
terminal_names	string[]	-	✓	Ordered terminal names $\mathbf{N}_i$
perfectly_grounded_terminals	string[]	-		Terminals fixed to 0 V
v_min, v_max	number[]	V		Phase-to-ground magnitude bounds, one per phase terminal
vn_max	number	V		Neutral-to-ground magnitude cap
vpn_min, vpn_max	number[]	V		Phase-to-neutral magnitude bounds, one per phase
vpp_min, vpp_max	number[]	V		Phase-to-phase magnitude bounds, one per phase pair
vpos_min, vpos_max	number	V		Positive-sequence magnitude bounds (three-phase buses)
vneg_max	number	V		Negative-sequence magnitude cap (lower bound is always 0)
vzero_max	number	V		Zero-sequence magnitude cap (lower bound is always 0)

All bound fields are optional: an absent bound means the corresponding limit is not enforced.

2. Input symbols

3. Variables

Each terminal $p \in \mathcal{N}_i$ has a complex voltage-to-ground $U_{i,p}$, stacked into the bus voltage vector

$$\mathbf{U}_i = [U_{i,p}]_{p \in \mathcal{N}_i} \in \mathbb{C}^{|\mathcal{N}_i|}.$$

Field	Symbol	Notes
terminal_names	$\mathbf{N}_i$	stacking order for all bus vectors
v_min, v_max	$U_i^{\min}, U_i^{\max}$	per phase, to ground
vn_max	$U_{i,n}^{\max}$	scalar, neutral to ground
vpn_min, vpn_max	$U_i^{Y,\min}, U_i^{Y,\max}$	per phase, to neutral
vpp_min, vpp_max	$U_i^{\Delta,\min}, U_i^{\Delta,\max}$	per phase pair
vpos_min, vpos_max	$U_i^{1,\min}, U_i^{1,\max}$	positive-sequence magnitude
vneg_max, vzero_max	$U_i^{2,\max}, U_i^{0,\max}$	negative-/zero-sequence caps (lower bound 0)

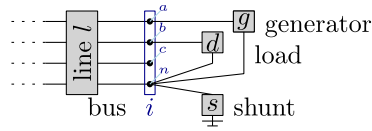


Figure 9.1: Kirchhoff's current law at a bus terminal: the signed currents of all incident elements sum to zero.

Ground is the common 0 V reference, so these are the only quantities needed to describe the bus's electrical state.

4. Equality constraints

Perfect grounding

A perfectly grounded terminal is pinned to the ground reference:

$$U_{i,p} = 0 \quad \forall ip \in \mathcal{M}^\emptyset.$$

Voltage source (reference bus)

The voltage source s at bus i fixes its phase terminals to the reference magnitude/angle and its neutral to ground:

$$U_{i,p} = U_{i,p}^s = |U_{i,p}^s| \angle \theta_{i,p}^s, \quad U_{i,n} = 0.$$

The source also injects a free slack current into KCL, making this the power-flow reference bus (detailed on the future *Voltage sources* page).

Kirchhoff's current law

At each terminal, the currents of all incident elements sum to zero (sign convention: out of the bus is positive on the equation left hand side):

Amrit

"Into the bus positive" contradicts the equation below it. Every $+$ term (lines, transformers, switches, loads, shunts) is a current **leaving** the bus into the element, and the generator current, defined on its page as an injection into the bus, is the one term with a $-$. So the convention actually used is **leaving the bus positive**. Fix the wording here and on the [Notation](#) page so both match the equation.

$$\underbrace{\sum_{\ell ij \in \mathcal{T}^L} \mathbf{I}_{\ell ij}}_{\text{lines}} + \underbrace{\sum_{xij \in \mathcal{T}^X} \mathbf{I}_{xij}}_{\text{transformers}} + \underbrace{\sum_{w ij \in \mathcal{T}^W} \mathbf{I}_{w ij}}_{\text{switches}} + \underbrace{\sum_{di \in \mathcal{C}^D} \mathbf{I}_d}_{\text{loads}} + \underbrace{\sum_{hi \in \mathcal{C}^H} \mathbf{I}_h}_{\text{shunts}} + \underbrace{\sum_{\kappa i \in \mathcal{C}^K} \mathbf{I}_{\kappa}}_{\text{capacitors}} - \underbrace{\sum_{gi \in \mathcal{C}^G} \mathbf{I}_g}_{\text{generators}} - \underbrace{\mathbf{I}_s}_{\text{voltage source}} = \mathbf{0}.$$

This holds at every terminal except for grounded terminals (for which the balancing current is a free variable rather than a constraint). Note that the current at the voltage source is otherwise unconstrained, and so the bus connected to the voltage source acts as a slack bus for the whole system being modelled.

5. Inequality constraints

Cartesian variable bounds

None. The physics places no box on the rectangular components of $\mathbf{U}_i$; voltage is constrained only by the engineering bounds below and by grounding/source fixing. A box on the real/imaginary parts would impose an axis-aligned magnitude-and-angle limit with no operational meaning.

Engineering bounds

Applied at ungrounded, non-source phase terminals (the neutral is excluded from phase bounds: its voltage is set by physics, not operational limits).

Phase-to-ground magnitude. With $U_{i,n}^{\min} = 0$ and the neutral's upper bound supplied by vn_max:

$$U_{i,n}^{\min} \circ U_{i,n}^{\min} \leq U_i \circ U_i^* \leq U_{i,n}^{\max} \circ U_{i,n}^{\max}.$$

Neutral-to-ground cap (vn_max, only when the neutral floats):

$$|U_{i,n}| \leq U_{i,n}^{\max} \iff U_{i,n} U_{i,n}^* \leq (U_{i,n}^{\max})^2.$$

Phase-to-neutral magnitude. With $\mathbf{U}_i^Y = \mathbf{M}^Y \mathbf{U}_i$ (or $\mathbf{U}_i[\mathcal{P}]$ when the neutral is grounded):

$$U_{i,n}^{Y,\min} \circ U_{i,n}^{Y,\min} \leq \mathbf{U}_i^Y \circ (\mathbf{U}_i^Y)^* \leq U_{i,n}^{Y,\max} \circ U_{i,n}^{Y,\max}.$$

Phase-to-phase magnitude. With $\mathbf{U}_i^\Delta = \mathbf{M}^\Delta \mathbf{U}_i[\mathcal{P}]$:

$$U_{i,n}^{\Delta,\min} \circ U_{i,n}^{\Delta,\min} \leq \mathbf{U}_i^\Delta \circ (\mathbf{U}_i^\Delta)^* \leq U_{i,n}^{\Delta,\max} \circ U_{i,n}^{\Delta,\max}.$$

Symmetrical-component magnitudes (three-phase buses). The sequence voltages use phase-to-neutral inputs when a neutral floats, phase-to-ground otherwise:

$$\mathbf{U}_i^{\text{sym}} = \mathbf{F} \mathbf{U}_i^Y = \begin{bmatrix} U_i^0 \\ U_i^1 \\ U_i^2 \end{bmatrix}, \quad \begin{aligned} (U_i^{1,\min})^2 &\leq U_i^1 (U_i^1)^* \leq (U_i^{1,\max})^2, \\ U_i^2 (U_i^2)^* &\leq (U_i^{2,\max})^2, \quad U_i^0 (U_i^0)^* \leq (U_i^{0,\max})^2. \end{aligned}$$

Only the positive sequence carries a lower bound.

Intra-bus angle difference. For each phase pair (p, q) , with a nominal offset $\Delta = \theta_{i,q}^{\text{nom}} - \theta_{i,p}^{\text{nom}}$ and $z = U_{i,p}^* U_{i,q} e^{-j\Delta} = c + js$:

$$\tan(\theta_i^{\Delta, \min}) c \leq s \leq \tan(\theta_i^{\Delta, \max}) c,$$

which bounds the angle between the two terminals (faithful while $c > 0$, i.e. the centred deviation stays within $\pm\pi/2$).

Amrit

The three parameters this constraint needs, $\theta_i^{\Delta, \min}$, $\theta_i^{\Delta, \max}$ and the nominal offsets $\theta_{i,p}^{\text{nom}}$, have **no data field**. They appear in neither the §1 data model table nor the §2 input symbols table on this page, and no angle field exists on any other page except the source's `v_angle`. Either add fields (e.g. `theta_min`, `theta_max` in rad, plus a rule for where θ^{nom} comes from: a `theta_nom` array, or the balanced default $0, -2\pi/3, +2\pi/3$), or drop the constraint. The [model summary](#) and the [Objective](#) page both list "angle limits" as part of the model, so today they promise something the data cannot supply.

Chapter 10

Lines

10.1 Lines

A **line** is a multi-conductor power cable or overhead line, modelled as a nominal Π equivalent: a series impedance with a shunt admittance half-section at each end. Parts 1–5 state the foundational (physics) model. Symbols are defined in [Notation](#).

1. Data model

A line is an entry of the top-level line object, keyed by its string ID ℓ . It carries **exactly one impedance source**: either a referenced linecode (per-metre matrices scaled by length) or inline absolute matrices.

The oneOf schema rule requires **either** linecode + length **or** at least R_series_1_1 + X_series_1_1 inline (and then *no* linecode).

Linecode

A linecode c stores **per-metre** matrices shared across lines of the same type.

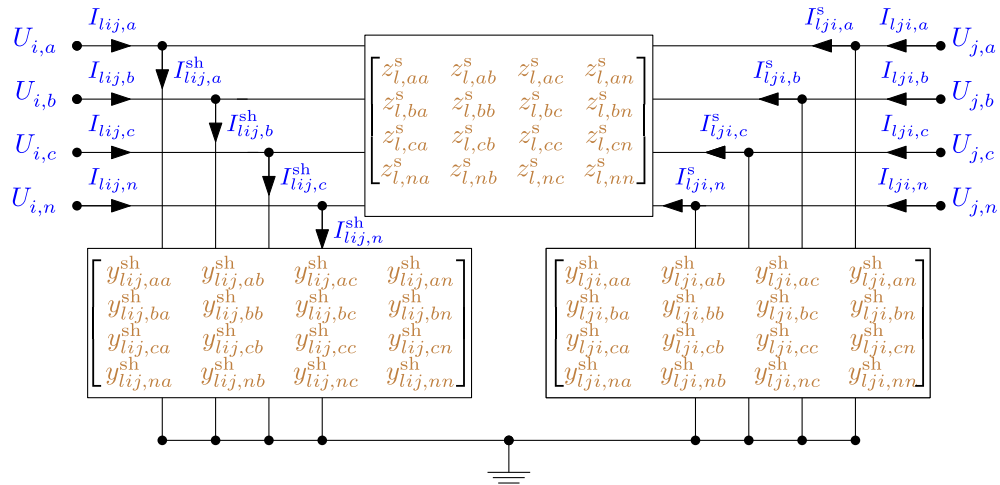


Figure 10.1: Four-wire nominal Π -model of a line: a series impedance with a shunt admittance half-section at each end, both referenced to ground.

Field	Type	Unit	Req.	Description
bus_from, bus_to	string	-	✓	Endpoint bus IDs i, j
terminal_map_from	string[]	-	✓	Conductor→terminal map at bus_from, $\mathbf{N}_{\ell i}$
terminal_map_to	string[]	-	✓	Conductor→terminal map at bus_to, $\mathbf{N}_{\ell j}$
linecode	string	-	(one-of)	Linecode ID (per-metre matrices)
length	num-ber	m	(with linecode)	Line length L_ℓ
R_series_p_q,	num-ber	Ω	(one-of)	Inline absolute series impedance entries
X_series_p_q	ber			
G_from_p_q,	num-ber	S		Inline from-side shunt admittance entries
B_from_p_q	ber			
G_to_p_q, B_to_p_q	num-ber	S		Inline to-side shunt admittance entries
i_max	num-ber[]	A		Per-conductor current-magnitude limit (overrides linecode)
s_max	num-ber[]	VA		Per-conductor apparent-power limit (overrides linecode)

Field	Type	Unit	Req.	Description
R_series_p_q,	num-ber	Ω/m	✓	Per-metre series impedance $\Re, \Im(\mathbf{Z}_c^s)$
X_series_p_q	ber			
G_from_p_q,	num-ber	S/m		Per-metre shunt conductance
G_to_p_q	ber			
B_from_p_q,	num-ber	S/m		Per-metre shunt susceptance
B_to_p_q	ber			
i_max	num-ber[]	A		Per-conductor current limit $\mathbf{I}_c^{\max}$
s_max	num-ber[]	VA		Per-conductor apparent-power limit
source	string	-		Free-text provenance note for the impedance/admittance matrices (e.g. fem, datasheet, import); descriptive metadata only, no effect on the electrical model

2. Input symbols

Field	Symbol	Notes
linecode R_series, X_series	$\mathbf{Z}_c^s = \mathbf{R} + j\mathbf{X}$	Ω/m matrix
linecode G/B_from, G/B_to	$\mathbf{Y}_c^{\text{sh}} = \mathbf{G} + j\mathbf{B}$	S/m matrix
length	L_ℓ	metres
line R_series/X_series, G/B_*	$\mathbf{Z}_\ell^s, \mathbf{Y}_{\ell ij}^{\text{sh}}, \mathbf{Y}_{\ell ji}^{\text{sh}}$	Ω, S (absolute)
i_max	$\mathbf{I}_{\ell ij}^{\max}$	per conductor
s_max	$\mathbf{S}_{\ell ij}^{\max}$	per conductor

Parameter construction

The line's series impedance and shunt admittances come from **one** source:

$$\text{linecode: } \mathbf{Z}_\ell^s = \mathbf{Z}_c^s L_\ell, \quad \mathbf{Y}_{\ell ij}^{\text{sh}} = \mathbf{Y}_{\ell ji}^{\text{sh}} = \frac{1}{2} \mathbf{Y}_c^{\text{sh}} L_\ell;$$

or the inline absolute matrices are used directly (never scaled by length). Inline data permits **independent** from- and to-side shunts $\mathbf{Y}_{\ell ij}^{\text{sh}} \neq \mathbf{Y}_{\ell ji}^{\text{sh}}$.

3. Variables

A line has $n_\ell = |\mathbf{N}_{\ell i}|$ conductors. The **series current** flowing from i toward j is the independent unknown:

$$\mathbf{I}_{\ell ij}^s \in \mathbb{C}^{n_\ell}.$$

The **terminal current** $\mathbf{I}_{\ell ij}$ (what enters the bus's KCL) and the **shunt current** $\mathbf{I}_{\ell ij}^{\text{sh}}$ are the other line currents; the equalities of part 4 relate them to $\mathbf{I}_{\ell ij}^s$ and the bus voltages.

4. Equality constraints

Ohm's law (series voltage drop)

Across the series impedance, for the forward orientation ℓij :

$$\mathbf{U}_j[\mathbf{N}_{\ell j}] = \mathbf{U}_i[\mathbf{N}_{\ell i}] - \mathbf{Z}_\ell^s \mathbf{I}_{\ell ij}^s.$$

The impedance matrix is full: off-diagonal entries couple the voltage drop on one conductor to the current in another.

Shunt currents

Each Π half-section draws a current set by its admittance and the local bus voltage:

$$\mathbf{I}_{\ell ij}^{\text{sh}} = \mathbf{Y}_{\ell ij}^{\text{sh}} \mathbf{U}_i, \quad \mathbf{I}_{\ell ji}^{\text{sh}} = \mathbf{Y}_{\ell ji}^{\text{sh}} \mathbf{U}_j.$$

Terminal current and series-current conservation

The current entering the line at each bus is the series current plus that end's shunt current, and the two directional series currents are equal and opposite:

$$\mathbf{I}_{\ell ij} = \mathbf{I}_{\ell ij}^s + \mathbf{I}_{\ell ij}^{\text{sh}}, \quad \mathbf{I}_{\ell ji} = \mathbf{I}_{\ell ji}^s + \mathbf{I}_{\ell ji}^{\text{sh}}, \quad \mathbf{I}_{\ell ij}^s + \mathbf{I}_{\ell ji}^s = \mathbf{0}.$$

The terminal currents $\mathbf{I}_{\ell ij}, \mathbf{I}_{\ell ji}$ are the contributions this line makes to KCL at buses i and j (see [Buses §4](#)).

5. Inequality constraints

Engineering bounds

Thermal current limit on the **terminal current**, at both ends, for all conductors including neutral:

$$\mathbf{I}_{\ell ij} \circ (\mathbf{I}_{\ell ij})^* \leq \mathbf{I}_{\ell ij}^{\max} \circ \mathbf{I}_{\ell ij}^{\max}, \quad \mathbf{I}_{\ell ji} \circ (\mathbf{I}_{\ell ji})^* \leq \mathbf{I}_{\ell ij}^{\max} \circ \mathbf{I}_{\ell ij}^{\max}.$$

Apparent-power limit (optional, from $s_{\max}$), with the terminal power $\mathbf{S}_{\ell ij} = \mathbf{U}_i \circ (\mathbf{I}_{\ell ij})^*$:

$$\mathbf{S}_{\ell ij} \circ (\mathbf{S}_{\ell ij})^* \leq \mathbf{S}_{\ell ij}^{\max} \circ \mathbf{S}_{\ell ij}^{\max}.$$

Cartesian variable bounds

A **box** may be placed on the series-current variable $\mathbf{I}_{\ell ij}^s$. (This is a solver-conditioning aid implied by the engineering bound.) Because the engineering limit constrains the *total* (terminal) current, the box on the series part is the limit inflated by the worst-case shunt contribution ρ_k on that row:

$$|\Re(\mathbf{I}_{\ell ij,k}^s)| \leq \mathbf{I}_{\ell ij,k}^{\max} + \rho_k, \quad |\Im(\mathbf{I}_{\ell ij,k}^s)| \leq \mathbf{I}_{\ell ij,k}^{\max} + \rho_k,$$

with $\rho_k \leq \sum_{j'} |Y_{\ell ij,kj'}^{\text{sh}}| \mathbf{U}_{i,j'}^{\max}$ from the endpoint voltage caps.

Chapter 11

Switches

11.1 Switches

A **switch** is an ideal, lossless branch connecting two buses conductor-for-conductor. When *closed* it short-circuits its terminals; when *open* it carries no current. Symbols are defined in [Notation](#).

1. Data model

A switch is an entry of the top-level switch object, keyed by its string ID w .

Field	Type	Unit	Req.	Description
bus_from, bus_to	string	-	✓	Endpoint bus IDs i, j
terminal_map_from	string[]	-	✓	Conductor→terminal map at bus_from
terminal_map_to	string[]	-	✓	Conductor→terminal map at bus_to
open_switch	bool	-	✓	true = open (no current), false = closed
i_max	number[]	A		Per-conductor current-magnitude limit

2. Input symbols

Field	Symbol	Notes
open_switch	state $\in \{\text{open}, \text{closed}\}$	selects which equality applies
i_max	$\mathbf{I}_{wij}^{\max}$	per conductor

3. Variables

A switch has n_w conductors and one complex current per conductor, flowing from i toward j :

$$\mathbf{I}_{wij} \in \mathbb{C}^{n_w}.$$

The reverse current $\mathbf{I}_{wji}$ is its negative.

4. Equality constraints

Closed switch: zero voltage drop

A closed switch equates the two ends conductor-by-conductor:

$$\mathbf{U}_i[\mathbf{N}_{wi}] = \mathbf{U}_j[\mathbf{N}_{wj}].$$

Open switch: zero current

An open switch carries no current and imposes no voltage coupling (the two buses are electrically disconnected at these conductors):

$$\mathbf{I}_{wij} = \mathbf{0}.$$

Current conservation and KCL

In both states the current is conserved, and enters each bus's KCL with opposite sign:

$$\mathbf{I}_{wji} = -\mathbf{I}_{wij}.$$

5. Inequality constraints

Cartesian variable bounds

When a current limit is present, a **box** is placed on the switch-current variable components, $|\Re(\mathbf{I}_{wij,k})|, |\Im(\mathbf{I}_{wij,k})| \leq \mathbf{I}_{wij,k}^{\max}$, to bound the search. It is implied by the engineering limit below.

Engineering bounds

Thermal current limit (a switch has no shunt, so both ends carry equal magnitude; one constraint suffices):

$$\mathbf{I}_{wij} \circ (\mathbf{I}_{wij})^* \leq \mathbf{I}_{wij}^{\max} \circ \mathbf{I}_{wij}^{\max}.$$

Chapter 12

Loads

12.1 Loads

A **load** draws a specified power at a bus. Its power may be constant, or vary with voltage (ZIP / exponential). Three connection configurations are supported: single-phase, wye (with neutral return), and delta. Symbols are defined in [Notation](#).

1. Data model

A load is an entry of the top-level load object, keyed by its string ID d .

Field	Type	Unit	Req.	Description
bus	string	-	✓	Host bus ID i
terminal_map	string[]	-	✓	Conductor→terminal map $\mathbf{N}_d$
configuration	string	-	✓	WYE, SINGLE_PHASE, or DELTA
p_nom, q_nom	number[]	W, var	✓	Nominal per-sub-load active/reactive power
model	string	-		CONSTANT_POWER (default), CONSTANT_CURRENT, CONSTANT_IMPEDANCE, ZIP, EXPONENTIAL
v_nom	number[]	V	(zip/exp)	Nominal voltage at which p_nom/q_nom hold
alpha_z, alpha_i, alpha_p	number[]	-	(zip)	Active ZIP fractions ($\alpha_Z + \alpha_I + \alpha_P = 1$)
beta_z, beta_i, beta_p	number[]	-	(zip)	Reactive ZIP fractions
gamma_p, gamma_q	number[]	-	(exp)	Active/reactive voltage exponents

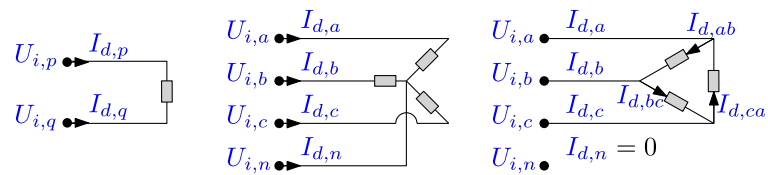


Figure 12.1: Single-phase (left), wye (centre), and delta (right) load connections and their current variables.

2. Input symbols

Field	Symbol	Notes
p_nom, q_nom	$P_d^{\text{nom}}, Q_d^{\text{nom}}$	per sub-load
v_nom	V_d^{nom}	reference voltage
ZIP fractions	$\alpha_Z, \alpha_I, \alpha_P, \beta_Z, \beta_I, \beta_P$	
exponents	γ_P, γ_Q	

A **sub-load** k is one two-terminal power element of the load: a phase-to-neutral branch (WYE), the single terminal pair (SINGLE_PHASE), or one line-to-line branch (DELTA).

3. Variables

Each sub-load k draws a complex current $I_{d,k}$, stacked into $\mathbf{I}_d$. These are the currents the load contributes to KCL; the neutral return current is not an independent variable.

4. Equality constraints

Sub-load voltage drop and power

Let $\Delta U_{d,k}$ be the voltage across sub-load k : phase-to-neutral for WYE, the terminal-pair difference for SINGLE_PHASE, line-to-line for DELTA. The complex power the sub-load absorbs is

$$S_{d,k} = \Delta U_{d,k} (I_{d,k})^* = P_{d,k} + j Q_{d,k}.$$

Constant power (default) pins it to the nominal setpoint:

$$P_{d,k} = P_{d,k}^{\text{nom}}, \quad Q_{d,k} = Q_{d,k}^{\text{nom}}.$$

Voltage-dependent (ZIP) scales the setpoint by impedance/current/power fractions of the voltage-magnitude ratio $|\Delta U_{d,k}|/V_{d,k}^{\text{nom}}$:

$$P_{d,k} = P_{d,k}^{\text{nom}} \left(\alpha_Z \frac{|\Delta U_{d,k}|^2}{(V_{d,k}^{\text{nom}})^2} + \alpha_I \frac{|\Delta U_{d,k}|}{V_{d,k}^{\text{nom}}} + \alpha_P \right),$$

$$Q_{d,k} = Q_{d,k}^{\text{nom}} \left(\beta_Z \frac{|\Delta U_{d,k}|^2}{(V_{d,k}^{\text{nom}})^2} + \beta_I \frac{|\Delta U_{d,k}|}{V_{d,k}^{\text{nom}}} + \beta_P \right).$$

Exponential uses a power law $P_{d,k} = P_{d,k}^{\text{nom}} (|\Delta U_{d,k}|/V_{d,k}^{\text{nom}})^{\gamma_P}$ (and likewise Q with γ_Q). Constant-impedance, constant-current and constant-power are the special cases $\alpha = (1, 0, 0), (0, 1, 0), (0, 0, 1)$ and integer exponents $\gamma \in \{2, 1, 0\}$.

Current conservation

The sub-load currents sum to zero over the load's terminals (the neutral / return carries $-\sum_k I_{d,k}$), giving the KCL contribution at each host terminal.

5. Inequality constraints

None (foundational). A load has no rating bounds in this model. It is a fixed or voltage-dependent power sink.

Chapter 13

Generators

13.1 Generators

A **generator** injects a *dispatchable* power at a bus: active and reactive power lie within bounds rather than being fixed (a fixed injection is modelled as a negative load). Symbols are defined in [Notation](#).

1. Data model

A generator is an entry of the top-level generator object, keyed by its string ID g .

Field	Type	Unit	Req.	Description
bus	string	-	✓	Host bus ID i
terminal_map	string[]	-	✓	Conductor→terminal map $\mathbf{N}_g$
configuration	string	-	✓	WYE (only supported configuration)
p_min, p_max	num-ber[]	W		Per-phase active-power bounds
q_min, q_max	num-ber[]	var		Per-phase reactive-power bounds
s_max	num-ber[]	VA		Per-phase apparent-power rating
i_max	num-ber[]	A		Per-conductor current-magnitude limit (incl. optional neutral entry)
energy_cost_rate	num-ber[]	\$/kWh	✓	Per-phase linear generation cost

Only the WYE configuration is supported for generators.

2. Input symbols

Field	Symbol	Notes
p_min, p_max	$P_g^{\min}, P_g^{\max}$	per phase
q_min, q_max	$Q_g^{\min}, Q_g^{\max}$	per phase
s_max	$S_g^{\max}$	per phase
i_max	$I_g^{\max}$	per conductor (last entry may bound the neutral return)
energy_cost_rate	c_g	per phase

3. Variables

Each phase conductor k injects a complex current $I_{g,k}$ (the current sent to the bus, opposite sign to a load), stacked into $\mathbf{I}_g$. The neutral return is implicit in KCL.

4. Equality constraints

With $\Delta U_{g,k}$ the sub-generator voltage (phase-to-neutral for the WYE configuration), the injected complex power is

$$S_{g,k} = \Delta U_{g,k} (I_{g,k})^* = P_{g,k} + j Q_{g,k}.$$

Current conservation over the generator's terminals gives its KCL contribution (injection positive at the phase terminal, return at the neutral).

Amrit

"Injection positive" is true from the generator's side, but at the bus this current enters KCL with a **minus** sign (see [Buses §4](#)), because the bus convention is leaving-the-bus positive. Say so here, otherwise a reader comparing the two pages sees a sign flip with no explanation.

5. Inequality constraints

Cartesian variable bounds

When `i_max` is present, a **box** on the current components $|\Re(I_{g,k})|, |\Im(I_{g,k})| \leq I_{g,k}^{\max}$ bounds the search; implied by the current circle below.

Engineering bounds

Active/reactive power box (the dispatch range):

$$P_{g,k}^{\min} \leq P_{g,k} \leq P_{g,k}^{\max}, \quad Q_{g,k}^{\min} \leq Q_{g,k} \leq Q_{g,k}^{\max}.$$

Apparent-power circle (optional):

$$P_{g,k}^2 + Q_{g,k}^2 \leq (S_{g,k}^{\max})^2.$$

Current-magnitude circle (optional), per conductor:

$$I_{g,k} (I_{g,k})^* \leq (I_{g,k}^{\max})^2.$$

For a star-connected generator whose `i_max` carries a trailing neutral entry, the neutral return current $-\mathbf{1}^T \mathbf{I}_g[\mathcal{P}]$ is additionally bounded by that entry.

Chapter 14

Shunts

14.1 Shunts

A **shunt** is a fixed admittance connected between a set of bus terminals (and, implicitly, ground). Grounding impedances should be modelled as a shunt. Symbols are defined in [Notation](#).

1. Data model

A shunt is an entry of the top-level shunt object, keyed by its string ID h .

Field	Type	Unit	Req.	Description
bus	string	-	✓	Host bus ID i
terminal_map	string[]	-	✓	Conductor→terminal map $\mathbf{N}_h$
G_k_j	number	S	✓ (G_1_1)	Conductance matrix entries
B_k_j	number	S	✓ (B_1_1)	Susceptance matrix entries

2. Input symbols

Field	Symbol	Notes
G_k_j, B_k_j	$\mathbf{Y}_h = \mathbf{G} + j\mathbf{B}$	admittance matrix (S), row-first entries

The matrix is stored row-first: entry (k, j) is field G_k_j / B_k_j. Ground is never indexed (its voltage is zero).

Suggestion: define the terminal_map only for the necessary terminals to avoid zero-padded matrices and a more compact representation.

3. Variables

None. A shunt introduces no unknown. Its current is determined entirely by the bus voltage and its fixed admittance.

4. Equality constraints

The current drawn into the shunt at its terminals is linear in the bus voltage:

$$\mathbf{I}_h = \mathbf{Y}_h \mathbf{U}_i[\mathbf{N}_h].$$

This current is the shunt's contribution to KCL at bus i (leaving the bus toward the admittance/ground). Examples: a single-entry $Y_{h,nn}$ on terminal n grounds the neutral through an impedance.

5. Inequality constraints

None.

Chapter 15

Capacitors

15.1 Capacitors

A **capacitor** is a fixed, nameplate-rated shunt capacitor bank, a special case of the **Shunt** whose susceptance is derived from nameplate data (a rated reactive power and voltage) rather than given as an explicit admittance matrix. Three connection configurations are supported: WYE, DELTA, and SINGLE_PHASE. Symbols are defined in [Notation](#).

1. Data model

A capacitor is an entry of the top-level capacitor object, keyed by its string ID κ .

Field	Type	Unit	Req.	Description
bus	string	-	✓	Host bus ID i
terminal_map	string[]	-	✓	Conductor→terminal map $\mathbf{N}_\kappa$
configuration	string	-	✓	WYE, SINGLE_PHASE, or DELTA
qRated	number	var	✓	Rated reactive power of the whole bank
vNom	number	V	✓	Nominal voltage: line-to-line for WYE/DELTA, across the element for SINGLE_PHASE

2. Input symbols

Field	Symbol	Notes
qRated	Q_κ^{rated}	whole-bank rating
vNom	V_κ^{nom}	line-to-line (WYE/DELTA) or across-element (SINGLE_PHASE)

The bank is assumed balanced: a single element susceptance b_κ (derived, not input, see [§4](#)) is stamped identically onto every phase (or phase pair) of the bank.

3. Variables

None. Like a shunt, a capacitor introduces no unknown. Its current follows from the bus voltage and its fixed susceptance.

4. Equality constraints

Susceptance from nameplate data

A capacitor delivers its rated reactive power when the voltage across its terminals equals the nominal value. The element susceptance is

$$b_{\kappa} = \frac{Q_{\kappa}^{\text{rated}}}{\beta_{\kappa} (V_{\kappa}^{\text{nom}})^2},$$

where β_{κ} is a configuration-dependent constant:

configuration	β_{κ}	Why
SINGLE_PHASE	1	the nominal voltage is across the sole element
DELTA	3	three elements, each at the nominal (line-to-line) voltage
WYE	1	three elements, each at $V_{\kappa}^{\text{nom}}/\sqrt{3}$ (phase-to-neutral)

Terminal-space assembly

The element susceptance b_{κ} is assembled into a terminal-space susceptance matrix $\mathbf{B}_{\kappa}$ by a reciprocal two-node stamp $b_{\kappa} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix}$, applied once per element and accumulated onto shared terminals:

- **SINGLE_PHASE**: one stamp across the element's two terminals $[p, q]$:

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix}.$$

- **WYE**: one stamp per phase, between that phase and neutral, on $[a, b, c, n]$:

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 1 & 0 & 0 & -1 \\ 0 & 1 & 0 & -1 \\ 0 & 0 & 1 & -1 \\ -1 & -1 & -1 & 3 \end{bmatrix}.$$

- **DELTA**: one stamp per phase pair (a, b) , (b, c) , (c, a) , on $[a, b, c]$:

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 2 & -1 & -1 \\ -1 & 2 & -1 \\ -1 & -1 & 2 \end{bmatrix}.$$

Current injection

The bank injects current into KCL at its bus exactly as a shunt would:

$$\mathbf{I}_\kappa = j \mathbf{B}_\kappa \mathbf{U}_i[\mathbf{N}_\kappa].$$

The reactive power drawn by each element is voltage-dependent. For a SINGLE_PHASE capacitor, $Q = b_\kappa |U|^2$, rising and falling with the square of the terminal voltage, the defining behaviour of a fixed capacitor (as opposed to a fixed-power source). At the balanced nominal voltage the bank delivers exactly Q_κ^{rated} .

5. Inequality constraints

None. With a fixed susceptance the current follows the voltage; no rating bound is imposed.

Chapter 16

Voltage sources

16.1 Voltage sources

A **voltage source** is an ideal voltage reference with a current slack: it fixes the bus terminal voltages and injects whatever current the rest of the network requires. It is the power-flow reference (slack) bus. This model version permits exactly one. Symbols are defined in [Notation](#).

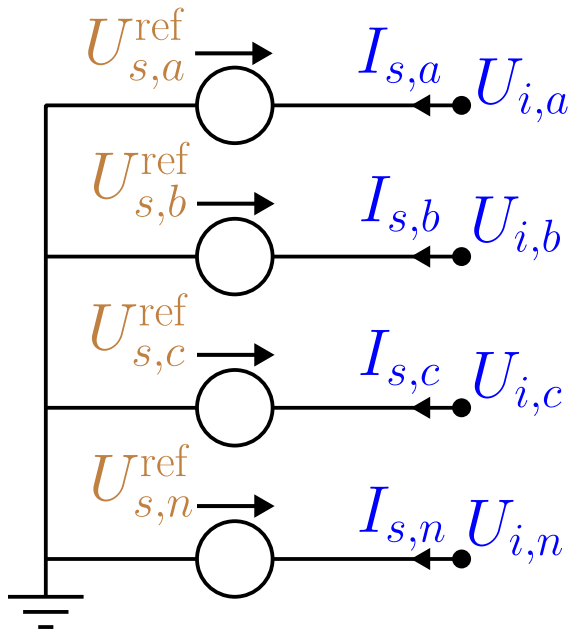


Figure 16.1: Voltage source: a fixed line-to-ground voltage reference with a free slack current.

Amrit

The figure and the text below describe **different sources**.

1. **Current direction is reversed.** §3 says the source *injects* a slack current into the bus. The figure draws every $I_{s,k}$ arrow pointing from the bus terminal back into the source, i.e. *leaving* the bus. The figure matches the leaving-the-bus-positive convention the bus KCL actually uses; the text does not.
2. **Symbols differ.** The figure uses U^{ref} ; the page uses U^s .

1. Data model

A voltage source is an entry of the top-level voltage_source object, keyed by its string ID s .

Field	Type	Unit	Req.	Description
bus	string	-	✓	Host bus ID i
terminal_map	string[]	-	✓	Conductor→terminal map $\mathbf{N}_s$ (phase terminals)
v_magnitude	number[]	V	✓	Per-terminal voltage magnitude
v_angle	number[]	rad	✓	Per-terminal voltage angle
energy_cost_rate	number[]	\$/kWh		Per-phase linear dispatch cost

2. Input symbols

Field	Symbol	Notes
v_magnitude	$ \mathbf{U}_s^s $	per terminal
v_angle	θ_s^s	per terminal
energy_cost_rate	$\mathbf{c}_s$	per phase

3. Variables

The source injects a **slack current** $I_{s,k}$ per phase terminal, stacked into $\mathbf{I}_s$. It is otherwise unconstrained. It absorbs whatever power balance the network requires, which is what makes this the reference bus.

4. Equality constraints**Fixed reference voltage**

Each phase terminal is fixed to its polar reference, and the source-bus neutral to ground:

$$U_{i,p} = |U_{s,p}^s| \angle \theta_{s,p}^s, \quad U_{i,n} = 0.$$

Amrit

Shouldn't the voltage source be defined **between two terminals** of the bus (a phase terminal p and a return terminal q , typically the neutral), fixing the difference $U_{i,p} - U_{i,q}$ rather than each terminal's voltage to ground? The bus itself would then be grounded through the normal grounding mechanism (perfectly_grounded_terminals or a grounding impedance), and the source would no longer need to force $U_{i,n} = 0$ itself. As written, the source hard-wires the neutral to ground, which duplicates the grounding model and prevents a source on a bus with an impedance-grounded or floating neutral.

Injected power

The complex power injected at phase terminal p is

$$S_{s,p} = U_{i,p} (I_{s,p})^* = P_{s,p} + j Q_{s,p}.$$

The **Objective** multiplies $P_{s,p}$ by the per-phase energy_cost_rate field (and appropriate constant scaling coefficients) to compute the source's contribution to total dispatch cost.

Amrit

The direction of $I_{s,k}$ is never stated: is it leaving the bus into the source (the convention the bus KCL actually uses) or an injection into the bus like the generator? Source terminals are excluded from KCL so nothing breaks, but the sign of the reported slack power depends on it. Declare it.

5. Inequality constraints**Cartesian variable bounds**

None. The slack current is free.

Engineering bounds

None (foundational). A pure slack has no rating.

Chapter 17

Transformers

17.1 Transformers

A **transformer** couples two buses through **galvanically isolated** windings. Primary and secondary share no conductor, only magnetic flux. Because the winding topologies differ qualitatively, each configuration is a distinct data-model object: `single_phase`, `center_tap`, `wye_delta`, and `delta_wye`. Every model is built from an idealised winding pair plus a series leakage impedance; a magnetising shunt, internal neutral grounding, and tap-changing are not yet modelled (see [Background & scope](#)). Symbols are defined in [Notation](#).

1. Data model

Each subtype is an entry under `transformer.<subtype>`, keyed by its string ID x . Common fields (two-winding subtypes):

Field	Type	Unit	Req.	Description
<code>bus_from</code> , <code>bus_to</code>	string	-	✓	Endpoint bus IDs i, j
<code>terminal_map_from</code> , <code>terminal_map_to</code>	string[]	-	✓	Conductor→terminal maps (lengths per subtype)
<code>v_nom_from</code> , <code>v_nom_to</code>	number	V	✓	Nominal winding voltages (set the turns ratio)
<code>s_rating</code>	number	VA	✓	Nameplate apparent-power rating
<code>r_series_from</code> , <code>x_series_from</code>	number	Ω		From-winding series leakage (<code>single_phase</code> , <code>center_tap</code>)
<code>r_series_to</code> , <code>x_series_to</code>	number	Ω		To-winding series leakage (<code>single_phase</code> , <code>center_tap</code>)
<code>r_series</code> , <code>x_series</code>	number	Ω		Series leakage, wye winding only (<code>wye_delta</code> , <code>delta_wye</code>)
<code>i_max_from</code> , <code>i_max_to</code>	number[]	A		Per-conductor current limits

Terminal-map lengths: `single_phase` 2 + 2; `center_tap` 2 (from) + 3 (to, ordered L1/centre/L2); `wye_delta` 4 (wye) + 3 (delta); `delta_wye` 3 (delta) + 4 (wye). For `center_tap`, `v_nom_to` is the **half-winding** (leg) voltage, e.g. 120 V for a 240/120 V service, not the full secondary span.

Field	Symbol	Notes
v_nom_from, v_nom_to	$U_i^{\text{nom}}, U_j^{\text{nom}}$	turns ratio $N = U_i^{\text{nom}}/U_j^{\text{nom}}$
r/x_series_from	$Z_x^{\text{fr}} = R_x^{\text{fr}} + jX_x^{\text{fr}}$	from-winding leakage
r/x_series_to	$Z_x^{\text{to}} = R_x^{\text{to}} + jX_x^{\text{to}}$	to-winding leakage
r_series, x_series	$Z_x^{\text{wye}} = R_x^{\text{wye}} + jX_x^{\text{wye}}$	wye-side leakage (wye_delta/delta_wye)
s_rating	S_x^{max}	nameplate

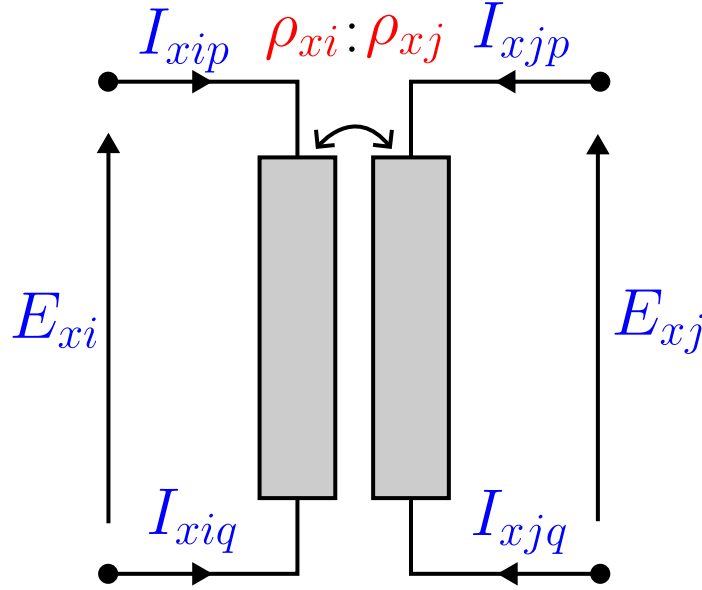


Figure 17.1: Idealised single-phase transformer: a pair of magnetically coupled windings.

2. Input symbols

3. Variables

Each winding conductor k on side $\sigma \in \{\text{fr}, \text{to}\}$ carries a complex winding current $I_{x,\sigma,k}$. For the winding spanning terminal pair (p_k, q_k) on bus b^σ , write the **winding voltage**

$$V_{x,k}^\sigma = U_{b^\sigma, p_k} - U_{b^\sigma, q_k}$$

(phase-to-neutral for a wye winding, line-to-line for a delta winding, with $U = 0$ when q_k is absent/ground).

4. Equality constraints

The idealised winding pair

Every transformer is built from **ideal winding pairs** obeying flux linkage, complex- power conservation, and winding KCL. With winding EMFs $E_x^{\text{fr}}, E_x^{\text{to}}$ and the nominal voltages standing in for the turns ratio:

$$\frac{E_x^{\text{fr}}}{U_i^{\text{nom}}} = \frac{E_x^{\text{to}}}{U_j^{\text{nom}}}, \quad U_i^{\text{nom}} I_{x,\text{fr}} + U_j^{\text{nom}} I_{x,\text{to}} = 0 \iff N I_{x,\text{fr}} + I_{x,\text{to}} = 0.$$

The second relation is the **ampere-turn balance**; with all losses removed the EMF is the terminal voltage and $V_x^{\text{fr}} = N V_x^{\text{to}}$.

Series leakage

Each winding carries a series impedance between its EMF and its terminals (Ohm's law), the model's one loss element, representing copper/leakage loss. Referred to the HV (from) side and combined, $Z_x = Z_x^{\text{fr}} + N^2 Z_x^{\text{to}}$, the ideal voltage relation becomes

$$V_x^{\text{fr}} - N V_x^{\text{to}} = Z_x I_{x,\text{fr}}.$$

This combined Z_x is what a short-circuit test measures: the *series sum* of the two winding leakages, referred to one side; it is not itself a separate element. `single_phase` and `center_tap` keep the two leakages as separate fields, `r/x_series_from` $\rightarrow Z_x^{\text{fr}}$ and `r/x_series_to` $\rightarrow Z_x^{\text{to}}$; `wye_delta` and `delta_wye` instead give a single `r_series/x_series` $\rightarrow Z_x^{\text{wye}}$ on the wye winding only (the delta winding is lossless in this model).

The per-winding leakage split is under-determined by a short-circuit test

A standard short-circuit test yields only Z_x , the *sum* of the two winding leakages. Splitting it into Z_x^{fr} and Z_x^{to} requires an extra convention (OpenDSS splits per its winding definitions; a common default is to put it all on one winding, i.e. the Γ -model with the other winding's leakage zero). The data model exposes both fields so the convention is explicit rather than assumed.

The subtypes below place this leakage differently: `single-phase` and `centre-tap` keep it split across both windings; `wye-delta` / `delta-wye` lump it entirely on the wye side.

Single-phase

One winding pair, the archetypal two-winding transformer. With the combined leakage $Z_x = Z_x^{\text{fr}} + N^2 Z_x^{\text{to}}$ (see [Series leakage](#) above):

$$V_{x,k}^{\text{fr}} - N V_{x,k}^{\text{to}} = Z_x I_{x,\text{fr},k}, \quad N I_{x,\text{fr},k} + I_{x,\text{to},k} = 0.$$

Center-tap (split-phase)

One HV winding drives **two anti-series LV legs** sharing a centre-tap neutral: two from terminals $[p, q]$, three to terminals $[p, n, q]$ (L1, centre, L2). The two half-windings are tightly coupled, so the model is a genuine three-winding (coupled-coil) unit, not two independent legs.

KCL at each side:

$$I_{x,\text{fr},p} + I_{x,\text{fr},q} = 0, \quad I_{x,\text{to},p} + I_{x,\text{to},n} + I_{x,\text{to},q} = 0.$$

Each winding EMF follows Ohm's law from its terminal voltage. The lower leg's dotted terminal is the centre tap n , not q , so its EMF runs from n toward q :

$$E_x^{\text{fr}} = (U_{i,p} - Z_x^{\text{fr}} I_{x,\text{fr},p}) - U_{i,q}, \quad E_x^{\text{to}} = (U_{j,p} - Z_x^{\text{to}} I_{x,\text{to},p}) - U_{j,n},$$

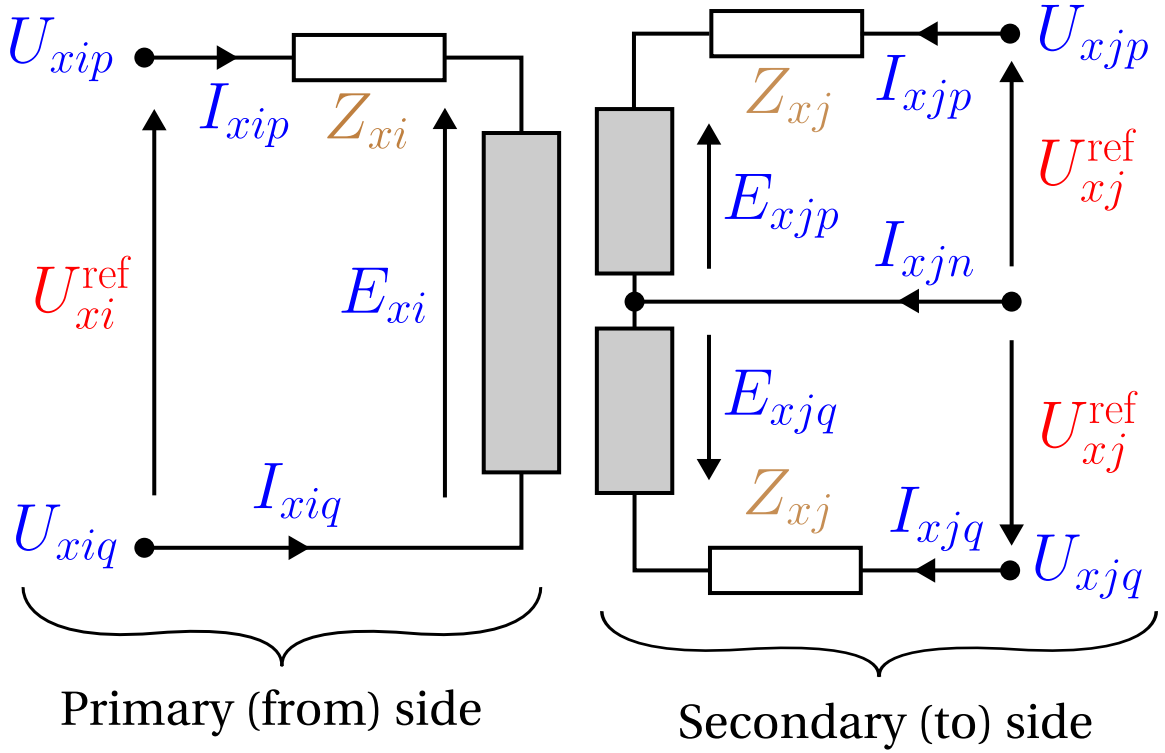


Figure 17.2: Centre-tap transformer: one HV winding, two anti-series LV legs sharing a centre-tap neutral.

$$E_{x,q}^{\text{to}} = (U_{j,n} - Z_x^{\text{to}} I_{x,\text{to},q}) - U_{j,q}.$$

with flux linkage and ampere-turn balance across all three ports:

$$\frac{E_x^{\text{fr}}}{U_i^{\text{nom}}} = \frac{E_{x,p}^{\text{to}}}{U_j^{\text{nom}}} = \frac{E_{x,q}^{\text{to}}}{U_j^{\text{nom}}}, \quad U_i^{\text{nom}} I_{x,\text{fr},p} + U_j^{\text{nom}} I_{x,\text{to},p} + U_j^{\text{nom}} I_{x,\text{to},q} = 0.$$

The centre-tap current $I_{x,\text{to},n} = -(I_{x,\text{to},p} + I_{x,\text{to},q})$ is the leg-imbalance current; whether and how it is grounded is external to the transformer (see [Grounding](#)).

Wye-delta and delta-wye

Three winding pairs. The delta connection introduces a $\sqrt{3}$ factor, so the per-winding ratio is

$$n^{\text{eff}} = \begin{cases} \sqrt{3}/N & \text{wye_delta (wye is from),} \\ N\sqrt{3} & \text{delta_wye (delta is from).} \end{cases}$$

For phase k with cyclic partner k' (next for Yd, previous for Dy), the delta line-to-line voltage equals n^{eff} times the wye phase-to-neutral voltage, less the series drop on the wye phase current $I_{x,\text{wye},k}$ through the wye-side leakage Z_x^{wye} (the delta winding is lossless):

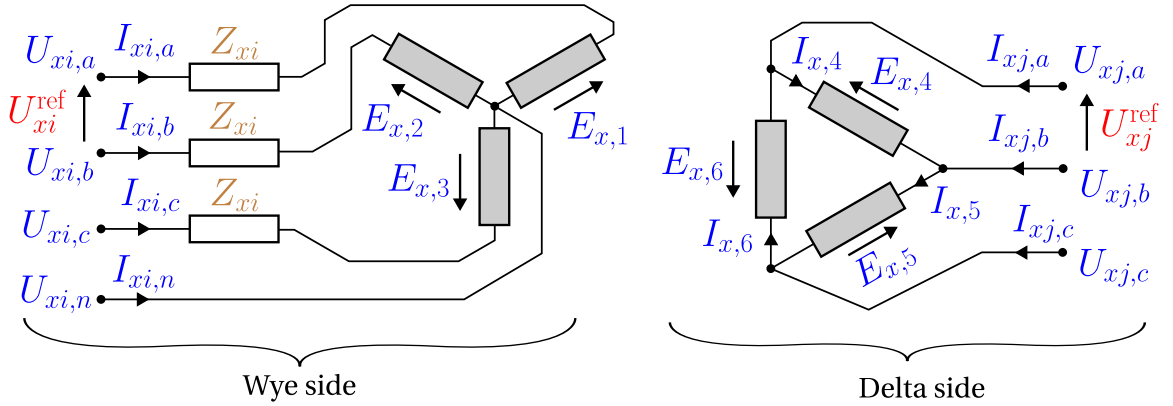


Figure 17.3: Three-phase wye-delta (or delta-wye) transformer connection and winding variables.

$$U_{\text{del},k} - U_{\text{del},k'} = n^{\text{eff}} (U_{\text{wye},k} - U_{\text{wye},n}) - n^{\text{eff}} Z_x^{\text{wye}} I_{x,\text{wye},k}.$$

The current transform is the transpose (power-conservative), $n^{\text{eff}} I_{x,\text{del},k} = -(I_{x,\text{wye},k} - I_{x,\text{wye},k'})$, and the wye star point satisfies $I_{x,\text{wye},n} + \sum_k I_{x,\text{wye},k} = 0$. Whether the wye neutral is grounded is external to the transformer (see [Grounding](#)).

5. Inequality constraints

Cartesian variable bounds

Optional per-conductor current boxes on the winding-current components, from `i_max_from`/`i_max_to`, implied by the current circles below.

Engineering bounds

Per-winding current-magnitude circles, per conductor k and side σ :

$$I_{x,\sigma,k} (I_{x,\sigma,k})^* \leq (I_{x,\sigma,k}^{\text{max}})^2.$$

Nameplate power. The winding-pair power transfer is bounded by the rating, $|E_x^{\text{fr}}(I_{x,\text{fr}})^*| \leq S_x^{\text{max}}/n_x$ with n_x the number of winding pairs (1 single-phase, 3 three-phase; centre-tap uses 1 on the from winding and 2 on the to legs).

Part IV

Objective & feasibility

Chapter 18

Objective

The component pages define the network's variables and constraints, i.e., the *feasible set*. This page defines what is optimised over that feasible set: the **objective**. Symbols are defined in [Notation](#).

The default objective minimises total **active-power dispatch cost**, in \$. This is summed over every dispatchable element (generators and voltage source; with the power injected by the voltage source representing electricity drawn from the upstream (e.g., transmission) grid) and every phase:

$$\min \frac{\Delta_T}{1000} \left(\underbrace{\sum_{g \in \mathcal{G}} \sum_p c_{g,p} P_{g,p}}_{\text{generators}} + \underbrace{\sum_{s \in \mathcal{S}} \sum_p c_{s,p} P_{s,p}}_{\text{voltage source}} \right)$$

where $c_{g,p}$ and $c_{s,p}$ (currency/kWh, from each element's per-phase energy_cost_rate array — see [Generators](#) and [Voltage sources](#)) are the energy price of phase p for generator $g \in \mathcal{G}$ and voltage source $s \in \mathcal{S}$ respectively, and $P_{g,p}$, $P_{s,p}$ are that phase's injected active power in watts, as defined in [Generators §4](#) and [Voltage sources §4](#). The constant factor Δ_T accounts for the duration of the snapshot analysis (with fixed value 1 hr) and the factor of 1000 converts power injections from W to kW (so that the value of the objective is then in \$).

Sign convention

Here, $P_{g,p}$ and $P_{s,p}$ are the power **injected into the network** by the element across generators and voltage source. Therefore:

- a **positive** energy cost rate minimises that element's injection;
- a **negative** energy cost rate maximises it.

The voltage source is *not* special: for the slack, positive injection means importing from the grid, so a positive source energy cost rate is the grid import price (and export, a negative injection, is credited at the same price).

Part V

Reference

Chapter 19

Modelling notes & FAQ

19.1 Modelling notes and FAQ

Practical questions that recur when building cases. Symbols are defined in [Notation](#).

How do I model a constant-impedance or constant-current load?

Use the [load](#) model field: `constant_impedance` ($P \propto |V|^2$), `constant_current` ($P \propto |V|$), or a full zip mix, with `v_nom` giving the reference voltage. (Older guidance suggested emulating a constant-impedance load with a [shunt](#); that is no longer necessary now that voltage-dependent load models are supported.)

How do I define a triplex (split-phase service) load?

As one or more **single-phase** loads across the triplex terminals. For a 1 kW load across legs 1–2 of a triplex bus with `terminal_names` ["1", "n", "2"], define a `SINGLE_PHASE` load with `terminal_map` ["1", "2"] and `p_nom` [1000.0]. A two-terminal `SINGLE_PHASE` map is modelled across exactly those two terminals (here line-to-line, 240 V), not phase-to-ground. See [Loads](#).

I converted a wye load to delta with the standard transform and got a different answer. Why?

Because a distribution **wye load is four-wire** (three phase branches to a *neutral return* conductor) whereas the textbook delta-wye (Y-Δ) transform assumes a *three-wire* wye with no return (a graph-theoretic star). The transform is **not applicable** to a wye-with-neutral load. Model the wye and delta connections directly via the load configuration field; do not pre-transform.

How do I model a three-wire wye load (no neutral return)?

Add a **floating midpoint** terminal at the bus and connect three single-phase loads (or a wye-with-return whose neutral ties to that floating node) across the phases to it. The floating node carries no external connection, so it enforces the zero-return-current condition of a true three-wire star. There is no dedicated "wye-without-neutral" load subtype.

How do I get center-tap transformer impedances from OpenDSS or Gridlab-D?

OpenDSS specifies the three inter-winding short-circuit reactances X_{hl}, X_{lt}, X_{ht} (% p.u.). These map to the per-winding reactances by the star (T) transform $[X_h; X_l; X_t] = \frac{1}{2} \mathbf{S} [X_{hl}; X_{lt}; X_{ht}]$ with $\mathbf{S} = \begin{bmatrix} 1 & -1 & 1 \\ 1 & 1 & -1 \\ -1 & 1 & 1 \end{bmatrix}$,

then to ohms via the winding voltage/power base. The [transformer](#) page gives the full partitioning (and warns against the common $X_{h1}/2$ shortcut, which is wrong for center-tap under unbalance).

Gridlab-D gives per-unit primary impedance and secondary impedance1 with a power_rating for the *whole* transformer. The per-winding SI impedances are

$$Z_i = \text{impedance} \cdot \frac{3}{1000} \cdot \frac{\text{primary_voltage}^2}{\text{power_rating}}, \quad Z_j = \text{impedance1} \cdot \frac{3}{1000} \cdot \frac{\text{secondary_voltage}^2}{\text{power_rating}},$$

where the factor 3 accounts for the total rating being three times the primary-winding power, and 1000 converts the kVA rating to VA.

Import tools usually apply these conversions

Tools that import from OpenDSS or Gridlab-D typically apply these conversions automatically when reading source models. The formulas are given here for authors constructing data by hand or auditing an import.

My line impedances are sequence components only: can I convert them to wire coordinates?

It is possible convert sequence components to *phase* component matrices (i.e., to define a 3-by-3 matrix linking the voltages and currents of phases "1", "2", "3"). If the distribution system this is modelling has a three-wire construction, then this transformation is exact. However, if Kron reduction (see [glossary](#)) has been applied to the neutral of a four-wire system to convert to a three-phase representation, it is not possible to revert back to the four-wire system's 4-by-4 impedance matrix without additional information.

Converting from sequence impedance values to three-phase impedances matrices

Sequence-component impedances convert to phase coordinates through the Fortescue transform $\mathbf{F}$ (defined in [Notation](#)). Writing sequence voltages and currents as $\mathbf{U}_i^{\text{sym}} = \mathbf{F} \mathbf{U}_i[\mathcal{P}]$ and $\mathbf{I}_{\ell ij}^{\text{sym},s} = \mathbf{F} \mathbf{I}_{\ell ij}[\mathcal{P}]$, and premultiplying the phase Ohm's law $\mathbf{U}_j[\mathcal{P}] = \mathbf{U}_i[\mathcal{P}] - \mathbf{Z}_{\ell}^s \mathbf{I}_{\ell ij}[\mathcal{P}]$ by $\mathbf{F}$ (inserting $\mathbf{I} = \mathbf{F}^{-1} \mathbf{F}$) gives the sequence-domain impedance

$$\mathbf{Z}_{\ell}^{\text{sym},s} = \mathbf{F} \mathbf{Z}_{\ell}^s \mathbf{F}^{-1} = \begin{bmatrix} Z_{\ell,00} & Z_{\ell,01} & Z_{\ell,02} \\ Z_{\ell,10} & Z_{\ell,11} & Z_{\ell,12} \\ Z_{\ell,20} & Z_{\ell,21} & Z_{\ell,22} \end{bmatrix}.$$

Lines are commonly assumed transposed, so the off-diagonal terms are neglected and the positive and negative sequences take equal value, leaving $\mathbf{Z}_{\ell}^{\text{sym},s} \approx \text{diag}(Z_{\ell,00}, Z_{\ell,11}, Z_{\ell,11})$. Inverting the transform then recovers the phase impedance matrix from just the zero- and positive-sequence values $Z_{\ell,00}, Z_{\ell,11}$:

$$\mathbf{Z}_{\ell}^s = \frac{1}{3} \begin{bmatrix} 2Z_{\ell,11} + Z_{\ell,00} & Z_{\ell,00} - Z_{\ell,11} & Z_{\ell,00} - Z_{\ell,11} \\ Z_{\ell,00} - Z_{\ell,11} & 2Z_{\ell,11} + Z_{\ell,00} & Z_{\ell,00} - Z_{\ell,11} \\ Z_{\ell,00} - Z_{\ell,11} & Z_{\ell,00} - Z_{\ell,11} & 2Z_{\ell,11} + Z_{\ell,00} \end{bmatrix}.$$

Here $\mathbf{Z}_{\ell}^s$ is the (three-wire, or Kron-reduced four-wire) 3×3 series-impedance matrix used as the line's `R_series/X_series`.

Chapter 20

Nomenclature

20.1 Nomenclature

A consolidated list of the recurring symbols. The typography and colour convention (variable vs parameter, real vs complex) and the transform constants are defined on the [Notation](#) page; the string-valued parameters and their permitted values are listed under [Data input formatting](#); and the element sets, topology, connectivity, and terminal mappings are collected in [Notation → Sets and indices](#).

Matrix dimensions $n \times n$ have $1 \leq n \leq 4$; per-phase vector lengths have $1 \leq n \leq 3$ (excluding the neutral).

Complex-valued variables

Symbol	Unit	Length	Represents
$\mathbf{U}_i$	V	4	Bus i phase-to-ground voltage vector
$\mathbf{U}_i^\Delta$	V	3	Bus i phase-to-phase voltage vector
$\mathbf{U}_i^{\text{pn}}$	V	3	Bus i phase-to-neutral voltage vector
$\mathbf{U}_i^{012}$	V	3	Bus i symmetrical-component voltage vector
$\mathbf{I}_{\ell ij}$	A	4	Line ℓ total current, direction $i \rightarrow j$
$\mathbf{I}_{\ell ij}^s$	A	4	Line ℓ series current, direction $i \rightarrow j$
$\mathbf{I}_{\ell ij}^{\text{sh}}$	A	4	Line ℓ shunt current, direction $i \rightarrow j$
$\mathbf{S}_{\ell ij}$	W	4	Line ℓ total power, direction $i \rightarrow j$
$\mathbf{S}_{\ell ij}^s$	W	4	Line ℓ series power, direction $i \rightarrow j$
$\mathbf{S}_d$	W	4	Load d power at its bus
$\mathbf{S}_d^{\text{pn}}$	W	3	Load d power in wye (phase-to-neutral) frame
$\mathbf{S}_d^\Delta$	W	3	Load d power in delta frame
$\mathbf{I}_d$	A	2, 3 or 4	Load d current at its bus
$\mathbf{I}_d^\Delta$	A	3	Load d internal delta current
$\mathbf{S}_g$	W	4	Generator g power at its bus
$\mathbf{S}_g^{\text{pn}}$	W	3	Generator g power in wye frame
$\mathbf{S}_g^\Delta$	W	3	Generator g power in delta frame
$\mathbf{I}_g$	A	4	Generator g current at its bus

Complex-valued parameters

Real-valued parameters

Symbol	Unit	Size	Represents
$\mathbf{Y}_{\ell ij}^{\text{sh}}$	S	$n \times n$	Line ℓ shunt admittance at sending end i
$\mathbf{Y}_{\ell ji}^{\text{sh}}$	S	$n \times n$	Line ℓ shunt admittance at receiving end j
$\mathbf{Z}_{\ell}^{\text{s}}$	Ω	$n \times n$	Line ℓ series impedance matrix
$\mathbf{Y}_h$	S	$n \times n$	Bus shunt admittance (neutral grounding, capacitor banks, ...)
$\mathbf{S}_d^{\text{ref,pn}}$	W+jvar	3×1	Load d complex power set-point (wye-connected)
$\mathbf{S}_d^{\text{ref},\Delta}$	W+jvar	3×1	Load d complex power set-point (delta-connected)
$\mathbf{S}_g^{\text{ref,pn}}$	W+jvar	3×1	Generator g complex power set-point
$\mathbf{Z}_c^{\text{s}}$	Ω/m	$n \times n$	Linecode per-length series impedance
$\bar{\mathbf{Y}}_c^{\text{sh}}$	S/m	$n \times n$	Linecode per-length shunt admittance

Symbol	Unit	Size	Represents
$\mathbf{U}_i^{\min}, \mathbf{U}_i^{\max}$	V	4×1	Bus i phase-to-ground magnitude bounds
$\mathbf{U}_i^{\text{pn},\min}, \mathbf{U}_i^{\text{pn},\max}$	V	3×1	Bus i phase-to-neutral magnitude bounds
$\mathbf{U}_i^{012,\min}, \mathbf{U}_i^{012,\max}$	V	3×1	Bus i symmetrical-component magnitude bounds
$\mathbf{I}_{\ell ij}^{\max}$	A	4×1	Line ℓ current-magnitude upper bound
$\mathbf{S}_{\ell ij}^{\max}$	VA	4×1	Line ℓ apparent-power upper bound
$\mathbf{P}_g^{\min}, \mathbf{P}_g^{\max}$	W	$n \times 1$	Generator g active-power bounds
$\mathbf{Q}_g^{\min}, \mathbf{Q}_g^{\max}$	var	$n \times 1$	Generator g reactive-power bounds
$\mathbf{c}_g$	\$/kWh	$n \times 1$	Generator g per-phase energy cost rate
$\mathbf{c}_s$	\$/kWh	$n \times 1$	Voltage source s per-phase energy cost rate
ℓ_l	m	scalar	Line length

Chapter 21

References

21.1 References

This specification stands on a large body of work in distribution-system modelling and optimal power flow. Foundational papers and tools which have influenced the data specification and network cases, including the four-wire current-voltage (IVR-EN) formulation, are as follows:

- **F. Geth et al.**, "Considerations and design goals for unbalanced optimal power flow benchmarks," *Electric Power Systems Research*, 2024. The benchmarking philosophy behind this Task Force effort.
- **D. M. Fobes, S. Claeys, F. Geth, C. Coffrin**, "PowerModelsDistribution.jl: An open-source framework for exploring distribution power flow formulations," *Electric Power Systems Research*, 2020. The IVRENPowModel referenced from [Background & scope](#).
- **R. C. Dugan**, "A perspective on transformer modeling for distribution system analysis," *IEEE PES General Meeting*, 2003. Background for the [transformer](#) winding models and grounding conventions.
- **W. H. Kersting**, *Distribution System Modeling and Analysis*, CRC Press (4th ed., 2017). The standard reference for line/cable impedance (Carson's equations, Kron reduction), transformer connections, and unbalanced power flow, the physics behind the [line](#) and [transformer](#) pages.
- **T. A. Short**, *Electric Power Distribution Handbook*, CRC Press (2nd ed., 2014). An equipment-oriented companion covering feeders, grounding, and protection. This has influenced the field names for the [capacitor](#) page.
- **OpenDSS** (EPRI): a widely used distribution power-flow engine and a common source and cross-validation reference for distribution models.
- **S. Babaeinejadsarookolae et al.**, "The Power Grid Library for benchmarking AC optimal power flow algorithms" (PGLib-OPF), 2019. The transmission-side, positive- sequence analogue of the data specification and network cases provided by the BMOPF Task Force.

Chapter 22

Glossary

22.1 Glossary

A quick reference for the terms and abbreviations used throughout the specification. Symbols and mathematical notation are defined on the [Notation](#) page.

Terms

Four-wire model : A network representation in which each of the three phases **and** the neutral conductor are modelled explicitly, with earth as a separate return path.

Galvanically isolated : A connection with no direct conductive path between two circuits. Power transfers only via magnetic coupling. Transformers in this specification are modelled as galvanically isolated winding pairs. See [Transformers](#).

Kron reduction : The algebraic elimination of a conductor (typically the neutral) from an impedance or admittance matrix, folding its mutual coupling into the remaining conductors. Valid when a branch element's terminals are perfectly grounded, so the terminal voltage at each end of the branch element (e.g. the conductor of a line or cable) is common at 0 V.

Note: this specification keeps neutral and earth conductors explicit and does not apply Kron reduction. See [Grounding](#).

Nodal admittance matrix (Ybus) : The matrix $\mathbf{Y}$ relating injected currents to node voltages, $\mathbf{I} = \mathbf{Y} \mathbf{V}$.

OPF (Optimal Power Flow) : An optimisation problem that determines the operating point of a network minimising an objective (e.g. cost, losses) subject to physical and operational constraints. See [Objective & feasibility](#).

Per-unit : A normalisation convention that expresses a quantity as a fraction of a chosen base value (e.g. a base voltage or power) rather than in physical units. This specification uses SI units throughout and defines no per-unit base. See [Data input formatting](#).

Triplex (split-phase) service : A single-phase secondary service from a centre-tapped transformer winding, giving two legs and a line-to-line voltage from one source phase, typically 120 V and 240 V in North American practice. Modelled as one or more single-phase loads across the triplex terminals. See [Modelling notes & FAQ](#).

ZIP load : A voltage-dependent load model combining constant-impedance (Z), constant-current (I), and constant-power (P) components. See [Loads](#).