

# Distribution System Model and Data Specification

IEEE Task Force on Benchmarking Multiconductor OPF for Distribution Systems

September 14, 2026

# Contents

|                                                           |           |
|-----------------------------------------------------------|-----------|
| <b>Contents</b>                                           | <b>ii</b> |
| <b>I Home</b>                                             | <b>1</b>  |
| <b>1 Distribution System Model and Data Specification</b> | <b>2</b>  |
| 1.1 New here? Start with the Overview . . . . .           | 2         |
| 1.2 Foundations . . . . .                                 | 3         |
| 1.3 Components . . . . .                                  | 3         |
| 1.4 Optimisation . . . . .                                | 3         |
| 1.5 Reference . . . . .                                   | 3         |
| 1.6 Contributing . . . . .                                | 3         |
| <b>II Foundations</b>                                     | <b>4</b>  |
| <b>2 Overview</b>                                         | <b>5</b>  |
| 2.1 Model specification . . . . .                         | 5         |
| <b>3 Background &amp; scope</b>                           | <b>8</b>  |
| 3.1 Background and scope . . . . .                        | 8         |
| <b>4 Notation</b>                                         | <b>10</b> |
| 4.1 Notation . . . . .                                    | 10        |
| <b>5 Data input formatting</b>                            | <b>15</b> |
| 5.1 Data input formatting . . . . .                       | 15        |
| <b>6 Grounding</b>                                        | <b>18</b> |
| 6.1 Grounding . . . . .                                   | 18        |
| <b>7 Worked example</b>                                   | <b>20</b> |
| 7.1 A worked network example . . . . .                    | 20        |
| <b>8 Document metadata</b>                                | <b>23</b> |
| 8.1 Document metadata . . . . .                           | 23        |
| <b>III Components</b>                                     | <b>25</b> |
| <b>9 Buses</b>                                            | <b>26</b> |
| 9.1 Buses . . . . .                                       | 26        |
| <b>10 Lines</b>                                           | <b>29</b> |
| 10.1 Lines . . . . .                                      | 29        |
| <b>11 Switches</b>                                        | <b>33</b> |
| 11.1 Switches . . . . .                                   | 33        |
| <b>12 Loads</b>                                           | <b>35</b> |
| 12.1 Loads . . . . .                                      | 35        |
| <b>13 Generators</b>                                      | <b>38</b> |
| 13.1 Generators . . . . .                                 | 38        |
| <b>14 Shunts</b>                                          | <b>40</b> |
| 14.1 Shunts . . . . .                                     | 40        |

|           |                                    |           |
|-----------|------------------------------------|-----------|
| <b>15</b> | <b>Capacitors</b>                  | <b>42</b> |
| 15.1      | Capacitors . . . . .               | 42        |
| <b>16</b> | <b>Voltage sources</b>             | <b>45</b> |
| 16.1      | Voltage sources . . . . .          | 45        |
| <b>17</b> | <b>Transformers</b>                | <b>47</b> |
| 17.1      | Transformers . . . . .             | 47        |
| <b>IV</b> | <b>Objective &amp; feasibility</b> | <b>52</b> |
| <b>18</b> | <b>Objective and feasibility</b>   | <b>53</b> |
| 18.1      | Objective . . . . .                | 53        |
| 18.2      | Feasibility relaxation . . . . .   | 54        |
| <b>V</b>  | <b>Reference</b>                   | <b>55</b> |
| <b>19</b> | <b>Modelling notes &amp; FAQ</b>   | <b>56</b> |
| 19.1      | Modelling notes and FAQ . . . . .  | 56        |
| <b>20</b> | <b>Nomenclature</b>                | <b>58</b> |
| 20.1      | Nomenclature . . . . .             | 58        |
| <b>21</b> | <b>References</b>                  | <b>60</b> |
| 21.1      | References . . . . .               | 60        |
| <b>22</b> | <b>Glossary</b>                    | <b>61</b> |
| 22.1      | Glossary . . . . .                 | 61        |

**Part I**

**Home**

## Chapter 1

# Distribution System Model and Data Specification

Welcome to the data specification of the four-wire distribution-system optimal power flow (OPF) model.

This site is the canonical, version-controlled home of the specification. Every page is Markdown, and the specification evolves through pull requests.

### Download as PDF

The complete specification is also available as a single, print-ready document: [DistributionSystem-ModelSpecification.pdf](#).

The data specification is one of two outputs maintained by the IEEE PES Task Force on **Benchmarking Multi-conductor OPF (BMOPF) for Distribution Systems**:

- The **BMOPF data specification**. This defines the basic specification which must be met for a given dataset to be considered a network case.
- The **BMOPF network cases**. These are data instances which conform to the BMOPF data specification. Network cases are presently work-in-progress.

An JSON file representing a distribution system which meets the data specification is described as a *network model*. The *BMOPF networks cases* are the subset of network models which are curated by the BMOPF Task Force.

The BMOPF data specification is split across two resources:

- **This site** as the main data specification, capturing **data semantics and math model** and **further information** aspects, consisting of further subsections of [foundations](#), [components](#), [optimisation](#), [reference](#) (including FAQs), as well as [governance and contribution](#) guidelines.
- The **data schema**, which defines the basic structure of a JSON instance, including field names and some basic data contracts.

### 1.1 New here? Start with the Overview

Then work through the foundations before diving into individual components.

## 1.2 Foundations

The shared model that every component page builds on.

- [Overview](#) — scope and structure of the specification
- [Background & scope](#) — what is (and isn't) modelled, and why
- [Notation](#) — symbols and mathematical conventions
- [Data input formatting](#) — how a case is described
- [Grounding](#) — neutral, earth, and return paths
- [Worked example](#) — a small four-bus network end to end
- [Document metadata](#) — provenance and versioning fields

## 1.3 Components

Per-element data models and equations.

- [Buses](#) · [Lines](#) · [Switches](#)
- [Loads](#) · [Generators](#) · [Shunts](#) · [Capacitors](#)
- [Voltage sources](#) · [Transformers](#)

## 1.4 Optimisation

- [Objective & feasibility](#)

## 1.5 Reference

- [Modelling notes & FAQ](#)
- [Nomenclature](#)
- [References](#)
- [Glossary](#)

## 1.6 Contributing

Corrections and refinements are welcome — see the [Contributing](#) guide. The "Edit on GitHub" link on any page takes you to its source file, and every push to main rebuilds and publishes this site automatically. Notable changes are recorded in the [Changelog](#).

## **Part II**

# **Foundations**

## Chapter 2

# Overview

### 2.1 Model specification

#### Status: prototype

This is a **prototype** of a self-contained model + data specification spanning the full network model: foundations ([Background & scope](#), [Notation](#), [Data input formatting](#), [Grounding](#), [Worked example](#), [Document metadata](#)); every component ([Buses](#), [Lines](#), [Switches](#), [Loads](#), [Generators](#), [Shunts](#), [Capacitors](#), [Voltage sources](#), [Transformers](#)); and the [Objective and feasibility](#) formulation.

#### Purpose

This is the mathematical and data-model specification for (up-to-) four-wire distribution system optimal power flow (OPF), developed by the IEEE PES Task Force on Benchmarking Multiconductor OPF (BMOPF) for Distribution Systems.

Two principles govern every page:

1. **The specification is the source of truth.** The equations, symbols, bounds, and data-model field names on these pages, together with the JSON Schema, form the normative contract that datasets and tools implement.
2. **SI units are used in place of per-unit.** Voltages in volts, currents in amperes, impedances in ohms, admittances in siemens, powers in watts/var/VA, angles in radians. Per-unit scaling may be applied by solvers internally but is **out of scope** of this specification.

#### How each component page is organised

Every component page follows the same five-part structure, so a reader always knows where to find the data fields, the physics, and the bounds.

The **cartesian vs engineering** split in the **inequality constraints** is deliberate. A *cartesian bound* constrains the real and imaginary components of a decision variable directly — a (convex) rectangle in the complex plane, used mainly to bound the search. An *engineering bound* constrains a quantity an engineer cares about — a voltage magnitude, a thermal current, a sequence-component unbalance — and is generally a circle (quadratic) or an angle sector (bilinear). Conflating the two would hide which limits enforce a physical limit and which serve numerical purposes.

| Part                             | Question it answers                                                                                                                                                               |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1. Data model</b>             | Which JSON fields describe this component, with types, units, and required/optional status.                                                                                       |
| <b>2. Input symbols</b>          | The mathematical symbol each field maps to (a <i>parameter</i> ).                                                                                                                 |
| <b>3. Variables</b>              | The unknowns this component introduces (an optimization <i>variable</i> ).                                                                                                        |
| <b>4. Equality constraints</b>   | The physical laws that define the <i>behaviour</i> of the component.                                                                                                              |
| <b>5. Inequality constraints</b> | The bounds, split into <b>cartesian variable bounds</b> (box bounds on a variable's own components) and <b>engineering bounds</b> (physically meaningful magnitude/angle limits). |

The mathematical model is stated in **complex phasors**. A solver typically works in **rectangular real** variables — each complex equation split into its real and imaginary parts, each complex variable becoming two real variables — but that realisation is a downstream implementation choice and is not part of this specification.

### Model summary

The complete feasible set at a glance — the objective, every bound, and every device constraint, with the page that defines each. Bounds are optional (absent bounds are not enforced); constraints are always active for the elements present.

| Category                     | Item                                                                                                              | Page                                                                                                                                                               |
|------------------------------|-------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Objective</b>             | Minimise active-power dispatch cost                                                                               | <a href="#">Objective</a>                                                                                                                                          |
| <b>Voltage bounds</b>        | Phase-to-ground, -neutral, -phase, sequence, neutral cap, angle                                                   | <a href="#">Buses</a>                                                                                                                                              |
| <b>Current bounds</b>        | Line / switch / transformer thermal, generator current                                                            | <a href="#">Lines</a> , <a href="#">Switches</a> , <a href="#">Generators</a>                                                                                      |
| <b>Power bounds</b>          | Generator P-Q box + apparent-power circle; transformer rating; line apparent power                                | <a href="#">Generators</a> , <a href="#">Transformers</a>                                                                                                          |
| <b>KVL / Ohm's law</b>       | Line series drop + $\pi$ -shunt                                                                                   | <a href="#">Lines</a>                                                                                                                                              |
| <b>KCL</b>                   | Nodal current balance                                                                                             | <a href="#">Buses</a>                                                                                                                                              |
| <b>Device behaviour</b>      | Load & generator power; control mode; transformer winding pairs; switch state; shunt/capacitor admittance current | <a href="#">Loads</a> , <a href="#">Generators</a> , <a href="#">Transformers</a> , <a href="#">Switches</a> , <a href="#">Shunts</a> , <a href="#">Capacitors</a> |
| <b>Reference / grounding</b> | Voltage-source fixing; perfect, floating or impedance (electrode) grounding                                       | <a href="#">Voltage sources</a> , <a href="#">Grounding</a>                                                                                                        |

### Reading order

Start with the **foundations**:

1. **Background & scope** — why the specification exists, what it covers, and the design choices behind it.
2. **Notation** — typography (variables vs parameters, real vs complex), the complex-phasor symbols and their rectangular realisation, transform matrices, the element-wise bound idiom, and the set/topology convention used on every later page.

3. **Data input formatting** — units, how complex numbers and matrices are encoded in JSON, and required-vs-optional field semantics.
4. **Grounding** — the common-reference ground model that the components apply locally.
5. **Worked example** — every set constructed for one small network, to practically illustrate the abstraction.

Then the **components** (start with [Buses](#) and [Lines](#)), the [Objective and feasibility](#) formulation, and the [Document metadata](#). The [Modelling notes & FAQ](#) collects recurring case-building questions, and [References](#) points to the textbooks and papers behind the model.

### Self-containment

This section links only within itself, so the whole `spec/` folder can be moved to another repository without dangling references. **Please preserve this feature if you wish to contribute.**

## Chapter 3

# Background & scope

### 3.1 Background and scope

Why this specification exists, what it does and does not cover, and the design choices behind it. This page frames the rest of the specification; it introduces no model content.

#### Motivation

Distribution networks are unbalanced: single-phase loads, untransposed lines, and single-phase laterals mean the phases cannot be collapsed to a positive-sequence equivalent without losing physical details or accuracy. An optimal power flow (OPF) for distribution networks must therefore reason at the level of **individual conductors**.

At the same time, the range of utility problems posed as network-constrained optimisation has grown — power flow, state estimation, volt-var control, DER scheduling, dynamic operating envelopes, optimal droop settings. Yet there is little standardisation: few openly-licensed unbalanced network models exist, so papers rely on ad-hoc modified cases and results are hard to compare. This specification, with its companion data library, provides a **common, openly-licensed model** so approaches can be compared directly — the distribution analogue of transmission-side benchmark libraries such as [pglib](#).

#### Scope: beyond classical OPF

Although "OPF" names multiple sections of this document, the goal is broader than minimising generation cost. The unifying requirement of the target problems is **an accurate conductor-level representation of an unbalanced network subject to a selectable set of bounds**, i.e., it is not constrained to one single objective. Bounded cost minimisation is a convenient, solver-comparable starting point. With fixed demand and one uniform non-negative price on every real-power injection, minimizing total injection is equivalent to minimizing real losses. It does not make the nonconvex feasible set or optimum unique. The same physics underpins maximum load delivery, conservation voltage reduction, dynamic operating envelopes, and state estimation.

This is why **bounds are optional throughout the data model**: different problems activate different subsets of the feasible region. The specification is a reusable foundation, and not specialised for a single problem class.

#### Design choices

- **SI units.** All physical quantities in SI (see [Data input formatting](#)), so the data model commits to no per-unit base. Per-unit is a solver-internal convenience, out of scope here.

- **JSON schema.** Parseable from any programming language; key-value structure lets extensions add nested entries without breaking readers. A JSON Schema provides basic structural checks.
- **Real numbers, not complex.** Every complex quantity is a pair of real fields, and the model solves in real variables — for cross-language compatibility (see [Notation](#)).
- **Explicit buses.** Buses are a first-class list with their own terminals and bounds — unlike OpenDSS, where buses are implicit in element connectivity.
- **String identifiers.** Buses, lines, loads, etc. carry unique string IDs, not forced sequential integers (unlike MATPOWER).
- **Wire coordinates.** Quantities are per-conductor ("wire"), not sequence/symmetrical components, keeping the format flexible and extendable to any wire count.

### What is modelled

The specification covers the common branch and nodal elements, with these capabilities:

- **Topology:** meshed networks, electrically parallel branches, radial or looped.
- **Conductors:** 1- to 4-wire lines with full mutual coupling; explicit neutral and earth (no Kron reduction); perfect grounding and grounding through impedance.
- **Branch elements:** [lines](#), [switches](#), and galvanically-isolated [transformers](#) (single-phase, centre-tap, wye-delta, delta-wye).
- **Nodal elements:** [loads](#) (constant-power and voltage-dependent ZIP/exponential), [generators](#), [shunts](#), [capacitors](#), and [voltage sources](#).
- **Impedance:** line series impedance and shunt admittance given directly, either as a shared linecode or as per-line matrices.

### Present limitations

The model deliberately targets features universally required for distribution network OPF, not every possible problem specification. In this version:

- Only a **single voltage source** (one reference bus) is supported.
- **Snapshot** solves — no inter-temporal coupling (no storage state-of-charge dynamics, no OLTC time-domain control).
- Transformer **saturation**, magnetising/core losses, tap-changing, and detailed frequency-dependent effects are not modelled (the turns ratio is fixed by nameplate voltages — see [Transformers](#)); winding-neutral grounding is external to the element, like every other component (see [Grounding](#)).
- The default objective is linear generation/dispatch cost; quadratic cost terms are not included.

### Out of scope

The format is a model for OPF research — it does not aim to replace the Common Information Model (CIM), and it does not prescribe solver software. Its OPF formulation was inspired by [PowerModelsDistribution](#)'s `IVREPowerModel`, but extends it — native JSON data, the full set of element configurations above, and explicit grounding.

## Chapter 4

# Notation

### 4.1 Notation

This page defines the notation used throughout the [Model specification](#): the typography that distinguishes variables from parameters and real from complex, the voltage and current symbols and their rectangular realisation, the standard transform matrices, the element-wise idiom used to write magnitude bounds, and the set/topology machinery that links elements to buses.

All quantities are in **SI** units (V, A,  $\Omega$ , S, W, var, VA, rad).

#### Typography

A symbol's *typeface* and *colour* encode its type. This lets an equation be read at a glance: whether a quantity is known input data or a solved unknown, and whether it is real or complex.

| Symbol        | Meaning                                |
|---------------|----------------------------------------|
| $x$           | real scalar <b>variable</b>            |
| $\mathbf{x}$  | real vector/matrix <b>variable</b>     |
| $x$           | complex scalar <b>variable</b>         |
| $\mathbf{x}$  | complex vector/matrix <b>variable</b>  |
| $x$           | real scalar <b>parameter</b>           |
| $\mathbf{x}$  | real vector/matrix <b>parameter</b>    |
| $x$           | complex scalar <b>parameter</b>        |
| $\mathbf{x}$  | complex vector/matrix <b>parameter</b> |
| $x$           | string <b>parameter</b>                |
| $\mathbf{x}$  | array of string <b>parameters</b>      |
| $\mathcal{X}$ | set                                    |

Operators and accessors:

#### Colour in this web rendering

Colour is applied to **symbol and parameter definitions** and to the headline equations, exactly as in the Task Force PDF. In long derivations colour is sometimes dropped for legibility; the type of any symbol is always its type at definition. Nothing about the model depends on colour — it is a reading aid.

| Symbol                   | Meaning                          |
|--------------------------|----------------------------------|
| $\mathbf{X}^\top$        | transpose                        |
| $\mathbf{X}^*$           | (element-wise) complex conjugate |
| $\mathbf{X}^\mathsf{H}$  | conjugate transpose              |
| $\circ$                  | element-wise (Hadamard) product  |
| $j$                      | imaginary unit, $j^2 = -1$       |
| $a \angle b$             | polar form $a e^{jb}$            |
| $\Re(\cdot), \Im(\cdot)$ | real / imaginary part            |
| $\mathbf{1}, \mathbf{0}$ | all-ones / all-zeros vector      |

### Voltage: complex phasor and its rectangular realisation

The primary voltage quantity at bus  $i$  is a **complex, stacked per-terminal vector**. For a four-terminal bus with phases  $a, b, c$  and neutral  $n$ ,

$$\mathbf{U}_i = \begin{bmatrix} U_{i,a} \\ U_{i,b} \\ U_{i,c} \\ U_{i,n} \end{bmatrix} \in \mathbb{C}^{|\mathcal{N}_i|},$$

where  $U_{i,p}$  is the voltage of terminal  $p$  **to ground** (ground is a single 0 V reference across the network). The stacking order is the bus's declared terminal order (see [Terminal names](#)).

The complex vector decomposes into real components in rectangular or polar form:

$$\mathbf{U}_i = \mathbf{U}_i^\Re + j \mathbf{U}_i^\Im = \mathbf{U}_i^{\text{mag}} \angle \boldsymbol{\theta}_i,$$

with  $\mathbf{U}_i^\Re, \mathbf{U}_i^\Im \in \mathbb{R}^{|\mathcal{N}_i|}$  the real and imaginary parts (black — real variables),  $\mathbf{U}_i^{\text{mag}}$  the magnitude and  $\boldsymbol{\theta}_i$  the angle.

The foundational model on each page is written with the **complex** vectors. The implementation solves in the **rectangular real** parts — one variable per part per terminal — so every complex equality becomes a pair of real equalities; this realisation is described in each page's *Implementation* section, not repeated in the physics.

**Phase selection.**  $\mathbf{U}_i[\mathcal{P}]$  selects the phase (non-neutral) sub-vector  $[U_{i,a}; U_{i,b}; U_{i,c}]$ .

### Currents

Complex current vectors follow the same stacking. The **terminal current flowing into element** at its bus is the primary quantity; for a line  $\ell$  from bus  $i$  toward bus  $j$  it is  $\mathbf{I}_{\ell ij}$ , and it splits into a series and a shunt part (see [Lines](#)):

$$\mathbf{I}_{\ell ij} = \mathbf{I}_{\ell ij}^\text{s} + \mathbf{I}_{\ell ij}^\text{sh}.$$

The sign convention throughout is **positive current flows into the bus** at the terminal where it is summed by Kirchhoff's current law (KCL).

### Standard transforms and constants

Several fixed matrices recur. With the unit rotation  $\alpha = e^{j2\pi/3}$ :

**Phase-to-neutral** (four-terminal bus  $\rightarrow$  three phase-to-neutral voltages):

$$\mathbf{M}^Y = \begin{bmatrix} 1 & 0 & 0 & -1 \\ 0 & 1 & 0 & -1 \\ 0 & 0 & 1 & -1 \end{bmatrix}.$$

**Phase-to-phase / delta** (line-to-line differences of the three phases):

$$\mathbf{M}^\Delta = \begin{bmatrix} 1 & -1 & 0 \\ 0 & 1 & -1 \\ -1 & 0 & 1 \end{bmatrix}.$$

**Symmetrical components (Fortescue)**, mapping three phase quantities to zero/positive/negative sequence:

$$\mathbf{F} = \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & \alpha & \alpha^2 \\ 1 & \alpha^2 & \alpha \end{bmatrix}, \quad \mathbf{U}_i^{\text{sym}} = \begin{bmatrix} U_i^0 \\ U_i^1 \\ U_i^2 \end{bmatrix}.$$

### The element-wise bound idiom

Magnitude bounds are written first as a vector inequality on magnitudes, then in an equivalent **smooth (quadratic) form** using the Hadamard product  $\circ$  and the conjugate, which is what the solver receives. For a generic complex vector  $\mathbf{z}$  with real bound vectors  $\mathbf{z}^{\min}, \mathbf{z}^{\max}$ :

$$\mathbf{z}^{\min} \leq |\mathbf{z}| \leq \mathbf{z}^{\max} \iff \mathbf{z}^{\min} \circ \mathbf{z}^{\min} \leq \mathbf{z} \circ \mathbf{z}^* \leq \mathbf{z}^{\max} \circ \mathbf{z}^{\max}.$$

The upper (circle) bound is convex; a non-zero lower bound is non-convex. Component  $k$  reads  $(z_k^{\min})^2 \leq \Re(z_k)^2 + \Im(z_k)^2 \leq (z_k^{\max})^2$ .

This is the **engineering-bound** idiom. It is distinct from a **cartesian bound**, which constrains a variable's own real/imaginary components with a box  $x \leq \Re(z_k) \leq \bar{x}$  (and likewise for  $\Im$ ) — a rectangle, not a circle. Both appear in part 5 of each component page and are kept separate.

### Sets and indices

Finite sets collect the network's elements; each element is referenced by a unique string ID.

The **element sets** each collect one kind of network element:

$$\mathcal{N}_i \subseteq \mathcal{N}$$

denotes the terminals of bus  $i$ . (Libraries — linecodes, wire data, line geometries — are referenced by string id, not collected as topological sets.)

From these, **derived sets** capture how elements attach to buses. There are four families — topology, connectivity, terminal mappings, and configurations — summarised in one table at the [end of this section](#); the prose below defines each family, and  $\mathcal{T}, \mathcal{C}, \mathcal{M}, \mathcal{R}$  are reserved for them (distinct from the element sets above).

| Symbol        | Represents                                                           | Index    | Alt. index |
|---------------|----------------------------------------------------------------------|----------|------------|
| $\mathcal{P}$ | phases, e.g. $\{a, b, c\}$                                           | $p$      | $q$        |
| $\mathcal{N}$ | terminals (nodes), e.g. $\mathcal{P} \cup \{n\}$                     | $p$      | $q$        |
| $\mathcal{F}$ | configurations, $\{\text{WYE}, \text{DELTA}, \text{SINGLE\_PHASE}\}$ | $f$      |            |
| $\mathcal{I}$ | buses                                                                | $i$      | $j$        |
| $\mathcal{L}$ | lines                                                                | $\ell$   |            |
| $\mathcal{X}$ | transformers                                                         | $x$      |            |
| $\mathcal{W}$ | switches                                                             | $w$      |            |
| $\mathcal{S}$ | voltage sources                                                      | $s$      |            |
| $\mathcal{G}$ | generators                                                           | $g$      |            |
| $\mathcal{D}$ | loads (demand)                                                       | $d$      |            |
| $\mathcal{H}$ | shunts                                                               | $h$      |            |
| $\mathcal{K}$ | capacitors                                                           | $\kappa$ |            |

### Topology: linking branches to buses

Branch elements (lines, transformers, switches) connect two buses. A **triple index**  $lij$  names line  $\ell$  oriented from bus  $i$  to bus  $j$ ; the *forward* topology set and its *reverse* are

$$lij \in \mathcal{T}^{L\rightarrow} \subset \mathcal{L} \times \mathcal{I} \times \mathcal{I}, \quad \mathcal{T}^{L\leftarrow} = \{ \ell ji \mid lij \in \mathcal{T}^{L\rightarrow} \}, \quad \mathcal{T}^L = \mathcal{T}^{L\rightarrow} \cup \mathcal{T}^{L\leftarrow}.$$

The triple index allows parallel branches between the same bus pair. Transformer and switch topologies  $\mathcal{T}^X, \mathcal{T}^W$  are defined identically, and the **network topology** is their union,  $\mathcal{T} = \mathcal{T}^L \cup \mathcal{T}^X \cup \mathcal{T}^W$  (likewise for the forward and reverse senses).

### Connectivity: linking nodal elements to buses

Nodal elements attach to a single bus, indexed by (element, bus):

$$di \in \mathcal{C}^D \subset \mathcal{D} \times \mathcal{I}, \quad gi \in \mathcal{C}^G, \quad hi \in \mathcal{C}^H, \quad ri \in \mathcal{C}^V, \quad \kappa i \in \mathcal{C}^K, \quad si \in \mathcal{C}^S.$$

This model version permits a single voltage source, so the source bus set  $\mathcal{I}^{\text{source}} = \{i : si \in \mathcal{C}^S\}$  has  $|\mathcal{I}^{\text{source}}| = 1$ .

### Terminal names and maps

A bus declares an **ordered** list of terminal names  $\mathbf{N}_i$  (`terminal_names`), e.g.  $["a", "b", "c", "n"]$ . Element vectors and matrices stack in this order. Terminal names are strings; common conventions include  $\{a, b, c, n\}$ ,  $\{1, 2, 3, n\}$ , and IEC  $\{L1, L2, L3, N\}$ .

Every element carries a **terminal map** — the string array  $\mathbf{N}_{\ell i}$  (`terminal_map_from`),  $\mathbf{N}_{\ell j}$  (`terminal_map_to`) for a line — listing which of its bus's terminals each conductor connects to, so per-phase properties align across the network. As a *set*, a terminal mapping is written  $\mathcal{M}^\bullet$ : a member  $d z p$  of the load mapping  $\mathcal{M}^D$  says load  $d$ 's conductor at order  $z$  maps to bus terminal  $p$ ; branch mappings carry an extra bus index ( $\ell i z p$ ).

The **neutral terminal**  $n$  of a bus is identified by the bus's declaration (an explicit neutral field, or a terminal named "n"/"N"). If a bus has no neutral, all its terminals are treated as phases.

### Configurations

Loads and generators declare a connection **configuration**  $f \in \mathcal{F}$  (WYE / DELTA / SINGLE\_PHASE). The configuration sets pair each element with its configuration:  $df \in \mathcal{R}^D$  for loads,  $gf \in \mathcal{R}^G$  for generators.

### Grounding

**Ground** is a single 0 V reference. Terminals listed in a bus's `perfectly_grounded_terminals` form the ground mapping  $ip \in \mathcal{M}^\emptyset \subset \mathcal{I} \times \mathcal{N}$  have their voltage fixed to zero. Lines and shunts always carry an implicit ground connection (their shunt admittance is defined to ground). See [Grounding](#) for the full model.

### Overview of derived sets

All topology, connectivity, terminal-mapping, and configuration sets, with the tuple that indexes each:

| Symbol                                                                                     | Represents                                 | Member tuple  |
|--------------------------------------------------------------------------------------------|--------------------------------------------|---------------|
| $\mathcal{T}^{L\rightarrow}, \mathcal{T}^{L\leftarrow}, \mathcal{T}^L$                     | line topology — forward, reverse, combined | $\ell ij$     |
| $\mathcal{T}^{X\rightarrow}, \mathcal{T}^{X\leftarrow}, \mathcal{T}^X$                     | transformer topology                       | $xi j$        |
| $\mathcal{T}^{W\rightarrow}, \mathcal{T}^{W\leftarrow}, \mathcal{T}^W$                     | switch topology                            | $wij$         |
| $\mathcal{T}^{\rightarrow}, \mathcal{T}^{\leftarrow}, \mathcal{T}$                         | network topology (union of the above)      | $\cdot ij$    |
| $\mathcal{C}^S$                                                                            | voltage-source-bus connectivity            | $si$          |
| $\mathcal{C}^G$                                                                            | generator-bus connectivity                 | $gi$          |
| $\mathcal{C}^D$                                                                            | load-bus connectivity                      | $di$          |
| $\mathcal{C}^H$                                                                            | shunt-bus connectivity                     | $hi$          |
| $\mathcal{C}^K$                                                                            | capacitor-bus connectivity                 | $\kappa i$    |
| $\mathcal{I}^{\text{source}}$                                                              | source bus set ( $ \cdot  = 1$ )           | $i$           |
| $\mathcal{M}^S, \mathcal{M}^G, \mathcal{M}^D, \mathcal{M}^H, \mathcal{M}^V, \mathcal{M}^K$ | nodal terminal mappings                    | $\cdot z p$   |
| $\mathcal{M}^L, \mathcal{M}^T, \mathcal{M}^W$                                              | branch terminal mappings                   | $\cdot i z p$ |
| $\mathcal{M}^\emptyset$                                                                    | ground terminal mapping                    | $ip$          |
| $\mathcal{R}^D, \mathcal{R}^G$                                                             | load / generator configurations            | $\cdot f$     |

**Matrices** (e.g. impedance) are stored **row-first** with an underscore delimiter: matrix entry  $A_{kj}$  is the field `A_k_j`, 1-indexed. So `R_series_1_2` is the (1, 2) entry of the series-resistance matrix.

### A minimal example (bus + line)

Two four-terminal buses  $\mathcal{I} = \{A, B\}$  joined by one line  $\mathcal{L} = \{\ell\}$  from A to B, each terminal mapped straight through:

$$\mathcal{T}^{L\rightarrow} = \{\ell AB\}, \quad \mathbf{N}_A = \mathbf{N}_B = [a, b, c, n], \quad \mathbf{N}_{\ell A} = \mathbf{N}_{\ell B} = [a, b, c, n].$$

If terminal  $n$  of bus  $B$  is perfectly grounded,  $\mathcal{M}^\emptyset = \{Bn\}$  and  $U_{B,n} = 0$ . This is the running example used on the [Buses](#) and [Lines](#) pages.

## Chapter 5

# Data input formatting

### 5.1 Data input formatting

This page defines how physical quantities are represented in the JSON data model: units, the encoding of complex numbers and matrices, worked unit-conversion examples, and the meaning of required vs optional fields. It underpins every component page. Symbols are defined in [Notation](#).

#### Units

All physical quantities are in **SI**, with two deliberate exceptions noted below. The data model carries no unit fields — units are fixed by the field, per this table.

| Quantity                 | Unit                        | Symbol   |
|--------------------------|-----------------------------|----------|
| Voltage                  | volt                        | V        |
| Current                  | ampere                      | A        |
| Length                   | metre                       | m        |
| Active power             | watt                        | W        |
| Reactive power           | volt-ampere reactive        | var      |
| Apparent power           | volt-ampere                 | VA       |
| Conductance, susceptance | siemens                     | S        |
| Resistance, reactance    | ohm                         | $\Omega$ |
| Angle                    | radian                      | rad      |
| Cost rate                | US dollar per kilowatt-hour | \$/kWh   |

**Non-SI exception.** One quantity uses a customary unit for industry familiarity: **cost rate** in \$/kWh introduces two non-SI units for industry familiarity: currency(\$, which has no SI equivalent) and time in hours (1 kWh =  $3.6 \times 10^6$  J, whereas the SI base unit for energy is the Joule).

Per-unit normalisation is a solver-internal convenience and is **out of scope** here — no per-unit quantity appears in the data model.

#### Complex numbers, vectors, and matrices

JSON has only ordered lists of real numbers, so:

- A **complex** quantity is stored as a **pair of real fields** (rectangular or polar). For example a voltage source is given by `v_magnitude` and `v_angle`; an impedance by `R_series_*` and `X_series_*`. The model uses real variables throughout for the same reason (see [Notation](#)).

- A **matrix** is stored **row-first** with an underscore-delimited, **1-indexed** key: entry  $A_{kj}$  is the field `A_k_j`. So `R_series_1_2` is the (1, 2) entry of the series-resistance matrix, and `G_from_2_2` the (2, 2) from-side shunt conductance.
- A **vector** (e.g. `v_min`, `i_max`) is a JSON array, ordered to match the element's terminal map or phase order as stated on each component page.

### Conversion examples

Convert conventional power-systems quantities to SI before writing them. To allow exact cross-checks against tools that use other units (e.g. degrees), give constants to **at least 10 significant figures**.

**Suggestion:** use full floating-point precision where available, so the conversion itself does not introduce rounding error beyond what the source value already carries.

| Quantity     | Conventional              | SI                | Example → JSON                                                     |
|--------------|---------------------------|-------------------|--------------------------------------------------------------------|
| Active power | kilowatts (kW)            | watts (W)         | 3 kW → 3000.0 (or 3.0e3)                                           |
| Angle        | degrees                   | radians           | 120° → 2.0943951023931953                                          |
| Reactance    | per-unit (on a $Z$ -base) | ohms ( $\Omega$ ) | 5 % on a 100 $\Omega$ base → 5.0 ( $\Omega$ ) on the winding field |

### Required and optional fields

Each component has required fields (listed with ✓ on its page) and optional ones. The interpretation of an **absent optional** field depends on its kind:

- **Absent constraint field** ⇒ that constraint is **unbounded**. A missing voltage upper bound means no upper bound is enforced; a missing `i_max` means no thermal limit.
- **Absent parameter field** ⇒ a **null / zero** value. A missing transformer `r_series_from` means that winding resistance is 0  $\Omega$ .

### Permissible strings and string arrays

Several fields are string-valued. Some are free identifiers; others are restricted to an enumeration or must reference terminals declared elsewhere.

| Field                                                                                           | Restriction                                                                                               |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <code>terminal_names</code> (a bus's conductor names)                                           | Any strings; see the naming conventions below                                                             |
| <code>configuration</code> (load / generator / capacitor)                                       | A nodal configuration string: WYE, DELTA, or SINGLE_PHASE (per element support — generators are WYE only) |
| <code>model</code> (load)                                                                       | CONSTANT_POWER, CONSTANT_CURRENT, CONSTANT_IMPEDANCE, ZIP, EXPONENTIAL                                    |
| <code>perfectly_grounded_terminals</code>                                                       | Array; every entry must be one of the bus's <code>terminal_names</code>                                   |
| <code>terminal_map</code> ,<br><code>terminal_map_from</code> ,<br><code>terminal_map_to</code> | Array; every entry must be one of the target bus's <code>terminal_names</code>                            |
| <code>source</code> (linecode)                                                                  | Free text (provenance note)                                                                               |

### Terminal conventions

Terminal identifiers are **strings**; a component's terminal map carries no ordering semantics beyond the array order. The written form used in specification text is "1", "2", "3", "n", but the following conventions are also commonly used:

| Convention      | Phases         | Neutral          |
|-----------------|----------------|------------------|
| OpenDSS numeric | "1" "2" "3"    | "4" (positional) |
| Canonical       | "1" "2" "3"    | "n"              |
| Letter          | "a" "b" "c"    | "n" / "N"        |
| IEC 60445       | "L1" "L2" "L3" | "N"              |

Because a label alone does not say which conductor is a phase and which is the neutral, a case may classify roles once for the whole network in an optional top-level `terminal_conventions` block, for example:

```
"terminal_conventions": { "phase": ["a", "b", "c"], "neutral": ["n"] }
```

## Chapter 6

# Grounding

### 6.1 Grounding

In a four-wire model, the neutral and earth are explicit, and how each element connects to ground determines the return paths for current. This page consolidates the grounding model that the component pages apply locally. Symbols are defined in [Notation](#).

#### Ground as a common reference

**Ground is a single 0 V reference** — a "copper plate" shared across the entire network. It is not a per-element node: elements connect to a **bus terminal**, and that terminal may (or may not) connect to ground. Because ground is a common reference, no separate ground node is indexed in element matrices, and the terminal name "g" is **reserved** for the common ground across all elements.

#### Two ways a terminal reaches ground

- **Perfect grounding** — a bus terminal listed in `perfectly_grounded_terminals` is pinned to the reference,  $U_{i,p} = 0$ . Current can still flow into earth there: a free earth-injection current balances the terminal's KCL (see [Buses](#)). This is a **bus property**.
- **Grounding through an impedance** — modelled as a [shunt](#) (or capacitor) between the terminal and ground, e.g. a single-entry admittance  $Y_{h,nn}$  on the neutral grounds it through  $1/Y_{h,nn}$ .

An **ungrounded** terminal has neither; its voltage floats, determined by the network equations. A bus whose terminals are all ungrounded needs no grounding data.

#### Which elements connect to ground

The "always" elements (lines, shunts, voltage sources) carry an implicit ground connection and need no grounding declaration. The only element that *optionally* declares grounding is the **bus** — everything else routes through a bus terminal or is intrinsic to the element.

#### In the mathematical model

Perfect grounding contributes the equality  $U_{i,p} = 0$  for every  $ip \in \mathcal{M}^0$  (the ground map) and a free earth current so KCL still balances. Impedance grounding contributes a linear admittance current  $Y U$  to KCL, exactly like any [shunt](#). No grounding scheme reduces the conductor matrices — neutrals and earth conductors stay explicit, which is what makes this a genuinely four-wire formulation.

| Element        | Connection to ground     | Note                                                                                |
|----------------|--------------------------|-------------------------------------------------------------------------------------|
| Load           | never                    | Grounding is a bus property or a shunt                                              |
| Generator      | never                    | Grounding is a bus property or a shunt                                              |
| Capacitor      | never                    | Grounding is a bus property or a shunt                                              |
| Trans-former   | never                    | Grounding is a bus property or a shunt                                              |
| Switch         | never                    | Switches are not grounded                                                           |
| Bus terminal   | <b>optional</b>          | perfectly_grounded_terminals for perfect grounding; a shunt for impedance grounding |
| Line           | <b>always (implicit)</b> | A non-zero shunt admittance passes current to ground                                |
| Shunt          | <b>always (implicit)</b> | The admittance is defined between terminals and ground                              |
| Voltage source | <b>always</b>            | Source voltages are defined line-to-ground                                          |

## Chapter 7

### Worked example

#### 7.1 A worked network example

The [Notation](#) page defines the sets, topology, connectivity, and terminal-map machinery abstractly. This page makes them concrete by constructing every set from one small network — the fastest way to internalise how a case is assembled.

The network has four buses  $\{A, B, C, D\}$  joined by a line, a transformer, and a switch, feeding single- and three-phase loads, a single-phase generator, a neutral-grounding shunt, and a voltage source, with a mix of grounded and ungrounded terminals. The circled numbers on the figure are element IDs.

#### Element sets

The branch and nodal elements (see the [classification](#) into branch vs nodal):

$$\begin{aligned} \mathcal{I} &= \{A, B, C, D\}, & \mathcal{L} &= \{2\}, & \mathcal{W} &= \{9\}, & \mathcal{X} &= \{6\}, \\ \mathcal{D} &= \{1, 5, 7\}, & \mathcal{G} &= \{3\}, & \mathcal{H} &= \{4\}, & \mathcal{S} &= \{8\}. \end{aligned}$$

#### Topology (branches → buses)

The forward topology orients each branch from its from bus to its to bus:

$$\mathcal{T}^{L \rightarrow} = \{2 \text{ A B}\}, \quad \mathcal{T}^{X \rightarrow} = \{6 \text{ C B}\}, \quad \mathcal{T}^{W \rightarrow} = \{9 \text{ C D}\}.$$

The combined line topology adds the reverse orientation,  $\mathcal{T}^L = \{2 \text{ A B}, 2 \text{ B A}\}$ , and likewise for the transformer and switch.

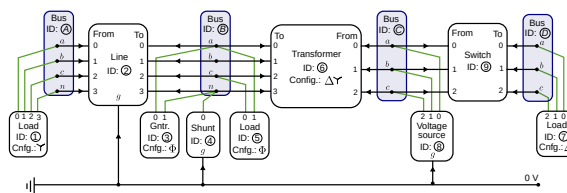


Figure 7.1: Example four-bus network with single- and three-phase elements.

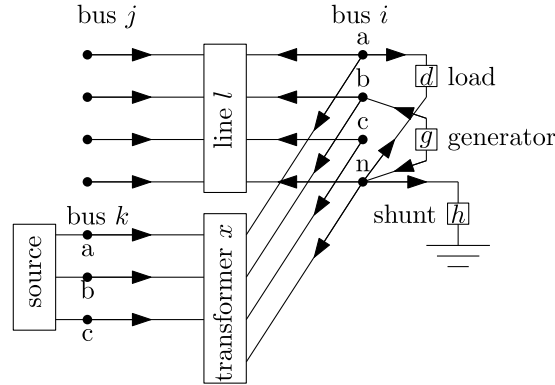


Figure 7.2: Terminal maps align an element's conductors to bus terminals.

**Connectivity (nodal elements → buses)**

$$\mathcal{C}^D = \{1 \text{ A}, 5 \text{ B}, 7 \text{ D}\}, \quad \mathcal{C}^G = \{3 \text{ B}\}, \quad \mathcal{C}^H = \{4 \text{ B}\}, \quad \mathcal{C}^S = \{8 \text{ C}\}.$$

The single voltage source fixes  $|\mathcal{I}^{\text{source}}| = 1$  (bus C is the reference).

**Terminal maps**

Each element lists which bus terminals its conductors connect to, in order. As stored in the data model (terminal\_map, or terminal\_map\_from/\_to for branches):

| Element             | Map                                                               | Notes                       |
|---------------------|-------------------------------------------------------------------|-----------------------------|
| Load 1 (bus A)      | ["a", "b", "c", "n"]                                              | three-phase wye             |
| Load 5 (bus B)      | ["c", "a"]                                                        | single-phase, across<br>c-a |
| Load 7 (bus D)      | ["a", "b", "c"]                                                   | delta                       |
| Generator 3 (bus B) | ["a", "n"]                                                        | single-phase                |
| Shunt 4 (bus B)     | ["n"]                                                             | neutral grounding           |
| Source 8 (bus C)    | ["a", "b", "c"]                                                   |                             |
| Line 2              | from ["a", "b", "c", "n"], to ["a", "b", "c", "n"]                | four-wire                   |
| Transformer 6       | from ["a", "b", "c", "n"] (C, wye), to ["a", "b", "c"] (B, delta) | $\Delta Y$                  |
| Switch 9            | from ["a", "b", "c"], to ["a", "b", "c"]                          |                             |

**Configurations**

The nodal-element connection configurations:

$$\mathcal{R}^D = \{1: \text{WYE}, 5: \text{SINGLE\_PHASE}, 7: \text{DELTA}\}, \quad \mathcal{R}^G = \{3: \text{SINGLE\_PHASE}\}.$$

**Grounding**

Buses declare which terminals are perfectly grounded. In this network the source bus neutral and any explicitly-earthed terminals are pinned to 0 V (bus property), while the shunt at bus B grounds the neutral through

an impedance. See [Grounding](#) for the full model; the line and shunt additionally carry the implicit ground connection of their shunt admittances.

From these sets, the [component pages](#) instantiate the variables and constraints: a voltage vector per bus terminal, series currents on the line and transformer windings, load/generator/source currents, and one KCL equation per terminal tying them together.

## Chapter 8

# Document metadata

### 8.1 Document metadata

Every case may carry a top-level meta object providing provenance, licensing, and versioning. It is optional for backward compatibility.

**Suggestion:** populate the meta object where possible — provenance, licensing, and versioning information helps downstream consumers of the dataset.

This is a *data-model* page — meta carries no OPF variables or constraints. Symbols are defined in [Notation](#).

#### The meta object

| Field                | Type              | Description                                                                                                                  |
|----------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------|
| \$schema             | string (URI)      | \$id of the JSON Schema document this file was validated against, released from <a href="#">dsopt-schema</a>                 |
| version              | string            | Version of this <b>dataset</b> (not the schema)                                                                              |
| title                | string            | Human-readable dataset name (distinct from the machine-readable root name)                                                   |
| description          | string            | Free-text notes or caveats                                                                                                   |
| created              | string (ISO 8601) | Creation timestamp, UTC                                                                                                      |
| modified             | string (ISO 8601) | Last-revision timestamp, UTC                                                                                                 |
| license              | string            | SPDX identifier (e.g. CC-BY-4.0) or an https:// URI to the licence                                                           |
| frequency            | number (Hz)       | Nominal system frequency — <b>check-only</b> (validated against line_geometry/linecode derivation frequency; never rescales) |
| authors              | object[]          | Ordered authors — see below                                                                                                  |
| data_sources         | object[]          | Upstream data references — see below                                                                                         |
| case_study_generator | object            | Tool that wrote the file — see below                                                                                         |
| provenance           | object            | Free-form conversion/audit notes written by tooling                                                                          |

**authors[]**: name, email, orcid (bare hyphenated form XXXX-XXXX-XXXX-XXXX, without the https://orcid.org/ prefix).

**data\_sources[]**: name, url (dereferenceable https://), format (e.g. OpenDSS, PMD-JSON, MATPOWER), doi, version.

**case\_study\_generator:** tool, version.

### Conformance notes

- `$schema` follows the JSON Schema `$schema` keyword convention; it should be a versioned, dereferenceable URI (a floating reference to `main` is acceptable in draft). The canonical schema documents live in the [dsopt-schema](#) repository, one immutable directory per version, so the URI has the form `https://raw.githubusercontent.com/distribution-system-opt/dsopt-schema/main/schema/bmopf/<version>/bmopf.json`. A reader selects the schema version from this field. The value in the example below stays a placeholder until a schema version is released from that repository.
- Dates must be UTC and should include a time component (THH:MM:SSZ); a date-only value is permitted when the time is unknown.
- `license` should be a URI when the licence needs specific attribution language beyond an SPDX identifier.
- Unknown fields may be present; conformant readers must ignore them.
- `frequency` is a consistency check only — it never defaults or rescales any quantity.

### Example

```
{
  "name": "enwl_network1_feeder1",
  "meta": {
    "$schema": "https://example.org/bmopf/schema/v1/bmopf.json",
    "version": "1.0",
    "title": "ENWL LV Network 1, Feeder 1",
    "description": "Four-wire 230/400 V LV feeder from the ENWL LVNS dataset.",
    "created": "2026-06-15T10:00:00Z",
    "license": "https://creativecommons.org/licenses/by/4.0/",
    "frequency": 50.0,
    "authors": [
      { "name": "A. Researcher", "email": "a@example.org", "orcid": "0000-0001-9534-2265" }
    ],
    "data_sources": [
      { "name": "ENWL LVNS dataset", "url": "https://www.enwl.co.uk/lvns", "format": "OpenDSS" }
    ],
    "case_study_generator": { "tool": "example-writer", "version": "0.1.0" }
  },
  "bus": { "...": {} },
  "line": { "...": {} }
}
```

**Part III**

**Components**

## Chapter 9

# Buses

### 9.1 Buses

A **bus** is a set of electrical terminals sharing a location. The network's voltage variables are defined per bus, and it is here that Kirchhoff's current law is enforced. Parts 1–5 state the foundational (physics) model. Symbols are defined in [Notation](#).

#### 1. Data model

A bus is an entry of the top-level bus object, keyed by its string ID  $i$ .

| Field                        | Type     | Unit | Req. | Description                                               |
|------------------------------|----------|------|------|-----------------------------------------------------------|
| terminal_names               | string[] | -    | ✓    | Ordered terminal names $\mathbf{N}_i$                     |
| perfectly_grounded_terminals | string[] | -    |      | Terminals fixed to 0 V                                    |
| v_min, v_max                 | number[] | V    |      | Phase-to-ground magnitude bounds, one per phase terminal  |
| vn_max                       | number   | V    |      | Neutral-to-ground magnitude cap                           |
| vpn_min, vpn_max             | number[] | V    |      | Phase-to-neutral magnitude bounds, one per phase          |
| vpp_min, vpp_max             | number[] | V    |      | Phase-to-phase magnitude bounds, one per phase pair       |
| vpos_min, vpos_max           | number   | V    |      | Positive-sequence magnitude bounds (three-phase buses)    |
| vneg_max                     | number   | V    |      | Negative-sequence magnitude cap (lower bound is always 0) |
| vzero_max                    | number   | V    |      | Zero-sequence magnitude cap (lower bound is always 0)     |

All bound fields are optional: an absent bound means the corresponding limit is not enforced.

#### 2. Input symbols

#### 3. Variables

Each terminal  $p \in \mathcal{N}_i$  has a complex voltage-to-ground  $U_{i,p}$ , stacked into the bus voltage vector

$$\mathbf{U}_i = [U_{i,p}]_{p \in \mathcal{N}_i} \in \mathbb{C}^{|\mathcal{N}_i|}.$$

| Field               | Symbol                                 | Notes                                        |
|---------------------|----------------------------------------|----------------------------------------------|
| terminal_names      | $\mathbf{N}_i$                         | stacking order for all bus vectors           |
| v_min, v_max        | $U_i^{\min}, U_i^{\max}$               | per phase, to ground                         |
| vn_max              | $U_{i,n}^{\max}$                       | scalar, neutral to ground                    |
| vpn_min, vpn_max    | $U_i^{Y,\min}, U_i^{Y,\max}$           | per phase, to neutral                        |
| vpp_min, vpp_max    | $U_i^{\Delta,\min}, U_i^{\Delta,\max}$ | per phase pair                               |
| vpos_min, vpos_max  | $U_i^{1,\min}, U_i^{1,\max}$           | positive-sequence magnitude                  |
| vneg_max, vzero_max | $U_i^{2,\max}, U_i^{0,\max}$           | negative-/zero-sequence caps (lower bound 0) |

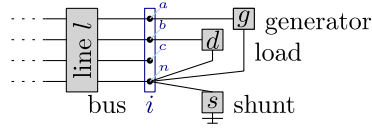


Figure 9.1: Kirchhoff's current law at a bus terminal: the signed currents of all incident elements sum to zero.

Ground is the common 0 V reference, so these are the only quantities needed to describe the bus's electrical state.

#### 4. Equality constraints

##### Perfect grounding

A perfectly grounded terminal is pinned to the ground reference:

$$U_{i,p} = 0 \quad \forall ip \in \mathcal{M}^\emptyset.$$

##### Voltage source (reference bus)

The voltage source  $s$  at bus  $i$  fixes its phase terminals to the reference magnitude/angle and its neutral to ground:

$$U_{i,p} = U_{i,p}^s = |U_{i,p}^s| \angle \theta_{i,p}^s, \quad U_{i,n} = 0.$$

The source also injects a free slack current into KCL, making this the power-flow reference bus (detailed on the future *Voltage sources* page).

##### Kirchhoff's current law

At each terminal, the currents of all incident elements sum to zero (sign convention: into the bus positive):

$$\underbrace{\sum_{\ell ij \in \mathcal{T}^L} \mathbf{I}_{\ell ij}}_{\text{lines}} + \underbrace{\sum_{xij \in \mathcal{T}^X} \mathbf{I}_{xij}}_{\text{transformers}} + \underbrace{\sum_{w ij \in \mathcal{T}^W} \mathbf{I}_{w ij}}_{\text{switches}} + \underbrace{\sum_{di \in \mathcal{C}^D} \mathbf{I}_d}_{\text{loads}} - \underbrace{\sum_{gi \in \mathcal{C}^G} \mathbf{I}_g}_{\text{generators}} + \underbrace{\sum_{hi \in \mathcal{C}^H} \mathbf{I}_h}_{\text{shunts}} = \mathbf{0}.$$

This holds at every terminal except where the bus is voltage-source-fixed or grounded (there the terminal voltage is set directly, and the balancing current is a free variable rather than a constraint).

## 5. Inequality constraints

### Cartesian variable bounds

**None.** The physics places no box on the rectangular components of  $\mathbf{U}_i$ ; voltage is constrained only by the engineering bounds below and by grounding/source fixing. A box on the real/imaginary parts would impose an axis-aligned magnitude-and-angle limit with no operational meaning.

### Engineering bounds

Applied at ungrounded, non-source phase terminals (the neutral is excluded from phase bounds — its voltage is set by physics, not operational limits).

**Phase-to-ground magnitude.** With  $U_{i,n}^{\min} = 0$  and the neutral's upper bound supplied by  $vn\_max$ :

$$U_{i,n}^{\min} \circ U_{i,n}^{\min} \leq \mathbf{U}_i \circ \mathbf{U}_i^* \leq U_{i,n}^{\max} \circ U_{i,n}^{\max}.$$

**Neutral-to-ground cap** ( $vn\_max$ , only when the neutral floats):

$$|U_{i,n}| \leq U_{i,n}^{\max} \iff U_{i,n} U_{i,n}^* \leq (U_{i,n}^{\max})^2.$$

**Phase-to-neutral magnitude.** With  $\mathbf{U}_i^Y = \mathbf{M}^Y \mathbf{U}_i$  (or  $\mathbf{U}_i[\mathcal{P}]$  when the neutral is grounded):

$$U_{i,n}^{Y,\min} \circ U_{i,n}^{Y,\min} \leq \mathbf{U}_i^Y \circ (\mathbf{U}_i^Y)^* \leq U_{i,n}^{Y,\max} \circ U_{i,n}^{Y,\max}.$$

**Phase-to-phase magnitude.** With  $\mathbf{U}_i^\Delta = \mathbf{M}^\Delta \mathbf{U}_i[\mathcal{P}]$ :

$$U_{i,n}^{\Delta,\min} \circ U_{i,n}^{\Delta,\min} \leq \mathbf{U}_i^\Delta \circ (\mathbf{U}_i^\Delta)^* \leq U_{i,n}^{\Delta,\max} \circ U_{i,n}^{\Delta,\max}.$$

**Symmetrical-component magnitudes** (three-phase buses). The sequence voltages use phase-to-neutral inputs when a neutral floats, phase-to-ground otherwise:

$$\mathbf{U}_i^{\text{sym}} = \mathbf{F} \mathbf{U}_i^Y = \begin{bmatrix} U_i^0 \\ U_i^1 \\ U_i^2 \end{bmatrix}, \quad \begin{aligned} (U_i^{1,\min})^2 &\leq U_i^1 (U_i^1)^* \leq (U_i^{1,\max})^2, \\ U_i^2 (U_i^2)^* &\leq (U_i^{2,\max})^2, \quad U_i^0 (U_i^0)^* \leq (U_i^{0,\max})^2. \end{aligned}$$

Only the positive sequence carries a lower bound.

**Intra-bus angle difference.** For each phase pair  $(p, q)$ , with a nominal offset  $\Delta = \theta_{i,q}^{\text{nom}} - \theta_{i,p}^{\text{nom}}$  and  $z = U_{i,p}^* U_{i,q} e^{-j\Delta} = c + js$ :

$$\tan(\theta_i^{\Delta,\min}) c \leq s \leq \tan(\theta_i^{\Delta,\max}) c,$$

which bounds the angle between the two terminals (faithful while  $c > 0$ , i.e. the centred deviation stays within  $\pm\pi/2$ ).

## Chapter 10

### Lines

#### 10.1 Lines

A **line** is a multi-conductor power cable or overhead line, modelled as a nominal  $\Pi$  equivalent: a series impedance with a shunt admittance half-section at each end. Parts 1–5 state the foundational (physics) model. Symbols are defined in [Notation](#).

##### 1. Data model

A line is an entry of the top-level line object, keyed by its string ID  $\ell$ . It carries **exactly one impedance source**: either a referenced linecode (per-metre matrices scaled by length) or inline absolute matrices.

The oneOf schema rule requires **either** linecode + length **or** at least R\_series\_1\_1 + X\_series\_1\_1 inline (and then *no* linecode).

##### Linecode

A linecode  $c$  stores **per-metre** matrices shared across lines of the same type.

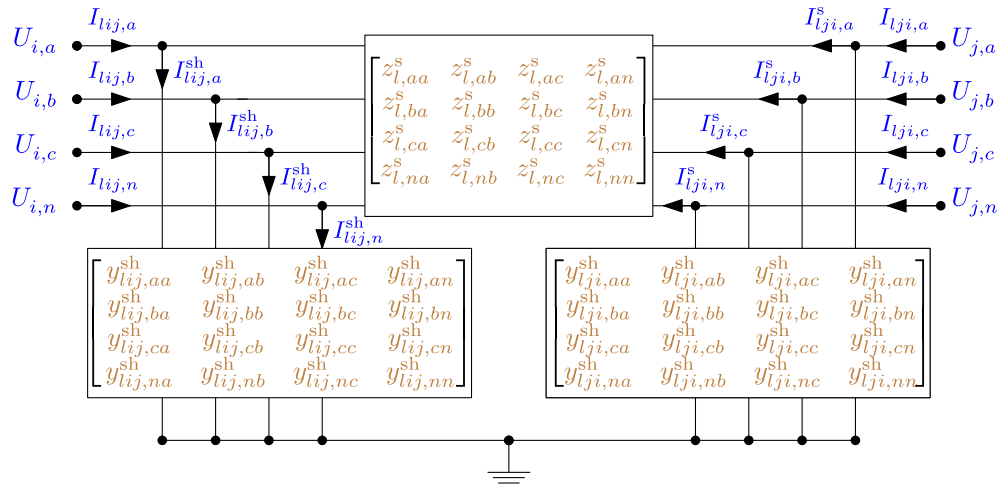


Figure 10.1: Four-wire nominal  $\Pi$ -model of a line: a series impedance with a shunt admittance half-section at each end, both referenced to ground.

| Field              | Type      | Unit     | Req.            | Description                                                |
|--------------------|-----------|----------|-----------------|------------------------------------------------------------|
| bus_from, bus_to   | string    | -        | ✓               | Endpoint bus IDs $i, j$                                    |
| terminal_map_from  | string[]  | -        | ✓               | Conductor→terminal map at bus_from, $\mathbf{N}_{\ell i}$  |
| terminal_map_to    | string[]  | -        | ✓               | Conductor→terminal map at bus_to, $\mathbf{N}_{\ell j}$    |
| linecode           | string    | -        | (one-of)        | Linecode ID (per-metre matrices)                           |
| length             | num-ber   | m        | (with linecode) | Line length $L_\ell$                                       |
| R_series_p_q,      | num-ber   | $\Omega$ | (one-of)        | Inline <b>absolute</b> series impedance entries            |
| X_series_p_q       | ber       |          |                 |                                                            |
| G_from_p_q,        | num-ber   | S        |                 | Inline from-side shunt admittance entries                  |
| B_from_p_q         | ber       |          |                 |                                                            |
| G_to_p_q, B_to_p_q | num-ber   | S        |                 | Inline to-side shunt admittance entries                    |
| i_max              | num-ber[] | A        |                 | Per-conductor current-magnitude limit (overrides linecode) |
| s_max              | num-ber[] | VA       |                 | Per-conductor apparent-power limit (overrides linecode)    |

| Field         | Type      | Unit              | Req. | Description                                                                                                                                                 |
|---------------|-----------|-------------------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R_series_p_q, | num-ber   | $\Omega/\text{m}$ | ✓    | Per-metre series impedance $\Re, \Im(\mathbf{Z}_c^s)$                                                                                                       |
| X_series_p_q  | ber       |                   |      |                                                                                                                                                             |
| G_from_p_q,   | num-ber   | S/m               |      | Per-metre shunt conductance                                                                                                                                 |
| G_to_p_q      | ber       |                   |      |                                                                                                                                                             |
| B_from_p_q,   | num-ber   | S/m               |      | Per-metre shunt susceptance                                                                                                                                 |
| B_to_p_q      | ber       |                   |      |                                                                                                                                                             |
| i_max         | num-ber[] | A                 |      | Per-conductor current limit $\mathbf{I}_c^{\max}$                                                                                                           |
| s_max         | num-ber[] | VA                |      | Per-conductor apparent-power limit                                                                                                                          |
| source        | string    | -                 |      | Free-text provenance note for the impedance/admittance matrices (e.g. fem, datasheet, import); descriptive metadata only, no effect on the electrical model |

## 2. Input symbols

| Field                         | Symbol                                                                                  | Notes                         |
|-------------------------------|-----------------------------------------------------------------------------------------|-------------------------------|
| linecode R_series, X_series   | $\mathbf{Z}_c^s = \mathbf{R} + j\mathbf{X}$                                             | $\Omega/\text{m}$ matrix      |
| linecode G/B_from, G/B_to     | $\mathbf{Y}_c^{\text{sh}} = \mathbf{G} + j\mathbf{B}$                                   | S/m matrix                    |
| length                        | $L_\ell$                                                                                | metres                        |
| line R_series/X_series, G/B_* | $\mathbf{Z}_\ell^s, \mathbf{Y}_{\ell ij}^{\text{sh}}, \mathbf{Y}_{\ell ji}^{\text{sh}}$ | $\Omega, \text{S}$ (absolute) |
| i_max                         | $\mathbf{I}_{\ell ij}^{\max}$                                                           | per conductor                 |
| s_max                         | $\mathbf{S}_{\ell ij}^{\max}$                                                           | per conductor                 |

### Parameter construction

The line's series impedance and shunt admittances come from **one** source:

$$\text{linecode: } \mathbf{Z}_\ell^s = \mathbf{Z}_c^s L_\ell, \quad \mathbf{Y}_{\ell ij}^{\text{sh}} = \mathbf{Y}_{\ell ji}^{\text{sh}} = \frac{1}{2} \mathbf{Y}_c^{\text{sh}} L_\ell;$$

or the inline absolute matrices are used directly (never scaled by length). Inline data permits **independent** from- and to-side shunts  $\mathbf{Y}_{\ell ij}^{\text{sh}} \neq \mathbf{Y}_{\ell ji}^{\text{sh}}$ .

### 3. Variables

A line has  $n_\ell = |\mathbf{N}_{\ell i}|$  conductors. The **series current** flowing from  $i$  toward  $j$  is the independent unknown:

$$\mathbf{I}_{\ell ij}^s \in \mathbb{C}^{n_\ell}.$$

The **terminal current**  $\mathbf{I}_{\ell ij}$  (what enters the bus's KCL) and the **shunt current**  $\mathbf{I}_{\ell ij}^{\text{sh}}$  are the other line currents; the equalities of part 4 relate them to  $\mathbf{I}_{\ell ij}^s$  and the bus voltages.

### 4. Equality constraints

#### Ohm's law (series voltage drop)

Across the series impedance, for the forward orientation  $\ell ij$ :

$$\mathbf{U}_j[\mathbf{N}_{\ell j}] = \mathbf{U}_i[\mathbf{N}_{\ell i}] - \mathbf{Z}_\ell^s \mathbf{I}_{\ell ij}^s.$$

The impedance matrix is full: off-diagonal entries couple the voltage drop on one conductor to the current in another.

#### Shunt currents

Each  $\Pi$  half-section draws a current set by its admittance and the local bus voltage:

$$\mathbf{I}_{\ell ij}^{\text{sh}} = \mathbf{Y}_{\ell ij}^{\text{sh}} \mathbf{U}_i, \quad \mathbf{I}_{\ell ji}^{\text{sh}} = \mathbf{Y}_{\ell ji}^{\text{sh}} \mathbf{U}_j.$$

#### Terminal current and series-current conservation

The current entering the line at each bus is the series current plus that end's shunt current, and the two directional series currents are equal and opposite:

$$\mathbf{I}_{\ell ij} = \mathbf{I}_{\ell ij}^s + \mathbf{I}_{\ell ij}^{\text{sh}}, \quad \mathbf{I}_{\ell ji} = \mathbf{I}_{\ell ji}^s + \mathbf{I}_{\ell ji}^{\text{sh}}, \quad \mathbf{I}_{\ell ij}^s + \mathbf{I}_{\ell ji}^s = \mathbf{0}.$$

The terminal currents  $\mathbf{I}_{\ell ij}, \mathbf{I}_{\ell ji}$  are the contributions this line makes to KCL at buses  $i$  and  $j$  (see [Buses §4](#)).

## 5. Inequality constraints

### Engineering bounds

**Thermal current limit** on the **terminal current**, at both ends, for all conductors including neutral:

$$\mathbf{I}_{\ell ij} \circ (\mathbf{I}_{\ell ij})^* \leq \mathbf{I}_{\ell ij}^{\max} \circ \mathbf{I}_{\ell ij}^{\max}, \quad \mathbf{I}_{\ell ji} \circ (\mathbf{I}_{\ell ji})^* \leq \mathbf{I}_{\ell ij}^{\max} \circ \mathbf{I}_{\ell ij}^{\max}.$$

**Apparent-power limit** (optional, from  $s_{\max}$ ), with the terminal power  $\mathbf{S}_{\ell ij} = \mathbf{U}_i \circ (\mathbf{I}_{\ell ij})^*$ :

$$\mathbf{S}_{\ell ij} \circ (\mathbf{S}_{\ell ij})^* \leq \mathbf{S}_{\ell ij}^{\max} \circ \mathbf{S}_{\ell ij}^{\max}.$$

### Cartesian variable bounds

A **box** may be placed on the series-current variable  $\mathbf{I}_{\ell ij}^s$ . (This is a solver-conditioning aid implied by the engineering bound.) Because the engineering limit constrains the *total* (terminal) current, the box on the series part is the limit inflated by the worst-case shunt contribution  $\rho_k$  on that row:

$$|\Re(\mathbf{I}_{\ell ij,k}^s)| \leq \mathbf{I}_{\ell ij,k}^{\max} + \rho_k, \quad |\Im(\mathbf{I}_{\ell ij,k}^s)| \leq \mathbf{I}_{\ell ij,k}^{\max} + \rho_k,$$

with  $\rho_k \leq \sum_{j'} |Y_{\ell ij,kj'}^{\text{sh}}| \mathbf{U}_{i,j'}^{\max}$  from the endpoint voltage caps.

## Chapter 11

# Switches

### 11.1 Switches

A **switch** is an ideal, lossless branch connecting two buses conductor-for-conductor. When *closed* it short-circuits its terminals; when *open* it carries no current. Symbols are defined in [Notation](#).

#### 1. Data model

A switch is an entry of the top-level switch object, keyed by its string ID  $w$ .

| Field             | Type     | Unit | Req. | Description                              |
|-------------------|----------|------|------|------------------------------------------|
| bus_from, bus_to  | string   | -    | ✓    | Endpoint bus IDs $i, j$                  |
| terminal_map_from | string[] | -    | ✓    | Conductor→terminal map at bus_from       |
| terminal_map_to   | string[] | -    | ✓    | Conductor→terminal map at bus_to         |
| open_switch       | bool     | -    | ✓    | true = open (no current), false = closed |
| i_max             | number[] | A    |      | Per-conductor current-magnitude limit    |

#### 2. Input symbols

| Field       | Symbol                                     | Notes                          |
|-------------|--------------------------------------------|--------------------------------|
| open_switch | state $\in \{\text{open}, \text{closed}\}$ | selects which equality applies |
| i_max       | $\mathbf{I}_{wij}^{\max}$                  | per conductor                  |

#### 3. Variables

A switch has  $n_w$  conductors and one complex current per conductor, flowing from  $i$  toward  $j$ :

$$\mathbf{I}_{wij} \in \mathbb{C}^{n_w}.$$

The reverse current  $\mathbf{I}_{wji}$  is its negative.

#### 4. Equality constraints

##### Closed switch — zero voltage drop

A closed switch equates the two ends conductor-by-conductor:

$$\mathbf{U}_i[\mathbf{N}_{wi}] = \mathbf{U}_j[\mathbf{N}_{wj}].$$

### Open switch — zero current

An open switch carries no current and imposes no voltage coupling (the two buses are electrically disconnected at these conductors):

$$\mathbf{I}_{wij} = \mathbf{0}.$$

### Current conservation and KCL

In both states the current is conserved, and enters each bus's KCL with opposite sign:

$$\mathbf{I}_{wji} = -\mathbf{I}_{wij}.$$

## 5. Inequality constraints

### Cartesian variable bounds

When a current limit is present, a **box** is placed on the switch-current variable components,  $|\Re(\mathbf{I}_{wij,k})|, |\Im(\mathbf{I}_{wij,k})| \leq \mathbf{I}_{wij,k}^{\max}$ , to bound the search. It is implied by the engineering limit below.

### Engineering bounds

**Thermal current limit** (a switch has no shunt, so both ends carry equal magnitude — one constraint suffices):

$$\mathbf{I}_{wij} \circ (\mathbf{I}_{wij})^* \leq \mathbf{I}_{wij}^{\max} \circ \mathbf{I}_{wij}^{\max}.$$

## Chapter 12

### Loads

#### 12.1 Loads

A **load** draws a specified power at a bus. Its power may be constant, or vary with voltage (ZIP / exponential). Three connection configurations are supported: single-phase, wye (with neutral return), and delta. Symbols are defined in [Notation](#).

##### 1. Data model

A load is an entry of the top-level load object, keyed by its string ID  $d$ .

| Field                     | Type     | Unit   | Req.      | Description                                                                      |
|---------------------------|----------|--------|-----------|----------------------------------------------------------------------------------|
| bus                       | string   | -      | ✓         | Host bus ID $i$                                                                  |
| terminal_map              | string[] | -      | ✓         | Conductor→terminal map $\mathbf{N}_d$                                            |
| configuration             | string   | -      | ✓         | WYE, SINGLE_PHASE, or DELTA                                                      |
| p_nom, q_nom              | number[] | W, var | ✓         | Nominal per-sub-load active/reactive power                                       |
| model                     | string   | -      |           | CONSTANT_POWER (default), CONSTANT_CURRENT, CONSTANT_IMPEDANCE, ZIP, EXPONENTIAL |
| v_nom                     | number[] | V      | (zip/exp) | Nominal voltage at which p_nom/q_nom hold                                        |
| alpha_z, alpha_i, alpha_p | number[] | -      | (zip)     | Active ZIP fractions ( $\alpha_Z + \alpha_I + \alpha_P = 1$ )                    |
| beta_z, beta_i, beta_p    | number[] | -      | (zip)     | Reactive ZIP fractions                                                           |
| gamma_p, gamma_q          | number[] | -      | (exp)     | Active/reactive voltage exponents                                                |

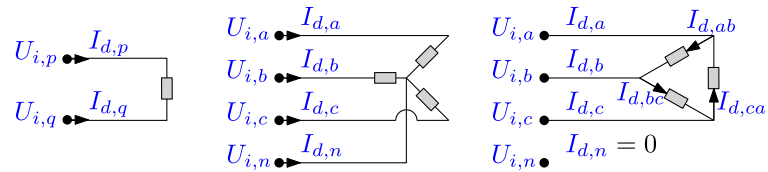


Figure 12.1: Single-phase (left), wye (centre), and delta (right) load connections and their current variables.

## 2. Input symbols

| Field         | Symbol                                                    | Notes             |
|---------------|-----------------------------------------------------------|-------------------|
| p_nom, q_nom  | $P_d^{\text{nom}}, Q_d^{\text{nom}}$                      | per sub-load      |
| v_nom         | $V_d^{\text{nom}}$                                        | reference voltage |
| ZIP fractions | $\alpha_Z, \alpha_I, \alpha_P, \beta_Z, \beta_I, \beta_P$ |                   |
| exponents     | $\gamma_P, \gamma_Q$                                      |                   |

A **sub-load**  $k$  is one two-terminal power element of the load: a phase-to-neutral branch (WYE), the single terminal pair (SINGLE\_PHASE), or one line-to-line branch (DELTA).

## 3. Variables

Each sub-load  $k$  draws a complex current  $I_{d,k}$ , stacked into  $\mathbf{I}_d$ . These are the currents the load contributes to KCL; the neutral return current is not an independent variable.

## 4. Equality constraints

### Sub-load voltage drop and power

Let  $\Delta U_{d,k}$  be the voltage across sub-load  $k$ : phase-to-neutral for WYE, the terminal-pair difference for SINGLE\_PHASE, line-to-line for DELTA. The complex power the sub-load absorbs is

$$S_{d,k} = \Delta U_{d,k} (I_{d,k})^* = P_{d,k} + j Q_{d,k}.$$

**Constant power** (default) pins it to the nominal setpoint:

$$P_{d,k} = P_{d,k}^{\text{nom}}, \quad Q_{d,k} = Q_{d,k}^{\text{nom}}.$$

**Voltage-dependent (ZIP)** scales the setpoint by impedance/current/power fractions of the voltage-magnitude ratio  $|\Delta U_{d,k}|/V_{d,k}^{\text{nom}}$ :

$$P_{d,k} = P_{d,k}^{\text{nom}} \left( \alpha_Z \frac{|\Delta U_{d,k}|^2}{(V_{d,k}^{\text{nom}})^2} + \alpha_I \frac{|\Delta U_{d,k}|}{V_{d,k}^{\text{nom}}} + \alpha_P \right),$$

$$Q_{d,k} = Q_{d,k}^{\text{nom}} \left( \beta_Z \frac{|\Delta U_{d,k}|^2}{(V_{d,k}^{\text{nom}})^2} + \beta_I \frac{|\Delta U_{d,k}|}{V_{d,k}^{\text{nom}}} + \beta_P \right).$$

**Exponential** uses a power law  $P_{d,k} = P_{d,k}^{\text{nom}} (|\Delta U_{d,k}|/V_{d,k}^{\text{nom}})^{\gamma_P}$  (and likewise  $Q$  with  $\gamma_Q$ ). Constant-impedance, constant-current and constant-power are the special cases  $\alpha = (1, 0, 0), (0, 1, 0), (0, 0, 1)$  and integer exponents  $\gamma \in \{2, 1, 0\}$ .

### Current conservation

The sub-load currents sum to zero over the load's terminals (the neutral / return carries  $-\sum_k I_{d,k}$ ), giving the KCL contribution at each host terminal.

**5. Inequality constraints**

**None (foundational).** A load has no rating bounds in this model — it is a fixed or voltage-dependent power sink.

## Chapter 13

# Generators

### 13.1 Generators

A **generator** injects a *dispatchable* power at a bus — active and reactive power lie within bounds rather than being fixed (a fixed injection is modelled as a negative load). Symbols are defined in [Notation](#).

#### 1. Data model

A generator is an entry of the top-level generator object, keyed by its string ID  $g$ .

| Field         | Type          | Unit   | Req. | Description                                                          |
|---------------|---------------|--------|------|----------------------------------------------------------------------|
| bus           | string        | -      | ✓    | Host bus ID $i$                                                      |
| terminal_map  | string[]      | -      | ✓    | Conductor→terminal map $\mathbf{N}_g$                                |
| configuration | string        | -      | ✓    | WYE (only supported configuration)                                   |
| p_min, p_max  | num-<br>ber[] | W      |      | Per-phase active-power bounds                                        |
| q_min, q_max  | num-<br>ber[] | var    |      | Per-phase reactive-power bounds                                      |
| s_max         | num-<br>ber[] | VA     |      | Per-phase apparent-power rating                                      |
| i_max         | num-<br>ber[] | A      |      | Per-conductor current-magnitude limit (incl. optional neutral entry) |
| cost          | num-<br>ber[] | \$/kWh | ✓    | Per-phase linear generation cost                                     |

Only the WYE configuration is supported for generators.

#### 2. Input symbols

| Field        | Symbol                   | Notes                                                   |
|--------------|--------------------------|---------------------------------------------------------|
| p_min, p_max | $P_g^{\min}, P_g^{\max}$ | per phase                                               |
| q_min, q_max | $Q_g^{\min}, Q_g^{\max}$ | per phase                                               |
| s_max        | $S_g^{\max}$             | per phase                                               |
| i_max        | $I_g^{\max}$             | per conductor (last entry may bound the neutral return) |
| cost         | $c_g$                    | per phase                                               |

### 3. Variables

Each phase conductor  $k$  injects a complex current  $I_{g,k}$  (the current sent to the bus, opposite sign to a load), stacked into  $\mathbf{I}_g$ . The neutral return is implicit in KCL.

### 4. Equality constraints

With  $\Delta U_{g,k}$  the sub-generator voltage (phase-to-neutral for the WYE configuration), the injected complex power is

$$S_{g,k} = \Delta U_{g,k} (I_{g,k})^* = P_{g,k} + j Q_{g,k}.$$

Current conservation over the generator's terminals gives its KCL contribution (injection positive at the phase terminal, return at the neutral).

### 5. Inequality constraints

#### Cartesian variable bounds

When `i_max` is present, a **box** on the current components  $|\Re(I_{g,k})|, |\Im(I_{g,k})| \leq I_{g,k}^{\max}$  bounds the search; implied by the current circle below.

#### Engineering bounds

**Active/reactive power box** (the dispatch range):

$$P_{g,k}^{\min} \leq P_{g,k} \leq P_{g,k}^{\max}, \quad Q_{g,k}^{\min} \leq Q_{g,k} \leq Q_{g,k}^{\max}.$$

**Apparent-power circle** (optional):

$$P_{g,k}^2 + Q_{g,k}^2 \leq (S_{g,k}^{\max})^2.$$

**Current-magnitude circle** (optional), per conductor:

$$I_{g,k} (I_{g,k})^* \leq (I_{g,k}^{\max})^2.$$

For a star-connected generator whose `i_max` carries a trailing neutral entry, the neutral return current  $-\mathbf{1}^T \mathbf{I}_g[\mathcal{P}]$  is additionally bounded by that entry.

## Chapter 14

# Shunts

### 14.1 Shunts

A **shunt** is a fixed admittance connected between a set of bus terminals (and, implicitly, ground). Grounding impedances should be modelled as a shunt. Symbols are defined in [Notation](#).

#### 1. Data model

A shunt is an entry of the top-level shunt object, keyed by its string ID  $h$ .

| Field        | Type     | Unit | Req.      | Description                           |
|--------------|----------|------|-----------|---------------------------------------|
| bus          | string   | -    | ✓         | Host bus ID $i$                       |
| terminal_map | string[] | -    | ✓         | Conductor→terminal map $\mathbf{N}_h$ |
| G_k_j        | number   | S    | ✓ (G_1_1) | Conductance matrix entries            |
| B_k_j        | number   | S    | ✓ (B_1_1) | Susceptance matrix entries            |

#### 2. Input symbols

| Field        | Symbol                                    | Notes                                    |
|--------------|-------------------------------------------|------------------------------------------|
| G_k_j, B_k_j | $\mathbf{Y}_h = \mathbf{G} + j\mathbf{B}$ | admittance matrix (S), row-first entries |

The matrix is stored row-first: entry  $(k, j)$  is field G\_k\_j / B\_k\_j. Ground is never indexed (its voltage is zero).

**Suggestion:** define the terminal\_map only for the necessary terminals to avoid zero-padded matrices and a more compact representation.

#### 3. Variables

**None.** A shunt introduces no unknown — its current is determined entirely by the bus voltage and its fixed admittance.

#### 4. Equality constraints

The current drawn into the shunt at its terminals is linear in the bus voltage:

$$\mathbf{I}_h = \mathbf{Y}_h \mathbf{U}_i[\mathbf{N}_h].$$

This current is the shunt's contribution to KCL at bus  $i$  (leaving the bus toward the admittance/ground). Examples: a single-entry  $Y_{h,nn}$  on terminal  $n$  grounds the neutral through an impedance.

### 5. Inequality constraints

**None.**

## Chapter 15

# Capacitors

### 15.1 Capacitors

A **capacitor** is a fixed, nameplate-rated shunt capacitor bank — a special case of the [Shunt](#) whose susceptance is derived from nameplate data (a rated reactive power and voltage) rather than given as an explicit admittance matrix. Three connection configurations are supported: WYE, DELTA, and SINGLE\_PHASE. Symbols are defined in [Notation](#).

#### 1. Data model

A capacitor is an entry of the top-level capacitor object, keyed by its string ID  $\kappa$ .

| Field         | Type     | Unit | Req. | Description                                                                      |
|---------------|----------|------|------|----------------------------------------------------------------------------------|
| bus           | string   | -    | ✓    | Host bus ID $i$                                                                  |
| terminal_map  | string[] | -    | ✓    | Conductor→terminal map $\mathbf{N}_\kappa$                                       |
| configuration | string   | -    | ✓    | WYE, SINGLE_PHASE, or DELTA                                                      |
| qRated        | number   | var  | ✓    | Rated reactive power of the whole bank                                           |
| vNom          | number   | V    | ✓    | Nominal voltage: line-to-line for WYE/DELTA, across the element for SINGLE_PHASE |

#### 2. Input symbols

| Field  | Symbol                    | Notes                                                     |
|--------|---------------------------|-----------------------------------------------------------|
| qRated | $Q_\kappa^{\text{rated}}$ | whole-bank rating                                         |
| vNom   | $V_\kappa^{\text{nom}}$   | line-to-line (WYE/DELTA) or across-element (SINGLE_PHASE) |

The bank is assumed balanced: a single element susceptance  $b_\kappa$  — derived, not input, see §4 — is stamped identically onto every phase (or phase pair) of the bank.

#### 3. Variables

**None.** Like a shunt, a capacitor introduces no unknown — its current follows from the bus voltage and its fixed susceptance.

#### 4. Equality constraints

##### Susceptance from nameplate data

A capacitor delivers its rated reactive power when the voltage across its terminals equals the nominal value. The element susceptance is

$$b_{\kappa} = \frac{Q_{\kappa}^{\text{rated}}}{\beta_{\kappa} (V_{\kappa}^{\text{nom}})^2},$$

where  $\beta_{\kappa}$  is a configuration-dependent constant:

| configuration | $\beta_{\kappa}$ | Why                                                                           |
|---------------|------------------|-------------------------------------------------------------------------------|
| SINGLE_PHASE  | 1                | the nominal voltage is across the sole element                                |
| DELTA         | 3                | three elements, each at the nominal (line-to-line) voltage                    |
| WYE           | 1                | three elements, each at $V_{\kappa}^{\text{nom}}/\sqrt{3}$ (phase-to-neutral) |

##### Terminal-space assembly

The element susceptance  $b_{\kappa}$  is assembled into a terminal-space susceptance matrix  $\mathbf{B}_{\kappa}$  by a reciprocal two-node stamp  $b_{\kappa} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix}$ , applied once per element and accumulated onto shared terminals:

- **SINGLE\_PHASE** — one stamp across the element's two terminals  $[p, q]$ :

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix}.$$

- **WYE** — one stamp per phase, between that phase and neutral, on  $[a, b, c, n]$ :

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 1 & 0 & 0 & -1 \\ 0 & 1 & 0 & -1 \\ 0 & 0 & 1 & -1 \\ -1 & -1 & -1 & 3 \end{bmatrix}.$$

- **DELTA** — one stamp per phase pair  $(a, b)$ ,  $(b, c)$ ,  $(c, a)$ , on  $[a, b, c]$ :

$$\mathbf{B}_{\kappa} = b_{\kappa} \begin{bmatrix} 2 & -1 & -1 \\ -1 & 2 & -1 \\ -1 & -1 & 2 \end{bmatrix}.$$

### Current injection

The bank injects current into KCL at its bus exactly as a shunt would:

$$\mathbf{I}_\kappa = j \mathbf{B}_\kappa \mathbf{U}_i[\mathbf{N}_\kappa].$$

The reactive power drawn by each element is voltage-dependent — for a SINGLE\_PHASE capacitor,  $Q = b_\kappa |U|^2$  — rising and falling with the square of the terminal voltage, the defining behaviour of a fixed capacitor (as opposed to a fixed-power source). At the balanced nominal voltage the bank delivers exactly  $Q_\kappa^{\text{rated}}$ .

### 5. Inequality constraints

**None.** With a fixed susceptance the current follows the voltage; no rating bound is imposed.

## Chapter 16

# Voltage sources

### 16.1 Voltage sources

A **voltage source** is an ideal voltage reference with a current slack: it fixes the bus terminal voltages and injects whatever current the rest of the network requires. It is the power-flow reference (slack) bus. This model version permits exactly one. Symbols are defined in [Notation](#).

#### 1. Data model

A voltage source is an entry of the top-level `voltage_source` object, keyed by its string ID  $s$ .

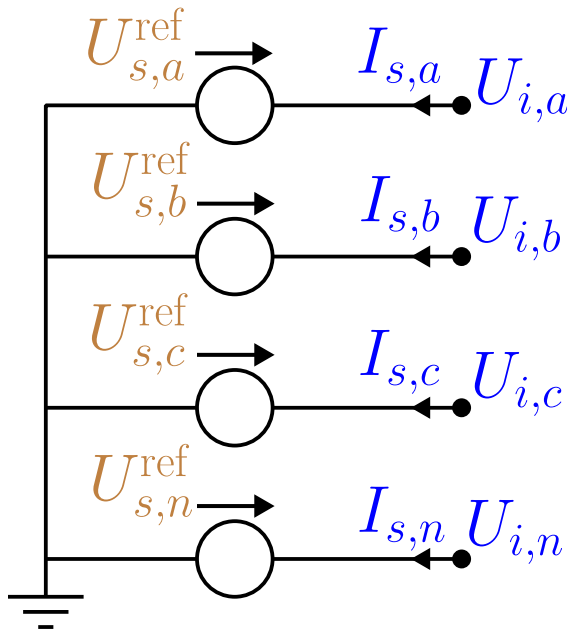


Figure 16.1: Voltage source: a fixed line-to-ground voltage reference with a free slack current.

| Field        | Type     | Unit | Req. | Description                                             |
|--------------|----------|------|------|---------------------------------------------------------|
| bus          | string   | -    | ✓    | Host bus ID $i$                                         |
| terminal_map | string[] | -    | ✓    | Conductor→terminal map $\mathbf{N}_s$ (phase terminals) |
| v_magnitude  | number[] | V    | ✓    | Per-terminal voltage magnitude                          |
| v_angle      | number[] | rad  | ✓    | Per-terminal voltage angle                              |

| Field       | Symbol             | Notes        |
|-------------|--------------------|--------------|
| v_magnitude | $ \mathbf{U}_s^s $ | per terminal |
| v_angle     | $\theta_s^s$       | per terminal |

## 2. Input symbols

## 3. Variables

The source injects a **slack current**  $I_{s,k}$  per phase terminal, stacked into  $\mathbf{I}_s$ . It is otherwise unconstrained — it absorbs whatever power balance the network requires, which is what makes this the reference bus.

## 4. Equality constraints

### Fixed reference voltage

Each phase terminal is fixed to its polar reference, and the source-bus neutral to ground:

$$U_{i,p} = |U_{s,p}^s| \angle \theta_{s,p}^s, \quad U_{i,n} = 0.$$

### Slack current injection

The slack current enters KCL at the phase terminals, with its return at the neutral:  $+I_{s,k}$  at phase  $t_k$ , and  $-\sum_k I_{s,k}$  at the neutral.

## 5. Inequality constraints

### Cartesian variable bounds

**None** — the slack current is free.

### Engineering bounds

**None (foundational).** A pure slack has no rating.

## Chapter 17

# Transformers

### 17.1 Transformers

A **transformer** couples two buses through **galvanically isolated** windings — primary and secondary share no conductor, only magnetic flux. Because the winding topologies differ qualitatively, each configuration is a distinct data-model object: `single_phase`, `center_tap`, `wye_delta`, and `delta_wye`. Every model is built from an idealised winding pair plus a series leakage impedance; a magnetising shunt, internal neutral grounding, and tap-changing are not yet modelled (see [Background & scope](#)). Symbols are defined in [Notation](#).

#### 1. Data model

Each subtype is an entry under `transformer.<subtype>`, keyed by its string ID  $x$ . Common fields (two-winding subtypes):

| Field                                                            | Type     | Unit | Req. | Description                                                                             |
|------------------------------------------------------------------|----------|------|------|-----------------------------------------------------------------------------------------|
| <code>bus_from</code> , <code>bus_to</code>                      | string   | -    | ✓    | Endpoint bus IDs $i, j$                                                                 |
| <code>terminal_map_from</code> ,<br><code>terminal_map_to</code> | string[] | -    | ✓    | Conductor→terminal maps (lengths per subtype)                                           |
| <code>v_nom_from</code> , <code>v_nom_to</code>                  | number   | V    | ✓    | Nominal winding voltages — set the turns ratio                                          |
| <code>s_rating</code>                                            | number   | VA   | ✓    | Nameplate apparent-power rating                                                         |
| <code>r_series_from</code> ,<br><code>x_series_from</code>       | number   | Ω    |      | From-winding series leakage ( <code>single_phase</code> ,<br><code>center_tap</code> )  |
| <code>r_series_to</code> , <code>x_series_to</code>              | number   | Ω    |      | To-winding series leakage ( <code>single_phase</code> ,<br><code>center_tap</code> )    |
| <code>r_series</code> , <code>x_series</code>                    | number   | Ω    |      | Series leakage, wye winding only ( <code>wye_delta</code> ,<br><code>delta_wye</code> ) |
| <code>i_max_from</code> , <code>i_max_to</code>                  | number[] | A    |      | Per-conductor current limits                                                            |

Terminal-map lengths: `single_phase` 2 + 2; `center_tap` 2 (from) + 3 (to, ordered L1/centre/L2); `wye_delta` 4 (wye) + 3 (delta); `delta_wye` 3 (delta) + 4 (wye). For `center_tap`, `v_nom_to` is the **half-winding** (leg) voltage — e.g. 120 V for a 240/120 V service — not the full secondary span.

| Field                | Symbol                                                    | Notes                                               |
|----------------------|-----------------------------------------------------------|-----------------------------------------------------|
| v_nom_from, v_nom_to | $U_i^{\text{nom}}, U_j^{\text{nom}}$                      | turns ratio $N = U_i^{\text{nom}}/U_j^{\text{nom}}$ |
| r/x_series_from      | $Z_x^{\text{fr}} = R_x^{\text{fr}} + jX_x^{\text{fr}}$    | from-winding leakage                                |
| r/x_series_to        | $Z_x^{\text{to}} = R_x^{\text{to}} + jX_x^{\text{to}}$    | to-winding leakage                                  |
| r_series, x_series   | $Z_x^{\text{wye}} = R_x^{\text{wye}} + jX_x^{\text{wye}}$ | wye-side leakage (wye_delta/delta_wye)              |
| s_rating             | $S_x^{\text{max}}$                                        | nameplate                                           |

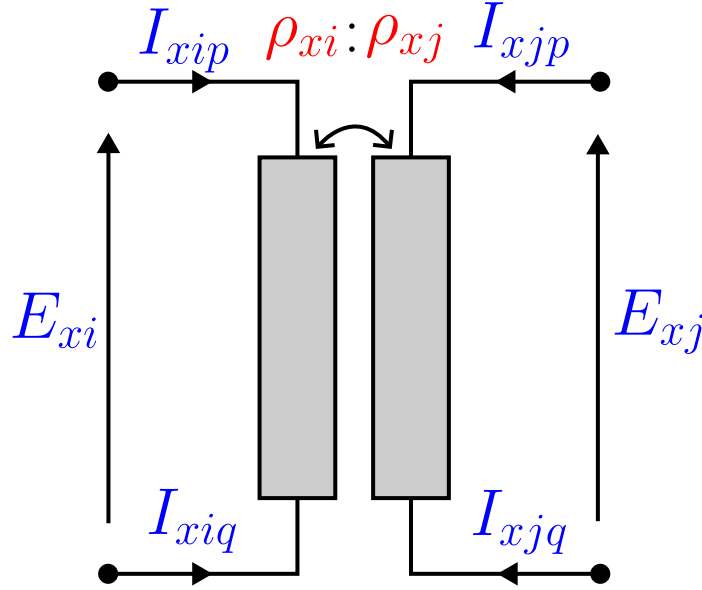


Figure 17.1: Idealised single-phase transformer: a pair of magnetically coupled windings.

## 2. Input symbols

## 3. Variables

Each winding conductor  $k$  on side  $\sigma \in \{\text{fr}, \text{to}\}$  carries a complex winding current  $I_{x,\sigma,k}$ . For the winding spanning terminal pair  $(p_k, q_k)$  on bus  $b^\sigma$ , write the **winding voltage**

$$V_{x,k}^\sigma = U_{b^\sigma, p_k} - U_{b^\sigma, q_k}$$

(phase-to-neutral for a wye winding, line-to-line for a delta winding, with  $U = 0$  when  $q_k$  is absent/ground).

## 4. Equality constraints

### The idealised winding pair

Every transformer is built from **ideal winding pairs** obeying flux linkage, complex- power conservation, and winding KCL. With winding EMFs  $E_x^{\text{fr}}, E_x^{\text{to}}$  and the nominal voltages standing in for the turns ratio:

$$\frac{E_x^{\text{fr}}}{U_i^{\text{nom}}} = \frac{E_x^{\text{to}}}{U_j^{\text{nom}}}, \quad U_i^{\text{nom}} I_{x,\text{fr}} + U_j^{\text{nom}} I_{x,\text{to}} = 0 \iff N I_{x,\text{fr}} + I_{x,\text{to}} = 0.$$

The second relation is the **ampere-turn balance**; with all losses removed the EMF is the terminal voltage and  $V_x^{\text{fr}} = N V_x^{\text{to}}$ .

### Series leakage

Each winding carries a series impedance between its EMF and its terminals (Ohm's law) — the model's one loss element, representing copper/leakage loss. Referred to the HV (from) side and combined,  $Z_x = Z_x^{\text{fr}} + N^2 Z_x^{\text{to}}$ , the ideal voltage relation becomes

$$V_x^{\text{fr}} - N V_x^{\text{to}} = Z_x I_{x,\text{fr}}.$$

This combined  $Z_x$  is what a short-circuit test measures — the *series sum* of the two winding leakages, referred to one side; it is not itself a separate element. `single_phase` and `center_tap` keep the two leakages as separate fields, `r/x_series_from` →  $Z_x^{\text{fr}}$  and `r/x_series_to` →  $Z_x^{\text{to}}$ ; `wye_delta` and `delta_wye` instead give a single `r_series/x_series` →  $Z_x^{\text{wye}}$  on the wye winding only (the delta winding is lossless in this model).

#### The per-winding leakage split is under-determined by a short-circuit test

A standard short-circuit test yields only  $Z_x$  — the *sum* of the two winding leakages. Splitting it into  $Z_x^{\text{fr}}$  and  $Z_x^{\text{to}}$  requires an extra convention (OpenDSS splits per its winding definitions; a common default is to put it all on one winding, i.e. the  $\Gamma$ -model with the other winding's leakage zero). The data model exposes both fields so the convention is explicit rather than assumed.

The subtypes below place this leakage differently: `single-phase` and `centre-tap` keep it split across both windings; `wye-delta` / `delta-wye` lump it entirely on the wye side.

### Single-phase

One winding pair — the archetypal two-winding transformer. With the combined leakage  $Z_x = Z_x^{\text{fr}} + N^2 Z_x^{\text{to}}$  (see [Series leakage](#) above):

$$V_{x,k}^{\text{fr}} - N V_{x,k}^{\text{to}} = Z_x I_{x,\text{fr},k}, \quad N I_{x,\text{fr},k} + I_{x,\text{to},k} = 0.$$

### Center-tap (split-phase)

One HV winding drives **two anti-series LV legs** sharing a centre-tap neutral: two from terminals  $[p, q]$ , three to terminals  $[p, n, q]$  (L1, centre, L2). The two half-windings are tightly coupled, so the model is a genuine three-winding (coupled-coil) unit, not two independent legs.

KCL at each side:

$$I_{x,\text{fr},p} + I_{x,\text{fr},q} = 0, \quad I_{x,\text{to},p} + I_{x,\text{to},n} + I_{x,\text{to},q} = 0.$$

Each winding EMF follows Ohm's law from its terminal voltage. The lower leg's dotted terminal is the centre tap  $n$ , not  $q$ , so its EMF runs from  $n$  toward  $q$ :

$$E_x^{\text{fr}} = (U_{i,p} - Z_x^{\text{fr}} I_{x,\text{fr},p}) - U_{i,q}, \quad E_x^{\text{to}} = (U_{j,p} - Z_x^{\text{to}} I_{x,\text{to},p}) - U_{j,n},$$

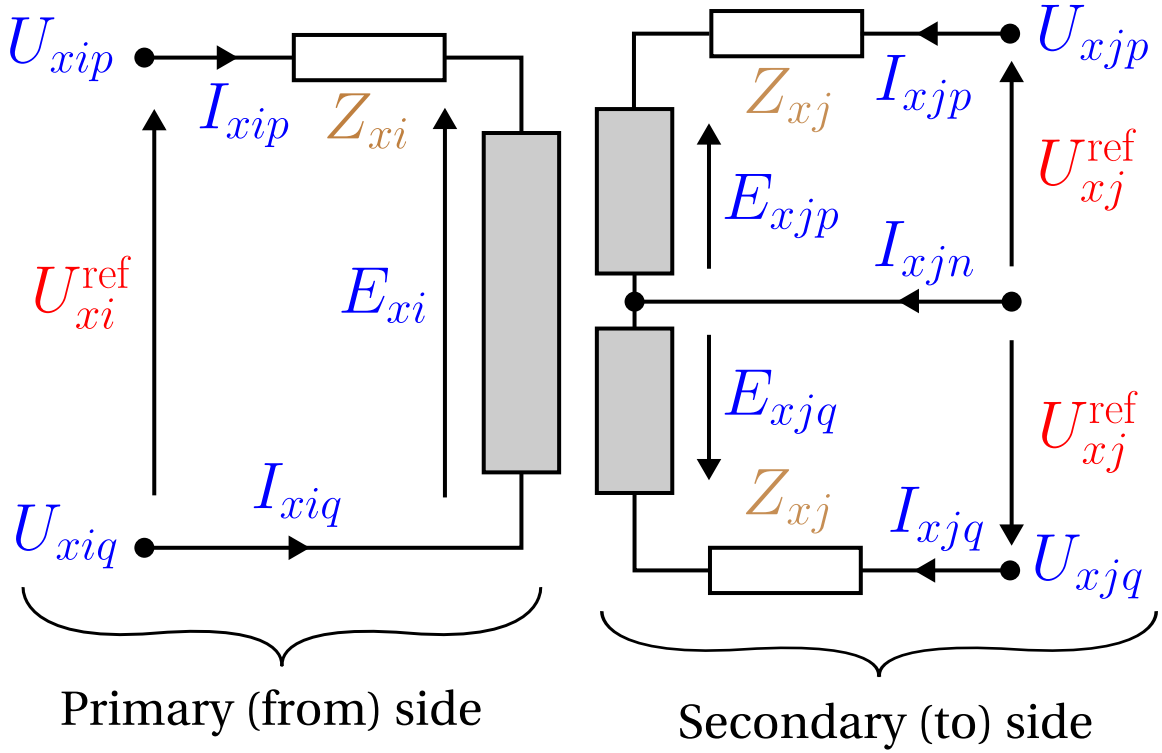


Figure 17.2: Centre-tap transformer: one HV winding, two anti-series LV legs sharing a centre-tap neutral.

$$E_{x,q}^{\text{to}} = (U_{j,n} - Z_x^{\text{to}} I_{x,\text{to},q}) - U_{j,q}.$$

with flux linkage and ampere-turn balance across all three ports:

$$\frac{E_x^{\text{fr}}}{U_i^{\text{nom}}} = \frac{E_{x,p}^{\text{to}}}{U_j^{\text{nom}}} = \frac{E_{x,q}^{\text{to}}}{U_j^{\text{nom}}}, \quad U_i^{\text{nom}} I_{x,\text{fr},p} + U_j^{\text{nom}} I_{x,\text{to},p} + U_j^{\text{nom}} I_{x,\text{to},q} = 0.$$

The centre-tap current  $I_{x,\text{to},n} = -(I_{x,\text{to},p} + I_{x,\text{to},q})$  is the leg-imbalance current; whether and how it is grounded is external to the transformer (see [Grounding](#)).

### Wye-delta and delta-wye

Three winding pairs. The delta connection introduces a  $\sqrt{3}$  factor, so the per-winding ratio is

$$n^{\text{eff}} = \begin{cases} \sqrt{3}/N & \text{wye\_delta (wye is from),} \\ N\sqrt{3} & \text{delta\_wye (delta is from).} \end{cases}$$

For phase  $k$  with cyclic partner  $k'$  (next for Yd, previous for Dy), the delta line-to-line voltage equals  $n^{\text{eff}}$  times the wye phase-to-neutral voltage, less the series drop on the wye phase current  $I_{x,\text{wye},k}$  through the wye-side leakage  $Z_x^{\text{wye}}$  (the delta winding is lossless):

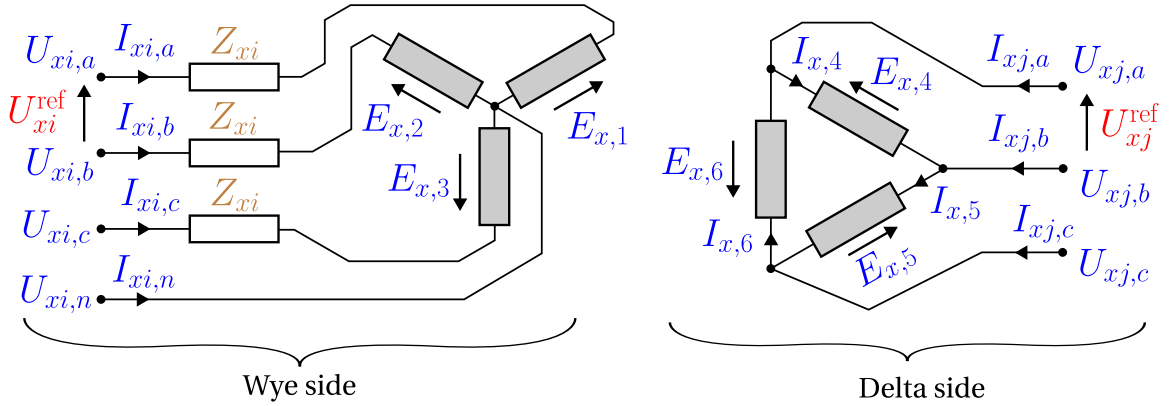


Figure 17.3: Three-phase wye-delta (or delta-wye) transformer connection and winding variables.

$$U_{\text{del},k} - U_{\text{del},k'} = n^{\text{eff}} (U_{\text{wye},k} - U_{\text{wye},n}) - n^{\text{eff}} Z_x^{\text{wye}} I_{x,\text{wye},k}.$$

The current transform is the transpose (power-conservative),  $n^{\text{eff}} I_{x,\text{del},k} = -(I_{x,\text{wye},k} - I_{x,\text{wye},k'})$ , and the wye star point satisfies  $I_{x,\text{wye},n} + \sum_k I_{x,\text{wye},k} = 0$ . Whether the wye neutral is grounded is external to the transformer (see [Grounding](#)).

## 5. Inequality constraints

### Cartesian variable bounds

Optional per-conductor current boxes on the winding-current components, from `i_max_from/i_max_to` — implied by the current circles below.

### Engineering bounds

**Per-winding current-magnitude circles**, per conductor  $k$  and side  $\sigma$ :

$$I_{x,\sigma,k} (I_{x,\sigma,k})^* \leq (I_{x,\sigma,k}^{\text{max}})^2.$$

**Nameplate power.** The winding-pair power transfer is bounded by the rating,  $|E_x^{\text{fr}}(I_{x,\text{fr}})^*| \leq S_x^{\text{max}}/n_x$  with  $n_x$  the number of winding pairs (1 single-phase, 3 three-phase; centre-tap uses 1 on the from winding and 2 on the to legs).

## **Part IV**

### **Objective & feasibility**

## Chapter 18

# Objective and feasibility

The component pages define the network's variables and constraints — the *feasible set*. This page defines what is optimised over it: the **objective**, and the **feasibility relaxation** used to diagnose networks that have no feasible point. Unlike the component pages this is a *formulation* page, not a data object. Symbols are defined in [Notation](#).

### 18.1 Objective

The default snapshot objective minimises total **active-power dispatch cost rate**, summed over every dispatchable element (generators, the voltage source, IBRs) and every phase:

$$\min \sum_e \sum_k c_{e,k} P_{e,k}/1000,$$

where  $c_{e,k}$  (currency/kWh, from each element's per-phase cost array) is the energy price of phase  $k$ , and  $P_{e,k}$  is that phase's injected active power in watts — the same bilinear expression the element defines ( $P_{e,k} = \Delta v^r c^r + \Delta v^i c^i$ ). The factor 1/1000 converts W to kW, so this snapshot objective is a cost **rate** in currency/h. For a multi-period monetary objective, multiply every snapshot rate by its duration in hours before summing.

#### Sign convention

$$P_{e,k}$$

is the power **injected into the network** by the element, uniformly across generators, IBRs, and the voltage source (each stamps  $+I$  into KCL). Therefore:

- a **positive** cost minimises that element's injection;
- a **negative** cost maximises it.

The voltage source is *not* special: for the slack, positive injection means importing from the grid, so a positive source cost is the grid import price (and export, a negative injection, is credited at the same price). Maximising system exports is a positive slack cost with free DERs.

The cost is **linear** in the dispatch and is added exactly — there is no polynomial/quadratic term. A cost must be a per-phase vector; a scalar is rejected.

## 18.2 Feasibility relaxation

A constant-power OPF can be **infeasible**: the load/generation specification may be irreconcilable with the network physics. To diagnose such cases, a feasibility-relaxed variant adds an **elastic slack current** and minimises it, instead of cost.

### Elastic slack

At every ungrounded, non-source terminal a free slack current  $s_{i,p} = s_{i,p}^r + j s_{i,p}^i$  is added directly into that terminal's KCL:

$$\kappa_{i,p}^{\Re} + s_{i,p}^r = 0, \quad \kappa_{i,p}^{\Im} + s_{i,p}^i = 0.$$

Where a slack pair is present, it can absorb any residual in that terminal's KCL. This does **not** guarantee that the complete relaxed NLP is feasible or that a local solver will converge: fixed source voltages, hard bounds, device equalities, or terminals without slacks can still conflict.

### Objective

The cost objective is replaced by the squared magnitude ( $\ell_2^2$ ) of all slack injections:

$$\min \sum_{i,p} ((s_{i,p}^r)^2 + (s_{i,p}^i)^2).$$

### Interpretation

The relaxation retains the standard OPF's hard constraints — voltage bounds, bus/line angle limits, and every device current limit — while enlarging the feasible set only through the nodal-current slacks. Consequently, for a successfully converged solve:

- An independently residual-checked **zero-slack** point demonstrates numerical feasibility under the represented loading and constraints.
- **Non-zero** slack at a locally optimal relaxed point identifies where that solve paid to violate KCL and by how much current. It is diagnostic evidence, not a proof that the original nonconvex problem has no zero-slack solution.
- Voltages still respect their hard bounds. When those hard constraints remain mutually consistent, an unreachable operating bound commonly surfaces as residual current. Contradictory hard constraints can instead leave even the relaxed problem infeasible (for example, a fixed source voltage contradicting a bound on the same terminal).

## **Part V**

# **Reference**

## Chapter 19

# Modelling notes & FAQ

### 19.1 Modelling notes and FAQ

Practical questions that recur when building cases. Symbols are defined in [Notation](#).

#### How do I model a constant-impedance or constant-current load?

Use the [load](#) model field: `constant_impedance` ( $P \propto |V|^2$ ), `constant_current` ( $P \propto |V|$ ), or a full zip mix, with `v_nom` giving the reference voltage. (Older guidance suggested emulating a constant-impedance load with a [shunt](#); that is no longer necessary now that voltage-dependent load models are supported.)

#### How do I define a triplex (split-phase service) load?

As one or more **single-phase** loads across the triplex terminals. For a 1 kW load across legs 1–2 of a triplex bus with `terminal_names` ["1", "n", "2"], define a `SINGLE_PHASE` load with `terminal_map` ["1", "2"] and `p_nom` [1000.0]. A two-terminal `SINGLE_PHASE` map is modelled across exactly those two terminals (here line-to-line, 240 V), not phase-to-ground — see [Loads](#).

#### I converted a wye load to delta with the standard transform and got a different answer. Why?

Because a distribution **wye load is four-wire** — three phase branches to a *neutral return* conductor — whereas the textbook delta-wye (Y-Δ) transform assumes a *three-wire* wye with no return (a graph-theoretic star). The transform is **not applicable** to a wye-with-neutral load. Model the wye and delta connections directly via the load configuration field; do not pre-transform.

#### How do I model a three-wire wye load (no neutral return)?

Add a **floating midpoint** terminal at the bus and connect three single-phase loads (or a wye-with-return whose neutral ties to that floating node) across the phases to it. The floating node carries no external connection, so it enforces the zero-return-current condition of a true three-wire star. There is no dedicated "wye-without-neutral" load subtype.

#### How do I get center-tap transformer impedances from OpenDSS or Gridlab-D?

**OpenDSS** specifies the three inter-winding short-circuit reactances  $X_{hl}, X_{lt}, X_{ht}$  (% p.u.). These map to the per-winding reactances by the star (T) transform  $[X_h; X_l; X_t] = \frac{1}{2} \mathbf{S} [X_{hl}; X_{lt}; X_{ht}]$  with  $\mathbf{S} = \begin{bmatrix} 1 & -1 & 1 \\ 1 & 1 & -1 \\ -1 & 1 & 1 \end{bmatrix}$ ,

then to ohms via the winding voltage/power base. The [transformer](#) page gives the full partitioning (and warns against the common  $X_{hl}/2$  shortcut, which is wrong for center-tap under unbalance).

**Gridlab-D** gives per-unit primary impedance and secondary impedance1 with a power\_rating for the *whole* transformer. The per-winding SI impedances are

$$Z_i = \text{impedance} \cdot \frac{3}{1000} \cdot \frac{\text{primary\_voltage}^2}{\text{power\_rating}}, \quad Z_j = \text{impedance1} \cdot \frac{3}{1000} \cdot \frac{\text{secondary\_voltage}^2}{\text{power\_rating}},$$

where the factor 3 accounts for the total rating being three times the primary-winding power, and 1000 converts the kVA rating to VA.

#### Import tools usually apply these conversions

Tools that import from OpenDSS or Gridlab-D typically apply these conversions automatically when reading source models. The formulas are given here for authors constructing data by hand or auditing an import.

### My line impedances are sequence components only — can I convert them to wire coordinates?

It is possible convert sequence components to *phase* component matrices (i.e., to define a 3-by-3 matrix linking the voltages and currents of phases "1", "2", "3"). If the distribution system this is modelling has a three-wire construction, then this transformation is exact. However, if Kron reduction (see [glossary](#)) has been applied to the neutral of a four-wire system to convert to a three-phase representation, it is not possible to revert back to the four-wire system's 4-by-4 impedance matrix without additional information.

### Converting from sequence impedance values to three-phase impedances matrices

Sequence-component impedances convert to phase coordinates through the Fortescue transform  $\mathbf{F}$  (defined in [Notation](#)). Writing sequence voltages and currents as  $\mathbf{U}_i^{\text{sym}} = \mathbf{F} \mathbf{U}_i[\mathcal{P}]$  and  $\mathbf{I}_{\ell ij}^{\text{sym},s} = \mathbf{F} \mathbf{I}_{\ell ij}[\mathcal{P}]$ , and premultiplying the phase Ohm's law  $\mathbf{U}_j[\mathcal{P}] = \mathbf{U}_i[\mathcal{P}] - \mathbf{Z}_{\ell}^s \mathbf{I}_{\ell ij}[\mathcal{P}]$  by  $\mathbf{F}$  (inserting  $\mathbf{I} = \mathbf{F}^{-1} \mathbf{F}$ ) gives the sequence-domain impedance

$$\mathbf{Z}_{\ell}^{\text{sym},s} = \mathbf{F} \mathbf{Z}_{\ell}^s \mathbf{F}^{-1} = \begin{bmatrix} Z_{\ell,00} & Z_{\ell,01} & Z_{\ell,02} \\ Z_{\ell,10} & Z_{\ell,11} & Z_{\ell,12} \\ Z_{\ell,20} & Z_{\ell,21} & Z_{\ell,22} \end{bmatrix}.$$

Lines are commonly assumed transposed, so the off-diagonal terms are neglected and the positive and negative sequences take equal value, leaving  $\mathbf{Z}_{\ell}^{\text{sym},s} \approx \text{diag}(Z_{\ell,00}, Z_{\ell,11}, Z_{\ell,11})$ . Inverting the transform then recovers the phase impedance matrix from just the zero- and positive-sequence values  $Z_{\ell,00}, Z_{\ell,11}$ :

$$\mathbf{Z}_{\ell}^s = \frac{1}{3} \begin{bmatrix} 2Z_{\ell,11} + Z_{\ell,00} & Z_{\ell,00} - Z_{\ell,11} & Z_{\ell,00} - Z_{\ell,11} \\ Z_{\ell,00} - Z_{\ell,11} & 2Z_{\ell,11} + Z_{\ell,00} & Z_{\ell,00} - Z_{\ell,11} \\ Z_{\ell,00} - Z_{\ell,11} & Z_{\ell,00} - Z_{\ell,11} & 2Z_{\ell,11} + Z_{\ell,00} \end{bmatrix}.$$

Here  $\mathbf{Z}_{\ell}^s$  is the (three-wire, or Kron-reduced four-wire)  $3 \times 3$  series-impedance matrix used as the line's `R_series/X_series`.

## Chapter 20

# Nomenclature

### 20.1 Nomenclature

A consolidated list of the recurring symbols. The typography and colour convention (variable vs parameter, real vs complex) and the transform constants are defined on the [Notation](#) page; the string-valued parameters and their permitted values are listed under [Data input formatting](#); and the element sets, topology, connectivity, and terminal mappings are collected in [Notation → Sets and indices](#).

Matrix dimensions  $n \times n$  have  $1 \leq n \leq 4$  for a four-wire, three-phase network.

#### Complex-valued variables

| Symbol                             | Unit | Length    | Represents                                              |
|------------------------------------|------|-----------|---------------------------------------------------------|
| $\mathbf{U}_i$                     | V    | 4         | Bus $i$ phase-to-ground voltage vector                  |
| $\mathbf{U}_i^\Delta$              | V    | 3         | Bus $i$ phase-to-phase voltage vector                   |
| $\mathbf{U}_i^{\text{pn}}$         | V    | 3         | Bus $i$ phase-to-neutral voltage vector                 |
| $\mathbf{U}_i^{012}$               | V    | 3         | Bus $i$ symmetrical-component voltage vector            |
| $\mathbf{I}_{\ell ij}$             | A    | 4         | Line $\ell$ total current, direction $i \rightarrow j$  |
| $\mathbf{I}_{\ell ij}^s$           | A    | 4         | Line $\ell$ series current, direction $i \rightarrow j$ |
| $\mathbf{I}_{\ell ij}^{\text{sh}}$ | A    | 4         | Line $\ell$ shunt current, direction $i \rightarrow j$  |
| $\mathbf{S}_{\ell ij}$             | W    | 4         | Line $\ell$ total power, direction $i \rightarrow j$    |
| $\mathbf{S}_{\ell ij}^s$           | W    | 4         | Line $\ell$ series power, direction $i \rightarrow j$   |
| $\mathbf{S}_d$                     | W    | 4         | Load $d$ power at its bus                               |
| $\mathbf{S}_d^{\text{pn}}$         | W    | 3         | Load $d$ power in wye (phase-to-neutral) frame          |
| $\mathbf{S}_d^\Delta$              | W    | 3         | Load $d$ power in delta frame                           |
| $\mathbf{I}_d$                     | A    | 2, 3 or 4 | Load $d$ current at its bus                             |
| $\mathbf{I}_d^\Delta$              | A    | 3         | Load $d$ internal delta current                         |
| $\mathbf{S}_g$                     | W    | 4         | Generator $g$ power at its bus                          |
| $\mathbf{S}_g^{\text{pn}}$         | W    | 3         | Generator $g$ power in wye frame                        |
| $\mathbf{S}_g^\Delta$              | W    | 3         | Generator $g$ power in delta frame                      |
| $\mathbf{I}_g$                     | A    | 4         | Generator $g$ current at its bus                        |

#### Complex-valued parameters

#### Real-valued parameters

| Symbol                             | Unit                     | Size         | Represents                                                     |
|------------------------------------|--------------------------|--------------|----------------------------------------------------------------|
| $\mathbf{Y}_{\ell ij}^{\text{sh}}$ | S                        | $n \times n$ | Line $\ell$ shunt admittance at sending end $i$                |
| $\mathbf{Y}_{\ell ji}^{\text{sh}}$ | S                        | $n \times n$ | Line $\ell$ shunt admittance at receiving end $j$              |
| $\mathbf{Z}_{\ell}^{\text{s}}$     | $\Omega$                 | $n \times n$ | Line $\ell$ series impedance matrix                            |
| $\mathbf{Y}_h$                     | S                        | $n \times n$ | Bus shunt admittance (neutral grounding, capacitor banks, ...) |
| $\mathbf{S}_d^{\text{ref,pn}}$     | $\text{W} + j\text{var}$ | $3 \times 1$ | Load $d$ complex power set-point (wye-connected)               |
| $\mathbf{S}_d^{\text{ref},\Delta}$ | $\text{W} + j\text{var}$ | $3 \times 1$ | Load $d$ complex power set-point (delta-connected)             |
| $\mathbf{S}_g^{\text{ref,pn}}$     | $\text{W} + j\text{var}$ | $3 \times 1$ | Generator $g$ complex power set-point                          |
| $\mathbf{Z}_c^{\text{s}}$          | $\Omega/\text{m}$        | $n \times n$ | Linecode per-length series impedance                           |
| $\bar{\mathbf{Y}}_c^{\text{sh}}$   | $\text{S}/\text{m}$      | $n \times n$ | Linecode per-length shunt admittance                           |

| Symbol                                                         | Unit | Size         | Represents                                     |
|----------------------------------------------------------------|------|--------------|------------------------------------------------|
| $\mathbf{U}_i^{\text{min}}, \mathbf{U}_i^{\text{max}}$         | V    | $4 \times 1$ | Bus $i$ phase-to-ground magnitude bounds       |
| $\mathbf{U}_i^{\text{pn,min}}, \mathbf{U}_i^{\text{pn,max}}$   | V    | $3 \times 1$ | Bus $i$ phase-to-neutral magnitude bounds      |
| $\mathbf{U}_i^{012,\text{min}}, \mathbf{U}_i^{012,\text{max}}$ | V    | $3 \times 1$ | Bus $i$ symmetrical-component magnitude bounds |
| $\mathbf{I}_{\ell ij}^{\text{max}}$                            | A    | $4 \times 1$ | Line $\ell$ current-magnitude upper bound      |
| $\mathbf{S}_{\ell ij}^{\text{max}}$                            | VA   | $4 \times 1$ | Line $\ell$ apparent-power upper bound         |
| $\mathbf{P}_g^{\text{min}}, \mathbf{P}_g^{\text{max}}$         | W    | $3 \times 1$ | Generator $g$ active-power bounds              |
| $\mathbf{Q}_g^{\text{min}}, \mathbf{Q}_g^{\text{max}}$         | var  | $3 \times 1$ | Generator $g$ reactive-power bounds            |
| $\ell_l$                                                       | m    | scalar       | Line length                                    |

## Chapter 21

# References

### 21.1 References

This specification stands on a large body of work in distribution-system modelling and optimal power flow. Foundational papers and tools which have influenced the data specification and network cases, including the four-wire current-voltage (IVR-EN) formulation, are as follows:

- **F. Geth et al.**, "Considerations and design goals for unbalanced optimal power flow benchmarks," *Electric Power Systems Research*, 2024. The benchmarking philosophy behind this Task Force effort.
- **D. M. Fobes, S. Claeys, F. Geth, C. Coffrin**, "PowerModelsDistribution.jl: An open-source framework for exploring distribution power flow formulations," *Electric Power Systems Research*, 2020. The IVRENPowModel referenced from [Background & scope](#).
- **R. C. Dugan**, "A perspective on transformer modeling for distribution system analysis," *IEEE PES General Meeting*, 2003. Background for the [transformer](#) winding models and grounding conventions.
- **W. H. Kersting**, *Distribution System Modeling and Analysis*, CRC Press (4th ed., 2017). The standard reference for line/cable impedance (Carson's equations, Kron reduction), transformer connections, and unbalanced power flow — the physics behind the [line](#) and [transformer](#) pages.
- **T. A. Short**, *Electric Power Distribution Handbook*, CRC Press (2nd ed., 2014). An equipment-oriented companion covering feeders, grounding, and protection. This has influenced the field names for the [capacitor](#) page.
- **OpenDSS** (EPRI) — a widely used distribution power-flow engine and a common source and cross-validation reference for distribution models.
- **S. Babaeinejadsarookolae et al.**, "The Power Grid Library for benchmarking AC optimal power flow algorithms" (PGLib-OPF), 2019. The transmission-side, positive- sequence analogue of the data specification and network cases provided by the BMOPF Task Force.

## Chapter 22

# Glossary

### 22.1 Glossary

A quick reference for the terms and abbreviations used throughout the specification. Symbols and mathematical notation are defined on the [Notation](#) page.

#### Terms

**Four-wire model** : A network representation in which each of the three phases **and** the neutral conductor are modelled explicitly, with earth as a separate return path.

**Galvanically isolated** : A connection with no direct conductive path between two circuits — power transfers only via magnetic coupling. Transformers in this specification are modelled as galvanically isolated winding pairs. See [Transformers](#).

**Kron reduction** : The algebraic elimination of a conductor (typically the neutral) from an impedance or admittance matrix, folding its mutual coupling into the remaining conductors. Valid when a branch element's terminals are perfectly grounded, so the terminal voltage at each end of the branch element (e.g. the conductor of a line or cable) is common at 0 V.

**Note:** this specification keeps neutral and earth conductors explicit and does not apply Kron reduction. See [Grounding](#).

**Nodal admittance matrix (Ybus)** : The matrix  $\mathbf{Y}$  relating injected currents to node voltages,  $\mathbf{I} = \mathbf{Y} \mathbf{V}$ .

**OPF — Optimal Power Flow** : An optimisation problem that determines the operating point of a network minimising an objective (e.g. cost, losses) subject to physical and operational constraints. See [Objective & feasibility](#).

**Per-unit** : A normalisation convention that expresses a quantity as a fraction of a chosen base value (e.g. a base voltage or power) rather than in physical units. This specification uses SI units throughout and defines no per-unit base. See [Data input formatting](#).

**Triplex (split-phase) service** : A single-phase secondary service from a centre-tapped transformer winding, giving two legs and a line-to-line voltage from one source phase, typically 120 V and 240 V in North American practice. Modelled as one or more single-phase loads across the triplex terminals. See [Modelling notes & FAQ](#).

**ZIP load** : A voltage-dependent load model combining constant-impedance (Z), constant-current (I), and constant-power (P) components. See [Loads](#).