```
const int buttonPin = 4;
const int ledPin = 12;

int buttonState = 0;

void setup() {
  Serial.begin(115200);

  pinMode(buttonPin, INPUT);
  pinMode(ledPin, OUTPUT);

  Serial.println("Hello, ESP32!");
}

void loop() {
  buttonState = digitalRead(buttonPin);

  if (buttonState == HIGH) {
    digitalWrite(ledPin, HIGH);
    Serial.println("LED ON");
  } else {
    digitalWrite(ledPin, LOW);
    Serial.println("LED OFF");
  }

  delay(60);
}
```

WOKWi SAVE SHARE Docs SIGN UP

sketch.ino ● diagram.json ● Library Manager

```ino
const int buttonPin = 4;
const int ledPin = 12;

int buttonState = 0;

void setup() {
  Serial.begin(115200);

  pinMode(buttonPin, INPUT);
  pinMode(ledPin, OUTPUT);


  Serial.println("Hello, ESP32!");
}

void loop() {
  buttonState = digitalRead(buttonPin);

  if (buttonState == HIGH) {
    digitalWrite(ledPin, HIGH);
    Serial.println("LED ON");
  } else {
    digitalWrite(ledPin, LOW);
    Serial.println("LED OFF");
  }

  delay(60);
}
```

Simulation

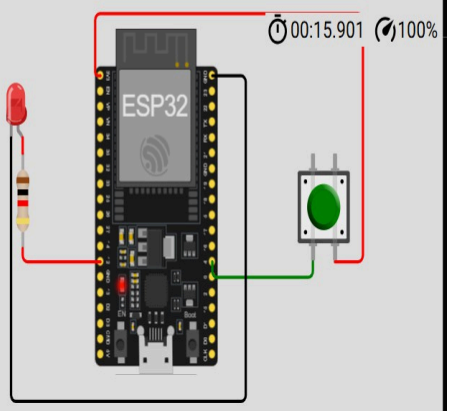


```
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
LED OFF
```

WOKWi SAVE SHARE Docs SIGN UP

sketch.ino ● diagram.json ● Library Manager

```ino
const int buttonPin = 4;
const int ledPin = 12;

int buttonState = 0;

void setup() {
  Serial.begin(115200);

  pinMode(buttonPin, INPUT);
  pinMode(ledPin, OUTPUT);


  Serial.println("Hello, ESP32!");
}

void loop() {
  buttonState = digitalRead(buttonPin);

  if (buttonState == HIGH) {
    digitalWrite(ledPin, HIGH);
    Serial.println("LED ON");
  } else {
    digitalWrite(ledPin, LOW);
    Serial.println("LED OFF");
  }

  delay(60);
}
```

Simulation

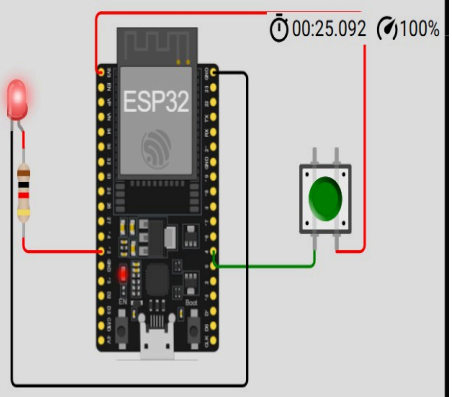


```
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
LED ON
```