CONCRETE BIRD BATH WITH FABRIC DRAPE

Step-by-Step DIY Guide

Create a Stunning Sculptural Bird Bath Using Fabric & Concrete

A real bird splashing in the finished fabric-drape concrete bird bath

made-by-hand.com

About This Project

This bird bath uses a genius technique: fabric soaked in a concrete slurry is draped over an inverted bucket or bowl to create a beautifully textured, sculptural basin. When the concrete cures and hardens, the fabric folds and drapes are permanently captured in stone — every one is unique. No special tools, no complicated molds. Just fabric, concrete, and creativity.

Difficulty	Easy
Active time	30–45 minutes
Curing time	24–48 hours
Cost estimate	$10–20 USD (bowl only, excluding pedestal)
Finished size	~45–50 cm diameter (depends on bucket size)
Technique	Fabric-cast concrete (ferro-fabric / hypertufa style)

Materials & Tools

#	Item	Notes
1	Portland cement (pure)	Do NOT use pre-mixed concrete — it's too coarse. Pure Portland cement makes a fi
2	Fine sand or perlite	Mix 2 parts cement : 1 part fine sand for strength and workability.
3	Water	Enough to make a thick, paint-like slurry — similar to heavy cream consistency.
4	Fabric — burlap or cotton canvas	Old t-shirts, burlap sacks, or any loosely-woven natural fabric. Avoid synthetics — the
5	Large plastic bucket or bowl (inverted)	This is your mold. A 10–15 litre bucket or wide mixing bowl works perfectly.
6	Concrete pedestal or stand	A pre-cast pedestal or simple post. Can also be cast in a square mold with the same
7	Mixing bucket + stir stick	For preparing the concrete slurry.
8	Paintbrush (wide, stiff)	To apply extra slurry onto the fabric after draping.
9	Plastic sheet or tarp	To protect your work surface and wrap during curing.
10	Nitrile or rubber gloves	Essential — wet cement is highly alkaline and irritates skin.
11	Pond liner or waterproof sealant	Optional — coat the inside of the bowl to make it fully waterproof for birds.
12	Concrete pigment (optional)	Add to the slurry for a different colour — grey, terracotta, charcoal, or off-white all loo

■ ***Fabric tip:*** *Old cotton bedsheets or t-shirts work brilliantly. The weave texture transfers beautifully into the cured concrete, giving every bird bath its own unique character.*

Step-by-Step Instructions

Step 1 — Set Up Your Mold & Drape the Fabric

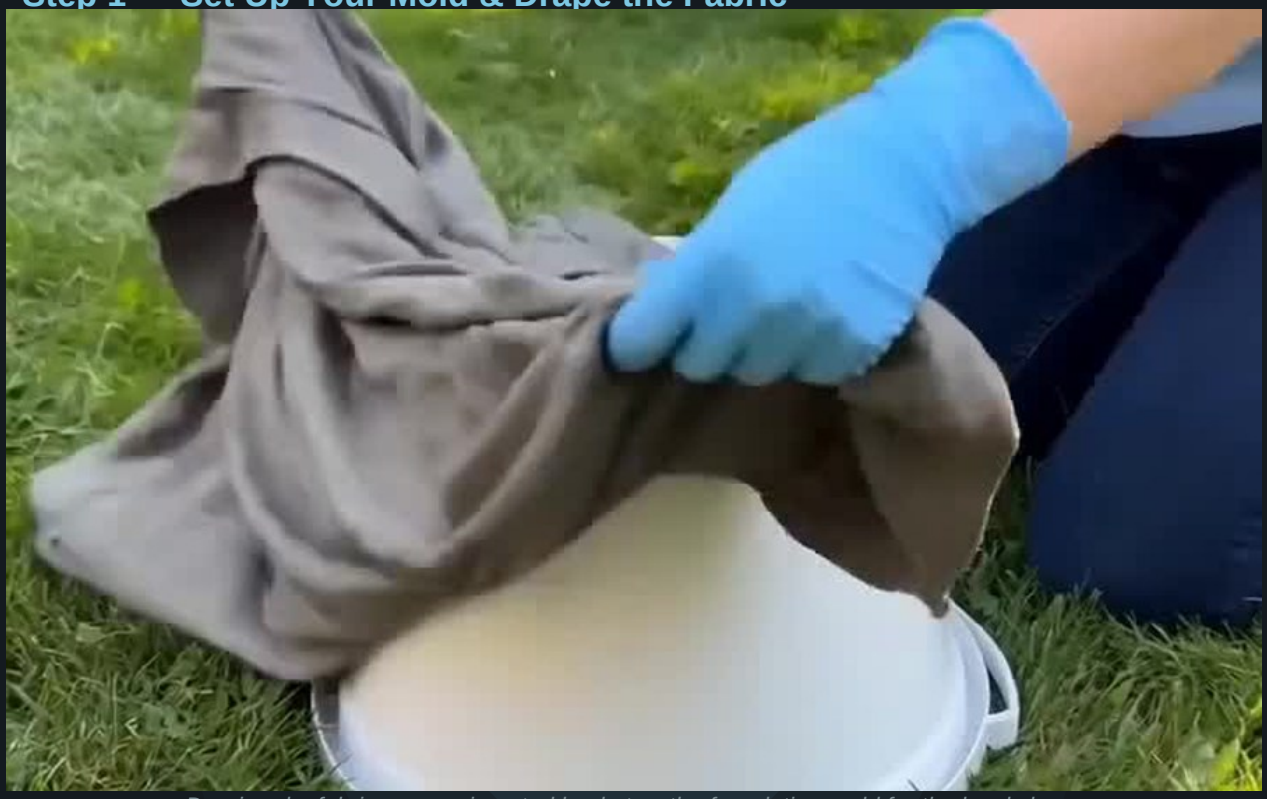

Draping dry fabric over an inverted bucket — the foundation mold for the bowl shape

Place your bucket or plastic bowl upside-down on a flat surface outdoors (concrete, a wooden board, or flat ground all work). The bottom of the bucket becomes the inside base of your bird bath. Lay your dry fabric over the top, smoothing it out evenly around all sides.

- Choose a bucket 35–50 cm in diameter for a good bird bath size.
- Lay the fabric flat over the centre of the inverted bucket, letting it hang freely on all sides.
- Create natural folds and gathers in the fabric — these become the decorative texture of your bird bath.
- The fabric should extend at least 15–20 cm beyond the base of the bucket on all sides.

> ■ ***Tip:*** *Wet the fabric lightly with plain water first — this helps the concrete slurry penetrate and bond to the fibres more evenly.*

Step 2 — Mix the Concrete Slurry

This technique uses a thin concrete *slurry* — much thinner than standard mix. Combine **2 parts Portland cement** with **1 part fine sand**, then add water gradually until you reach a thick, creamy consistency — like heavy cream or thick paint. It must be fluid enough to saturate fabric but thick enough to coat without running straight off.

- Add water very slowly — a small amount makes a big difference in consistency.

- Mix thoroughly for 3–4 minutes, scraping the sides, until completely smooth.
- The mix should coat the back of a spoon and drip slowly, not pour freely.
- Add concrete pigment now if using colour — mix it in completely before applying.

> ■ ***Important:*** *Always wear gloves when working with wet cement. Portland cement is strongly alkaline and will irritate or burn bare skin with prolonged contact.*

Step 3 — Apply Concrete Slurry to the Fabric

Fabric draped over the bucket — concrete slurry has been applied, coating it evenly

Brushing on a second coat of slurry — building up an even concrete shell

Pour or ladle the concrete slurry over the draped fabric, working from the top down. Use your gloved hands to press the slurry into the fabric, ensuring full saturation — no dry patches. Then use a wide, stiff paintbrush to apply additional slurry and build up a shell at least 1.5–2 cm thick.

- Start at the top centre and work outward and downward.
- Press the slurry firmly into the fabric weave with your hands — this is key to strength.
- Use a brush to apply 2–3 coats, allowing each to firm slightly between coats.
- Pay extra attention to the folds and gathers — extra material there adds character.
- The final shell should be 1.5–2 cm thick for durability — thicker at the base.

> ■ ***Tip:*** *You can mix a small amount of PVA (white) glue into the slurry (about 10%) to improve adhesion and reduce cracking.*

Step 4 — Shape & Smooth the Drape

Smoothing and shaping the concrete-coated fabric to perfect the folds

While the concrete is still workable (within the first 30 minutes), use your gloved hands to refine the shape. Arrange the folds to your liking, smooth the top surface, and ensure the rim edge is even all the way around.

- Tuck or arrange the fabric folds for the aesthetic you want — more folds = more dramatic look.
- Press down any areas that seem too thin and add more slurry if needed.
- Smooth the inside basin area at the top of the bucket — this will hold the water.
- Create a slight lip or rim at the edge by folding excess fabric back inward.

> ■ ***Design tip:*** *Press extra folds into the lower half of the drape to create a 'gathered skirt' effect — it looks incredibly elegant on the finished piece.*

Step 5 — Cure for 24–48 Hours

This is the most important step — and the hardest (waiting!). Cover the whole piece loosely with a plastic sheet or damp cloth to slow the curing and prevent cracking. Leave it completely undisturbed for a minimum of **24 hours**, ideally 48 hours.

- Keep it out of direct hot sun — shaded outdoors or in a garage is ideal.
- In dry/hot weather: lightly mist the outside with water every few hours to slow curing.
- Do NOT move or touch the piece during curing — even small movements can cause cracks.
- The concrete will feel firm after 6–8 hours but is not yet strong enough to move.

> ■ ***Tip:*** *In cold weather (below 10°C), bring the piece indoors to cure. Freezing temperatures will damage uncured concrete.*

Step 6 — Remove the Bucket Mold

The magic moment — lifting the bucket away to reveal the beautiful concrete bowl

After 24–48 hours, carefully lift and remove the bucket from inside the hardened concrete fabric shell. The plastic bucket should slide out cleanly, revealing the inside of your bird bath basin. Flip the bowl right-side up — the inside surface is smooth where it contacted the bucket.

- Grip the bucket firmly and pull straight upward — avoid twisting which could crack the edge.
- If it's stuck, gently flex the concrete bowl sides while pulling the bucket out.
- Once the bucket is out, flip the bowl upright — the draped fabric texture is now on the outside.
- Inspect for any thin spots or cracks — small cracks can be filled with fresh slurry.

■ ***Tip:*** *Coat the bucket with petroleum jelly or cooking spray before draping the fabric — this makes removal much easier and prevents the concrete from sticking.*

Step 7 — Mount on Pedestal & Waterproof

Placing the cured bowl onto a concrete pedestal — the bird bath comes together

Place your bird bath bowl on top of a pedestal or post. A simple concrete pedestal (cast in a square or round mold) looks stunning alongside the fabric-textured bowl. Secure with a small amount of mortar or construction adhesive if needed.

- The pedestal height should place the water level at 60–90 cm off the ground — ideal for birds.
- Apply a coat of waterproof concrete sealant to the inside of the bowl.
- Let the sealant cure 24 hours before adding water.
- Alternatively, press a flexible pond liner disc into the basin for 100% waterproofing.

> ■ ***Tip:*** *Add a small, flat stone inside the bowl — it gives birds a perch and helps smaller birds access the water safely.*

The Finished Bird Bath

A bird already enjoying the finished concrete fabric-drape bird bath — mission accomplished!

Pro Tips & Variations

★ **Add PVA glue to the slurry**	Mixing 10% PVA (white craft glue) into the cement slurry increases flexibility, reduces cracking, and improves adhesion to the fabric. This is a professional hypertufa trick.
★ **Try multiple fabric layers**	Dipping and layering 2–3 separate pieces of fabric gives a thicker, stronger shell. Like papier-mache, but with concrete — each layer adds strength and texture.
★ **Colour your concrete**	Terracotta oxide gives a warm earthy tone. Charcoal pigment creates a slate look. Try mixing two colours for a natural stone effect by swirling them together partially.
★ **Cast the pedestal yourself**	Fill a square milk carton with the same cement mix for a perfect matching pedestal. Tear the carton away after 48 hours. Simple, cheap, and custom-sized.
★ **Mosaic the inside**	Before the concrete fully cures (~4 hours in), press small glass tiles, pebbles, or sea glass into the inside basin to create a beautiful mosaic water feature.
★ **Make a matching planter**	Use the exact same technique with a smaller bucket to create a matching concrete planter for succulents or herbs — the fabric texture ties the garden look together.
★ **Seal it properly**	Portland cement is naturally slightly porous. Two coats of a masonry waterproof sealer inside the bowl will prevent water from seeping through and protect the bird bath from freeze-thaw damage in cold climates.
★ **Maintenance is easy**	Empty and scrub the bird bath weekly with a stiff brush to prevent algae. Avoid bleach — use a 1:9 white vinegar solution instead, which is safe for birds.

Troubleshooting

✗ Problem: Concrete slurry is sliding off the fabric

✓ **Solution:** The mix is too wet. Add more cement powder to thicken it. Also try applying in 2–3 thin coats rather than one thick coat, letting each firm up slightly before the next.

✗ Problem: Cracks appeared during curing

✓ **Solution:** Dried too fast — usually from sun or wind exposure. Next time cover with plastic sheeting and mist with water periodically. Small cracks can be filled with fresh slurry.

✗ Problem: The bowl is too thin and fragile

✓ **Solution:** Apply more layers next time — aim for 1.5–2 cm minimum shell thickness. You can reinforce an existing piece by applying fresh slurry inside the bowl.

✗ Problem: Concrete didn't bond — fabric is peeling away

✓ **Solution:** The fabric may have been too synthetic or too smooth. Use loosely-woven natural fabrics (burlap, canvas, cotton) and always pre-wet the fabric before applying slurry.

✗ Problem: The bucket is stuck inside

✓ **Solution:** Apply gentle pressure while twisting slightly. If really stuck, score the inner fabric edge lightly with a knife — the bowl shape is already set and the bucket can be cut away.

✗ Problem: Inside of bowl feels rough or pitted

✓ **Solution:** Lightly sand with 150-grit sandpaper after full cure (28 days). Then seal with 2 coats of waterproof masonry sealer for a smooth, bird-friendly finish.

Thank you for your purchase!

There's nothing quite like watching birds visit something you built with your own hands. We hope your garden fills with feathered visitors.

made-by-hand.com