




FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 27 dec 2010	Rev: Spin 1
KiCad E.D.A.	pcbnew (20100406 SVN—R2508)—final	ld: 1/1

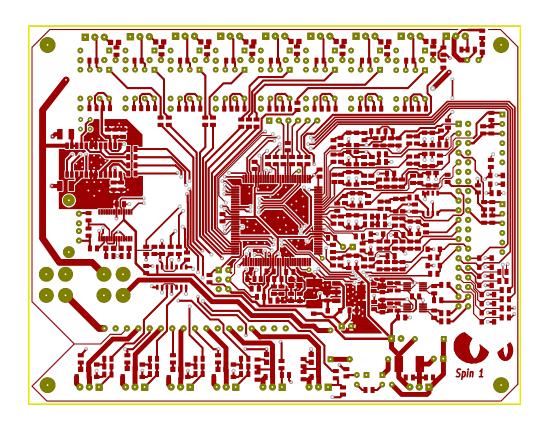


FreeEMS.org			
File: puma.br	d		
Sheet: 1/1			
Title: Puma			
Size: A	Date: 27 dec 2010	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1	

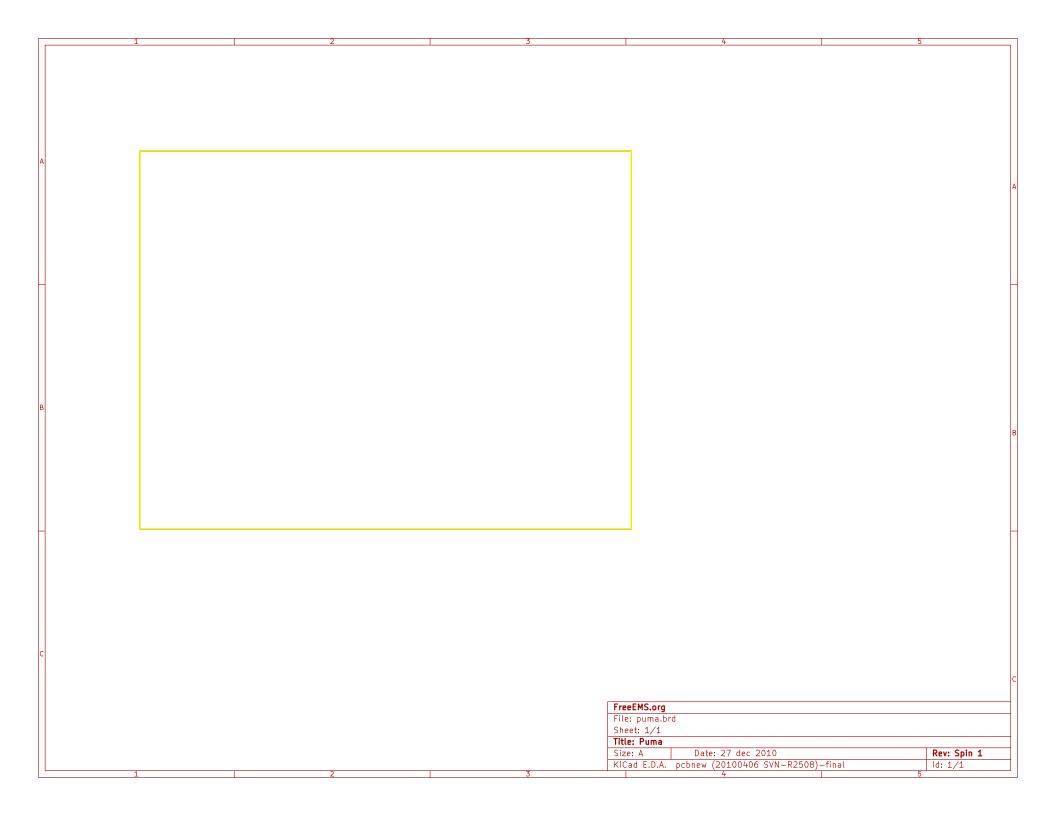


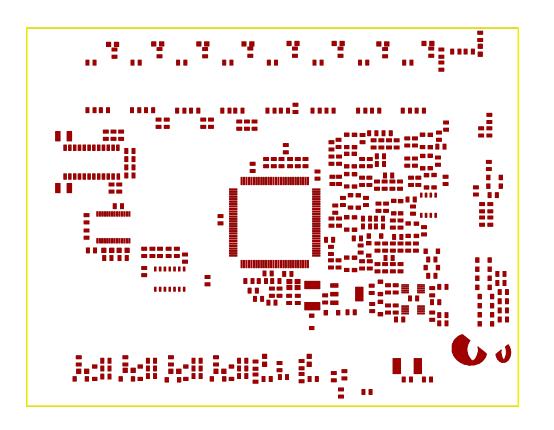


FreeEMS.org			
File: puma.br	d		
Sheet: 1/1			
Title: Puma			
Size: A	Date: 27 dec 2010	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1	

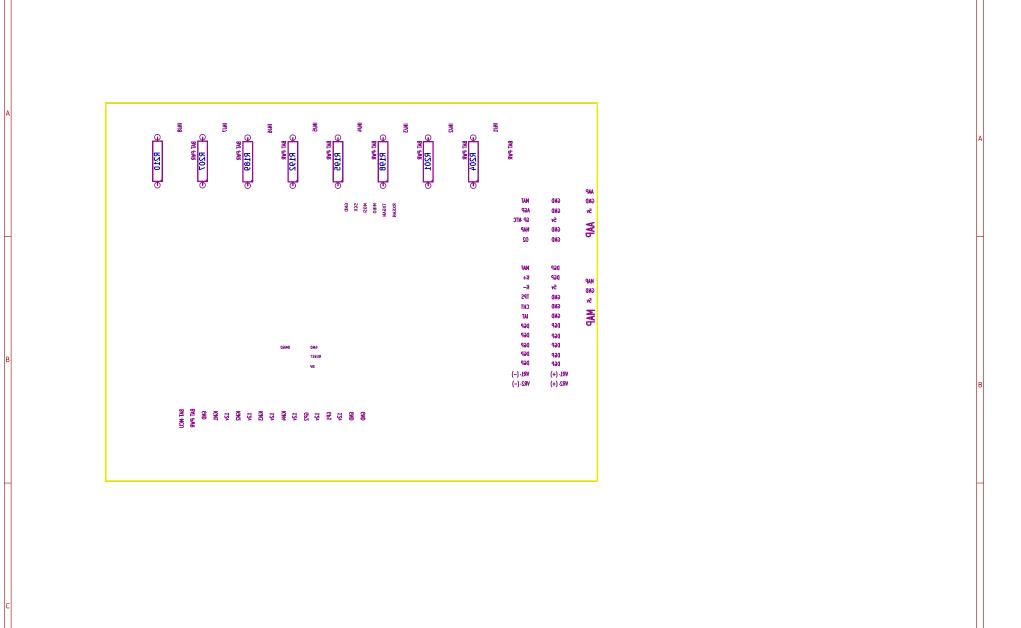


FreeEMS.org		
File: puma,brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 27 dec 2010	Rev: Spin 1
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1

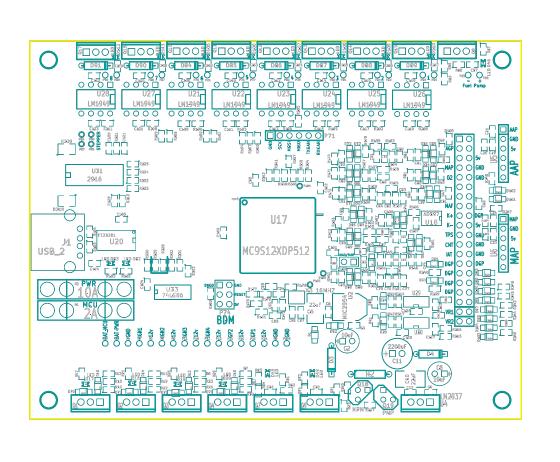

FreeEMS.org		
File; puma.br	rd	
Sheet: 1/1		
Title: Puma		
Size: A	Date: 27 dec 2010	Rev: Spin 1
KiCad F D A	nchnew (20100406 SVN_R2508)_final	Id: 1 /1

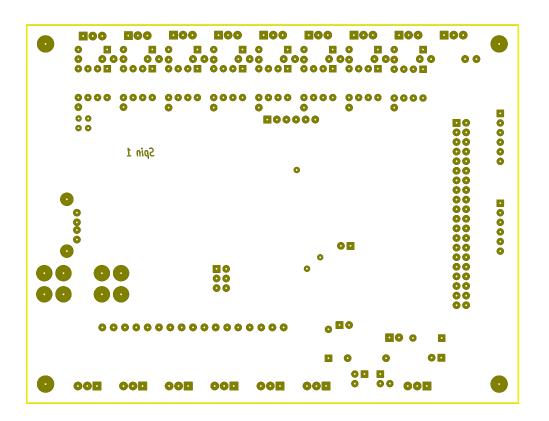

FreeEMS.org		
File: puma.br	d	
Sheet: 1/1		
Title: Puma		
Size: A	Date: 27 dec 2010	Rev: Spin 1
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1

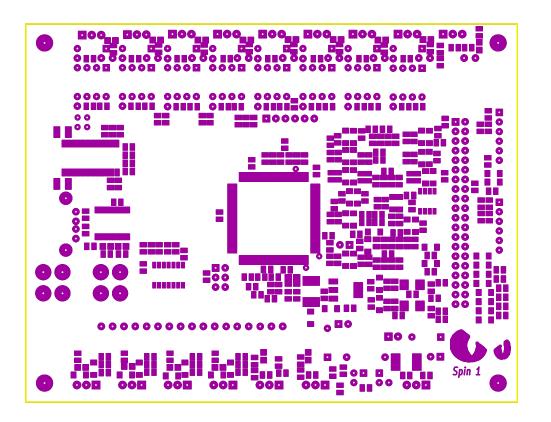

FreeEMS.org			
File: puma.brd			
Sheet: 1/1			
Title: Puma			
Size: A	Date: 27 dec 2010	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN—R2508)—final	ld: 1/1	

