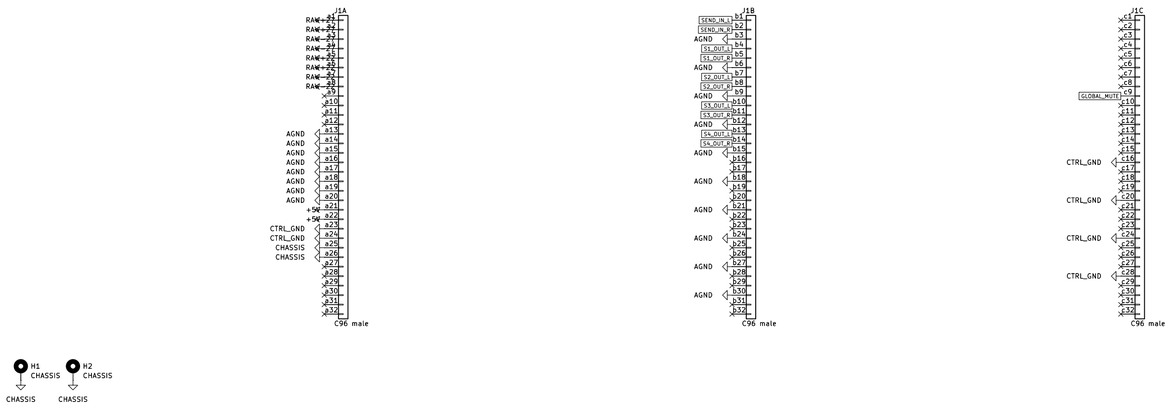
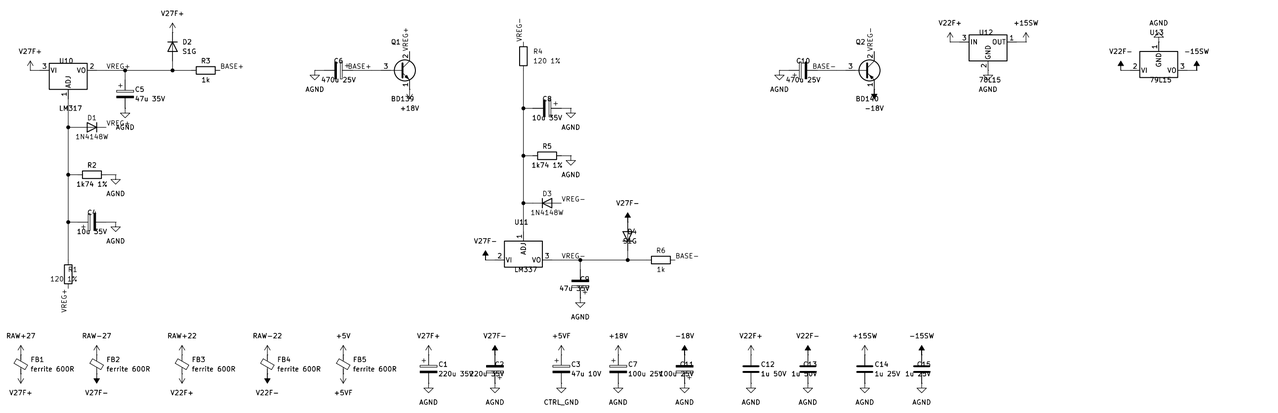
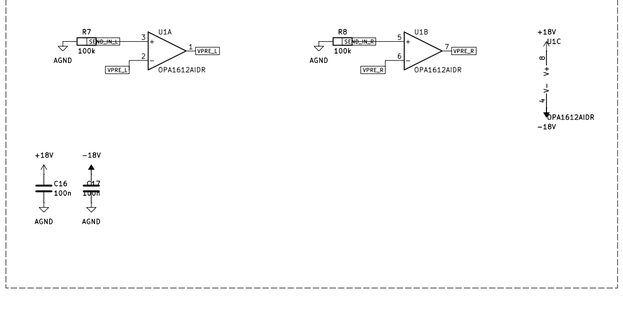
## BACKPLANE C96 (FX-SEND class)



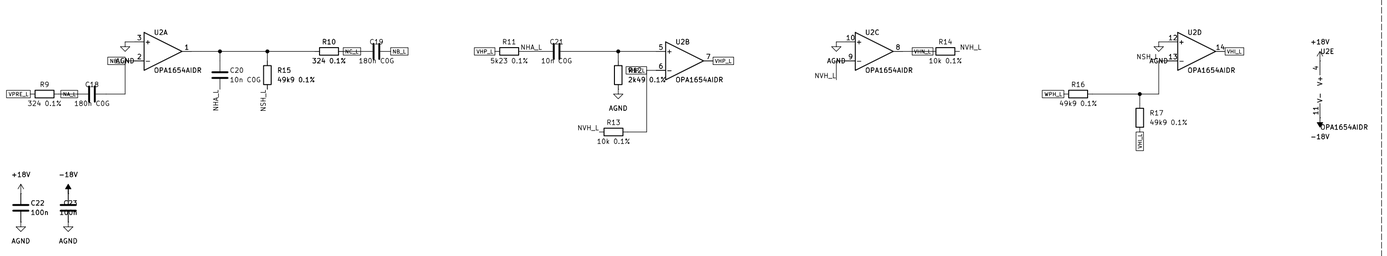

## POWER +-18 audio, +-15 switch, +5



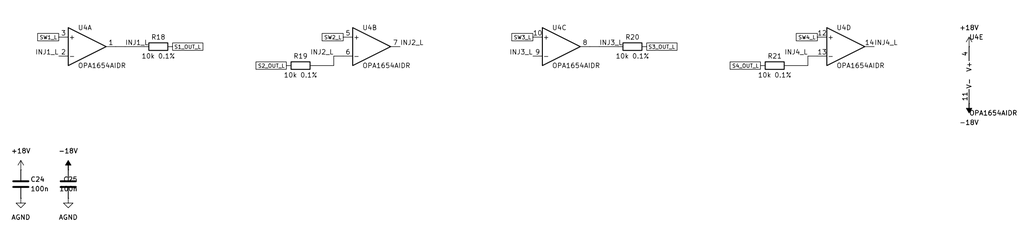

## INPUT BUFFER (OPA1612)



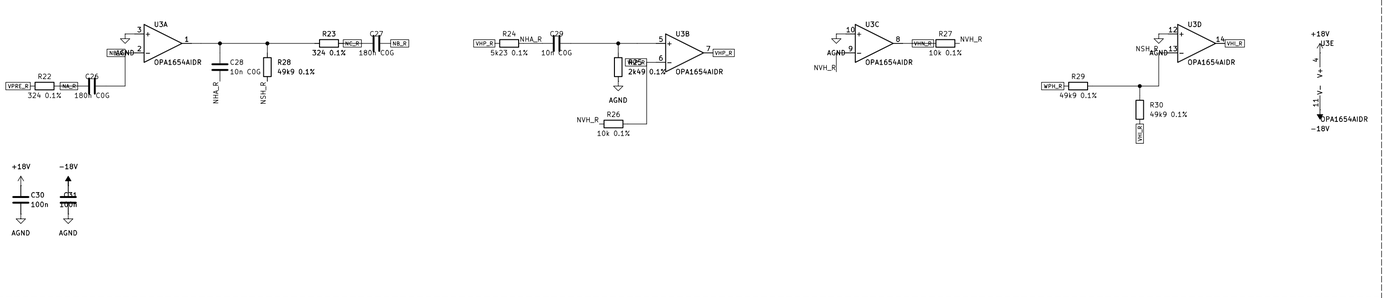

## EQ2 left side (LOW 120 Hz + HIGH 4.5 kHz, fx-eq2-pot10k.cir)



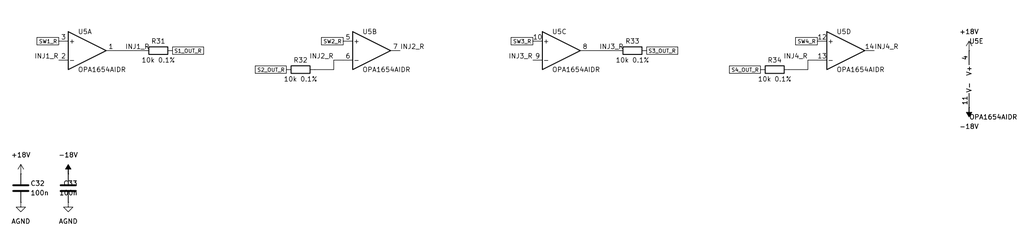

## INJECTION left side (OPA1654 + 10k to the buses)




## EQ2 right side (LOW 120 Hz + HIGH 4.5 kHz, fx-eq2-pot10k.cir)




## INJECTION right side (OPA1654 + 10k to the buses)




## ASSIGN S1-S4 (ADG1434 pi SPDT, 1 ms soft switch, global mute)




## CONTROL BOARD CABLE (J2) and ASSIGN BUTTONS (J3)




## PWR_FLAG (for the ERC check only)





Generated by pcb/tools/leggibile.py from the same netlist as the PCB: do not edit by hand

Sheet: /
File: fx-send.kicad_sch

**Title: maelcum FX-SEND (dec. 91a) — draft v0.2 — readable schematic**

Size: User | Date: | Rev: 0.3-draft
KiCad E.D.A. 10.0.7 | Id: 1/1