4 Tilting for stretcher loading

Only EDEN-BS8 070

Only for model EDEN-BS8 070, with Spark stretcher.

PRECONDITIONS


- **No stretcher attached to the stretcher tray**
- **Stretcher tray in the lower horizontal position**

4a

Enter manual mode, which allows the stretcher tray to be moved even without a stretcher.

PRESS **Horizontal** + **Head up**


simultaneously for 2 seconds

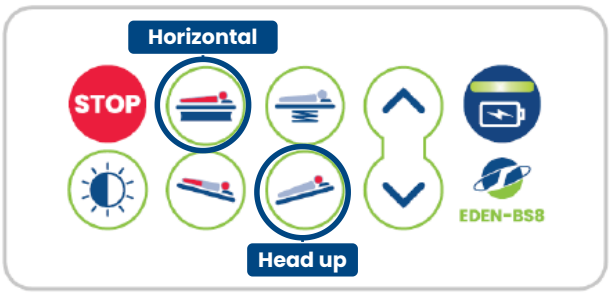


4b

Tilt the stretcher tray until the SPARK-FS mouthpiece is 2 cm below the Spark sphere.

PRESS **Head up** or **Feet up**

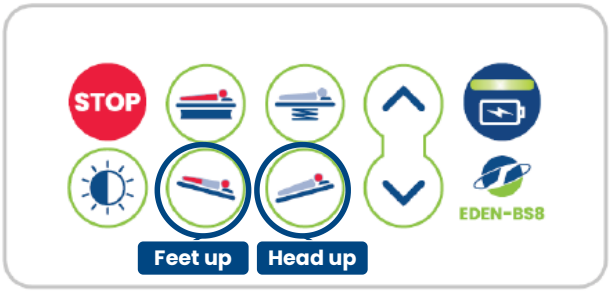

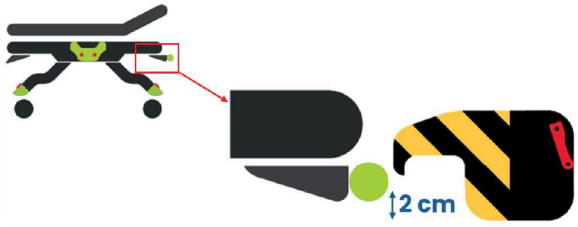

SPARK-FS mouthpiece 2 cm below the Spark sphere


4c

Save the stretcher tray tilt.

PRESS **Horizontal** + **Up arrow**

simultaneously for 2 seconds

Audible signal: tilt saved.

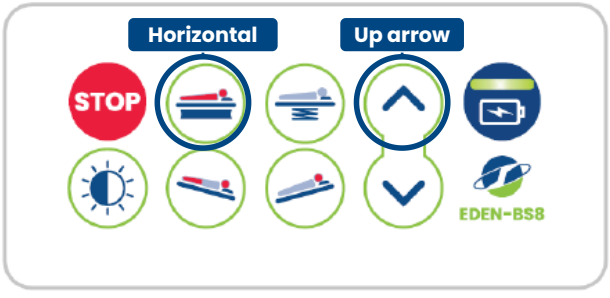

4d

Cancellation

To exit without saving the manual programming.

PRESS **Horizontal** + **Down arrow**

simultaneously

