SKYCAB - CARDBOARD SHEET 1 OF 5 (3-ply, 25 x 38 in (64 x 97 cm))

Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll (page is 860 mm wide, so it fits inside the printer margins: no scaling). Check the 10 x 10 cm square before cutting.

Line up the dashed sheet outline with a corner of your cardboard. The waves (flutes) inside the cardboard must run LEFT-RIGHT on this print, like the grey lines.

Either cut the paper parts out and trace round them, or pin the whole print on the sheet and cut through the solid lines.

10 x 10 cm

Measure both ways. Must be exactly 10 cm.

- Cut
- Fold (glue tabs)
- Press line (inside face)
- Placement mark / sheet edge
- Waves (flutes) this way

ON THIS SHEET

B1	Belt ring x1
C3	Wall, lower front x1
E	Backrest x1
C1	Wall, upper front x2
K	Tail fin side x1
D2	Rear beam x1
H	Dashboard brace x2

FLIPPED COPY (F): this copy is the mirror image, for the other side.
LAYER 2 (L2): glue face to face with the first layer, waves crossed, with PVA; press flat overnight.

B1

C1

NOSE
press lines (inside, every 2 cm)
headlight window
Printed side = outside of LEFT wall. Cut 2, flip for RIGHT.
bottom: to belt ring
top: to deck
strut hole
beam (inside)
SIDE

C1

FLIPPED COPY

SIDE
beam (inside)
strut hole
top: to deck
bottom: to belt ring
Printed side = outside of LEFT wall. Cut 2, flip for RIGHT.
NOSE
press lines (inside, every 2 cm)
headlight window

H

H

C3

NOSE
press lines (inside, every 2 cm)
Printed side = outside of LEFT wall. Cut 2, flip for RIGHT.
Flutes top to bottom.
top: to belt ring
bottom: to bottom ring
SIDE
NOSE >

H

H

Half pattern: flip on red line. Centre is waste.

K

tab: deck
tab: back of seat
back edge
back/front tabs: cut them OFF the flipped copy
bend gently on the green lines
cut 2, flip one
top

E

TAB: fold into the box, glue to deck
tail fin 'K' (back panel)
strap slot
Half pattern. Cut 2: seat front and back.
Strap slot in the front one only.

D2 L2

end tabs onto the inside of the walls.

Long edge up. Top tab glues under the deck on the marked line,


edge of your 25 x 38 in (64 x 97 cm) cardboard sheet


SKYCAB - CARDBOARD SHEET 2 OF 5 (3-ply, 25 x 38 in (64 x 97 cm))


Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll (page is 860 mm wide, so it fits inside the printer margins: no scaling). Check the 10 x 10 cm square before cutting.


Line up the dashed sheet outline with a corner of your cardboard. The waves (flutes) inside the cardboard must run LEFT-RIGHT on this print, like the grey lines.

Either cut the paper parts out and trace round them, or pin the whole print on the sheet and cut through the solid lines.

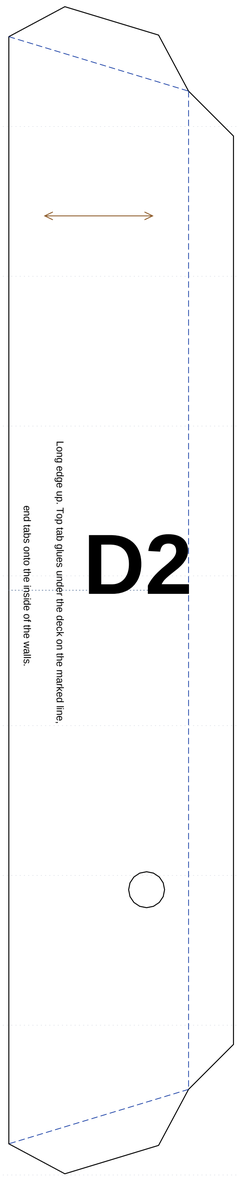

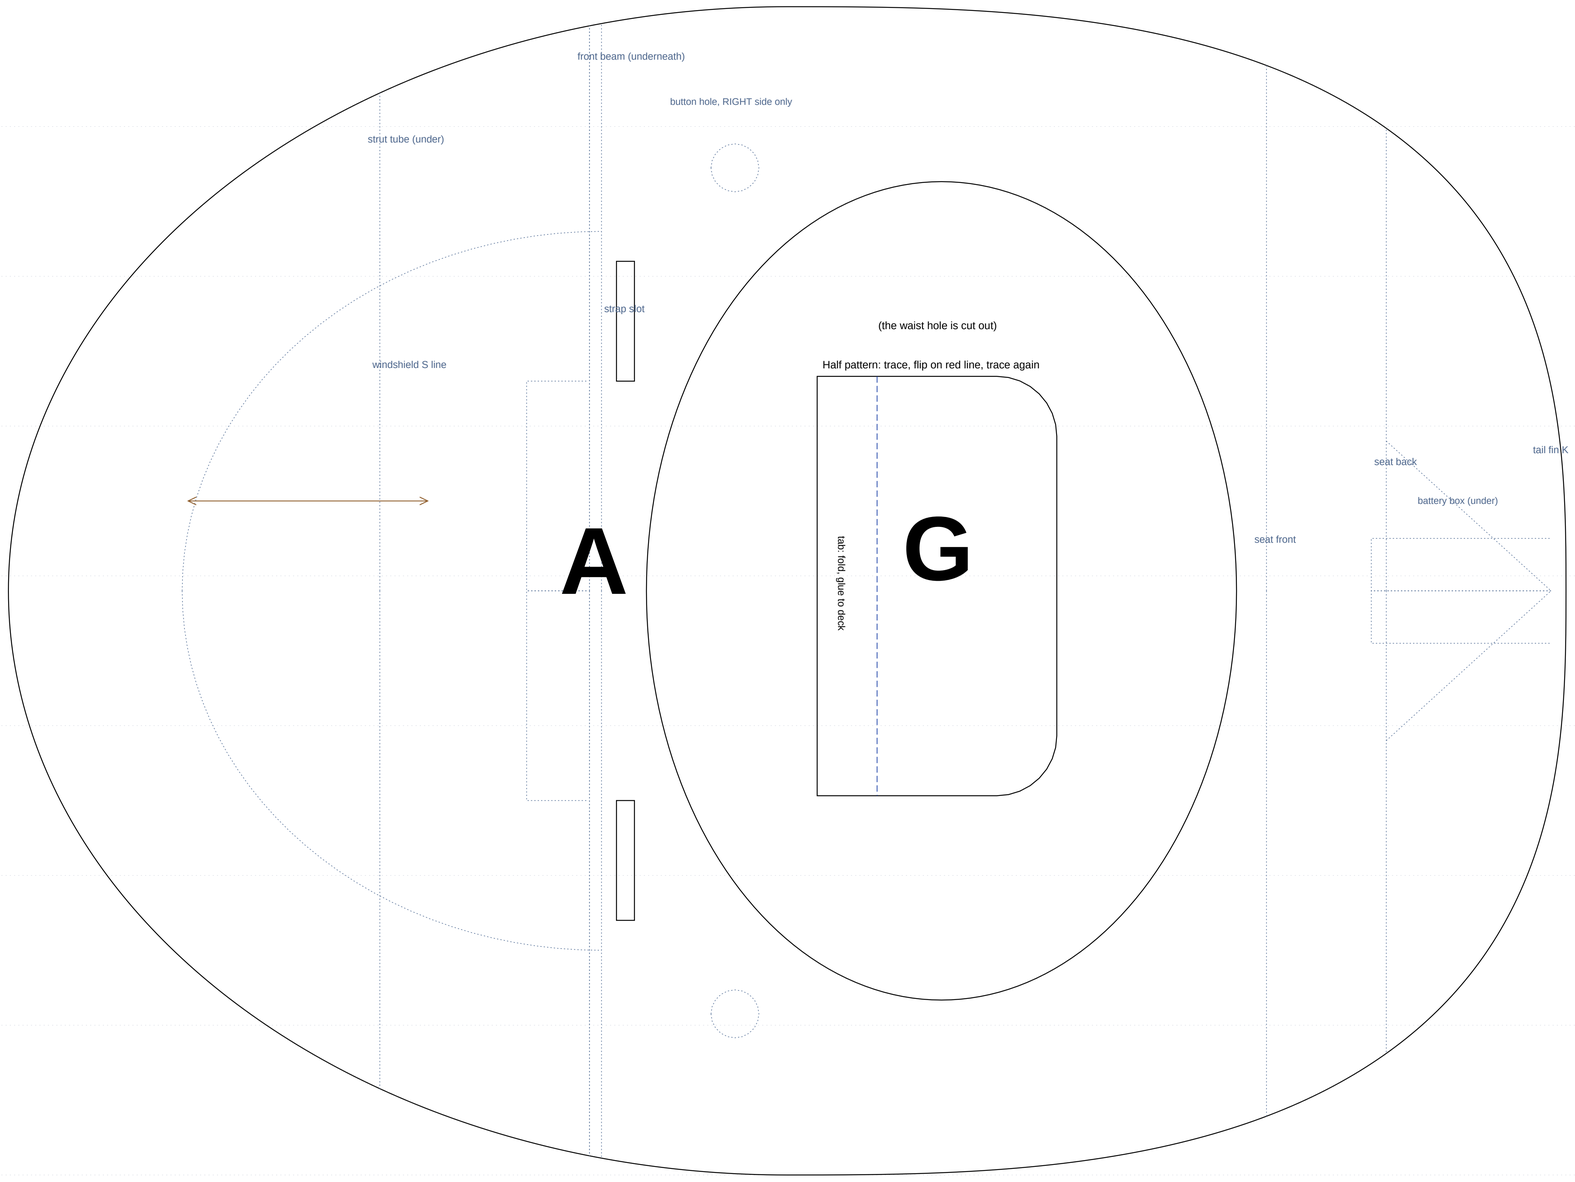


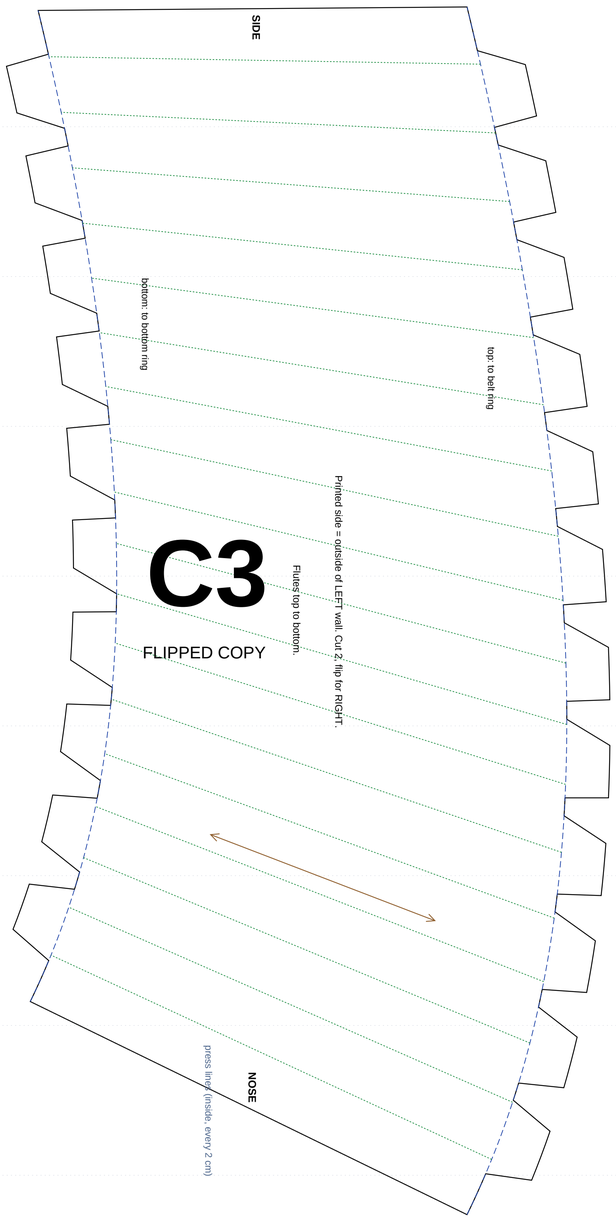

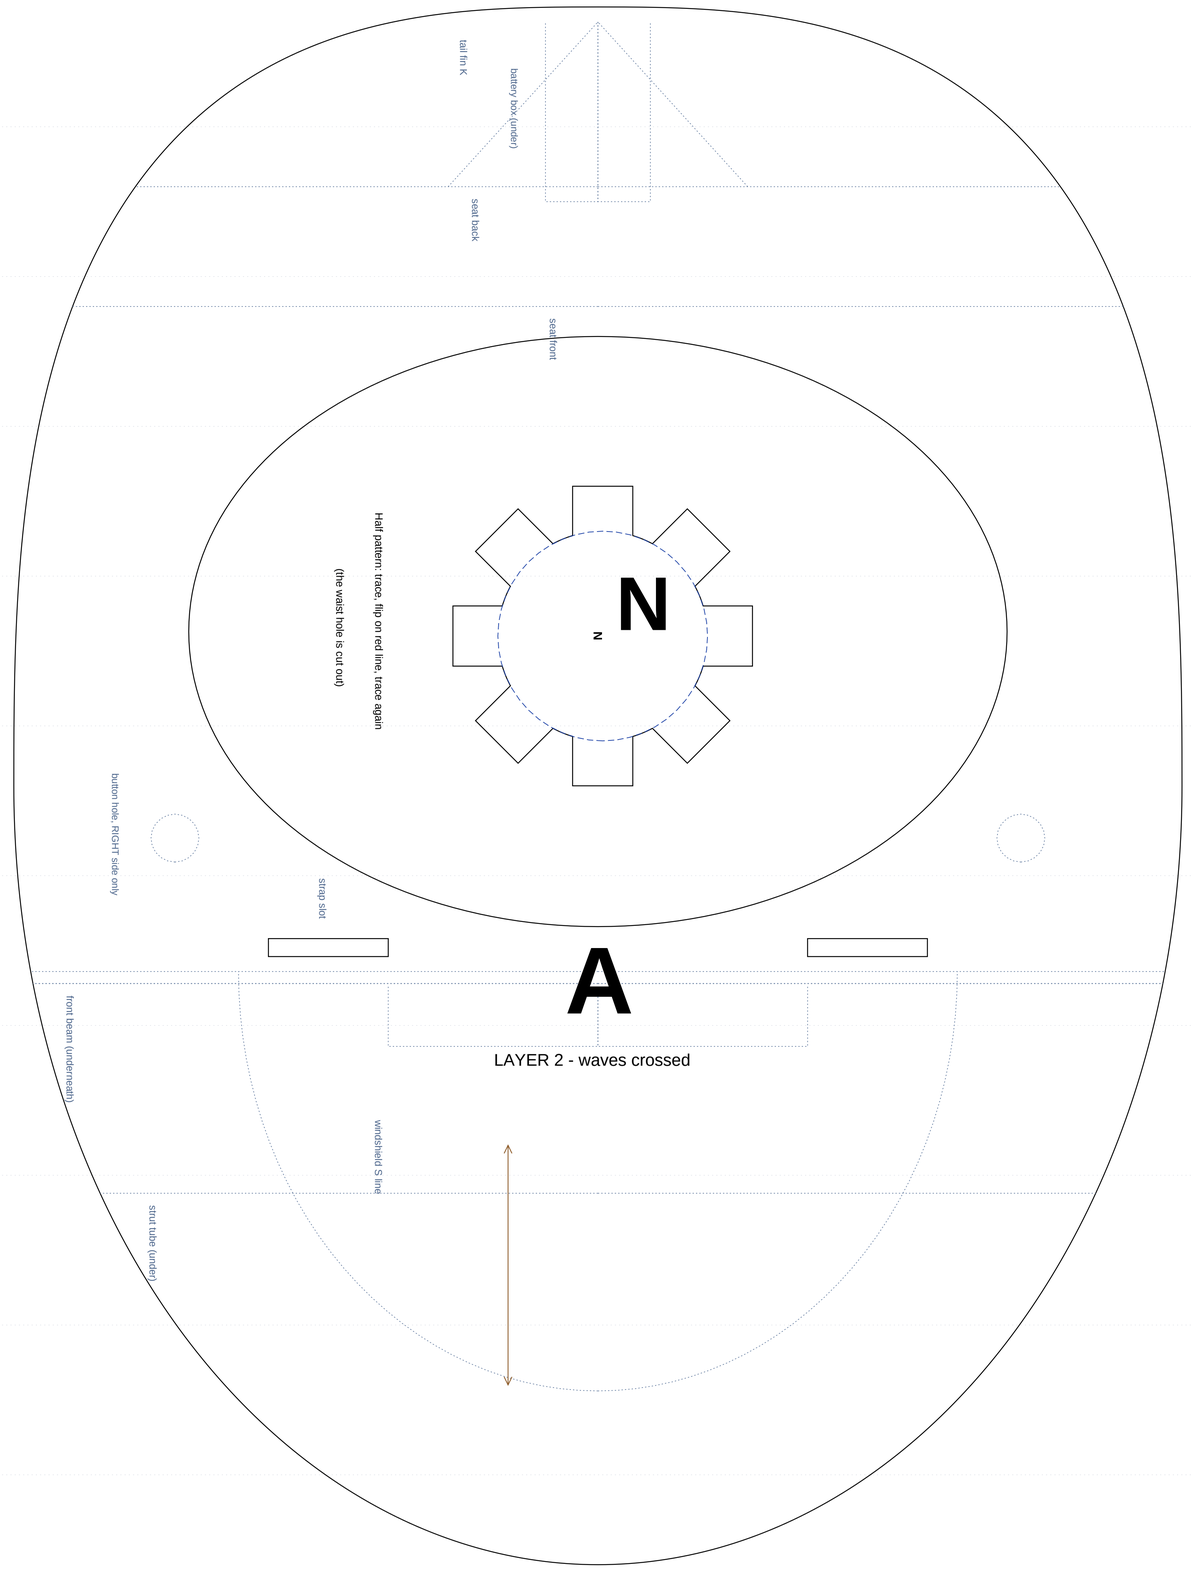

LAYER 2 - waves crossed



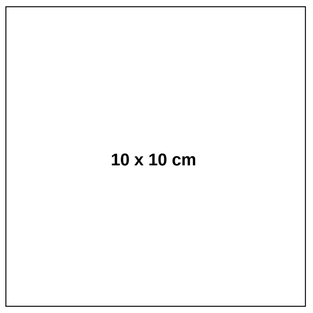

Measure both ways. Must be exactly 10 cm.

- Cut
- Fold (glue tabs)
- Press line (inside face)
- Placement mark / sheet edge
- Waves (flutes) this way

ON THIS SHEET

A	Deck x2
C3	Wall, lower front x1
D2	Rear beam x1
G	Dashboard x1
N	Pod bottom cap x1
R5	Wall joiner strips x2

FLIPPED COPY (F): this copy is the mirror image, for the other side.
LAYER 2 (L2): glue face to face with the first layer, waves crossed, with PVA; press flat overnight.


edge of your 25 x 38 in (64 x 97 cm) cardboard sheet


SKYCAB - CARDBOARD SHEET 3 OF 5 (3-ply, 25 x 38 in (64 x 97 cm))


Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll (page is 860 mm wide, so it fits inside the printer margins: no scaling). Check the 10 x 10 cm square before cutting.


Line up the dashed sheet outline with a corner of your cardboard. The waves (flutes) inside the cardboard must run LEFT-RIGHT on this print, like the grey lines.


Either cut the paper parts out and trace round them, or pin the whole print on the sheet and cut through the solid lines.

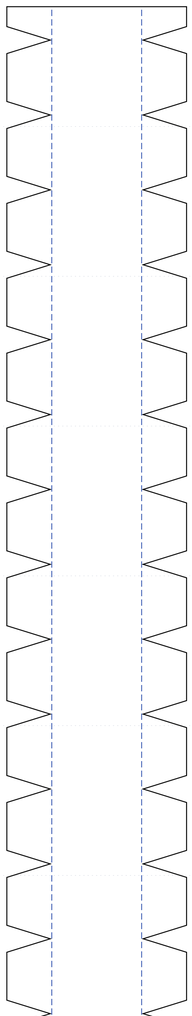


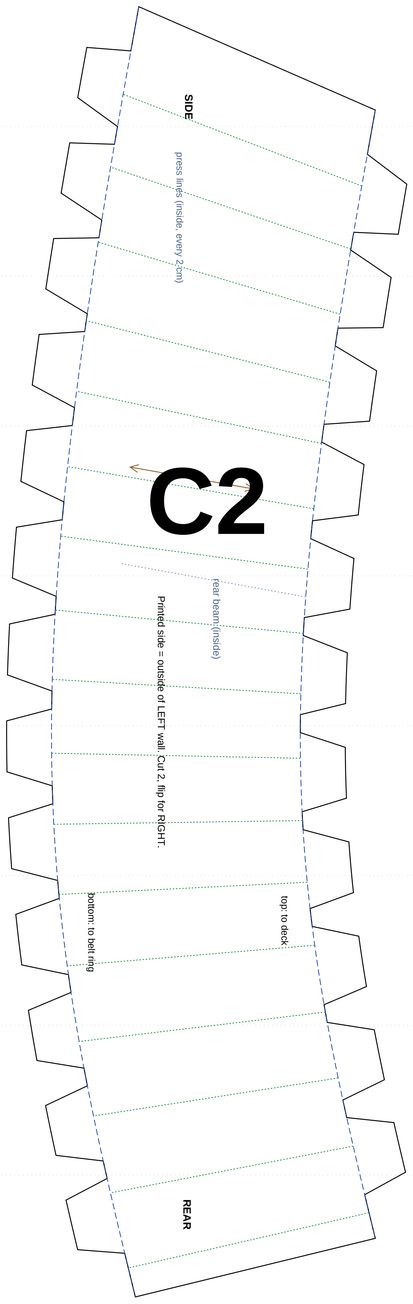


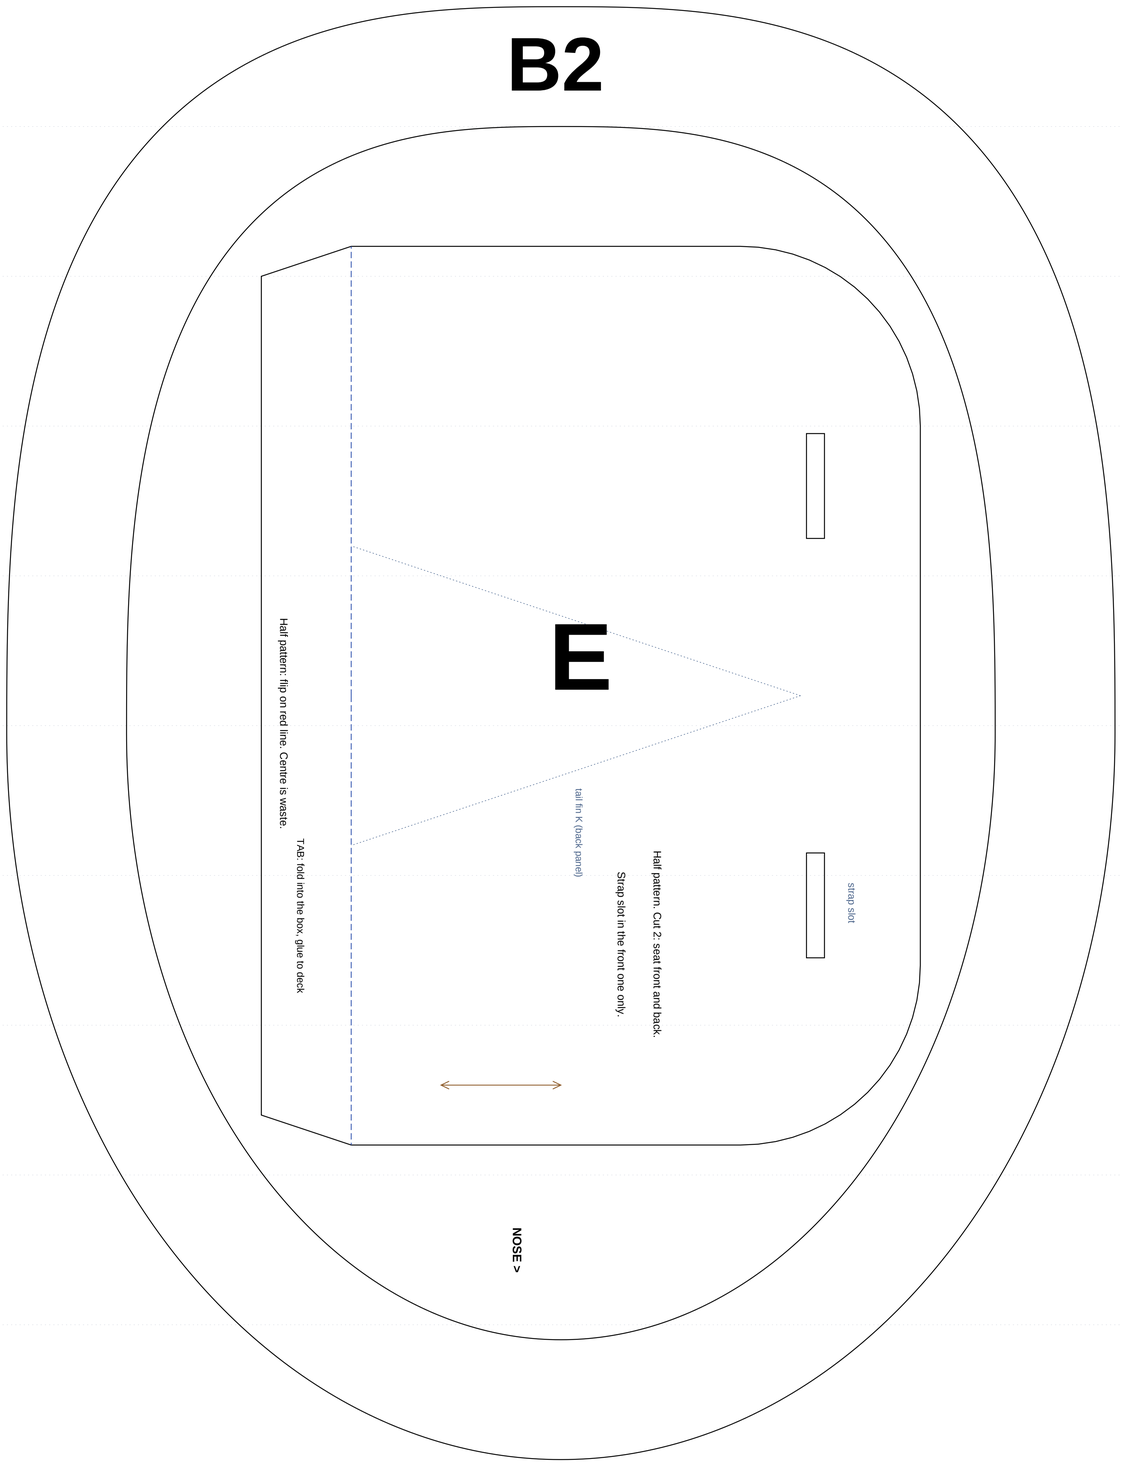

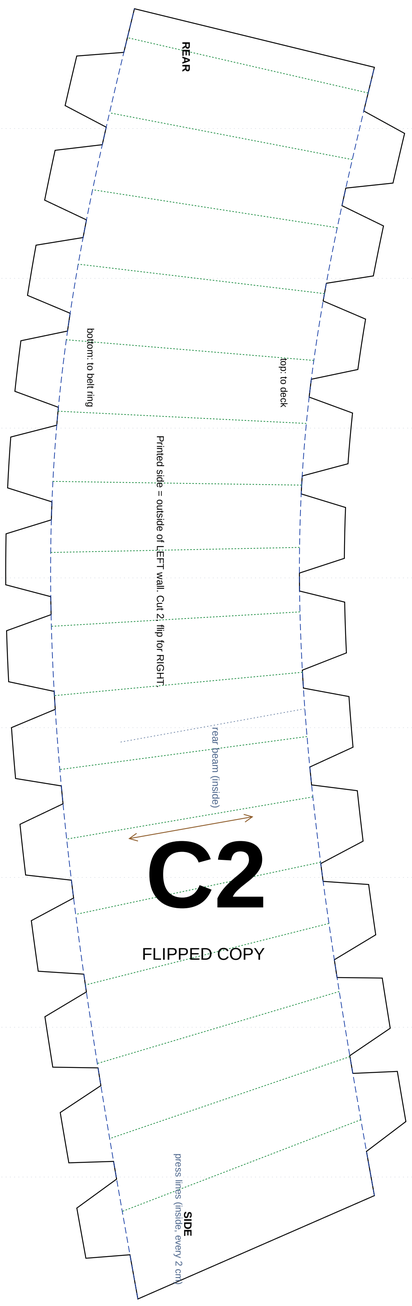

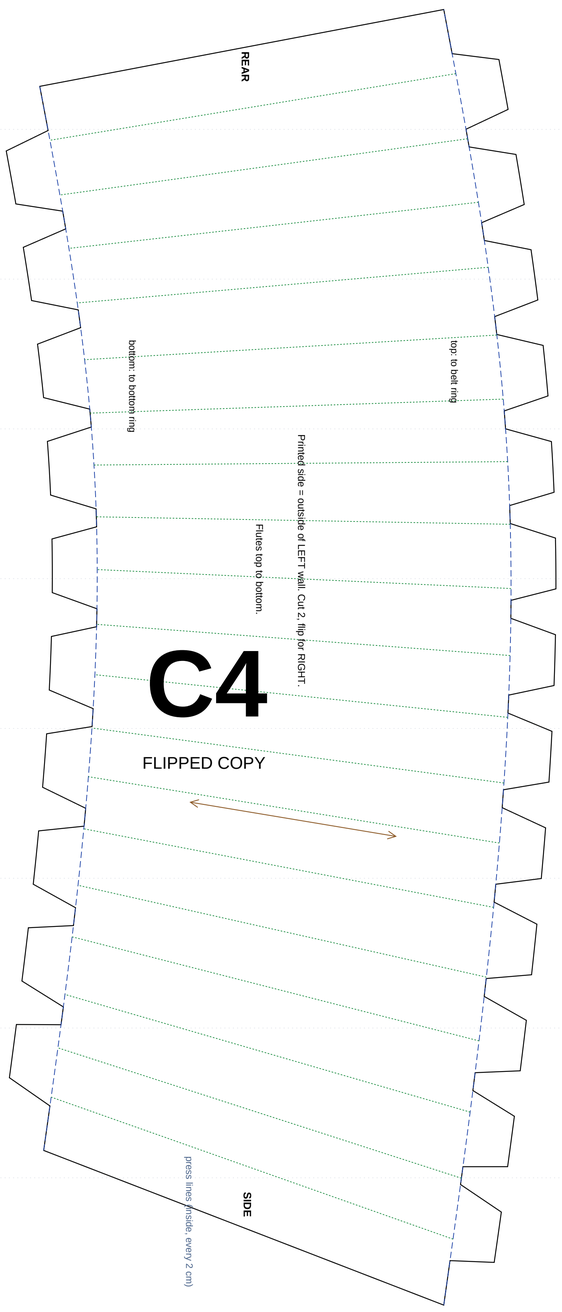

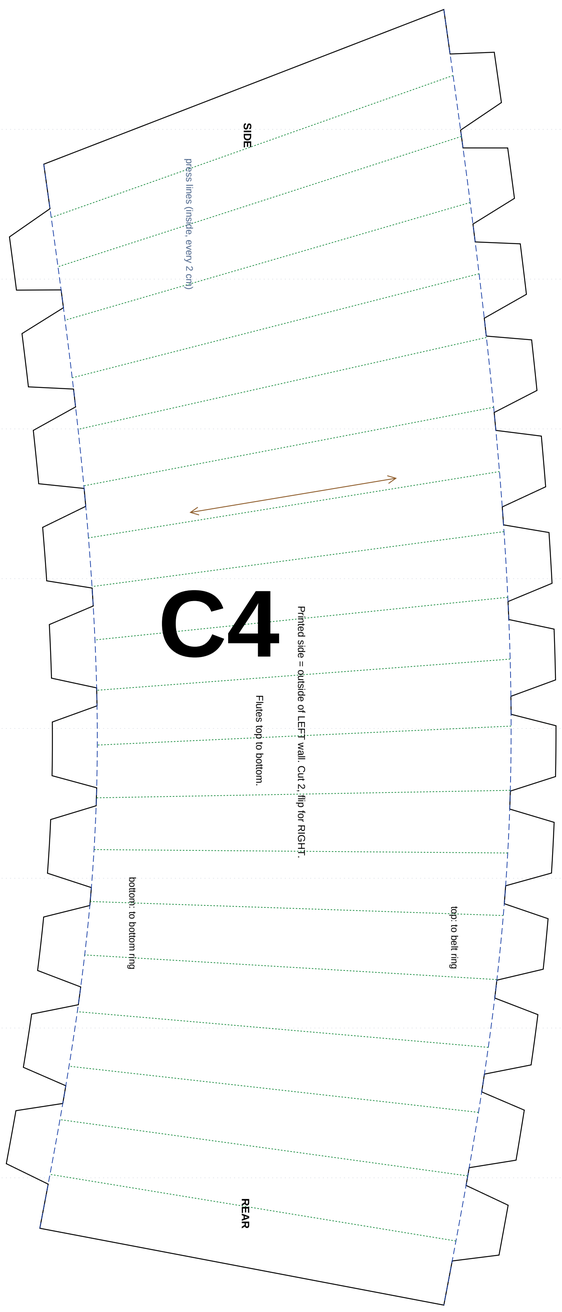

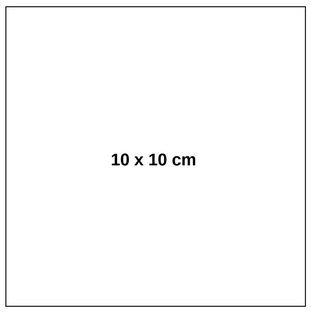

Measure both ways. Must be exactly 10 cm.

- Cut
- Fold (glue tabs)
- Press line (inside face)
- Placement mark / sheet edge
- Waves (flutes) this way

ON THIS SHEET

B2	Bottom ring x1
C4	Wall, lower rear x2
E	Backrest x1
C2	Wall, upper rear x2
R3	Rotor rim strip x1

FLIPPED COPY (F): this copy is the mirror image, for the other side.
LAYER 2 (L2): glue face to face with the first layer, waves crossed, with PVA; press flat overnight.

edge of your 25 x 38 in (64 x 97 cm) cardboard sheet

SKYCAB - CARDBOARD SHEET 4 OF 5 (3-ply, 25 x 38 in (64 x 97 cm))

Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll (page is 860 mm wide, so it fits inside the printer margins: no scaling). Check the 10 x 10 cm square before cutting.

Line up the dashed sheet outline with a corner of your cardboard. The waves (flutes) inside the cardboard must run LEFT-RIGHT on this print, like the grey lines.

Either cut the paper parts out and trace round them, or pin the whole print on the sheet and cut through the solid lines.

TAB: fold into the box, glue to deck

R3

R8

R5

R5

R5

tail fin K (back panel)

Strap slot in the front one only.

Half pattern. Cut 2: seat front and back.

E

LAYER 2 - waves crossed

strap slot

Q

half: flip on red line. Centre hole = motor shaft

pod top (oval)

collar Y tabs glue here

FRONT

I

N

half: flip on red line

Q

LAYER 2 - waves crossed

half: flip on red line. Centre hole = motor shaft

pod top (oval)

collar Y tabs glue here

FRONT

I

R5

half: flip on red line

Q

LAYER 2 - waves crossed

half: flip on red line. Centre hole = motor shaft

pod top (oval)

collar Y tabs glue here

FRONT

Q

half: flip on red line. Centre hole = motor shaft

pod top (oval)

collar Y tabs glue here

FRONT

R5

R5

edge of your 25 x 38 in (64 x 97 cm) cardboard sheet

10 x 10 cm

Measure both ways. Must be exactly 10 cm.

- Cut
- Fold (glue tabs)
- Press line (inside face)
- Placement mark / sheet edge
- Waves (flutes) this way

ON THIS SHEET

E	Backrest x1
I	Rotor ring x2
Q	Rotor base disc x4
R8	Seat edge strip x1
R3	Rotor rim strip x1
N	Pod bottom cap x1
R5	Wall joiner strips x6


FLIPPED COPY (F): this copy is the mirror image, for the other side.
LAYER 2 (L2): glue face to face with the first layer, waves crossed, with PVA; press flat overnight.


SKYCAB - CARDBOARD SHEET 5 OF 5 (3-ply, 25 x 38 in (64 x 97 cm))

Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll (page is 860 mm wide, so it fits inside the printer margins: no scaling). Check the 10 x 10 cm square before cutting.

Line up the dashed sheet outline with a corner of your cardboard. The waves (flutes) inside the cardboard must run LEFT-RIGHT on this print, like the grey lines.

Either cut the paper parts out and trace round them, or pin the whole print on the sheet and cut through the solid lines.

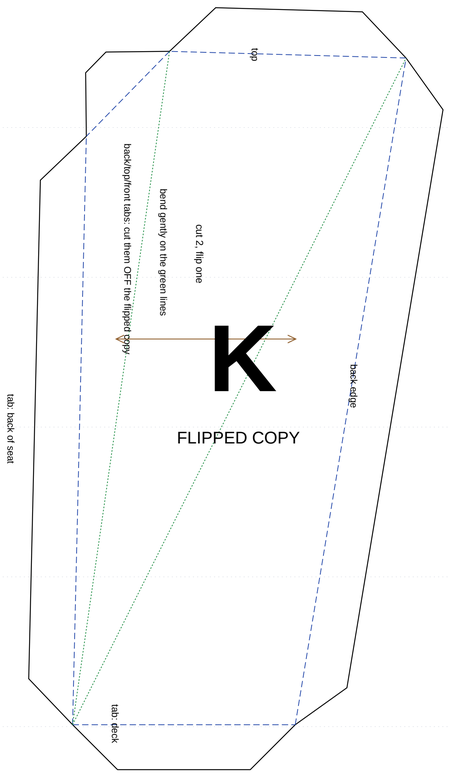

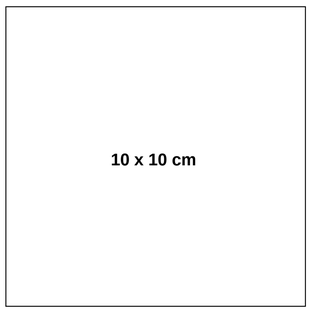

Measure both ways. Must be exactly 10 cm.


- Cut
- Fold (glue tabs)
- Press line (inside face)
- Placement mark / sheet edge
- Waves (flutes) this way


ON THIS SHEET

K Tail fin side x1

D1 Front beam x2

FLIPPED COPY (F): this copy is the mirror image, for the other side.
LAYER 2 (L2): glue face to face with the first layer, waves crossed, with PVA; press flat overnight.

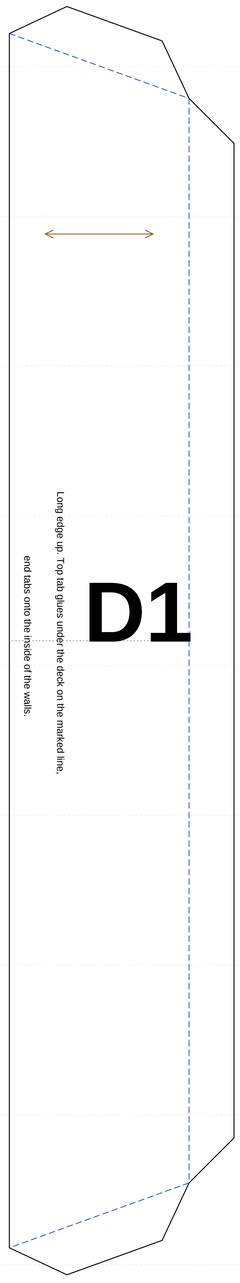

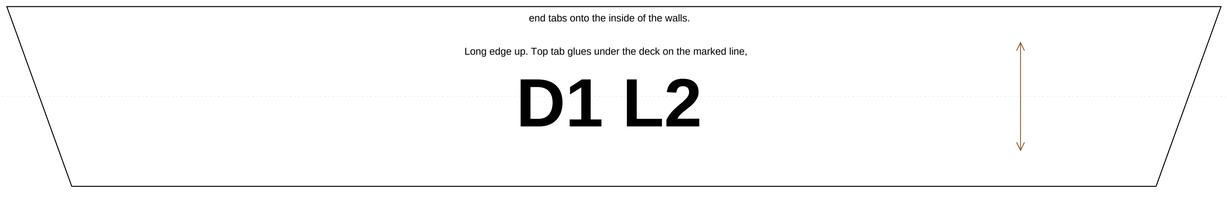

edge of your 25 x 38 in (64 x 97 cm) cardboard sheet

SKYCAB - LAST PAGE: PARTS NOT CUT FROM CORRUGATED CARDBOARD (thin card, plastic, paper guides)

Print at 100% / ACTUAL SIZE on a 36 inch (914 mm) roll; the page is 860 mm wide so it fits inside the printer margins. Check the 10 x 10 cm square first.

U Headlight trim: Thin card (cereal box), painted silver or white, cut 2 (flip one for the right side)
V Headlight lens: White see-through plastic (frosted folder, milk jug), cut 2 (flip one for the right side)
W Headlight box side: Thin card (cereal box), cut 2
X Headlight box back: Thin card (cereal box), cut 2 (flip one for the right side)
R7 Headlight hood: Thin card (cereal box), cut 2
J Rotor blade: Thin card (cereal box), painted black, cut 8 (4 per rotor)
L TAXI sign box: Thin card (cereal box), cut 1
S Windshield: Clear plastic sheet (A3 OHP / clear folder), cut 1
M Tail light: Red card (or red craft foam), cut 2
Y Pod top collar: Thin card (cereal box), cut 2 (one per pod)
R9 Motor collar: Thin card (cereal box), cut 2 (one per motor)
O Fish-mouth guide: Paper (the printout itself), cut paper only, use 4 times
P Pod tube wrap template: Paper (the printout itself), cut paper only, use for both pods

10 x 10 cm

S WINDSHIELD

Clear plastic: A3 OHP sheet or an opened clear folder

Tabs fold OUT and tape to the deck on line S

front centre

BACK

FRONT

strut joins here (inner side)

wire

P POD TUBE

wrap round tube, top edge flush

ends must just meet: made for a

7 cm OUTSIDE diameter tube

gap or overlap? re-measure and enter it on the page

cut: bottom of pod

back

top

end

end

L TAXI (front)

BACK

overlap

TABS: fold OUT, glue under disc Q

Y POD TOP COLLAR

FRONT

U

V LENS

cut off

cut off

O FISH-MOUTH: cut the paper on the wavy line first

FRONT TOP BACK BOTTOM FRONT

X BOX BACK

LED hole

W HEADLIGHT BOX SIDE - this side white, faces in

overlap the ends 1 cm

BOTTOM TABS: fold IN, back X glues on

TOP TABS: fold OUT, glue to the wall round the window

TABS: fold back, glue to the wall above the trim

R7 HEADLIGHT HOOD

M

J

THIS EDGE level with the motor face

R9 MOTOR COLLAR

wrap about 3 turns, until it fits the socket in Q