Geodesic Dome Wedge Method

The 40 Hour Cabin

DONOVAN ZEANAH

Independently published

Geodesic Dome Wedge Method: The 40 Hour Cabin

Copyright © 2026 Donovan Zeanah. All rights reserved.

No part of this book may be reproduced in any form without written permission from the author, except for brief quotations in reviews and articles.

First edition, 2026. Independently published.

Every figure in this book was computed from the geometry in the DomeSim project at the time this edition was built (September 2026). The software is open at github.com/dkzeanah/DomeSimulator.

Prices are United States retail as quoted in September 2026. They are there to show proportion -- which parts cost money and which do not -- and should be checked locally before anything is bought.

The illustrations are rendered by the project's own software.

This book describes methods, not rated structures. Read *The Engineer's Note* before building anything from it. The author and publisher accept no liability for injury, loss or damage arising from its use.

Product and store names are the trademarks of their owners and are used for identification only.

Contents

The Engineer's Note 6
Forty Hours 7

PART 1 · WHAT ACTUALLY HAS TO BE RIGHT 9
1 Your Skull Is Not Symmetrical Either 10
2 Water Is the Silent Killer 13
3 Build It So You Can Change Your Mind 17

PART 2 · THE GEOMETRY, FROM SCRATCH 21
4 Why It Is Triangles 22
5 Twelve Points From One Number 25
6 Two Lengths, Four Ways 28
7 Half a Sphere Is a Building 31
8 Choosing a Size, At Last 34

PART 3 · THE STICK 37
9 Stop Squaring. Start Splitting. 38
10 One Eighth of a Tree, Used as a Stick 42
11 Two Lengths, and Neither Is the Chord 46

PART 4 · THE PANEL 51
12 Nothing Meets at the Corner 52
13 Nine Processes, Whatever Size You Build 56
14 One Flat Board, Forty Identical Panels 60
15 Doors, Windows, and What Not to Cut 71

PART 5 · THE SKIN 75
16 Raising It 76
17 One Watertight Layer, and Only One 80
18 The Seam Does Four Jobs 84
19 A Dome Is a Head, and It Wears Hats 88

PART 6 · THE FLOOR AND THE GROUND 93
20 The Floor Is the Other Thing to Get Right 94
21 A Pad, Not a Plot 99

PART 7 · THE NETWORK 103
22 Why a Network Beats a Park 104

PART 8 · OTHER SHAPES 111
23 A Zome Is Not a Piece of a Sphere 112
24 Exactly Twelve Pentagons, Always 117

PART 9 · THE CATALOGUE 121
25 Every Other Way of Doing It 122
26 Hubs, or No Hubs 126
27 Twelve Buildings, One Tool 129

PART 10 · THE STEM CELL 133
28 Why We Call It a Stem Cell 134
29 Sink the Money Into the Part That Moves 137
30 Fifteen Buildings From One Body 144

PART 11 · VARIATIONS 149
31 Hang It Between Two Trees 150

PART 12 · THE TOOLS 153
32 The Software That Wrote This Book 154
33 What Each World Shows You 161
34 Every Part, Priced 168
Glossary *172*
About the Author *175*
Index *176*

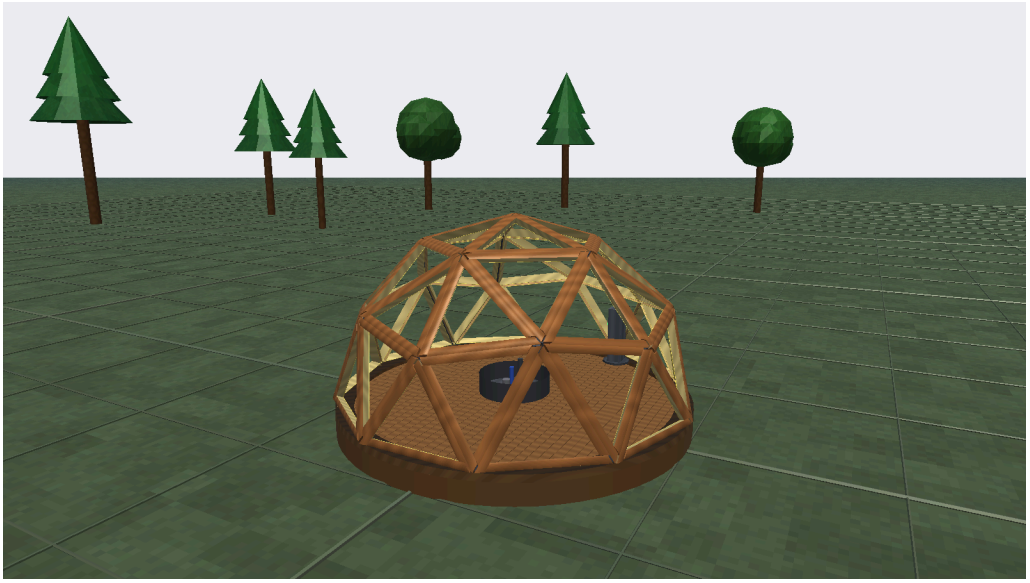

The frame, on its own land.

A dwelling of 120 split-log members, 40 panels and 277 square feet of floor — cut from standing timber with a chainsaw, with a frame that stands up in a working week.

The Engineer’s Note

Read this before anything else in the book, and before you pick up a saw.

This book is not engineering. Nothing in it is a structural rating. Snow load, wind load, the ground under the pad and the way a frame is fastened are specific to your site, and they are a licensed engineer’s numbers, not this book’s. Where a chapter reaches one of those questions it says so and stops. Before anybody sleeps in a building made this way, have an engineer look at the drawings and at the frame.

This book is not your building code. Permits, setbacks, fire, egress and occupancy rules are local. Ask your building department what they need before you fell the first tree, not after you raise the last panel.

Electricity and water are trades. The utility column carries a full-size electrical feed and real plumbing. Have a licensed electrician connect and inspect the electrical work and a licensed plumber the water and drain, and follow what your inspector asks for.

Felling is the most dangerous hour in this book. Chapter 13 lists it as the first process and, on purpose, does not teach it. Learn it from a qualified instructor, in person. Wear a helmet with a face screen, hearing protection, cut-resistant chaps, gloves and boots; never fell alone; plan your escape route before the first cut.

The rest of the work is heavy. Ripping logs throws chips and sawdust, so wear eye protection as well as the rest of your saw gear. Wedges and panels are lifted above your head, so work in pairs from a stable platform. The shell comes apart in pieces that are a job for several people or a crane, and the book gives their weights so nobody has to guess.

Some of this book is a design possibility, not a tested product. The book keeps three kinds of claim apart – known geometry, tested construction, and design possibility – and says which is which. The floating dome in Chapter 31 is the clearest example: it is priced, not rated.

You build at your own risk. The author and publisher accept no liability for injury, loss or damage arising from the use of this book.

Forty Hours

The goal is a house built so efficiently that one person can go from standing timber to a standing shell inside a single working week.

Not a kit. Not a shell delivered on a lorry. A tree, a chainsaw, and 40 hours.

That is not an aspiration bolted onto the method afterwards. It is where the number came from, and here is the arithmetic.

The clock

Splitting. One session at the log — 4 hours with a meagre chainsaw — produces 30 wedges. The frame needs 120, so every member in the building is **16 hours** at the log.

Everything else. Taken end to end, one member costs about 15 minutes from tree to standing: split, crosscut, drilled, joined, and up in the shell. That is an average over the fast work and the slow, not a stopwatch on one operation.

```
120 members x 15 minutes  =  30 hours
```

Splitting is 53 per cent of that, which is why Chapter 13 says the rip is the process worth improving first.

Getting it wrong. Add 25 per cent for the stick that splits off the radius, the panel laid down in the wrong order, and the hour spent looking for the drill.

```
30 hours + 25%  =  37.5 hours
```

Which is a 40 hour week, with a little in hand.

The honest part

You will not do it in five days.

This is hard physical work. Splitting a log is not typing; you get perhaps four good hours at it before the quality of your swing goes, and the quality of your swing is what keeps a split on the radius. Nobody does forty hours of this linearly, and anybody who tells you they did was counting the hours and not the days.

It comes in **spurts**. A weekend at the log. An evening on the bench. A day when three people turn up and the shell goes from nothing to closed.

That does not weaken the number — it is the reason the number is worth having. Forty hours of work is a thing you can *schedule* against a life: five Saturdays, or two weeks of evenings, or one very determined week off. A building measured in months is a building you never start, because months cannot be fitted into a year that already has things in it.

So: the forty hours is a **budget of effort**, not a calendar. The point of counting it is that it is small enough to count.

And the rest of the book

The shell is a week. The skin and the floor — Chapters 2 and 20, the two parts of this building that decide whether it is still standing in thirty years — are not, and this book spends more pages on them than on the frame for exactly that reason.

The frame is the part you can do in a week. It is also the part you are allowed to get wrong.

The whole building, counted the same way

So that nobody has to find it on the last page: the forty hours is the frame and its shell – 37.5 hours with error allowed for. The whole standard building, counted the same way – frame, panels, shell, utility column and the rest – is **67 hours** of labour, and Chapter 29 shows every one of them. The title is the part one person can do in a week. The rest is the part worth doing slowly.

PART 1

What Actually Has to Be Right

“A dome is a frame, a skin and a floor -- and the frame is the part you are allowed to get wrong.”

Three chapters that invert the usual advice, and one practical consequence: build the frame loose and the two layers that matter stay changeable for the life of the building.

CHAPTER 1

Your Skull Is Not Symmetrical Either

The frame is the part you are allowed to get wrong, and almost every dome book has this backwards

Every dome book I have read opens by telling you to be precise.

Measure twice. Hold your angles. A geodesic dome is a mathematical object and you are about to approximate one out of wood, so the closer you get to the maths the better your building will be.

I believed that for about a year, and it cost me most of a year.

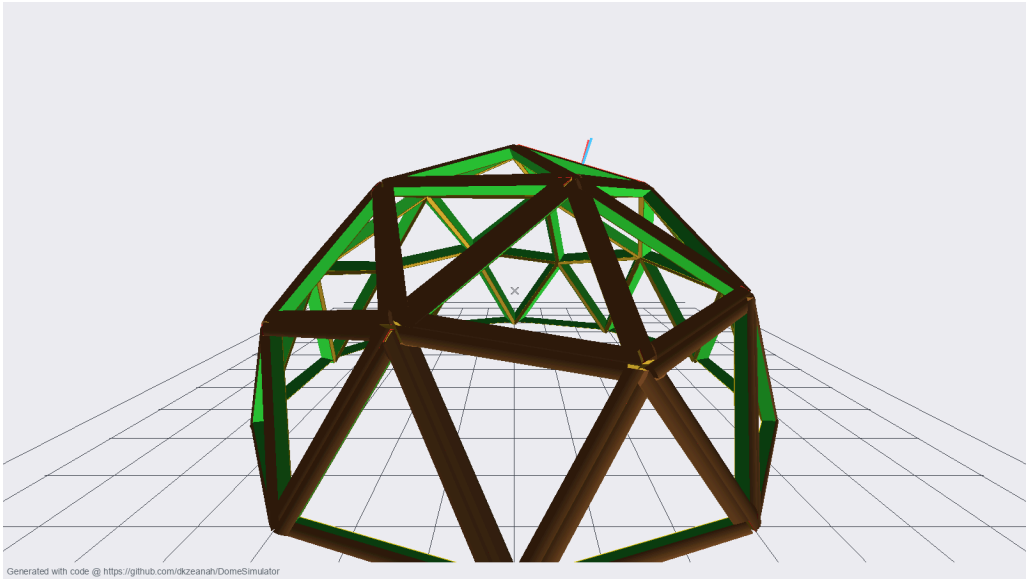

The reference build. Nothing about it is as accurate as it looks.

The afternoon I stopped believing it

I had a frame up. Not this one — an earlier one, made of whatever the chainsaw had produced that week, with no two sticks alike. I had built it to prove to myself that the method could not work, so that I could stop thinking about it and go and buy some lumber like a normal person.

It stood. It stood with a stick in it that was out by most of an inch, and a vertex where three members met that I could put my whole thumb into.

I pushed it. I hung off it. I put a ladder against it and climbed on it, which I do not recommend and did anyway.

It did not care.

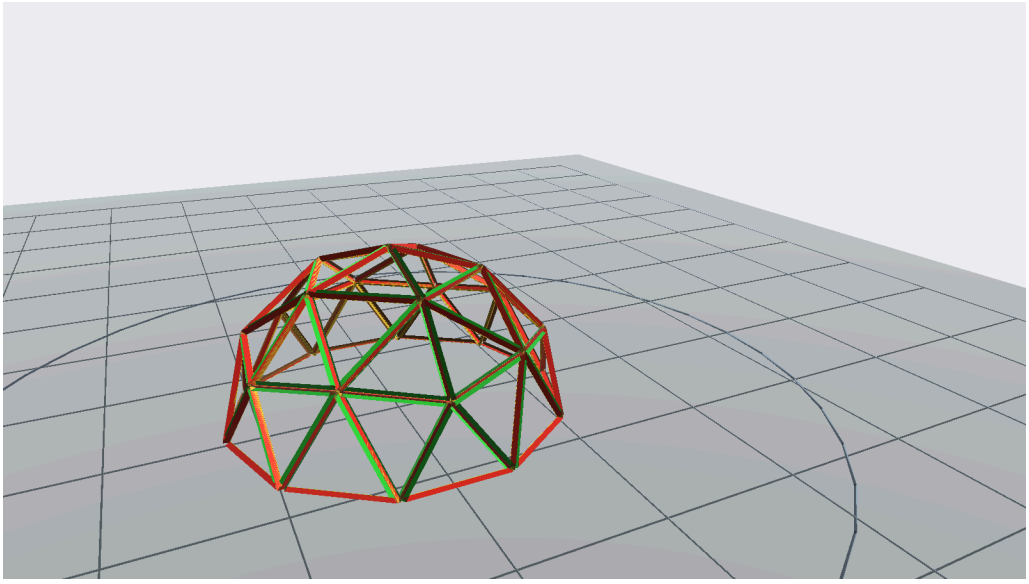

How much shelter an hour buys, which is the question this book is an answer to.

Why it did not care

A dome carries its loads *axially*. The members are in compression along their own length — pushing end to end, the way a stack of bricks pushes — and a triangulated shell passes a load from one triangle to the next all the way round, so no single member is ever being asked to do very much on its own.

Put a stick in slightly out of position and two things happen. The triangle it is in is very slightly a different triangle. And the load path shifts by that same very slight amount.

Neither of those is an error that grows. A frame is not a tower of tolerances stacking up toward a failure; it is a shell that absorbs the difference and carries on. The error goes into the seam — and there is already a key in the seam, because there was always going to be one.

The lumpy skull

You have an asymmetric skull.

Genuinely: measure it. One side of your head is further from the midline than the other, one eye socket is fractionally lower, your jaw is not centred. This is true of essentially everybody and it is why nobody's face looks right when you mirror it.

Nobody likes you any less for it, and your skull opposes a baseball bat exactly as well as a perfectly symmetrical one would — because the thing that stops the bat is the *shape*, a closed curved shell in compression, and not the precision.

That is a dome. The geometry does the work. The accuracy is decoration.

What this book does with that

It spends it.

If the frame does not need precision, then the frame does not need a mill. It does not need a planer, or a moisture-controlled shed, or lumber bought to a tolerance somebody else held for you. It can be made of logs split with a wedge, on the ground, in a field, by one person who is not very good at it yet.

That is the whole method. Everything else in this book — the 45.0-degree sector, the pinwheel joint, the one flat board that makes 40 identical panels — is a consequence of deciding that the frame is the part you are allowed to get wrong.

And what it does not spend

Here is the part that took me another year to learn, and it is the reason this book exists rather than being a pamphlet about splitting logs.

The permission is not general. It applies to the frame and it applies to nothing else.

The skin has to be right, because water does not negotiate and does not announce itself. The floor has to be right, because everything you own sits on it and because the ground sends its water up.

So the advice most dome books give is not merely unhelpful. It is aimed at the wrong layer. It asks for care where care is cheap to skip, and it treats as finishing work the two layers that decide whether the building is still there in thirty years.

The next two chapters are about those two layers. Then we can go and cut something.

CHAPTER 2

Water Is the Silent Killer

The skin is the part that has to be right, and it is the part every dome book treats as a finish

A frame that is out by an inch stands for fifty years.

A skin that leaks for one winter takes the frame with it.

That asymmetry is the most useful thing in this book, and almost every dome book has it the other way round.

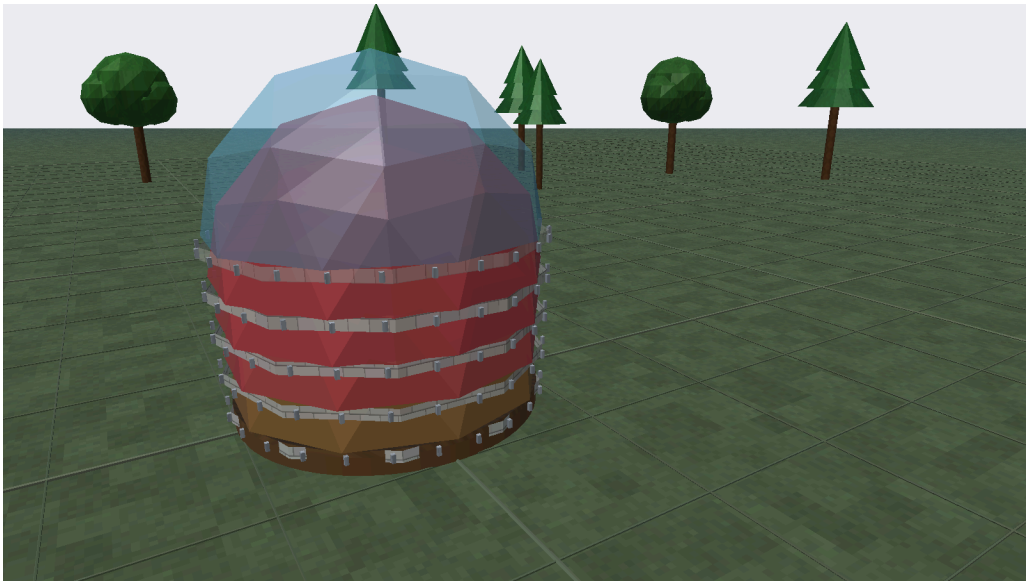

One watertight layer over everything else.

Why water gets to decide

Structural failure is loud. Something cracks, something sags, something you can see from across the room. You get warning, and the warning arrives in a form that makes you do something about it.

Rot is not loud. Rot is a slow chemical argument between a fungus and your building, conducted at about twenty per cent moisture content, entirely out of sight, and it is usually two or three years old by the time anything shows on a surface you look at.

By then you are not repairing a leak. You are replacing members, and the members are the thing this whole method spent its cleverness on making cheap — so you are not even losing much money. You are losing the fortnight.

That is the trade nobody states plainly: the frame is cheap to build and expensive to replace, because replacing it means taking the building apart.

Where a dome actually leaks

Not through the panels. A panel is a large flat sheet with no holes in it and it is the easiest part of any building to keep water out of.

Domes leak at seams, at penetrations, and at the apex, in that order — and a 2V dome has a great many seams.

This one has 55 interior seams, which is 309 feet of joint. Every foot of that is a place where two panels meet and where somebody has to have done something deliberate.

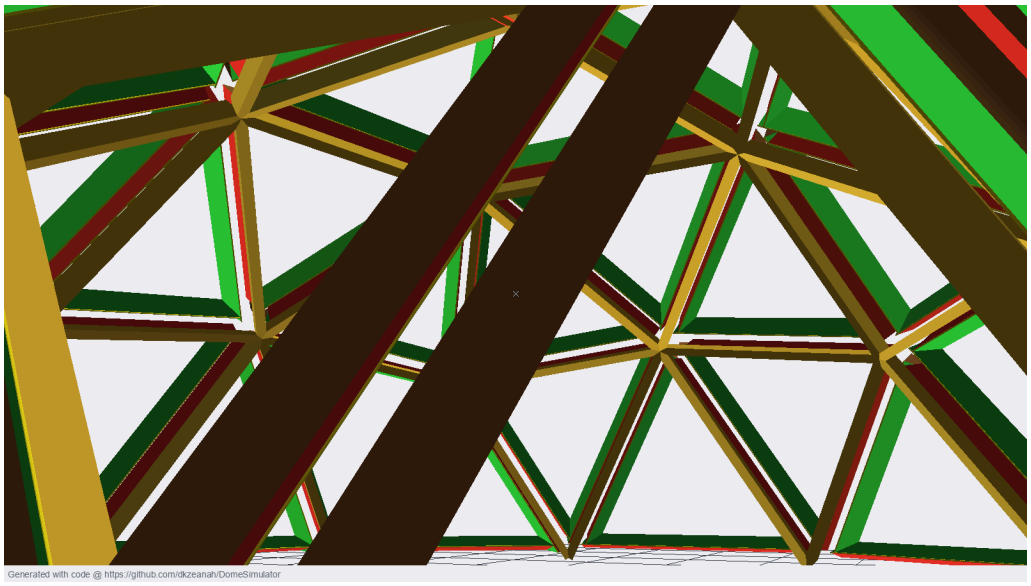

Every seam in the dome, and the key in each one.

Three hundred feet of joint is not a detail. It is the single largest risk surface the building has, and it is spread out so evenly that no one part of it looks important enough to worry about.

The move that removes the category

You do not solve three hundred feet of joint by making each joint better.

You solve it by putting one continuous layer over all of it, so that the joints stop being the outside of the building.

That is what the shower cap is. One watertight membrane over the whole shell, strapped down, with nothing structural fastened through it and no seam in it that is not a welded one. The panels underneath do not have to be watertight. The seams underneath do not have to be watertight. They have to be dry, and they are dry because something above them is doing that job and only that job.

The chapter on the cap (17) has the physics and the arithmetic. What matters here is the ordering: **one layer whose only job is water, and it goes on last and comes off first.**

And the floor

The floor is the second thing, and for a different reason.

It is the surface you are in contact with all day. It carries everything you own. It is the only part of the building that is in permanent contact with the ground, which means it is where ground moisture arrives, and unlike a wall it cannot dry to the outside because there is no outside — there is dirt.

A floor that is cold, or damp, or that flexes, is a floor you notice every hour you are awake. A frame that is out of true is a frame you never think about again after the first week.

Get the floor right. Chapter 20 says what right means, and what the five ways of doing it cost on this footprint.

The hierarchy, stated once

1. **The skin.** Water. One continuous layer, no compromises, no penetrations you did not design.
2. **The floor.** Comfort, dryness, and everything you own.
3. **The frame.** Standing up, which it will do whether or not you were careful.

If you read nothing else in this book, invert your instincts in that order. It is worth more than every angle in the appendix.

The catch, and the next chapter

There is an obvious objection, and it is a good one.

The skin and the floor are the expensive parts. They are the parts you cannot cut out of a tree with a chainsaw. Telling somebody that the two layers that matter are also the two layers that cost money is not obviously helpful.

The answer is that they are also the two layers you can *defer* — and the next chapter is about the four things you do while building the frame that keep that option open for the life of the building.

CHAPTER 3

Build It So You Can Change Your Mind

The skin and the floor are the two things that matter and the two things you can defer -- if the frame is built for it

The two layers that matter most are the two layers you can put off.

That sounds like a consolation and it is actually the design. A frame is a commitment: 120 members, cut to two lengths, and once the first panel is closed the shape of the building is decided. A skin is not. A floor is not. Those are things the building *wears*, and a building can change what it wears.

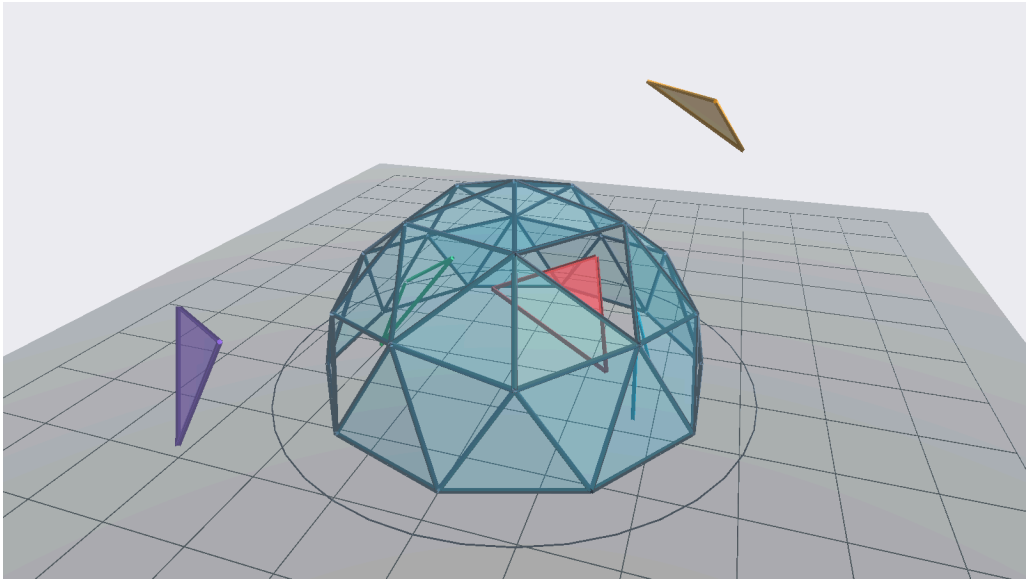

New insulation? Swap it. Solar panels? Add them.

The condition

It only works if you build for it, and the decisions are all made in the first week, before there is a building to look at.

None of them costs anything meaningful at the time. All of them are effectively impossible to add later.

The four things

Threaded inserts in the wedge faces, not screws into end grain.

A panel that will be taken off and put back needs somewhere to bolt to, and end grain is not it — the second time you drive a screw into the same hole it is holding about half of what it held the first time, and the fourth time it is holding nothing. An insert set into the flat sawn face of a wedge is a machine thread in a piece of metal. It does not care how many times you use it.

This is the single highest-leverage decision in the build, and it happens while the panel is still flat on the jig.

A cap sized a layer larger than it needs.

The outer skin goes over whatever is under it, so its size depends on how much is under it. A cap cut to fit a bare shell will not go over a shell wearing two quilted layers, and you find that out on the day you want to add the second layer, in November.

Chapter 19 has the arithmetic — each hat is a size up, and the sequence is not one number. Buy one size up from what you need on day one.

A floor that clamps rather than is built in.

A floor framed into the base ring is part of the structure. A floor that is a hub, radial spokes and decking, clamped to something in the middle, is a component — it can come out, go back, be replaced with a better one, or be left behind.

It also turns out to be the thing that makes a floating dome possible at all, which was not the reason for doing it.

Services in the seam channel, not in the wall.

The seam leaves a gap that has to be filled with something. Fill it with a hose and the building's plumbing is in its structure, reachable from outside by taking off one panel, and no pipe has ever been buried in anything.

An A seam's channel takes a line up to 2.878 inches across. That is not a tight fit for the things a small building actually needs.

What deferring costs

Honestly: some money, later, in exchange for less money now.

The standard article in this book's cost model lists at $12,036, built to $10,030. The shell inside that is $3,265. The bare version of the same cap — no quilted layers at all — is $3,265, and each layer you add afterwards is a few tens of dollars of material and an evening.

So the deferral is real and it is cheap. What you are buying with the four decisions above is the right to spend that money in the order your life actually allows, rather than in the order a building would prefer.

The failure this prevents

I have watched somebody build a beautiful frame, run out of money, put a tarpaulin over it for a winter, and lose the frame.

Not because the tarpaulin was a bad idea. A tarpaulin is a perfectly good temporary skin. They lost it because there was nowhere for a real skin to *attach* when the money came back — no inserts, no strap points, nothing but a frame that had been designed on the assumption that the skin would be figured out later by somebody with more time.

Later is not a plan. Later is a thing you design for.

Where this leaves us

Three chapters in, the argument of this book is complete:

- the frame is allowed to be messy, which is what lets a split log be a structural member;
- the skin and the floor are not, because water and comfort do not forgive;
- and the two layers that are not allowed to be messy are the two you can postpone, upgrade and swap — if you spend four decisions on it in week one.

The rest of the book is how. It starts where the material does, with a tree.

PART 2

The Geometry, From Scratch

“One irrational number places twelve points in perfectly even space. Everything else in this book is consequences.”

The whole derivation, on screen: why triangles, why an icosahedron, where the golden ratio really sits, and the two lengths that come out of it.

CHAPTER 4

Why It Is Triangles

Every other polygon is a mechanism. A triangle is the only shape that cannot change without something breaking

Take four sticks and pin them at the corners into a square. Push one corner.

It folds. You now have a rhombus, and you can keep pushing until it is flat, and at no point did anything break or bend or come loose. A four-bar linkage is a **mechanism**. It is a machine for changing shape, and you have built one by accident.

Take three sticks and pin them at the corners. Push one corner.

Nothing happens. Nothing *can* happen — the only way that triangle changes shape is if a stick changes length or a pin fails. There is no motion available to it.

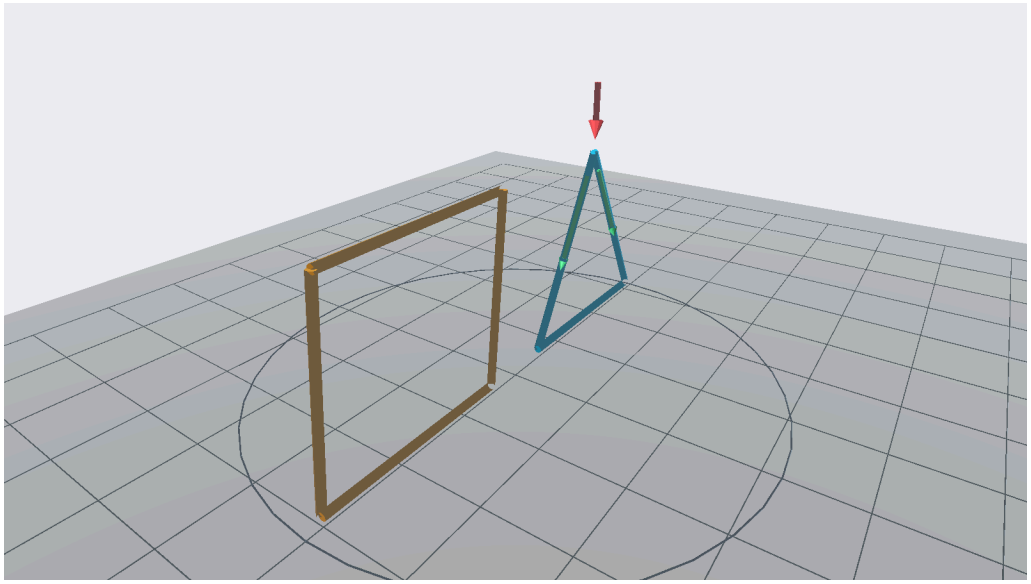

Why the shape is triangles at all.

That is the entire structural argument

A square frame needs a rigid corner, because the corner is what stops it folding. Rigid corners are welds, gussets, plates, moment connections — and they are where every framed building spends its engineering.

A triangulated frame does not. The geometry is holding the shape, so the corner only has to stop the sticks sliding apart. A pin will do. Two flat faces pressed together will do, which is Chapter 12 and is the whole reason this method can use a joint you could make with a handsaw.

And it is why the frame can be lumpy

Chapter 1 claimed a dome forgives error. This is why.

A mechanism amplifies error — push a linkage slightly out and it moves a lot. A triangle cannot move at all, so the error has nowhere to go and nothing to grow into. A triangle whose sides are each a shade off is simply a slightly different triangle, sitting a shade differently in the shell, and its neighbours absorb the difference at the seam.

The shape is doing the work. That is the sentence this whole book keeps returning to.

And why an icosahedron

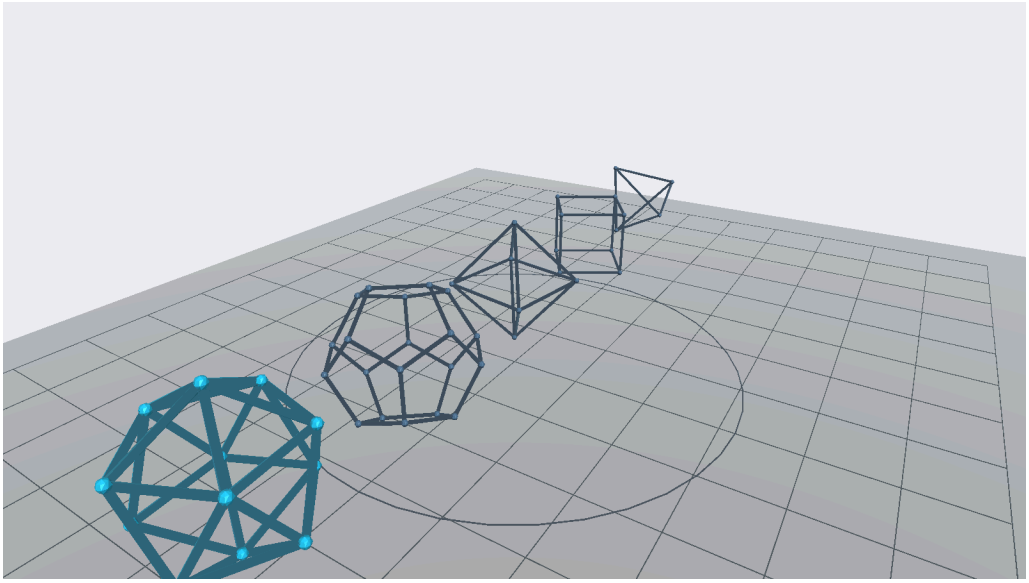

The solid everything starts from.

If triangles are the unit, the question becomes: how do you wrap a ball in them?

The answer has been known since Plato. There are exactly five solids whose faces are all the same regular polygon meeting the same way at every corner, and of those, three are made of triangles: the tetrahedron with 4 faces, the octahedron with 8, and the icosahedron with **20**.

Twenty is the most triangles you can get with every one identical and every corner the same. So it is the roundest starting point available, and starting rounder means less distortion when you subdivide.

Everything after this is subdivision. Cut each of those twenty faces into smaller triangles, push the new points out onto the sphere, and you have a geodesic dome. Cut each edge once and you have the 2V of this book. Cut it twice and you have a 3V.

But before any of that, you have to *place* the twenty faces — which means placing twelve points in perfectly even space, which is the next chapter and is the one piece of this derivation that looks like magic.

CHAPTER 5

Twelve Points From One Number

Where the golden ratio actually sits in this method -- and the place everybody expects it and it is not

The golden ratio has a real job in this method and it is not the one people expect.

Here is the job.

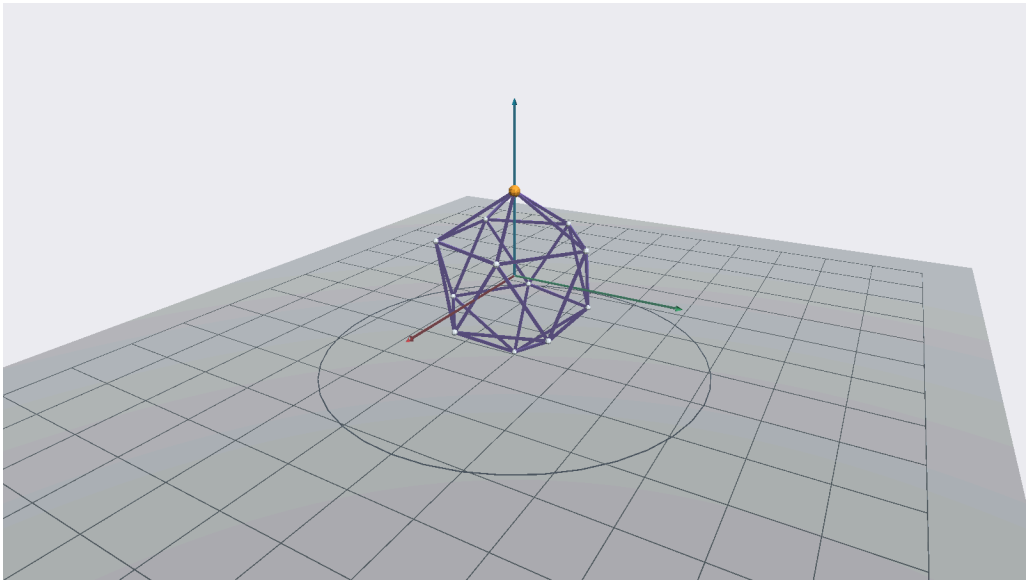

Twelve points placed by one irrational number.

The number

φ — phi — is **1.618033989**.

It is defined by one property: it is the number whose square is itself plus one. $\varphi^2 = \varphi + 1$. Solve that and you get $(1 + \sqrt{5}) / 2$, which is where the decimal comes from.

That is the whole definition. No rectangles, no seashells, no Parthenon.

What it does here

Write down three numbers: 0, 1 and φ.

Now make points by putting them in every order with every combination of signs:

```
(0, ±1, ±φ)
(±1, ±φ, 0)
(±φ, 0, ±1)
```

Three families, four sign choices each. **Twelve points.**

Measure the distance from each point to its nearest neighbours: exactly 2.000, every time. Measure each point's distance from the origin: **1.902113**, every time, because it is $\sqrt{(1 + \varphi^2)}$ and every point has the same coordinates in a different order.

Twelve points, all the same distance from the centre, all the same distance from their neighbours. That is an icosahedron — the most even way to place twelve points on a sphere — and it fell out of writing one irrational number into a list of coordinates.

Nobody measured anything. Nobody iterated toward a solution. The evenness is a consequence of φ's one property, and this is the only place in the whole derivation where something arrives for free.

Why that property does it

Briefly, because it is worth knowing rather than accepting.

The icosahedron's twelve vertices can be seen as three golden rectangles standing in three perpendicular planes, interlocked. A golden rectangle is one whose sides are in the ratio 1 : φ — and the reason *that* ratio works is $\varphi^2 = \varphi + 1$, which is exactly the relationship needed for the three rectangles' corners to land the same distance apart.

So the defining property of φ is not decorative here. It is the thing being used.

Where it survives to

Now subdivide. Cut every edge of those twenty faces in half, push the new points out to the sphere, and measure what you get.

Two lengths, and only two — Chapter 6 proves there are no others. Expressed as multiples of the radius:

short	0.546533 R
long	0.618034 R

Look at the long one. **0.618034 is exactly 1/φ.**

0.618033989, to nine places, and it is not an approximation — it is φ − 1, which is the same number by φ's own defining property.

So the golden ratio places the twelve starting points, and then it comes all the way through the subdivision and the projection and lands in your cut list. When you crosscut a member at 72.000 inches, you are cutting the radius divided by the golden ratio.

And the place it is not

Here is the part that surprises everybody, including me.

The **ratio between the two struts is not golden.**

long / short = 1.130826

Not 1.618. Not 0.618. 1.130826, which is not φ, not 1/φ, not φ², and not any simple expression of φ at all.

People assume it is. It feels like it should be — the whole thing came out of φ, the long factor *is* 1/φ, so surely the two lengths are in a golden relationship. They are not, and a dome cut on that assumption is a dome with sixty wrong sticks in it.

The short factor 0.546533 is its own number. It comes out of the subdivision arithmetic and it does not simplify.

The lesson, which is about more than phi

A pattern that holds four times is not a rule.

φ places the points. φ gives the long chord. Both are exact and both are checkable. The third thing — the ratio — looks like it must follow and it does not, and the only reason this book knows that is that something computed it rather than assuming it.

That is why every number in these pages is derived rather than typed, and it is why the next chapter computes the same two factors four separate ways and prints the difference between them.

CHAPTER 6

Two Lengths, Four Ways

Four independent routes to the same chord factor, and the residual between them printed rather than promised

Never trust one calculation.

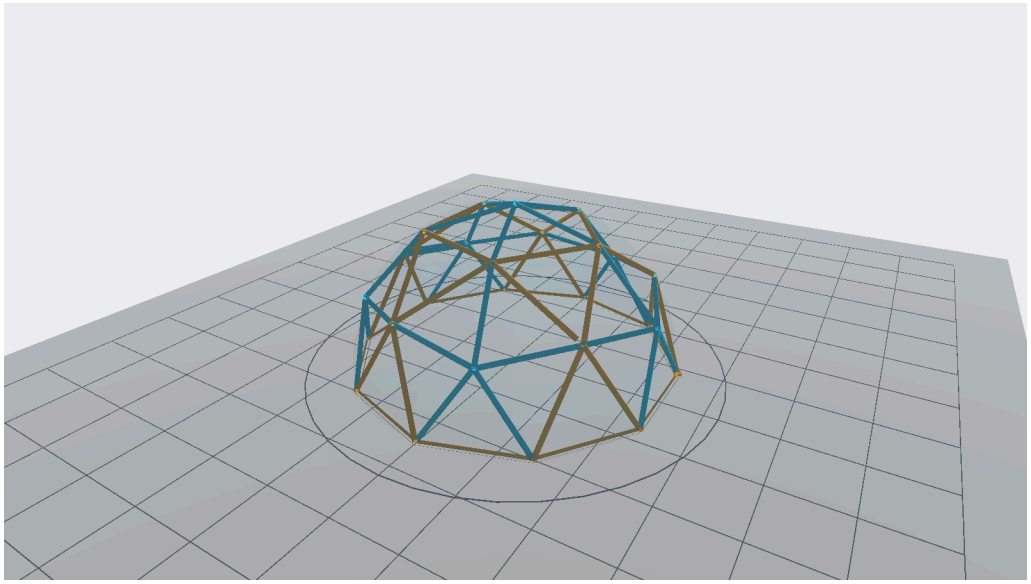

The two chord factors, derived four ways.

What is being checked

After subdivision and projection, the finished sphere has 120 edges. Measure all of them and they fall into exactly two lengths — no more, no fewer:

short	0.546533 R
long	0.618034 R

Those two numbers decide every stick you will ever cut. If either is wrong, every member is wrong, and the frame will not close — but it will not fail *obviously*. It will be a bit out, everywhere, and you will spend the assembly blaming your sawing.

So it is worth more than one derivation.

Route one: subtract the coordinates

The two points are known — they came out of Chapter 5's twelve, then a midpoint, then a projection. Subtract one from the other and take the length.

$$|u - v| = 0.546533$$

Direct, and it depends on nothing but arithmetic.

Route two: the central angle

Two points on a unit sphere subtend an angle at the centre. Take the dot product of the two unit vectors, take the arc cosine, and you have that angle. Then the chord across it is $2 \cdot \sin(\theta/2)$.

Completely different arithmetic — trigonometry rather than subtraction — and it uses the fact that the points are on a sphere, which route one never assumed.

Same answer.

Route three: the law of cosines

The same triangle, solved the way a surveyor would: two sides of length one and a known included angle.

Same answer again, by a third road.

Route four: measure it

Build the thing in CAD and put a dimension on it.

This one matters more than it looks. The first three are all the same person's reasoning in three costumes; if the underlying model is wrong they will agree with each other and all be wrong together. Measuring the drawn object catches an error in the *model* rather than in the algebra.

What the residual is

Routes one and two differ by about $\mathbf{1.1 \times 10^{-16}}$.

That is not "close". That is the gap between two different sequences of floating-point operations on numbers that are mathematically identical — the smallest disagreement a computer can express at this magnitude. It is the answer you get when two methods agree completely.

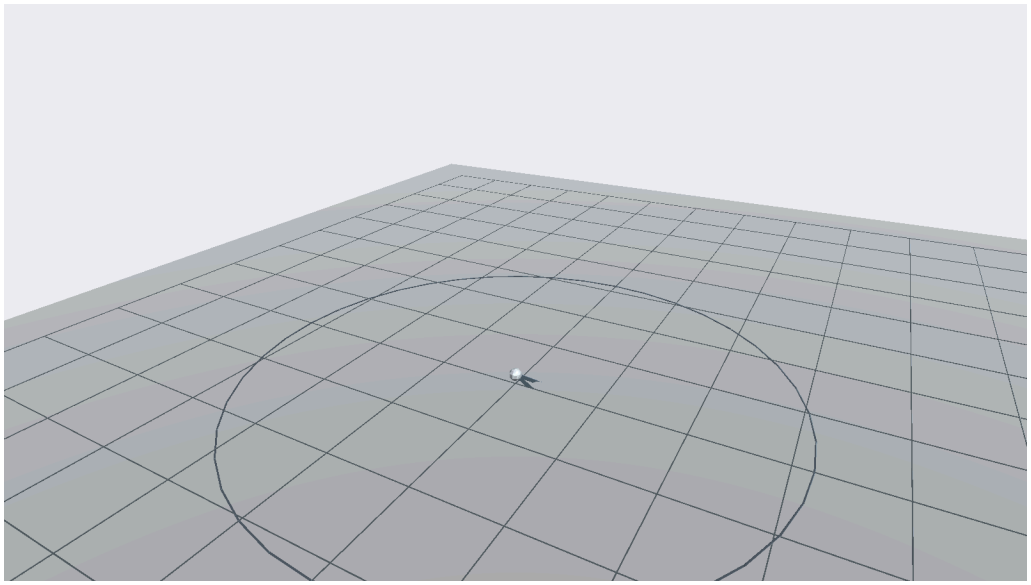

Two ways of computing the same number, and the residual between them.

Why the book does this everywhere

This is the pattern, not a one-off.

Where two ways of computing something exist, this project computes both and prints the difference. The strut table in Chapter 11 does it for the pinwheel's bite. The seam angles do it for the fold. And the audit described in Chapter 32 does it for the whole book, checking every printed figure against what the code can produce.

The reason is not rigour for its own sake. It is that **a wrong number in a building method does not announce itself.** It becomes a pile of sticks that nearly fit, two weeks in, with the tree already down.

Four routes and a residual of 10^{-16} costs an afternoon once. Finding out the other way costs the tree.

CHAPTER 7

Half a Sphere Is a Building

Where the sphere gets cut, what survives the cut, and how every count in this book falls out of it

A sphere is not a building. It has no floor and no door and half of it is underground.

So you cut it, and where you cut it is a design decision with consequences.

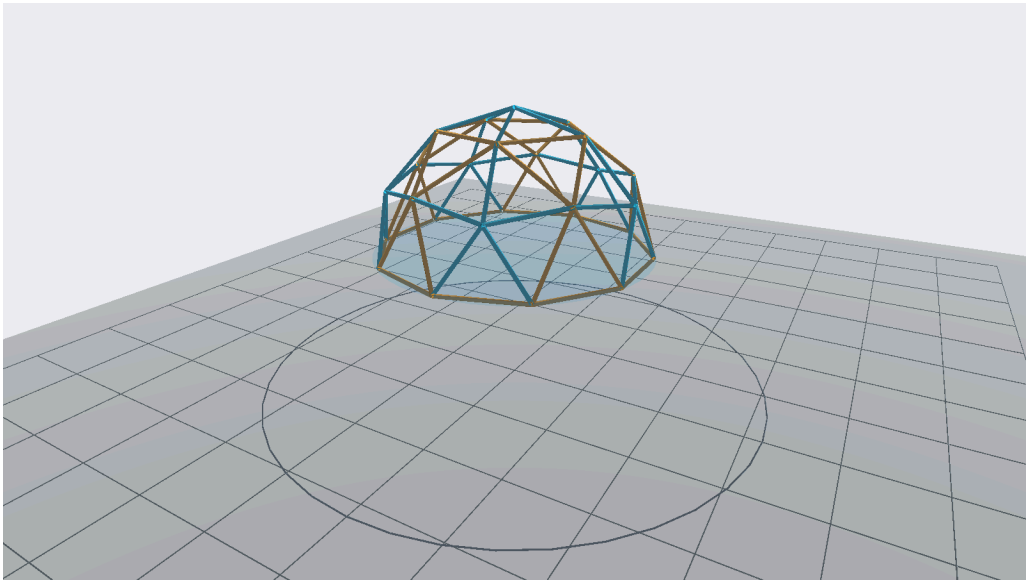

Where a sphere gets cut to become a building.

Cutting at the equator

This book cuts at the equator: a hemisphere, exactly half.

The 2V geometry cooperates. There is a ring of vertices exactly on the equator, so the cut lands on existing points and the base comes out as a clean regular polygon — 10 sides, each one a long chord, sitting flat on the ground with nothing to trim.

That is not true of every frequency and it is not true of every cut. Take a 3V dome and the equator falls between vertex rings, so you either move the cut or accept a base that is not level. Take a 2V and cut it above or below the equator and you get a shallower or deeper shell, a smaller or larger floor, and a base ring that is

no longer made of whole chords.

The equator is where the geometry is kindest, and this book takes the kindness.

What the cut gives you

```
across the base      19.42 ft
to the apex          9.71 ft
floor inside the ring 277 sq ft
shell surface        550 sq ft
```

Apex height equals the radius, because a hemisphere's apex *is* the radius. That one identity saves more arithmetic than any other fact in this book.

Counting the building

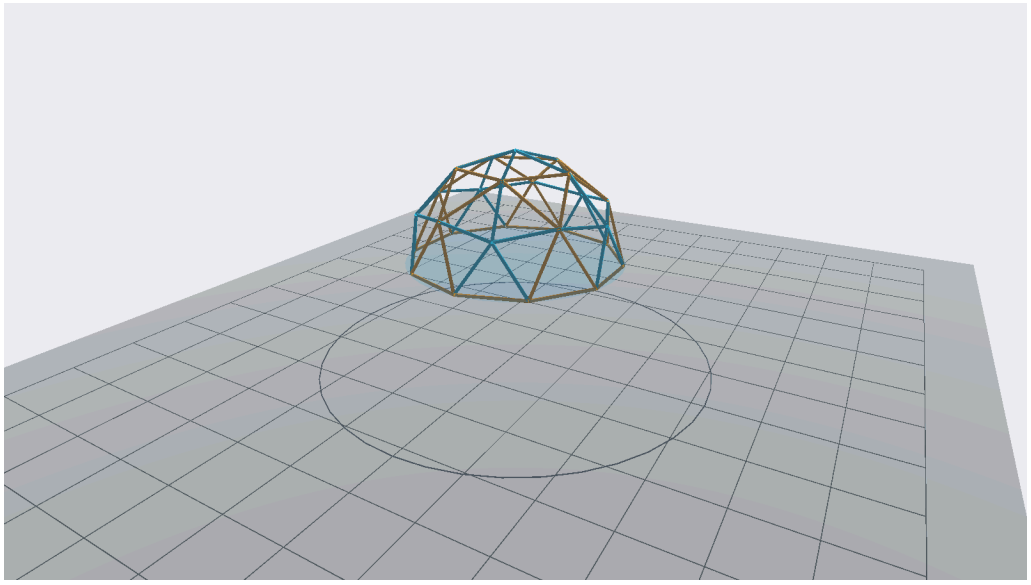

Every part of the building, counted.

Everything else falls out of the topology rather than being counted by hand:

vertices	26
geodesic edges	65
triangular panels	40
equilateral (AAA)	10
isosceles (BAB)	30
structural members	120
interior seams	55
base edges	10

Two of those are worth a second look.

120 members for 65 edges. The duplication of Chapter 12: each panel brings its own three sticks, so every interior edge has two.

55 interior seams, not 65. The 10 base edges are the rim and have nothing on the other side of them, so they are not seams. That distinction matters the moment you start counting keys, or hose, or feet of gasket — and it is the kind of thing that is obvious once stated and silently wrong in a bill of materials otherwise.

Why it is a decagon and not a circle

The floor figure above is the **decagon** inside the base ring, not the circle it sits in.

The circle is bigger — about seven per cent bigger — and the dome does not reach it. Quoting the circle is the single most common way a dome's floor area gets overstated, and it is overstated by exactly the amount of the ten little segments between the chords and the arc.

This book quotes the decagon everywhere. It is the honest number and it is the one you can put furniture on.

CHAPTER 8

Choosing a Size, At Last

One number decides the whole building, and this book picks it from the stick rather than from the floor plan

Everything up to here has been ratios. Nothing has had a unit on it.

That is deliberate: the geometry is scale-free, so it is worth solving once and then choosing a size — rather than choosing a size and re-solving the geometry inside it, which is how most people do it and is why most people only ever build one dome.

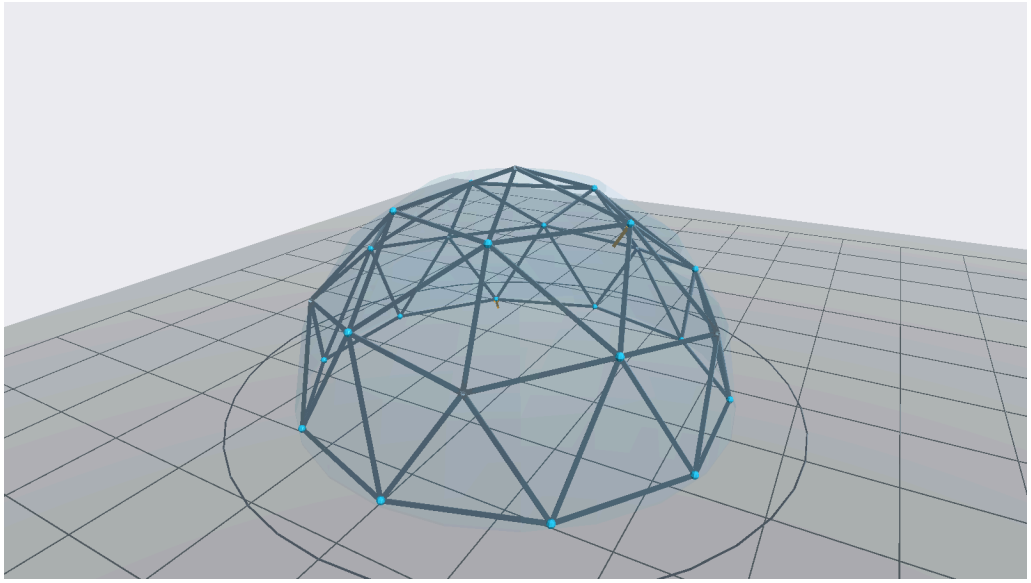

The push that makes it geodesic.

One number does it

Pick any one of these and the rest follow:

- the radius
- the long member's chord
- the diameter
- the apex height (which is the radius)

- the floor area

They are all the same number wearing different units. Multiply the radius by 0.618034 and you have the long chord; by 0.546533 and you have the short one; everything else is those two and the counts from Chapter 7.

This book picks the stick

The reference build is sized from the **member**, not from the floor plan.

72.000 inches — six feet — because:

- it is what comes comfortably out of a twelve-foot log section, with the crosscut in the middle;
- it is what one person carries without thinking about it;
- it fits in a pickup bed, diagonally, with the tailgate up.

The dome that falls out of that is 19.42 feet across with 277 square feet of floor. **The diameter is the answer to the member, not the other way round.**

That is backwards from how buildings are normally sized and it is the right way round for a method whose whole argument is about what one person can make and move.

What it costs to size from the member

One real inconvenience, stated plainly.

No panel fits a four-foot sheet. The narrowest face is 52.516 inches across its shortest altitude and a sheet is 48. Every panel of the reference build needs a seam in its sheathing or a wider sheet.

That is a direct consequence of sizing from the stick, and anybody who would rather have the sheets than the six-foot member should build a different diameter. Chapter 11's table will give them one.

If you would rather size from the floor

Work backwards.

Floor area for a decagon inscribed in a circle of radius R is $5 \cdot R^2 \cdot \sin(36°)$, so a target floor of A square feet wants

$$R = \mathrm{sqrt}(A / (5 \cdot \sin 36°))$$

and then the long chord is 0.618034 R and the cut is that minus 1.818 inches. A 400-square-foot floor wants a radius of about 11.7 feet and a long member a shade over seven feet — which is past comfortable one-person handling, which is the trade.

Five sizes worth knowing

The reference designs, from a demonstration you build to get it wrong on, up to the point where a 2V starts to strain. Each one is a full cut list in the tables at the back, and each one is the same 120 members and the same nine processes.

The only thing that changes between them is two numbers.

PART 3

The Stick

“Every radius of a round log is the same as every other. That is the whole trick, and the tree held the tolerance.”

How a standing tree becomes 120 structural members, what a 45-degree sector is, and the two lengths you actually cut.

CHAPTER 9

Stop Squaring. Start Splitting.

A round log is already rotationally symmetric, and three splits give you eight identical sticks nobody had to measure

I was sitting on a log when this stopped being difficult.

Not thinking about it. Sitting on it, having spent the morning on connectors.

The connector question does have an answer, and it is a flat V bracket: two flaps meeting at the panel's angle, four holes in each flap, and each flap run out to as much as half the member's length so the screws are spread along the stick instead of clustered at its end. Chapter 12 has the detail. It works, it is cheap, and you can make forty of them on a bench brake in an afternoon.

What it does not do is make the sticks alike. It joins dissimilar sticks by absorbing the difference, which means the connector is now doing that work, in every joint, forever.

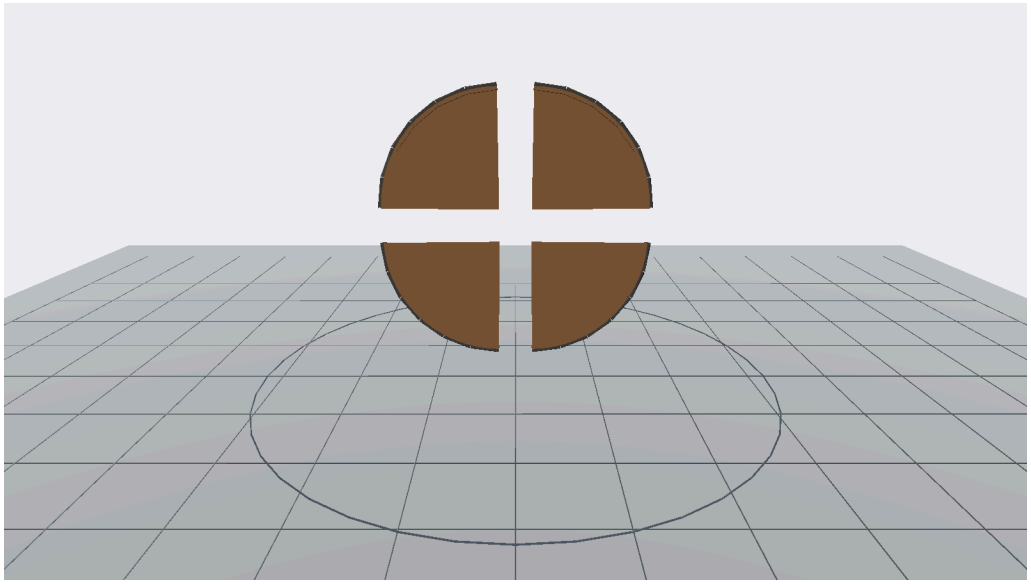

The same log, opened a different way.

The wrong question

The question I had been asking was: *how do I join sticks that are all different?*

Everybody's answer to that is the same. Mill them. Square them up, run them through a planer, and now they are all the same because you made them the same.

That answer costs a mill, a planer, a shed to keep the mill dry, the fuel to run it, and — this is the part nobody mentions — about half the tree. A round log does not contain a rectangle. Squaring one is the act of cutting a rectangle out of a circle and calling the rest waste.

The better question

Sitting on the log, I noticed the log.

A round trunk is rotationally symmetric. Every radius is the same as every other radius. That is not a thing you achieve; it is a thing the tree did while you were not there.

So split it. Split it through the middle and you get two identical halves — identical not because you were careful but because the log was round before you touched it. Split those and you get four. Split those and you get 8.

Three passes. Eight sticks. Every one of them a 45.0-degree sector of the same circle, to whatever tolerance the tree was round to, which is a tolerance nobody had to hold and nobody had to check.

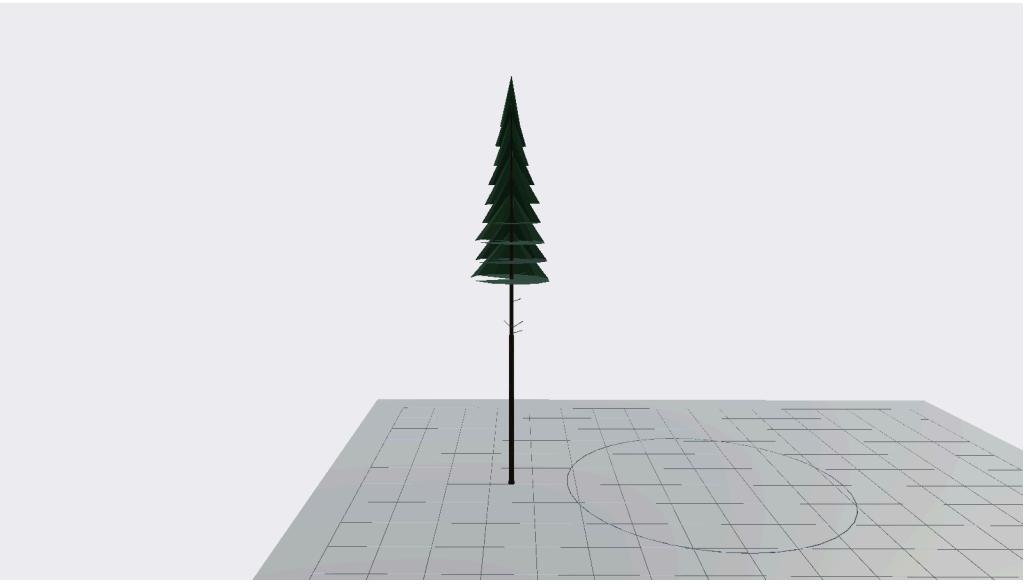

The whole woodpile, standing up.

That was the afternoon. It is not a clever idea and it took me a year to have it, because I was busy asking a question that had no answer.

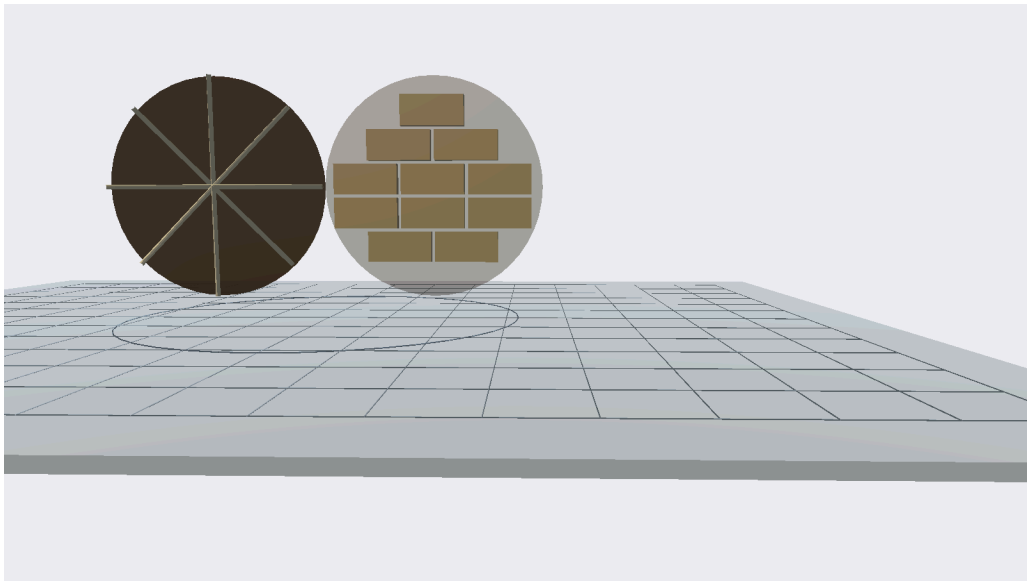

How much of the stem survives splitting, against sawing.

What the mill is actually for

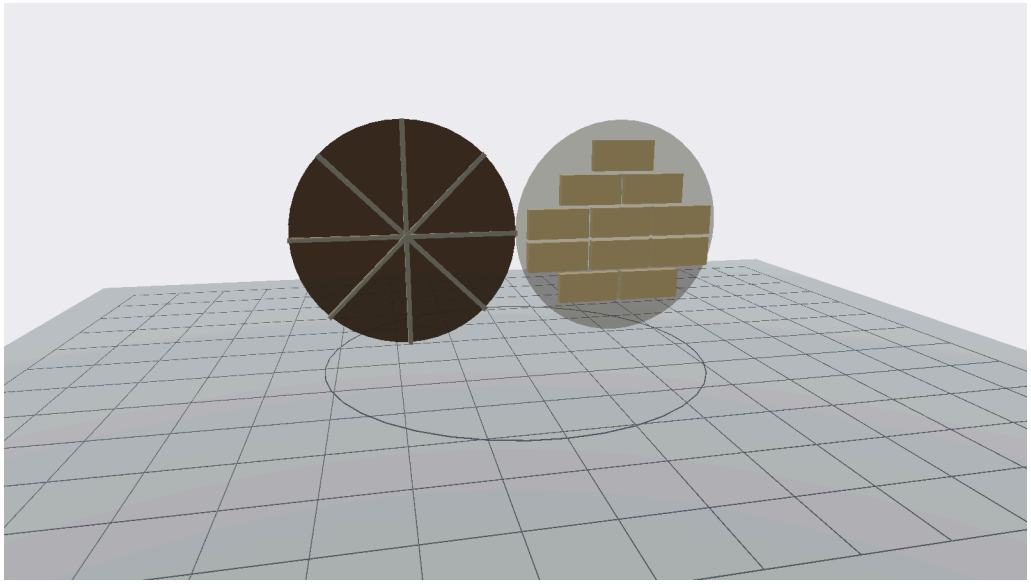

The corners of a round log are not bad wood. They are wood of the wrong shape.

One thing to be careful about, because the recovery argument is easy to overstate.

The corners a mill throws away are not bad wood. They are perfectly good wood of the wrong *shape*. A sawmill exists to turn trees into a standard rectangular product that can be stacked, graded, priced, shipped and sold by people who will never see the tree. It is extremely good at that, and the waste is the price of the standardisation, not of incompetence.

Splitting does not beat sawing at making lumber. It beats sawing at making *this* — a structural member for a frame that does not care about rectangles.

That distinction matters because it tells you when the method stops working. Build something with right angles in it and you want a mill. Build a triangulated shell and you do not.

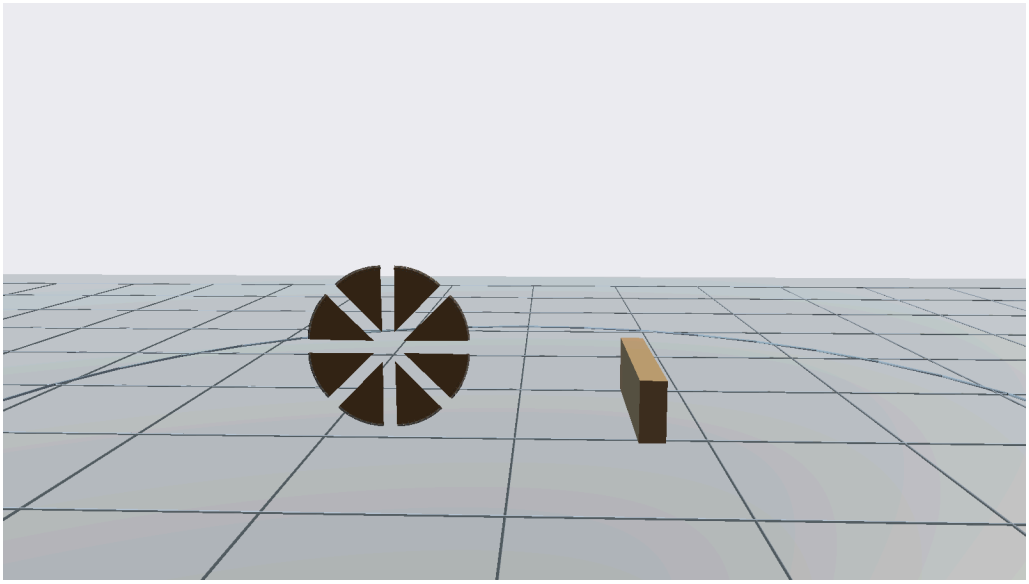

The tree is the product.

What comes off the log

At the reference build's 12.0-inch trunk, each sector is 4.592 inches across its bark face and 6.0 inches deep from point to bark. The frame needs 120 of them, which is 664 feet of stick.

Nothing in that sentence required a tape measure on the tree. It required a chainsaw, a steady rip along the radius, and a willingness to let the log decide the section.

The next chapter is what that section actually is, and which way round to put it — which is the first decision in this build you cannot take back.

CHAPTER 10

One Eighth of a Tree, Used as a Stick

What a 45-degree sector actually is, and why its shape is an advantage rather than something to apologise for

A member in this frame is a 45.0-degree slice of a 12.0-inch log. It has a point, two flat sawn faces, and a curved bark face.

That is the whole part. Nothing is machined.

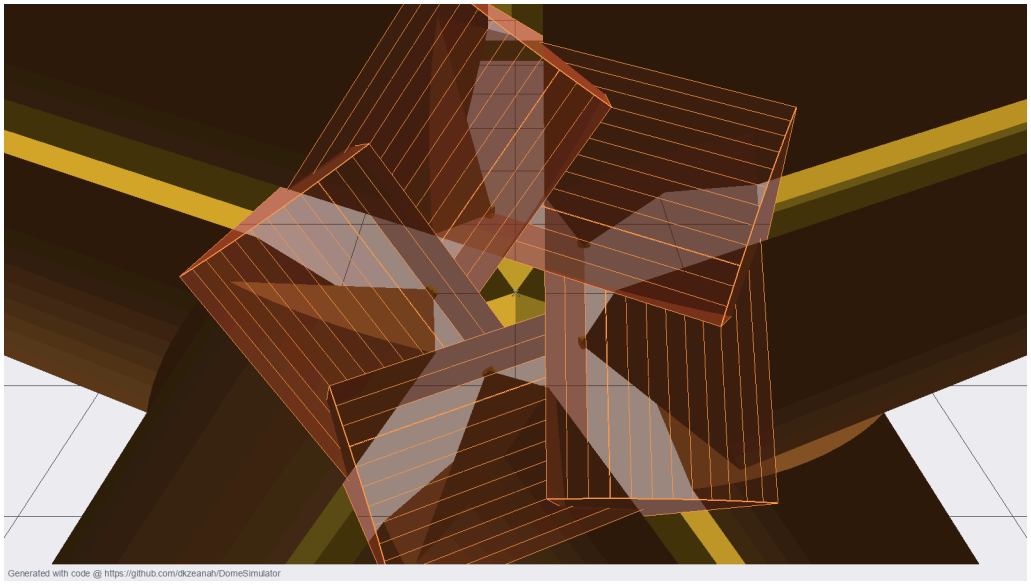

The end of a member: two sawn faces and a bark face, and nothing machined.

What the shape gives you for free

Two reference surfaces. The split faces are flat and they are at a known angle to each other — 45.0 degrees, because that is what a 8-way split means. Every jig in this book locates off those two faces. You never reference the bark, which is lumpy, and you never reference a measurement, which is a thing that can be wrong.

A point that tells you which way round it is. A rectangular stick has a four-fold ambiguity: drop it in rotated ninety degrees and it still looks fine. A sector has one obvious orientation, and — as Chapter 14 shows — the fixture is built so a stick dropped in the wrong way round physically does not seat.

Depth where you want it. The section is deep from point to bark (6.0 inches here) and narrower across the face (4.592 inches). Stand it point-inward and the depth is in the direction the shell wants stiffness.

Which way the point faces

This is the first decision in the build you cannot take back, because it changes the seam, the key, and the shape of every panel.

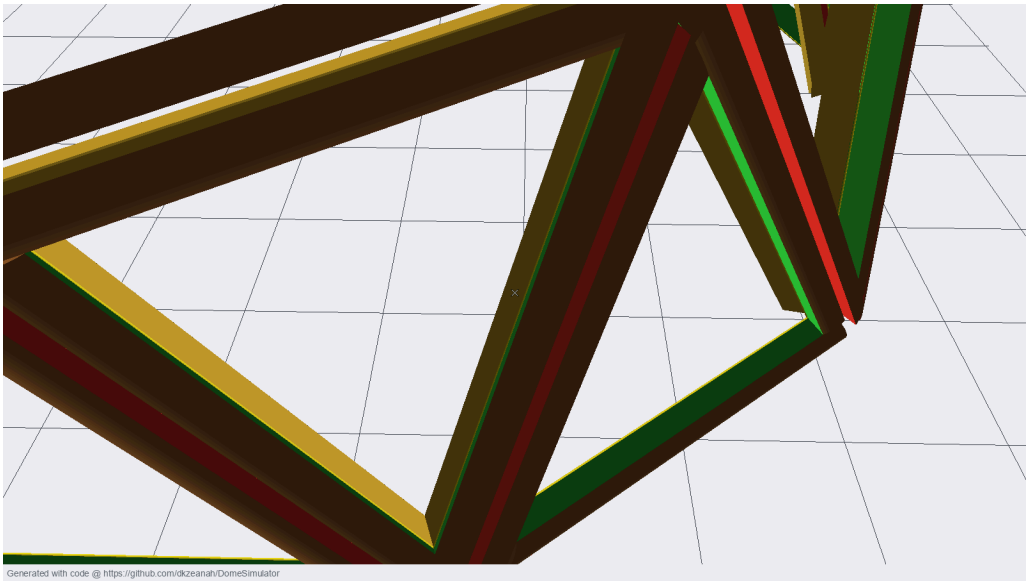

Point inward: the reference build.

The reference build faces the point **into the dome**. The bark faces are outside, the flat sawn faces look at each other across every seam, and the leftover sector angle opens toward the inside.

The consequences, from the solve: an A seam folds 18.029 degrees and leaves 26.971 degrees of sector angle over; a B seam folds 22.459 and leaves 22.541.

Each pair sums to 45.0. That is not a coincidence and it is the closest thing this method has to a theorem: **the sector you split out of the tree is exactly the seam budget the dome needs.**

The other three

The solver will build all four. They are not equally good and they are not equally bad, and the book shows them because a reader who wants something different should be able to see what they are choosing.

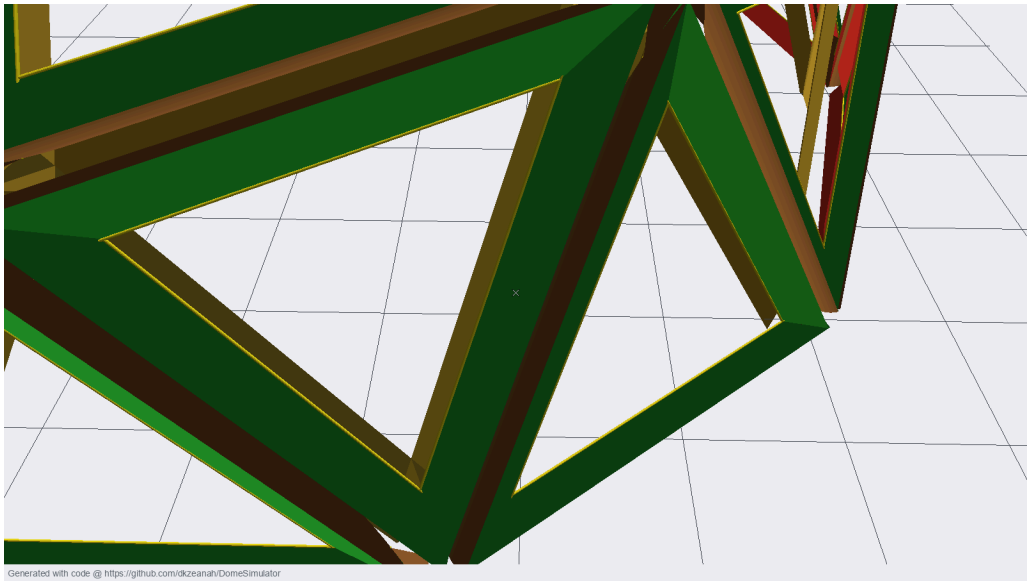

Points apart, each into its own triangle.

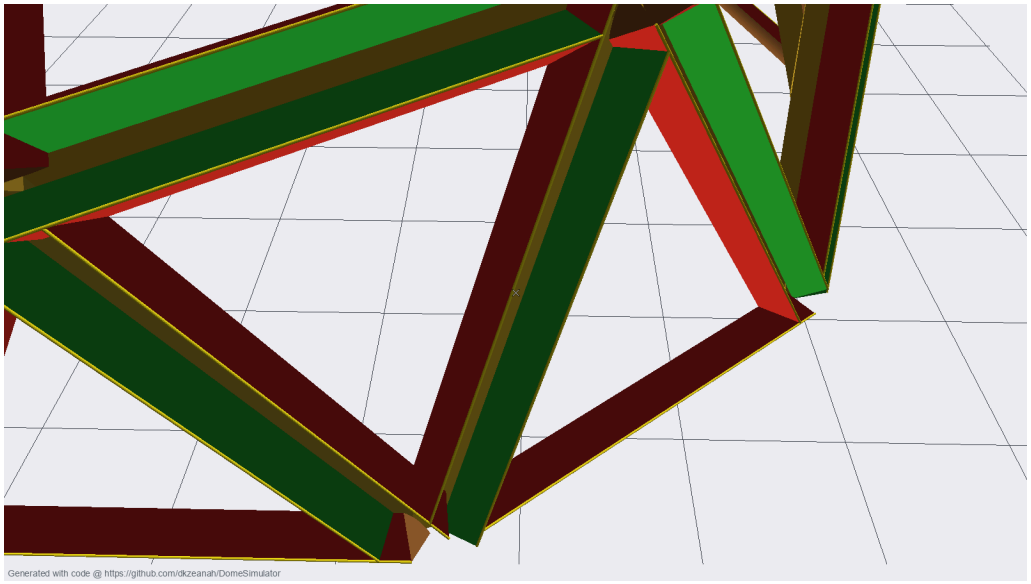

Both points outward, at the sky.

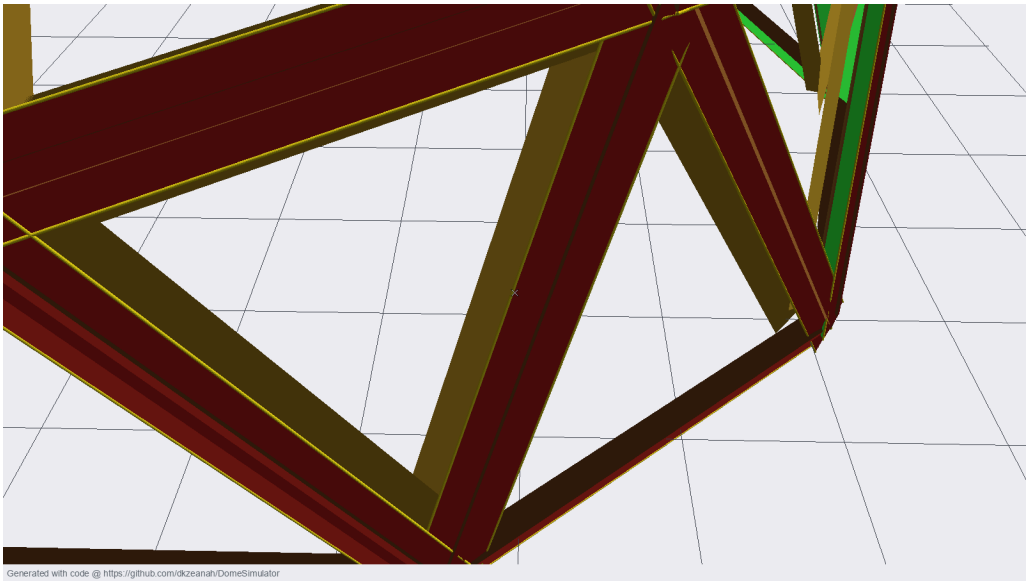

Points toward each other, across the seam.

Point outward puts the flat faces where the weather is, which is a real argument for it: a flat outer face is easier to seal a panel against than a curved one. It costs you a key more than twice the size, and it puts the narrow point where the shell wants depth.

Points apart, and points across, both produce a seam that wants a key around eleven and a half inches across its base. That is not a key. That is a beam you are now also making.

Why the bark stays on

It is free, it is already there, and taking it off is an operation on 120 sticks.

The honest version: bark is not a finish and it will come off in its own time on the outside faces, in patches, over years. On a frame that is inside a weatherproof skin — which is the argument of Chapter 2 — that is a cosmetic event rather than a structural one.

If you want it off, take it off green, with a drawknife, in the first week when it is still wet and comes away in strips. Do not plan to do it later.

The one number to hold on to

A member's section is set by the log, and the log is set by what you have. Everything downstream — the seam key's size, the depth of the wall, how many trees you need — follows from the trunk diameter and the split count, and Chapter 25 prices what happens when you change either.

What does *not* change is the two lengths you cut them to, and that is the next chapter.

CHAPTER 11

Two Lengths, and Neither Is the Chord

72.000 and 63.670 inches are what the geometry says; what you cut is those minus a bite that does not scale

A 2V dome has two member lengths. This is the page you come back to.

The two chords

A chord is the straight-line distance between two vertices of the sphere. It is the number every geodesic reference publishes, and it is a property of the shape rather than of your building:

A chord	=	0.618034 x radius
B chord	=	0.546533 x radius

At this book's radius of 116.4984 inches, that is 72.000 and 63.670 inches.

The A chord being a round 72 is not luck. The dome was sized from the stick: a six-foot member is what comes comfortably out of a twelve-foot log section, what one person carries, and what fits in a pickup. The diameter is the answer to the member, not the other way round.

The chord is not what you cut

Neither end of a member reaches the vertex it is named after.

One end butts into the *side* of its neighbour, short of the corner. The other runs past the mathematical vertex so that the previous member can butt into its side. Chapter 12 is why. The consequence is that the joint takes a bite out of each end, and the cut length is:

$$cut = chord - bite$$

For this frame:

A members	72.000	-	1.818	=	70.182 in
B members	63.670	-	0.990	=	62.681 in

The bite does not scale

This is the part that catches people.

The bite is set by **how wide the member is**. A member does not get wider because the dome gets bigger — you are still splitting the same size of log — so the bite is the same number at every diameter.

Solve the same pinwheel at a four-foot radius and at a fifteen-foot one with the same stick and the bite comes out identical to four decimal places.

So: **scale the chord, subtract the bite.** Not chord times a ratio.

If you take one thing from this chapter, take that.

The bite used here

A members	1.818 in
B members	0.990 in

Both at this book's 4.592-inch member. A wider member takes a bigger bite, roughly in proportion, so a frame cut from heavier stock wants its own solve rather than this number.

Why the distinction is worth a page

Scaling the bite with the dome is the natural mistake, because everything else about a dome does scale.

It is also invisible at the reference build, where the two arithmetics agree exactly. It only shows up at other sizes: at eight feet across, scaling makes every stick more than an inch too long; at twenty-four feet, half an inch short. Every stick, all 120 of them, in the two sizes a first-time builder is most likely to pick.

That is why every figure in this book is generated rather than typed, and checked against the solver on each build — Chapter 32. An error that is exactly right in the one case you test is the kind that survives proofreading.

Two models, and they disagree

This repository solves the pinwheel twice.

The raw-wedge solver treats a member as a real 45.0-degree log sector. That is where the bites above come from, it is what the simulator draws, and it is what the reference build is cut to.

A second, simpler model treats a member as a rectangular band lying with its face on the edge line. It gives a bite of 9.253 inches for the same stick — several times larger.

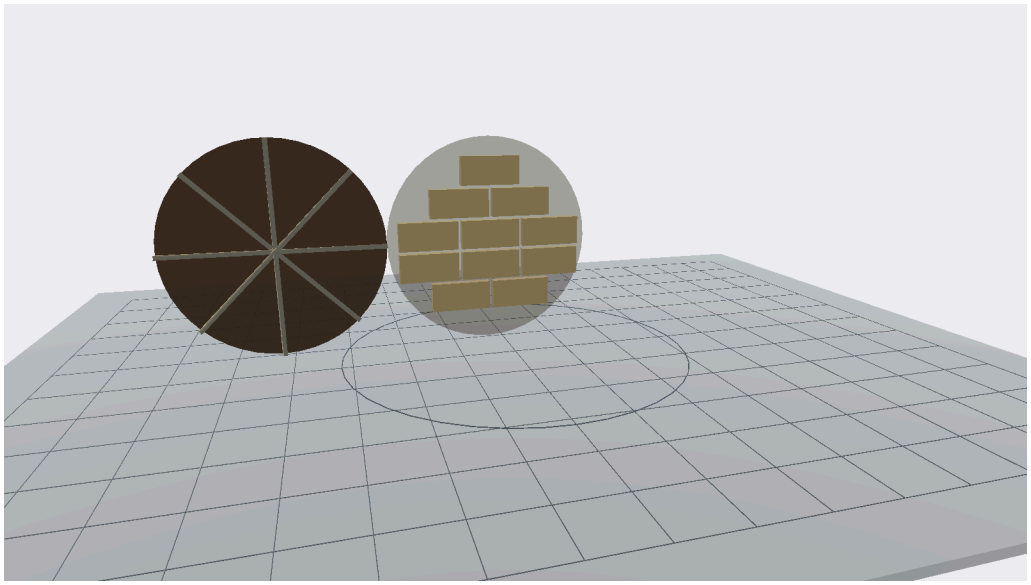

How much of the tree survives, measured.

Neither is a mistake. They are answers about differently shaped sticks.

The numbers in this book are the first. **If you are cutting rectangular stock rather than log sectors, this table does not describe your frame**, and the difference is inches on every member.

The row to check yourself against

19.42 feet across: A chord 72.000, A cut 70.182.

If your own arithmetic gives that, the rest will behave.

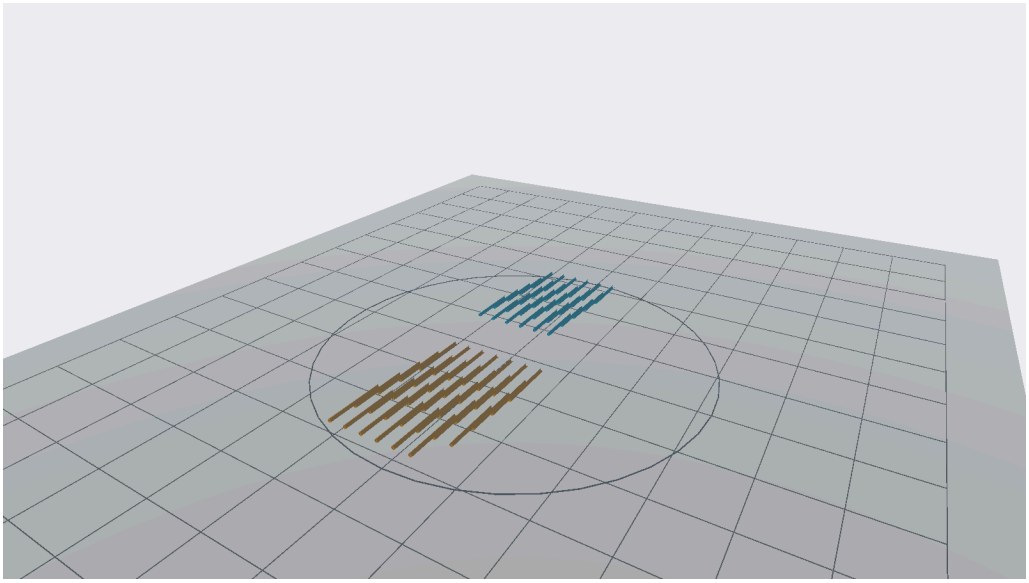

Chord factors turning into a cut list.

PART 4

The Panel

“Forty panels come off one board, and nothing on the board is adjusted between them. Panel forty is panel one.”

The joint that removes the hub, the nine processes that make the whole shop, the one fixture that makes forty panels the same, and where the door goes.

CHAPTER 12

Nothing Meets at the Corner

Three sticks, each butting into the side of the next, and not one of them reaching the vertex it is named after

In a classical geodesic frame, five or six struts arrive at a point and something has to hold them there. That something is a hub, and hubs are why most people give up on domes.

This frame has no hubs, because nothing arrives at the point.

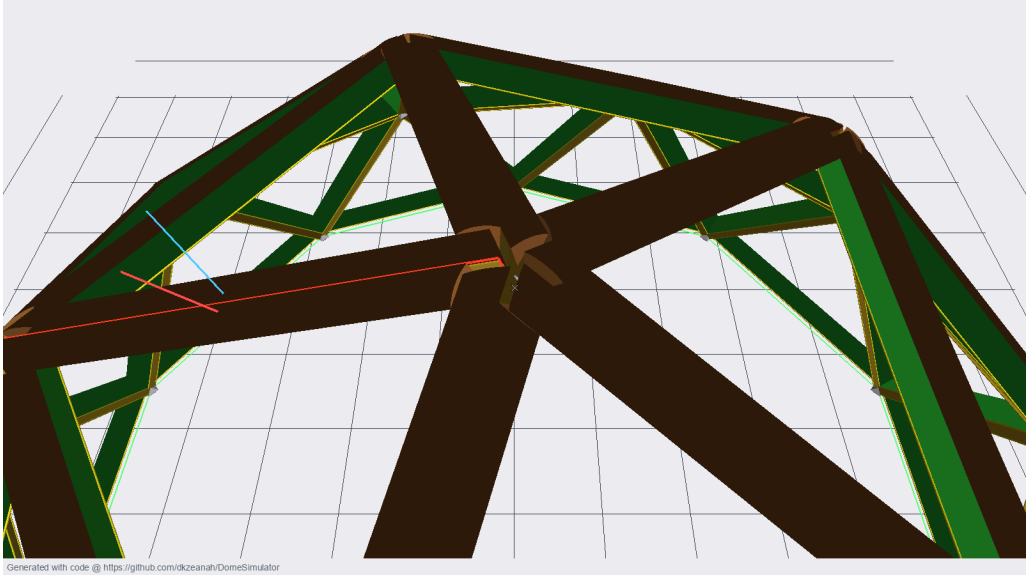

Five triangles meeting, and an empty corner.

The pinwheel

Each panel is built complete before it goes anywhere near its neighbours: three members, closed into their own triangle.

Inside that triangle, each member's end butts into the **side** of the next one, a little way along from the corner. Not into its end. Into its face. The three of them chase each other round the triangle, which is why it is called a pinwheel, and the mathematical vertex in the middle of that arrangement has nothing in it at all.

Three consequences, and they are the argument for the whole method:

No hub. There is nothing to buy, machine or get wrong.

Flat sawn face on flat sawn face. A split wedge already has two flat faces at a known angle. The joint presses one against another. Nothing is mitred to meet at a point.

The corner is empty, so the corner cannot be crowded. The failure mode of a hubbed dome — five struts whose ends all want the same cubic inch — does not exist here.

What is actually at a seam

Where two panels meet there are **two** members, one belonging to each, with the key between them.

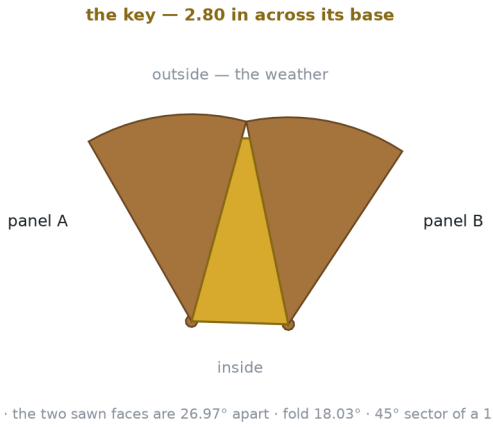

A seam in cross-section, at the angle the solver puts it: two sectors, the key between them, drawn to the solved dihedral.

That picture is a real cut. A plane through the seam, perpendicular to its own run, intersected with the solver's own geometry — not a diagram of the idea. Two 45.0-degree sectors, points inward, and the 26.971 degrees of sector angle they cannot close between them.

The key fills that. It is 2.798 inches across its base on an A seam and 2.345 on a B, and it is not a manufactured part

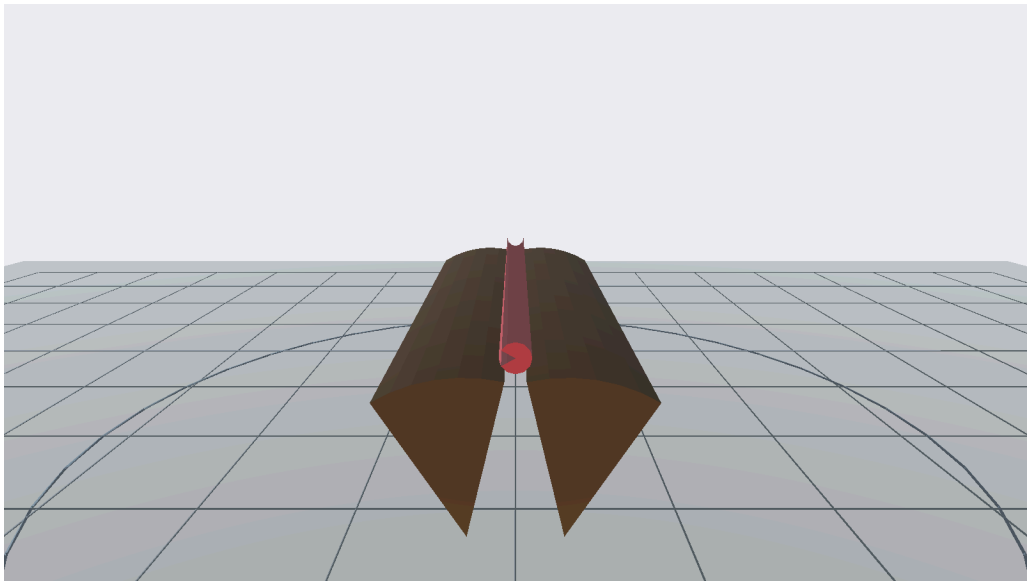

The gasket does the shaving: the part of the joint that is not made of wood.

: it is the truncated point of another raw sector, cut from the same log at the same angle.

The price of a panel being a thing

40 panels times three members is 120. The shell has only 65 edges.

So 55 members exist twice over, once for each panel meeting there. That is nearly twice the timber a shared-strut frame would use.

It is not lumber somebody forgot to remove. It is the price of a panel being an **object** rather than a position in an assembly — and what you buy with it is everything in Chapter 14: a panel you can build flat, check flat, carry, sheathe and lift as a finished thing, on a bench, before anything is standing.

Two trees instead of one and a half, against forty panels you can make indoors in winter. That has been an easy trade every time I have had to make it.

Where the error goes

Chapter 1 claimed the frame absorbs error. This is the mechanism.

A member that is a bit long, a bit short, or at a bit of an angle changes the width of the gap at its seam. The gap already has a key in it. A key is a wedge, and a wedge accommodates a range of gaps by sitting a little deeper or a little shallower.

So the error does not accumulate around the triangle and it does not propagate into the neighbours. It lands in a joint that was always going to be filled, and it changes how far in the filling goes.

This is also why the head end of every member is left long and cut in place — Chapter 14 again. There is exactly one end of one stick where error is allowed to leave the building as offcut, and the method spends it deliberately.

What the butt cut actually is

One correction, because this project published the wrong version of it and some of that is still out there.

The butt is a **compound** cut. It has a bevel and a mitre.

The bevel is constant at 22.5 degrees — half the sector angle — because it comes from how the log was split rather than from where the member sits in the dome. The mitre takes 3 values across all 120 members.

So the honest claim is not “no compound angles”. It is **three saw settings for a hundred and twenty members**, which is a better claim anyway, and true.

What the pinwheel removes is the shared vertex. It does not remove the mitre.

Six ways to join the same sticks. This book uses the second.

CHAPTER 13

Nine Processes, Whatever Size You Build

Nine operations turn standing timber into a shell. Not nine categories with sub-steps hiding inside them -- nine setups

The last chapters counted parts. This one counts *verbs*, and the verb list is the shorter of the two.

There are 9 things you do to turn standing timber into a shell. Nine. Not nine categories with sub-steps hiding inside them — nine operations, each one a distinct setup with its own tool, its own bench and its own way of going wrong.

You can learn them in an afternoon of reading and be bad at all of them by the end of the first week, which is exactly the right number of things to be bad at.

Here they are, in the order they happen:

> *fell, rip, crosscut, fold, drill, screw, raise, sheathe, glass*

That is the whole shop.

The tool's own construction order, played end to end.

Everything in this book that is not thinking is one of those nine.

Why verbs matter more than parts

Parts are things you buy. Processes are things you **get better at**.

A list this short is a list you can actually attack. Nine places to put your attention is a manageable number of places. A list you cannot hold in your head is not a list, it is a fog — and most building methods are a fog, which is why people who are perfectly capable of building things do not build houses.

Fix one process and every dome you ever build gets cheaper. That is not true of fixing one part.

The nine, one at a time

1. Fell. Drop the tree, buck it into sections the length of your longest member plus waste. One chainsaw. The failure is felling into something you did not intend; the fix is the same as it has always been and is not in this book.

2. Rip. Rip each section radially into 8 sectors with the chainsaw, every cut through the heart of the log. The failure is a rip that wanders off the radius on a section with a knot in it; the fix is to buck around the knot and accept a shorter stick.

3. Crosscut. Cut each stick to length — 70.182 or 62.681 inches — with the compound butt at one end and nothing yet at the other. This is the one cut that can be batched, and Chapter 14 is why. The failure is cutting both ends; the head end is not yours to cut yet.

4. Fold. Assemble three sticks into a panel on the jig, pull the butts up tight, and flush-cut the three heads in place. “Fold” because the triangle closes around itself. Forty times. The failure is doing it in the wrong order and trapping the last stick, which the jig’s stage nine is specifically about.

5. Drill. Pilot and set the threaded inserts in the wedge faces — the ones Chapter 3 argues for. Done on the bench while the panel is flat, which is the only time it is easy.

6. Screw. Join panel to panel, key into seam, hardware into insert. The failure is treating this as structural; it is not. The shell holds its shape because it is a shell.

7. Raise. Ten panels on the base ring, thirty above them, five around the apex. Chapter 16 has the sequence. The failure is bracing too little on the first course, which is the only course that needs it.

8. Sheathe. Close the triangles, then the breather, then the cap. The one watertight layer of Chapter 17.

9. Glass. The openings — and the reason it is last is that an opening is a panel you did not close, so it costs nothing to leave the decision until the shell is up and you can see where the light actually goes.

What is not on the list

No milling. No planing. No jointing, thicknessing, moulding or sanding. No welding, no machining, no hub fabrication, no casting.

Every one of those is a process that some other building method needs and this one does not, and every one of them is a machine, a shed to keep the machine in, and a skill.

The list is short because of the decision in Chapter 1. A frame that is allowed to be lumpy does not need the processes whose only purpose is precision.

Why the list does not grow with the house

Here is the part that matters for anybody thinking about more than one building.

Make the dome twice as wide and the parts list grows: more timber, more sheathing, bigger everything. The *process* list does not change at all. It is still fell, rip, crosscut, fold, drill, screw, raise, sheathe, glass.

Build a second dome and it does not change. Build ten and it does not change.

That is what makes this a manufacturing argument rather than a carpentry one. Every hour you spend getting better at one of nine operations is an hour invested in every dome you will ever build, including the ones you have not thought of yet.

7 of the 9 happen on a bench rather than on a ladder, which is the other half of why this is a one-person method.

And it is why Chapter 22 can talk about a network of buildings without the argument falling apart: the thing that would normally not scale — the skill — is nine items long.

The honest limit

Two things this does not say.

It does not say the nine are equally hard. Fold is most of the work and rip is most of the danger, and a list that gives them one line each is flattening something real.

And it does not say nine is a natural number. Count differently and you get seven, or eleven. What is not arbitrary is the *order of magnitude*: this is a method with nine-ish operations, and the alternative is a method with fifty.

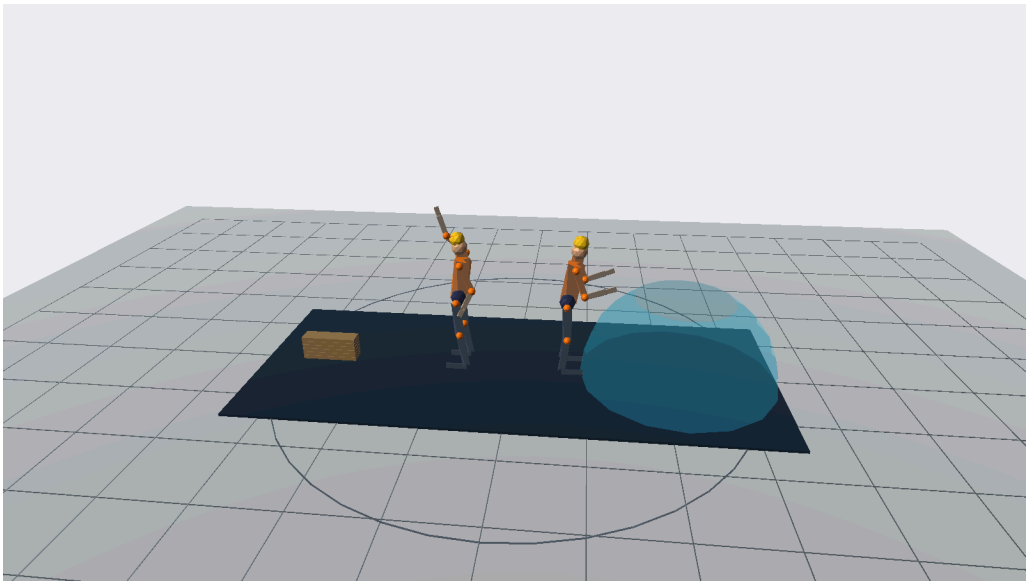

Inside one station: the manufacturing view of the same nine.

That difference is the argument, and it survives any reasonable recount.

CHAPTER 14

One Flat Board, Forty Identical Panels

The only thing in the whole build that has to be true is the bench, and everything else is measured from it

The only thing in this entire build that has to be true is a sheet of plywood on two sawhorses.

Everything else is measured from it, and nothing on it is adjusted between panels — so panel forty is panel one.

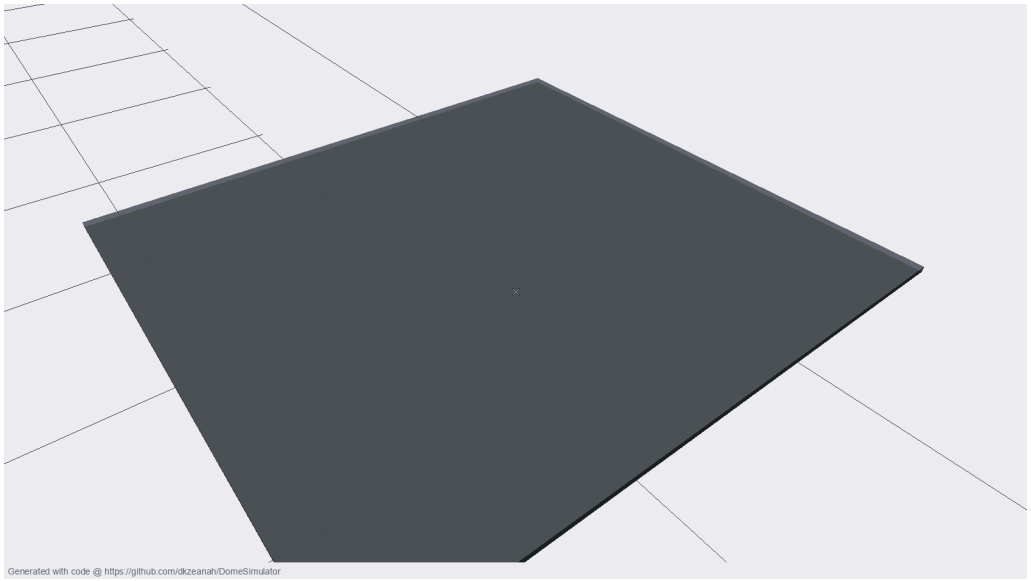

One flat sheet on sawhorses, and nothing else.

Building the jig

1. The bench

One sheet, flat, level enough that a marble does not run. Flatness is the whole specification: every angle below is measured from this surface, so the panel cannot wind or twist as long as the board does not.

Check it with a straightedge on both diagonals. If it rocks, shim the horses, not the sheet.

2. The triangle, struck once

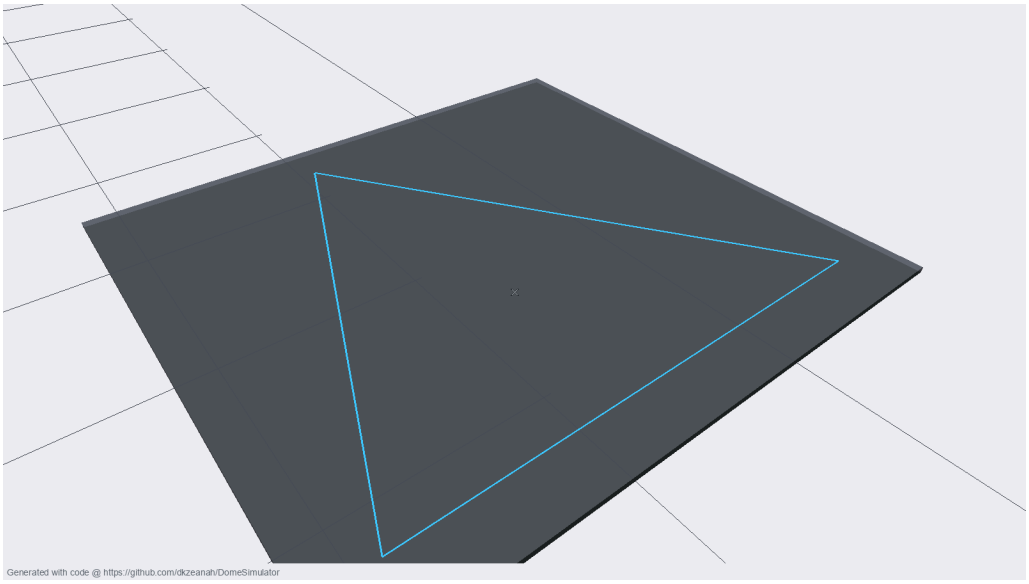

The panel's triangle, struck once from the solution and never measured again.

Snap the panel's mathematical triangle onto the board — the 72.000 and 63.670 inch sides of Chapter 11.

Strike it **one time**, from the geodesic solution, and never measure it again. Forty panels laid out from three lines struck once is a different proposition from forty panels laid out from forty tape measurements, and the difference is the entire reason this works.

The tool prints this triangle full size as a drawing you can lay on the sheet. Chapter 32 says how.

3. Axis rails

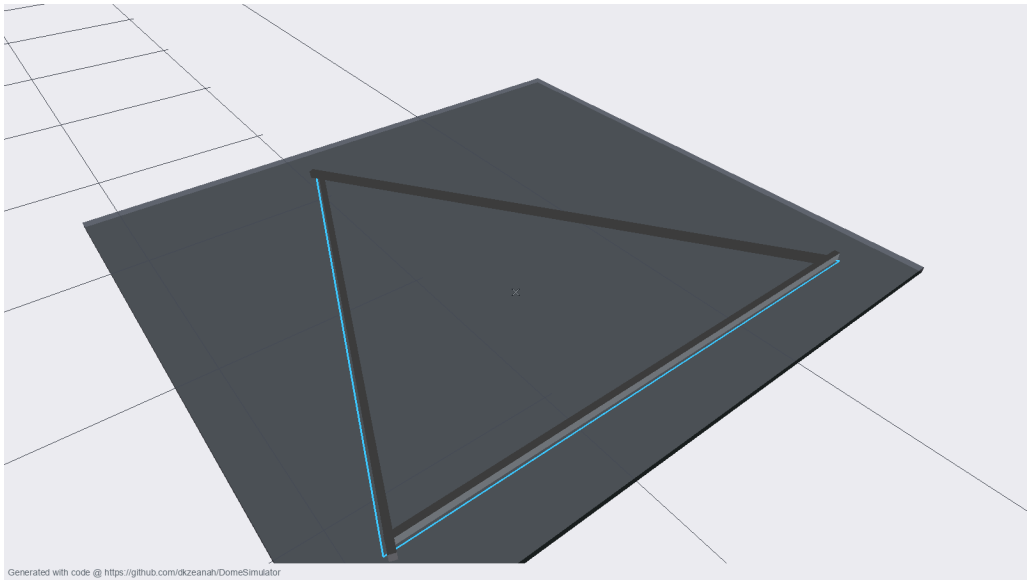

Three cleats, one per member, each parallel to that member's point-axis.

Three low cleats, one per member, each set parallel to that member’s point axis and just to the seam side of it.

These fix **position across the panel**. Push the stick against its rail and the sector’s point line sits exactly where the solution says.

The rail references the sawn point, never the bark. A lumpy log does not move the joint.

4. Red and green fences

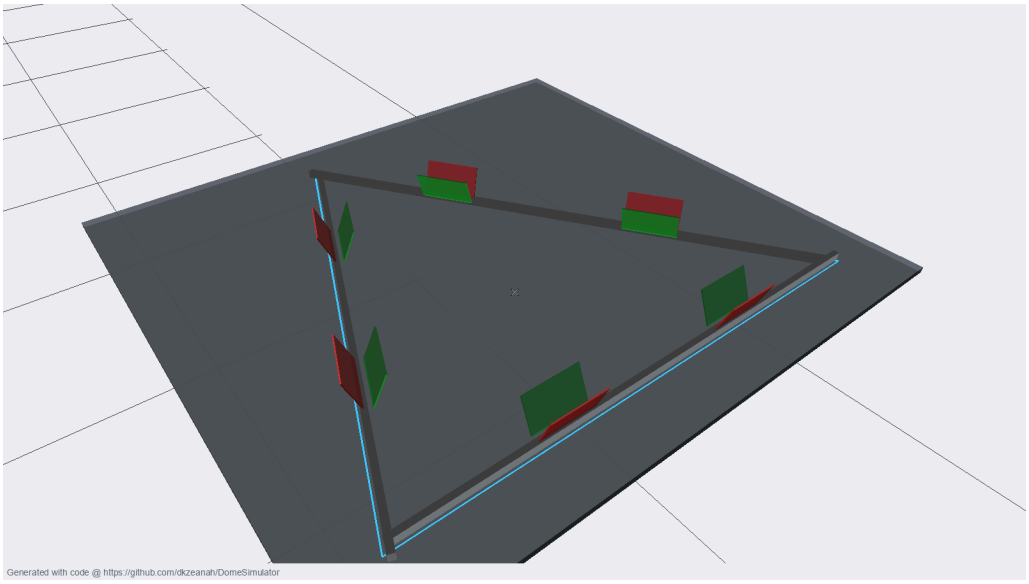

Red to red, green to green, or the stick does not seat.

Two short cradle plates per member, standing against the two sawn radial faces of the wedge.

These fix **rotation about the stick's own axis**, and they are the reason you cannot get a member in the wrong way round. A sector dropped in rotated ninety or a hundred and eighty degrees still *looks* fine. These plates make it not fit.

Mark them. Red side to red plate, green side to green plate. It feels childish for about two panels and then it saves you one.

5. The two cut planes

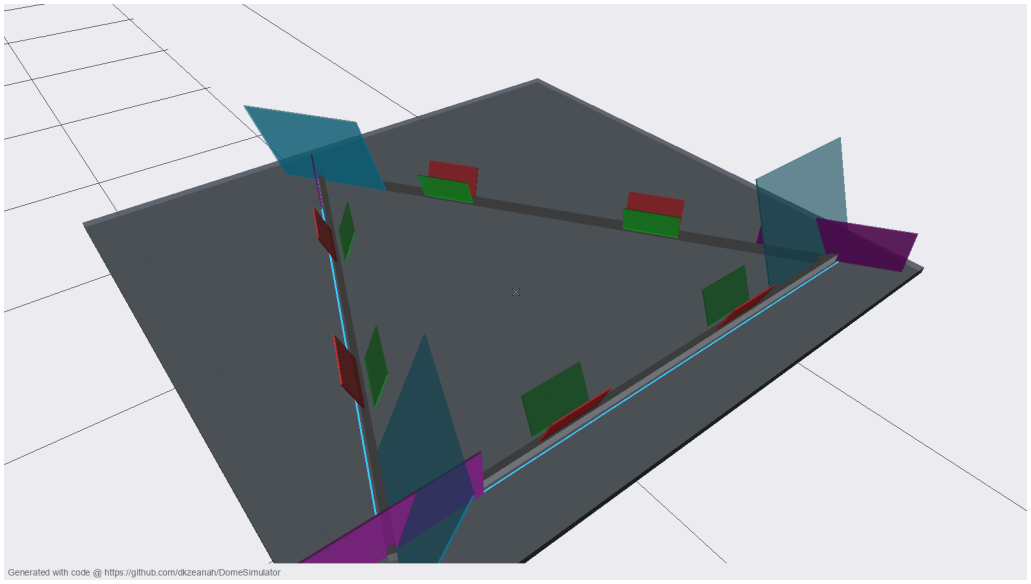

The magenta plate is the flush-cut fence; the cyan is the face the next butt lands on.

At each head end, a plate standing in the plane of the triangle's edge. That is the flush-cut fence: a saw run flat against it cuts the head to exactly the right plane without anybody setting a bevel or a mitre.

At each butt end, a plate in the plane of the receiving face the next stick's butt will land on.

That is the fixture. A sheet, three cleats, six cradle plates, six guide plates. Nothing on it moves again.

Making one panel

6. The butt cut, off the jig

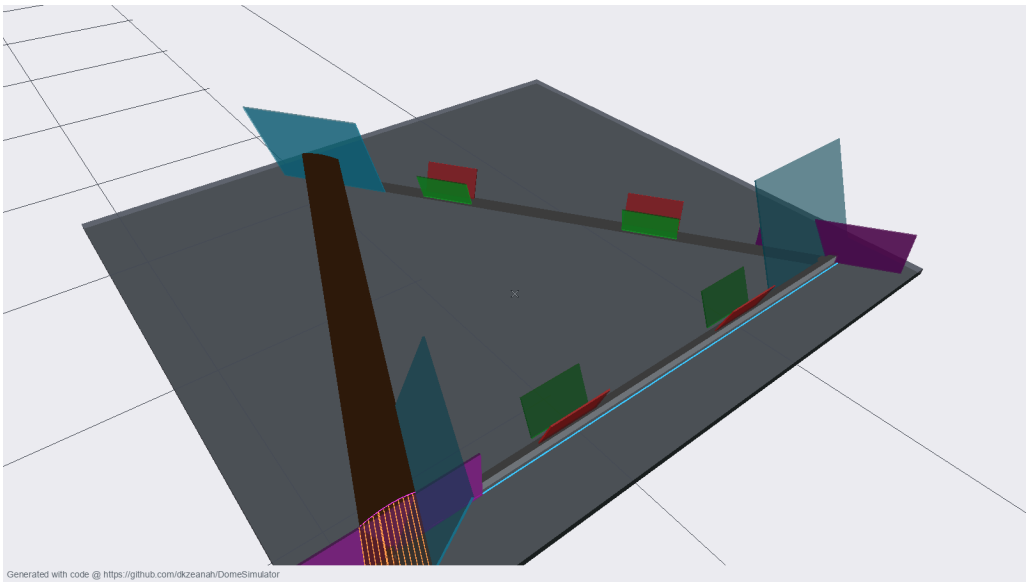

The one cut made before assembly, and the only one that can be batched.

One stick, still full length at both ends, laid up to the cyan plate. Cut the butt.

This is the **only** cut made before assembly, and every stick of the same family takes the same one — so it runs through a saw bench in a batch rather than being fitted one at a time. Sixty A butts, then sixty B butts.

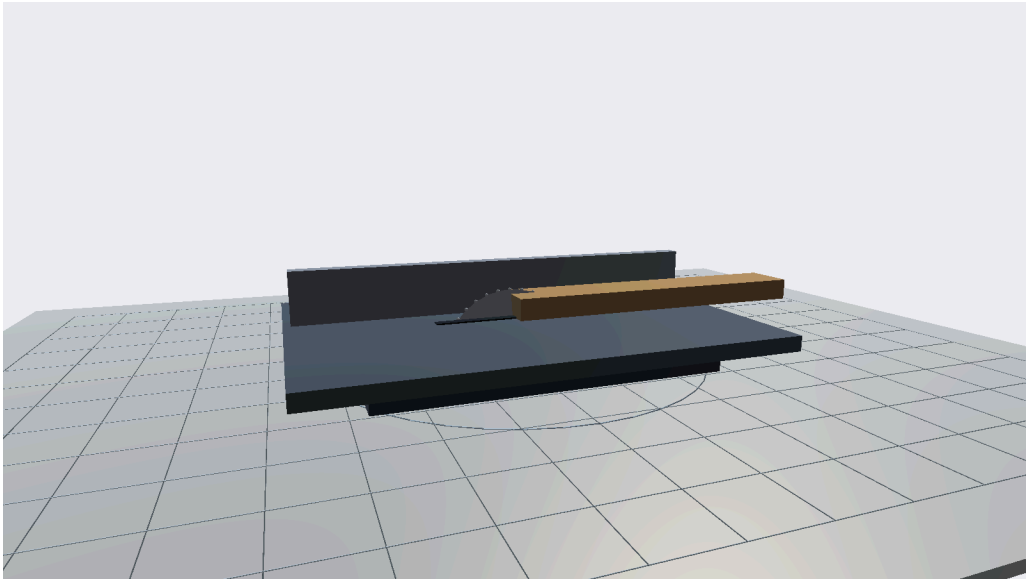

Setting the blade tilt.

7. First stick down

Butt now cut, dropped against its rail and its two fences. The head end is still long and hangs off the board.

Two ends, two completely different operations. The butt arrives finished. The head arrives long on purpose and you do not touch it yet.

8. Second stick, butt onto side

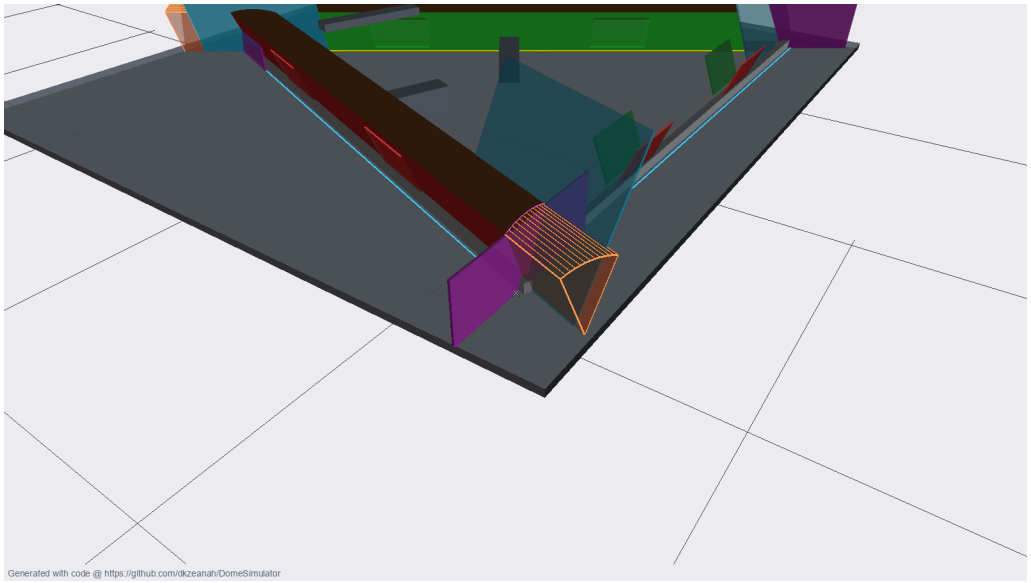

End to side: a flat sawn face on a flat sawn face.

The second stick lands so the first stick's butt bears on its **radial face** — on the side of it, not on its end.

Nothing is mitred to meet at a point. A flat sawn face is pressed onto a flat sawn face, which is what a split wedge already has without any further machining.

9. The last stick slides in

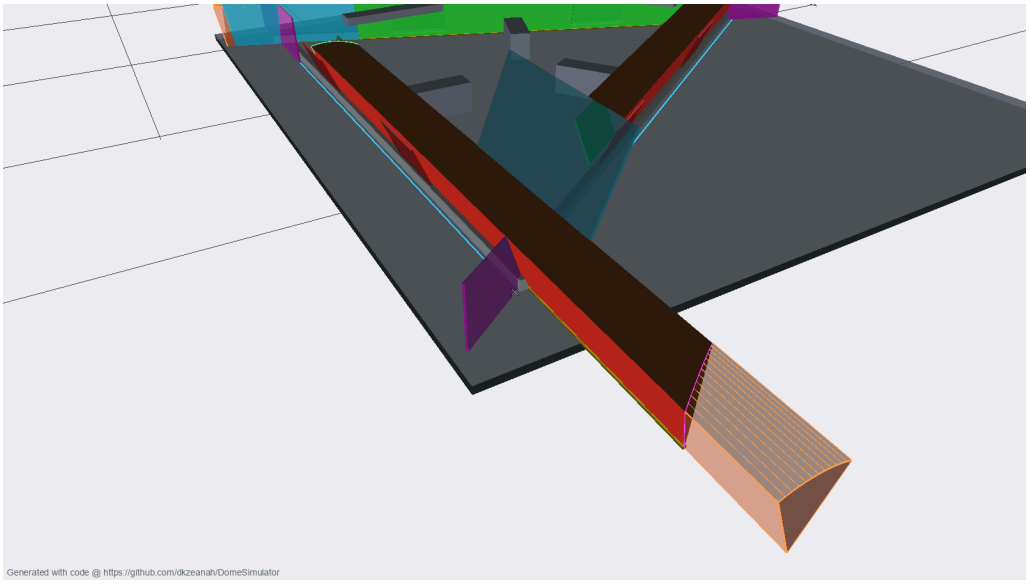

The last stick is captured at both ends, which is why the head is left long.

The third stick is captured at **both** ends once the other two are down, so it cannot drop in from above. It comes in along its own axis, sliding home into the pocket.

This is the one awkward move in the whole method, and it is why the head end is left long: the extra length is what gives the last stick somewhere to come from.

If you have trapped it, you put the sticks down in the wrong order. Take one out and start again; you will do this once.

10. Pull it up tight

Three butts bearing on three sides. The loop is closed, the frame holds its own shape, and the jig is now only keeping it flat while you finish.

All three heads still hang off long.

11. Flush-cut the three heads

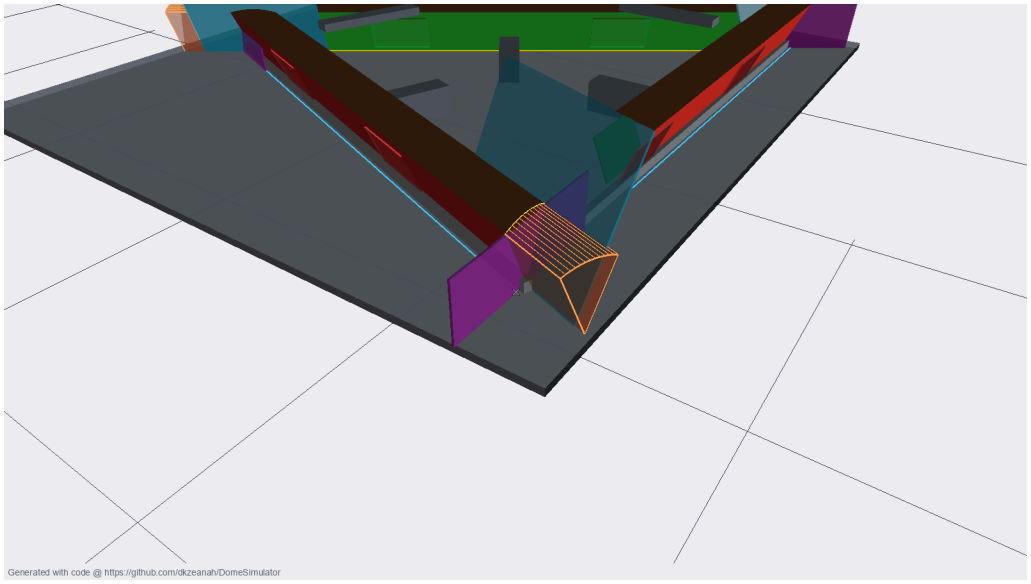

The head is never measured. It is cut in place.

Saw each head back to its magenta fence. The stock hanging past the board falls off.

This is the whole trick. The head is never measured. It is cut in place, to the plane the neighbouring member has already established — so error in stock length, or in the butt angle, or in how round the log was, leaves as offcut instead of accumulating around the triangle.

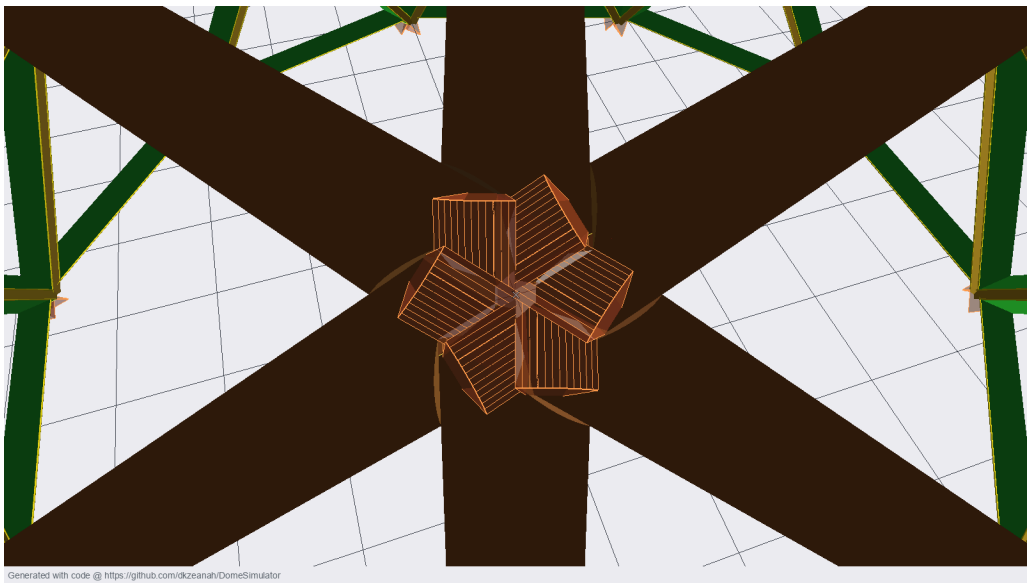

Uncut, every head trespasses across the vertex.

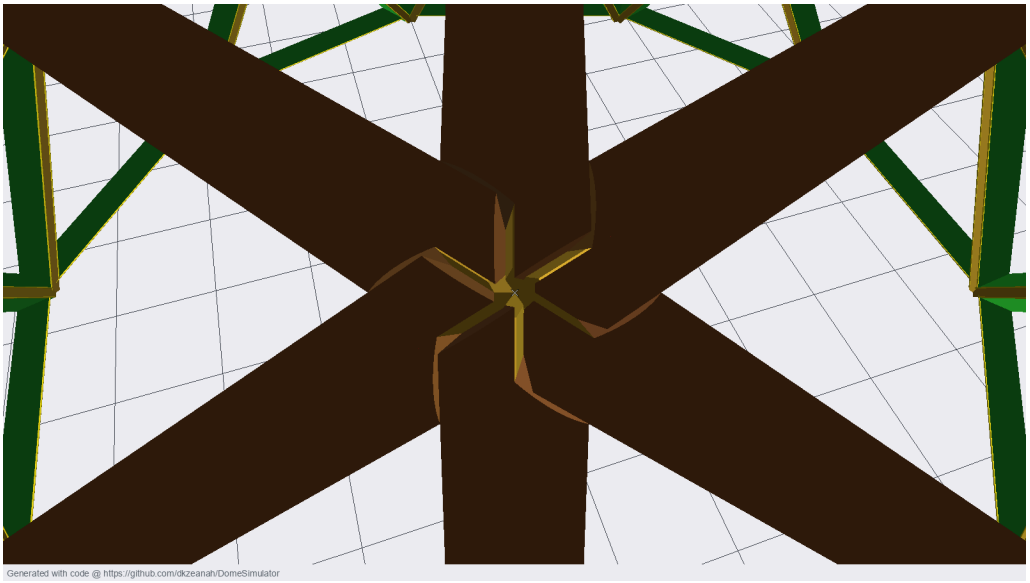

And after.

Those two pictures are the same corner of the same dome. In the first, every head still carries its stock and they trespass straight across the geodesic vertex into the neighbouring panel. In the second they end inside their own triangle and nothing crosses.

12. Panel off the jig

A finished triangular frame, its three corners clean inside the mathematical triangle. The jig is empty and unchanged.

Drill the inserts now, while it is flat — Chapter 3 — and sheathe it now if you are sheathing on the bench, which you should be.

Then do it 40 times, in two families: 10 equilateral and 30 isosceles.

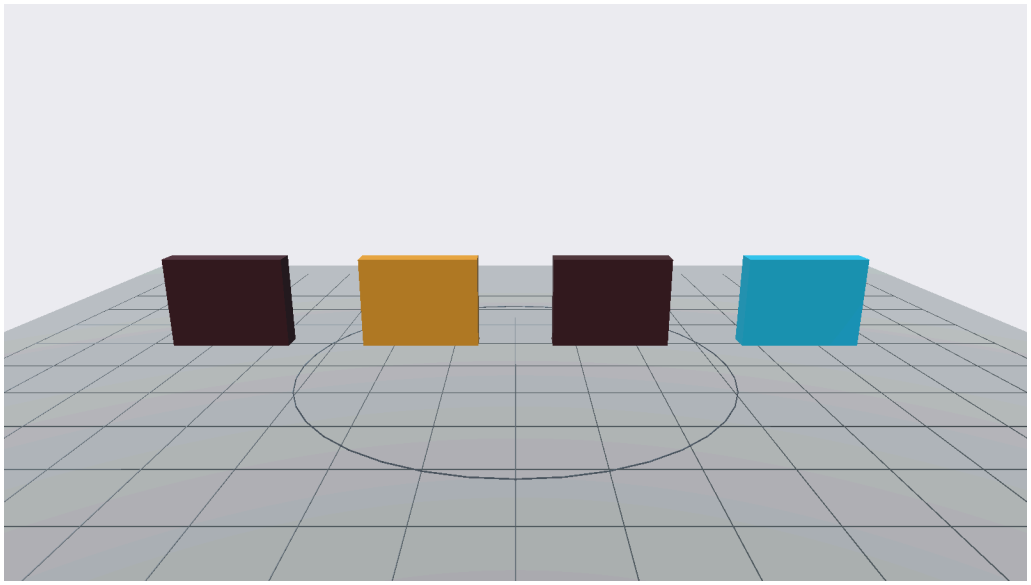

Why the compound cut takes two saws.

What the jig is really buying

Repeatability, obviously. But more than that: it moves the hard work indoors and off the ladder.

Every operation above happens at waist height, on a bench, with both feet on the ground, in whatever weather. The part of dome building that everybody pictures — the awkward bit up a ladder holding something heavy at an angle — happens once, in Chapter 16, and takes three days out of a fortnight.

CHAPTER 15

Doors, Windows, and What Not to Cut

An opening is a panel you did not close -- which is why it costs nothing, and why cutting one afterwards costs everything

An opening is a panel you did not close.

That is the whole rule, and every expensive mistake people make putting holes in domes comes from not believing it.

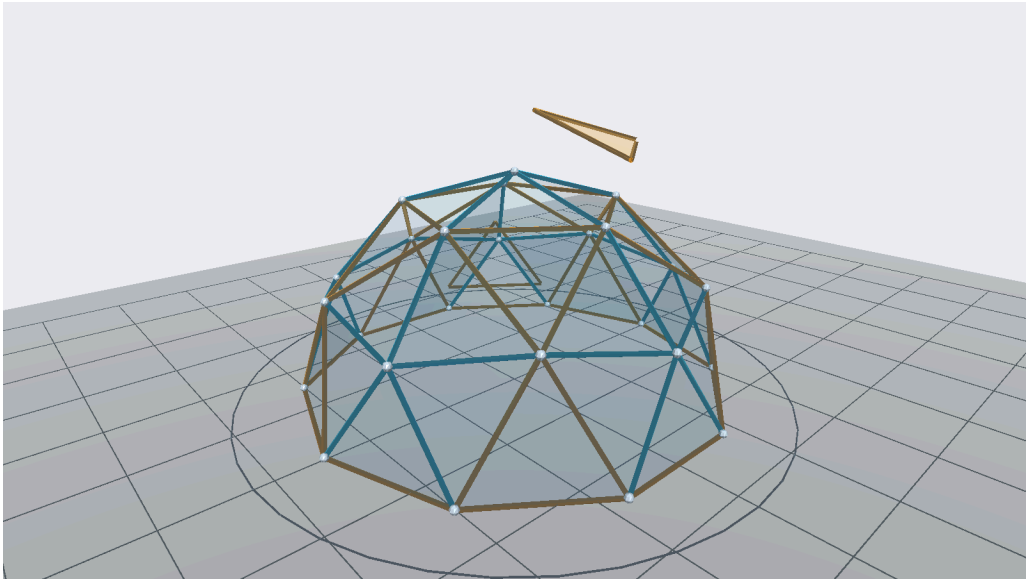

Take whole panels. Cutting a strut means replacing a load path.

Why a whole panel

Chapter 4 said a triangulated shell carries load because the triangles cannot change shape. Take one triangle out and the ones around it close the gap between themselves — the load goes round, the way it goes round a missing tile rather than through it.

Cut a **strut**, and you have not made a hole. You have removed a member from three triangles at once and given the shell nowhere for that load to go. Now you need a header, and posts either side, and something to carry what the header carries, and you are framing a wall in a building that did not have walls.

So:

Take whole panels. Never cut a member.

A panel left out is free. A panel cut into is a structural alteration.

Where the door goes

Ten panels stand on the base ring, so the ground floor has ten places a doorway can be, and they are all the same.

That is the first surprise for anybody used to rectangular buildings: you do not choose where the door goes on a plan, you choose *which panel*, and there are ten.

Take two adjacent first-course panels for a comfortable door. One is enough for a doorway you duck through; two gives you a proper opening with room either side.

Frame the perimeter, do not frame the hole. The three members bounding each missing panel are already there and already doing their job. The door frame hangs *inside* them, on the same threaded inserts of Chapter 3, and carries nothing but the door.

The threshold is the base ring. It is already level, already continuous, and already the thing the floor meets. Do not build a sill on top of it.

The sequence

1. **Decide after the shell is up.** This is the one decision in the whole build that gets better for being left late. Stand inside, see where the light actually comes from and where you actually walk, then pick the panel.

2. **Leave the panel out, or take it out.** If you are still raising, simply do not fit it. If the shell is closed, undo its keys and lift it out — the whole argument for panels being objects, collected.

3. **Fit the jamb inside the triangle.** Three sides, following the members, bolted to inserts rather than screwed into end grain.

4. **Hang a door in a rectangle inside that triangle.** Doors are rectangular; triangles are not. The leftover triangle above the head is either a fixed light, a vent, or infill — and a fixed light is the best answer because it puts daylight above head height where it does the most good.

5. **Flash it under the cap.** The cap of Chapter 17 runs over the whole shell and the door is a hole in the shell, so the cap has to be returned into the opening and terminated on the frame. This is the one place in the building where the single watertight layer is interrupted, and it is where a dome leaks if it leaks.

Windows, and why they go high

The wall leans in. That changes everything about glazing.

A window low in a dome looks at the ground a few feet away and lets in very little light, because the aperture is tilted toward the floor. A window high up looks at the sky, which is the bright thing, and it is why every dome photograph you have ever liked has the glass up near the crown.

So: **put glazing above head height** unless you need a view of something specific.

The other consequence of the lean is that every opening in a dome is partly a roof opening. Water arriving at a window in a wall runs down the wall; water arriving at a window in a leaning surface runs *onto the glass and sits at the bottom edge*. Detail every window as you would a rooflight — head flashing over, sill drained outward, and the cap returned properly — not as you would a window in a house.

The panel you do not take

One warning, from the geometry rather than from experience.

The first course is ten panels and they are the ones standing on the ring. Taking two adjacent ones is comfortable. Taking three in a row is the point where the ring between them has nothing above it for a third of its length, and the base ring is the one part of this building that is genuinely carrying in bending rather than in compression.

Three is probably fine. This book does not know that it is fine, because nothing here has been load-tested, and a building with a third of its ground floor open is a different structure from the one that was solved.

If you want a wide opening, take two panels and put the third somewhere else.

Doing it on a zome

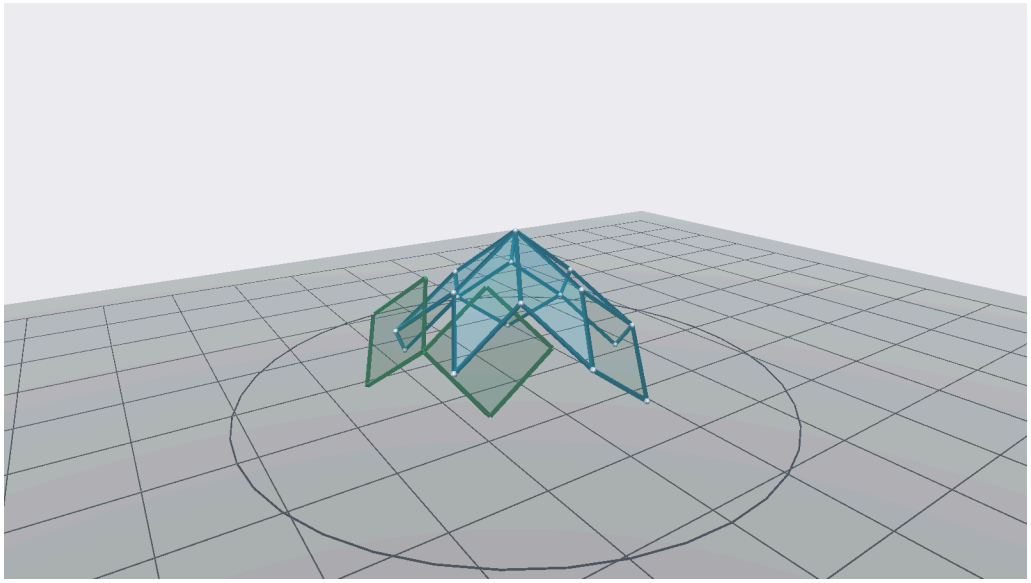

Take out a whole panel and no strut needs cutting.

The same answer, on a shape built the opposite way.

A zome's panels are bigger — one parallelogram is a lot of opening — and the rule is identical: take the whole panel, frame inside the struts, cut nothing. That the rule survives a completely different geometry is a good sign that it is about triangulated shells in general rather than about this dome.

What this chapter is not

It is not a schedule of door and window sizes, because those come from what you can buy where you are and from a panel whose dimensions are 52.516 inches across at the narrowest — Chapter 8.

And it is not permission. An opening in a load-carrying shell is exactly the kind of thing an engineer exists for, and the rule at the top of this chapter is what keeps you out of their office rather than a substitute for it.

PART 5

The Skin

“A frame that is out by an inch stands for fifty years. A skin that leaks for one winter takes the frame with it.”

Raising the shell, the single watertight layer over it, and the hats that go on afterwards -- the part of the building this book says matters most.

CHAPTER 16

Raising It

Ten panels on the ring, thirty above them, and five around the apex -- in that order, and braced until the second course closes

Forty panels are stacked against a fence. This part takes three days and it is the only part that looks like building a dome.

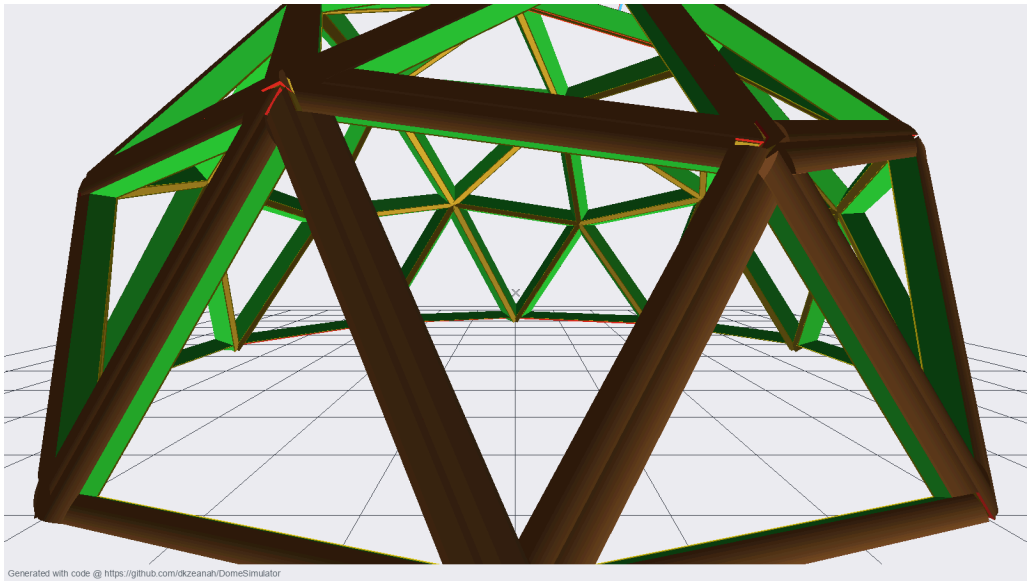

The ten panels that stand on the ring.

Before anything goes up

Set the base ring out first. A regular decagon, 10 sides, each one an A chord — so each side is 72.000 inches and the perimeter is sixty feet. Chapter 20 is what it sits on.

Get this right and the rest is assembly. Get it wrong and every course above it inherits the error, because the base is the one place in this building where error does accumulate.

Check it by diagonal, not by angle. Opposite corners of a regular decagon are a known distance apart; measure two of them and compare.

Sort the panels into two piles. 10 equilateral, 30 isosceles. Mixing them up costs an hour on the second course.

Have more bracing than you think. You will need it for about six hours total and you will need all of it at once.

The first course

Ten panels stand on the ring. They lean inward from the moment they go up, which is the first surprise: a dome is not a wall that gradually curves, it is leaning in from the ground.

Stand two adjacent panels, key the seam between them, and brace the pair externally. Then work round. Each new panel keys to the one before, and the run of them wants to fall inward until the ring closes.

The ring closing is the event. Until the tenth panel keys to the first, you have a curved wall held up by props. After it, you have a structure.

Do not take the bracing out yet.

The second course

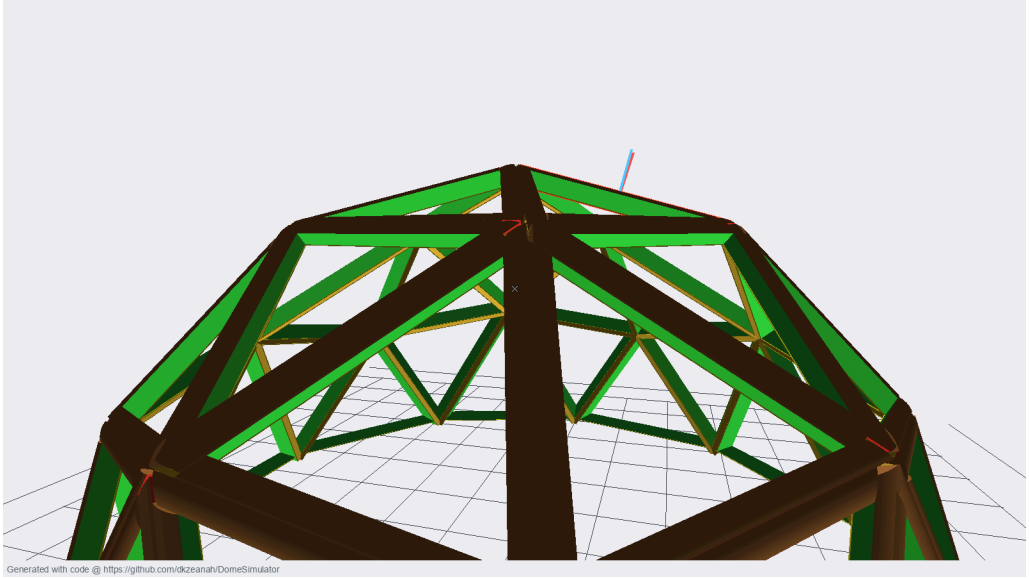

The band above: where the dome starts holding its own shape.

Thirty panels, leaning further in, each one keying to two below it and to its neighbours either side.

This is where the dome starts holding its own shape — and it is where the bracing can come out, once the course is closed all the way round. Not before. A half-closed second course is the least stable the building will ever be, because you have added weight and height without adding the ring that resolves it.

Work from opposite sides toward a closure point rather than round in one direction. It keeps the load symmetric and it means the last panel of the course is a panel rather than a wedge-shaped gap you have to persuade.

The apex

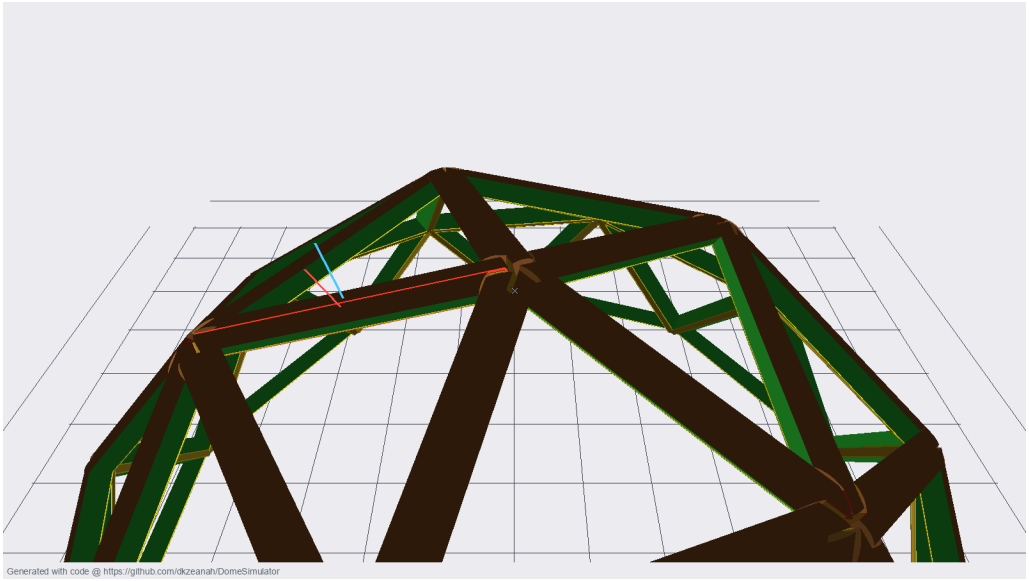

Closing the top.

Five panels around one vertex.

This is the last thing to go in and the only part of the assembly that has to be *held* rather than propped. Two people, or one person and a strap from below.

If you have built the mast of Chapter 31, the apex ring is already up there and the last five panels close around it. If not, the apex is five keys and a cap.

What goes wrong

The last panel of a course does not fit. Almost always the ring is out, not the panel. Check the base diagonals before you start cutting anything.

A seam gaps at the outside. The key is not driven far enough. It is a wedge; drive it.

A panel will not key to its neighbour. One of them is in upside down. This happens with the isosceles ones, whose two short sides look alike. Mark the long edge of every BAB panel on the jig, in the shop, before it ever comes outside.

Then stop

The frame is up. It is weather-tight in the sense that a bird cage is weather-tight, and it will stand like this indefinitely.

Do not stop here for a winter. That is the failure Chapter 3 describes, and this is the moment it happens: the frame is standing, it looks finished, it is intoxicating, and the skin is the expensive part.

The skin is the part that matters. It is the next chapter, and it is the reason all of this stands up in thirty years' time instead of in three.

CHAPTER 17

One Watertight Layer, and Only One

Two impermeable skins with insulation between them is a trap, and this project shipped that design before it noticed

Put a waterproof layer on the outside of a building and you have kept the rain out.

Put a second one on the inside of the same wall and you have built a bag.

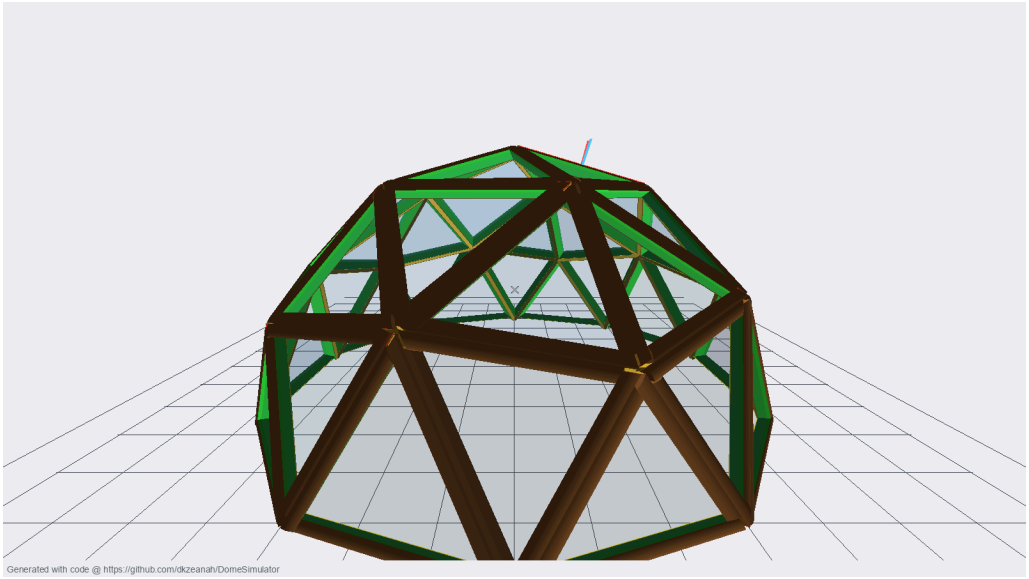

The frame with its skin on.

The design this replaces

The obvious shell is a waterproof membrane *under* the panels and a rain-slick cap *over* them, with the insulation between the two. Two skins, belt and braces.

It is a vapour trap. Water gets into every wall — from the weather, from the air inside, from somebody's breath — and the only question a wall design answers is where it goes next. A wall with an impermeable layer on both sides has no answer. Moisture arrives, cannot leave in either direction, and condenses on whichever surface is colder that night.

So: **one watertight layer, on the outside, like a shower cap** — and under it, a route for vapour to leave. The rest of this chapter is that route.

The stack, outside in

The cap. One continuous rain-slick layer over the entire shell. Welded seams, no fasteners through it, strapped down to ground anchors at the base vertices. Its only job is liquid water and it is very good at that job because it is doing nothing else.

A vented gap. Three quarters of an inch between the cap and what is under it. This is the part people skip and it is the part that makes the rest work: any moisture that gets past the cap, or arrives from inside, has somewhere to go and something moving through it to take it away.

The breather. A vapour-permeable sheet at around ten US perms. Not a poly sheet. It stops bulk water and lets vapour through, which is the exact opposite of what a waterproof membrane does and is why the distinction matters more than the price difference.

The quilted layers. As many as you have. Chapter 19.

The panels. Wood. Structural, not weatherproof, and not asked to be.

The frame. Dry, because everything above it is doing its job.

Which way the vapour goes

Warm air holds more water than cold air. Inside your building the air is warm and full of you, your cooking and your breathing. Outside it is cold.

So vapour moves outward through the wall, and it will condense at whatever point in the wall is below its dew point. The design question is: **can it get out before it gets cold?**

With a breather and a vented gap, yes — vapour passes through the permeable layer into moving air and leaves. With a second impermeable layer, no. It stops at the membrane, at a temperature partway through the insulation, and condenses there, inside the insulation, where you will not see it for years.

That is the whole argument, and it is why the cap is the only waterproof thing in the building.

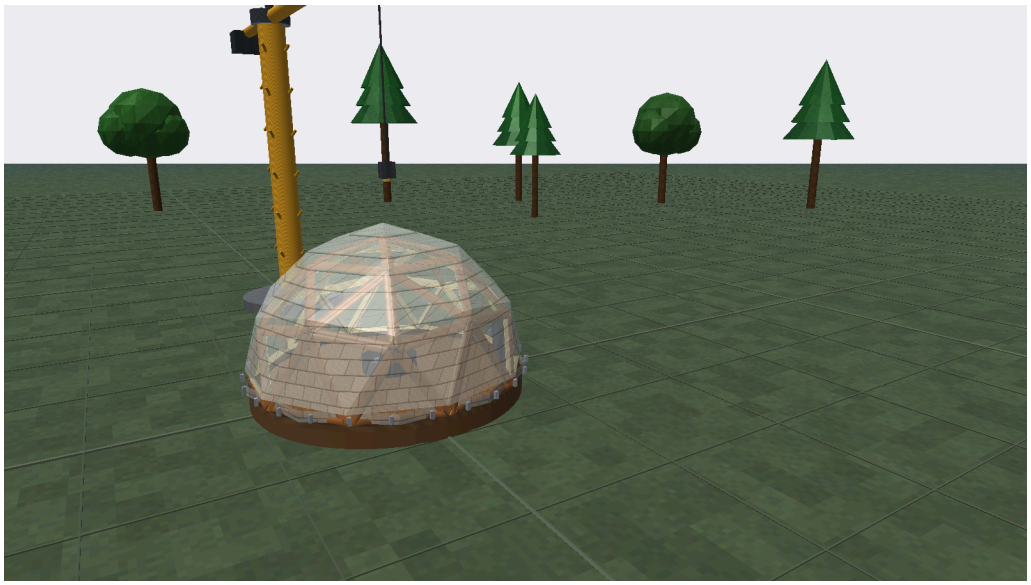

Four ways to skin the same frame, and what each one costs.

What it costs

A bare cap — no quilted layers at all — is $3,265 on this dome. With layers it climbs slowly; the shell in the standard article is $3,265.

The alternative is a laminated hull: glass fibre in resin over the whole envelope. Genuinely waterproof, sixty years, and $21,513 for the same dome against $12,036 — a real premium for a real difference.

Chapter 25 prices four laminates and the cap side by side. The short version: the hull is better at being waterproof and worse at everything else, because it is permanent. It cannot be lifted off, it cannot be upgraded, and when it fails it fails as a repair job on a bonded shell rather than as a component you unstrap.

The three things a cap has to get right

It has to be one piece, or welded. A cap made of overlapping panels is just a roof with more seams, which is the problem it exists to remove.

It has to be strapped, not fastened. Every fastener through a waterproof layer is a hole in a waterproof layer. Straps over the outside to anchors at the base put the load into the ground without putting anything through the membrane.

It has to be bigger than it needs to be. Chapter 3: a cap cut to fit a bare shell will not go over a shell wearing two quilted layers.

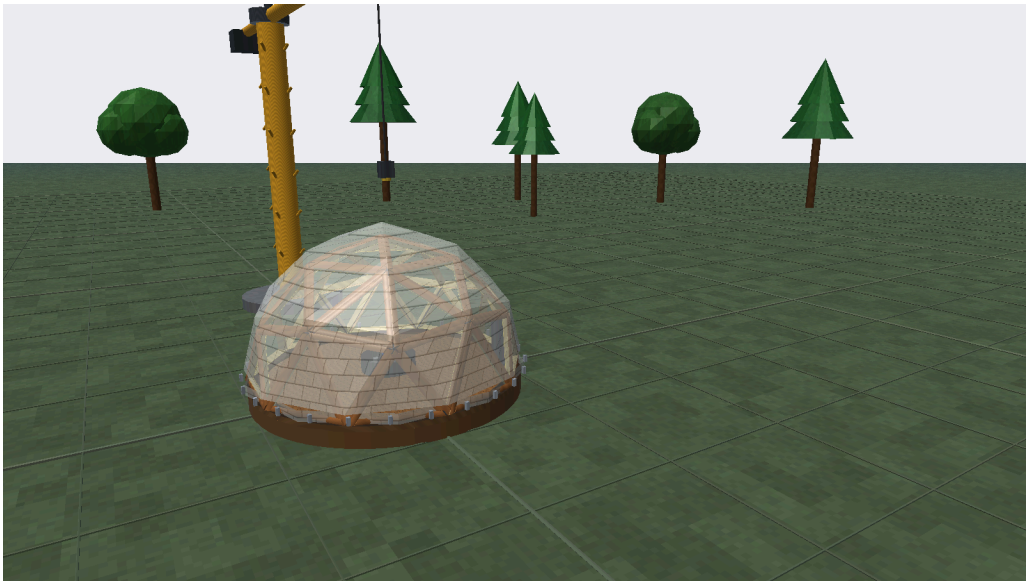

A thing we found out the hard way: no panel fits a four-foot sheet.

The part that is not solved

Ultraviolet.

A rain-slick outer layer sits in the sun for its whole life, and that is what eventually finishes it — not water. The cap is a consumable on a decade-ish timescale, and the design's answer is that it is a consumable **by design**: unstrap it, pull it off, put the next one on, in a day, with the building occupied throughout.

That is a genuinely different answer from a roof, and it is the right one for a component whose failure mode is known and gradual. It is still a cost, it is still a thing you will do four or five times in the life of the frame, and this book would rather say so than let you find out in year twelve.

CHAPTER 18

The Seam Does Four Jobs

Gutter, vent, dehumidifier and air barrier -- all of it in the space two sawn faces were always going to leave

The channel is already there.

Two sawn faces meeting at a dihedral angle cannot close flush — Chapter 12 — so every one of this dome's 55 seams carries a void running its whole length. 309 feet of it, threaded through the structure, touching every panel, arriving at the apex and at the base ring.

You are going to fill it with something. The question is what.

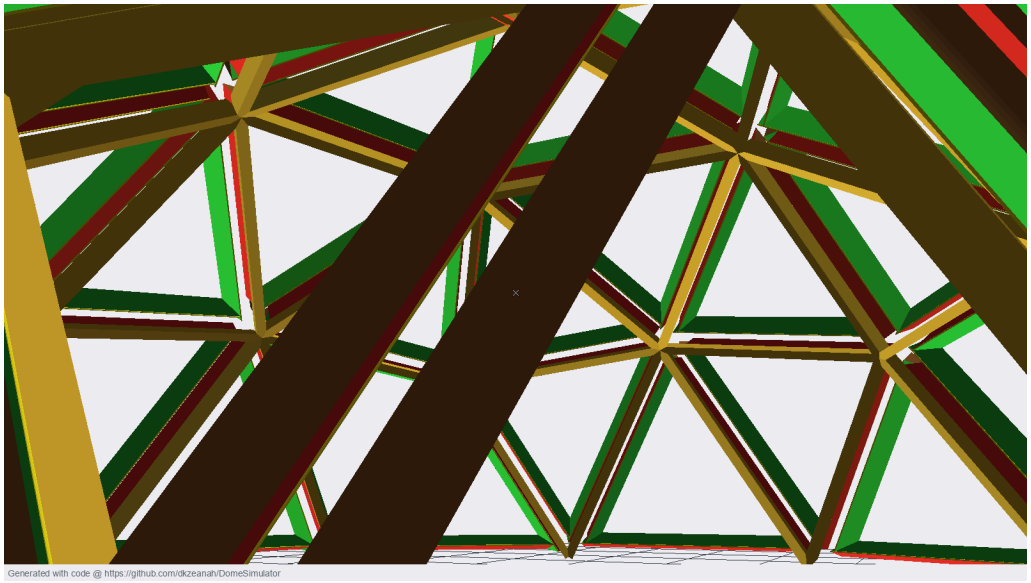

Every seam in the dome, and the channel in each one.

Four jobs, one space

Rain in at the ridge. A slot along the outer cap takes water where it already runs — the seam is the low line between two panels, which is where a roof sends water anyway. Under the slot is a gutter with suction inlets, and under that a drain to the tank. The building's guttering is inside its structure rather than bolted onto its edge.

Air along the wood faces. A perforated liner washes air down both sawn faces of every member. That is the surface most at risk in a timber frame and the hardest to reach, and it is now the surface with moving air on it permanently.

A desiccant leg. A three-way gate routes the airflow either along the faces, or through a silica cartridge, or isolates the water path from the air path entirely. In wet weather when moving air will not dry anything, you pass it through the desiccant instead.

And a plate that condenses on purpose — the part that needs its own section, below.

The reason all four fit is that they want the same thing: a continuous, serviceable void that runs everywhere and reaches the ground. Nobody would build that void for any one of these jobs. It was free.

The air barrier

Here is the part that changes how you think about leaks.

Run the fan so the interior sits slightly **above** outside pressure, and the net flow at every gap in the envelope is outward.

A gap in an inward-leaking building admits weather. The same gap in an outward-flowing one does not — not because it is sealed, but because the air is going the wrong way for anything to ride in on. Wind-driven rain at a seam meets air coming out of it.

The numbers are undramatic, which is the good news:

```
interior volume        1,916 cu ft
at 0.55 air changes an hour   18 cu ft a minute
held above outside     4 Pa
spread over            309 ft of seam
```

4 pascals is far below what anybody feels on a door, and 18 cubic feet a minute is a bathroom extractor. Two fans — 2 — so the barrier can be reversed, because there are days when you want to draw rather than push.

What it costs honestly: it runs continuously, and it only works while it runs. A positive-pressure envelope with the fan off is an ordinary envelope with holes in it. That is an argument for sizing the array in Chapter 34 so this load never has to be shed, and it is an argument against treating the barrier as a substitute for the cap of Chapter 17. It is a second line, not the first.

Condensing on purpose

Thermoelectric plates — Peltier modules — on the cold side of the channel, dropping moisture out of the air as liquid straight into the gutter the rain already uses.

The appeal is obvious. The plate sits exactly where the moisture is highest, it is doing dehumidification whether or not you want the water, and the water it makes needs no new plumbing because the drain is right there.

Now the number.

one inch of rain on this roof	185 gal
the plates, running a day	0.20 gal (360 W)
the plates, running a year	73 gal
which is the same as	0.4 inches of rain
energy per litre	2.86 kWh

A whole year of condensing is worth less than half an inch of rain.

At 2.86 kilowatt hours a litre, thermoelectric condensing is several times worse per watt than a compressor, and a compressor is already not how anybody sensible makes drinking water on a roof.

So the honest position, and it is the one this book takes:

The plates are a dehumidifier that happens to yield liquid. They are not a water supply. The water supply is the roof, and the roof is 185 gallons an inch.

Which leaves them worth fitting for one reason only: there are conditions — warm, humid, still, no rain for weeks — where the channel will not dry itself and the desiccant is saturated, and in those conditions a plate is the only thing in the design that can actively remove water from the timber. Run them on daylight surplus, treat the drips as a bonus, and never size a tank on them.

What the module costs

outer cap with intake slot	309.2 ft	$3.40	$1,051
vented liner, perforated	309.2 ft	$2.60	$804
water gutter with suction inlets	309.2 ft	$2.10	$649
drain line to the tank	309.2 ft	$1.15	$356
three-way gate, one per segment	55.0 each	$46.00	$2,530
silica cartridge drawer	55.0 each	$22.00	$1,210
service cover	55.0 each	$9.00	$495
thermoelectric condensing plate	6.0 each	$14.00	$84
ram fan, continuous duty	2.0 each	$185.00	$370
Seam module, whole dome			**$7,549**

$7,549 against a dome at $12,036 — a little over half the price of the building it is fitted to.

That is a lot, and it is why this is a chapter about a system rather than a line in the standard article. The parts of it scale differently, too: the cap, liner, gutter and drain are per foot of seam and grow with the dome, while the gates, cartridges and plates are per seam and grow more slowly.

If you fit one part of it, fit the gutter. Water off the roof is the single best return in this chapter, it needs no power, and it is the only piece that pays for itself in a season.

CHAPTER 19

A Dome Is a Head, and It Wears Hats

Bare skin, then layers, then one rain-slick shell over the lot -- the way you dress for the Arctic, and for the same reasons

I learned how to dress a building standing on the outside of a ship in the Arctic Circle, on forward lookout, at night.

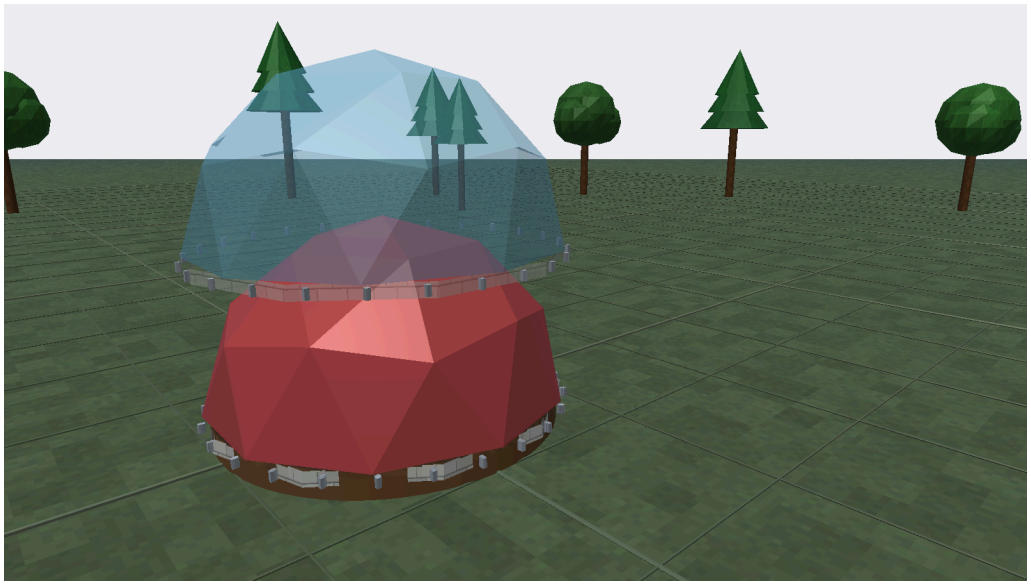

A quilt, and a bigger cap for each one.

What you wear out there

Nobody wears one warm coat. You wear layers — several of them, each thin, each doing one job — and on top of all of it goes a pumpkin suit: an immersion suit, bright orange, entirely waterproof, and utterly useless as insulation on its own.

The suit does not keep you warm. The layers keep you warm. The suit keeps the layers *dry*, and a dry layer is worth several wet ones.

The other thing about that arrangement is that it is adjustable in the middle of a watch. Too cold, add a layer. Too warm, lose one. You never take off the suit.

That is the whole shell design in this book, and I did not arrive at it by reading about vapour barriers.

The dome as a head

A dome is a head. It is round, it is the top of something, and it wears hats.

It can wear a bare skin — nothing at all, a frame with panels on it.

It can wear a toboggan: a quilted layer, then another, stacked, each one adding warmth.

And over all of it, always, one shower cap. Waterproof, thin, useless as insulation, and the reason every layer under it is dry.

People understand this instantly in a way they do not understand "vented rain screen with a vapour-permeable weather-resistive barrier", which is the same idea in a language that makes people stop listening.

Each hat is a size up

This is the part that is arithmetic rather than analogy.

A layer goes *over* the layers already there, so it is bigger than the one under it. Not a lot bigger — the shell is only a few inches thicker each time — but the areas compound, and by the seventh layer the outermost is meaningfully larger than the innermost.

So "one quilt costs fifty dollars" is a sentence about the first quilt. The model works out each layer's own area, and the cap that goes over all of them is sized for the stack you intend to end up with rather than the stack you have.

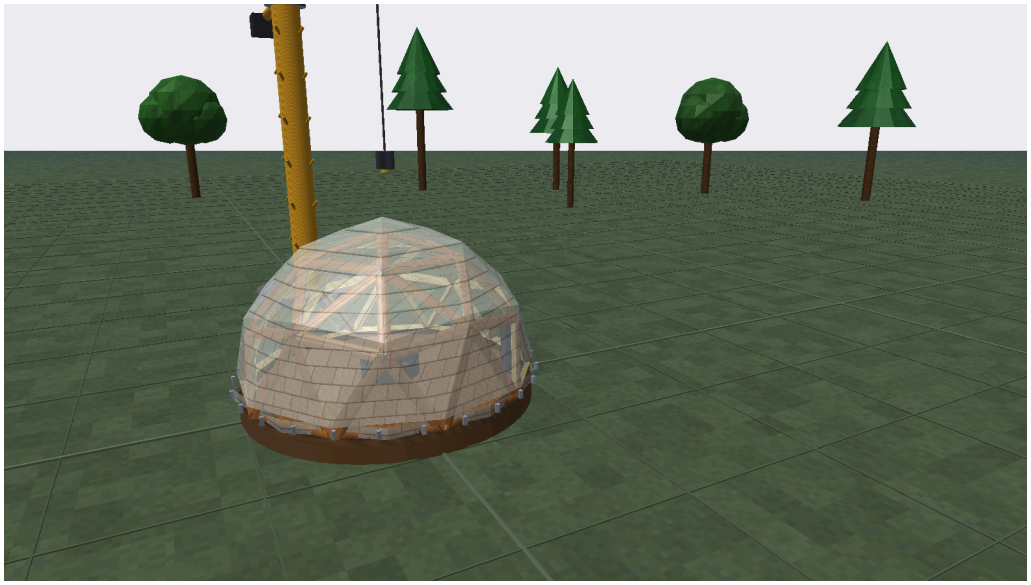

The envelope gaining a layer a winter.

It gets warmer every winter

Here is what the layering model buys that a conventional wall does not.

A conventional wall is insulated once, when it is built, to whatever you could afford that year. Changing it later means opening the wall.

This one is insulated from the outside, in increments, forever. Each autumn you can add a layer — an evening's work with a sewing machine and a box of old clothes — and the building is warmer than it was last winter.

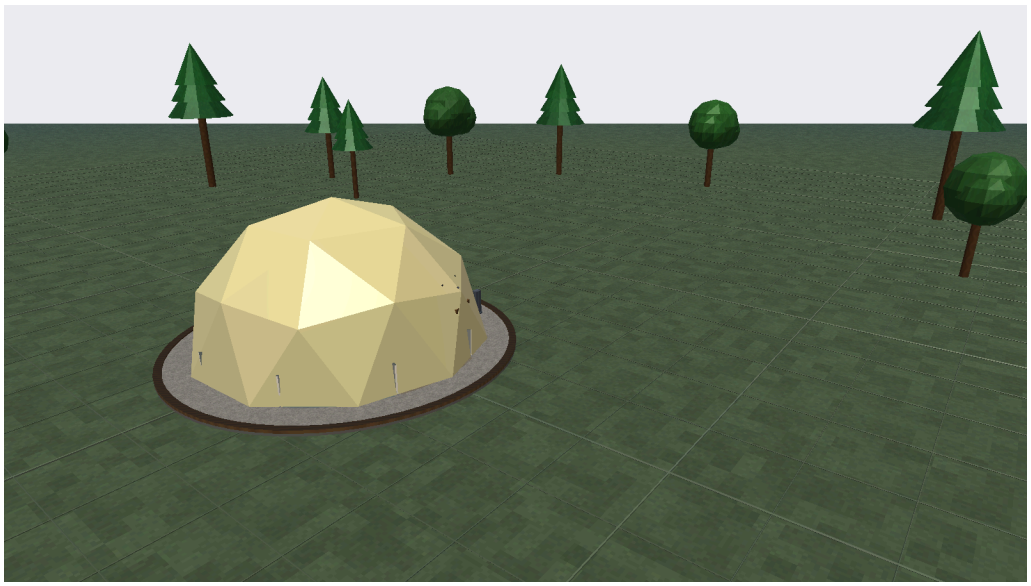

What each quilted layer is actually worth.

The cap goes back over the top and nothing else about the building changes.

A house that improves as you live in it is a different relationship from a house that is as good as it will ever be on the day you move in.

And the quilts are made of clothes

The insulating layers in this design are quilted from recycled textiles — clothing that would otherwise be waste.

That is partly an economic argument and it is mostly a participation one. It is the only part of this entire method that somebody can do at a kitchen table with no land, no saw and no site. A layer is a real object with a number on it that goes on a named building, and it takes an evening.

The arithmetic is in the model: how many garments, how many pounds, what R-value the stack reaches, and what a layer is worth to the person who sews it for somebody else's dome. That last one has to be a real number or this is not a network, it is a request for free labour.

Where the analogy stops

Two places, and both matter.

A person moves and a building does not. Your layers work partly because you are generating heat inside them and moving air through them. A building generates less heat per unit of surface than you do and does not move at all, so it relies on the vented gap of Chapter 17 to do what your movement does.

You take your suit off indoors. The dome does not. The cap is on it in July, in the sun, which is the ultraviolet problem at the end of the last chapter and the reason the cap is a consumable.

Neither of those breaks the model. They are the two places where a builder who reasons from the analogy alone will get it wrong, so they are written down.

PART 6

The Floor and the Ground

“Everything you own sits on the floor, and the ground is the one part of the building you cannot take with you.”

The second thing that has to be right, the five ways to build it, and the argument for standing on somebody else's ground.

CHAPTER 20

The Floor Is the Other Thing to Get Right

It carries everything you own, you touch it all day, and it is where the ground sends its water

You will spend more hours in contact with the floor than with any other part of this building, and it is the only part in permanent contact with the ground.

Both of those are reasons to spend money here rather than on the frame.

What "right" means

Dry. The ground is wet. It is wet under a slab, under a deck, and under gravel, and it will move moisture upward into anything that touches it unless something stops it. A capillary break — gravel, a membrane, an air gap — is not optional and it is cheap at the time and impossible afterwards.

Warm underfoot. A cold floor makes a warm room feel cold, because you are touching it and you are not touching the air. This is worth more comfort per dollar than the same money spent on the walls.

Flat and stiff. You notice a floor that flexes every single day.

Level, to a few millimetres. Not because the dome needs it — the dome would stand on a slope — but because everything you put in the dome needs it.

Five ways to do it

Priced on this footprint, taken off board by board rather than rated per square foot:

Bare ground to a treehouse platform.

compacted gravel base	$443
full concrete slab	$2,468
framed deck on piers, sealed	$2,916
concrete ring with a timber middle	-- see the table
framed deck, ply and epoxy over it	-- see the table

The staple is the framed deck on piers at $2,916: it is dry by construction, it is warm because there is air under it, it is repairable, and it does not require a concrete truck to reach your site.

The gravel base at $443 is not a floor. It is a prepared ground that a floor can go on. It is in the list because it is what a lot of people actually start with, and it is honest to say that it is a starting point rather than a cheap answer.

The thing that surprises people

Half a pour is not cheaper than a whole one.

The concrete ring with a timber middle costs *more* than the full slab. The saving on concrete is smaller than the cost of the timber deck that replaces it, and the ring's formwork is fiddlier per cubic yard than a slab's.

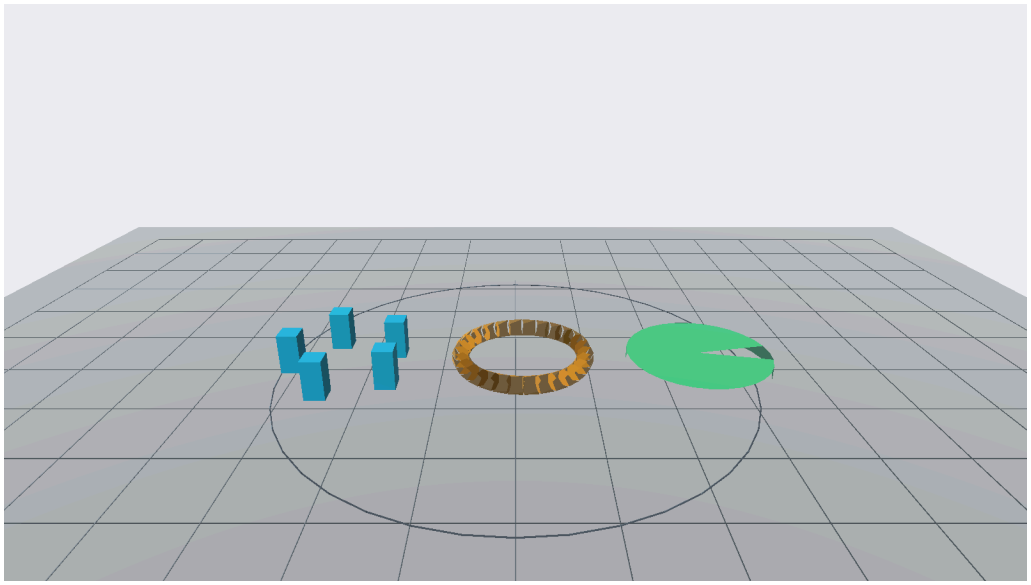

Meeting the ground: piers, a ring beam, or a slab.

This is in the book because the intuition is so strong and so wrong, and because the model prints the number that does not flatter the argument.

The floor that clamps

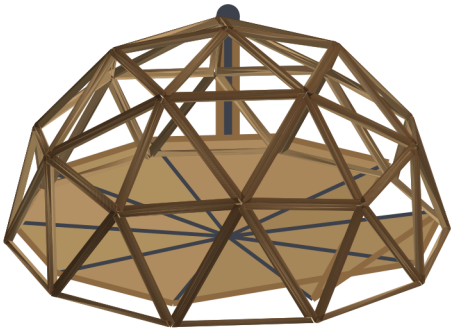

The mast through the column, and the floor that clamps to it, sitting on the base ring where a floor goes.

There are two ways to build a floor in a dome.

Framed into the base ring. Joists between the ring segments, decking over. Simple, strong, and permanent: it is now part of the structure and removing it is a demolition.

A hub, spokes and decking. A steel hub in the middle, radial spokes out to the base ring, timber over the top. It is a component. It comes out, it goes back, it can be replaced with a better one in ten years, and it can be left behind when the dome moves.

Chapter 3 argues for the second on general principles — the floor is one of the two layers that matters, so keep it changeable. It also turns out to be what makes Chapter 31 possible, which was not the reason for doing it.

The hub wants something in the middle to clamp to. In this design that is the utility column, which is already there, already centred, and already the one thing running floor to apex.

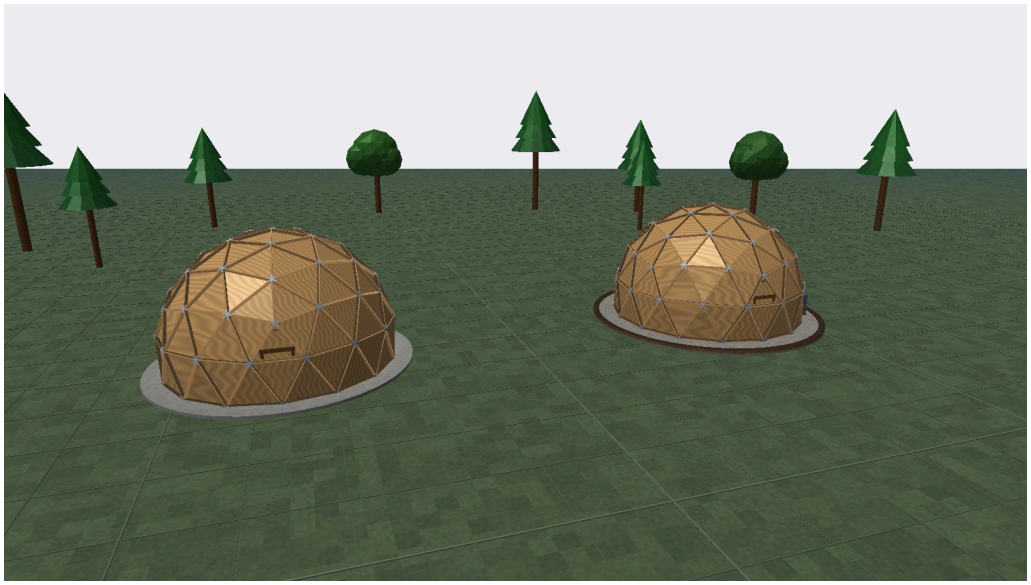

The part of a house you never take with you, priced across the catalogue.

Under-floor is storage

A deck on piers has a void under it. That void is dry, it is out of the way, and it is the cheapest cubic footage in the building.

Design for access to it from inside — a hatch, not a crawl from outside — and it is the difference between a small building that feels cramped and one that does not.

What this chapter will not tell you

Frost depth, soil bearing, seismic anchorage.

Those are local, they are the reason foundations are the part of a building most tightly bound by code, and this book does not know where you are. The five constructions above are priced take-offs of a design; what depth your piers go to is a question for somebody who has stood on your ground.

CHAPTER 21

A Pad, Not a Plot

The ground is the one thing you cannot take with you, so stop buying it

The ground is the one part of this building you cannot take with you.

Everything else — 120 members, forty panels, a column, a cap, a floor — comes apart and moves. The ground does not, and it is usually the most expensive thing in the whole arrangement.

So stop buying it.

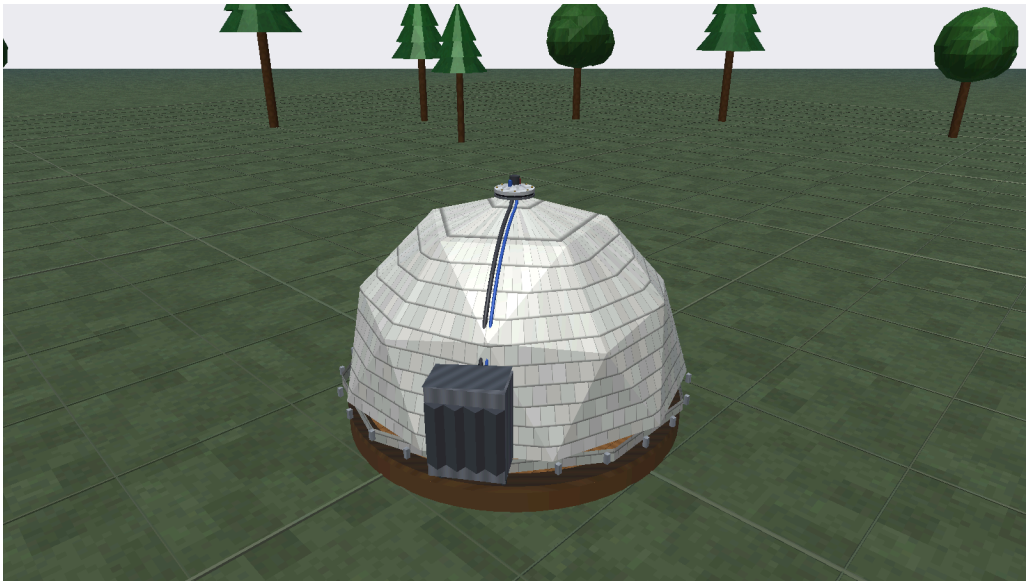

The landowner builds the pad. It stays when the dome leaves.

The split

The host owns the ground and everything permanently attached to it. The pad, the service port coming up through it, the water and power to that port, the access track, the under-floor storage if there is any.

The tenant owns the building. The frame, the panels, the shell, the column, the floor, the cap.

That line is not arbitrary. It falls exactly where “can this be carried away” falls, which means it never has to be argued about. Nothing straddles it.

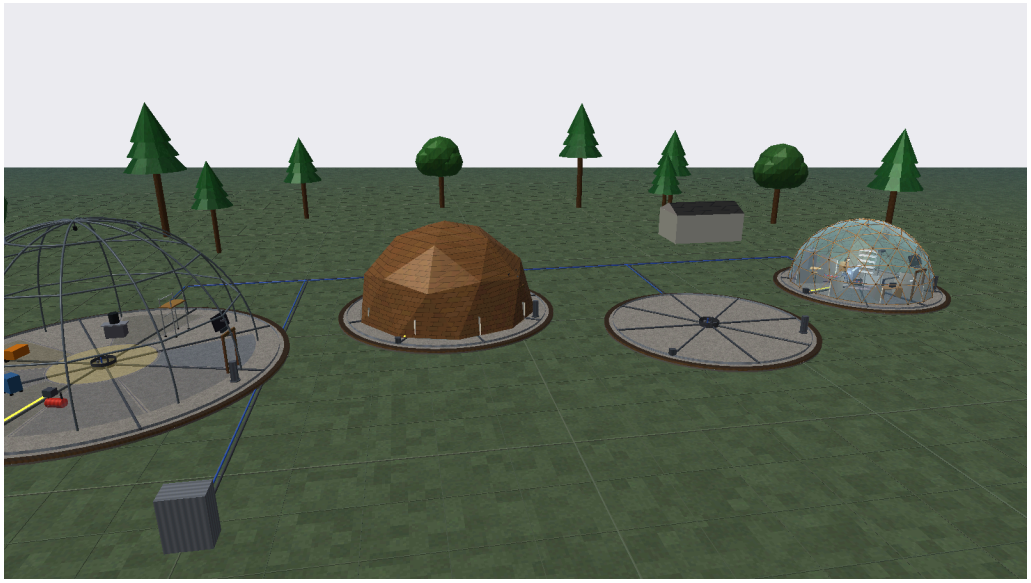

Two people, and what each of them owns.

Why it is a clean line

The usual version of this arrangement — renting land and putting something on it — is messy because the something is half-attached. Whose slab is it? Whose septic? Who pays when the deck rots?

Here the pad is a single object with a price. In this model it is $6,240, built once, by the host, to a specification the tenant can check before arriving. The dome is another object with a price, $12,036, and it arrives on a trailer.

When the arrangement ends, the tenant takes a building and the host keeps a platform. Both of those are worth something to their owner and neither is worth arguing about.

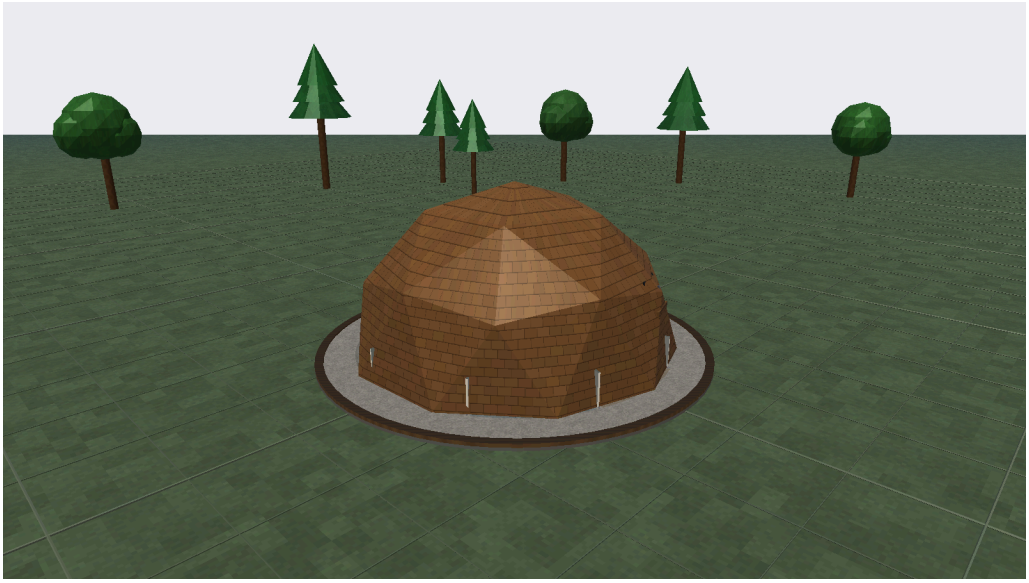

The line that never moves.

What the host is really selling

Not land. A **prepared, serviced, level place to put a building**, which is a much more specific thing and much more valuable than an acre of field.

Preparing that place is the expensive, skilled, permitting-heavy part of building anywhere. It involves earth, concrete, a trench, and somebody who knows where the frost line is. Doing it once and having it used for decades is a far better use of that effort than doing it once per owner.

And what the tenant is buying

A foundation, without a mortgage.

The pad is cheaper than the foundation they would otherwise pour, because it is amortised over more than one occupancy. It is available now rather than after a land purchase. And — the part nobody expects to value until they have it — it is *leavable*.

The number that decides it

The pad is $6,240. The floor a dome brings with it is a few thousand more. Against a piece of land, which in most places is a five-figure number before anything is built on it and a thirty-year commitment after.

That ratio is the entire argument for the next chapter, which works it through from both sides and says what would have to be true for it to hold.

PART 7

The Network

“Own the building. Rent the ground. Move when you want to, and leave a platform behind rather than a house.”

One chapter, the economics of a pad network from both sides of it: what the dome owner saves, what the landowner earns, and what would have to be true for either.

CHAPTER 22

Why a Network Beats a Park

An RV park rents you a slot for a week. This rents you a foundation for a decade, and both sides come out ahead

An RV park rents you a slot for a week. This rents you a foundation for a decade.

That is the whole difference, and everything below follows from it. The arrangement only works if it is better for the landowner *and* for the person who arrives with a building, so this chapter works it out twice.

First, why it is not a caravan site

An RV park sells **nights**. Its costs are turnover: booking, cleaning, hookup, disconnect, a pitch standing empty out of season, and a tenant who is leaving from the moment they arrive and behaves accordingly.

A pad sells **years**. It is built once, connected once, metered once, and occupied by somebody who owns the building standing on it. The revenue per square foot is lower. The cost per occupied month is very much lower. The difference is turnover, and turnover is most of what makes short-stay accommodation a job rather than an income.

The tenant's own building is also the deposit. Nobody abandons a dome.

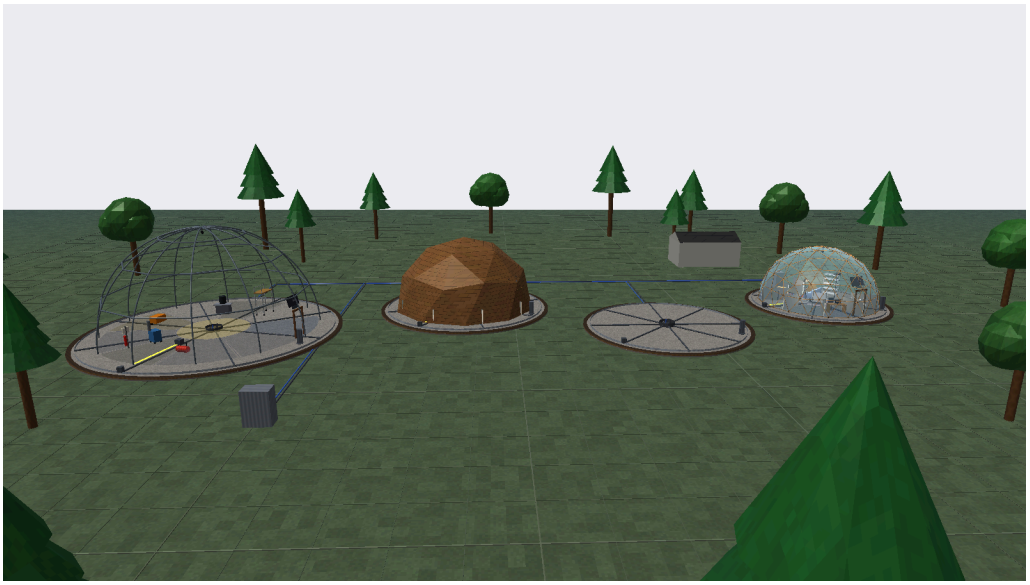

An RV park, for houses.

The tenant's side

Four ways to be housed, on this book's dome and on rates declared in the park model with the assumption written beside each one:

	per month	at the door	over 10 yr	owned after
hotel room	$4,200	$0	$504,000	$0
short let	$2,850	$0	$342,000	$0
apartment lease	$1,450	$3,625	$175,450	$0
own the dome, rent the pad	$528	$12,036	$75,365	$12,036

Two things in that table are worth slowing down for.

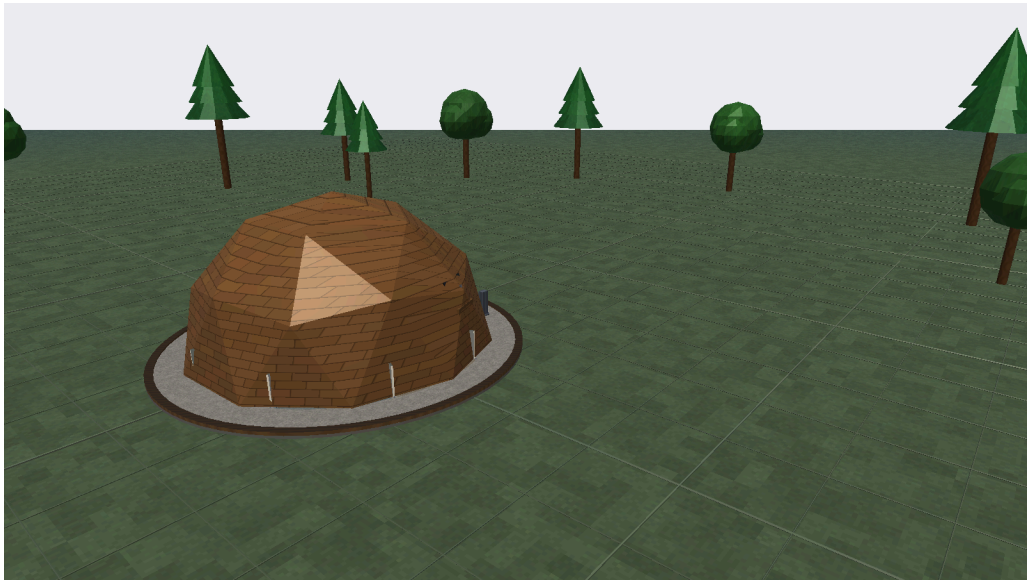

Four ways to have a roof, for a year.

The monthly figure includes the dome wearing out. $528 a month is the pad's rent plus the dome's own depreciation over a 30-year service life. It is not rent-and-ignore-the-asset; the building is being used up and the table says so.

The entry cost is the real objection. $12,036 at the door against an apartment's $3,625. That is the catch and it does not go away. What the table shows is how quickly it is repaid: owning overtakes renting after **11 months**, and after ten years the difference is about $100,085 — with a building still standing at the end of it that you own.

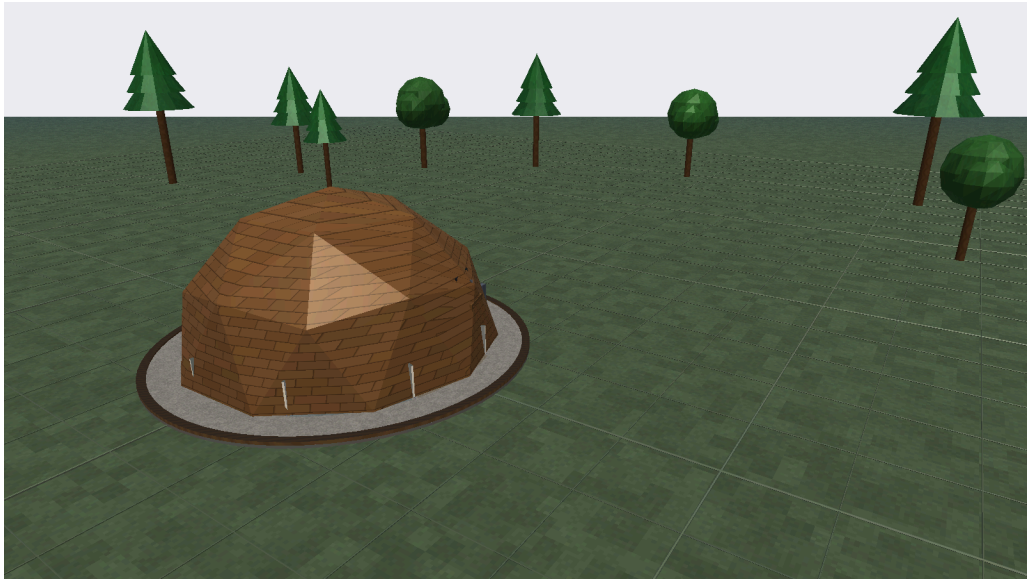

How long you have to stay.

What the tenant actually gets

No land purchase and no mortgage. The most expensive item in almost every housing decision is removed, not reduced.

A building that moves. Not "portable" in the sense of a caravan — this is a real timber shell — but demountable. It comes apart into panels, a column, a floor and a cap, and it goes onto a trailer. The thing you cannot take is the pad, and the pad is the cheap part.

Flexibility in how long. A season or a decade, decided as you go. There is no twelve-month lease to break because the thing tying you to the place is a rent on a platform, not a claim on a home.

Flexibility in where. This is the part that has no equivalent. If the work moves, or the climate turns, or the neighbours do — you take the house. In every other arrangement on that table, moving means losing either a deposit or a building.

A floor that is better than the pitch. An RV park gives you a slab and a hookup. A pad in this arrangement is a prepared, levelled, serviced platform sized for the building that is going on it, and the dome's own floor clamps to its own column.

The host's side

Three things to do with a piece of ground:

	upfront	a year, net	payback
bare ground, unused	$0	$-380	never
one serviced pad	$14,280	$4,868	2.9 yr
furnish a unit and let it short	$26,316	$26,238	1.0 yr

And here is the number that does not flatter the argument, printed rather than buried: **furnishing a unit and letting it short earns the host more.** More than five times the annual net, and it pays back in about a year against a pad's 2.9 years.

So why would anybody build pads?

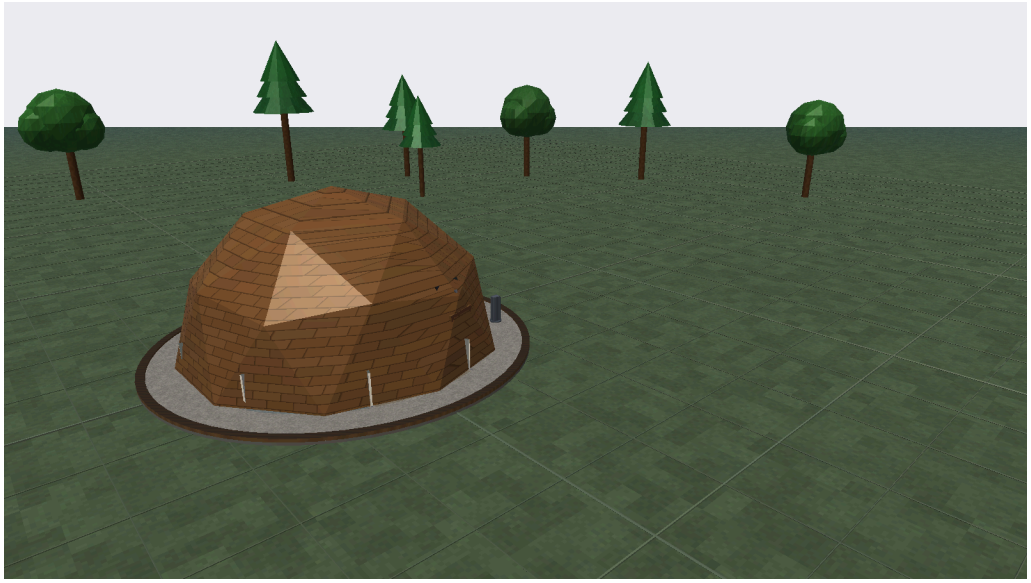

The host's side, against the obvious alternative.

Because those two lines are not the same kind of thing

The short-let line is given every night of the year full, which nobody achieves. Halve the occupancy and it halves.

It also requires the host to own a *building* — to build it, insure it, furnish it, clean it three times a month forever, hold a reserve against damage, renovate it every year, and answer the phone when the heating fails at eleven at night. That is not an investment. It is a small business, and the income in the table is the pay for running it.

The pad is an annuity. $14,280 once, $4,868 a year net, and the work is reading a meter and sending an invoice. The tenant owns the building, so the tenant fixes the building.

The honest framing is: **a short let earns more per pound of effort at the start and a pad earns more per hour of attention forever.** Which of those you want is a question about your life, not about your land, and this book is not going to pretend the money answers it.

What the host is really selling

Not land. A prepared, serviced, level place to put a building — which is the expensive, skilled, permit-heavy part of building anywhere.

Doing that once and having it used for thirty years by a succession of owners is a far better use of the effort than doing it once per owner. The pad is also worth something while it is empty, which bare ground is not: it is an improvement with a rent attached to it.

Why a network and not a park

One host with one pad is a transaction. The thing that makes it a network is that the pads are **the same**.

A dome built to this book's geometry fits any pad built to this book's specification, which means a tenant can move between them without modifying anything, and a host can take any tenant without knowing in advance which dome is coming. Chapter 21's clean split — the host owns what is attached to the ground, the tenant owns what can be carried — is what makes that interchangeability possible, because nothing straddles the line and so nothing has to be negotiated.

That is the same argument as Chapter 13, applied to land instead of labour: a short, fixed interface is what lets a thing scale.

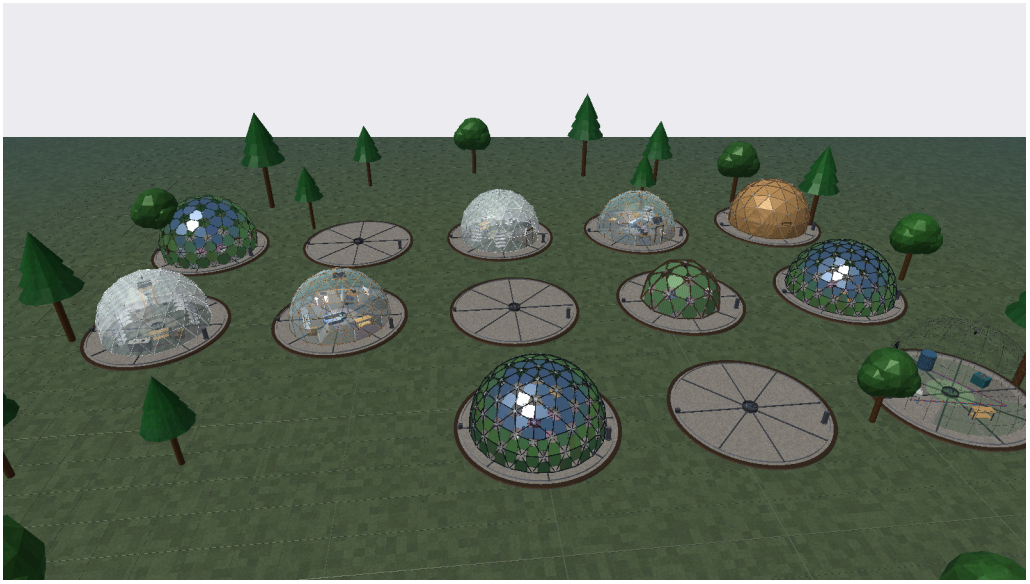

Why this has to be a network.

What would have to be true

This chapter is a design possibility, not a tested arrangement. Four things would have to hold, and none of them is proven:

Zoning would have to permit it. A demountable dwelling on a leased pad is not a category most jurisdictions have. Some will treat it as an RV, some as a permanent dwelling, some as neither. This is the single largest risk and it is entirely local.

The rates would have to survive contact. $494 a month for a serviced pad is a declared assumption against local RV and storage rates, not a price anybody has charged.

Enough domes would have to exist. A network of pads with nothing to stand on them is a field of concrete. The first hosts carry that risk, which is why the model's test build is three pads and not thirty.

Somebody would have to underwrite the first year. A host who builds a pad on the strength of a book deserves better than hope, and the park model carries a twelve-month manufacturer guarantee for exactly that reason.

State those four plainly and the argument is still a good one. Leave them out and it is a brochure.

PART 8

Other Shapes

“A zome is swept, a hex dome is tiled, and a geodesic dome is subdivided. Three answers to one question about curvature.”

The two other round buildings this project solves, what each one is good at, and what it costs against the dome in the rest of this book.

CHAPTER 23

A Zome Is Not a Piece of a Sphere

Swept from a star of directions instead of subdivided from a solid -- which is why every panel comes out flat, guaranteed

Everything so far has been subdivision: take a solid, cut its faces smaller, push the new points onto a sphere. A zome is made the other way and the difference decides everything about it.

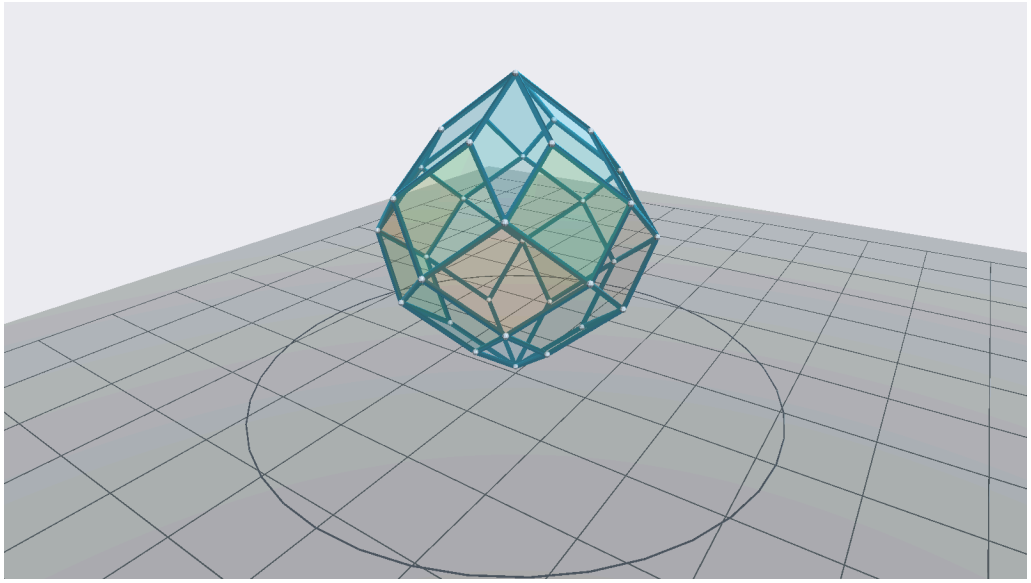

A zome is not a piece of a sphere.

The sweep

Start with a **star of directions** — a set of vectors radiating from a point, evenly spread around a vertical axis.

Now take a stick. Point it along the first direction and walk to the end. Point it along the second and walk to the end of that. Keep going through all the directions and you come back to where you started, having traced the outline of a solid.

Every face of that solid is a **parallelogram**, because every face is made by two of the directions and nothing else. Two directions define a plane. A parallelogram made of two directions is flat, necessarily, always, without anybody checking.

That is a zome.

Every panel flat, guaranteed

This is the property worth the whole chapter.

In a geodesic dome, a panel is flat because a triangle is always flat. Fine — but it means every panel must *be* a triangle, and triangles tile a sphere with a lot of members.

In a zome, panels are four-sided and still guaranteed flat, because of how they were constructed rather than because of how many sides they have. You get big flat quadrilateral panels, which is a genuinely better thing to sheathe and to glaze than a triangle is.

And the star means **one strut length**. Make the directions equal in length and every stick in the building is the same stick. Not two lengths. 3 is not the number of anything. One.

What it costs

Three things, and they are real.

The hubs get particular. In a geodesic dome, the hub problem is what the pinwheel of Chapter 12 exists to remove. In a zome you cannot remove it the same way: the sticks arrive at a hub in a pattern set by the star, at angles that are not all the same, and the joint has to hold that pattern. Zome hubs are where zome builders spend their time.

The top comes to a point. The sweep converges on the axis, so a zome finishes in a spike rather than a cap. That is either a feature or a detailing problem depending on your rainfall.

The shape is not a sphere. It is taller for its footprint, it has more surface per square foot of floor, and if you wanted a hemisphere you did not want a zome.

The famous one-panel zome

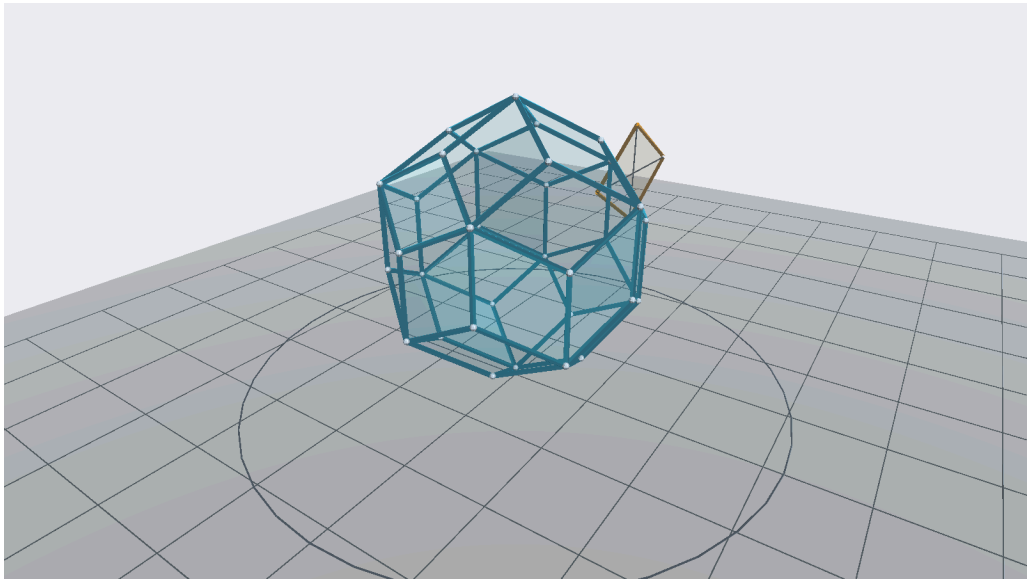

The famous one-panel zome.

Here is where the golden ratio comes back, and this time it really is the design.

Choose the star's directions using φ and the pitch to match, and every single panel in the zome becomes the **same rhombus**. Not two panel shapes, not five. One.

One strut length and one panel template, for a whole building. You can cut the entire skin from one jig and the entire frame from one saw setting.

That is the golden zome, and it is the single most elegant result in any of the geometries this project solves.

What the golden zome charges you

It charges you the freedom to choose your proportions.

The reason every panel comes out identical is that the star and the pitch are both pinned by φ. Change the height-to-width ratio you want and you lose the property — you are back to several panel shapes, and the one thing that made it worth doing is gone.

So the golden zome is beautiful and it is exactly one building. If its proportions suit your site, it is very hard to beat. If they do not, you are building an ordinary zome and paying the hub cost without the one-panel prize.

That trade is worth stating, because the property is seductive enough that people design around it and then discover they have designed around a constraint rather than a feature.

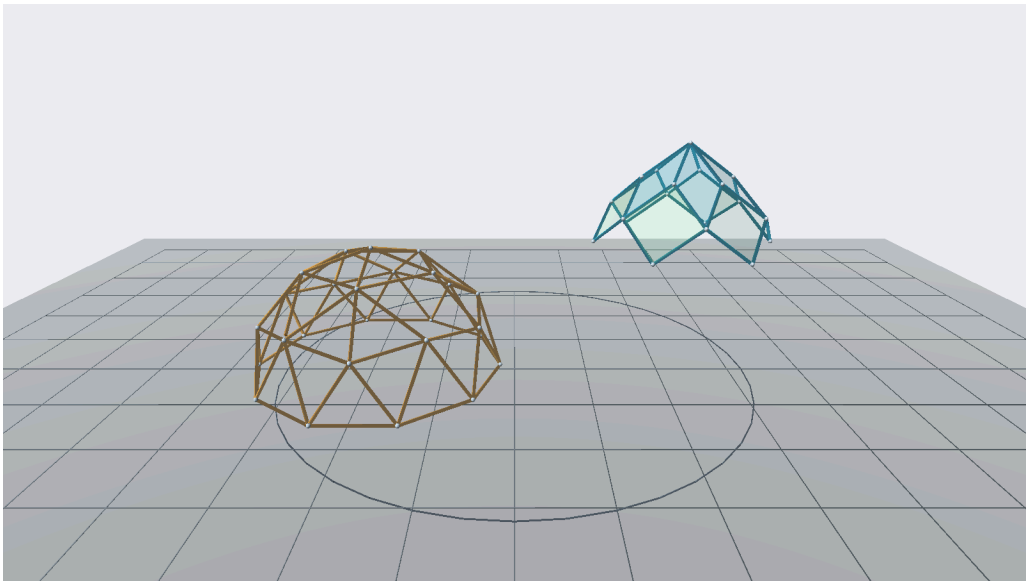

A zome, drawn by the tool that solves it.

Zome against geodesic dome

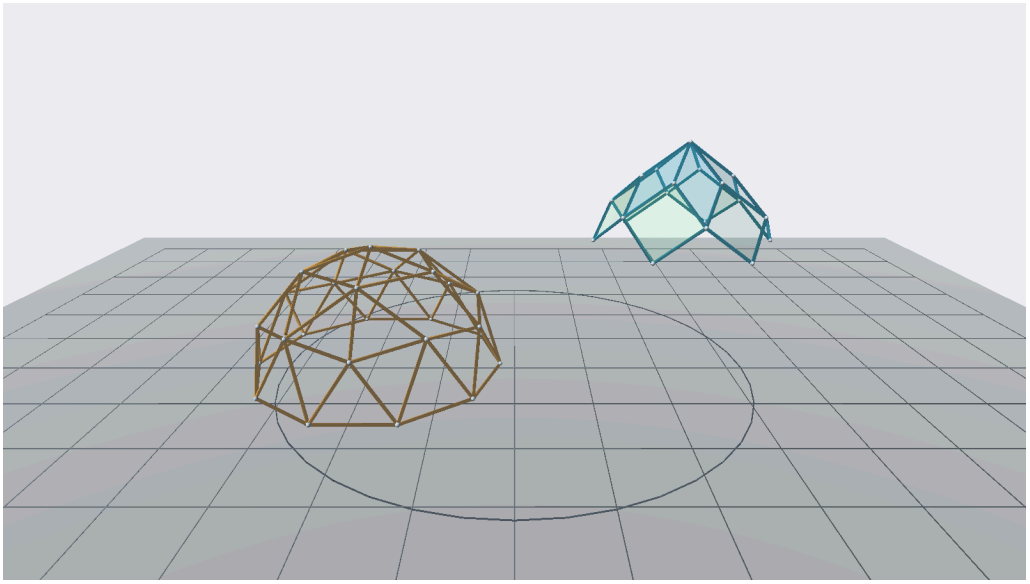

Zome against geodesic dome.

strut lengths	zome 1	geodesic 2
panel shape	parallelogram	triangle
panel flatness	by construction	by being a triangle
hubs	particular	removed by the pinwheel
top	a point	a cap
surface per floor	more	less

Neither wins. They are answers to different questions, and the question a zome answers well is *"I want big flat panels and one stick length and I do not mind a hub."*

This book builds a geodesic dome because its question was *"I want to use a split log and avoid a hub entirely"*, and the wedge's flat sawn faces make the pinwheel possible in a way they would not in a zome's hub.

But if you have a bandsaw and a box of brackets and no chainsaw, the zome may be your building, and this chapter exists so you can find that out here rather than after the tree is down.

CHAPTER 24

Exactly Twelve Pentagons, Always

A sheet of hexagons will not curve. Curvature is bought with missing angle, and the price is always twelve pentagons

Everybody reaches for hexagons. Honeycomb, graphite, the compound eye — the hexagon is nature's answer to tiling a plane, and it is the shape people sketch when they imagine a dome that is not made of triangles.

There is a catch, and it is absolute.

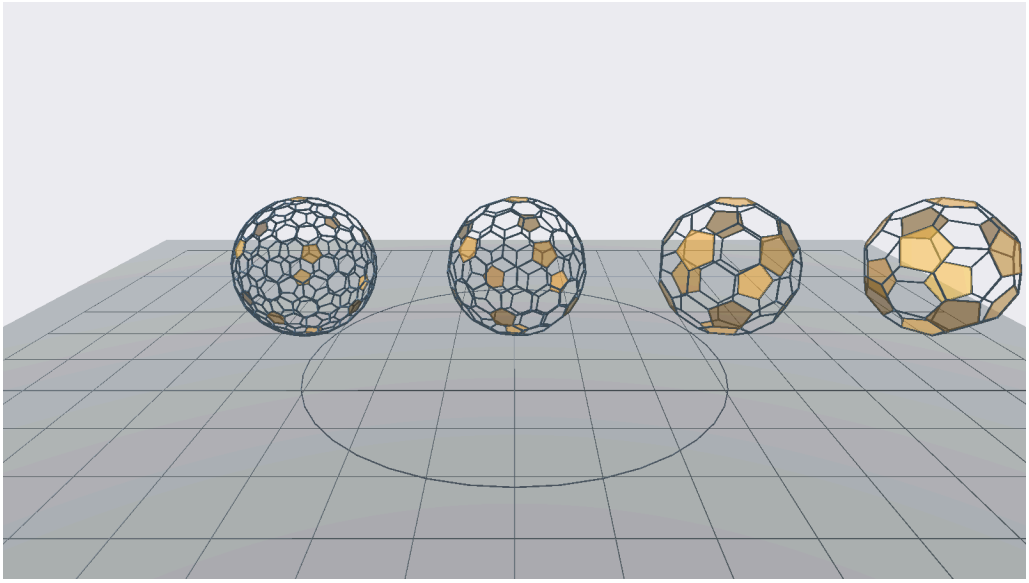

Exactly twelve pentagons. Always.

A sheet of hexagons will not curve

Six regular hexagons meet at a point with their angles summing to exactly 360 degrees. A full turn. No angle left over.

That is what makes hexagons perfect for a **flat** surface, and it is exactly what stops them curving. Curvature is bought with *missing* angle: to make a surface close up into a ball you need the angles around each point to sum to less than a full turn, so that the surface has to pucker.

Hexagons have nothing to give. A sheet of them stays flat forever, however large you make it.

So where does the angle come from

A pentagon.

Put five hexagons and one pentagon around a point and the angles no longer reach 360. The surface puckers. Do it enough times and it closes into a ball.

And the number of times is not a design choice. Euler's formula fixes it: a closed surface tiled with hexagons and pentagons, three faces meeting at every corner, needs **exactly twelve pentagons**. Twelve. Not eleven, not thirteen, and no amount of hexagons changes it.

A football has twelve. A fullerene has twelve. A hexagonal dome has twelve, or it is not closed.

The single-hexagon dome

The smallest useful case is charming: one hexagon at the crown, a ring of pentagons, and you are done.

It has **one strut length**, cut ninety times, and **two flat panel templates** that cut the entire skin. For a small structure — a shelter, a shade, a play house — that is an extremely cheap parts list.

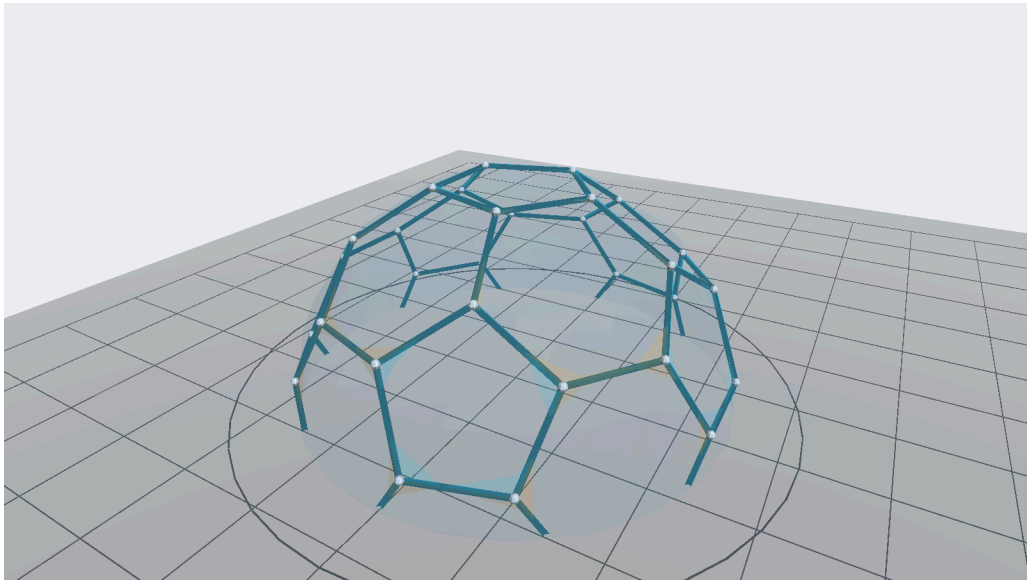

The single-hexagon dome.

Then you want it bigger

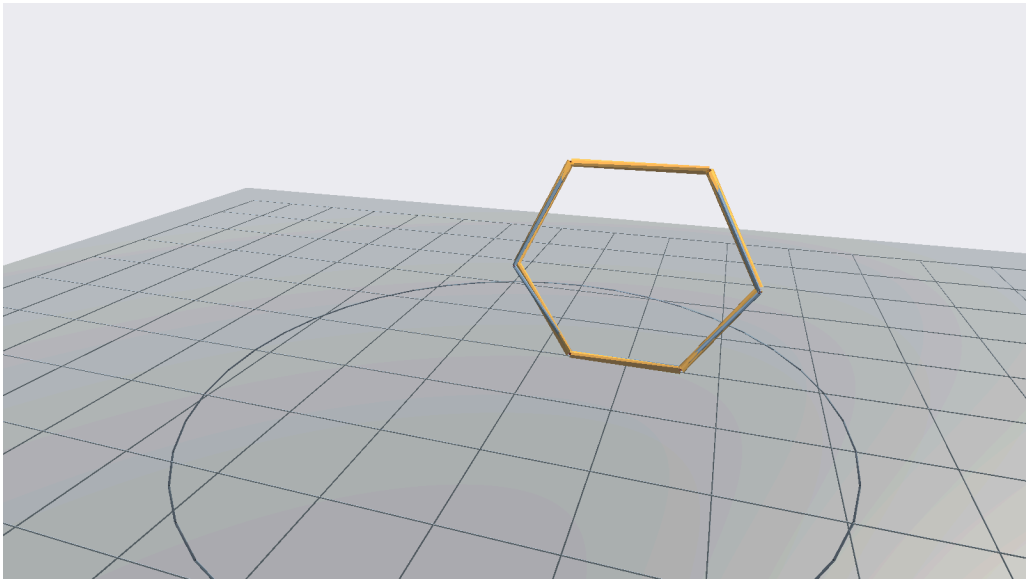

The panels stop being flat.

Here is where it goes wrong, and it goes wrong in a specific way worth knowing before you commit.

Scale a hexagonal dome up by subdividing and two things happen at once.

The hexagons stop being regular. Away from the pentagons the tiling stretches, so the hexagons become slightly different from each other — and each different one is another panel template. Every step up multiplies the shapes.

And the panels stop being flat. A hexagon has six corners. Three points define a plane; six do not, and on a curved surface the sixth corner will not lie in the plane of the other five. The panel warps.

A triangle cannot warp. That is the property Chapter 4 opened with, and this is where the bill for not having it arrives.

What the warp costs

You have three ways out and all of them cost something.

Accept the warp and force the panel flat when you fix it. It goes in stressed, it wants to spring back, and every fastener is holding that.

Fold the panel along a diagonal, which is admitting it is two triangles and building it as one.

Make the panels smaller until the warp is below what the material tolerates, which means more of them.

None of those is fatal. All of them are work that the triangulated dome simply does not have.

The two domes, side by side

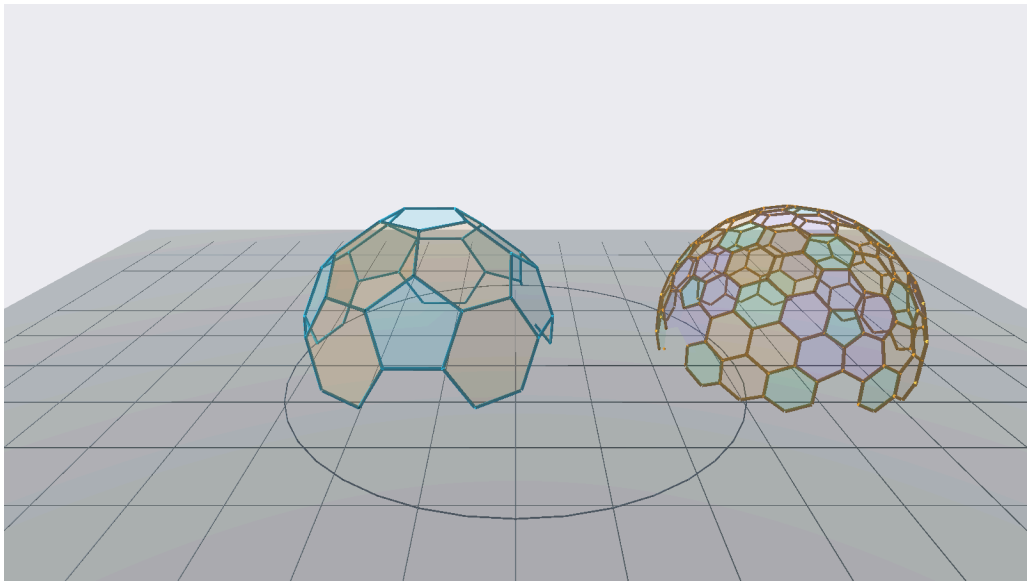

The two domes, side by side.

The honest summary:

A hexagonal dome is better when it is small, when you want few strut lengths, and when big flat panels matter more than anything else.

A geodesic dome is better when it is large, because the triangle's flatness is guaranteed at any size and the hexagon's is not.

The crossover is not far up. Which is why this book builds triangles — and why it is worth understanding the hexagon properly rather than dismissing it, because for a chicken coop the hexagon wins and this method would be over-engineering.

The thing to carry away

Curvature costs angle, and something has to pay.

In a hex dome, twelve pentagons pay it. In a geodesic dome, the subdivision pays it — every one of those twenty faces becomes triangles that are slightly different from each other, which is precisely why there are two chord lengths instead of one.

There is no tiling that curves for free. Every round building in this book is a different answer to the same bill.

PART 9

The Catalogue

“Twelve finished buildings, drawn by the tool that builds them, with the price of every choice in each one.”

The whole substitution space -- frame, section, panel, cladding, foundation, finish and fit-out -- and the two arguments that decide most of it.

CHAPTER 25

Every Other Way of Doing It

Eight frame materials, eight sections, sixteen panels, nine claddings and twelve foundations -- priced on this dome, not in the abstract

This book recommends one way of doing each thing. You are owed the others.

Not a paragraph saying alternatives exist — the alternatives, named, with what each one costs and weighs **on this building**, and a mark against the one the reference build uses.

How to read these tables

A list of materials with prices per square metre is not a decision. A decision is *"on a 19.42-foot dome with 550 square feet of shell, cedar shakes are this much and this heavy, and asphalt is that"* — and that is arithmetic this project can do, because it costs domes for a living.

Every option comes from a tool that already models it. Nothing is invented for the book. The full tables are in the reference section at the back; these pages are the shape of the choice.

The frame

The same frame, priced and weighed eight ways.

Eight materials, the same 120 members. The reference build is the whole tree trunk, and it is the cheapest by a long way — which is the entire economic argument of this method in one row.

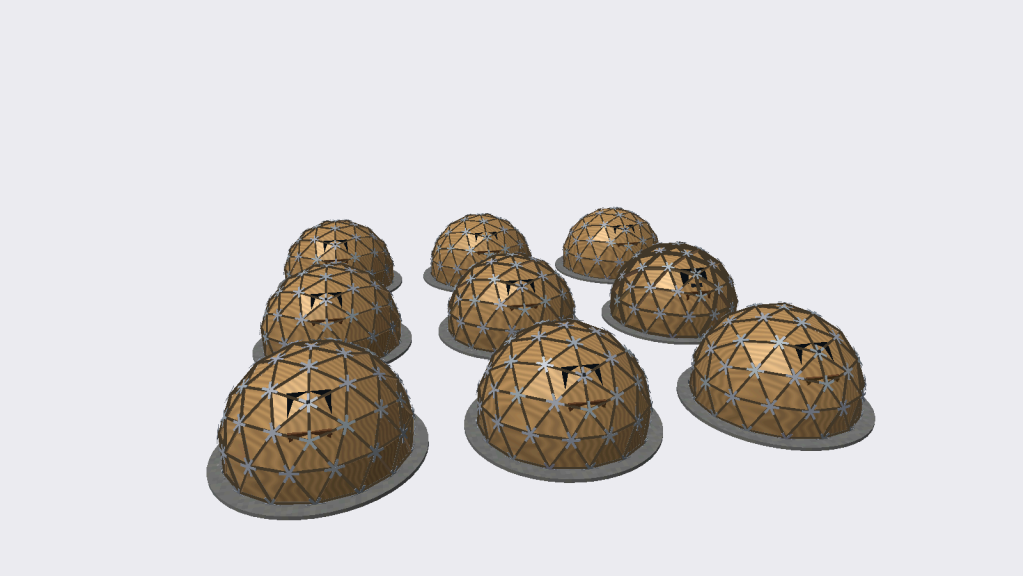

Round tube to quarter wedge, all at the same width.

Eight cross sections at the same nominal width. Read the wedge row carefully: the Creator's quarter wedge and this book's member are both split log, sized differently — one is a quarter of a log scaled to the strut's width, the other an eighth of a 12.0-inch one. Same family, different stick.

The envelope

Everything the tool can put between the struts.

Sixteen panel types, from canvas to solar, over 550 square feet. The span from cheapest to dearest is more than a hundred to one, which is why this is the decision that actually sets what your dome costs.

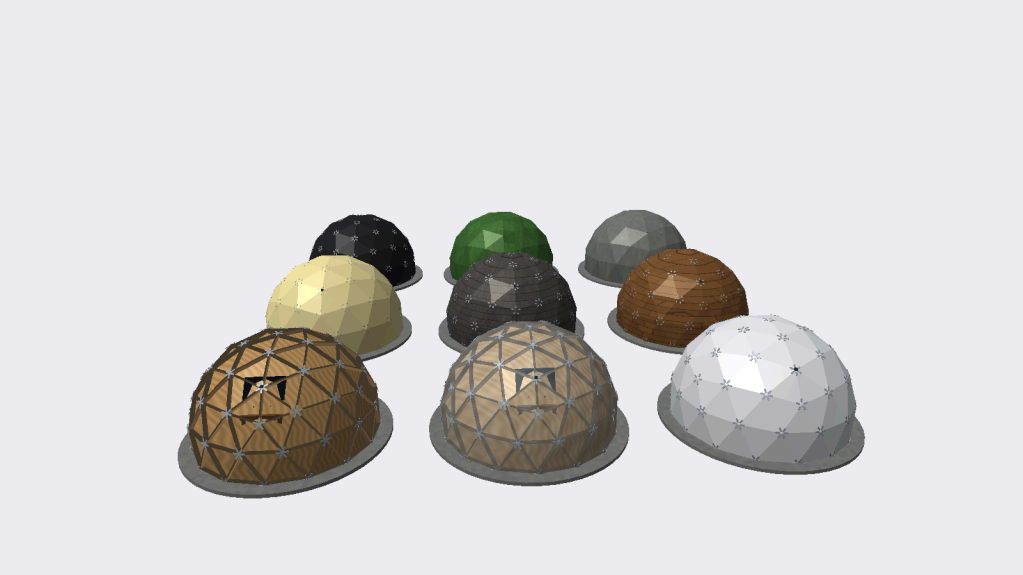

What goes over the sheathing.

Nine claddings. A green roof is twenty-four times the weight of house wrap, and the frame has to carry whichever one you pick.

What is deliberately missing

There is no straw-bale row and no earthbag row.

Not because they are bad — because this project cannot cost one, and a table with a plausible number in it that came from nowhere is worse than a table with a gap.

The same applies to anything else you find missing. If it is not here, it is because nothing in this repository models it, and the honest thing is to say so rather than to estimate.

The four you cannot change later

Everything above can be decided after the dome is standing. Four things cannot, and they are worth a page of their own in the back:

- which way the wedge's point faces
- how many sectors the log splits into
- how big the tree was
- which way the triangle pinwheels

Each of those changes the frame itself, and each has a figure in this book showing what it does to the seam. Chapter 10 is where they are argued; the tables at the back are where they are priced.

CHAPTER 26

Hubs, or No Hubs

The trade this whole method is an answer to, counted across twelve designs rather than argued

This is the decision every dome builder makes, usually without noticing they have made it, and this entire method is one answer to it.

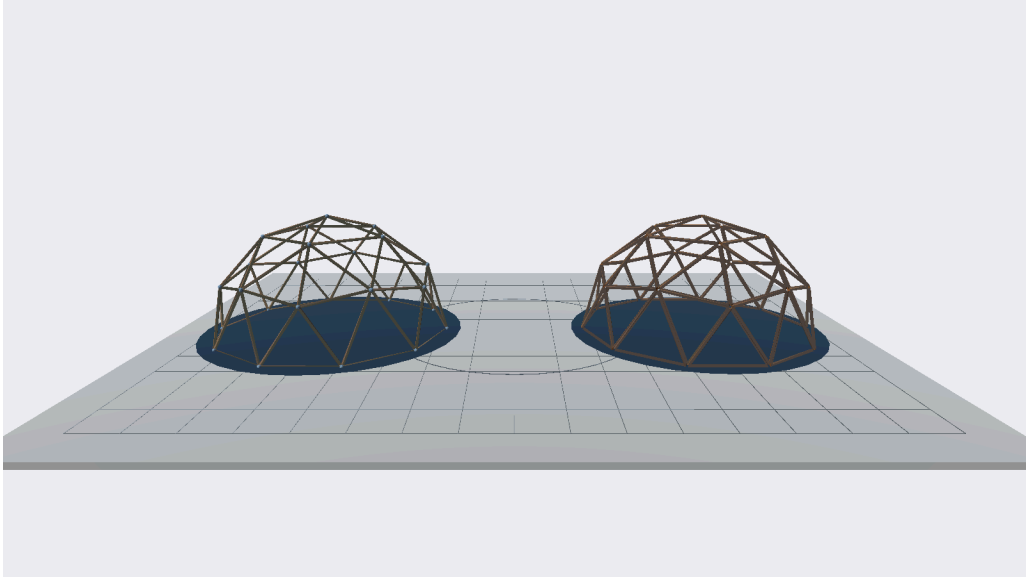

Hubs, or no hubs.

The two ways

Hubbed. Every edge of the geodesic mesh is one strut. Where five or six edges meet, their ends all arrive at the same point, and a connector holds them there.

- Fewest members: 65 struts rather than 120.
- Least timber, by a long way.
- But the hub is now the whole engineering problem. It has to hold five or six sticks at five or six different angles, in three dimensions, and it has to do it 26 times.

Hubless. Every panel is a closed triangle of its own three members, and panels meet panels rather than sticks meeting sticks.

- Nearly twice the timber — 120 members for 65 edges.
- But there is no connector to design, buy, machine or get wrong.
- And a panel is a *thing*: it can be built flat, checked flat, sheathed and lifted as a finished unit.

Why the hub is worse than it looks

The strut count makes hubbed framing look obviously cheaper, and on a materials list it is.

The hub's cost is not on the materials list. It is:

- **Design.** Angles that are specific to the frequency, the vertex type and the strut section.
- **Fabrication.** Either bought, which is expensive per unit, or made, which needs a machine most people do not have.
- **Tolerance.** The one place in a triangulated frame where error *does* accumulate — five sticks whose ends all want the same cubic inch, and if they are each a little long the hub cannot close.
- **Time at height.** A hubbed dome goes up stick by stick, up a ladder, with somebody holding things.

Chapter 1 argued that a dome forgives error. That is true of the shell and untrue of the hub, and the hub is the place a hubbed dome's precision requirement lives.

What the duplicated timber buys

Everything in Chapter 14.

The extra members are what make a panel a closed object. A closed object can be made on a bench at waist height, in a shed, in February, by one person, and checked before it goes anywhere. Then the site work is lifting 40 finished things into place instead of assembling 65 sticks in the air.

Timber is the cheapest thing in this method — Chapter 27 prices it against seven alternatives and it wins by a factor of several. Buying more of the cheapest input to remove the most expensive process is a good trade, and it is more or less the only trade this book makes.

The cheapest wall is the one you never build

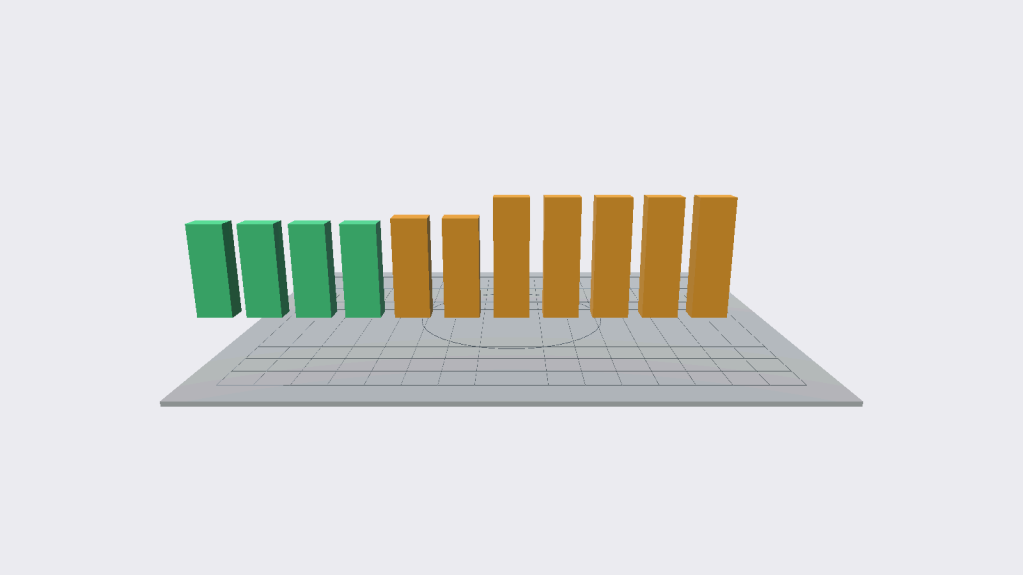

Envelope per floor, measured.

One more argument from the same family, and it is about the shape rather than the joint.

A dome encloses a given floor area with less envelope than a box does. Less envelope is less material, less cladding, less insulation, less surface losing heat, and less area for water to find a way through.

That saving is permanent and it compounds with everything else: a smaller envelope means the skin of Chapter 2 — which is the part this book says matters most and costs most — is smaller too.

It is measured rather than asserted, across the whole catalogue, in the figure above.

When to take the hub anyway

Be fair to the other side.

If you are working in steel or aluminium, the hub is a bracket and a bolt and none of the above applies — the machine that makes it is a drill press. If you are buying a kit, somebody else has solved the hub and you are paying for it once. If the dome is very large, the timber duplication stops being cheap.

The hubless argument is strongest exactly where this book is: **timber, split rather than sawn, one person, no shop.** Outside that, it is a real trade with two defensible sides.

CHAPTER 27

Twelve Buildings, One Tool

Every finish, floor division and fit-out the Dome Creator will put on a shell, priced against each other

The previous chapter priced the frame and the envelope. This one is everything else the Dome Creator will put on a shell — and the point of it is that all twelve of these are the same program, so the comparison between them is real rather than rhetorical.

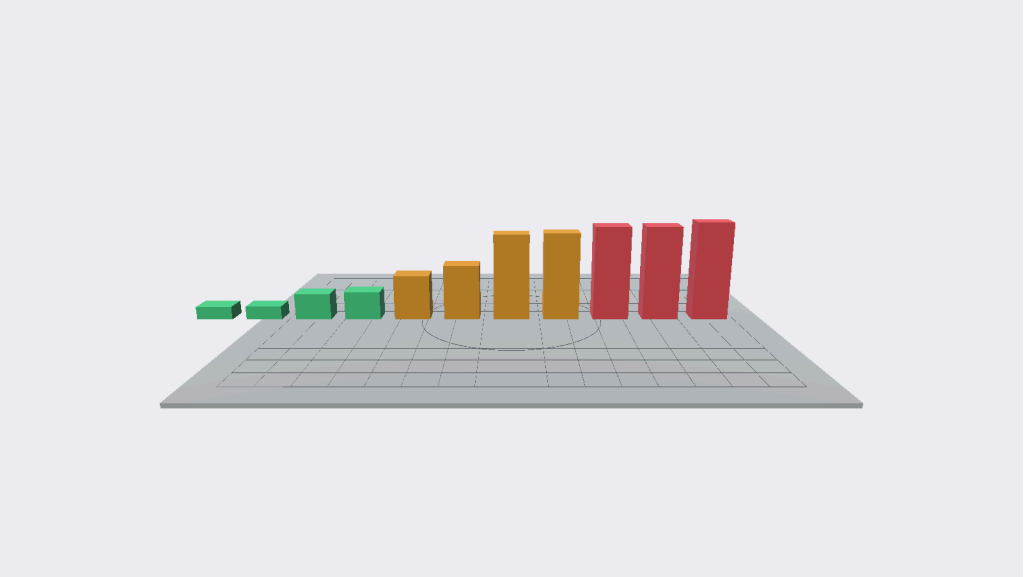

Every design in the catalogue, priced.

What the catalogue contains

Twelve finished buildings, from a timber workshop to a concrete monocoque, a glass studio loft, a rebar garden dome, a treehouse canopy and a steel arc hangar.

They are not illustrations of an idea. Each one is a configuration of the same four dials — frequency, frame material, strut section, panel type — plus cladding, foundation and finish, and each one comes with its own bill of materials.

Set the dials differently and you get a thirteenth.

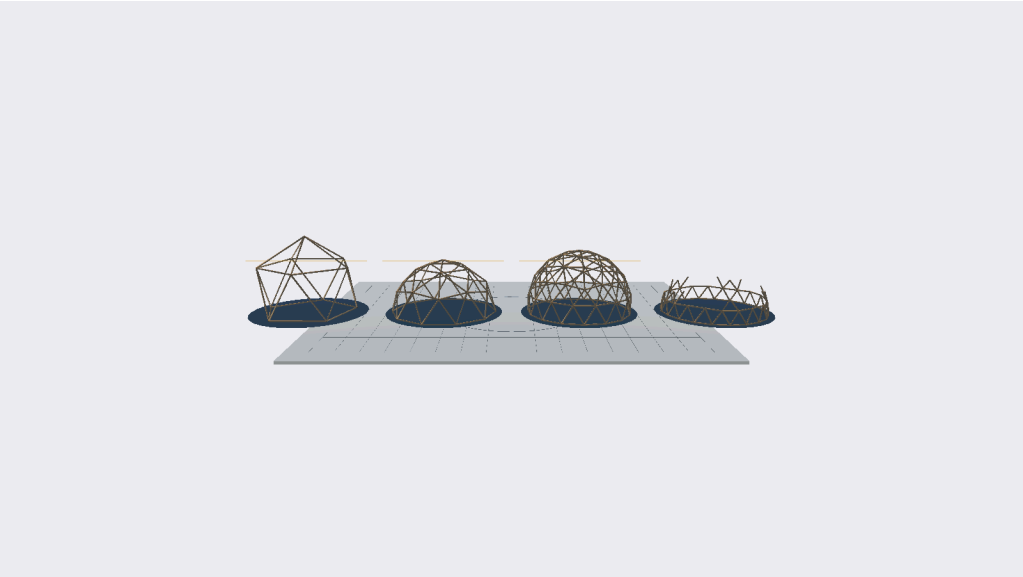

Frequency, and where the dome gets cut.

The catalogue is a set of saved positions, not a product range.

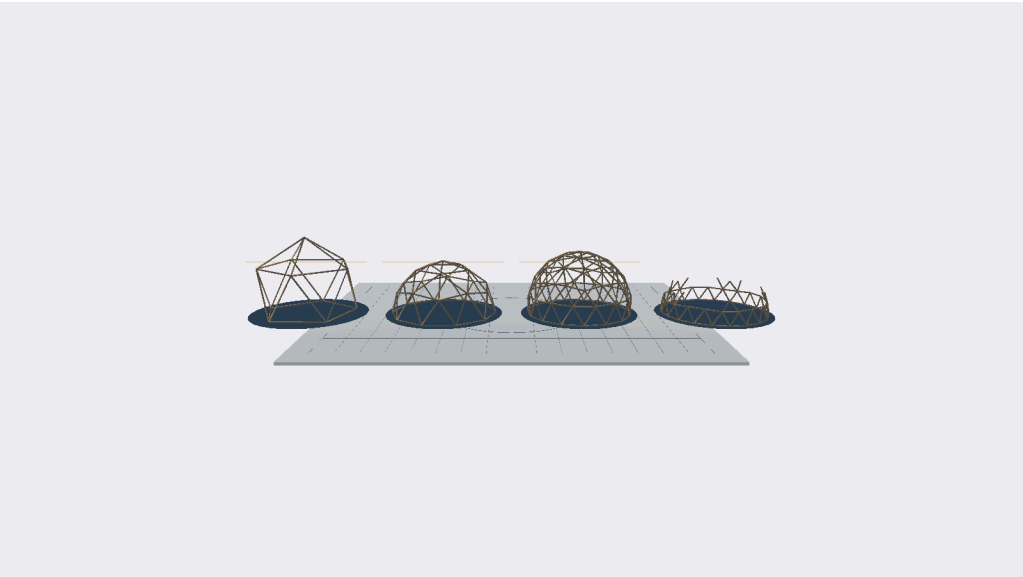

What frequency actually costs.

The decisions nobody prices

Three of them, and they change how a dome *lives* rather than how it stands.

Sixteen finishes.

Finish. Sixteen of them over the same shell. Cheap to change, and the only decision in this entire book that is purely aesthetic — which is worth saying, because almost every other choice here has a number attached and this one honestly does not.

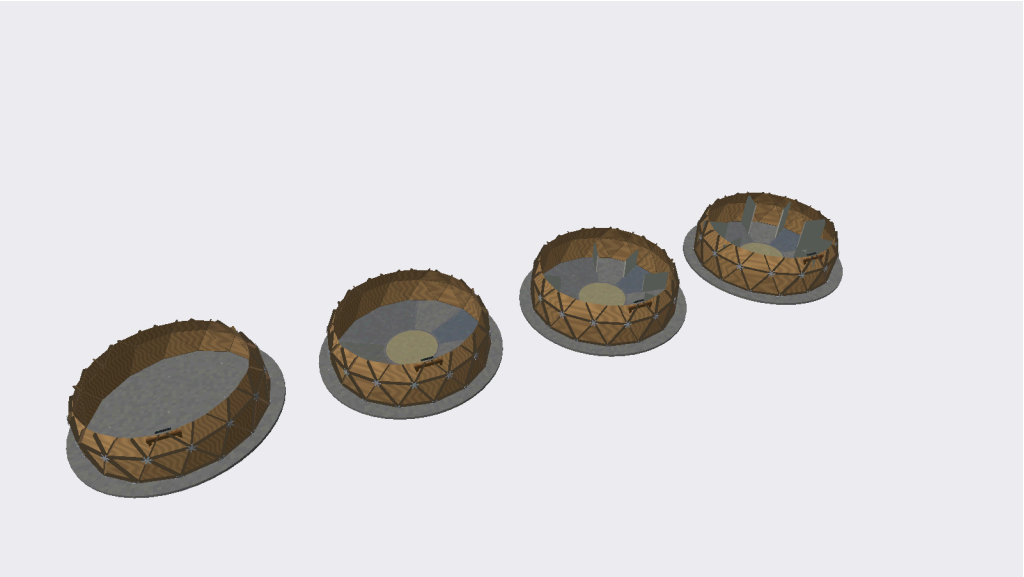

Four ways to divide a round floor.

Floor division. This is the question everybody asks second, right after “does it leak”, and it is the one round buildings are genuinely worse at.

A round floor does not take rectangular rooms. The four divisions the tool offers — radial, a central core, a chord wall, and open — are four answers to that, and the honest summary is that a dome wants **one big room and a periphery**, and fighting that produces awkward rooms with curved outside walls.

The periphery is also where headroom runs out. Chapter 8's 277 square feet of floor is not 277 square feet of usable room, and a knee wall is the cheapest fix there is.

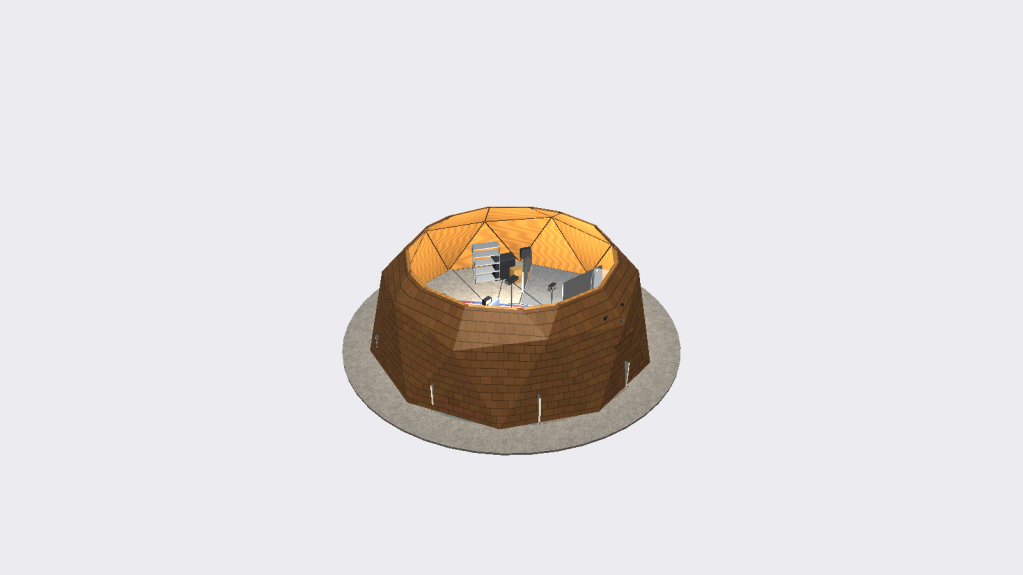

The part nobody films.

Fit-out. Benches, storage, services, the things that make it a workshop rather than a shell. It is most of the cost of a finished building and none of the glamour, which is why it is in the tool and not in the photographs.

How to use this chapter

Do not read it. Open the tool.

The tables at the back have every figure in them, but a table of sixteen panel types is a worse instrument than sixteen domes side by side with the prices on them. Chapter 33 says how to start it, and the one thing worth doing first is building the dome you were going to build before you read this book, pricing it, and then building this one.

That comparison is yours rather than mine, and it is the only one that will change your mind.

PART 10

The Stem Cell

“Buy the plumbing once. The shell is the thing that grows, and the core is the thing that moves.”

The product line: one undifferentiated body, the utility core that is thirty per cent of it and outlives it, and the fifteen buildings it becomes.

CHAPTER 28

Why We Call It a Stem Cell

One body, undifferentiated, that becomes fifteen different buildings depending on what you put in it

A stem cell is a cell that has not decided what to be yet.

It has the full machinery — a nucleus, a membrane, everything a working cell needs — and no specialisation. Put it in one place and it becomes liver. Put it somewhere else and it becomes bone. The body is the same body; the environment does the differentiating.

That is the product line in this book, and the word is not decoration.

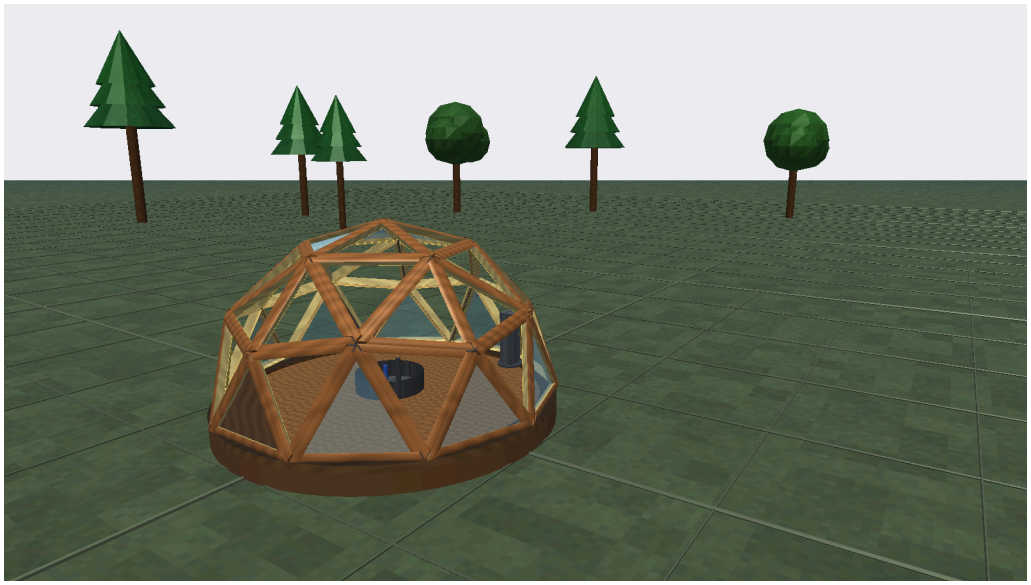

One body, many things it can become.

One body, undifferentiated

The standard article is a dome: 120 members, 40 panels, a shell, a floor, and a utility column running from the floor port to the apex. It lists at $12,036.

It is not a house. It is not a workshop. It is not a studio, a gym, a sauna or a guest room. It is the **body** of all of those, and what it becomes depends on what you put in it and what you plug into the column.

There are 15 of them in the catalogue — Chapter 30 — and every one is this same body. The frame line of the quote does not change between them. Not by a dollar.

The socket at the top

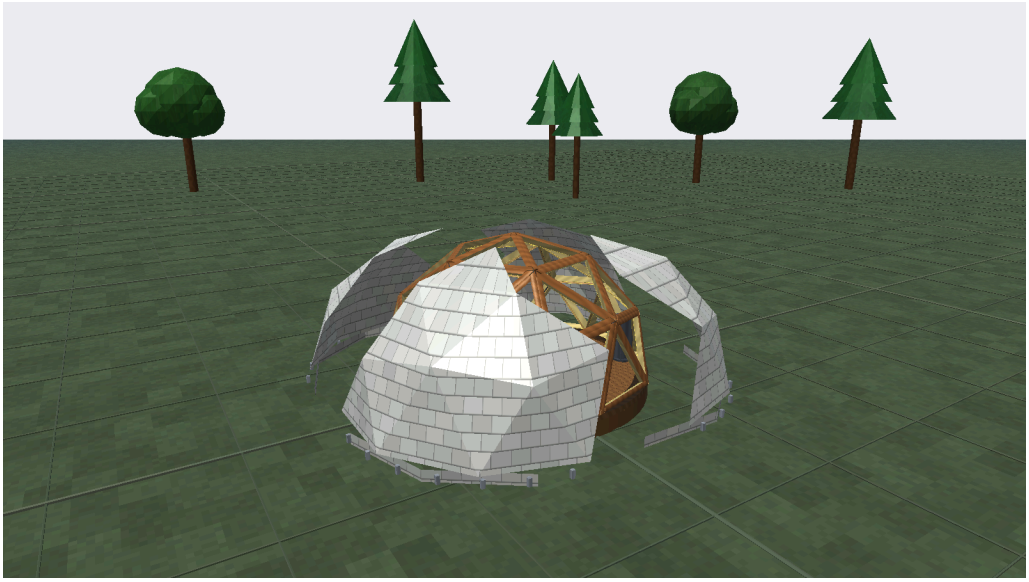

The roof comes apart too.

What makes differentiation possible is that there is exactly **one** place where things connect.

The utility column is the only object in the building that touches the ground, the wall and the sky. It carries 5 services in 14 documented parts, and it makes exactly one penetration in the weather surface — the apex sleeve, with a gasketed seal cap over it that is meant to stay shut for years and come off in ten minutes.

Everything a fit-out needs comes off that column. Power at a sub-panel inside it. Water at a four-port manifold. Drain down a stack inside the same chase. Air, eventually, through the seam channel of Chapter 12.

Nothing is plumbed into a wall. The wall is a shell that resolves loads and keeps weather out, and it has no services in it to disturb. That is what makes a fit-out a thing you do rather than a thing you commission.

And a skin that snaps on

The outside works the same way. Services that want to be outside the footprint — a water heater, a cooling unit, a shower — hang off the shell on threaded inserts rather than cutting a new hole. The design calls them polyps and the name is the same joke as the stem cell: an organism growing an appendage rather than a builder cutting an opening.

Every one of them is reversible. Take it off and there is a panel with four inserts in it.

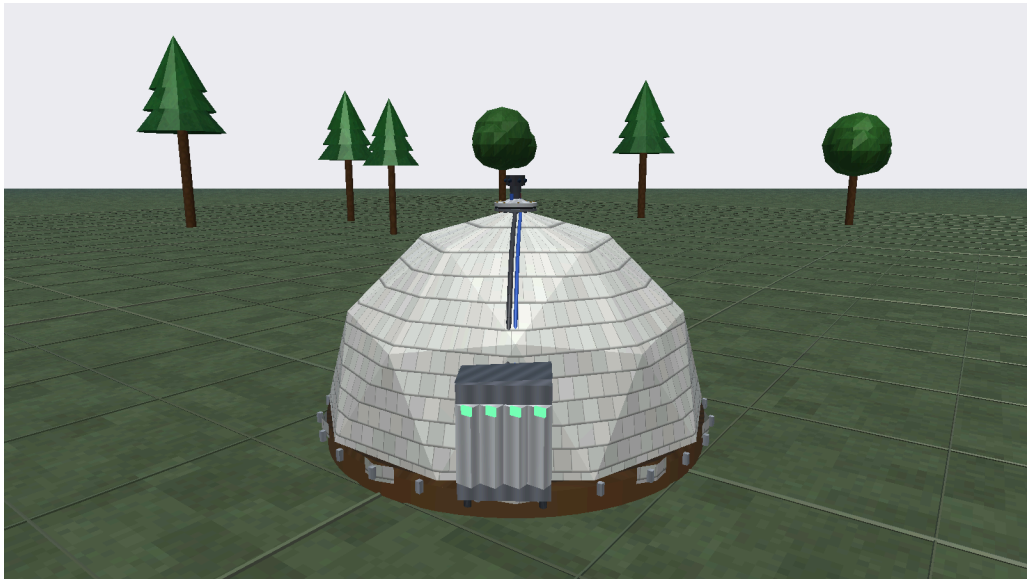

Everything else snaps onto the outside.

Why this is a different kind of product

A normal building is specialised on the day it is designed. A workshop has a workshop's floor, a workshop's power, a workshop's door. Turning it into a guest room is a renovation.

This one is specialised on the day it is **fitted**, and un-specialised by taking the fit-out out again. The most expensive parts — the frame, the shell, the column — never learn what the building is for.

That is the argument, and the next chapter is the economic consequence of it, which is the part that actually decides whether any of this is worth doing.

CHAPTER 29

Sink the Money Into the Part That Moves

The utility core is thirty per cent of the dome and the only part that transfers -- so it is the part worth overbuilding

Here is the theory, in one sentence.

Put the money in the hardware, because the hardware transfers and the shell does not.

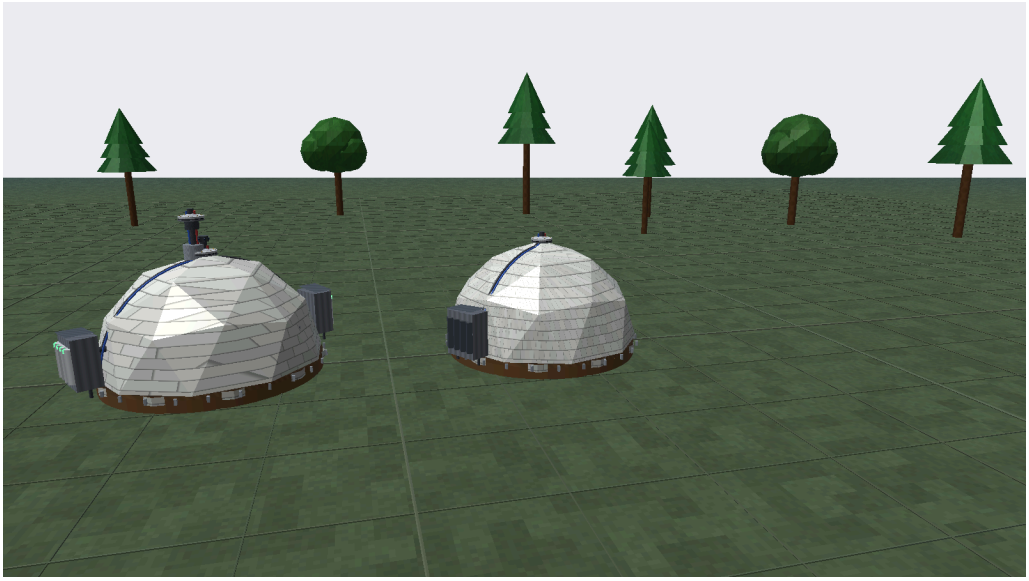

What buying it once is worth.

The two halves of a dome

Every building in this book is two things wearing one roof.

The shell — 120 members, 40 panels, the cap, the floor. It is shaped by *this* dome: its members are cut to this diameter, its panels are this geometry, its cap is this size. Move to a different dome and none of it comes with you, because none of it fits.

The core — the utility column and everything in it. A chase, a sub-panel, a manifold, a stack, a seal cap. 14 parts carrying 5 services. It is shaped by *what a small building needs*,

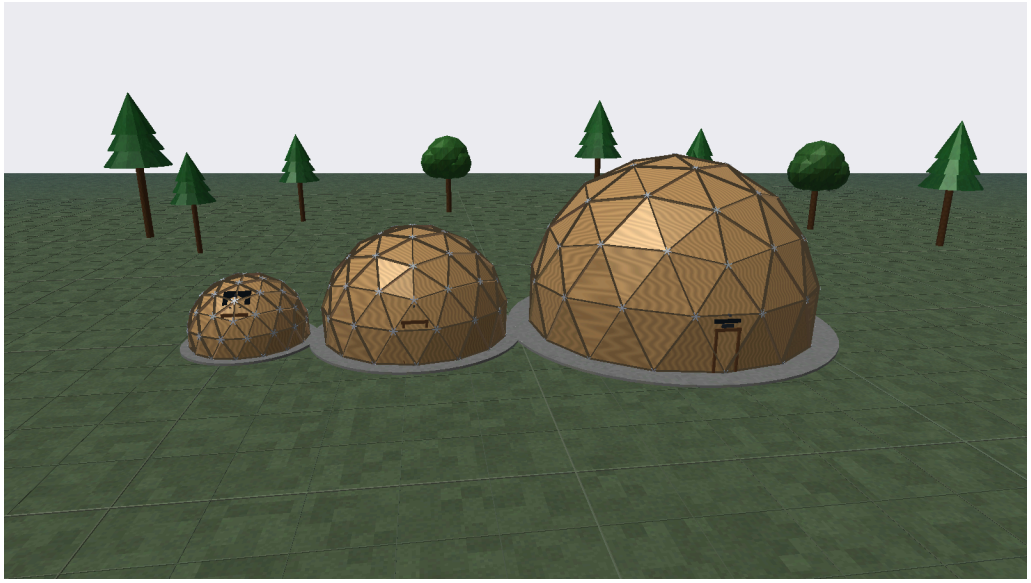

One hardware set, any size of house.

which is the same in every small building.

The shell is specific. The core is generic. And the core is **30 per cent of what the dome costs to build** — $1,890 of it.

What generic means for money

A shell is consumed by the building it is part of. When that building's life ends, so does the shell's.

A core is not. It was never shaped by this dome, so it fits the next one. Its declared service life is 25 years — not because a pipe wears out in 25 years but because at some point it is outgrown rather than worn out — and moving it to the next dome costs $260.

Two hundred and sixty dollars to move 30 per cent of a building.

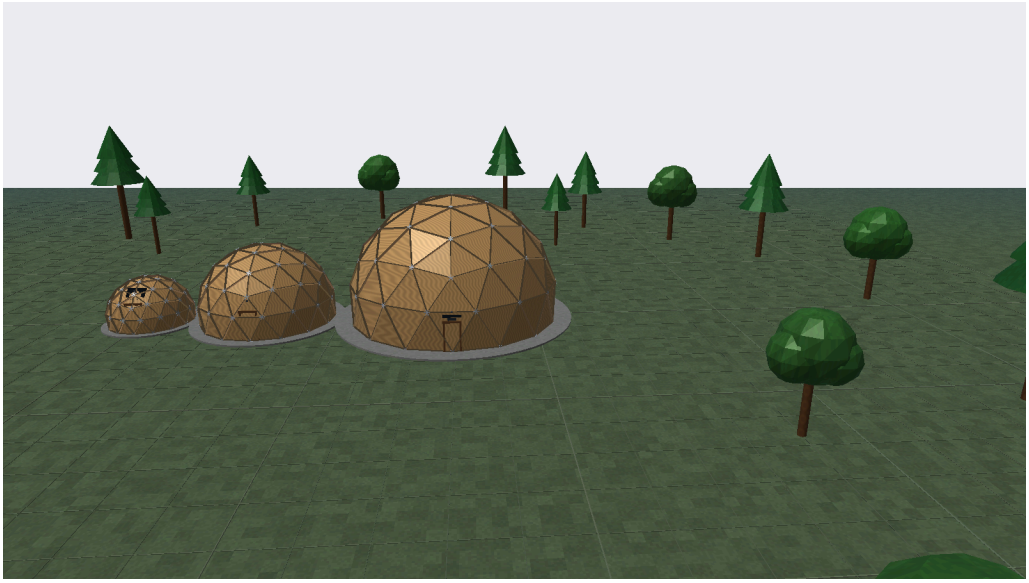

What does not move when the house does.

That is the whole theory. The expensive, fiddly, skilled, permit-adjacent third of the project gets bought **once** and then amortised across every dome you ever put it in.

Why this changes what you should overbuild

Ordinary building advice says spend where it shows and economise where it does not.

This says something different: **spend where it transfers.**

Every dollar in the shell is spent on this dome. Every dollar in the core is spent on this dome *and the next one and the one after*. So the core is the place where overbuilding is not overbuilding — it is prepayment.

Concretely, this is why the design specifies:

- a sub-panel with a **spare breaker**, so the first snap-in module does not need a panel change;
- a four-port manifold with **capped stubs**, in a dome that ships with no plumbing at all, because the alternative is opening the chase later;
- a feeder that **unplugs** — a cord and a recessed inlet rather than hard wiring, which is what makes the dome moveable without an electrician;
- a floor-port tie-in that the **host** makes once and nobody disturbs when a dome is swapped.

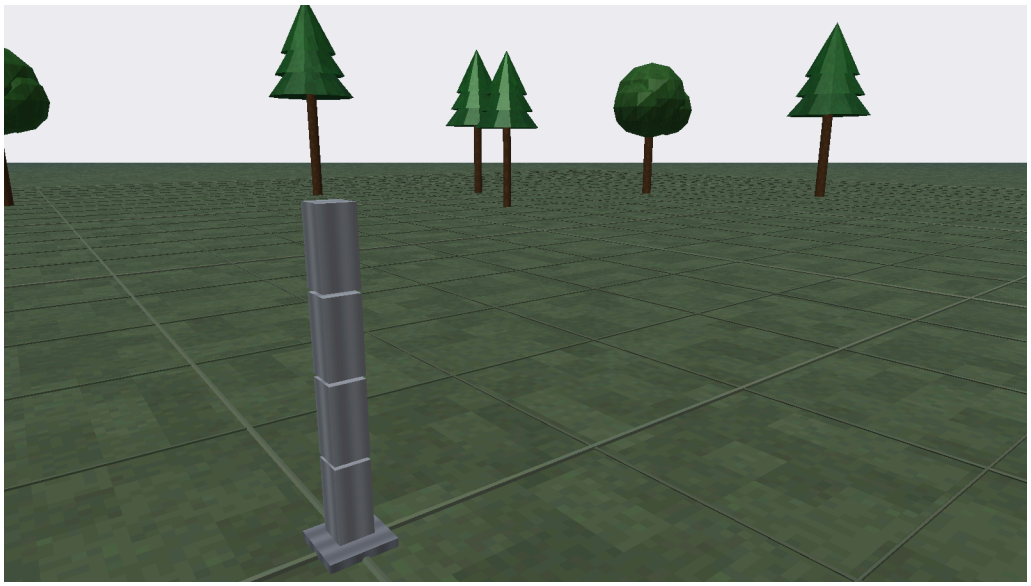

Build the chase on the bench.

Every one of those is a small extra cost now against a large avoided cost later, and each one is only worth it because the thing carrying it survives the building it was bought for.

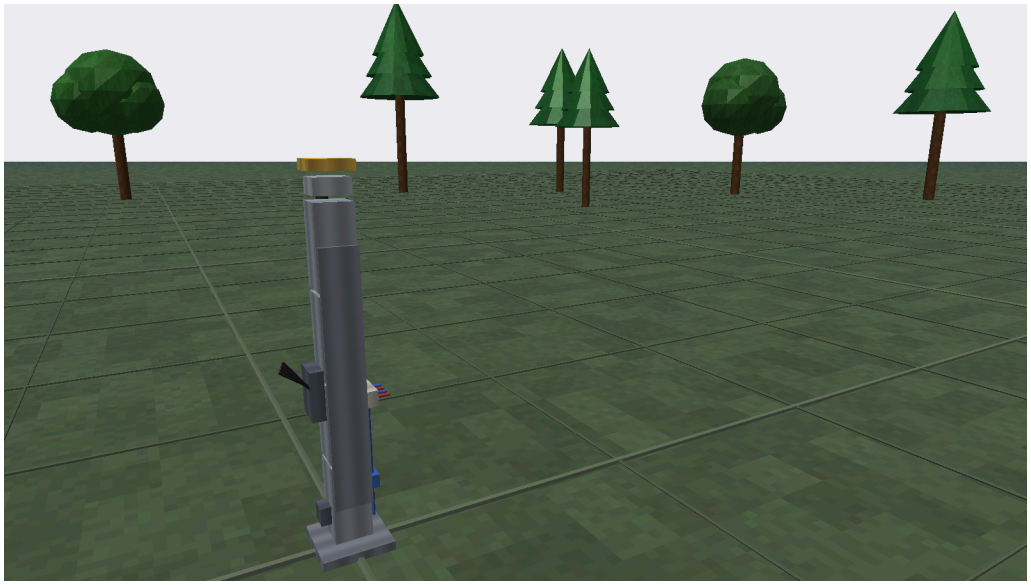

Close it, prove the cap, stand it up.

The same argument, one level up

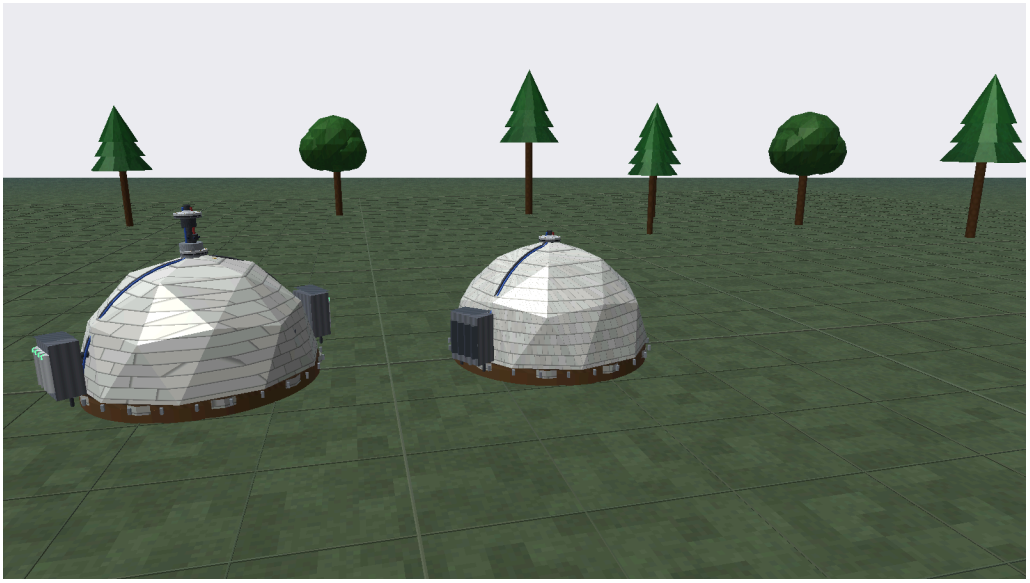

This only works as a system.

The core is to a dome what the pad of Chapter 21 is to a site and what the jig of Chapter 14 is to a panel.

In all three cases, something is built once, carefully, and then used many times without being rebuilt:

the jig	built once, makes 40 panels
the core	bought once, serves several domes
the pad	built once, hosts a succession of buildings

And in all three cases the thing being amortised is not material — it is **precision and setup**. The jig holds the angles so you do not have to. The core holds the services so an electrician does not have to come back. The pad holds the level and the connection so a foundation does not have to be poured again.

That is what “this only works as a system” means. Any one of them alone is merely a nice idea. Together they move almost all of the difficulty out of the building and into three objects that are built once.

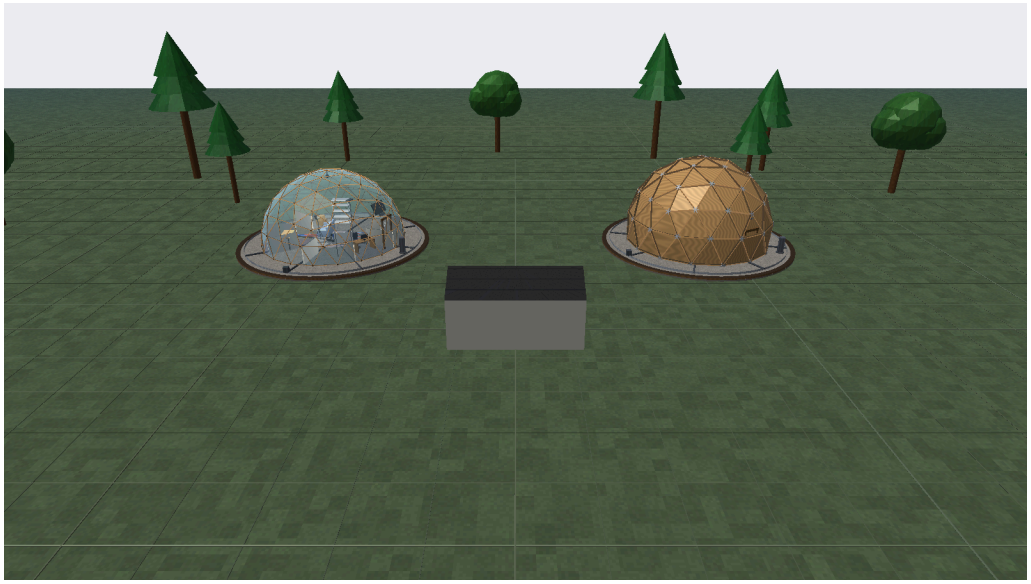

What a site can share, so the dome does not have to.

The honest objections

It raises the entry price. A dome with a proper core costs more than a dome with a light socket and a hose through the wall. The transfer argument only pays if there is a second dome, and for somebody who will only ever build one, this chapter is wrong and they should spend the money on the skin.

Transfer is not free. $260 is a declared assumption, not an invoice. It covers disconnection, handling and reconnection on a pad that already has the port. It does not cover a drive across a country.

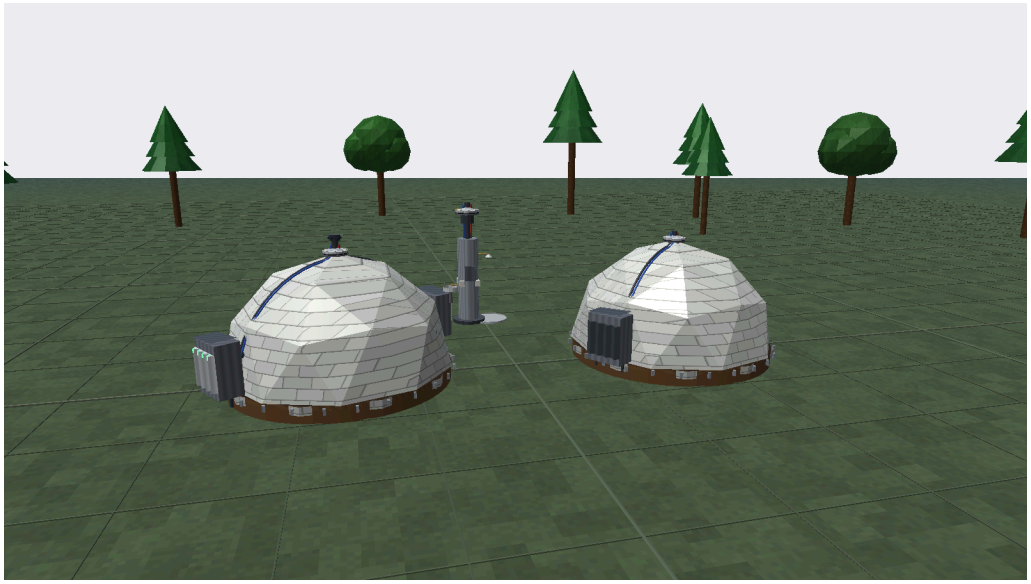

The core moves to the next dome.

Generic is a claim, not a fact. The core is generic across the 15 structures in this catalogue, which were all designed around it. Whether it is generic across somebody else's building is unproven, and the honest answer is that it is generic across this system and that is all anybody has tested.

The sentence to keep

If you are building one dome: put your money in the skin and the floor, as Chapter 2 says, and keep the core simple.

If you are building more than one: **put it in the core.** It is the only third of the project you will not have to buy again.

CHAPTER 30

Fifteen Buildings From One Body

The catalogue a homestead wants second, priced from the same frame and the same core

The catalogue a homestead wants second, and third, and fifth.

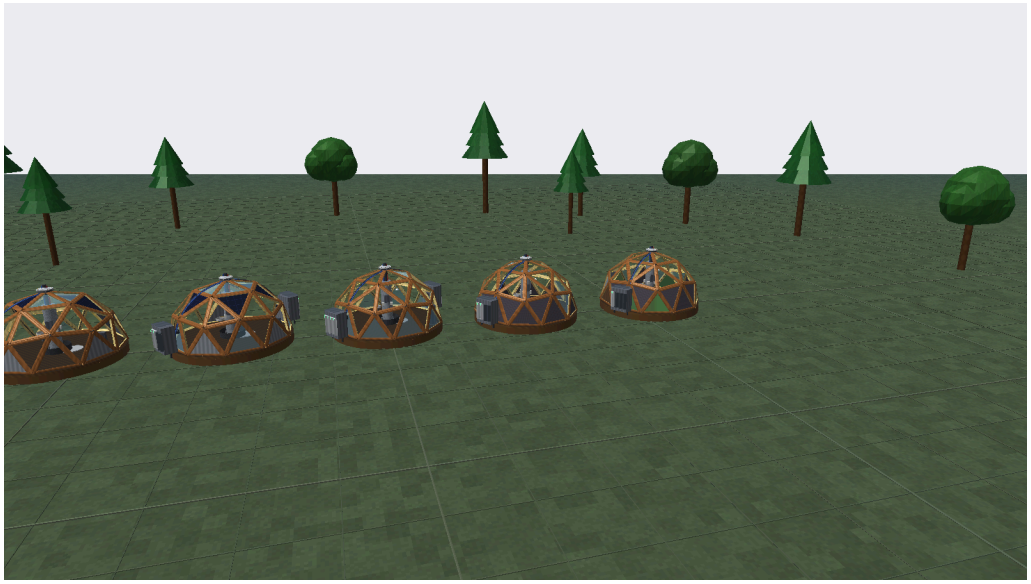

The catalogue, priced.

The list

Every one of these is the same frame, the same shell and the same utility core. What differs is the fit-out — and the fit-out is the only line in the quote that moves.

Stem cell	$	12,036
Sauna seed	$	15,726
Jacuzzi seed	$	17,383
Treehouse seed	$	17,907
Bunker seed	$	18,009
Cold storage seed	$	18,068
Nursery seed	$	18,588
Gym seed	$	20,022
Studio seed	$	20,132
Guest house seed	$	21,914
Garage seed	$	22,621
Home seed	$	22,844
Advertiser seed	$	23,181
Workshop seed	$	24,279
Food seed	$	25,511

15 structures. The bare body is the Stem cell at $12,036; the most specialised is the Food seed at $25,511.

That spread — about two to one across the whole range — is the differentiation cost. Everything below it is the body, and the body is the same body.

What the spread tells you

Water is what makes a building expensive. Sort that list and the ones with plumbing in them are at the top. A sauna, a jacuzzi and a food seed are all wet buildings, and the ones that are merely rooms are cheap.

Power is not. The core already carries a sub-panel and a spare breaker, so a building that wants more sockets wants almost nothing.

Structure is never the variable. No building on that list changes the frame. Chapter 29’s argument, made visible: the expensive parts never learn what the building is for.

The ladder

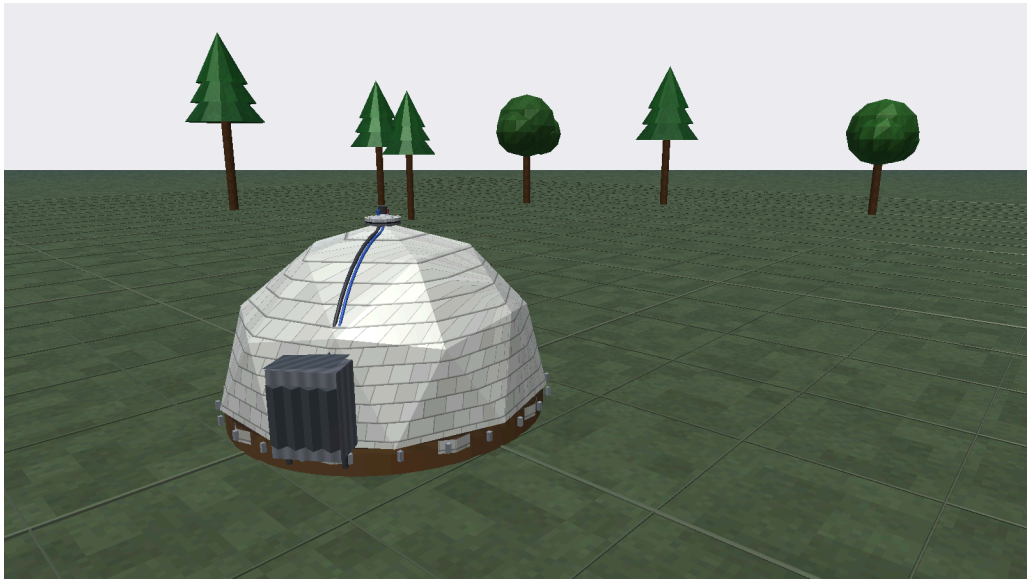

How far down the ladder goes.

Every one of these can be bought in stages, and the ladder matters more than the list does.

The rungs are, roughly: the bare body; the body with a floor; with a cap and one quilted layer; with the fit-out; with the polyps. You can stop at any rung and live there, and each one is a real building rather than a half-built one.

What makes that possible is Chapter 3 — the four features that keep the skin and the floor swappable. Without them the ladder is just a half-finished building with a tarpaulin on it.

One building, fifteen stations

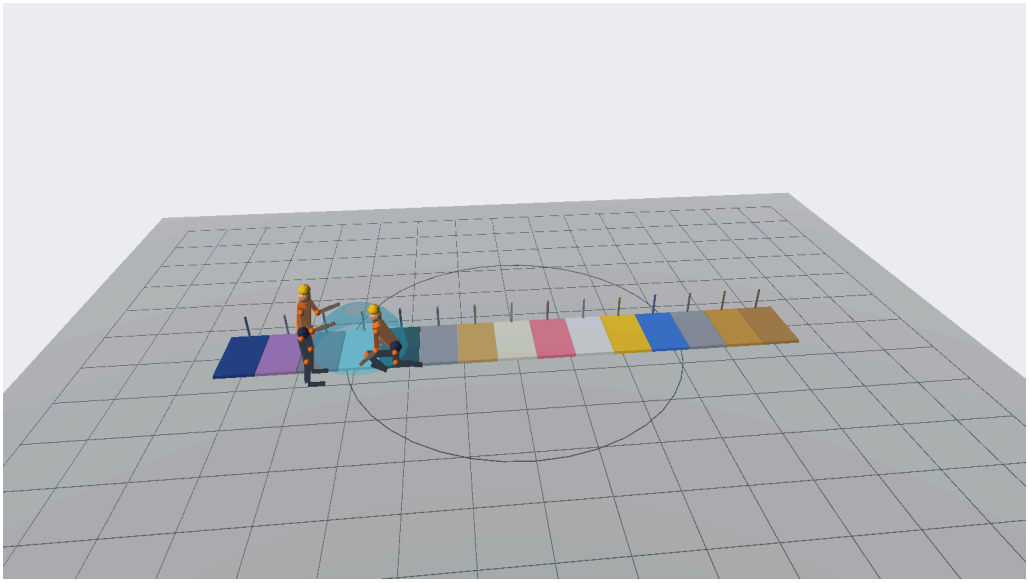

One building, fifteen stations.

There is a manufacturing view of this, and it is worth a page because it is where the argument stops being about one person with a chainsaw.

The nine processes of Chapter 13 do not change between these 15 structures. Neither does the jig, the cut list, or the core. What changes is which station a particular dome stops at on its way through.

That is a **production line**, and the thing that makes it one is not machinery — it is that the parts list and the verb list are both short and neither grows with the catalogue.

A workshop that builds one dome a month is building the same nine operations whether this month's is a sauna or a garage. That is the difference between a product line and a range of products.

What this catalogue is not

It is not a range anybody has built. The Stem cell is the one this project has solved end to end; the rest are configurations of the same model with their fit-outs costed, and they are **priced rather than proven**.

The difference matters. A food seed's price is real arithmetic over real line items. Whether a food seed is a good building — whether the ventilation is right, whether the floor drains where it should — is not something a cost model can tell you, and this book will not pretend otherwise.

Treat the list as what it is

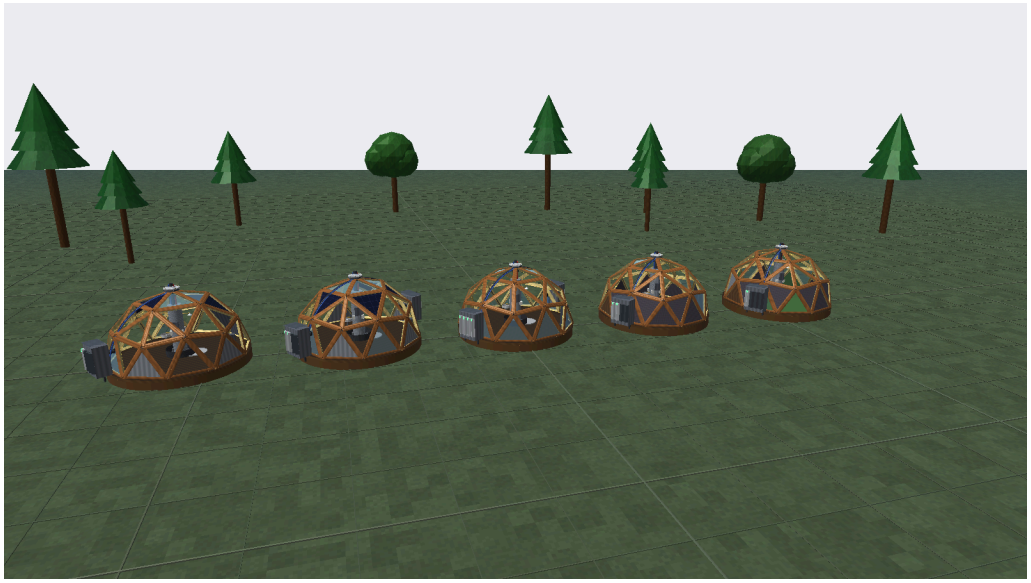

The buildings a homestead wants second.

: evidence that the body generalises, and a set of starting points rather than a set of finished designs.

PART 11

Variations

“The same frame can wear more than one roof, stand on more than one ground, and hang from nothing at all.”

The one variation that is a design possibility rather than a tested build, priced and explicitly not rated.

CHAPTER 31

Hang It Between Two Trees

The most speculative corner of the method: a mast, three cables, and no ground at all -- priced, and explicitly not rated

This is the most speculative corner of the method, and it exists because the floor of Chapter 20 clamps to a mast rather than being framed into the base ring.

Once the floor hangs off something in the middle, the ground stops being structural. And once the ground stops being structural, you can take it away.

The same mast and floor, hung on three cables to saddles on two trees.

What changes

Everything the earlier chapters assumed about the ground quietly reverses.

The base ring stops being what holds the building up; the mast is. The floor stops being something the dome stands on and becomes something the dome **carries** — clamped to the mast, hanging under the shell, level because the mast is level.

The utility column keeps its job. Services come up a flexible drop instead of a rigid rise, which is a fitting rather than a redesign.

The parts

A steel core through the utility column, timber-clad, floor to apex, with a lifting ring under the seal cap. Three galvanised cables from that ring to three saddles on two trees. A brake winch and a block.

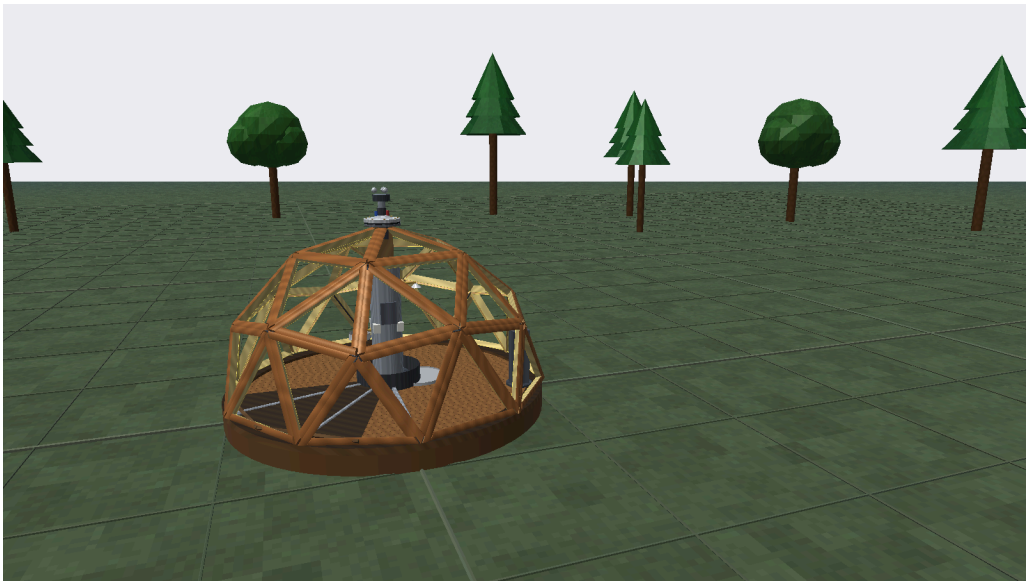

The mast through the column, and the floor that clamps to it.

The rig is $1,490. With the mast and the dome's own floor the whole upgrade is $4,011, against a frame weighing 2,478 pounds in green pine.

Saddles, not holes. Nothing is drilled into the trees. A saddle spreads the load around the trunk and comes off without leaving a wound, which matters because a tree with a bolt in it is a tree with a problem in ten years.

Why you would

Flood, mostly. Getting a floor above water is the whole reason in some places and no amount of foundation solves it.

After that: slope without earthworks, airflow underneath that keeps timber dry, and the space below, which becomes storage or shade.

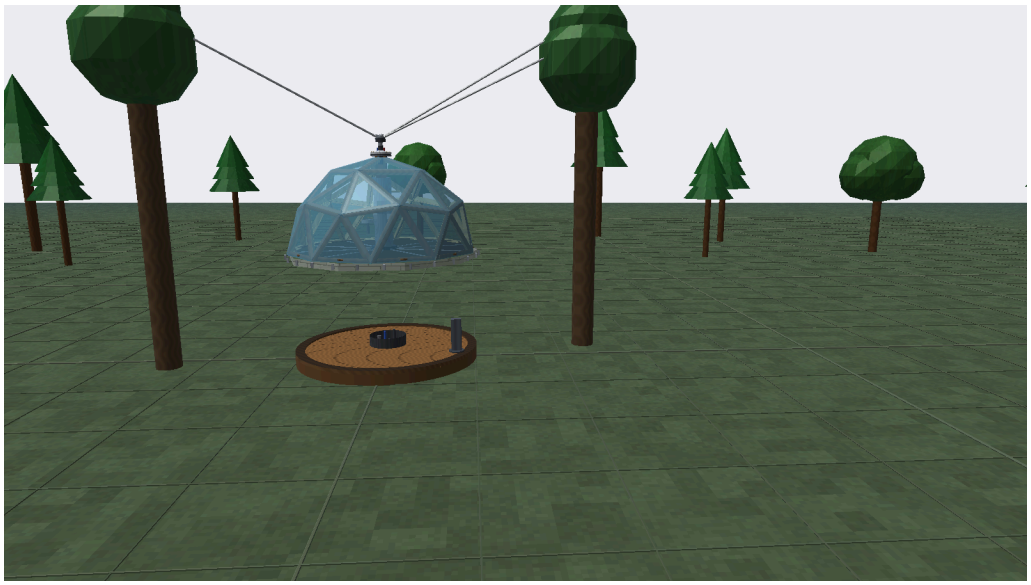

Hang it between two trees.

The sentence that has to go with it

That is a design possibility, not an engineered structure.

The loads on the trees, the cables, the saddles and the mast need an engineer before anybody stands under it. The model prices the parts; it does not rate them, and the difference between those two things is the whole of somebody's safety.

Trees are also not static. They move in wind, they grow, they shed limbs, and two of them move independently of each other. A rig that is correct on a still day in June is a rig that has not yet been tested.

Nothing in this chapter has been built. It is here because the floor design makes it possible and because a book that only prints the parts of a method that are finished is not documenting a method, it is advertising one.

PART 12

The Tools

“Every number in this book came out of a program about a second before it reached the page. Here are the programs.”

What ships with this book: the solver, the worlds, the cost model and the calculators, with what each is for and how to drive it.

CHAPTER 32

The Software That Wrote This Book

Eight three-dimensional worlds, a cost model and a solver -- what each one is for, what it can do, and how to open it

Not one figure in this book was typed into a sentence.

Every dimension, count, angle, percentage and price is a token in the manuscript that gets filled in, at the moment the book is made, by the same software that draws the three-dimensional models. When this book says the dome is 19.42 feet across, that number came out of a solver about a second before it reached the page.

That software comes with the book. 11 programs — 5 worlds you can fly around in, 4 that are arithmetic with no picture, and the desks where the book and the films are made.

Why a builder would open any of it

The short answer: **because your tree is not my tree.**

Every number in these pages is for one specific dome, cut from one specific size of log, at one split count, with one orientation. Change any of those and every downstream figure changes — the chords, the cuts, the seam key, the timber, the price. The tables at the back are a snapshot of one solve.

The tools are how you take your own.

Three kinds of thing

Worlds are three-dimensional environments with a window, a camera and keys. This is where you go to *look* at something — to turn one decision and watch what it does to the joint.

Models are arithmetic with no picture. They answer a question and print a table: what does this cost, how long is that stick, what does the platform take off to.

Desks are where you make something: this book, the films, the calculators.

What each one is for

```
WORLDS -- things you fly around in

  The raw-wedge solver
      You want to see the dome this book is about, and turn
      one decision at a time to watch what it does to the
      joint.
      start it:
        py -3.12 geodesic_raw_wedge_dome_dihedral.py
      - solves the whole 2V frame from one number: the long
        member
      - four wedge orientations, and the seam changes under
        each
      - two seam keys, three things to put in the channel
      - explodes the panels apart without moving the geometry,
        so you can see into a seam
      - switches off the wireframe, the node markers, the
        debug lines and the sacrificial head stock -- which is
        what turns a screenshot into an illustration
      - exports a full-size panel drawing as SVG, to print and
        lay a stick on
      - carries the cost console, so the price is over the
        geometry rather than in another program
      keys: W A S D walk   mouse look   E explode the panels
            apart   I the mathematical wireframe on and off
            H the head-end stock on and off   J the
            fabrication jig   C the cost console

  The fabrication jig
      You are about to build the fixture and you want to see
      it assembled, one step at a time, before you cut the
      board.
      start it:
        py -3.12 geodesic_raw_wedge_dome_dihedral.py   (then J)
      - twelve steps from a bare bench to a finished panel
      - each step says what it is enforcing, not just what it
        is
      - the red and green fences that make a rotated stick not
        fit
      - the two cut planes: the flush-cut fence and the
        receiving face
      - the sacrificial tail drawn separately from the
        finished member
      - camera stations at each corner, because the corner is
        where the method either makes sense or does not
      keys: J show the jig   [ ] step through the twelve   V
            walk the camera round the corners   P which panel
            the jig is set for

  The Dome Creator
      You want a dome that is not this one: a different
      frequency, a different material, glass instead of ply, a
      different foundation -- and the price for each.
      start it:
        py -3.12 dome_creator.py
      - frequency 1V to 4V, and the truncation
```

```
      - eight frame materials, from bamboo to structural steel
      - eight strut cross sections including the quarter wedge
      - sixteen panel types: ply, glass, acrylic, twinwall,
        SIP, shingle, metal, solar, canvas, mirror, precast
      - nine cladding layers over the panels
      - seven foundations
      - a bill of materials for whatever you just built
      keys: F frequency   M frame material   P cycle the panel
            under the cursor   L cladding layers   G
            foundation   B print the bill of materials

  The seed world
      You want to see the product version: the utility column,
      the shower cap, the quilted layers and the mast, on the
      dome this book prices.
      start it:
        py -3.12 -m two_v_demo.app --lesson seed_pitch
      - the utility column and the gasketed cap at the apex
      - the shower cap, and the hats that stack under it
      - the mast through the column and the floor clamped to
        it
      - the floating rig: three cables to saddles on two trees
      - the composite member, drawn at an exaggerated section
        and labelled as exaggerated
      keys: 1-9 the chapters of the campaign film   mouse
            orbit   wheel zoom

  The pad and the park
      You are thinking about the ground: what a pad is, what
      it costs, and what a network of them looks like.
      start it:
        py -3.12 -m two_v_demo.app --lesson dome_park
      - a pad built one course at a time
      - amber for what the host owns, cyan for what the tenant
        owns
      - several domes on several pads, and the shared services
        between them
      - the rotating pad, which is a design possibility and is
        marked as one
      keys: mouse orbit   1-9 the chapters of the park film

MODELS -- arithmetic, no picture

  The geometry
      You want the numbers: chords, cuts, angles, areas,
      counts -- for your dome, not for this one.
      start it:
        py -3.12 -m wedge_book.numbers
      - two chords and two cut lengths at any diameter
      - the bite the pinwheel takes, which does not scale
      - face areas, seam runs, member volumes, timber totals
      - the whole builder's reference, regenerated

  The cost model
      You want to know what one costs, line by line, with
      every assumption named and changeable.
      start it:
        py -3.12 -m seed_model
```

```
      - every line carries its own source constant
      - materials, labour, overhead and warranty kept apart
      - the maker's markup stated as markup on cost, not
        margin on price, because those are different numbers
      - the pad priced separately, because it is the host's
        bill
      - fit-outs, shells and resins swapped without editing
        anything

  The platform take-off
      You are pricing the ground and you want boards and piers
      counted rather than a rate per square foot.
      start it:
        py -3.12 -m pad_deck
      - five constructions: gravel, slab, ring, deck, deck
        with ply
      - counted line by line, not rated
      - sized to the dome plus a walking margin

  The shell model
      You are deciding what to put over the frame, and you
      want the R-value and the price of each layer.
      start it:
        py -3.12 -m soft_shell
      - one watertight cap, and the quilted layers under it
      - each hat a size up from the one beneath
      - against a laminated hull, priced four ways
      - the concerns it will not hide, printed with the answer

DESKS -- where you make something

  The book studio
      You want to change this book: its outline, its prose,
      its figures, or the dome it is written about.
      start it:
        py -3.12 -m wedge_book.build
      - the outline is code, so reordering is an edit and not
        a rewrite
      - every number is a token resolved at build time
      - an audit that fails the build if a figure in the prose
        is one the code cannot produce
      - the pictures render from the solver and from the films

  The film exporter
      Thirty-seven narrated films are built from the same
      geometry, and you can re-render any of them with your
      own numbers in it.
      start it:
        py -3.12 -m two_v_demo.app --lesson wedge
      - one lesson is one Python module: chapters, narration,
        scenes
      - landscape and phone cuts from one render
      - captions, chapter thumbnails and description copy as a
        set
      - a still from any second of any film
```

The one that matters most

If you open exactly one thing, open the solver, and press the key that explodes the panels apart.

Everything difficult about this method is in the gap between two panels — the key, the angle, why the point faces inward, where the error goes. It is invisible in an assembled dome and obvious the moment you can see into a seam, and no drawing in this book, including the section in Chapter 12, teaches it as quickly as turning it in your hands for a minute.

How the numbers get from there to here

Worth stating once, because it is the unusual part.

The manuscript is Markdown with holes in it. A sentence that needs a figure names the number it wants – `dome.diameter_ft` in double braces – rather than printing one. At build time a resolver fills every one of them from the solver, the geometry and the cost model, and an **unknown token is a hard error** — the book refuses to build rather than printing a blank.

The reason is not showing off. A number typed into a paragraph is correct on the day it is typed and silently wrong from the first time anybody changes anything. Nothing fails. The book just quietly becomes untrue in places nobody remembers.

So the arithmetic in this book is a test suite. It runs, it checks itself against the geometry, and it fails loudly.

It caught four things

This is not theoretical. An audit reads the finished prose and checks every figure in it — every number carrying three or more decimals, and every dollar figure — against what the code can actually produce. It found:

- a set of reference designs that **scaled the pinwheel's bite with the dome**, which is the exact error Chapter 11 spends a page warning about. Every stick of the smallest dome was an inch too long;
- a triangle altitude printed as 52.520 where the solve says 52.516 — in the sentence that tells a reader whether plywood fits;
- four prices from before the shell lost a waterproof layer, still being quoted as current;
- a chapter quoting the cost of a whole upgrade as the cost of two of its three parts, double-counting the third.

Every one of those was written by somebody being careful. That is the point: care is not a method for keeping numbers true across time

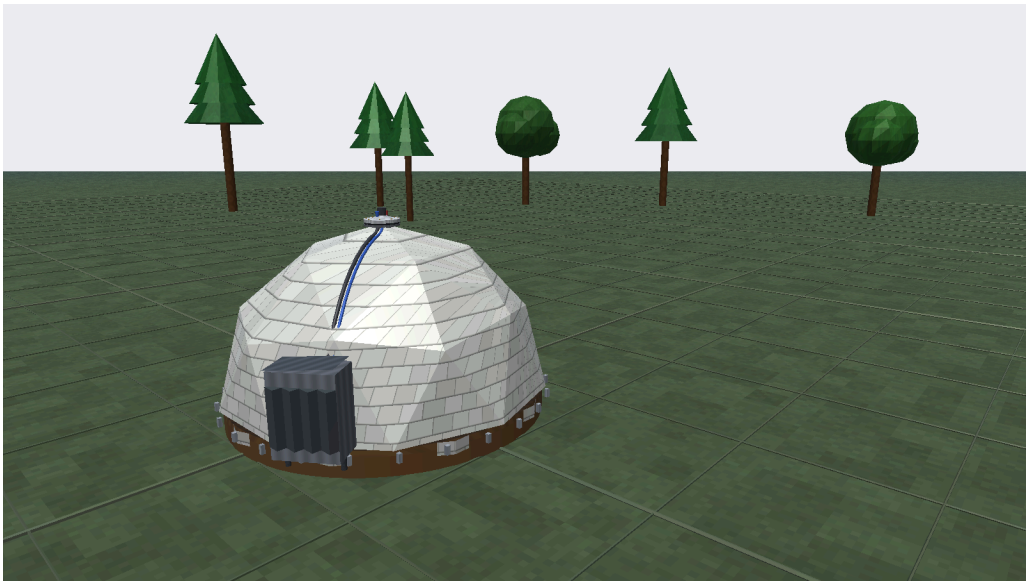

What one costs, line by line.

, and a program that re-checks them on every build is.

Change the tree and rebuild

The whole of it — geometry, prices, figures, this book — regenerates from one set of inputs.

Change the trunk diameter to what you actually felled. Change the split count to what your saw and your log will give you. Rebuild. Every chapter that mentions a figure now says your figure, without anybody going looking, and the pictures are redrawn from your solve.

That is what “the software comes with the book” means here. It is not a companion download. It is the thing the book is a printout of.

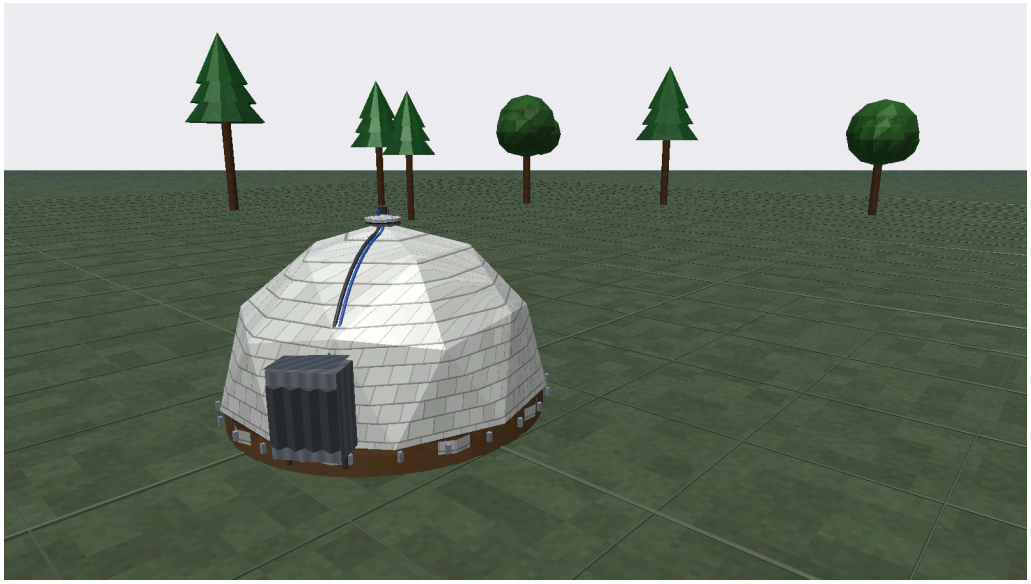

Three things this says against itself.

CHAPTER 33

What Each World Shows You

One picture from every three-dimensional environment in the project, with what it is for and what to do in it

One picture from every three-dimensional environment that ships with this book, what it is for, and what to do once you are in it.

The raw-wedge solver

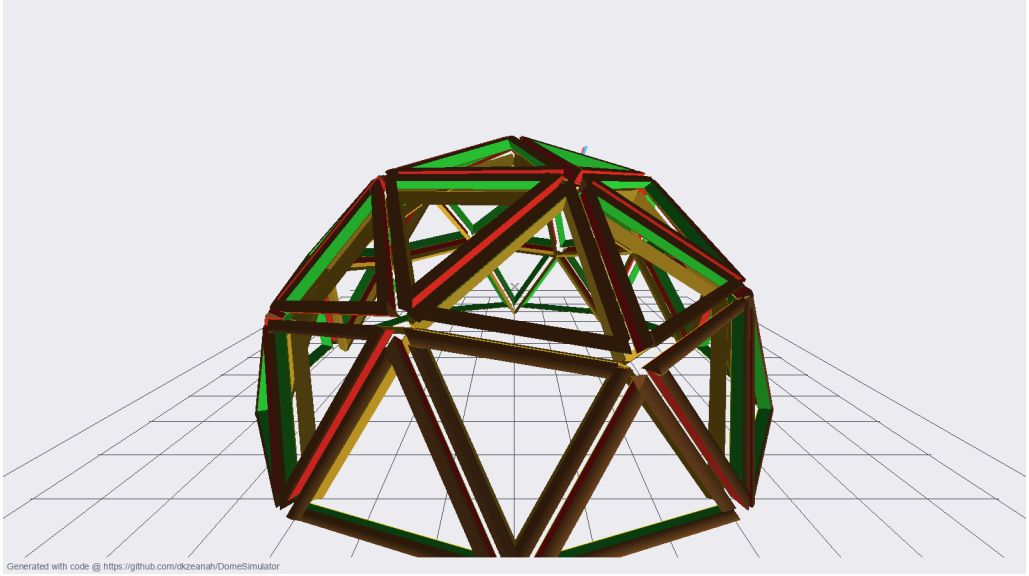

The reference build, opened eight inches.

What it is. The dome this whole book is about, solved from one number: the long member. 120 members, 40 panels, 55 seams, every angle derived.

What to do in it. Press the explode key. The panels slide apart along their own face normals — nothing in the geometry moves, it is the same solve drawn with a gap — and for the first time you can see into a seam and watch the key sitting in it.

Then turn one decision at a time. Change the wedge orientation and watch the key's size change. Change the split count from 8 to twelve and watch the seam channel shrink to something that will not take a hose.

What it is not. It has no doorway, no foundation and no utility column, and it builds 2V hemispheres only. Those live in the other worlds.

The fabrication jig

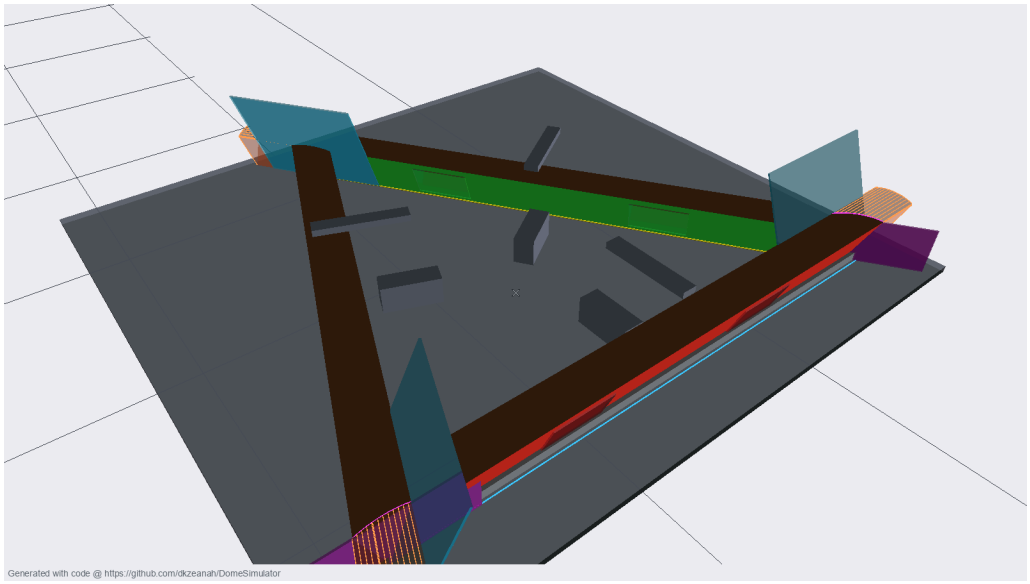

A panel closed on the jig.

What it is. The fixture of Chapter 14, in twelve steps, each one saying what it *enforces* rather than just what it is.

What to do in it. Step through all twelve before you cut a board. The corner stations are the ones worth flying to — the corner is where this method either makes sense or does not, and seeing the butt land on a radial face rather than on an end is the moment it clicks.

Then set it for the other panel family and step through again. The fixture does not change. That is the claim, and you can check it.

The Dome Creator

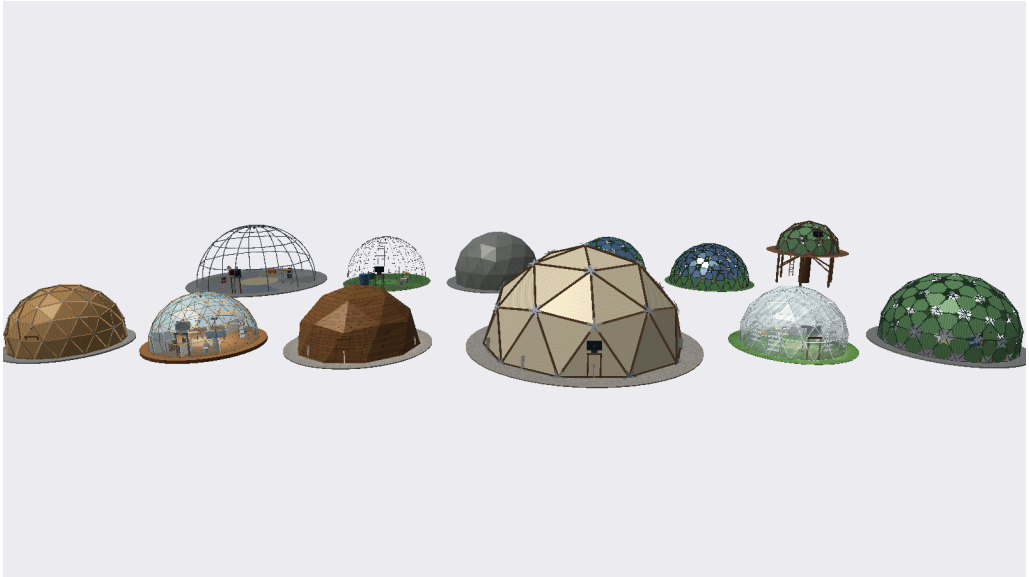

Twelve designs, drawn by the tool that builds them.

What it is. Every dome this project can describe that is *not* this one. Frequencies 1V to 4V, eight frame materials, eight strut sections, sixteen panel types, nine claddings, seven foundations — and a bill of materials for whatever you just assembled.

What to do in it. Build the dome you were going to build before you read this book, price it, then build this one and compare. That comparison is more persuasive than any argument in these pages, and it is yours rather than mine.

The seed world

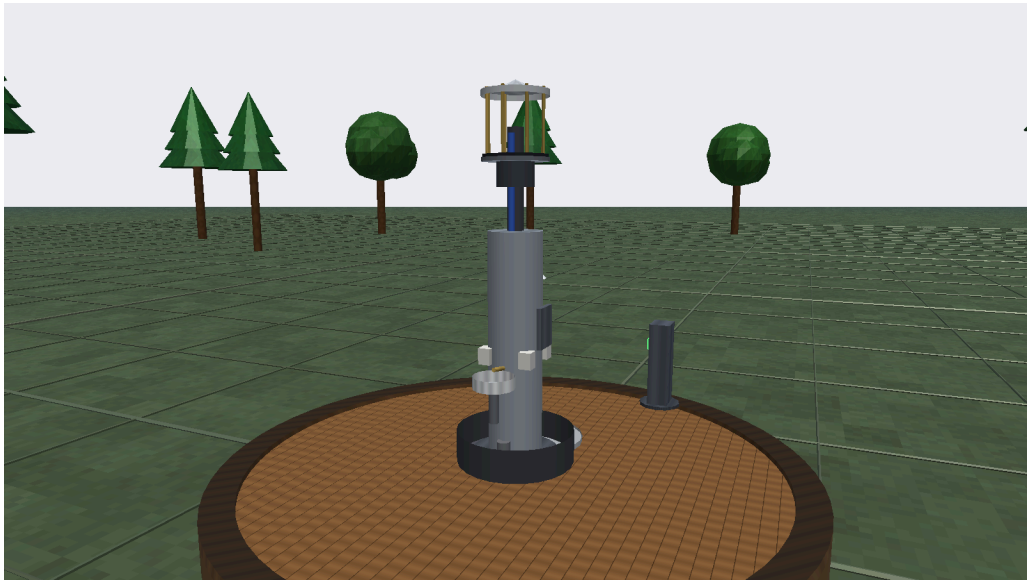

Power and water up the middle and out through the apex.

What it is. The product version: the utility column, the gasketed cap at the apex, the shower cap, the quilted layers, the mast and the floor.

What to do in it. Look at the column. It is the one object that touches the ground, the wall and the sky, and almost every decision in Part 5 and Part 7 of this book is downstream of it existing.

Then add layers to the shell and watch the cap grow. Chapter 19 is arithmetic on a page; here it is a thing changing size.

The pad and the park

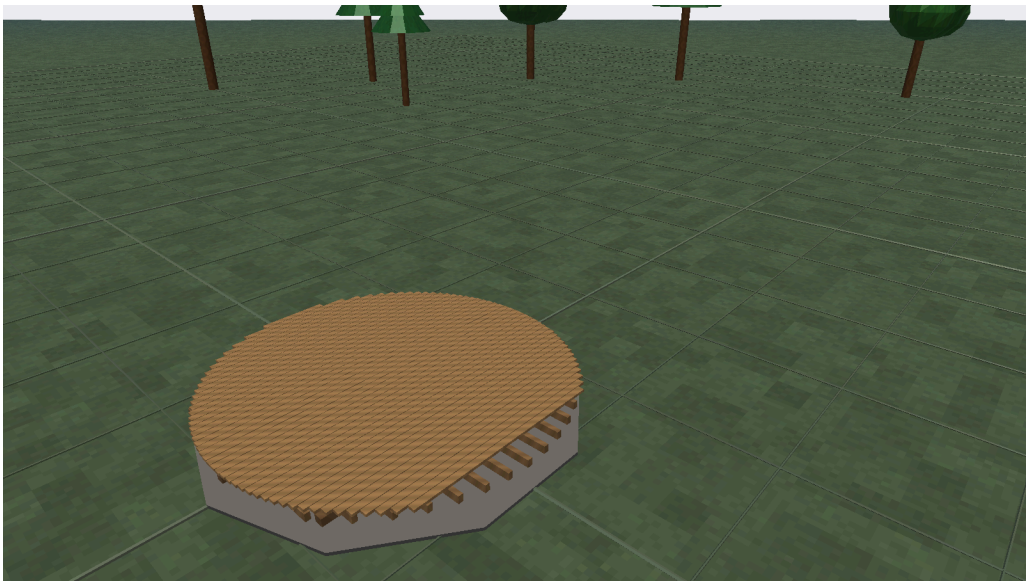

The platform, built one course at a time.

What it is. The ground of Chapter 21: a pad built course by course, and a network of them with the shared services between.

What to do in it. Watch the colours. Amber is what the host owns, cyan is what the tenant owns, and the clean split of Chapter 22 is something you can see rather than something you have to be told.

The cost console

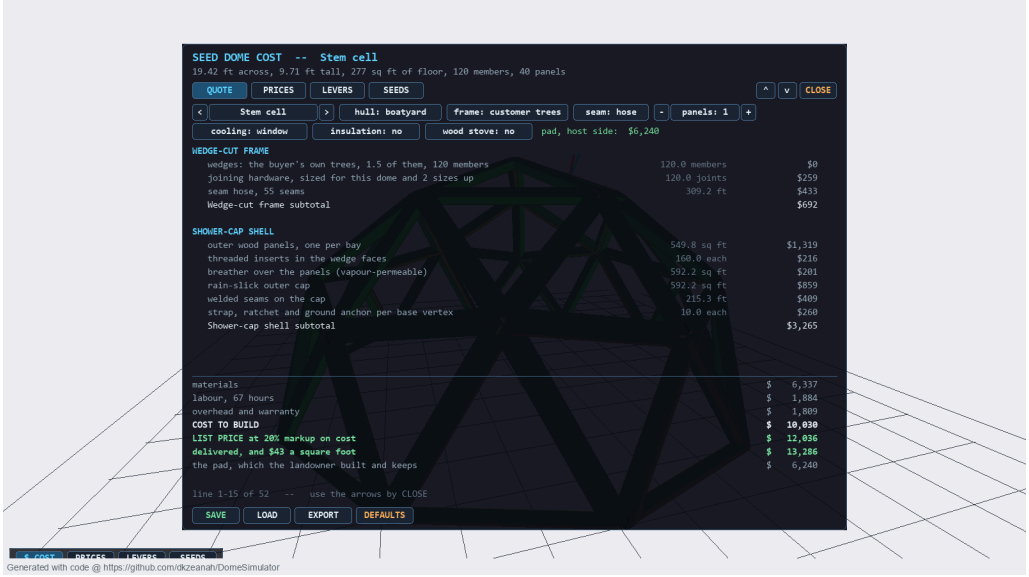

The geometry and the price in one program.

What it is. The cost model, open over the solved dome. Every line carries its own source constant, and changing an assumption moves every figure downstream of it immediately.

What to do in it. Find a price you disagree with — there will be one — and change it. The whole quote re-derives. That is the right way to argue with this book: not by doubting the total but by editing the input you think is wrong and seeing what it was worth.

The number to look at first. $12,036 for the standard article, built to $10,030, at $43.45 a square foot of floor. The maker's markup is stated as a markup on cost rather than a margin on price, because those are different numbers and the one a reader can check with a calculator is the first.

Where to start

If you have an afternoon: the solver, exploded, then the jig's twelve steps.

If you have a tree: the cost console, with your own trunk diameter typed into it.

If you have ground: the park.

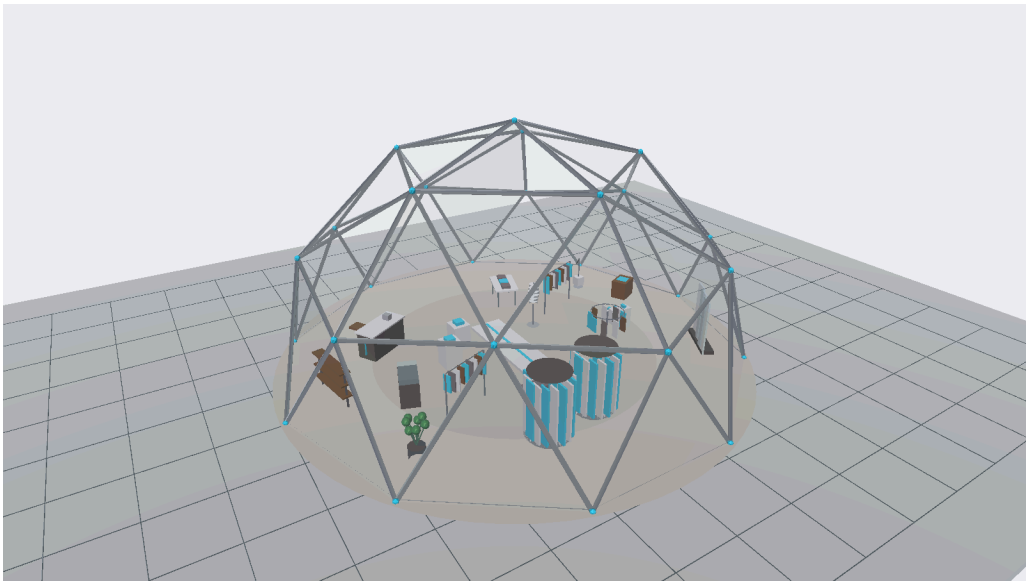

The same shell, furnished.

CHAPTER 34

Every Part, Priced

The column, the pad, the hardware, the power bench and the water bench -- the whole bill, with a source on every line

Six bills. Every line carries the constant it came from, so any of them can be argued with by editing one number rather than by doubting the total.

What is separate from what, and why

The dome is $12,036, and it is priced in Chapter 29 and the chapters around it. Nothing on this page changes it.

The pad is the host's bill, not the buyer's — Chapter 21. It is here because somebody has to build it and because a book that prices only half of an arrangement is not pricing the arrangement.

Everything else on this page is an upgrade. A dome works without the seam module, without the solar bench and without the water bench; it sits on a pad's pedestal and drinks from the pad's stub. These are what you fit when you want it to work with nothing plugged into it.

Added up, the systems on this page come to $20,409.

The utility column, complete

Including the steel, which is the part most bills leave out.

column housing, insulated chase	12.0 ft	$6.00	$72
steel core, service port to apex	12.0 ft	$18.00	$215
base flange onto the service port	1.0 each	$95.00	$95
apex sleeve and gasketed seal cap	1.0 each	$240.00	$240
apex lifting ring	1.0 each	$260.00	$260
floor hub that clamps the mast	1.0 each	$310.00	$310
radial steel floor spokes	10.0 each	$34.00	$340
sub-panel, breakers and outlets	1.0 each	$310.00	$310
water manifold and rise	1.0 each	$240.00	$240
drain stack and floor-port tie	1.0 each	$165.00	$165
Utility column, complete			**$2,247**

Two lines there are doing more than they look.

The steel core runs the full height, floor port to apex ring, and it is what the floor clamps to and what the lifting rig hangs from — Chapter 31. It is a pipe. It is also the single component that makes a floating dome possible, and it costs $622 in a $12,036 building.

The radial floor spokes are the 10 steel arms from the hub out to the base ring. They are what make the floor a component rather than framing, which is Chapter 3's third feature.

The power bench

solar array	800.0 W	$0.95	$760
MPPT charge controller	1.0 each	$195.00	$195
battery bank, LiFePO4	10.0 kWh	$410.00	$4,100
DC energy meter and shunt	1.0 each	$62.00	$62
Power bench			**$5,117**

A 8-way split log frame does not need electricity, but the condensing plates and the barrier fan of Chapter 18 do, and so does everybody who lives anywhere.

The array is sized at 800 W and the bank at 10 kWh, which is the owner's stated arrangement rather than a calculation from a load list. The metering is in the bill deliberately: a system you cannot read is a system you cannot size next time.

The water bench

under-floor tank	120.0 gal	$1.35	$162
first-flush diverter	1.0 each	$68.00	$68
three-stage filter	1.0 each	$210.00	$210
inline UV lamp	1.0 each	$165.00	$165
on-demand pump and accumulator	1.0 each	$145.00	$145
pulse-output water meter	1.0 each	$78.00	$78
Water bench			**$828**

This is what turns 309 feet of seam gutter into something you can drink.

The first-flush diverter is the cheapest item and the one that matters most. It throws away the first gallons off a dry roof — the ones carrying whatever has landed on the cap since the last rain — and it is the difference between roof water and drinking water.

The UV lamp is the other one. A filter makes water clear; a lamp makes it safe. Neither does the other's job.

Joining hardware, stainless

A2 stainless bolt, nut, two washers	440.0 sets	$0.92	$405
threaded insert in a sawn face	880.0 each	$0.74	$651
flat V bracket, four holes a flap	120.0 each	$5.80	$696
Joining hardware, stainless			**$1,752**

Edge to edge, into threaded inserts rather than into end grain — Chapter 3.

Stainless throughout is not a luxury here. Chapter 20 notes that wet timber and plain steel together are a battery; on a frame whose whole argument is that it lasts decades and gets taken apart, a corroded fastener is the one failure that turns a demountable building into a permanent one.

The V bracket

The flat V bracket is the connector this method settled on: two flaps meeting at the panel's angle, **4 holes in each flap**, folded from stainless on a bench brake.

The flaps run out to as much as **half the member's length** — 35.1 inches on a long member — which puts about 8.8 inches between holes. That spacing is the point of the thing. Screws clustered at the end of a stick are all working the same short grain; spread along it, each one is into fresh wood, and the joint stops depending on any single fixing.

At $5.80 each, 120 of them is not the expensive part of anything.

The pad’s own materials

compacted gravel base over fabric	369.2 sq ft	$1.20	$443
deck boards, 2x6 laid flat	902.2 ln ft of 2x6	$1.17	$1,053
joists at 16 in centres	310.1 ln ft of 2x6	$1.17	$362
beams, doubled 2x6	179.3 ln ft of 2x6	$1.17	$209
precast piers	20.0 each	$12.00	$240
hangers, structural and deck screws	369.2 sq ft	$0.55	$203
two coats of penetrating sealer	369.2 sq ft	$1.10	$406
Pad materials (framed deck on piers, sealed)			**$2,916**

The host’s bill, counted board by board rather than rated per square foot — which is why it can be checked against a merchant’s quote.

What this page does not include

Labour, which is Chapter 29’s territory and is 67 hours on the standard article.

Tools. A chainsaw, a circular saw, a drill and a bench brake, none of which are consumed by one dome.

And freight, permits, and the ground itself, all of which are local and none of which this book can know.

Glossary

2V
Two-frequency. Each face of an icosahedron is divided in two along every edge, giving the dome in this book: two strut lengths and two triangle shapes.

apex
The top point of the dome, where the crown star's spokes meet. The only opening in the weather surface is here, closed by the seal cap.

base ring
The ten-sided ring of members the dome stands on, resting on the rim of the pad.

breather
A vapour-permeable sheet over the panels. It sheds water that gets past the cap and lets moisture out, which a plastic sheet would not.

chord
The straight line between two points on a curve. A wedge's flat face is a chord sawn across the bark side of its slice of log.

dihedral angle
The angle between two neighbouring flat faces where they meet along a seam. It is shallow on a dome, which is why the seam leaves a channel.

equilateral
A triangle with three equal sides. Ten of the forty faces are equilateral; the other thirty are the star triangles.

face
One flat triangle of the dome's surface, bounded by its own three wedges and closed by one panel. The stem cell has forty.

geodesic dome
A dome made of flat triangles arranged on a sphere, so that every piece of the frame is short, straight and carries its load along its length.

hemisphere
Exactly half a sphere. The stem cell is a 2V hemisphere, twice as wide as it is tall.

hub
A metal connector where struts meet in most dome kits. This method has none: the wedges meet each other directly.

icosahedron
The twenty-sided solid a geodesic dome is built from. Its twelve corners become the only places where five members meet.

junction
A point in the frame where members meet: five-way at a star's centre, six-way elsewhere, four-way on the base ring.

member
One straight structural piece of the frame. Here every member is a split wedge.

pad
The serviced platform a dome stands on, built once by the host with one service port at its centre. It stays when a dome leaves.

panel
The flat triangle that closes a face, fixed to the outside face of its three wedges. Swapping panels changes what the building is.

pentagon
A five-sided figure. Around each five-way junction the star's outer edges form one.

pinwheel
The way a face's three wedges meet at its corners: each end butts against the side of the next, turning one way round the point, so nothing is cut to a point.

radial split
A split along a radius of the log, from the heart of the log to the bark, like cutting a pie. Eight of them make eight wedges.

rip cut
A chainsaw cut along the length of the log. Each log section becomes eight wedges by rip cuts through its heart, along the radius.

seal cap
The gasketed lid over the apex opening, held by over-centre catches. Services leave the building under it.

seam
The line where two neighbouring faces meet. Their two wedges lie back to back along it.

seam channel
The V-shaped groove two back-to-back wedges leave along a seam. It runs to every junction and carries cables, air and water.

service port
The single opening in the pad's deck through which power, water and drain come up to the utility column.

shell
The weather surface over the frame and panels. In this book the outermost layer, the cap, is the only watertight one.

stem cell
The standard dome in this book: bare frame, panels, shell, utility column and seal cap, before anything decides what it will be.

utility column
The upright chase at the centre of the dome that carries power, water and drain from the pad's port up to the apex.

utility panel
A small cabinet outside the dome's footprint for noisy, hot or weather-facing equipment, fed from under the seal cap.

wedge
A member split from a round log like a slice of pie: triangular in section, its flat face outward and its point -- the heart of the log -- toward the centre of the dome.

zome
A dome-like building swept from a spiral rather than subdivided from a sphere.

About the Author

Donovan Zeanah

I joined the U.S. Navy as an undesignated sailor and went on to serve six years as a Mass Communication Specialist, three of them living in Japan. Along the way I learned to program computers and was certified as an avionics bench technician, troubleshooting and repairing electronics. I am now in school on the G.I. Bill, working toward my A&P certificate — and, beyond it, a future as an aerospace engineer.

To me, a dome is the physical embodiment of the spirit of coding a home. It is modular and reusable. Its interfaces are decoupled, so one part can change without disturbing the rest. It is flexible, hyper-personalized, and built as a framework meant to be extended rather than a finished product. DomeSim, the open-source software this book was computed with, is that idea written as code; this book is the same idea in timber.

This is my passion, and my aim is to change the housing market for the better.

The whole project — the solver, the films and the source of this book — is open at github.com/dkzeanah/DomeSimulator, and every number in these pages can be traced back to the line of code that produced it.

Instagram @DonovanZeanah · TikTok @shortcircuitr5 · Facebook facebook.com/zeanah · GitHub github.com/dkzeanah

Index

2V, 14, 24, 31, 36, 46, 155, 162
apex, 14, 32, 34, 57, 76, 78, 164, 169
base ring, 18, 31, 33, 57, 72–73, 76, 97
breather, 57, 81
chord, 27–29, 31–32, 46–47, 156
dihedral angle, 53, 84
equilateral, 33, 69, 77
face, 11, 23–24, 42–43, 52, 66, 113
geodesic dome, 10, 24, 33–34, 46, 113, 115, 120
hemisphere, 31–32, 113
hub, 52, 97, 113, 116, 126–128, 169
icosahedron, 21, 23–24, 26
junction, 10, 26, 31, 33, 46, 52, 55, 68
member, 35, 46–47, 54–55, 62, 126–127
pad, 99, 101, 107–109, 141, 156, 168
panel, 51, 54, 57, 60, 72, 77–78, 119
pentagon, 117–120
pinwheel, 12, 30, 47, 52, 55, 113, 115–116
radial split, 26–27, 32, 34–36, 39, 46
rip cut, 41, 56–58
seal cap, 135, 137, 151, 169
seam, 14, 18, 33, 43, 45, 53, 84, 155
seam channel, 18, 84–86, 135, 155, 162
service port, 99, 169
shell, 18, 57, 72, 81–82, 89, 137, 164
stem cell, 133–135, 145, 147
utility column, 97, 99, 107, 134–135, 151, 156, 164
utility panel, 135, 146
wedge, 12, 18, 53–54, 57, 63, 66, 123
zome, 74, 111–116