



Sheetname: Power Management

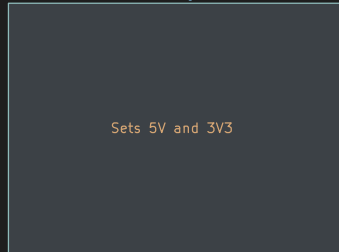


Sheetfile: pwr_mgmt.kicad_sch

Sheetname: ESP Reciever

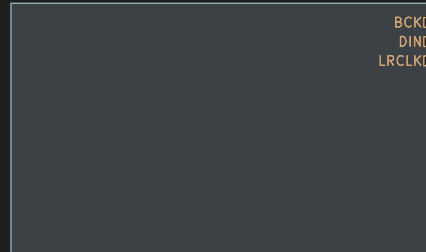

File: esp_rx.kicad_sch

Sheetname: DAC

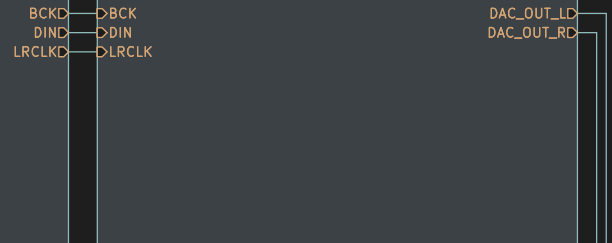

File: dac.kicad_sch

Sheetname: Volume Control



▷ DAC_OUT_L
▷ DAC_OUT_R


File: vol_ctrl.kicad_sch


Sheetname: Amp

POST_POT_IN_LD → POST_POT_IN_L
POST_POT_IN_RD → POST_POT_IN_R
SHDN_SIGNALD → SHDN_SIGNAL

File: amp.kicad_sch

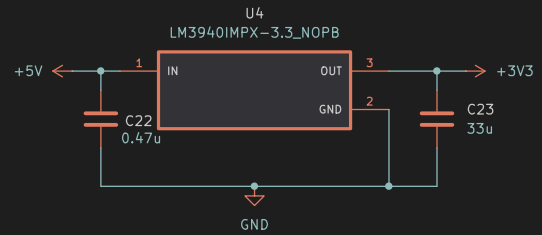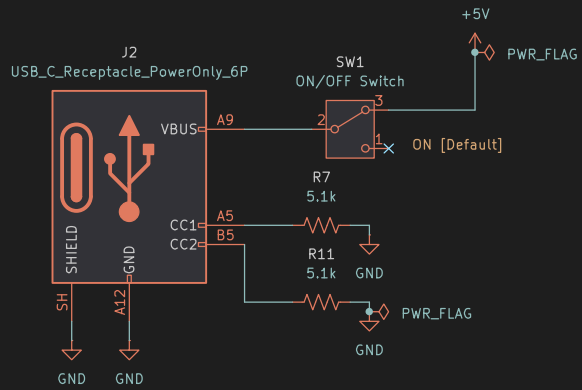


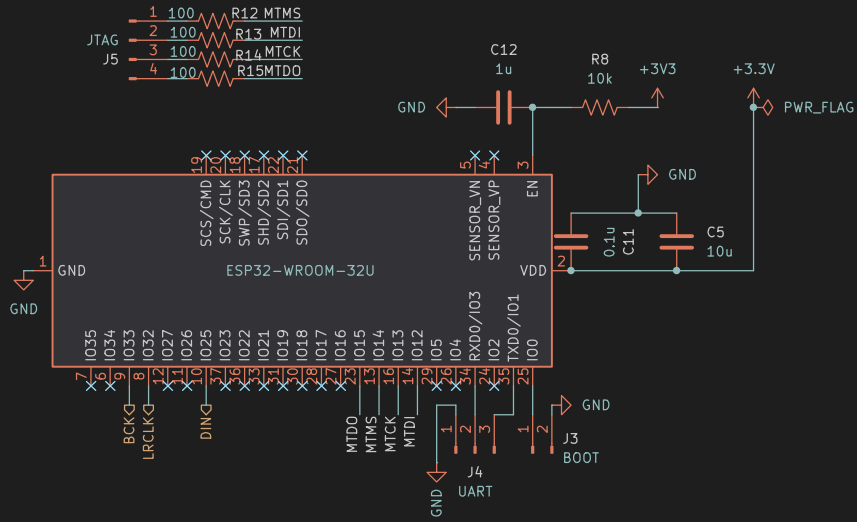


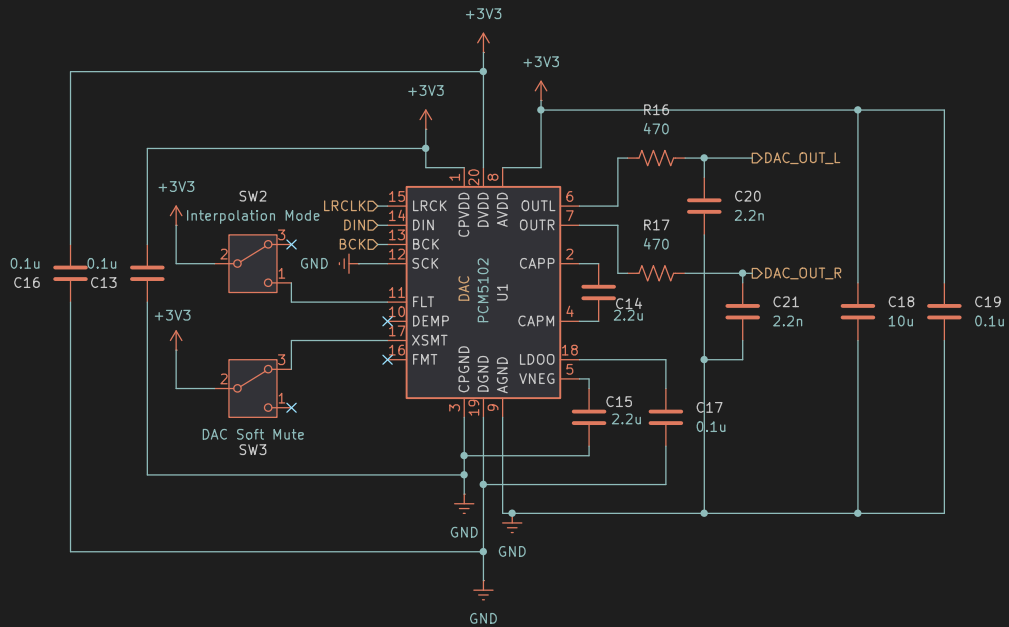


Use PLL functional diagram since we are grounding SCK

DEMP Low = DISABLE De-emphasis eq (44.1kHz).
High = ENABLE De-emphasis eq (44.1kHz).

FMT Low = I2S Format.
High = Left justified.

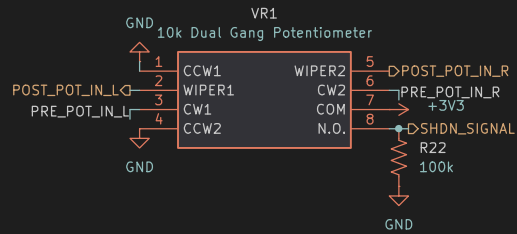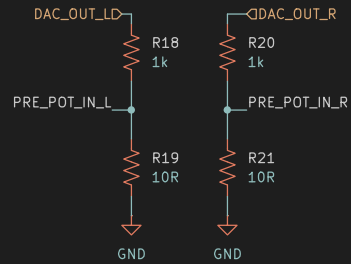

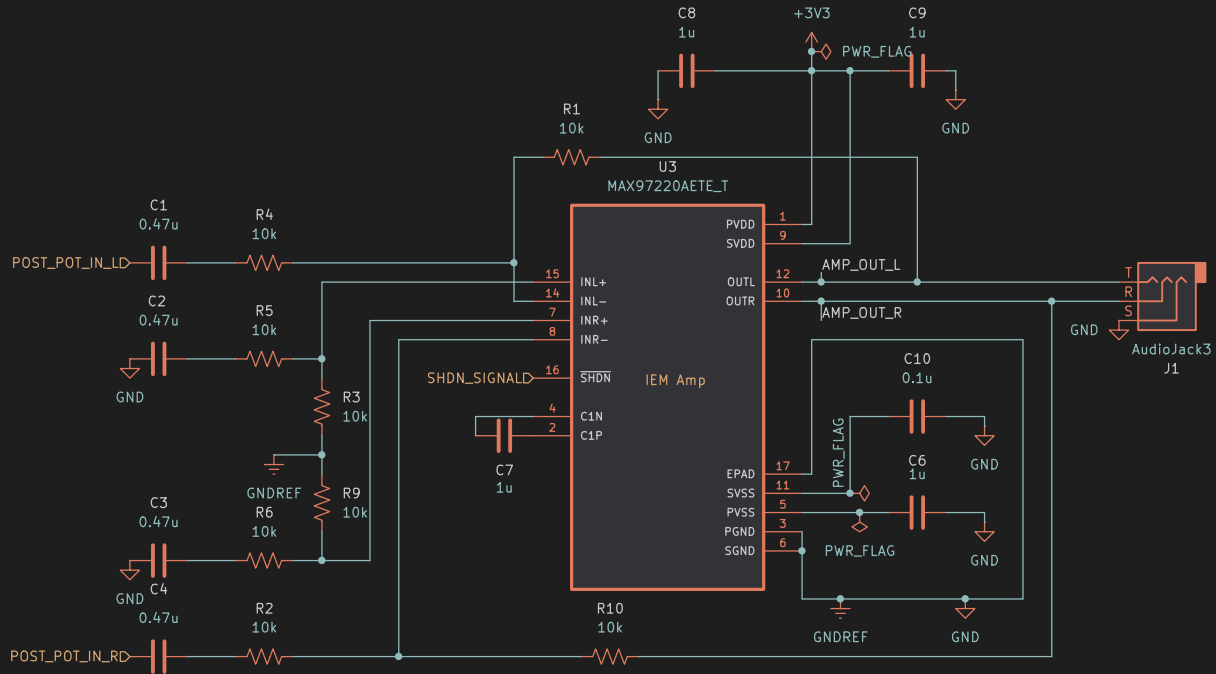

SHDN_SIGNAL LOW acts as setting the volume to a "true 0%" by shutting off the IEM amp.

This is in contrast to the DAC Soft mute which acts as a mute toggle without changing the volume.

Amp follows the pseudo-differential input configuration because the DAC output is a single-ended input.