

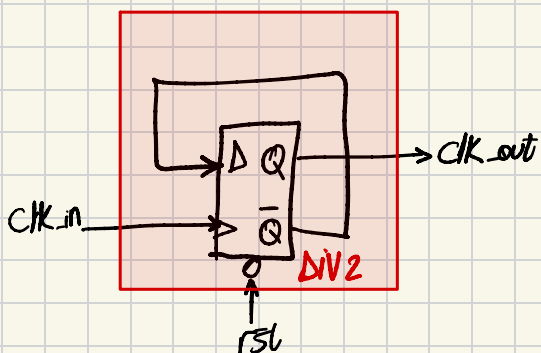
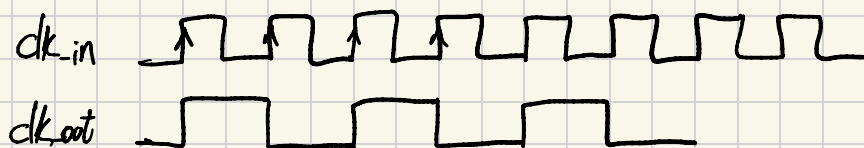
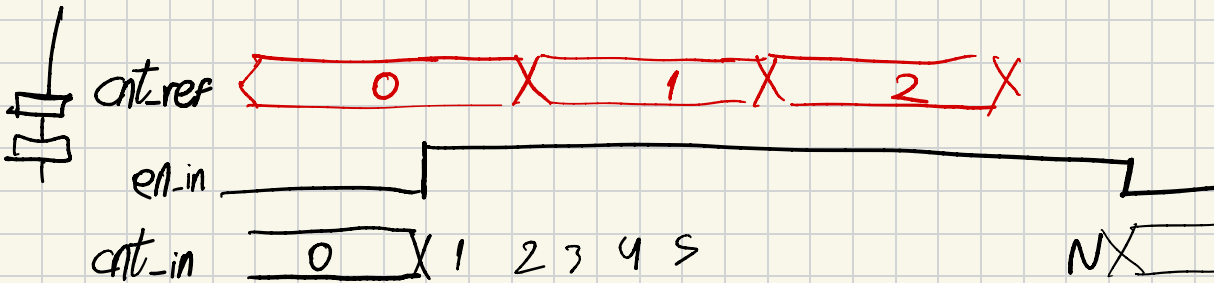


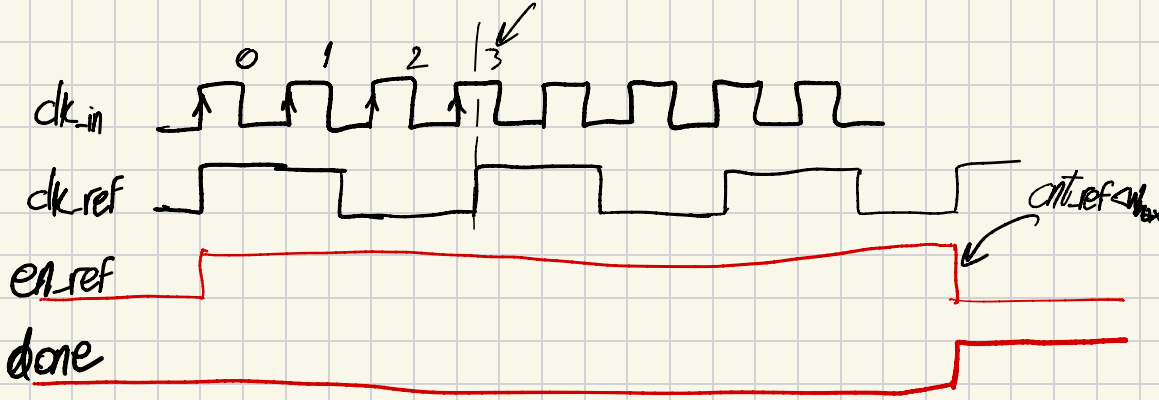

$$W \left(\frac{1}{f_{ref}} \right) = C \left(\frac{1}{f_{in}} \right)$$

$$f_{in} = \frac{C}{W_{max}} f_{ref} \rightarrow 200 \text{ MHz}$$

750 MHz

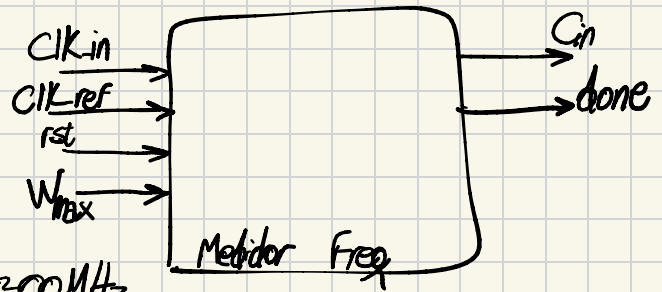

1 PPM = 1 parte por millón

$$\frac{f_{in}}{1M} = prec$$

$$C' = W_{max} \frac{f_{in}}{f_{ref}}$$

