


Bench Test Wiring — SYS TEC USB-CANmodul1 ↔ Tesla OBD-II

3 wires total. Twist CAN-H + CAN-L together. Verify $\sim 60\Omega$ across pins 1↔9 before plugging in.

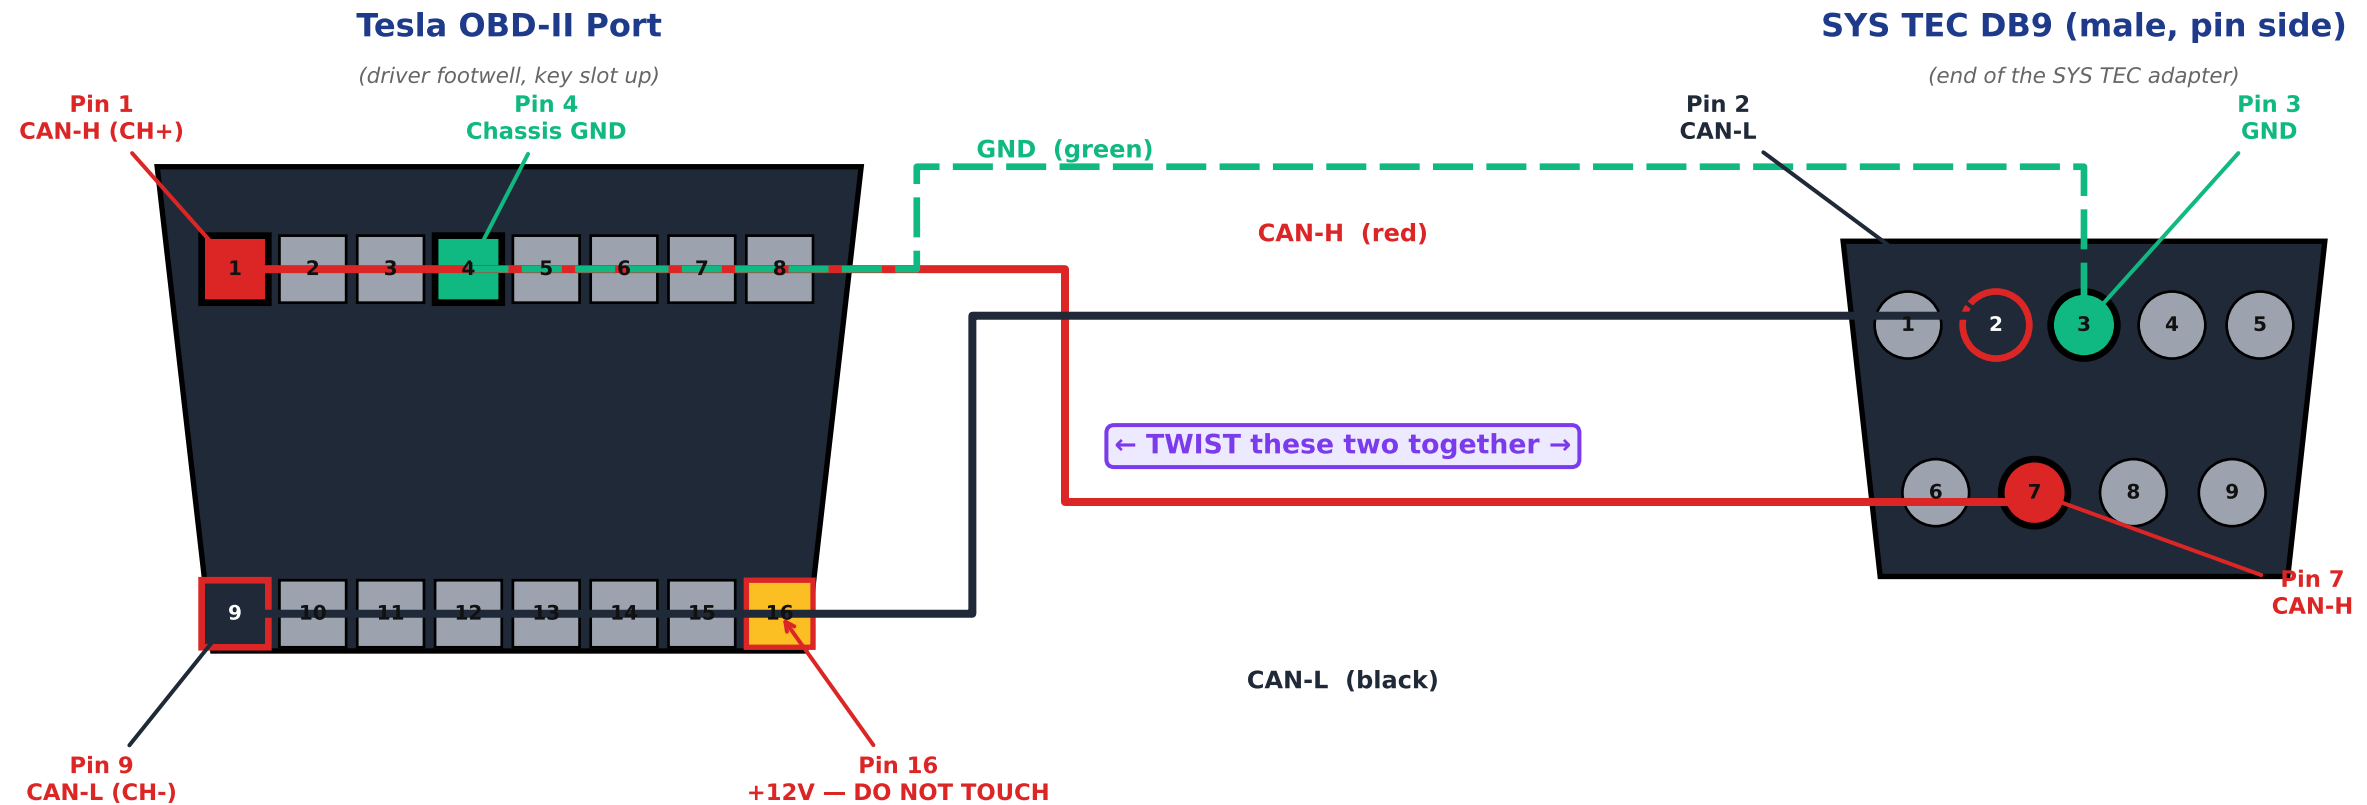

Before plugging in

1. Multimeter, DC volts: probe OBD pin 1 to chassis ground. Should read 0.0 V (car off and on).
 2. Multimeter, DC volts: probe OBD pin 9 to chassis ground. Should read 0.0 V.
 3. Multimeter, ohms (200 Ω range): probe between OBD pin 1 and pin 9. Expected: $\sim 60\Omega$.
 $\sim 60\Omega$ = good (two terminators). $\sim 120\Omega$ = unterminated stub, find a different tap.
- Open / $>10\text{ k}\Omega$ = pins 1 and 9 are NOT populated. Need Tinkla Chassis CAN Retrofit Harness.**

Wiring tips

- 22 AWG stranded wire is plenty. Use red/black/green so you can't mix them up.
- Twist CAN-H and CAN-L together over the entire run. ~ 3 turns per inch is fine.
- Easiest hardware: OBD-II pigtail (16 labeled wires) on one end + DB9 screw-terminal breakout on the other.
- Do NOT crush the OEM terminals. If back-probing pins, use a probe tip, not pliers.

Final checks before running the sniffer

- Tesla in Accessory or fully on. Bus needs power.
- SYS TEC plugged into laptop USB. Driver installed.