


NW

Crestal normal faults

SE

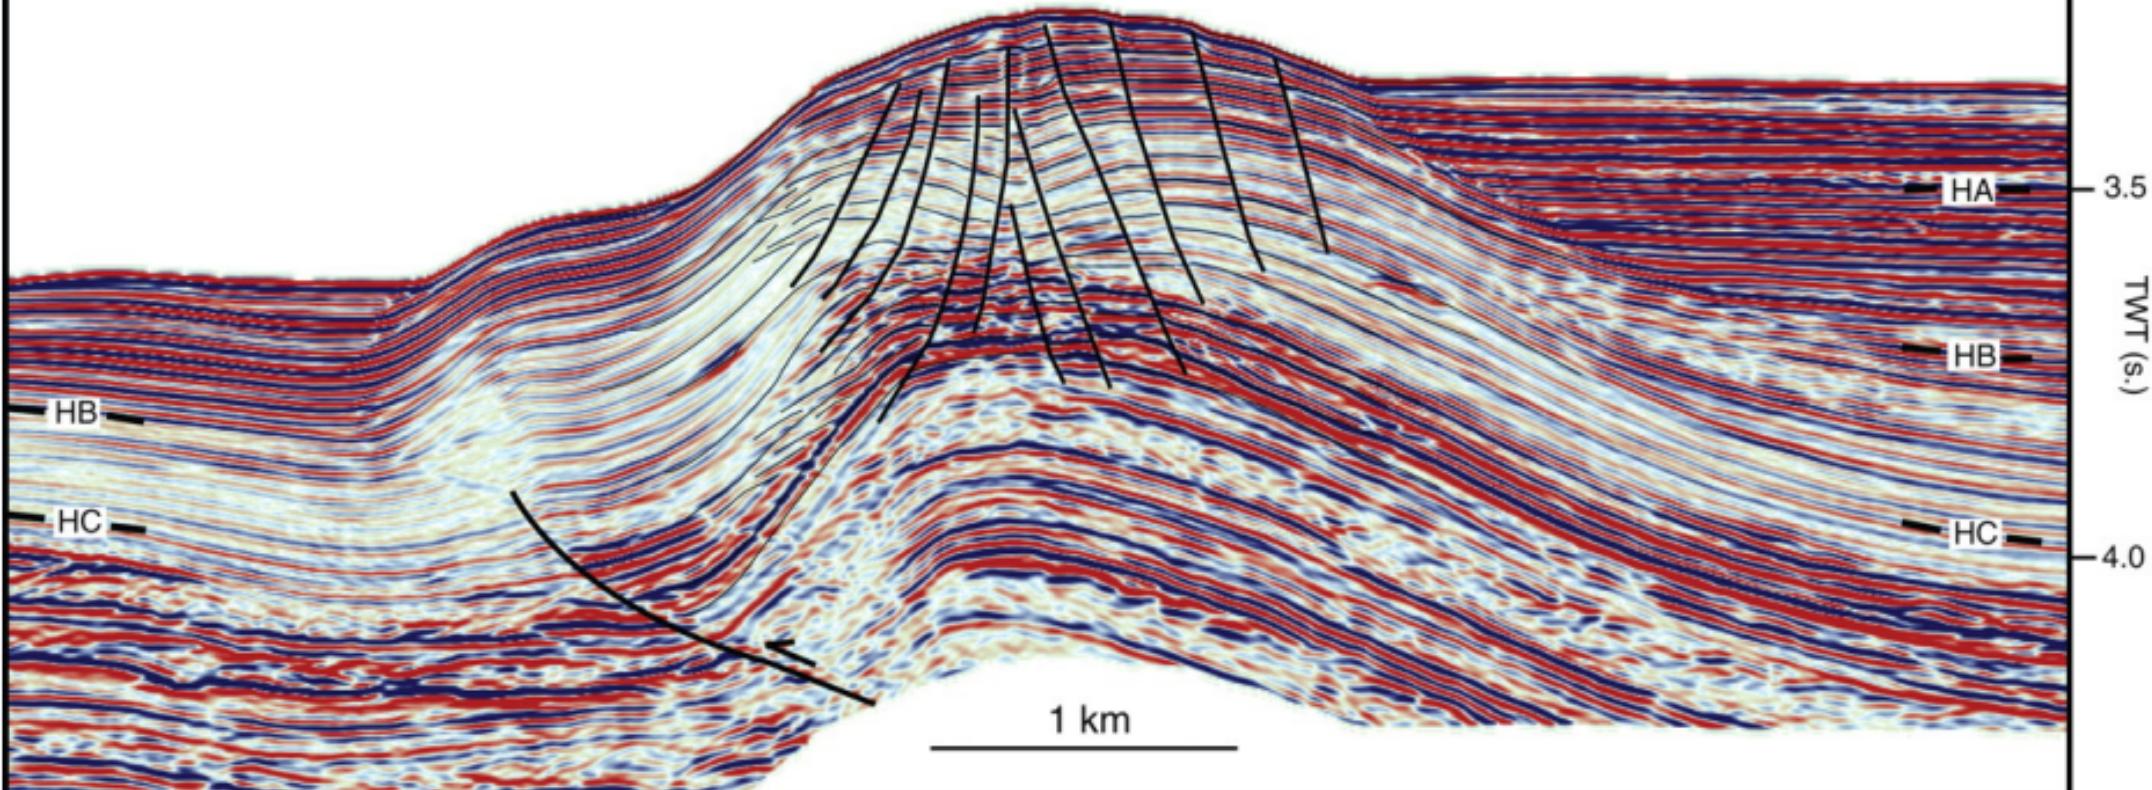




~1850



~2010



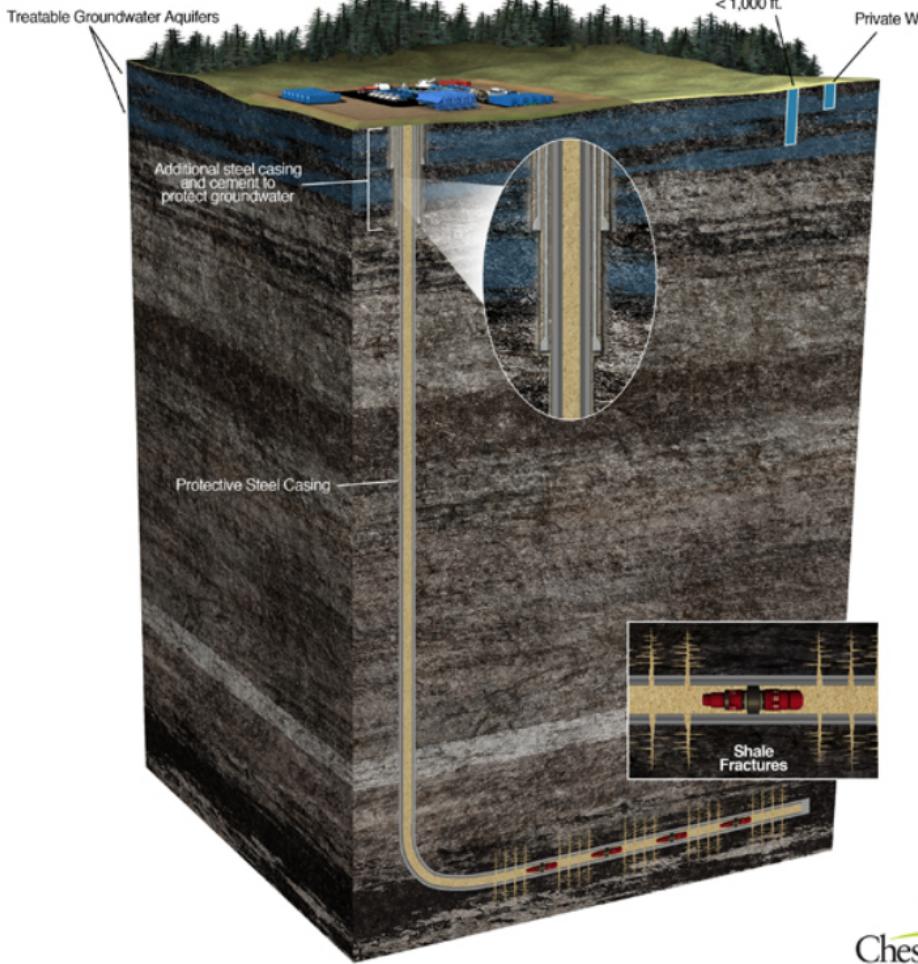

Risk-Based
Geomechanical
Screening

Stress Man

MUDLINE SUBSIDENCE



FAULT ACTIVATION

CASING CRUSHING

COMPACTION DRIVE

CASING
SHEAR

SAND PRODUCTION







RESERVOIR YIELD

PERMEABILITY LOSS


CASING BUCKLING

S_V



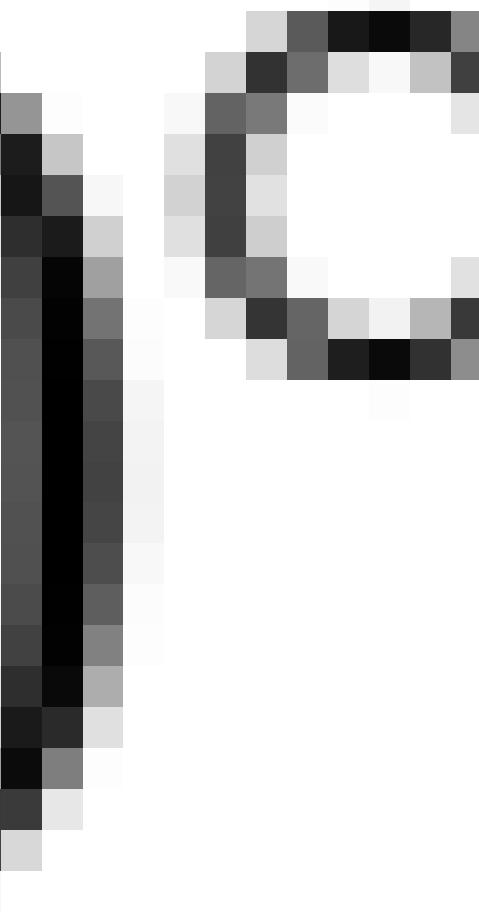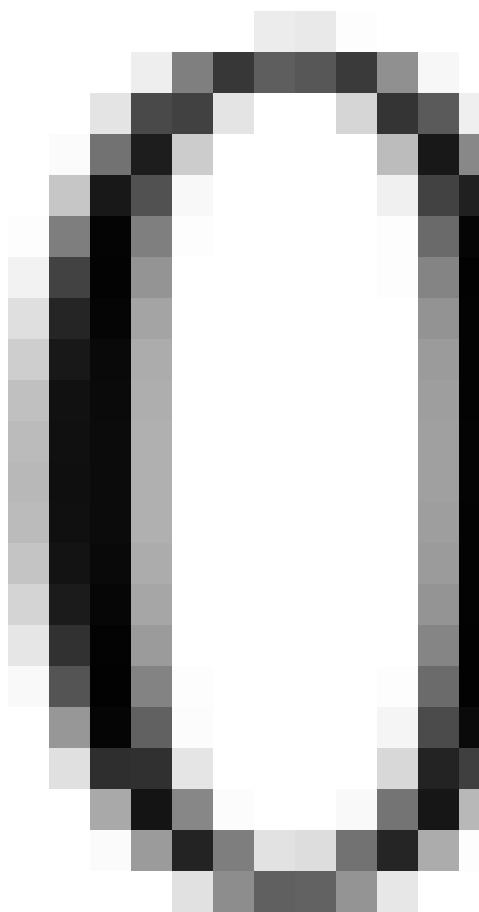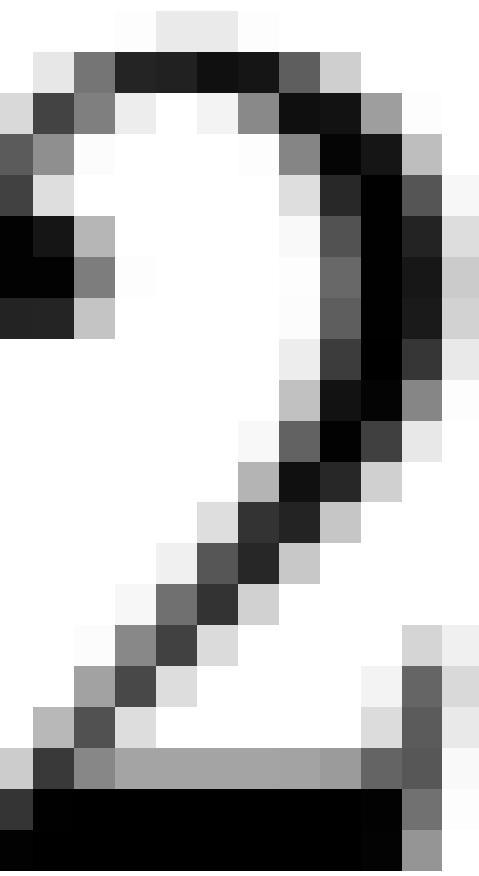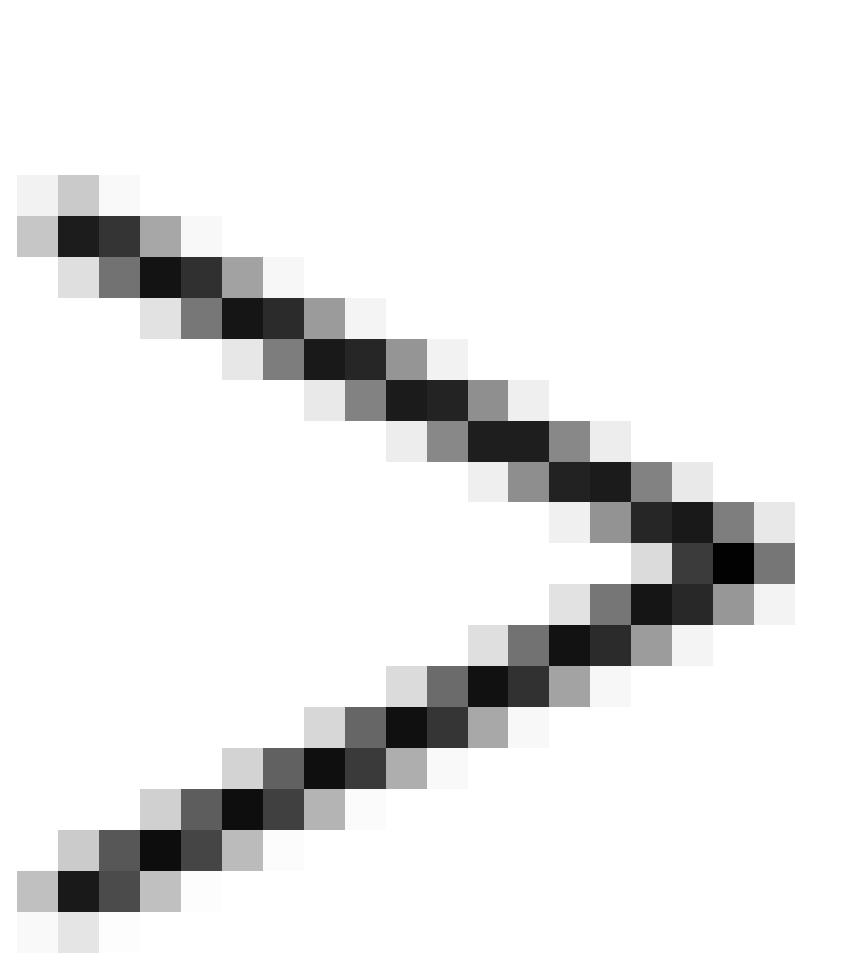


(a) Two wells connected by natural fractures

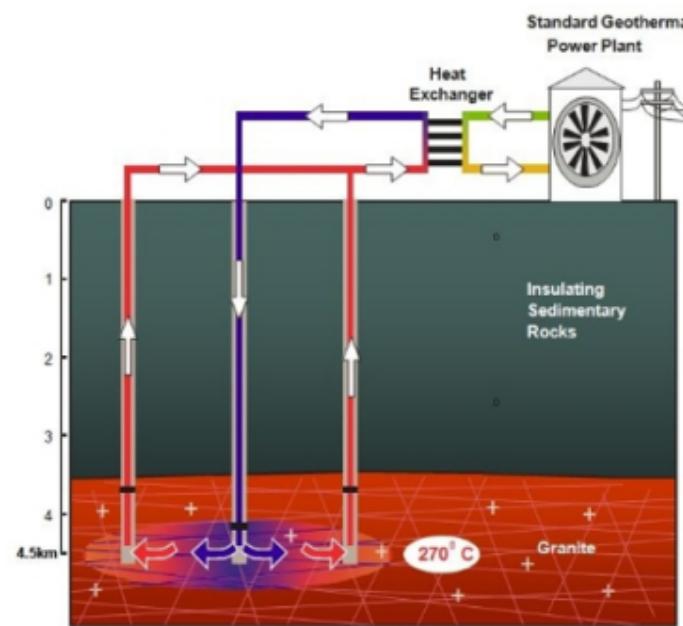



(b) Two wells connected by manmade fractures

Enhanced Geothermal Systems

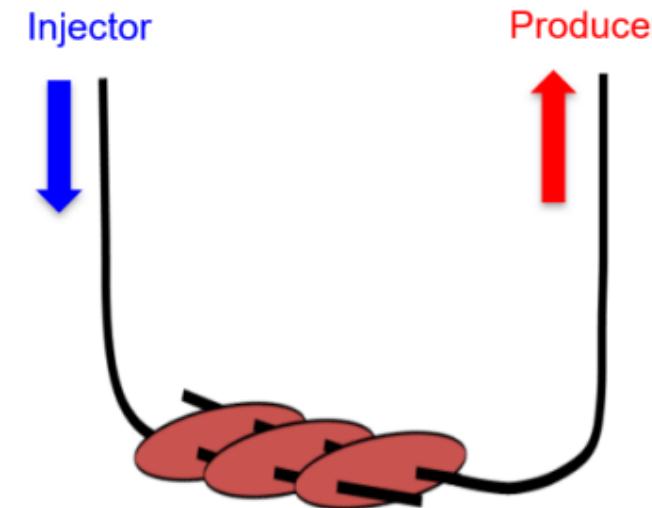


(c) U-loop well without fractures

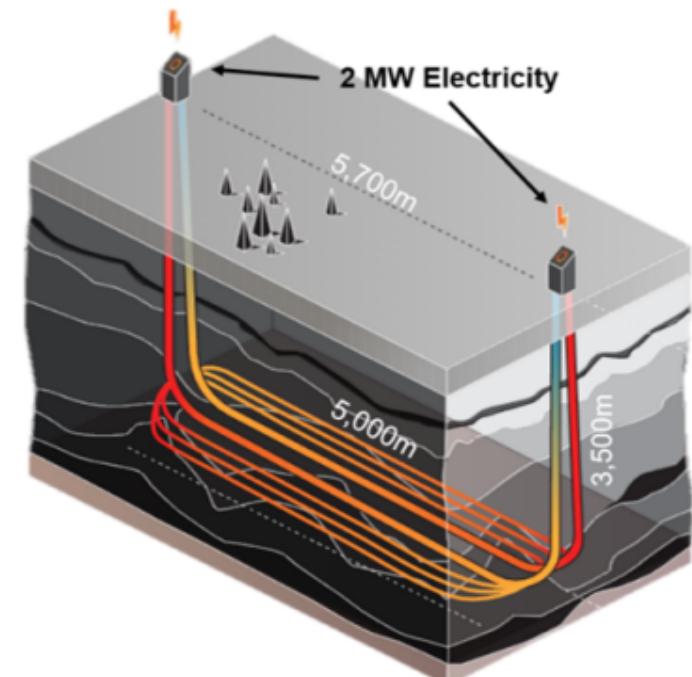

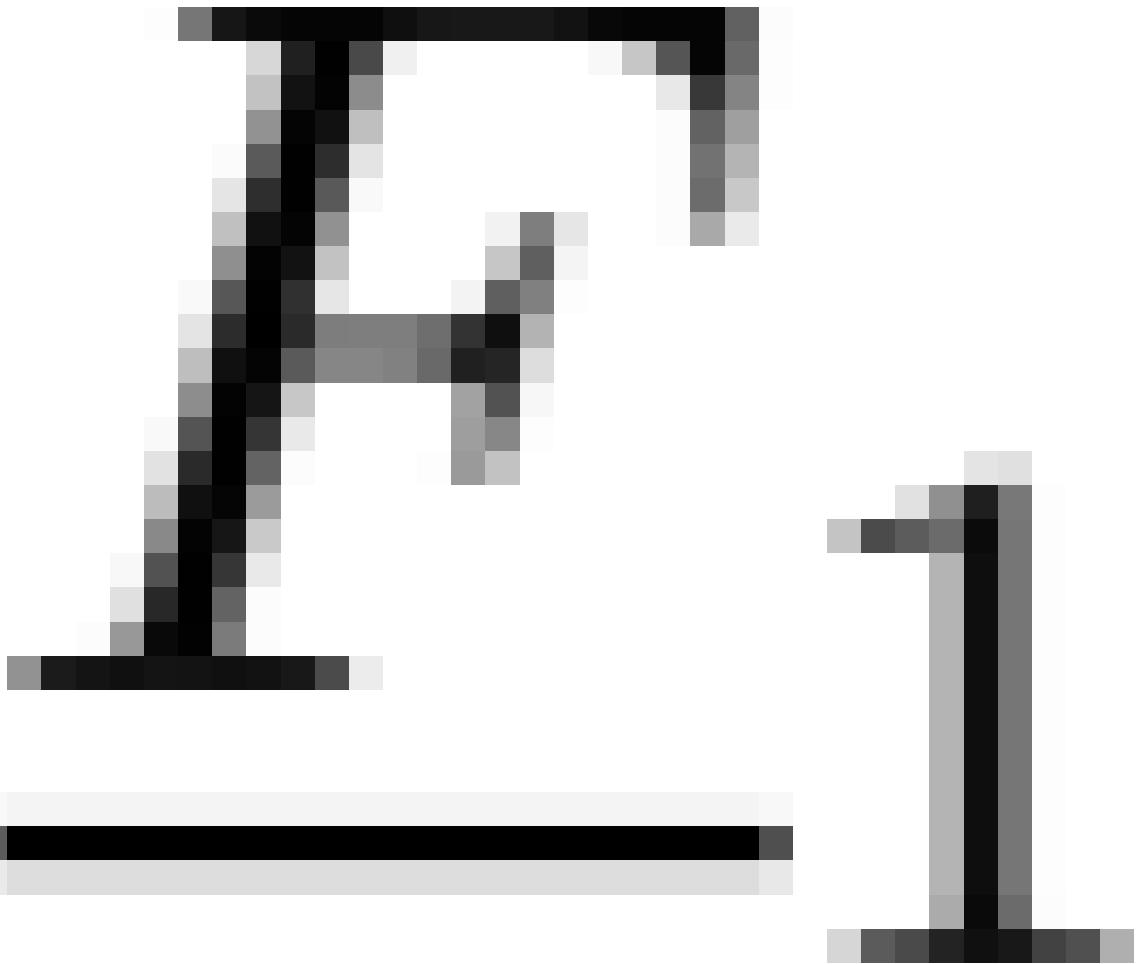








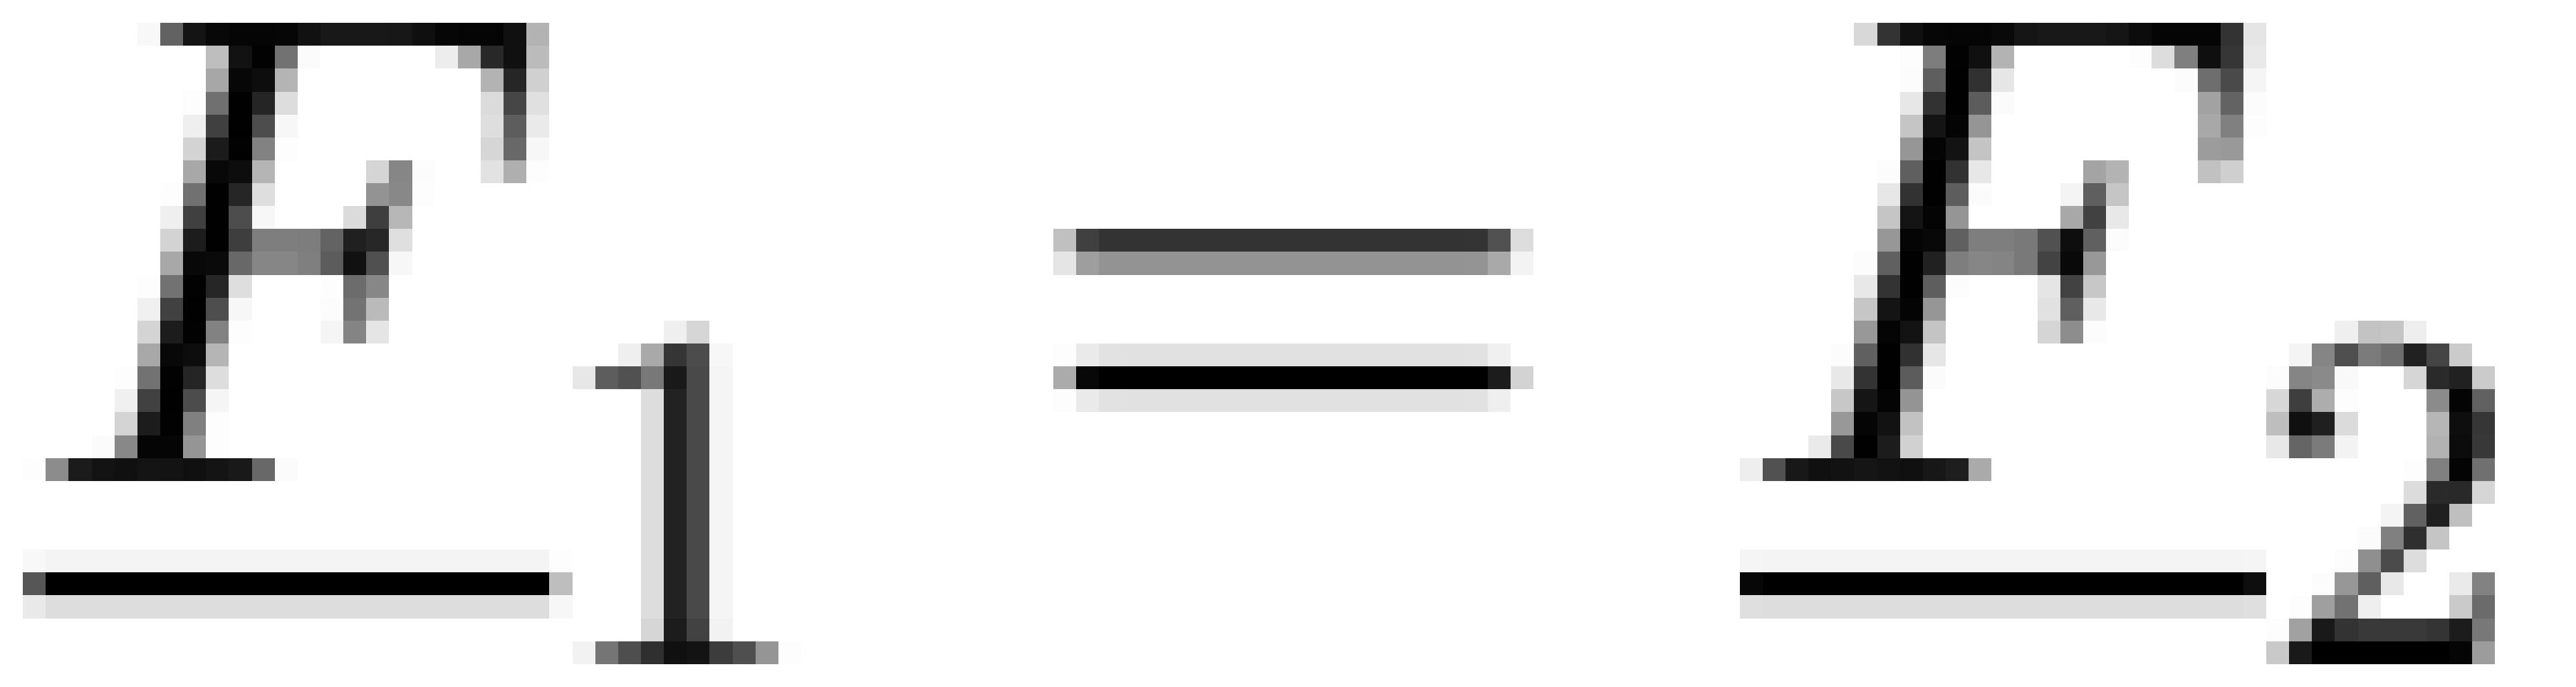



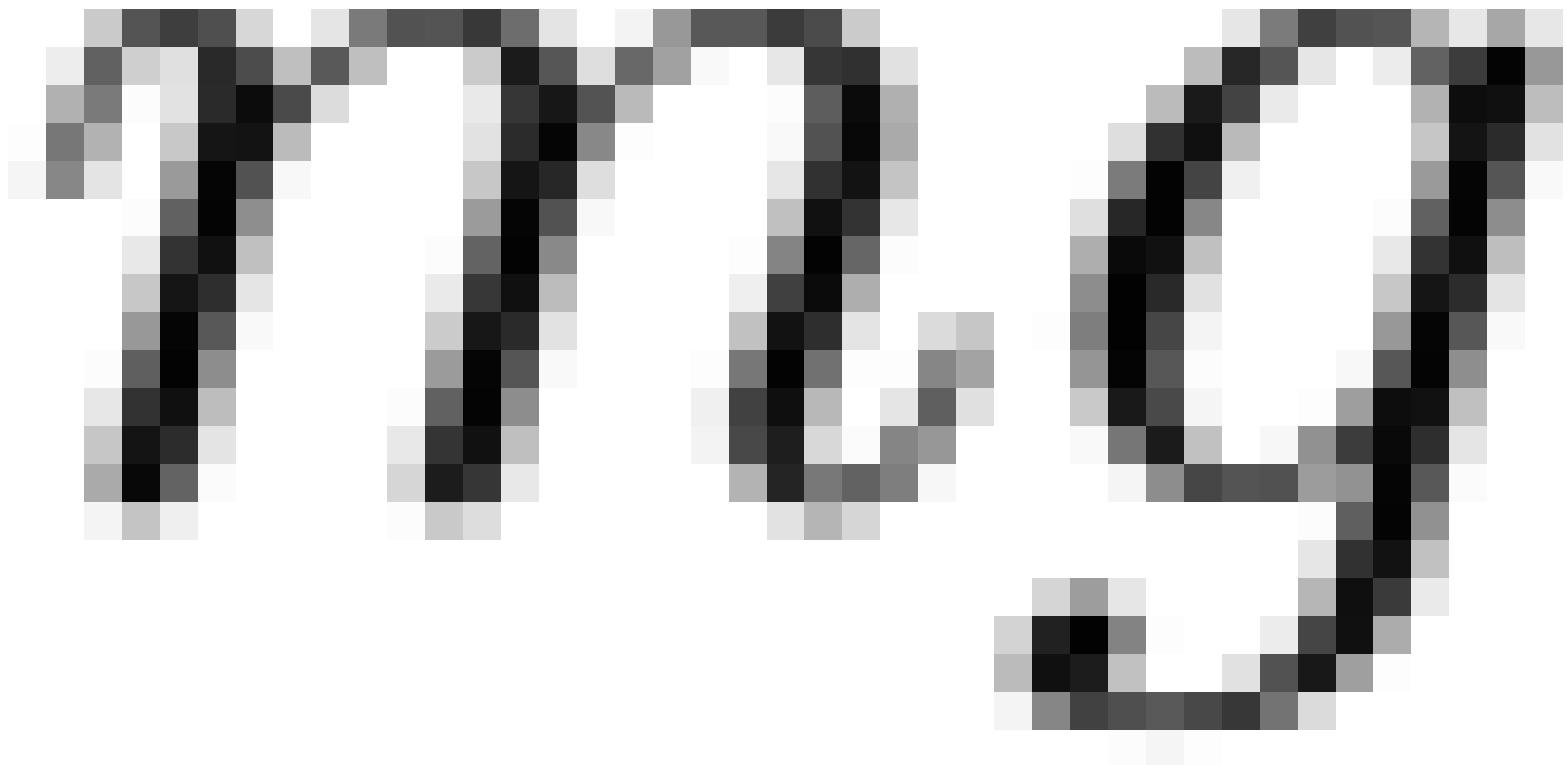

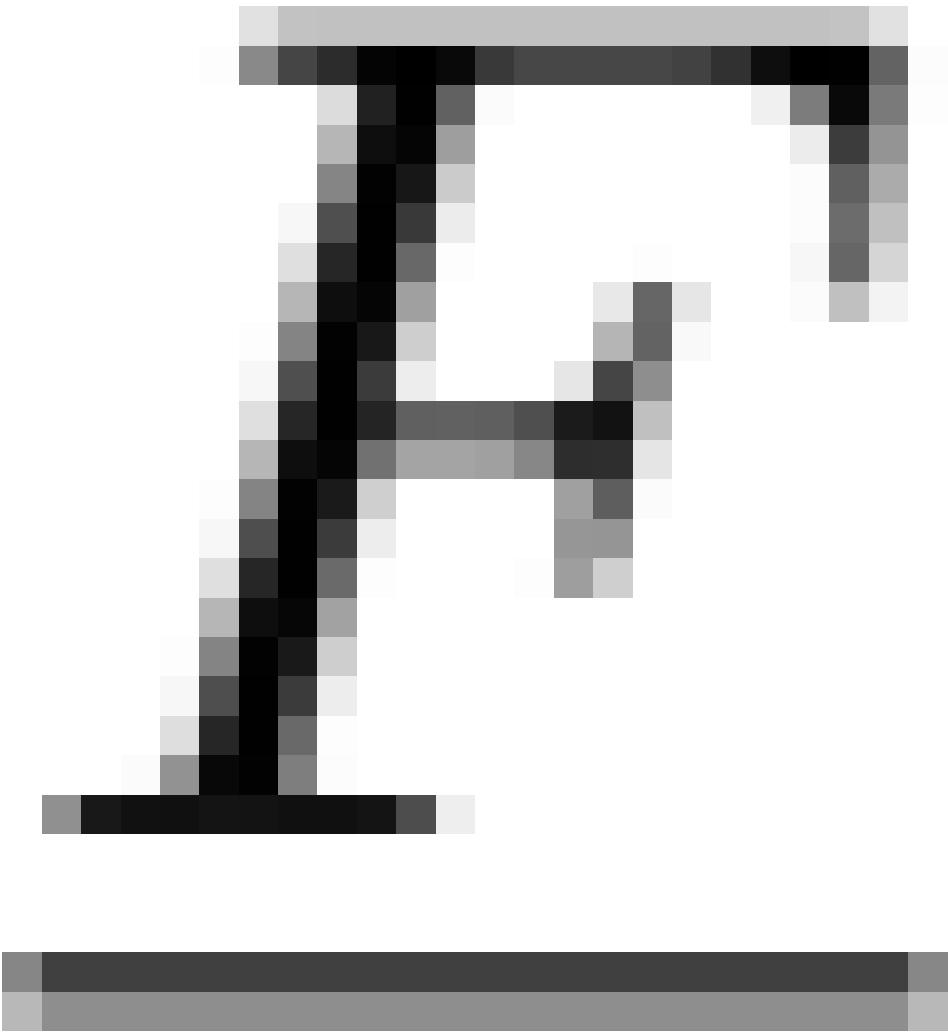

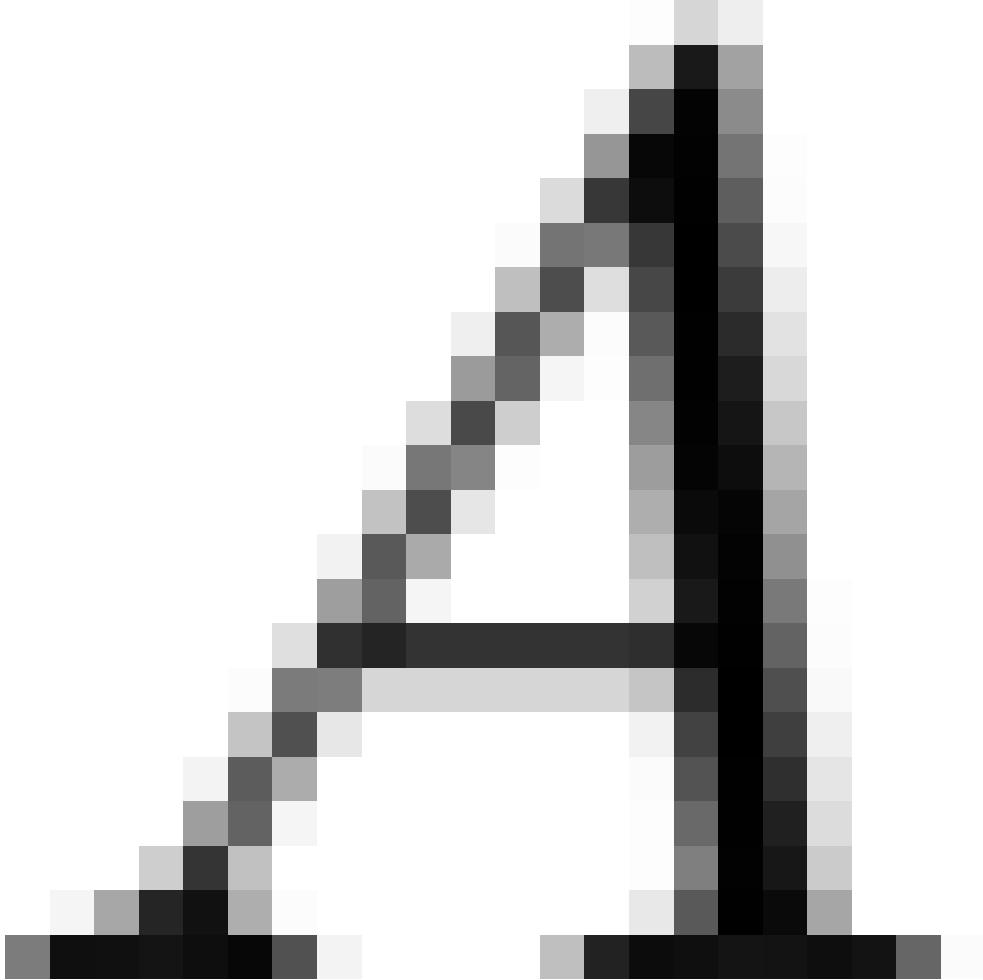

P

S

S



A

S

S

O

S


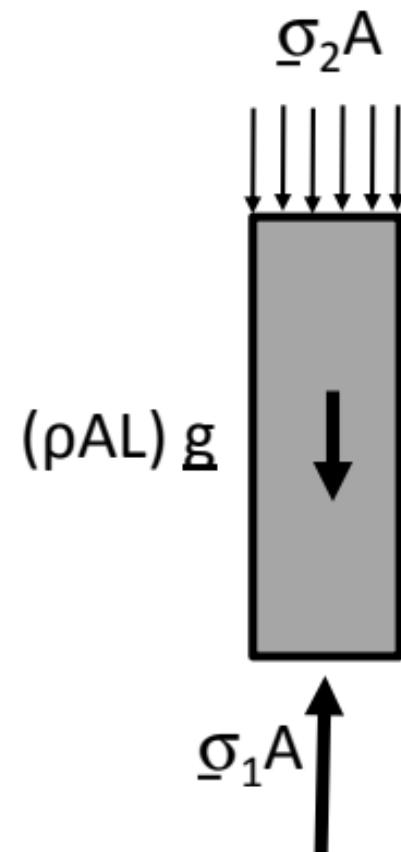
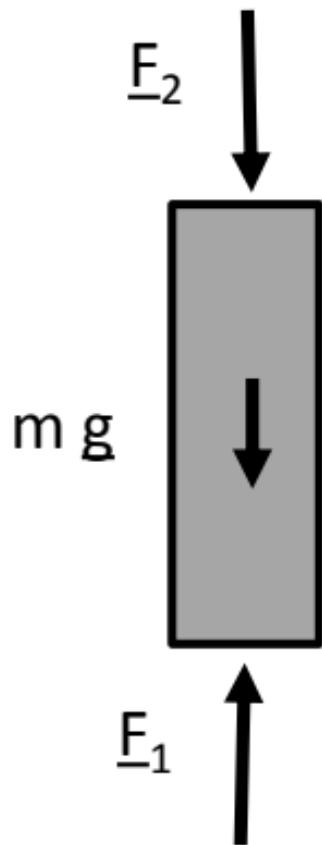




$$\Sigma F_z = +F_1 - F_2 = 0$$




$$\Sigma F_z = +F_1 - m g - F_2$$

$$\Sigma F_z = +\sigma_1 A - (\rho A L)g - \sigma_2 A$$



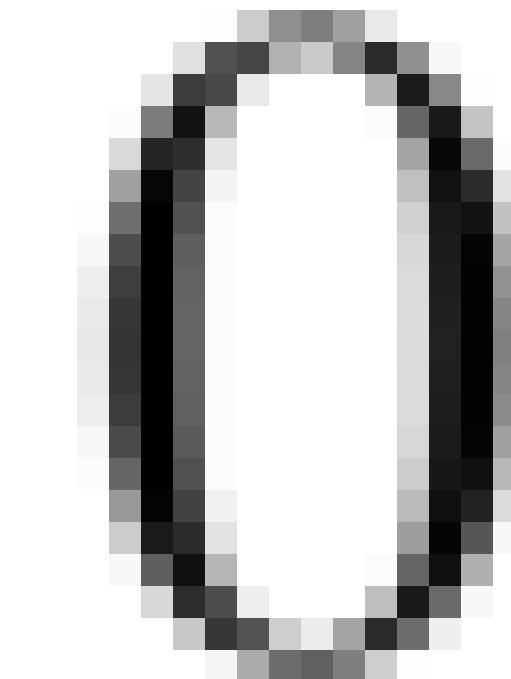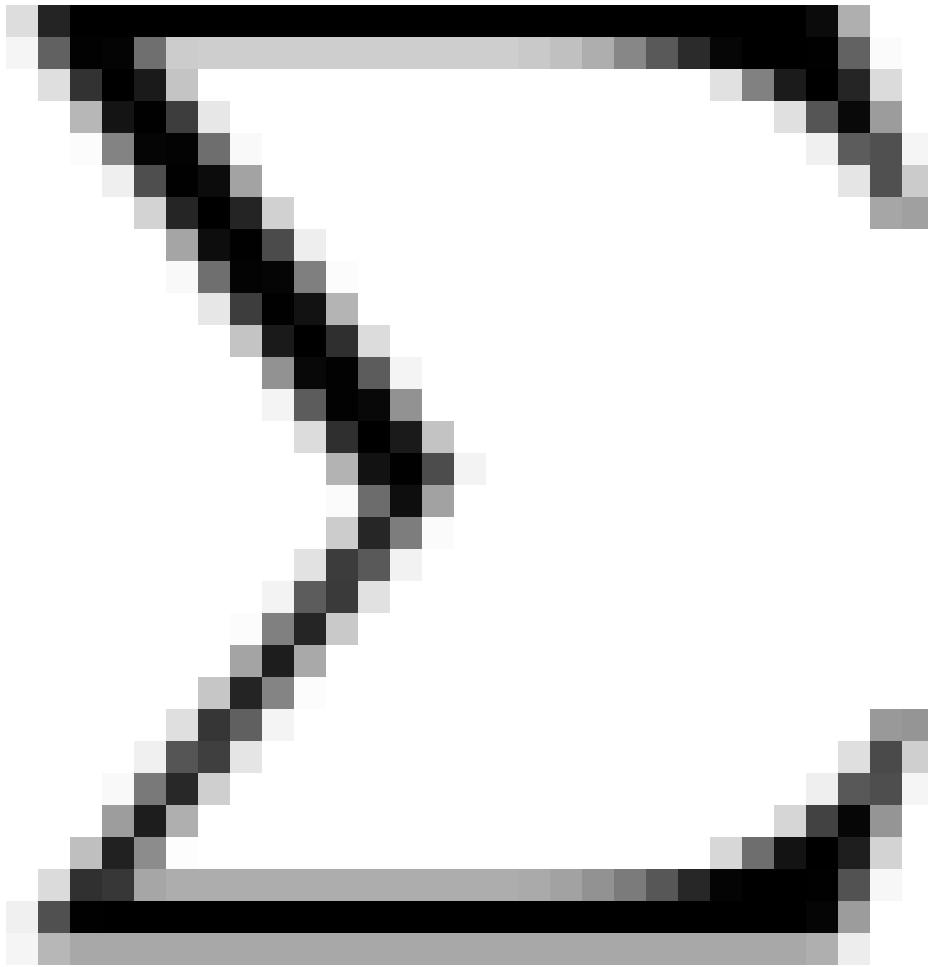

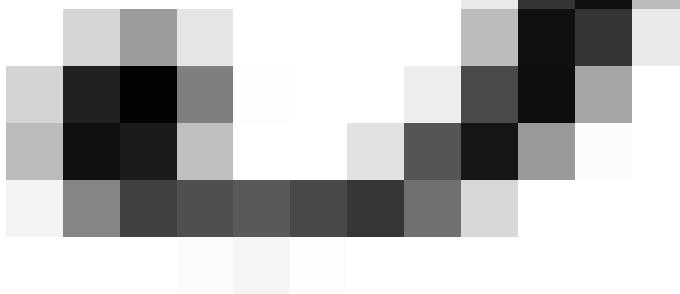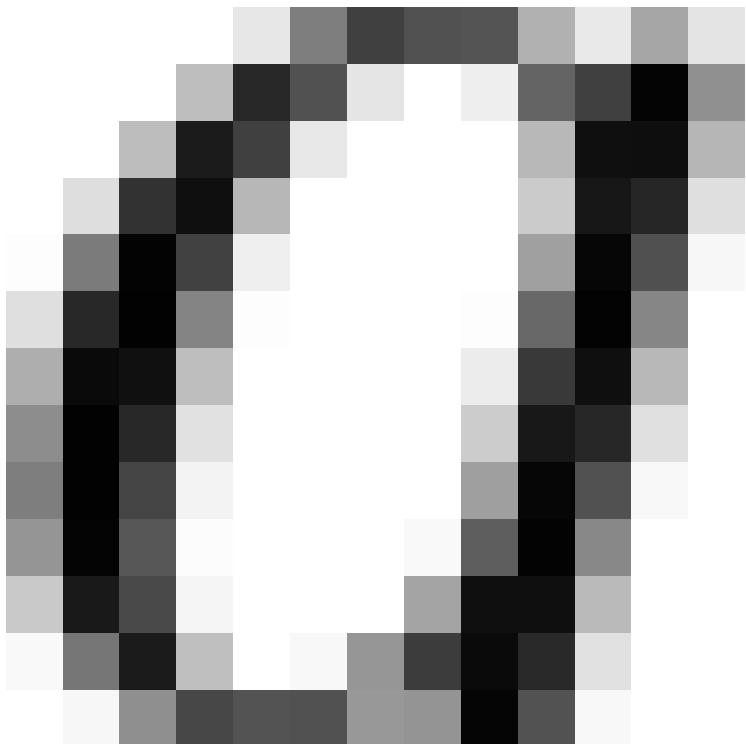

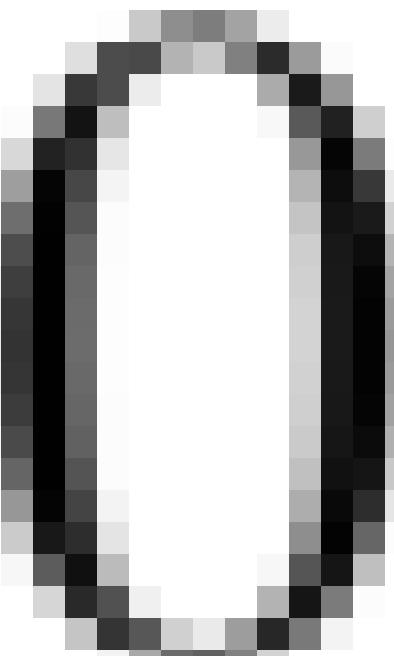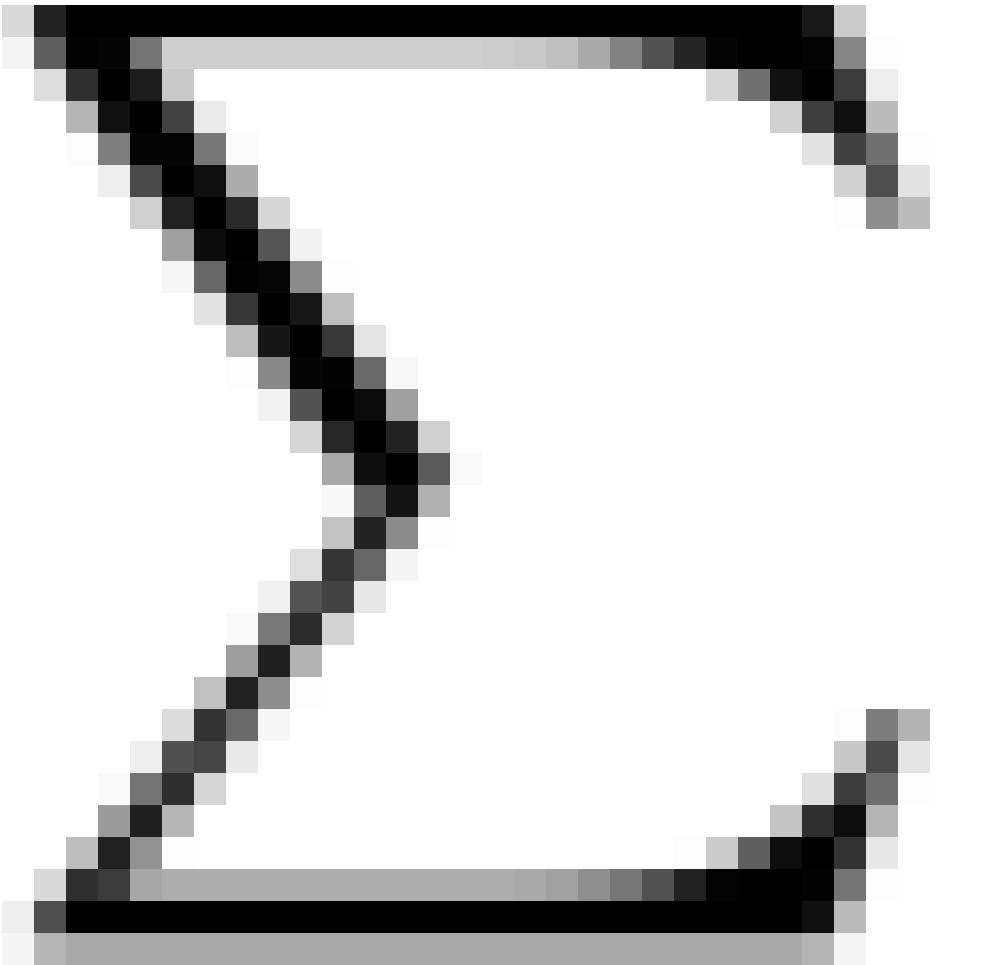






△ S₂

— △ z


— —


Observe 9

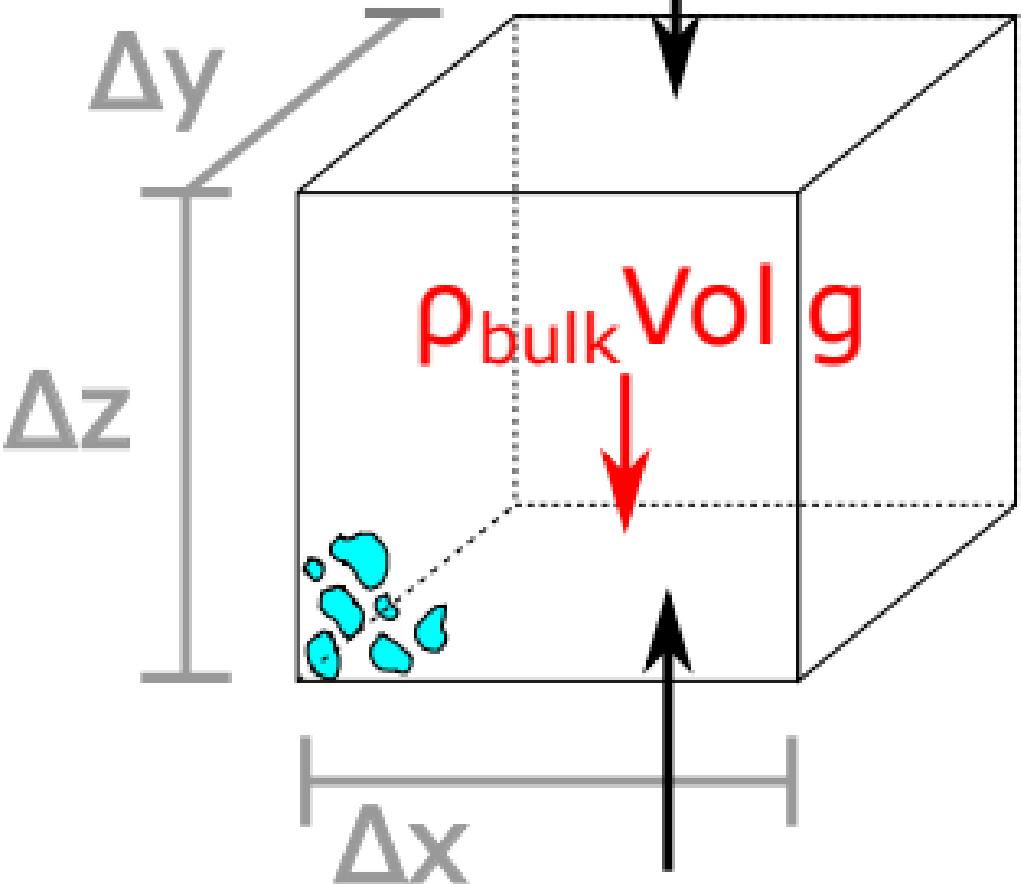
$S_v A$  $S_v A + \Delta S_v A$

$$\int_0^{S_w(z)} ds_w = \int_0^z \rho_{bulk}(z) g dz$$





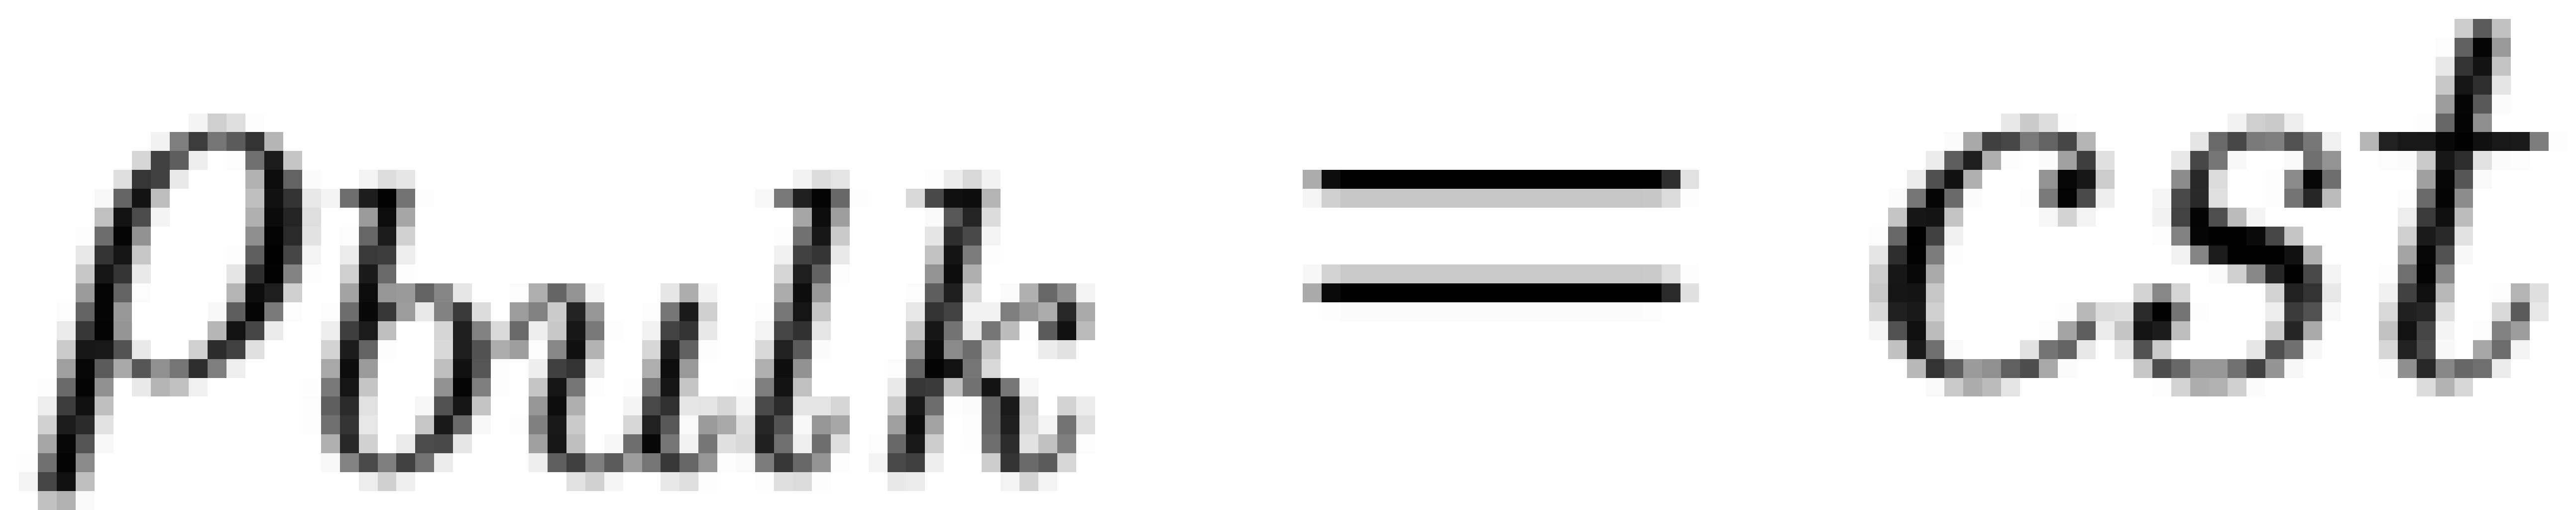

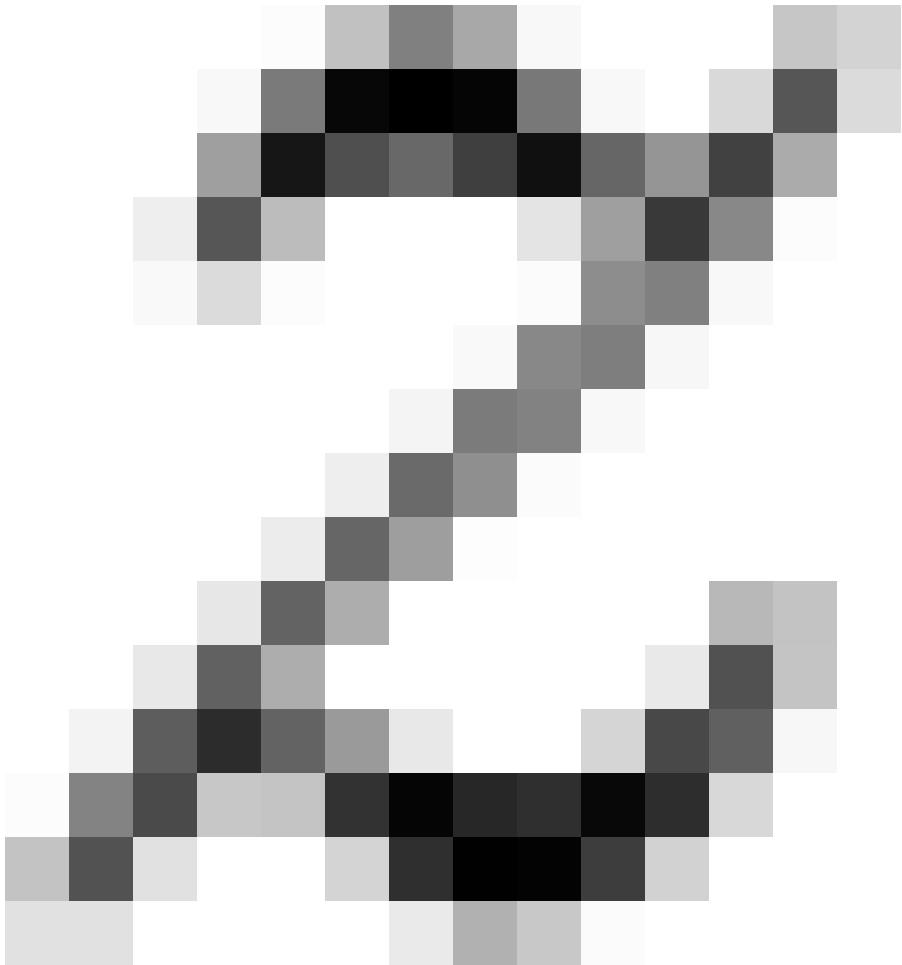













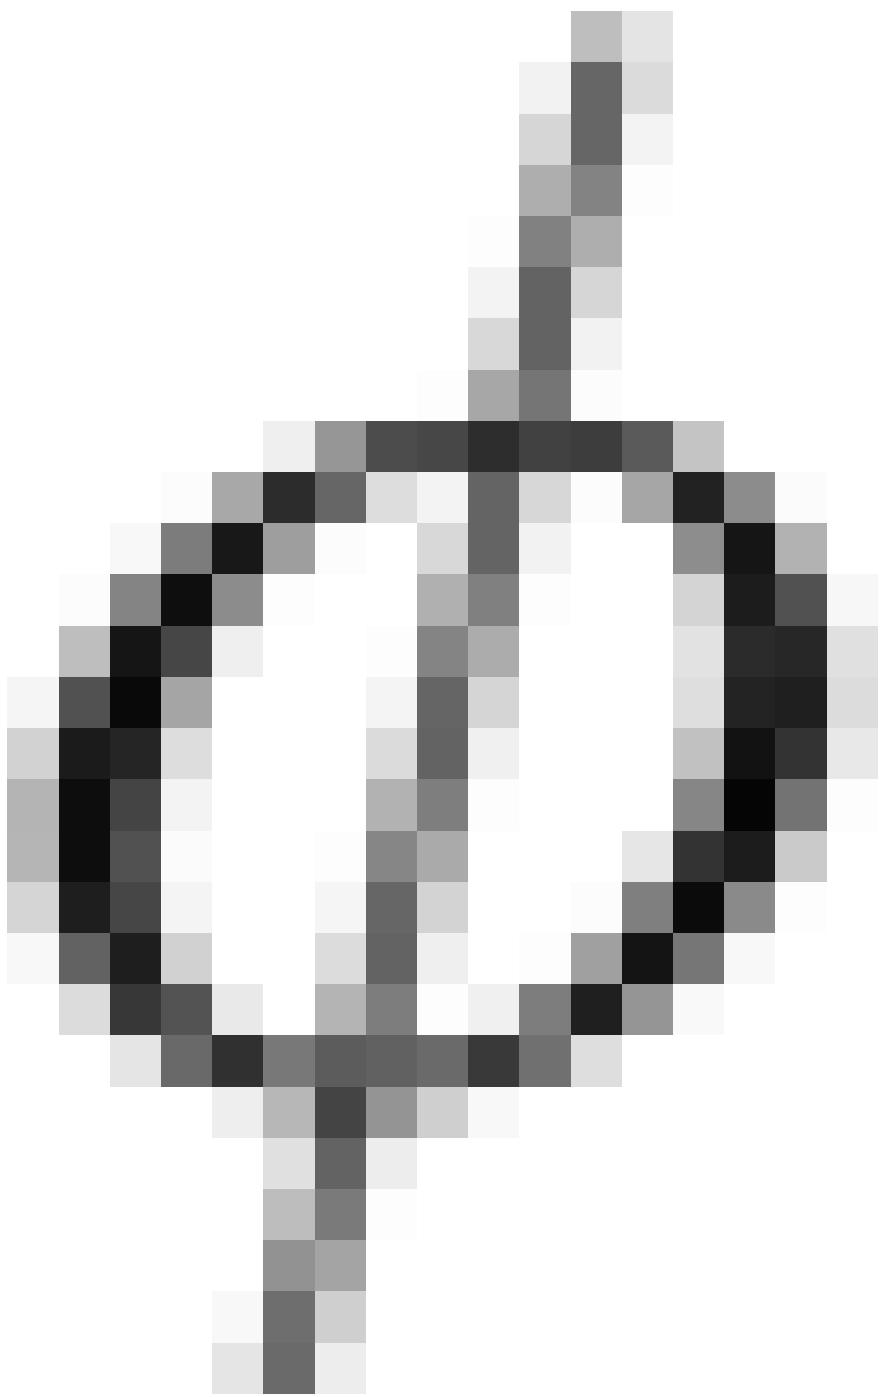







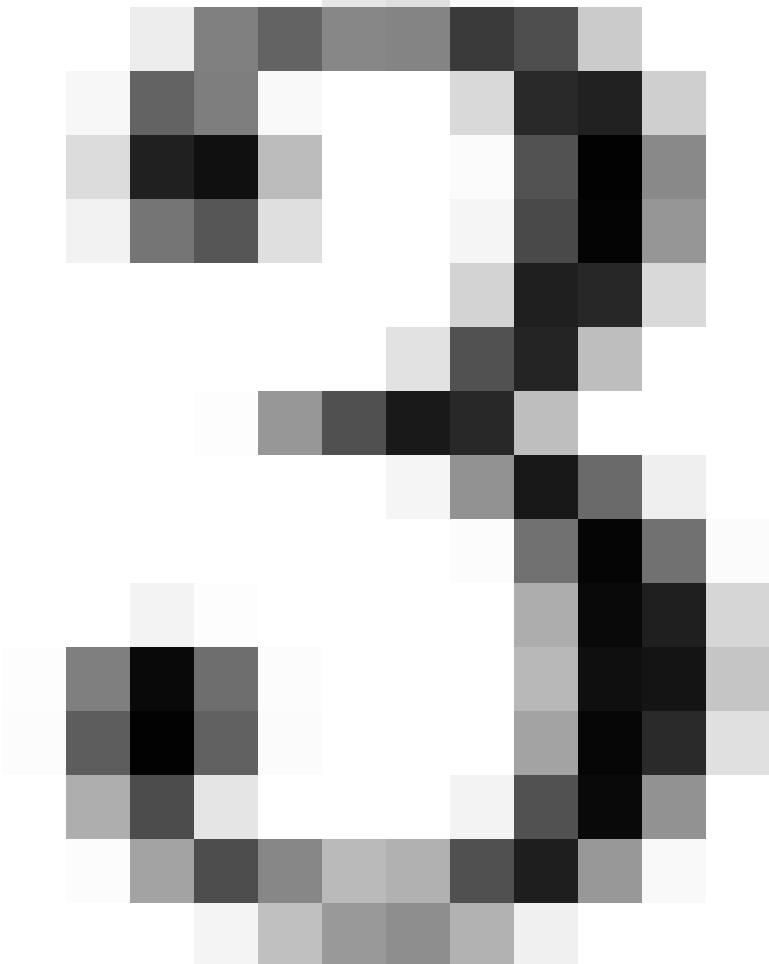


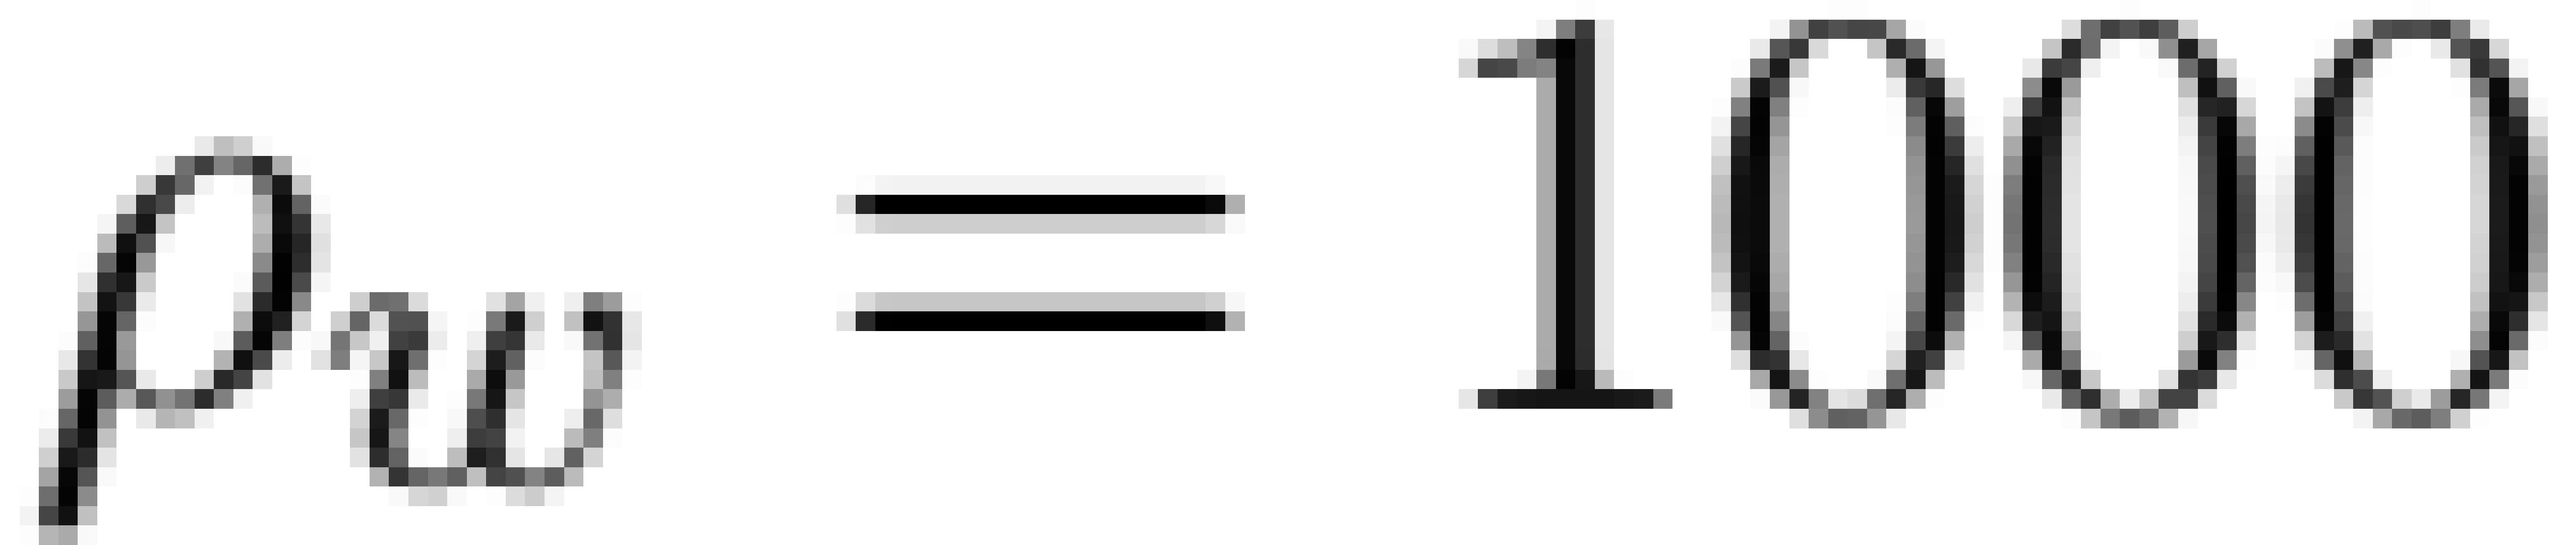















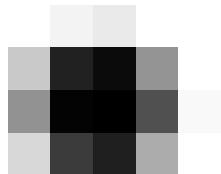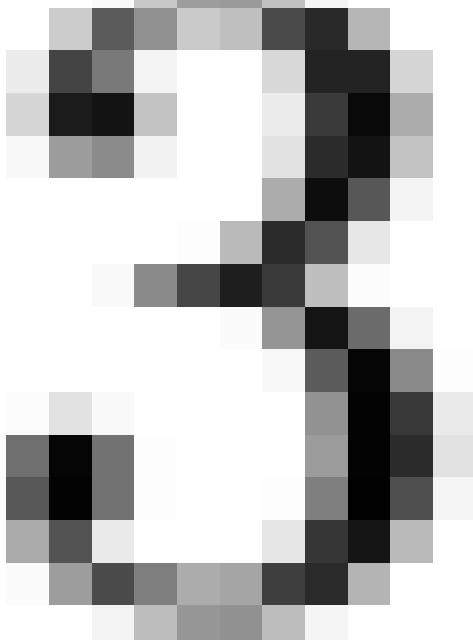


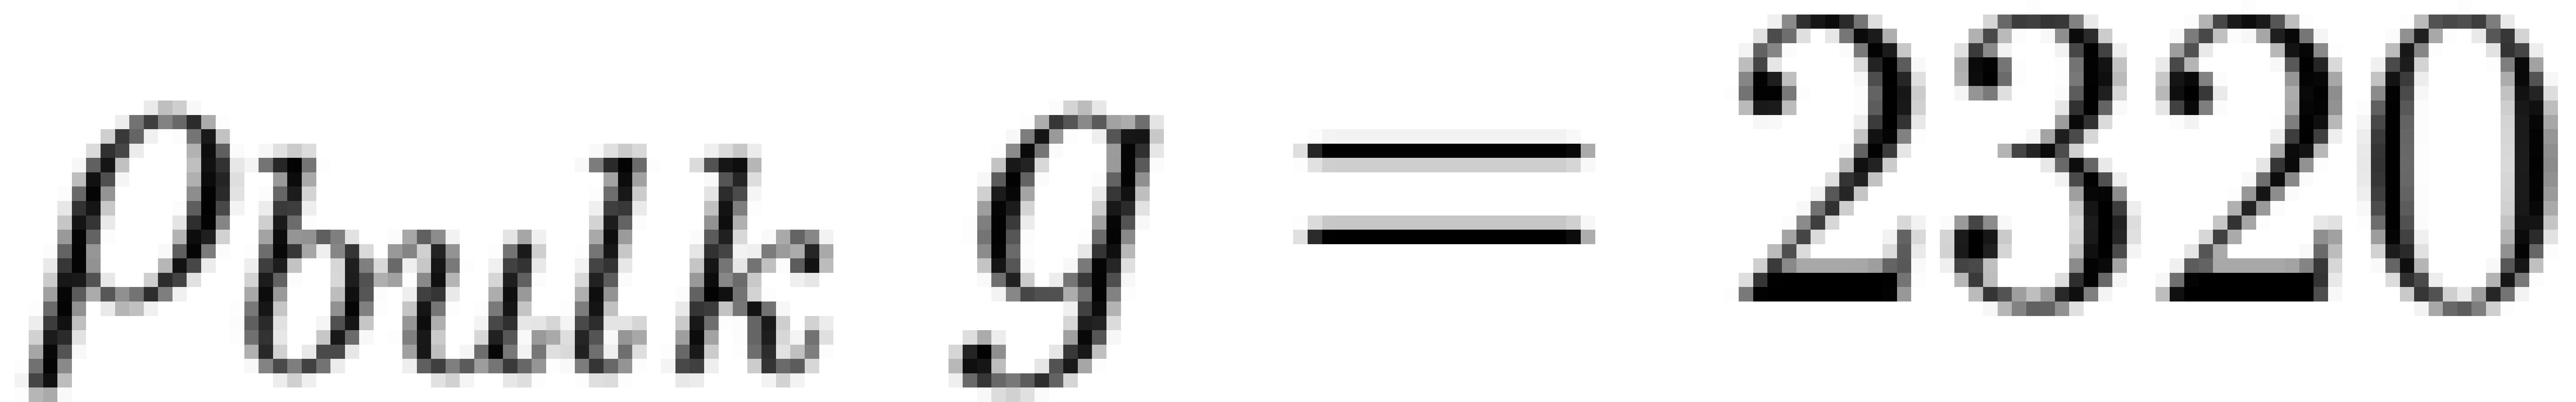


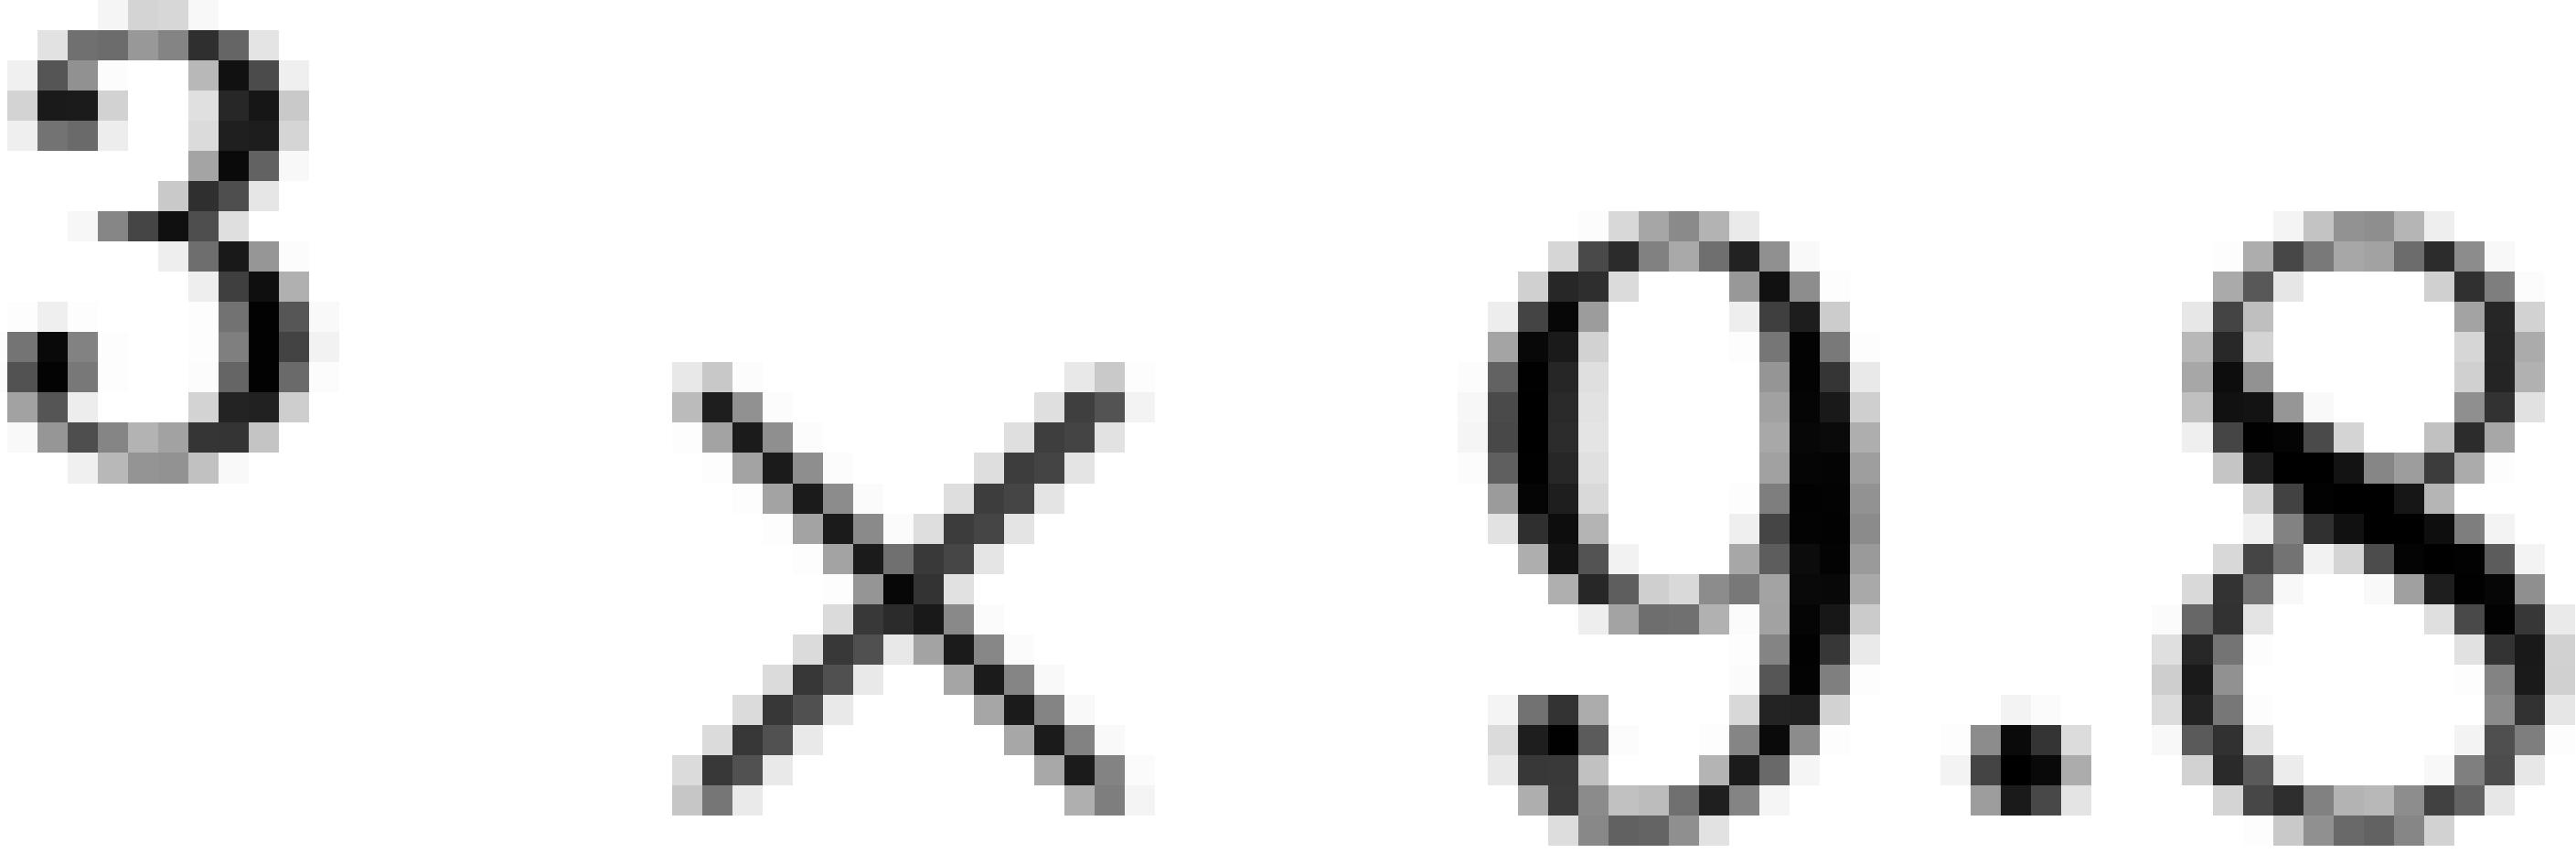





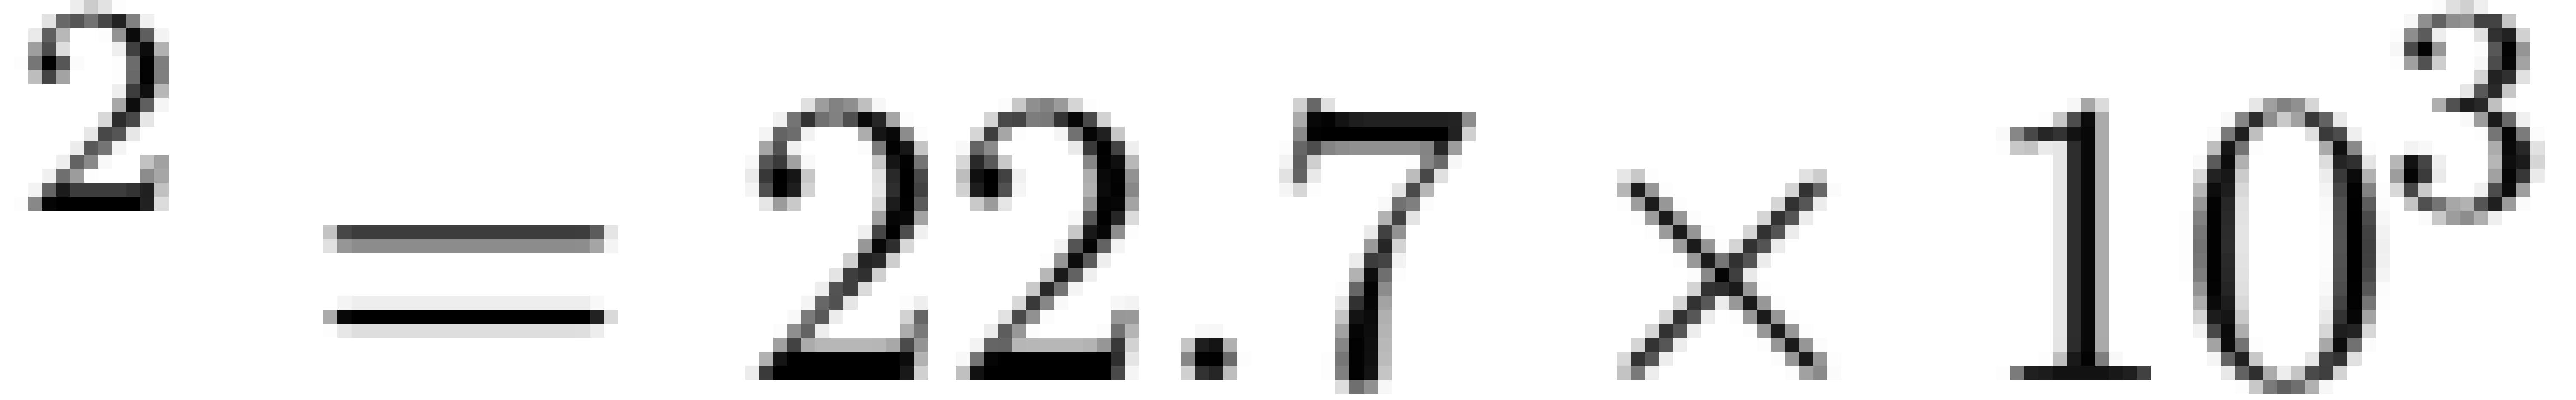


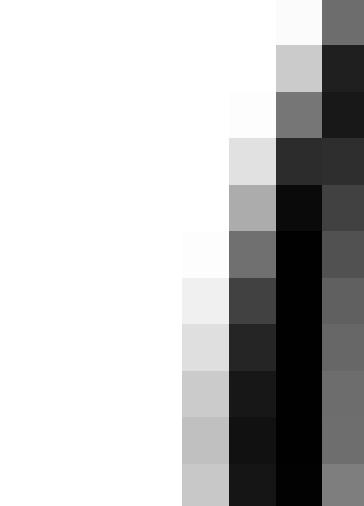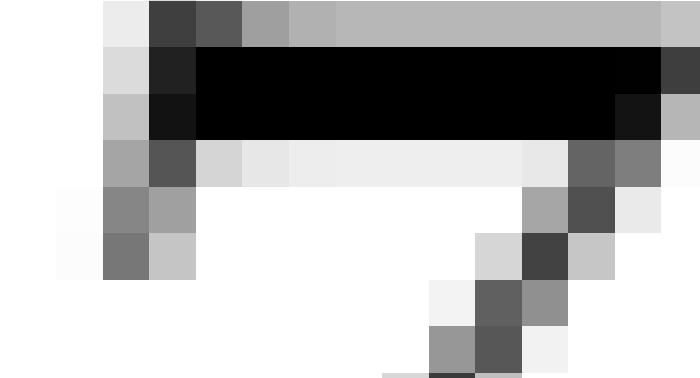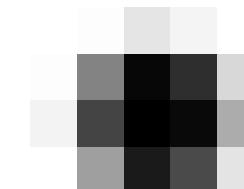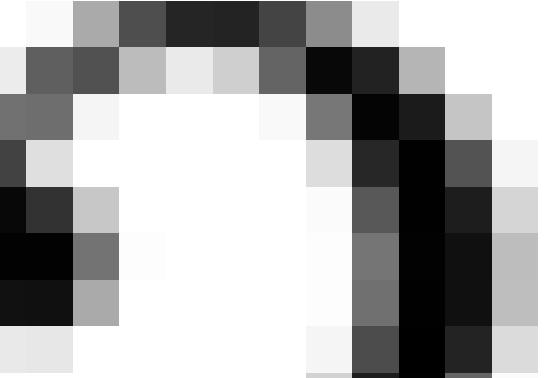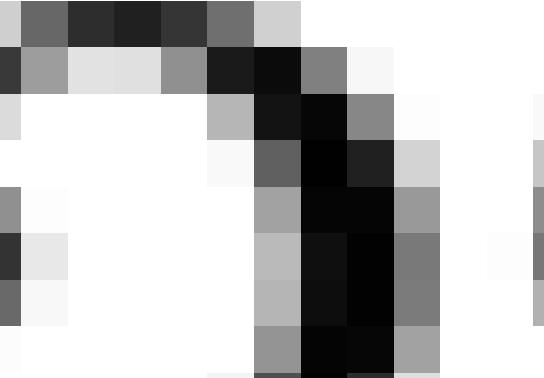



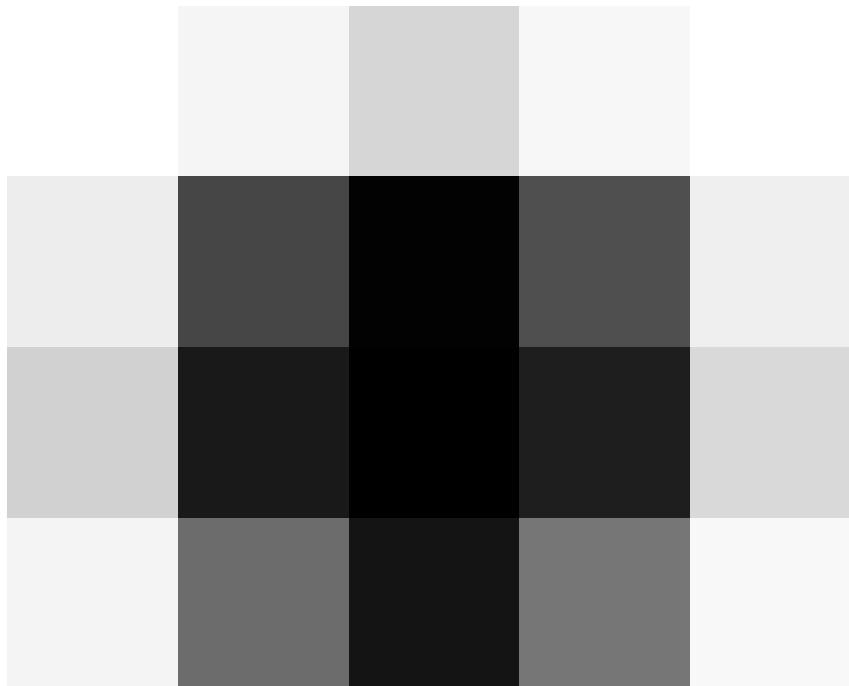


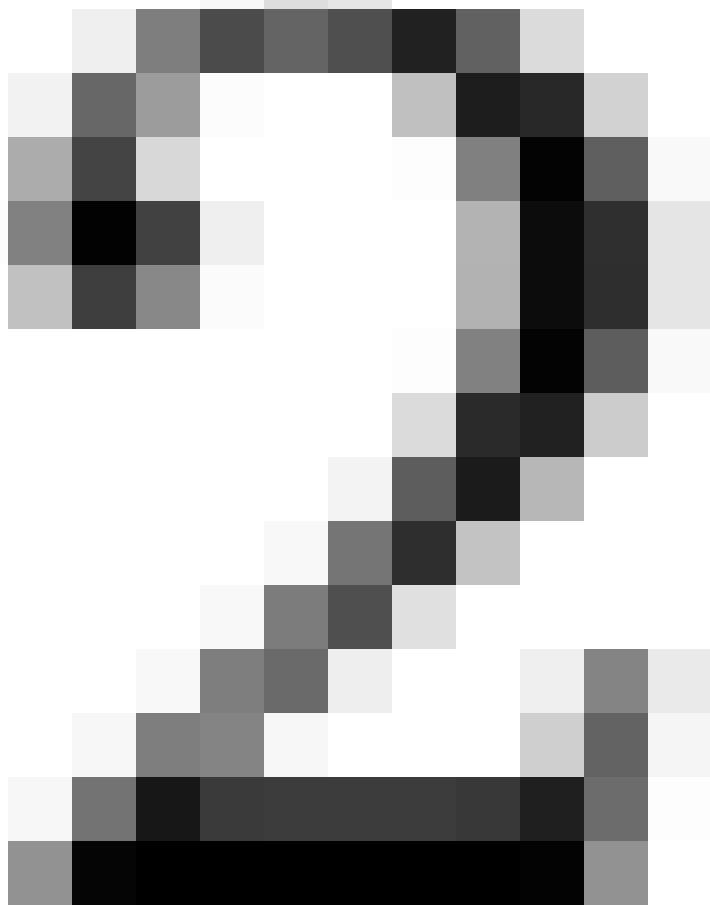


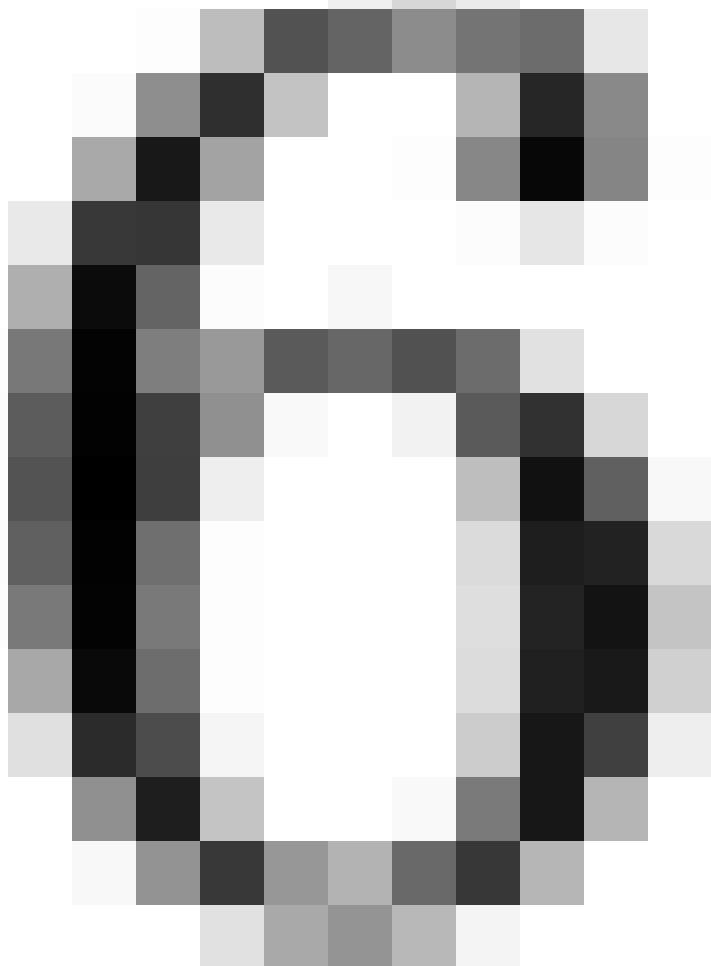


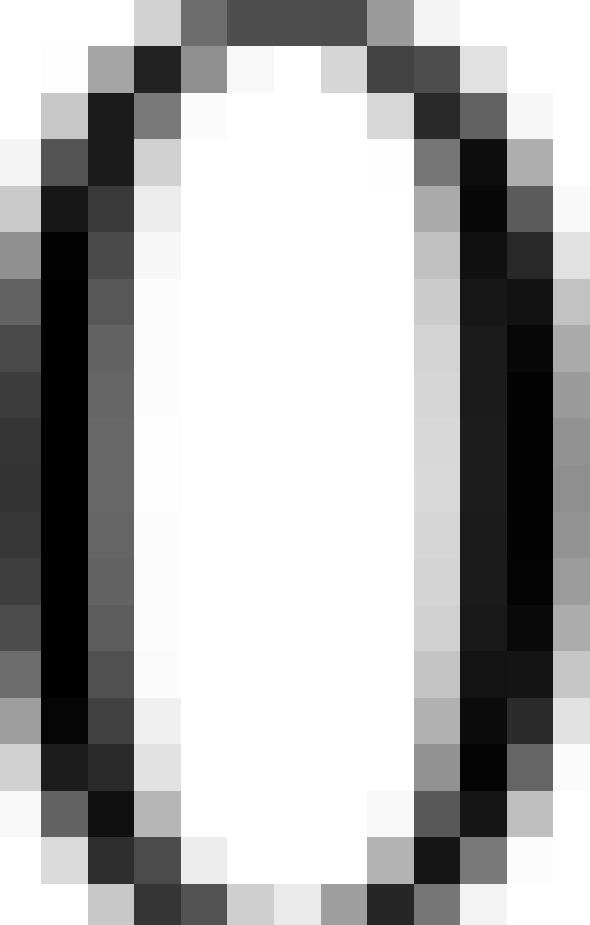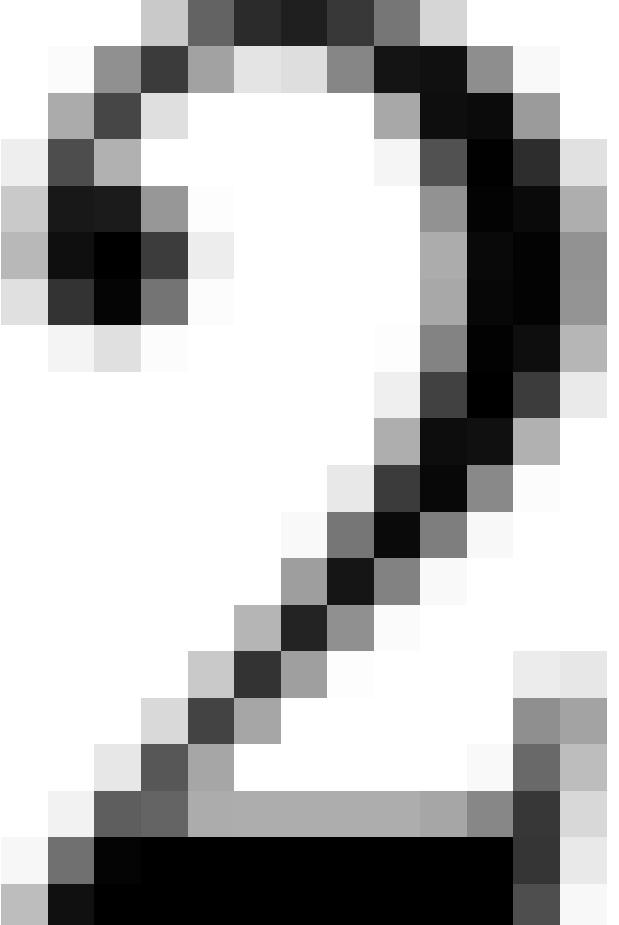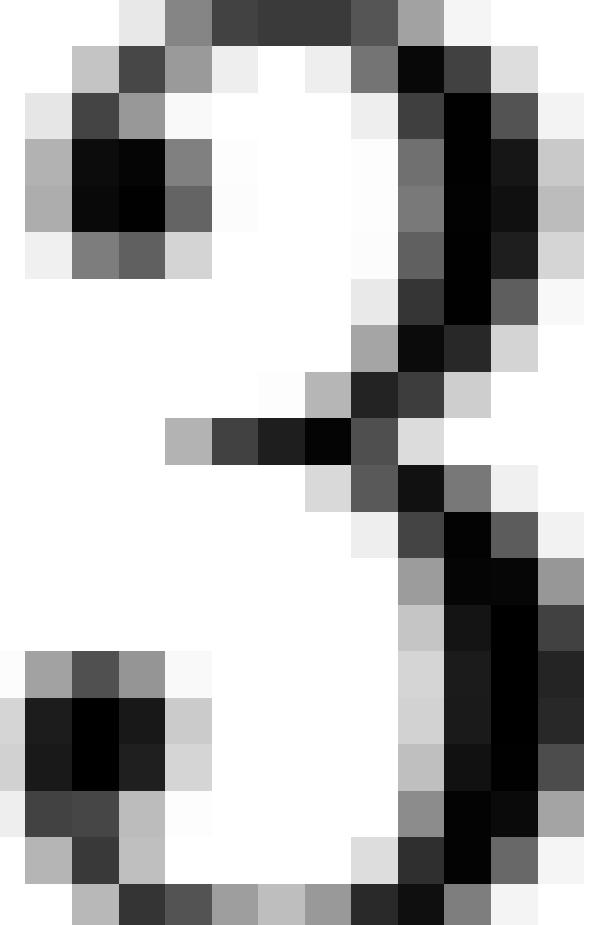
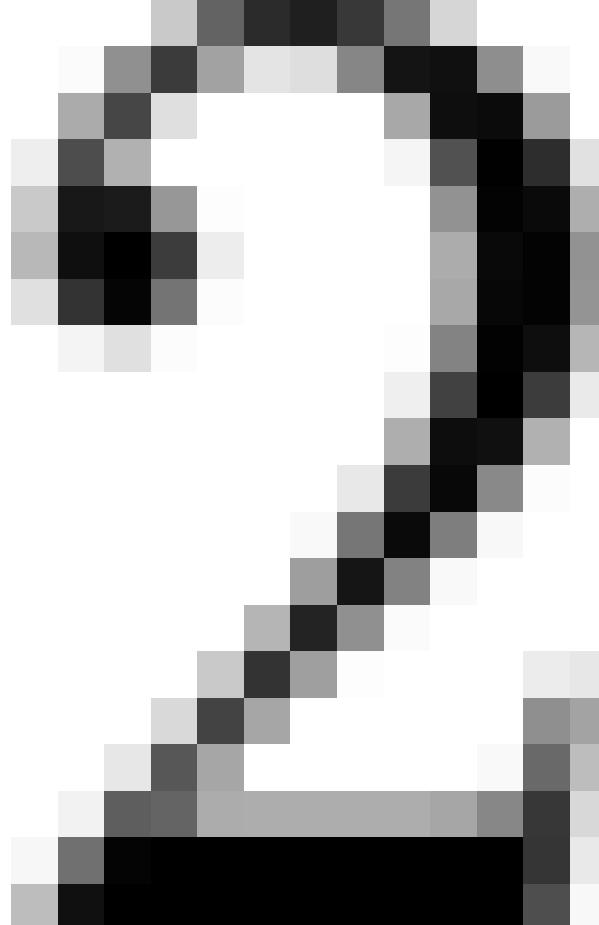


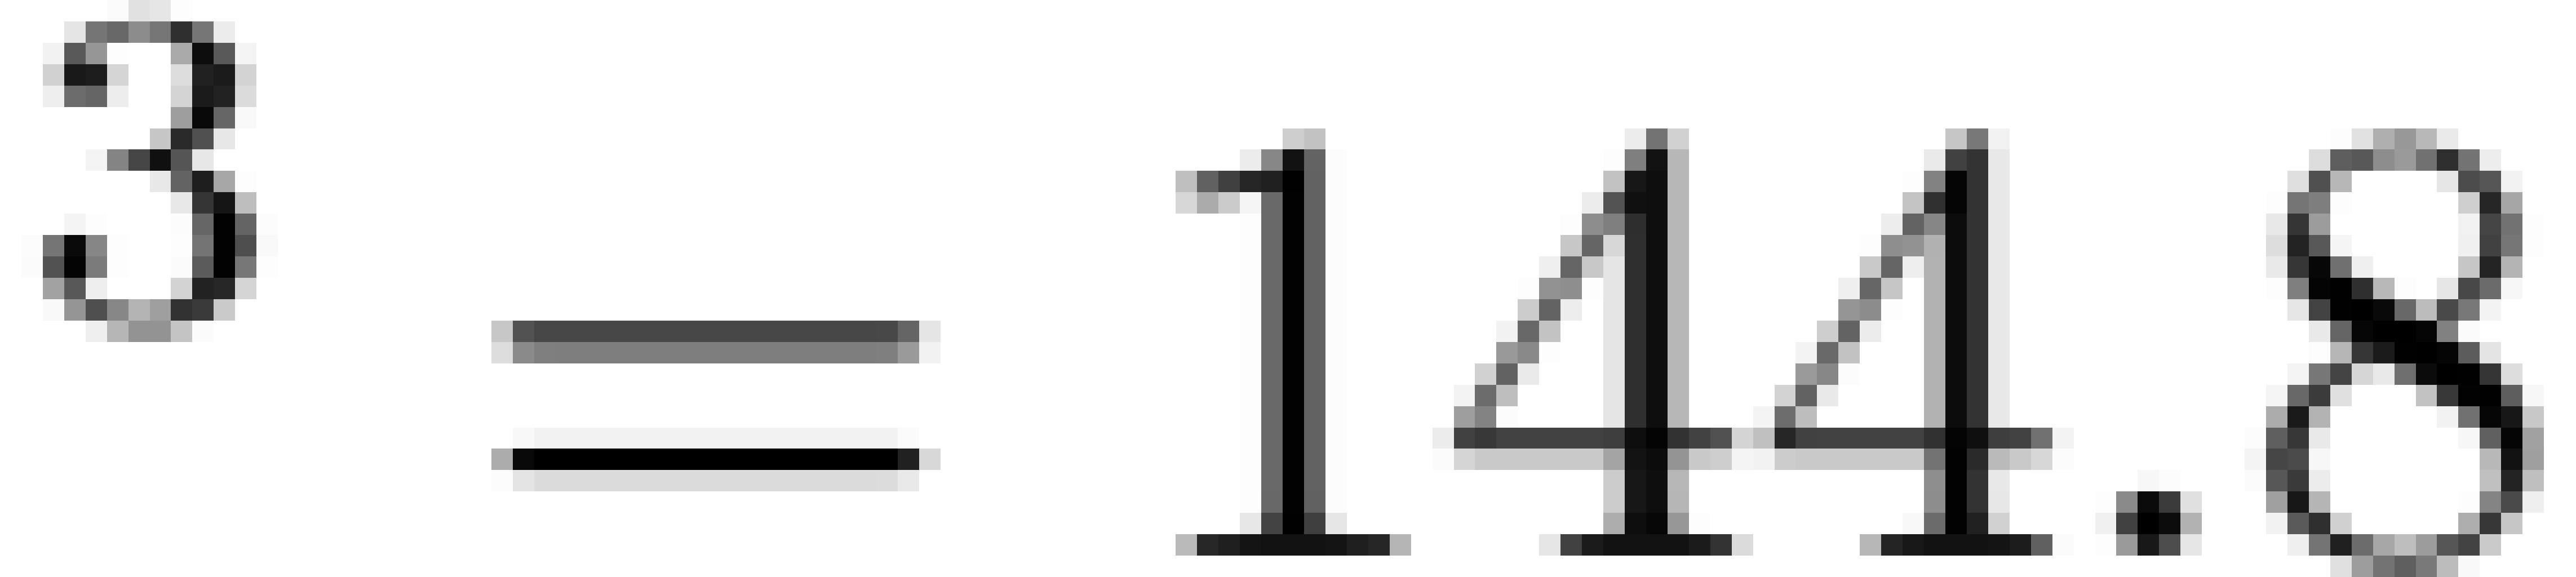




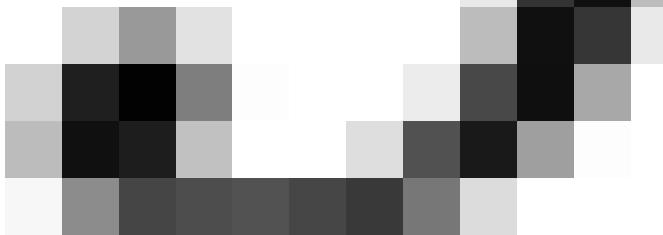
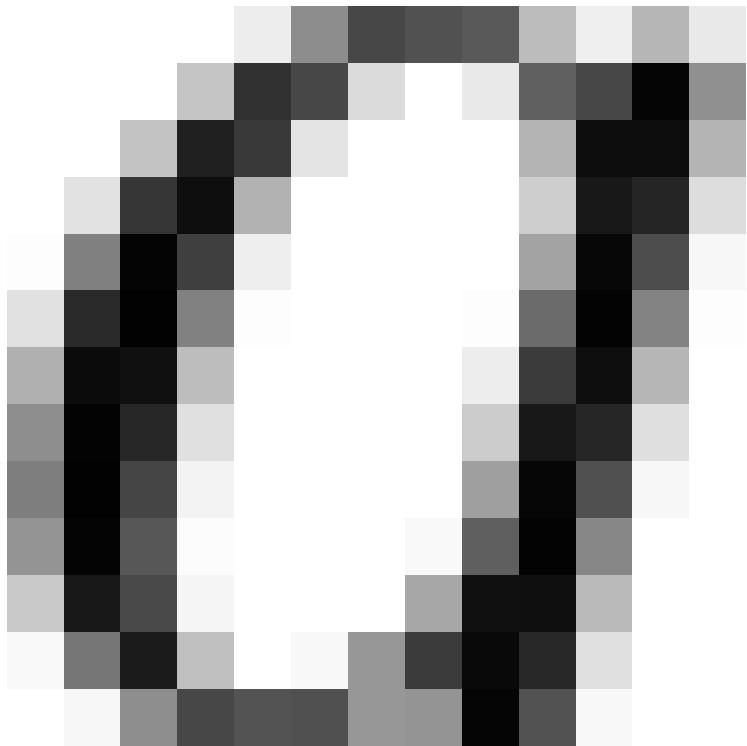



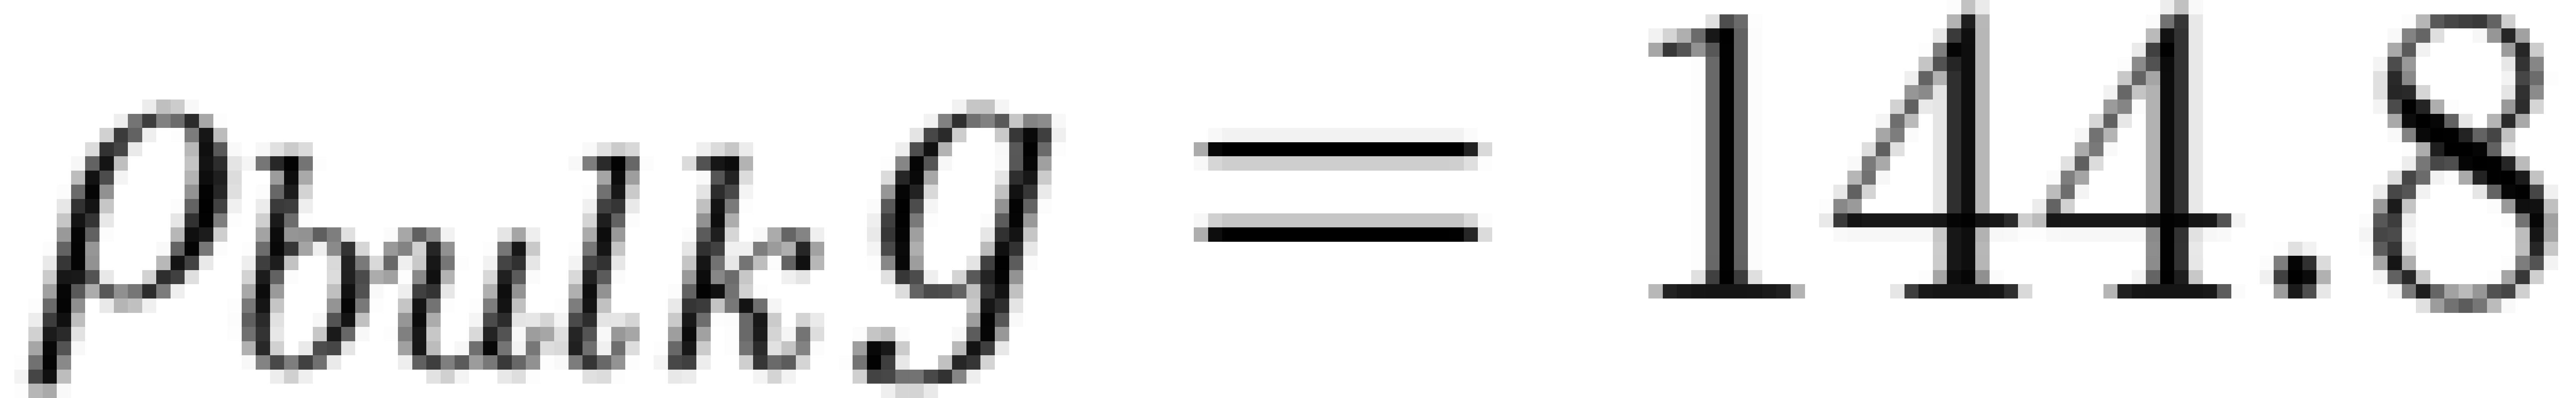



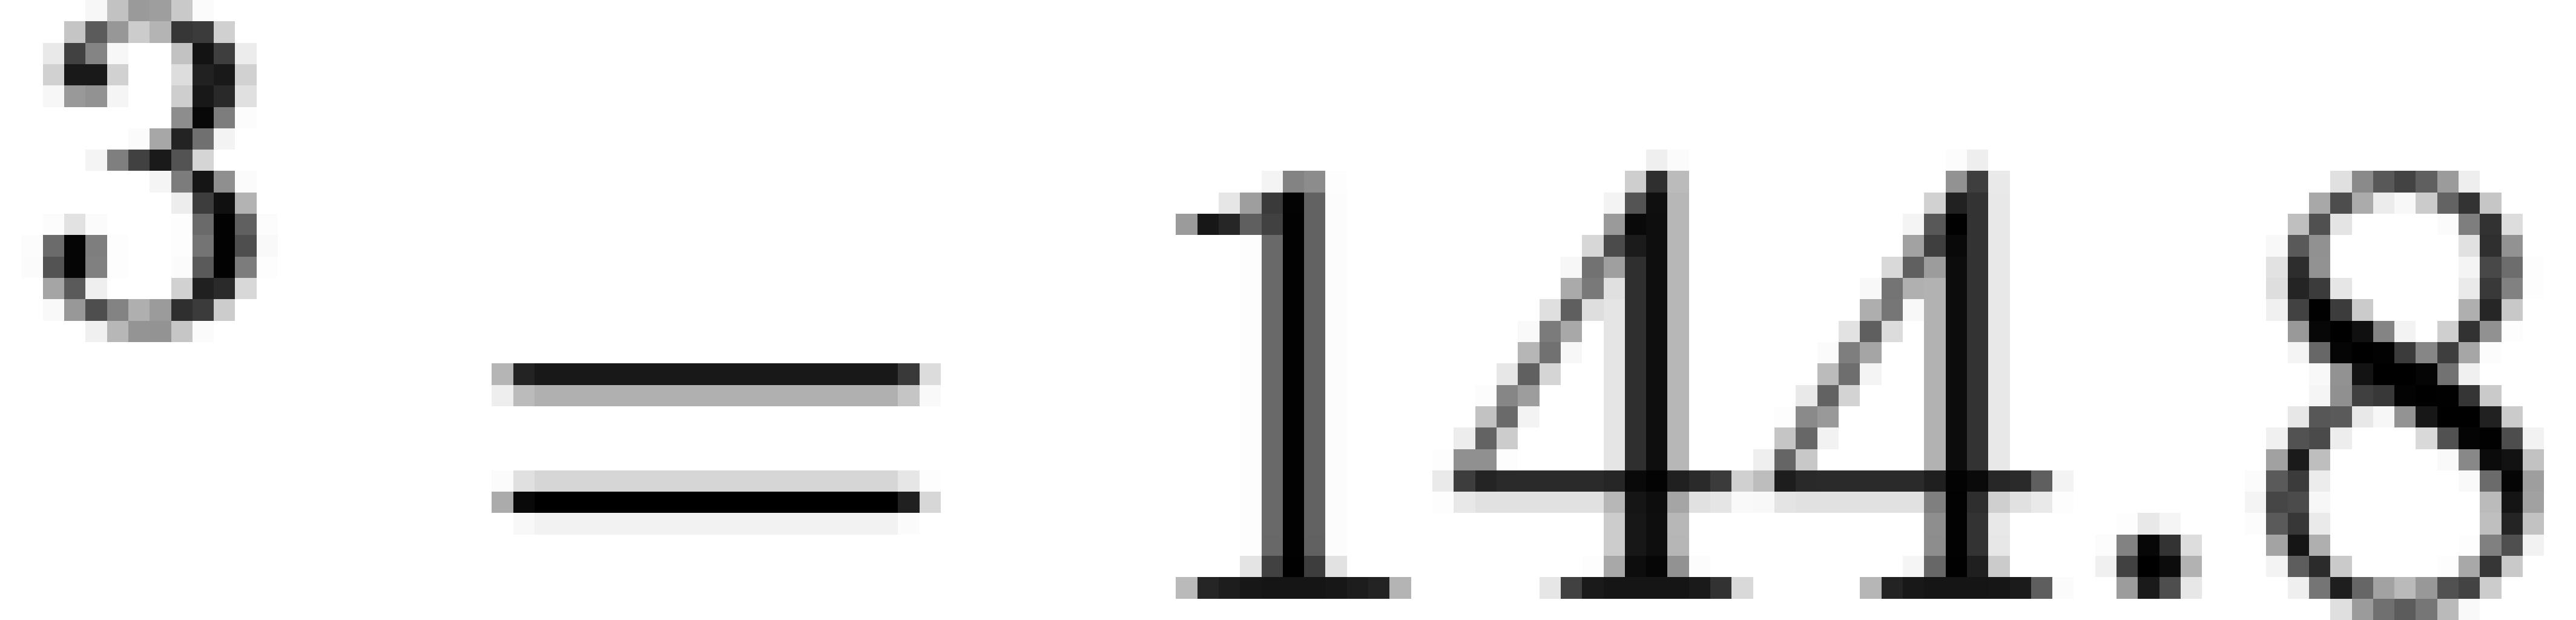


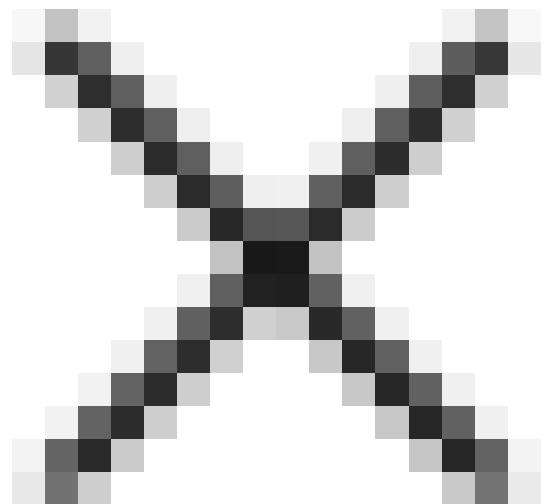
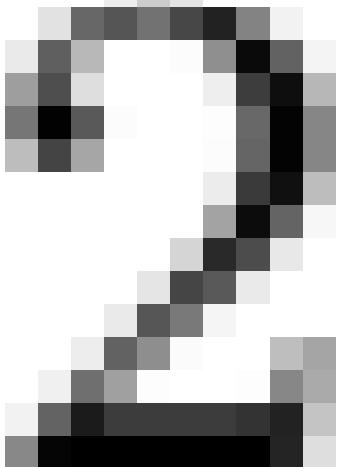






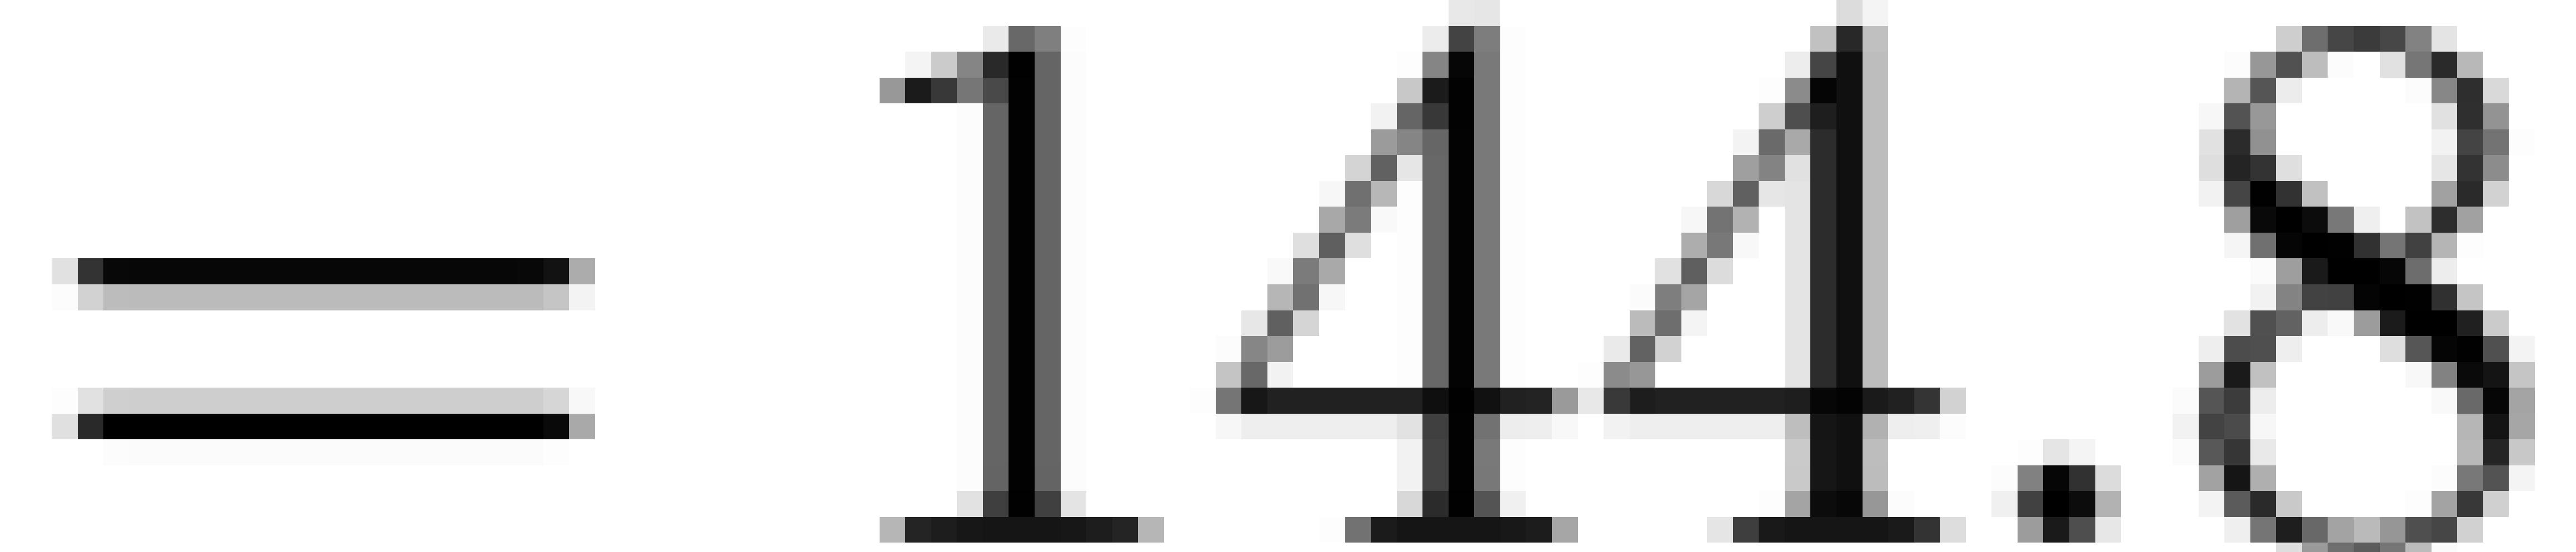



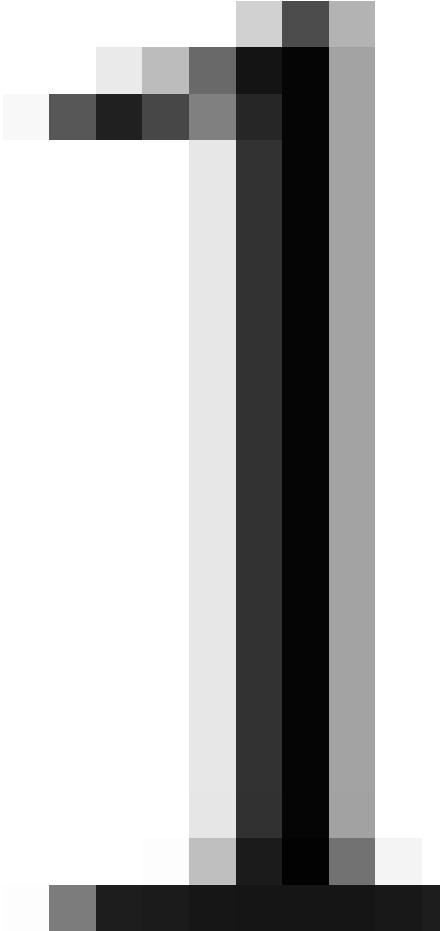
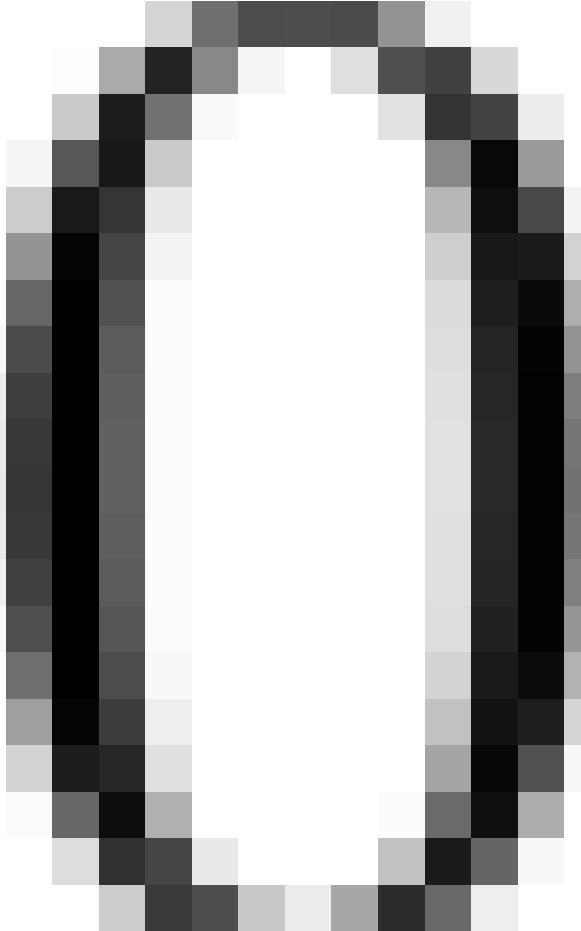
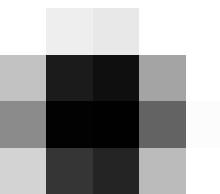
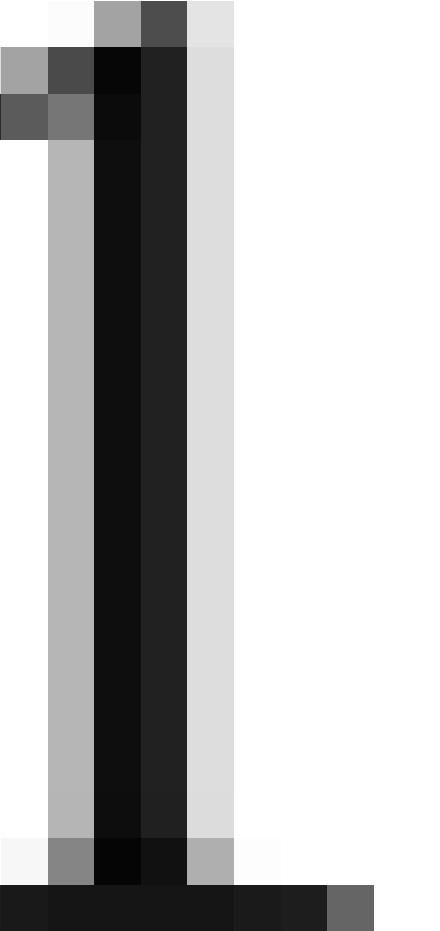



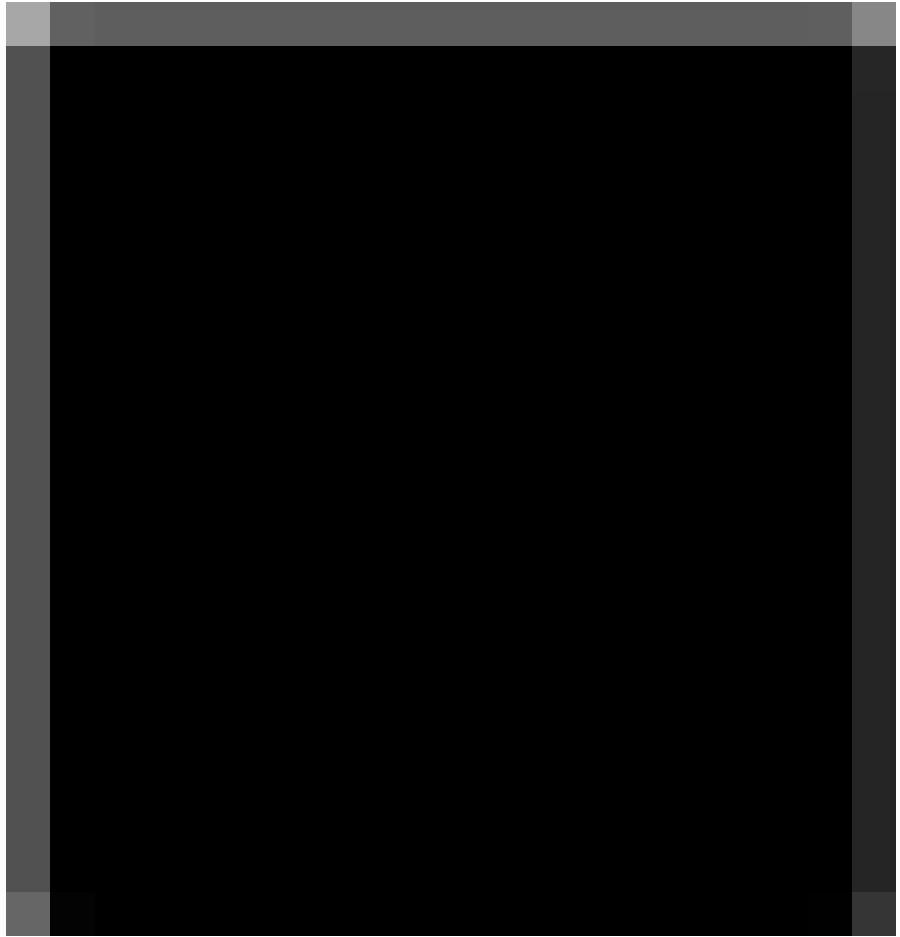
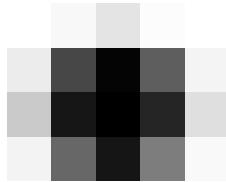


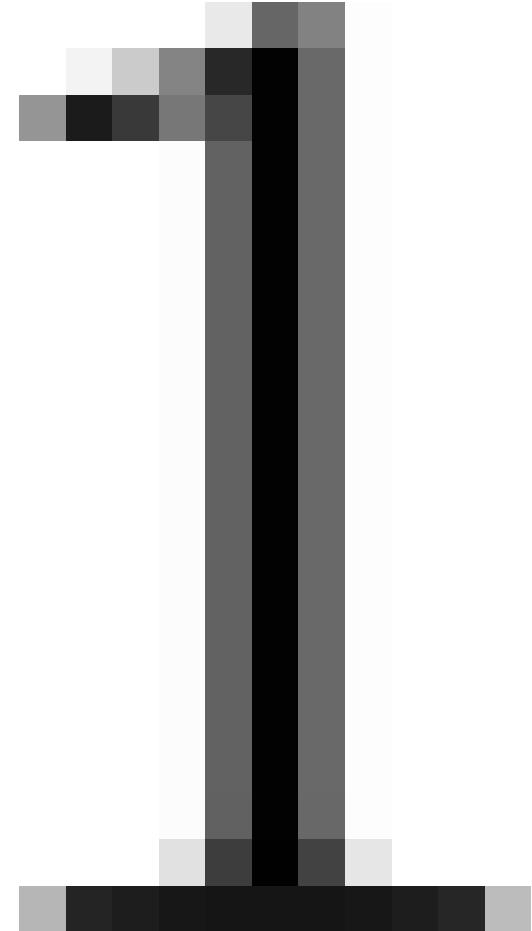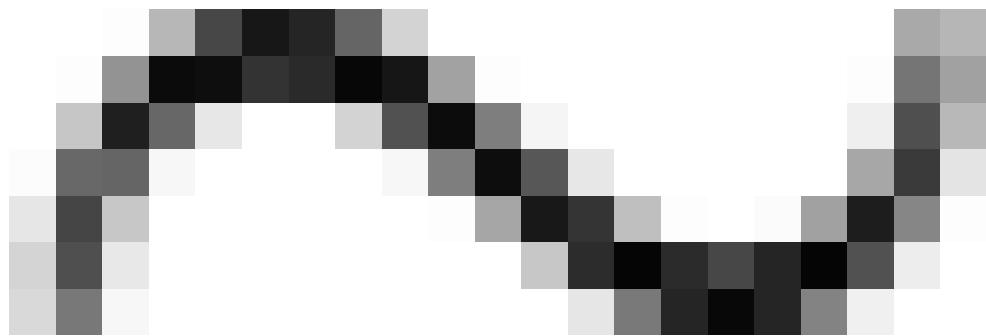

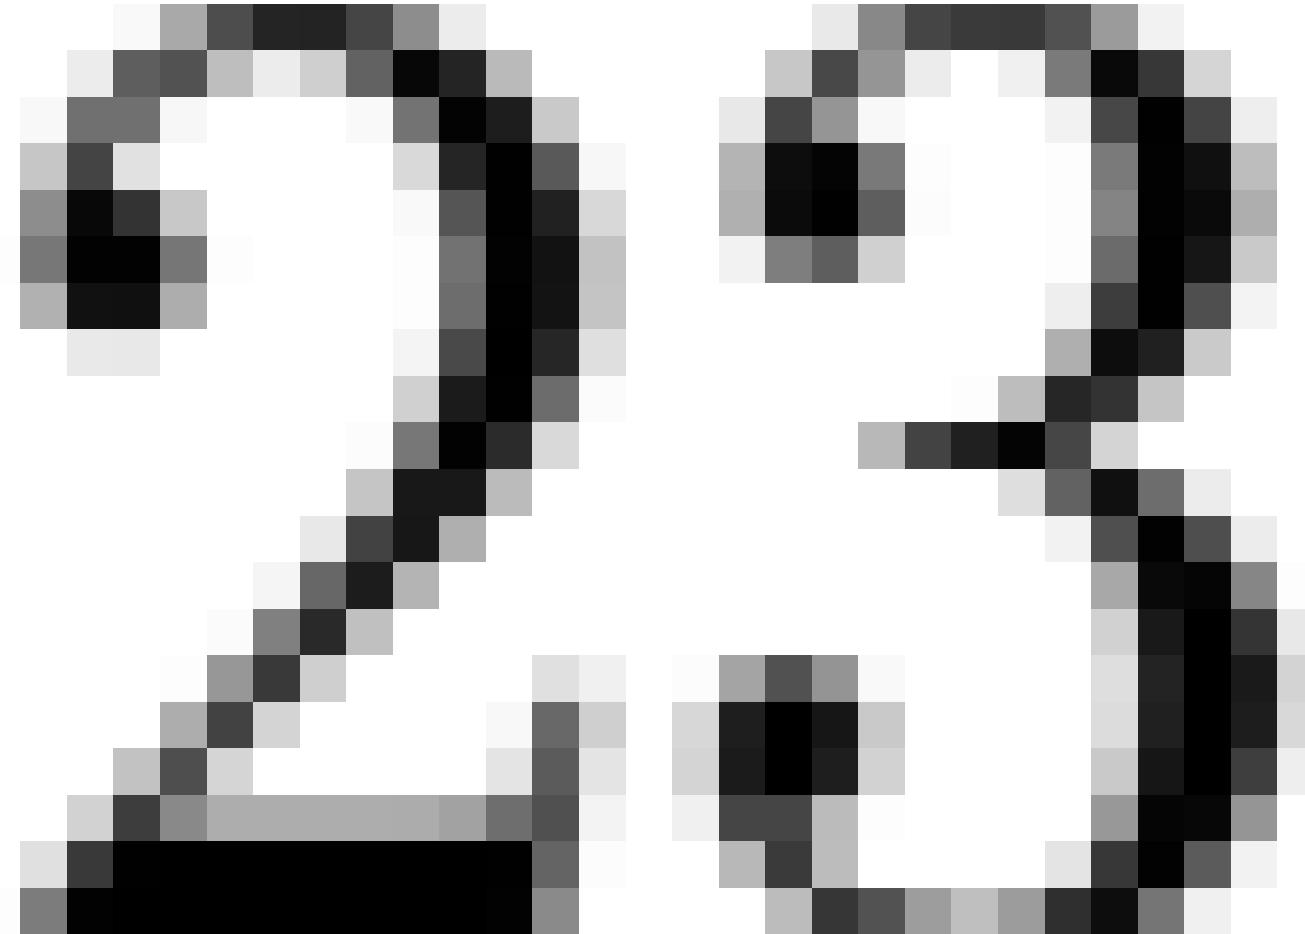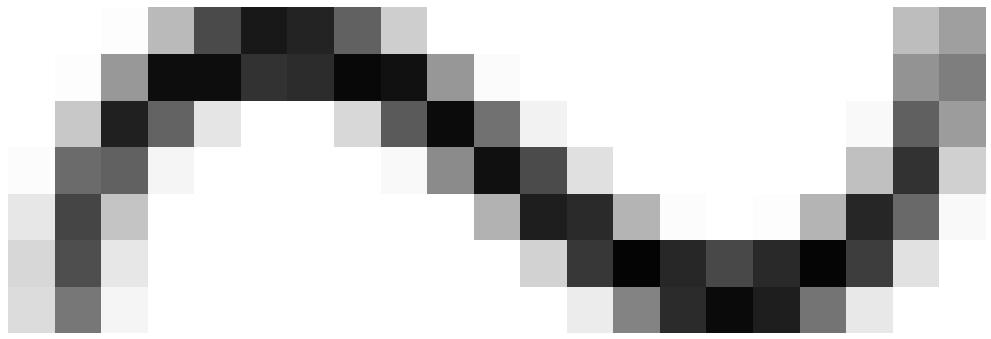


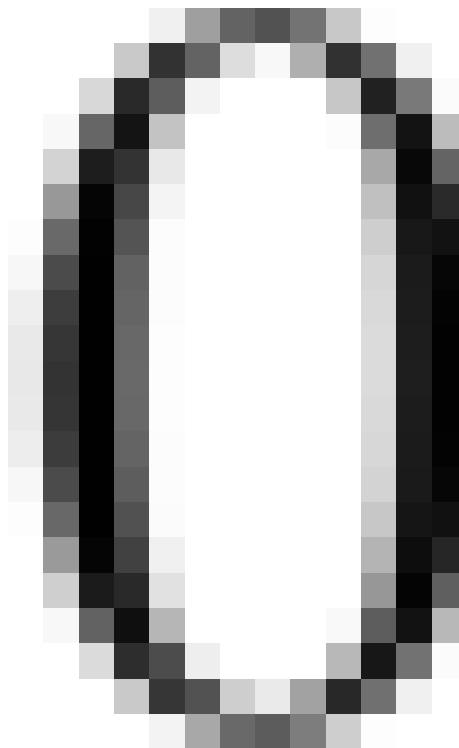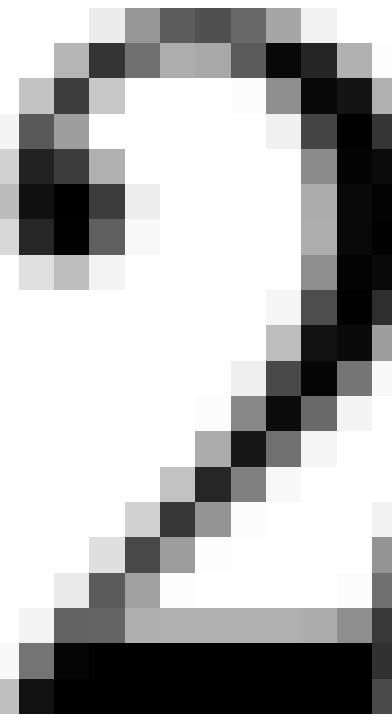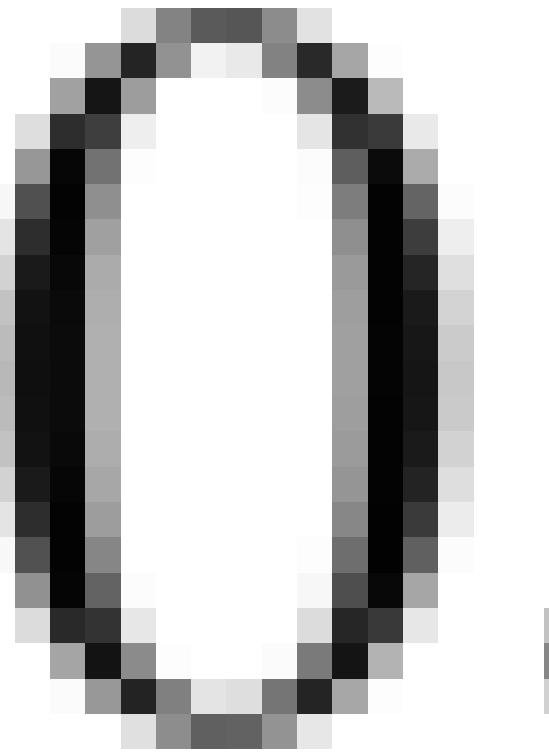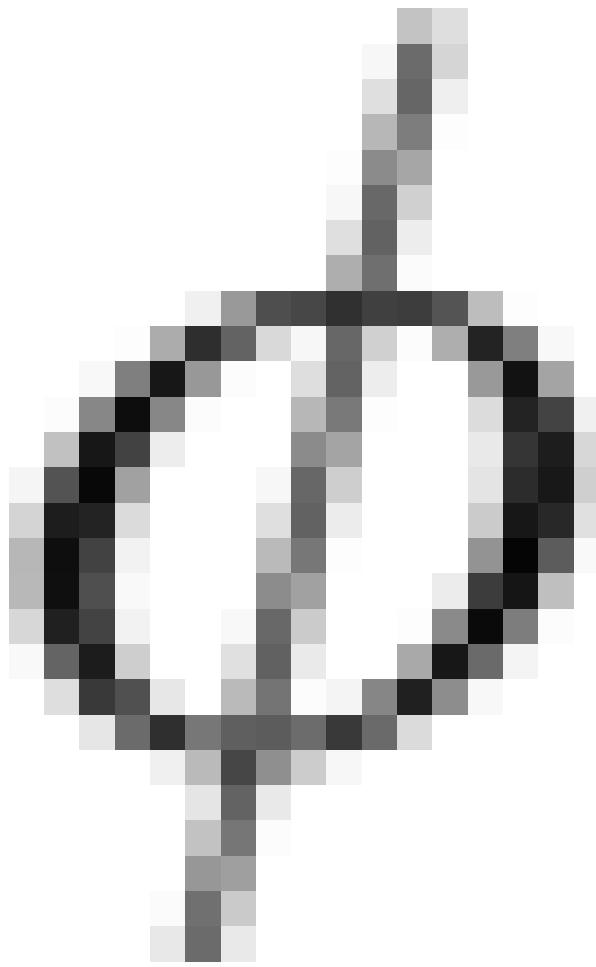


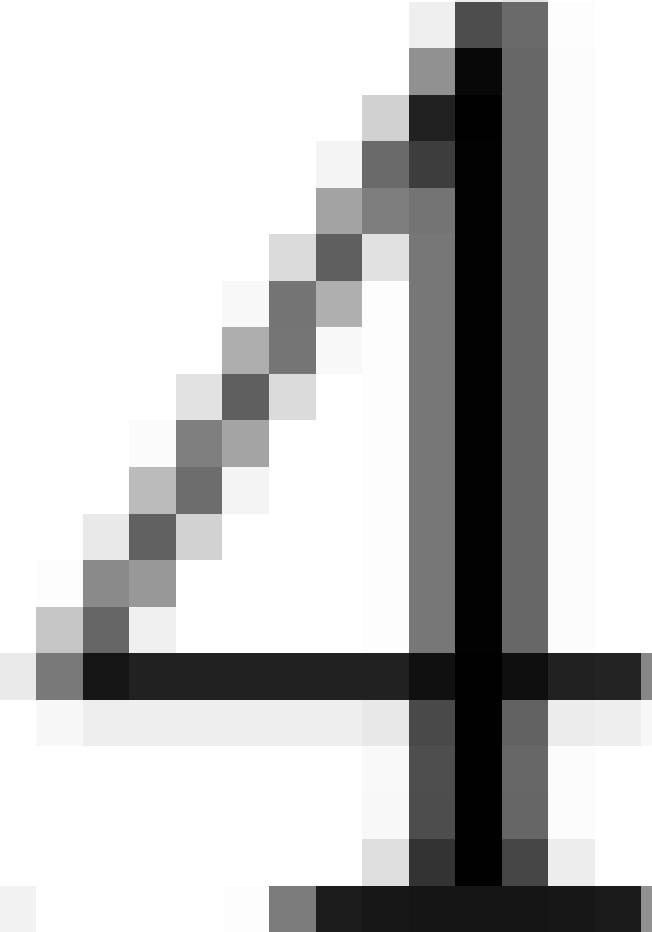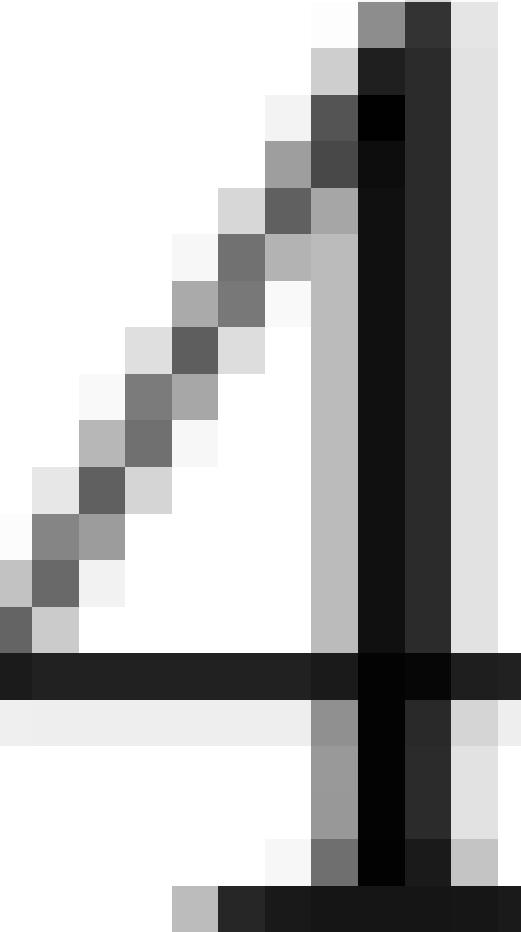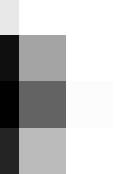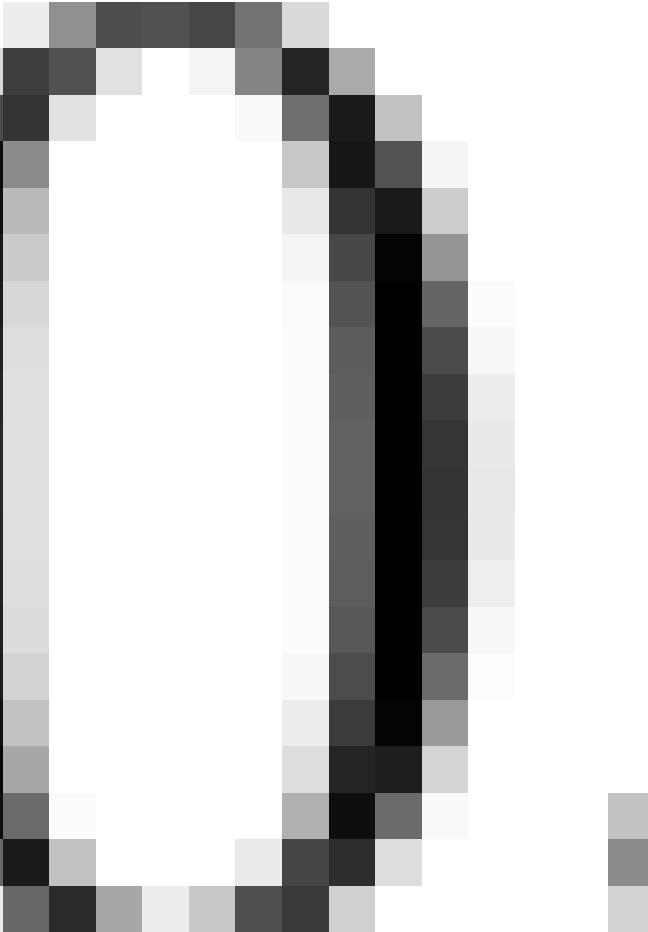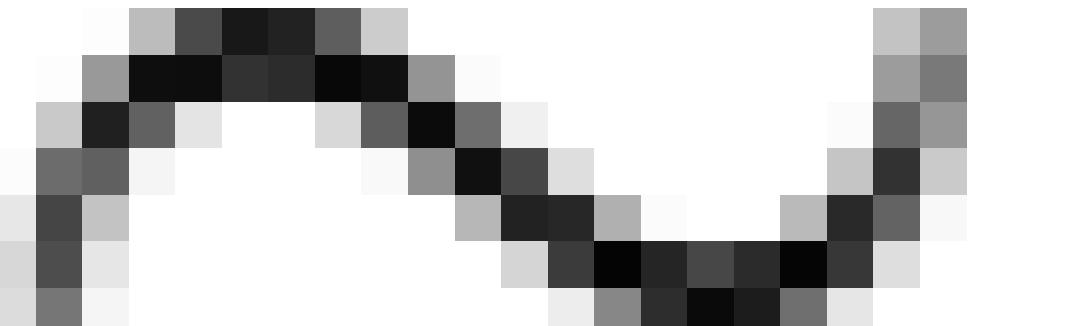

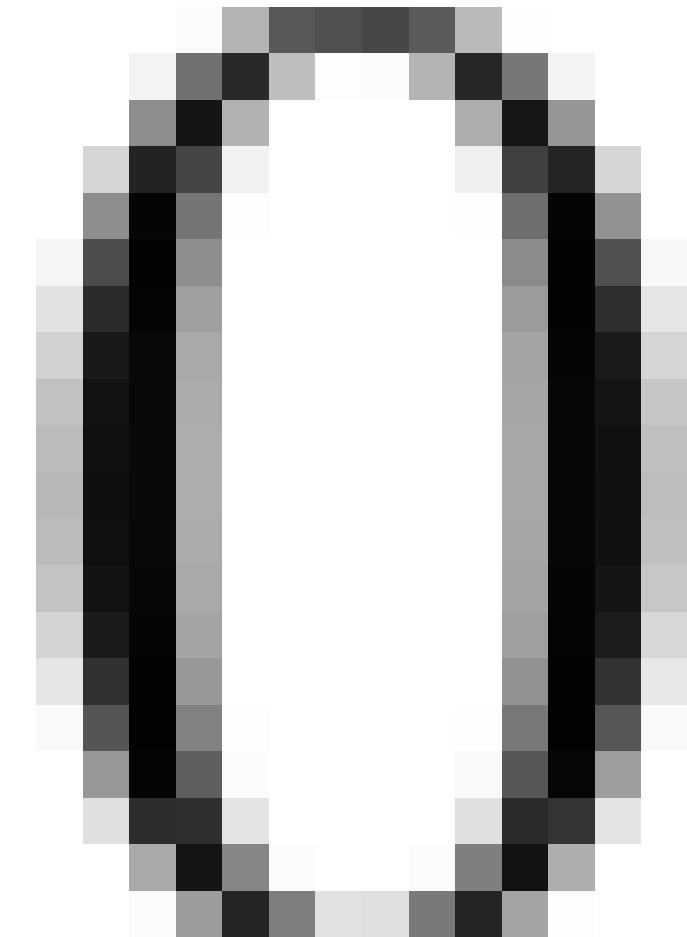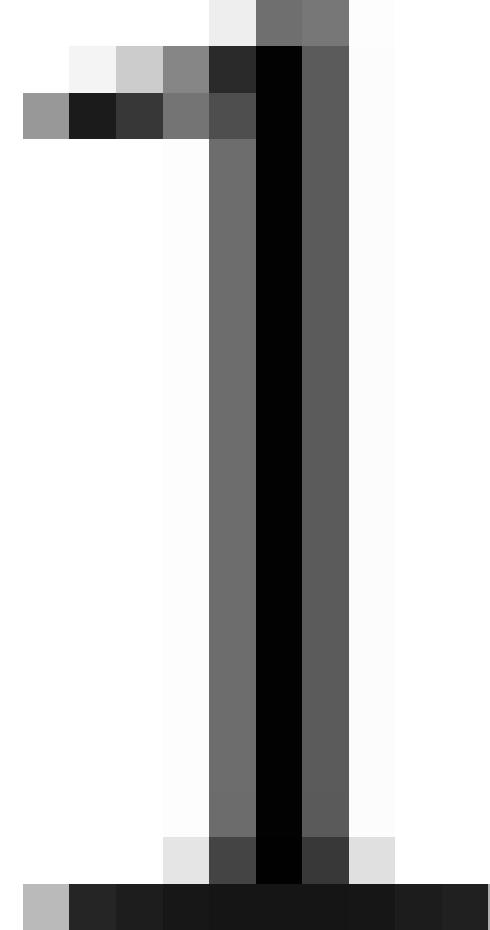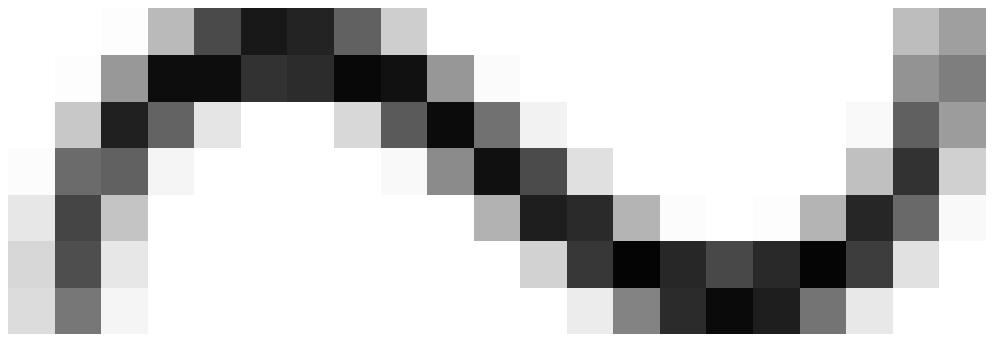






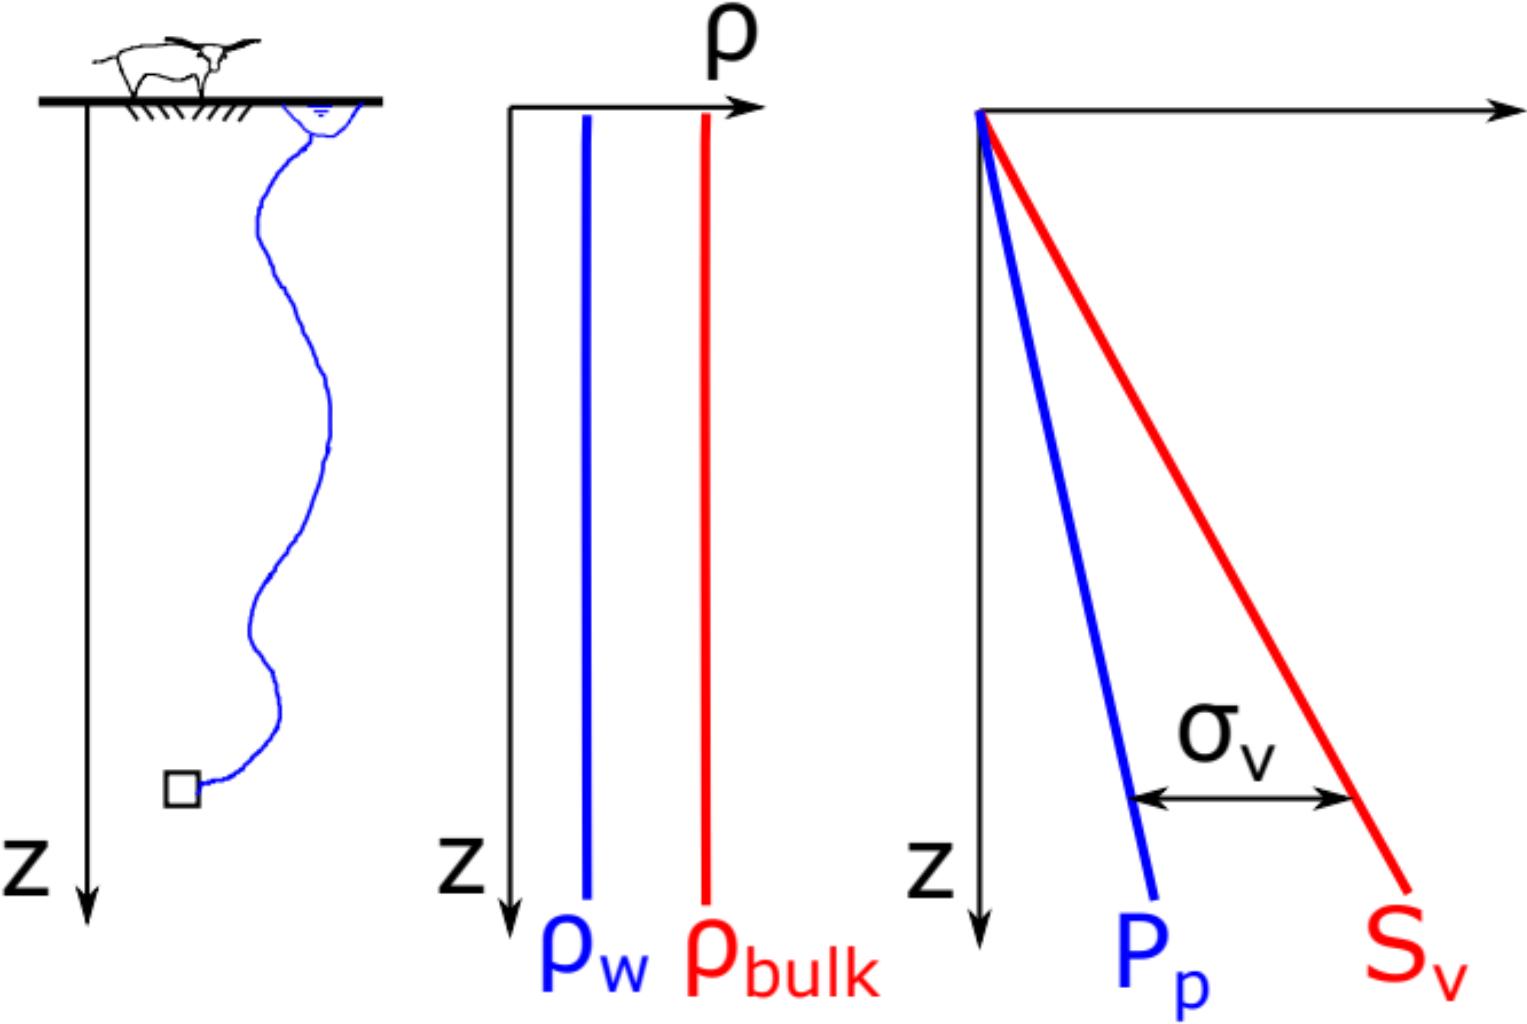







Effective stress =

Total stress – Pore pressure


$$\sigma = S - p$$

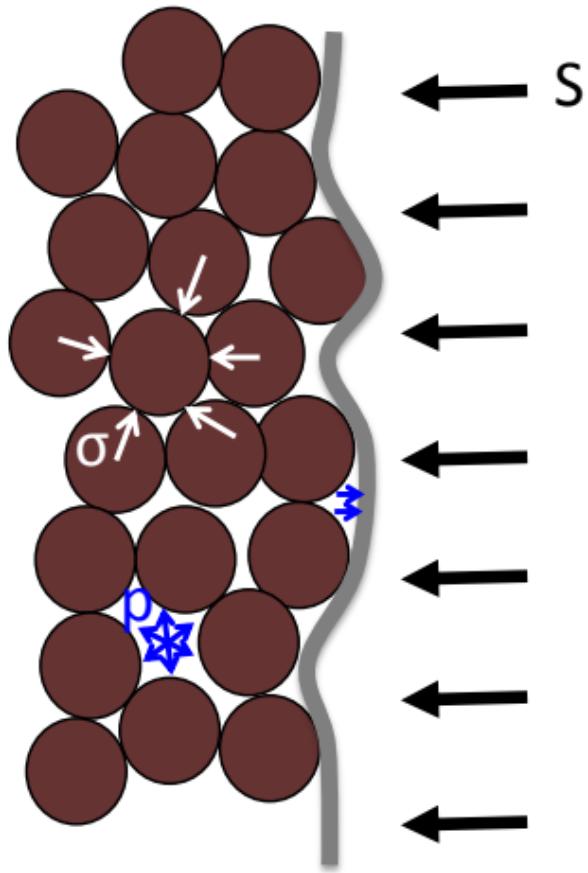



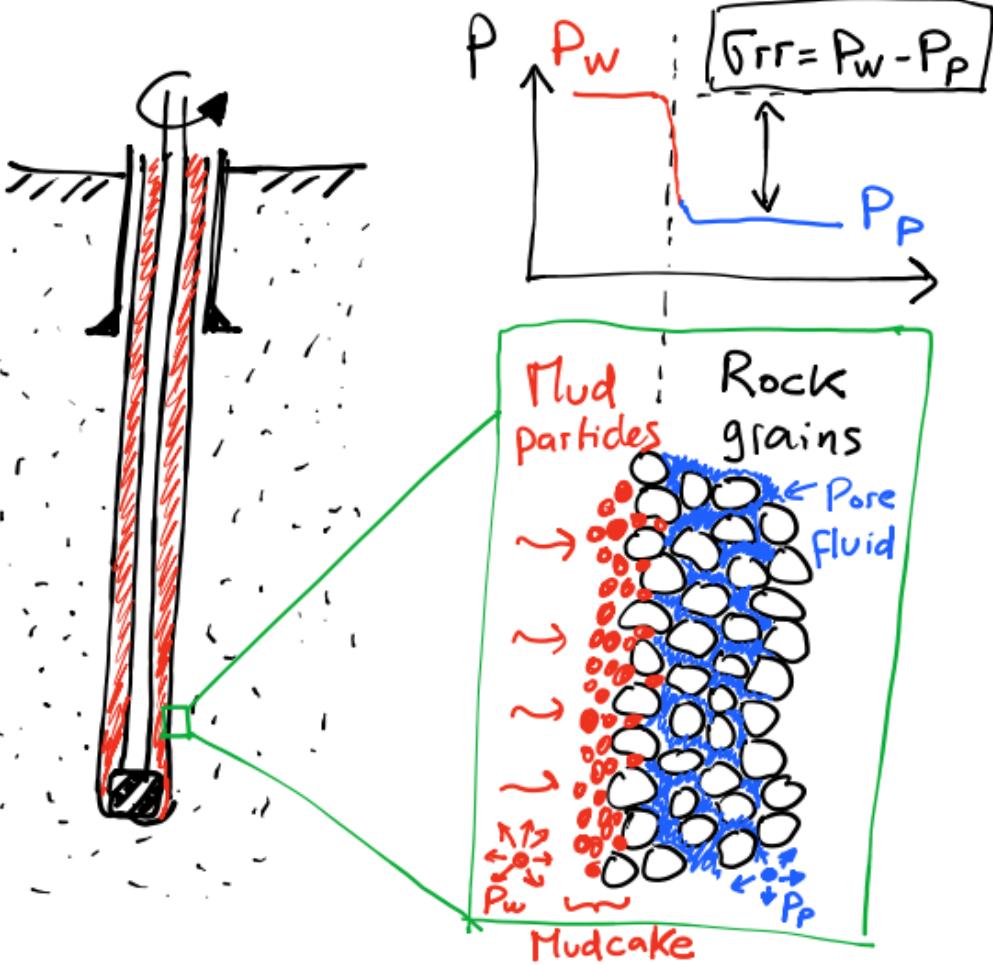

dP P $\rho_{w,9}$ 1040
 dz

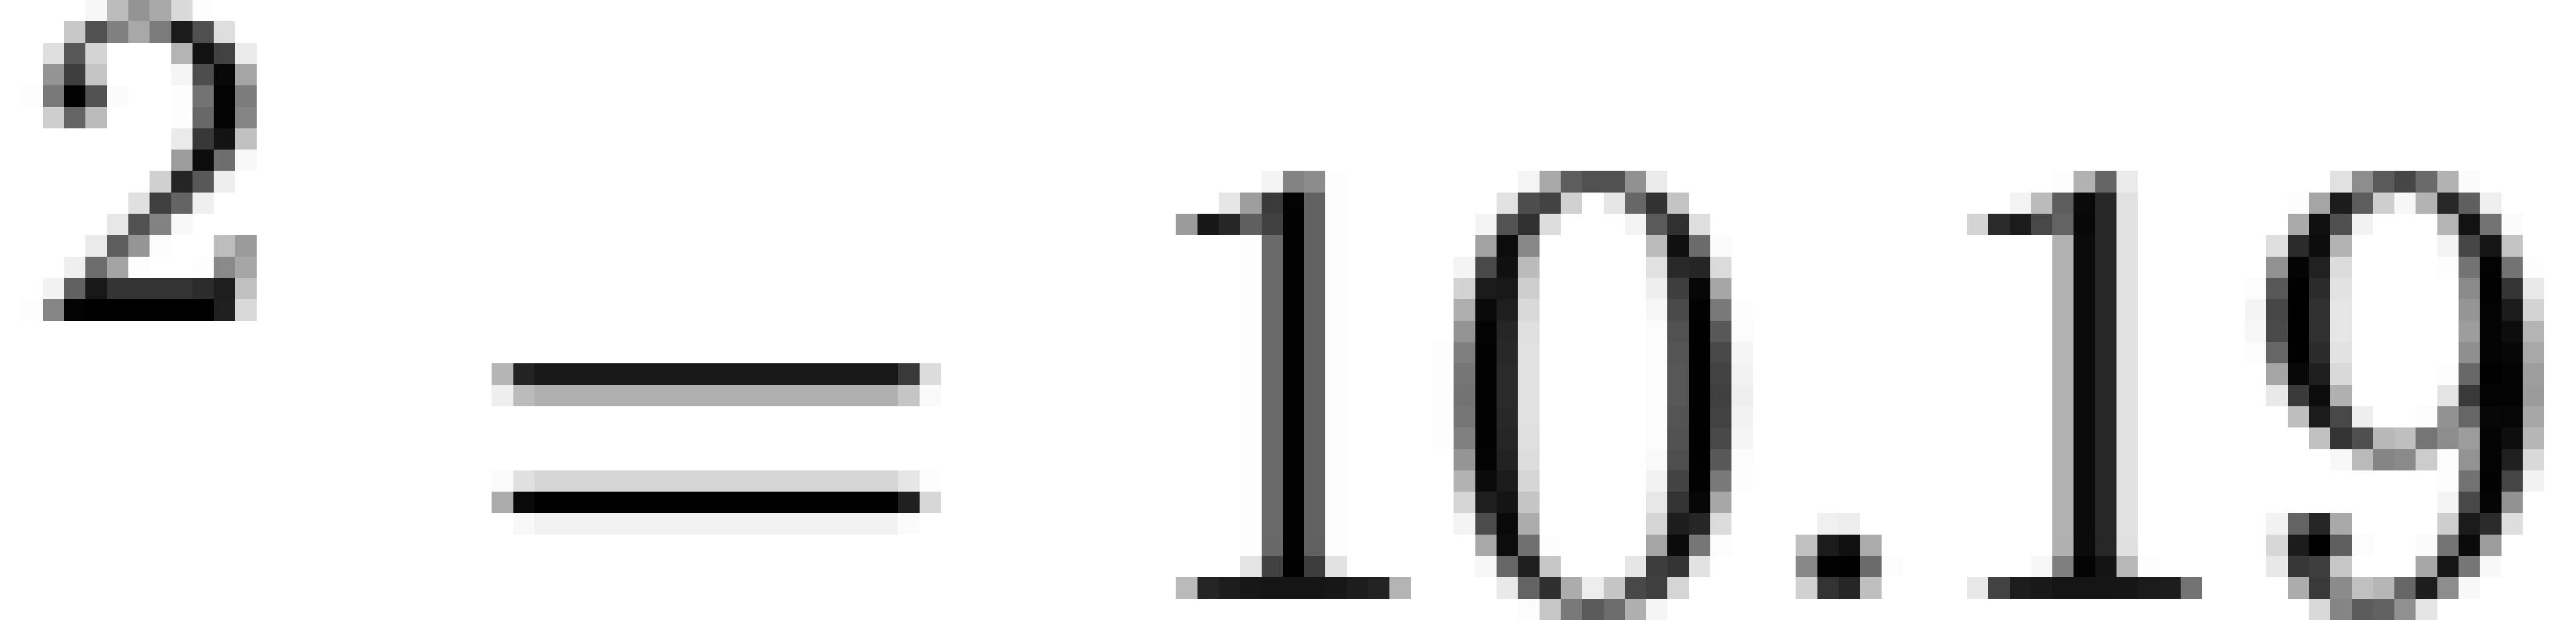

dsu = Paulk 2350









P
P





dP
dP
dZ
dZ

—
—

10.
19

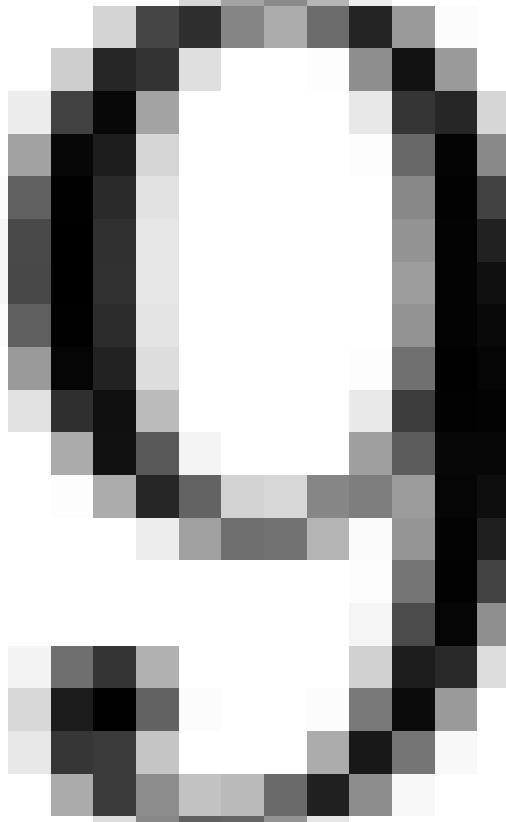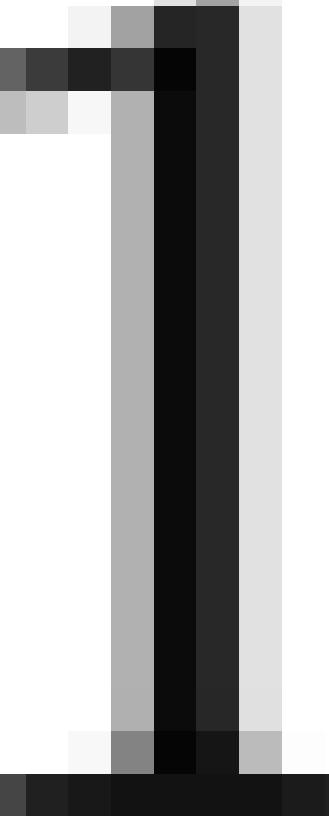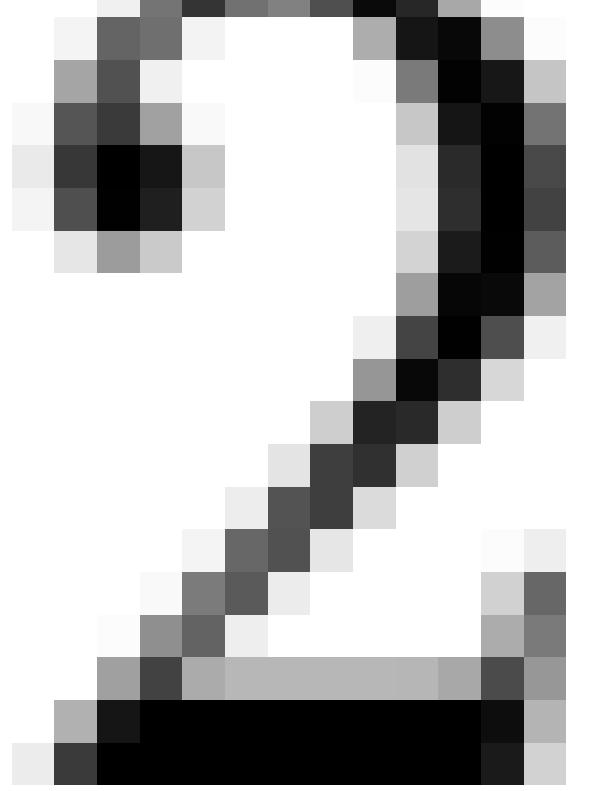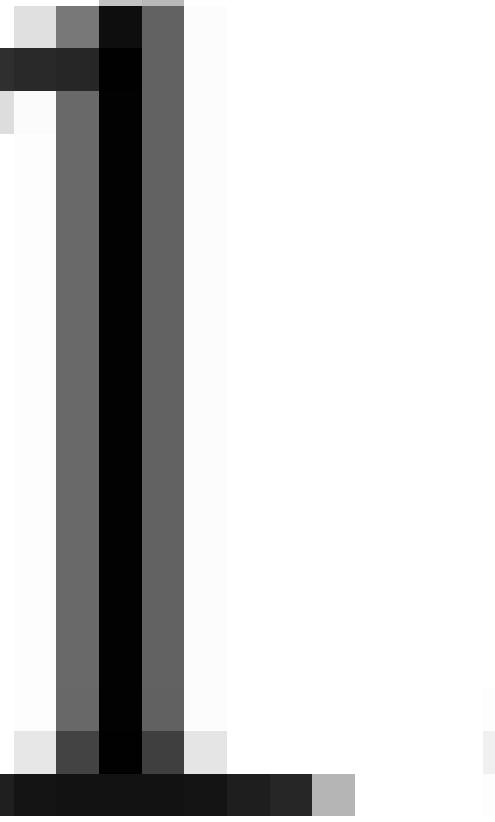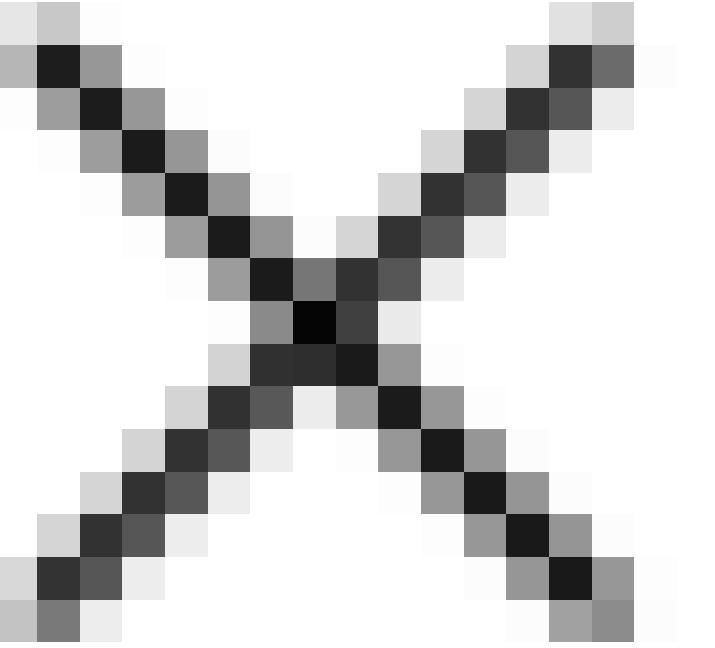

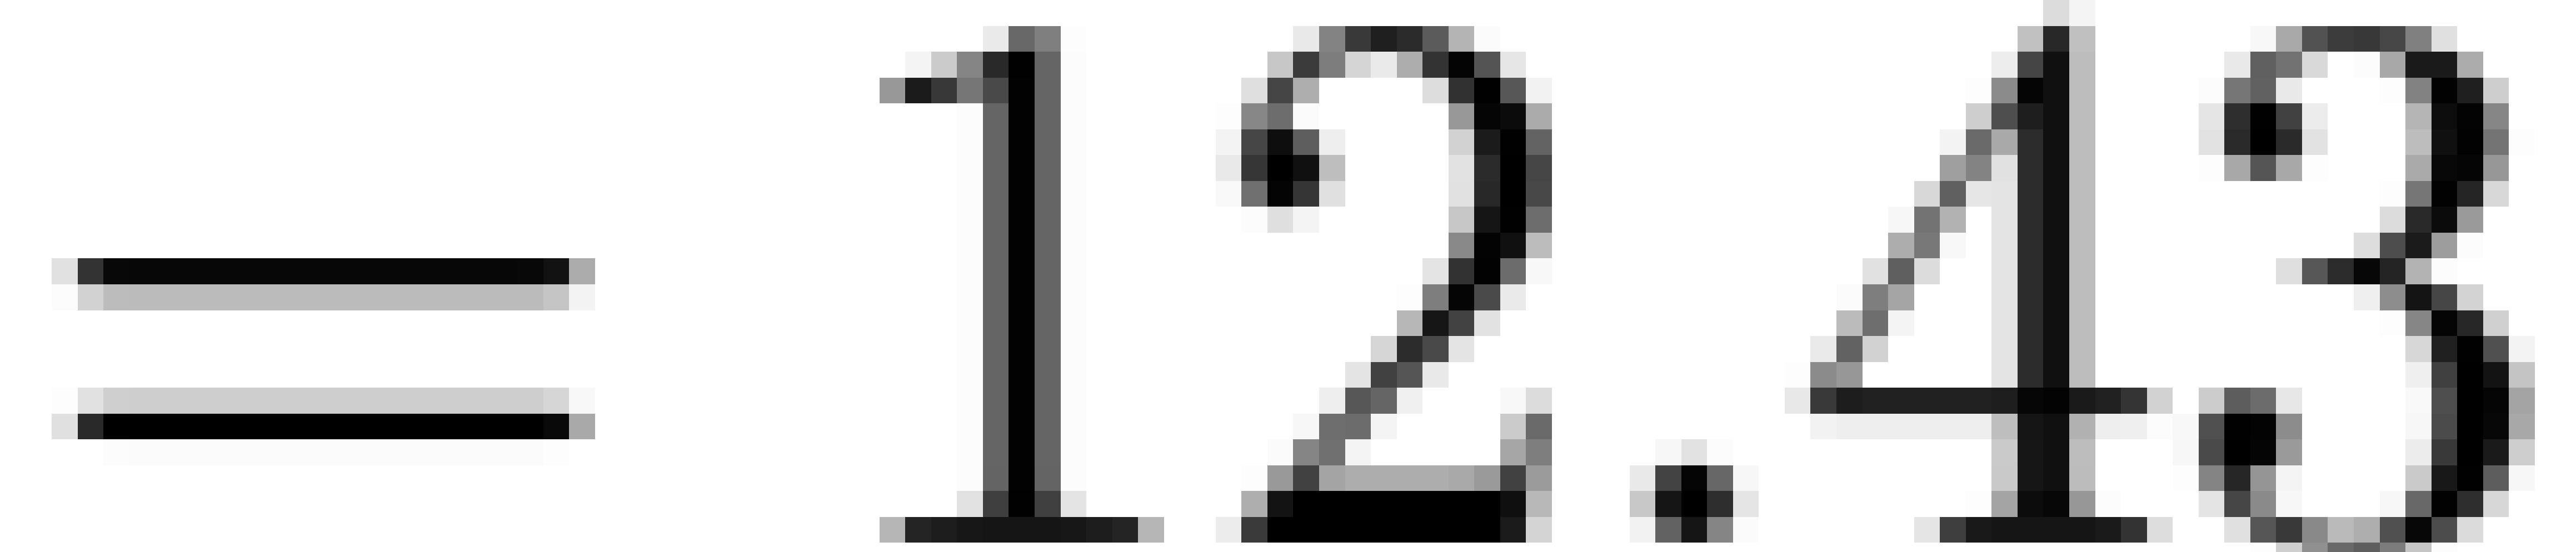

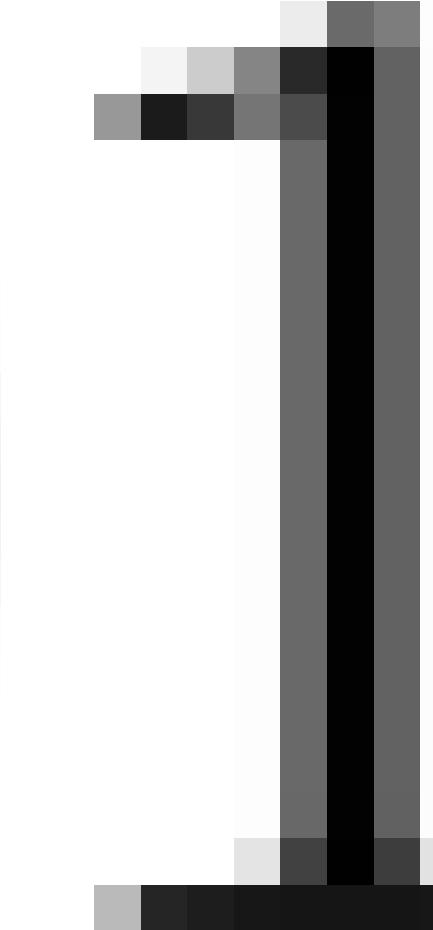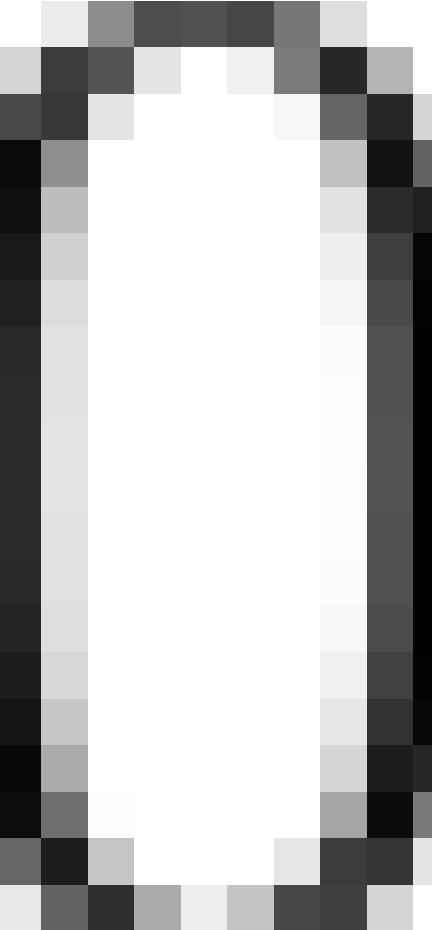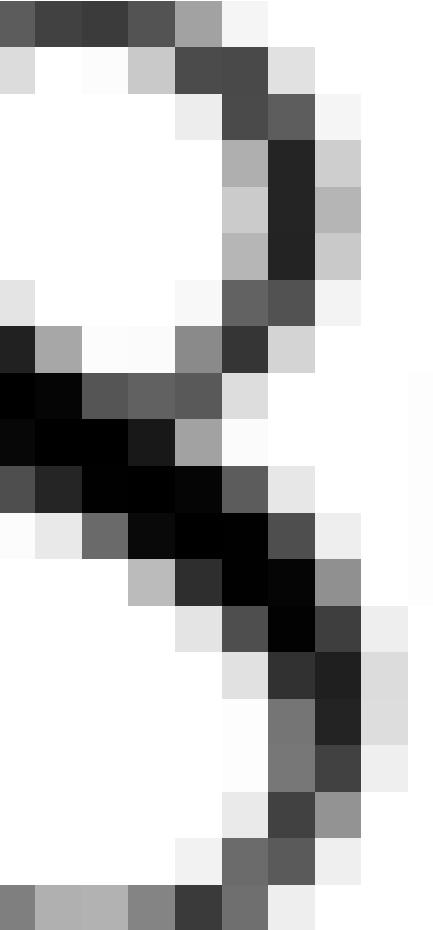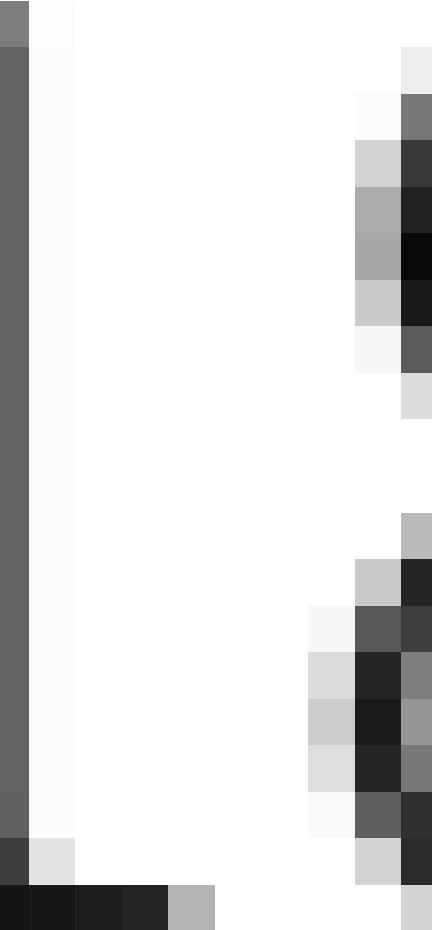

d_5^s






\bar{z}




23.03



d_2^s

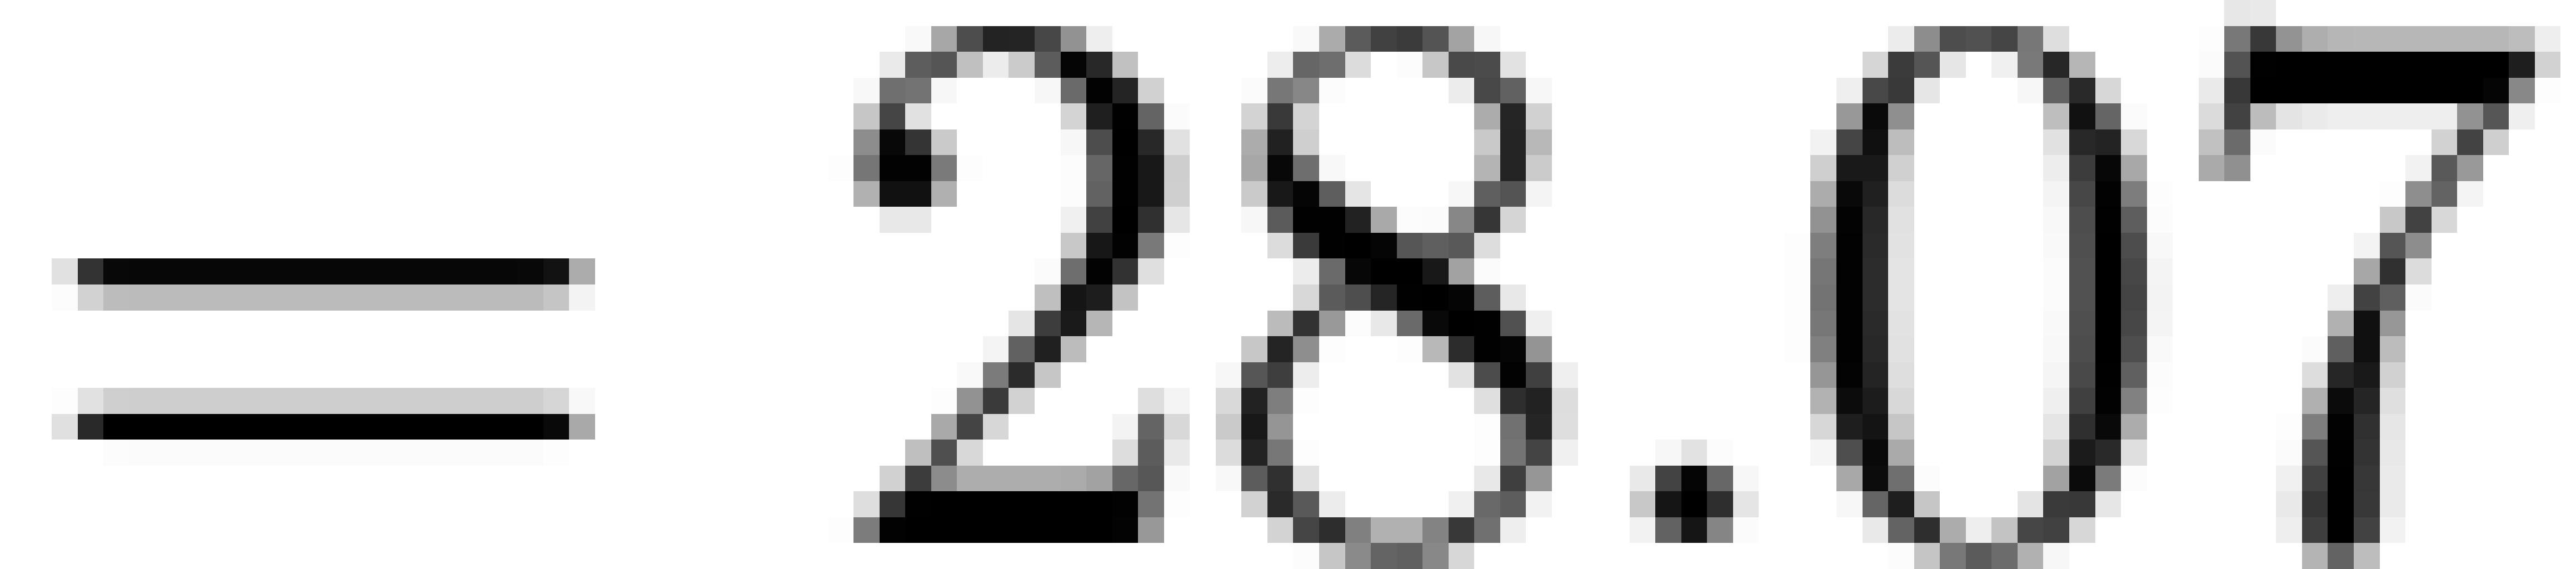


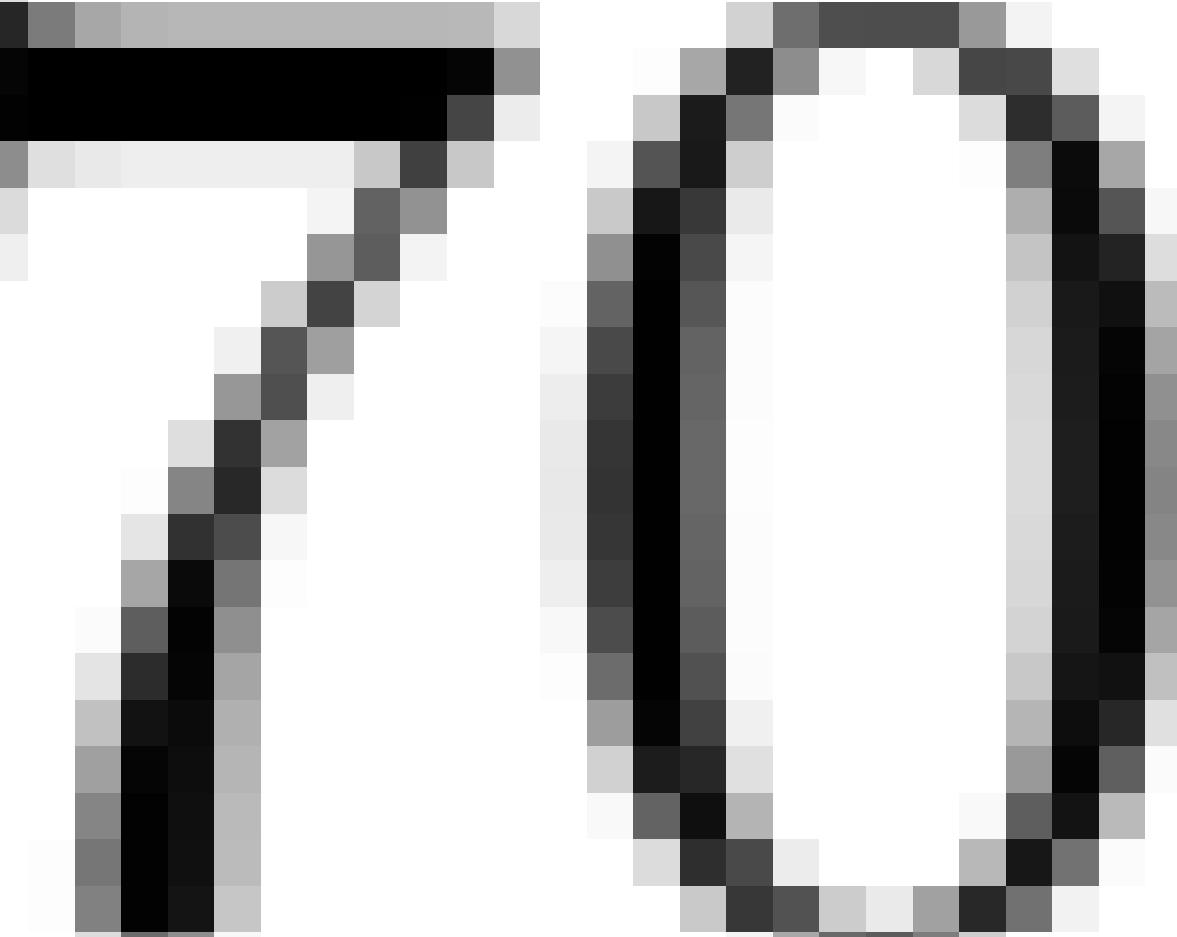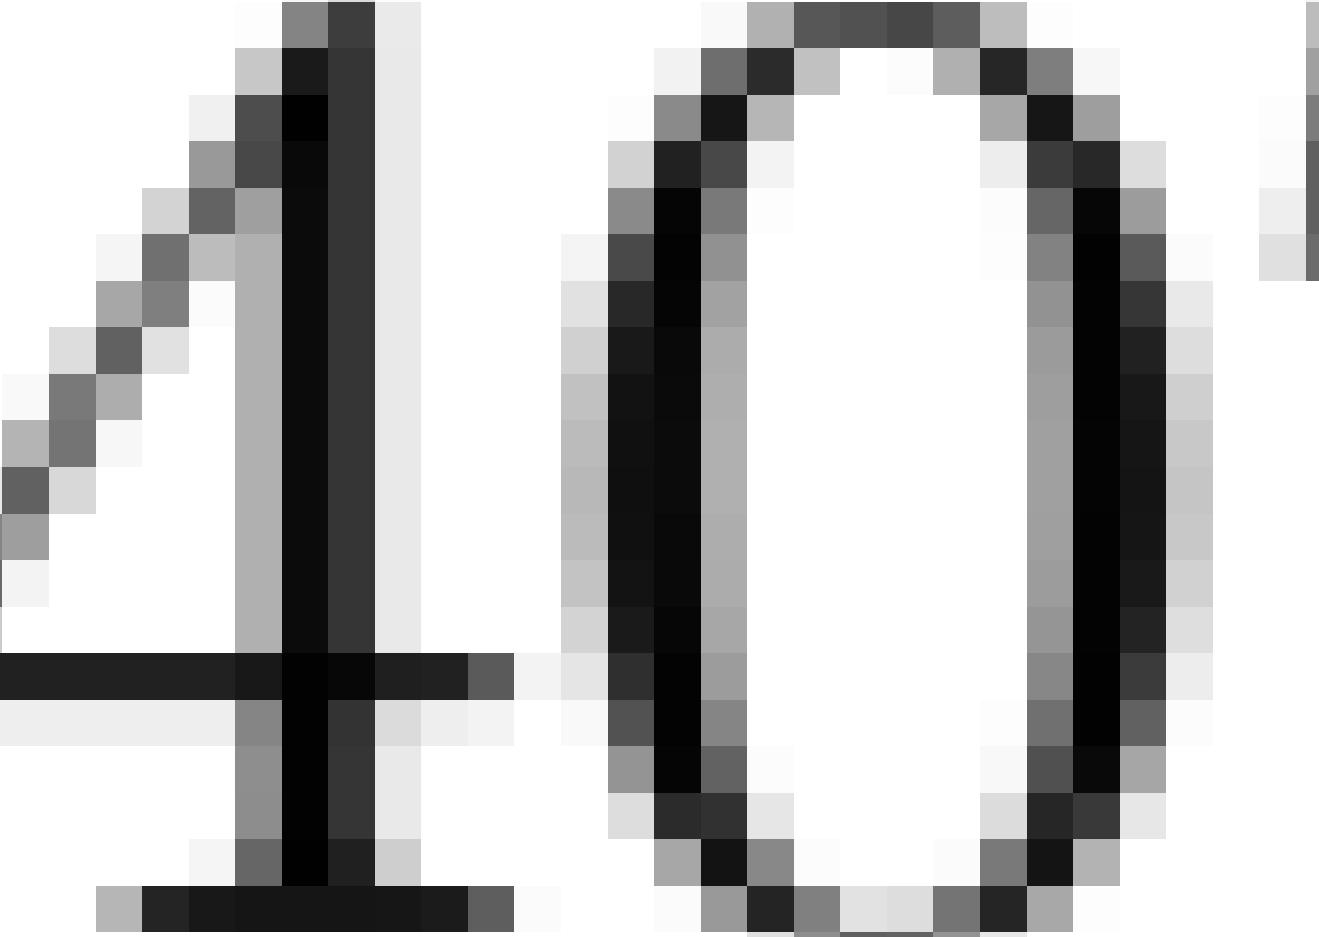


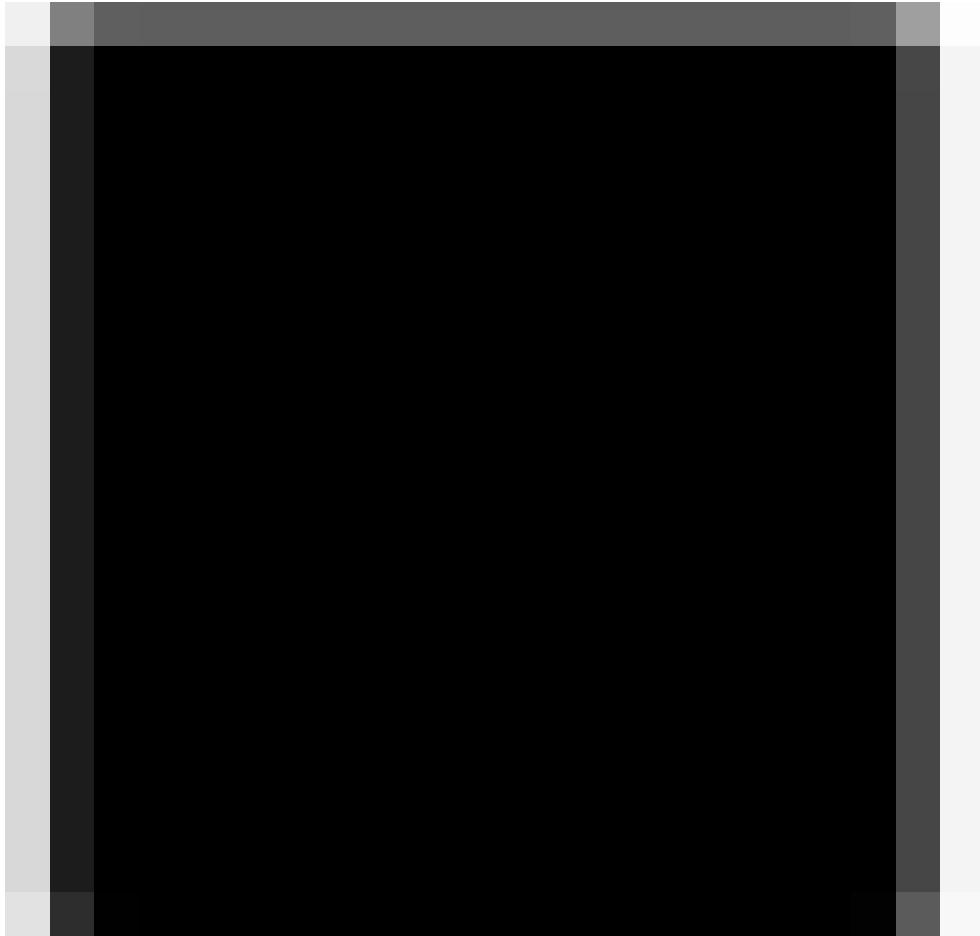




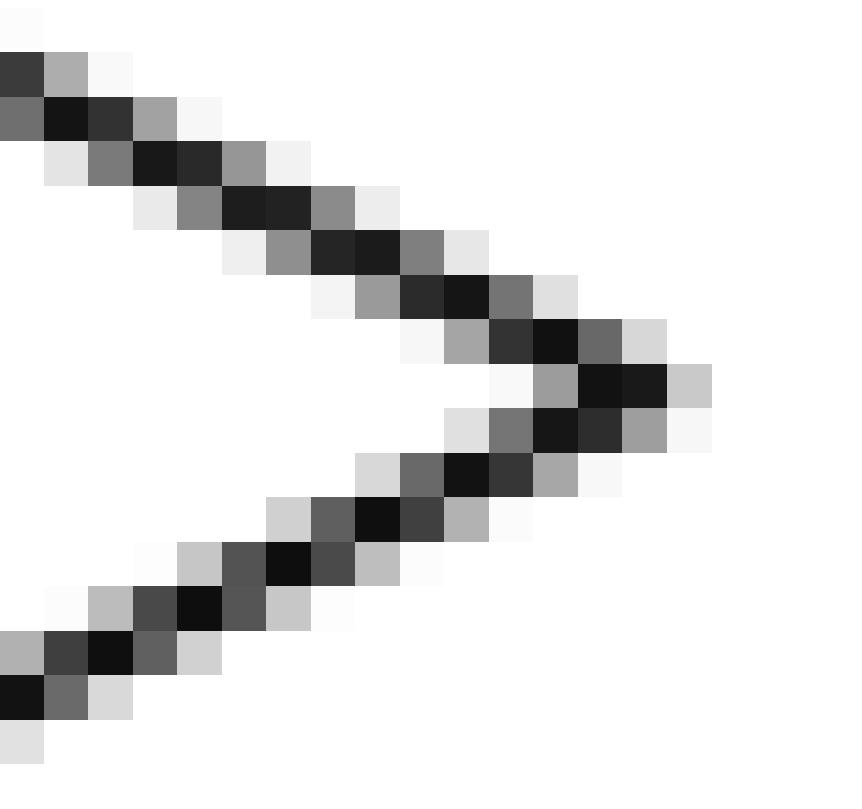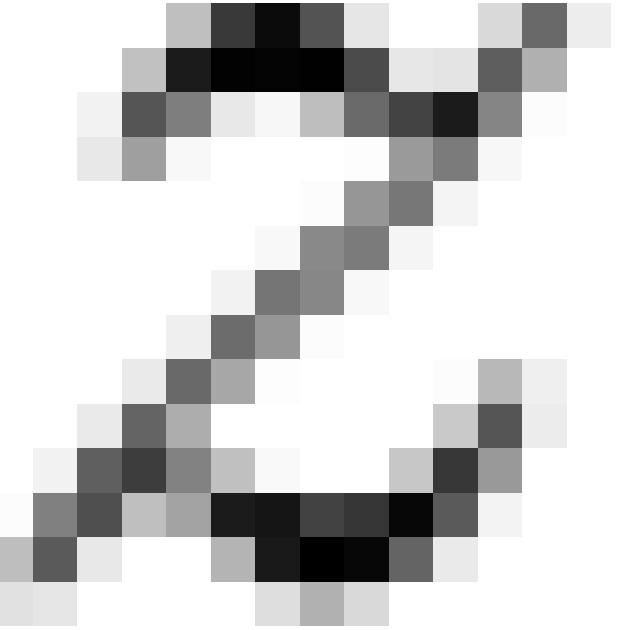








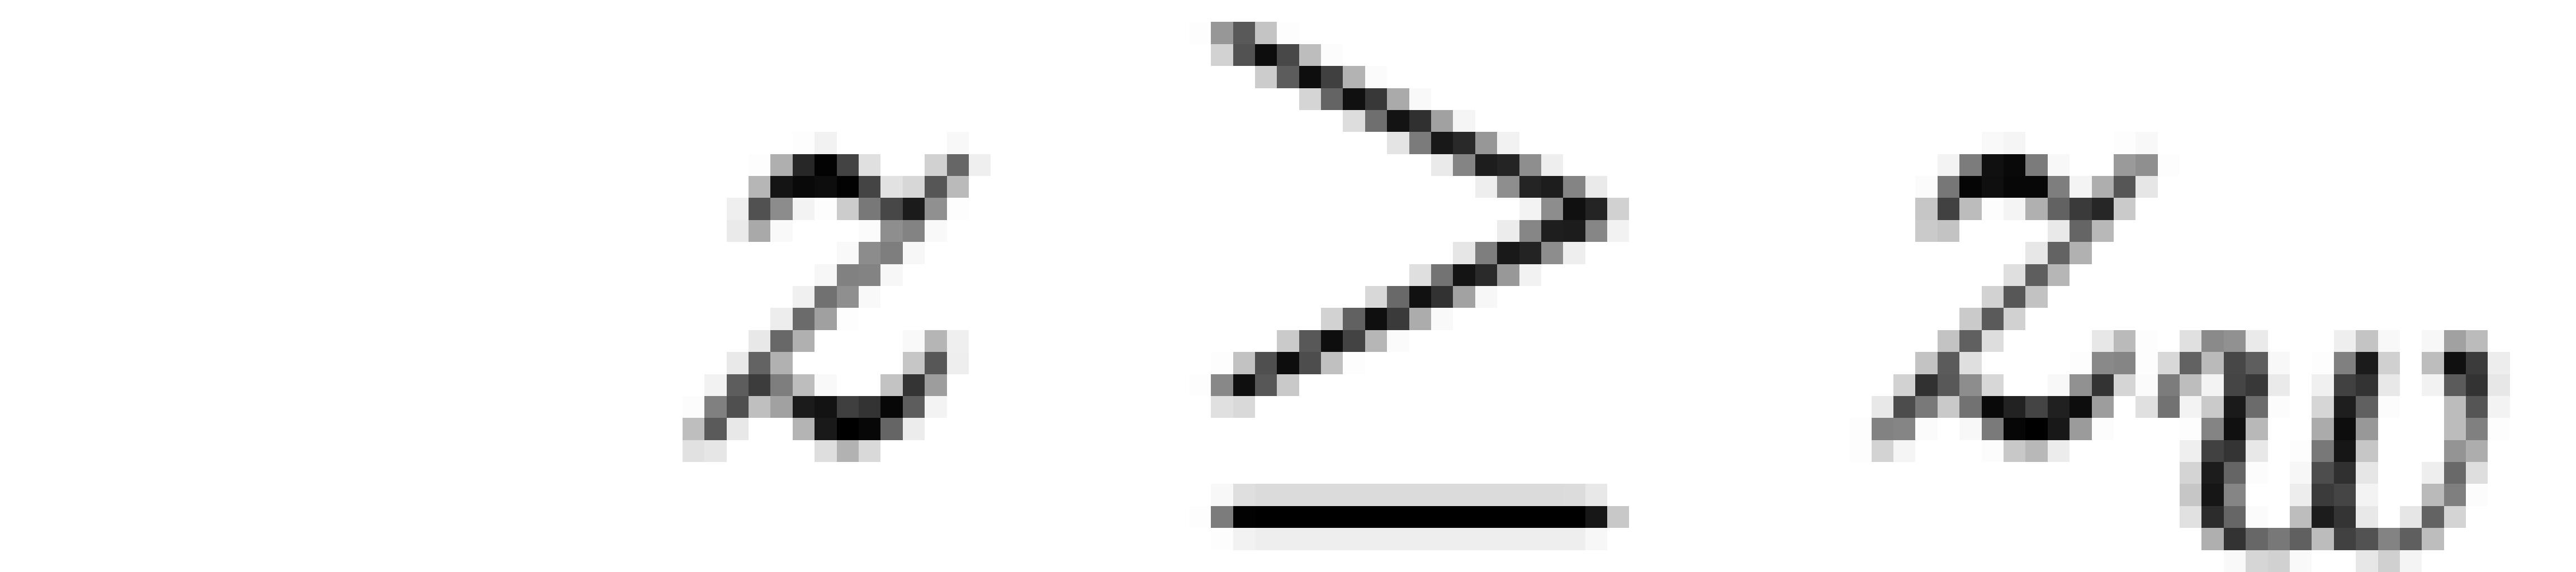


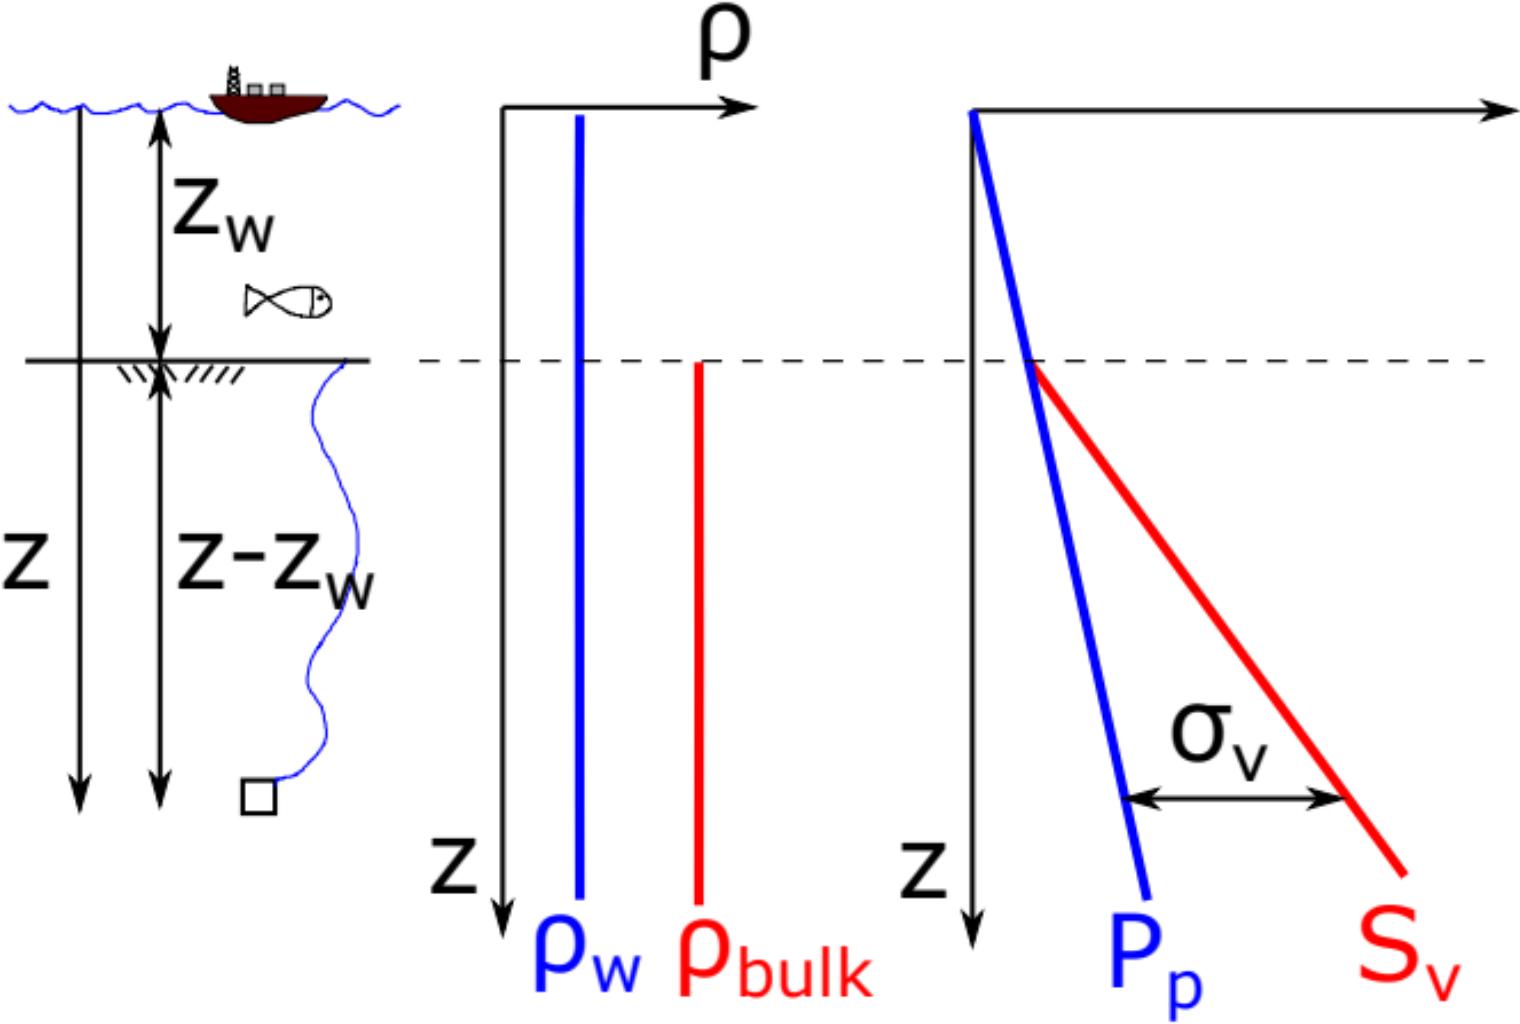










$$P_p = \rho w g z_w + \frac{dP}{dz} (z - z_w) = 0.44$$

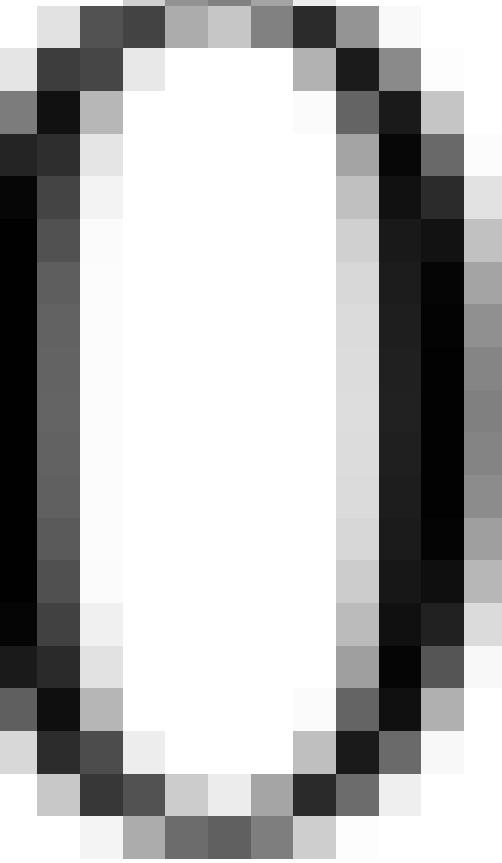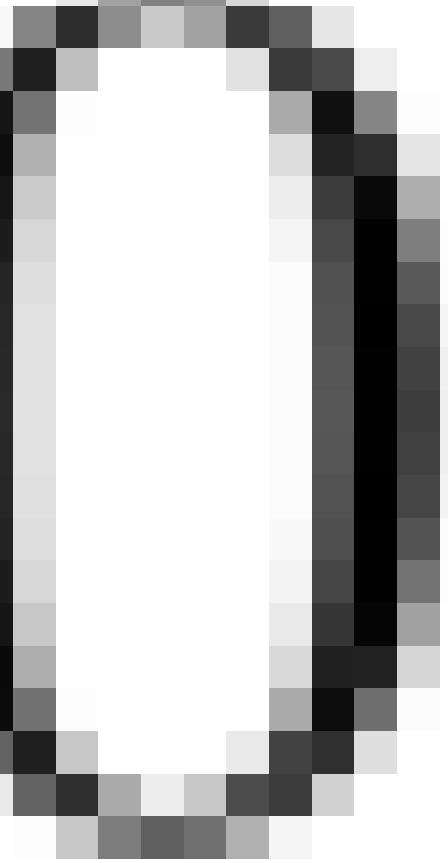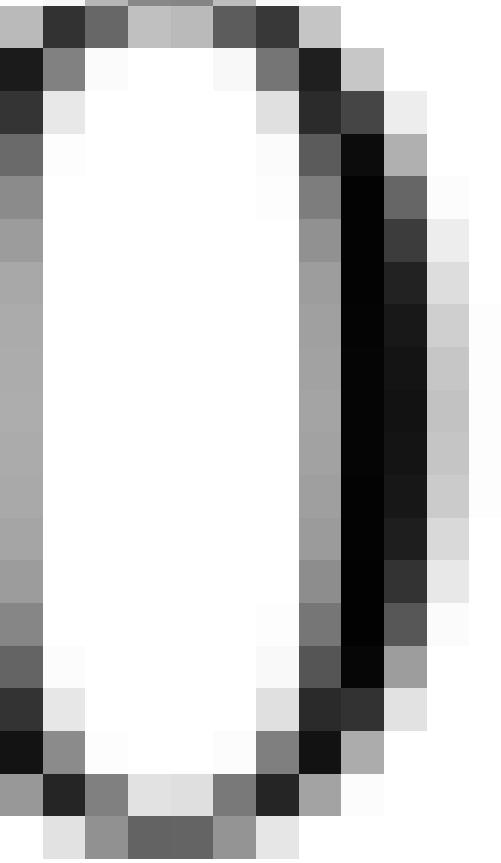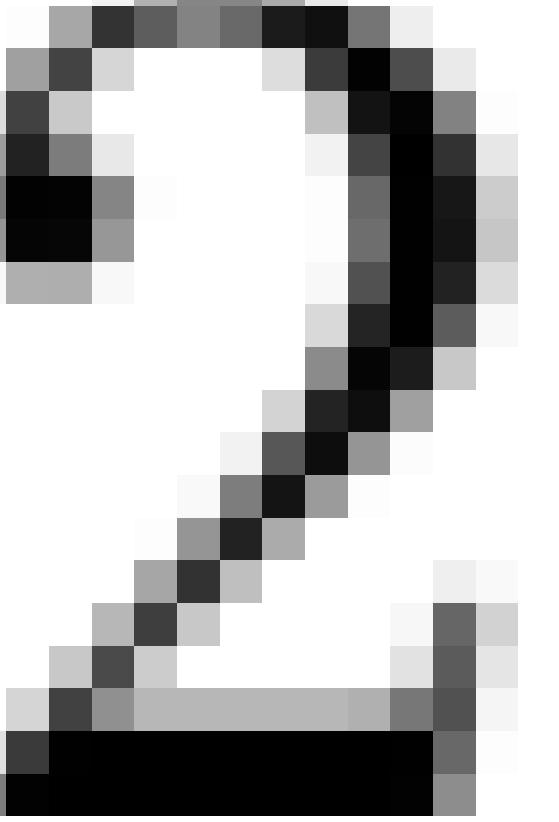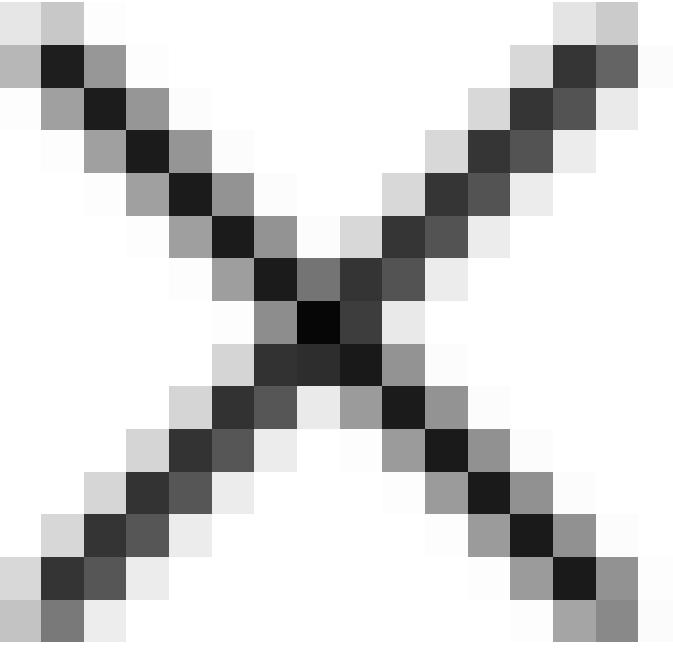




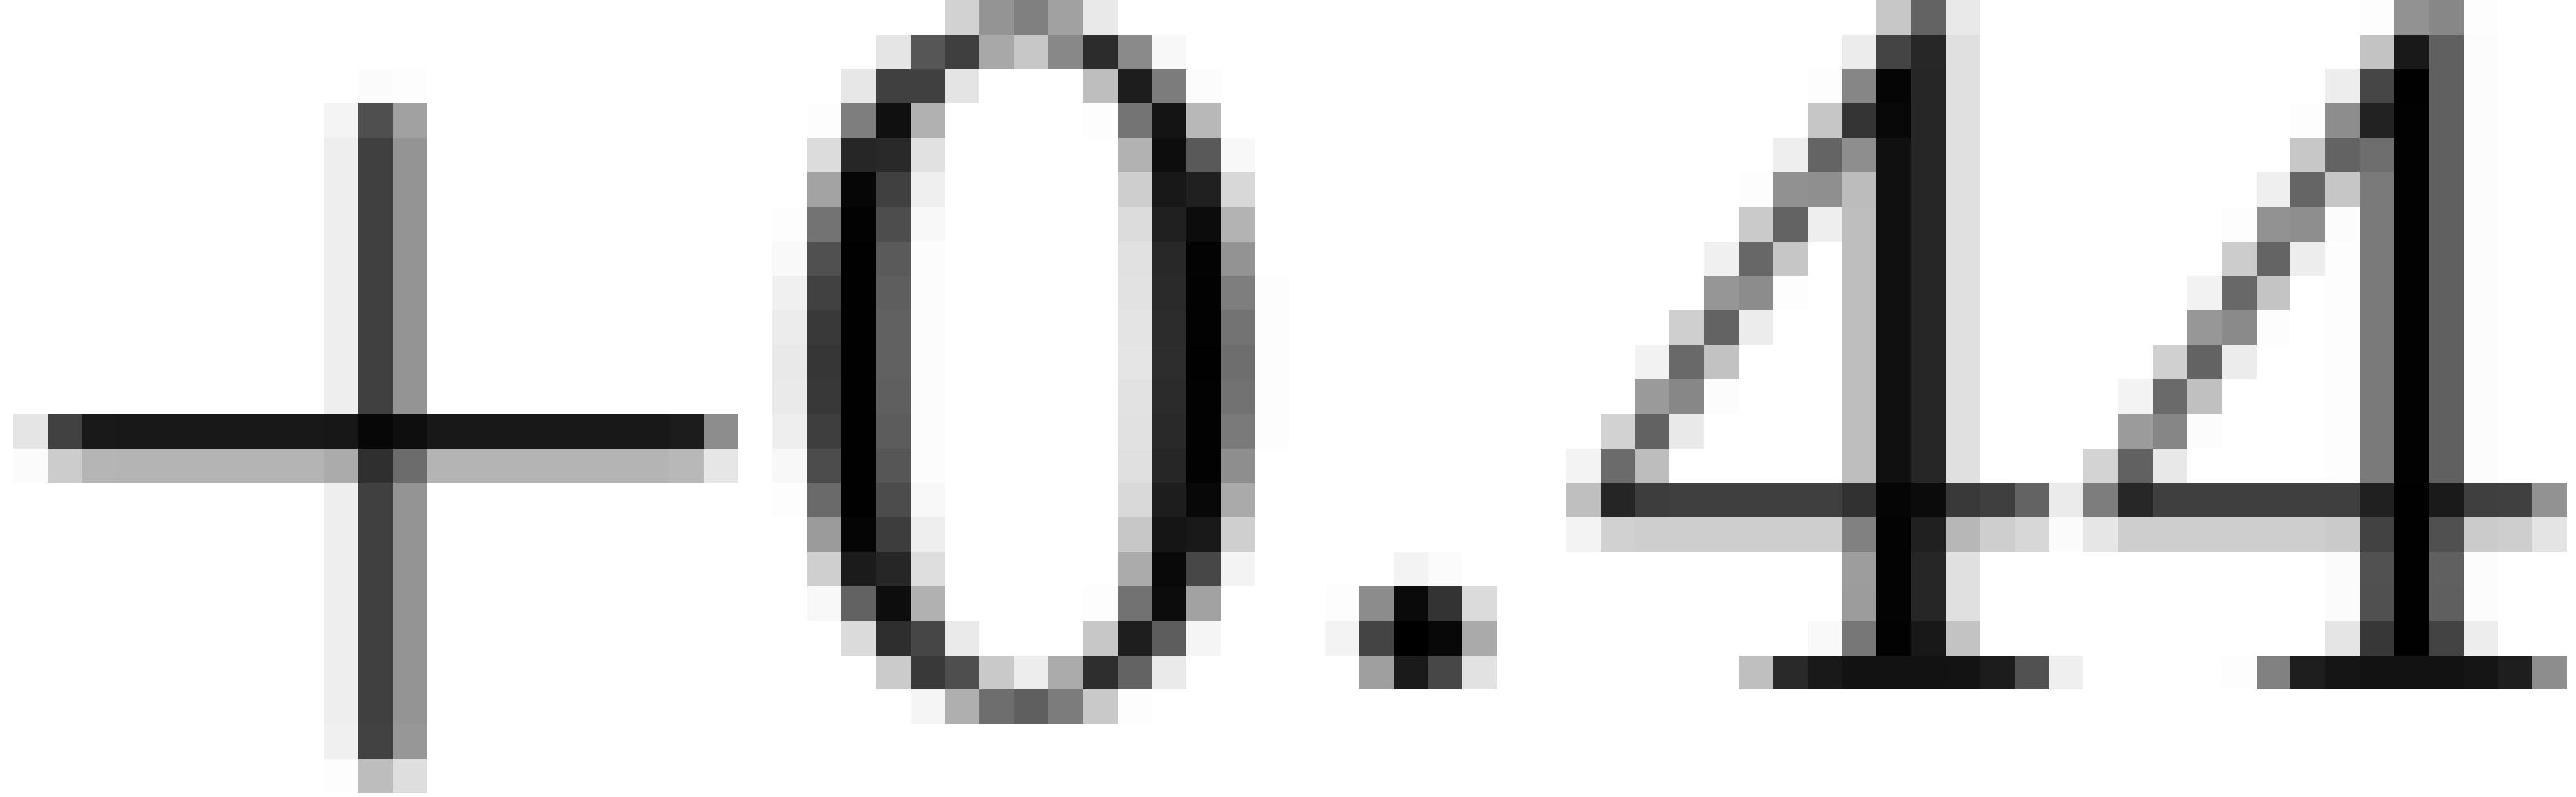





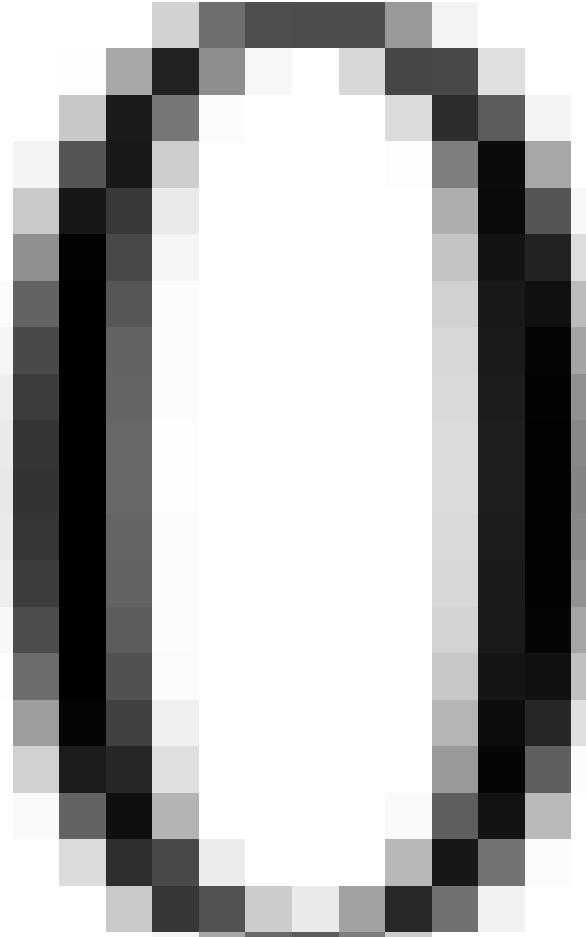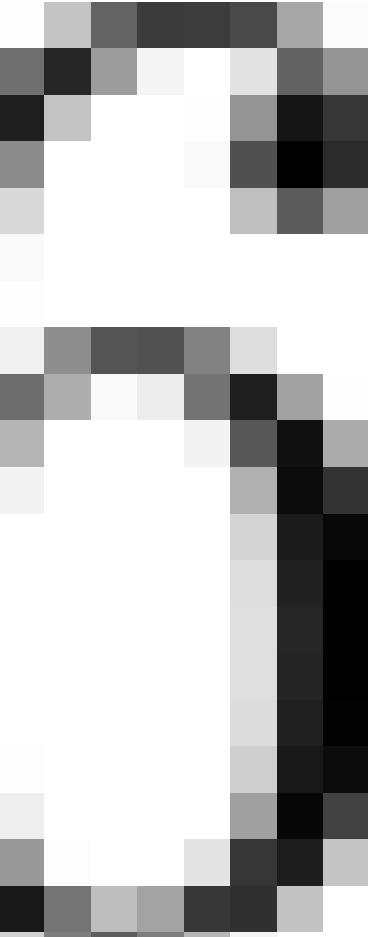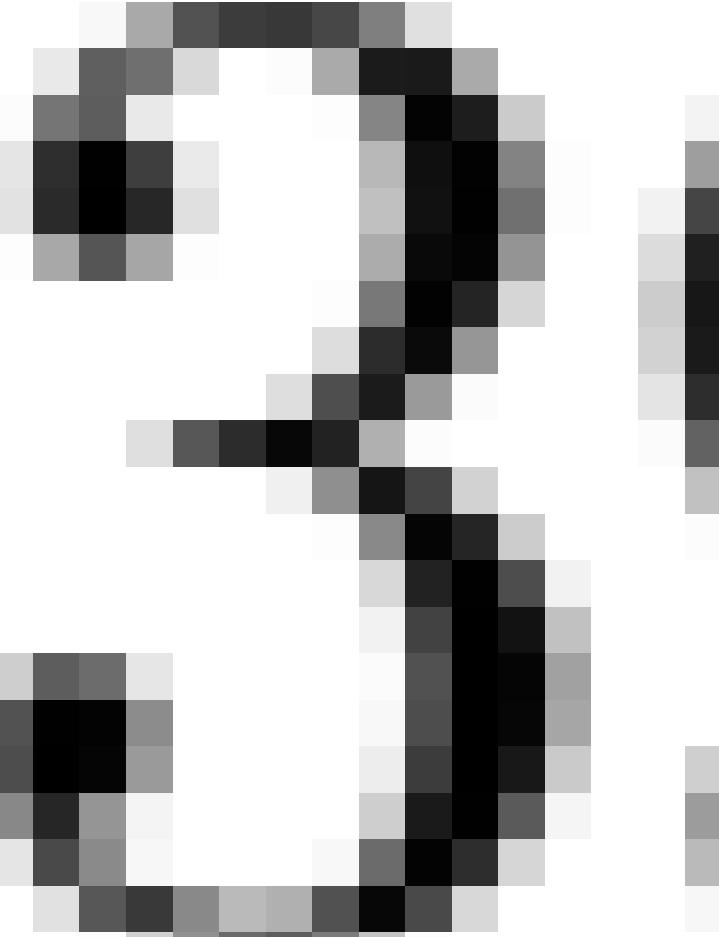






$$S_u = \rho_{u,g} z_u + \frac{dS_u}{dz} (z - z_u) = 0.44$$



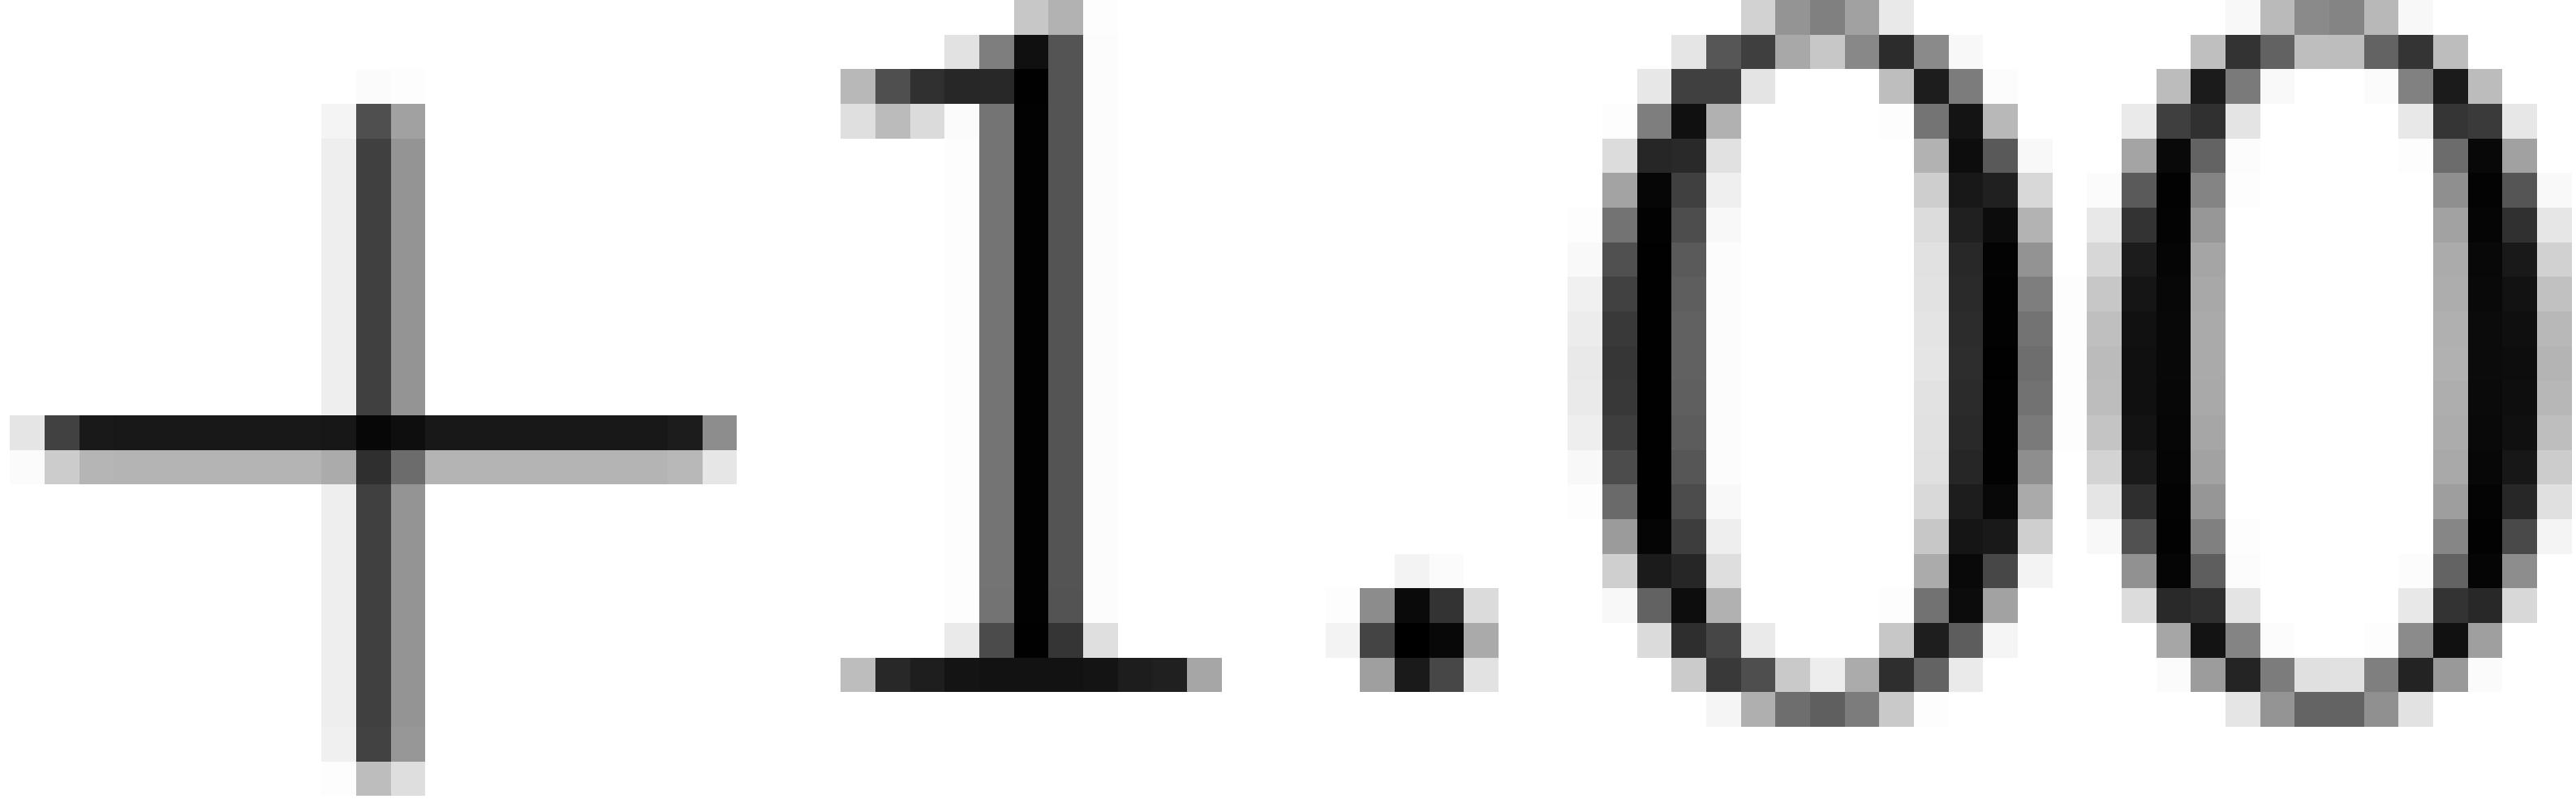


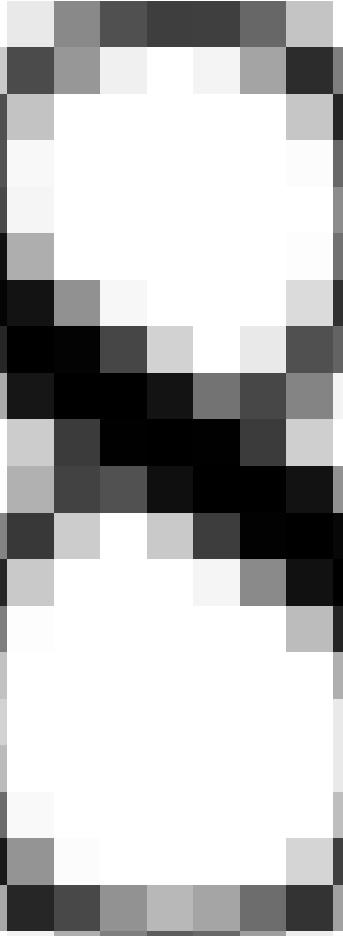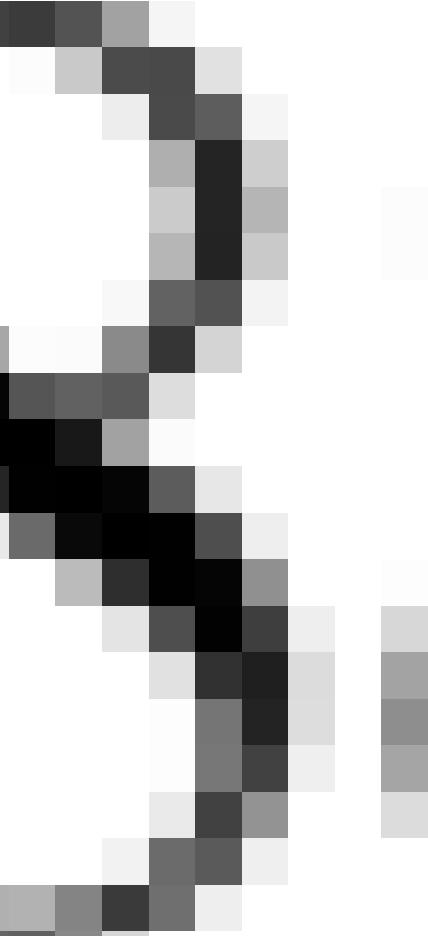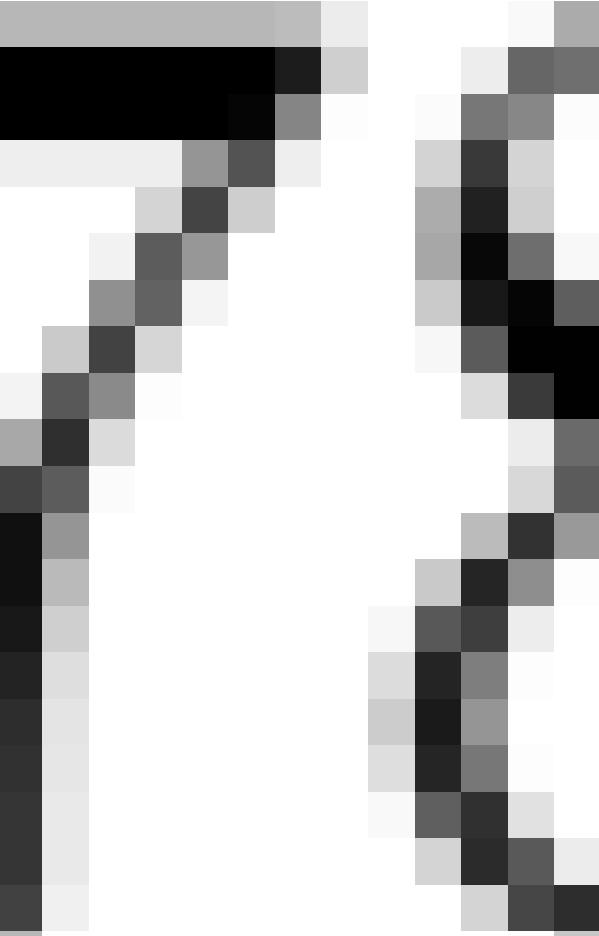


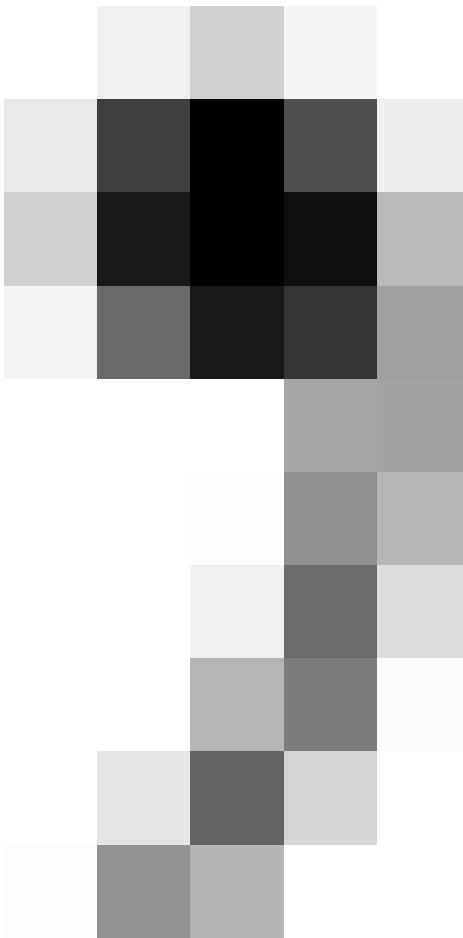



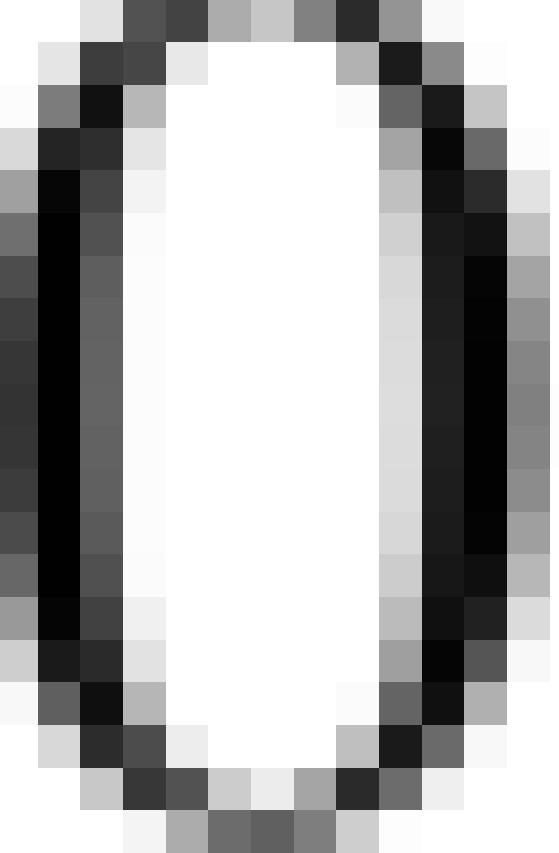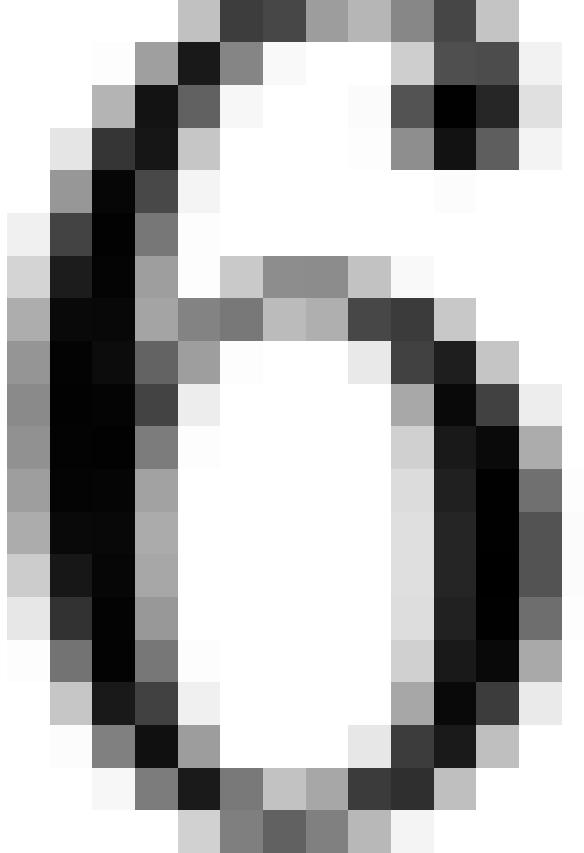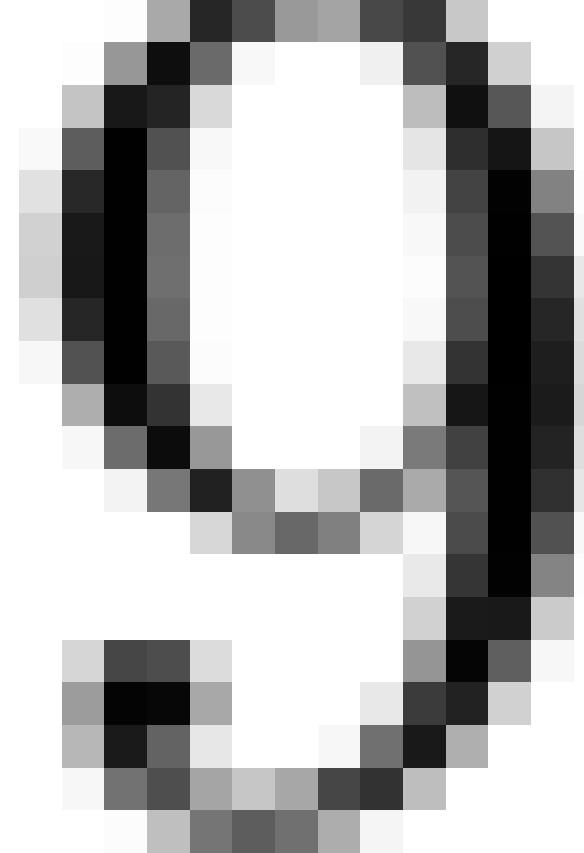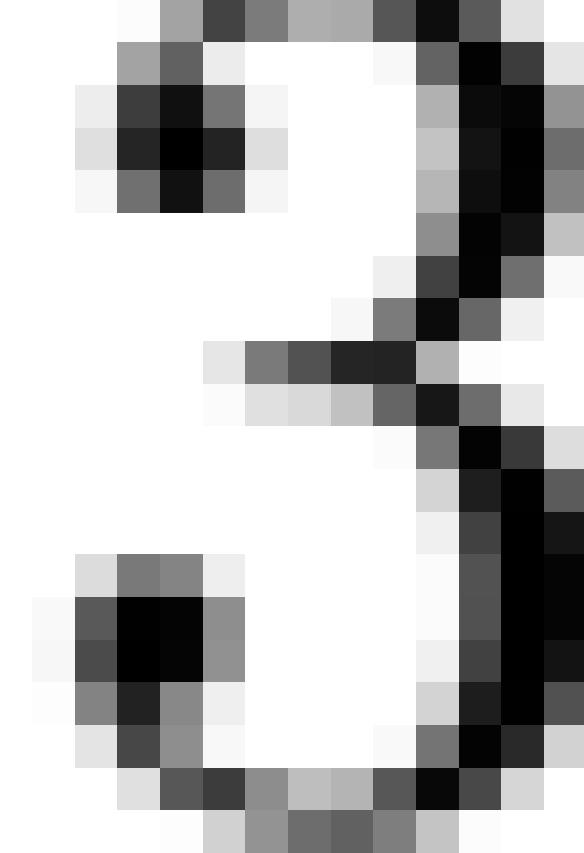

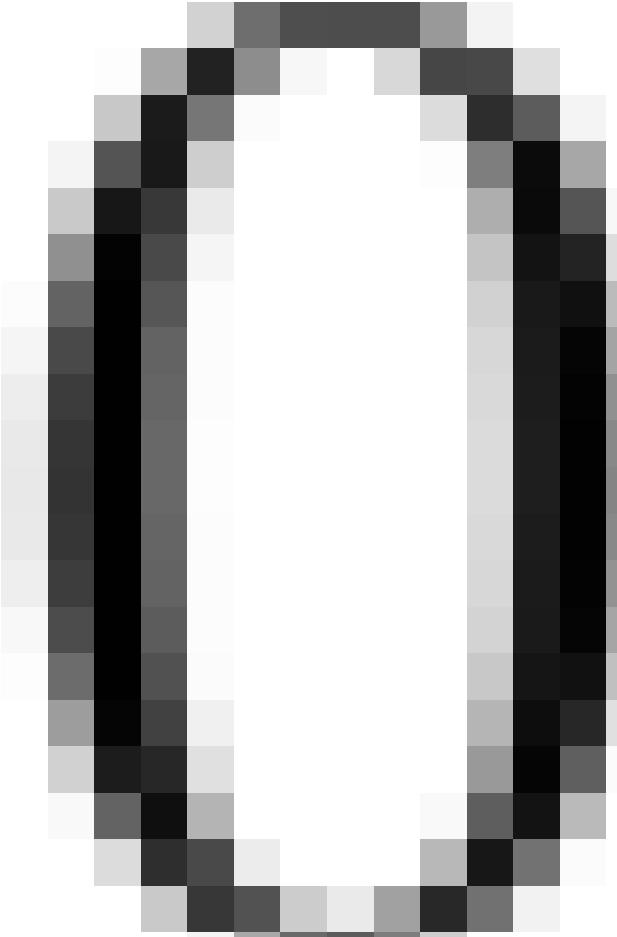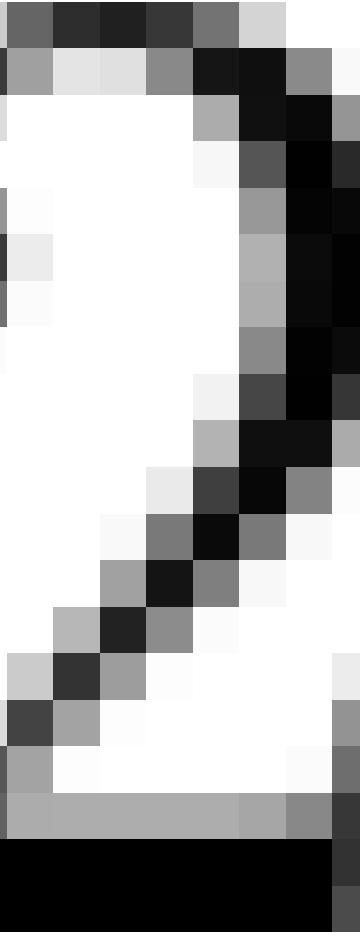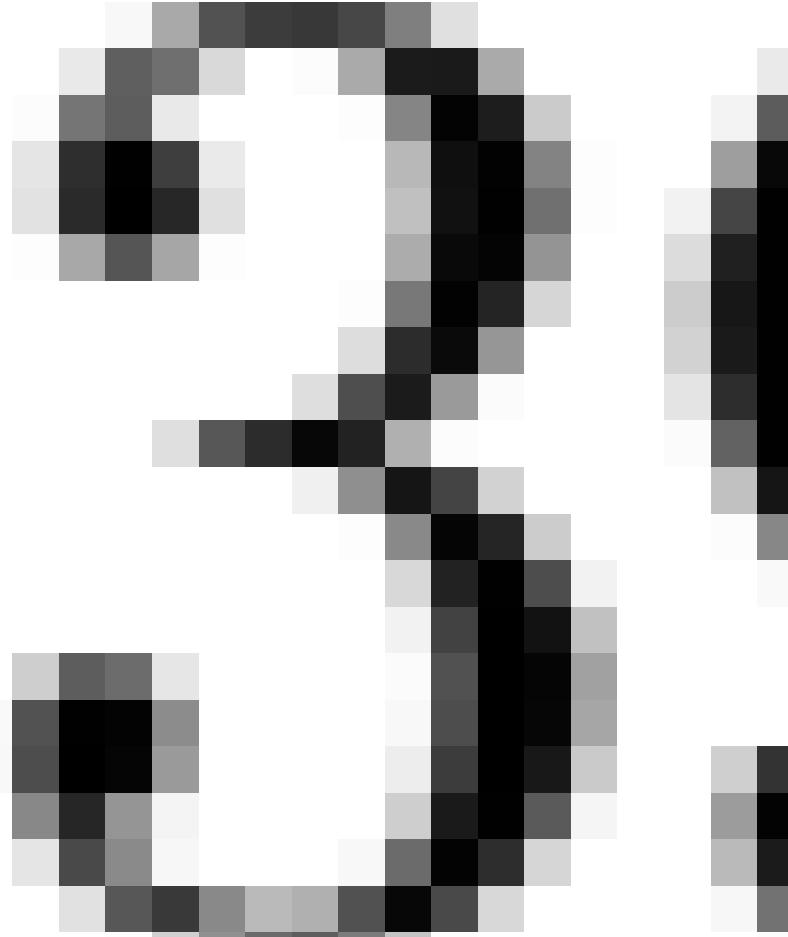











$$S_U(z) = \int_0^z \rho_{\text{bulk}}(z') dz'$$



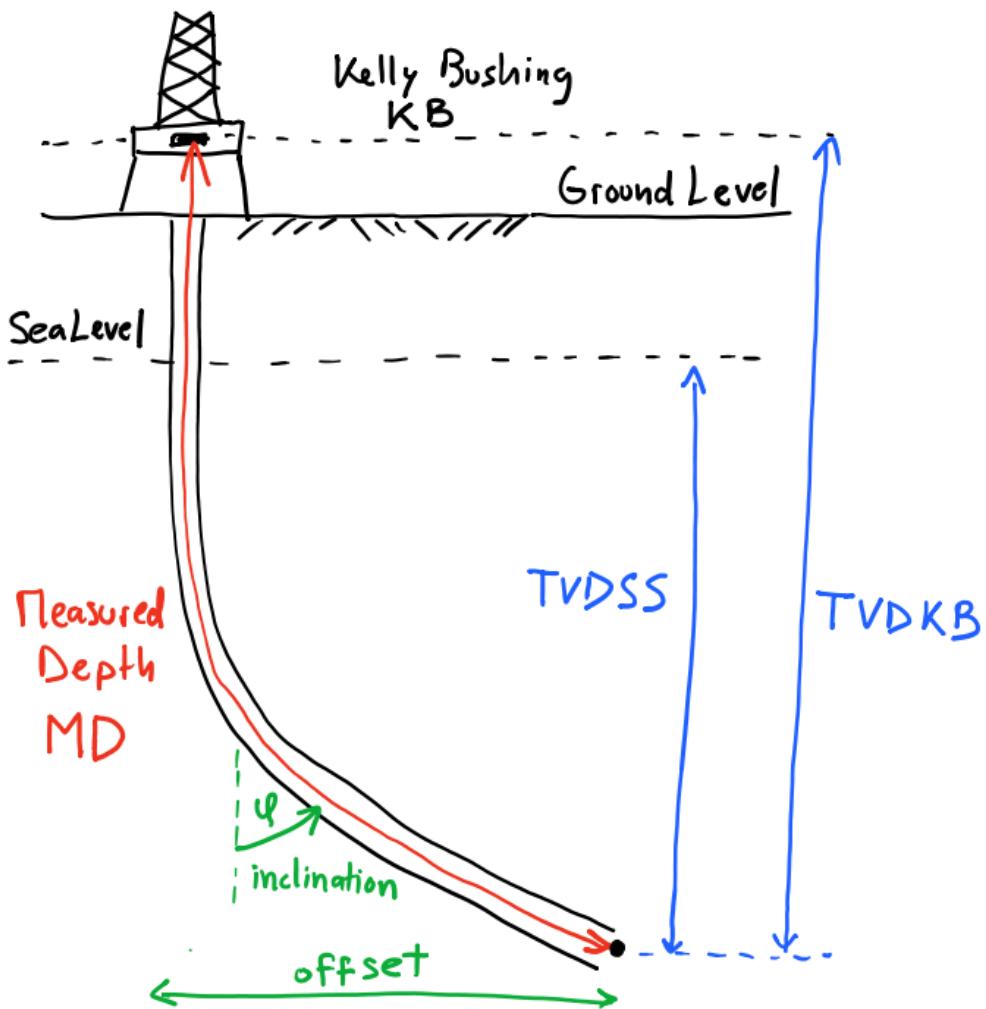





$$S_v(z_i) = \sum_{j=1}^i \rho_{bulk}(z_i) g \Delta z_i$$

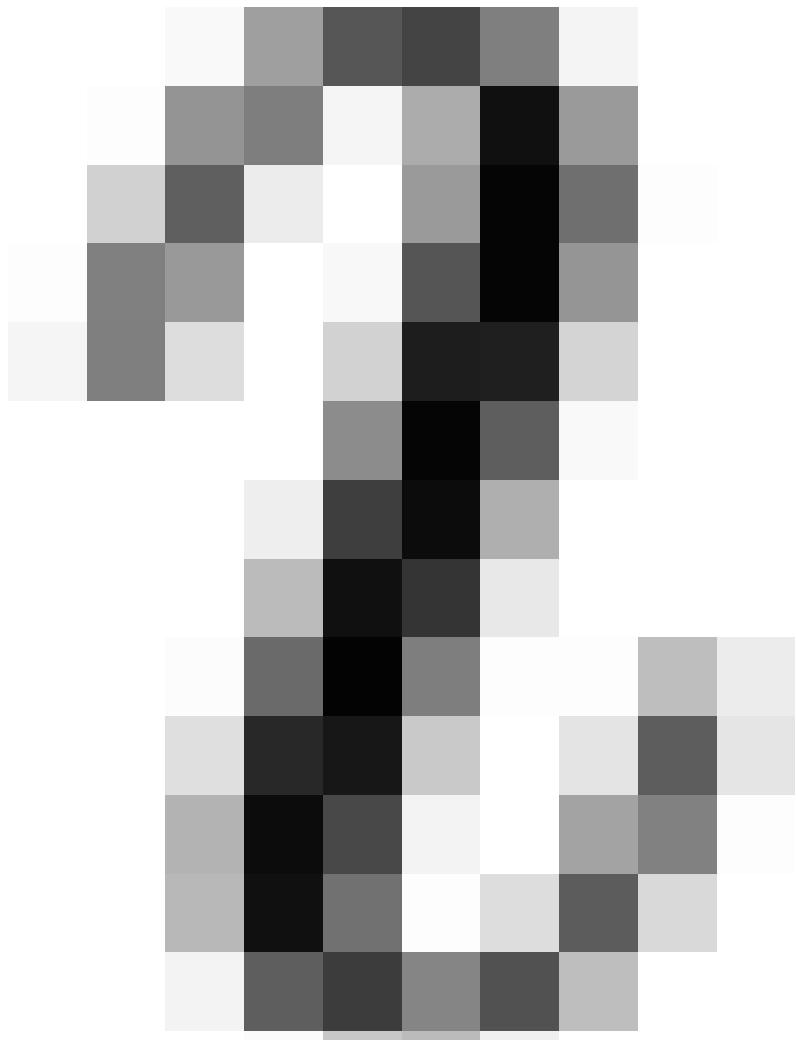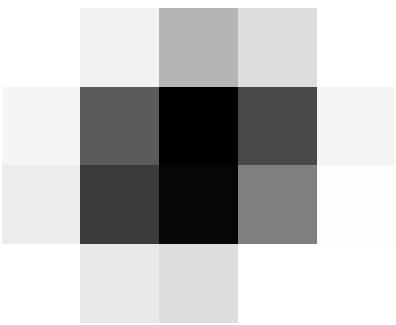




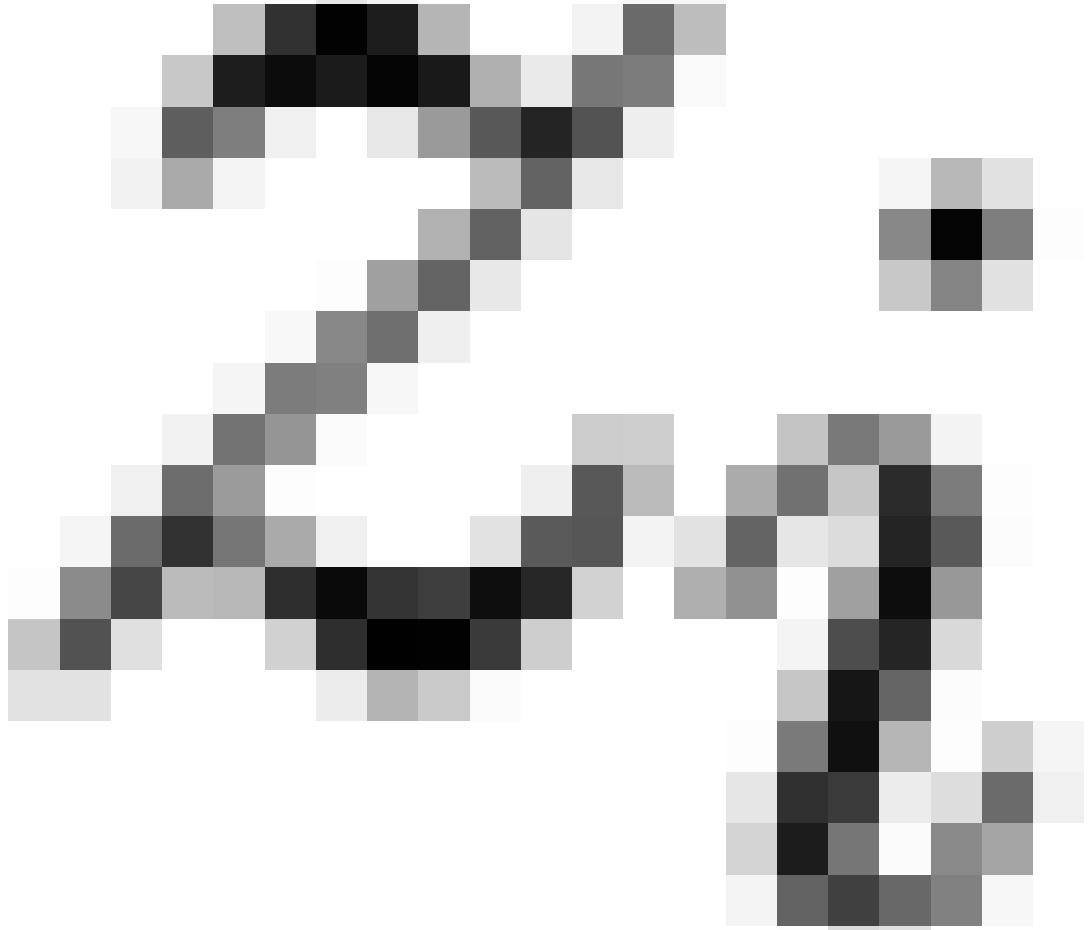



$$S_v(i) = \left[\frac{\rho_{bulk}(i) + \rho_{bulk}(i-1)}{2} g[z(i-1)] + S_v(i-1) \right]$$




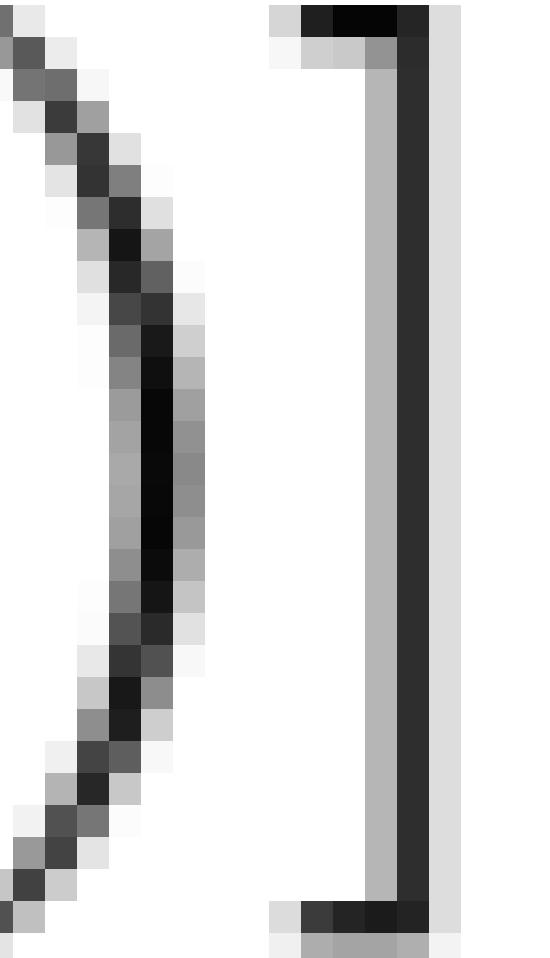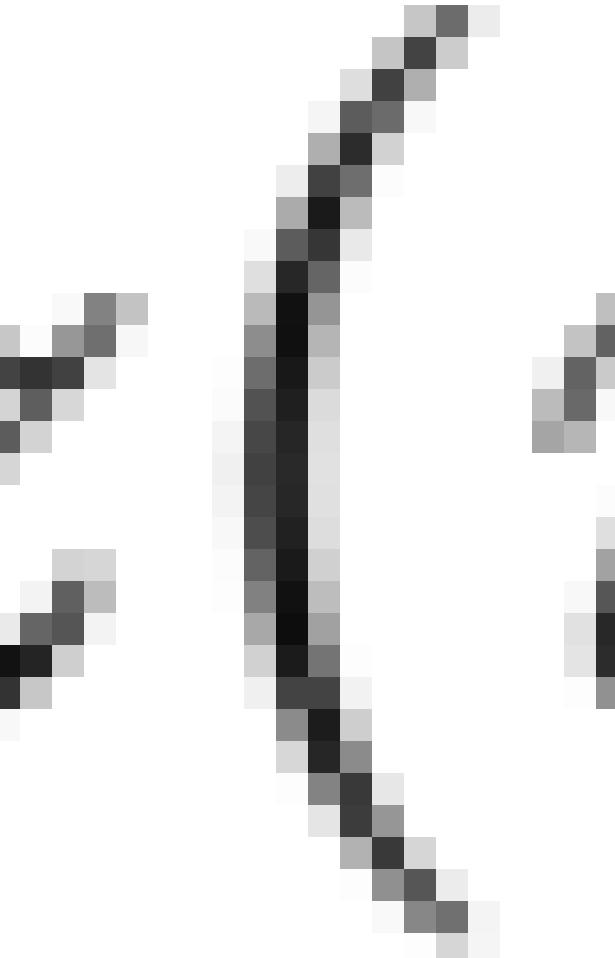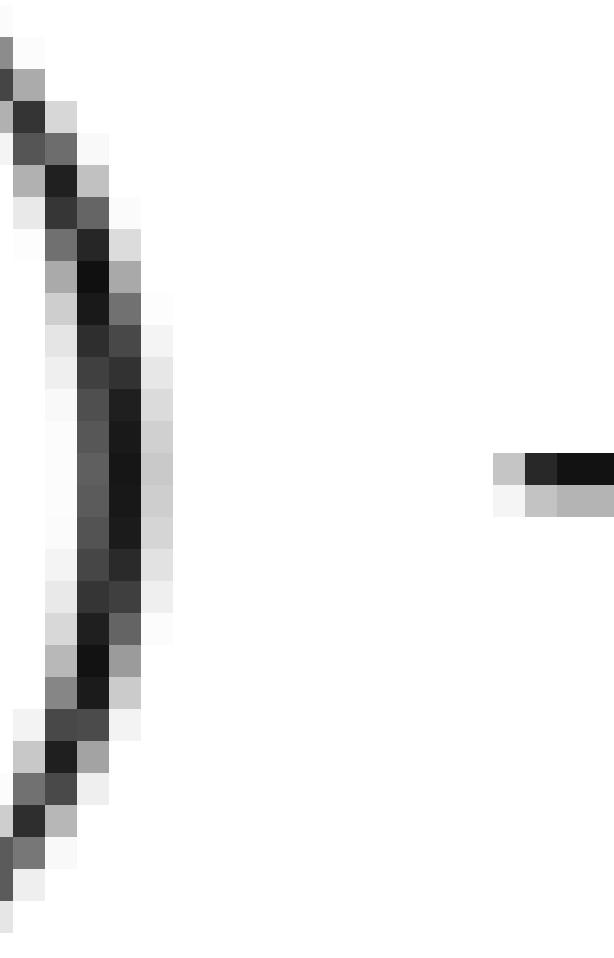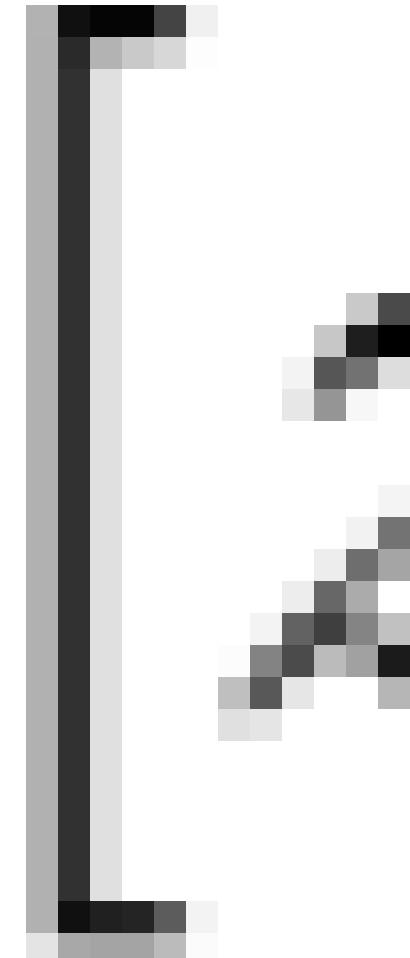

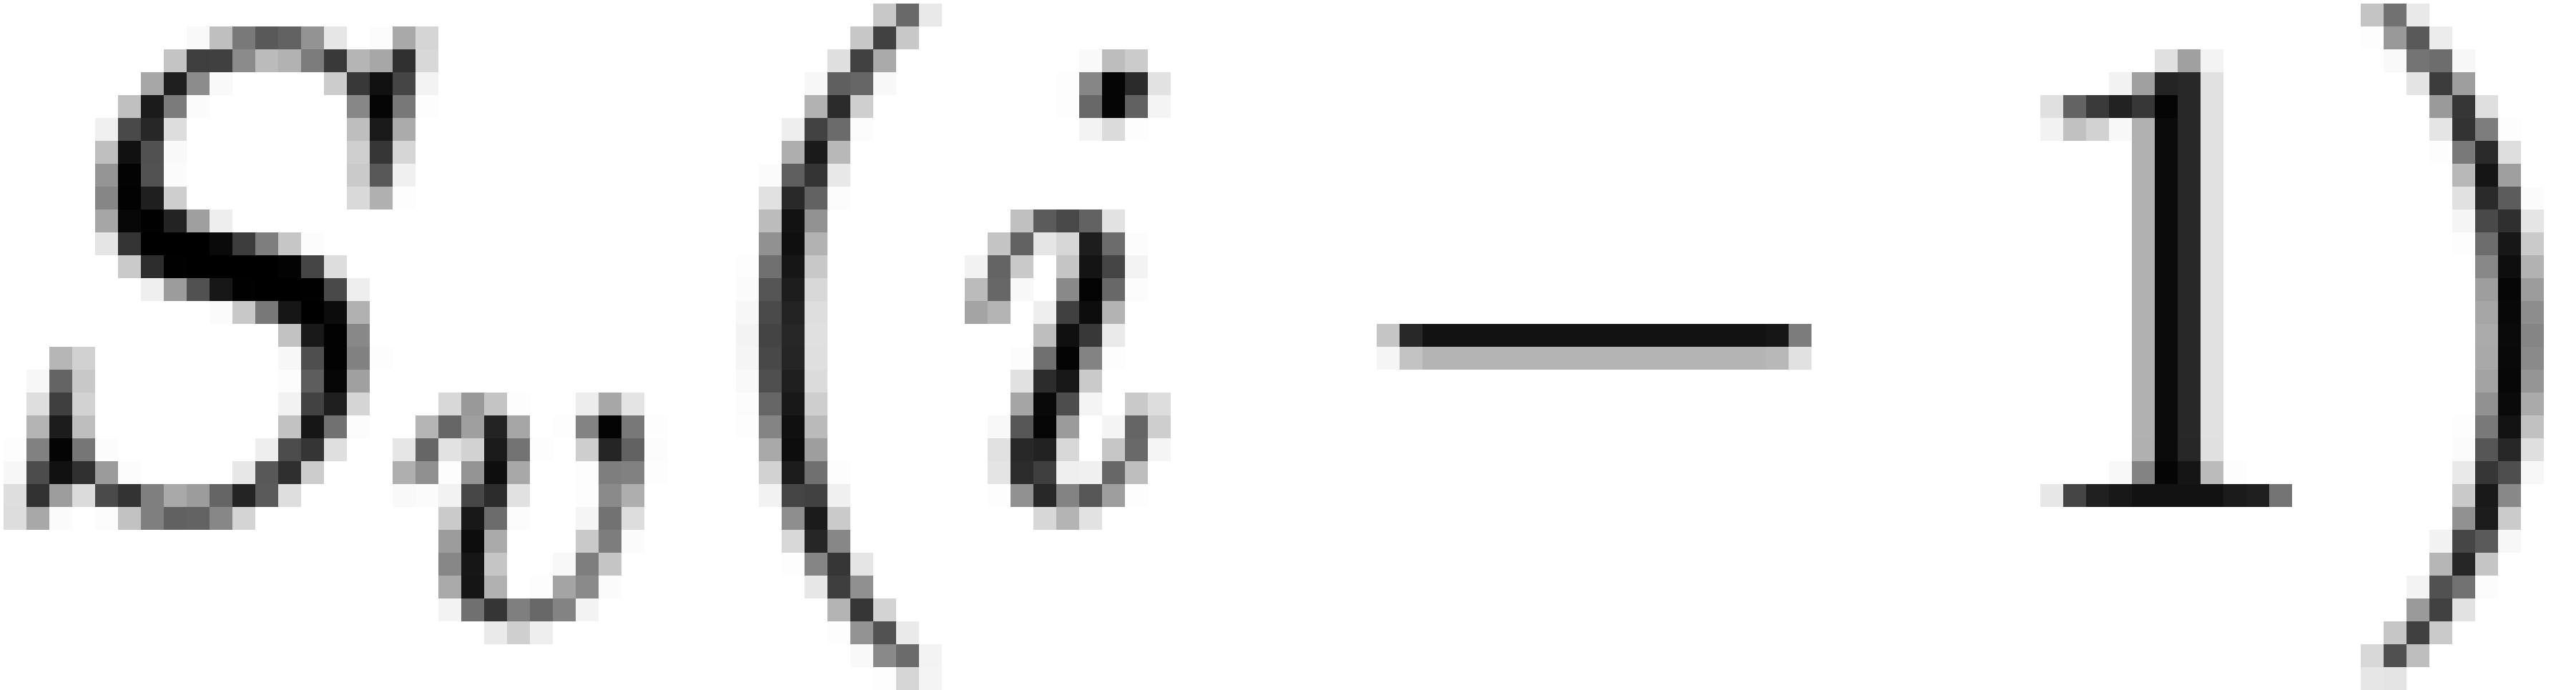


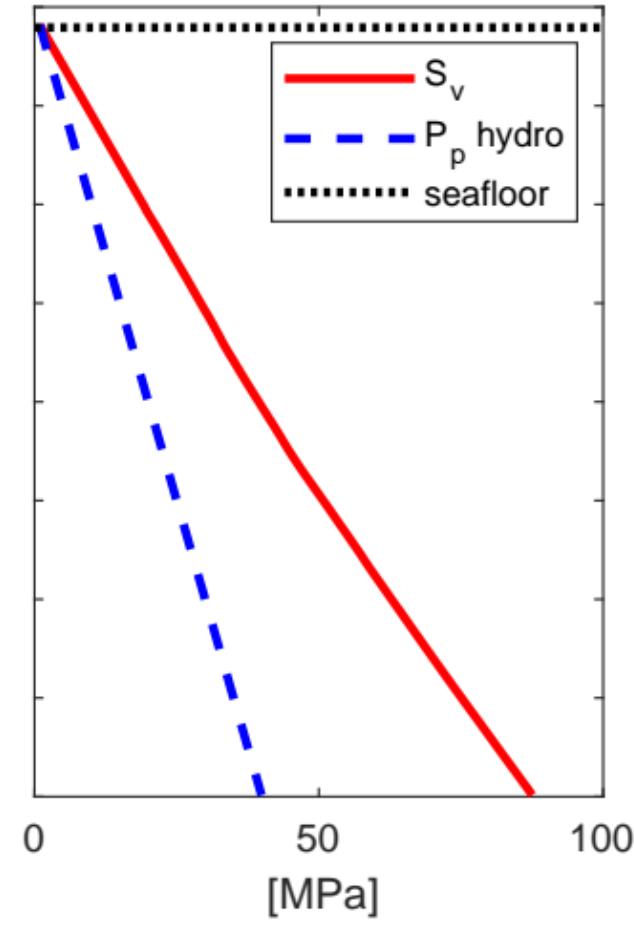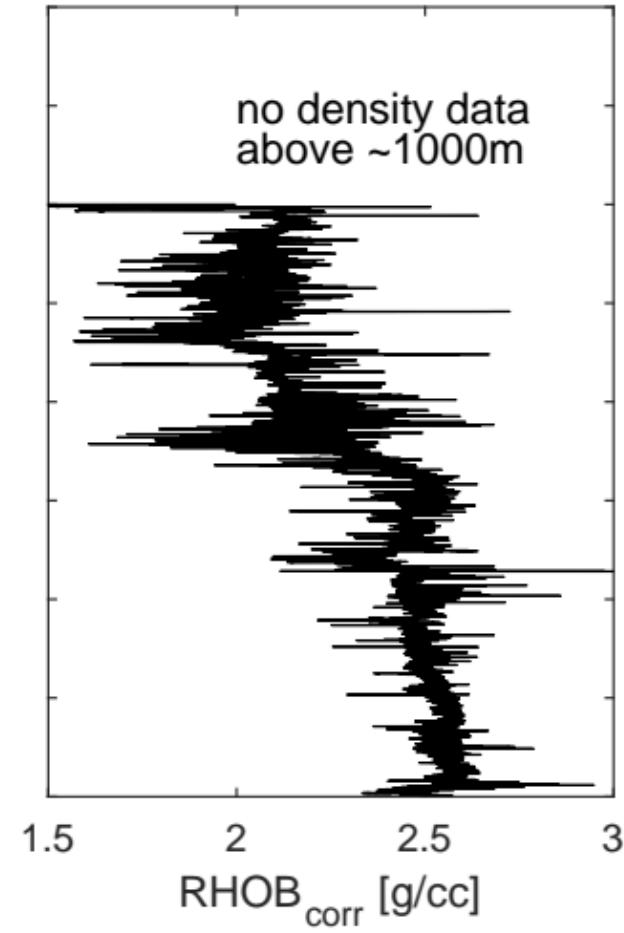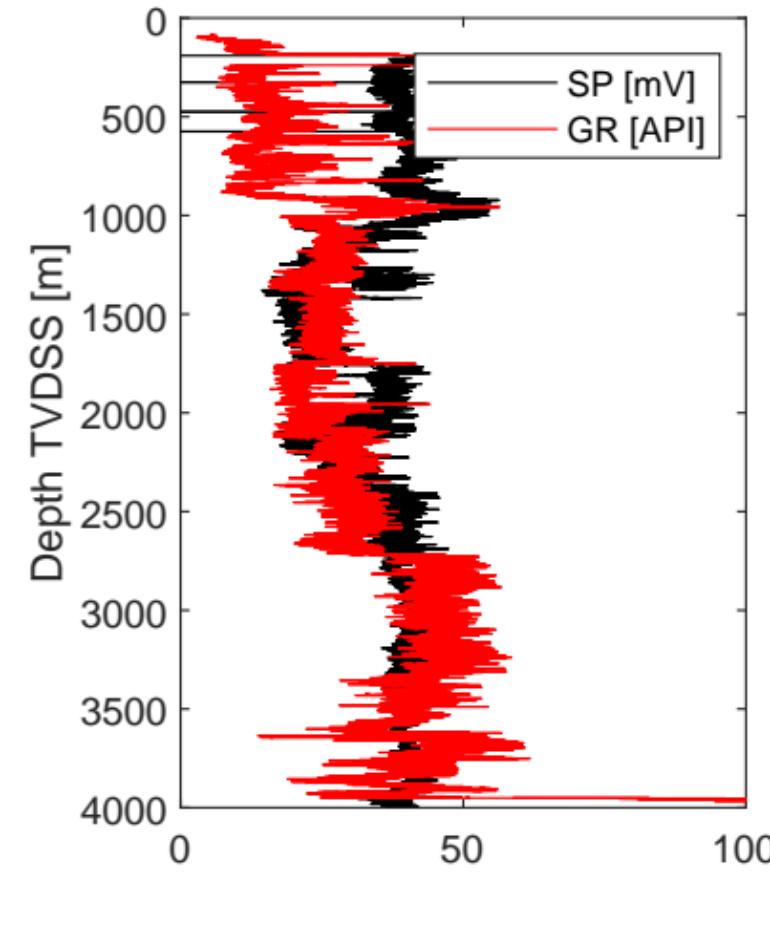

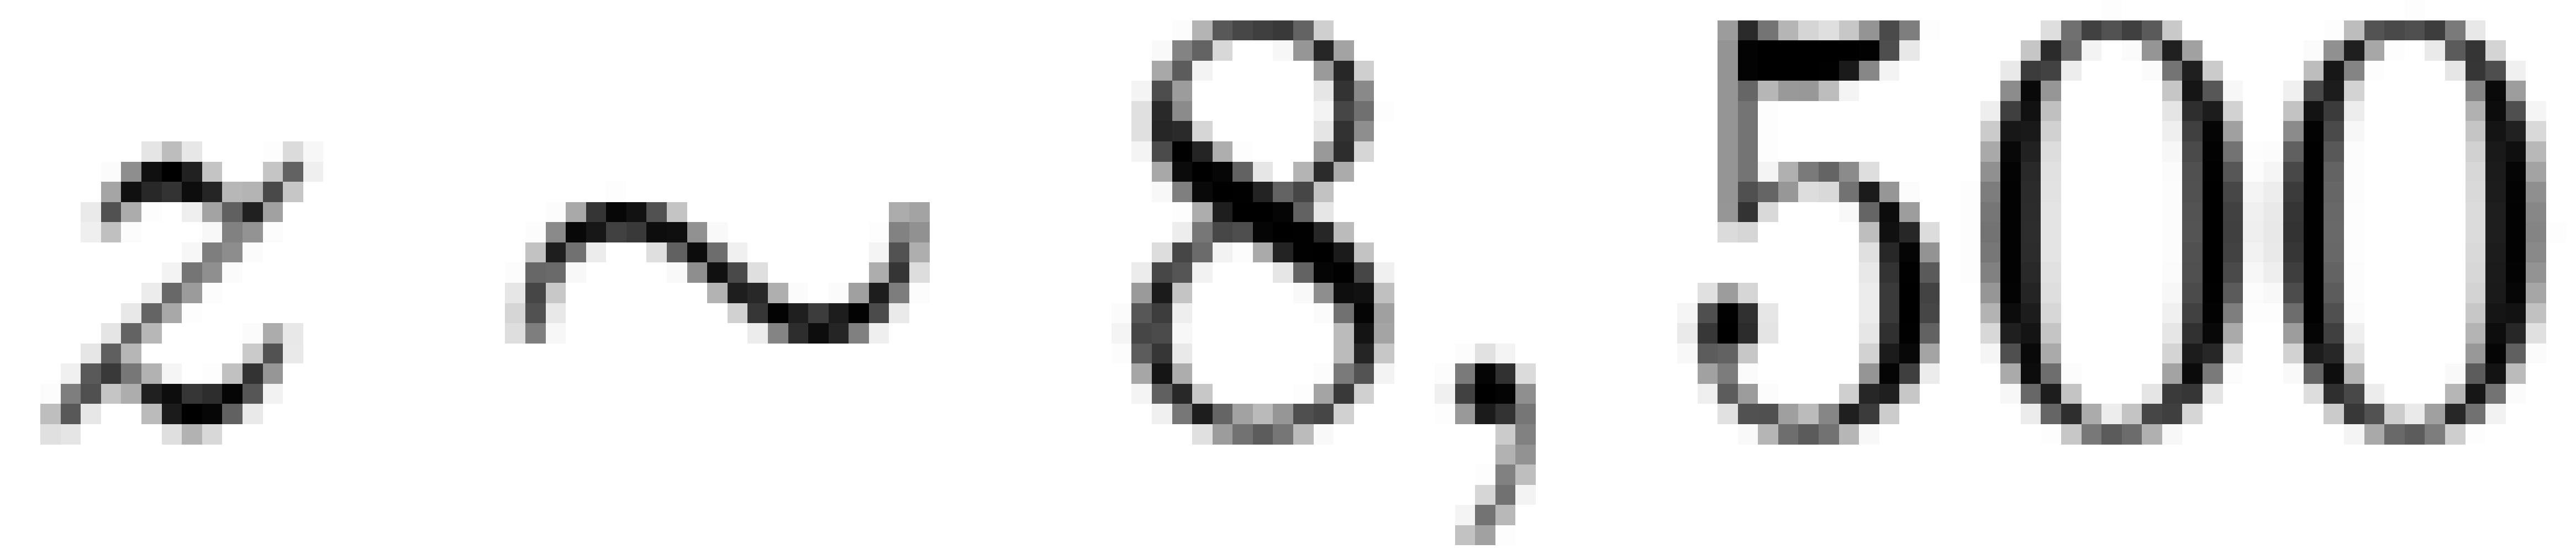

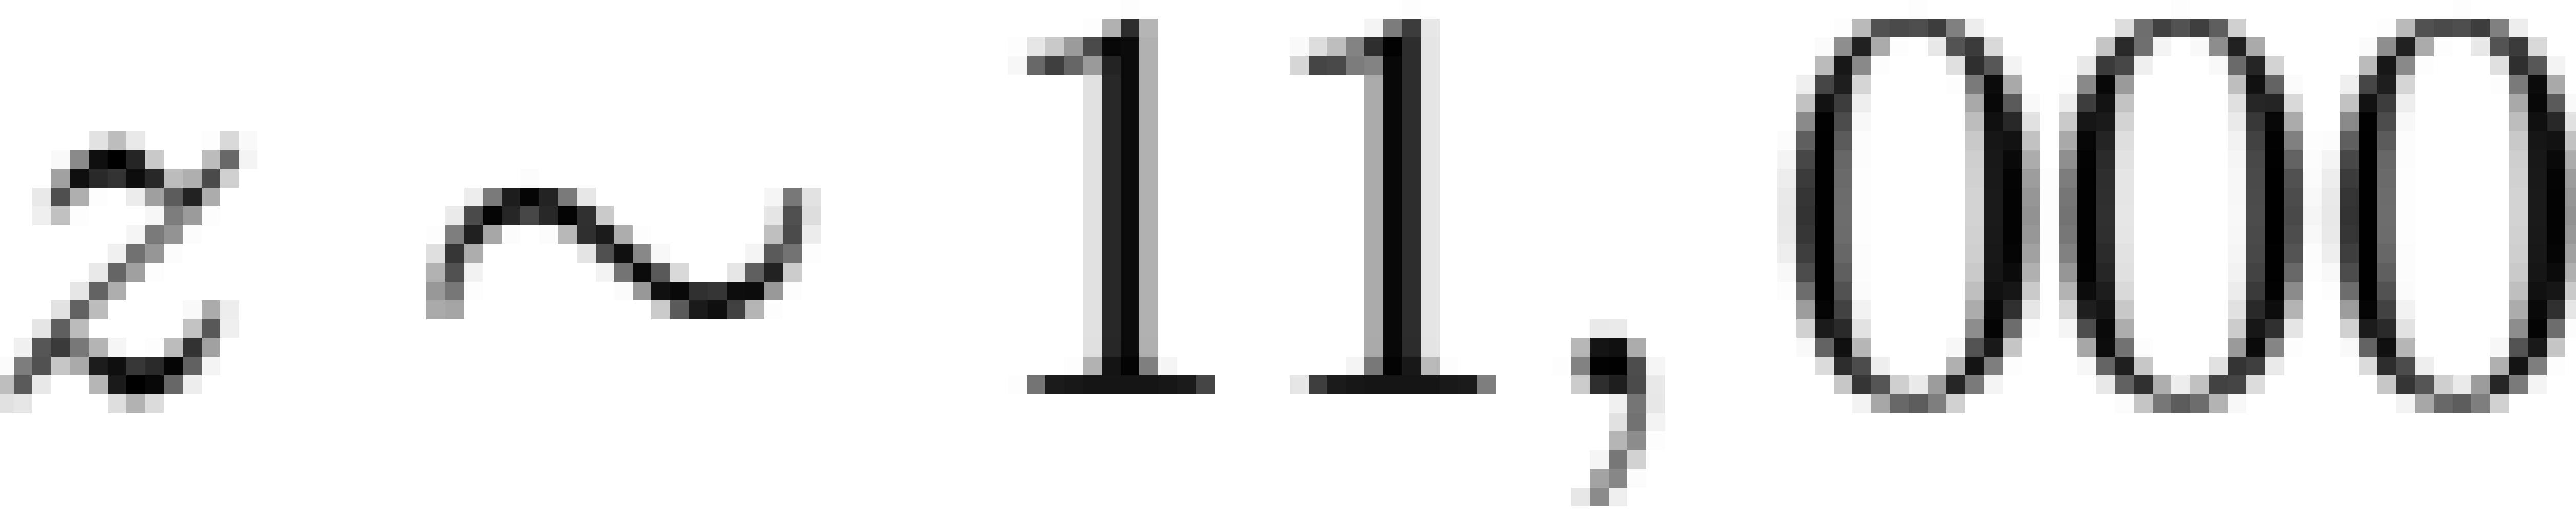

Monte Cristo field Onshore - Zoback 2013 – Figure 2.2


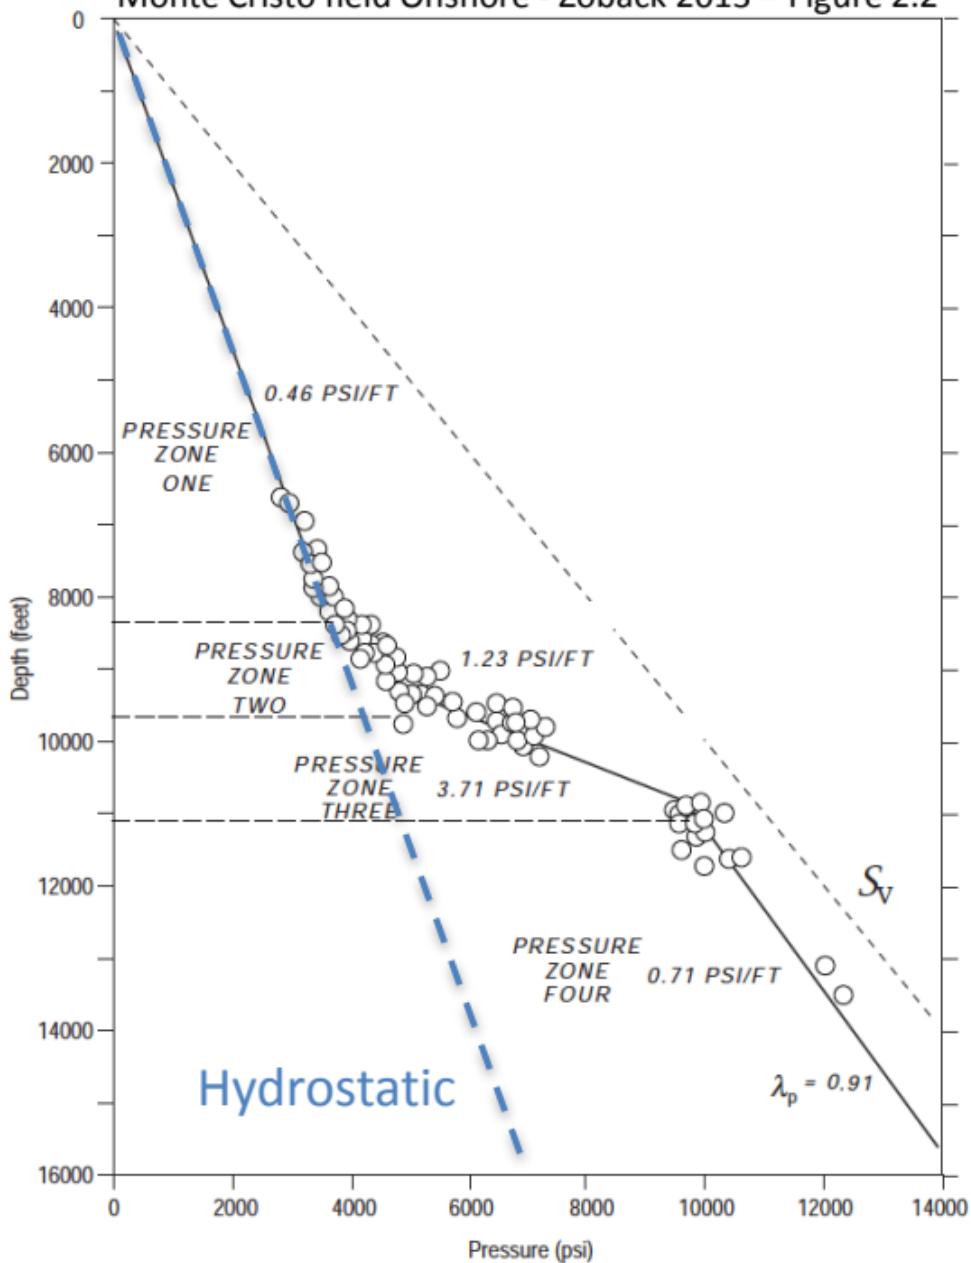








$p(z)$






$P_p(z)$
 $S_q(z)$

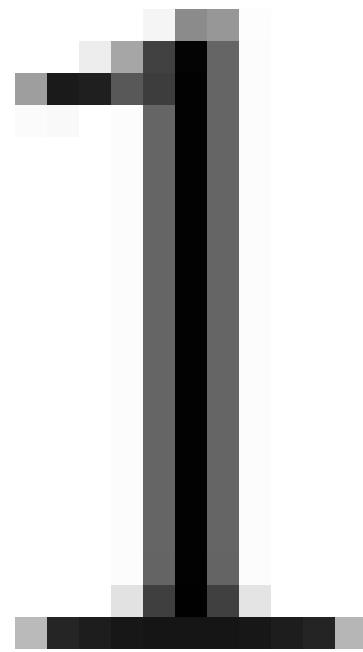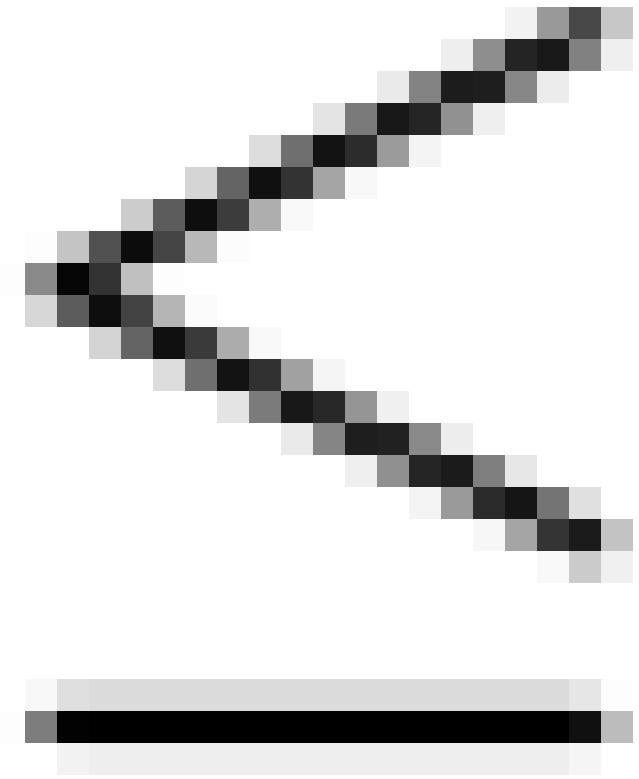

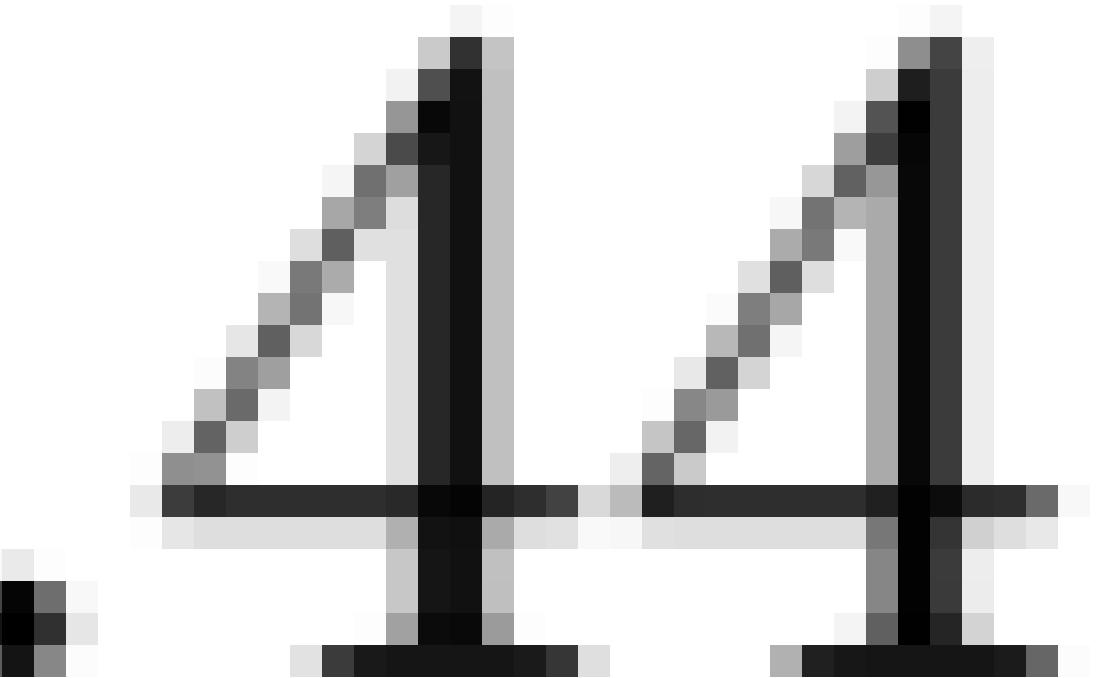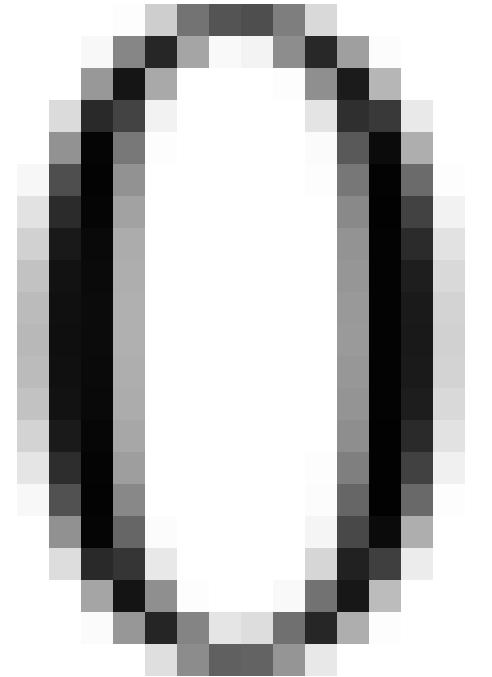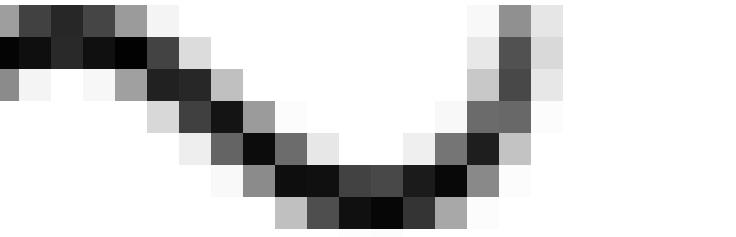


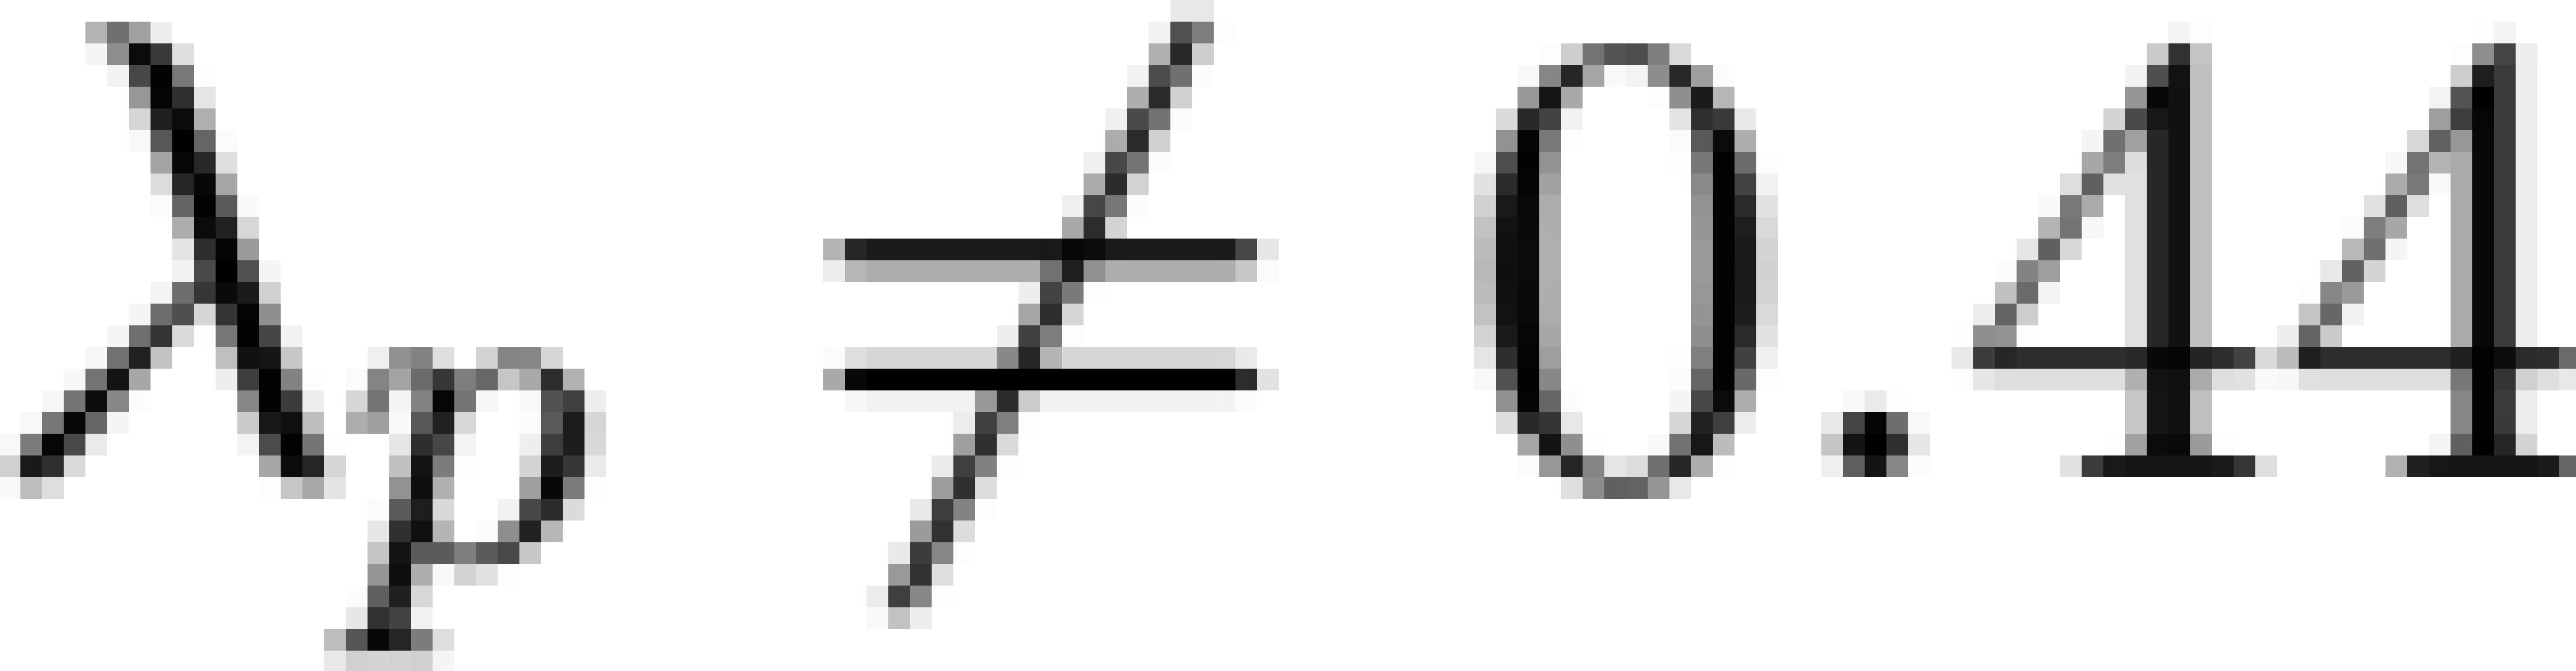

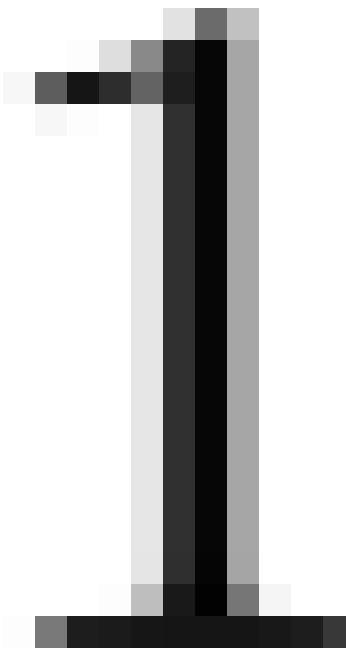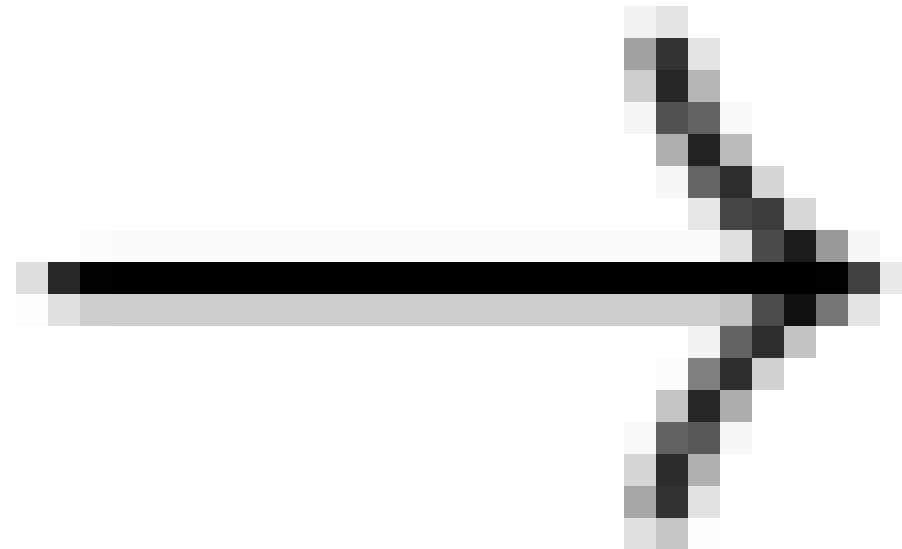


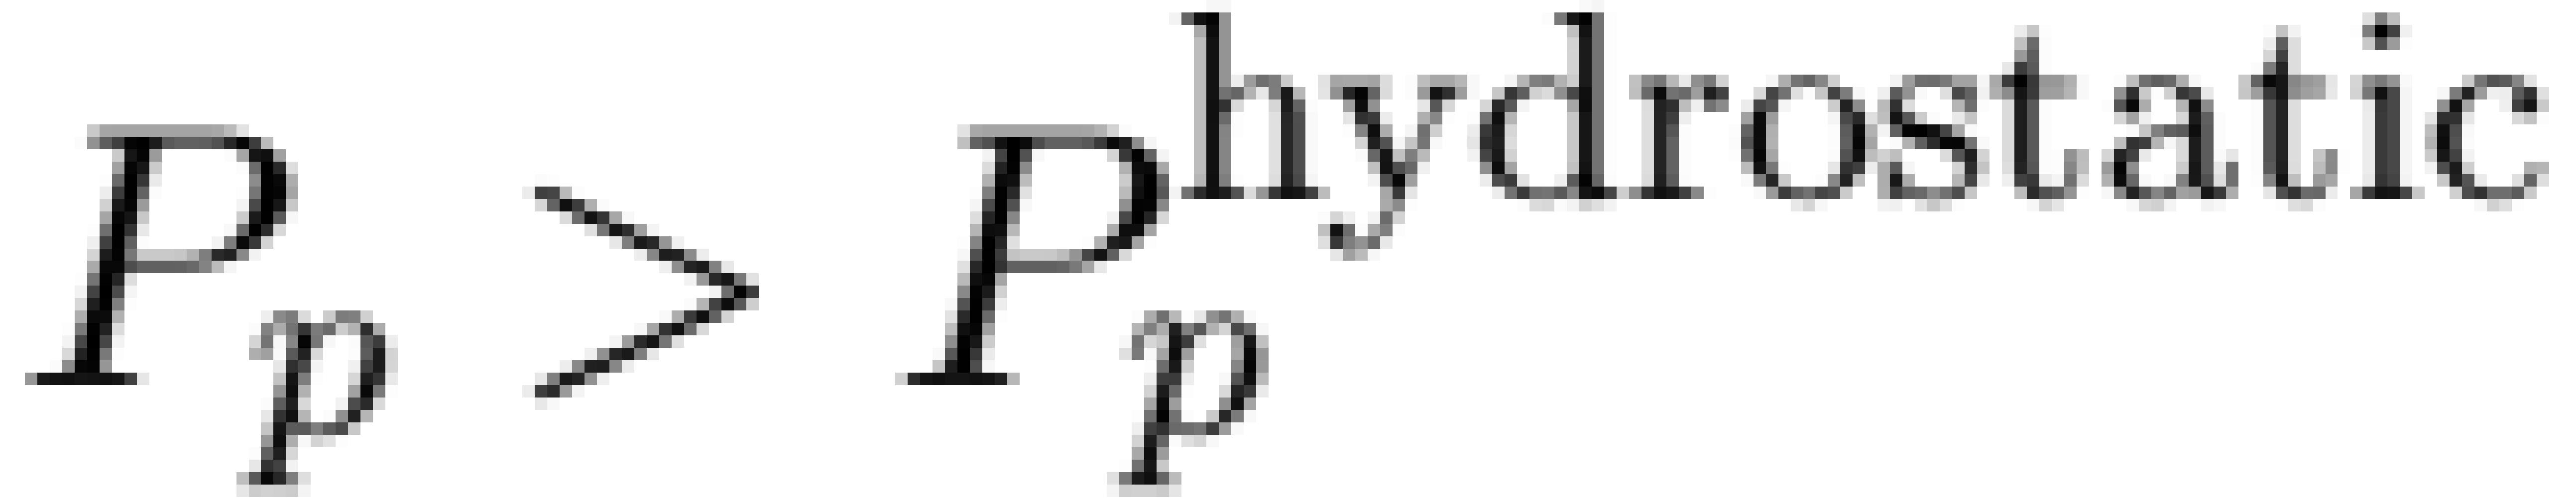




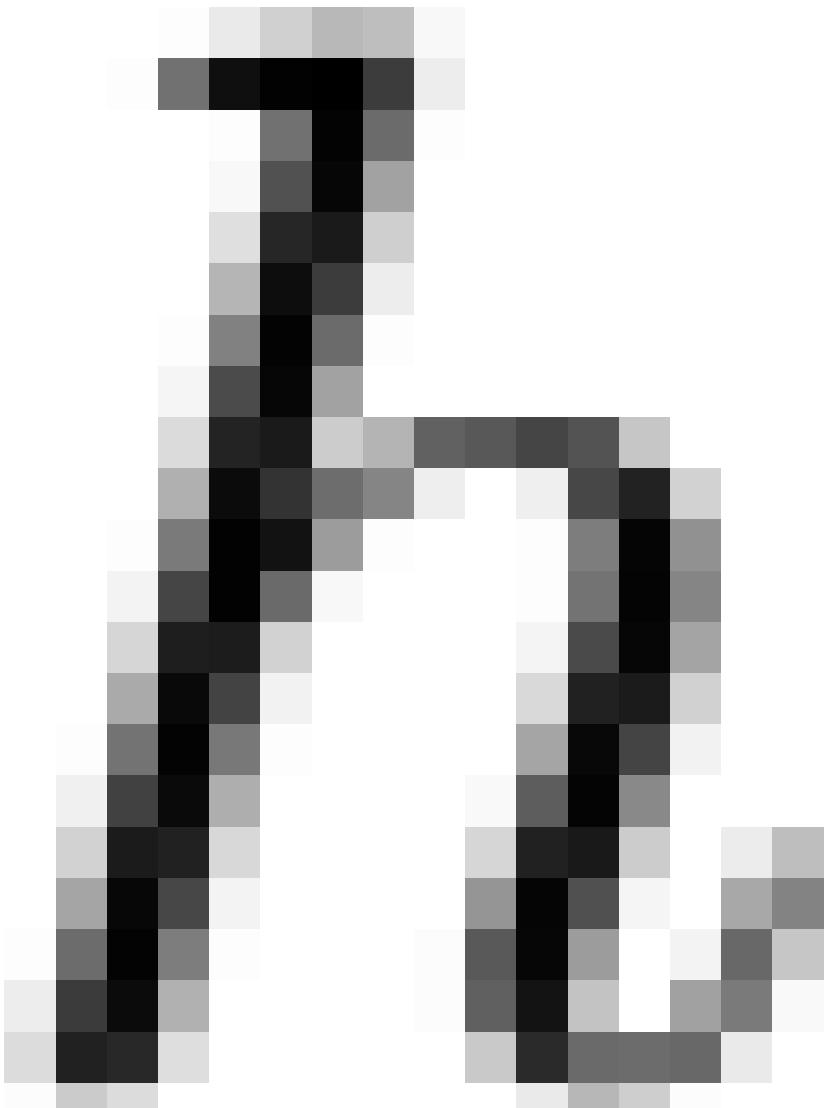





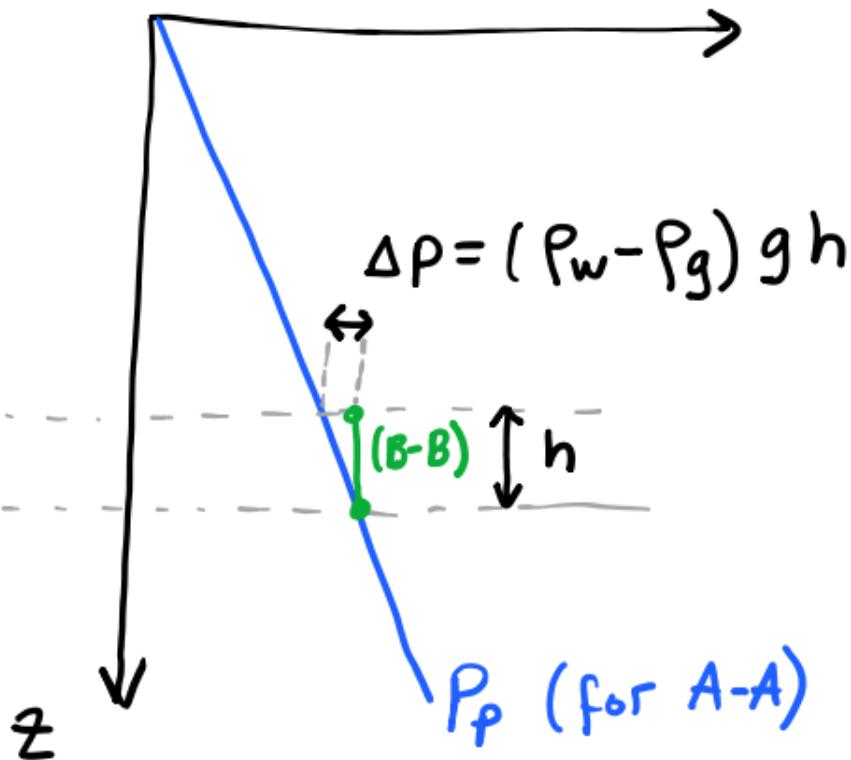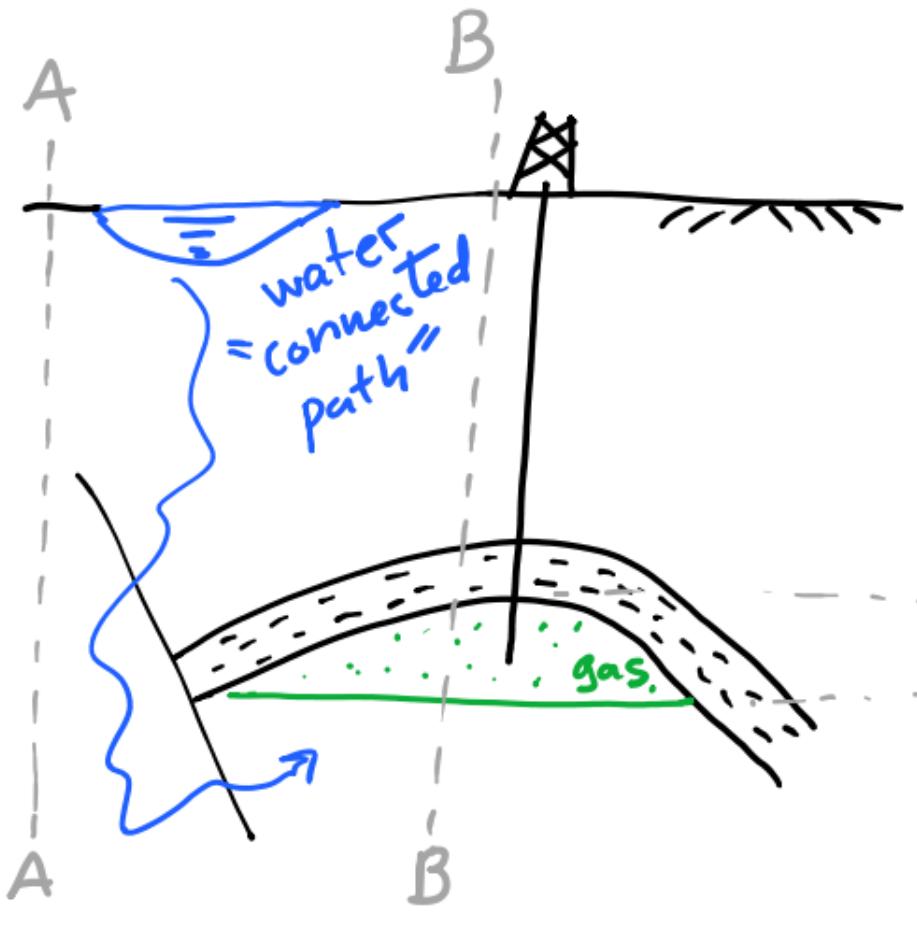


- **Aquathermal pressurization**

- $\Delta T \rightarrow \Delta P$



- **Dehydration reactions**

- $\Delta V \rightarrow \Delta P$
 - Montmorillonite to Illite (frees water)

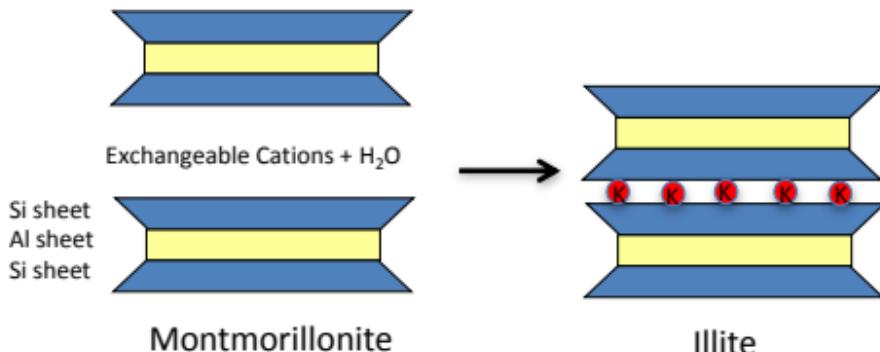



- **Hydrocarbon generation**


- $\Delta V \rightarrow \Delta P$

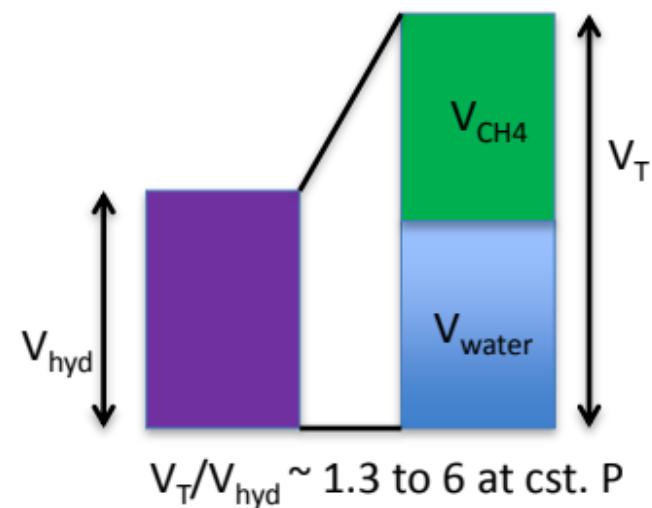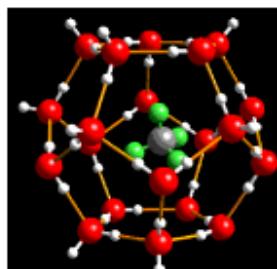




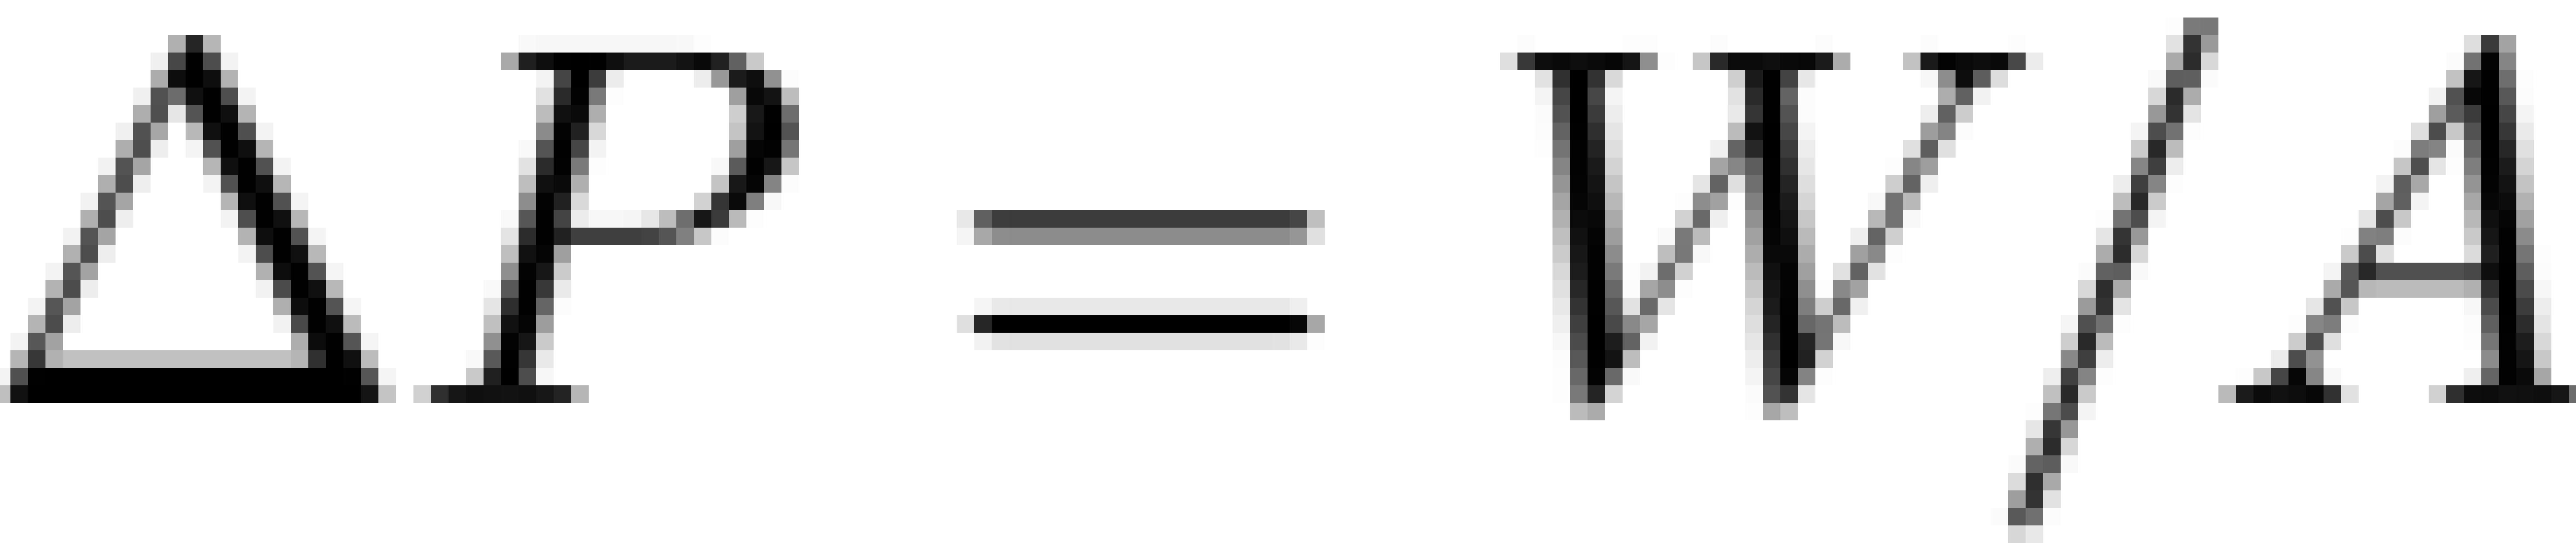





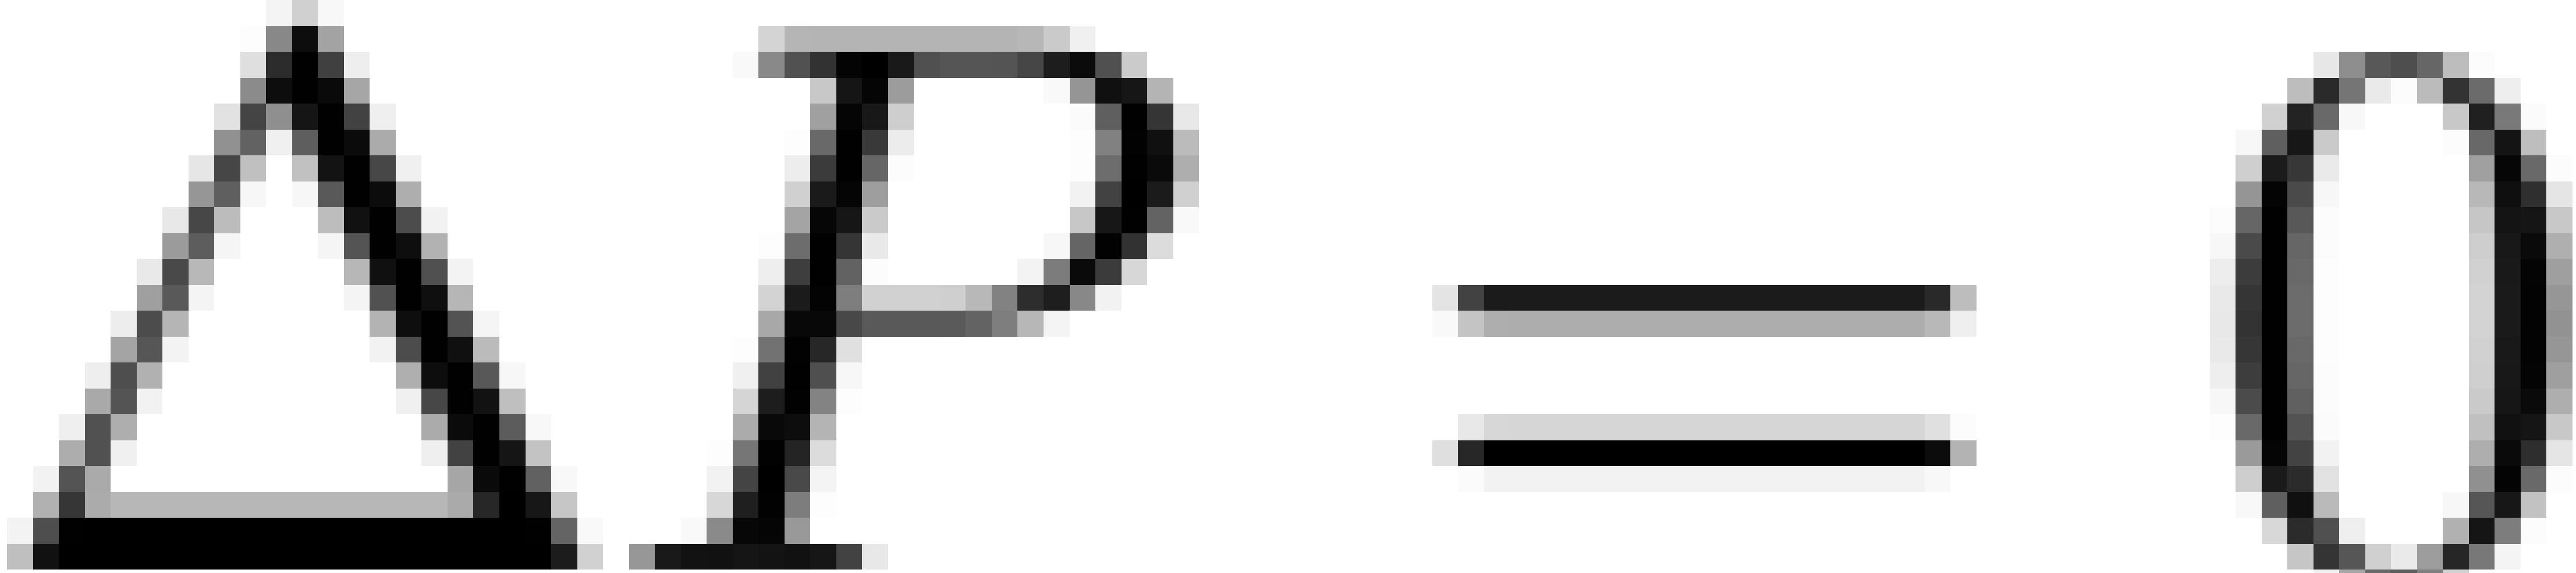


- **Disequilibrium compaction (Underconsolidation)**
 - $\Delta S \rightarrow \Delta P$ (Vertical)
- **Tectonic compression**
 - $\Delta S \rightarrow \Delta P$ (Horizontal)

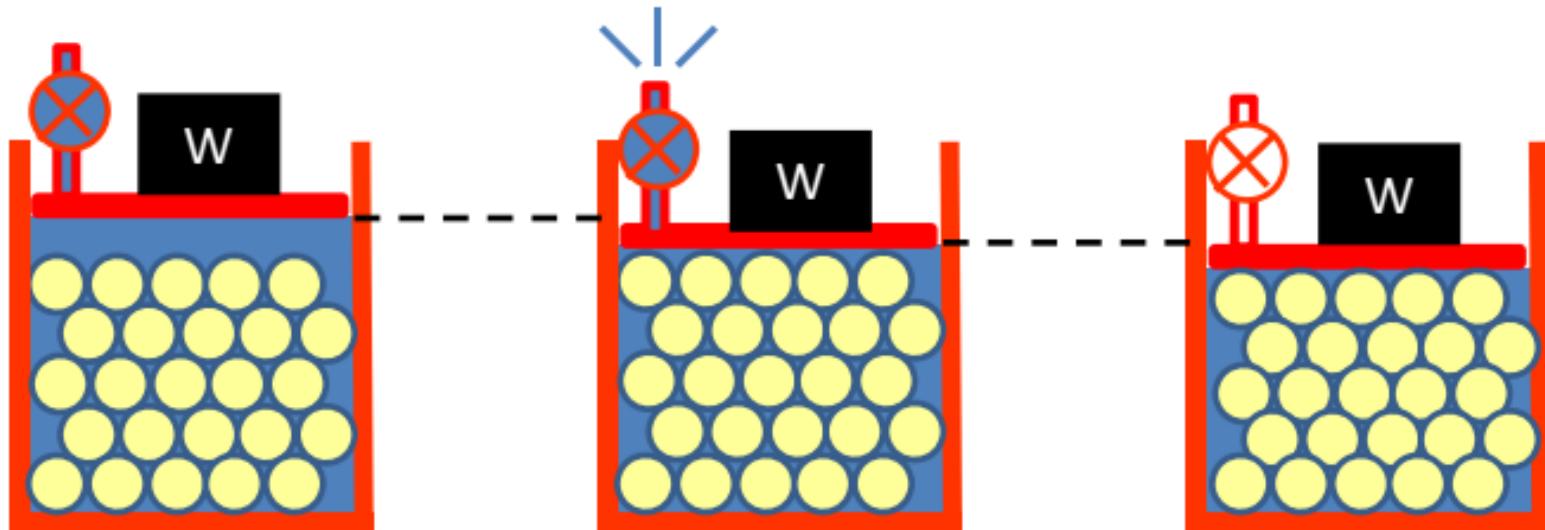

Pressure water

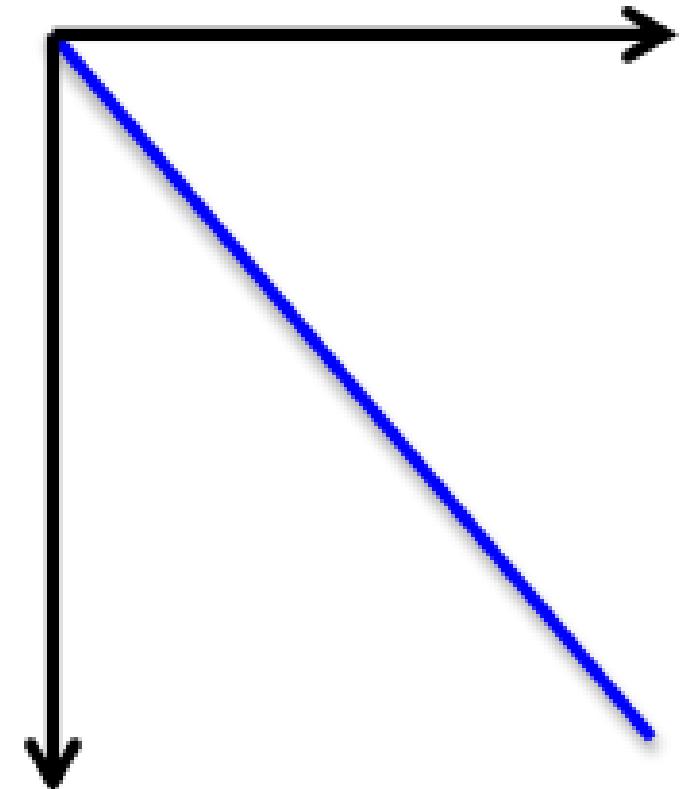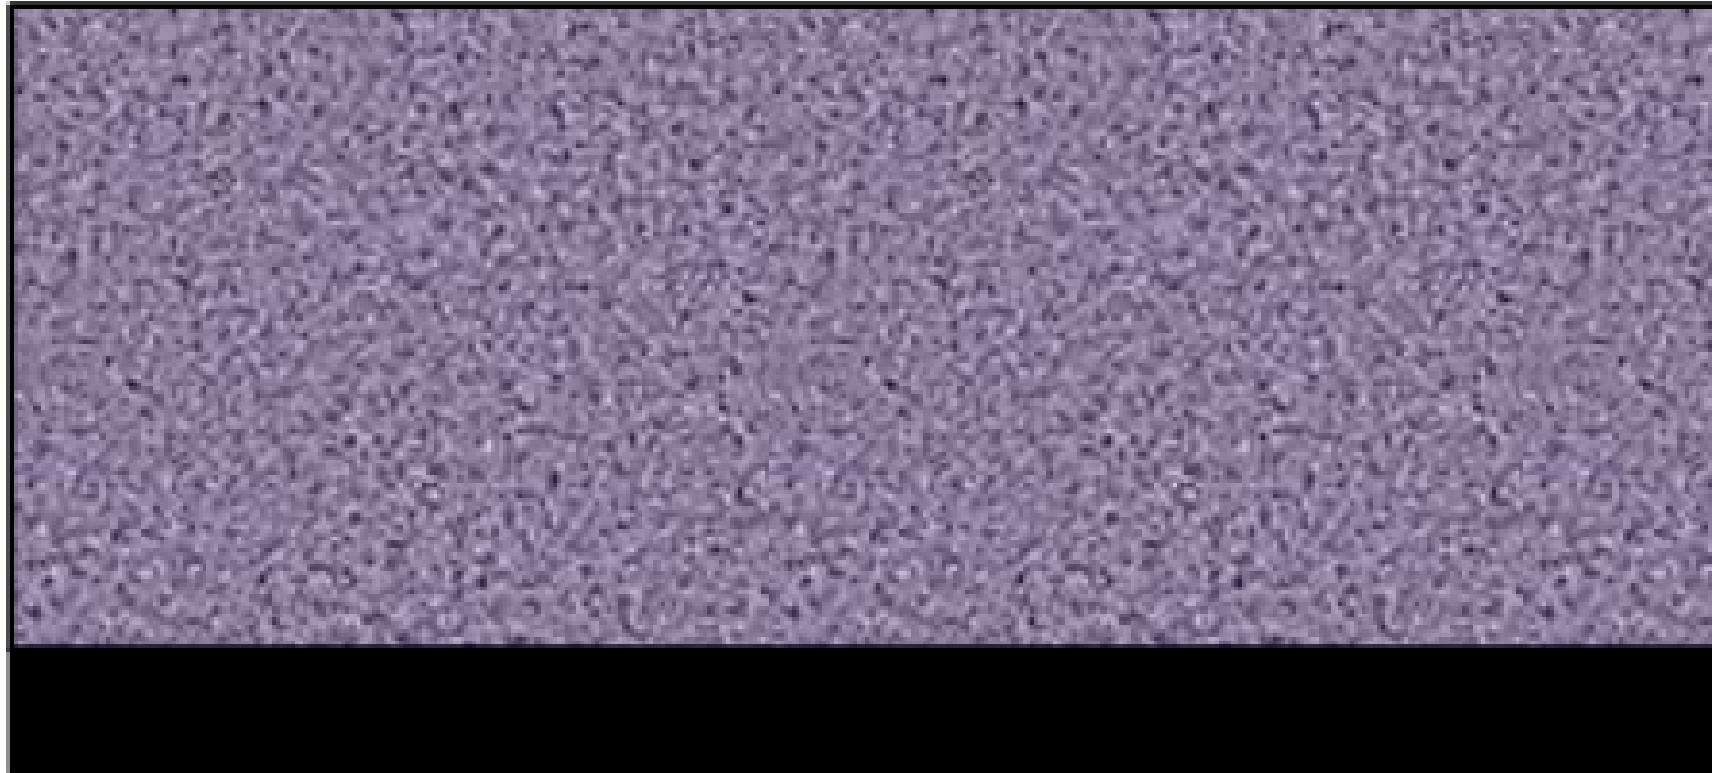

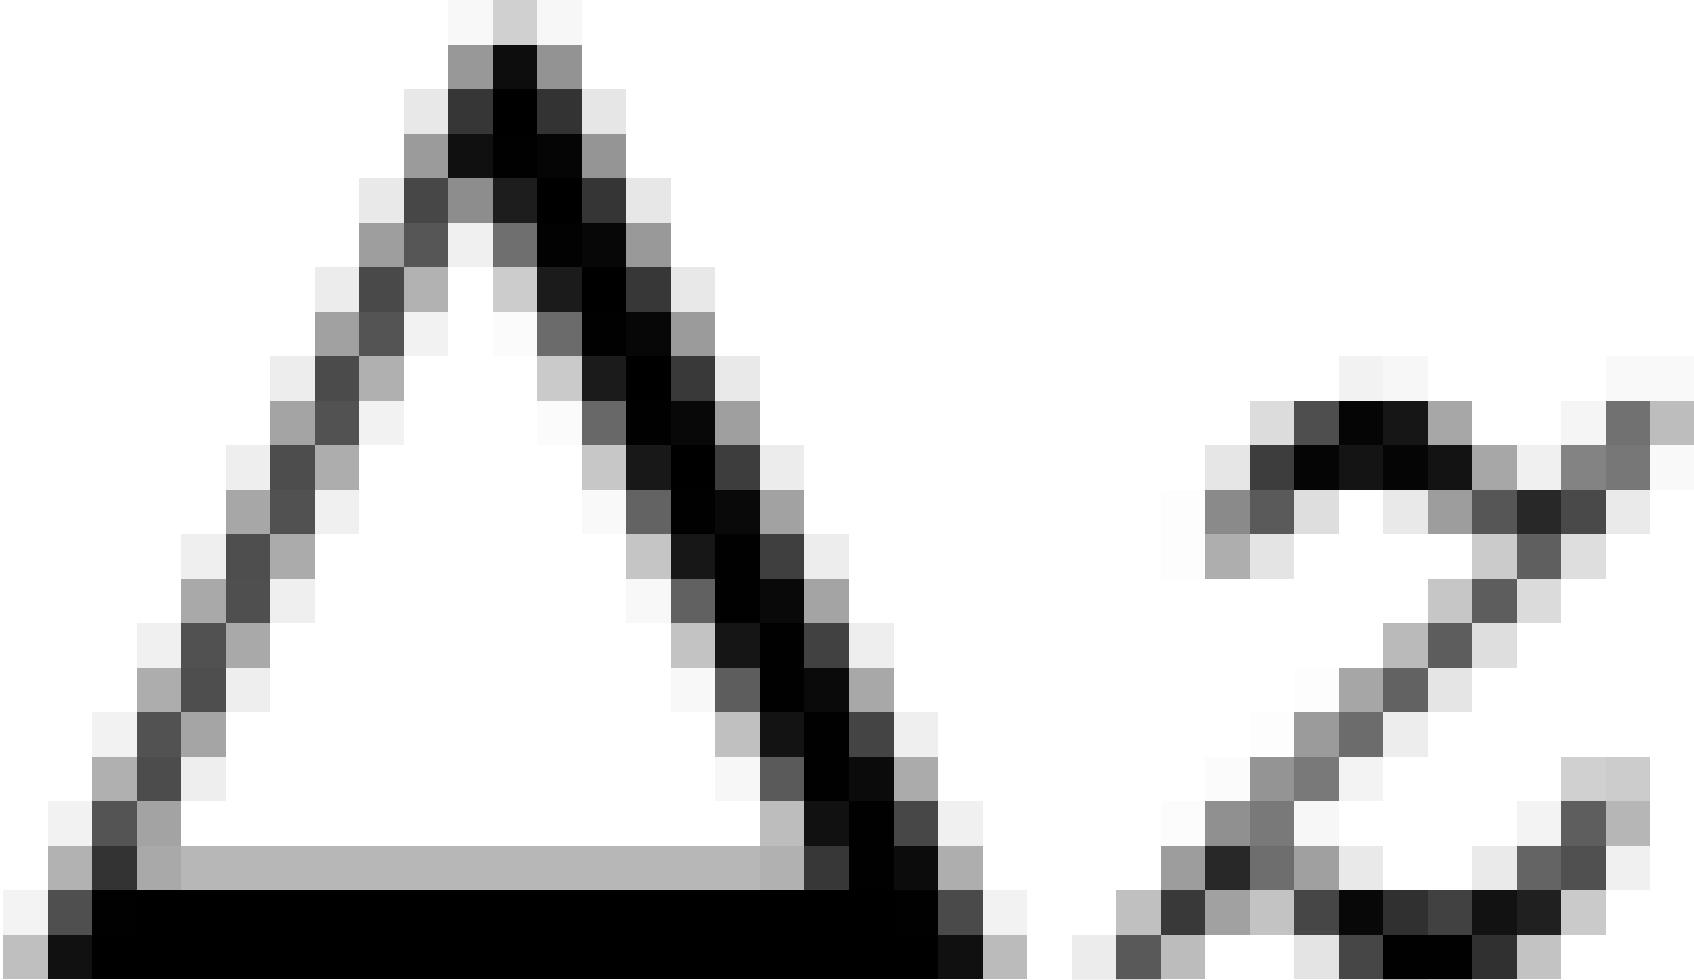


Dh


=

MK

ll



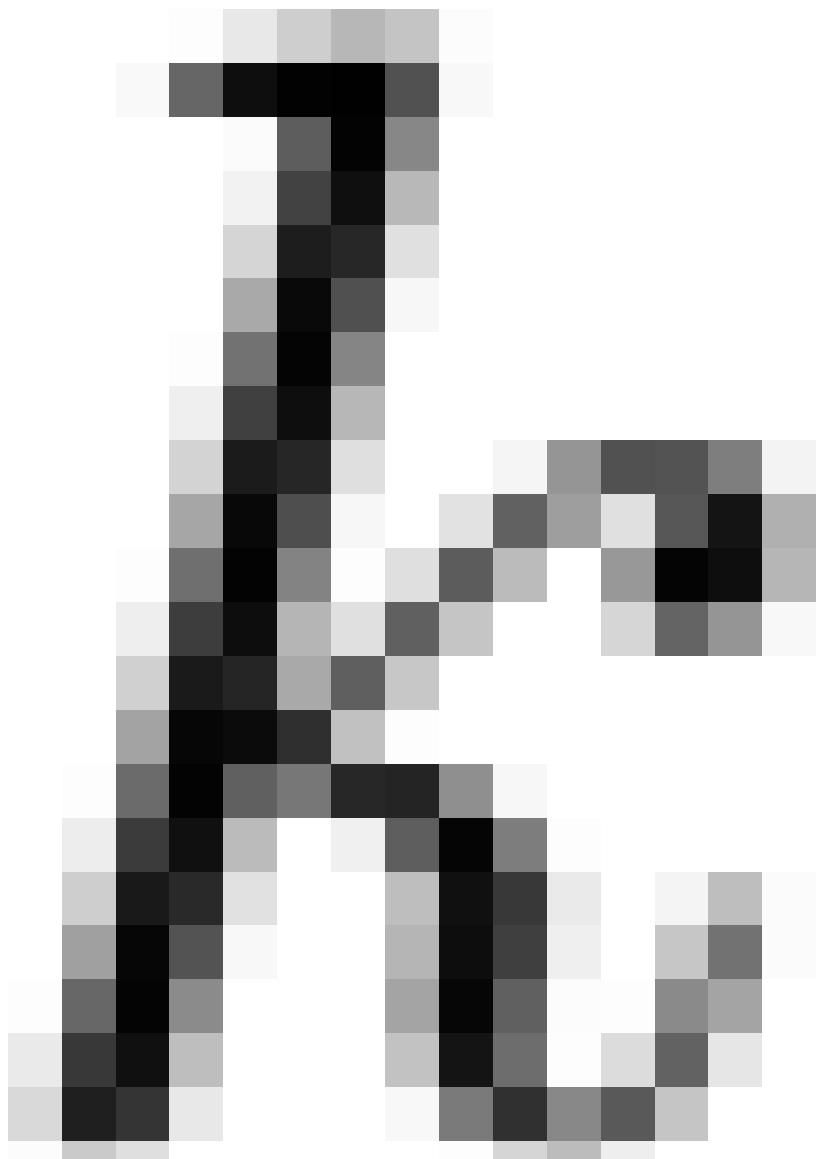

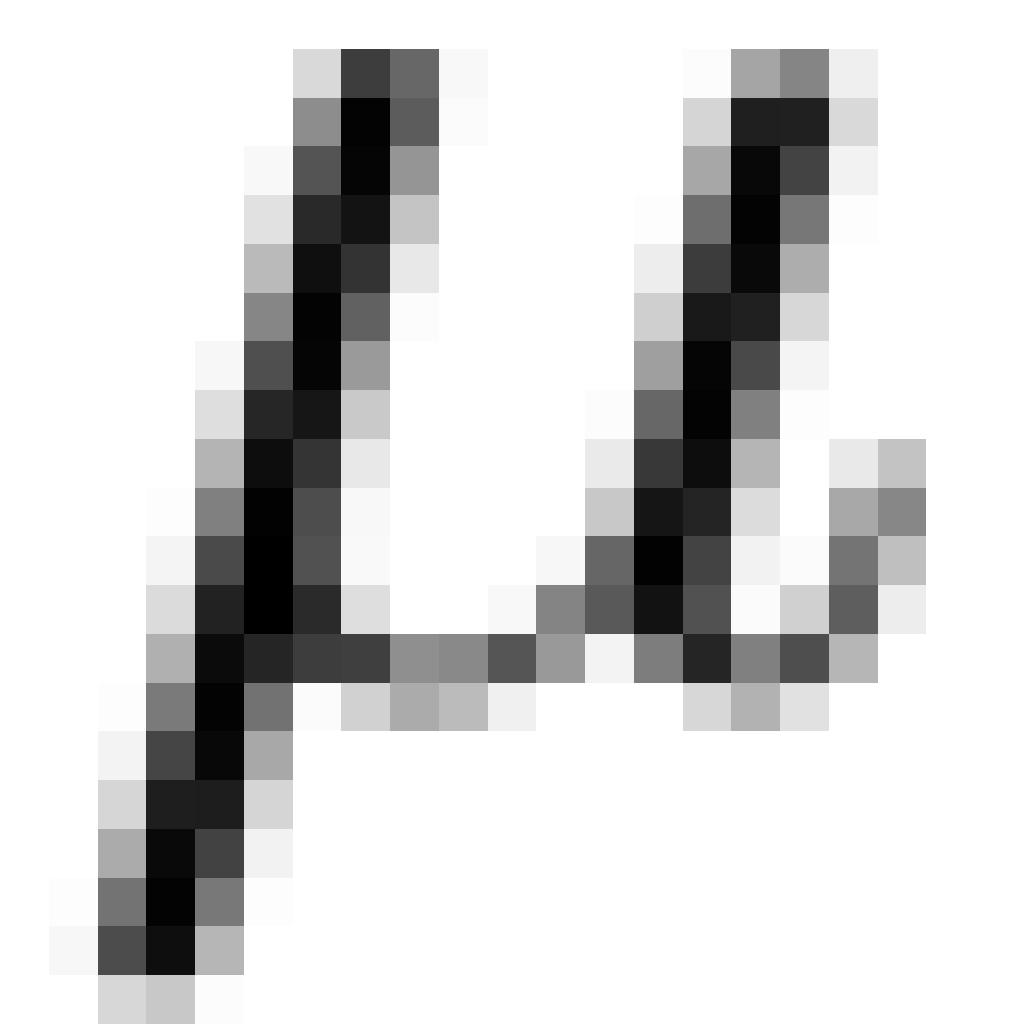

αp

β

δt


$=$

D_h


dz^2


$d^2 p$




Rate of sedimentation (loading) and rate of fluid “escape”

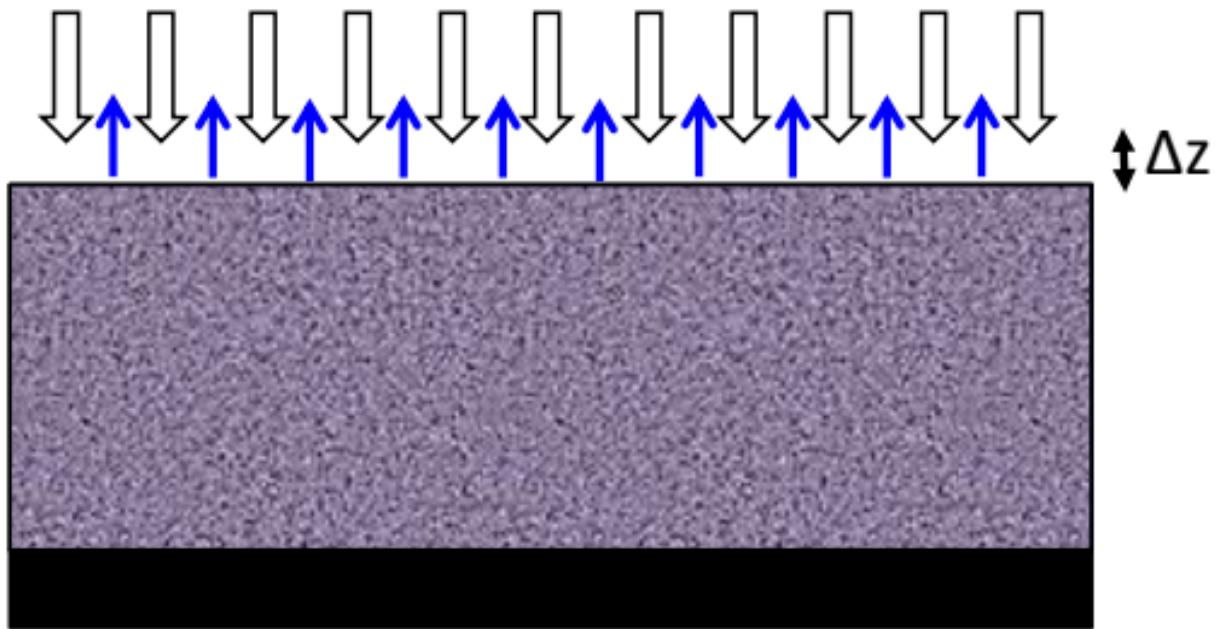

Pressure water

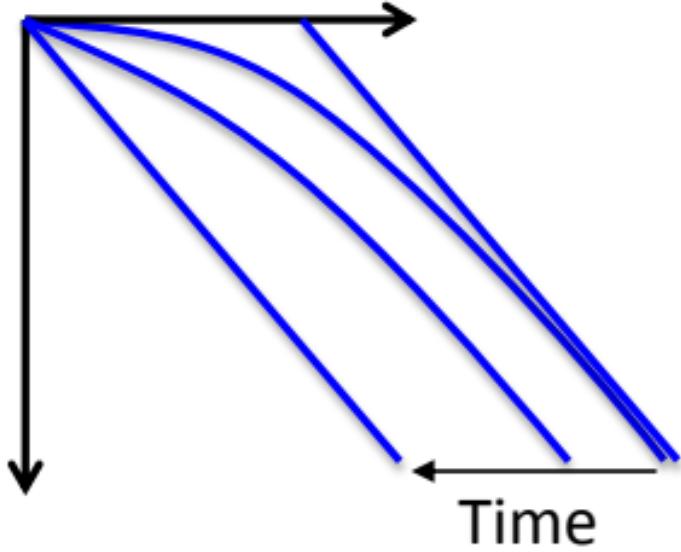

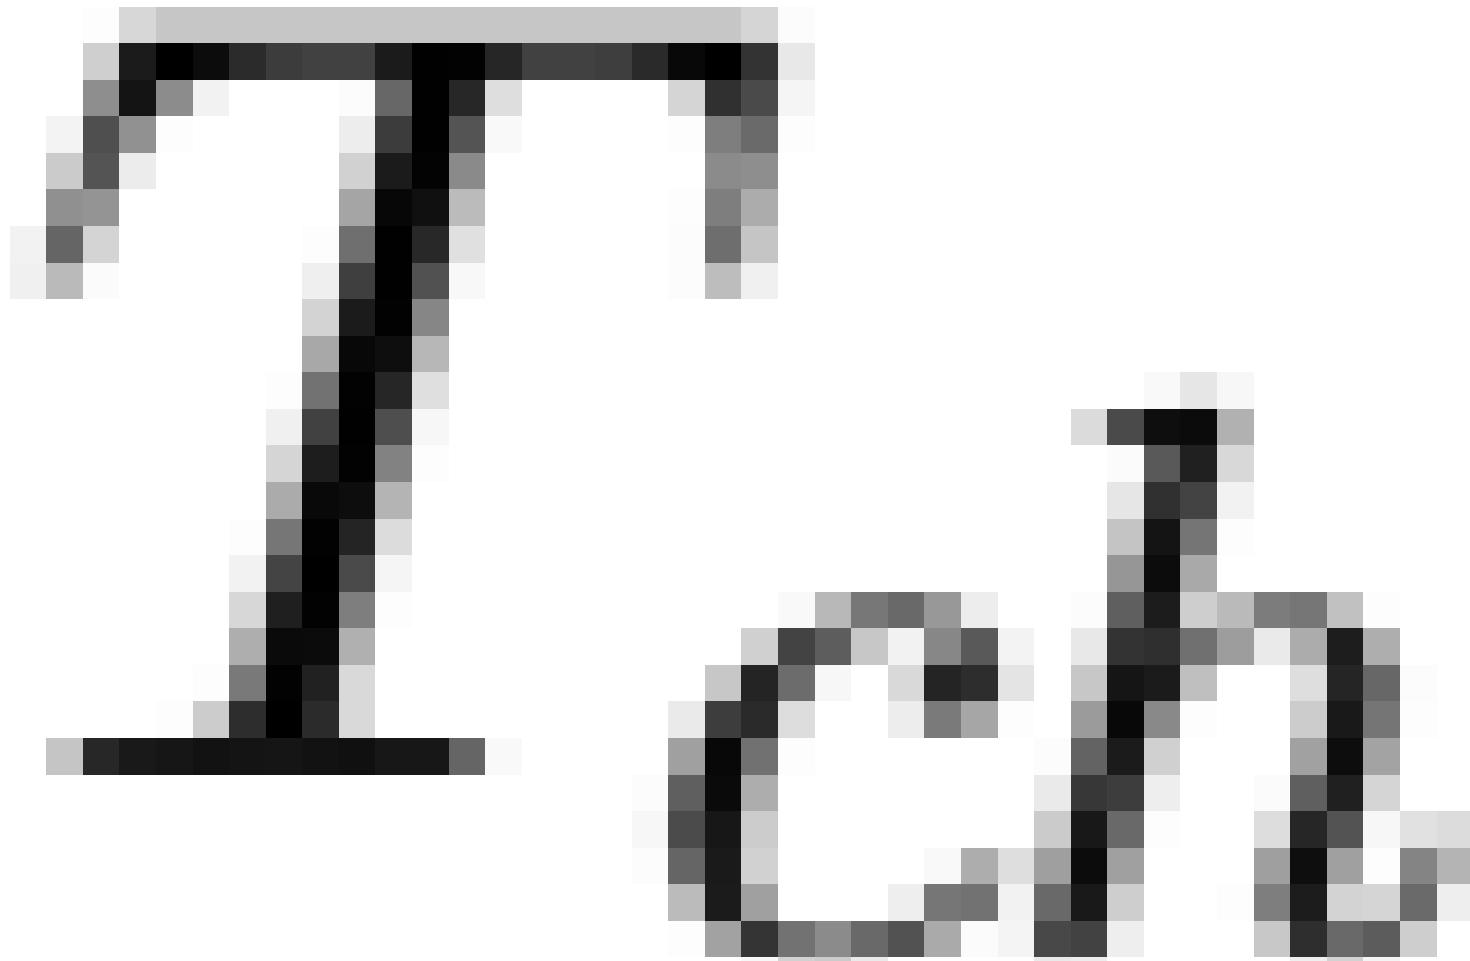

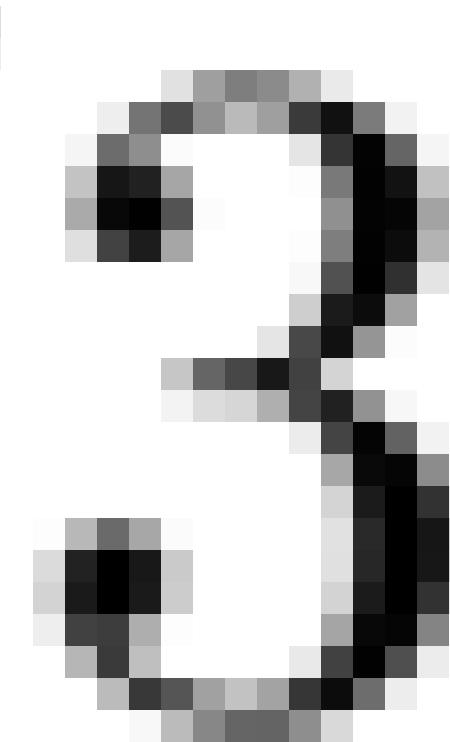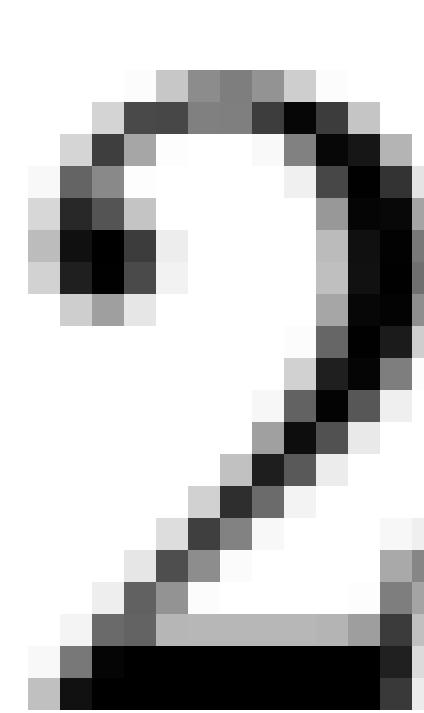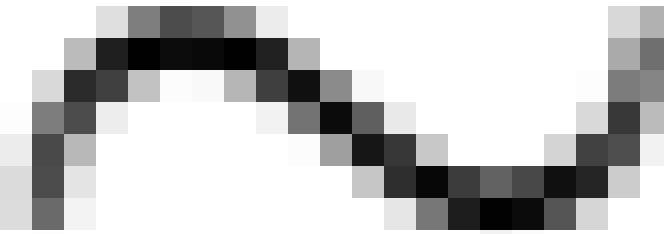



Γ_{ch}




D_h

Γ^2

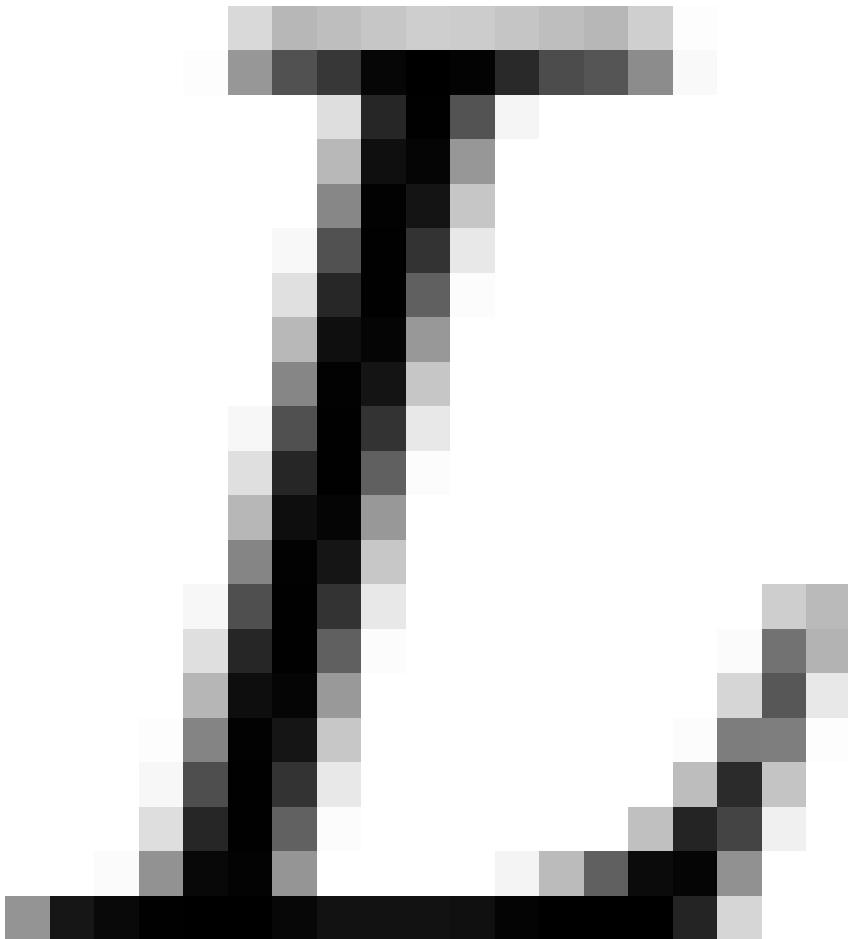


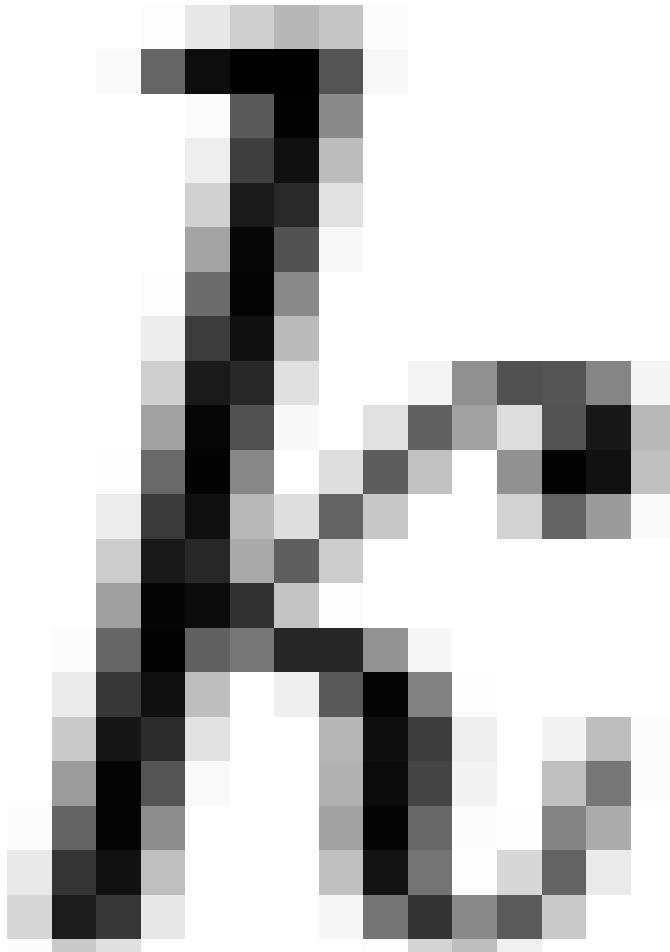

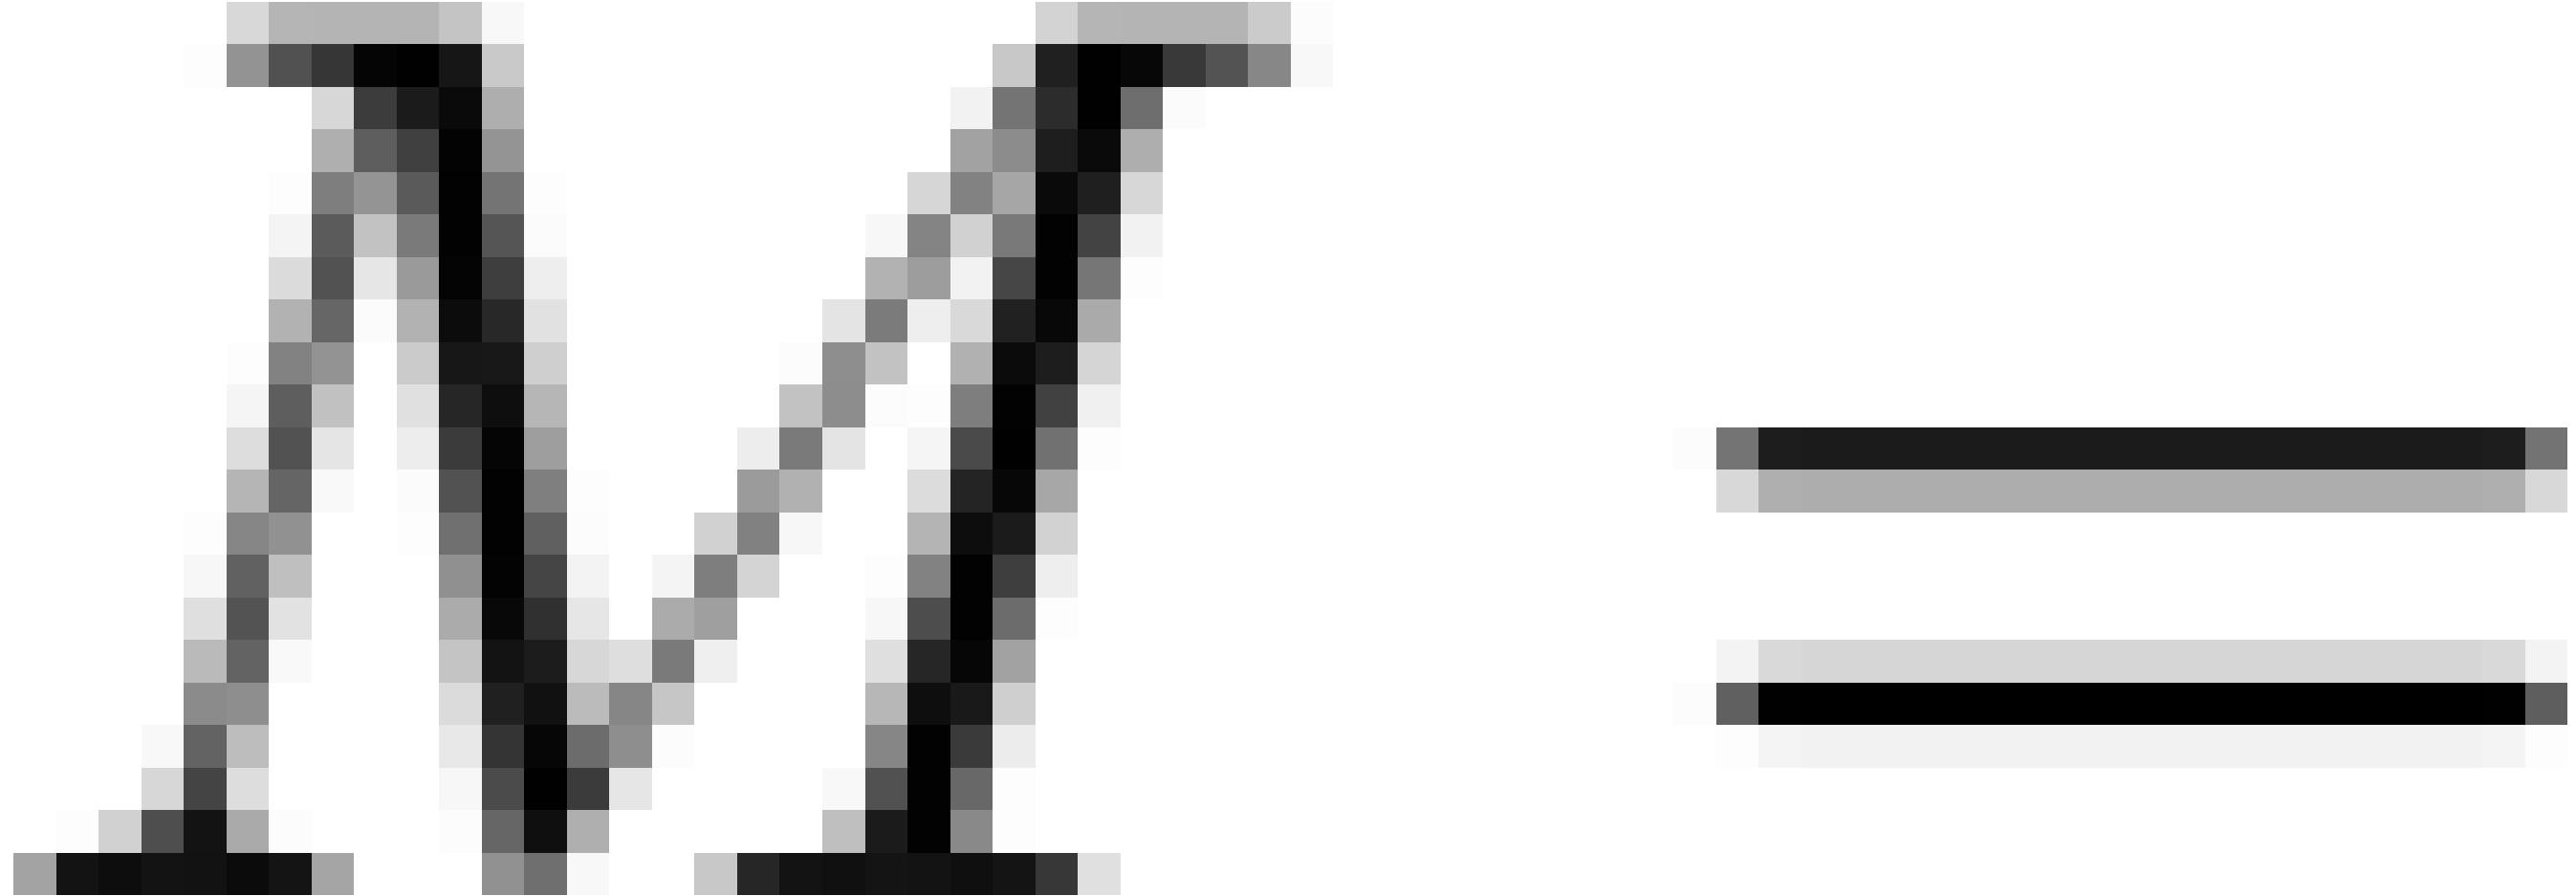








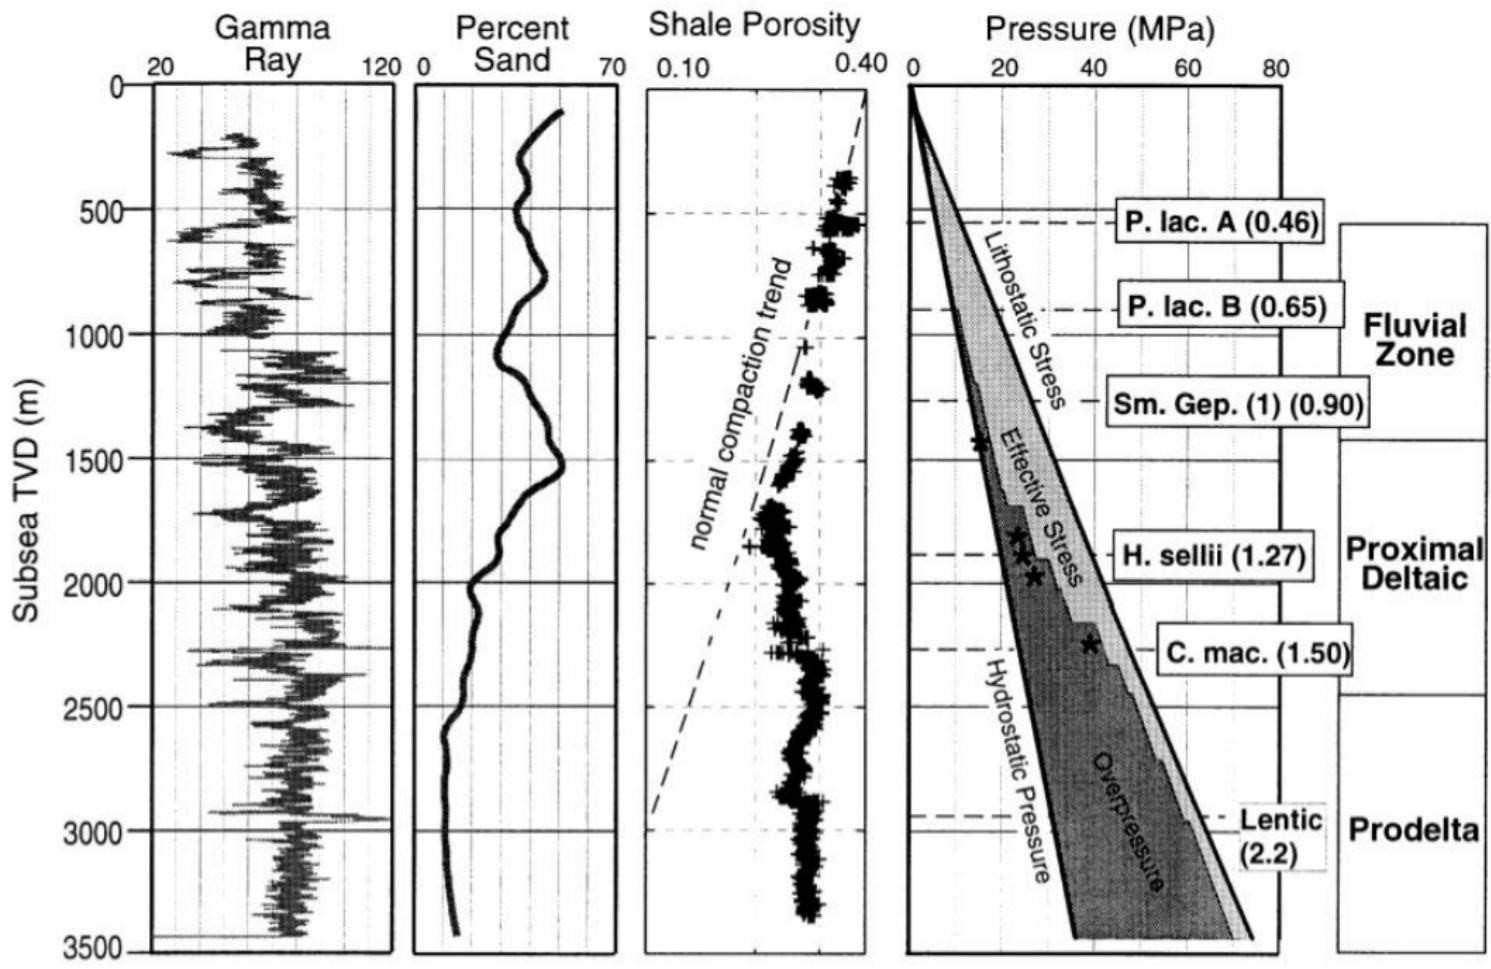



Off-shore Louisiana – Gordon and Flemings (1998) Basin Research




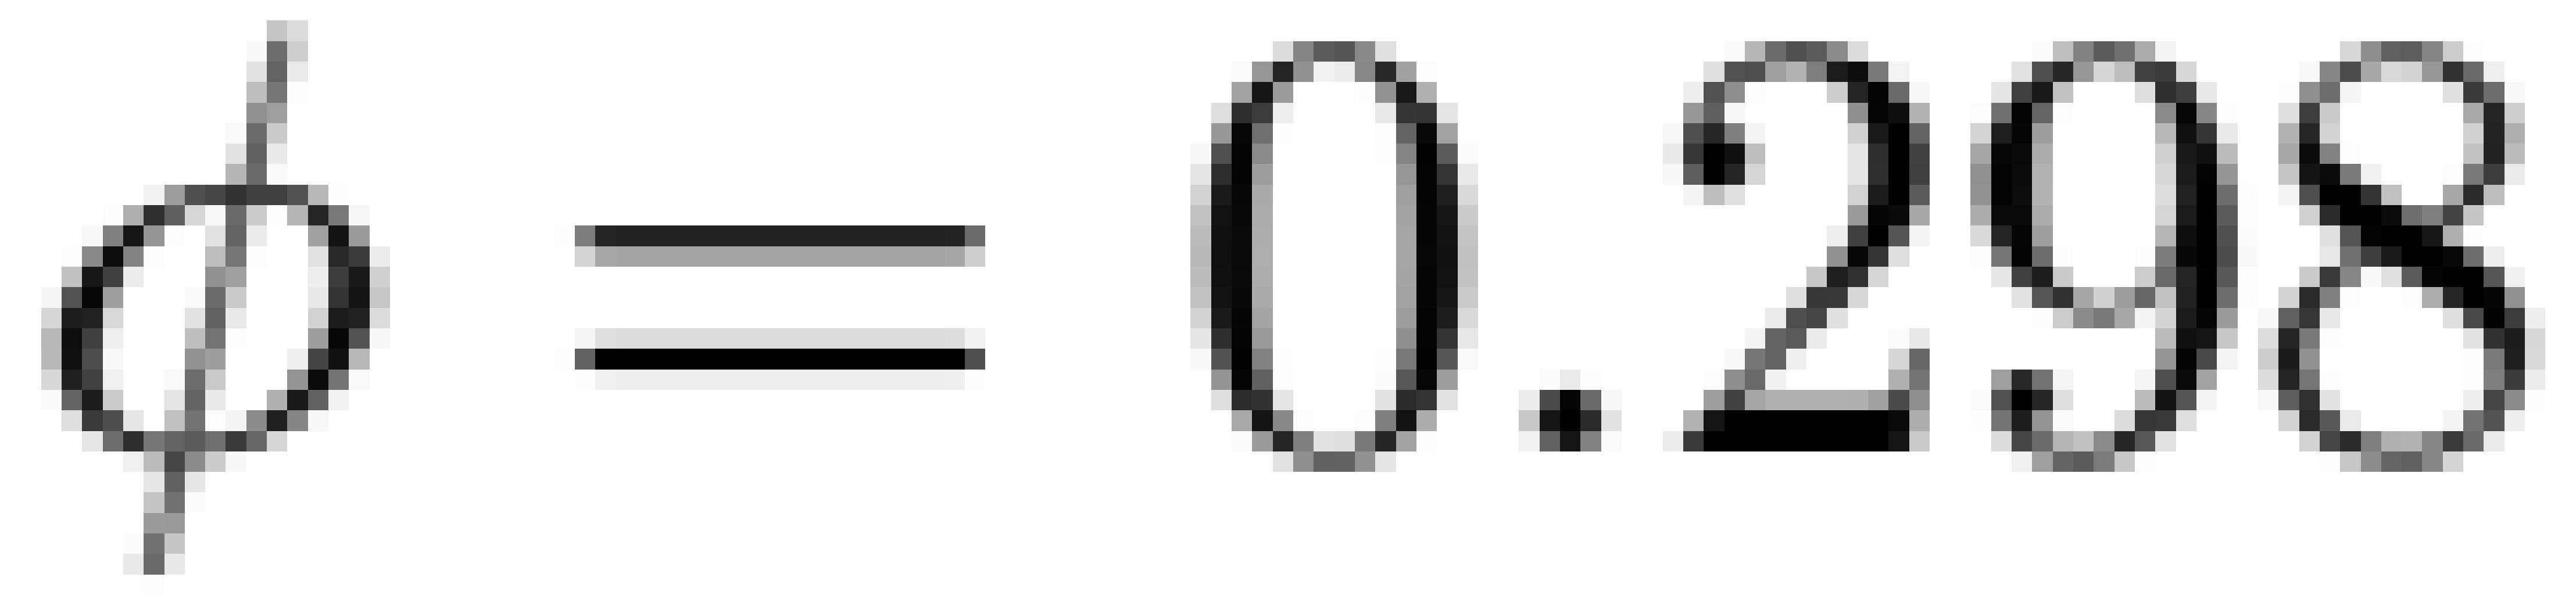


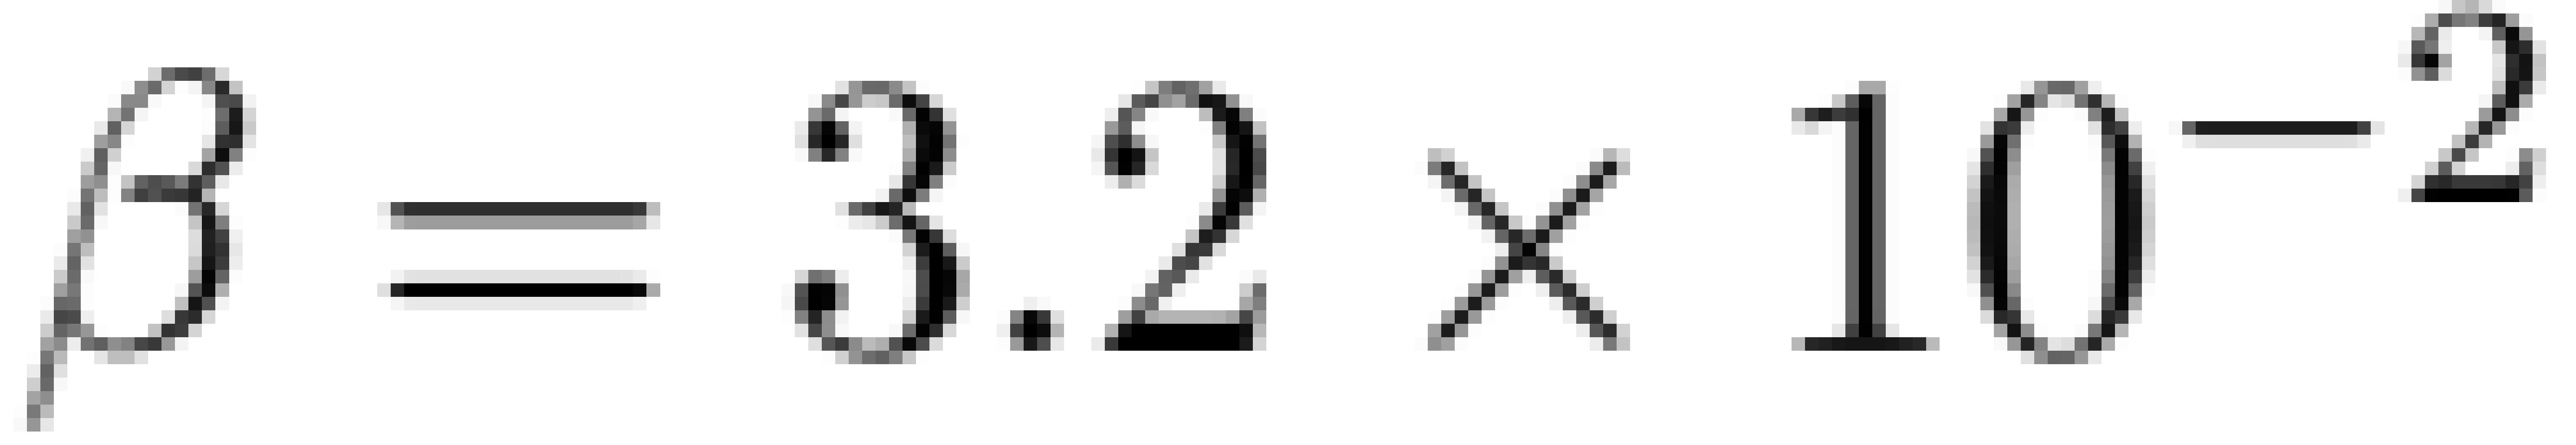





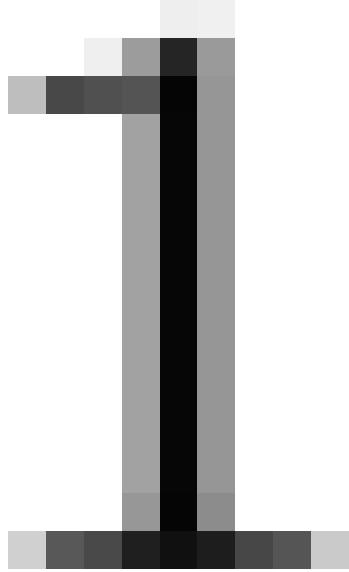


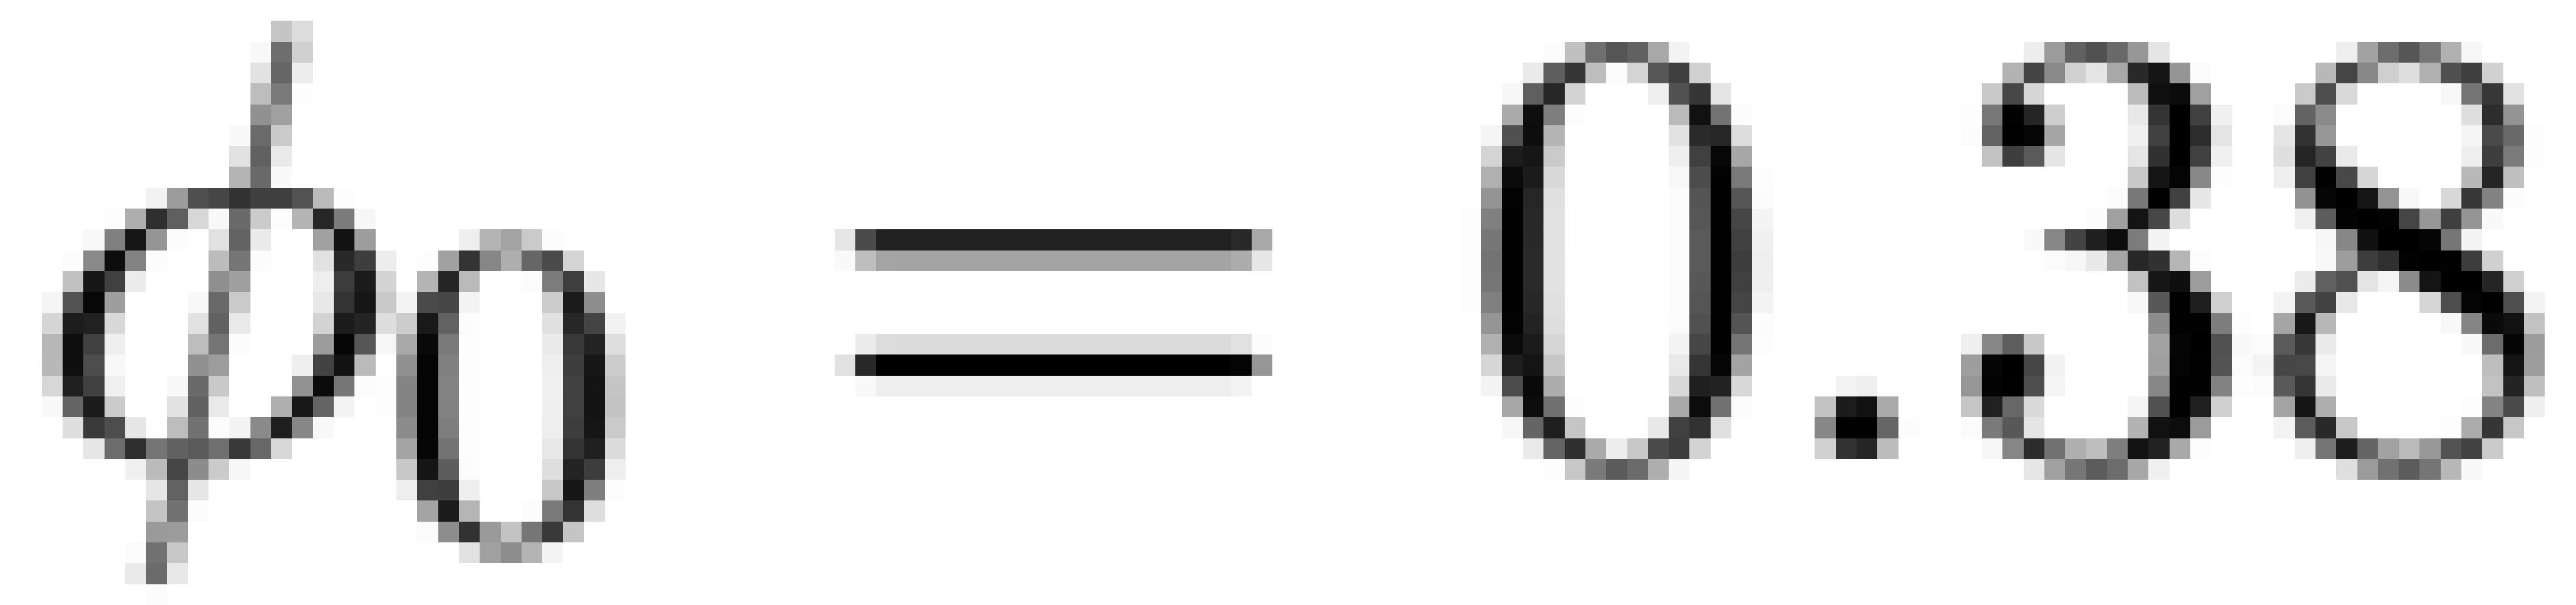


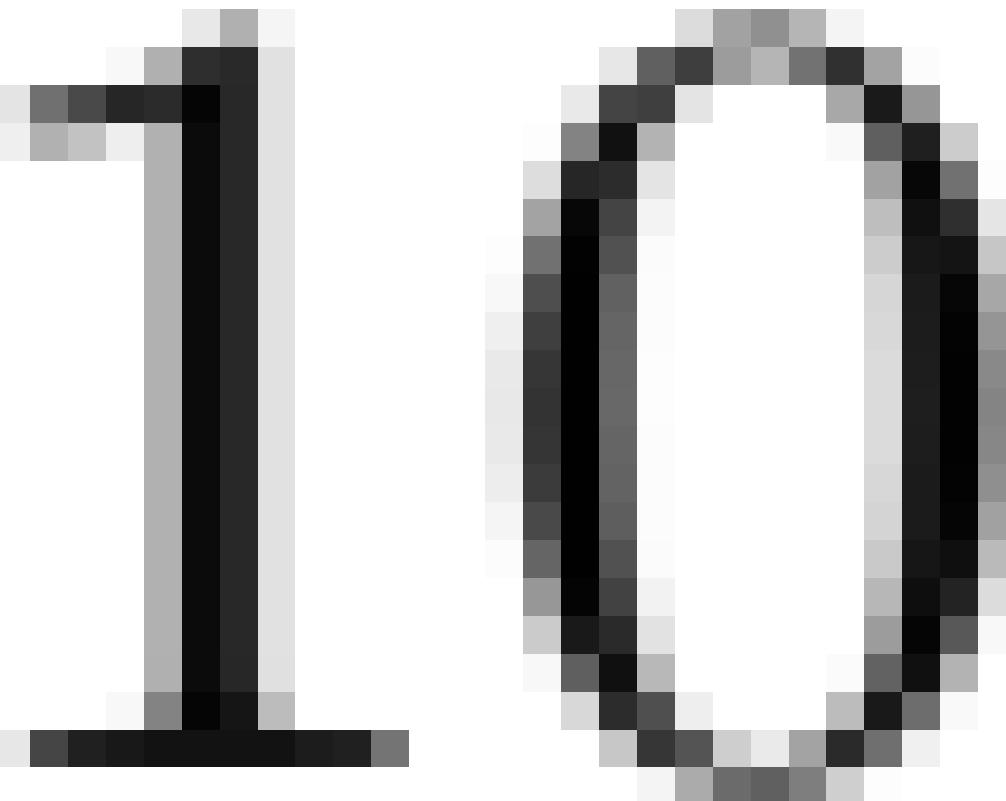

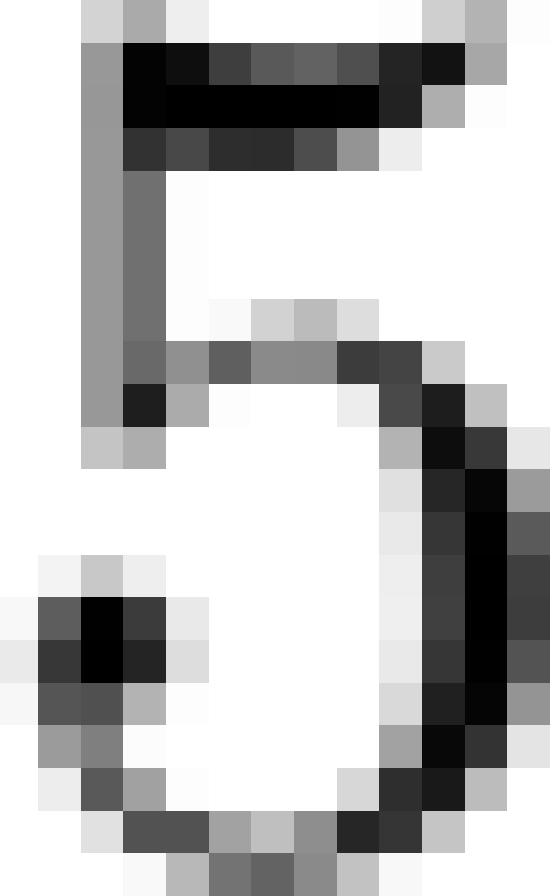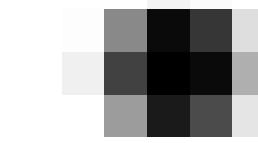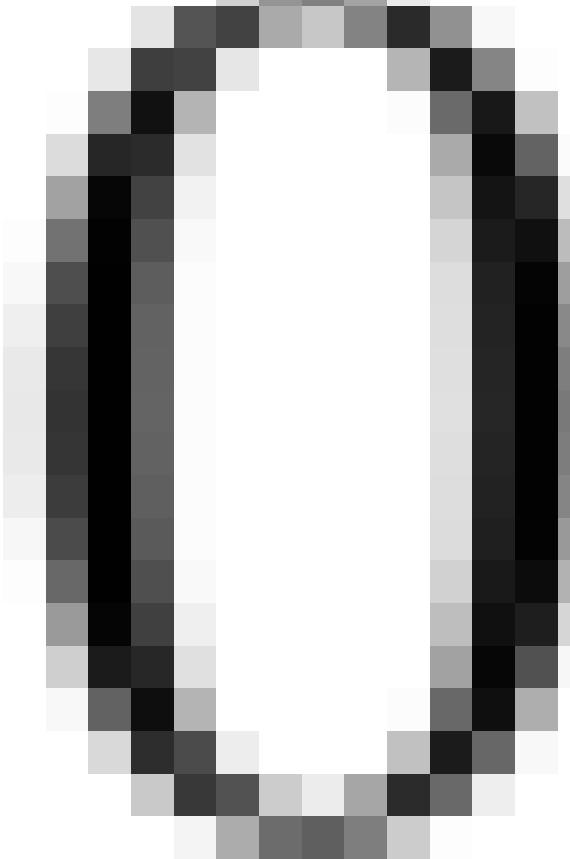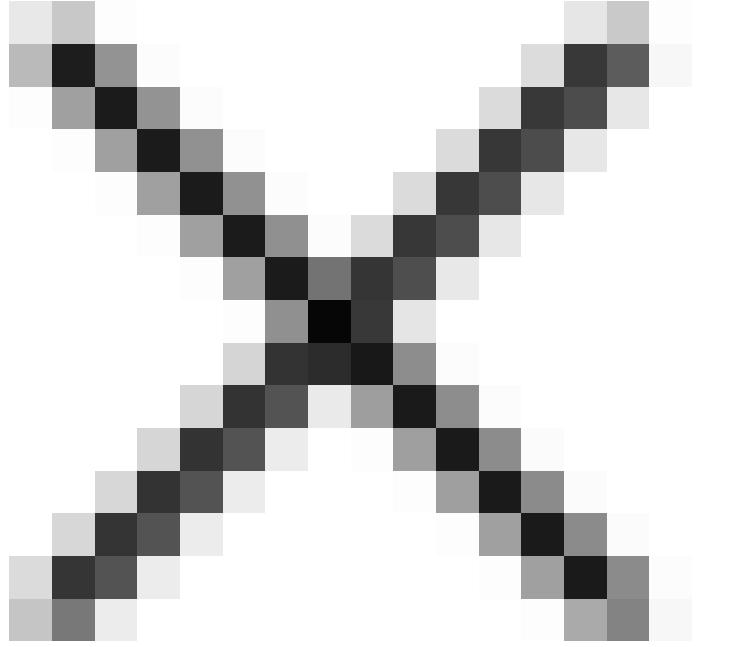


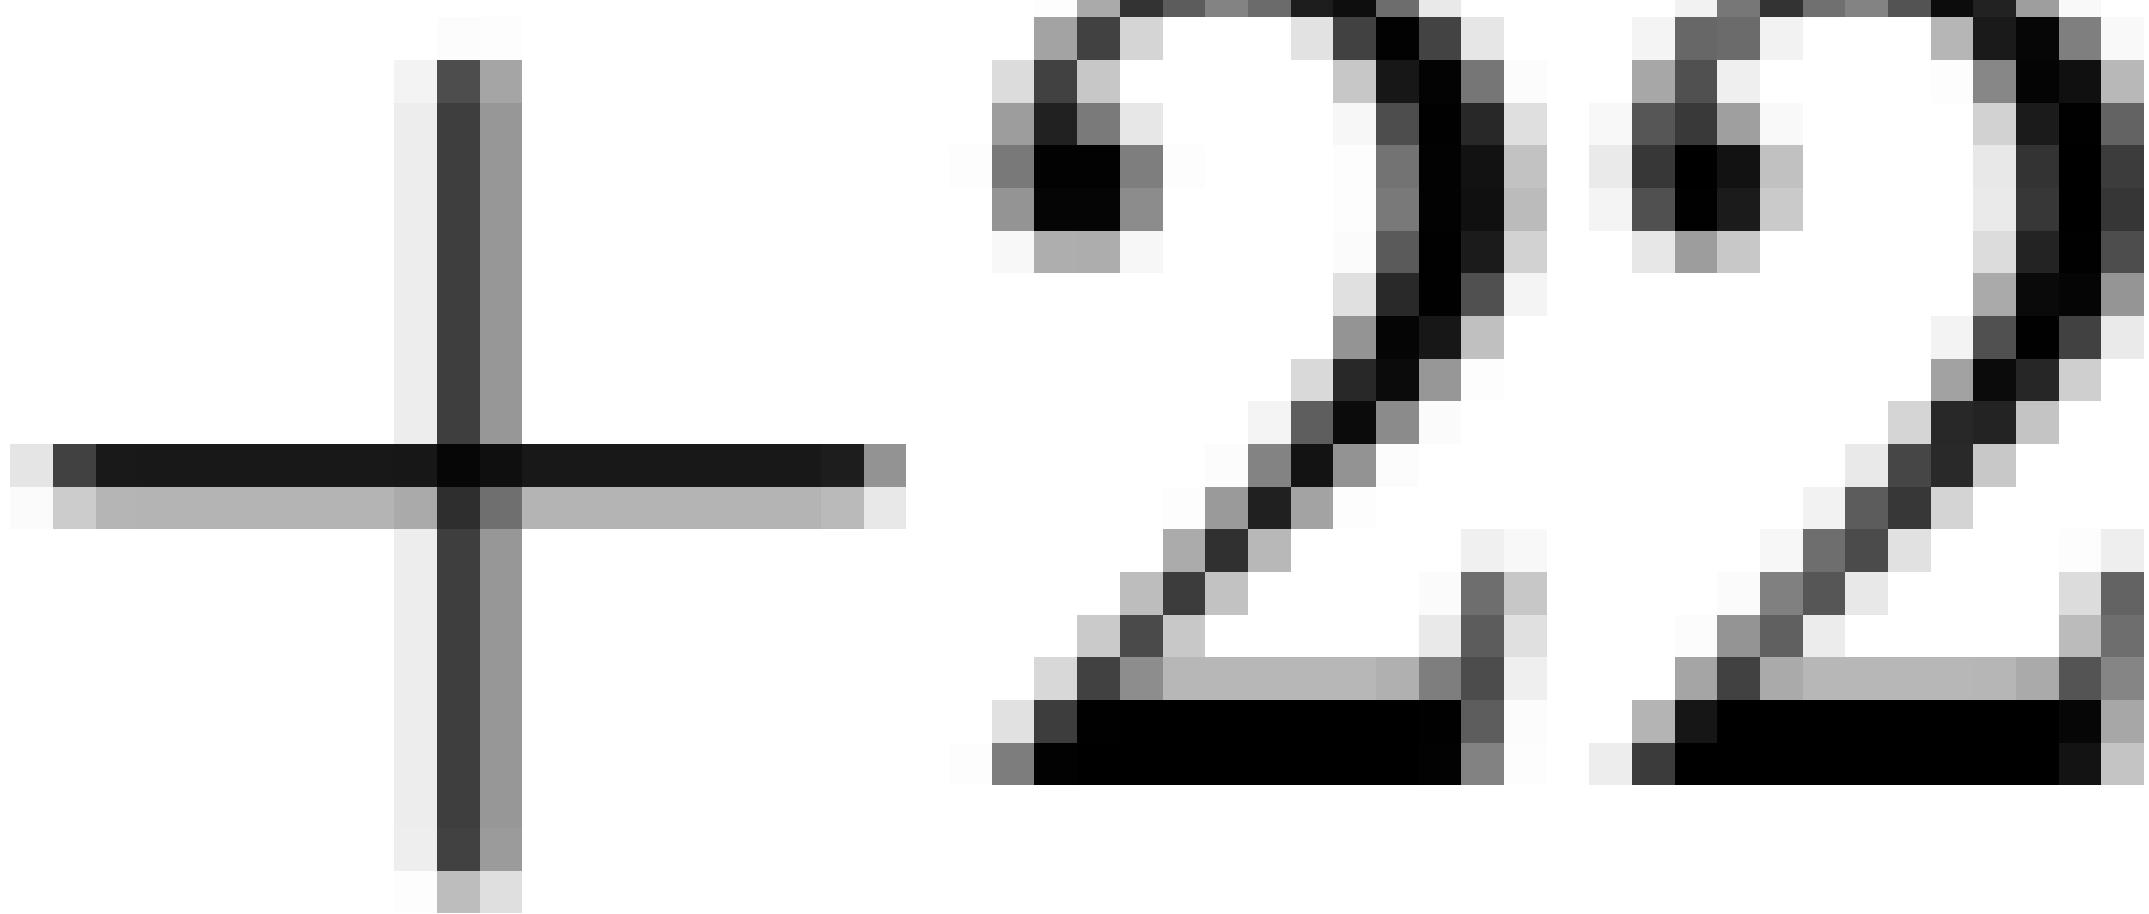


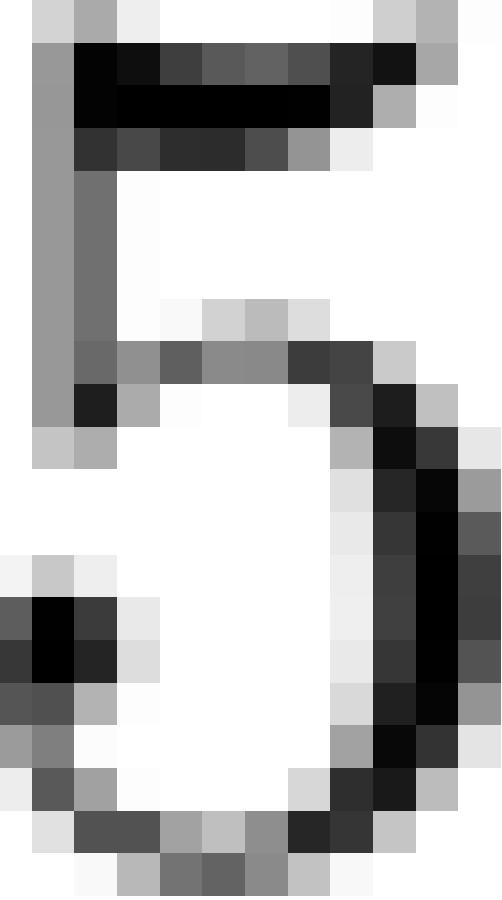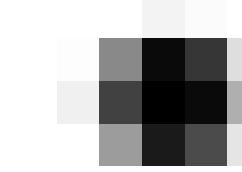
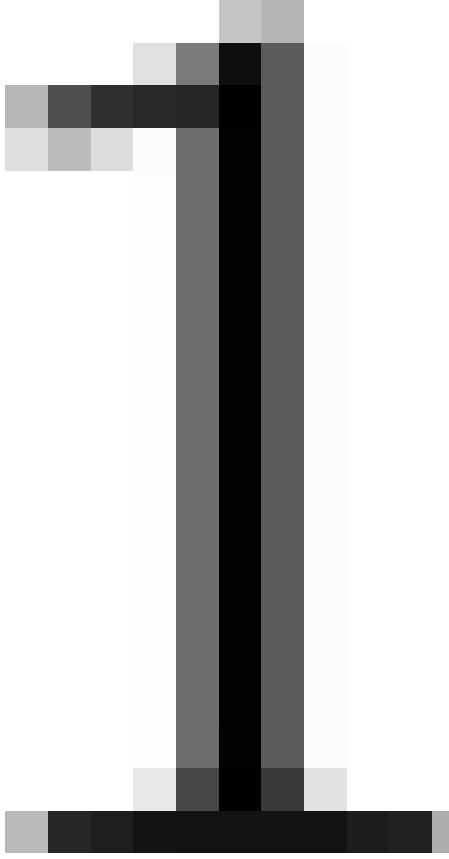
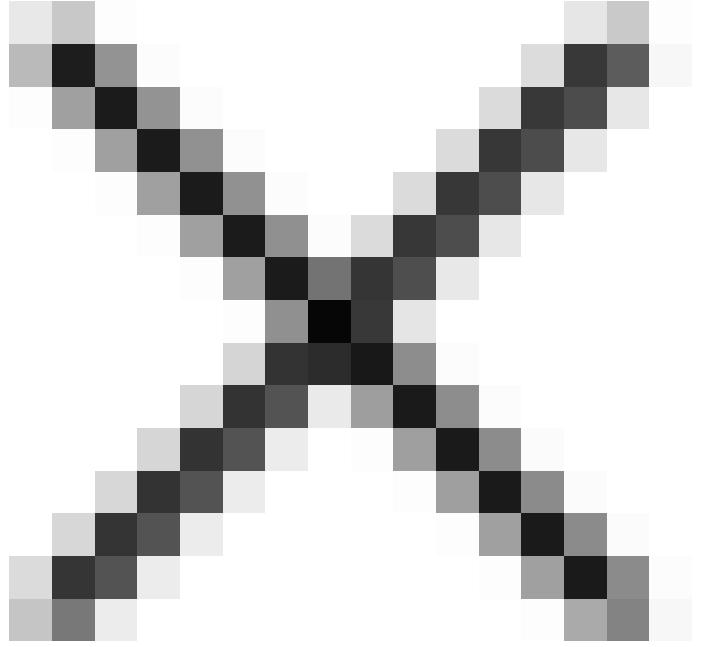


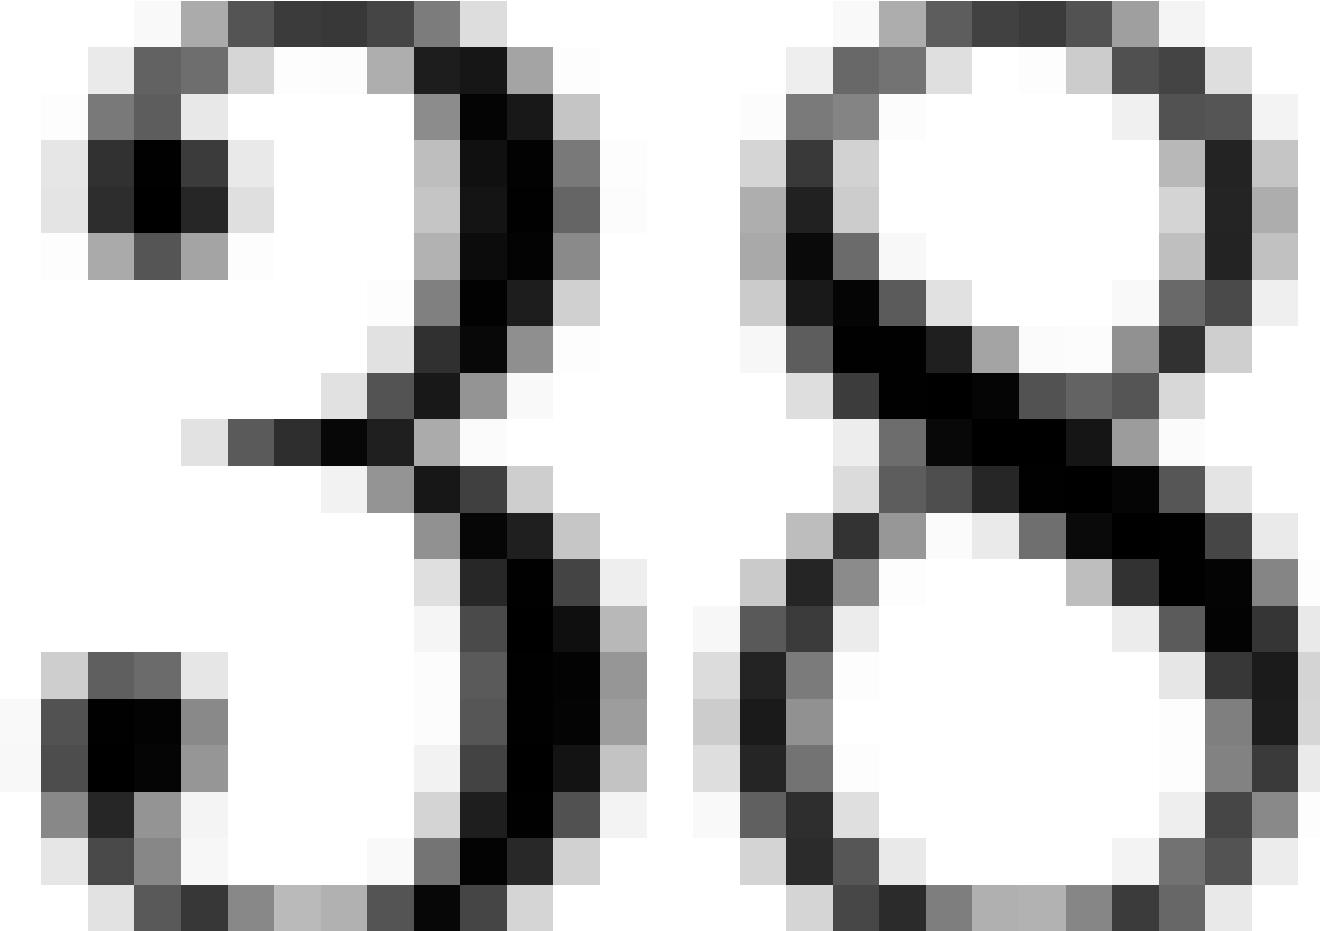


$$\sigma_u = -\frac{\ln(\phi_1/\phi_0)}{\phi_1} = 7.6$$







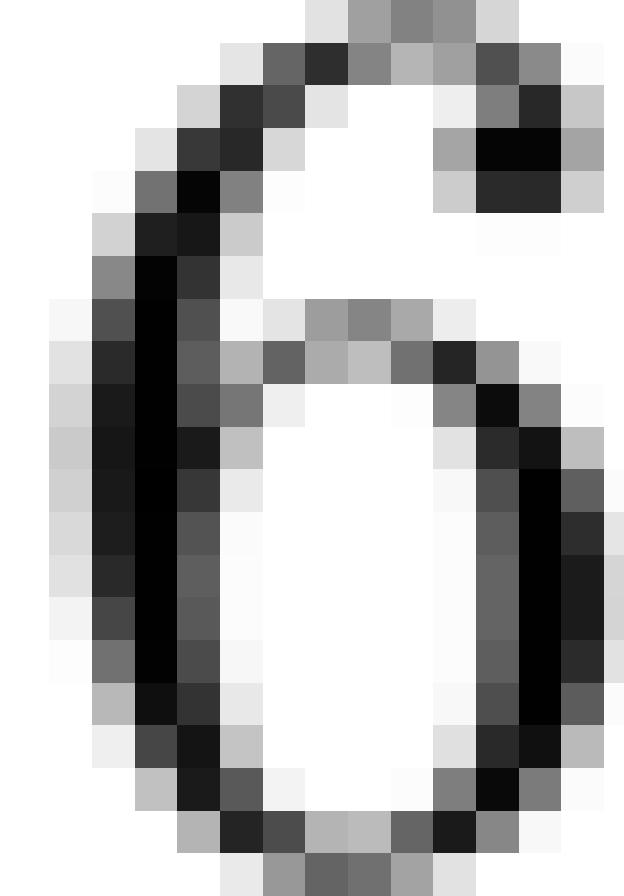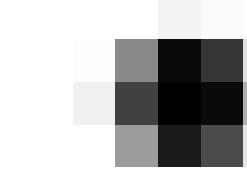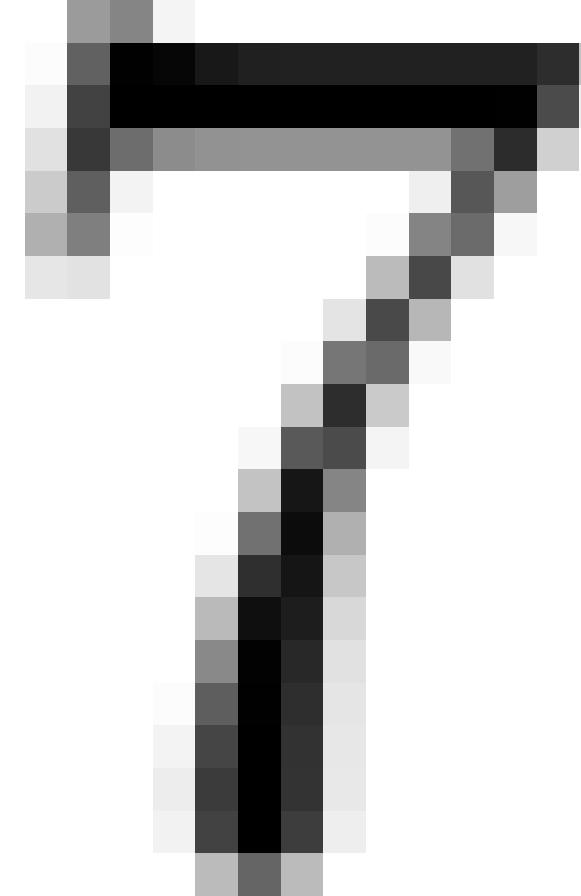



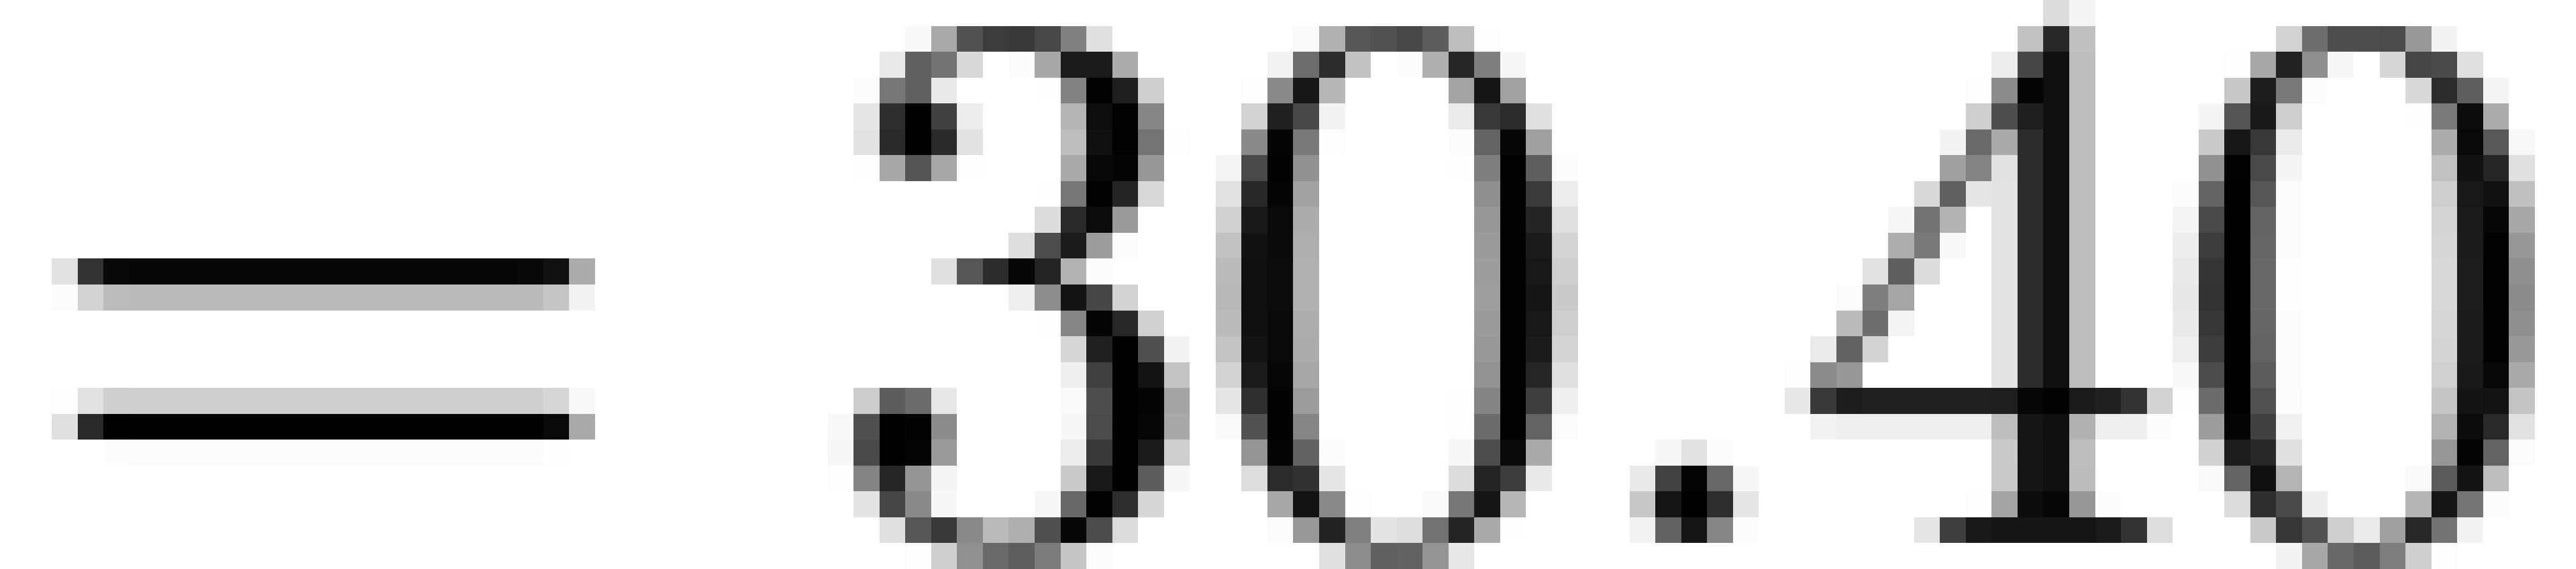


P = 30.40 MPa
 S_2 = 0.8.
38 MPa

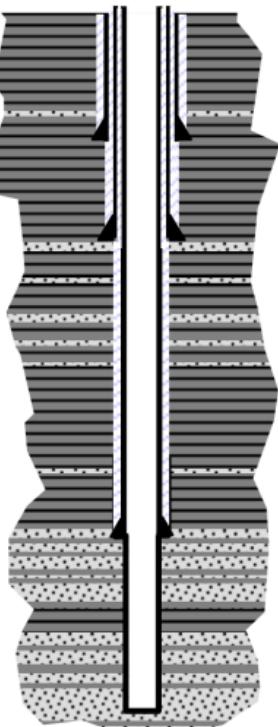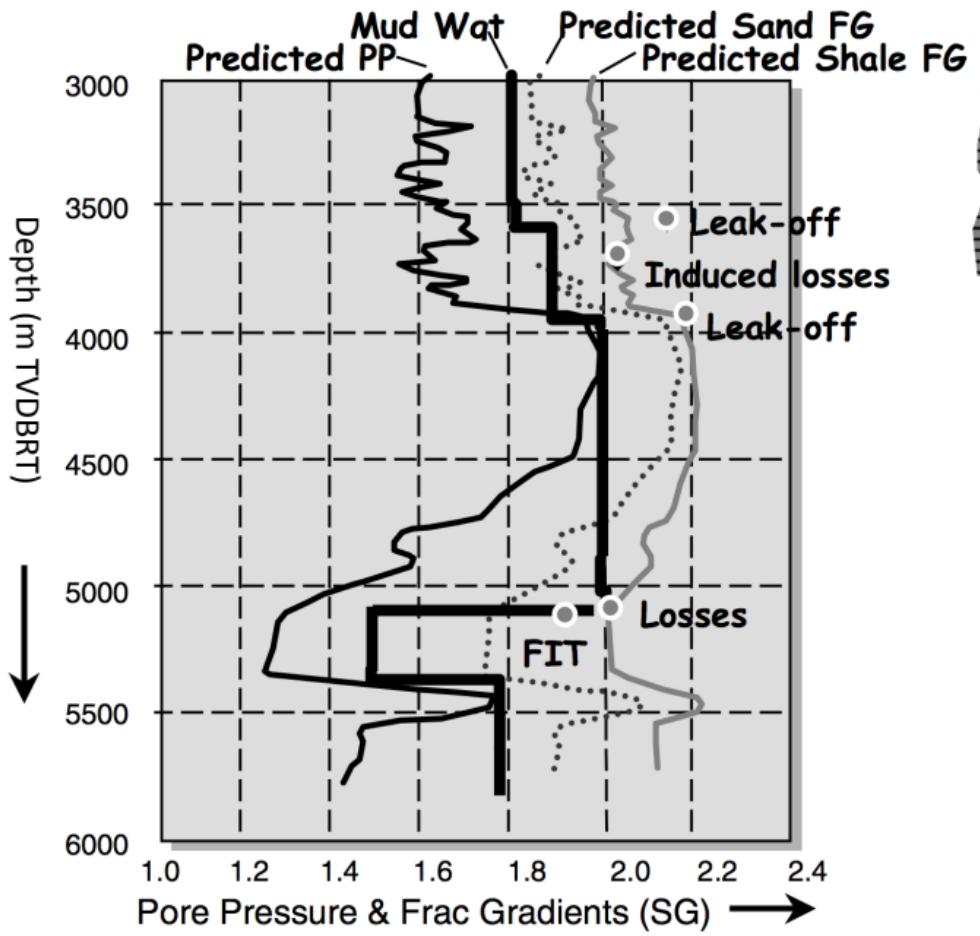


[Caspian Sea, Alberta and McLean – SPE67740]

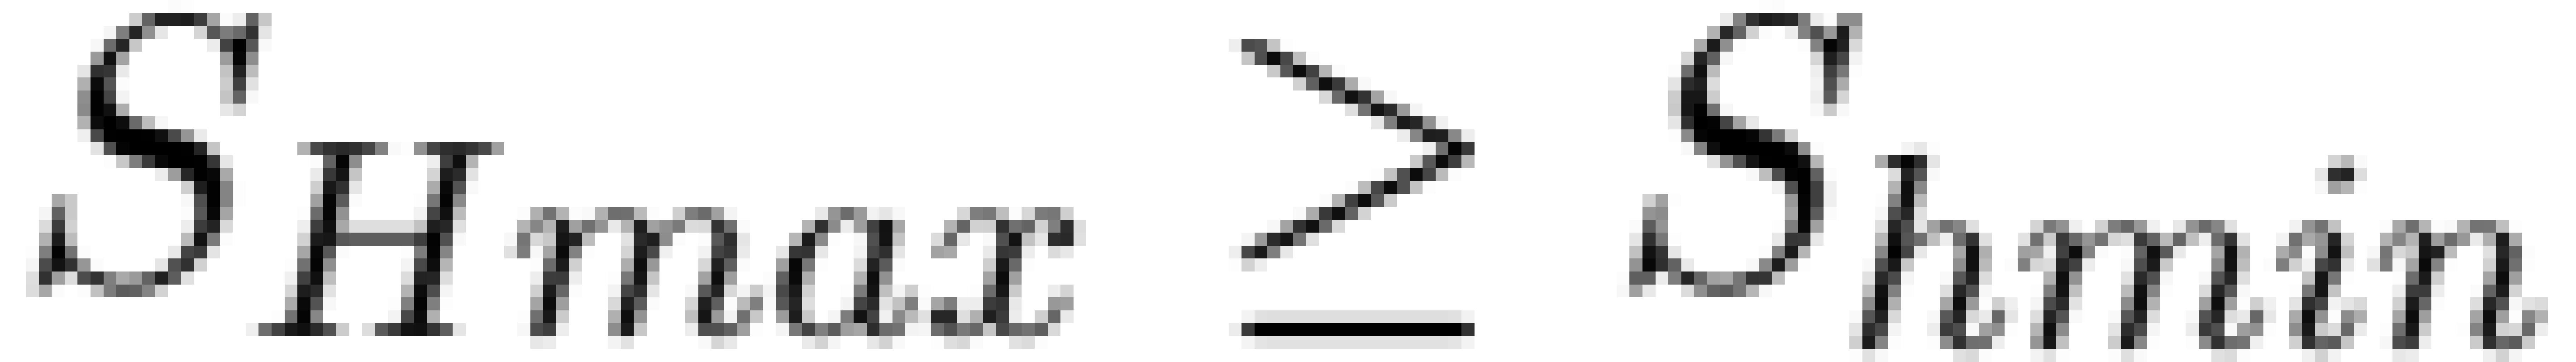

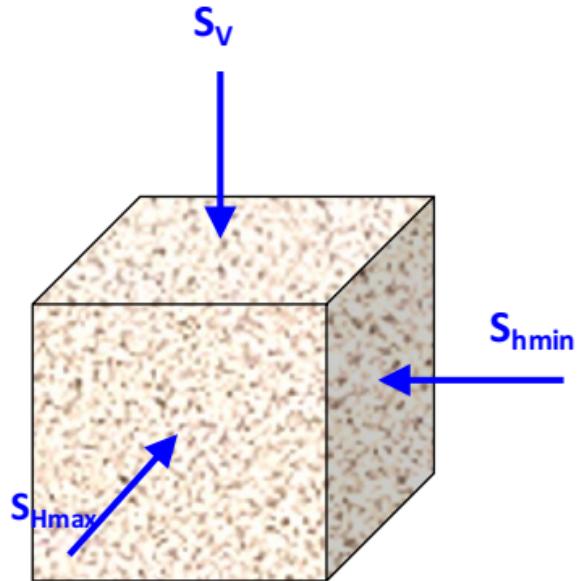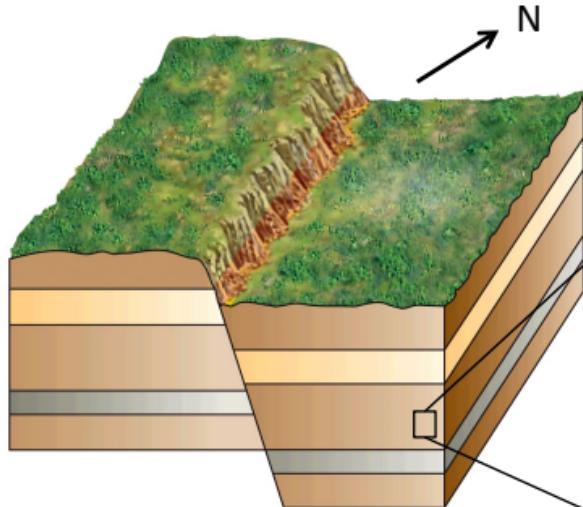


Self-test 9.8
© 2012 John Wiley & Sons, Inc. All rights reserved.

$$\underline{\underline{S}} = \begin{bmatrix} S_V & 0 & 0 \\ 0 & S_{H\max} & 0 \\ 0 & 0 & S_{h\min} \end{bmatrix}$$

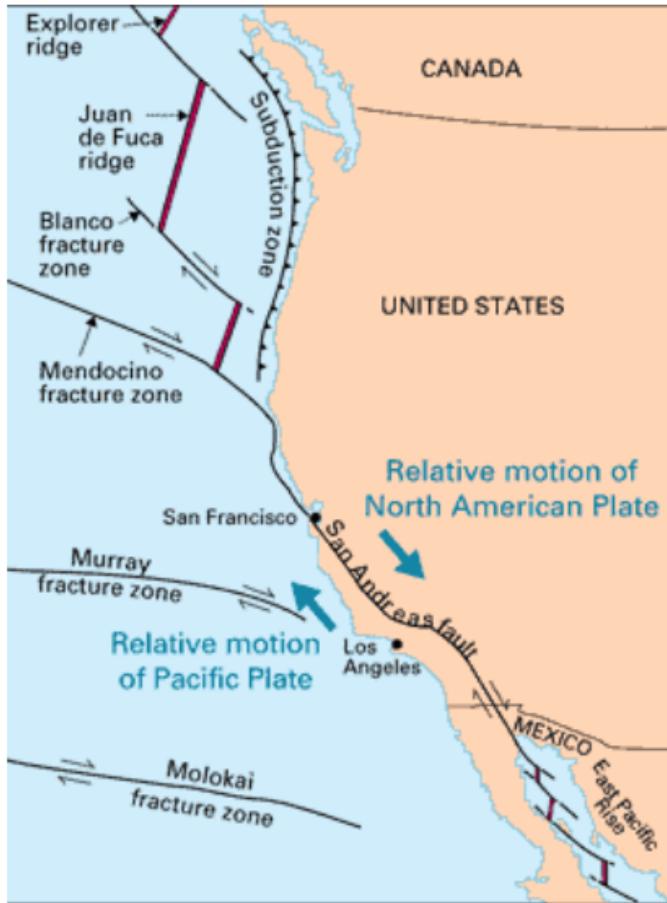


<http://pubs.usgs.gov/gip/dynamic/understanding.html#anchor5798673>

<http://en.wikipedia.org/wiki/File:Aerial-SanAndreas-CarrizoPlain.jpg>

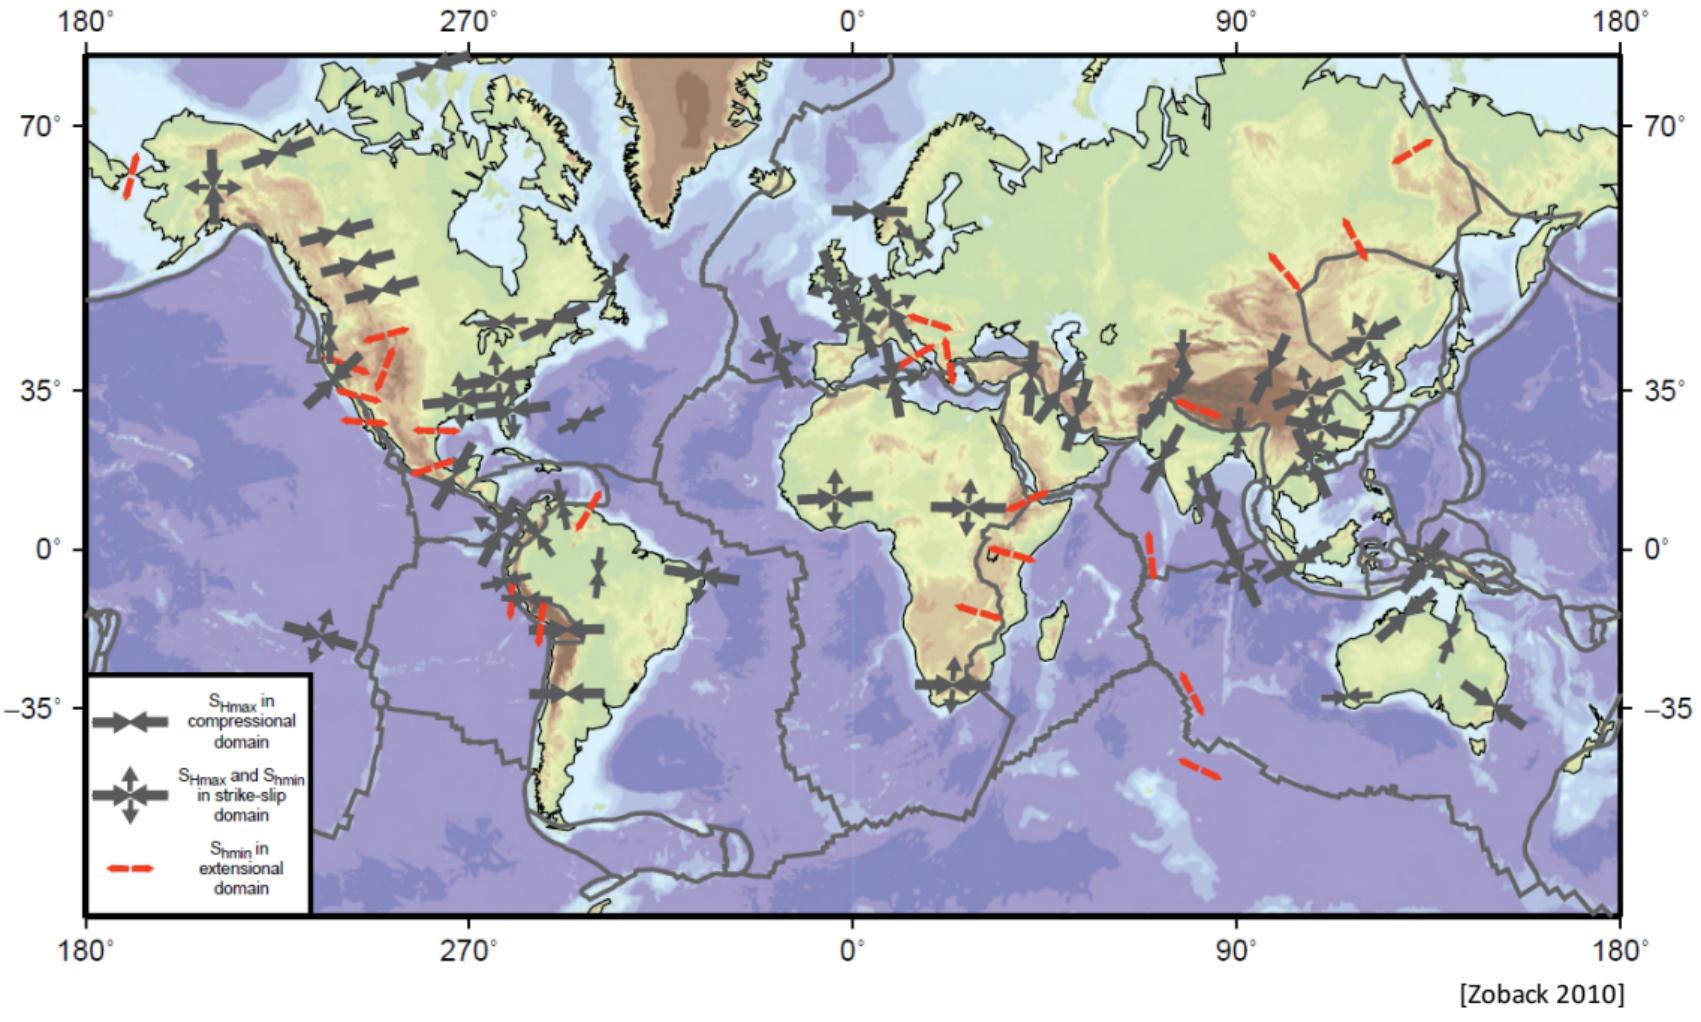

PLUTONS & VOLCANIC LANDFORMS

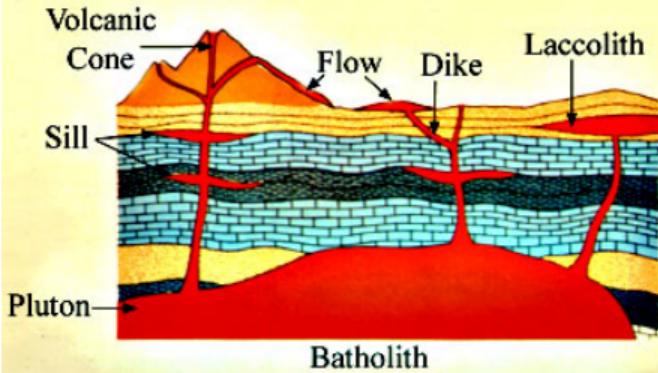

<http://www.indiana.edu/~geol105/1425chap5.htm>
<http://geophysics.ou.edu/geol1114>


















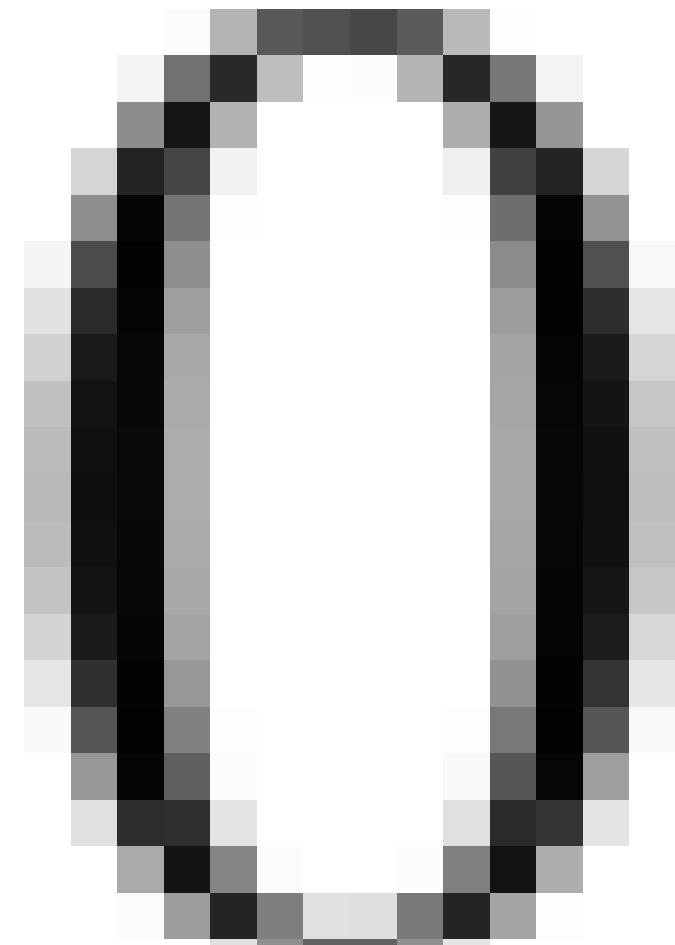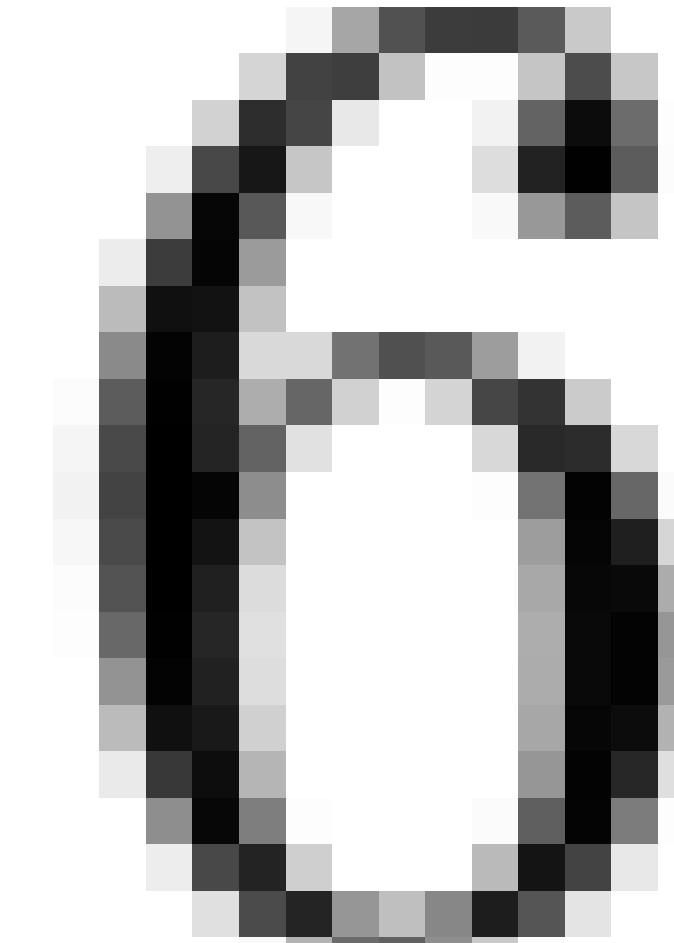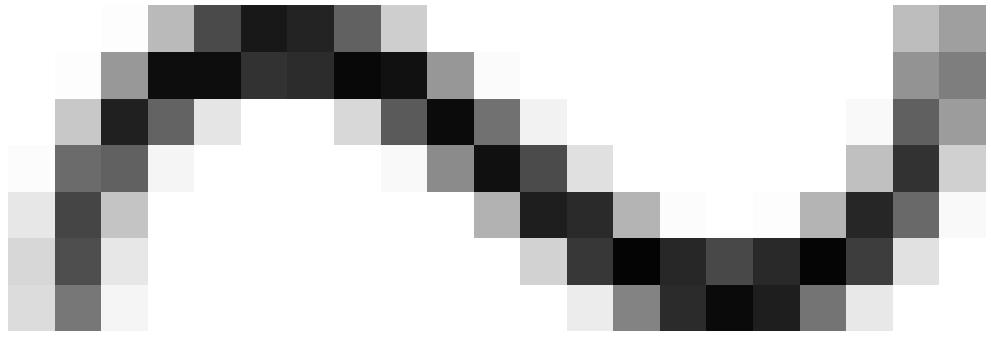









Normal faulting: $S_v > S_{H\max} > S_{h\min}$

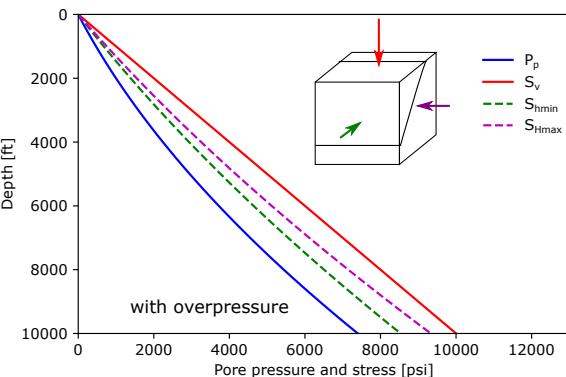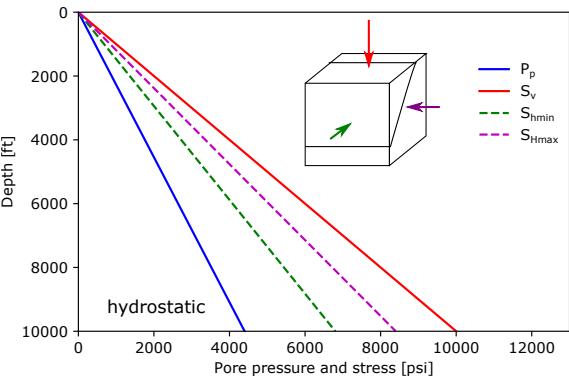


Strike slip faulting: $S_{H\max} > S_v > S_{h\min}$

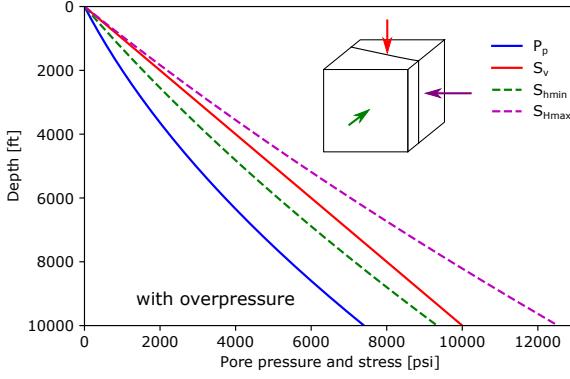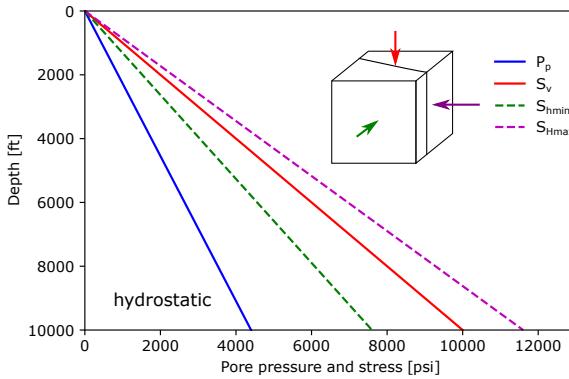


Reverse faulting: $S_{H\max} > S_{h\min} > S_v$

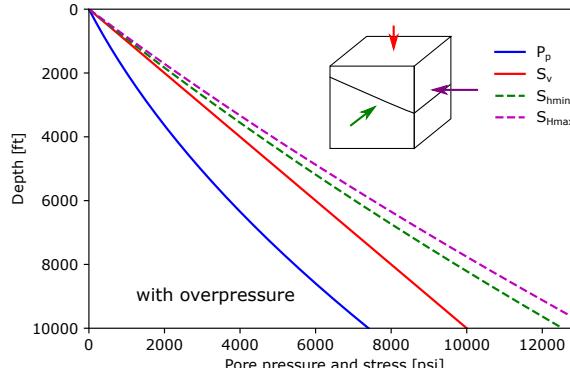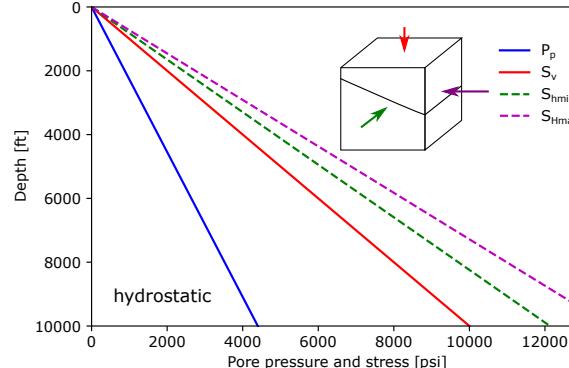


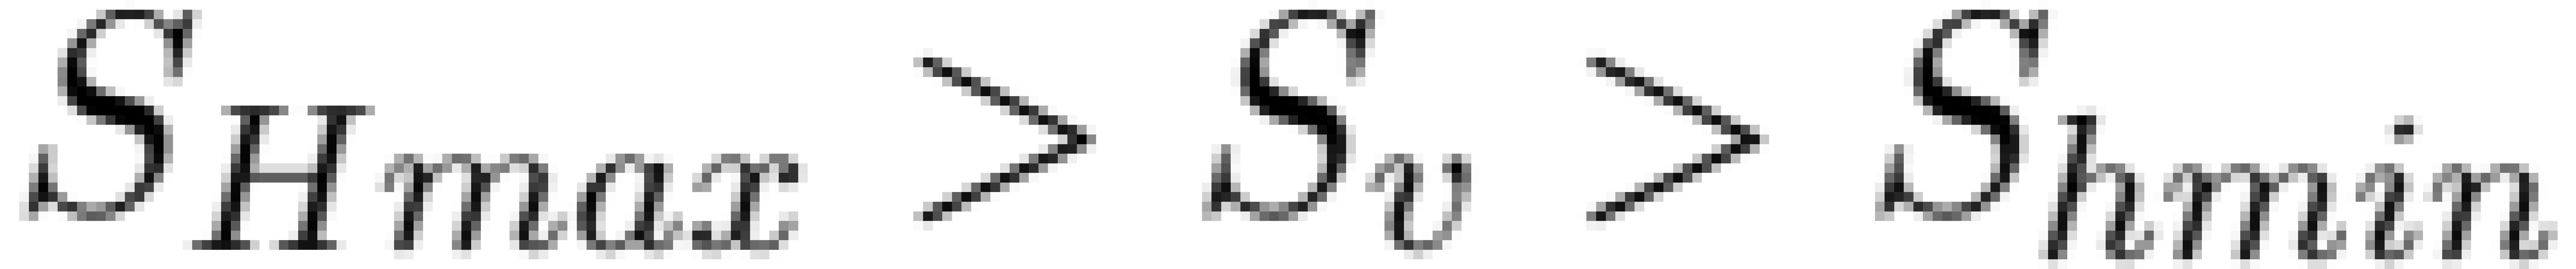







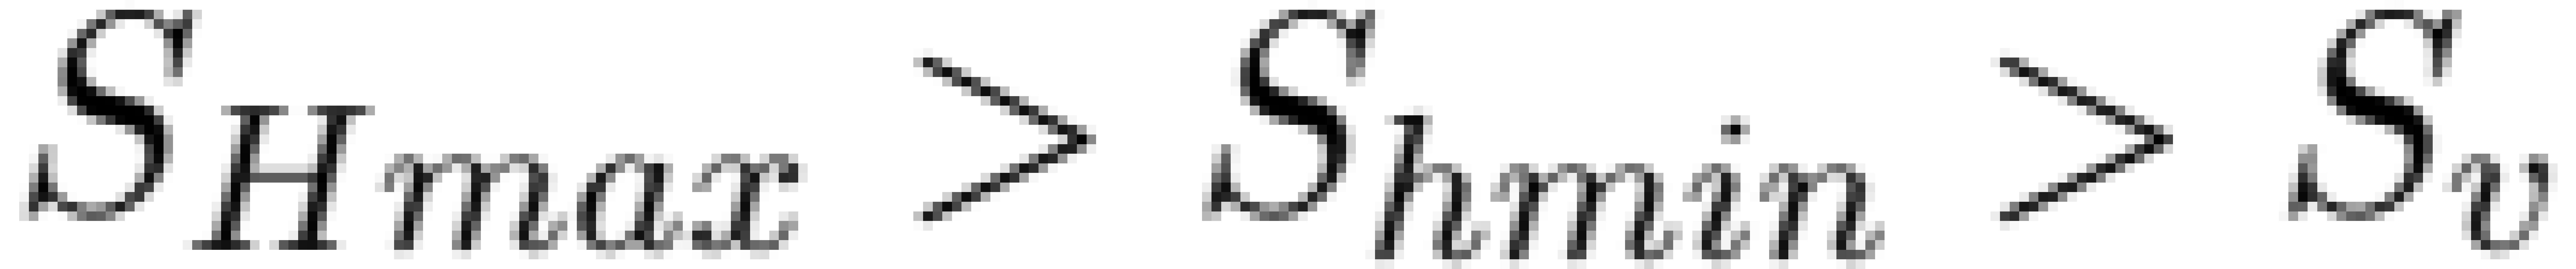

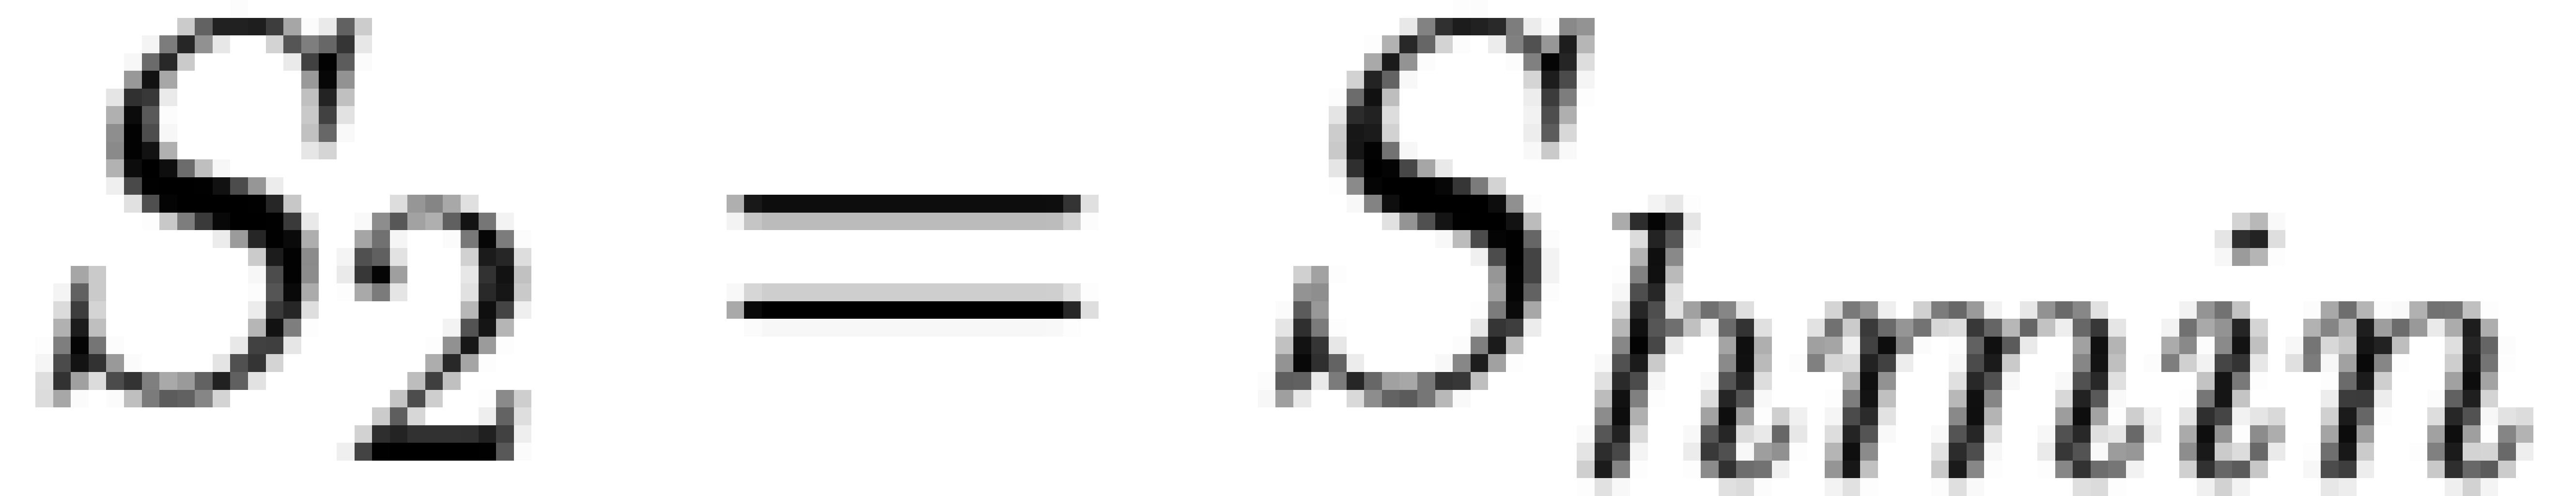



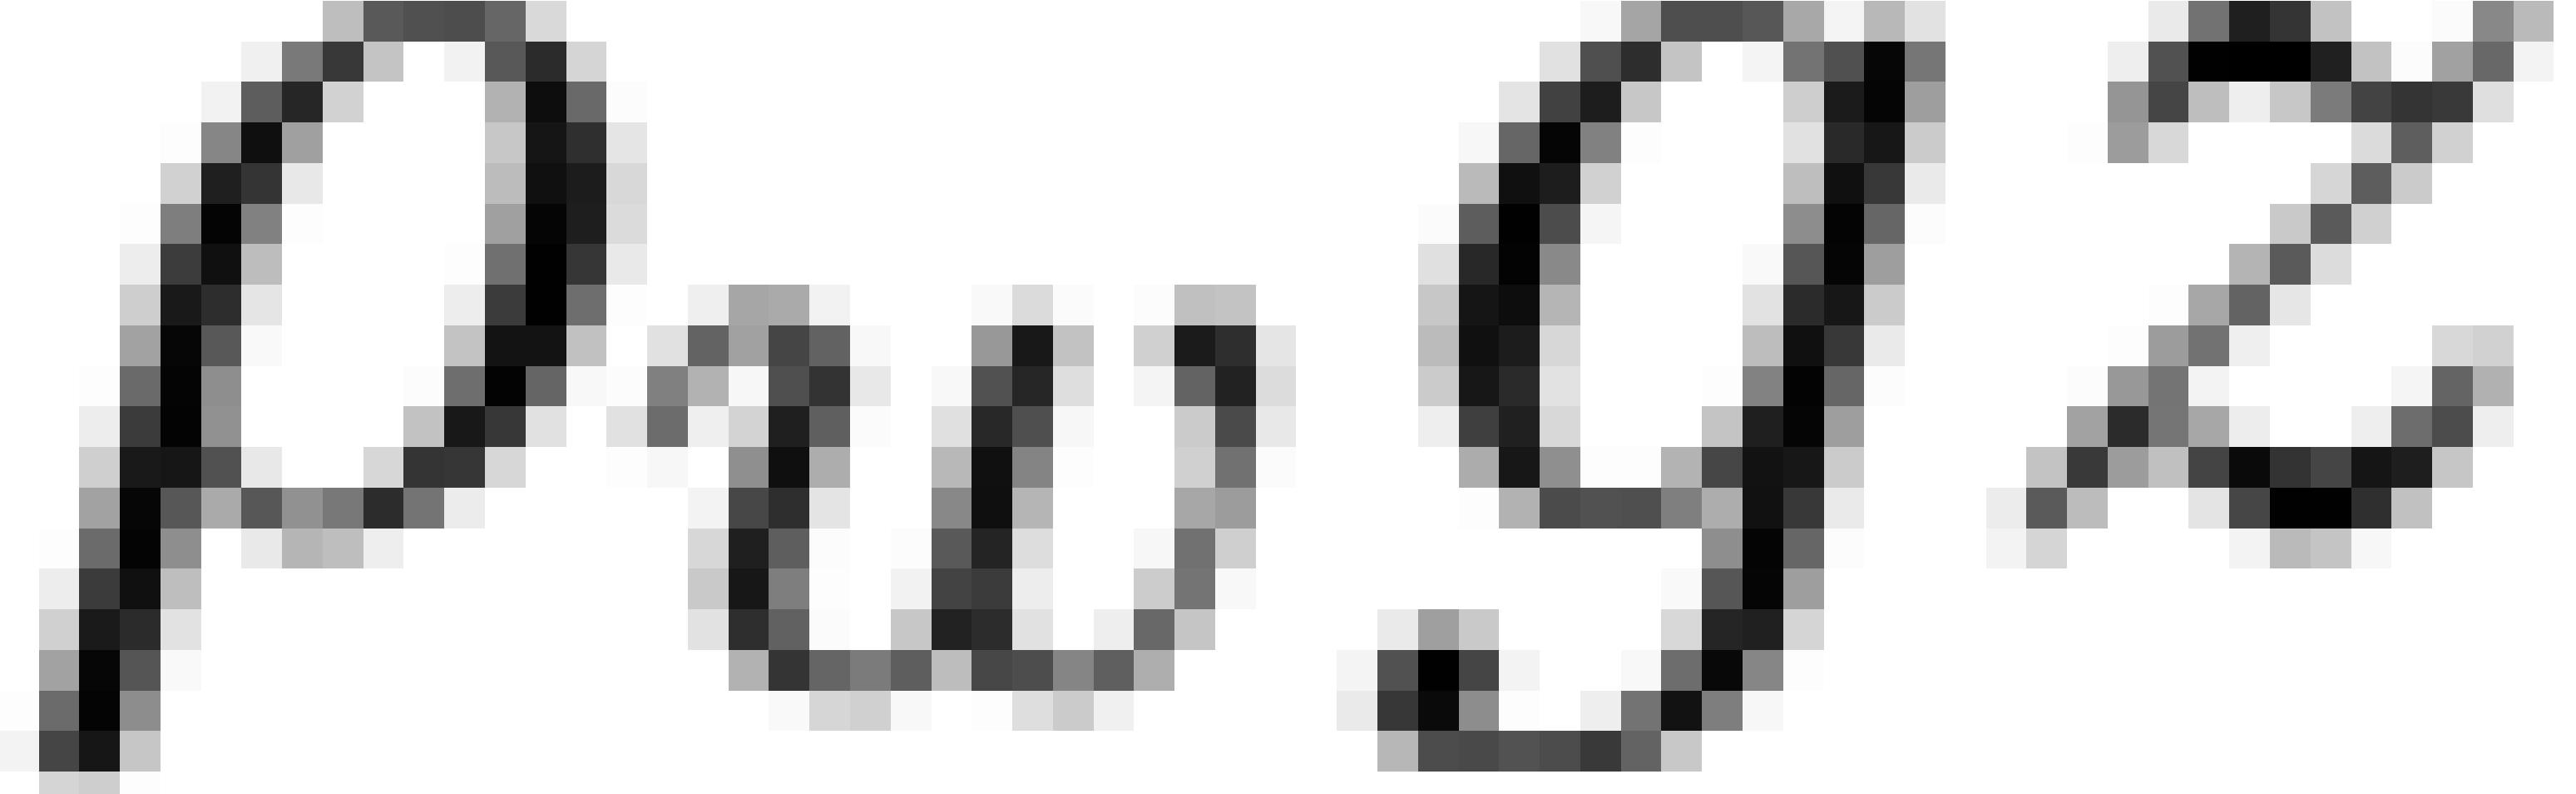

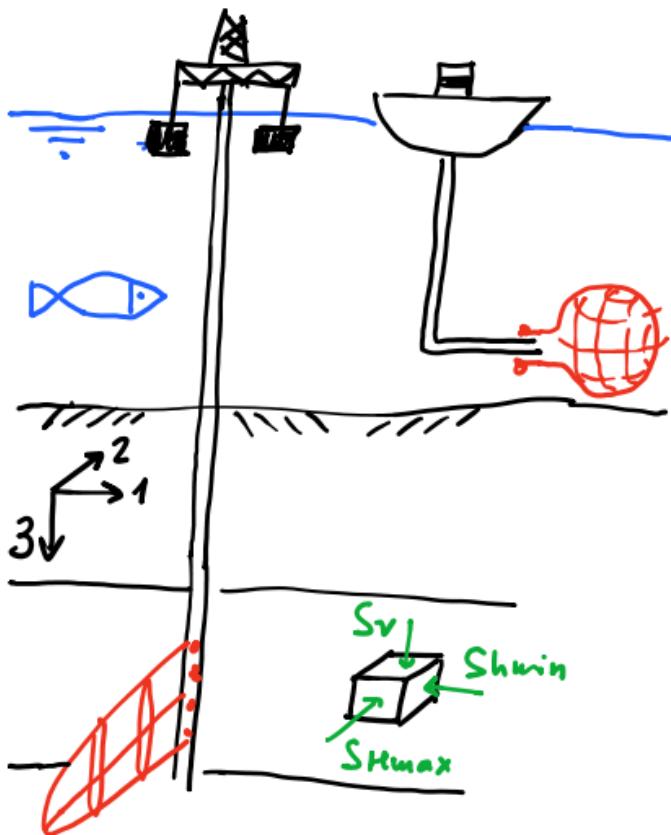

Isotropic stress

$$S_{11} =$$

$$S_{22} =$$

$$S_{33}$$



Anisotropic stress

$$S_{11} < S_{22} < S_{33} \text{ (case 1)}$$



Vert.

$$S_{22} < S_{11} < S_{33} \text{ (case 2)}$$



Vert.

$$S_{33} < S_{22} < S_{11} \text{ (case 3)}$$





Htz.









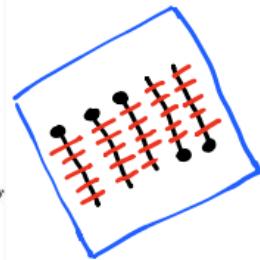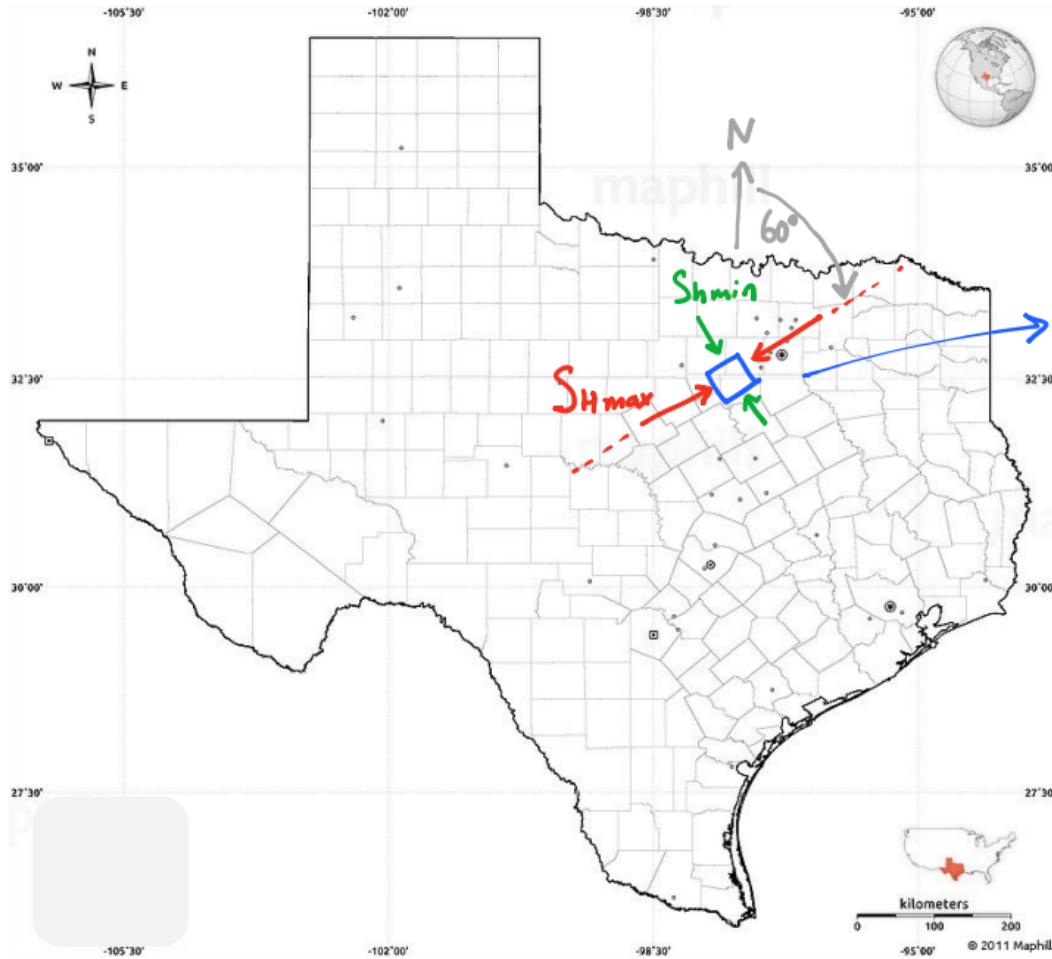



Barnett: Normal Faulting
stress regime


H_F (plane) $\perp S_{H\min}$


H_z well $\parallel S_{H\min}$


$P_{BHP} > S_{H\min}$


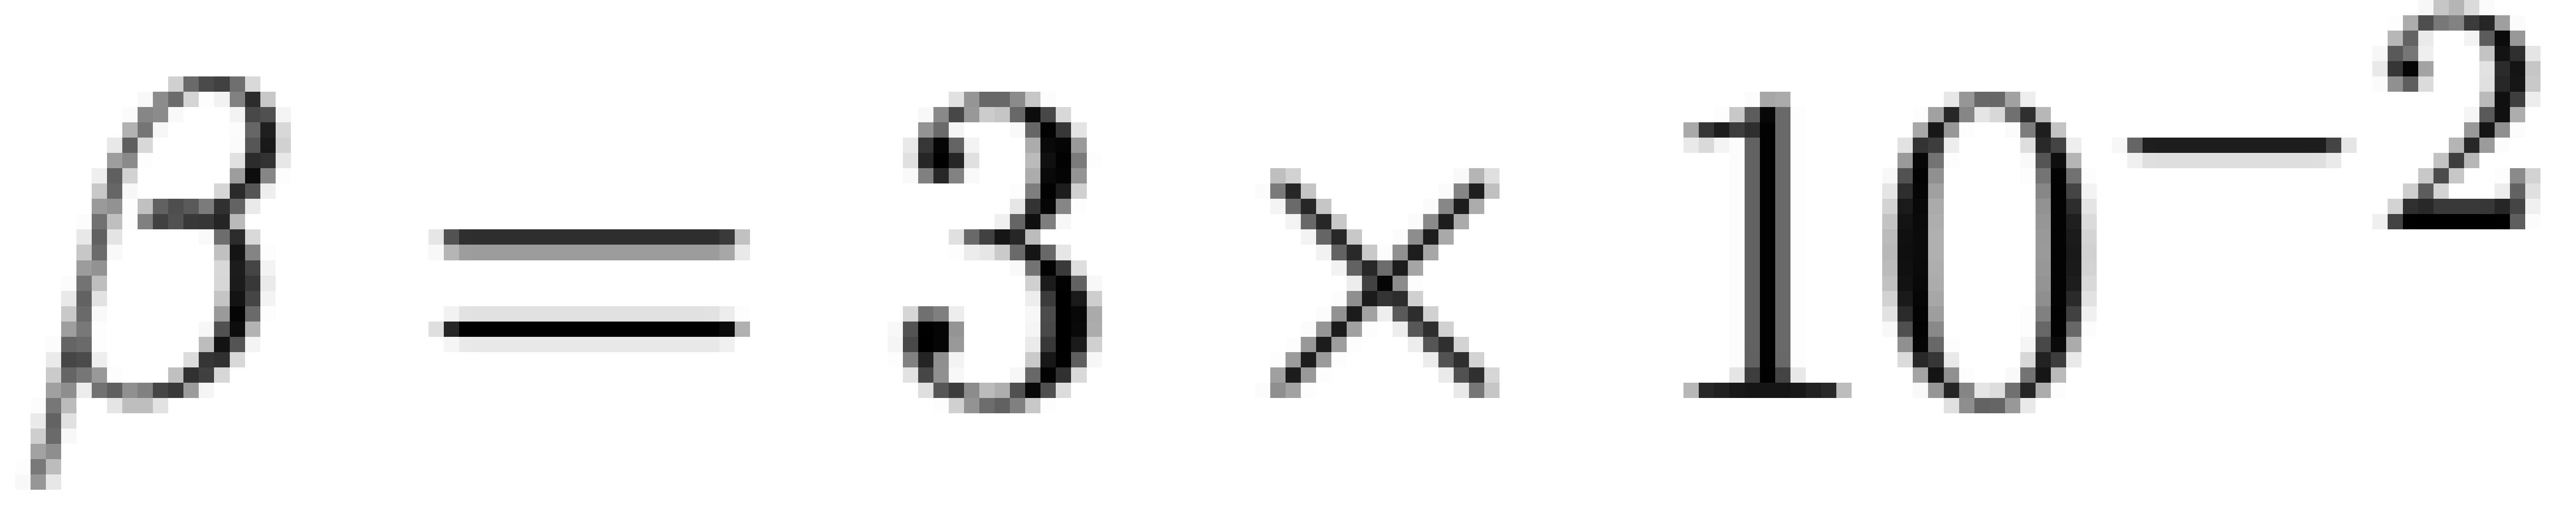


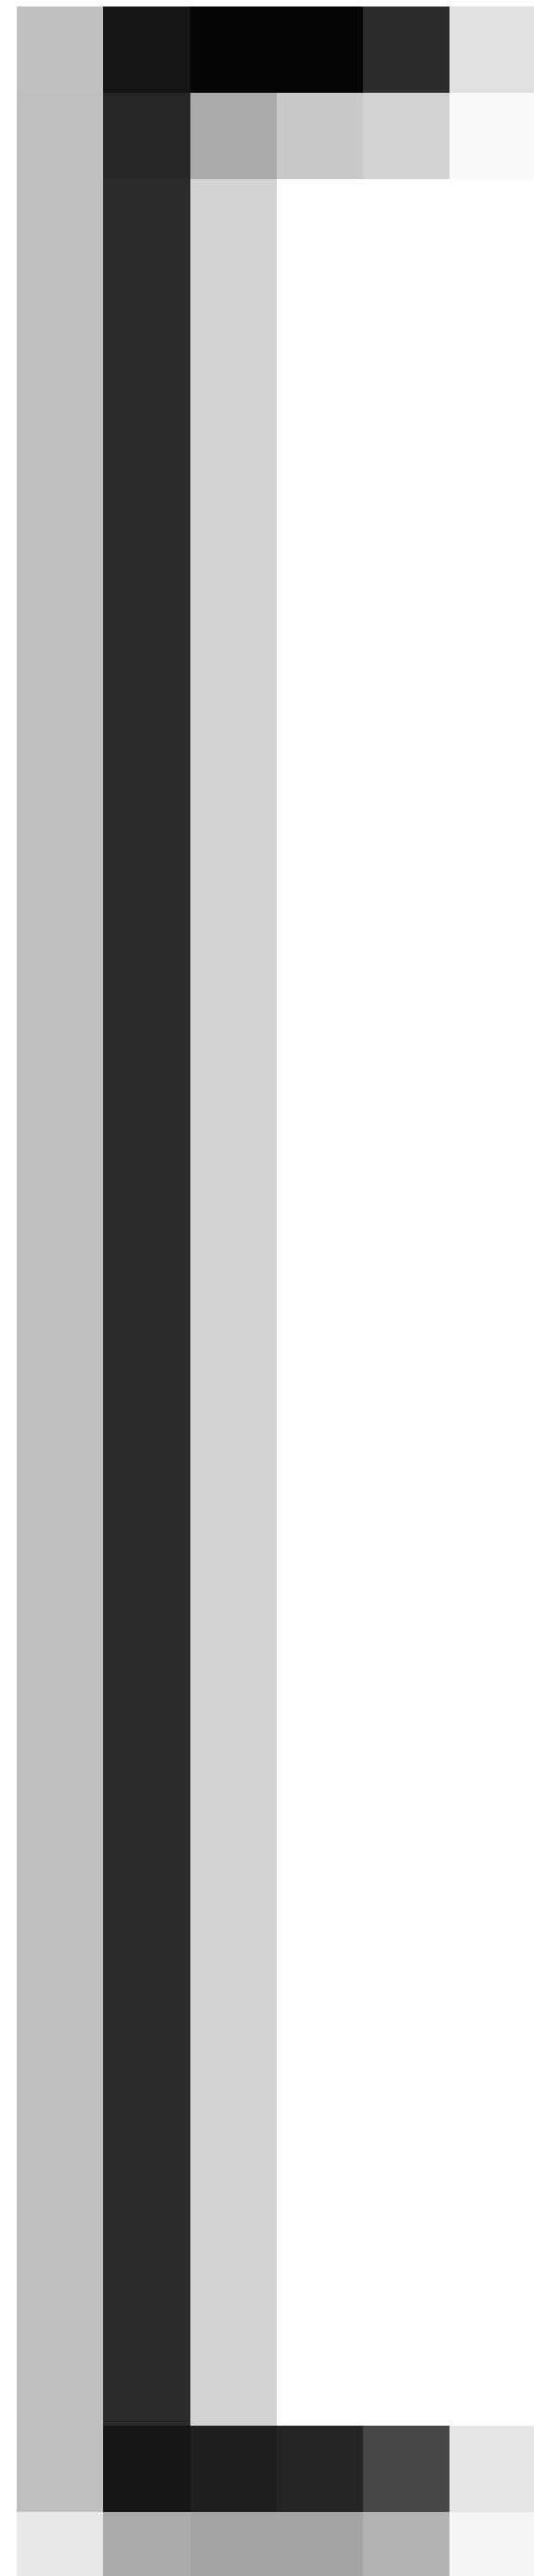



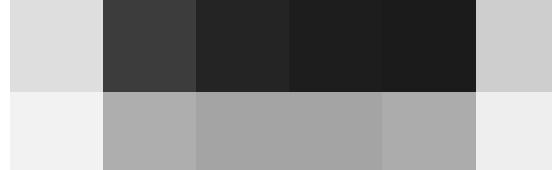


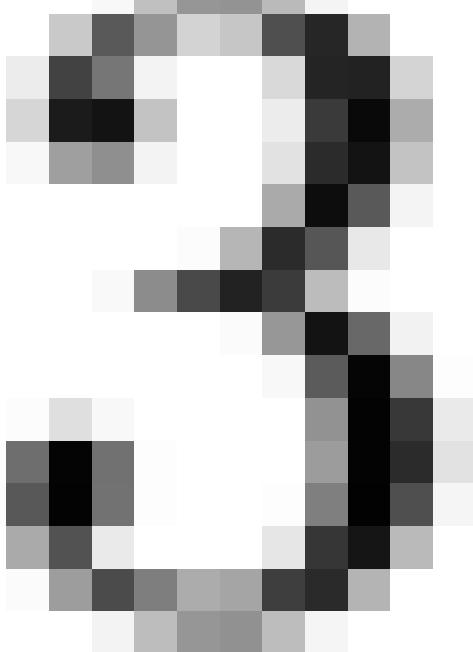


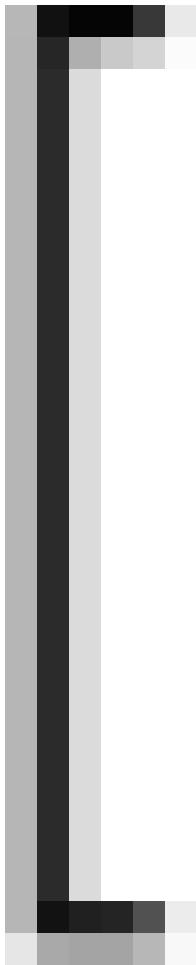


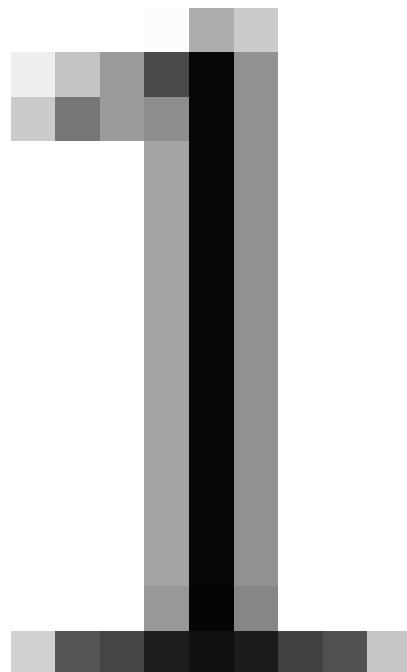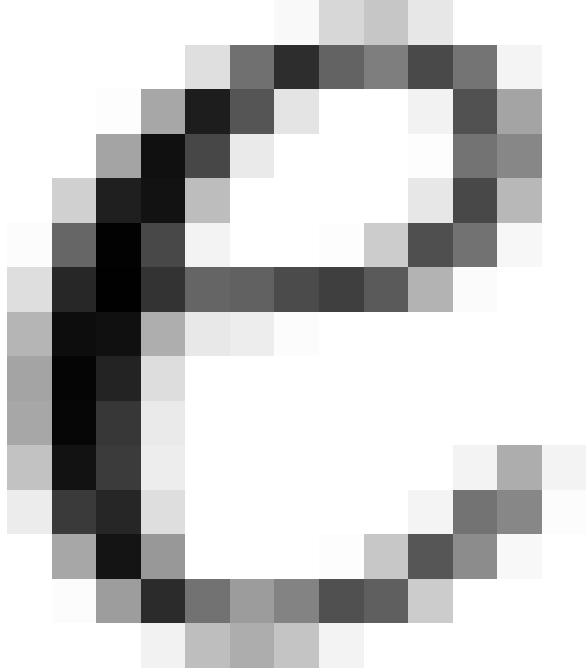


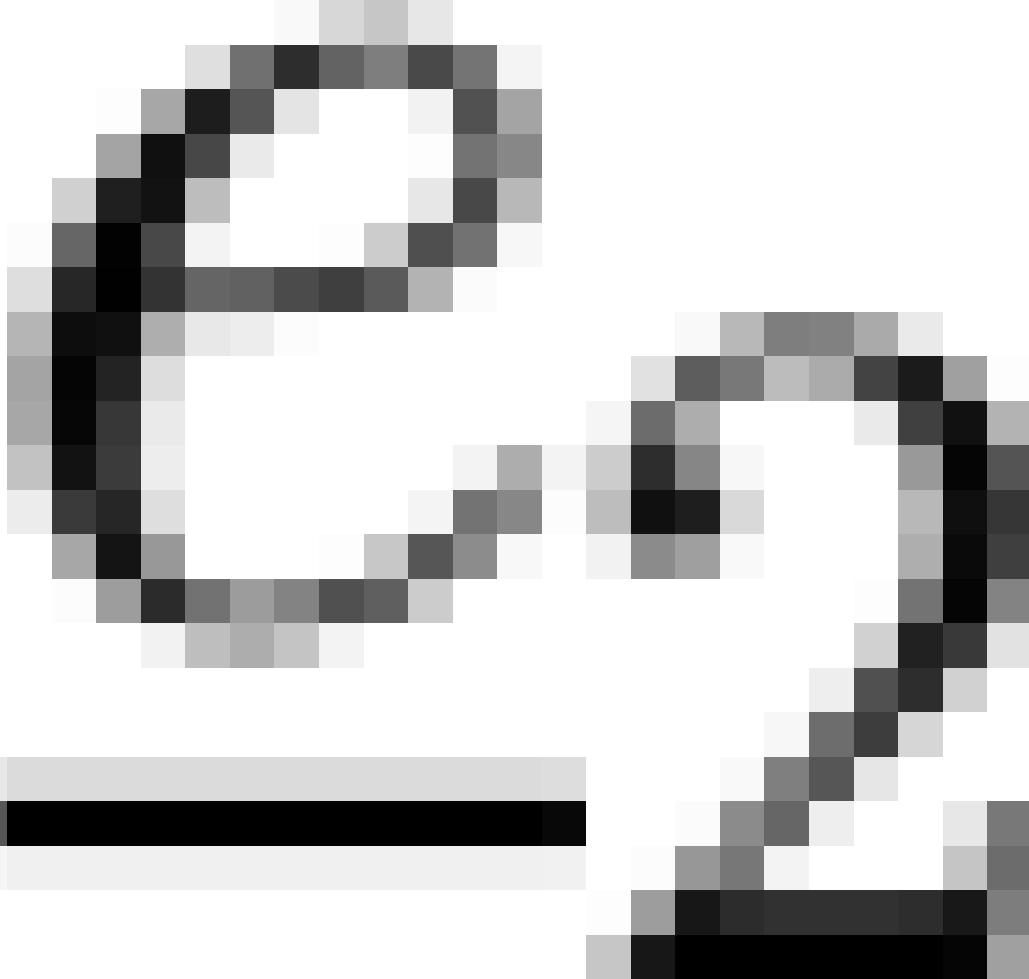


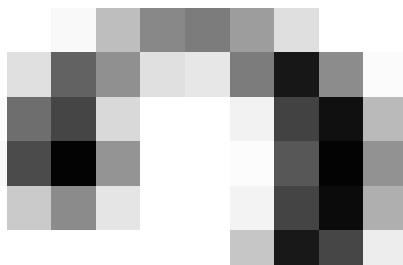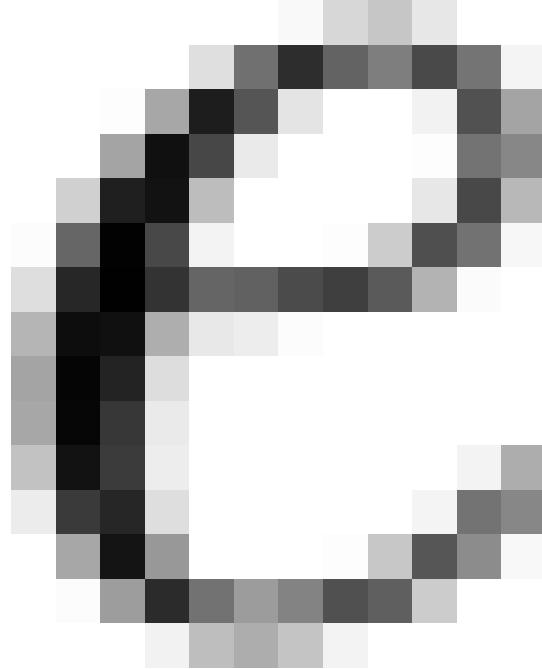


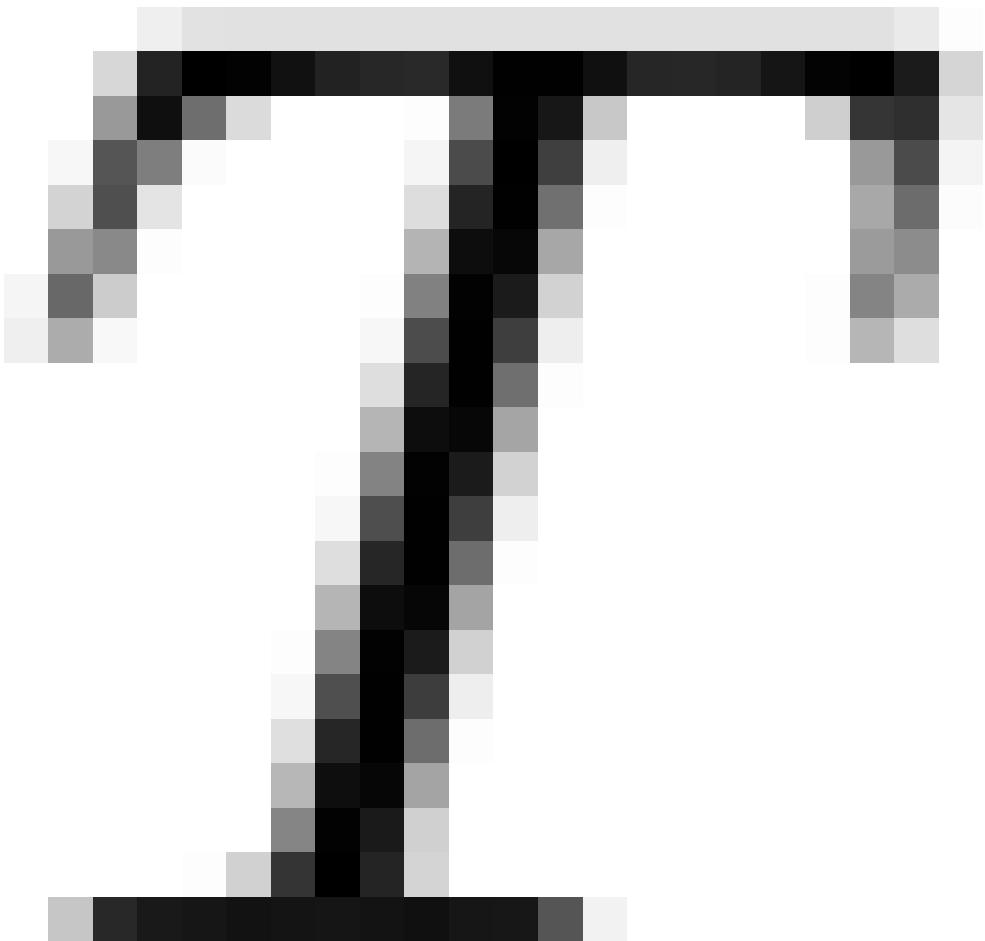

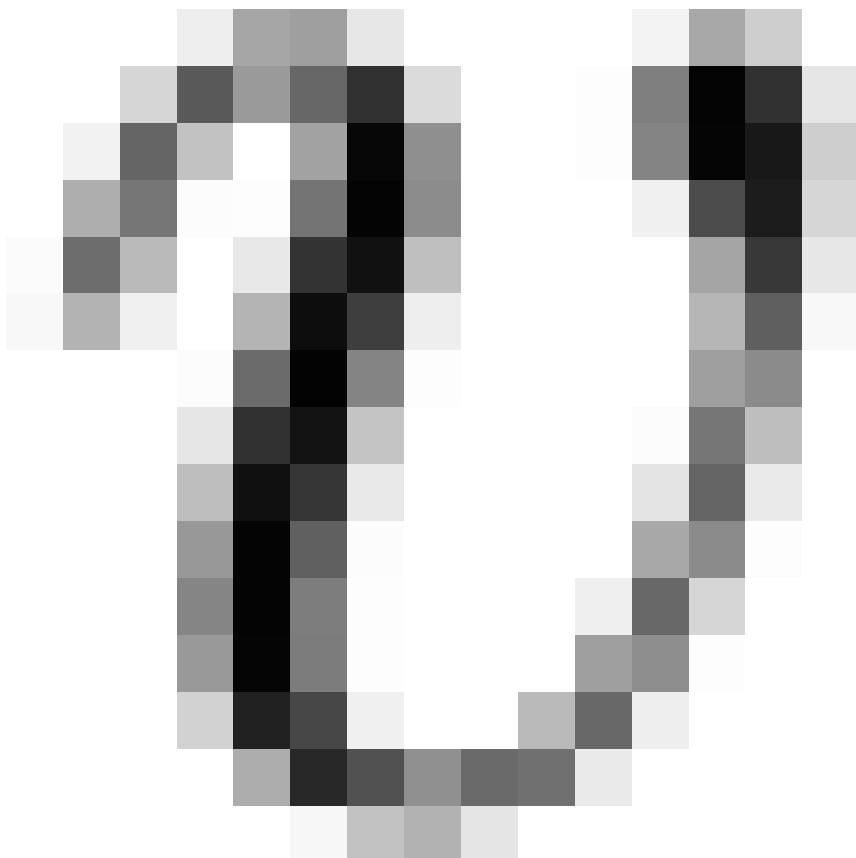


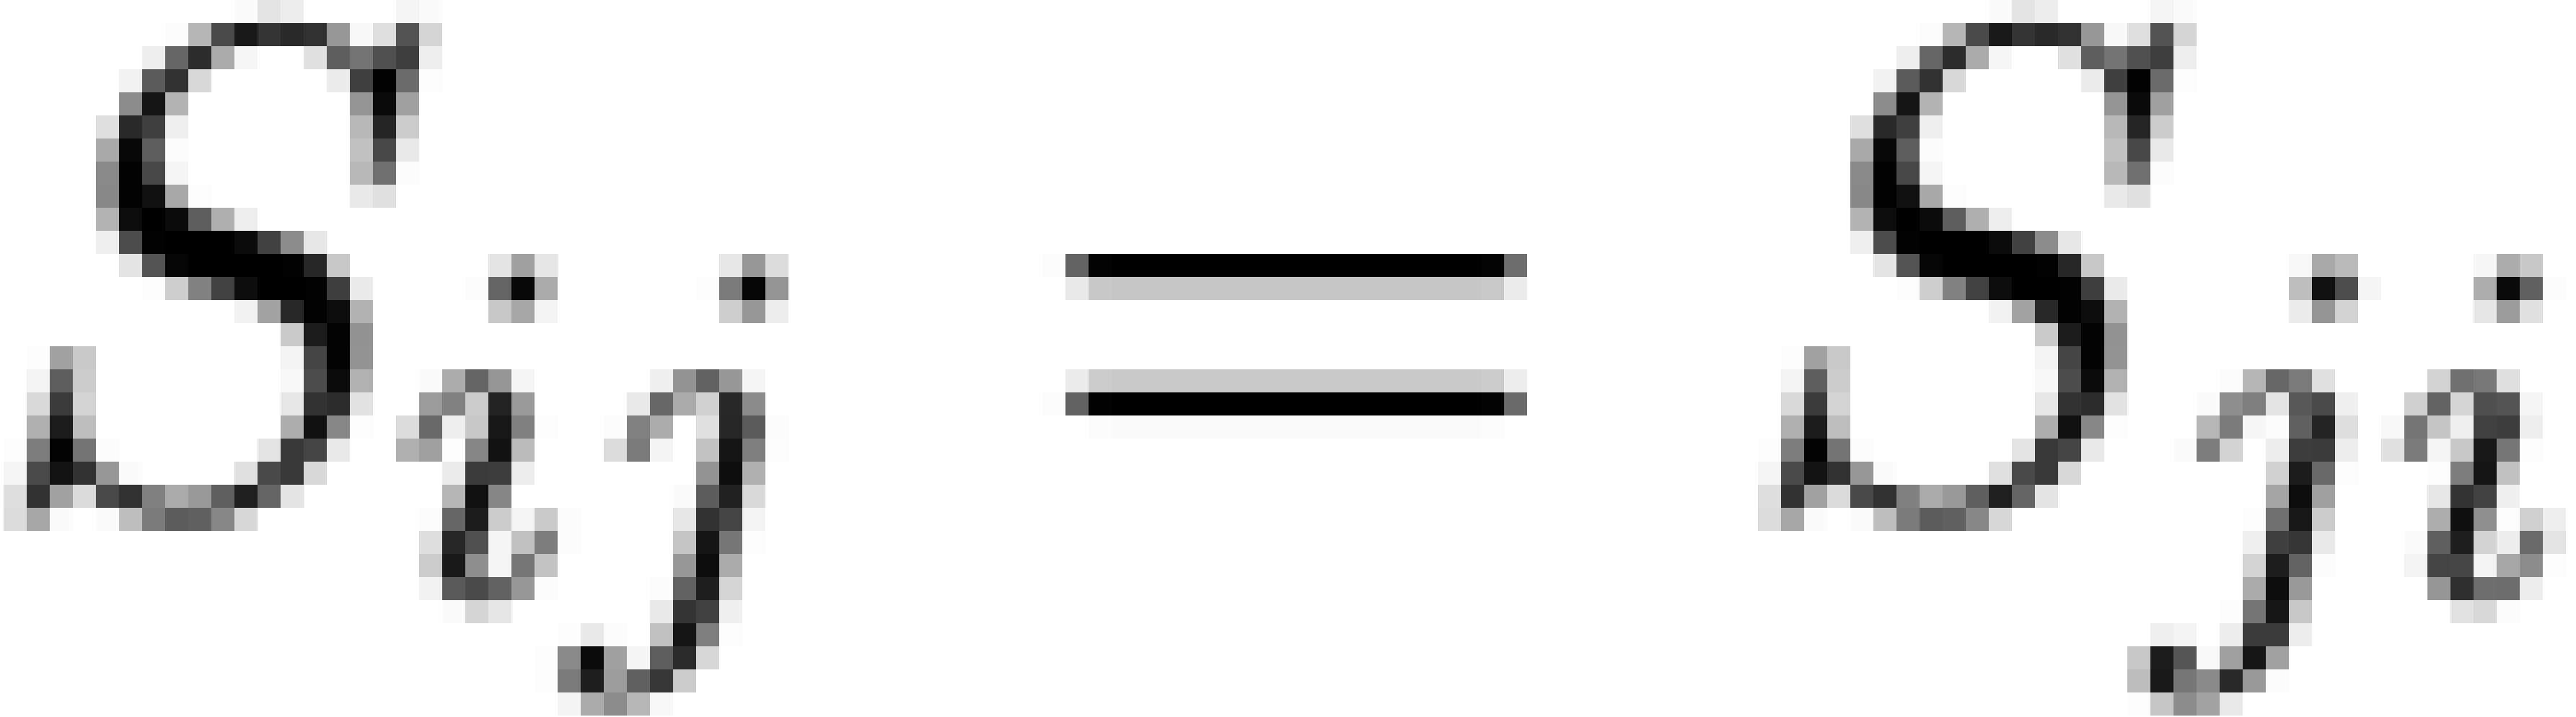


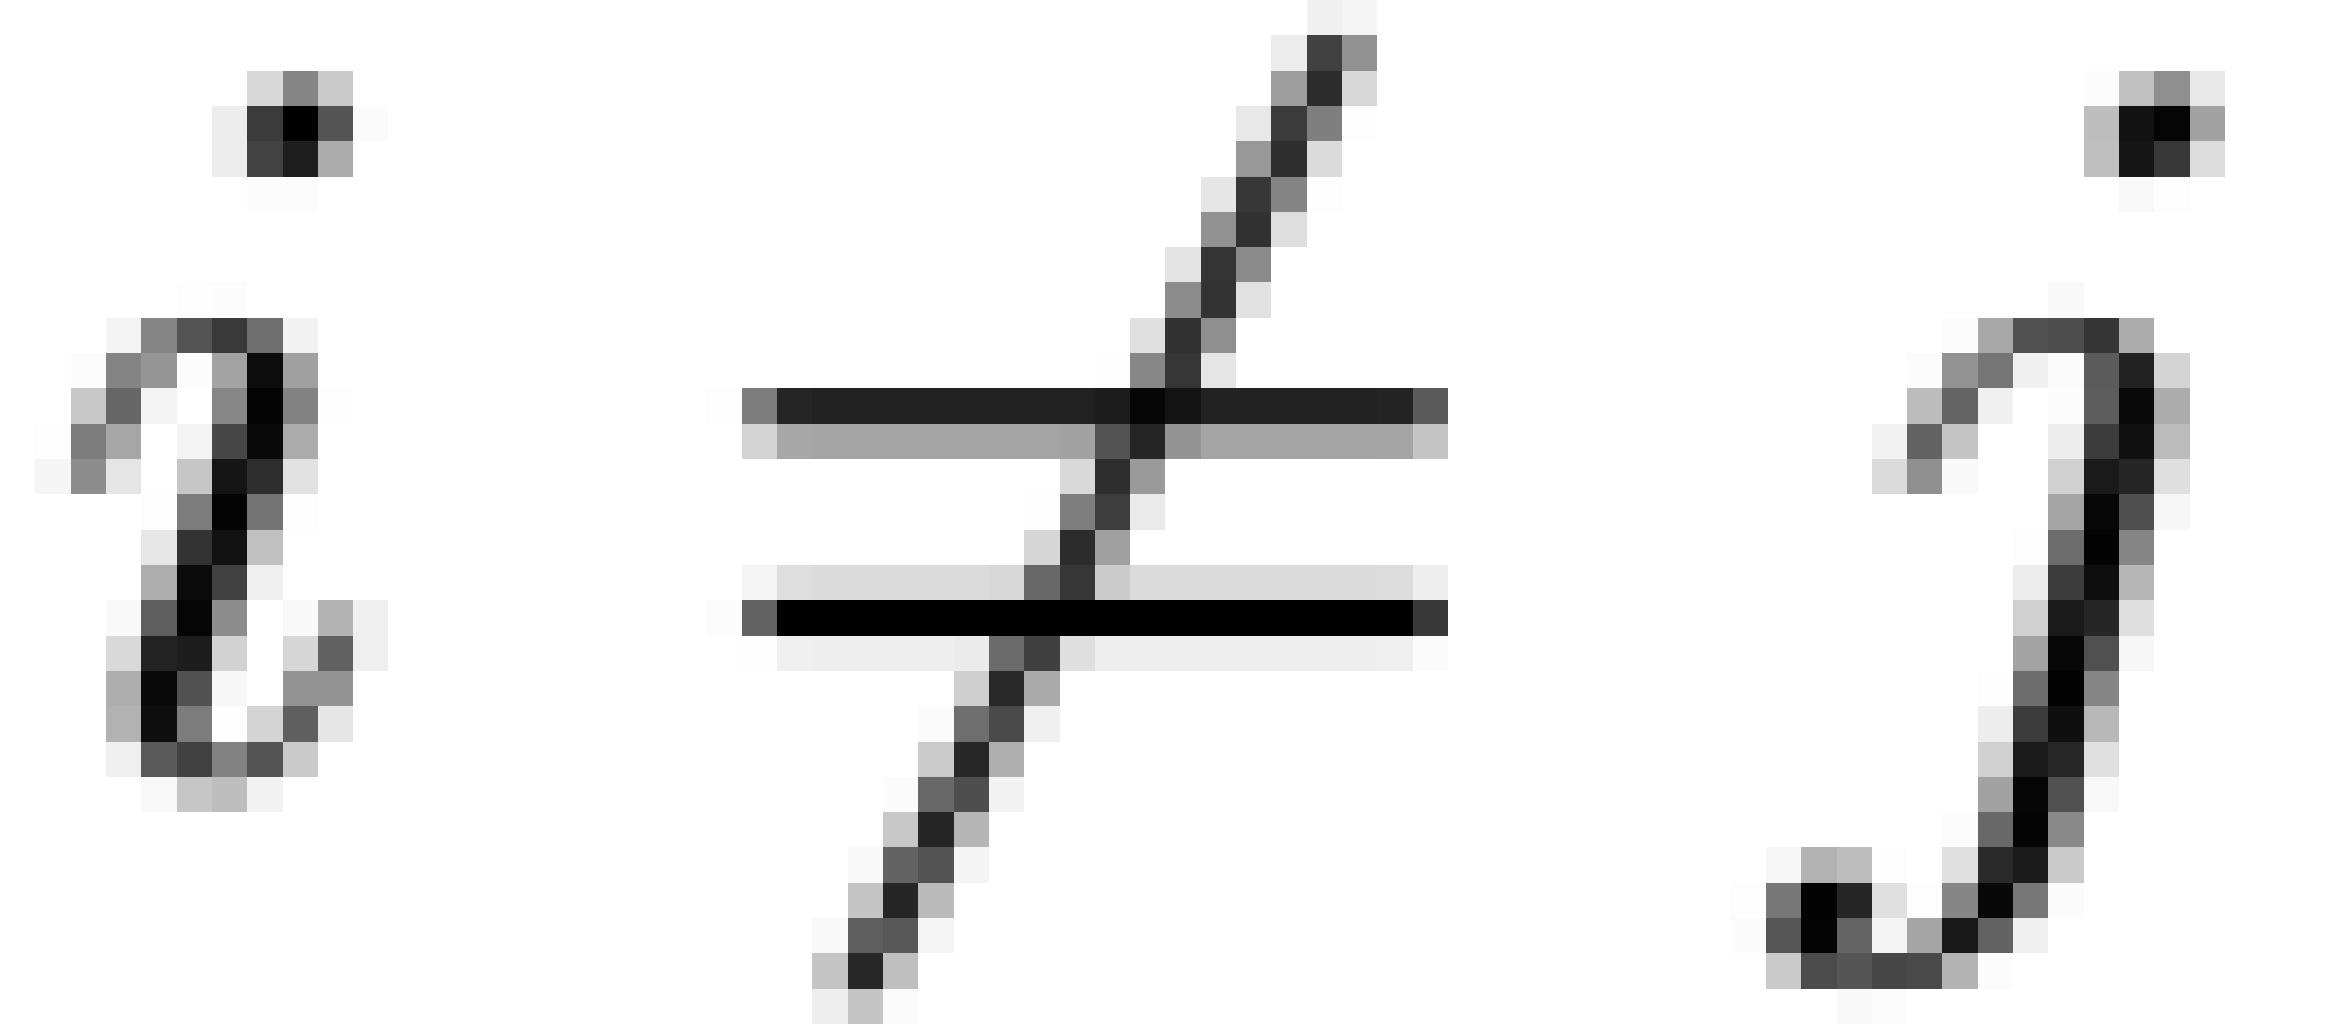

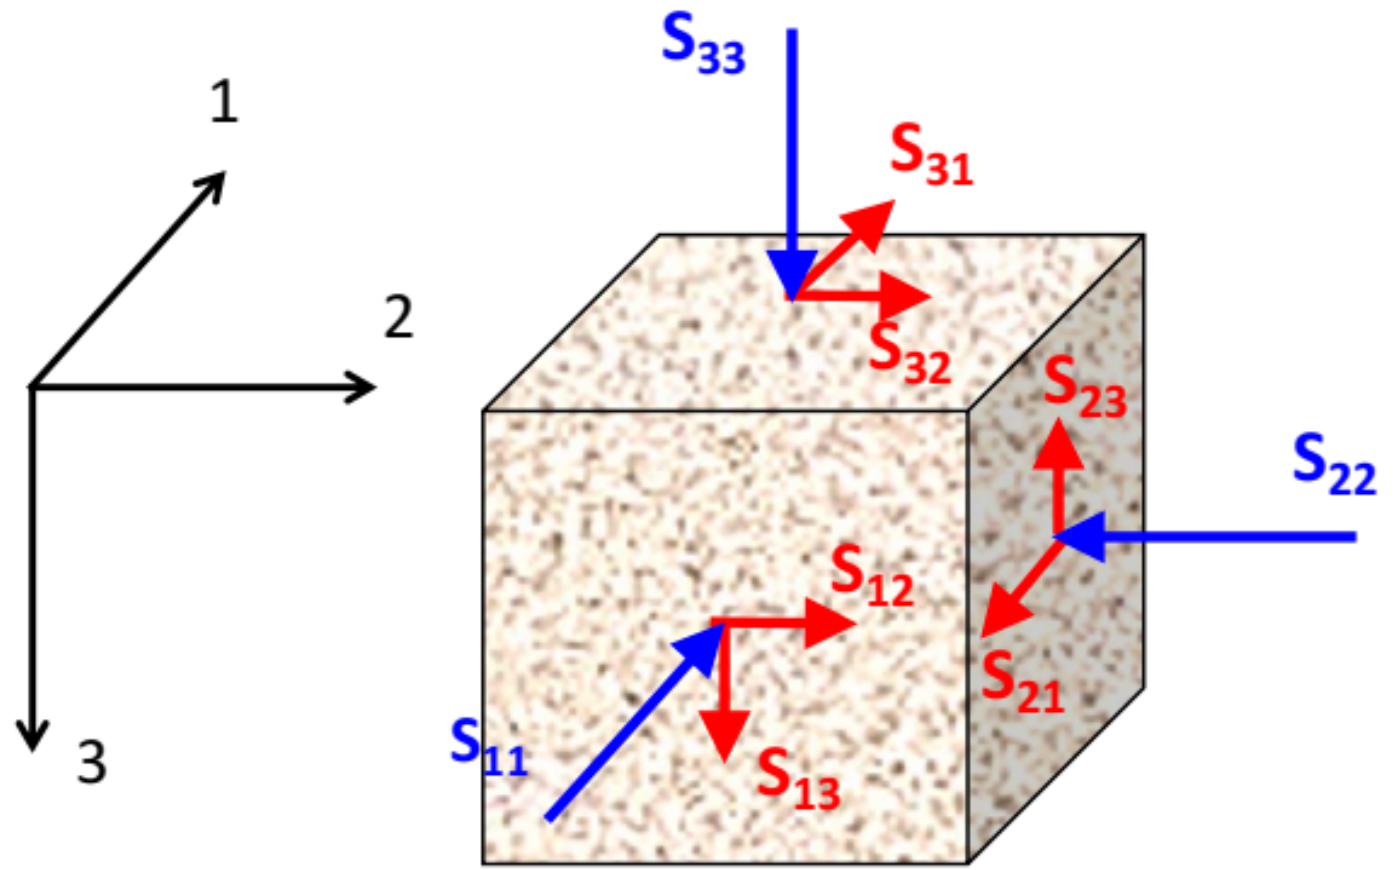

$$S = \begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$



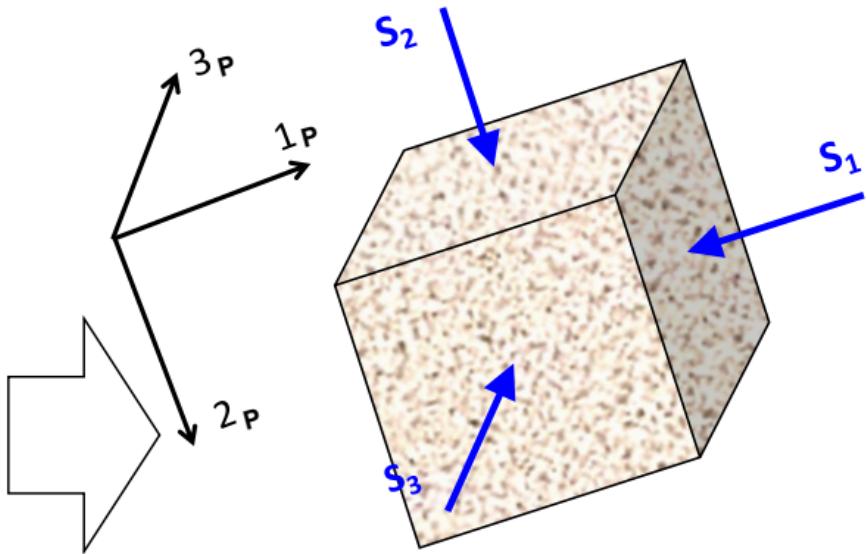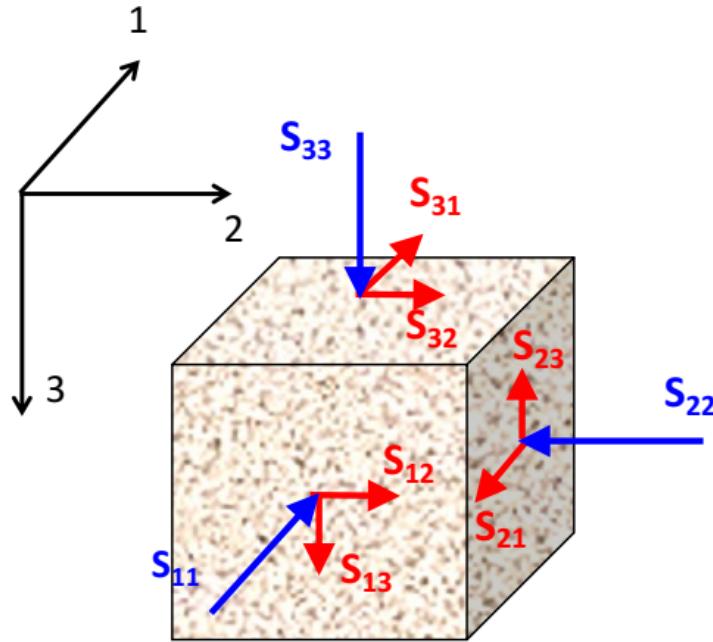

$$\underline{\underline{S}} = \begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$

$$\underline{\underline{S}_P} = \begin{bmatrix} S_1 & 0 & 0 \\ 0 & S_2 & 0 \\ 0 & 0 & S_3 \end{bmatrix}$$

$$\underline{\sigma} = \begin{bmatrix} \sigma_{NN} & \sigma_{NE} & \sigma_{ND} \\ \sigma_{EN} & \sigma_{EE} & \sigma_{ED} \\ \sigma_{DN} & \sigma_{DE} & \sigma_{DD} \end{bmatrix} = \begin{bmatrix} 8580 & 100 & 0 \\ 100 & 9900 & 0 \\ 0 & 0 & 9000 \end{bmatrix}$$




$$\begin{cases} \lambda_1 = 9907.53 \\ \lambda_2 = 9000 \\ \lambda_3 = 8572.47 \end{cases}$$


$$\begin{cases} v_1 = (0.0753277, 1, 0) \\ v_2 = (0, 0, 1) \\ v_3 = (-13.2753, 1, 0) \end{cases}$$



$$S_{Hmax} = 9907.53 \text{ psi}$$



$$S_v = 9000 \text{ psi}$$





$$S_{hmin} = 8572.47 \text{ psi}$$



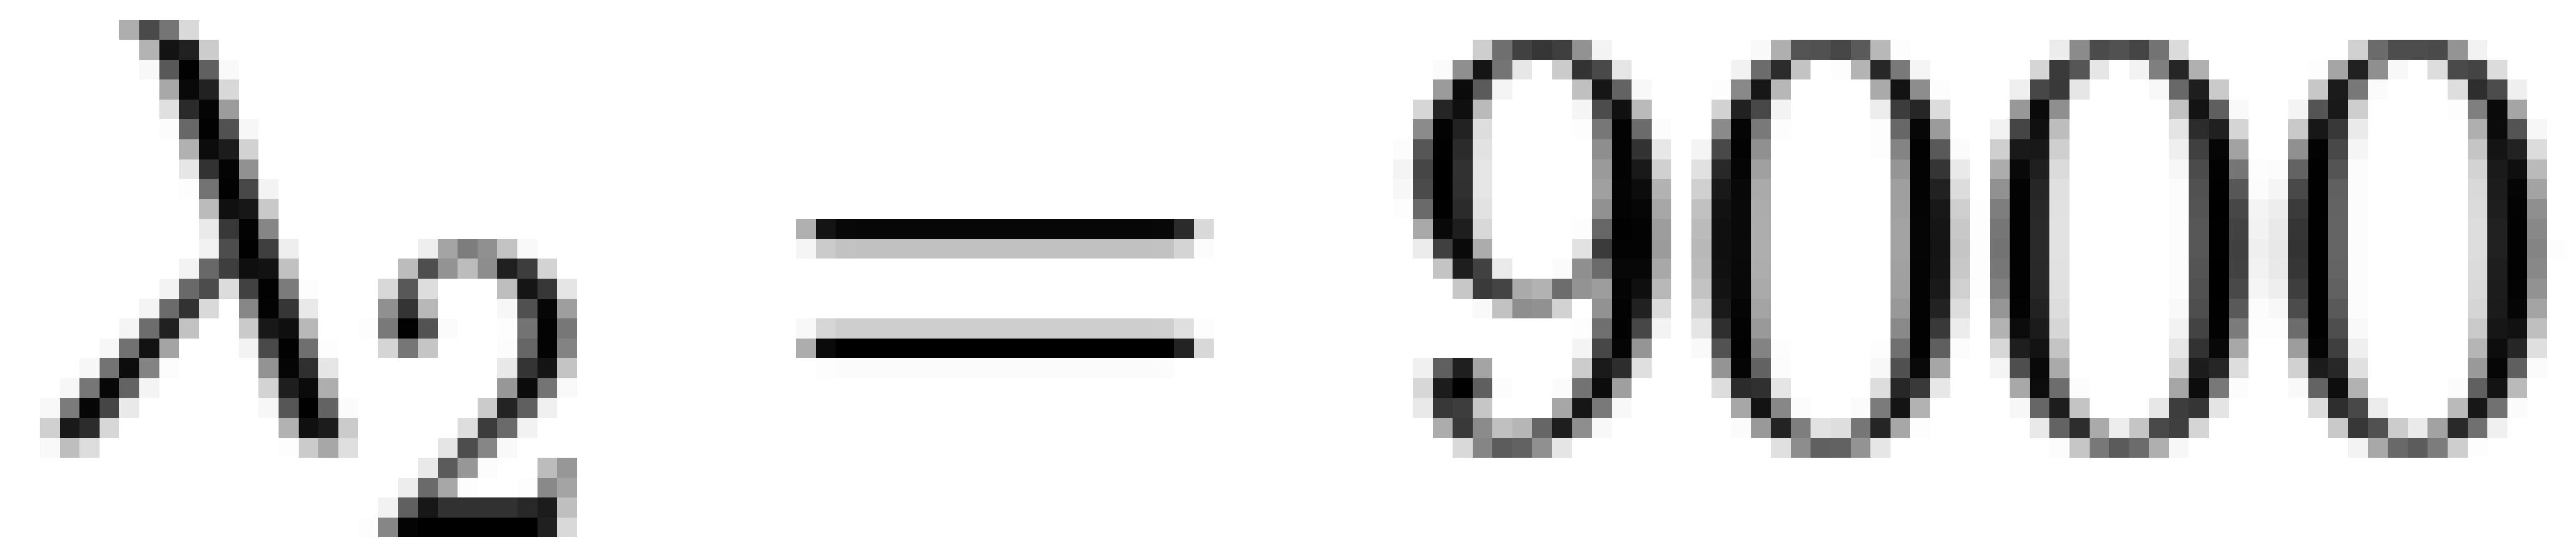

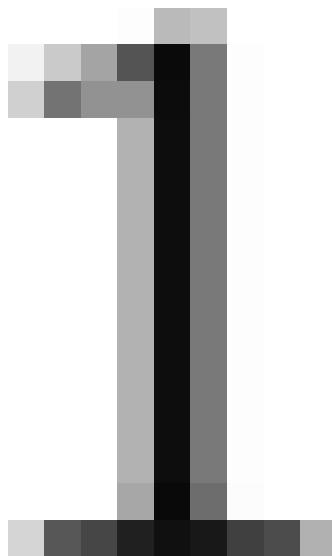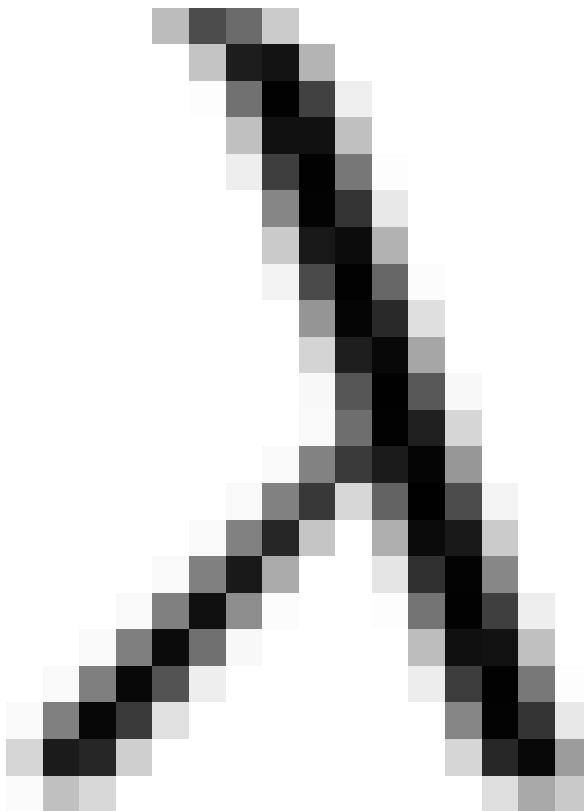

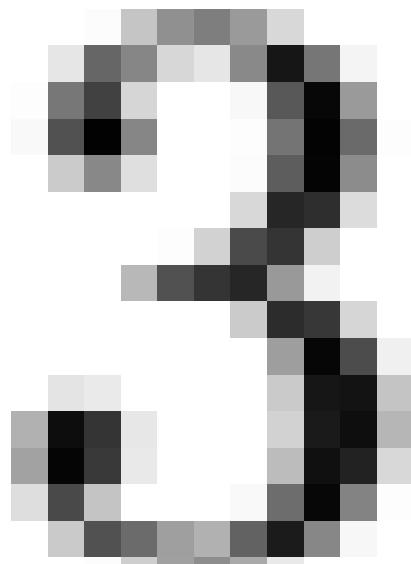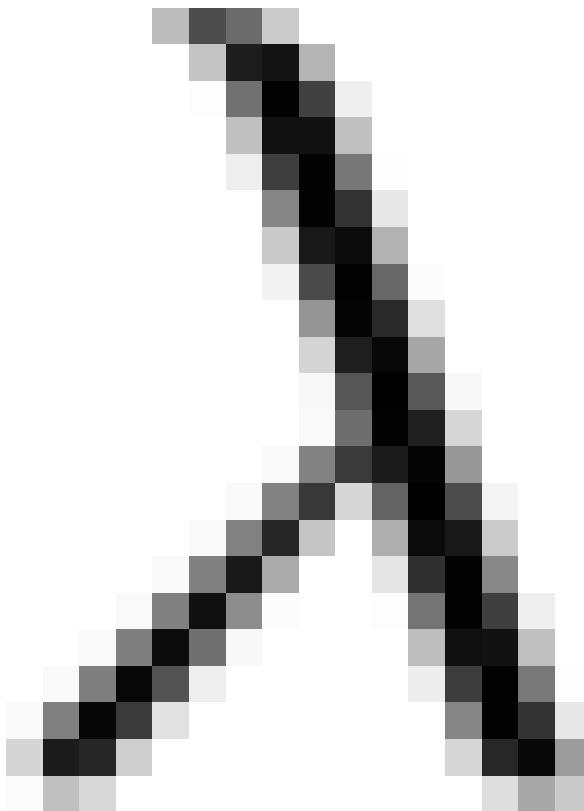

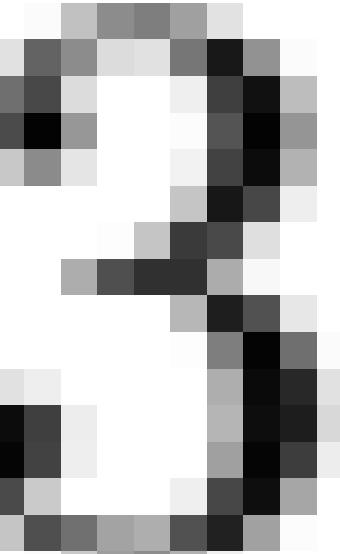
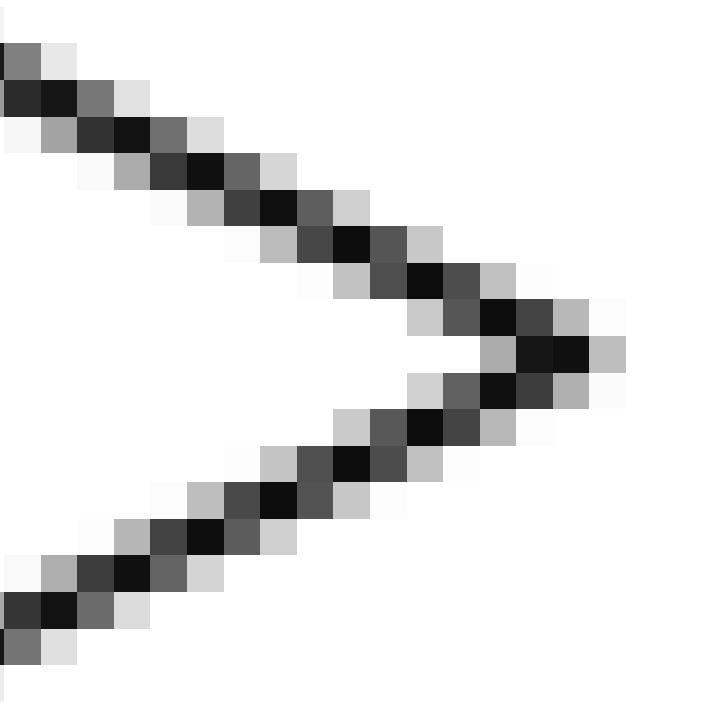
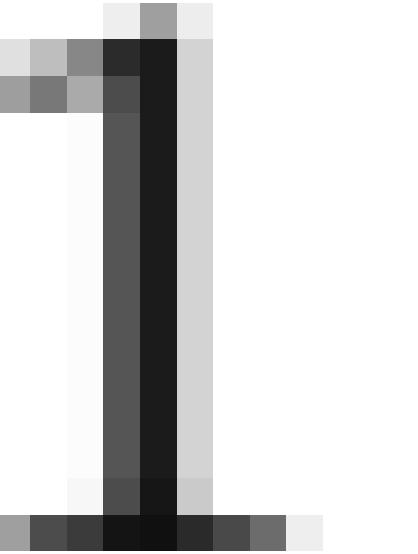
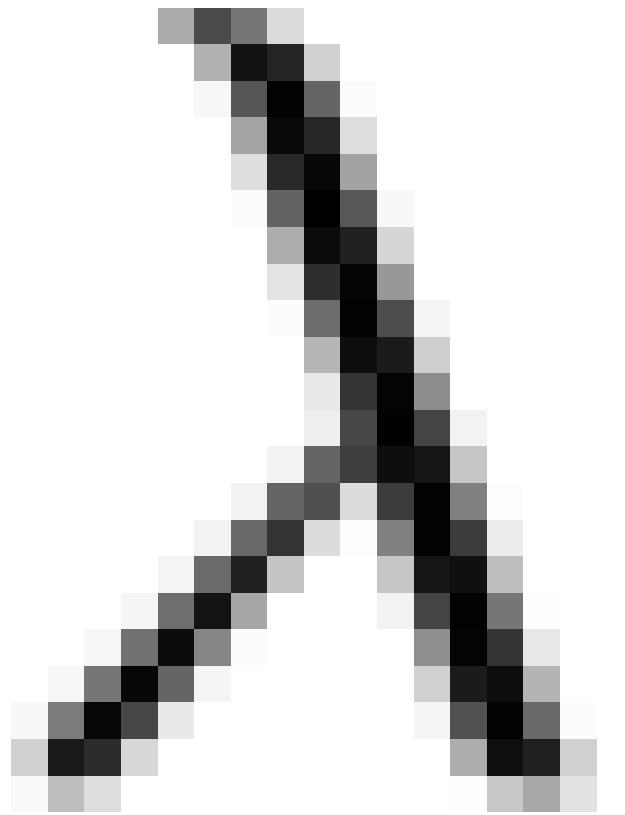

















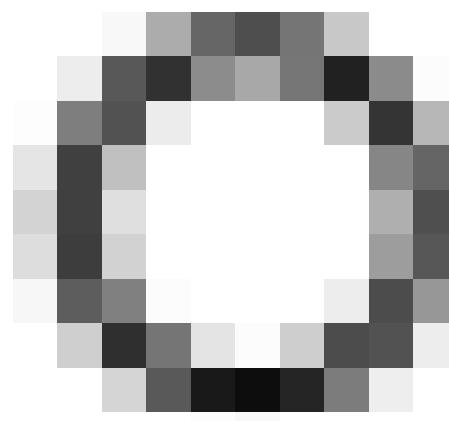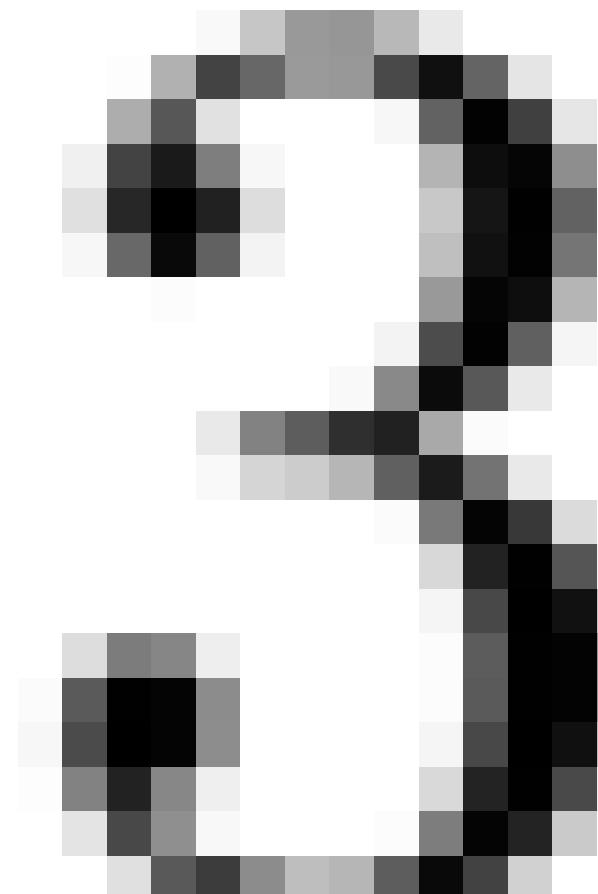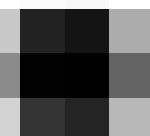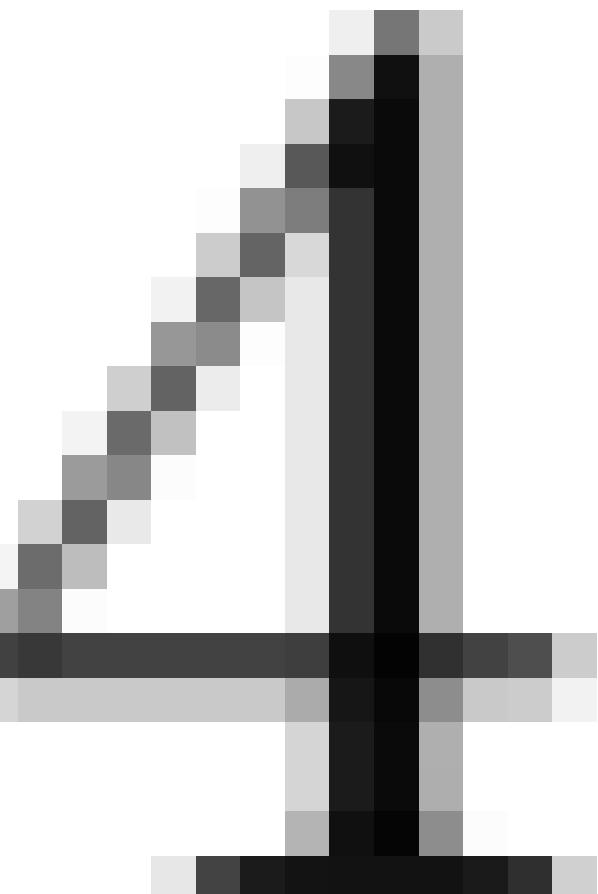

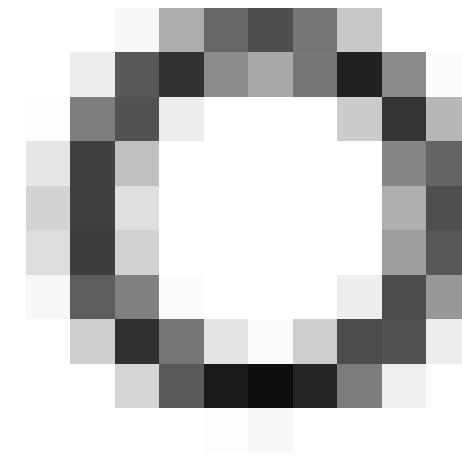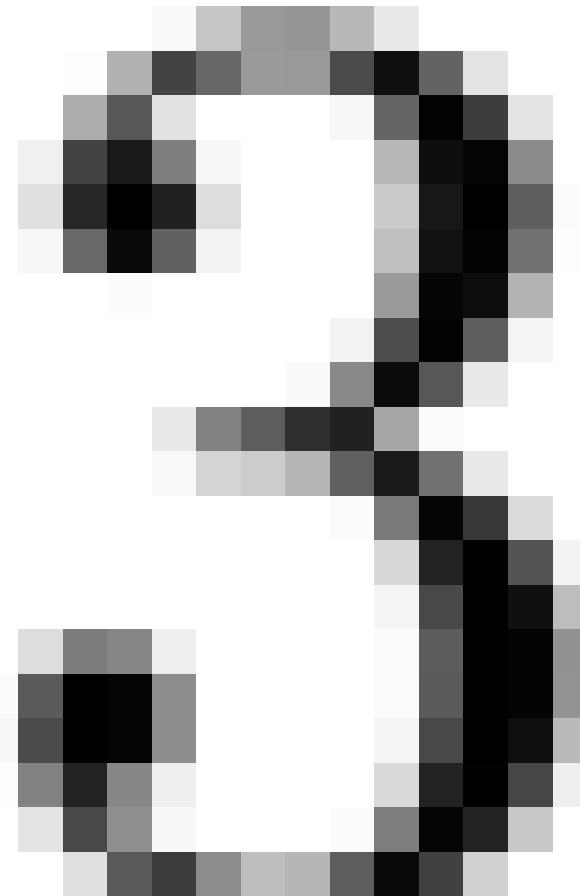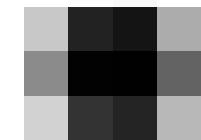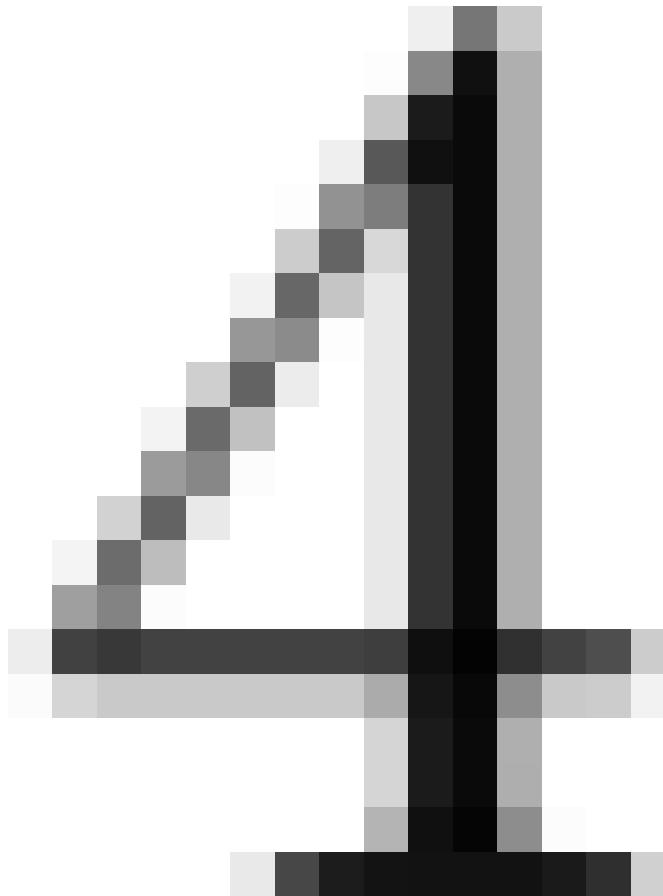


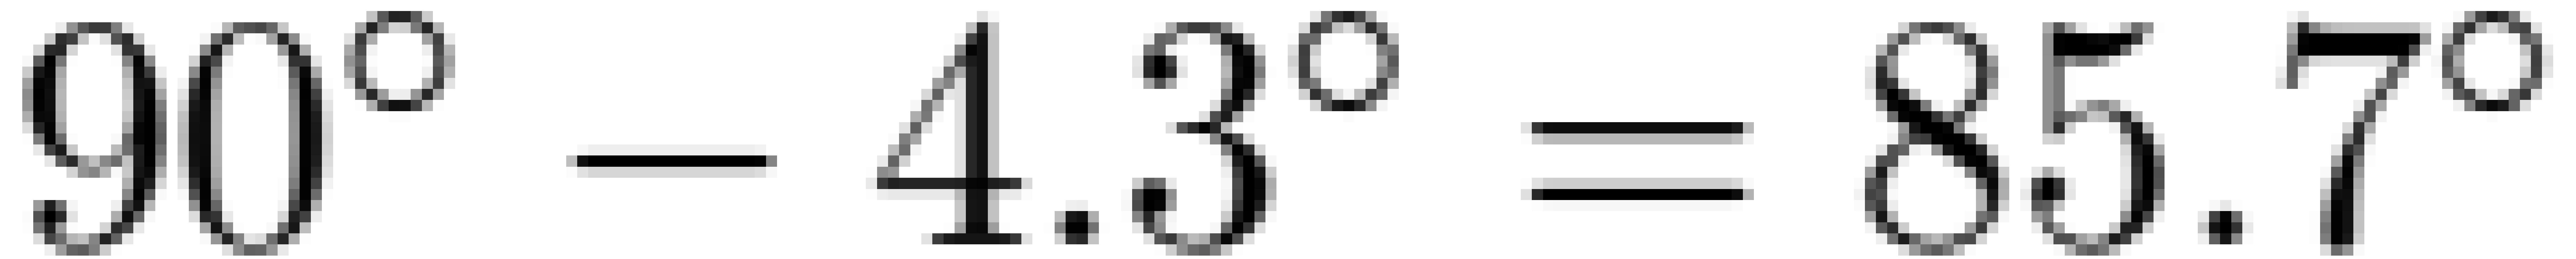


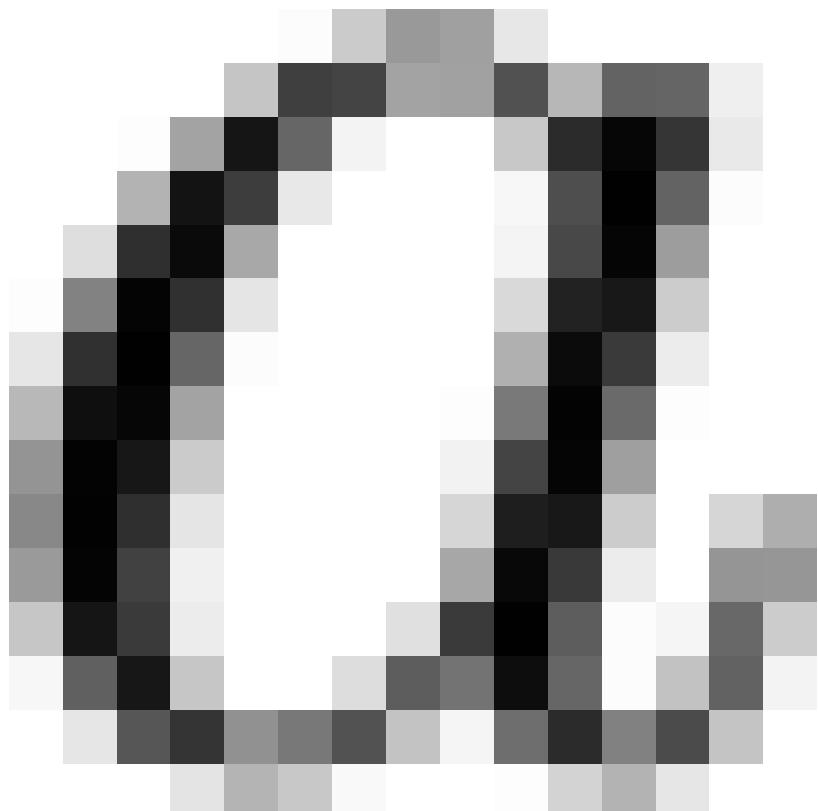


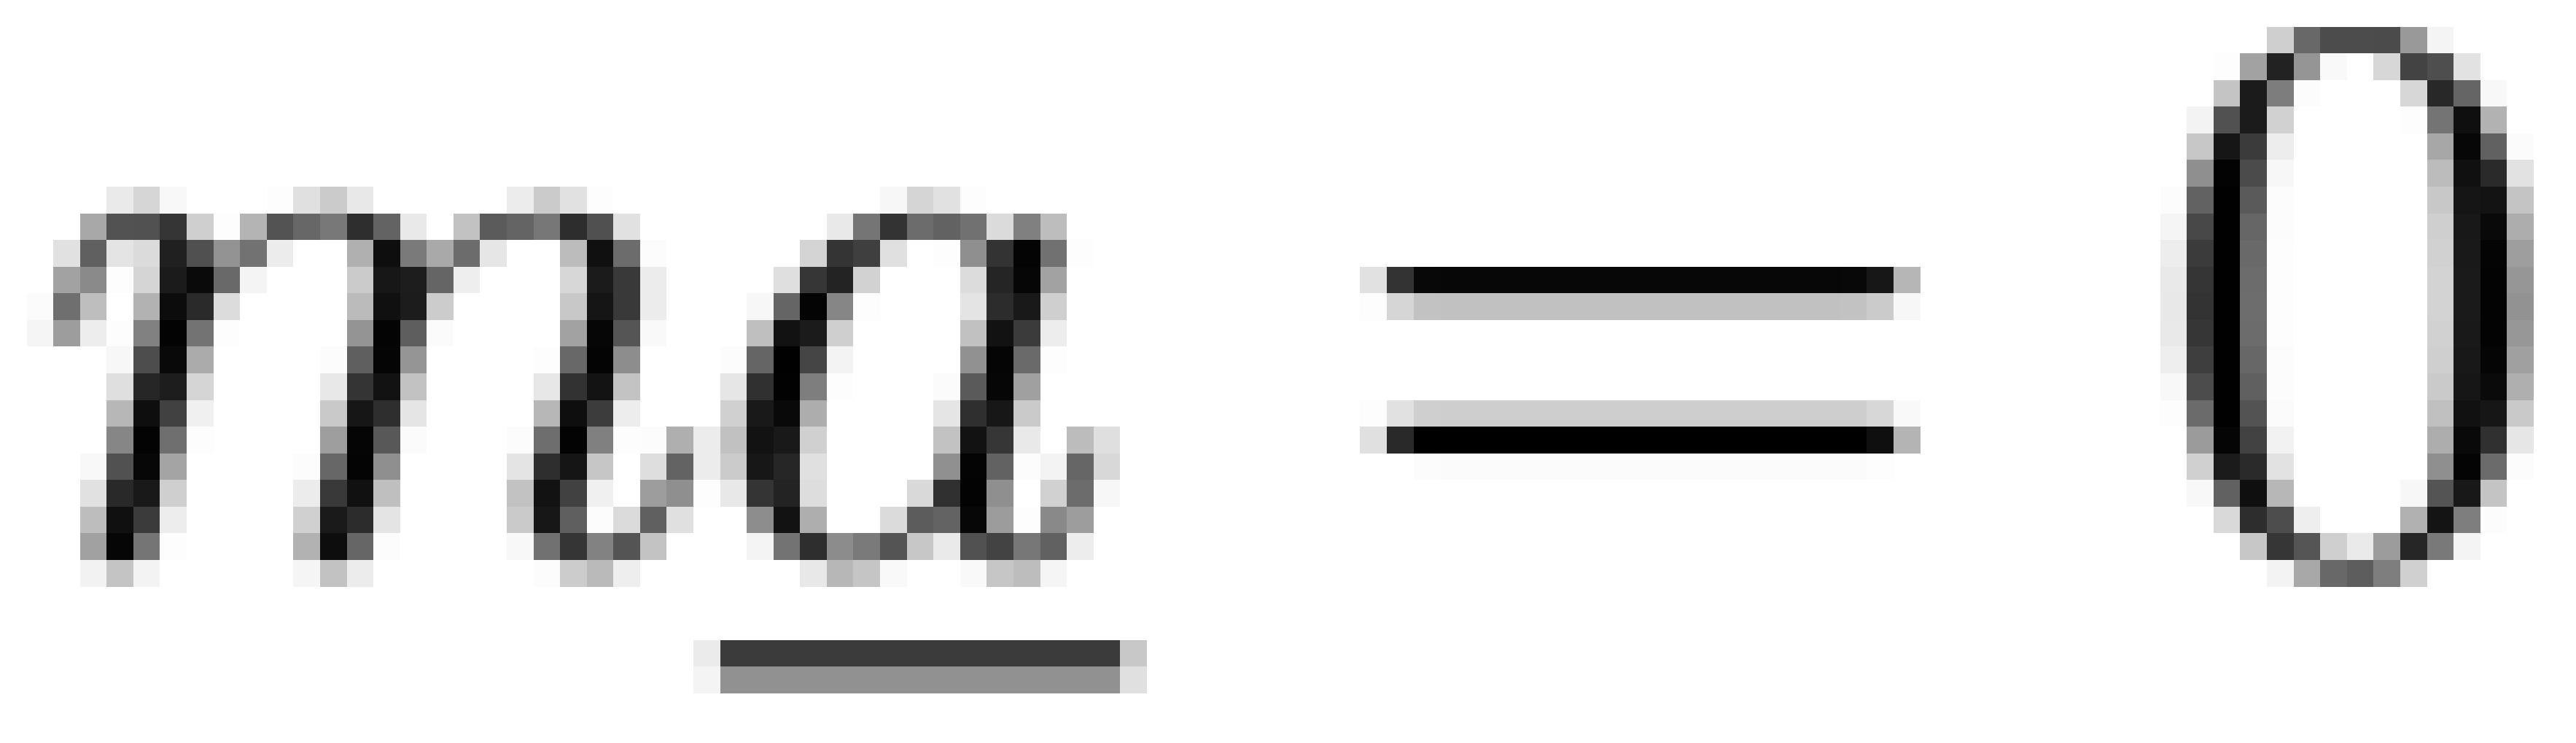



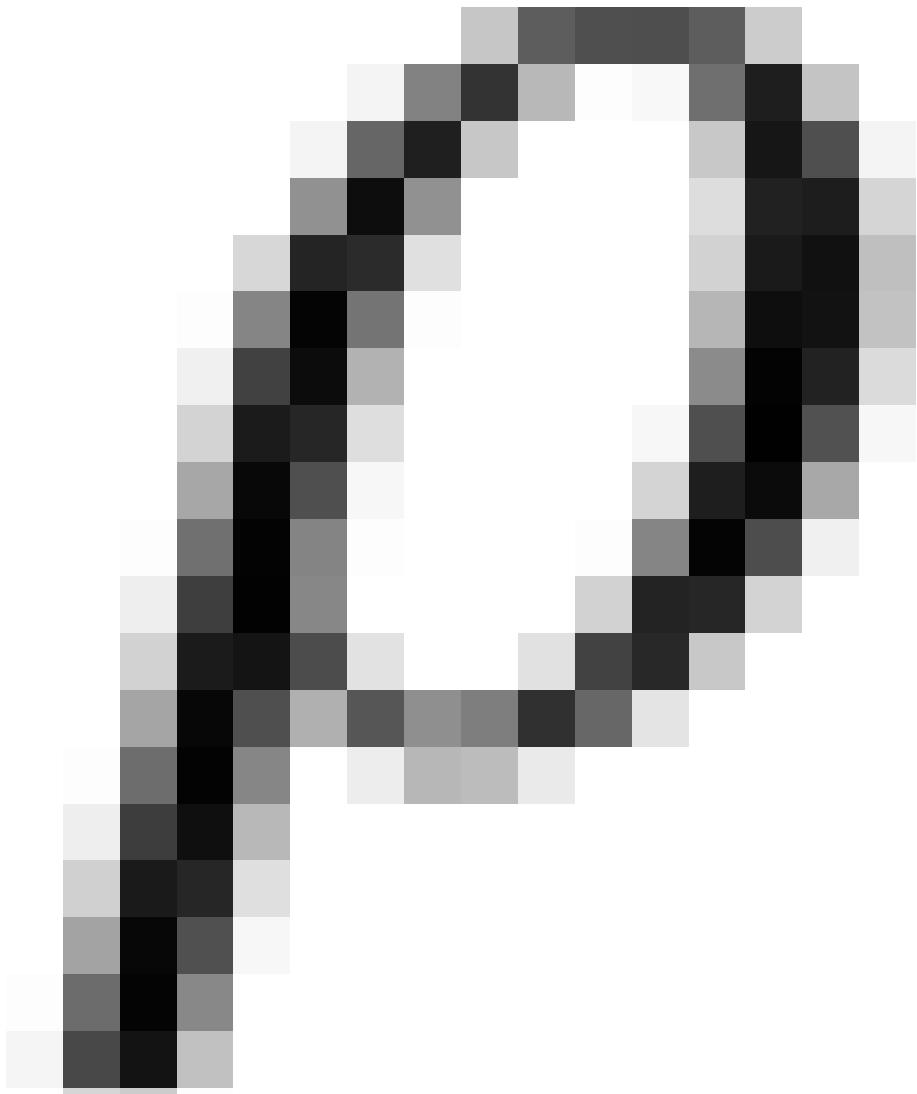

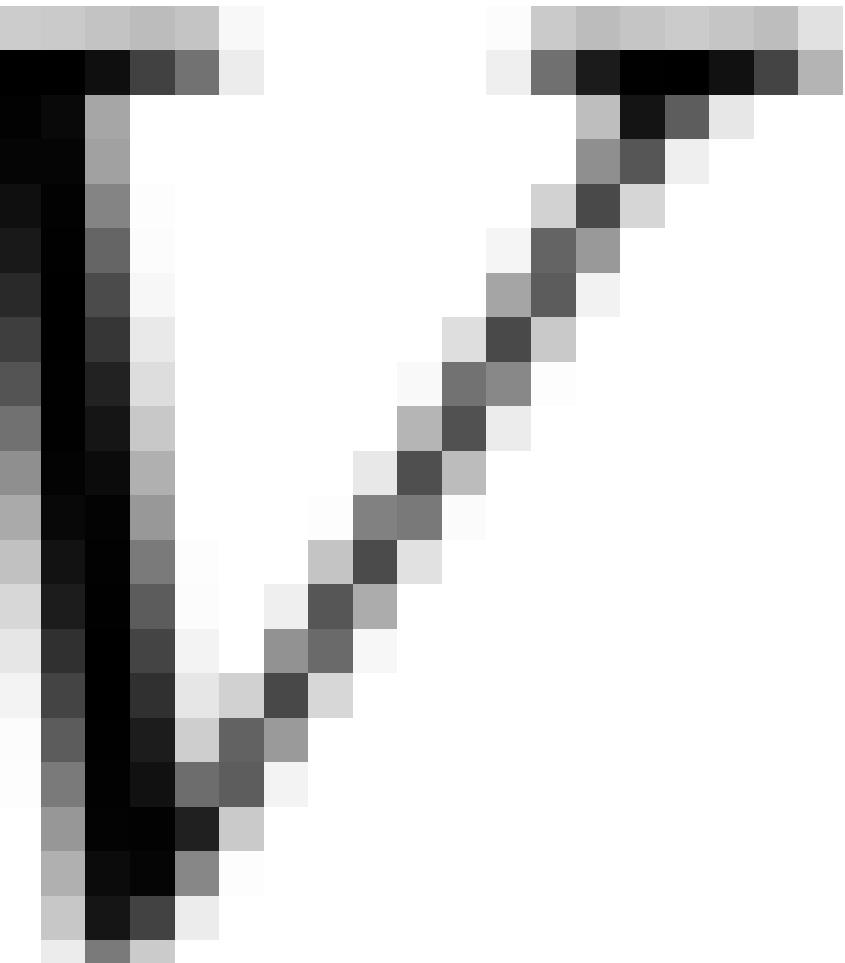



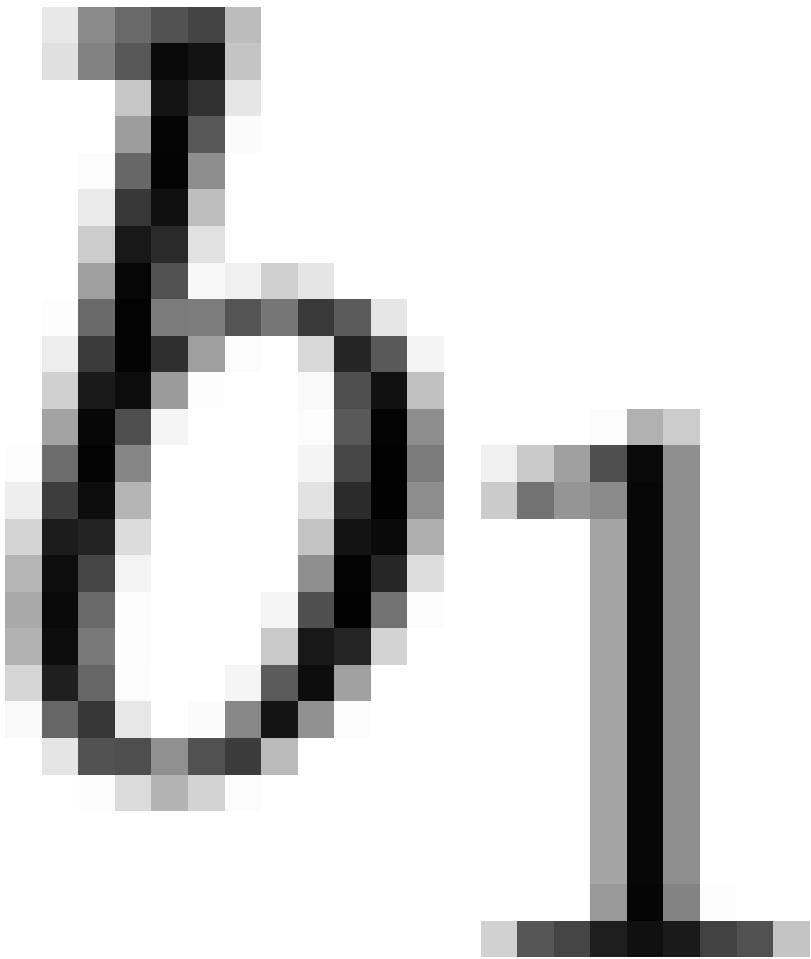


$$\sum F_1 = 0$$


$$\begin{aligned}\sum F_1 &= +S_{11}dx_2dx_3 - \left[S_{11} + \left(\frac{\partial S_{11}}{\partial x_1} \right) dx_1 \right] dx_2dx_3 \\ &\quad + S_{21}dx_1dx_3 - \left[S_{21} + \left(\frac{\partial S_{21}}{\partial x_2} \right) dx_2 \right] dx_1dx_3 \\ &\quad + S_{31}dx_1dx_2 - \left[S_{31} + \left(\frac{\partial S_{31}}{\partial x_3} \right) dx_3 \right] dx_1dx_2 \\ &\quad - \rho(dx_1dx_2dx_3)b_1 = 0\end{aligned}$$



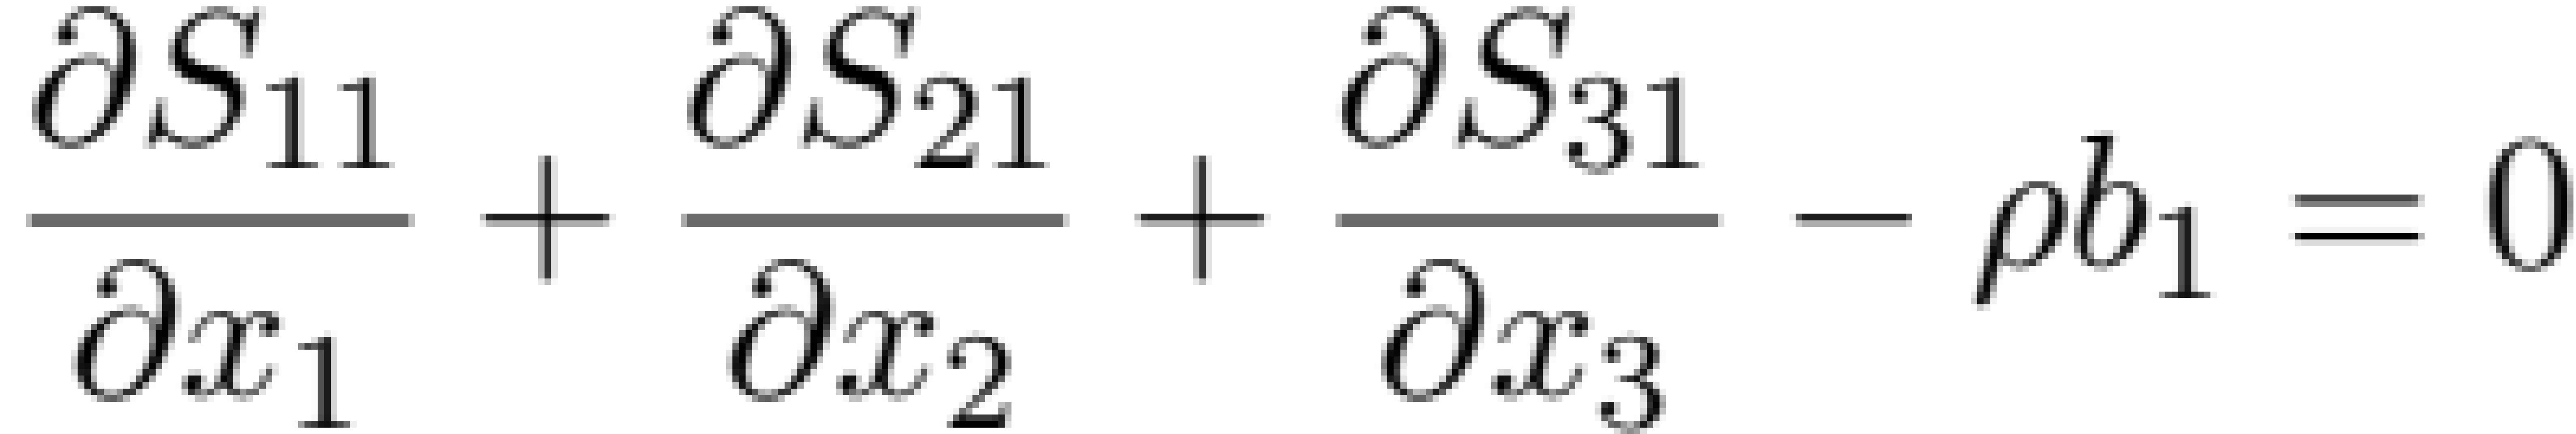

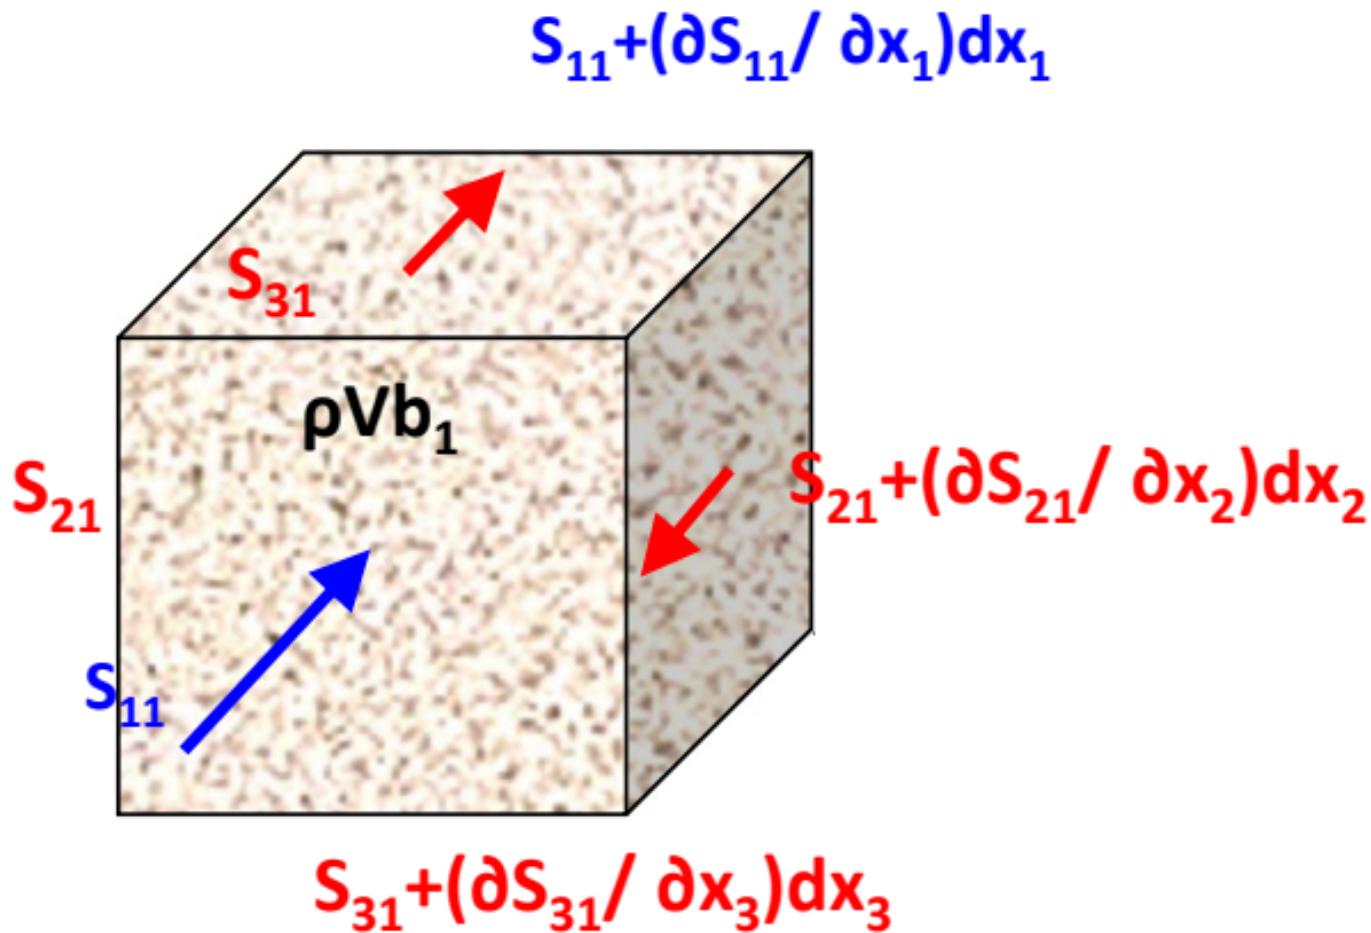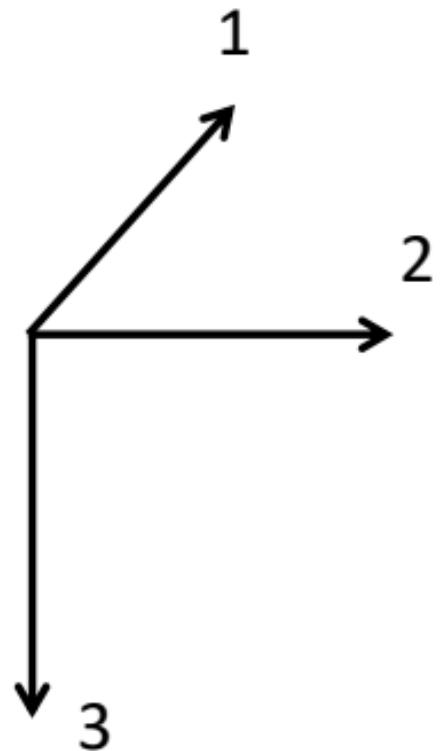


$$\left\{ \begin{array}{l} \frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} - \rho b_1 = 0 \\ \frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} - \rho b_2 = 0 \\ \frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} - \rho b_3 = 0 \end{array} \right.$$

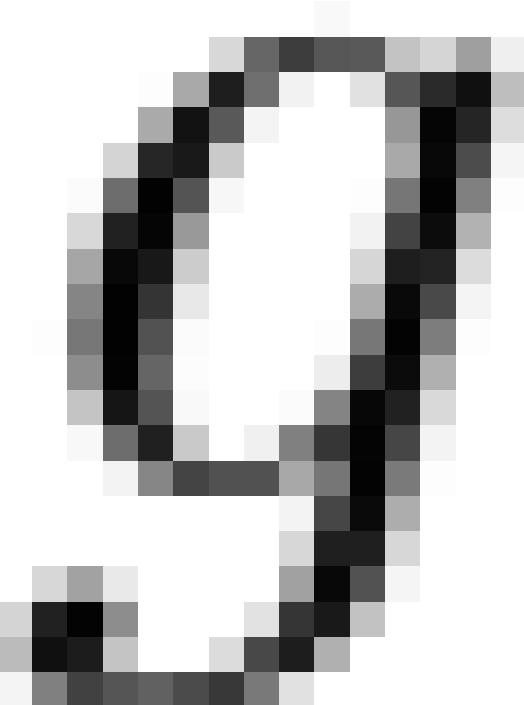



$$s_{33}(c_3) = \rho(c_3) \circ d_{c_3}$$

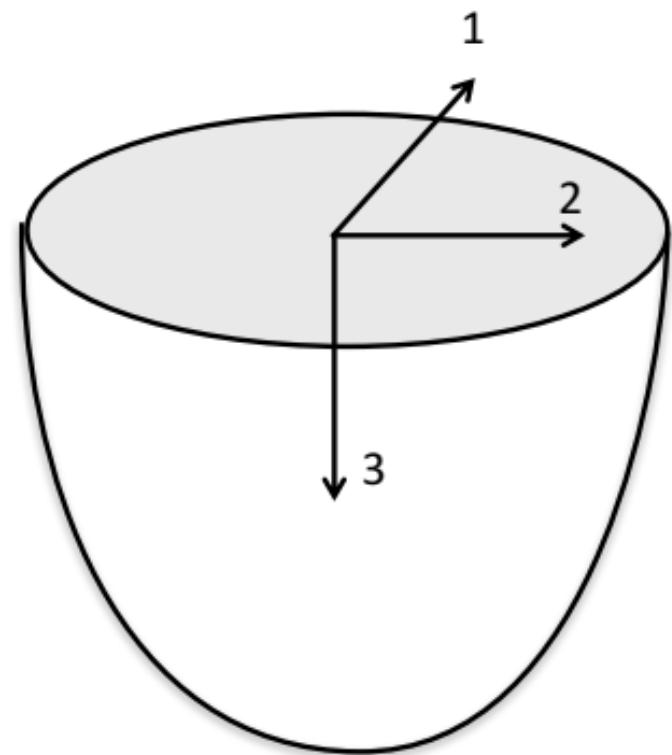


$$\left\{ \begin{array}{l} \cancel{\frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} + \rho b_1 = \frac{\partial^2 (\rho u_1)}{\partial t^2}} \\ \cancel{\frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} + \rho b_2 = \frac{\partial^2 (\rho u_2)}{\partial t^2}} \\ \cancel{\frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} + \rho b_3 = \frac{\partial^2 (\rho u_3)}{\partial t^2}} \end{array} \right.$$


$$\frac{\partial S_{33}}{\partial x_3} - \rho(x_3)g = 0$$


$$S_{33} = \int_0^{x_3} \rho(x_3)g \, dx_3$$





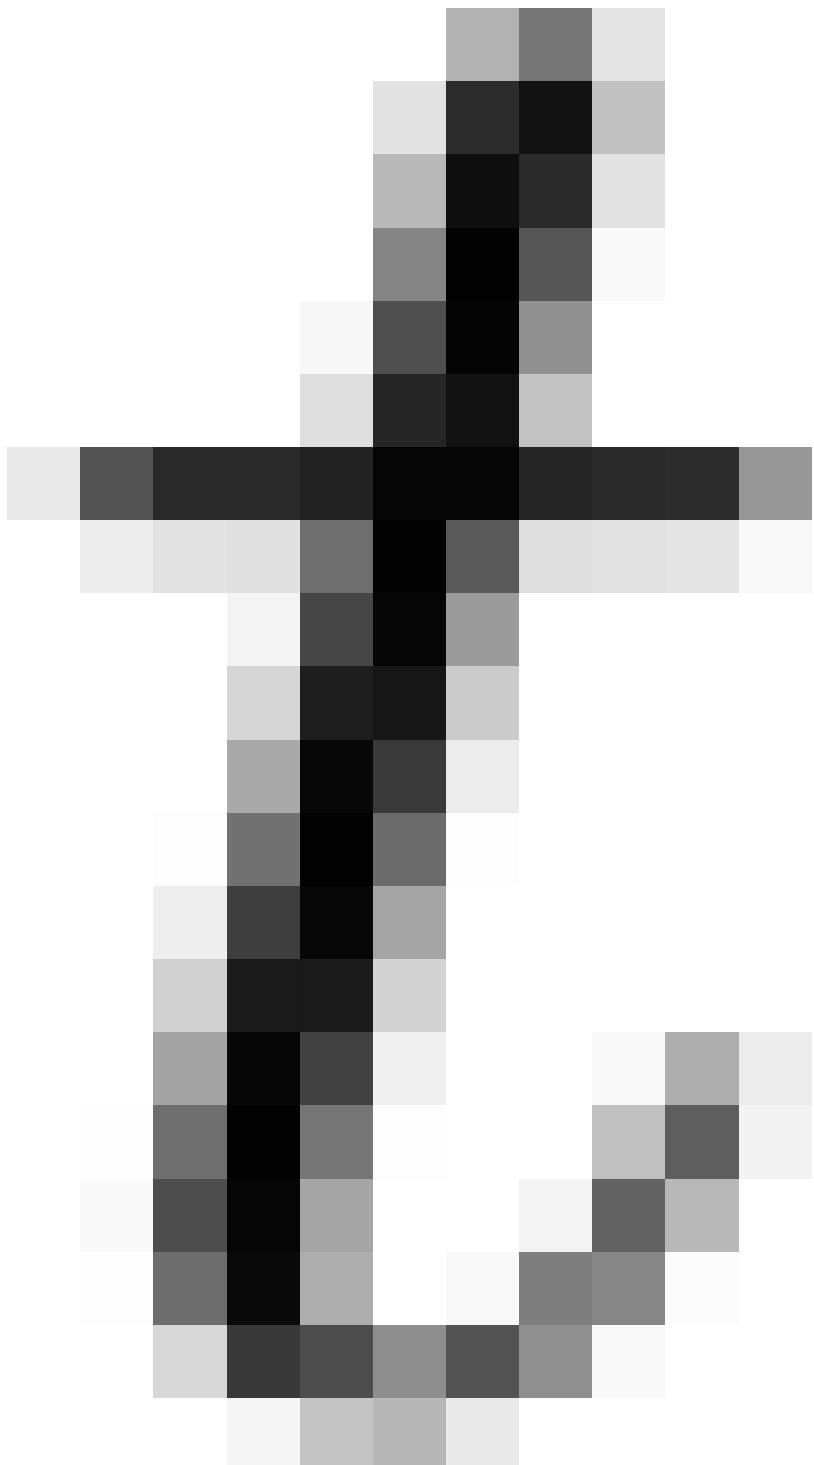

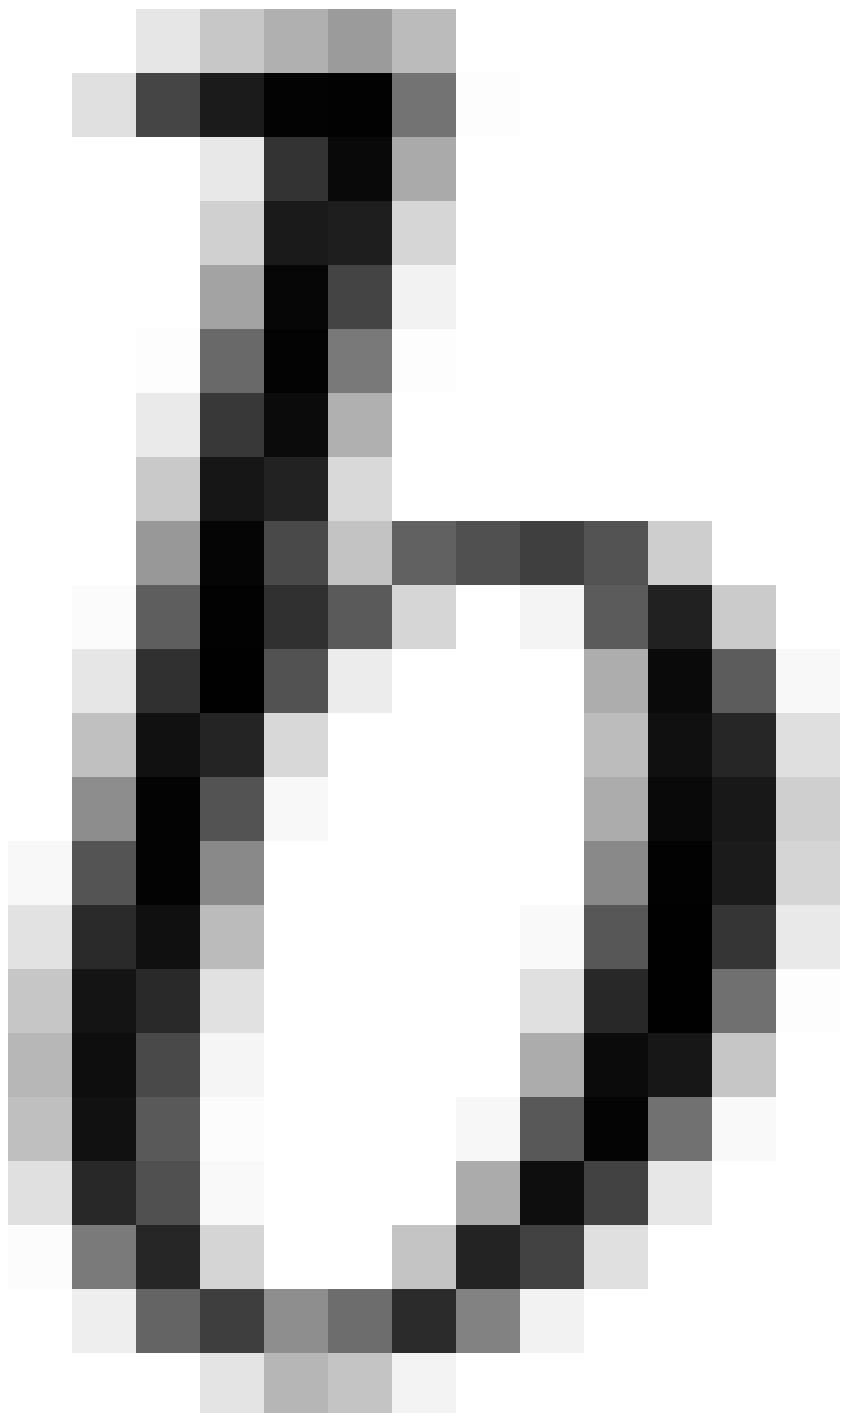

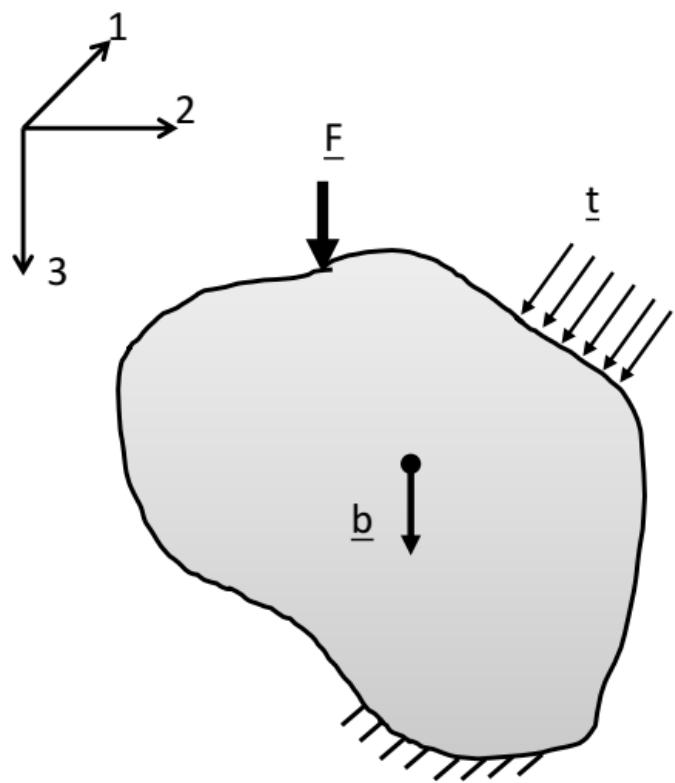

Displacement condition




$$\begin{cases} \frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} + \rho b_1 = \frac{\partial^2 (\rho u_1)}{\partial t^2} \\ \frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} + \rho b_2 = \frac{\partial^2 (\rho u_2)}{\partial t^2} \\ \frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} + \rho b_3 = \frac{\partial^2 (\rho u_3)}{\partial t^2} \end{cases}$$

And respect the boundary conditions:

- Displacement
- Boundary stresses
- Boundary Forces
- Body Forces

How do we relate stresses to displacements?

- Displacements → Strains (**Kinematic equations**)
- Strains → Stresses (**Constitutive equations**)

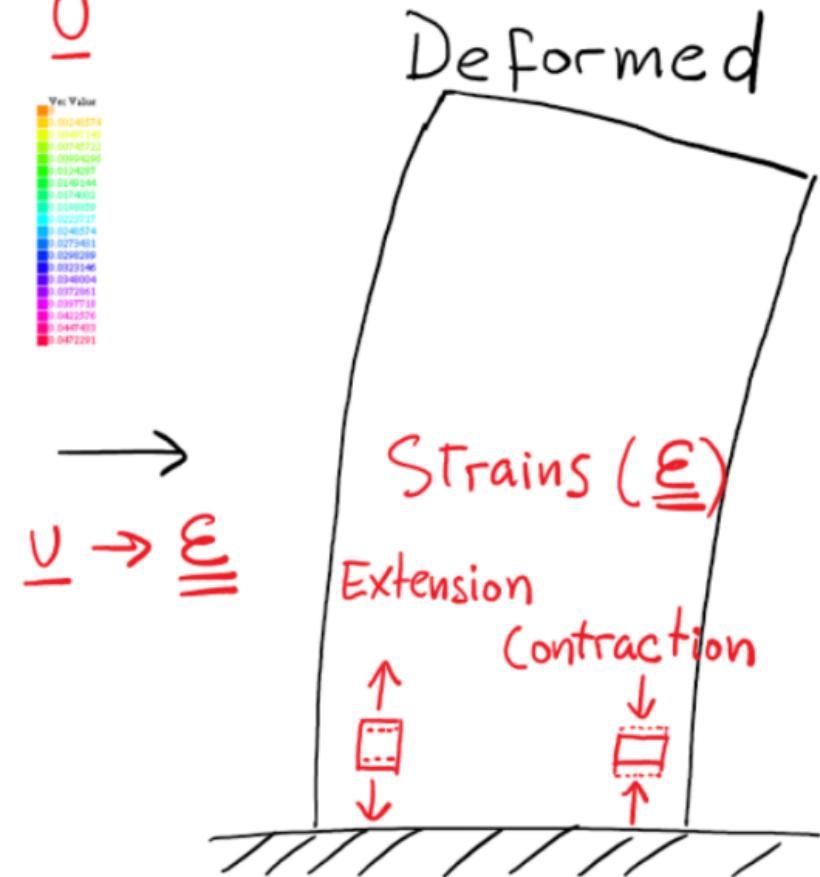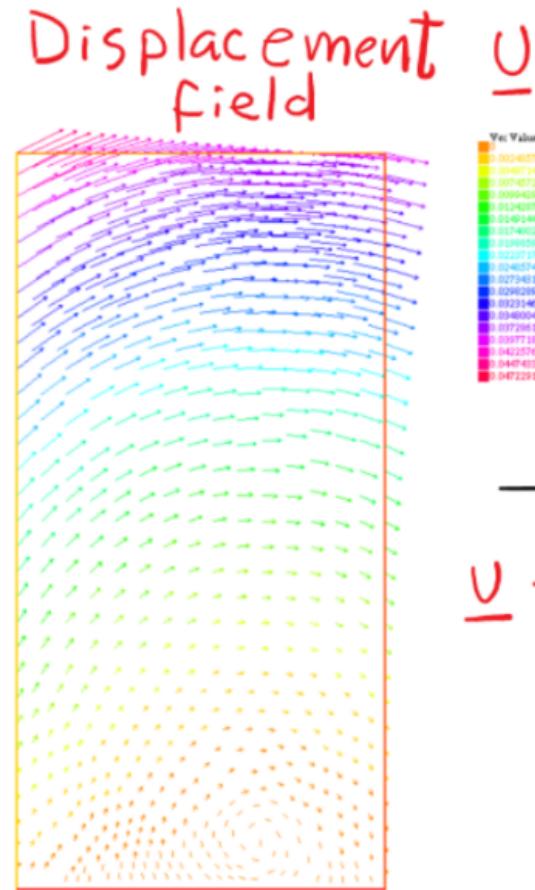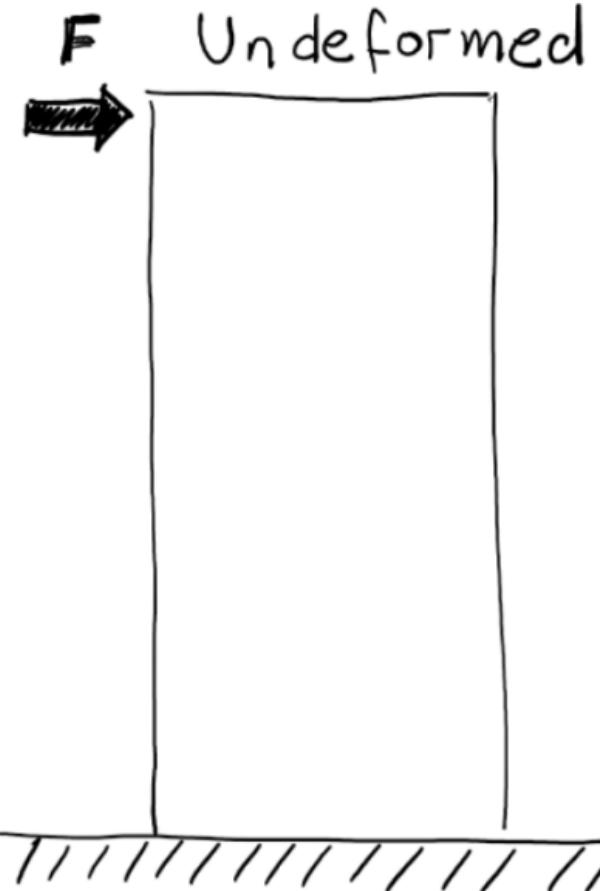

ϵ_{11}



α_1

α_1


ϵ_{22}

$=$

α_2


α_2

acc10(ut1) + acc10(ut2) + acc10(ut3)




$\epsilon_{12} =$ $\frac{1}{2}$


$$\frac{1}{2} \left(u_1 - u_2 + c_1 - c_2 \right)$$

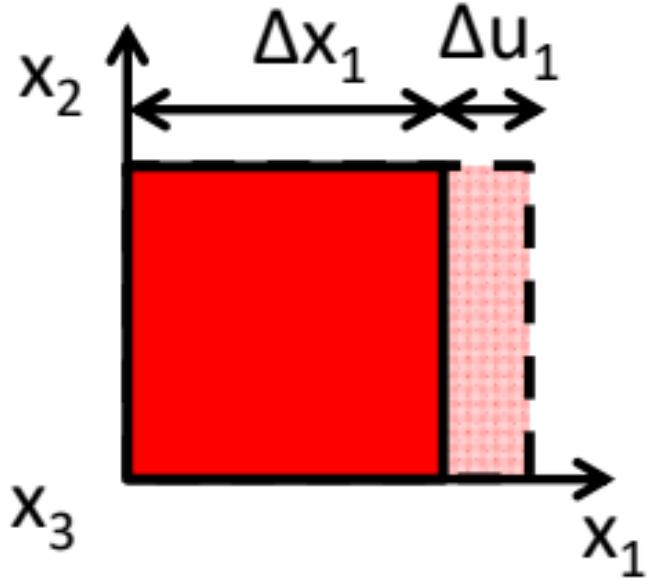


$$\varepsilon_{11} \approx \frac{\Delta u_1}{\Delta x_1}$$

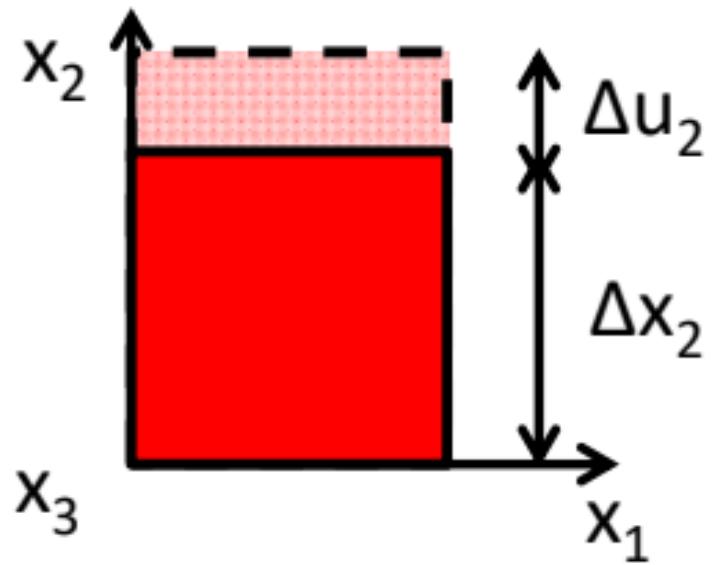


$$\varepsilon_{22} \approx \frac{\Delta u_2}{\Delta x_2}$$

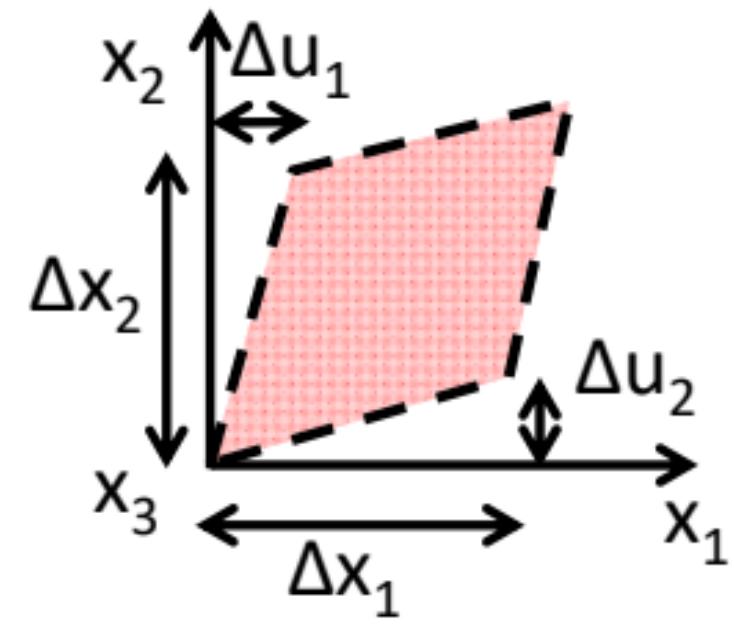



$$\varepsilon_{12} \approx \frac{1}{2} \left(\frac{\Delta u_1}{\Delta x_2} + \frac{\Delta u_2}{\Delta x_1} \right)$$

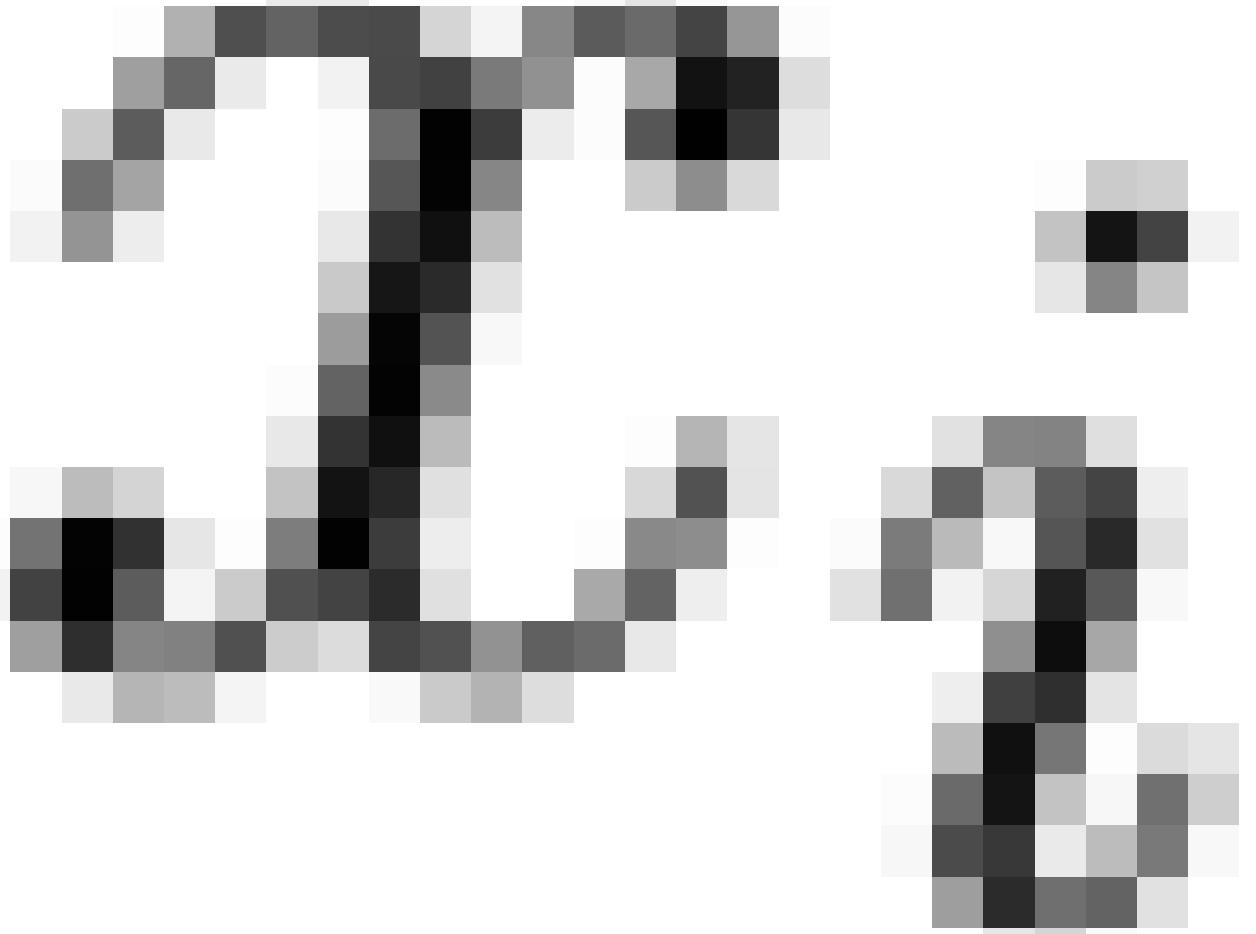







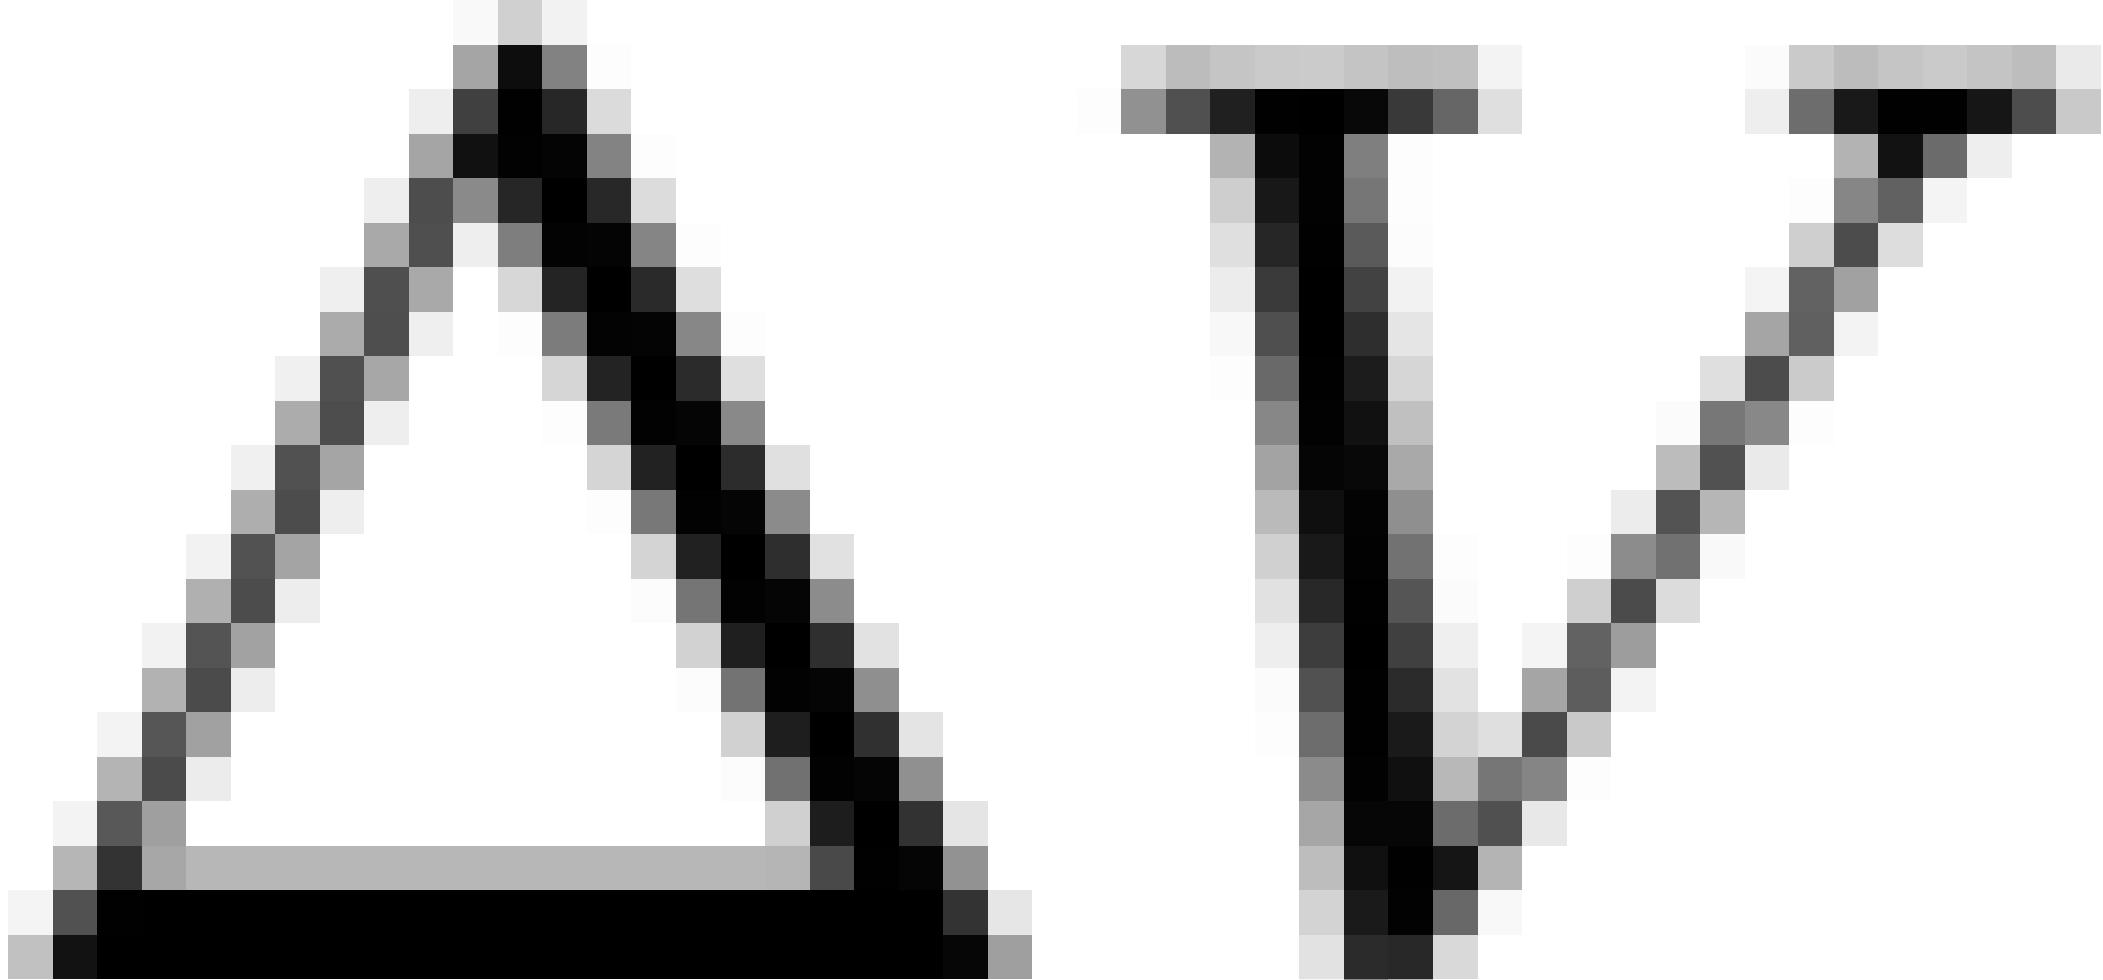


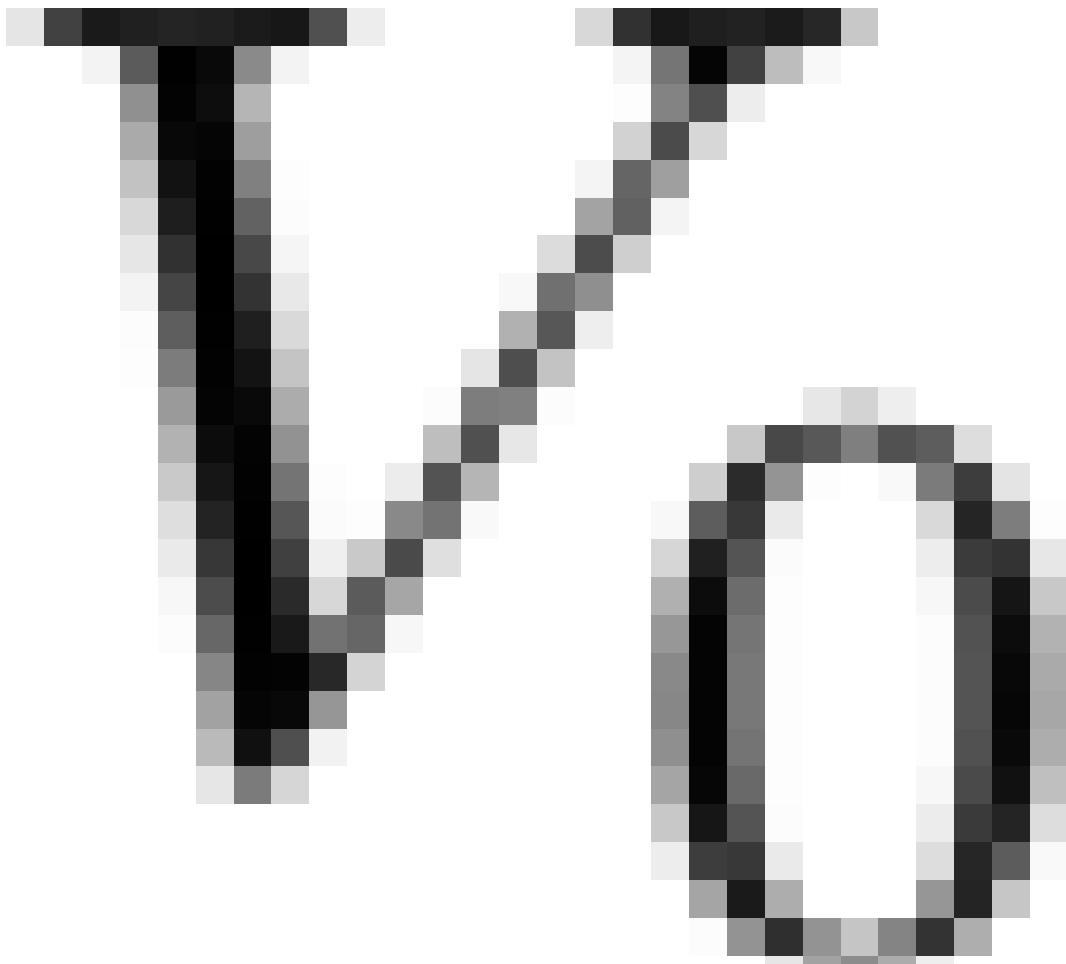

cool

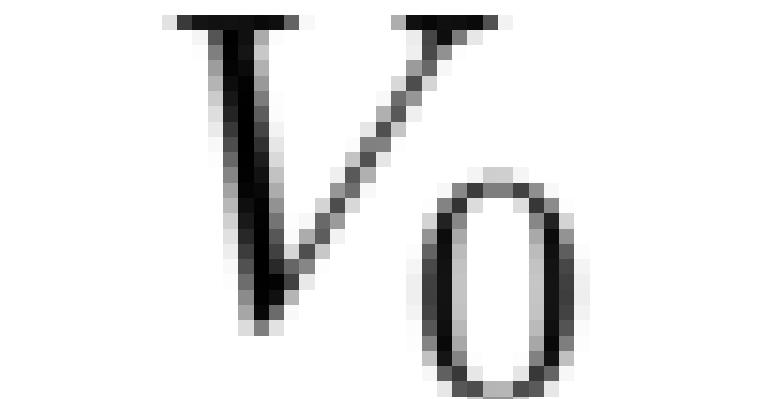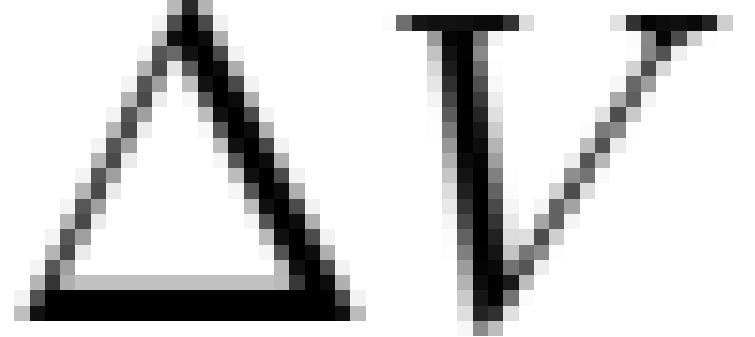






$$\epsilon_{vol} = \frac{[(dx_1 + du_1)(dx_2 + du_3) - (dx_1 dx_2 dx_3)]}{(dx_1 dx_2 dx_3)}$$











$$\text{vol}^2 \frac{(dx_1 dx_2 du_3 + dx_1 dx_3 du_2 + dx_2 dx_3 du_1)}{(dx_1 dx_2 dx_3)} = \frac{du_1}{\epsilon_{11}} + \frac{du_2}{\epsilon_{22}} + \frac{du_3}{\epsilon_{33}}$$


Hard
elastic
solid

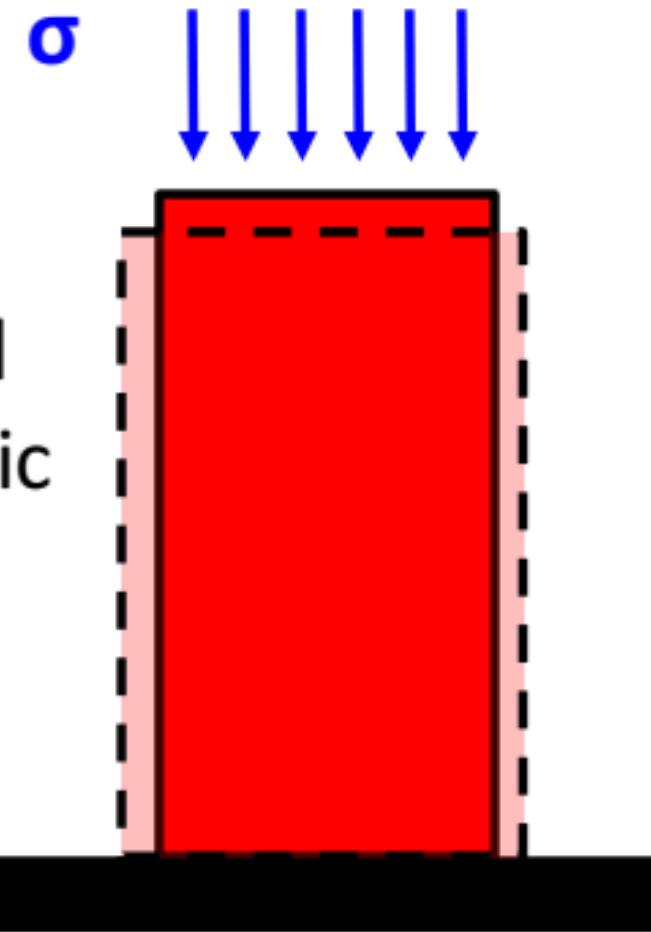



Soft
elastic
solid

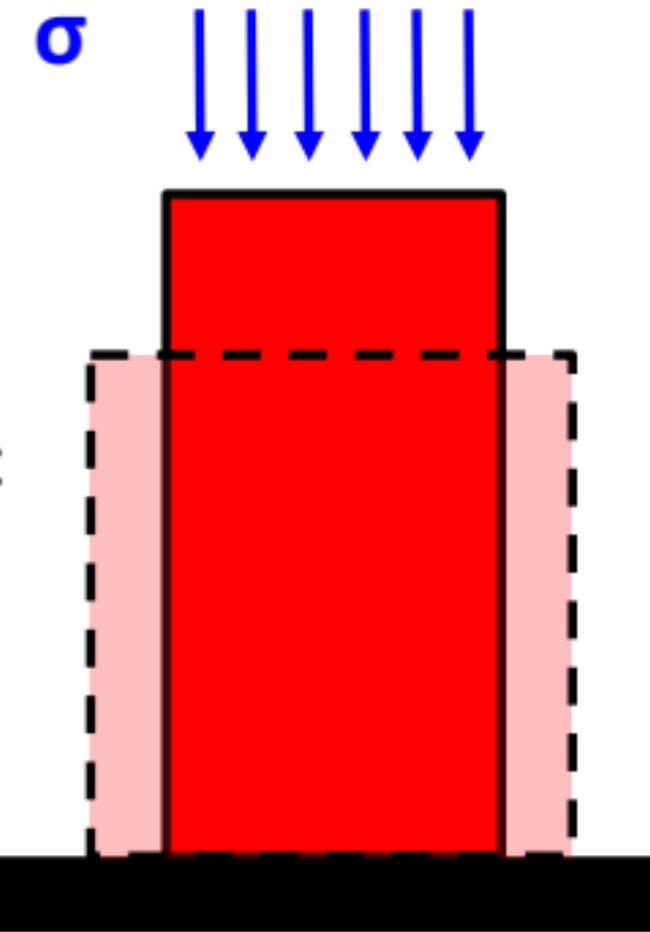



Soft
Visco-
plastic
solid

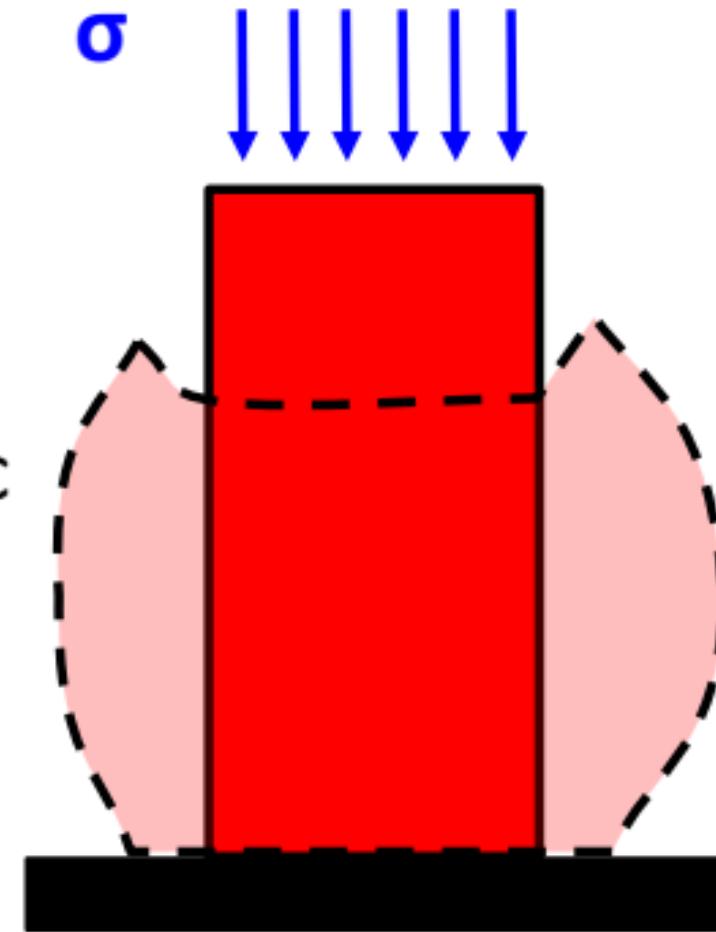

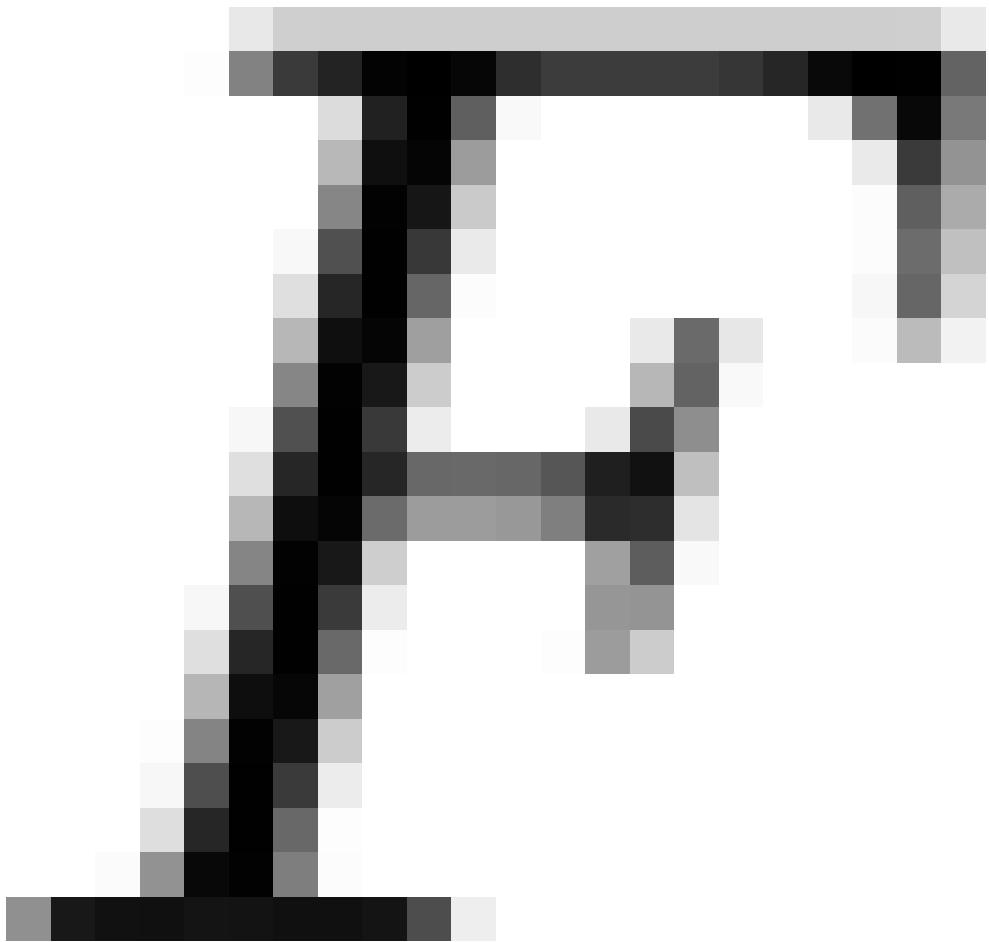

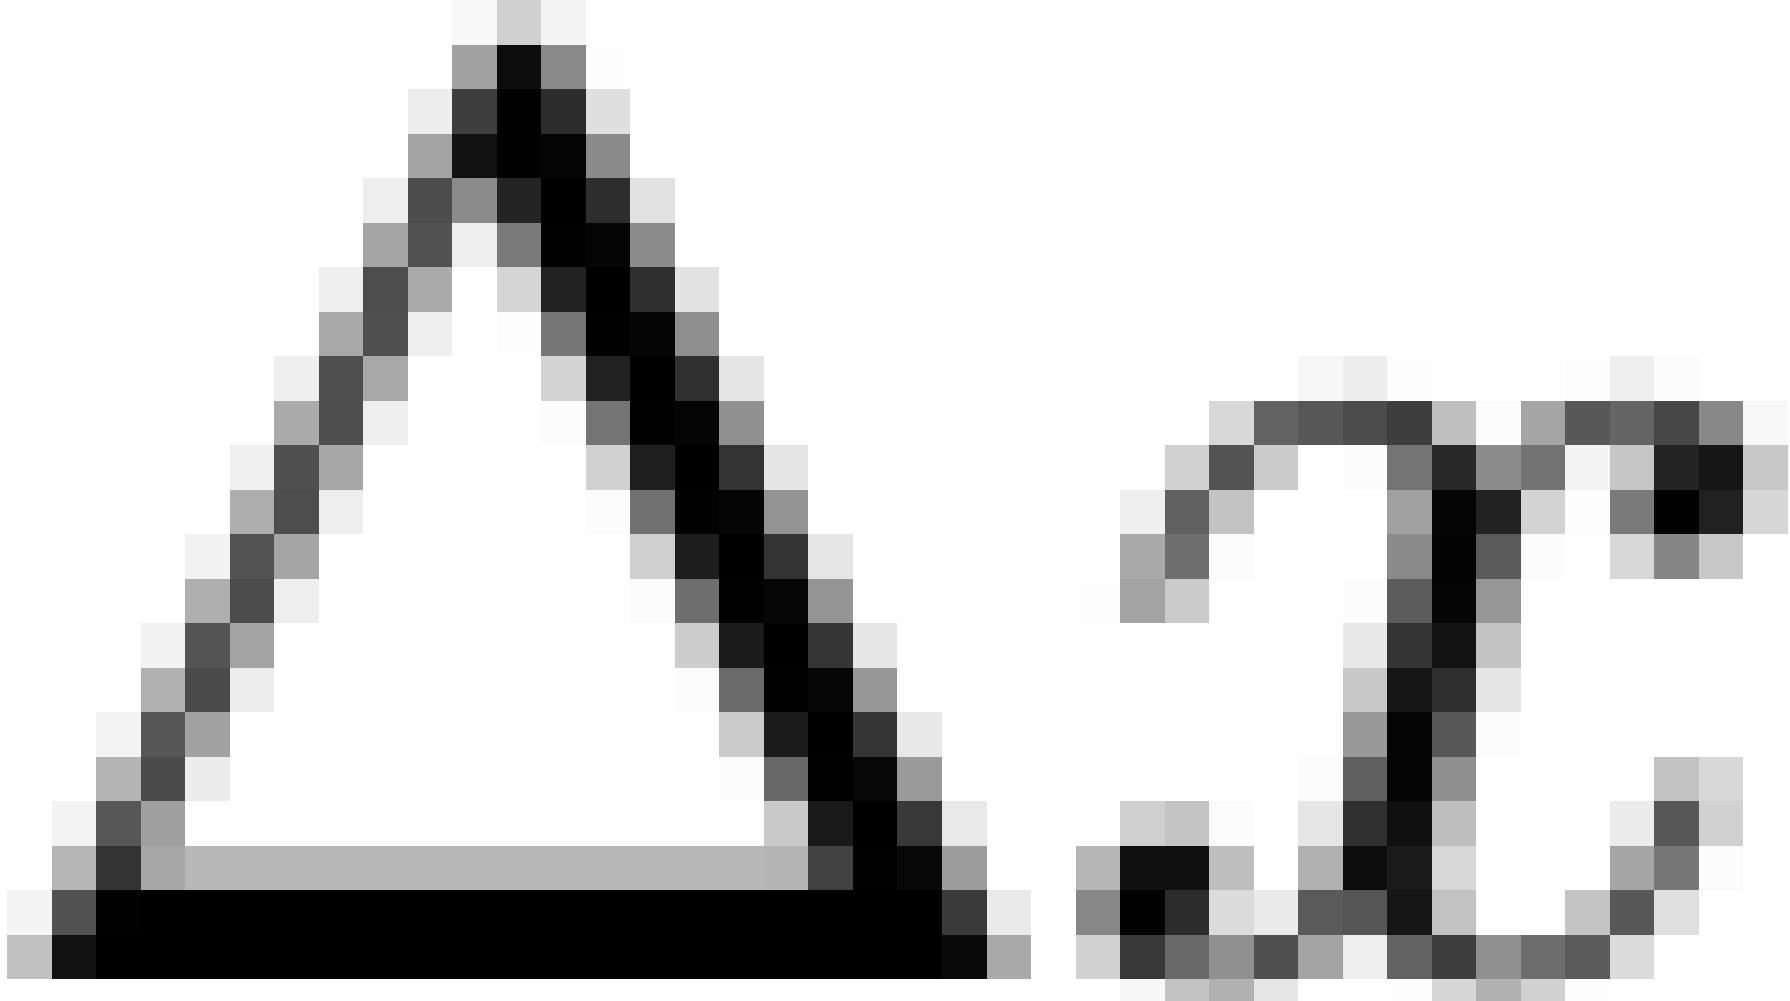

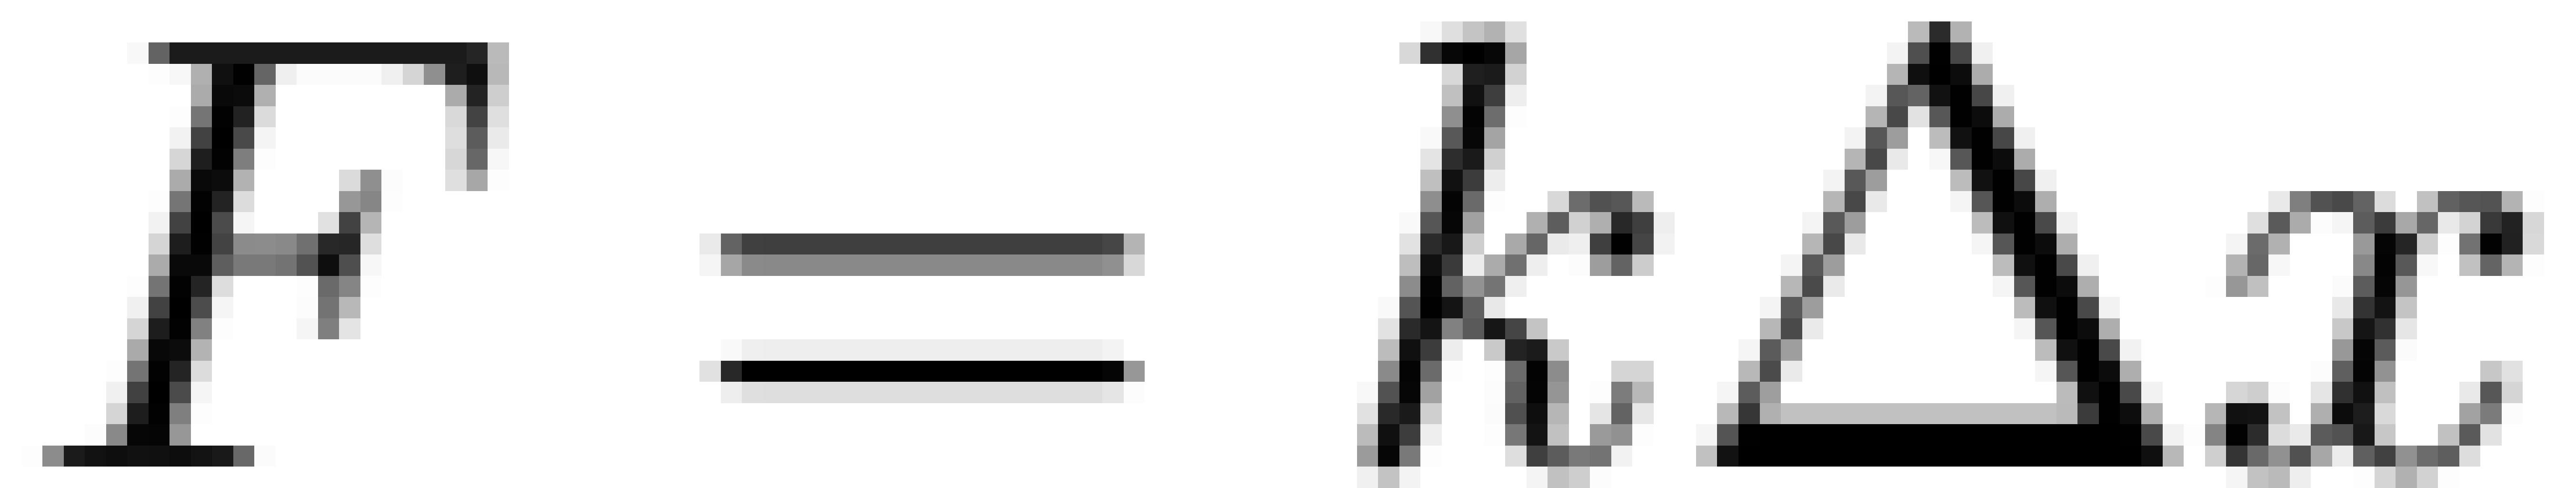

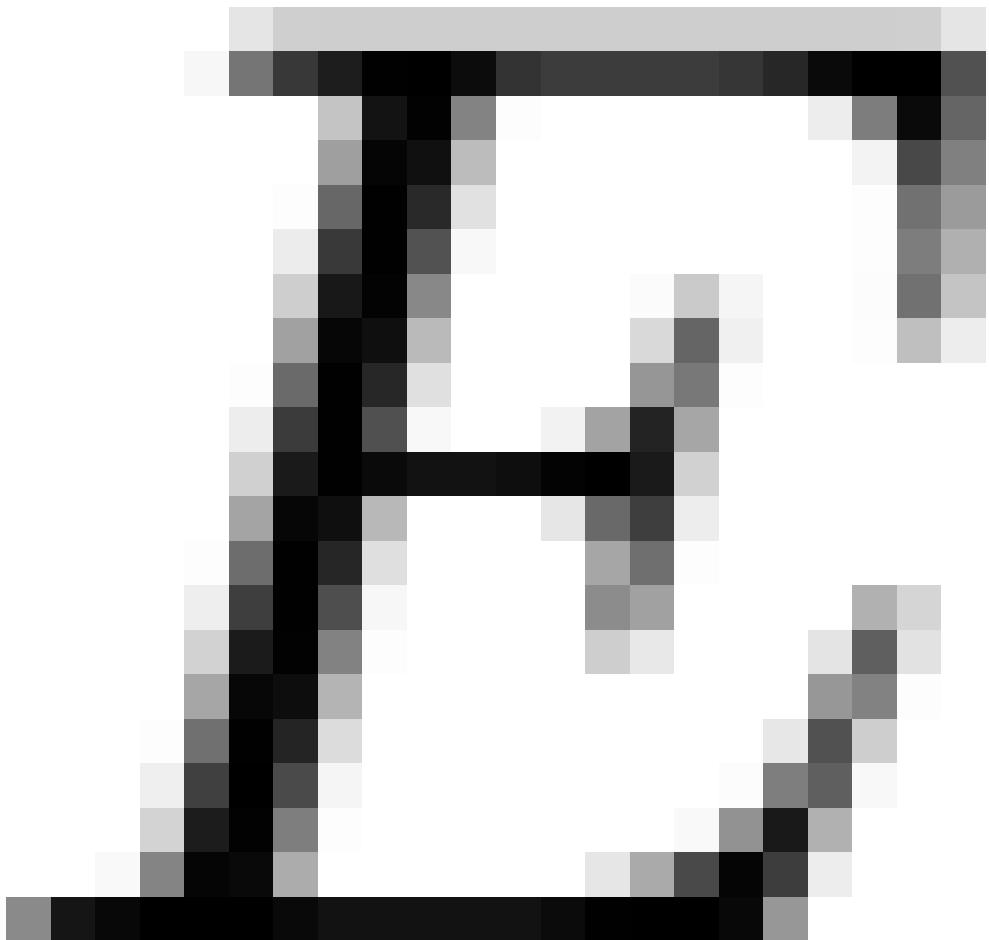

A


A


—
—




B


C


T

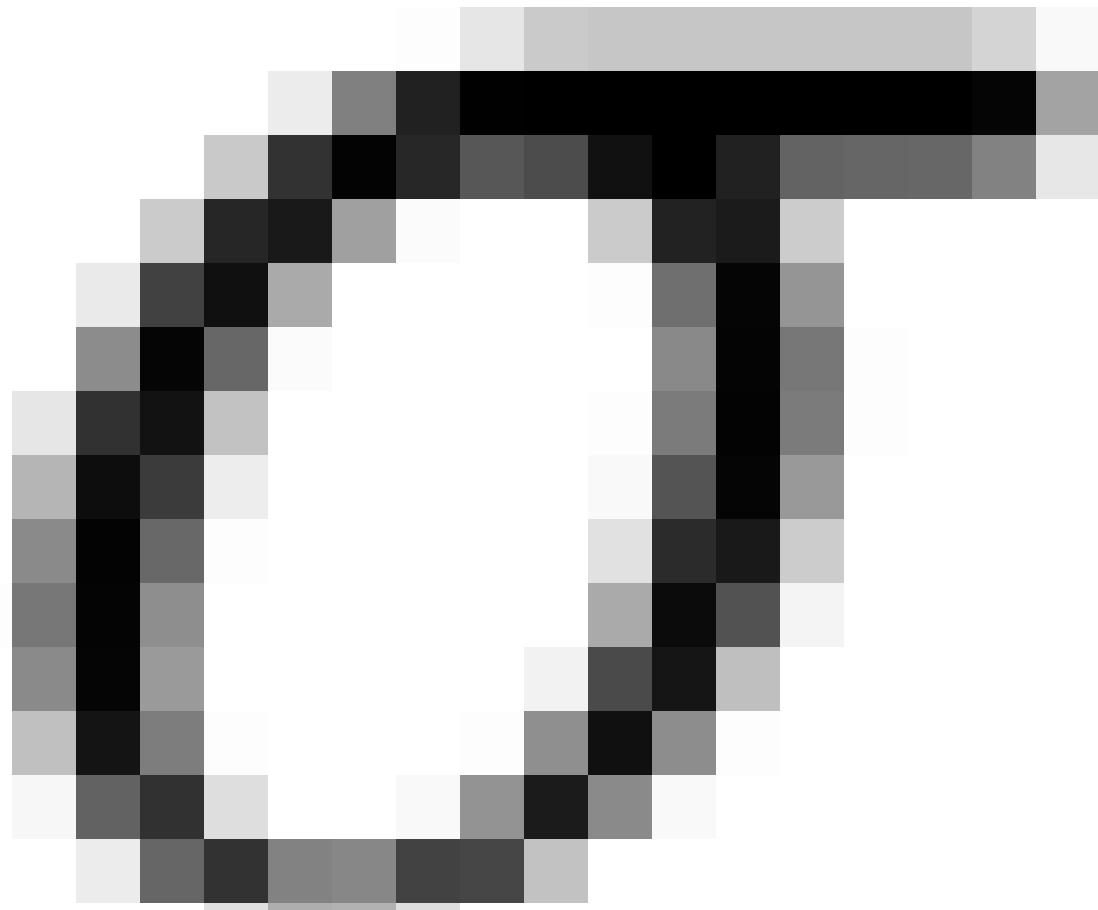





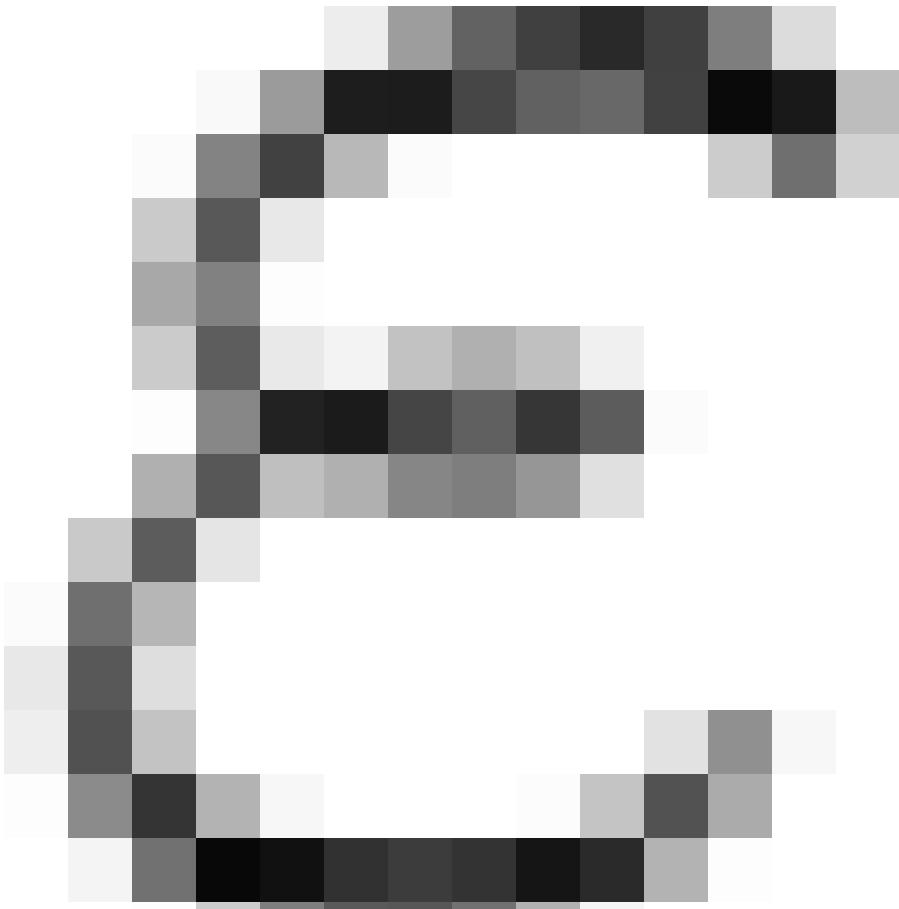


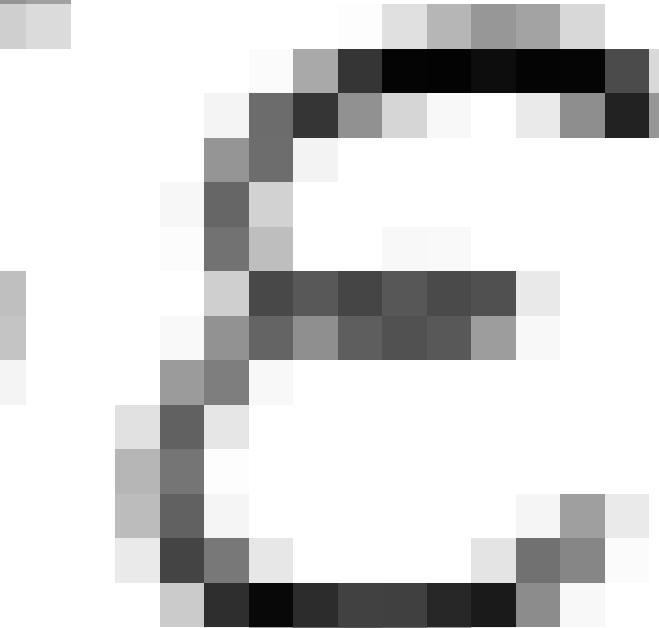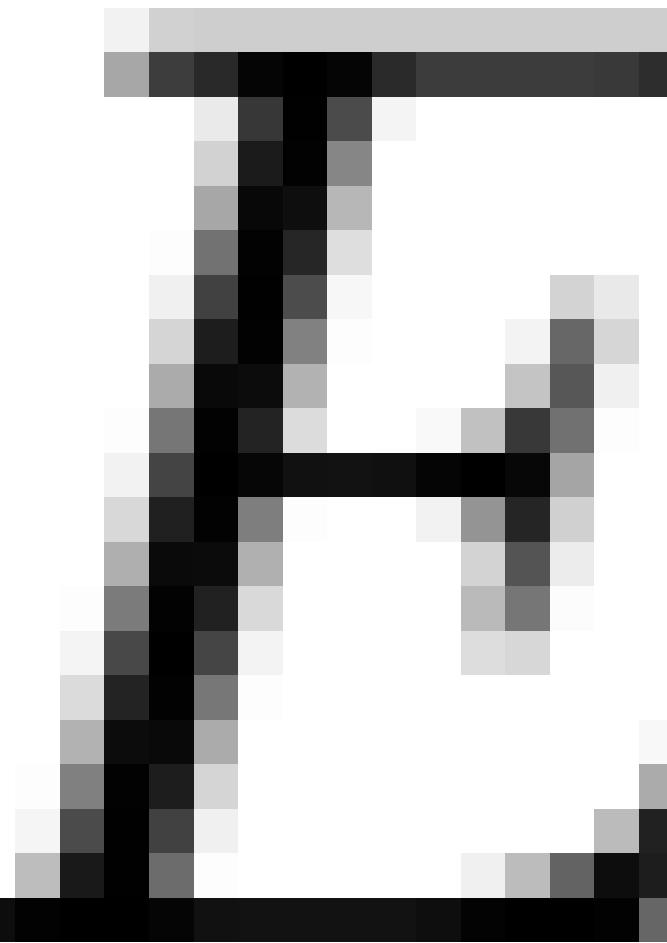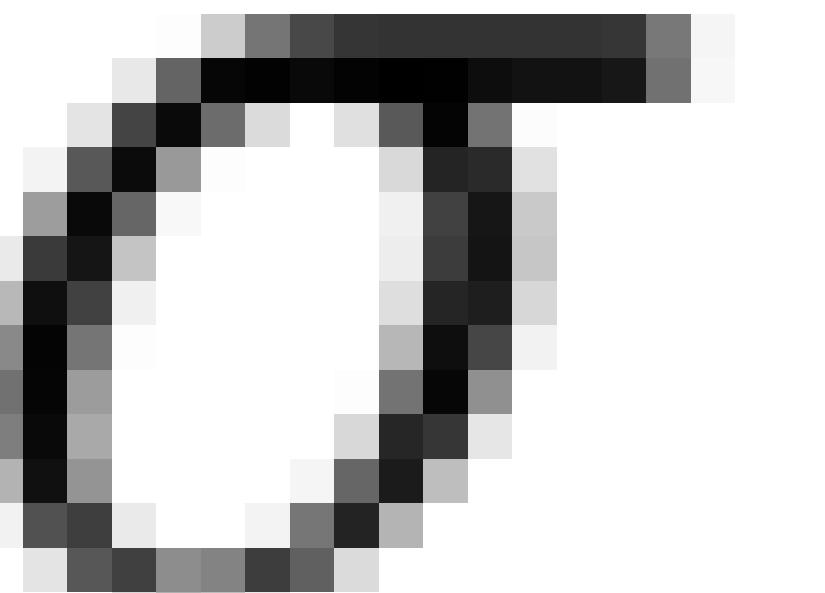

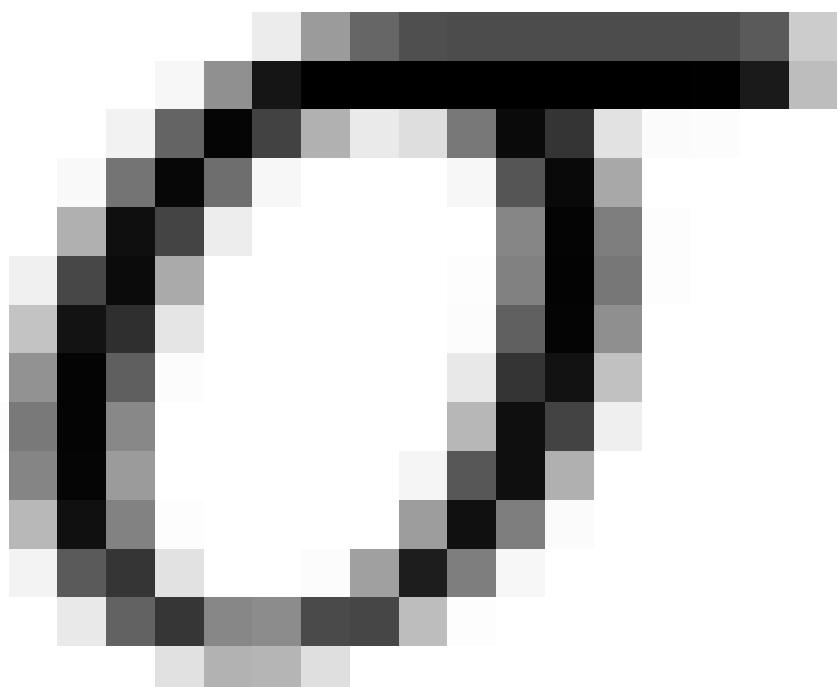

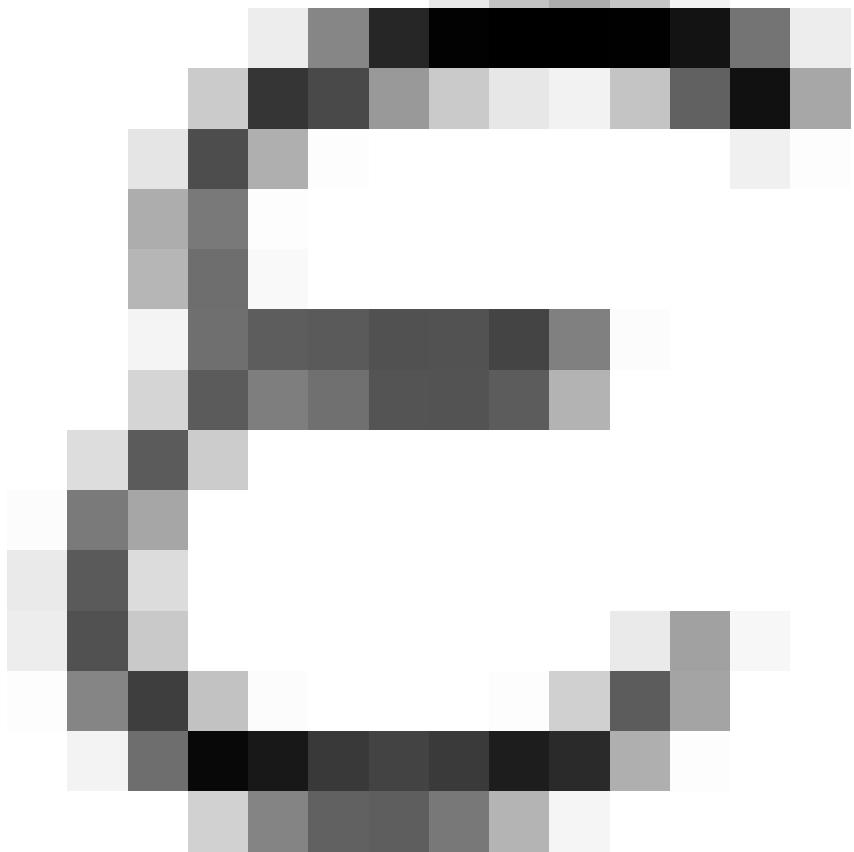


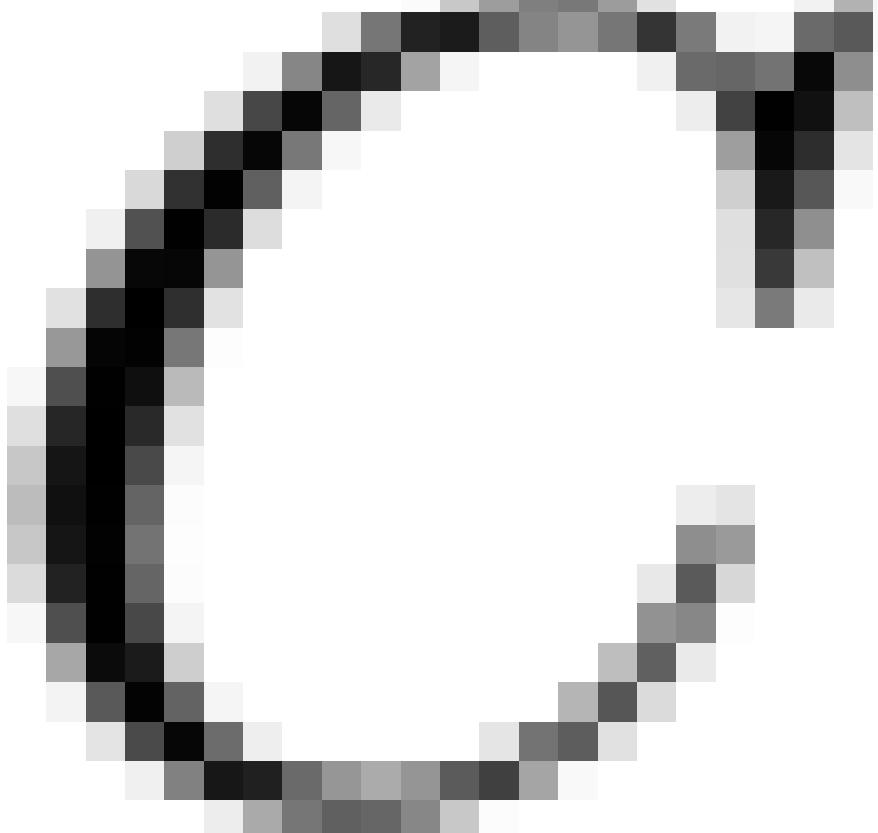

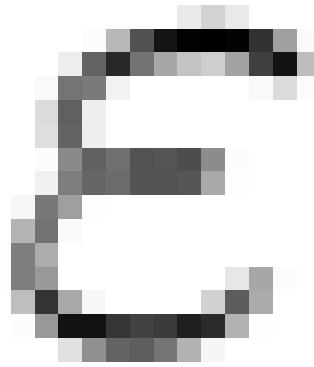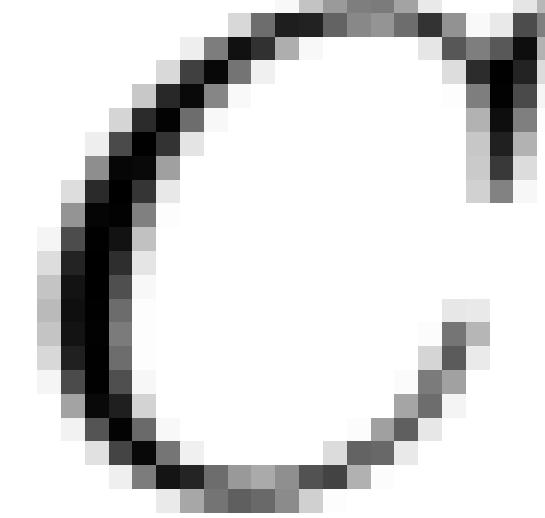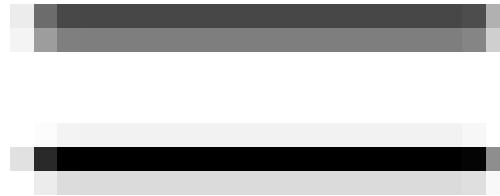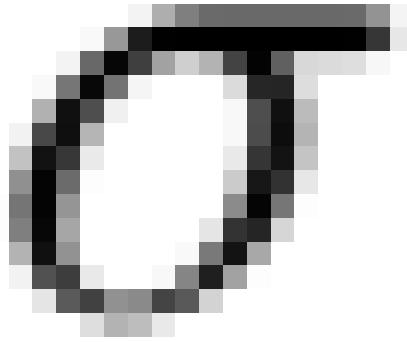

Hooke's law

$$F = k\Delta x$$

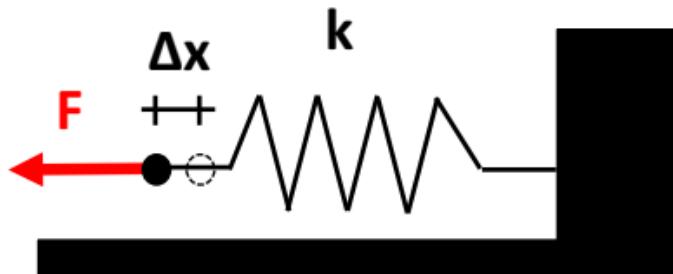





1-D (stress-strain) Hooke's law


$$\sigma = E\varepsilon$$

Generalized Hooke's law

$$\underline{\sigma} = \underline{C}\underline{\varepsilon}$$

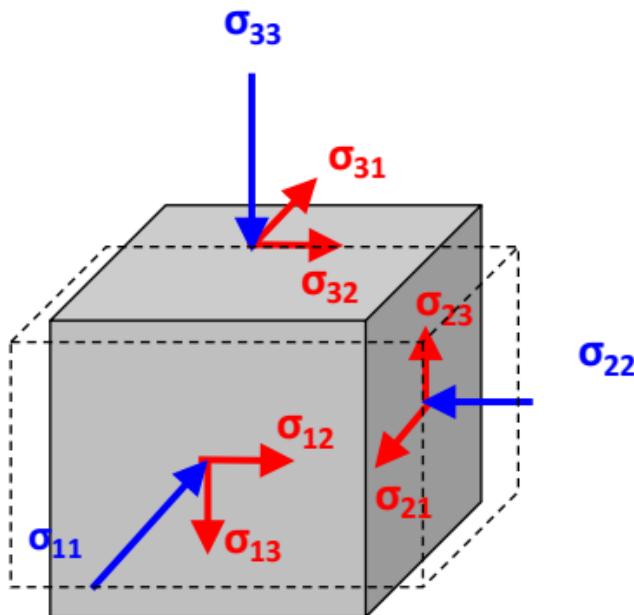

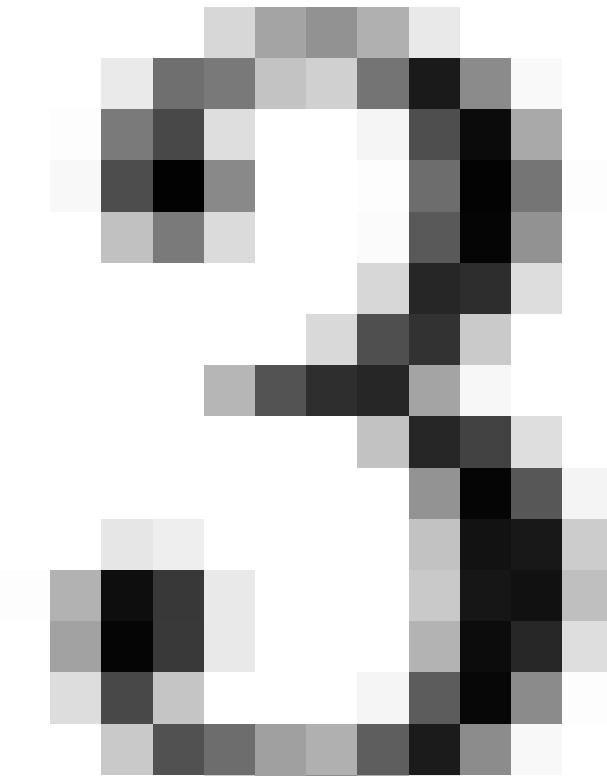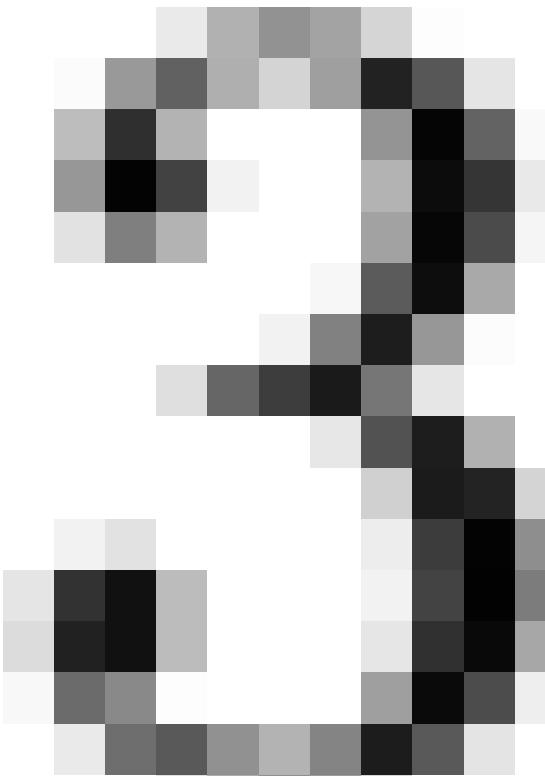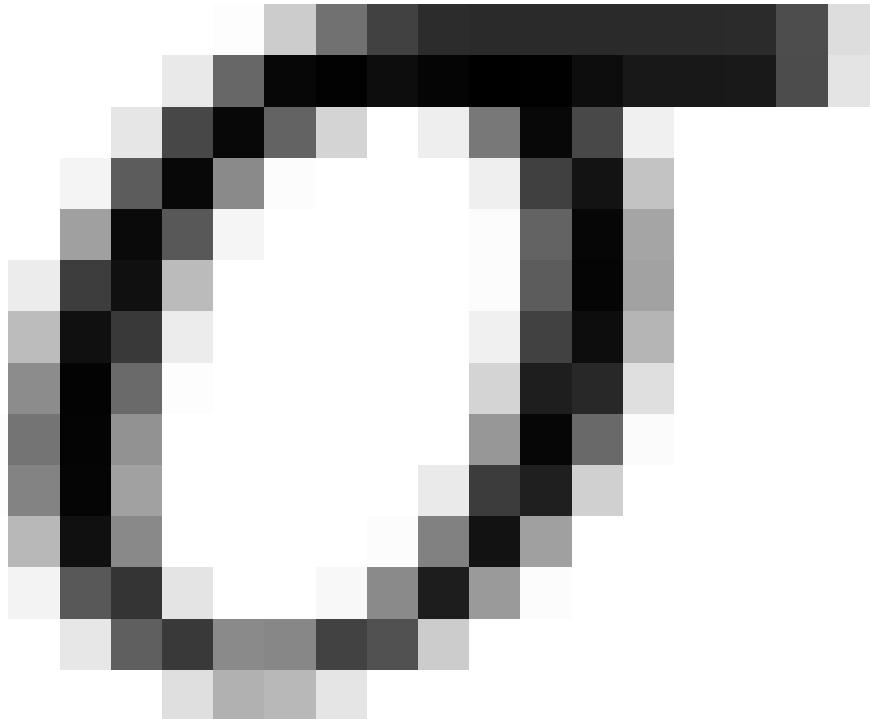

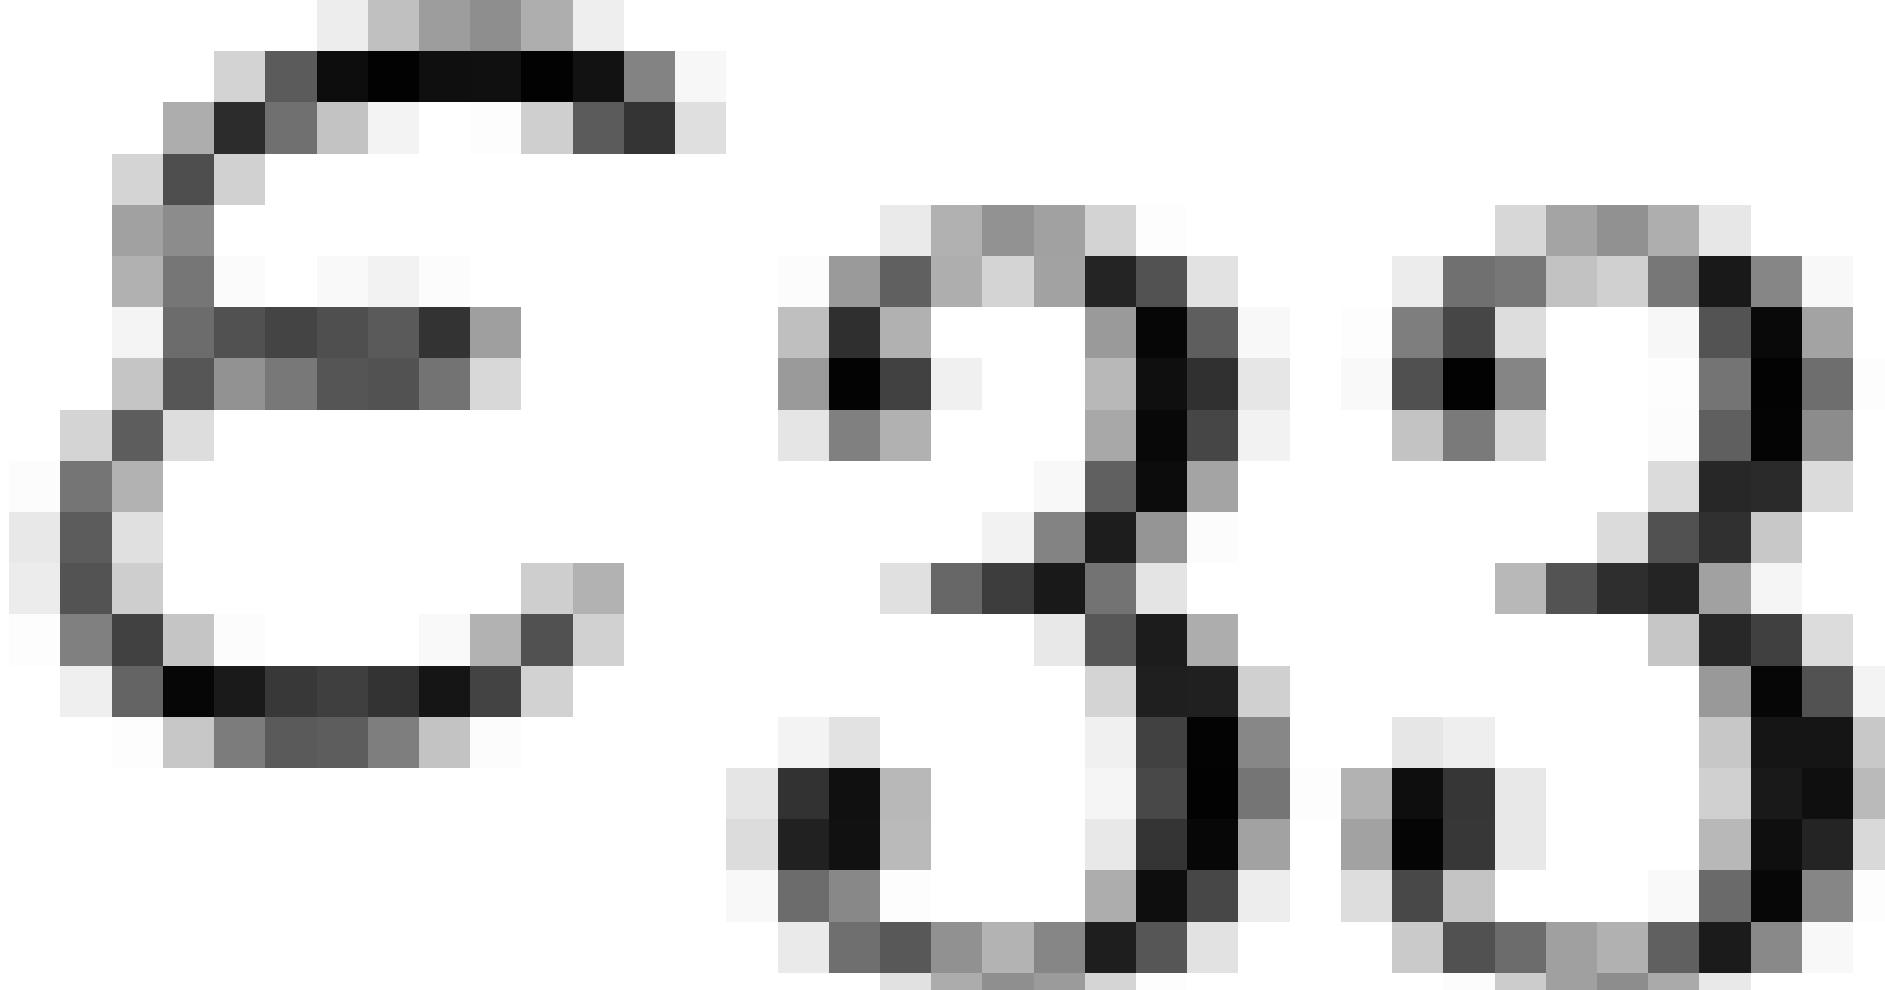

E

—
—

σ33

c33





611


W

—

—

—

633


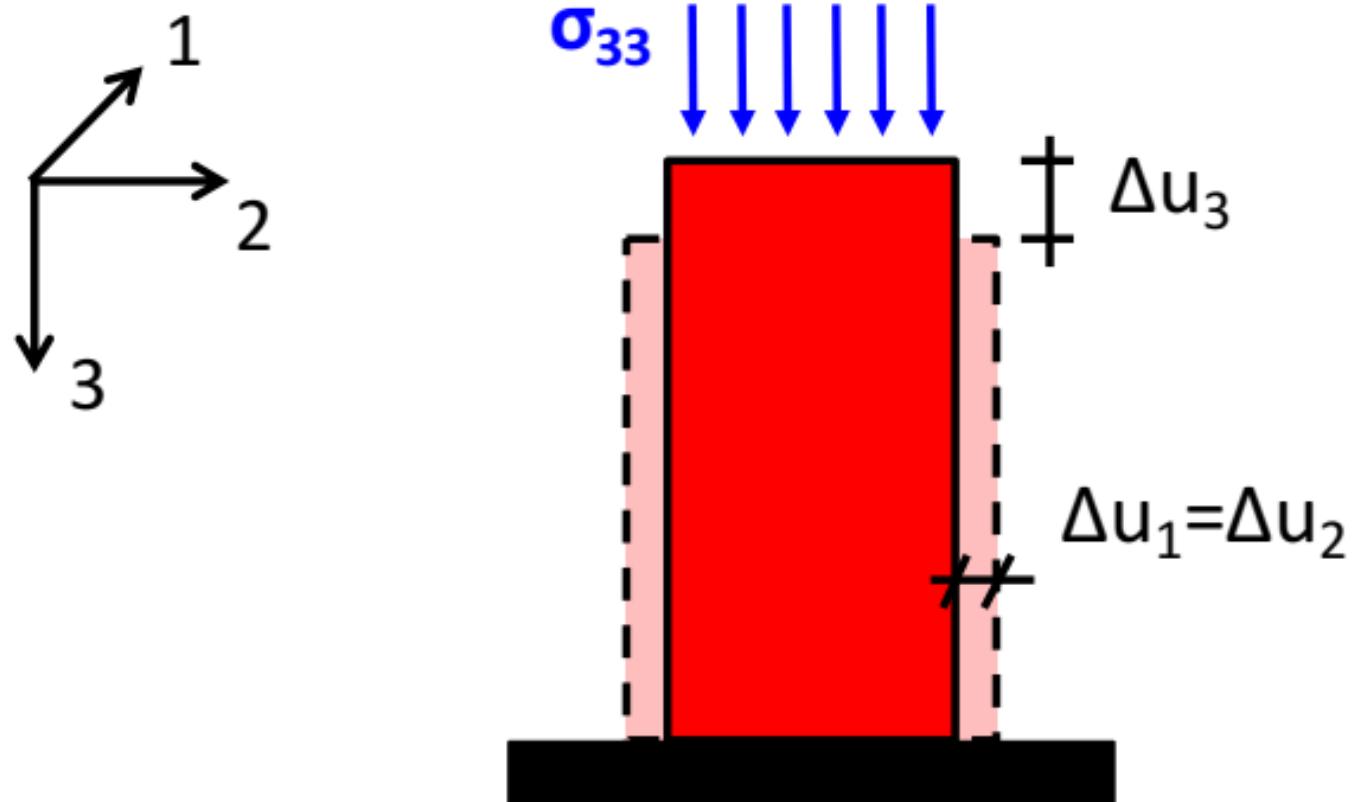


$$E = \frac{\sigma_{33}}{\epsilon_{33}}$$


Young's Modulus

$$\nu = -\frac{\epsilon_{11}}{\epsilon_{33}}$$

Poisson's ratio (nu)

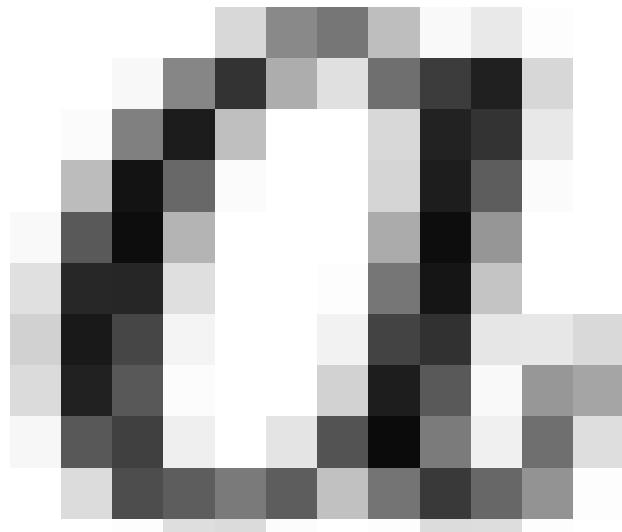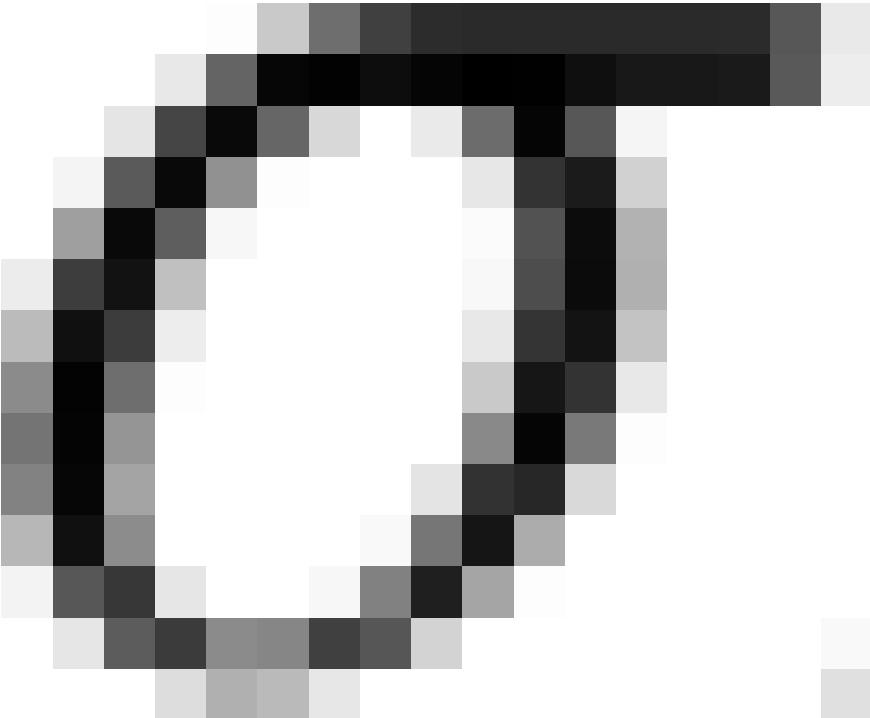



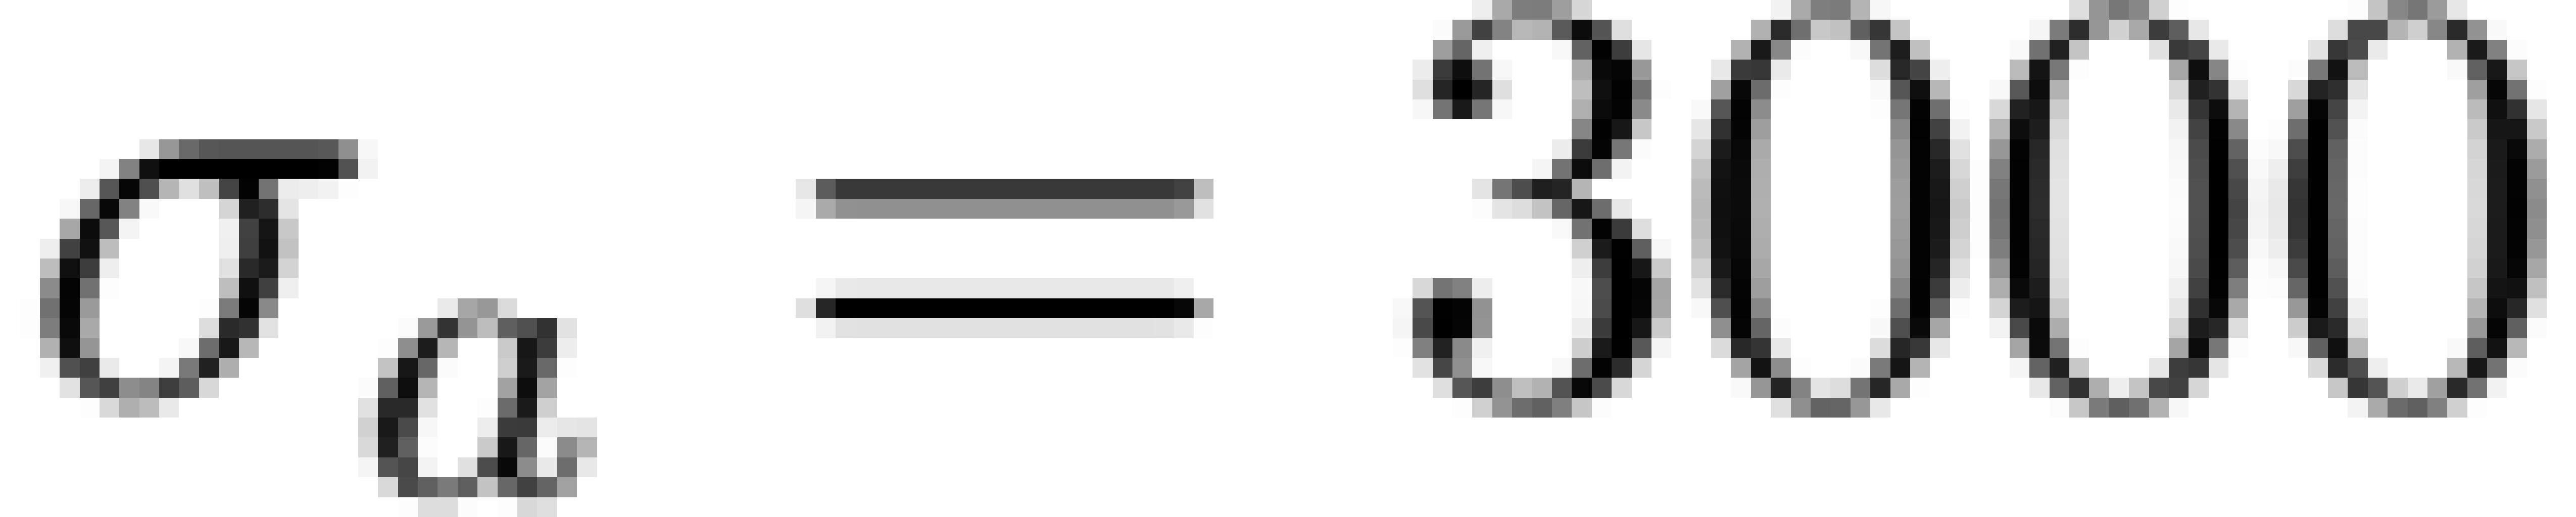




1


30000

145

—


—

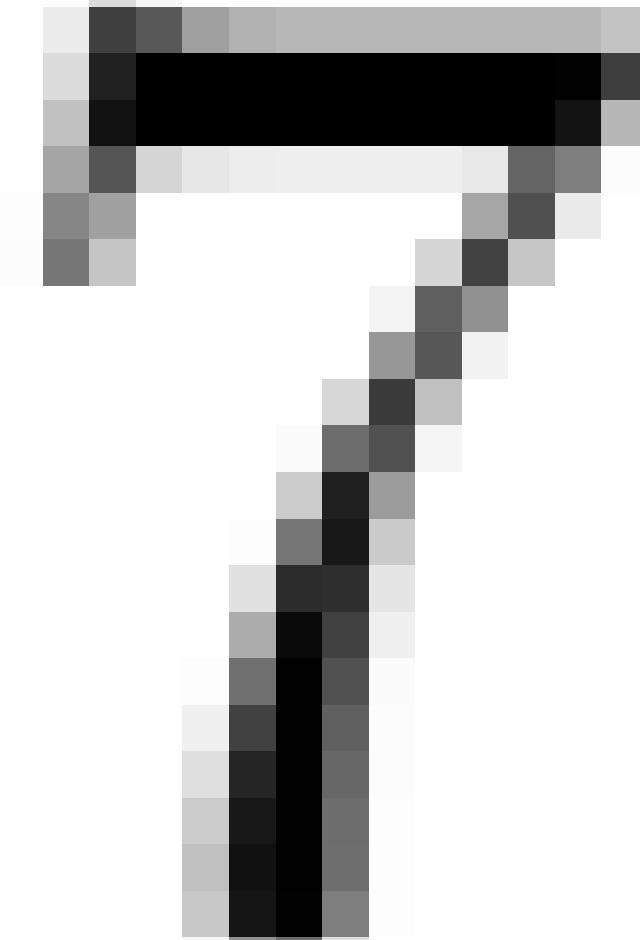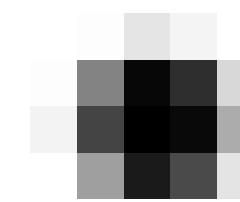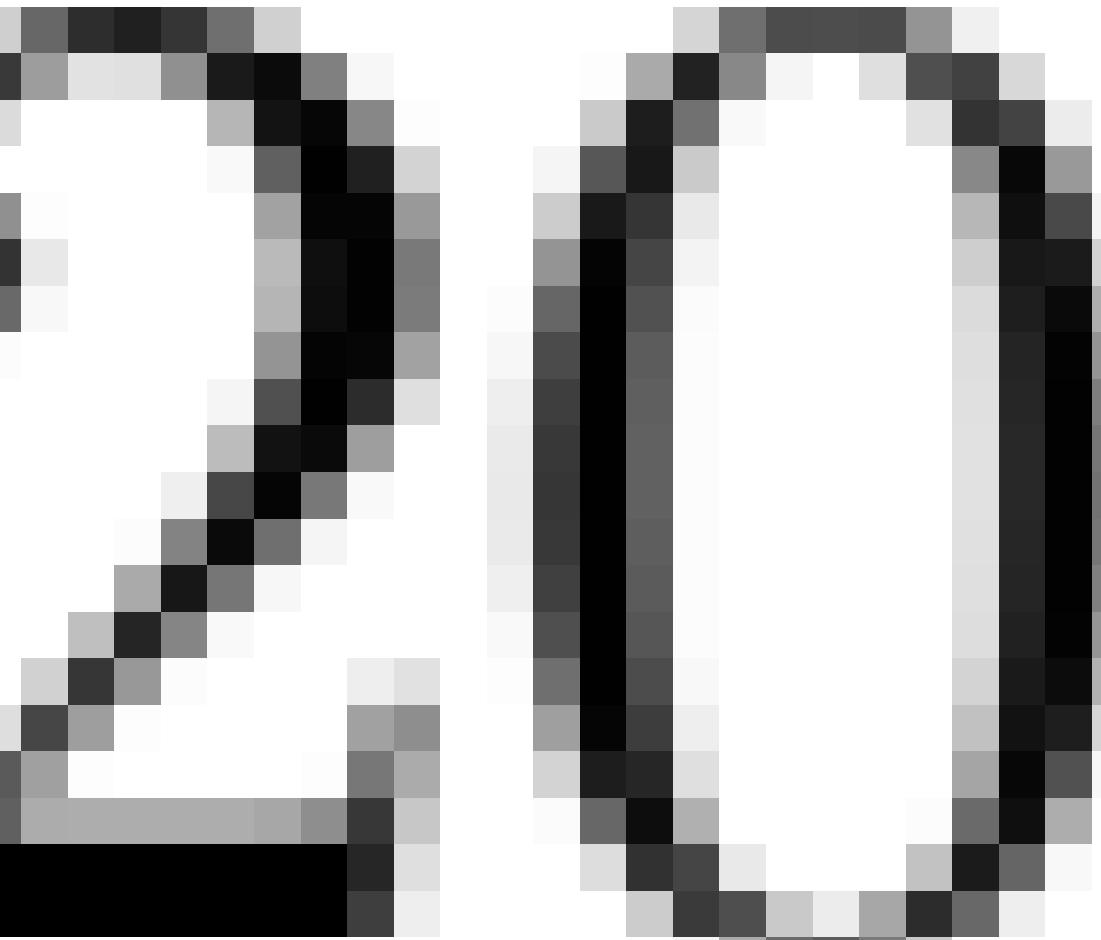



$$\frac{\sigma_a}{E} = \frac{20.7}{100} = 0.207$$

$$0.207 \times 100 \text{ MPa} = 20.7 \text{ MPa}$$



$$\frac{\sigma_a}{E} = \frac{20.7 \text{ MPa}}{100 \times 10^9 \text{ MPa}} = 0.207\%$$



$$\frac{\sigma_a}{E} = \frac{20.7 \text{ MPa}}{50000 \text{ MPa}} = 0.00041$$


$$= 0.041\%$$


$$\left\{ \begin{array}{lcl} \epsilon_{11} & = & +\frac{1}{E}\sigma_{11} - \frac{\nu}{E}\sigma_{22} - \frac{\nu}{E}\sigma_{33} \\ & & \nu \quad \quad \quad 1 \quad \quad \quad \nu \\ \epsilon_{22} & = & -\frac{1}{E}\sigma_{11} + \frac{1}{E}\sigma_{22} - \frac{1}{E}\sigma_{33} \\ & & \nu \quad \quad \quad \nu \quad \quad \quad 1 \\ \epsilon_{33} & = & -\frac{1}{E}\sigma_{11} - \frac{1}{E}\sigma_{22} + \frac{1}{E}\sigma_{33} \end{array} \right.$$









$$\left\{ \begin{array}{l} 2\varepsilon_{12} = \frac{1}{G} \sigma_{12} \\ \\ 2\varepsilon_{13} = \frac{1}{G} \sigma_{13} \\ \\ 2\varepsilon_{23} = \frac{1}{G} \sigma_{23} \end{array} \right.$$

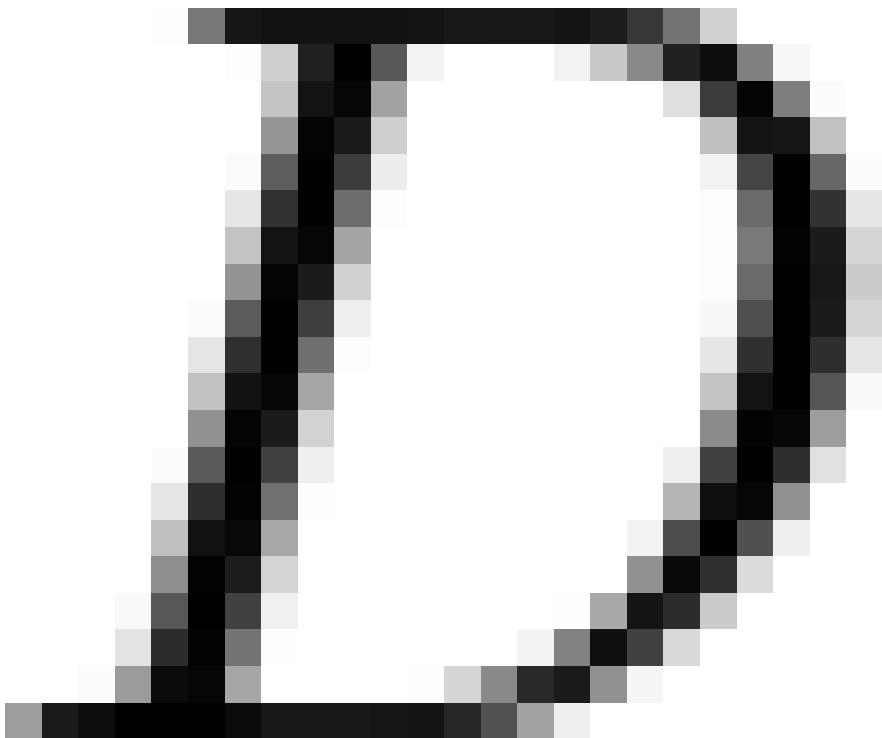

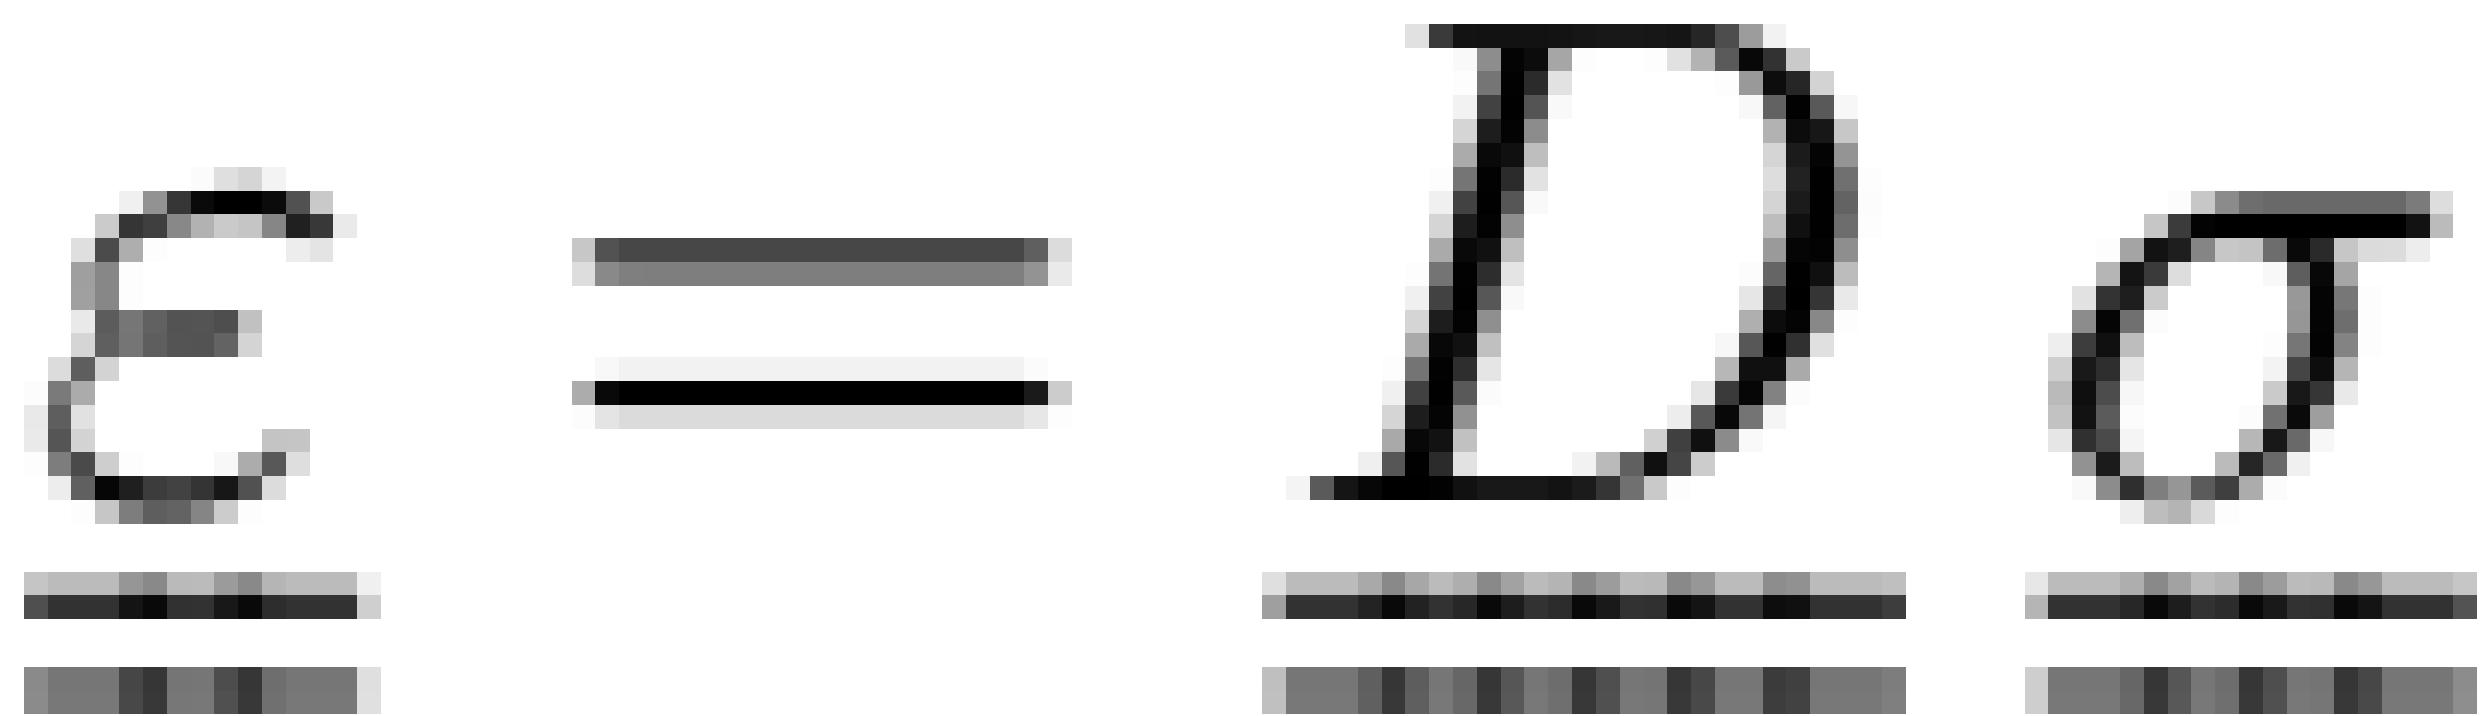

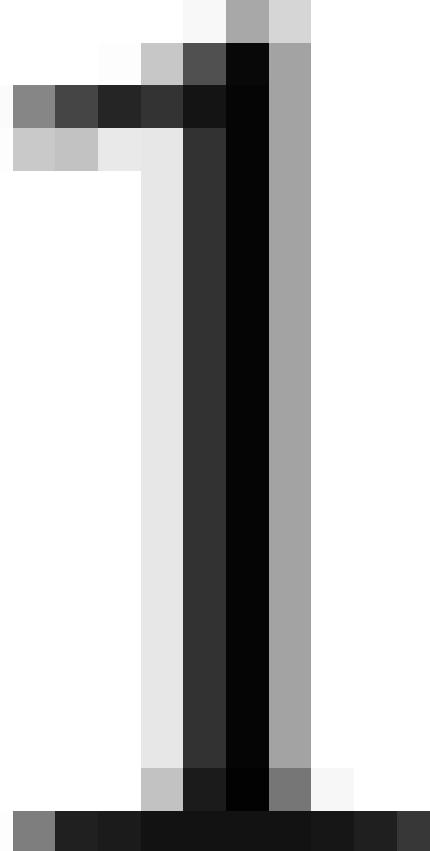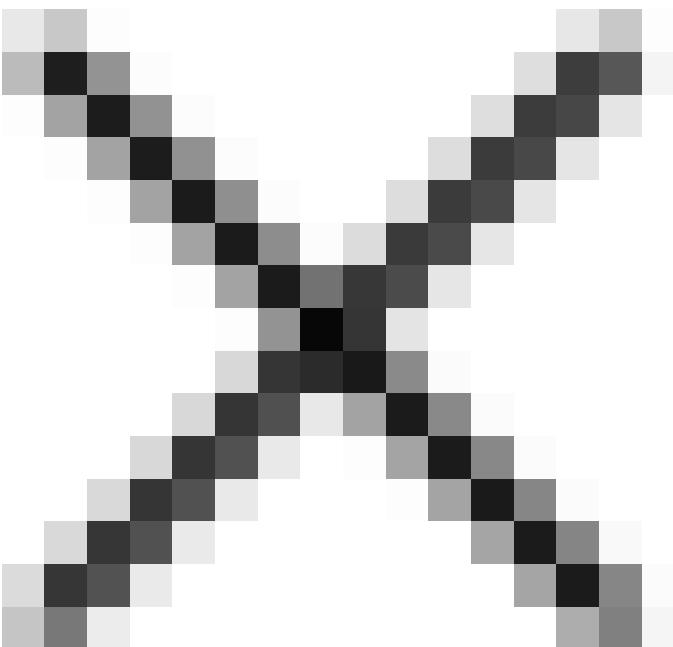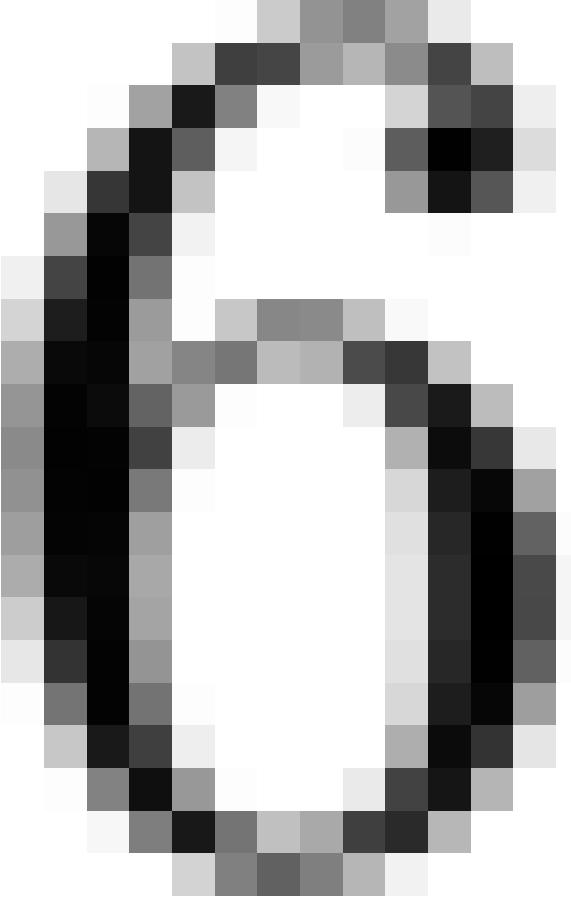

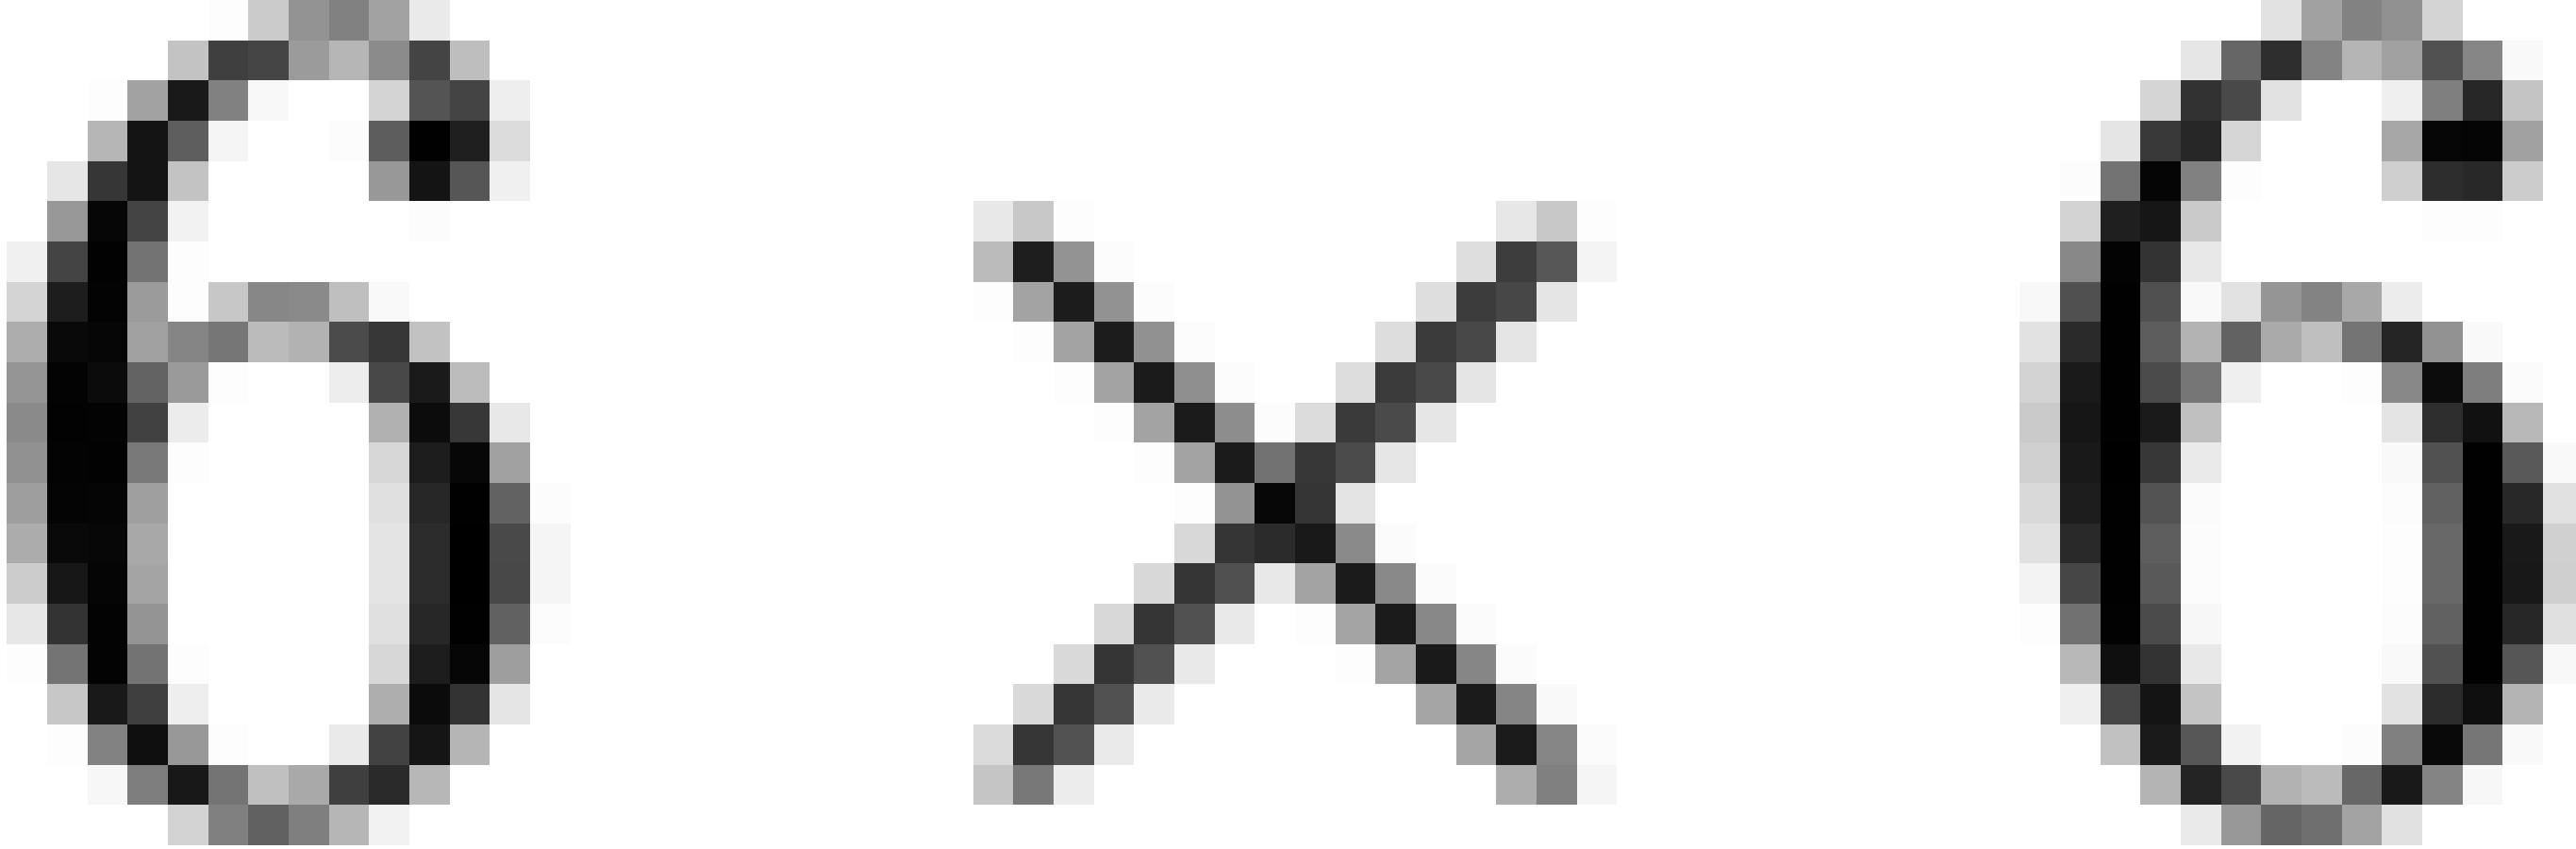



$$\begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{23} \\ 2\varepsilon_{13} \\ 2\varepsilon_{12} \end{bmatrix} = \begin{bmatrix} 1 & -\nu & -\nu & 0 & 0 & 0 \\ \frac{1}{E} & -\frac{\nu}{E} & -\frac{\nu}{E} & 0 & 0 & 0 \\ \nu & 1 & \nu & 0 & 0 & 0 \\ -\frac{\nu}{E} & +\frac{1}{E} & -\frac{\nu}{E} & 0 & 0 & 0 \\ \nu & \nu & 1 & 0 & 0 & 0 \\ -\frac{1}{E} & -\frac{\nu}{E} & +\frac{1}{E} & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{23} \\ \sigma_{13} \\ \sigma_{12} \end{bmatrix}$$






$$\underline{\underline{\epsilon}} = \begin{bmatrix} -\frac{v}{E}\sigma_{33}, -\frac{v}{E}\sigma_{33}, \frac{1}{E}\sigma_{33}, 0, 0, 0 \end{bmatrix}^T$$

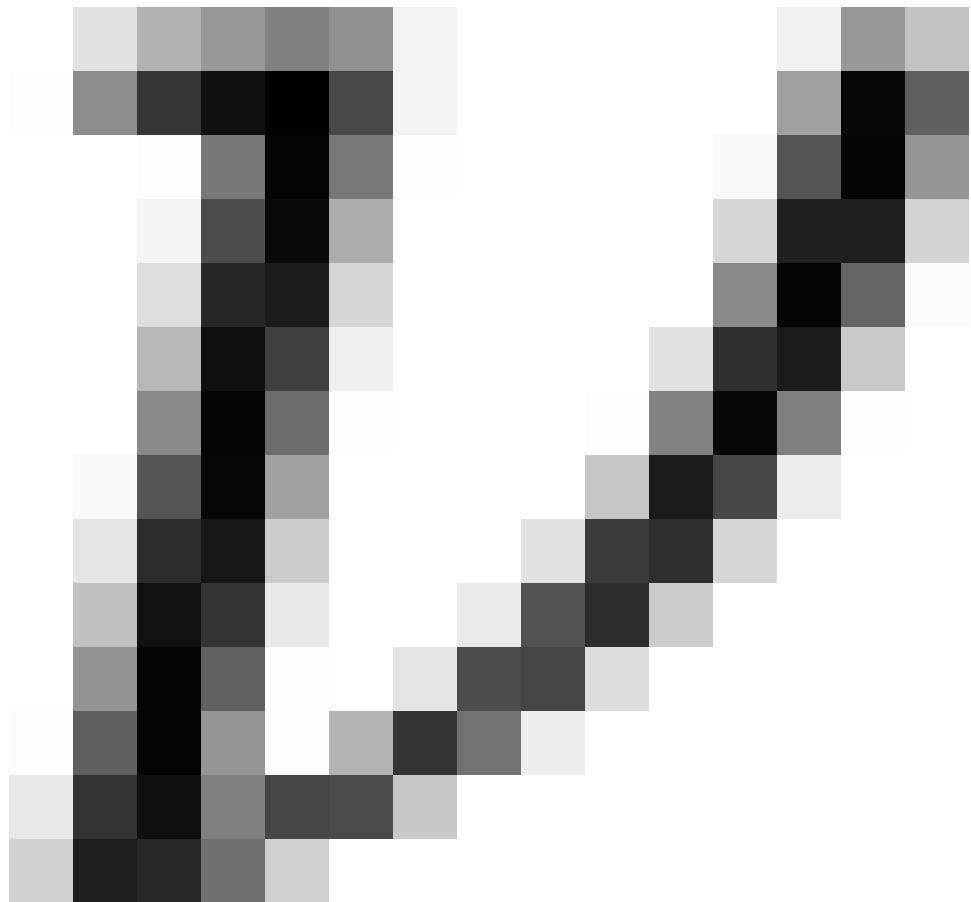

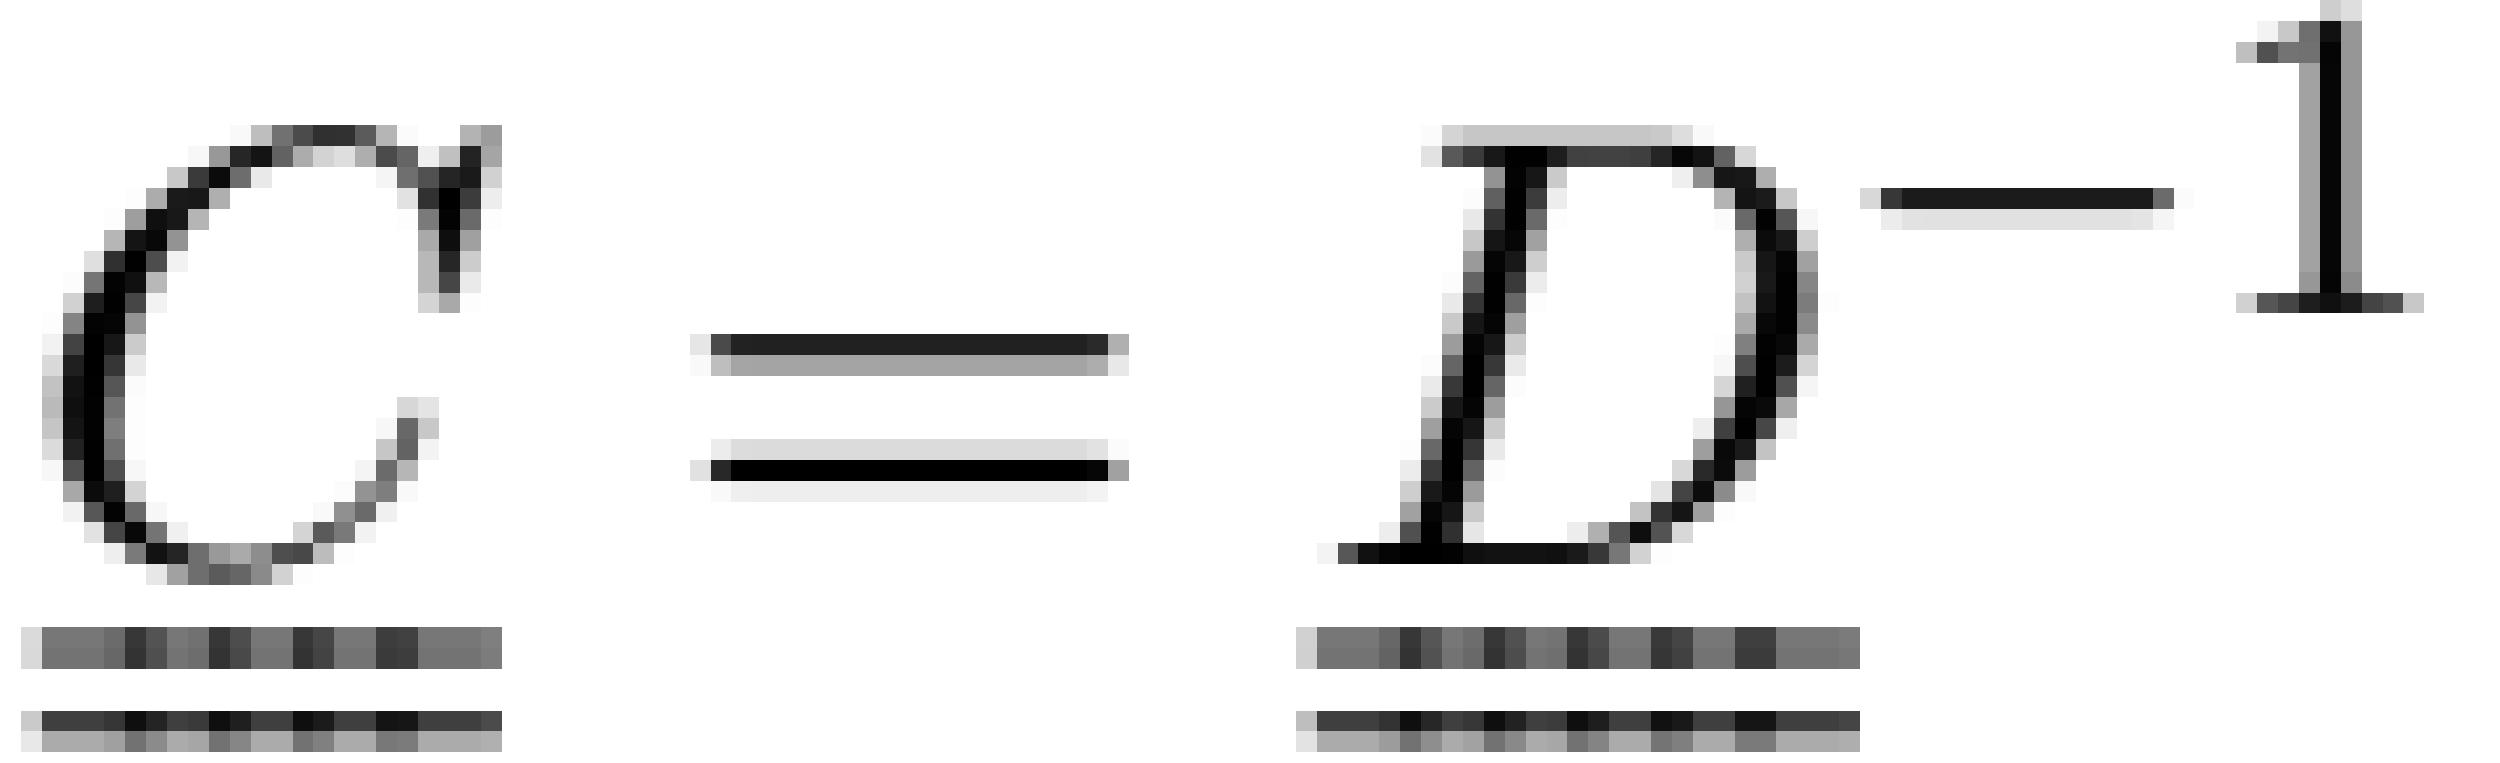

$$\begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{23} \\ \sigma_{13} \\ \sigma_{12} \end{bmatrix} = \frac{E}{(1+\nu)(1-2\nu)} \begin{bmatrix} 1-\nu & \nu & \nu & 0 & 0 & 0 \\ \nu & 1-\nu & \nu & 0 & 0 & 0 \\ \nu & \nu & 1-\nu & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} \end{bmatrix} \begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{23} \\ 2\varepsilon_{13} \\ 2\varepsilon_{12} \end{bmatrix}$$

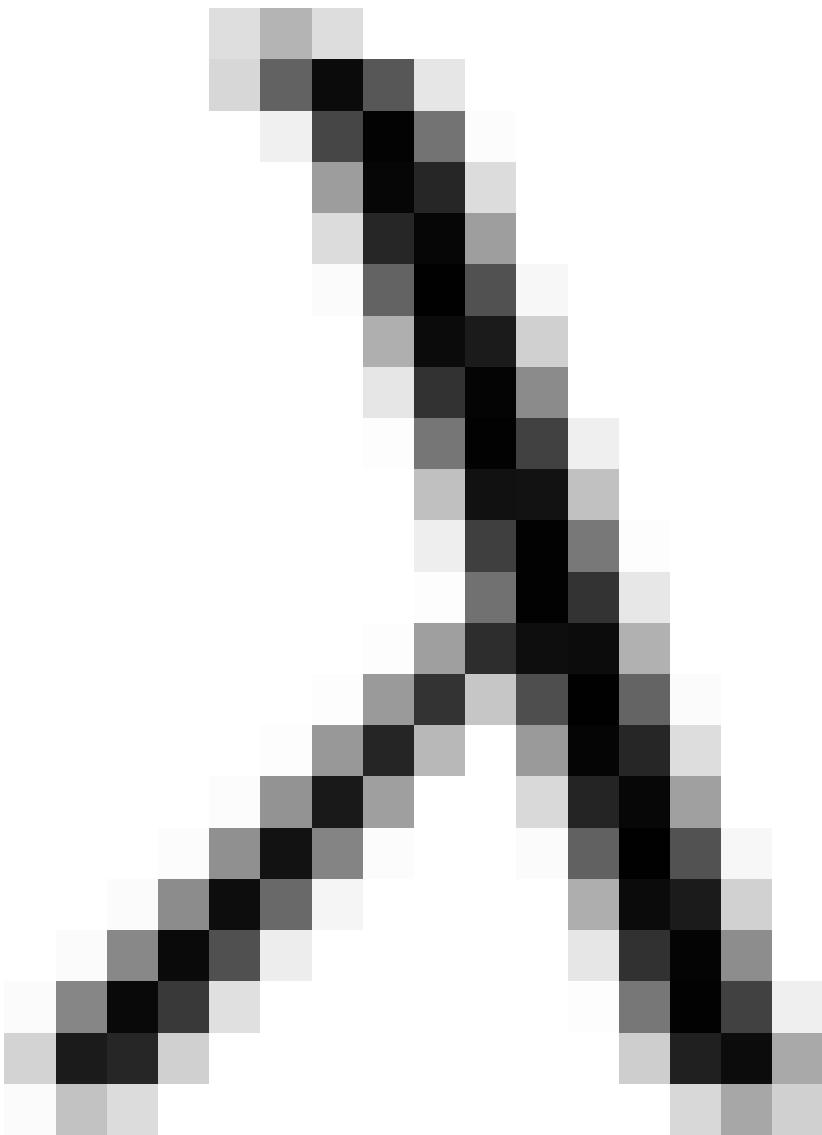

$$\sigma_{11} = \frac{E}{(1+\nu)(1-2\nu)} [(1-\nu)e_{11} + \nu e_{22} + \nu e_{33}]$$

$$\sigma_{11} = \frac{\nu E}{(1+\nu)(1-2\nu)} (\epsilon_{11} + \epsilon_{22} + \epsilon_{33}) + \frac{\nu E}{(1+\nu)(1-2\nu)} \left(\frac{1-\nu}{1+\nu} \epsilon_{11} - \frac{1+\nu}{1-\nu} \epsilon_{22} \right)$$

λ



$$(1 + \nu)$$


$$(1 - \nu)$$



$$2\nu$$


νE


$$2\mu = \frac{\nu E}{(1+\nu)(1-2\nu)} = \frac{-1}{(1+\nu)} + \frac{1-\nu}{(1+\nu)}$$

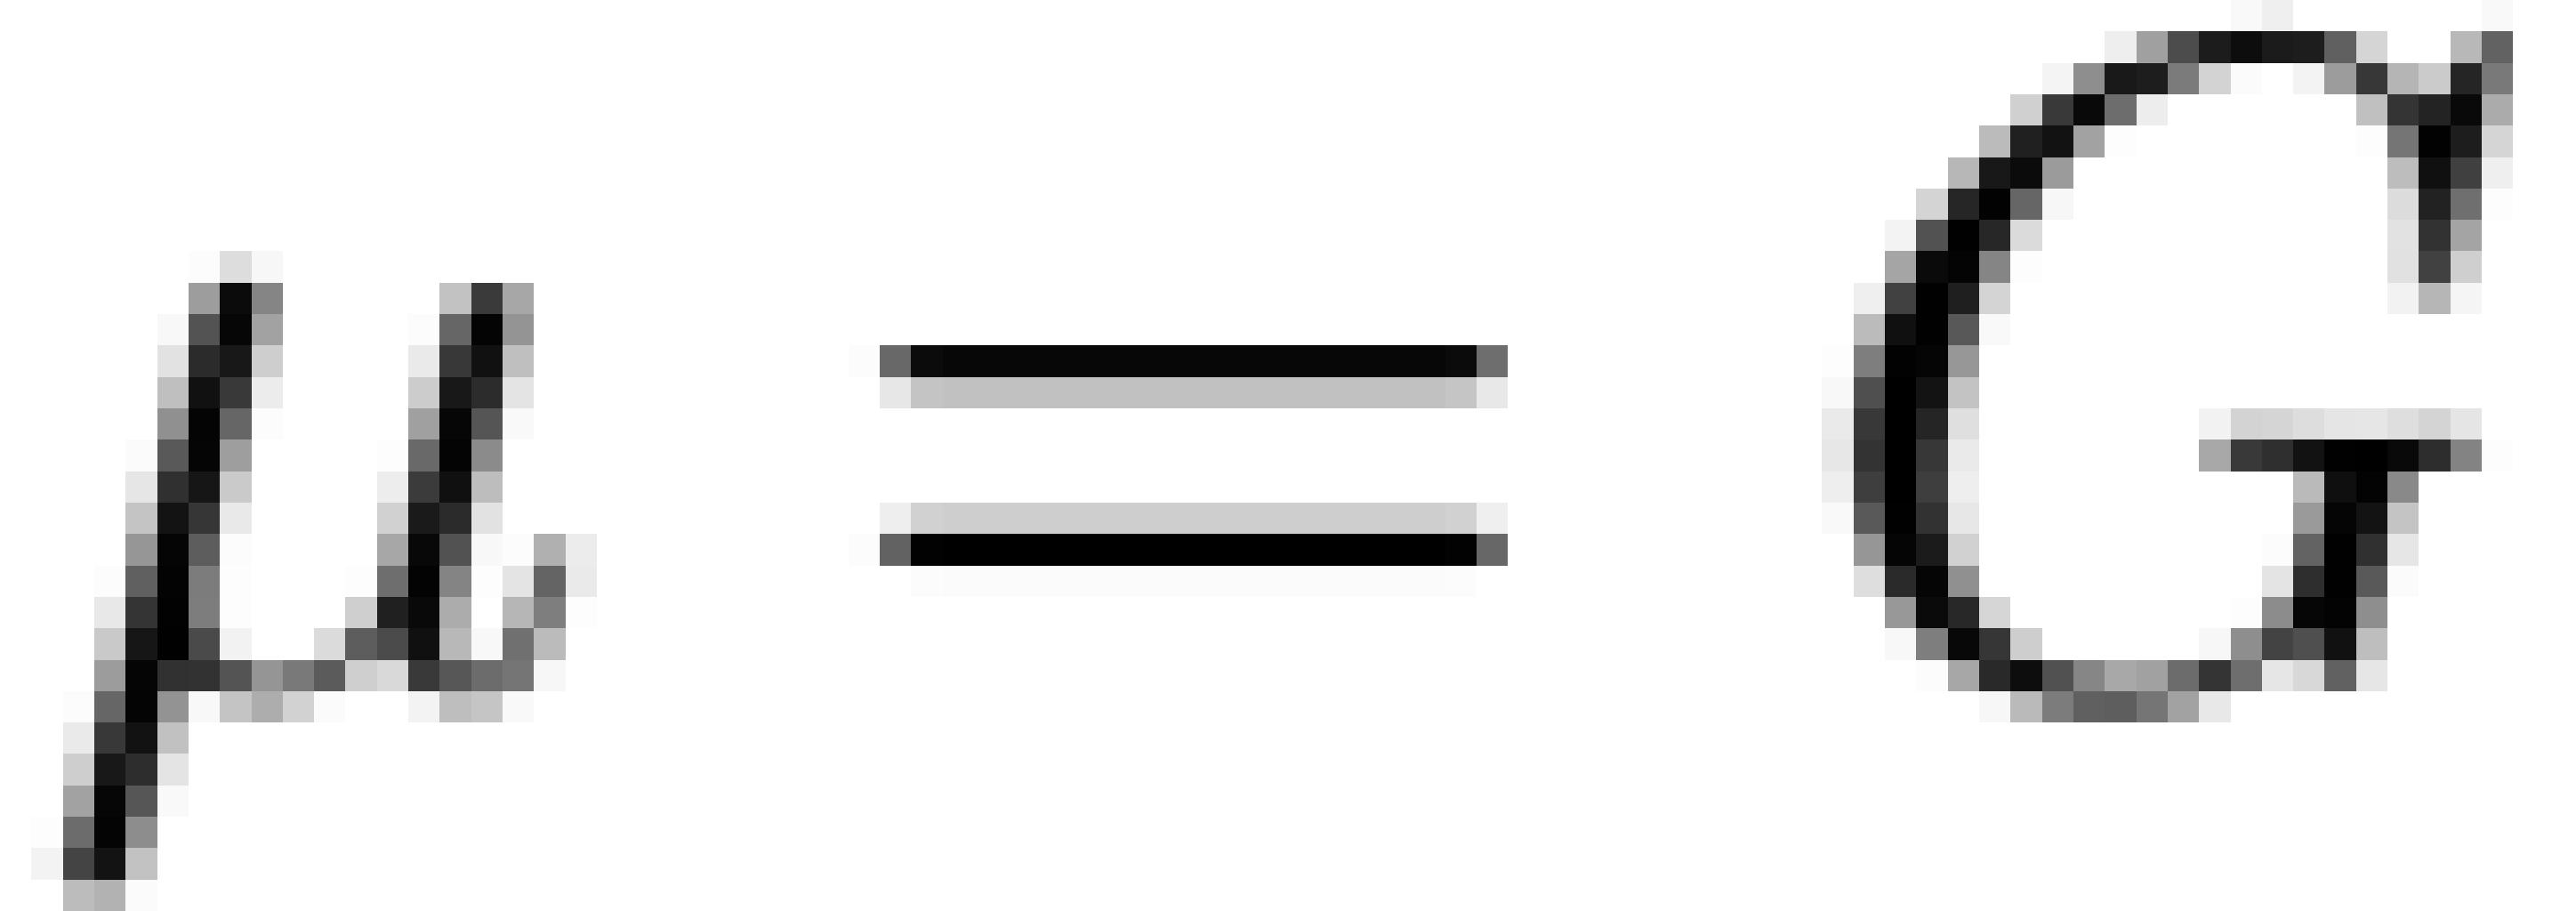


$$\left\{ \begin{array}{lcl} \sigma_{11} & = & (\lambda + 2\mu) \varepsilon_{11} + \lambda \varepsilon_{22} + \lambda \varepsilon_{33} \\ \sigma_{22} & = & \lambda \varepsilon_{11} + (\lambda + 2\mu) \varepsilon_{22} + \lambda \varepsilon_{33} \\ \sigma_{33} & = & \lambda \varepsilon_{11} + \lambda \varepsilon_{22} + (\lambda + 2\mu) \varepsilon_{33} \\ \sigma_{23} & = & 2\mu \varepsilon_{23} \\ \sigma_{13} & = & 2\mu \varepsilon_{13} \\ \sigma_{12} & = & 2\mu \varepsilon_{12} \end{array} \right. .$$


$$\begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{23} \\ \sigma_{13} \\ \sigma_{12} \end{bmatrix} = \begin{bmatrix} \lambda + 2\mu & \lambda & \lambda & 0 & 0 & 0 \\ \lambda & \lambda + 2\mu & \lambda & 0 & 0 & 0 \\ \lambda & \lambda & \lambda + 2\mu & 0 & 0 & 0 \\ 0 & 0 & 0 & \mu & 0 & 0 \\ 0 & 0 & 0 & 0 & \mu & 0 \\ 0 & 0 & 0 & 0 & 0 & \mu \end{bmatrix} \begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{23} \\ 2\varepsilon_{13} \\ 2\varepsilon_{12} \end{bmatrix}$$

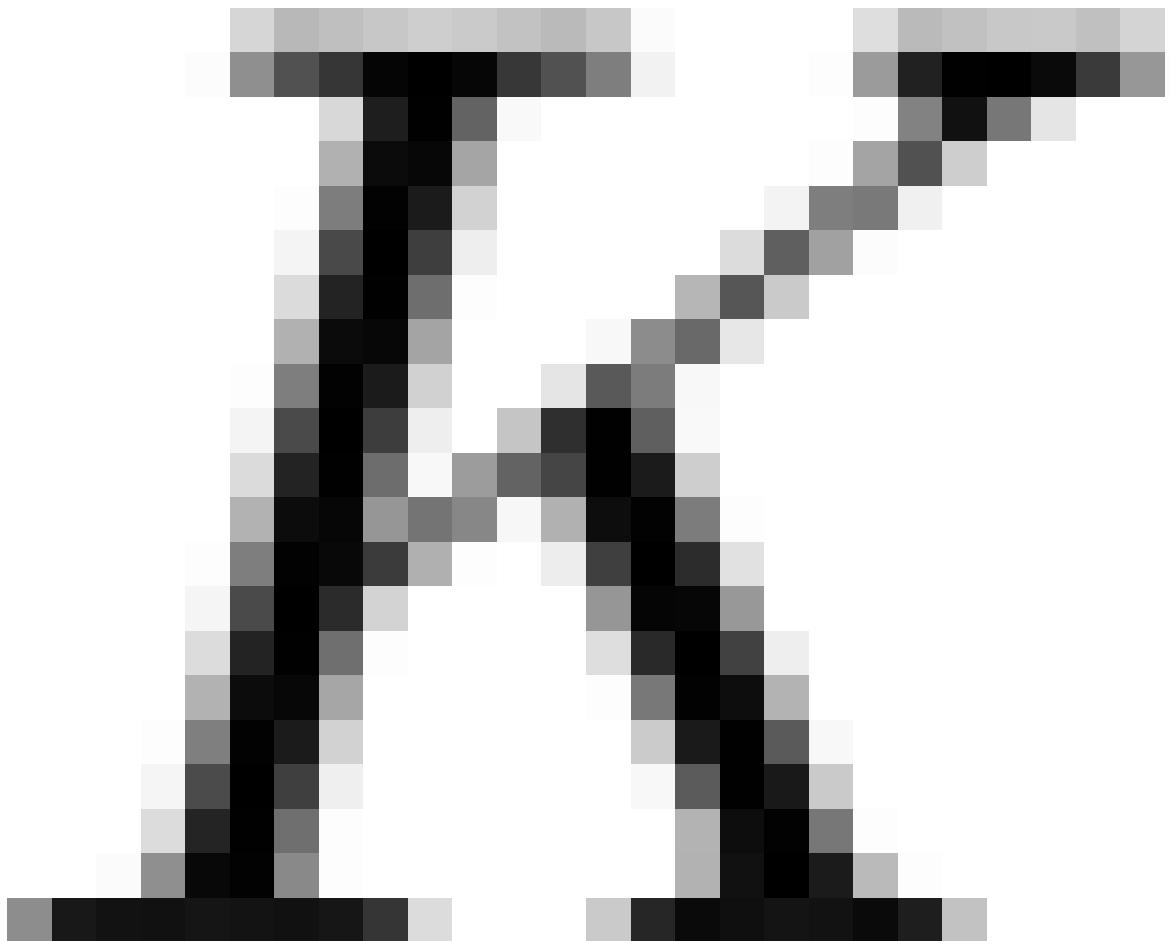


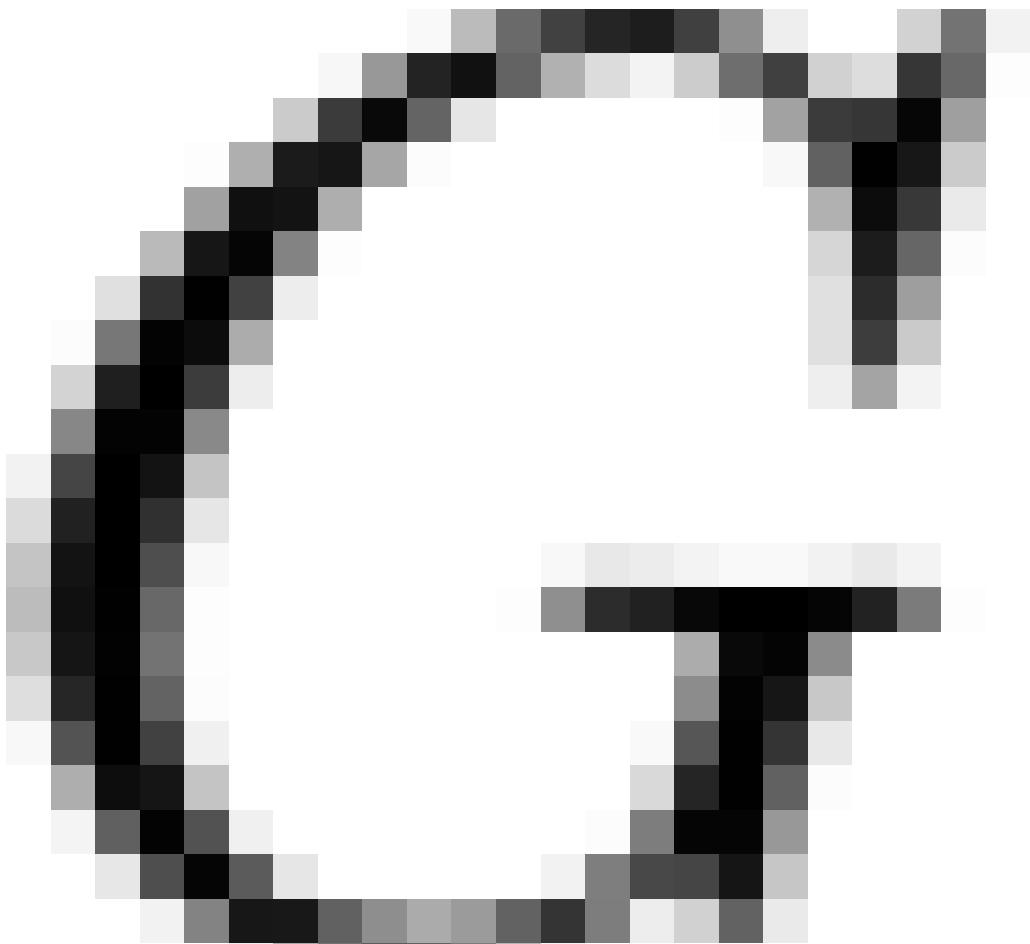





	(E, v)	(K, G)
$G =$	$\frac{E}{2(1+v)}$	<u>Shear modulus</u> (also noted as μ , S-wave)
$M =$	$\frac{(1-v)E}{(1+v)(1-2v)}$	<u>Constrained modulus</u> (uniaxial compaction, P-wave)
$\lambda =$	$\frac{vE}{(1+v)(1-2v)}$	<u>Lamé first parameter</u> (volumetric strain component)
$K =$	$\frac{E}{3(1-2v)}$	<u>Bulk modulus</u> (relates volumetric strain and isotropic stress)

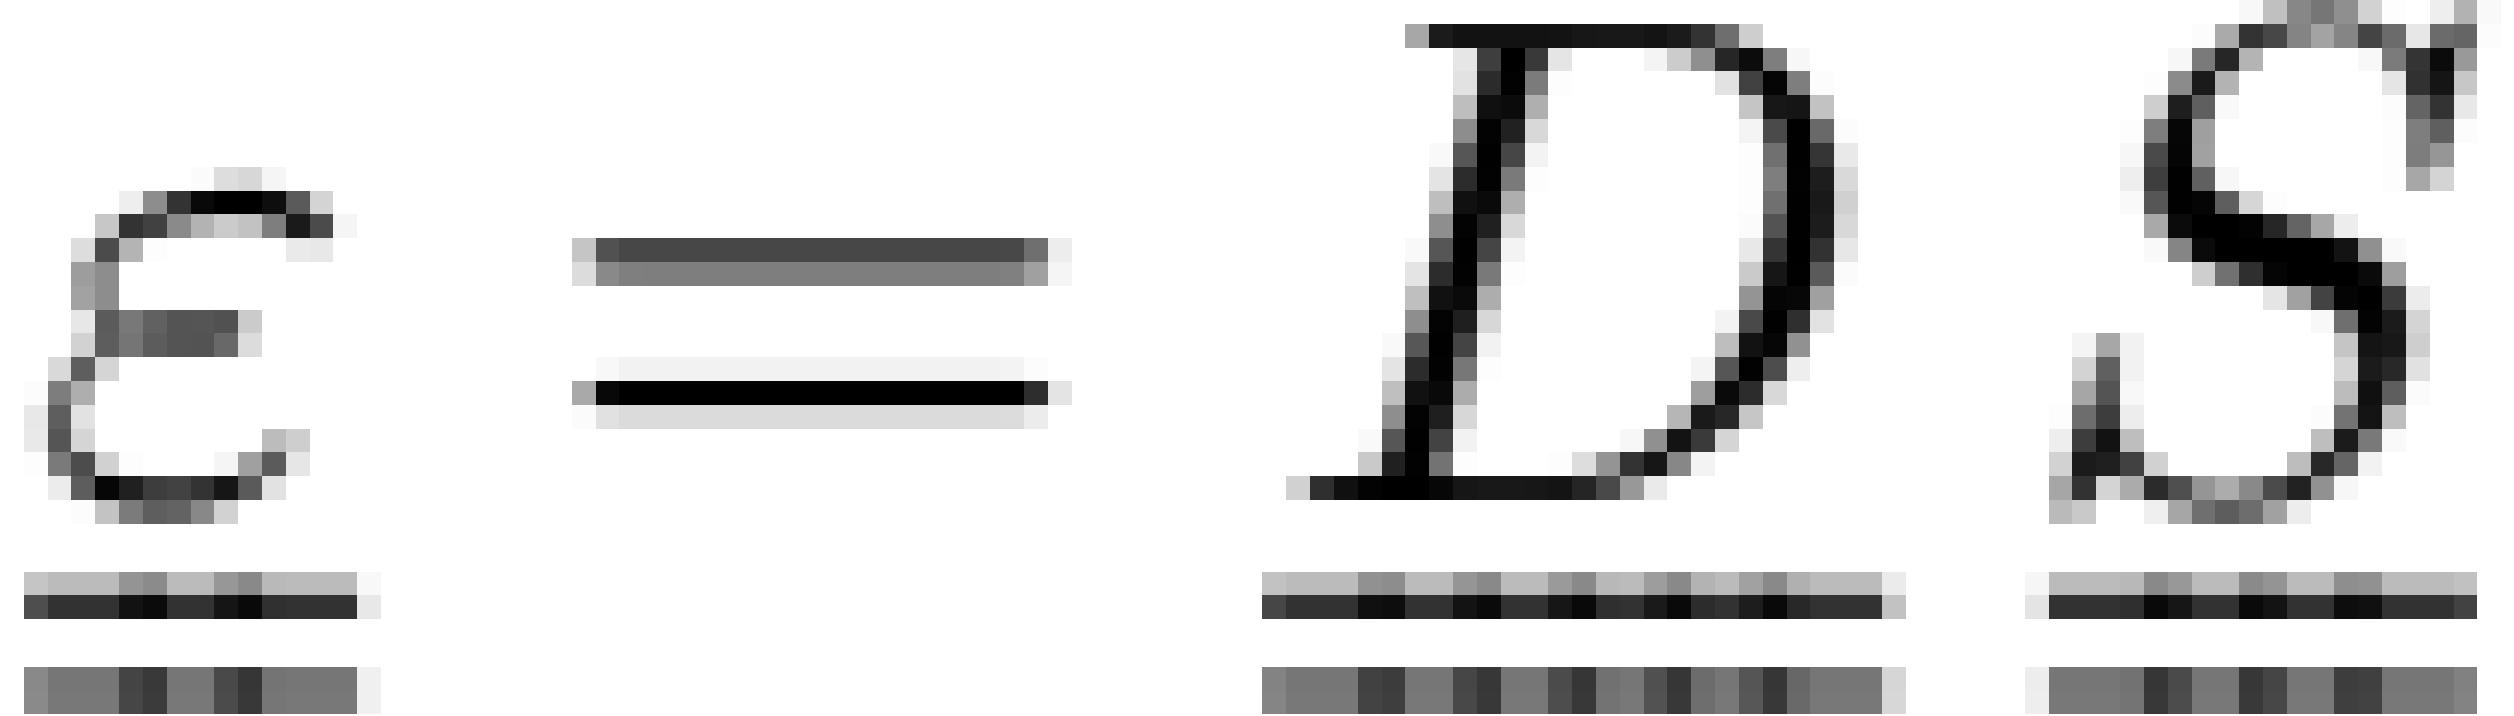

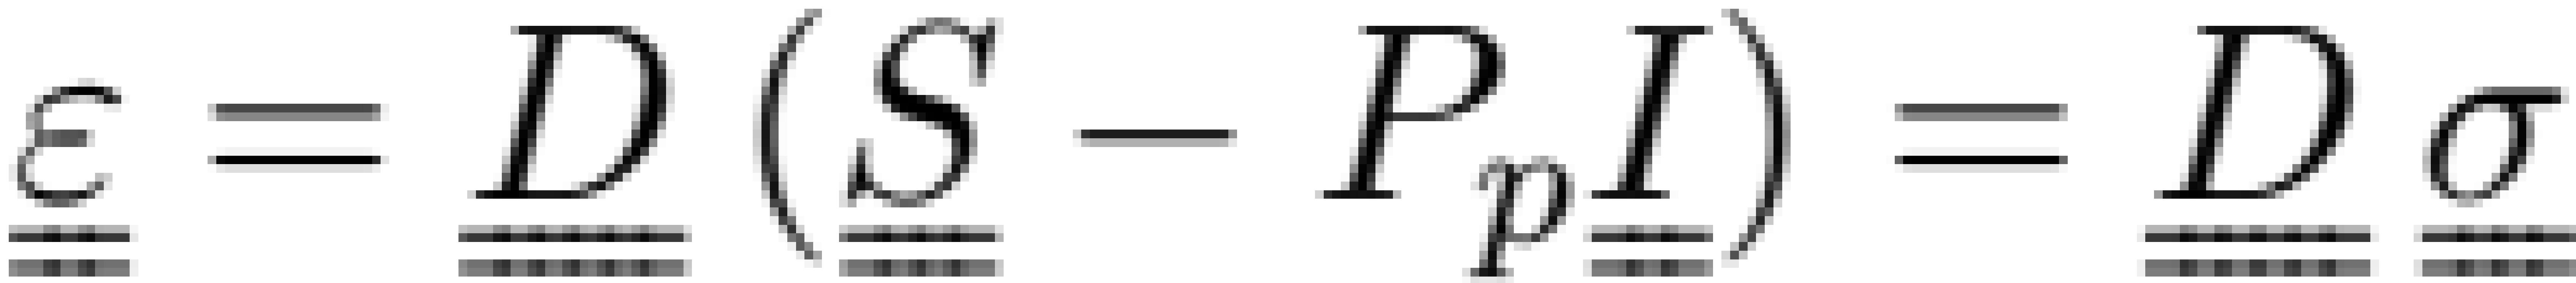

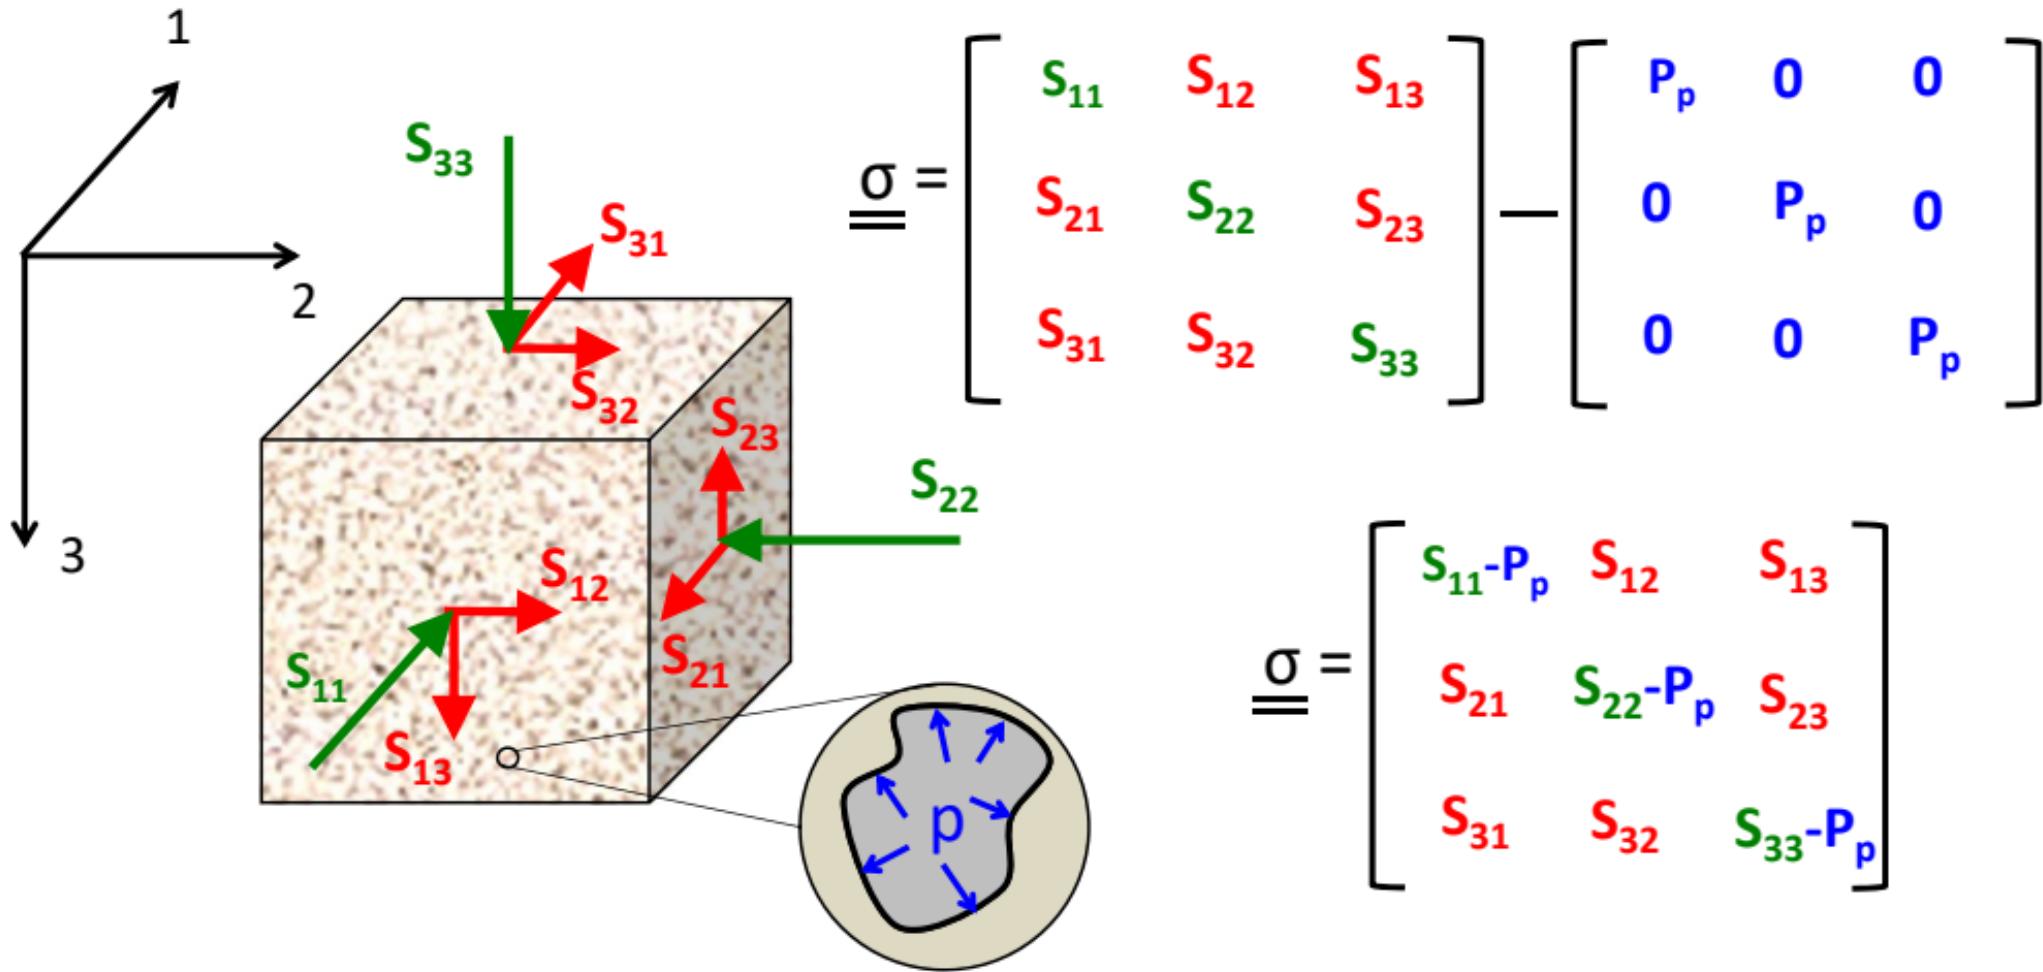

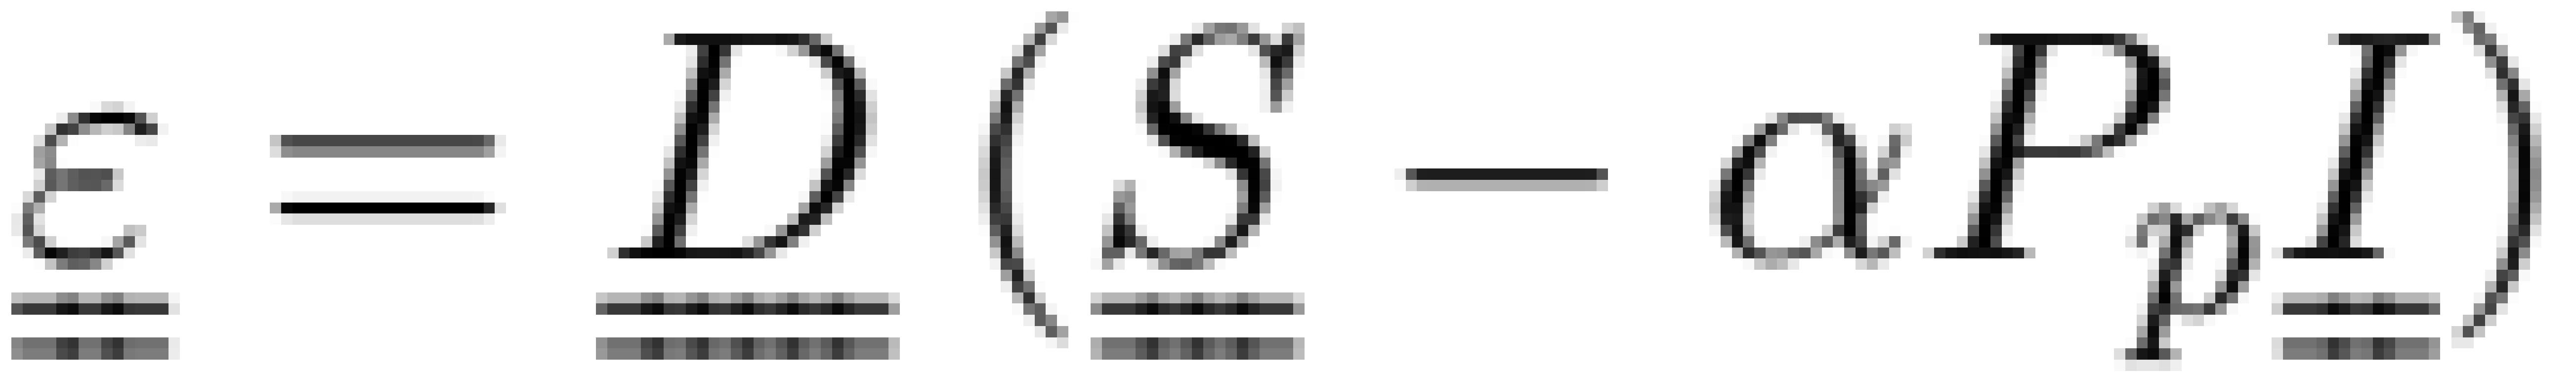


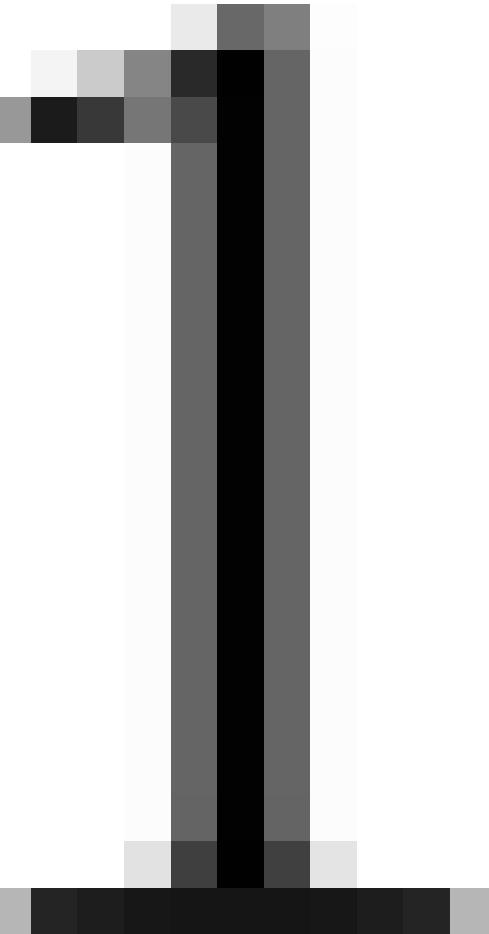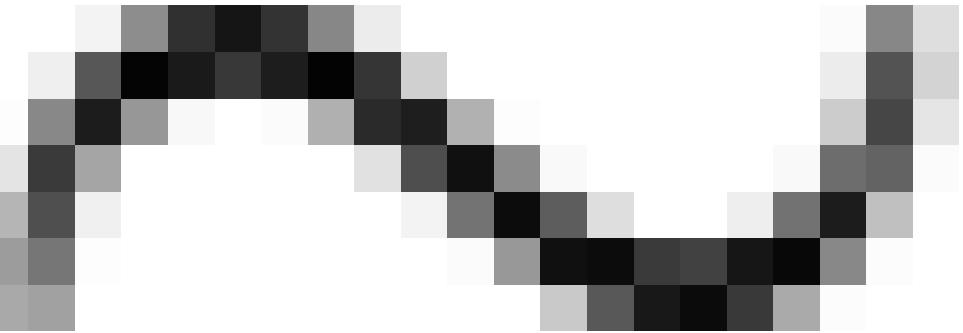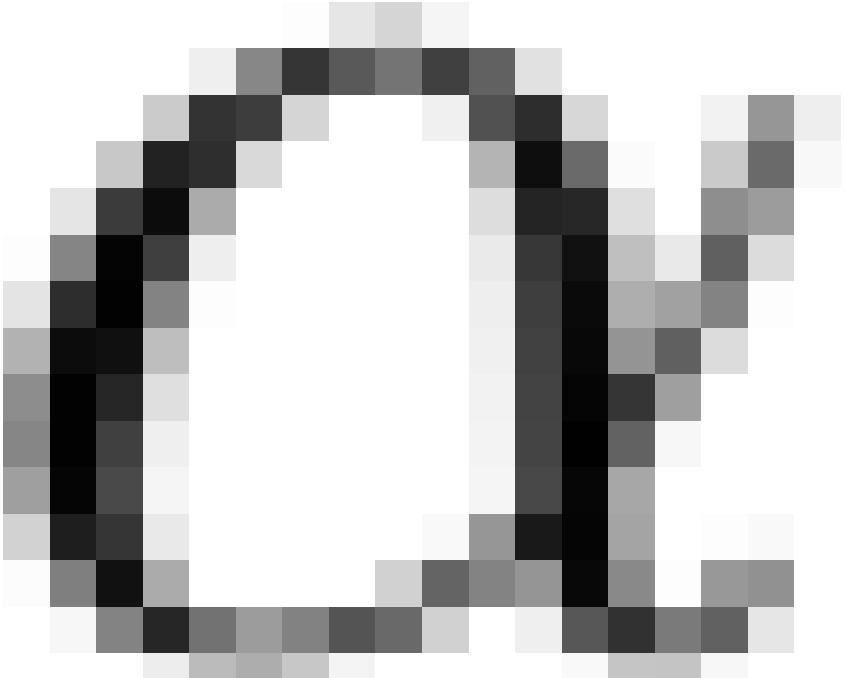
















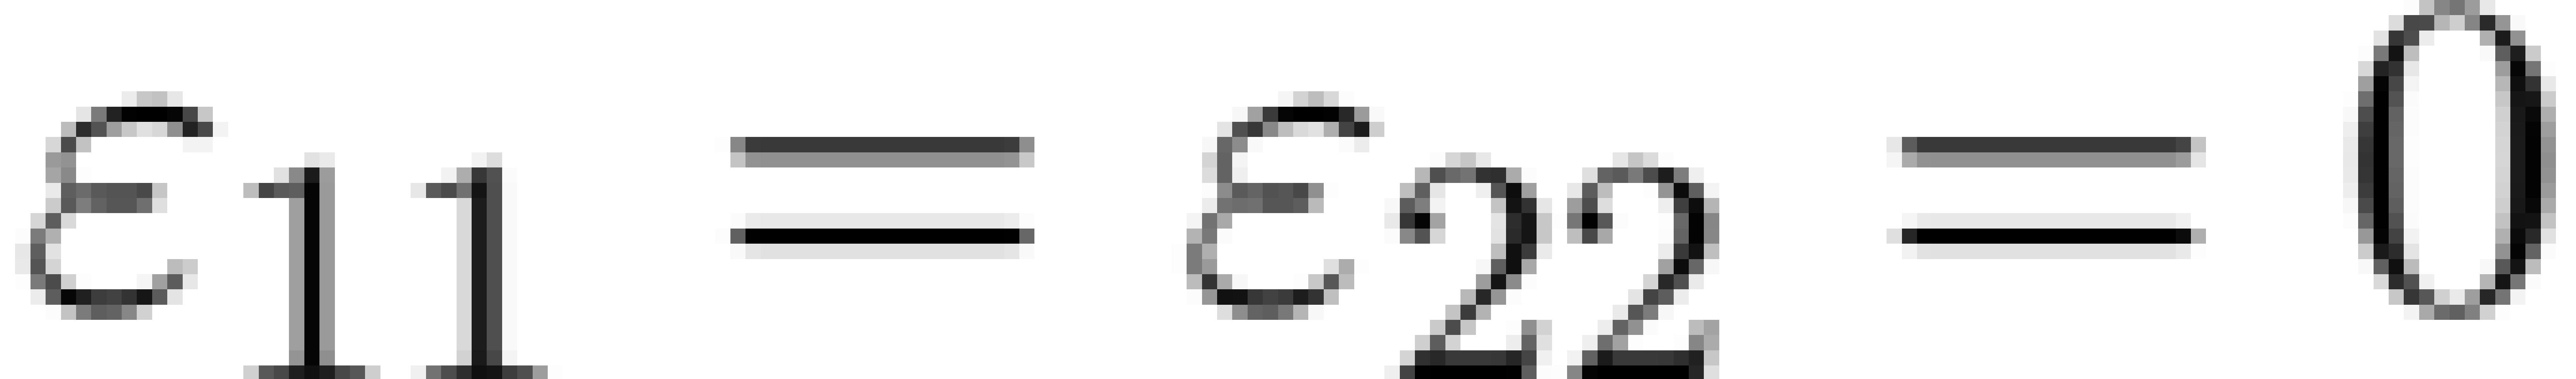




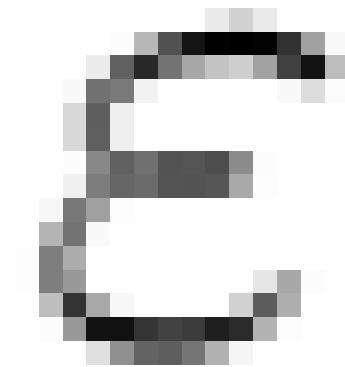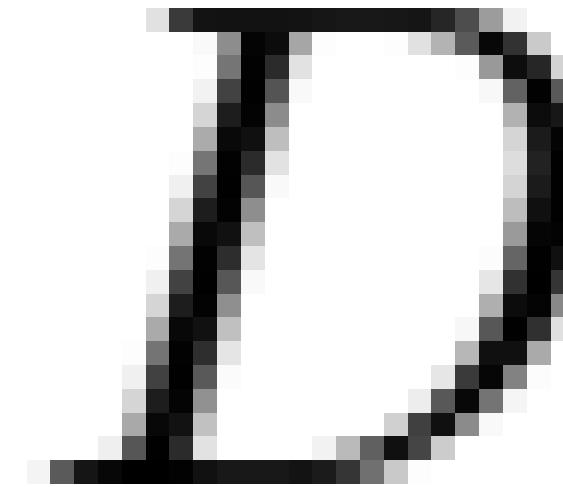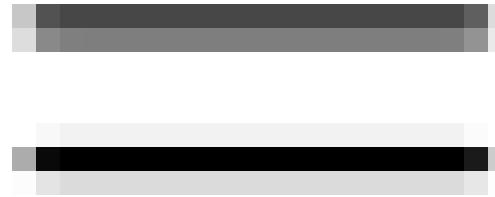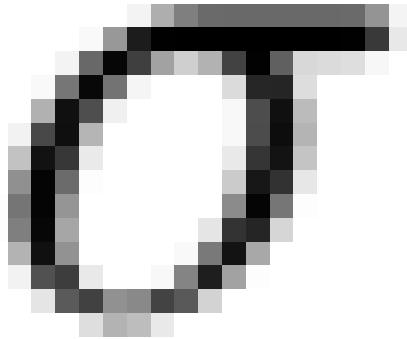

$$\left\{ \begin{array}{l} \sigma_{11} = \sigma_{22} = \frac{\nu E}{(1+\nu)(1-2\nu)} \epsilon_{33} \\ \sigma_{33} = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)} \epsilon_{33} \end{array} \right.$$

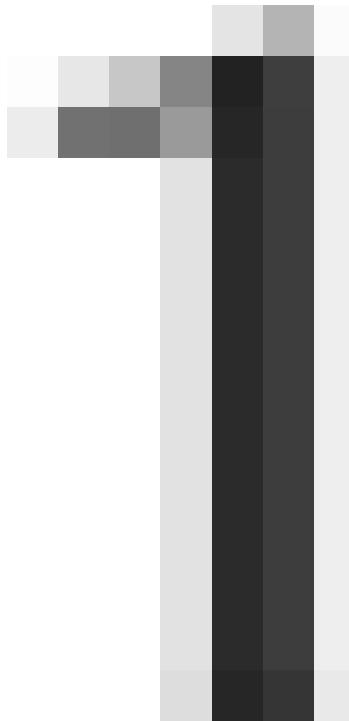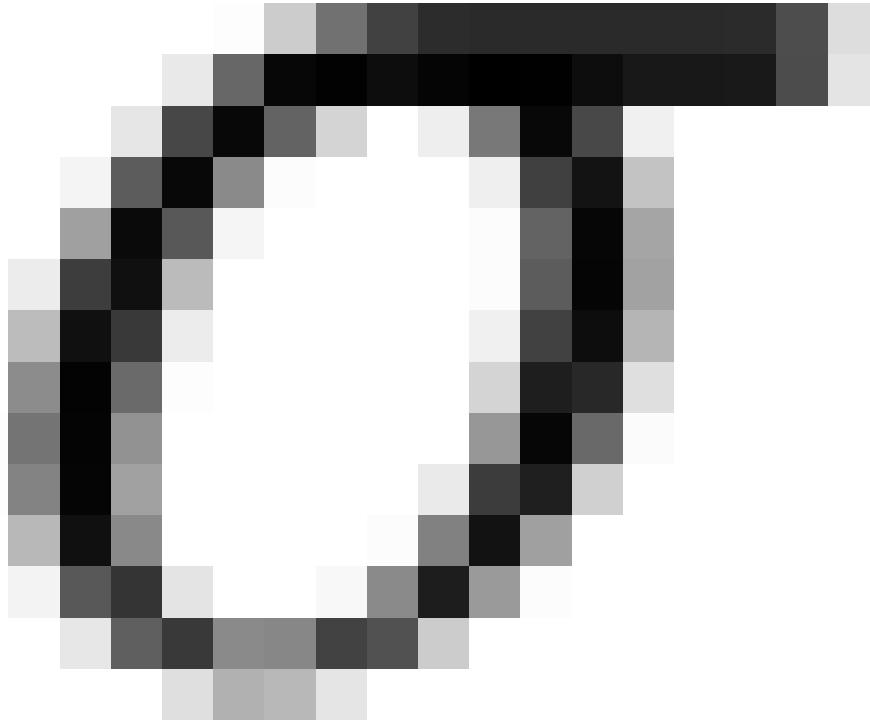

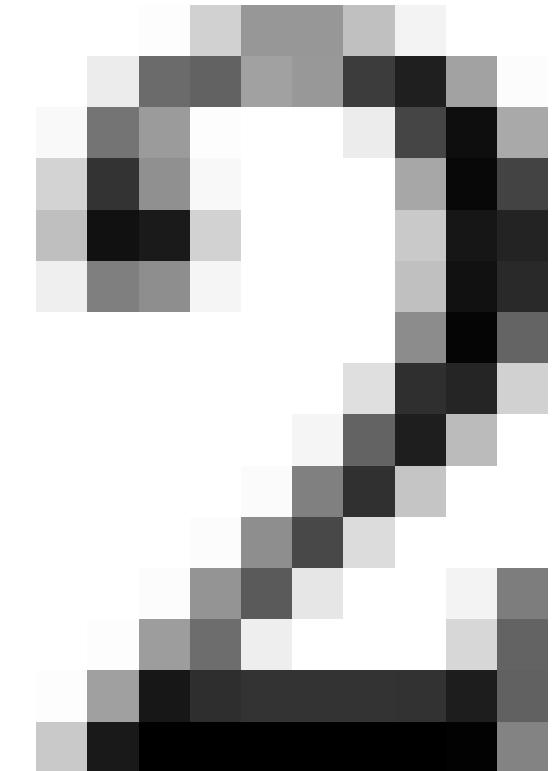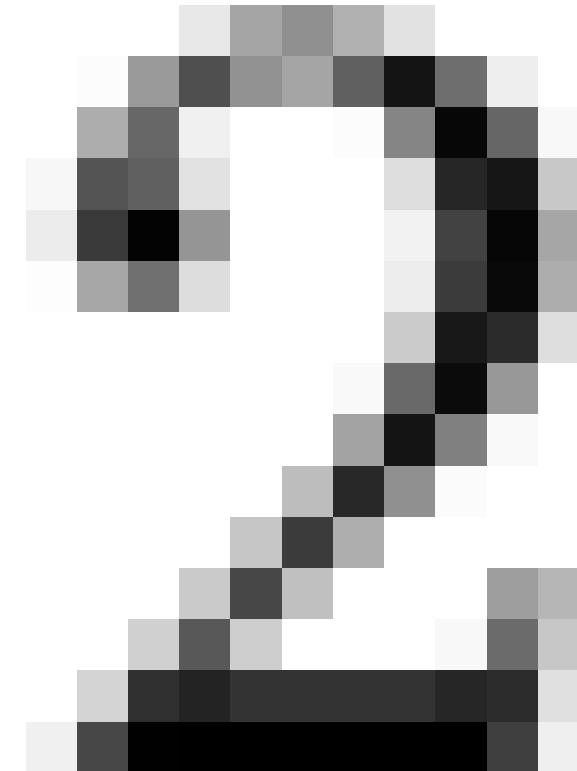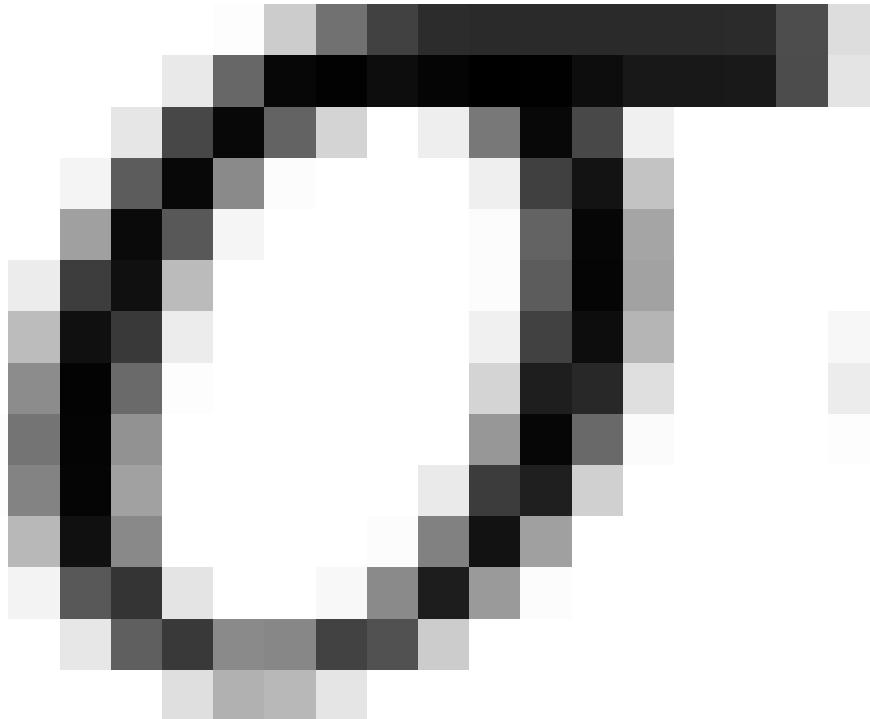

σ_{11}

$$= \begin{array}{c} \text{---} \\ \text{---} \end{array}$$

 σ_{22}

$$= \begin{array}{c} \text{---} \\ | \end{array}$$

 σ_{33} ν ν

σ_b




\equiv


1


V


V






σ_w

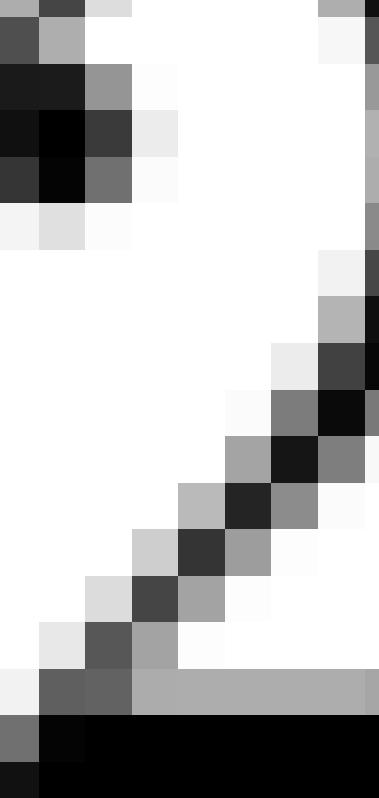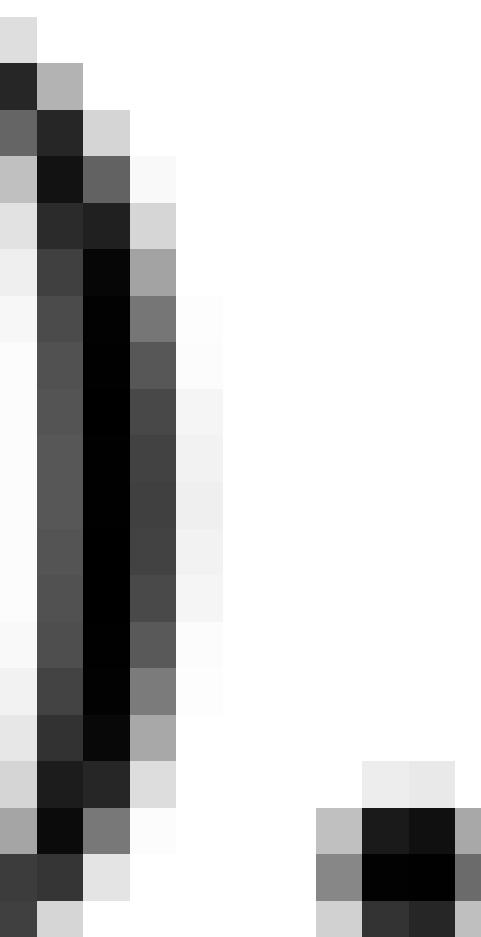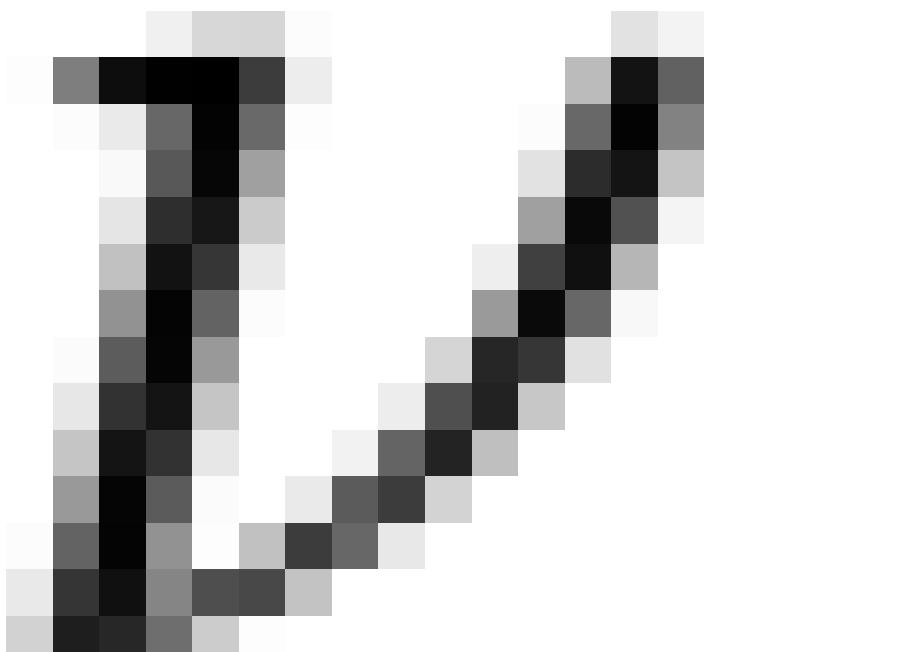



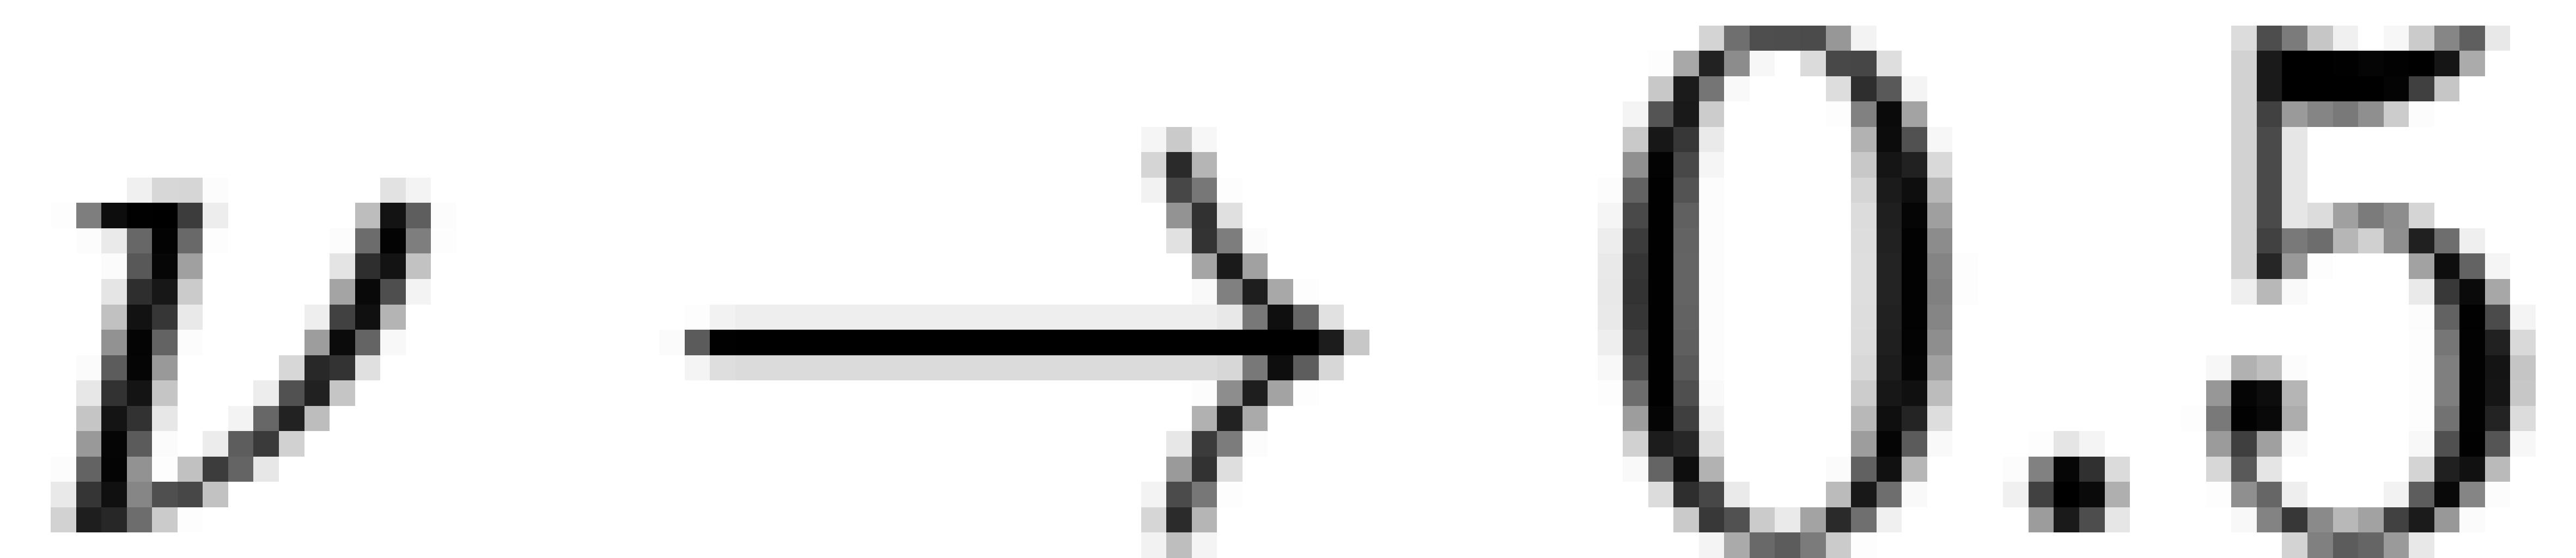









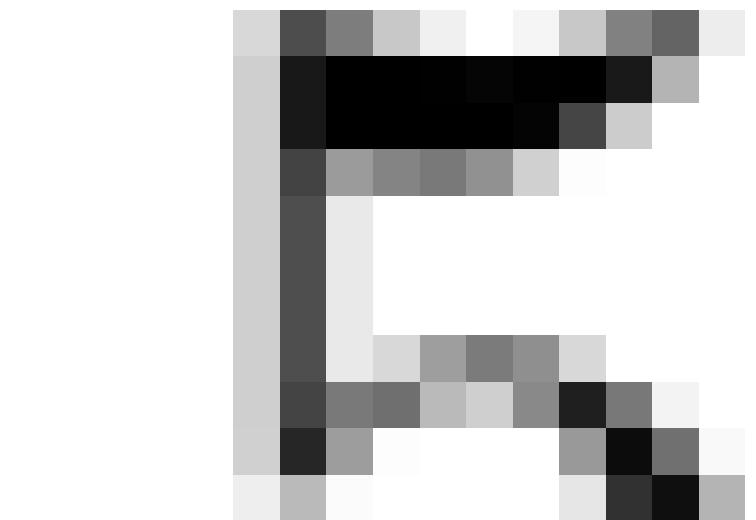
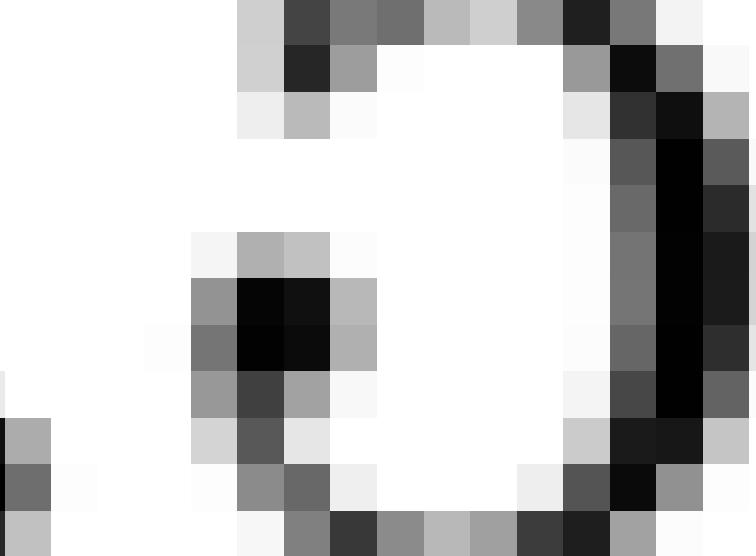
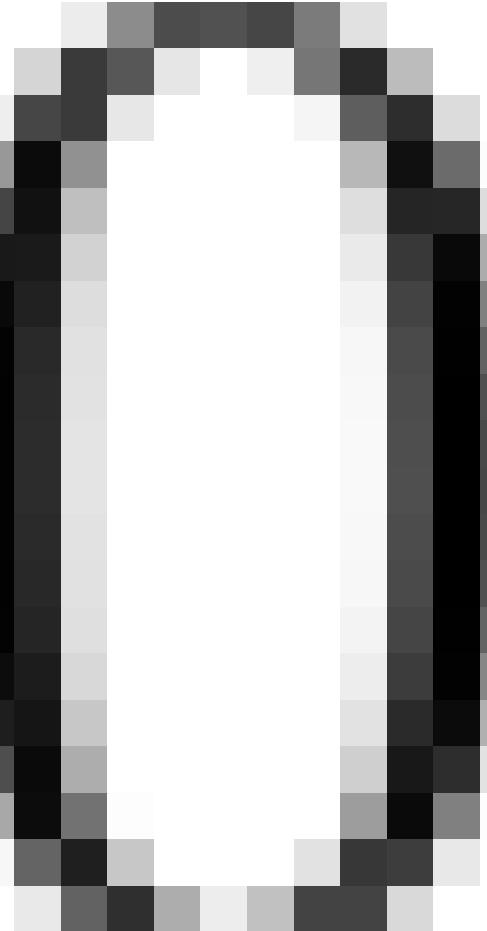
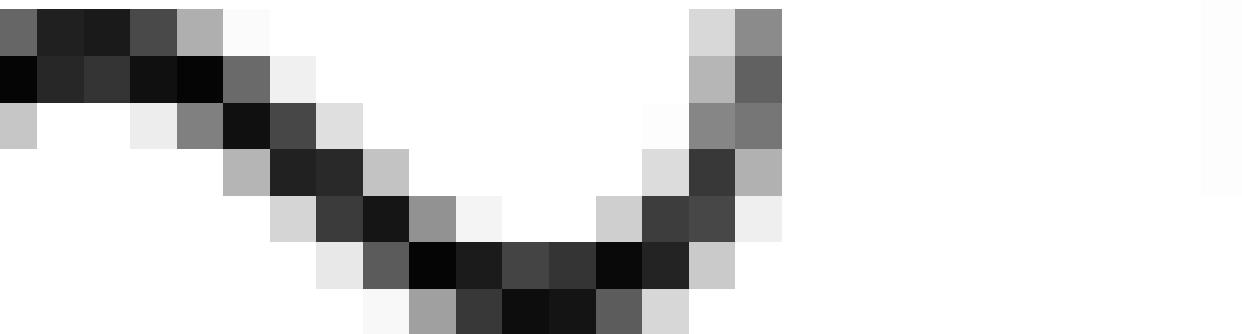
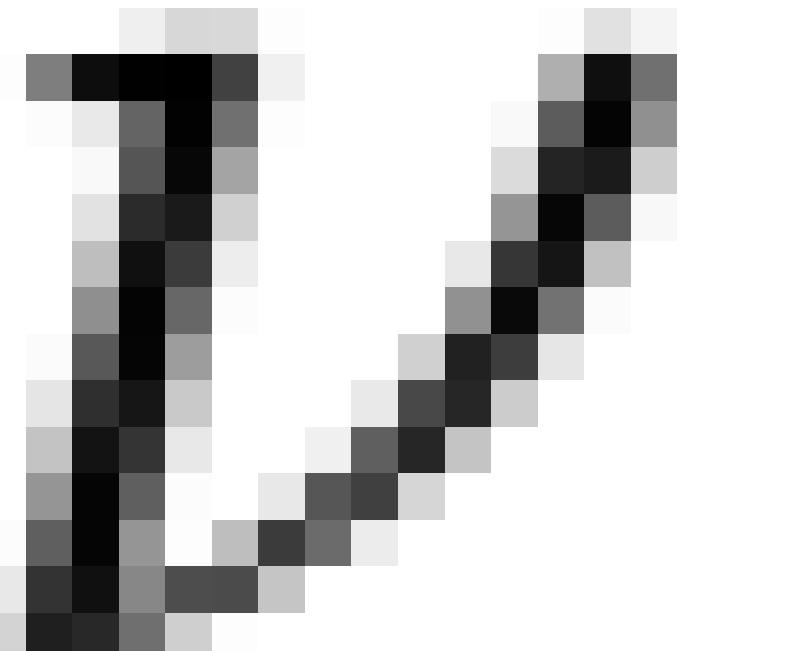








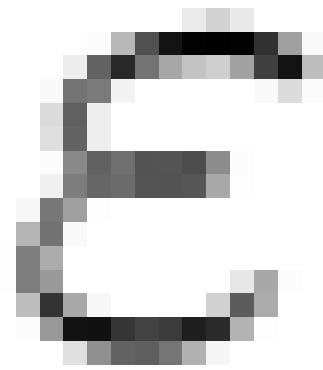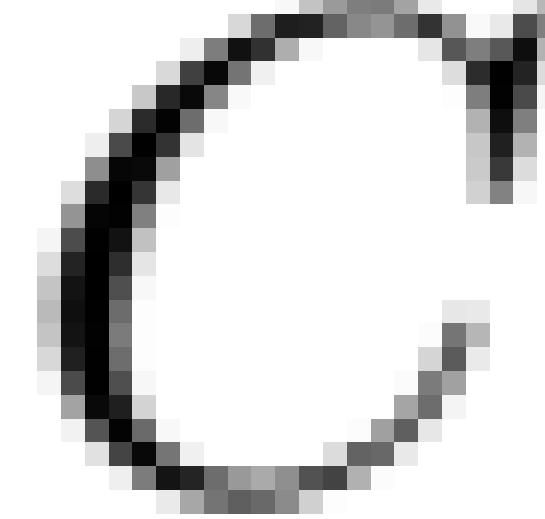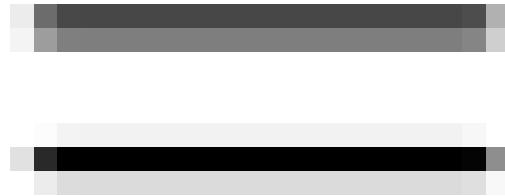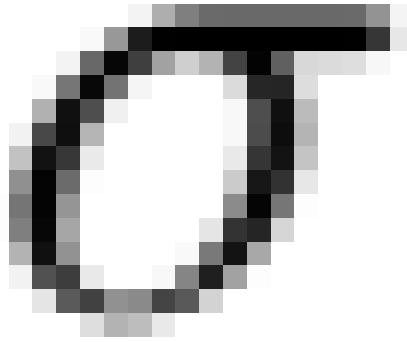

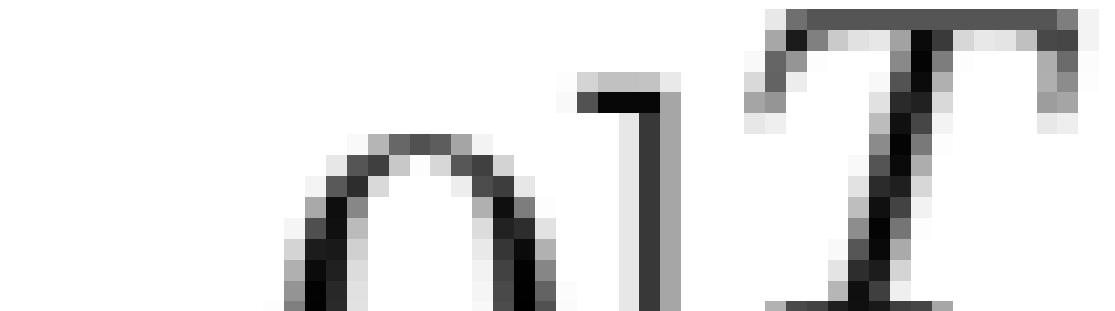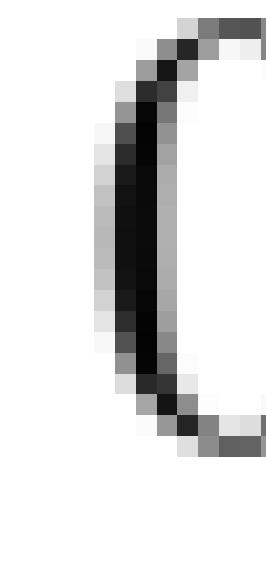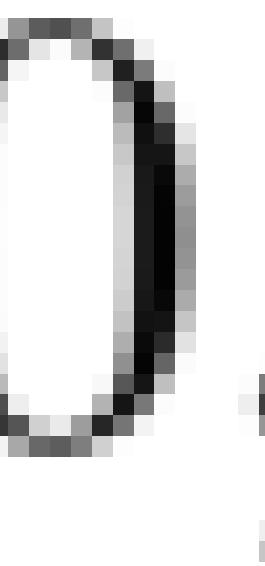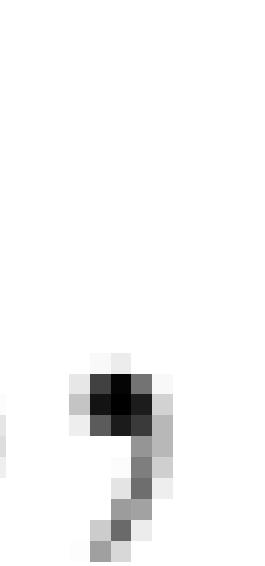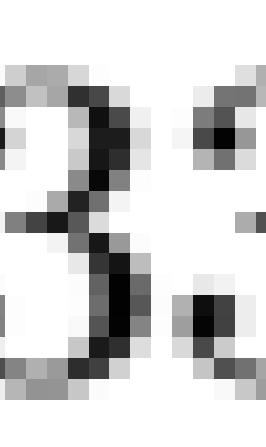
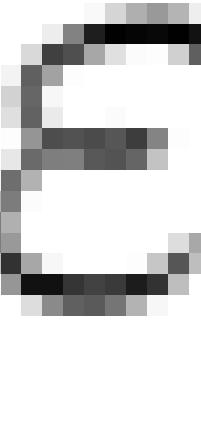
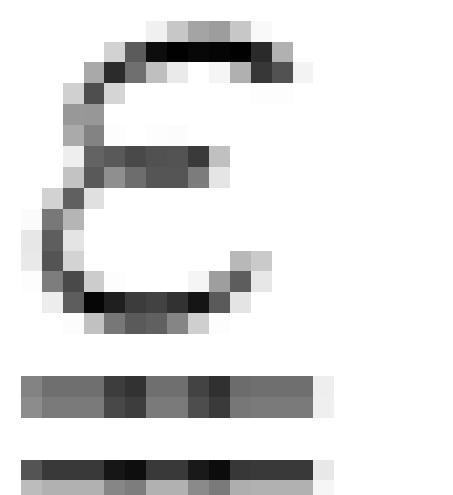


$$\left\{ \begin{array}{l} \sigma_{11} = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\varepsilon_{11} + \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{22} + \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{33} \\ \sigma_{22} = \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{11} + \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\varepsilon_{22} + \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{33} \\ \sigma_{33} = \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{11} + \frac{\nu E}{(1+\nu)(1-2\nu)}\varepsilon_{22} + \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\varepsilon_{33} \end{array} \right.$$


$$\left\{ \begin{array}{l} \sigma_{11} = \frac{\nu}{1-\nu} \sigma_{33} + \frac{E}{1-\nu^2} \epsilon_{11} + \frac{\nu E}{1-\nu^2} \epsilon_{22} \\ \sigma_{22} = \frac{\nu}{1-\nu} \sigma_{33} + \frac{\nu E}{1-\nu^2} \epsilon_{11} + \frac{E}{1-\nu^2} \epsilon_{22} \end{array} \right.$$






$$\left\{ \begin{array}{l} \sigma_{Hmax} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{Hmax} + \nu E' \epsilon_{hmin} \\ \sigma_{hmin} = \frac{\nu}{1-\nu} \sigma_v + \nu E' \epsilon_{Hmax} + E' \epsilon_{hmin} \end{array} \right.$$

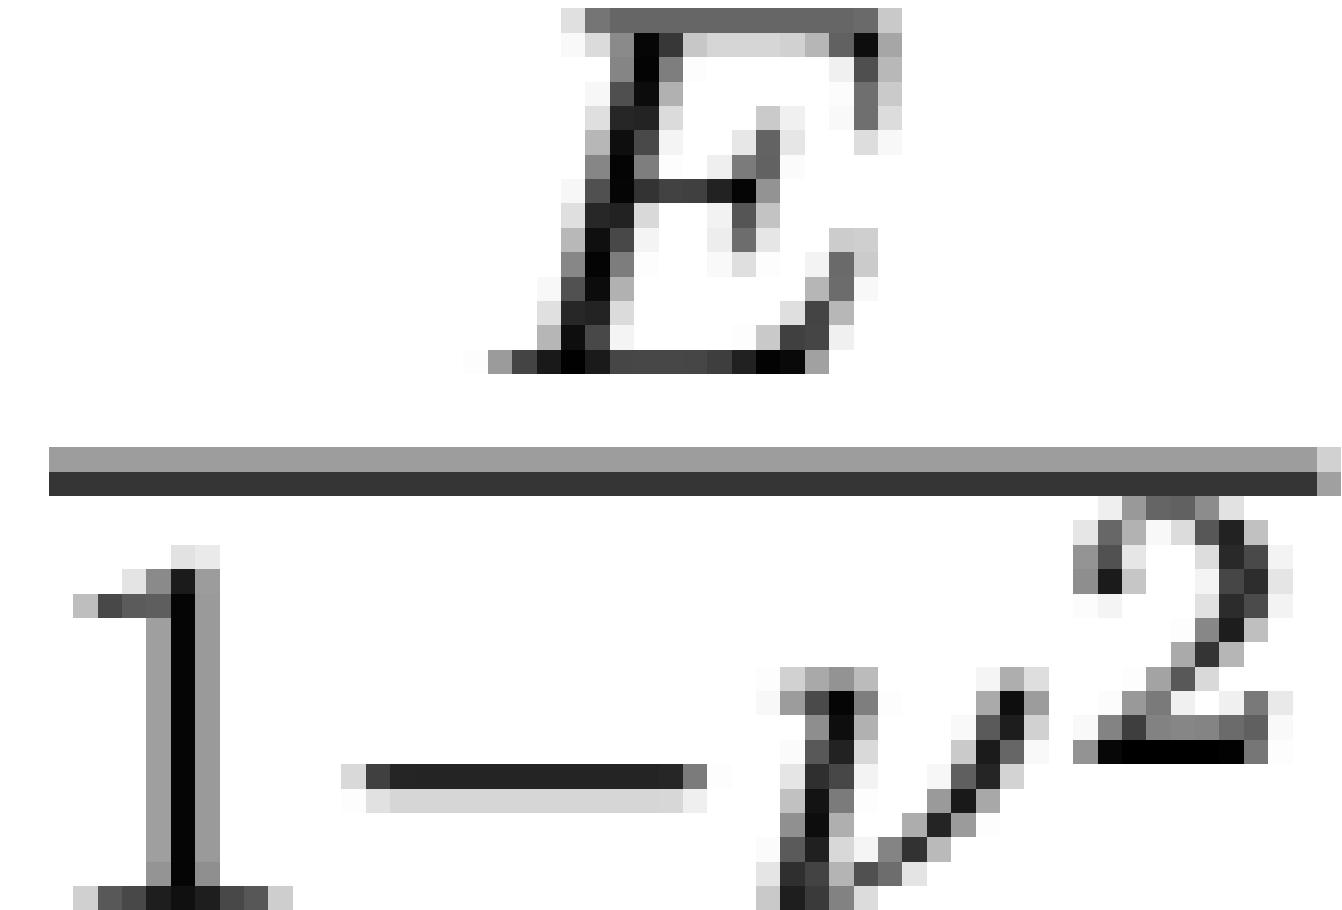
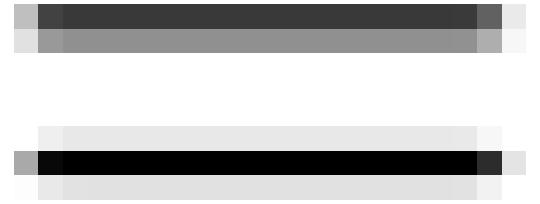
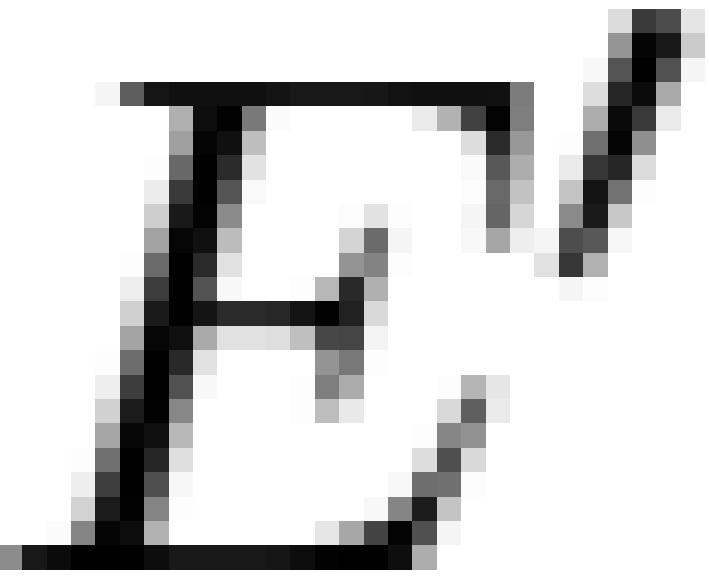




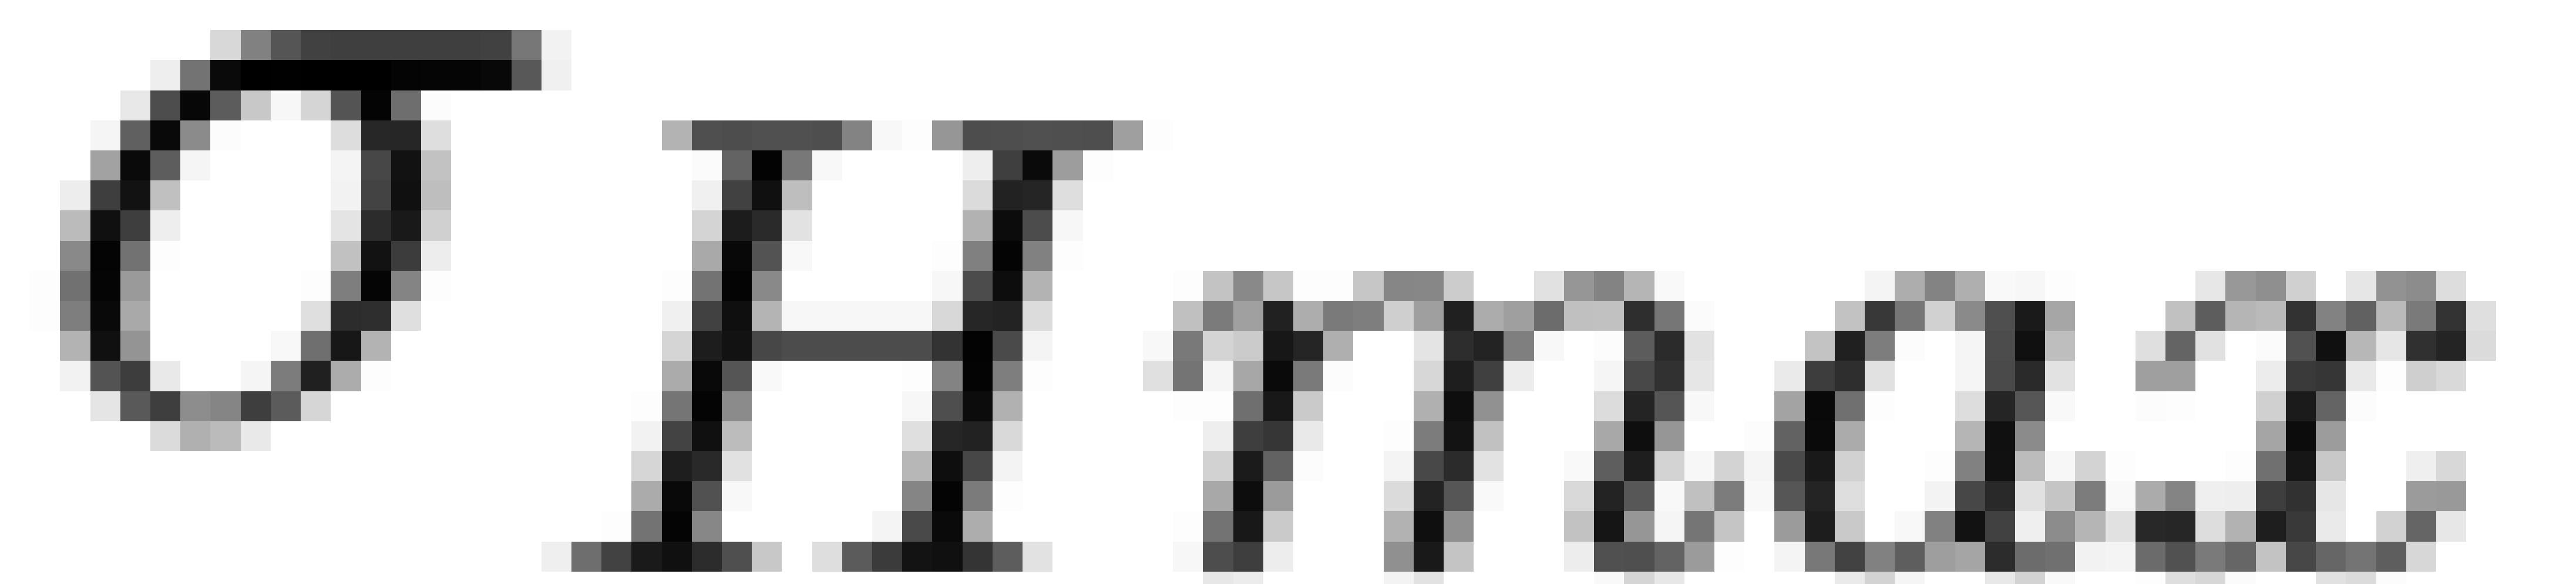



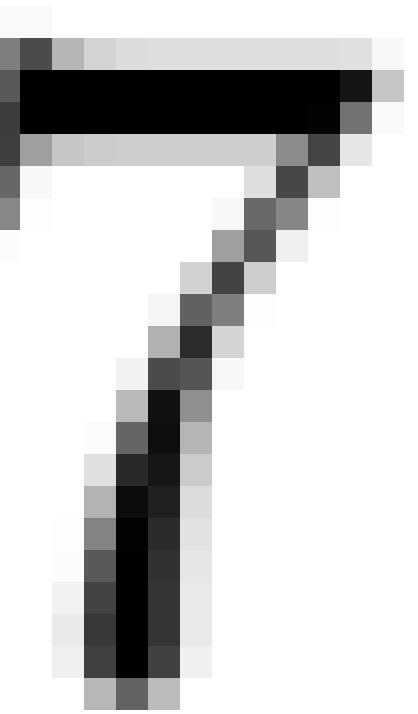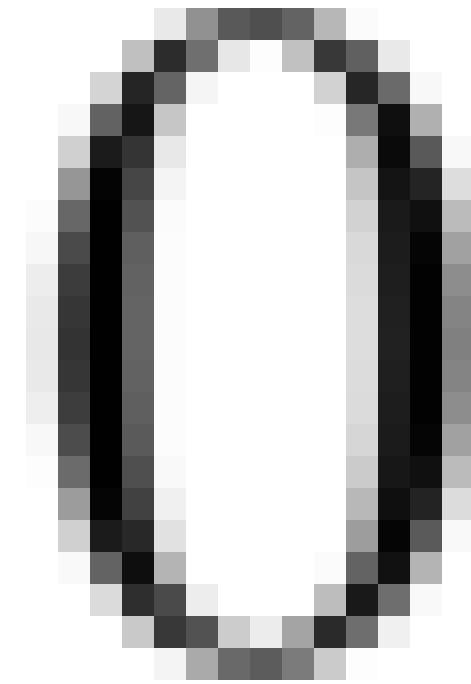


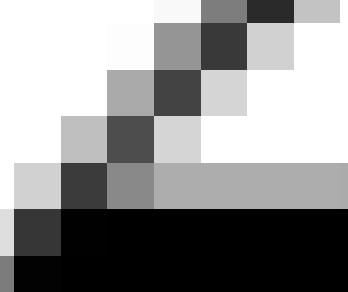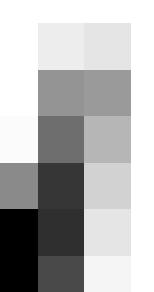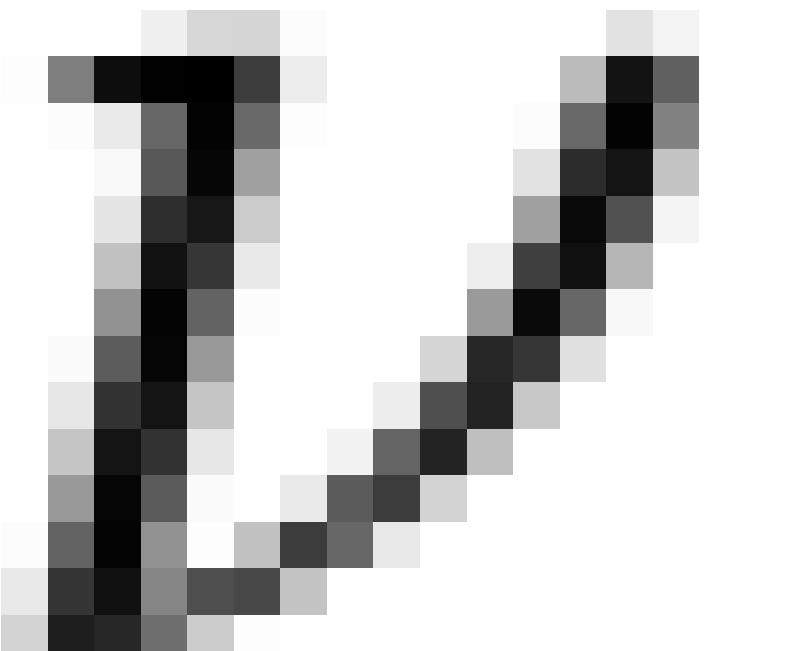







$$S_u = 23.8 \frac{\text{MPa}}{\text{km}} \times \frac{1 \frac{\text{psi}}{\text{ft}}}{\frac{23 \frac{\text{MPa}}{\text{km}}}{7950 \text{ ft}}} = 8227 \text{ psi}$$



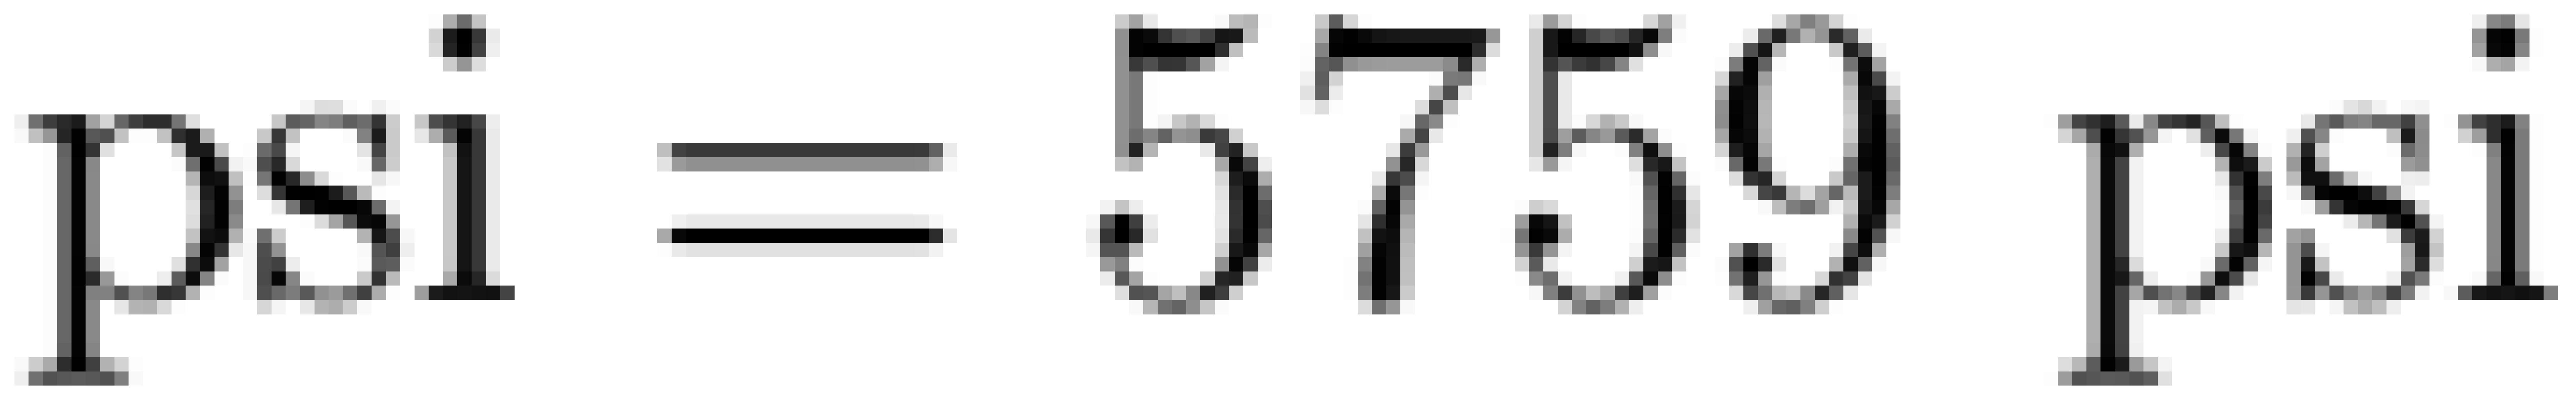






$$\frac{E'}{1 - \nu^2} = \frac{E}{1 - 0.22^2} = \frac{5 \times 10^6 \text{ psi}}{5.25 \times 10^6 \text{ psi}}$$

$$\left\{ \begin{array}{l} \sigma_{Hmax} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{Hmax} = \frac{0.22}{1-0.22} 2468 \text{ psi} + 5.25 \times 10^6 \text{ psi} \times 0.0002 = 1745 \text{ psi} \\ \sigma_{hmin} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{hmin} = \frac{0.22}{1-0.22} 2468 \text{ psi} + 5.25 \times 10^6 \text{ psi} \times 0.0002 = 927 \text{ psi} \end{array} \right.$$

$$S_{H\max} = \sigma_{H\max} + P_p = 1745 \text{ psi} + 5759 \text{ psi} = 7504 \text{ psi}$$

$$S_{h\min} = \sigma_{h\min} + P_p = 927 \text{ psi} + 5759 \text{ psi} = 6686 \text{ psi}$$

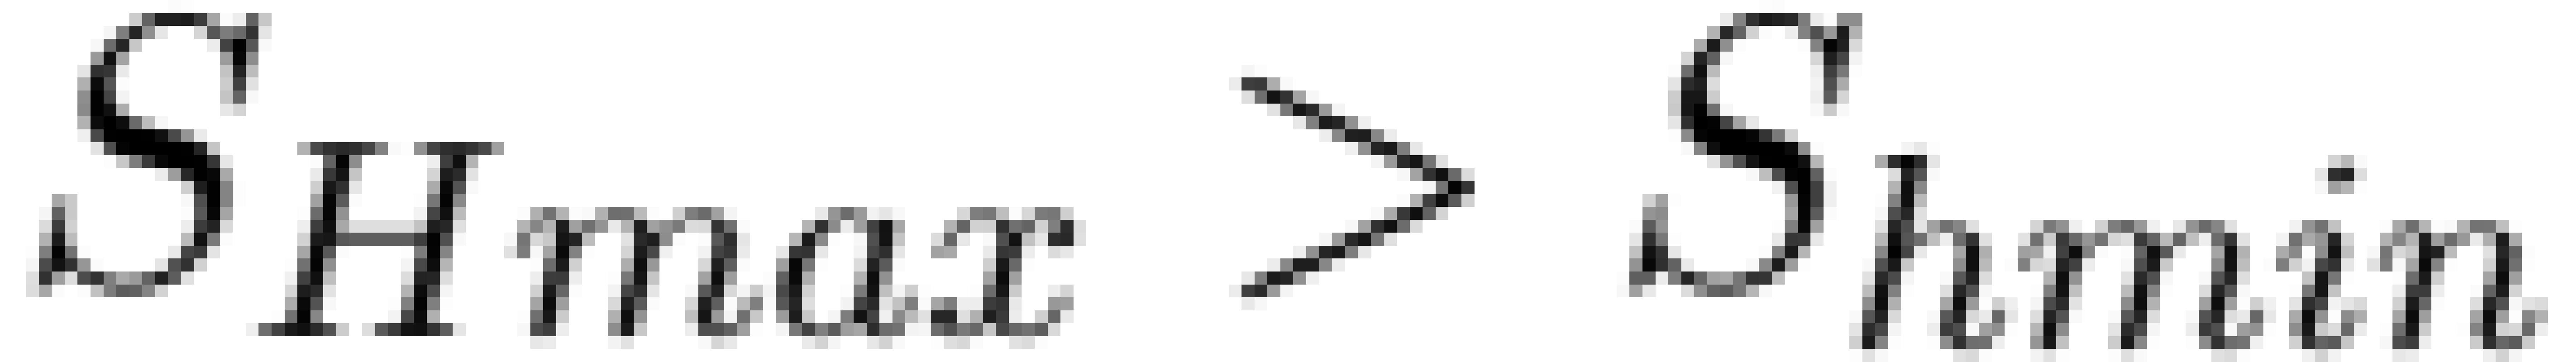







$\delta^1 P$


δt

δc

μC

$\delta^2 P$

δC^2













$$C_{pp} =$$

$$\frac{1}{V_p} \frac{dV_p}{dP_p}$$

S_u, ϵ_h

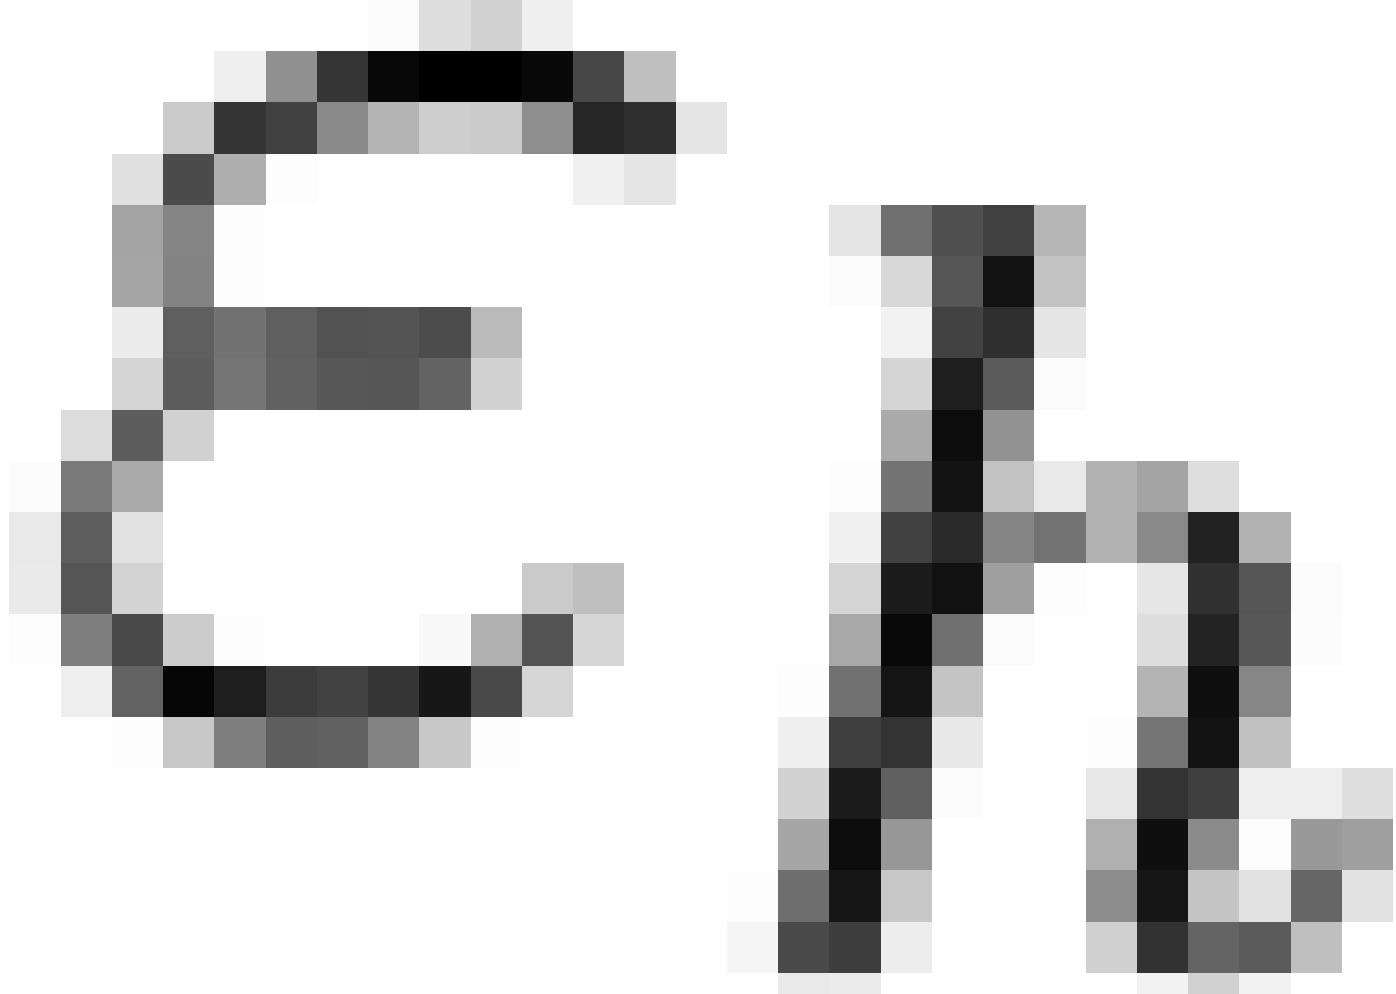


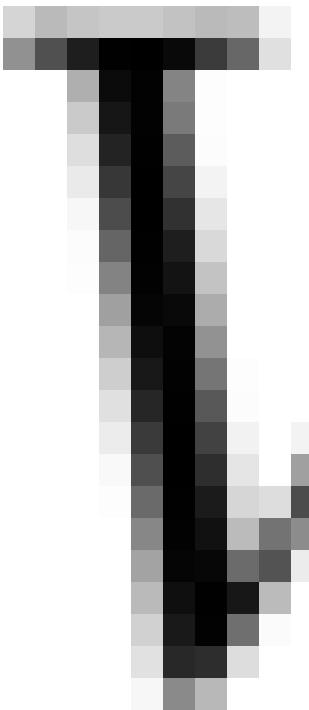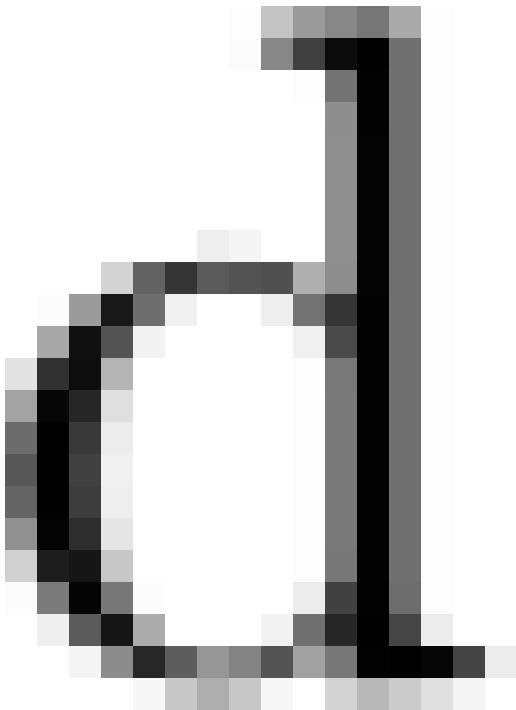

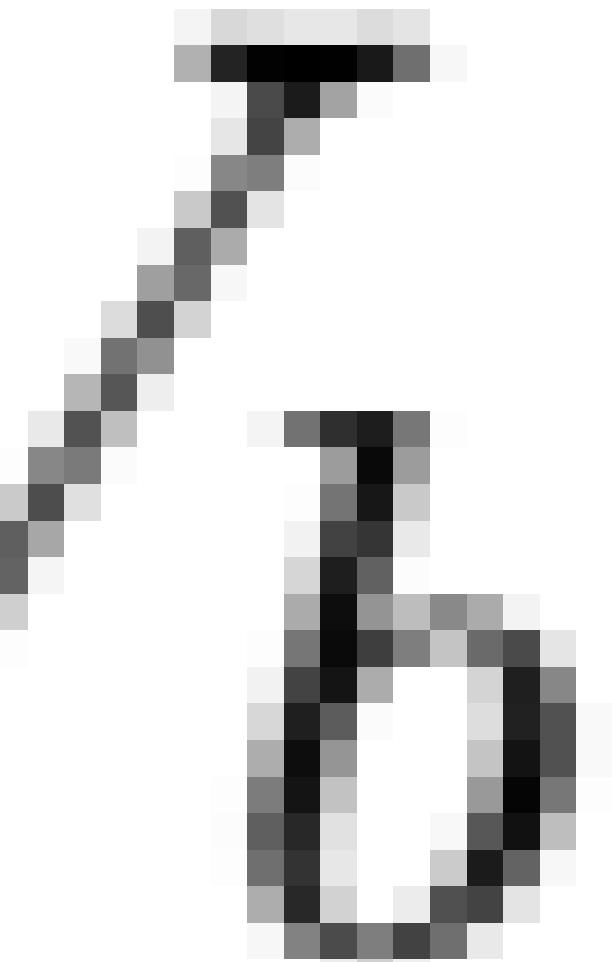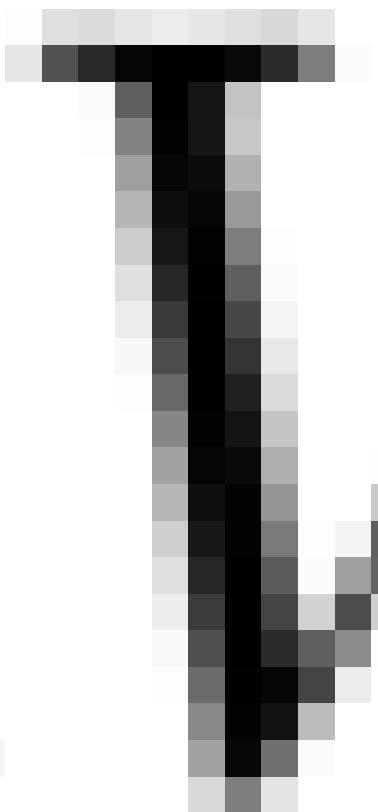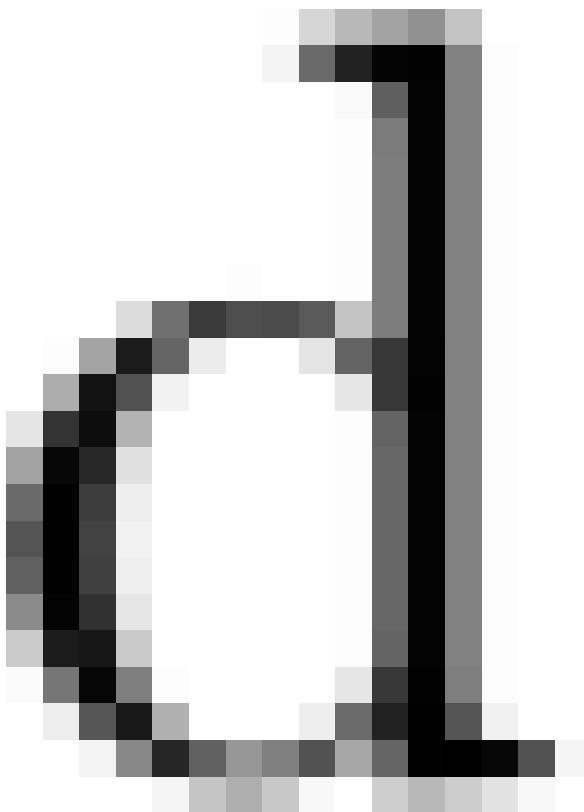

$$C_{pp} = \frac{1}{V_p} \left(\frac{1}{V_b} \frac{dV_b}{dP_p} \Big|_{S_u, Eh} \right)$$







Op

$=$

Op

ϕ





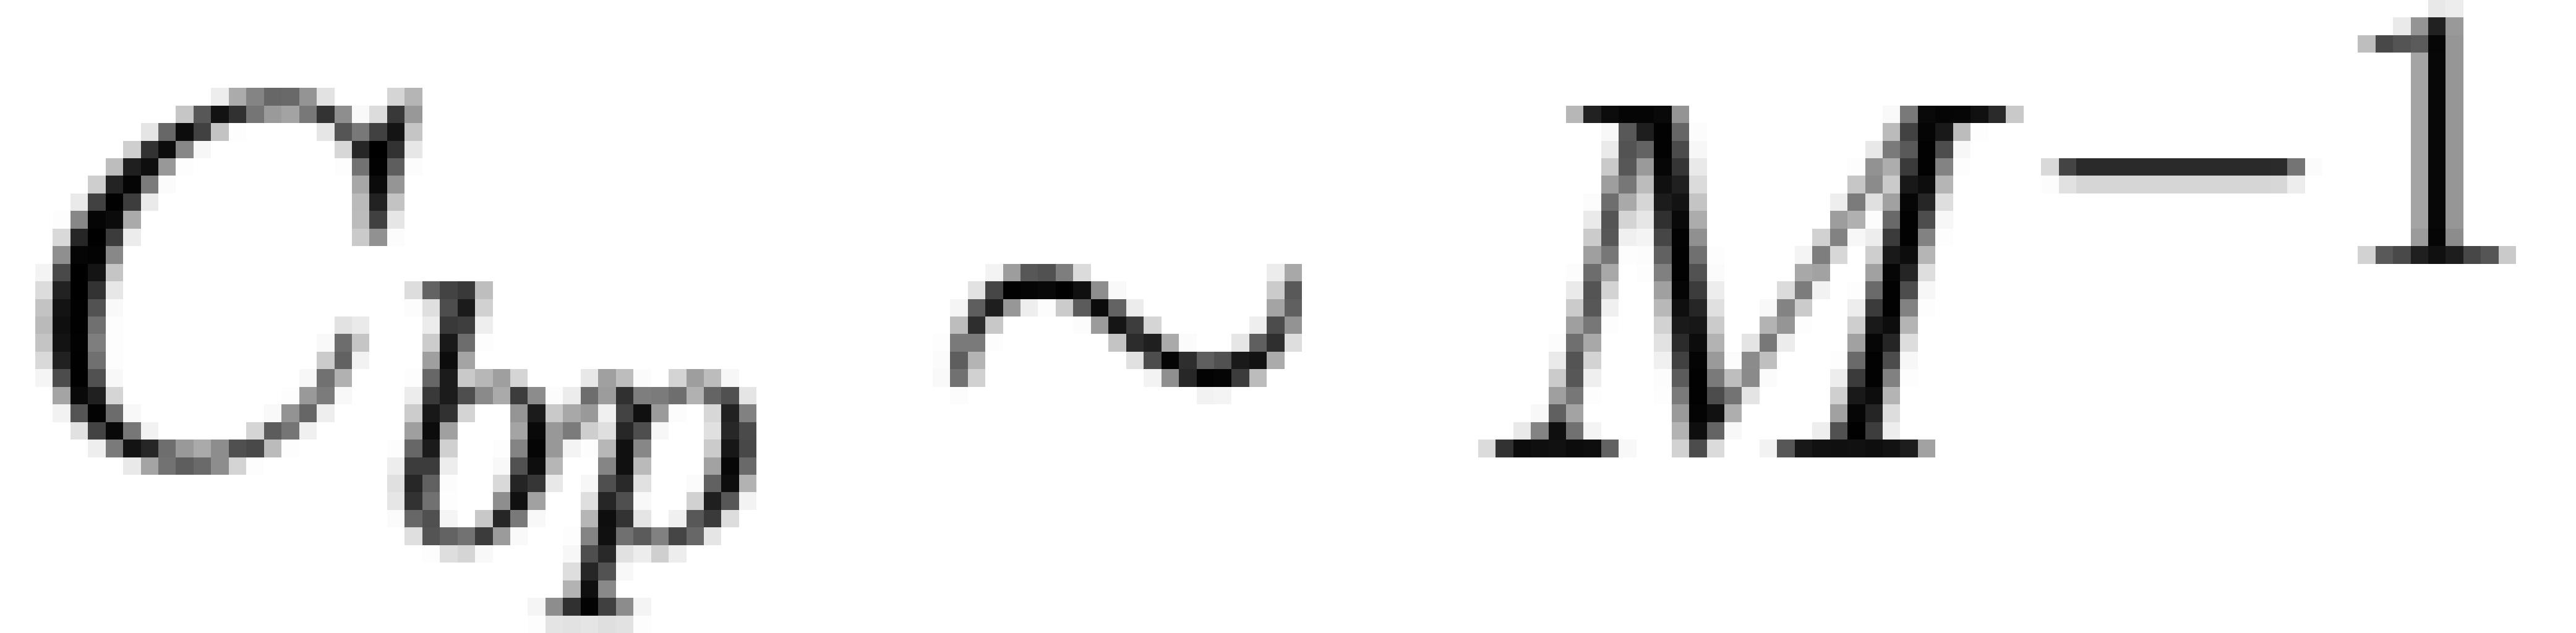







$\langle pp \rangle$





$$= \begin{pmatrix} 0 & 0 \\ 0 & 0 \end{pmatrix}$$

$$\frac{(1 + \nu)(1 - \nu)}{2\nu} E^\phi$$

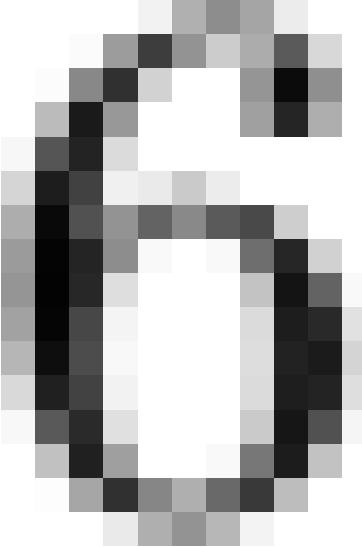

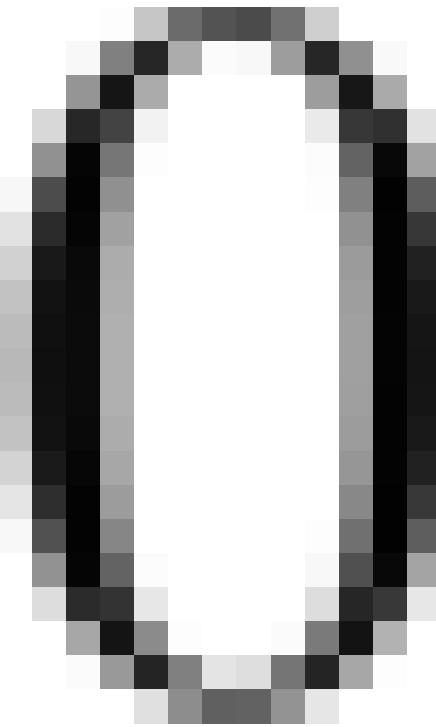
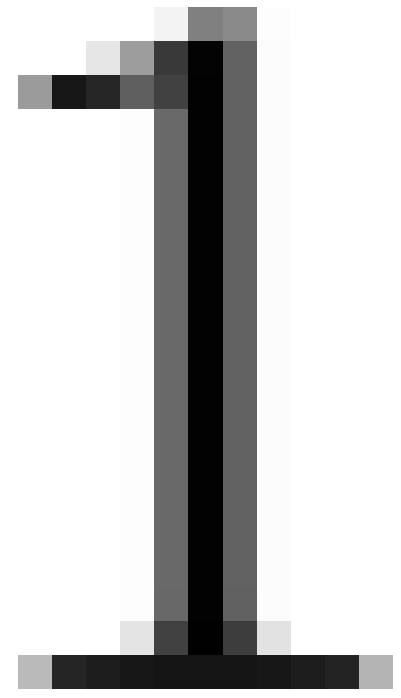
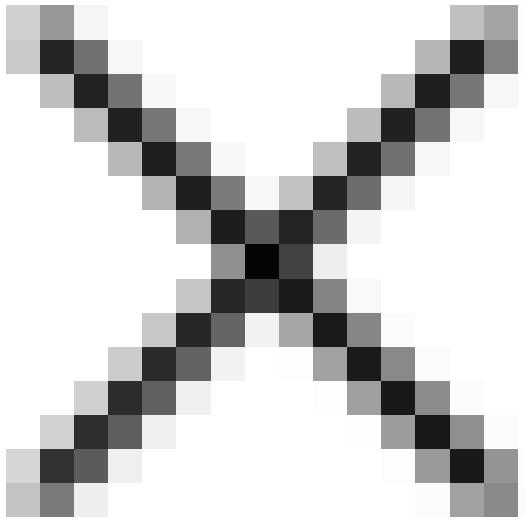







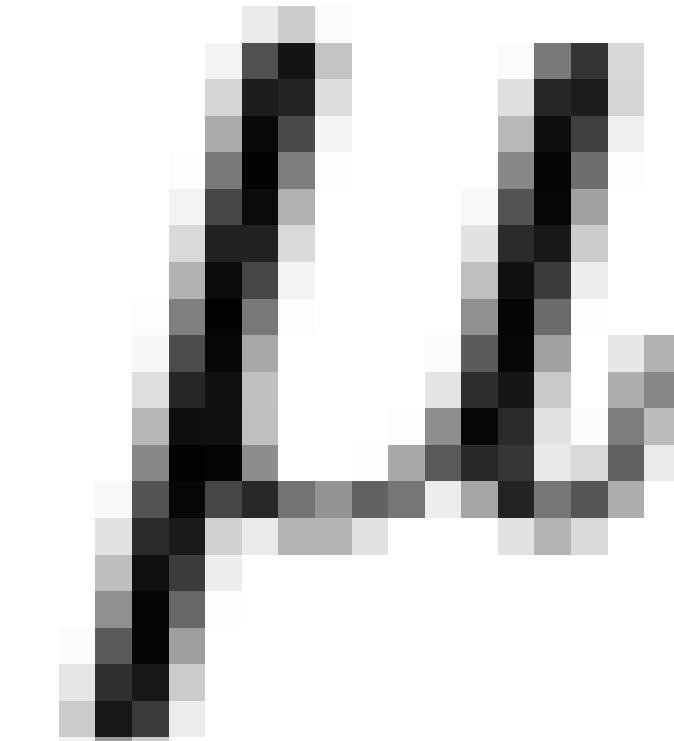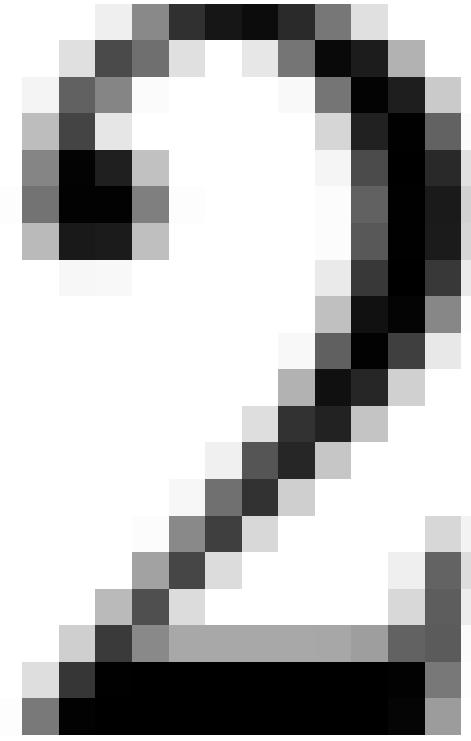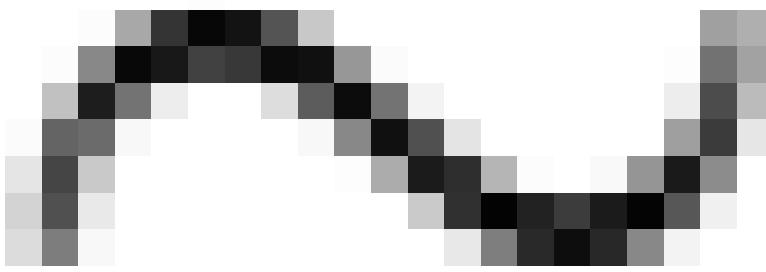

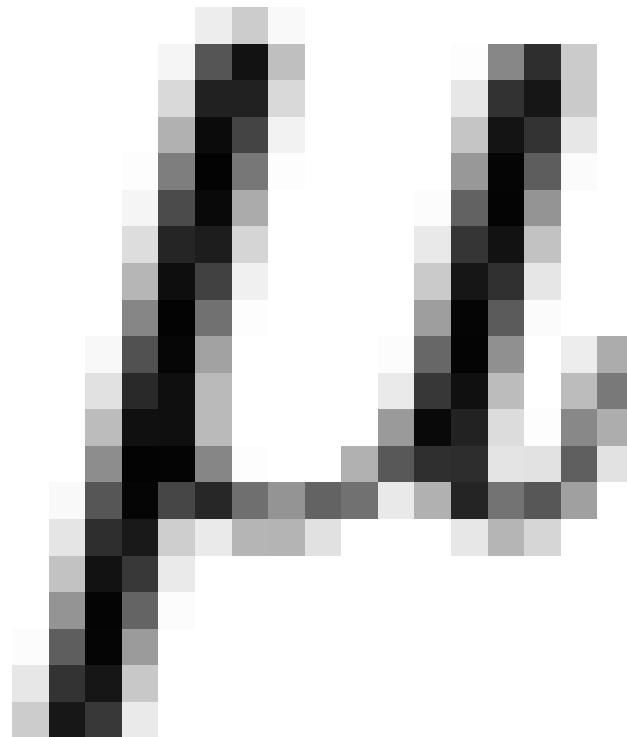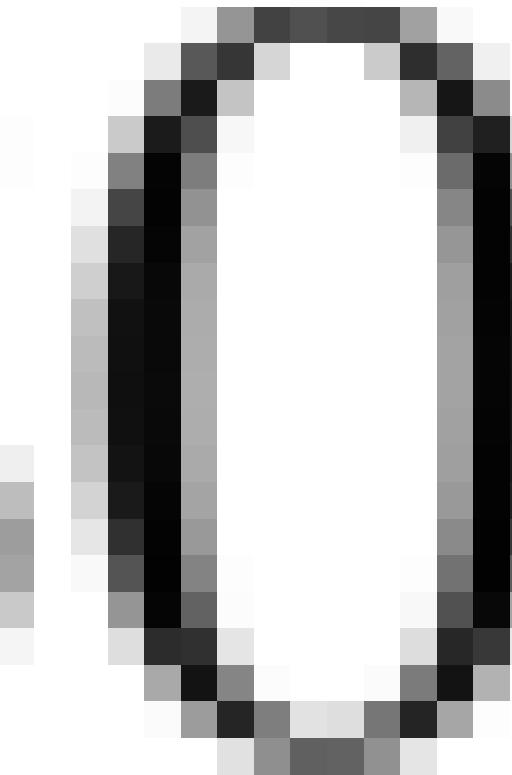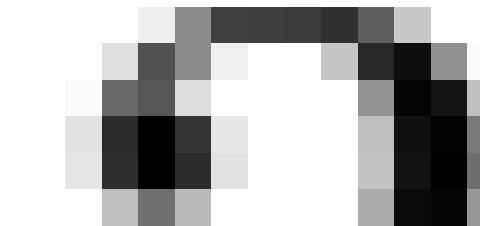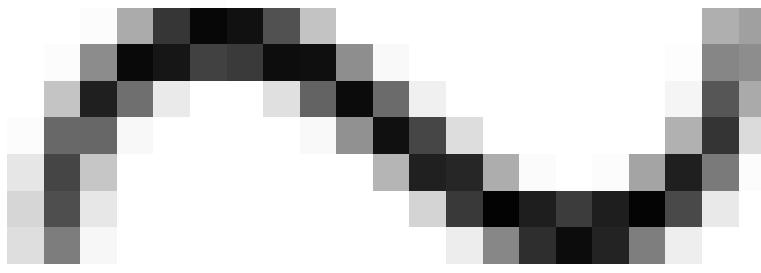




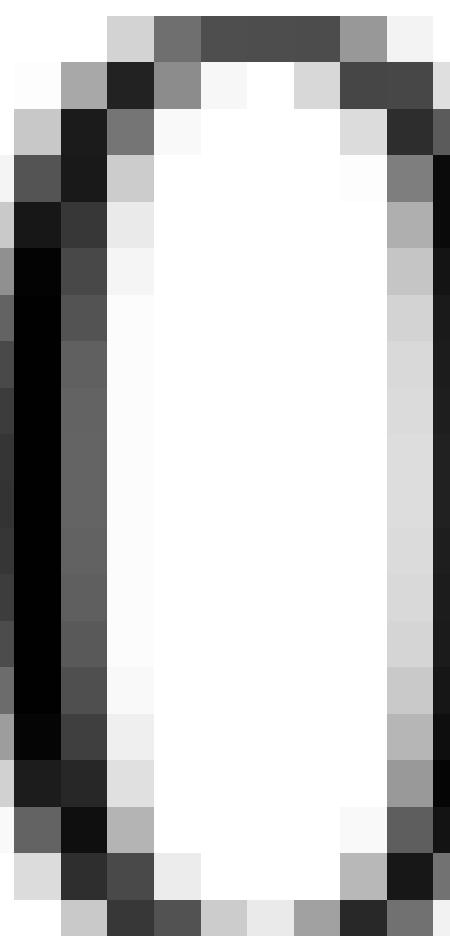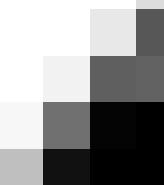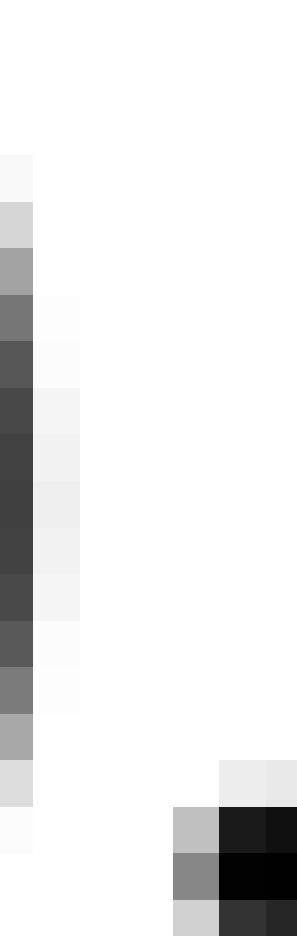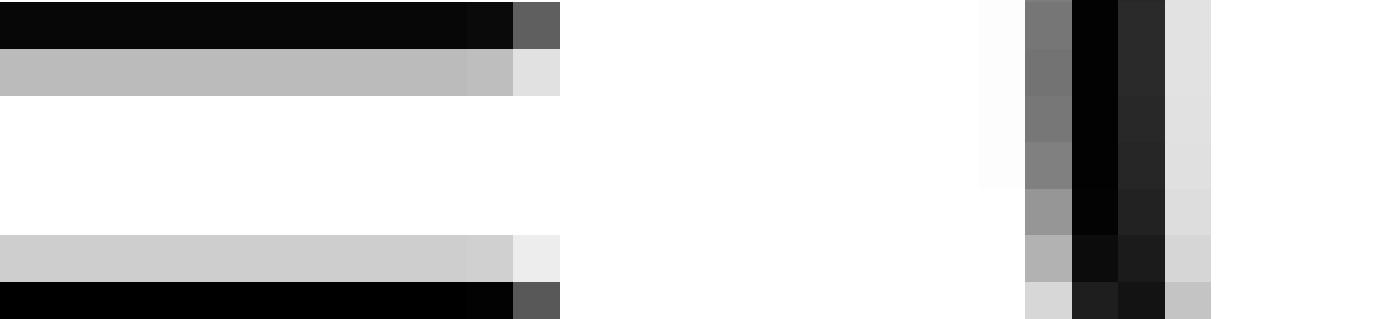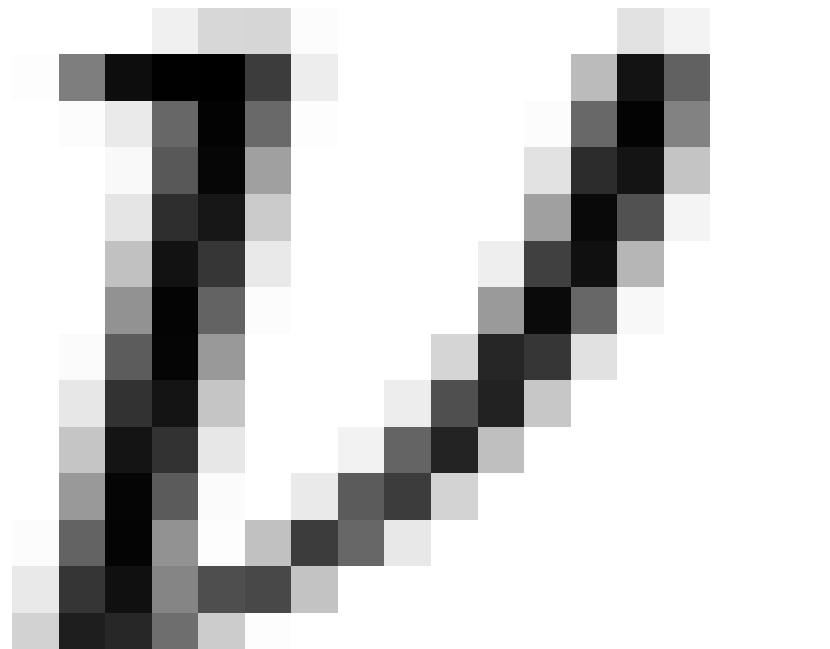


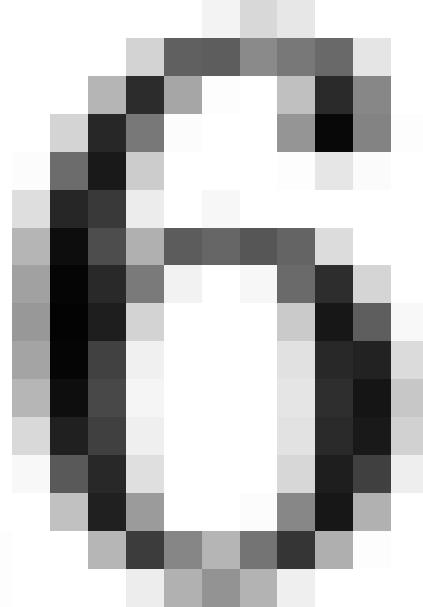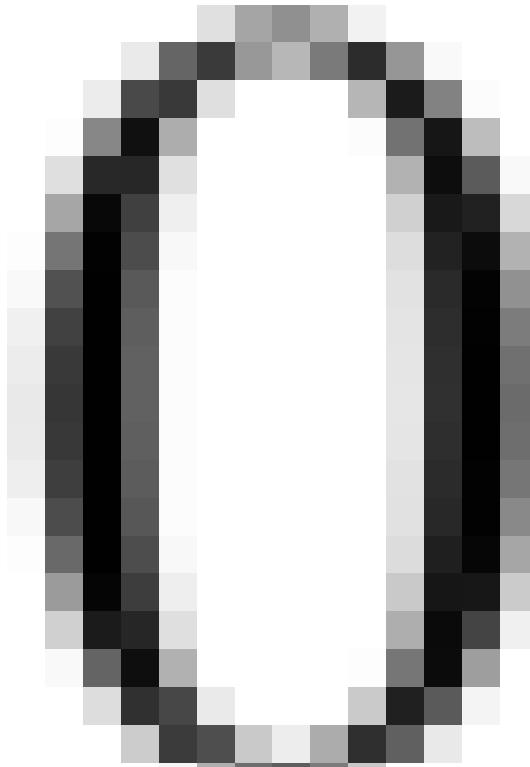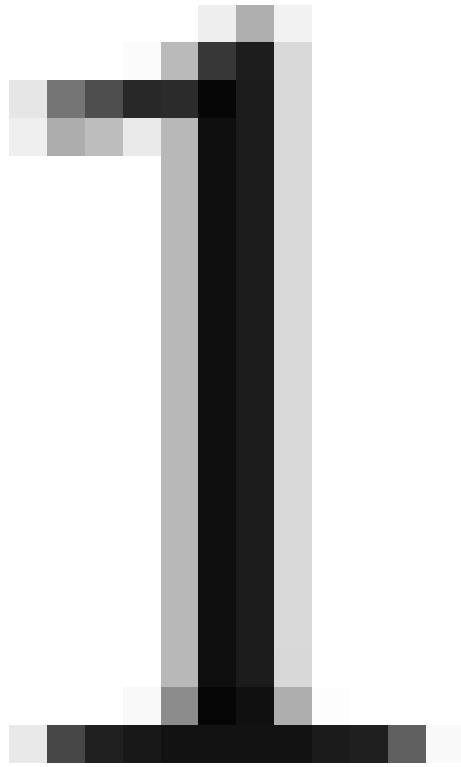



$$M = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)} = \frac{(1-0.20)10 \text{ GPa}}{1.6 \times 10^6 \text{ psi}} = \frac{11.11 \text{ GPa}}{(1+0.20)(1-2 \times 0.20)}$$




$$C_{pp} = \frac{1}{M\phi} = \frac{1}{1.6 \times 10^6 \text{ psi} \times 0.20} = 3.1 \frac{1}{[\text{psi}]^{-1}} = 3.1 \mu\text{Sip}$$

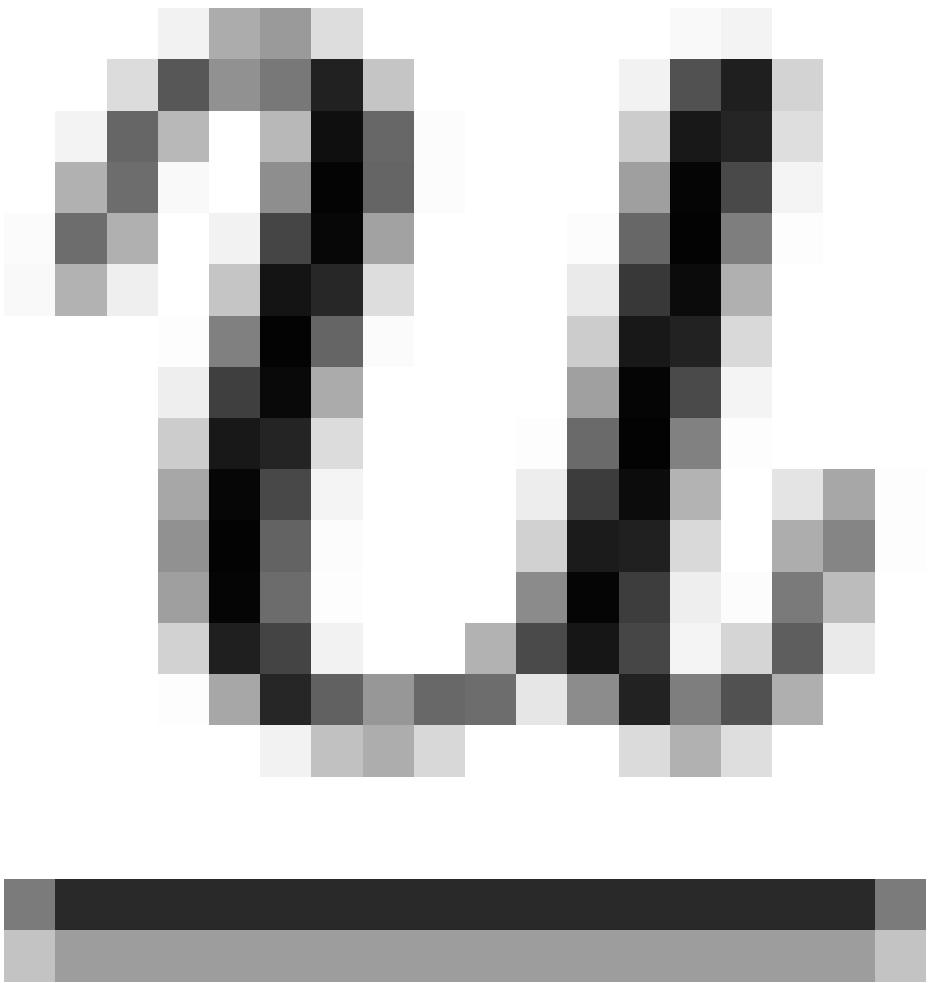






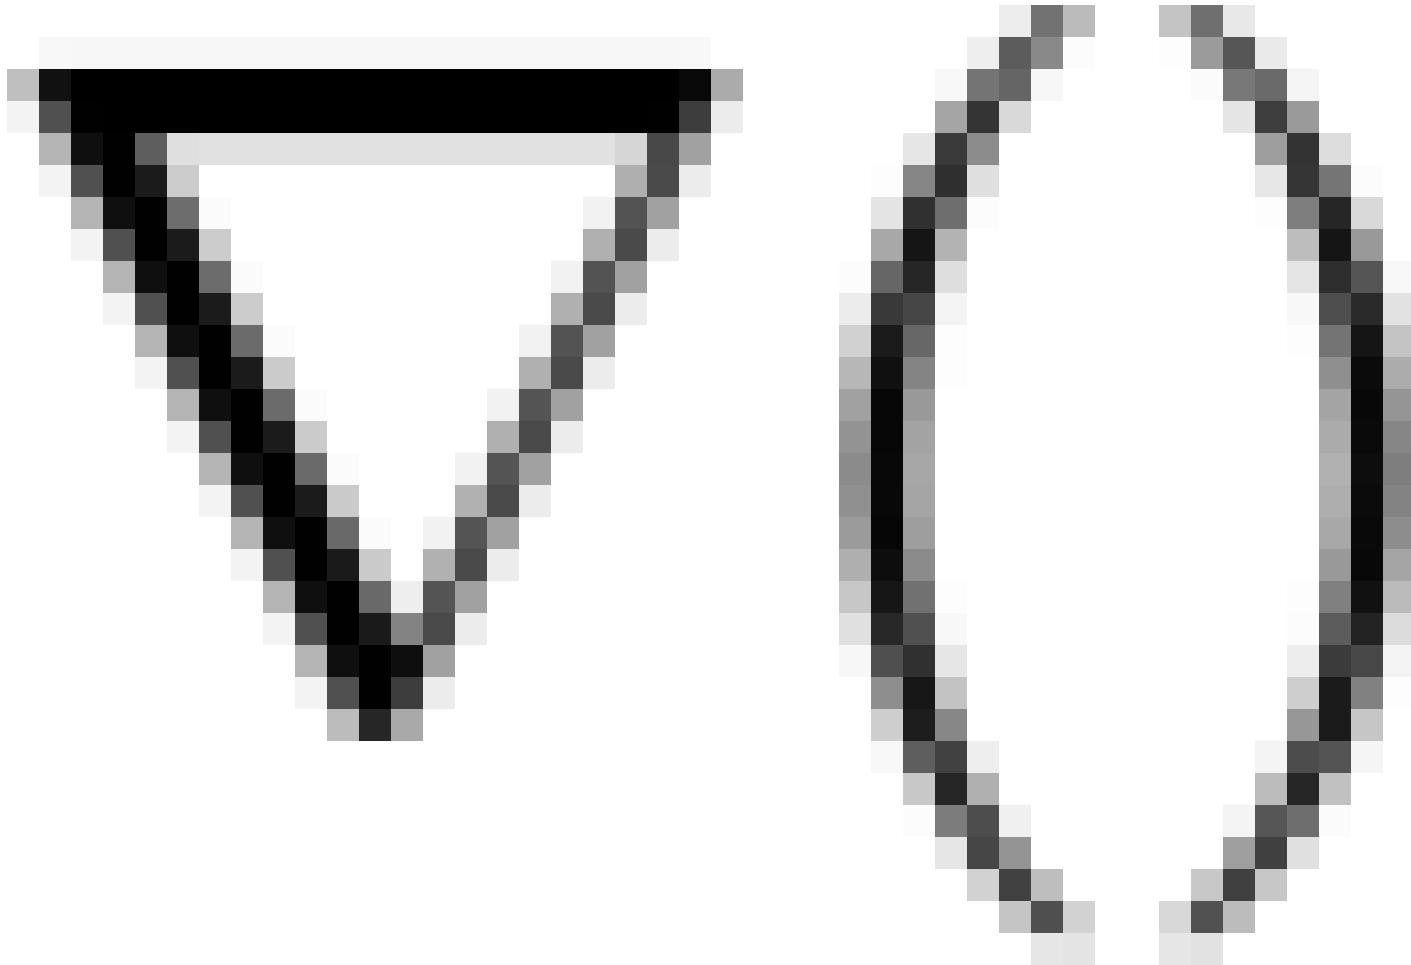

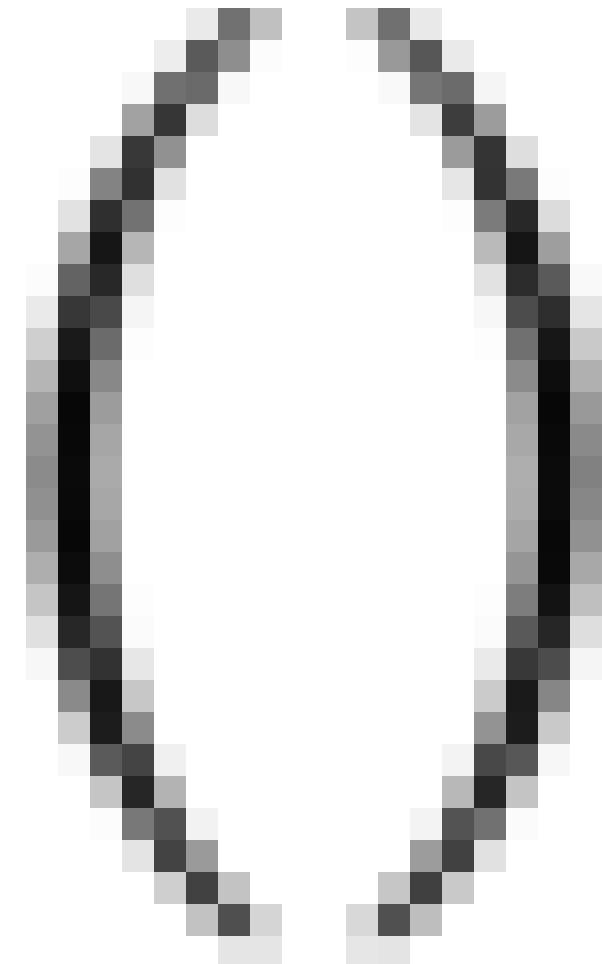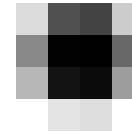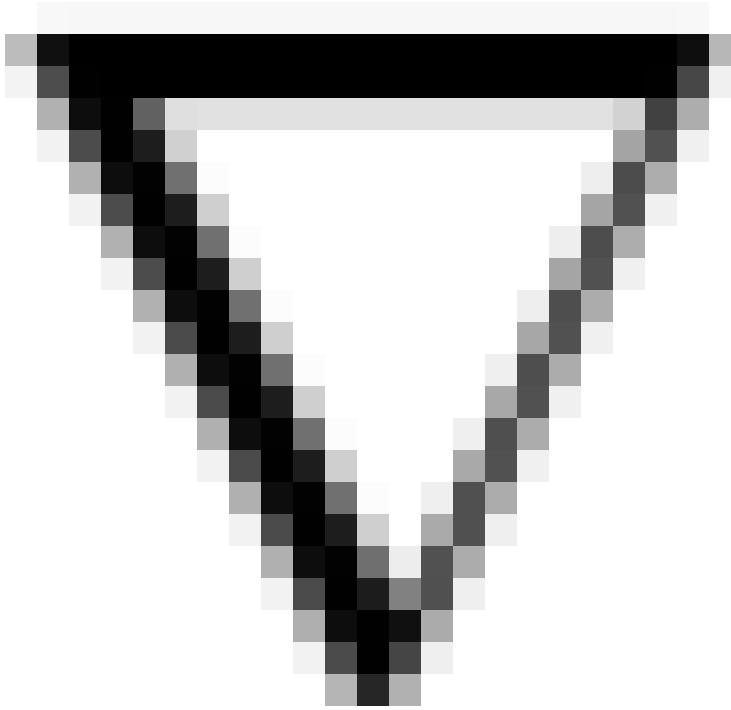



Boundary
conditions

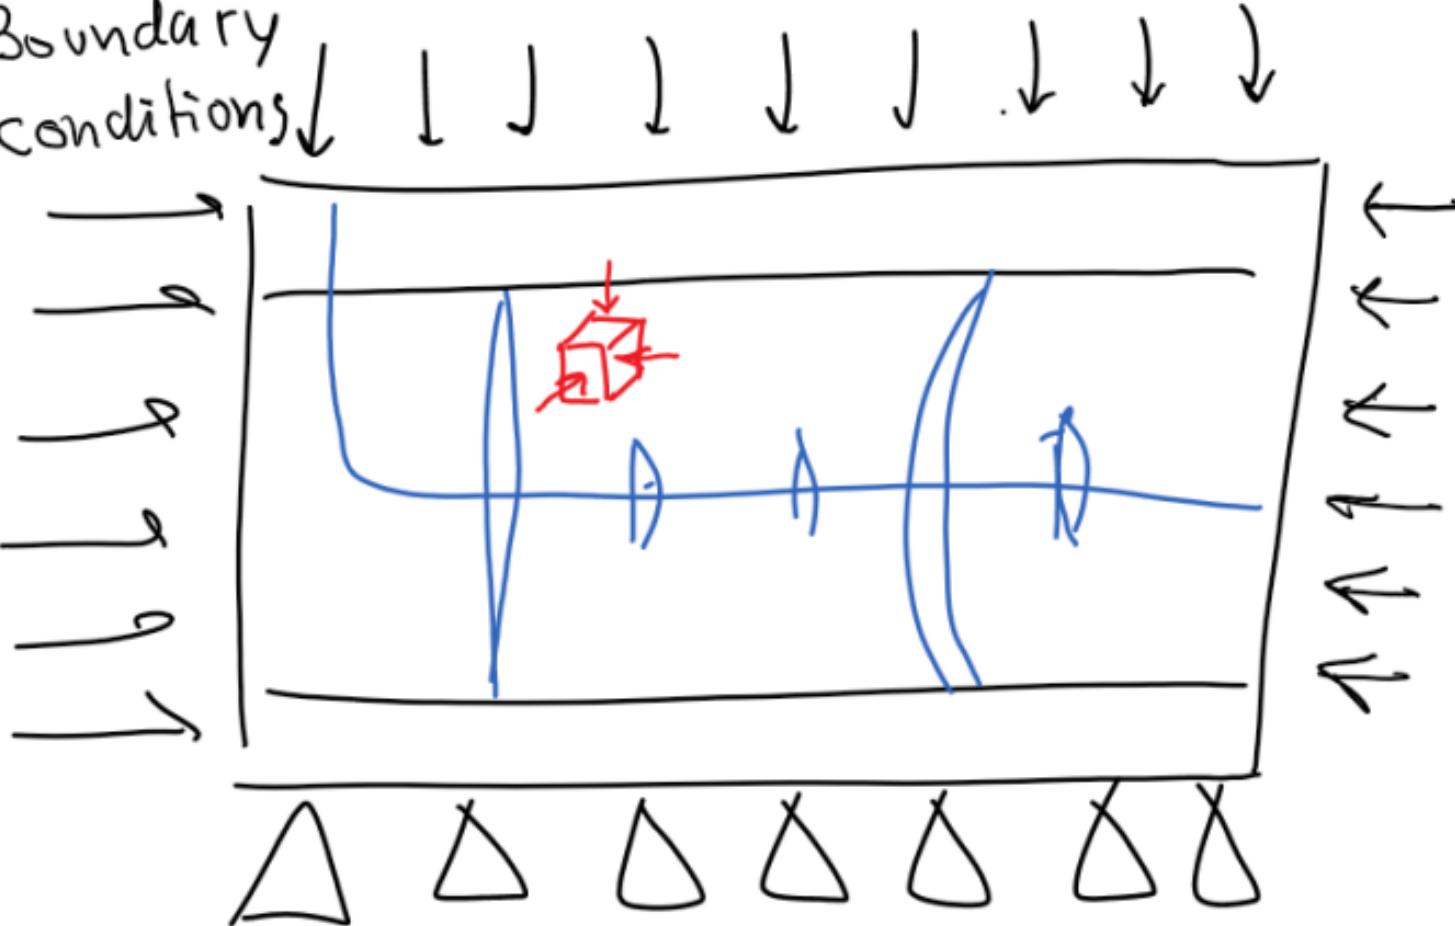

① Equilibrium

$$\frac{\partial \sigma_{ij}}{\partial x_i} + Pg = 0$$


② Kinematic

$$\underline{\epsilon} \leftrightarrow \underline{u}$$

③ Constitutive

$$\underline{\sigma} \leftrightarrow \underline{\epsilon}$$


Orthorhombic symmetry
(symmetry respect to 3 orthogonal planes)

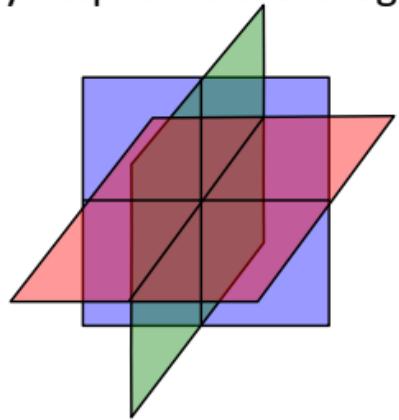

$$\underline{\underline{C}} = \begin{bmatrix} C_{11} & C_{12} & C_{13} & & & \\ C_{12} & C_{22} & C_{23} & 0 & & \\ C_{13} & C_{23} & C_{33} & & & \\ & & & C_{44} & 0 & 0 \\ 0 & 0 & C_{55} & 0 & & \\ 0 & 0 & 0 & C_{66} & & \end{bmatrix}$$



9 independent parameters


Transverse Isotropy
(symmetry respect to 1 axis)

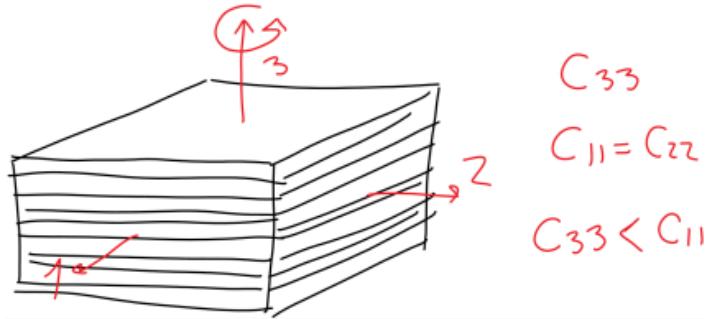

$$\underline{\underline{C}} = \begin{bmatrix} C_{11} & C_{12} & C_{13} & & & \\ C_{12} & C_{11} & C_{13} & 0 & & \\ C_{13} & C_{13} & C_{33} & & & \\ & & & C_{44} & 0 & 0 \\ 0 & 0 & 0 & C_{44} & 0 & 0 \\ 0 & 0 & 0 & 0 & C_{66} & \end{bmatrix}$$


5 independent parameters ($C_{12}=C_{11}-2C_{66}$)

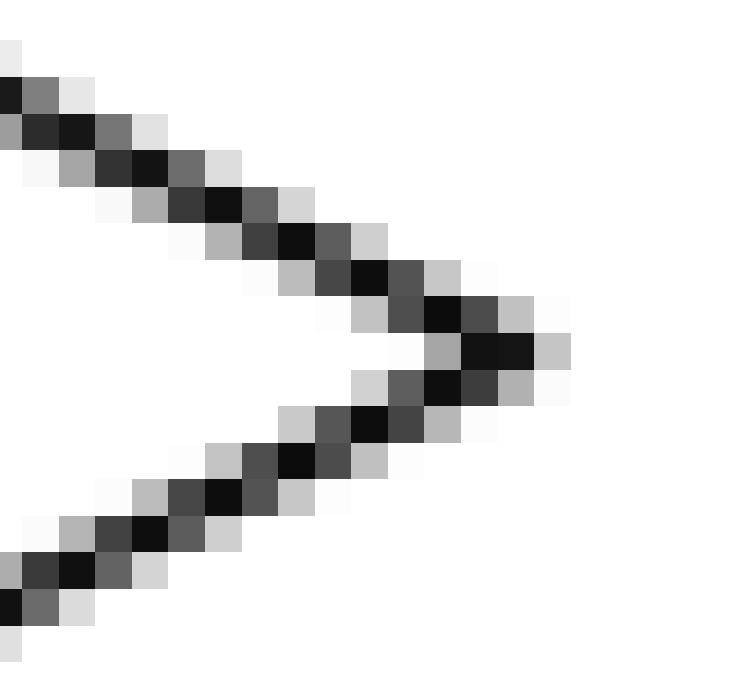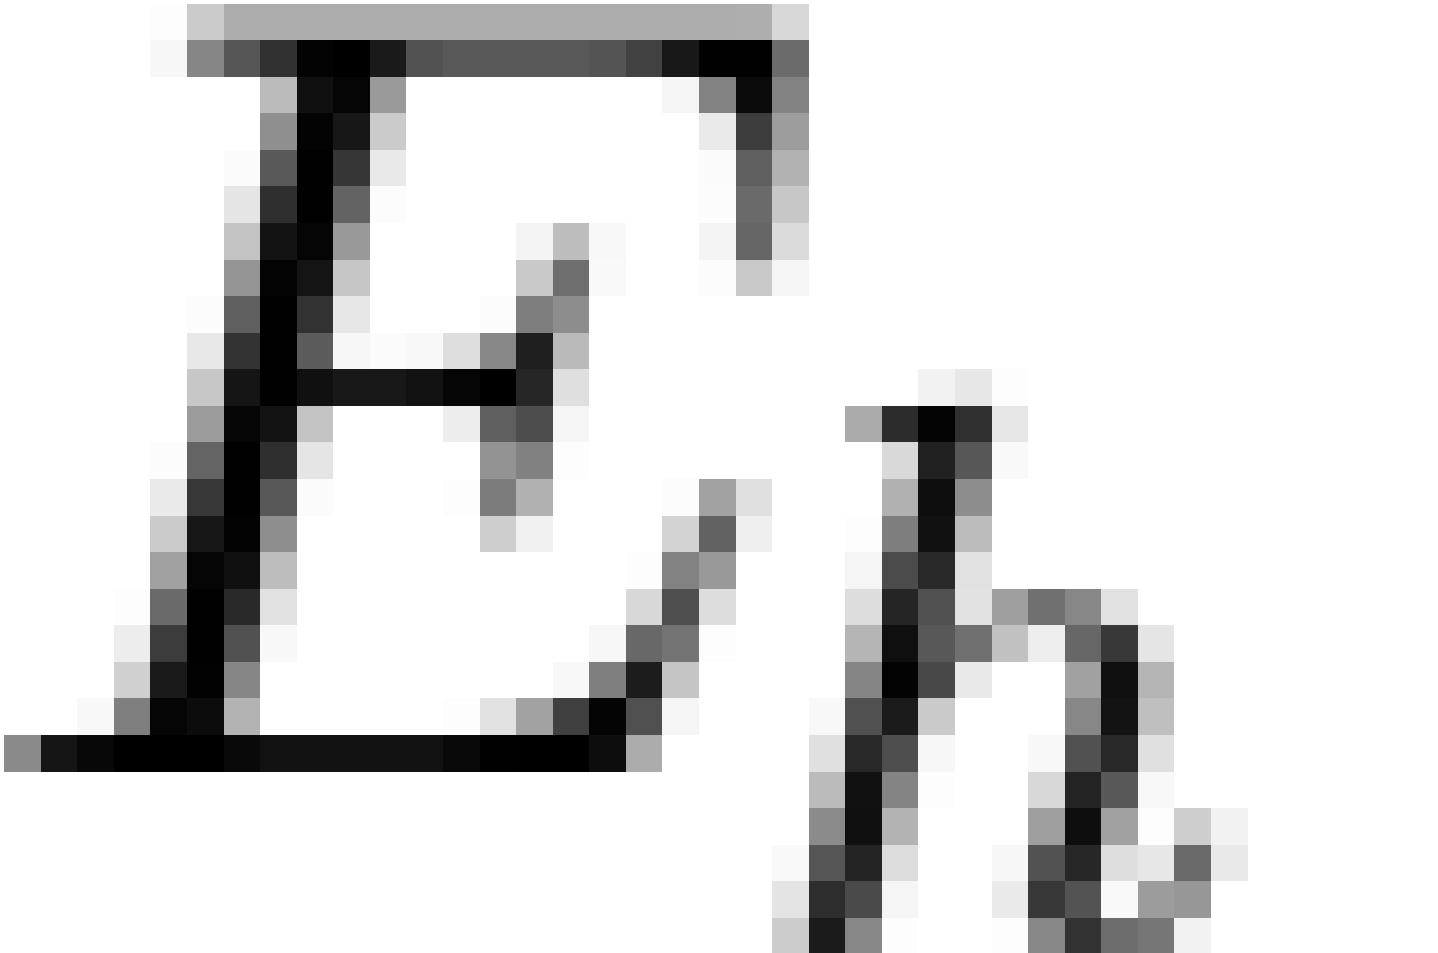


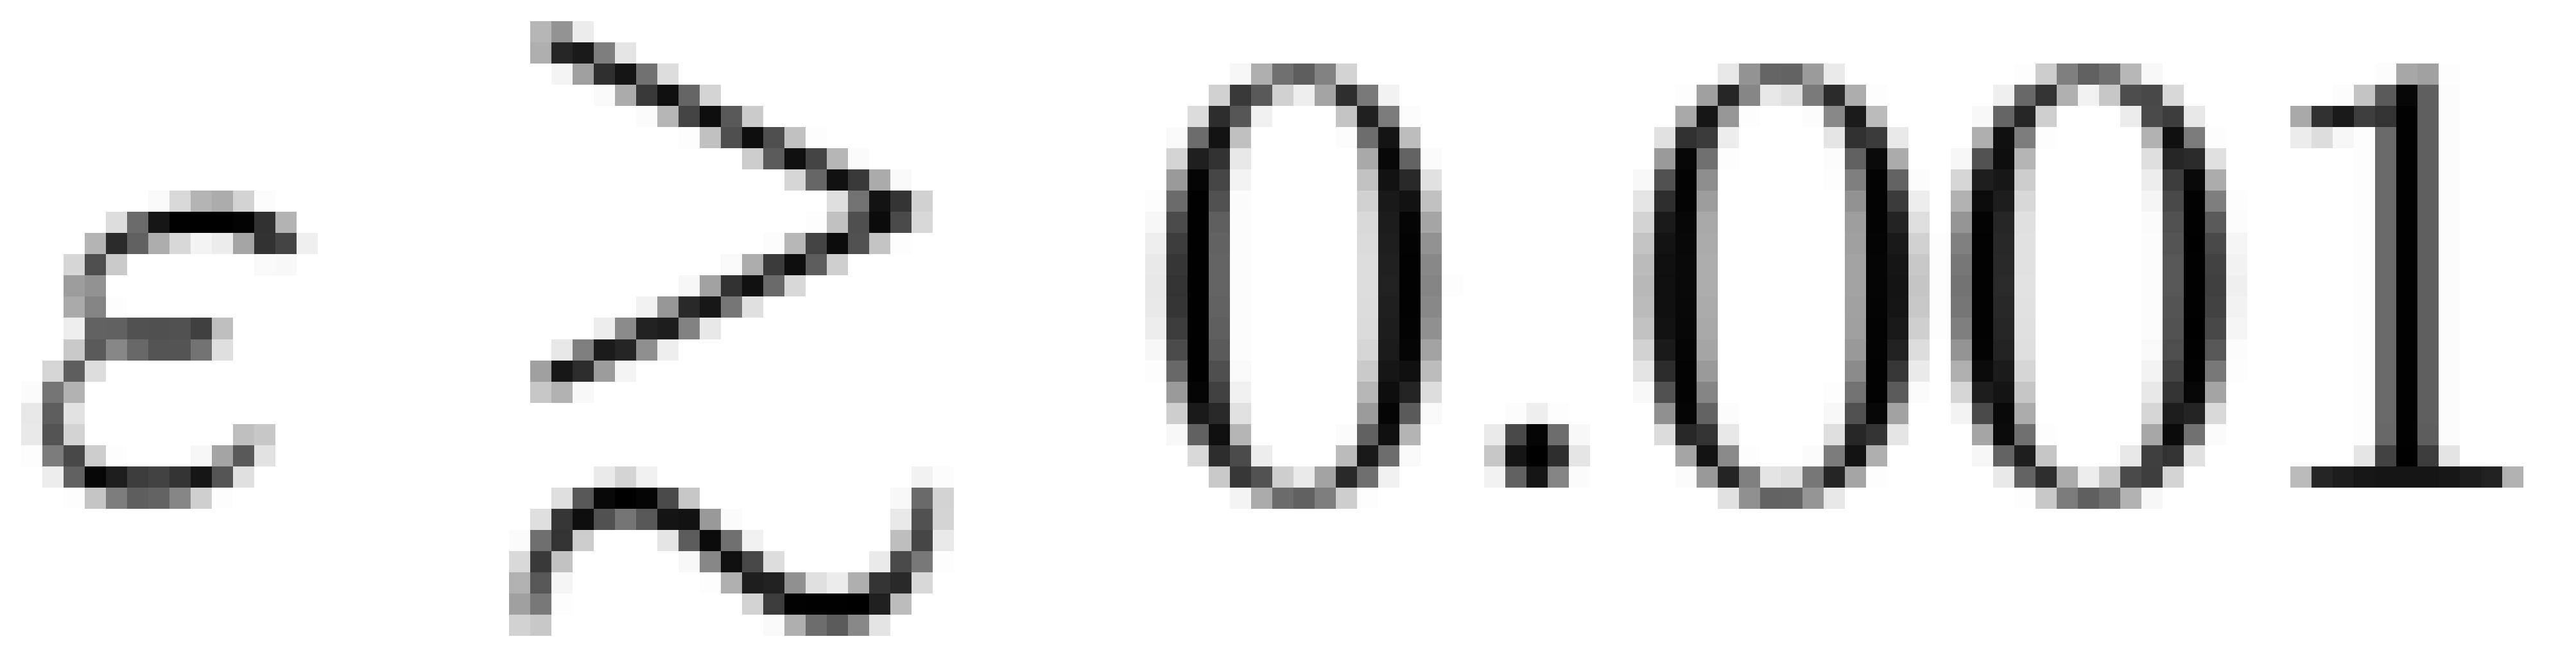







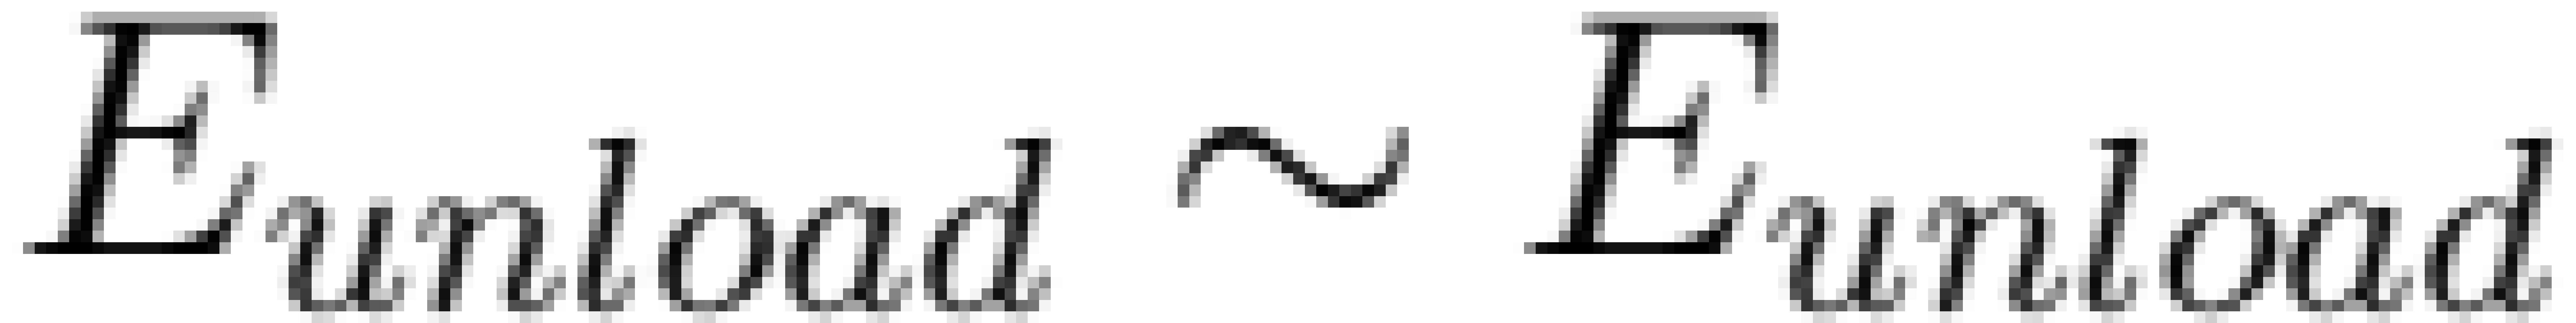


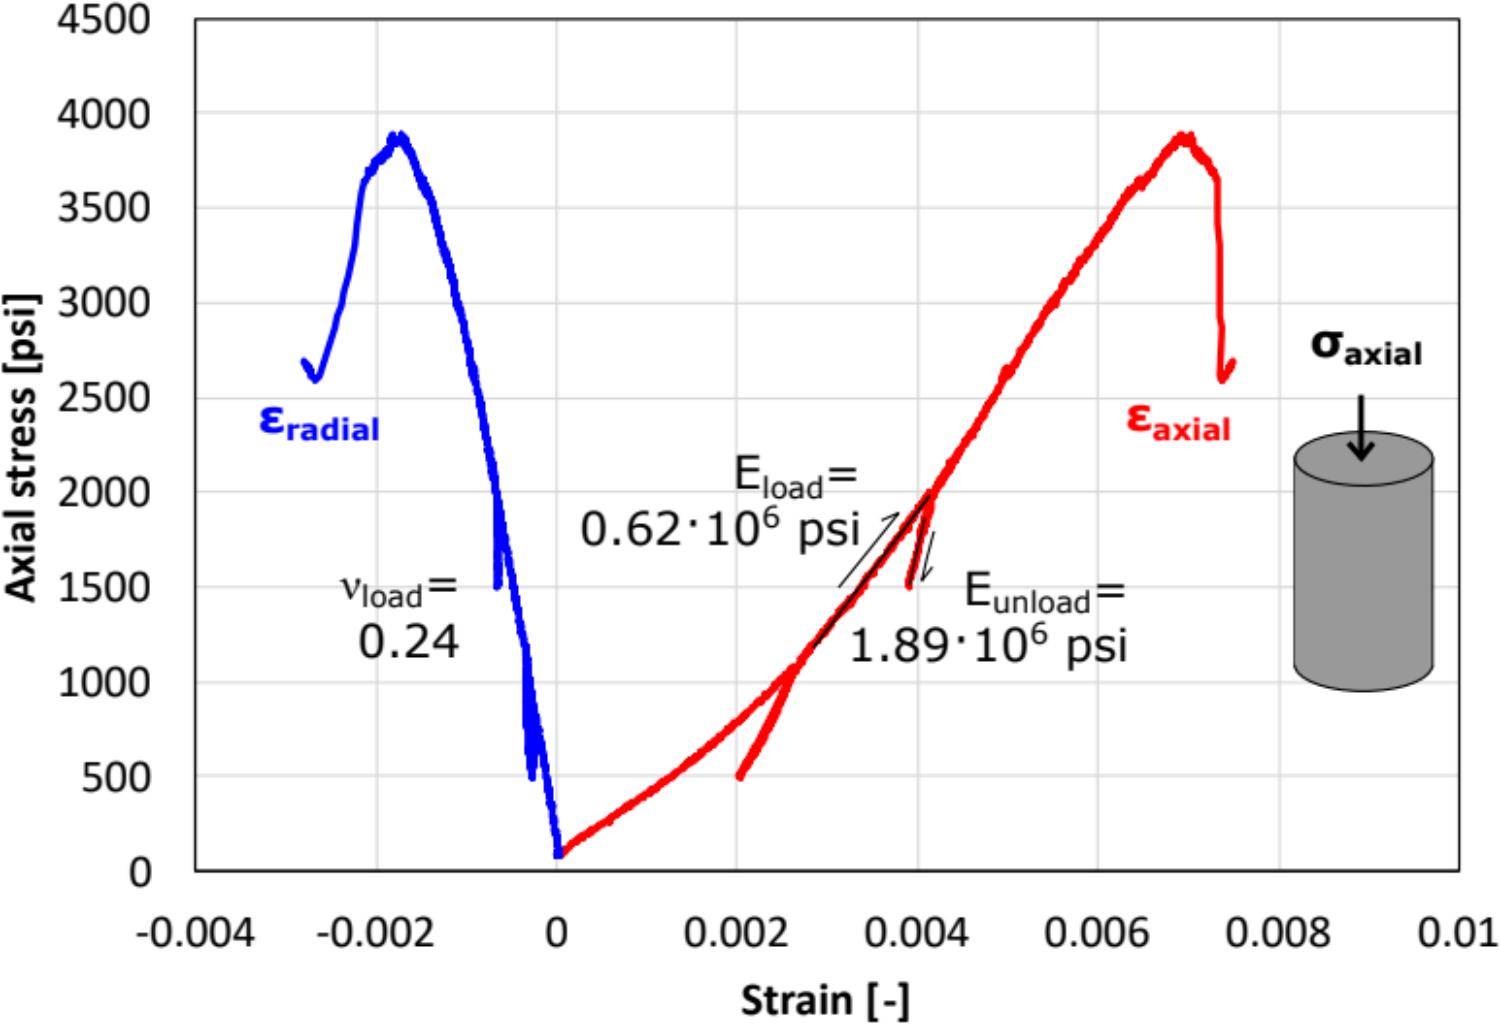



Strain rate hardening: The faster the loading, the stiffer the material

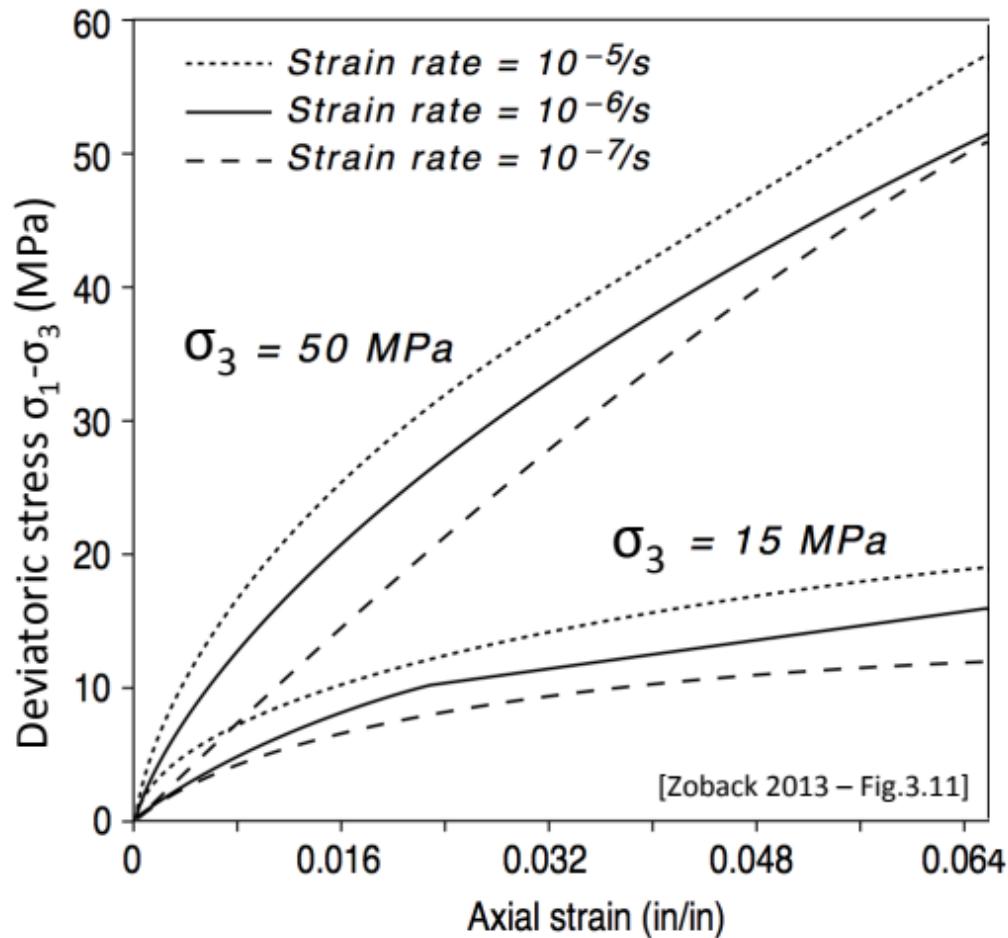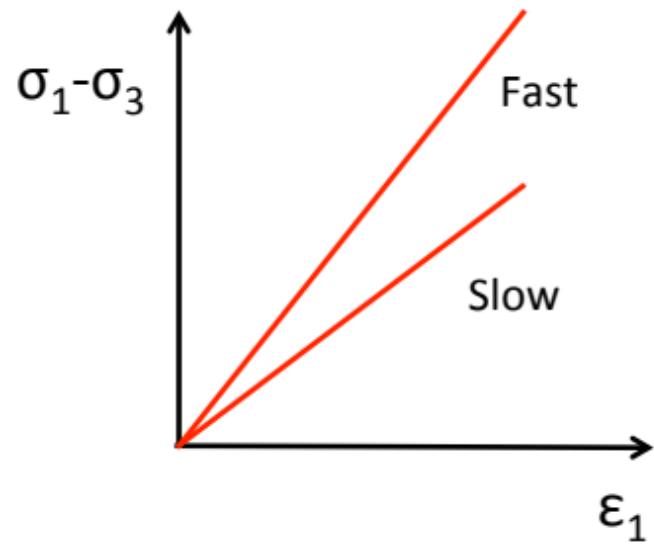



Creep strain at constant stress


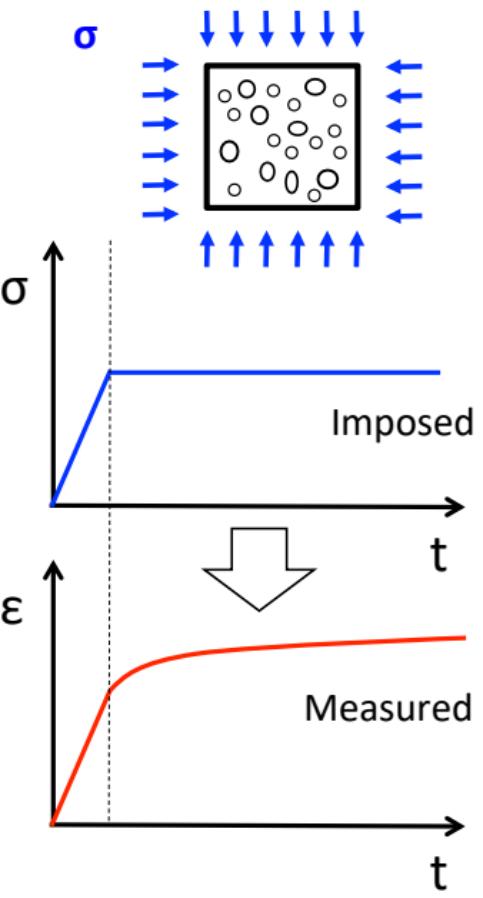



Example Texas Cream Limestone ($P_c = 1000$ psi)

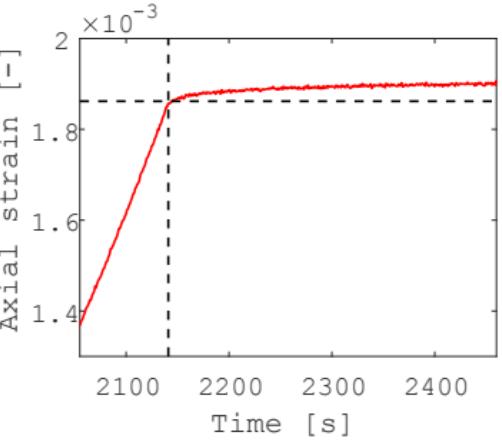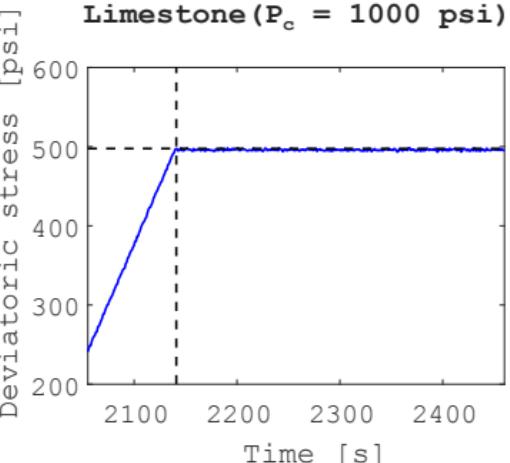


Stress relaxation at constant strain

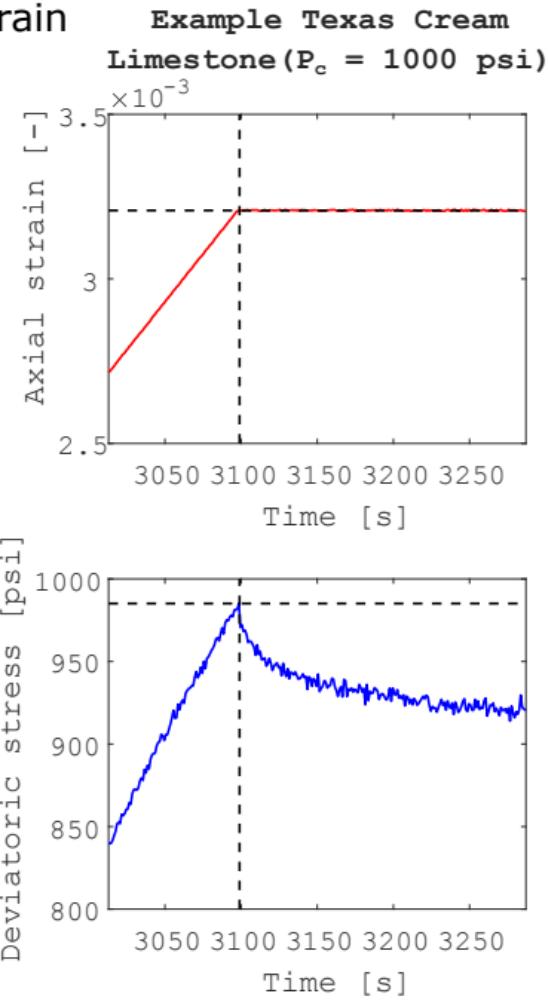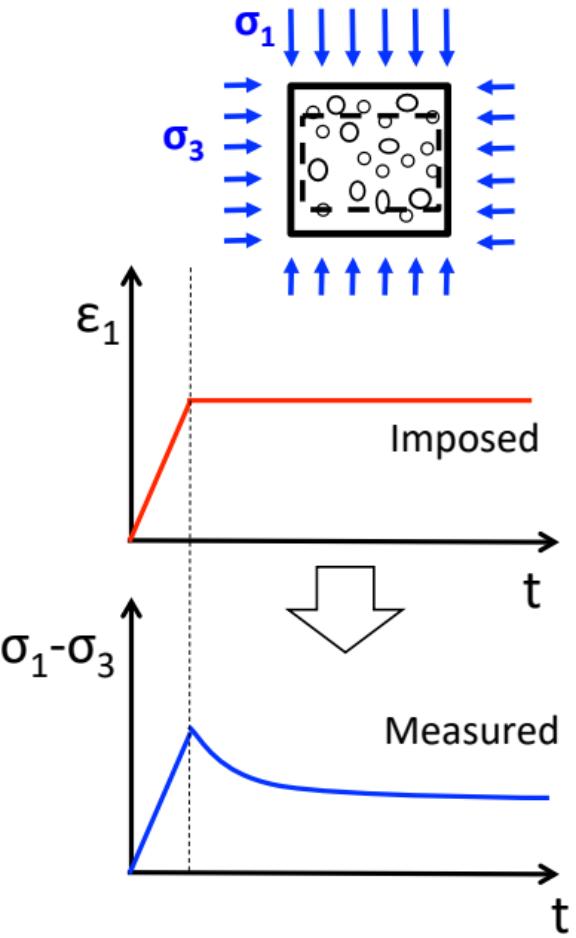

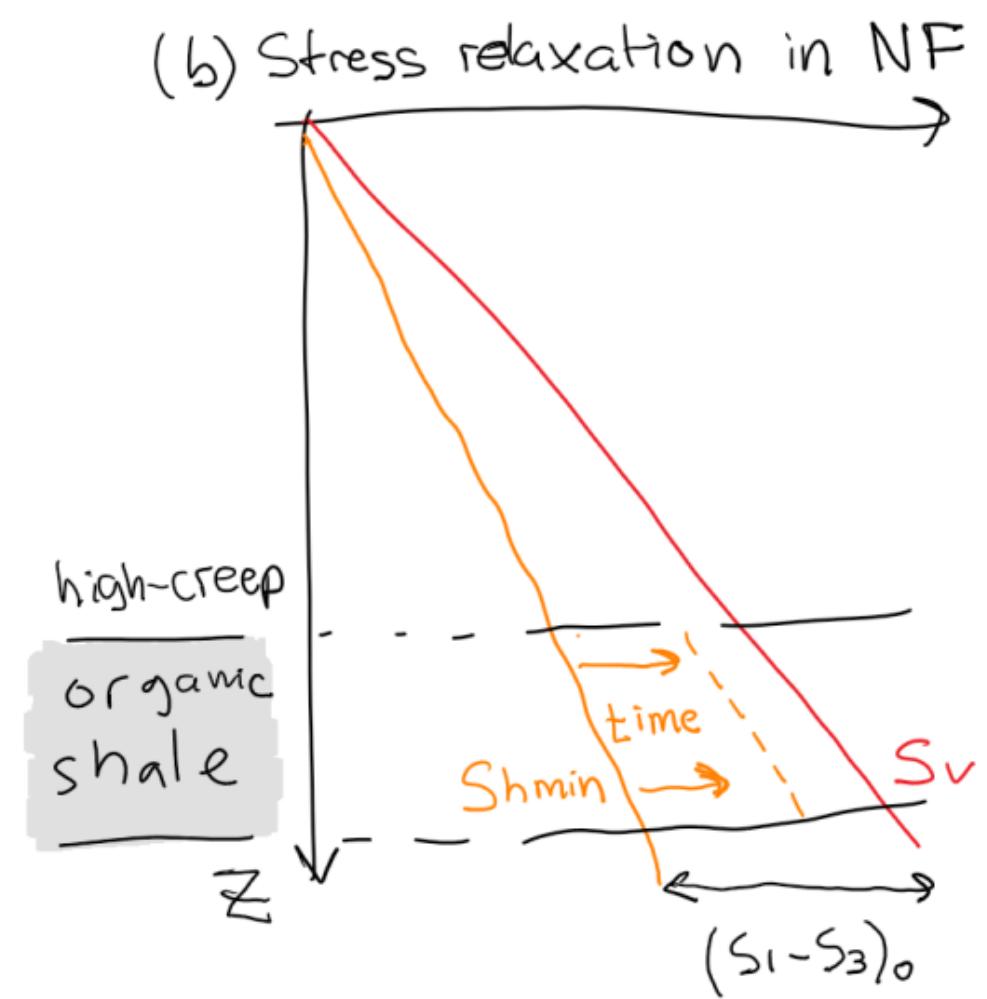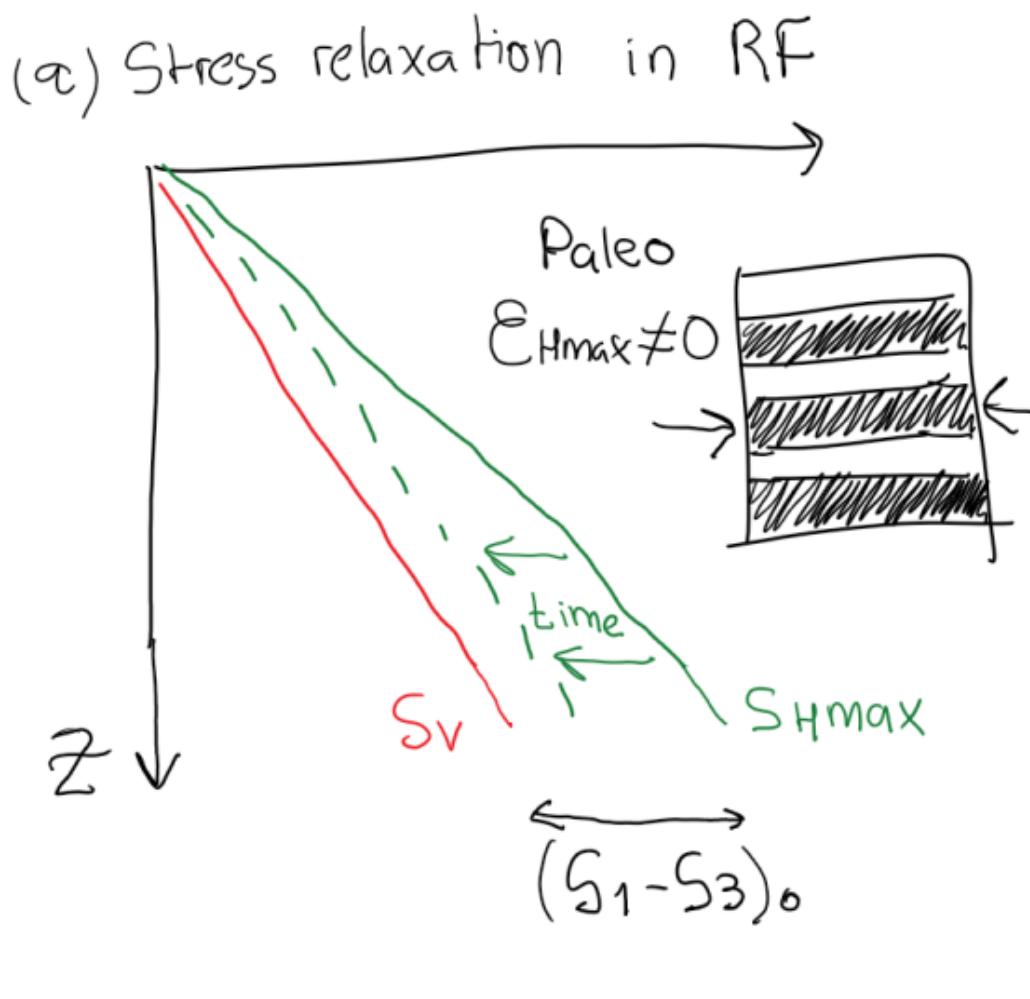

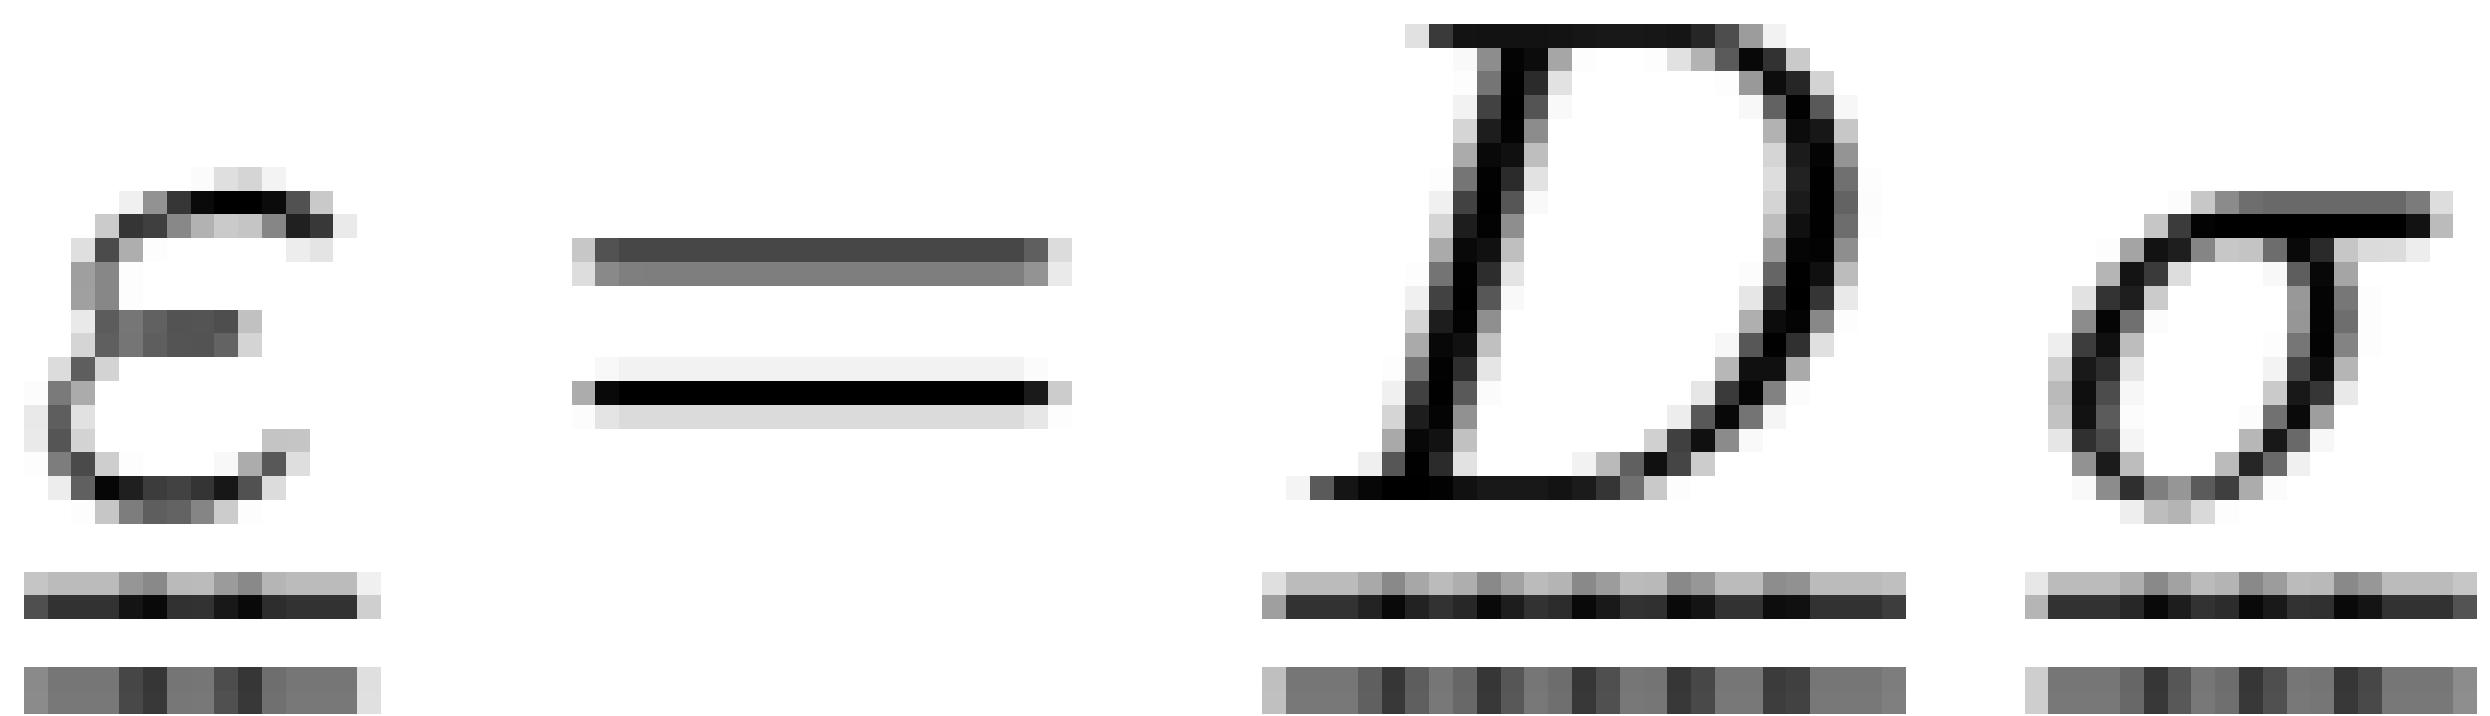



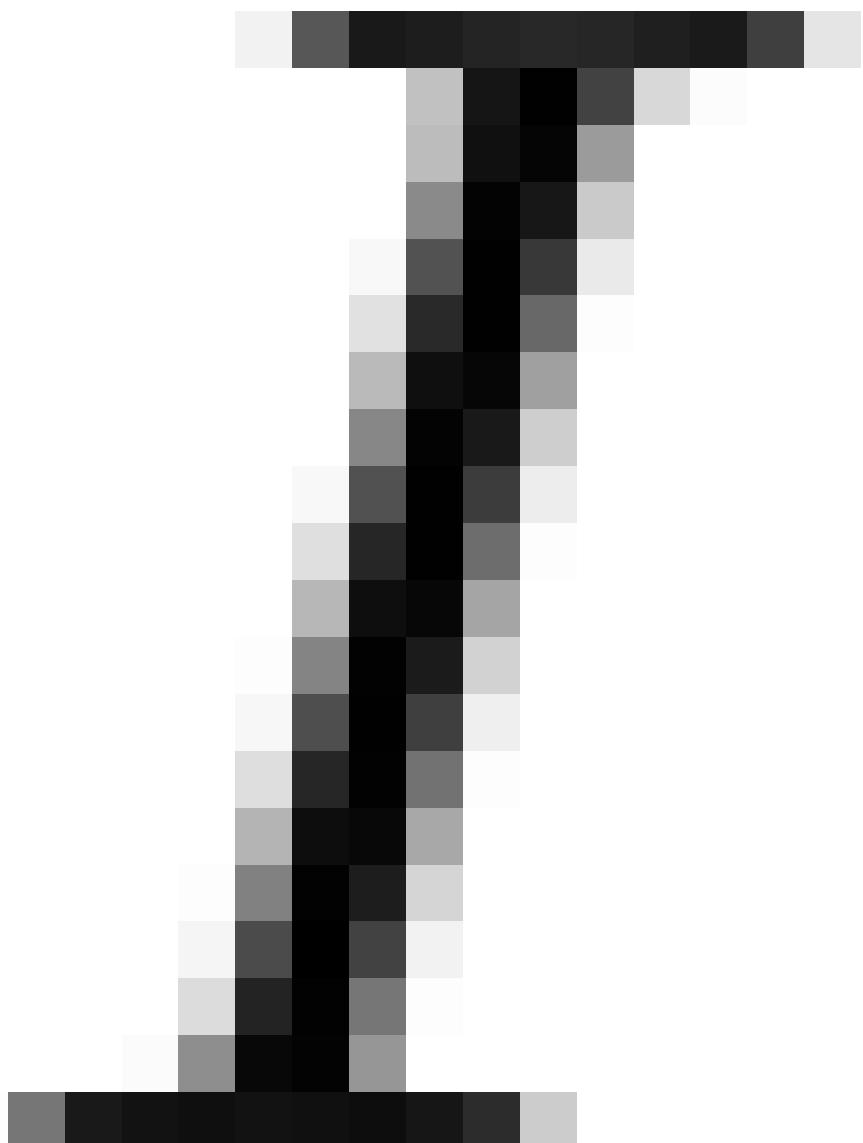

α

=

1


-


$K_{drained}$




K_{unq} .








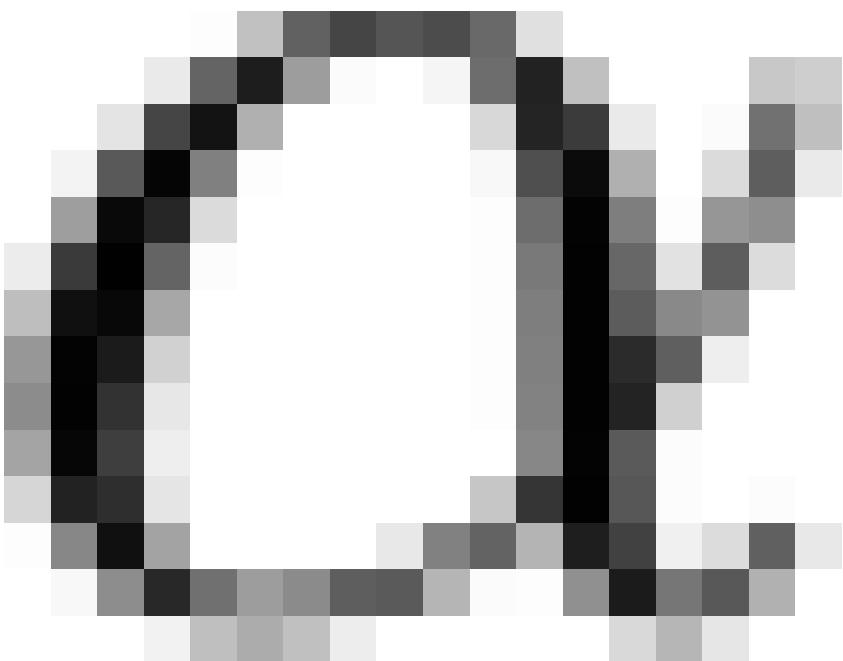


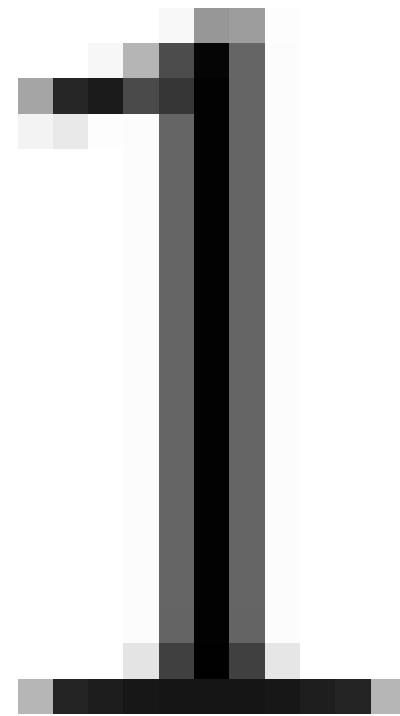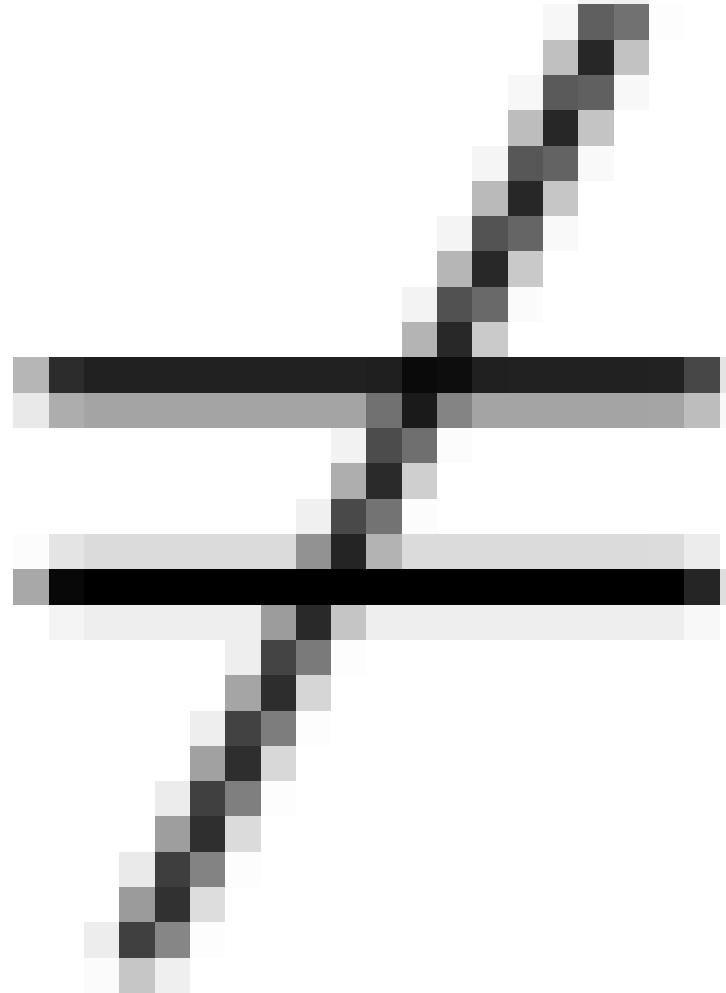
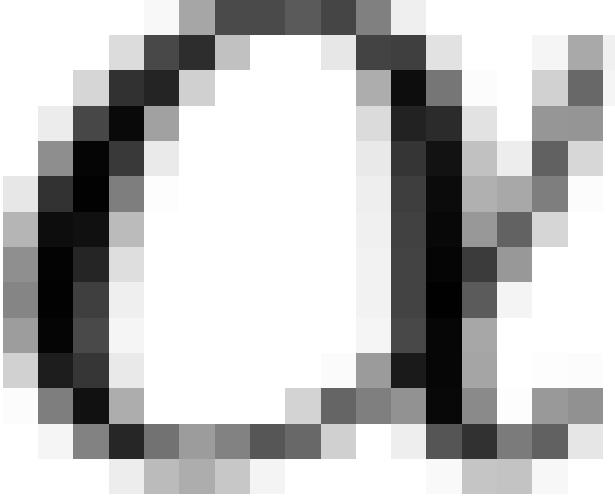



(a) Thermal strain

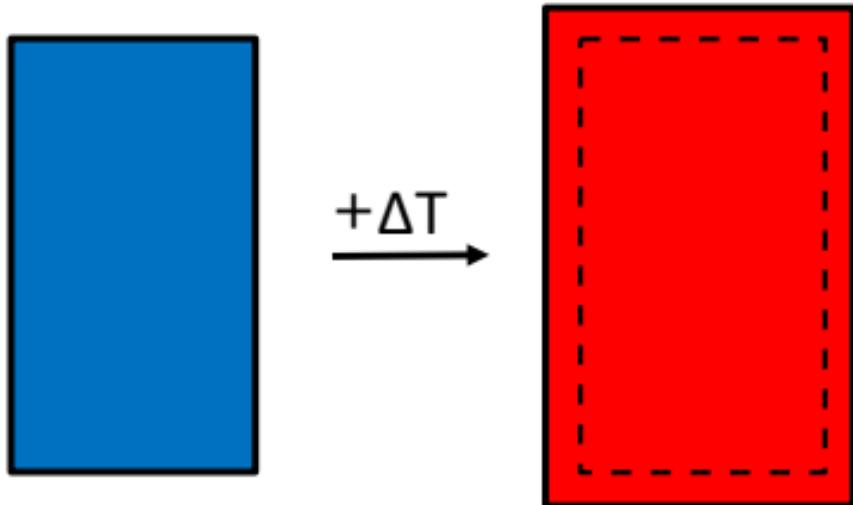







(b) Thermal stress and strain

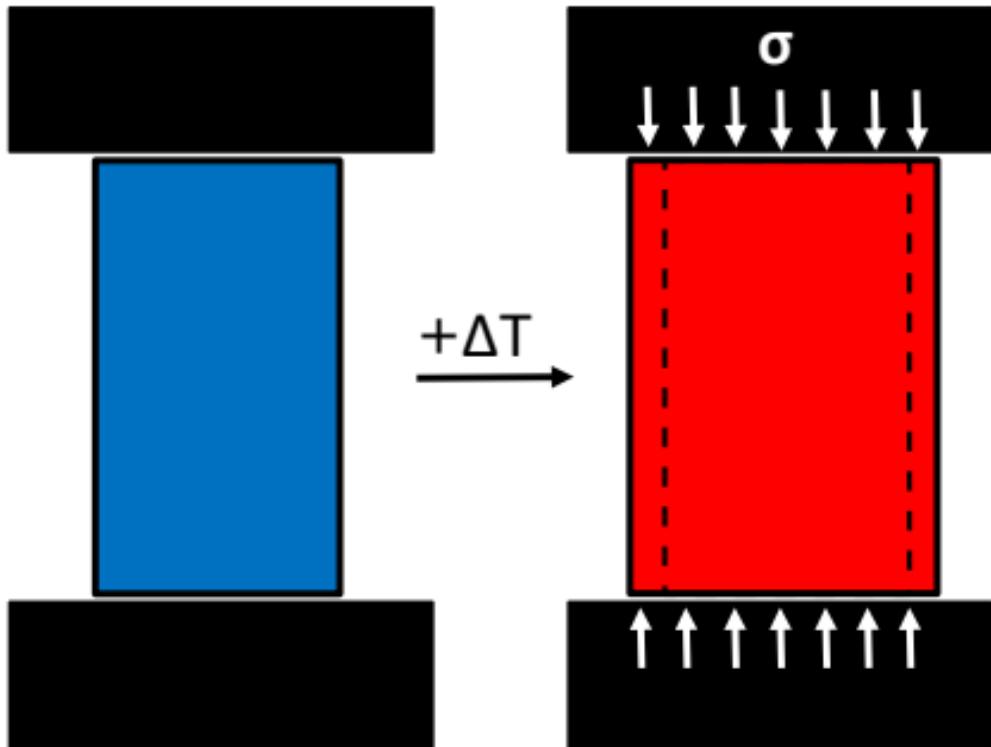


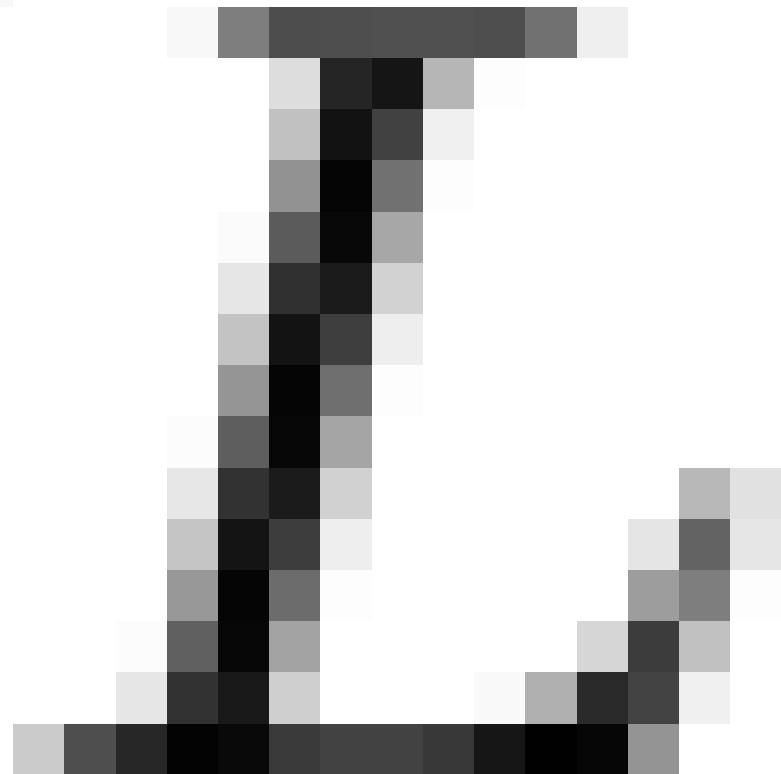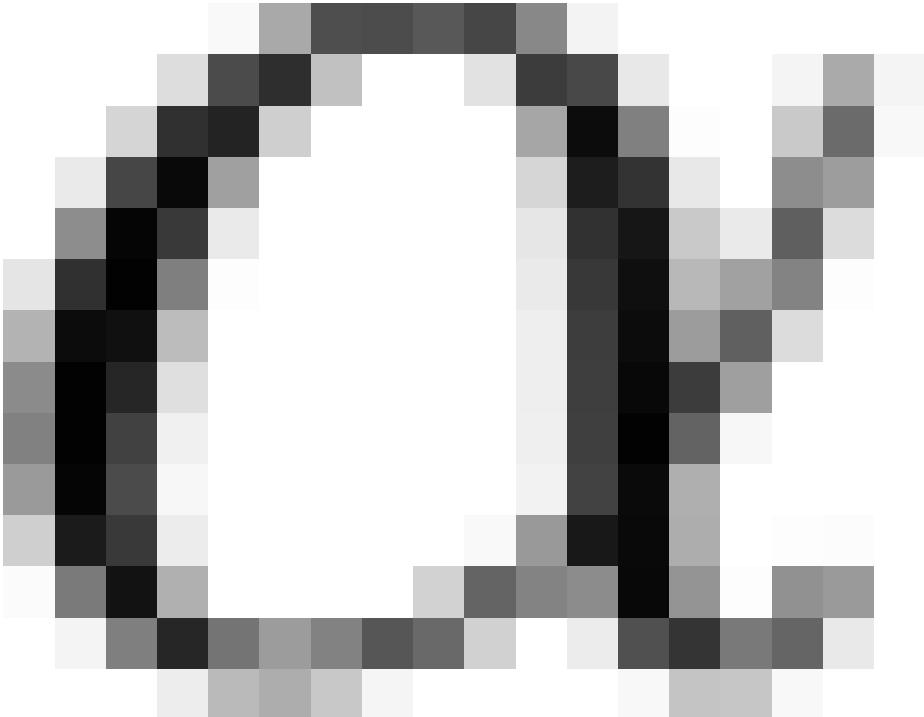


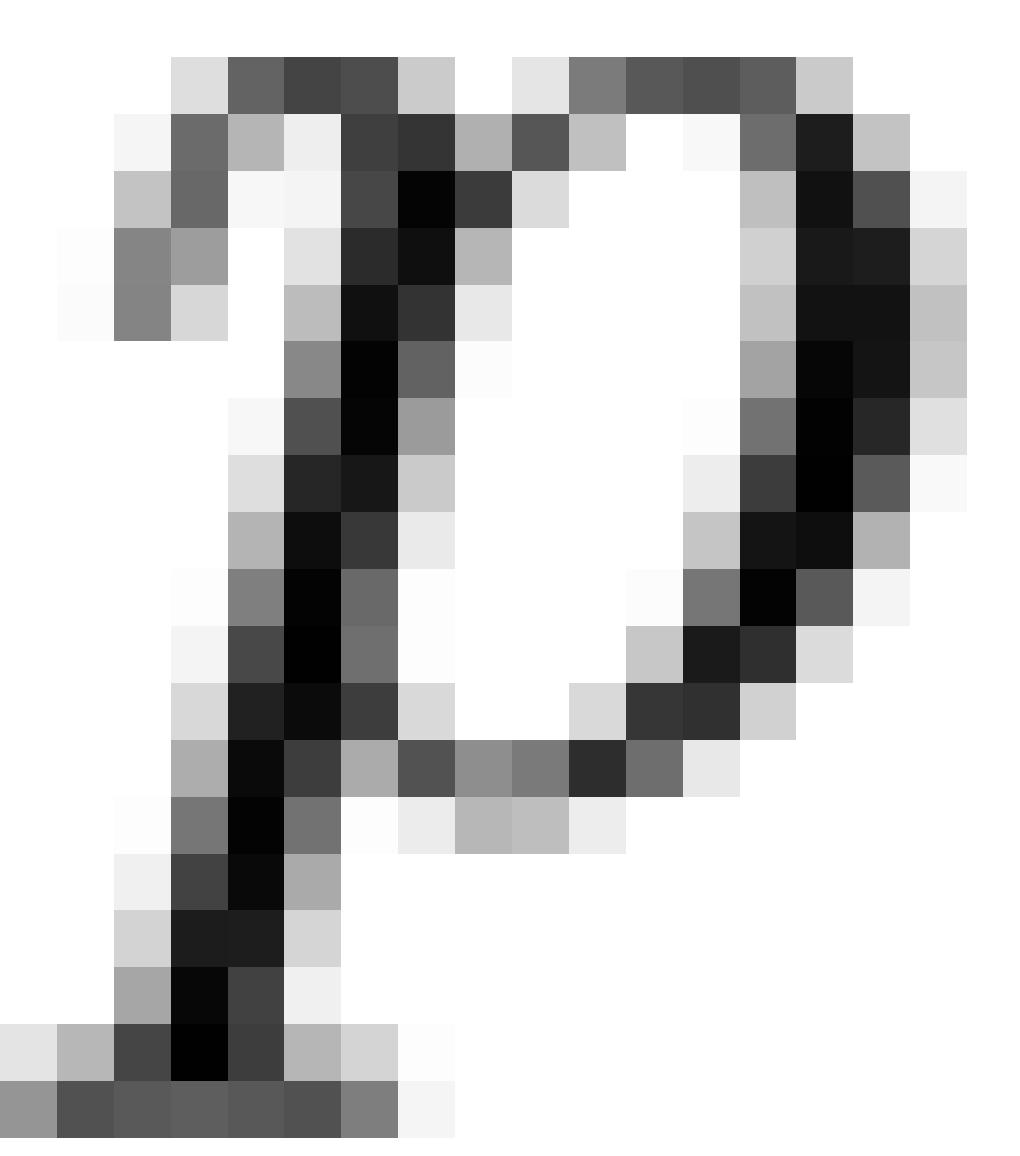

$$\alpha_L = \frac{1}{L} \frac{dL}{dT}$$

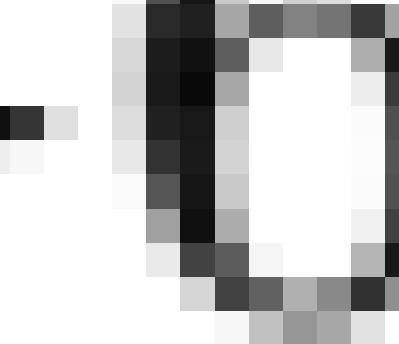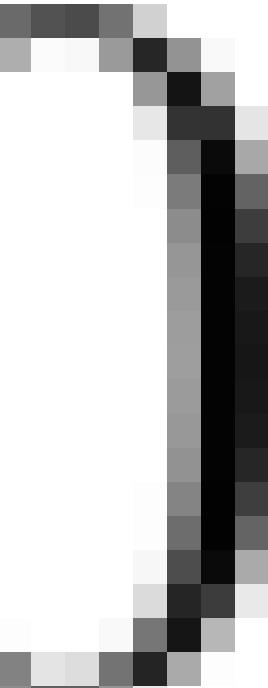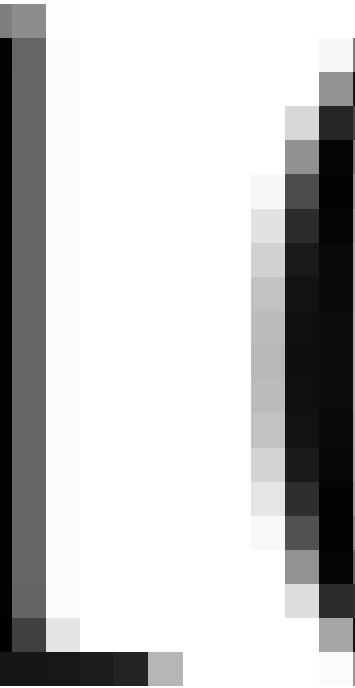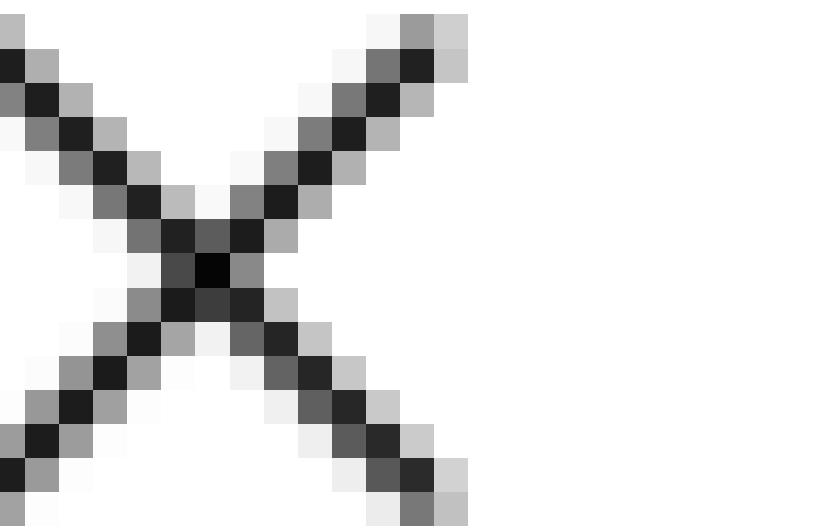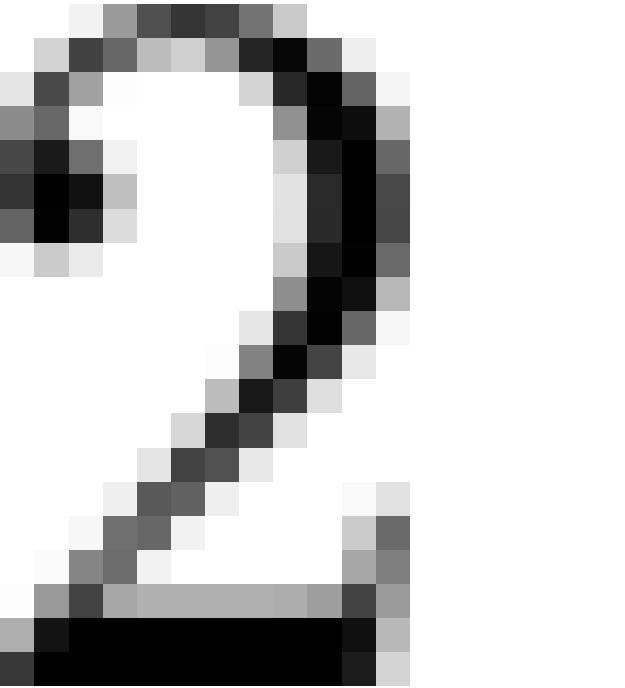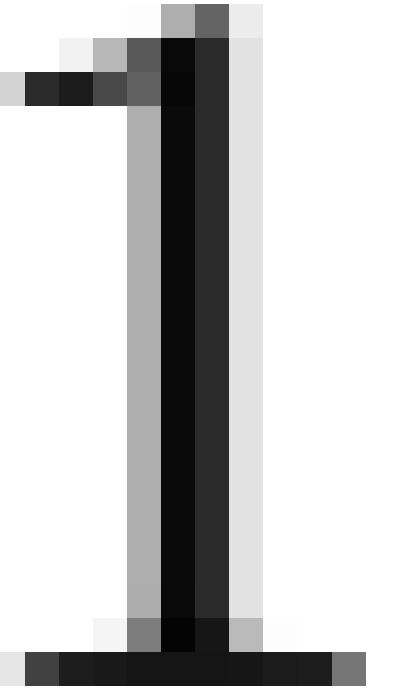

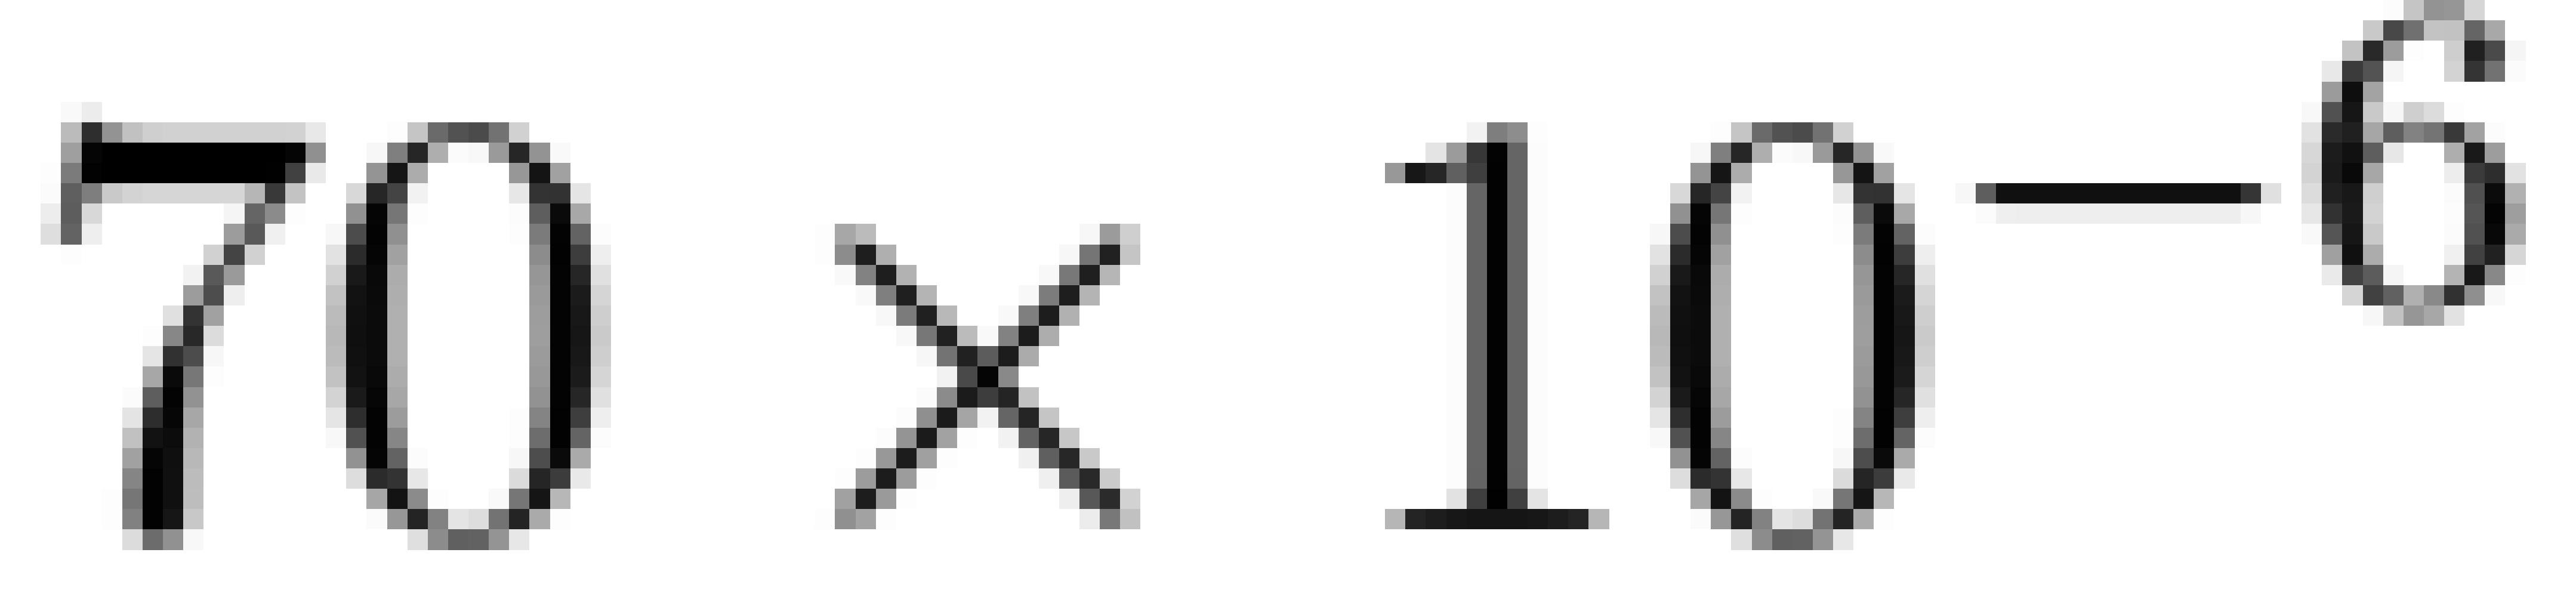


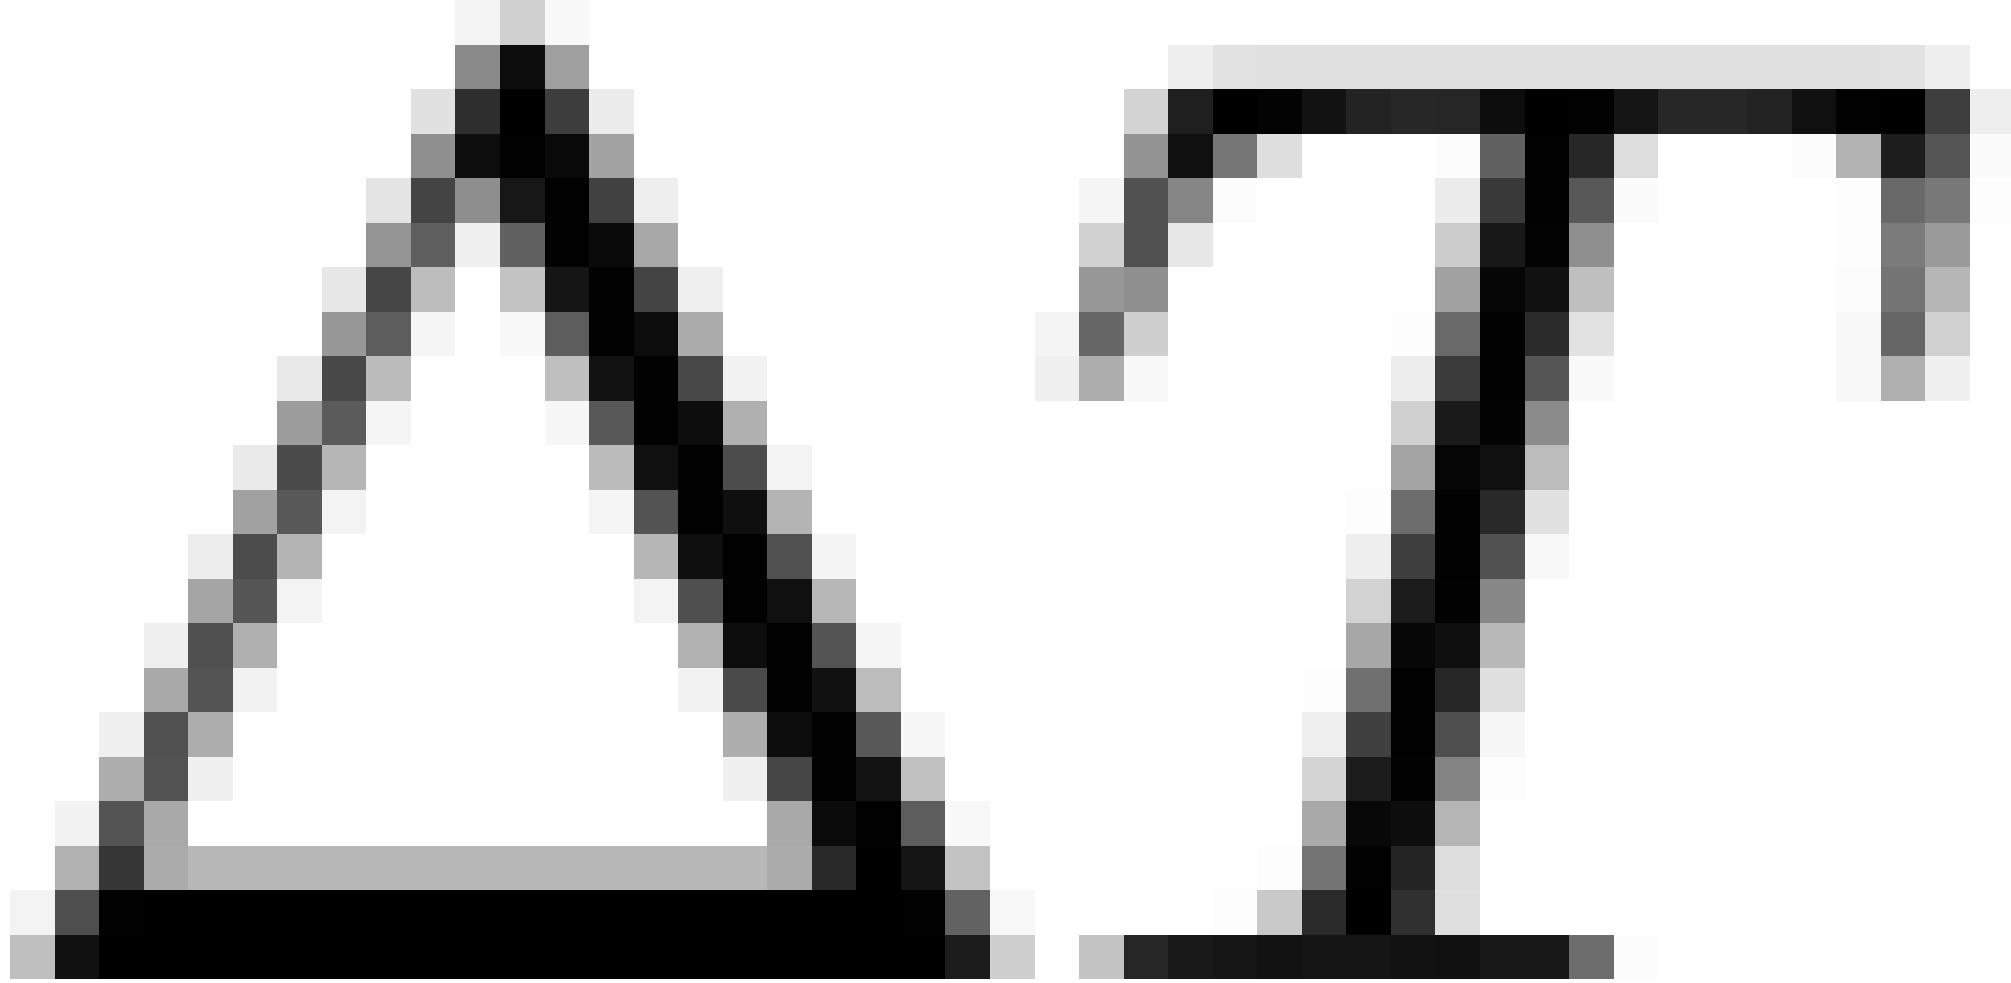


$$\left\{ \begin{array}{lcl} \sigma_{11} & = & (\lambda + 2\mu) \varepsilon_{11} + \lambda \varepsilon_{22} + \lambda \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{22} & = & \lambda \varepsilon_{11} + (\lambda + 2\mu) \varepsilon_{22} + \lambda \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{33} & = & \lambda \varepsilon_{11} + \lambda \varepsilon_{22} + (\lambda + 2\mu) \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{23} & = & 2\mu \varepsilon_{23} \\ \sigma_{13} & = & 2\mu \varepsilon_{13} \\ \sigma_{12} & = & 2\mu \varepsilon_{12} \end{array} \right.$$





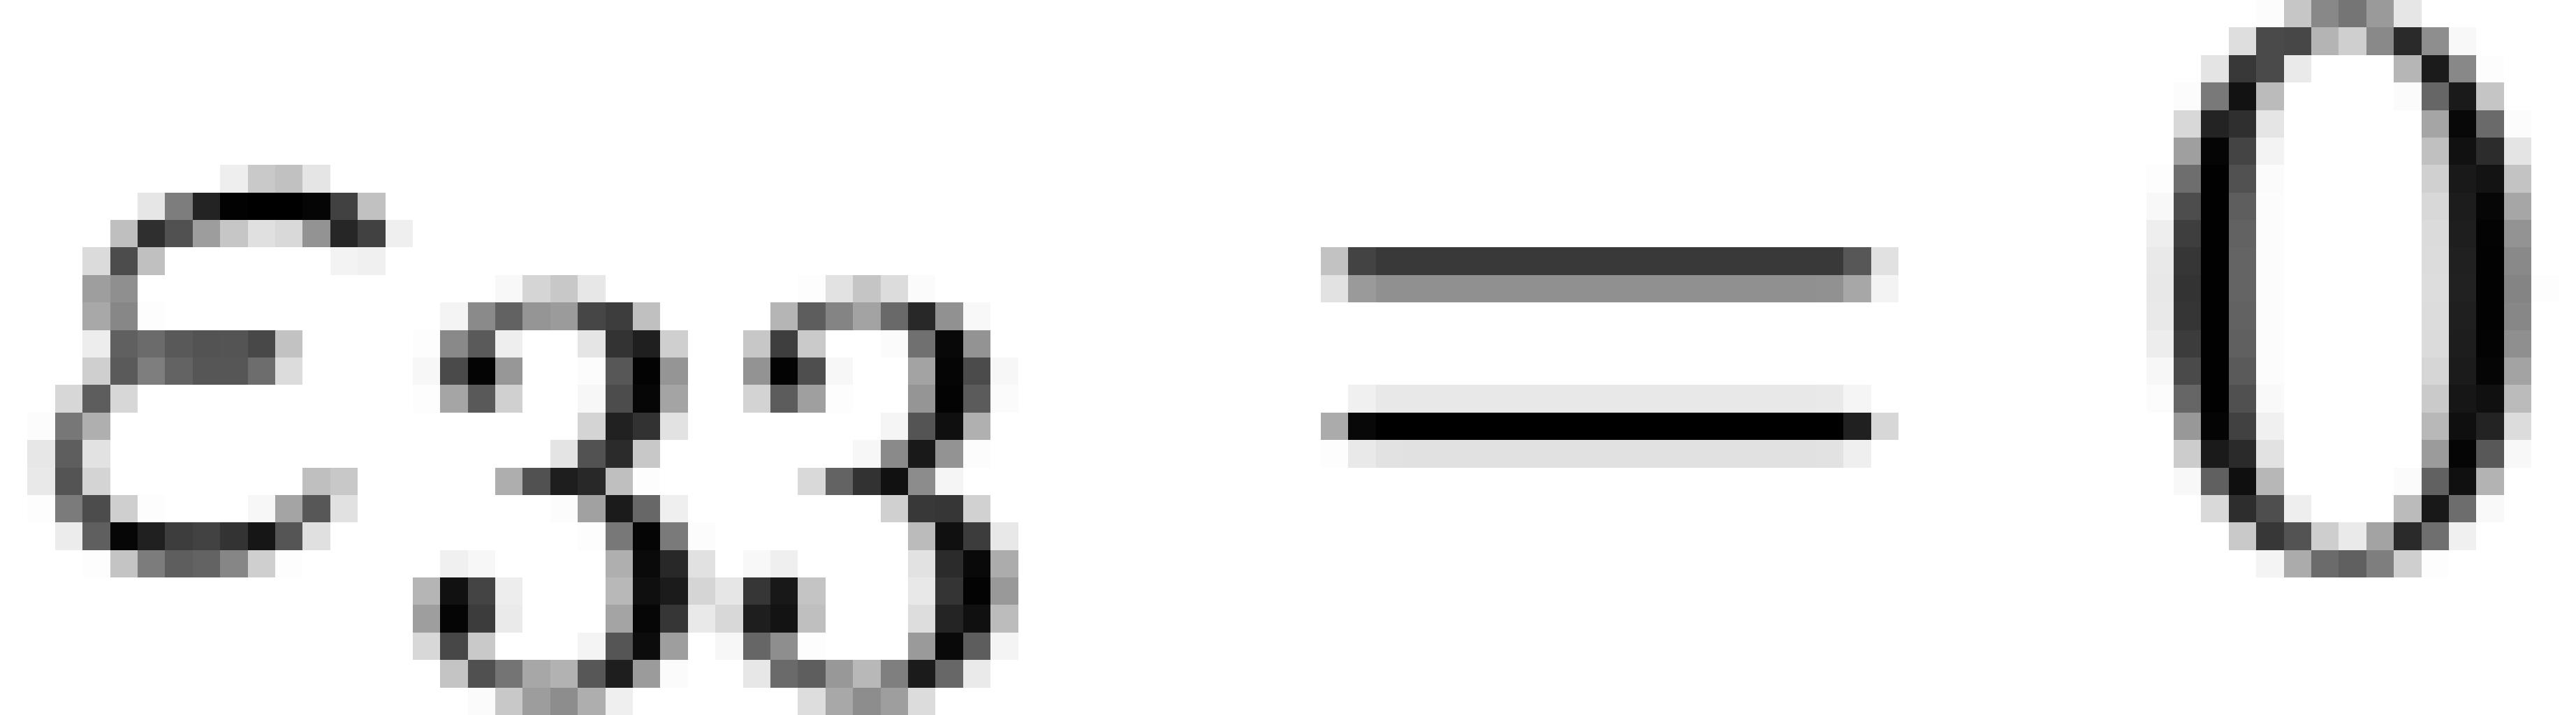

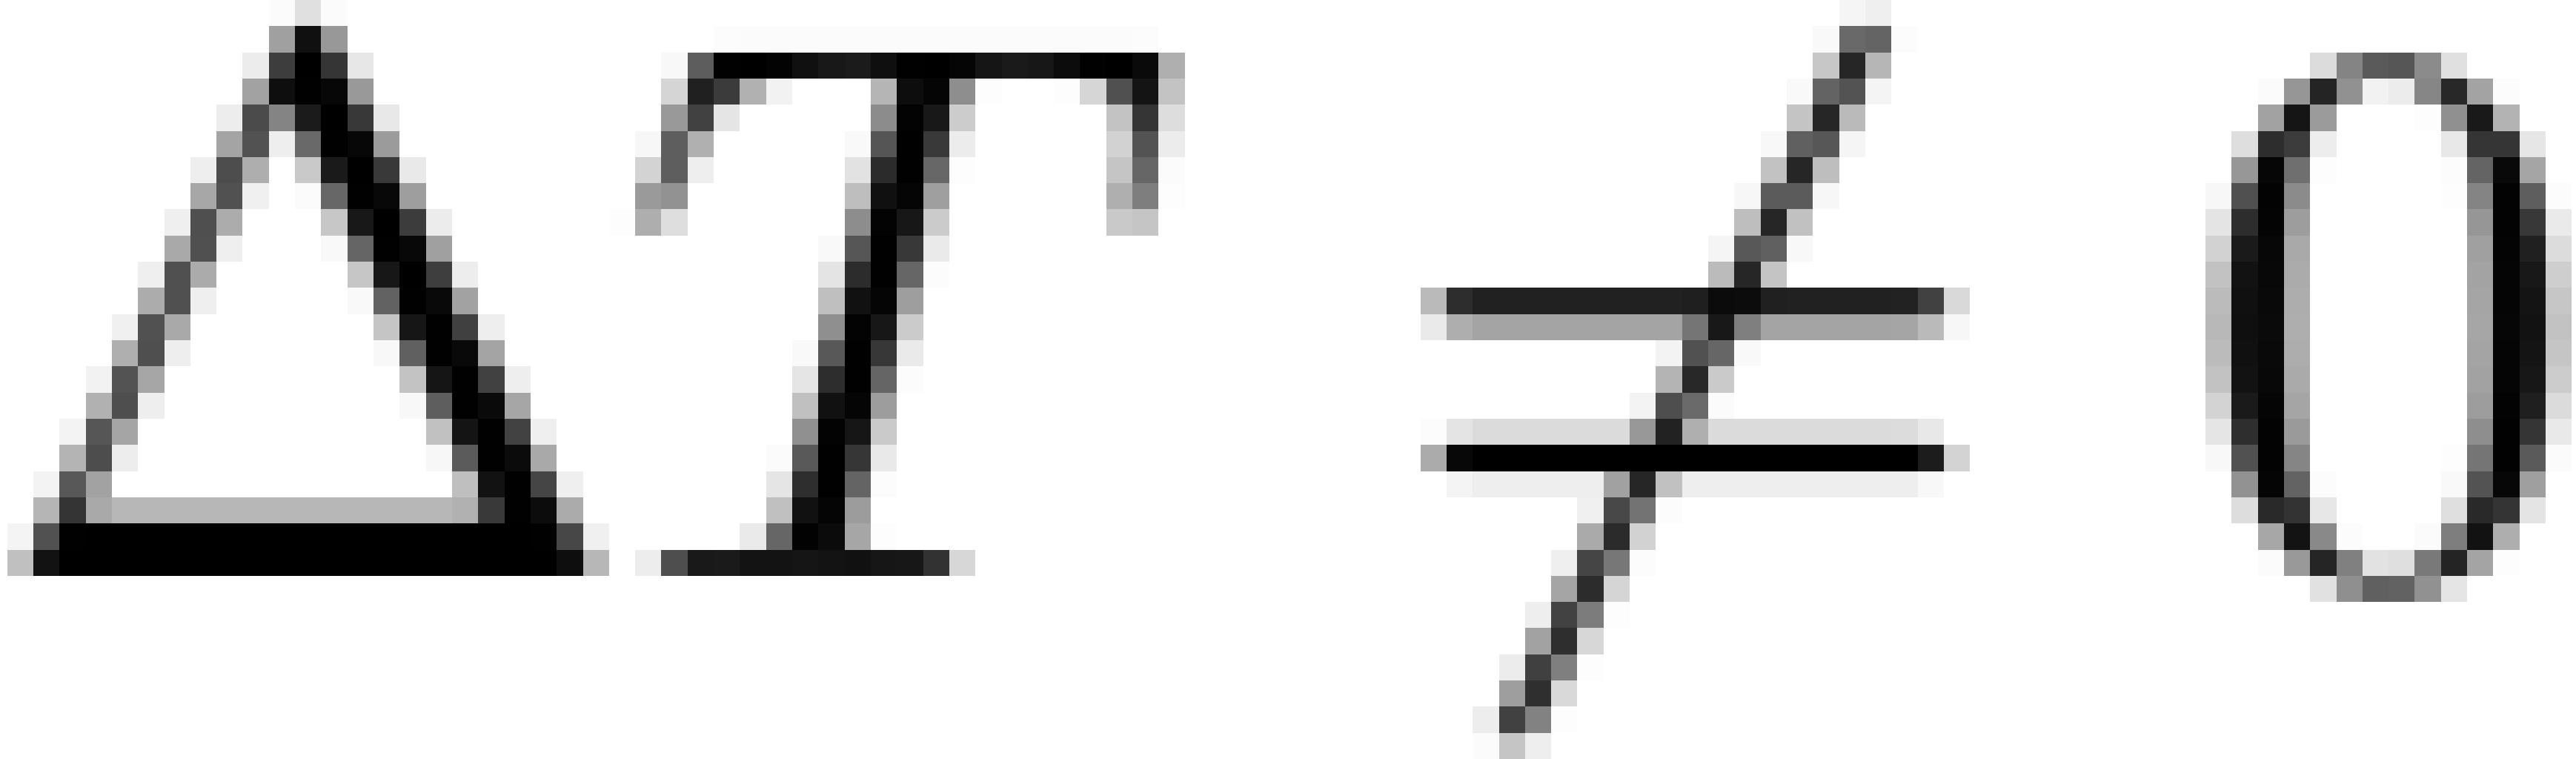


$$\begin{aligned} \sigma_{11}^0 &= (\lambda + 2\mu) \epsilon_{11} + \lambda \epsilon_{11} + 3K \alpha_L \Delta T \\ \sigma_{33} &= \lambda \epsilon_{11} + \lambda \epsilon_{11} + 3K \alpha_L \Delta T \end{aligned}$$

σ_{33}

$=$

$$\frac{6}{3} \mu K$$


$K_{\Delta T}$

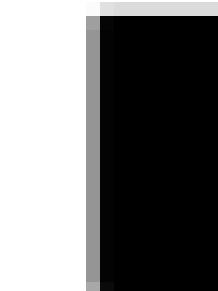



$$\underline{\sigma} = \begin{bmatrix} \sigma_{NN} & \sigma_{NE} & \sigma_{ND} \\ \sigma_{EN} & \sigma_{EE} & \sigma_{ED} \\ \sigma_{DN} & \sigma_{DE} & \sigma_{DD} \end{bmatrix} = \begin{bmatrix} 7100 & -200 & 0 \\ -200 & 7300 & 0 \\ 0 & 0 & 8100 \end{bmatrix} \text{ psi}$$



$$\underline{\sigma} = \begin{bmatrix} \sigma_{NN} & \sigma_{NE} & \sigma_{ND} \\ \sigma_{EN} & \sigma_{EE} & \sigma_{ED} \\ \sigma_{DN} & \sigma_{DE} & \sigma_{DD} \end{bmatrix} = \begin{bmatrix} 6000 & 100 & 0 \\ 100 & 6300 & 0 \\ 0 & 0 & 6200 \end{bmatrix} \text{ psi}$$







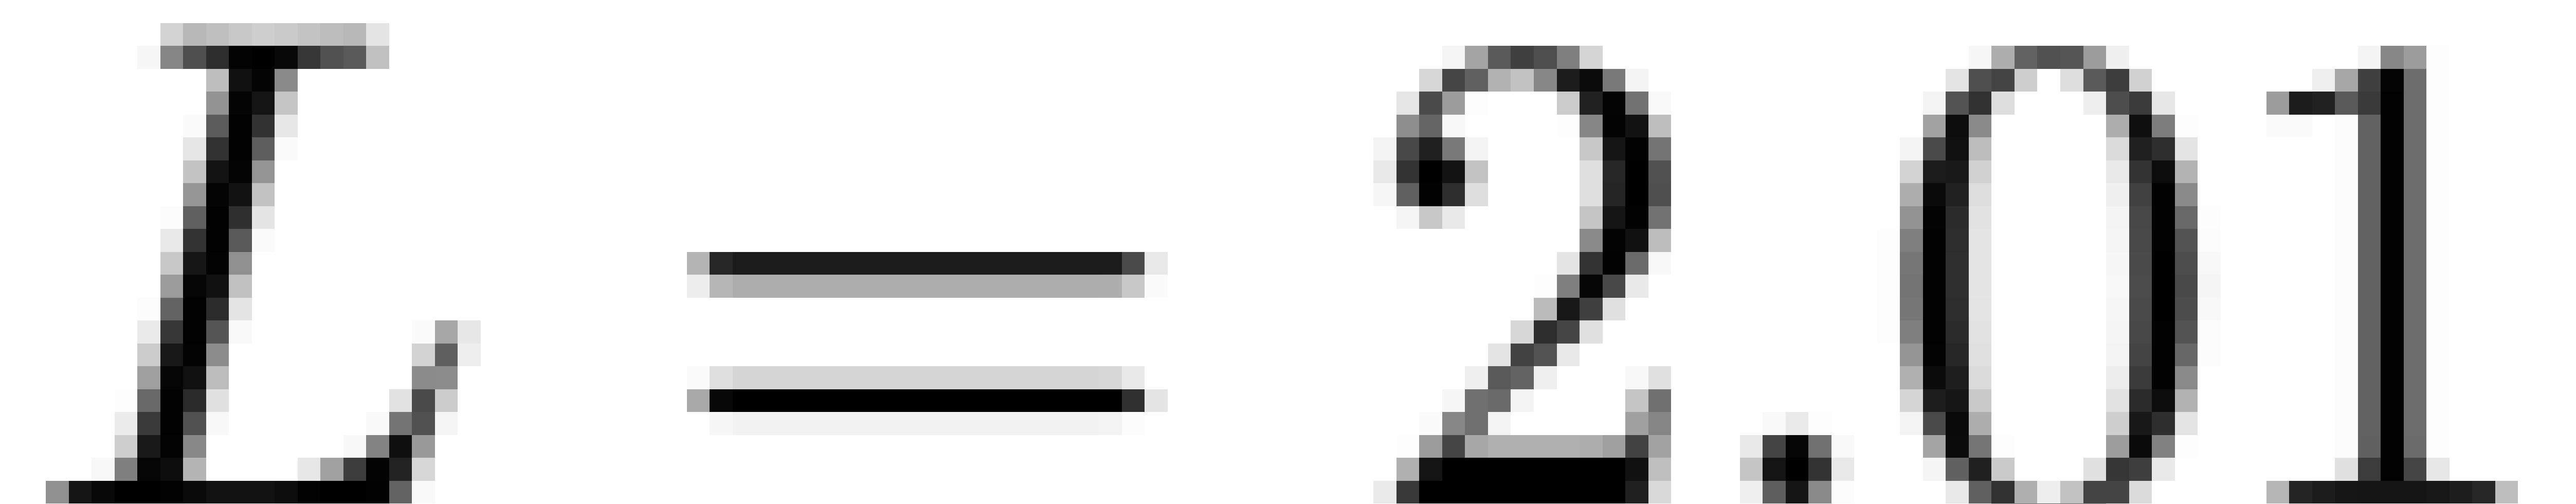


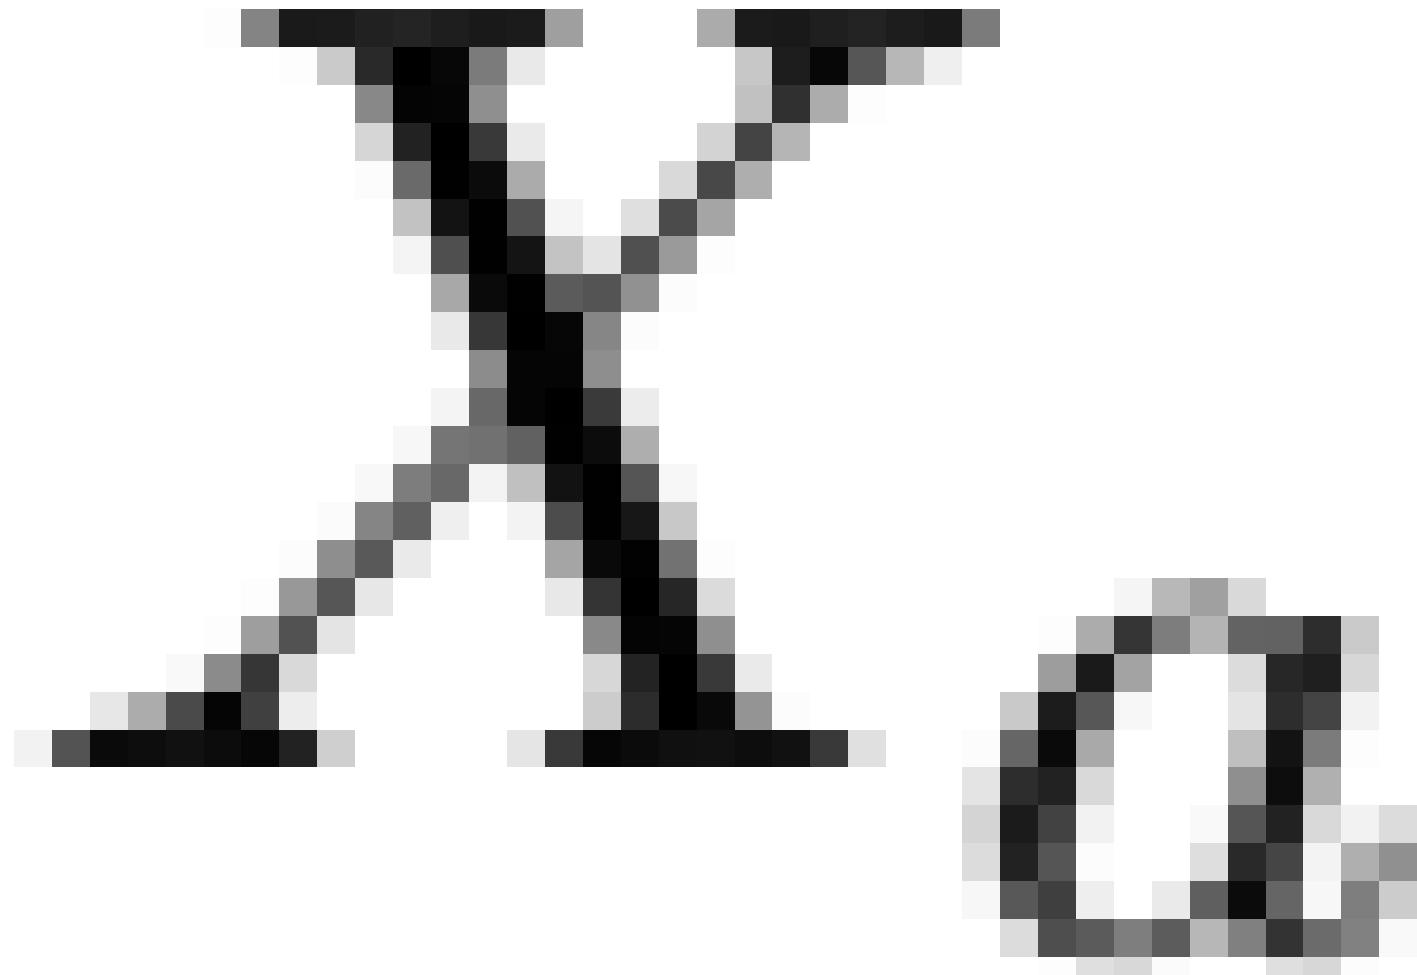


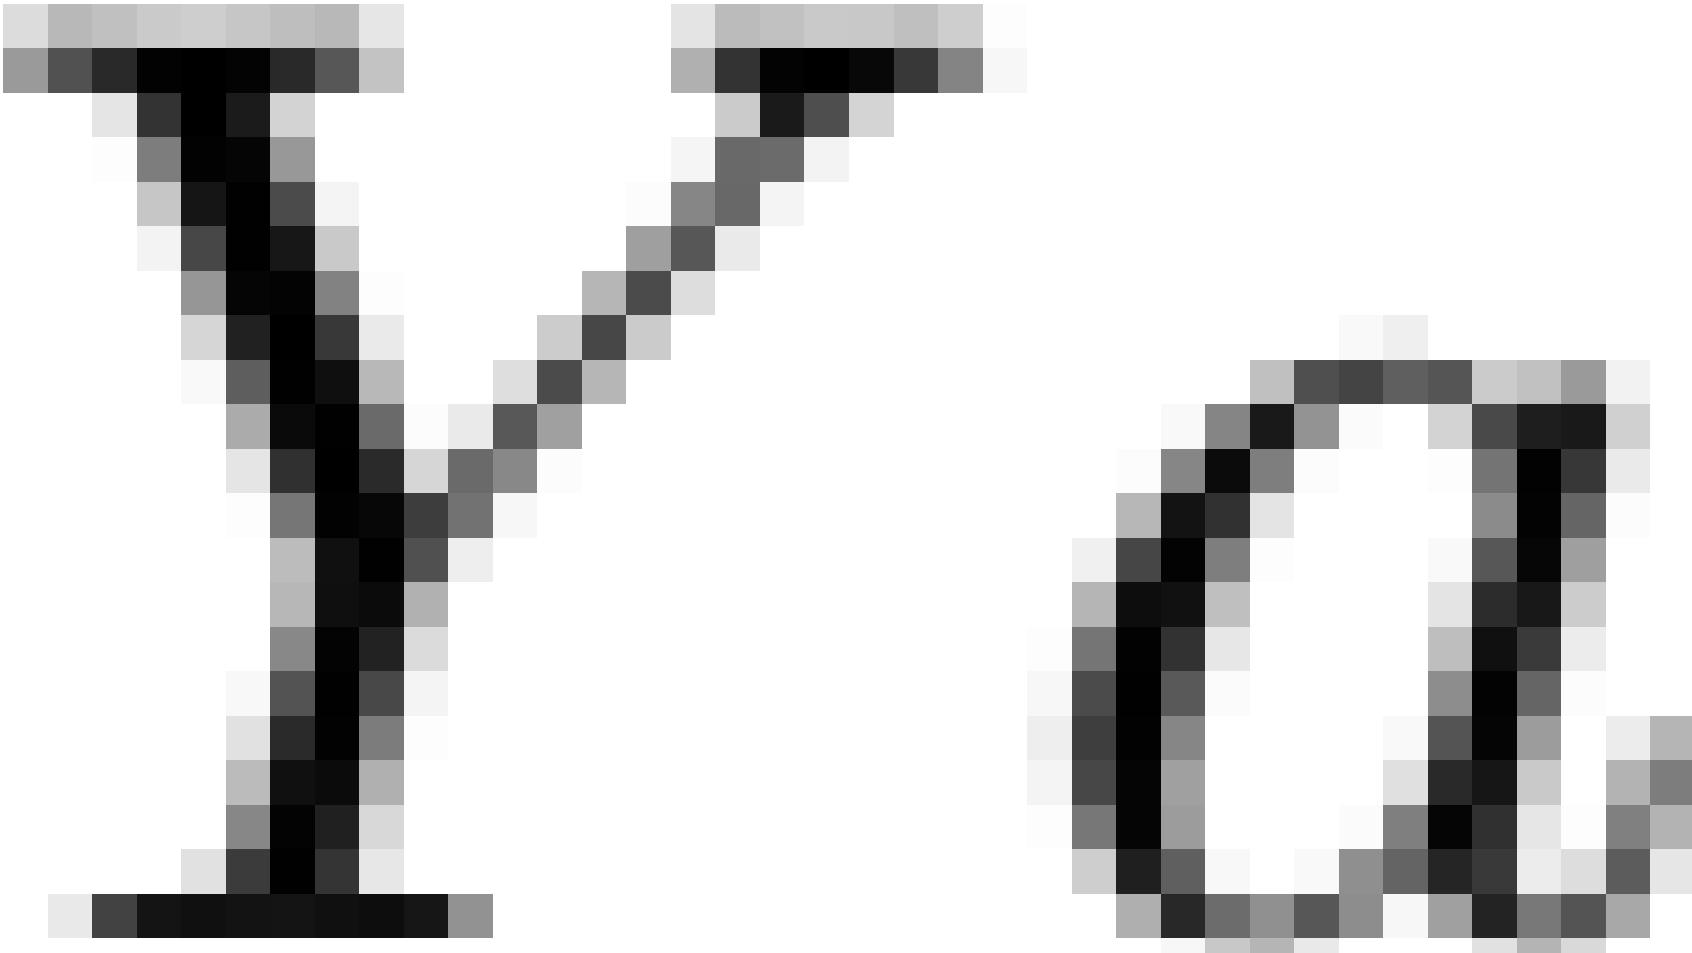


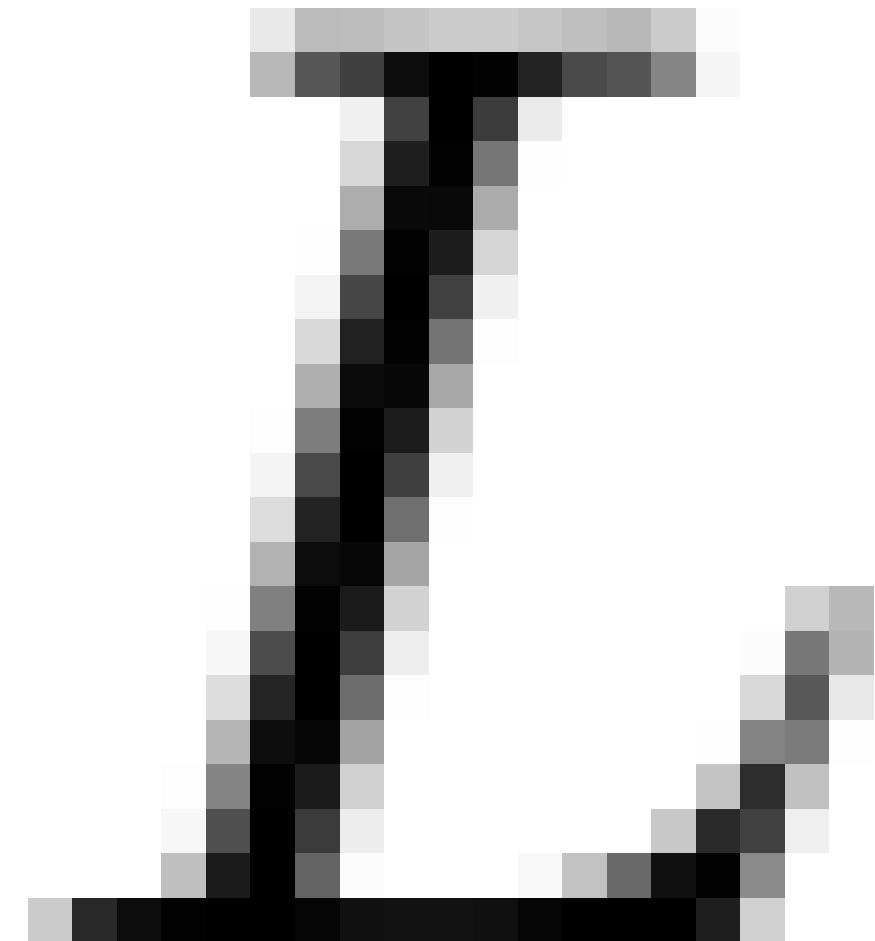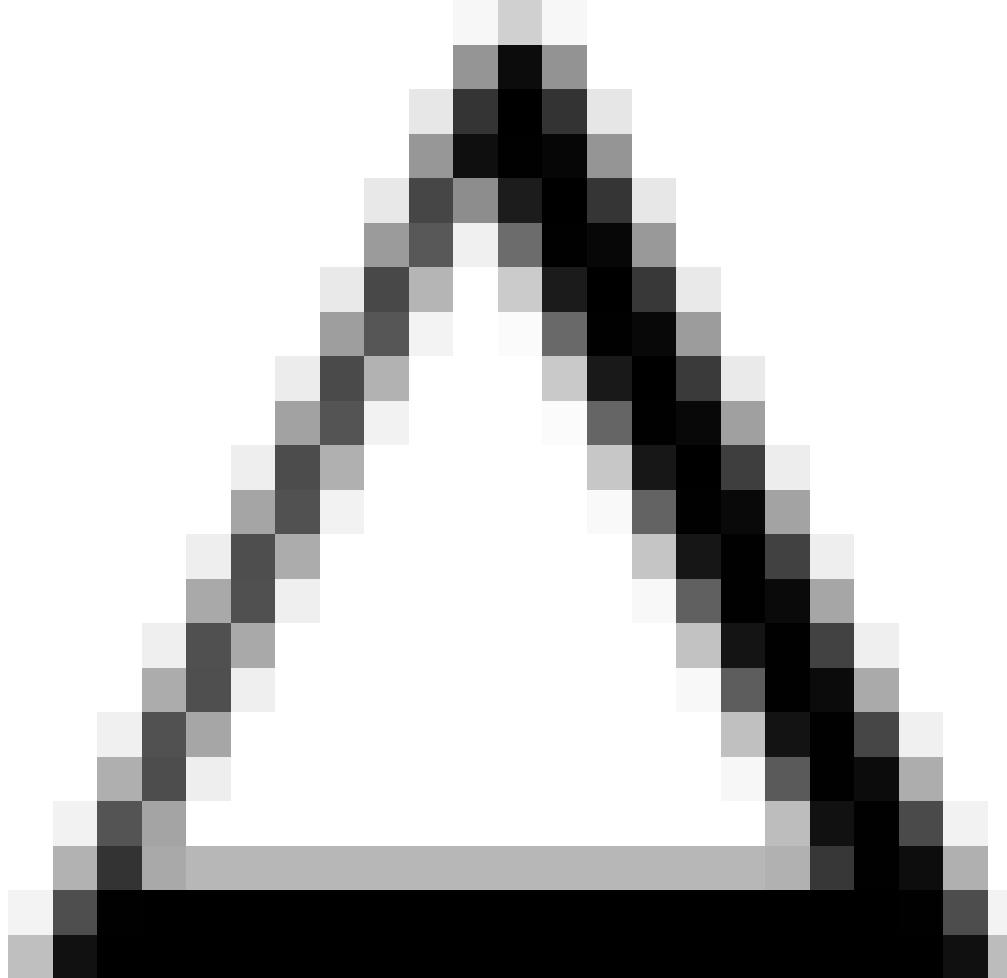

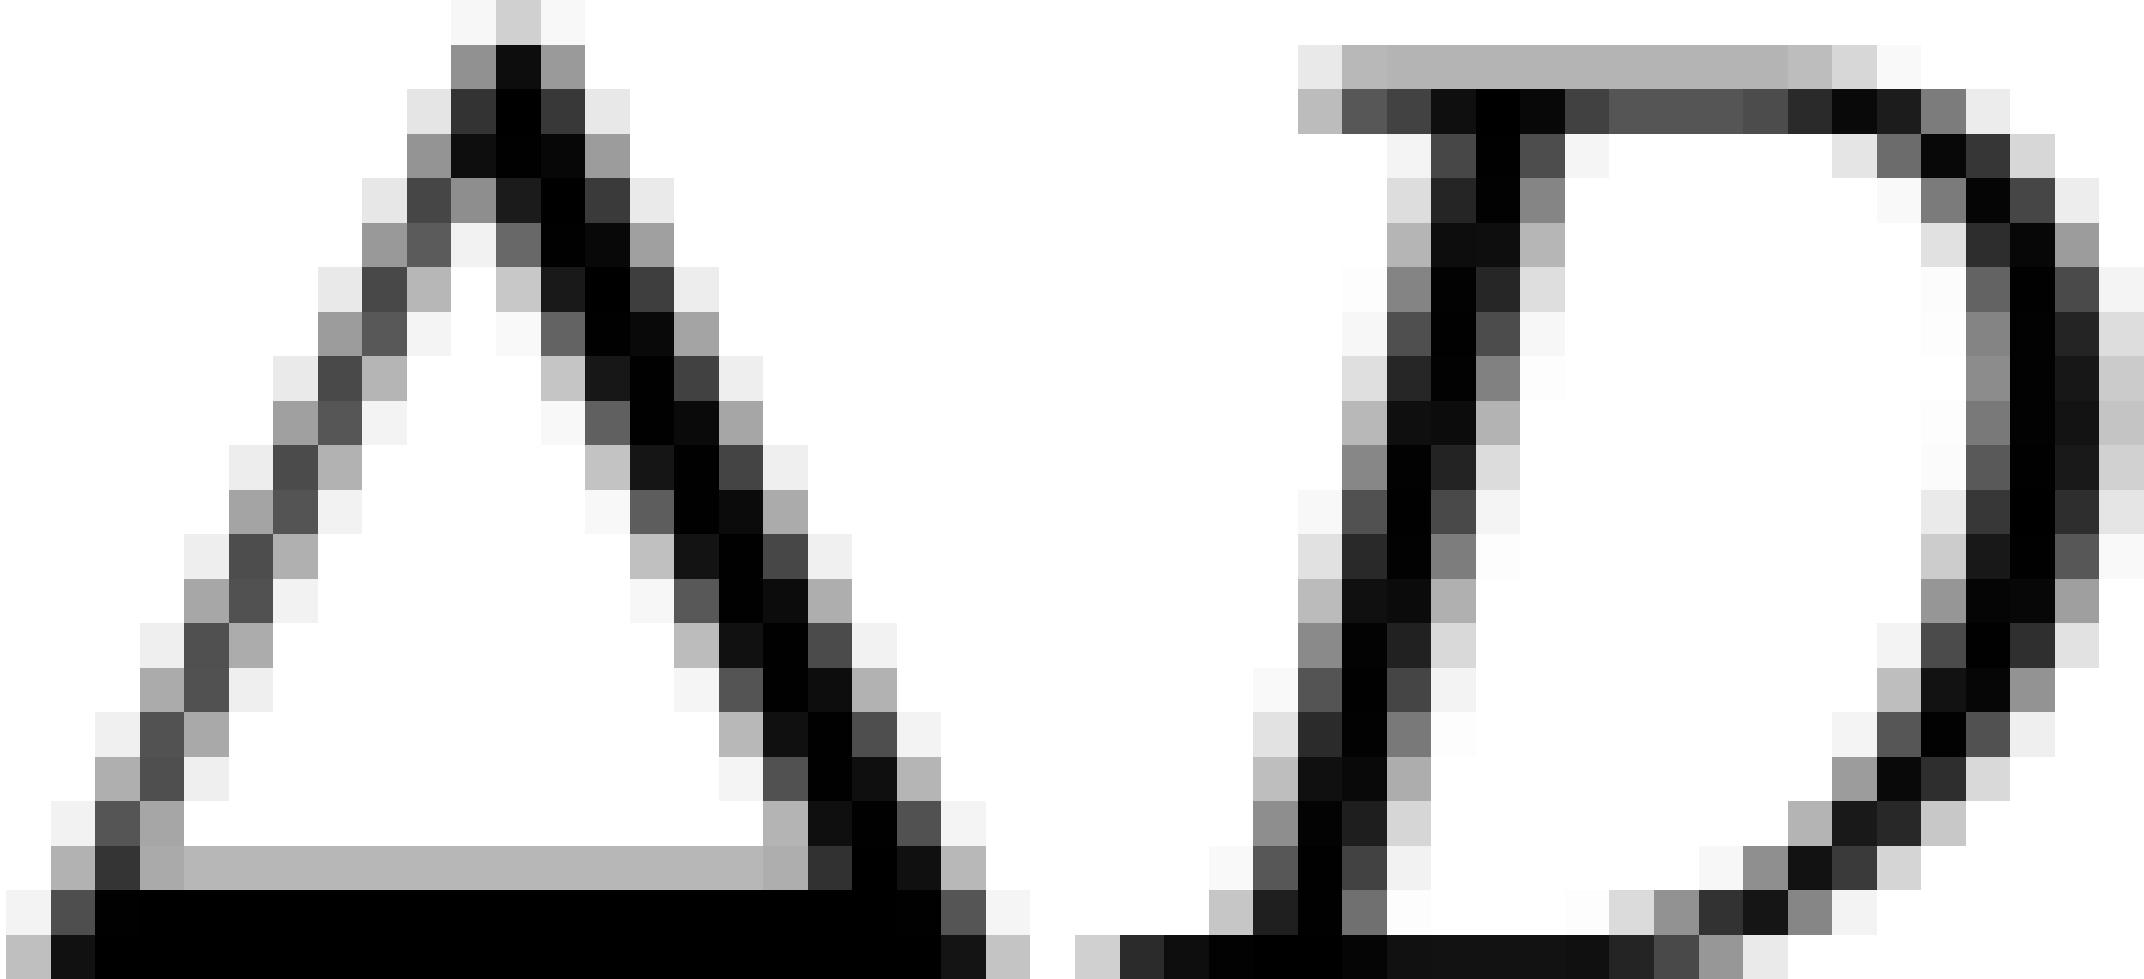


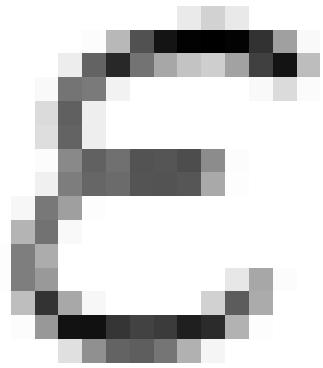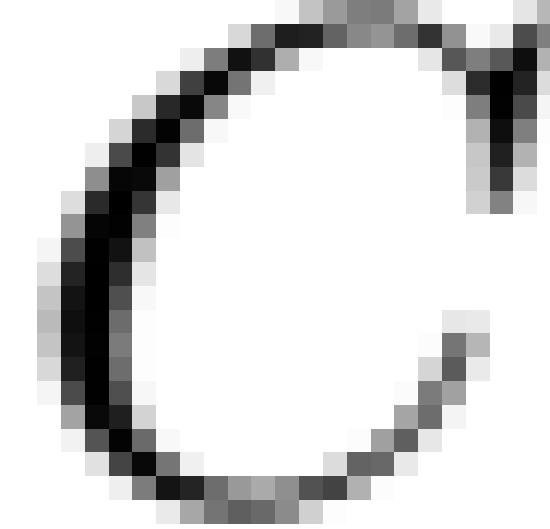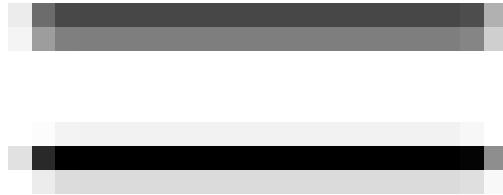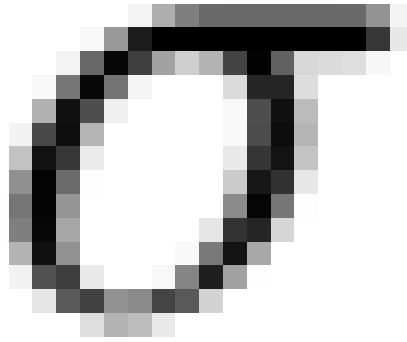

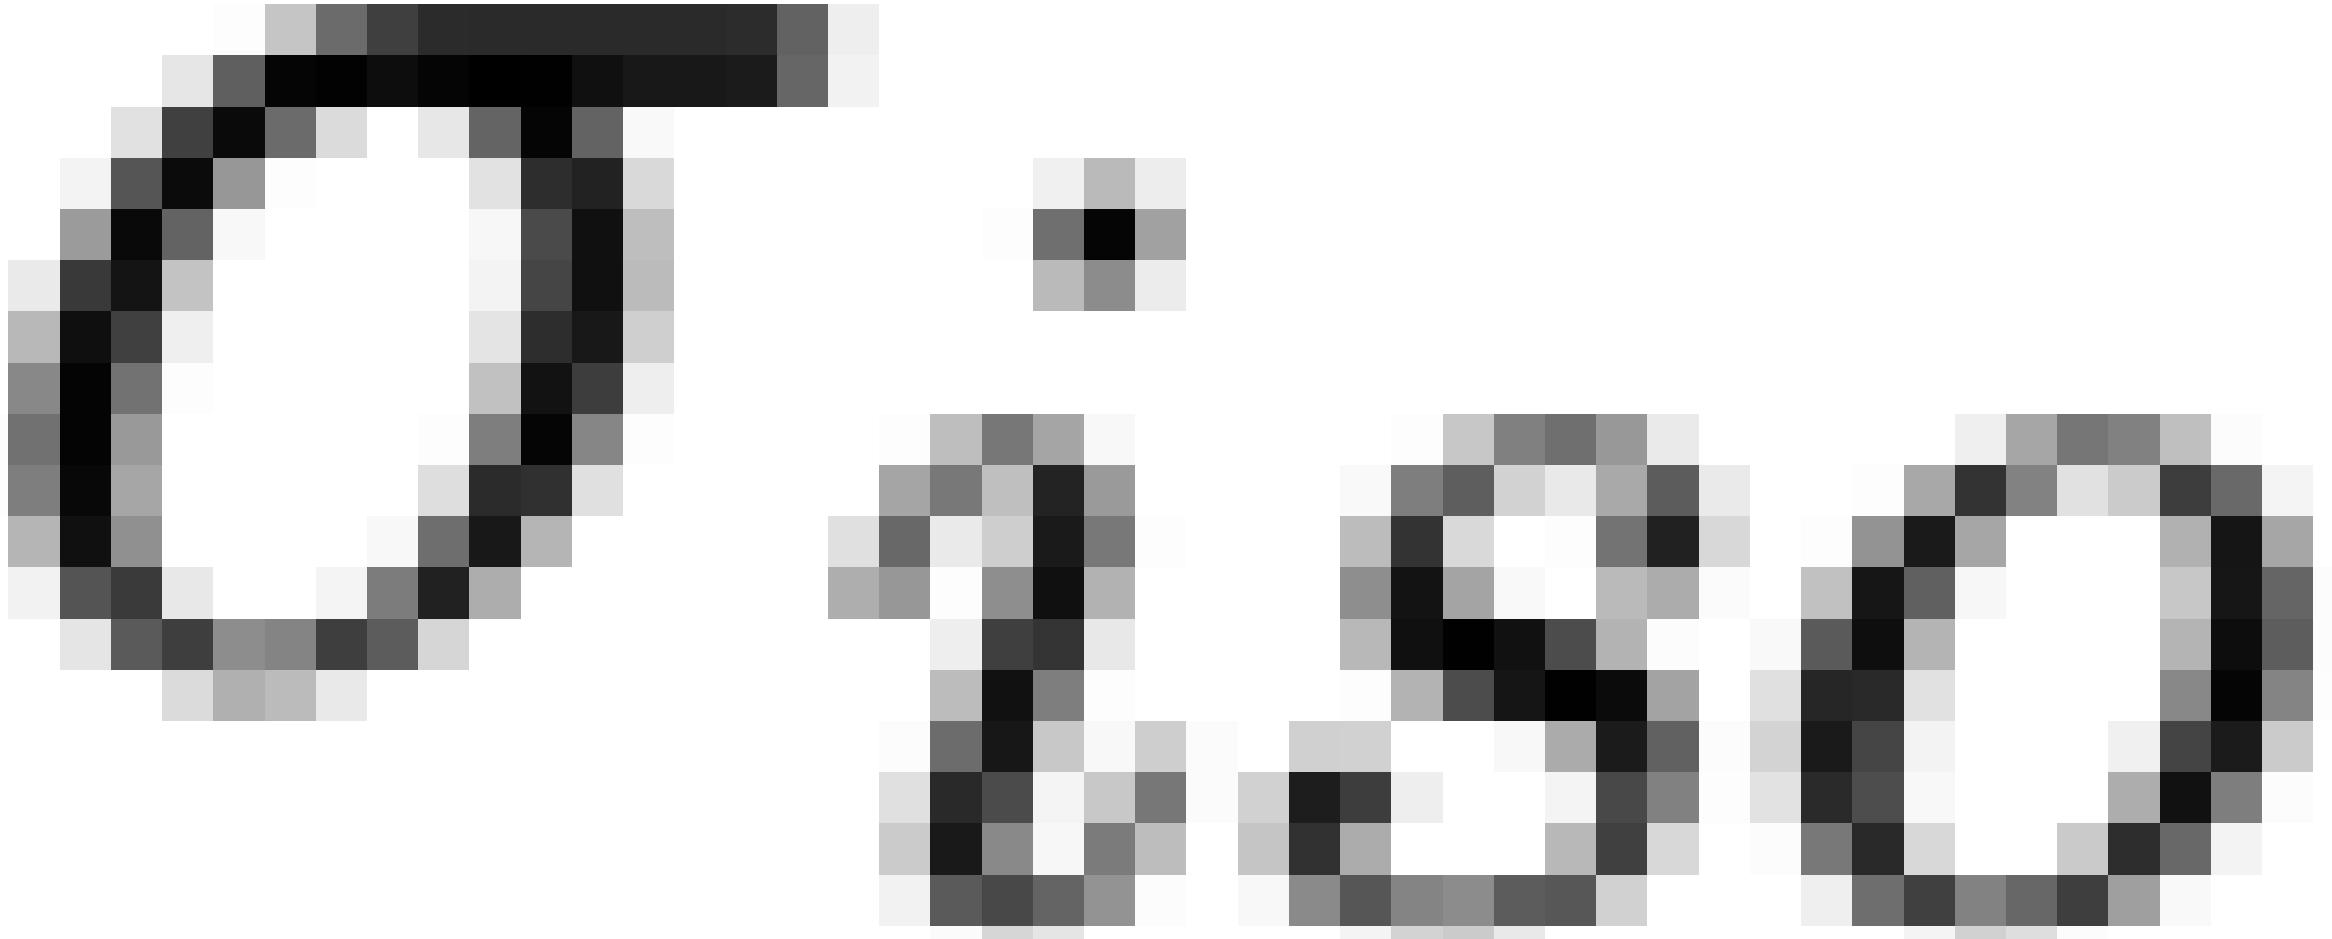

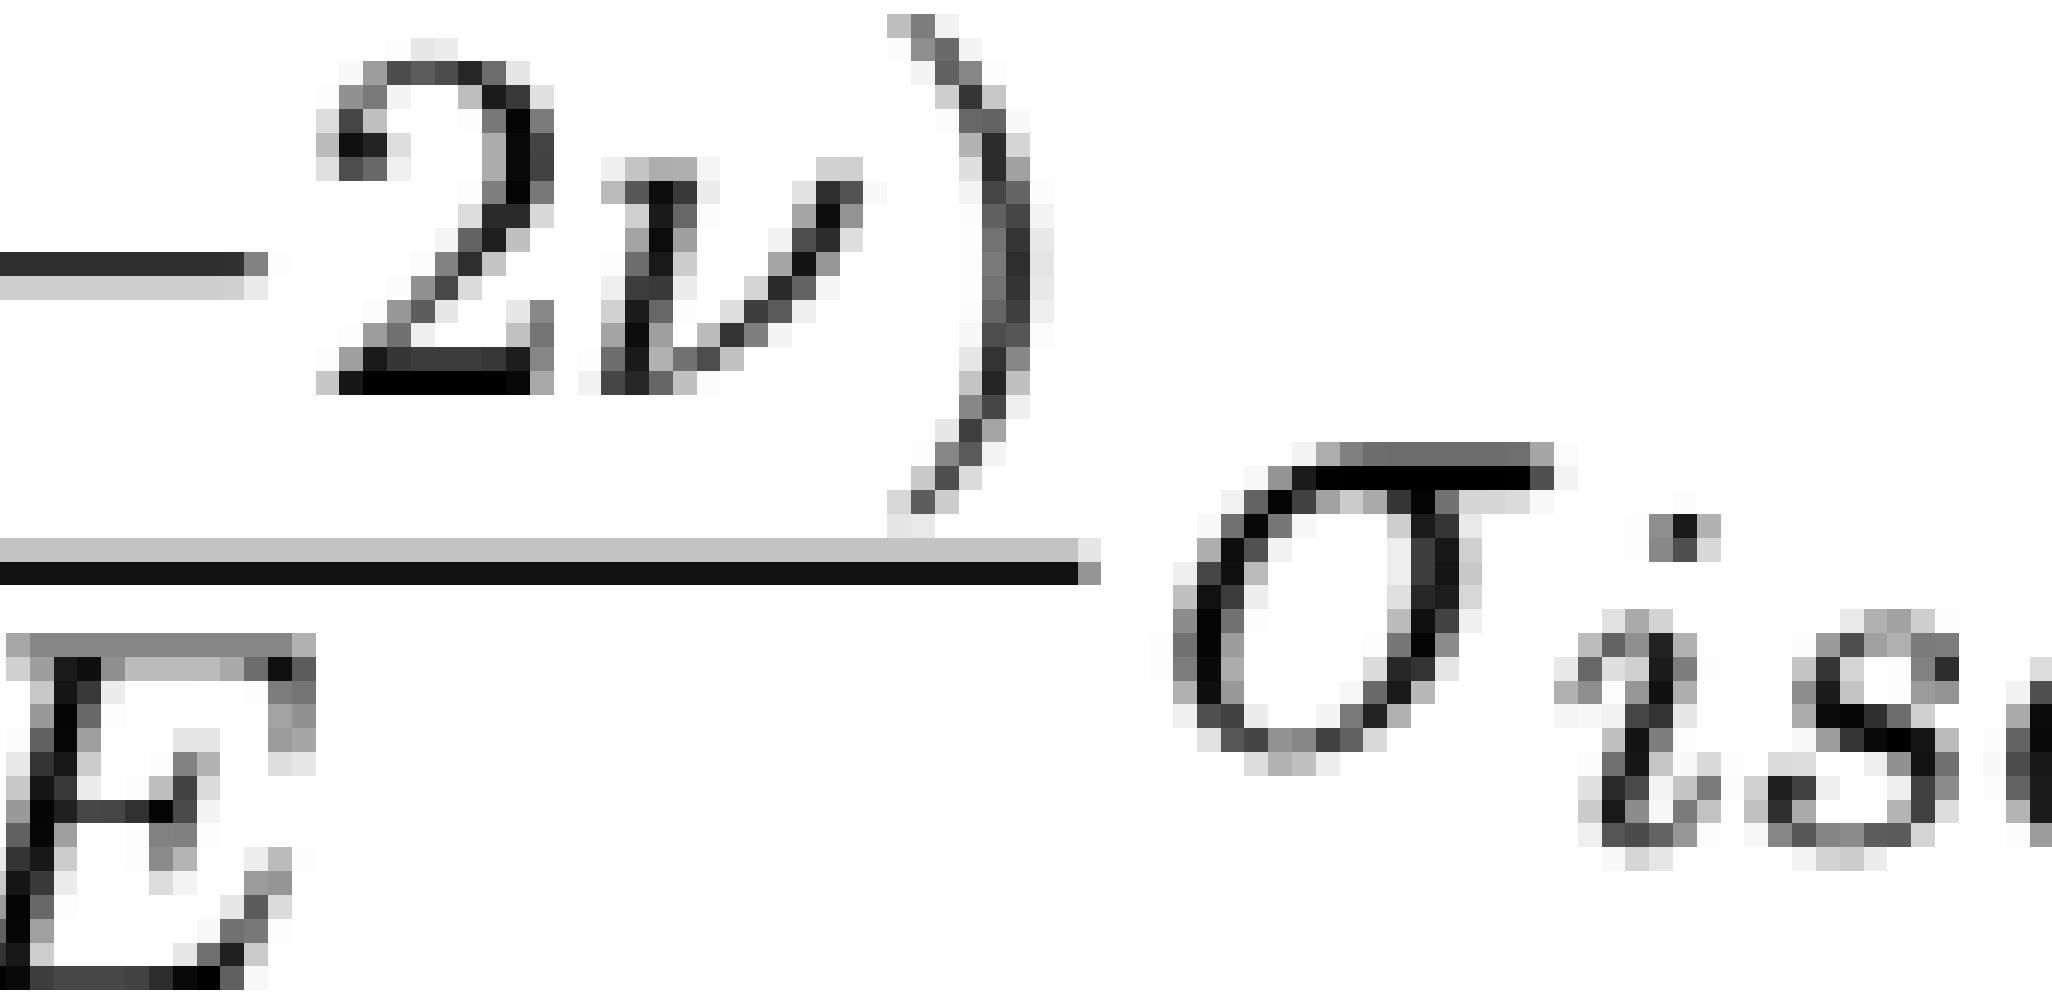




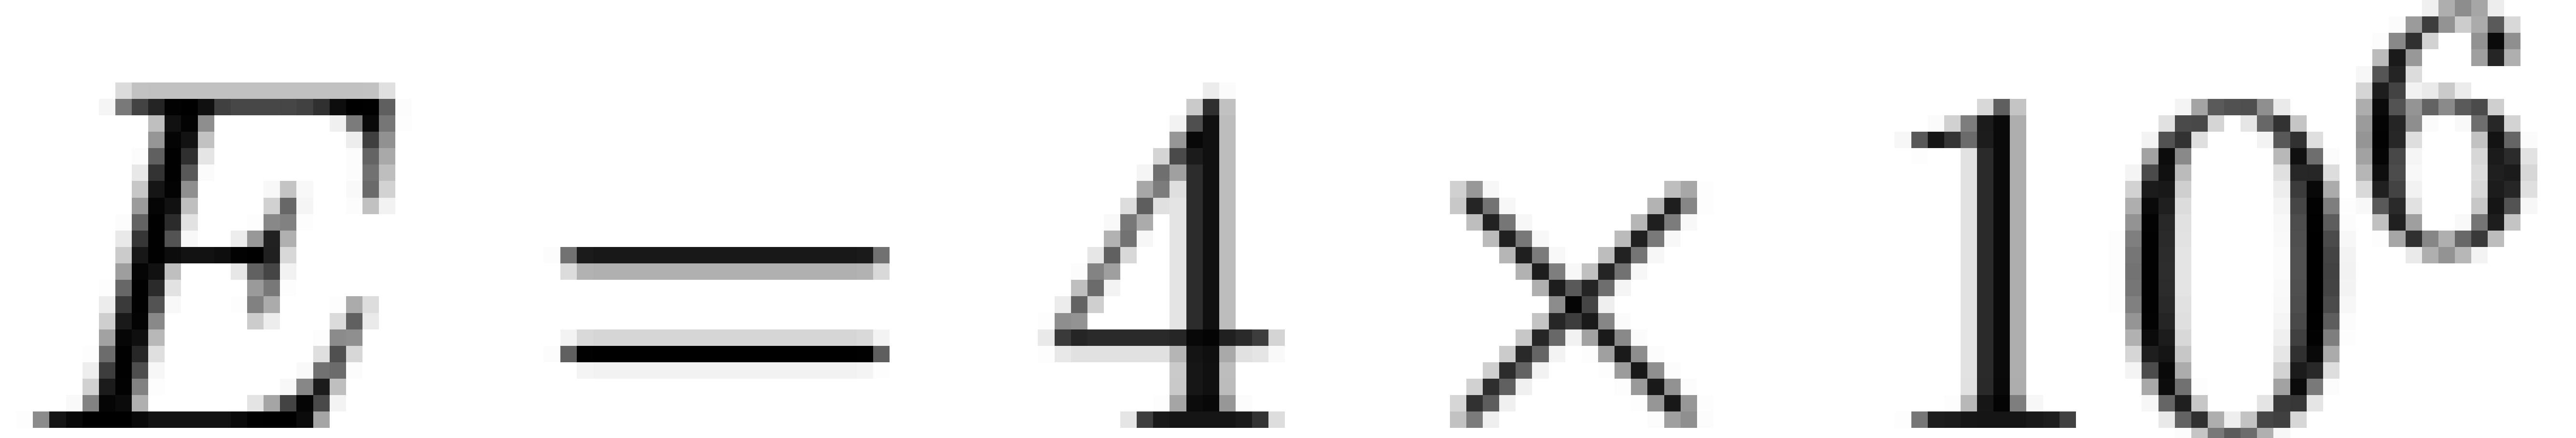











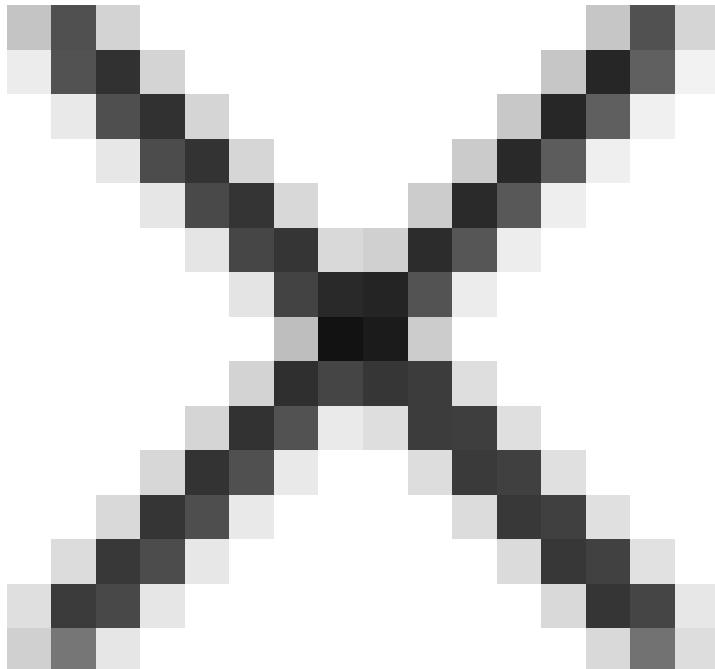


σ_{11}

$$= \frac{1}{2}$$

$$\frac{E(1-\nu)}{(1+\nu)(1-2\nu)}\epsilon_{11}$$

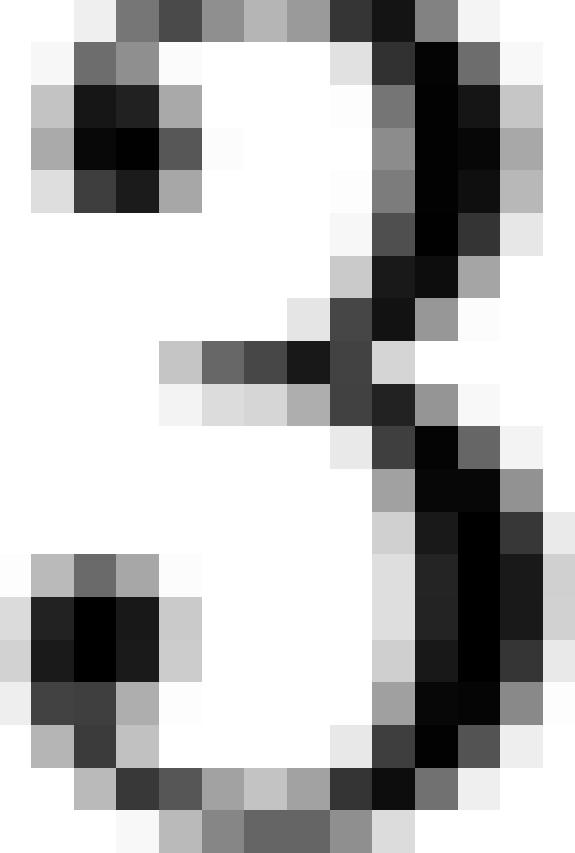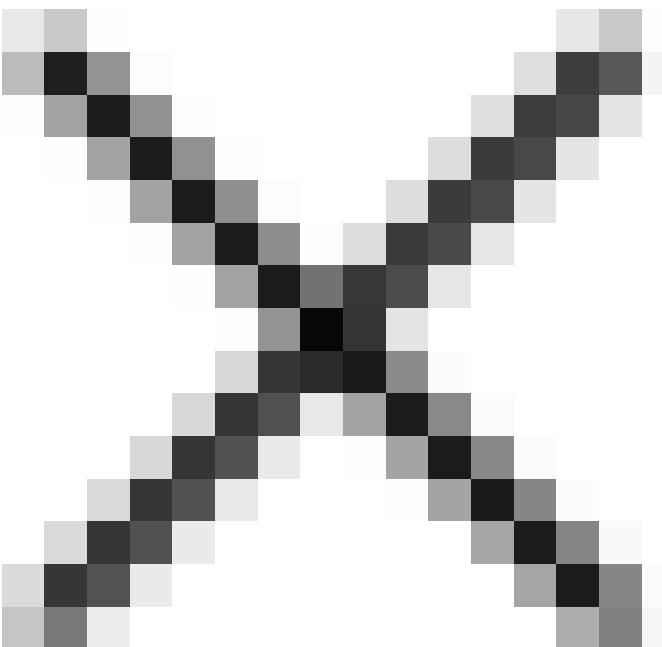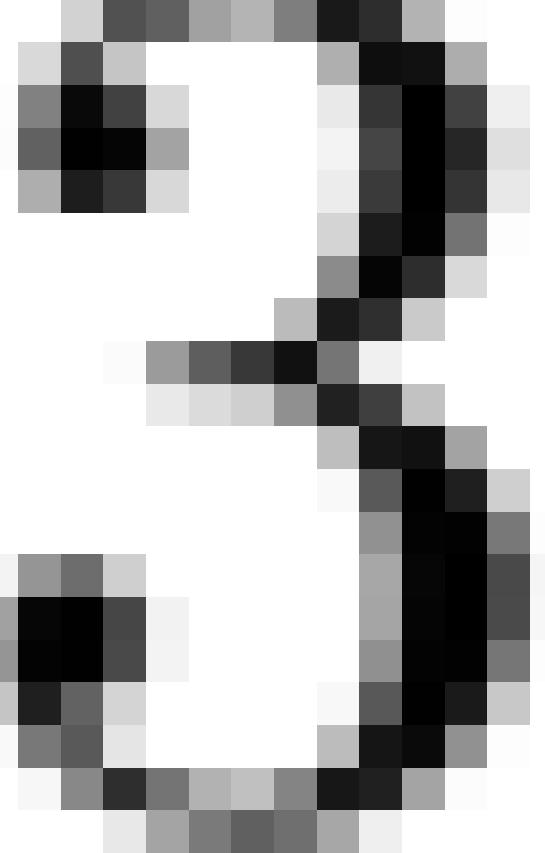

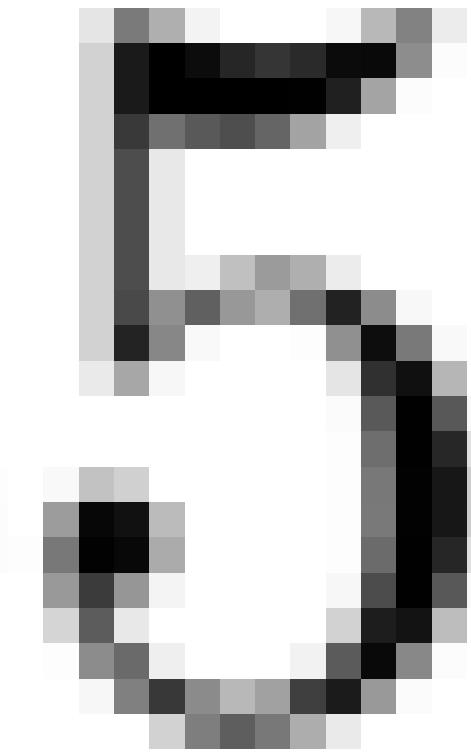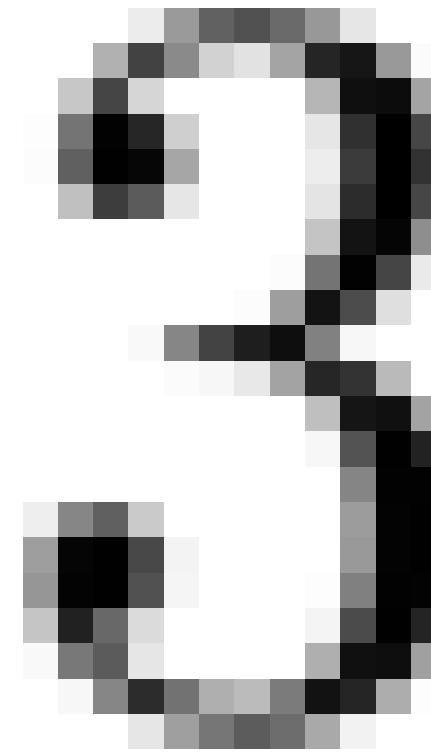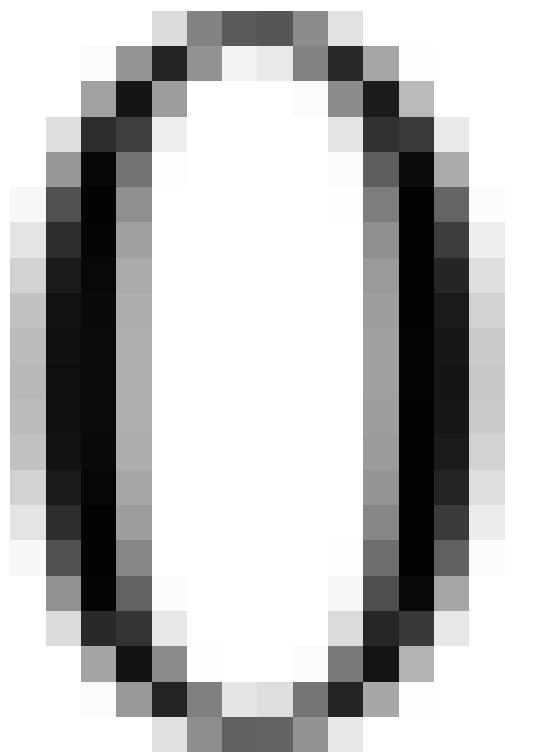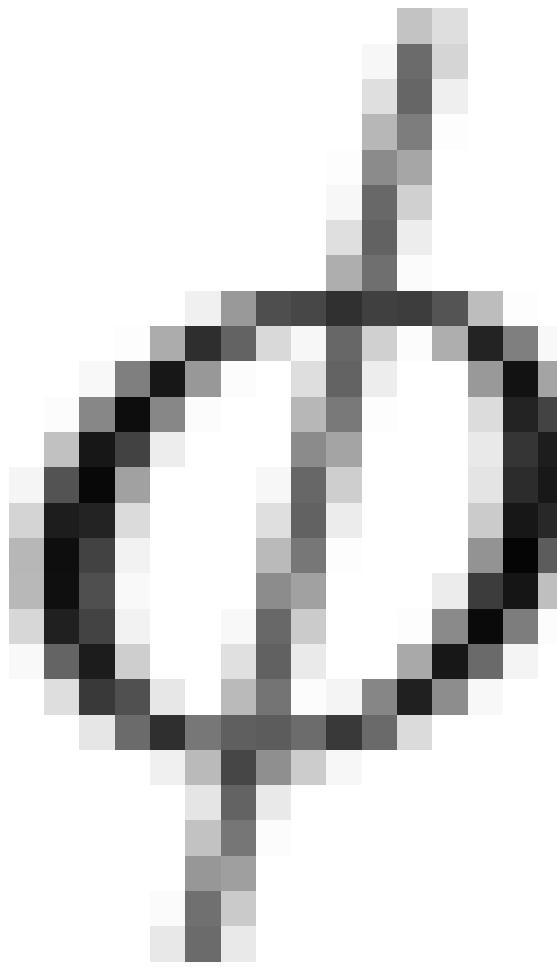





(a) Uncemented sand




(b) Cemented sandstone




(c) Vuggy carbonate

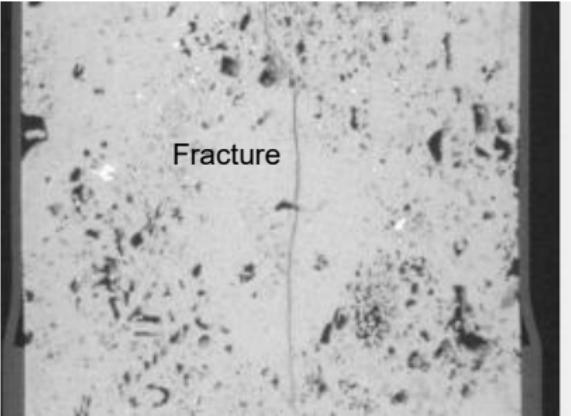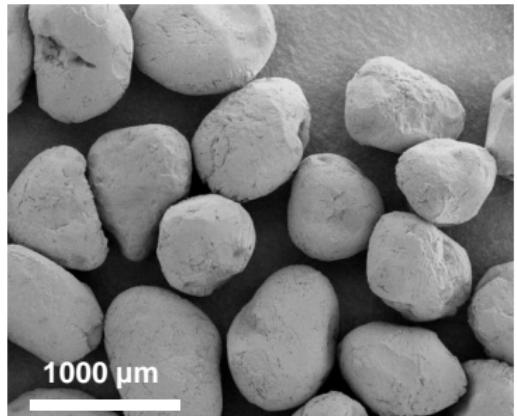


Rock cutting at the drill bit

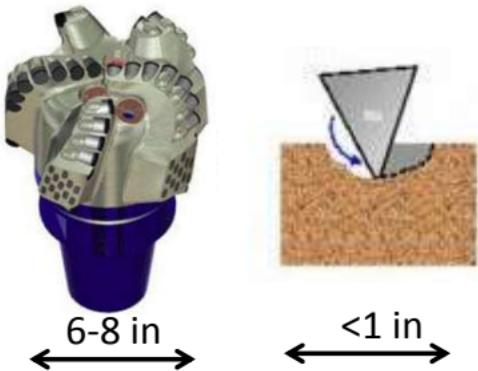

Wellbore breakout

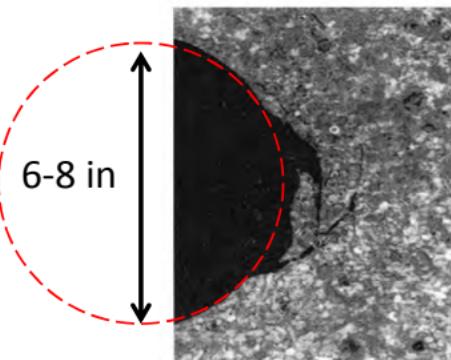


Shale hydraulic fracture

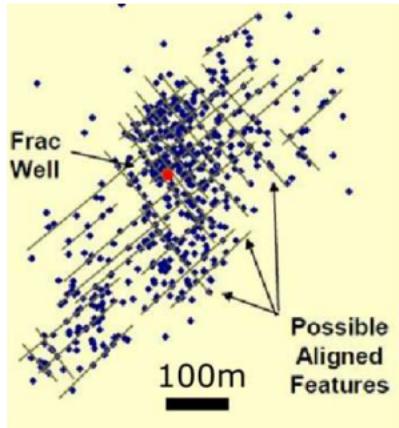

Reservoir depletion




Images: Schlumberger/Terratek, Zoback 2013, Warpinski 2008, doe.gov

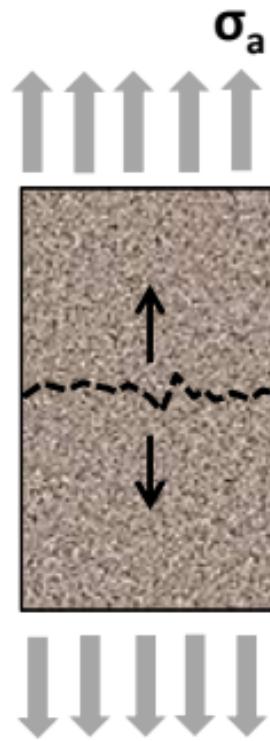


Tension
(bond breakage)

Ex: drilling-induced tens. fracs

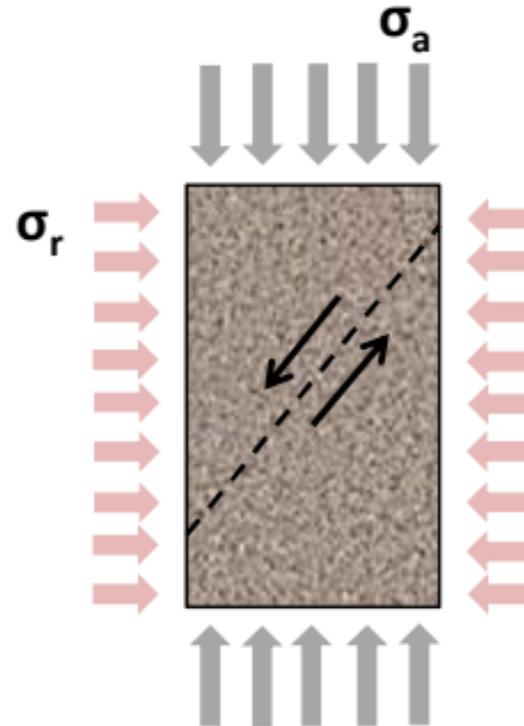

Shear
(friction failure)
Ex: fault, breakout

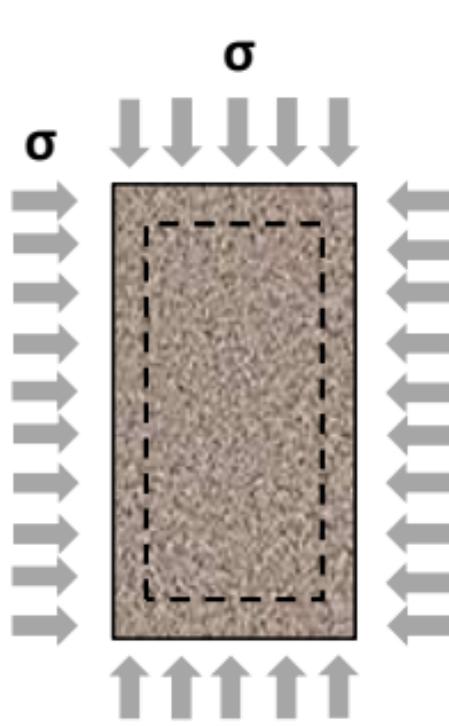


Compression
(pore collapse)
Ex: reservoir compaction

T



Typical tensile test
on a metal rod

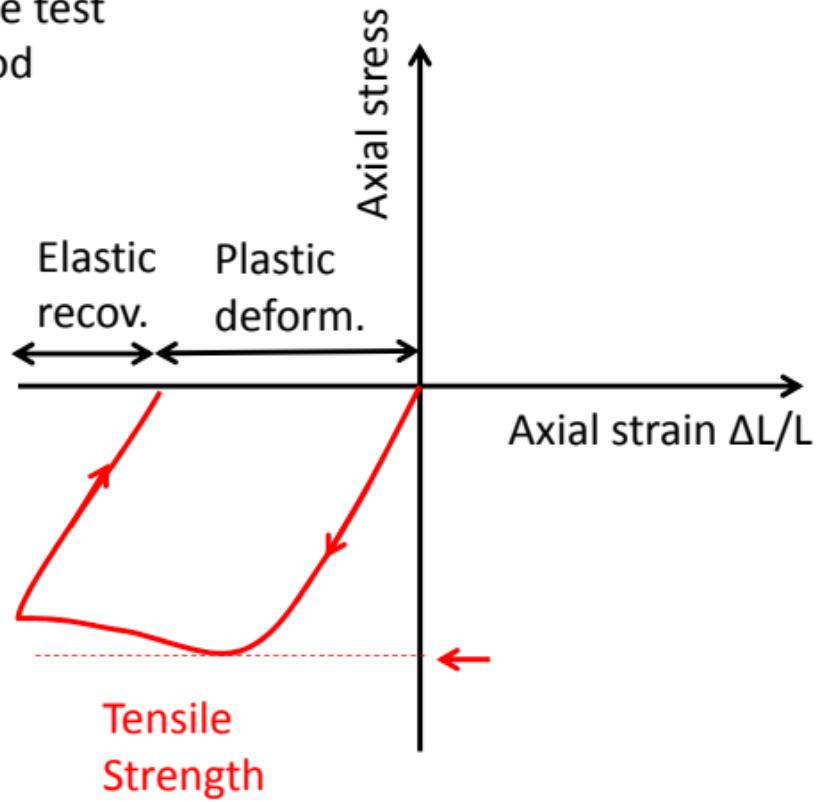

Tensile test on a rock rod

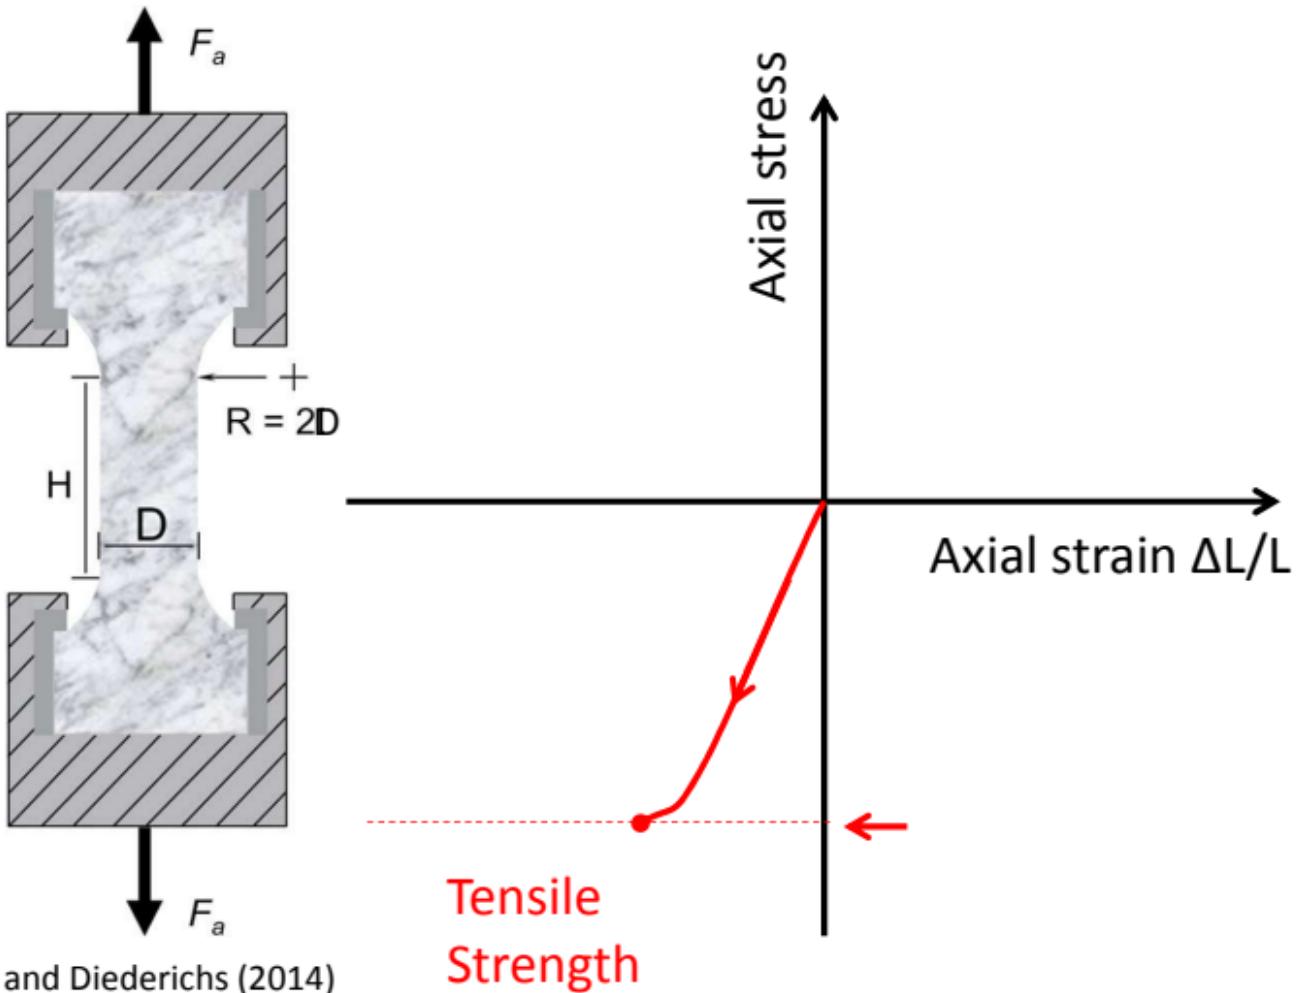



Figure direct tension: Perras and Diederichs (2014)


IS

—
—

πLR


PB

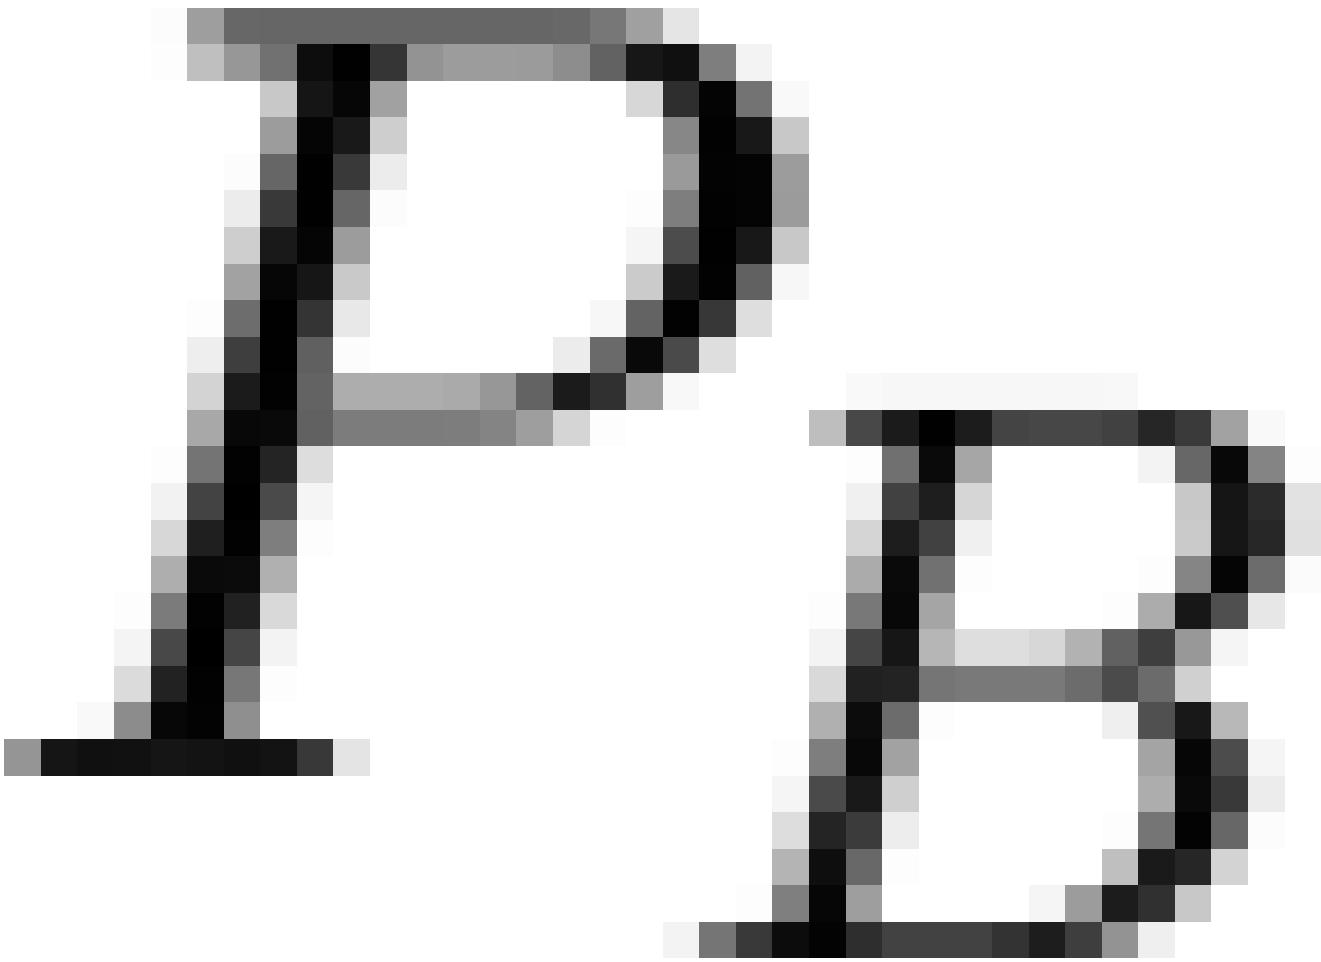

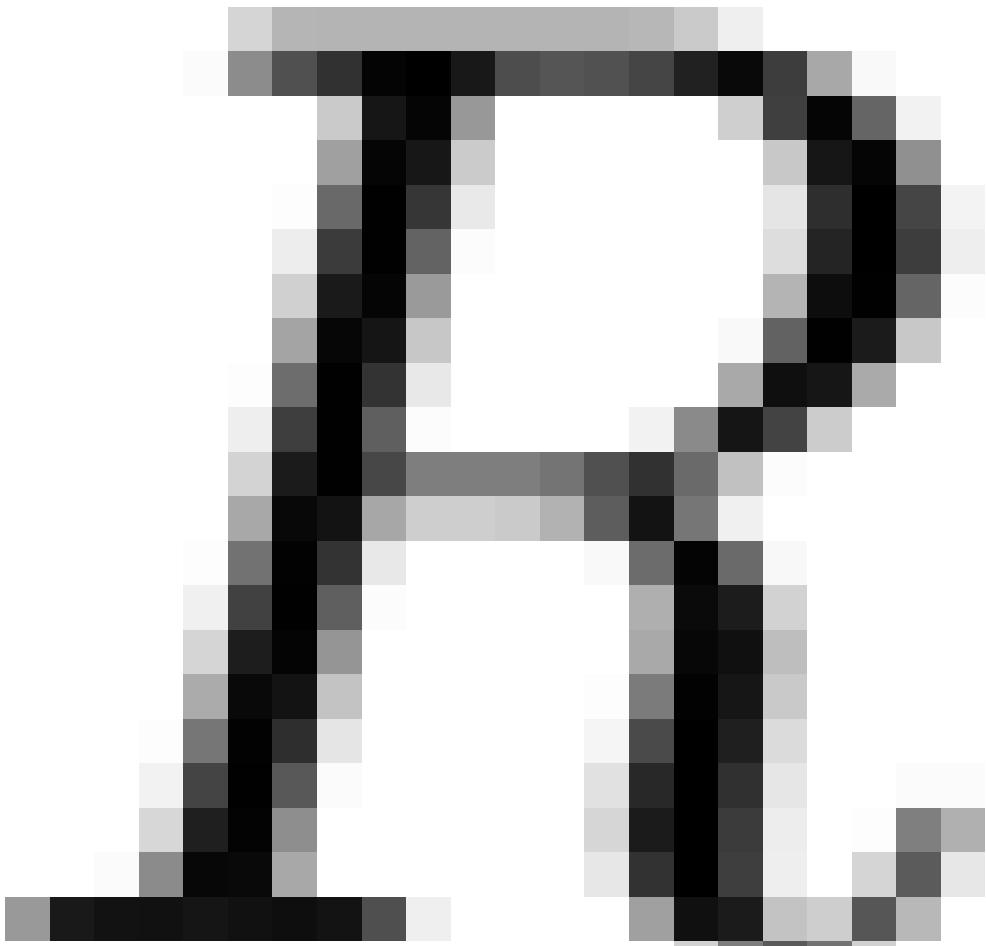



Cylindrical sample:

- radius R
- length L

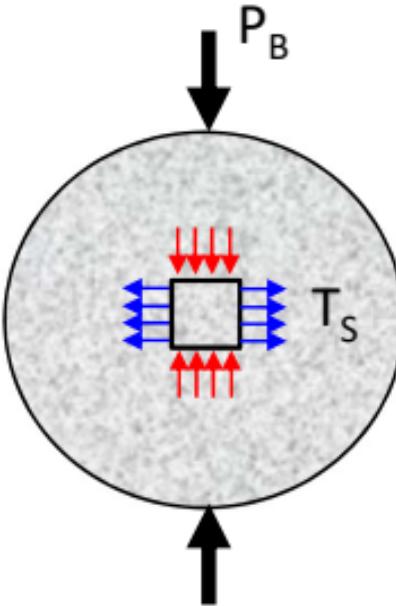

Streamlines of principal stresses


- compression
- tension

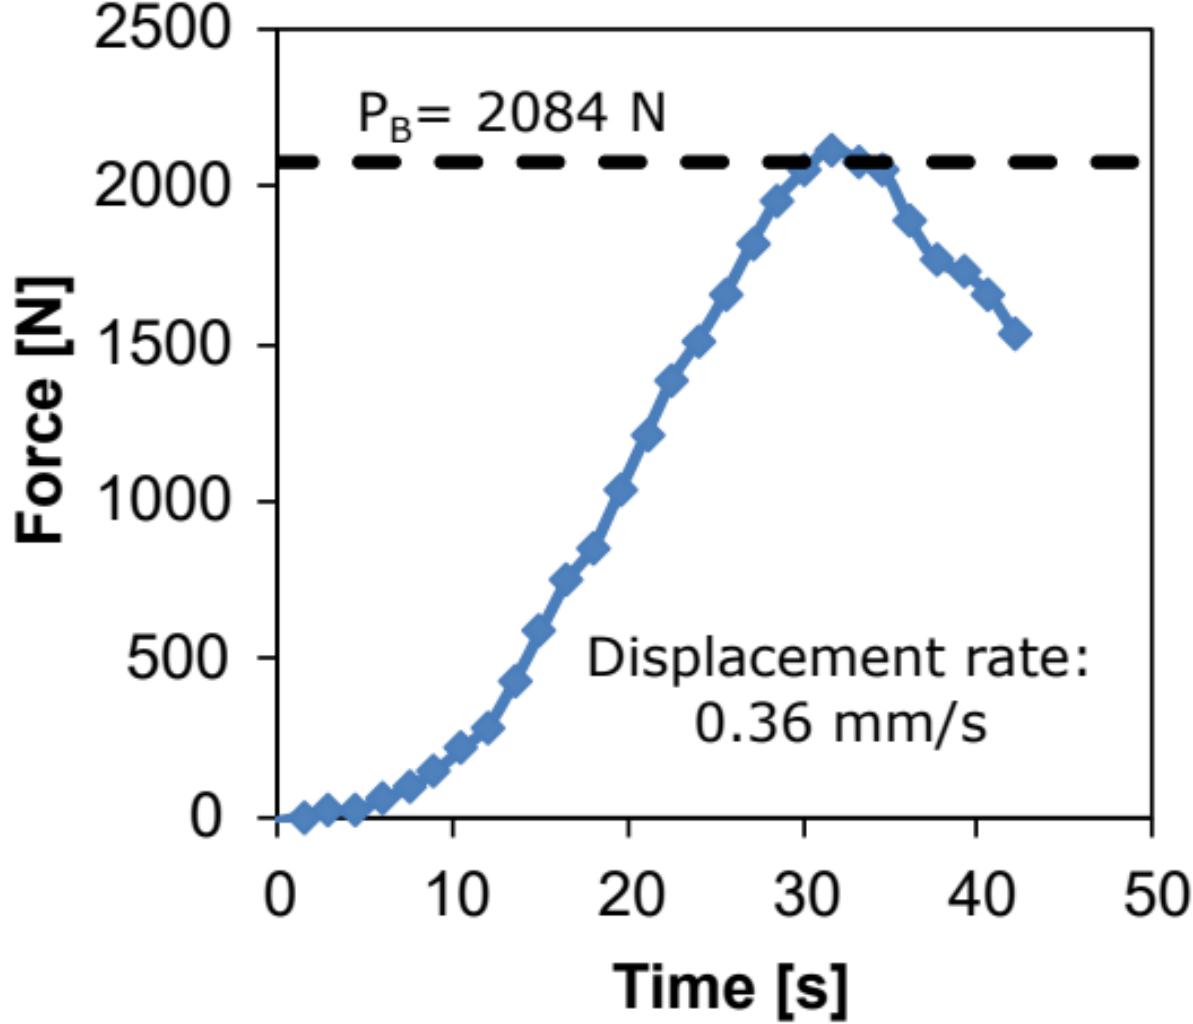
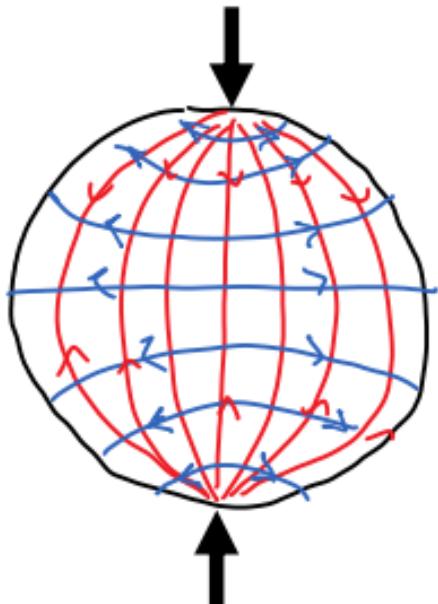



R

1
2


1
2

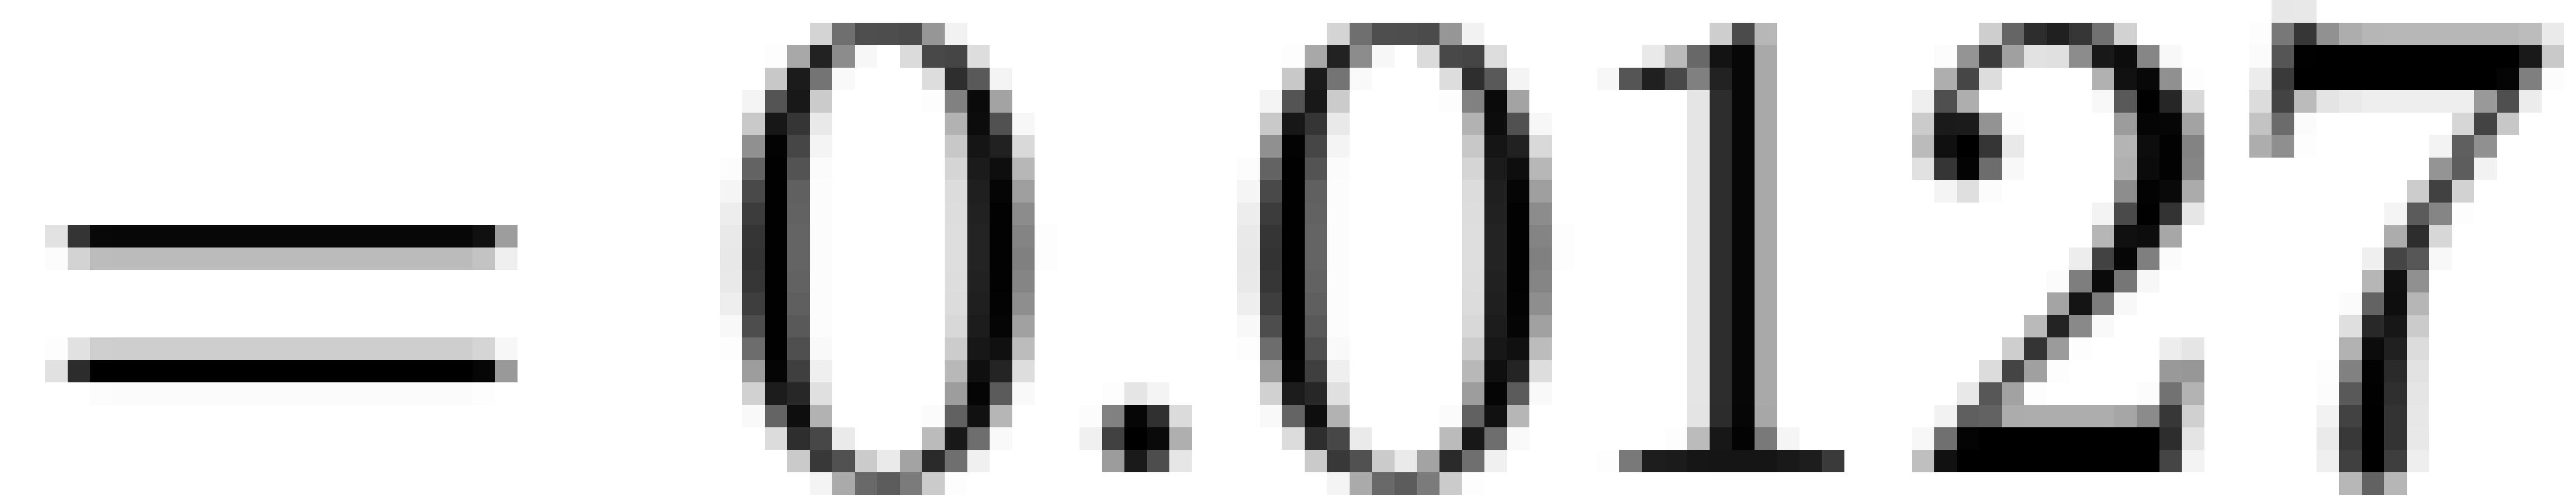


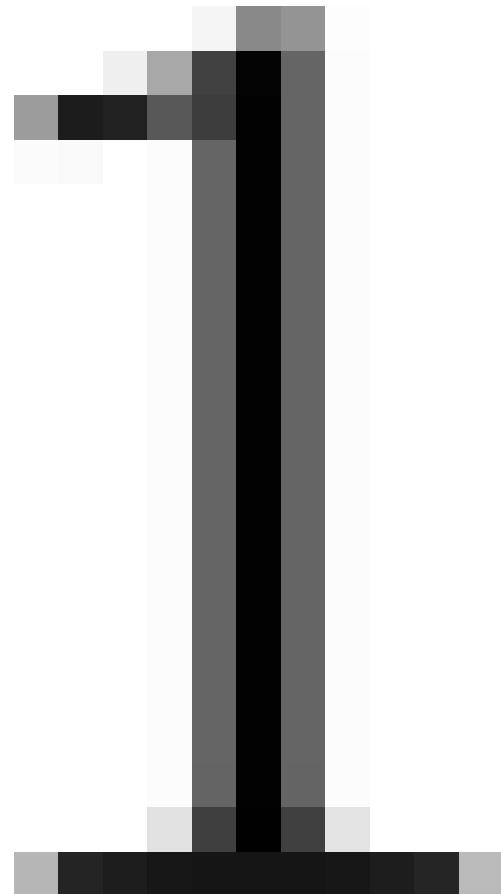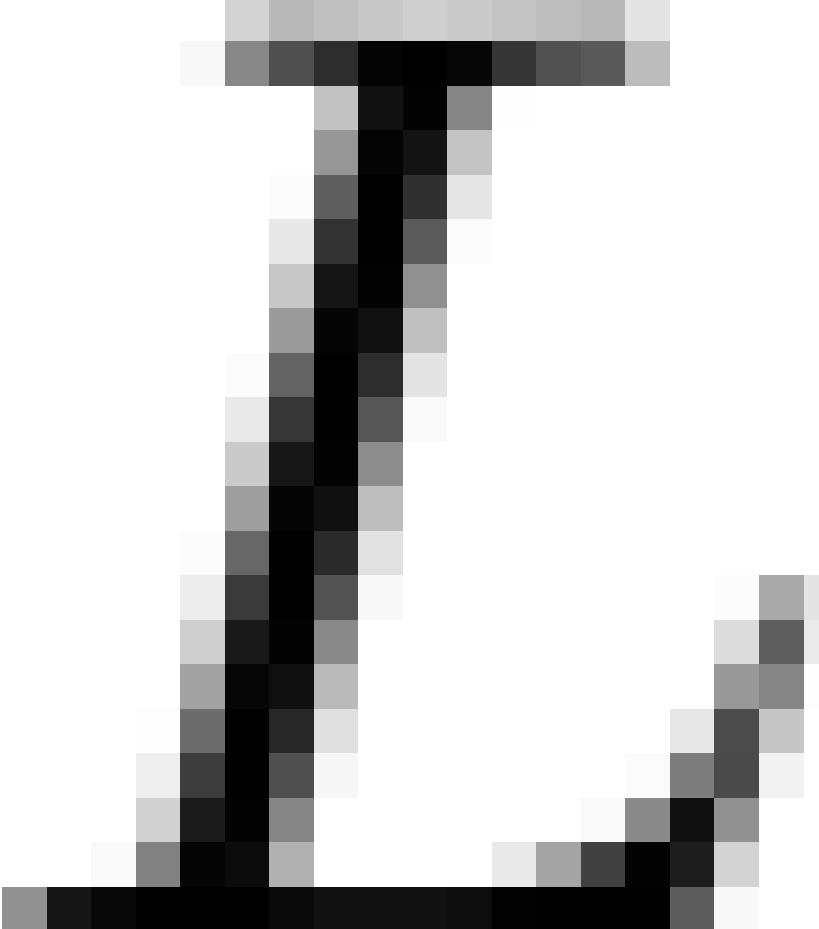


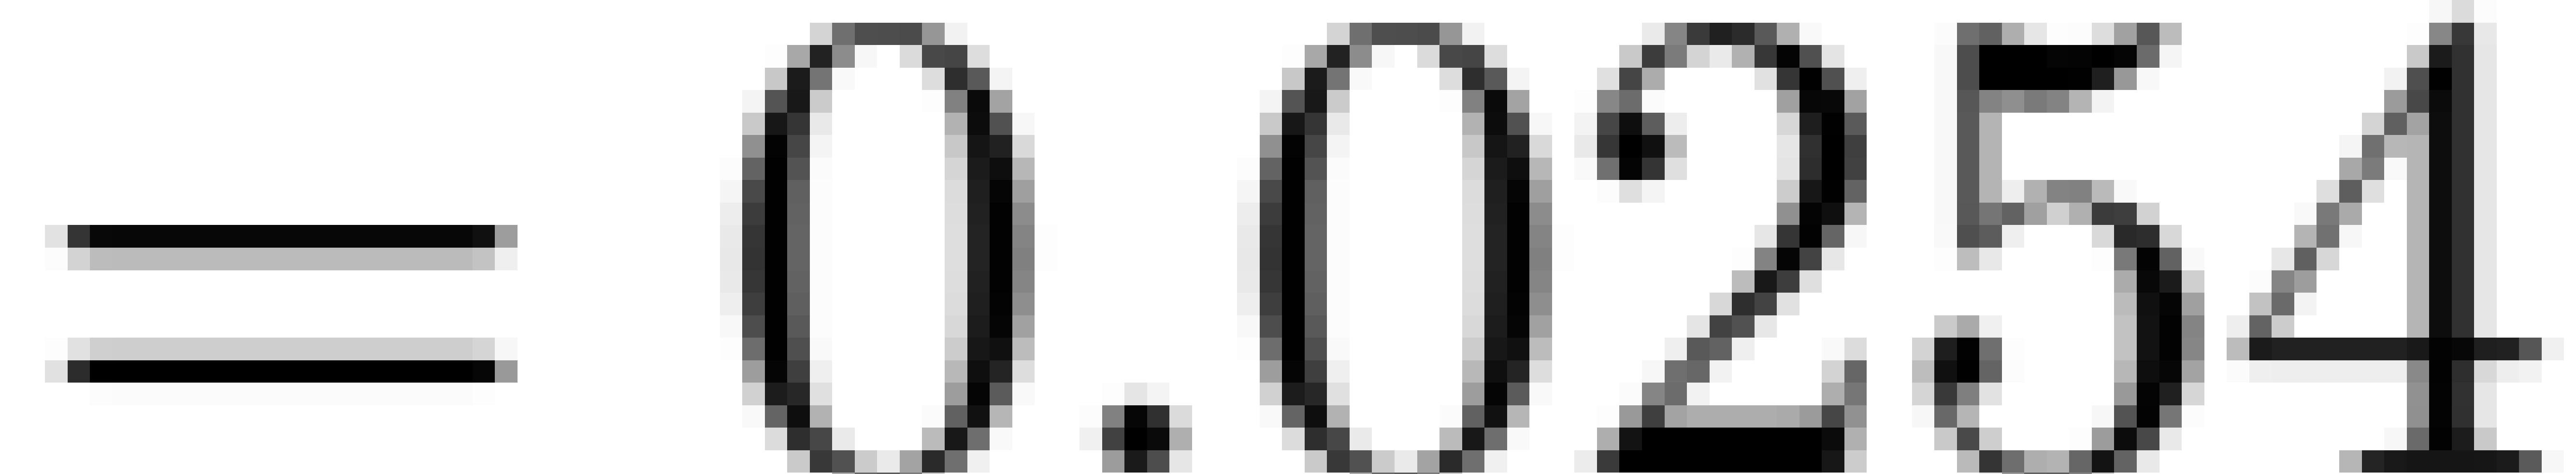



$$\frac{2084 \text{ N}}{\pi (0.0254 \text{ m})(0.0127 \text{ m})} = 2.06 \times 10^6 \text{ Pa} = 2.06 \text{ MPa}$$

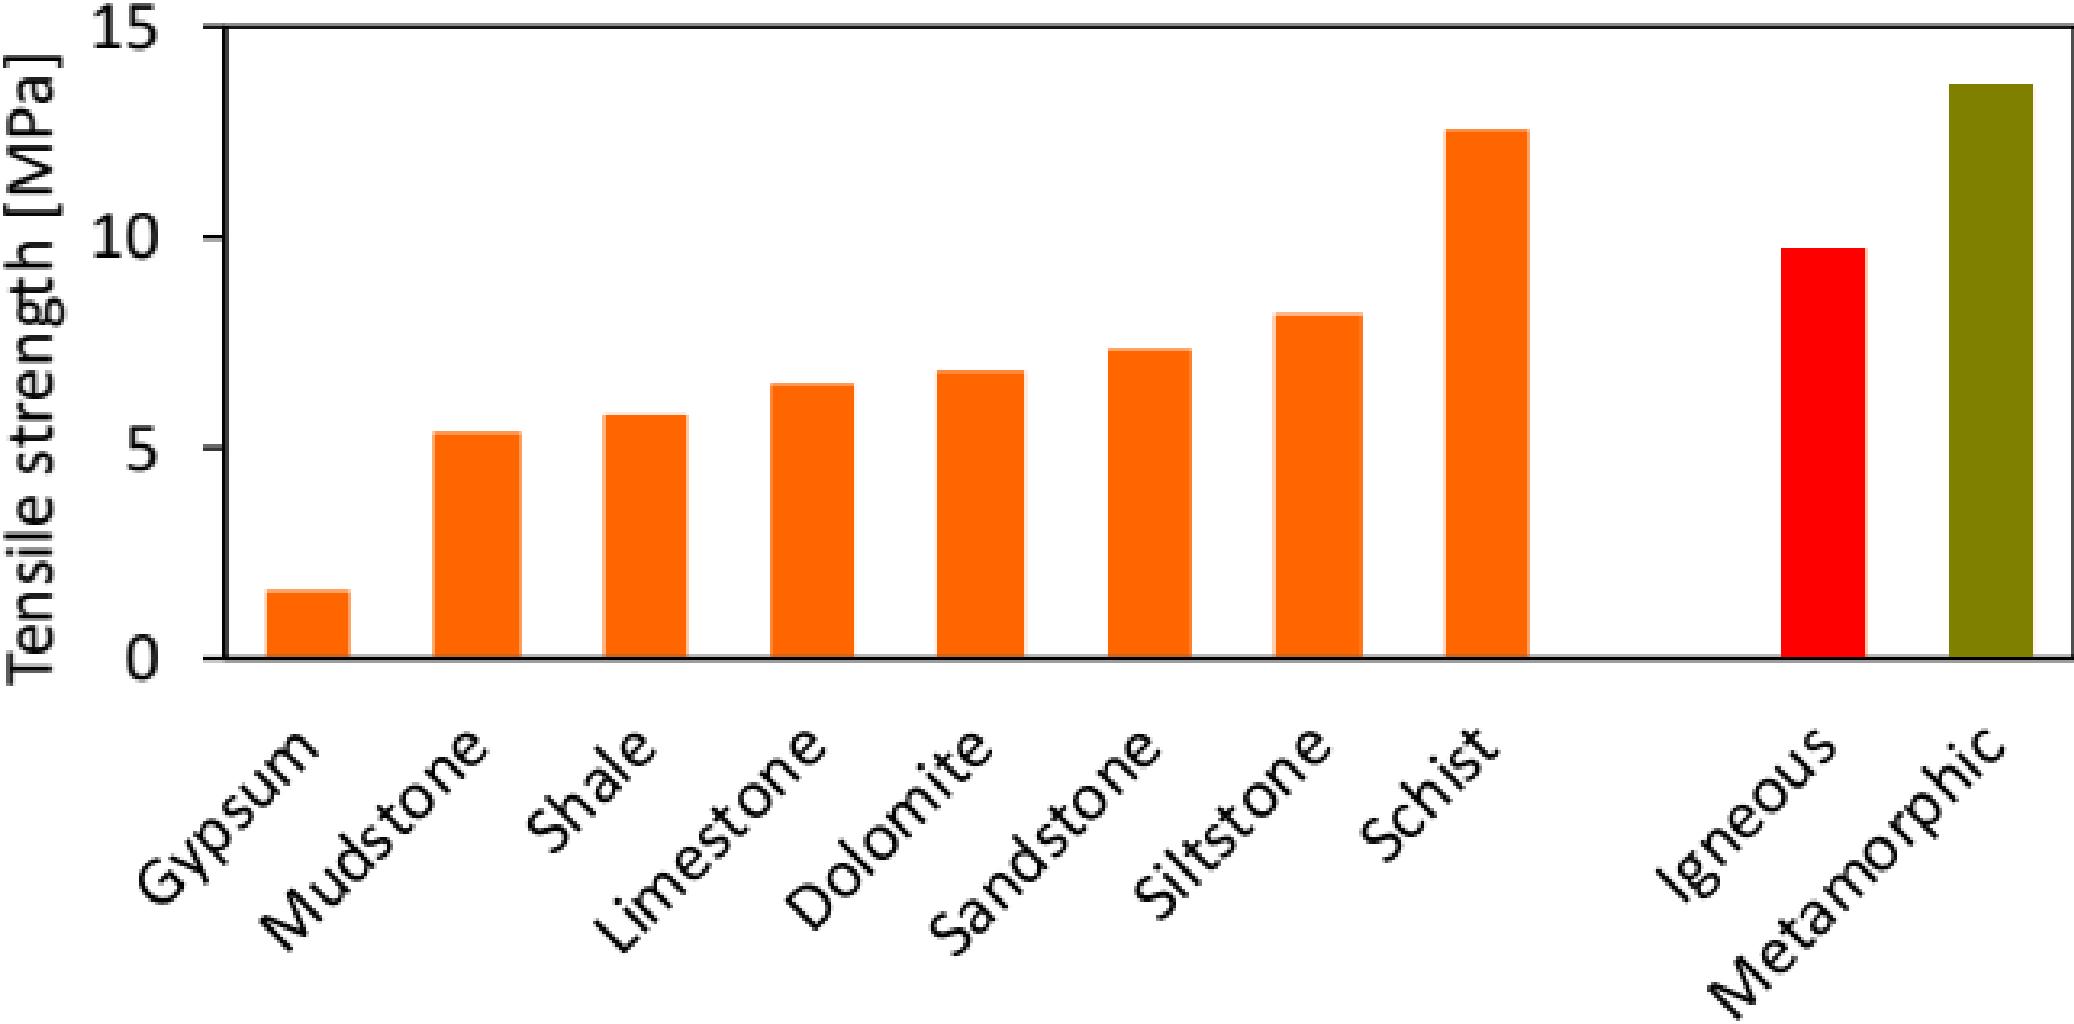


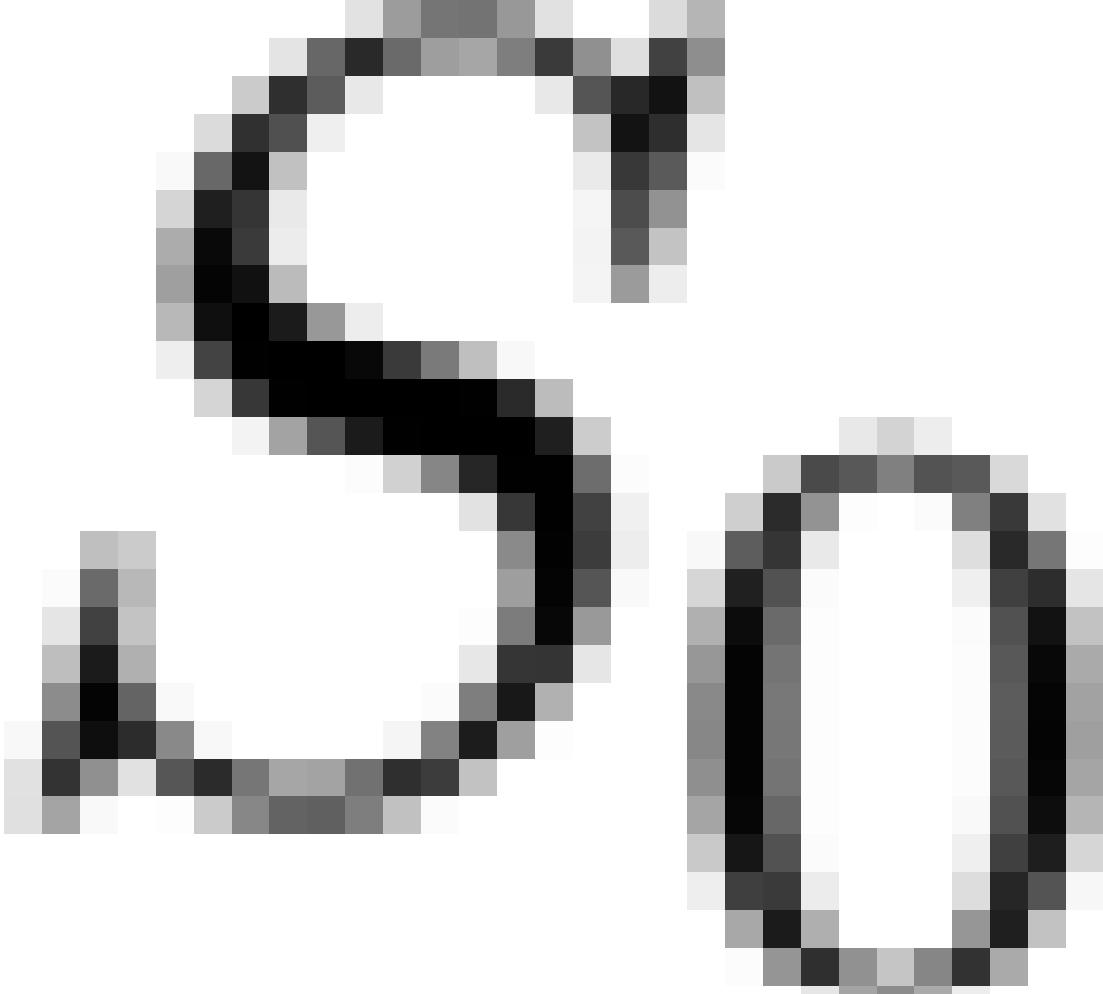



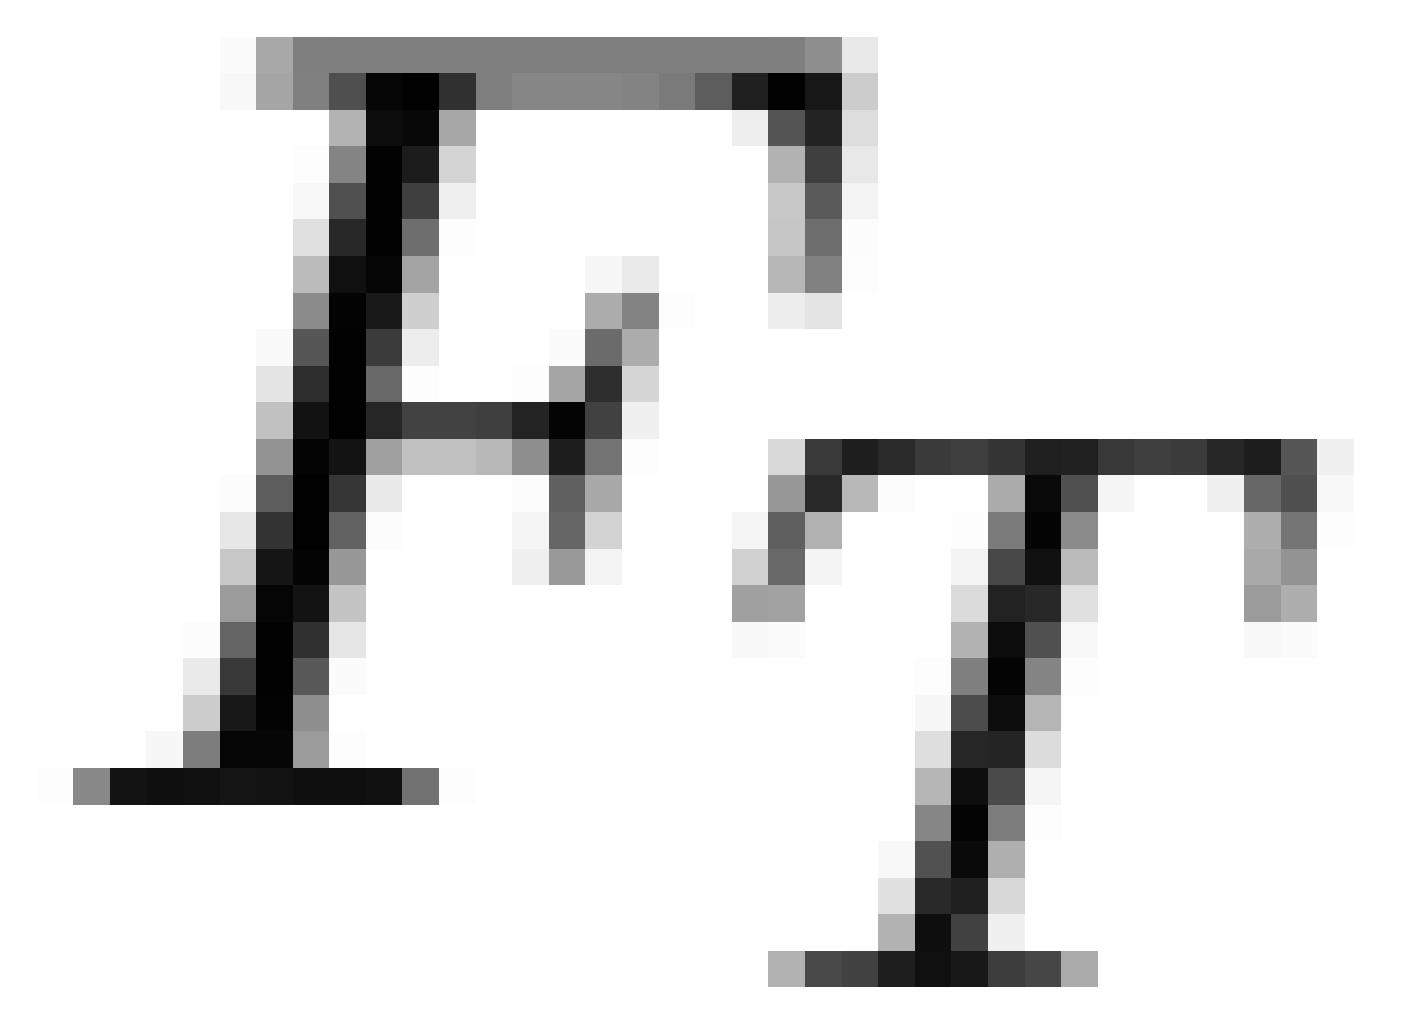


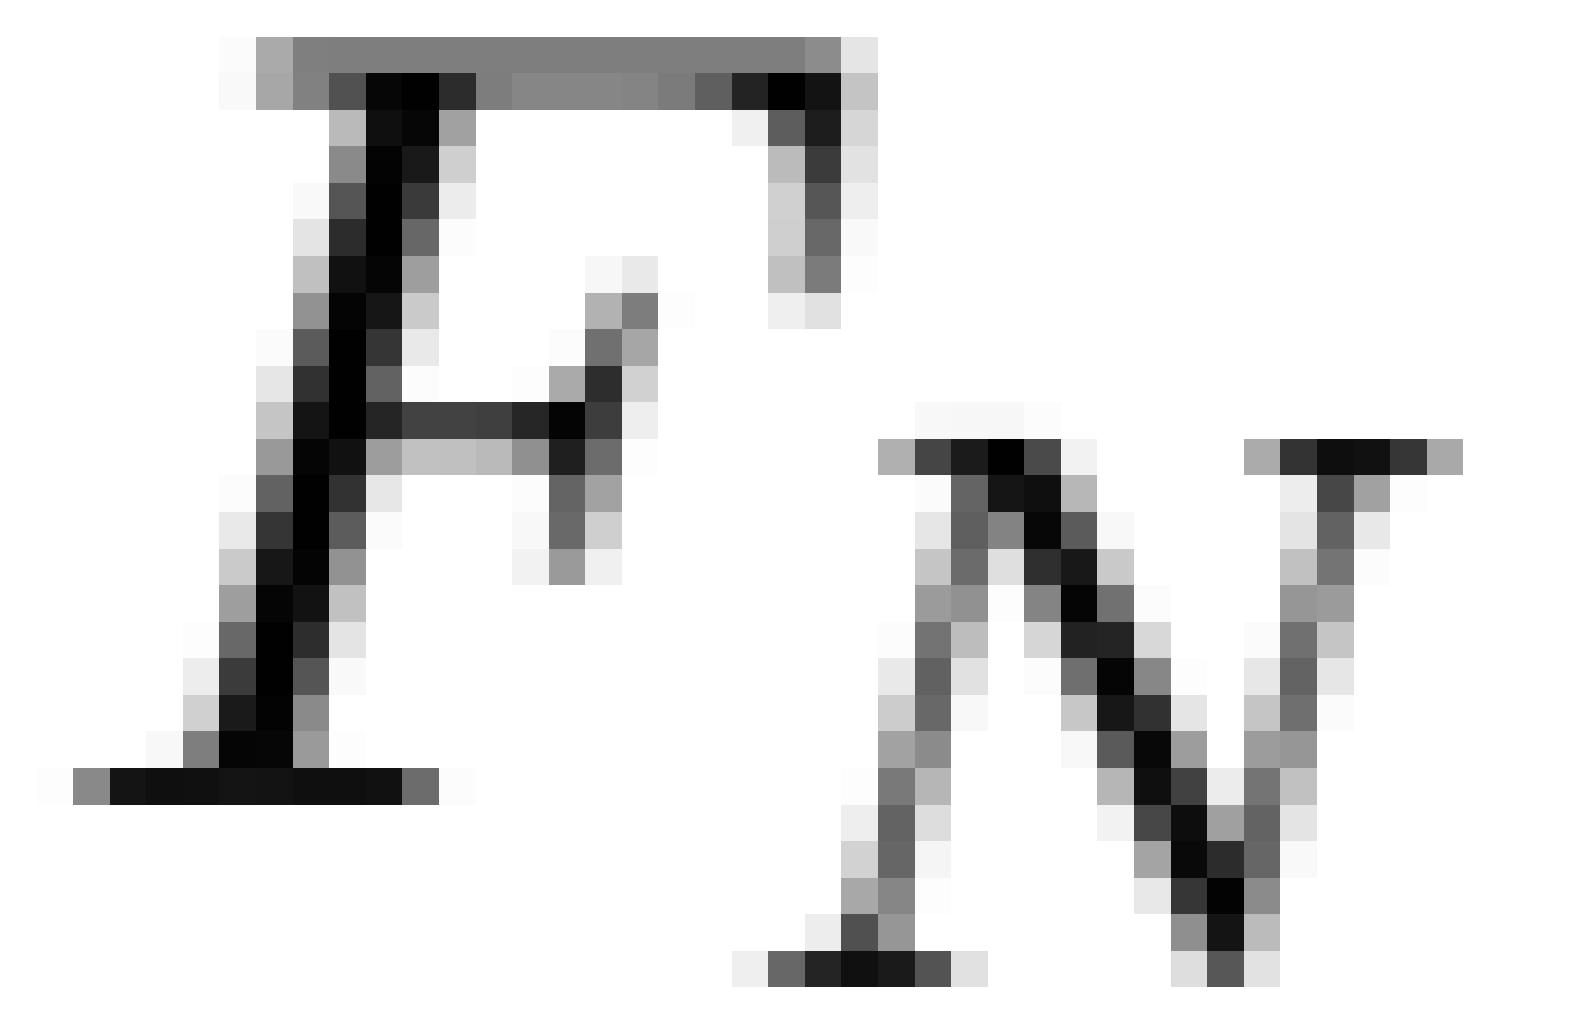



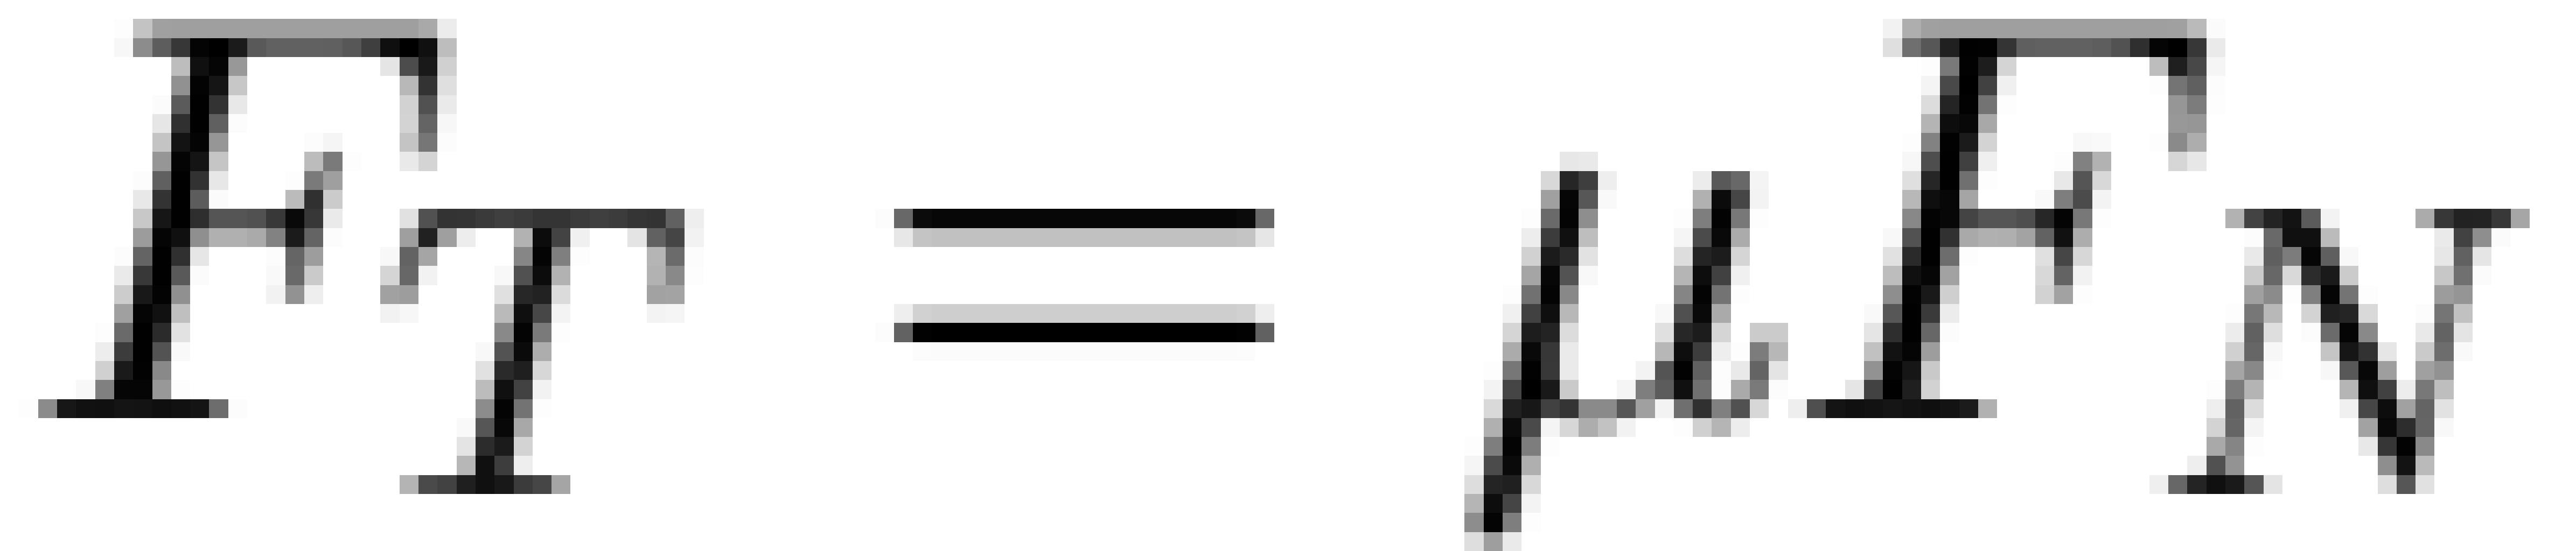


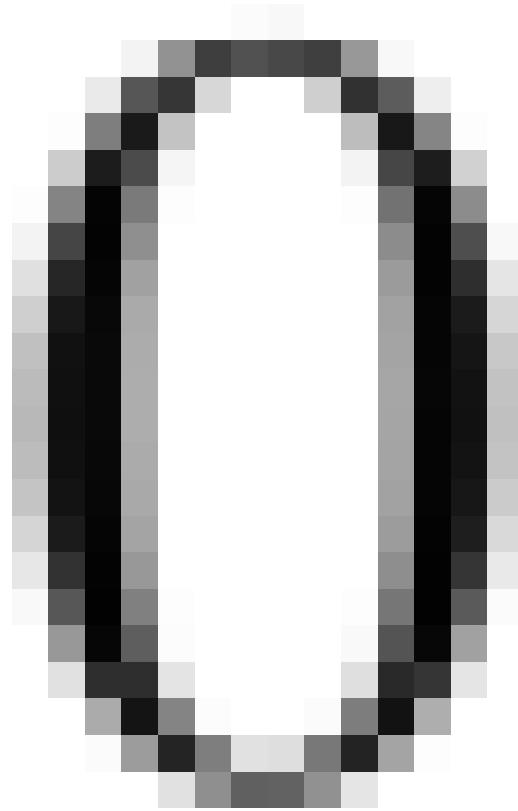

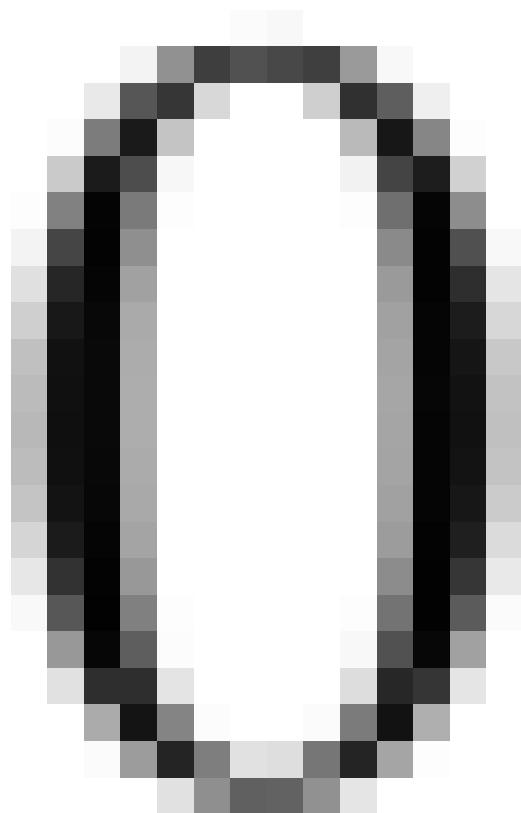


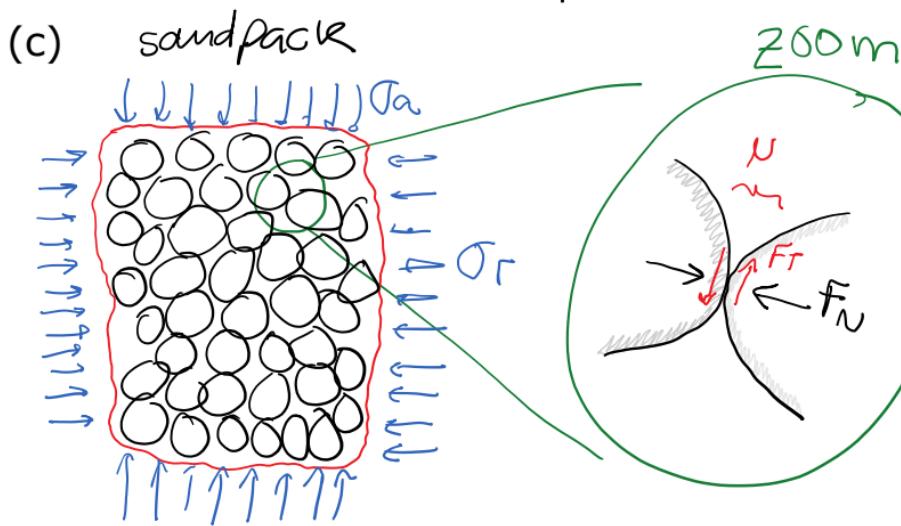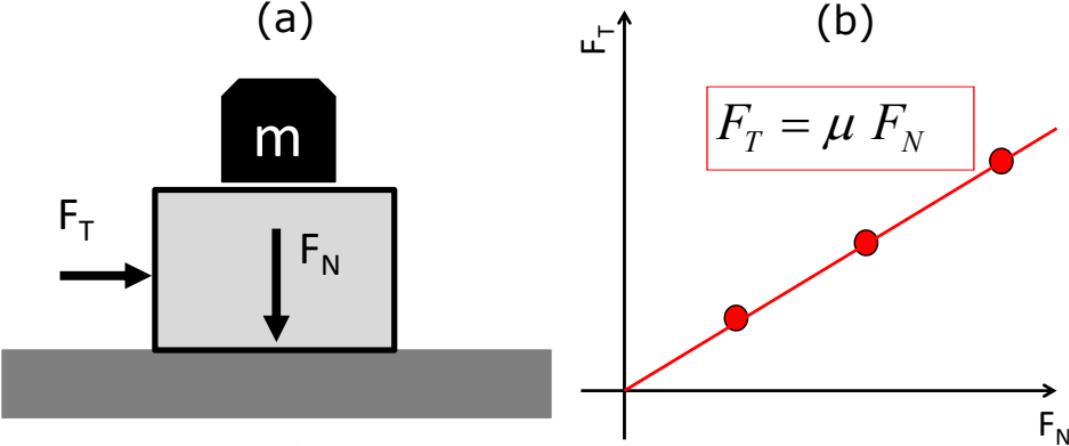


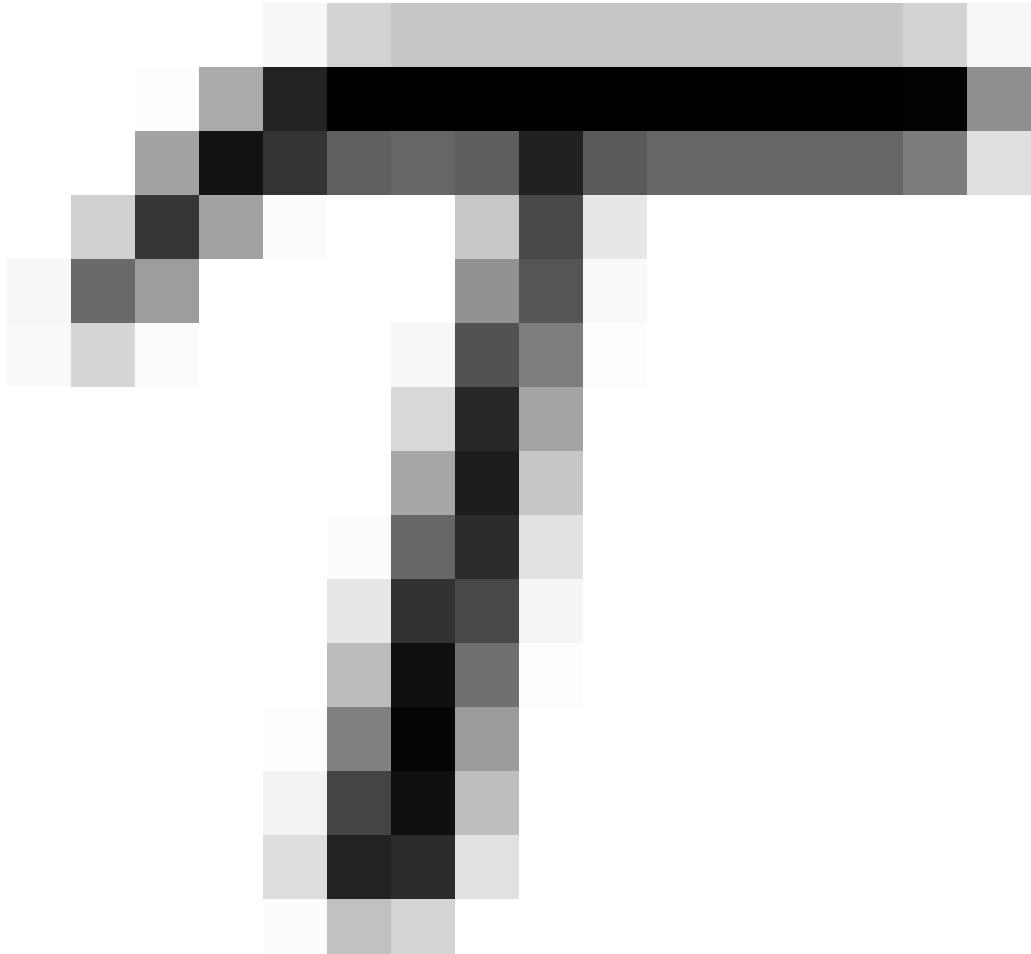

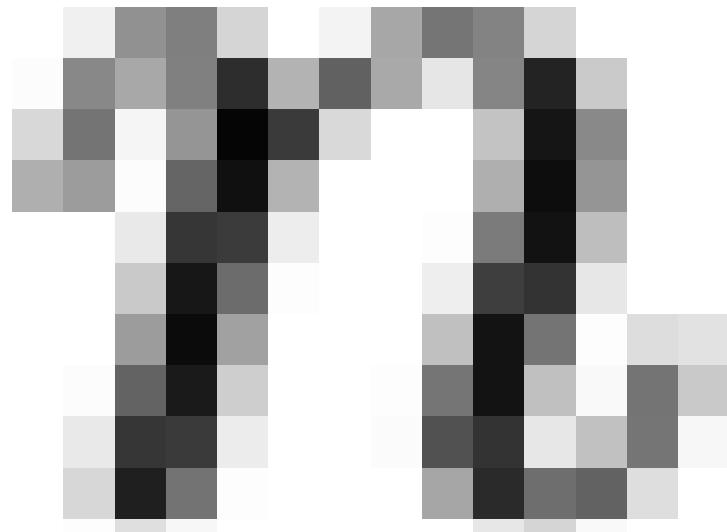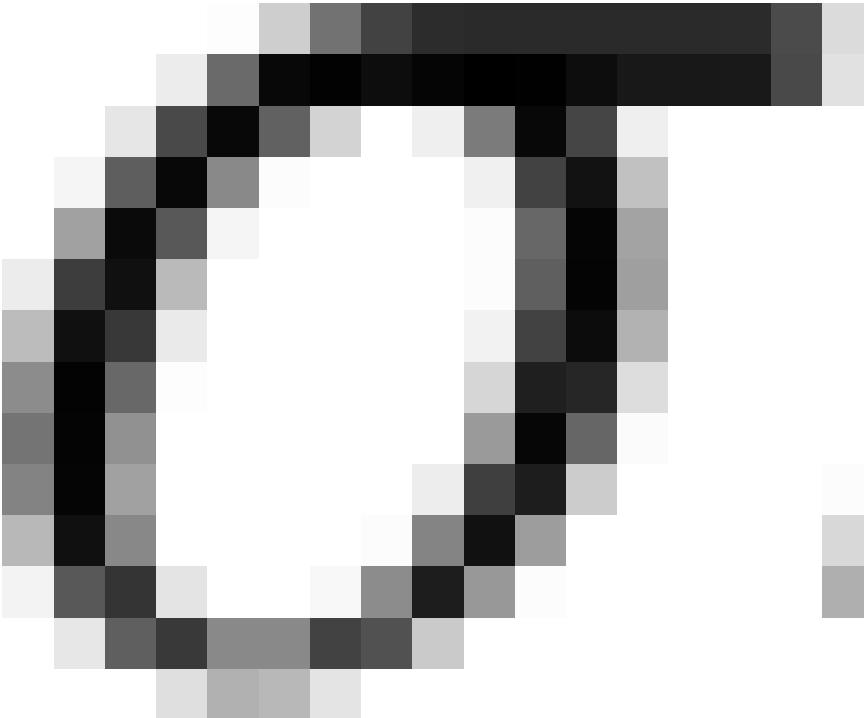








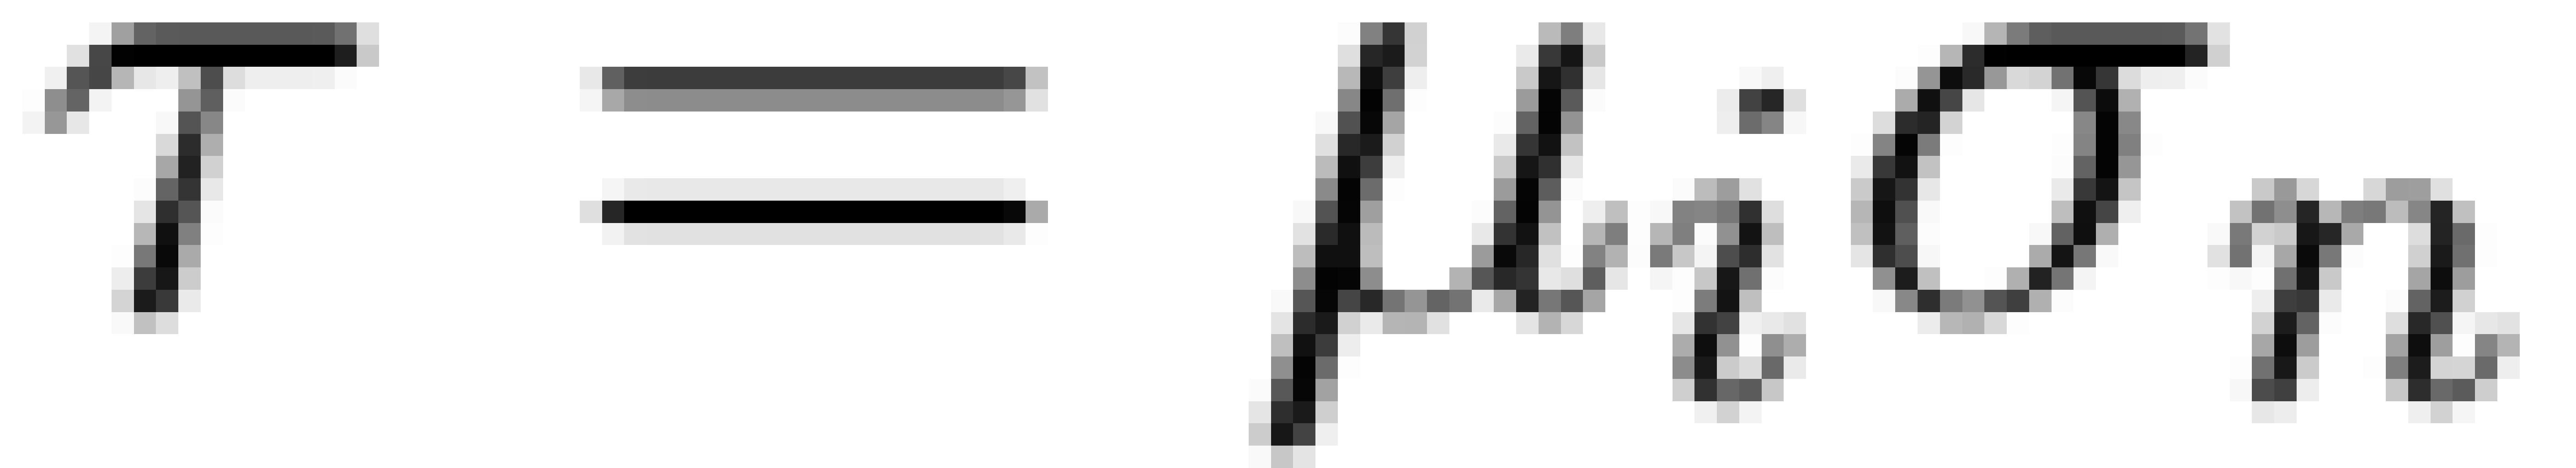


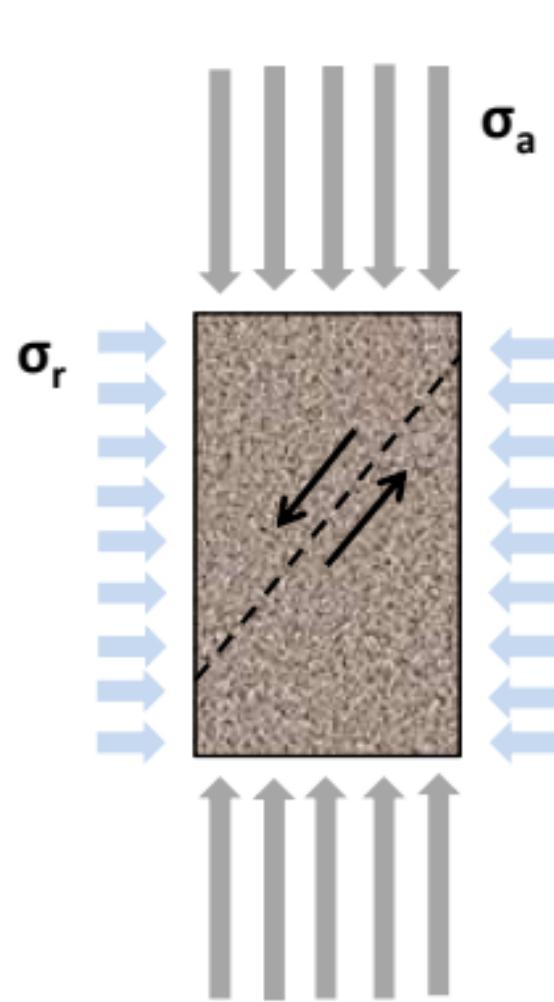


Unconsolidated Sand

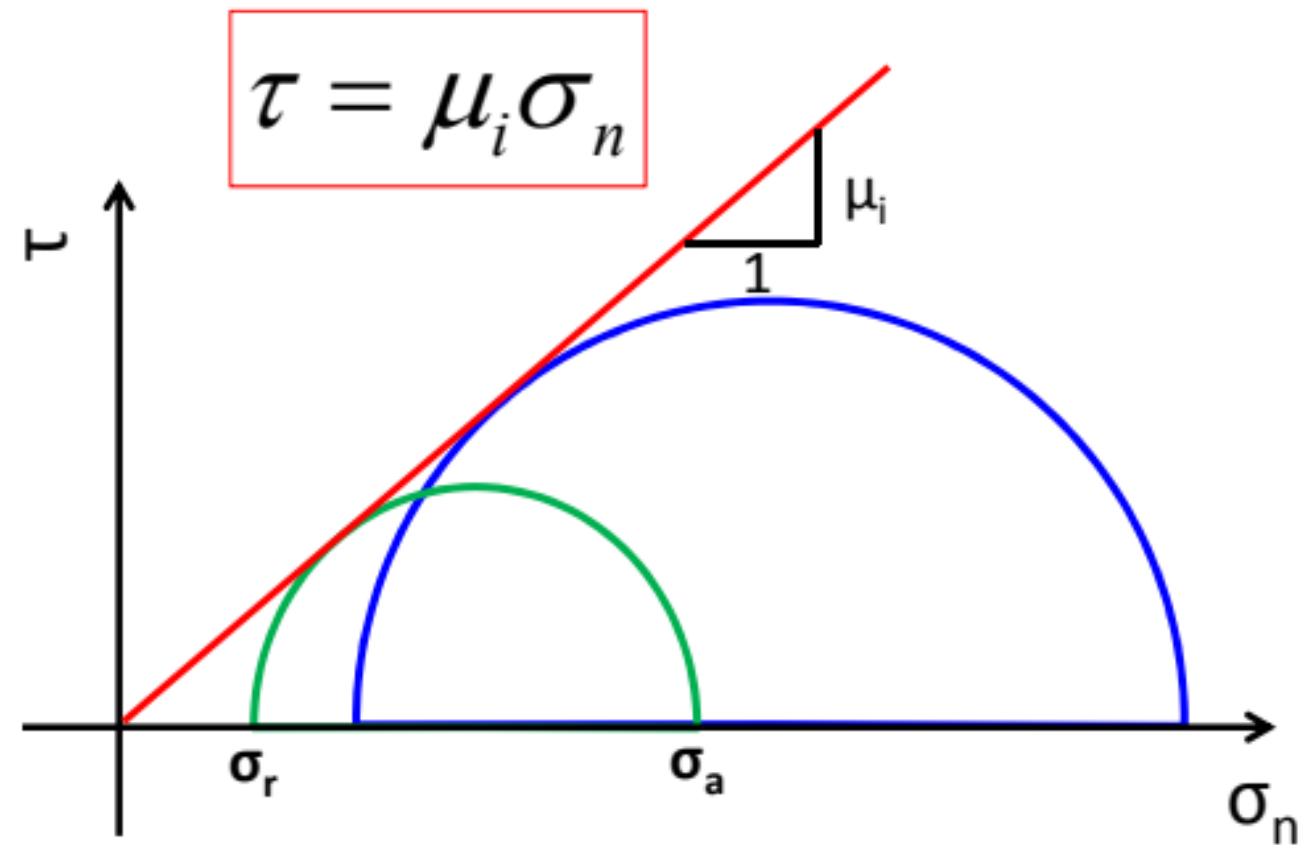




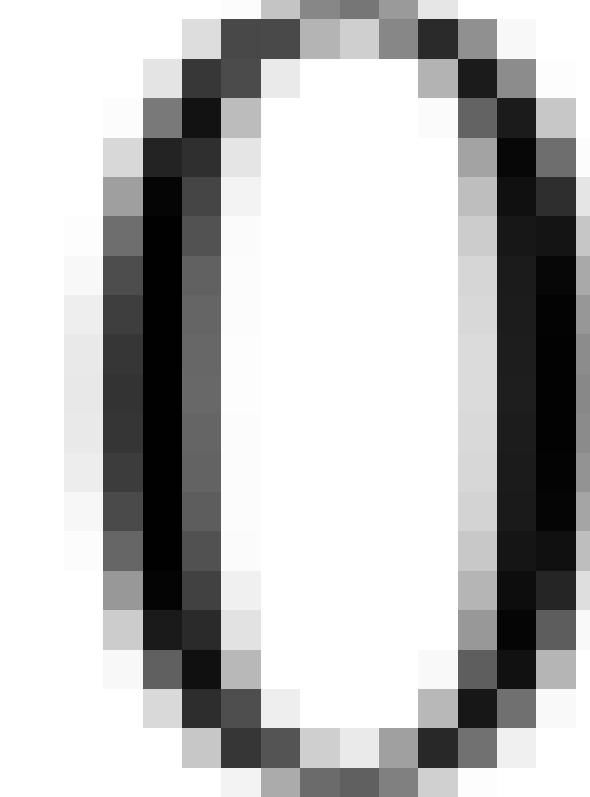
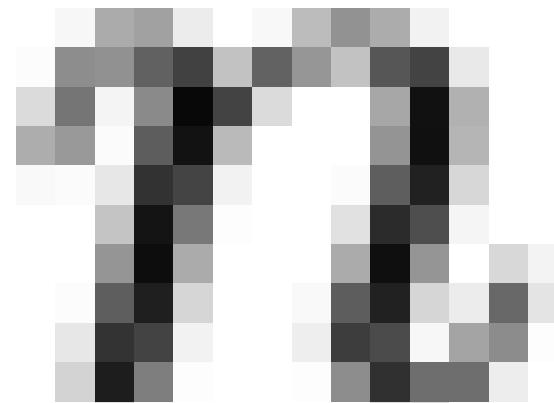
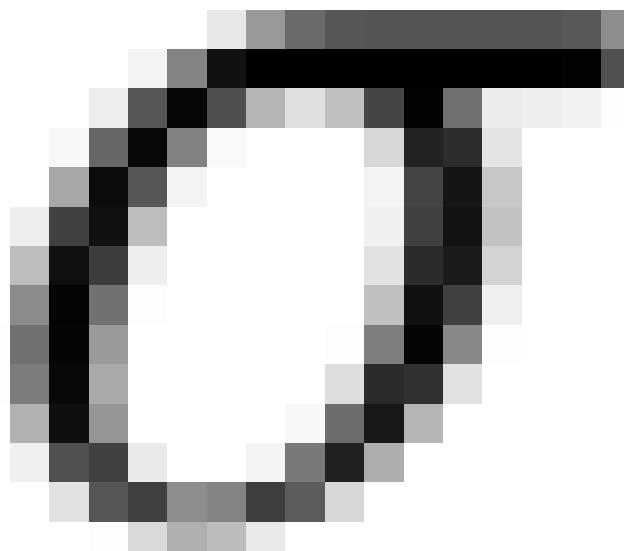



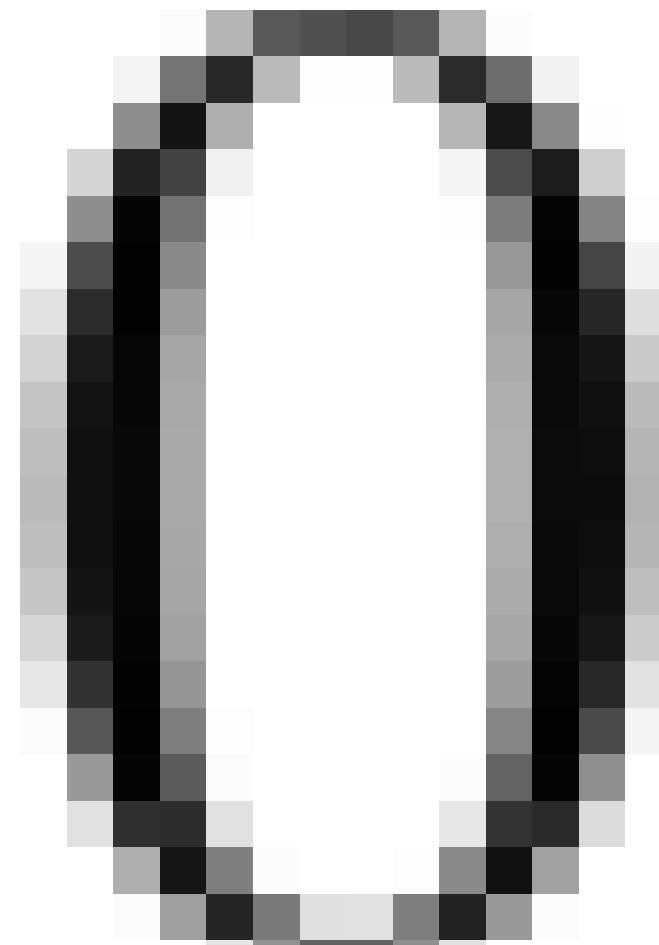
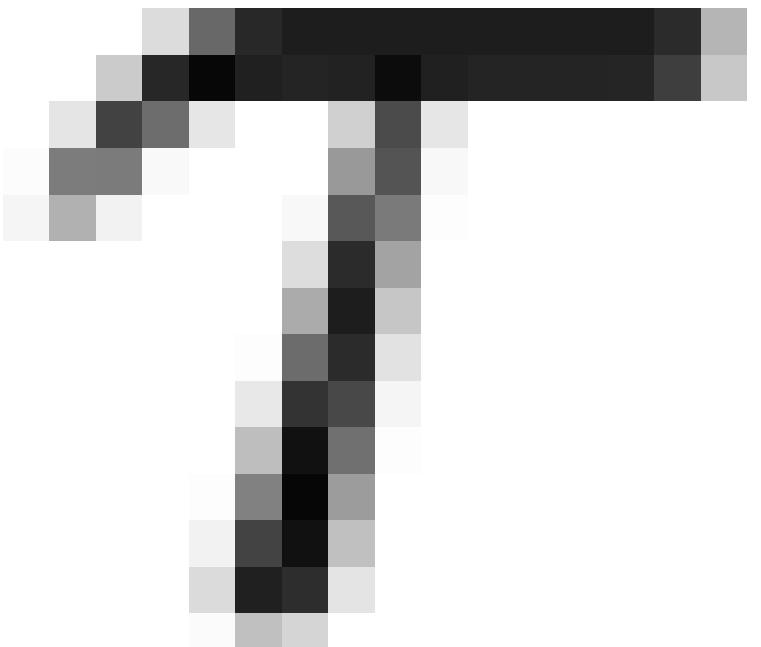


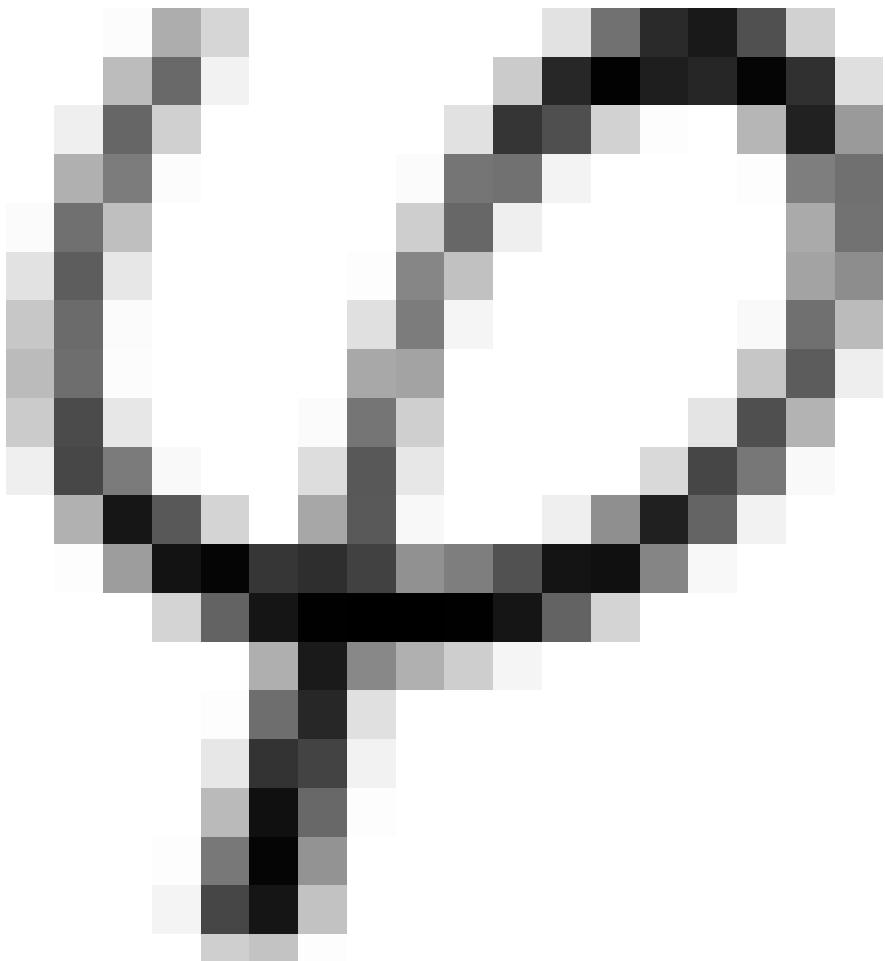




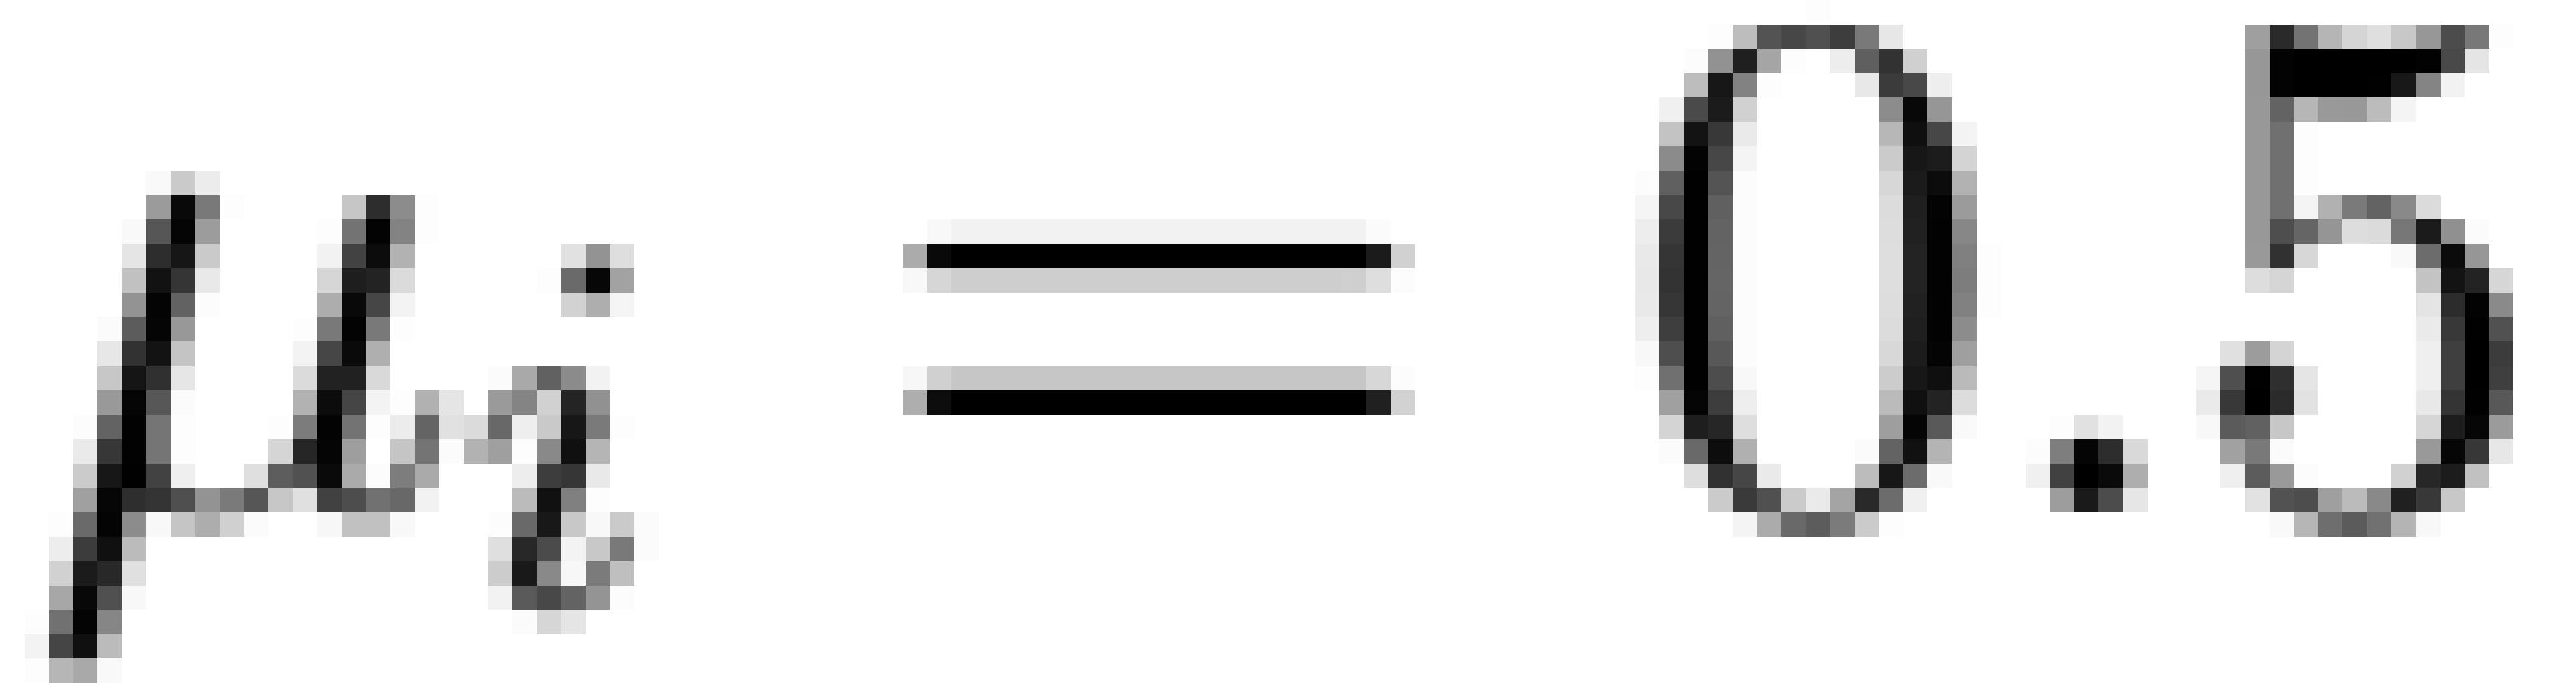


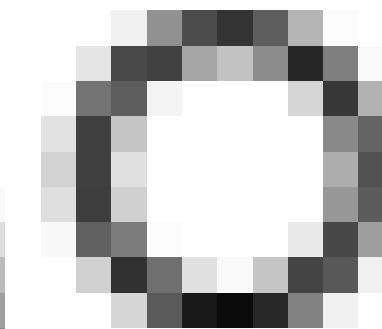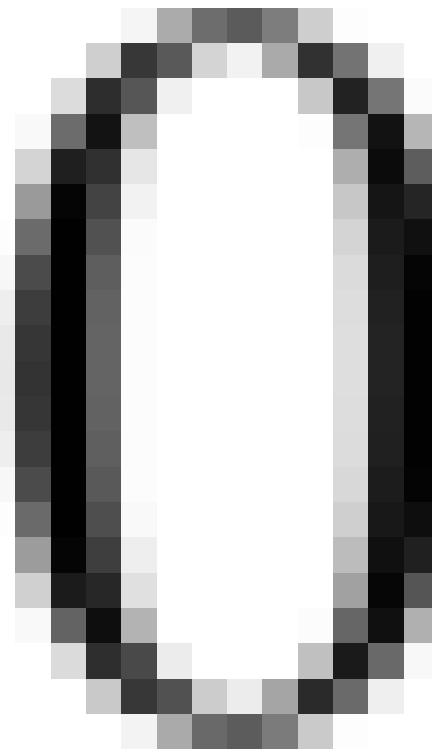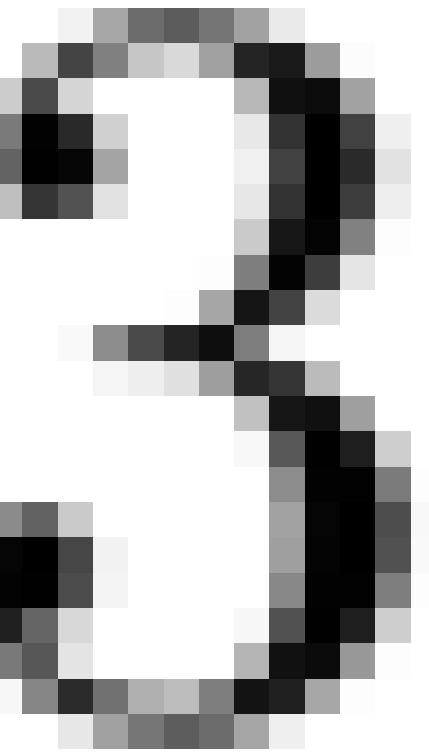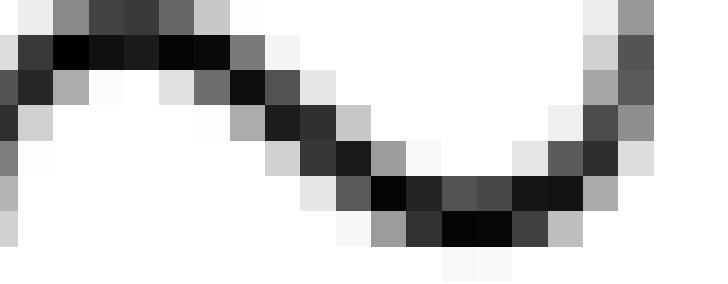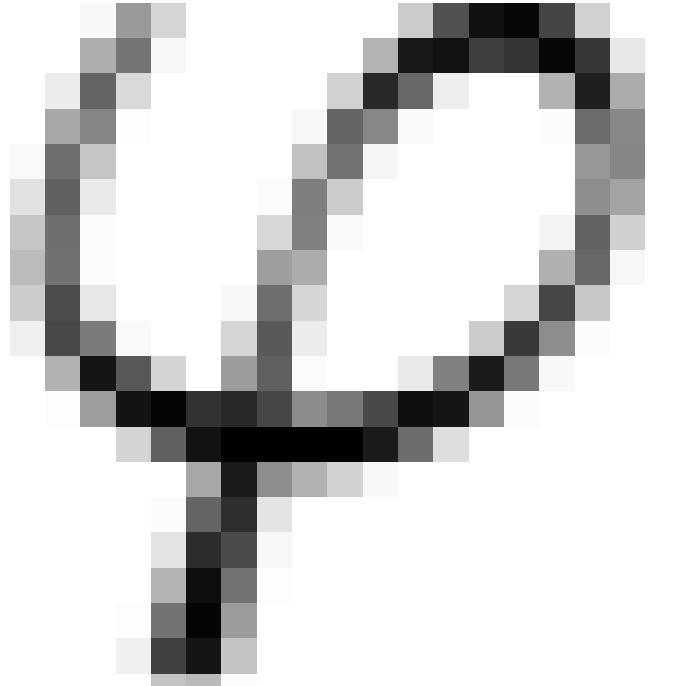


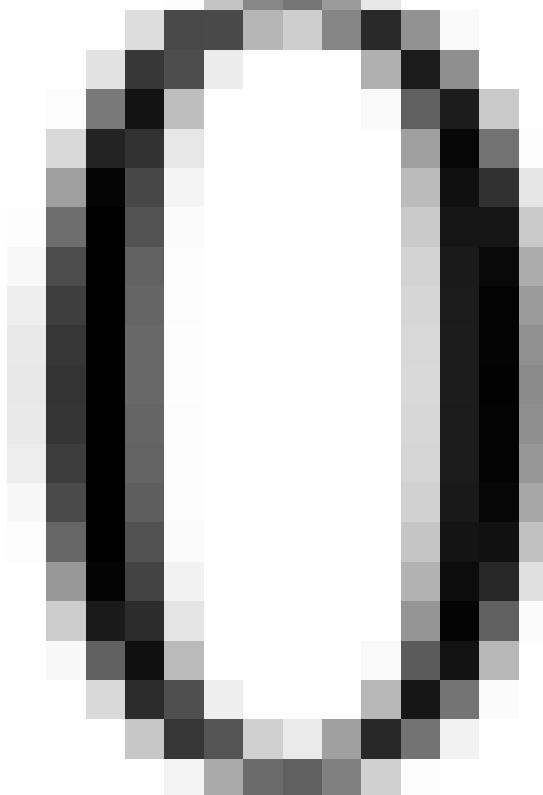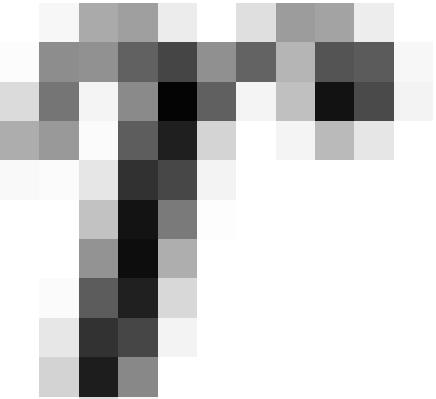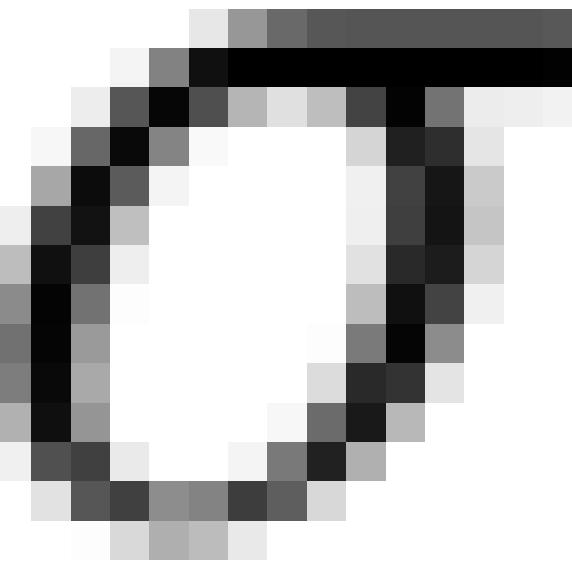



(1) Unconfined Loading

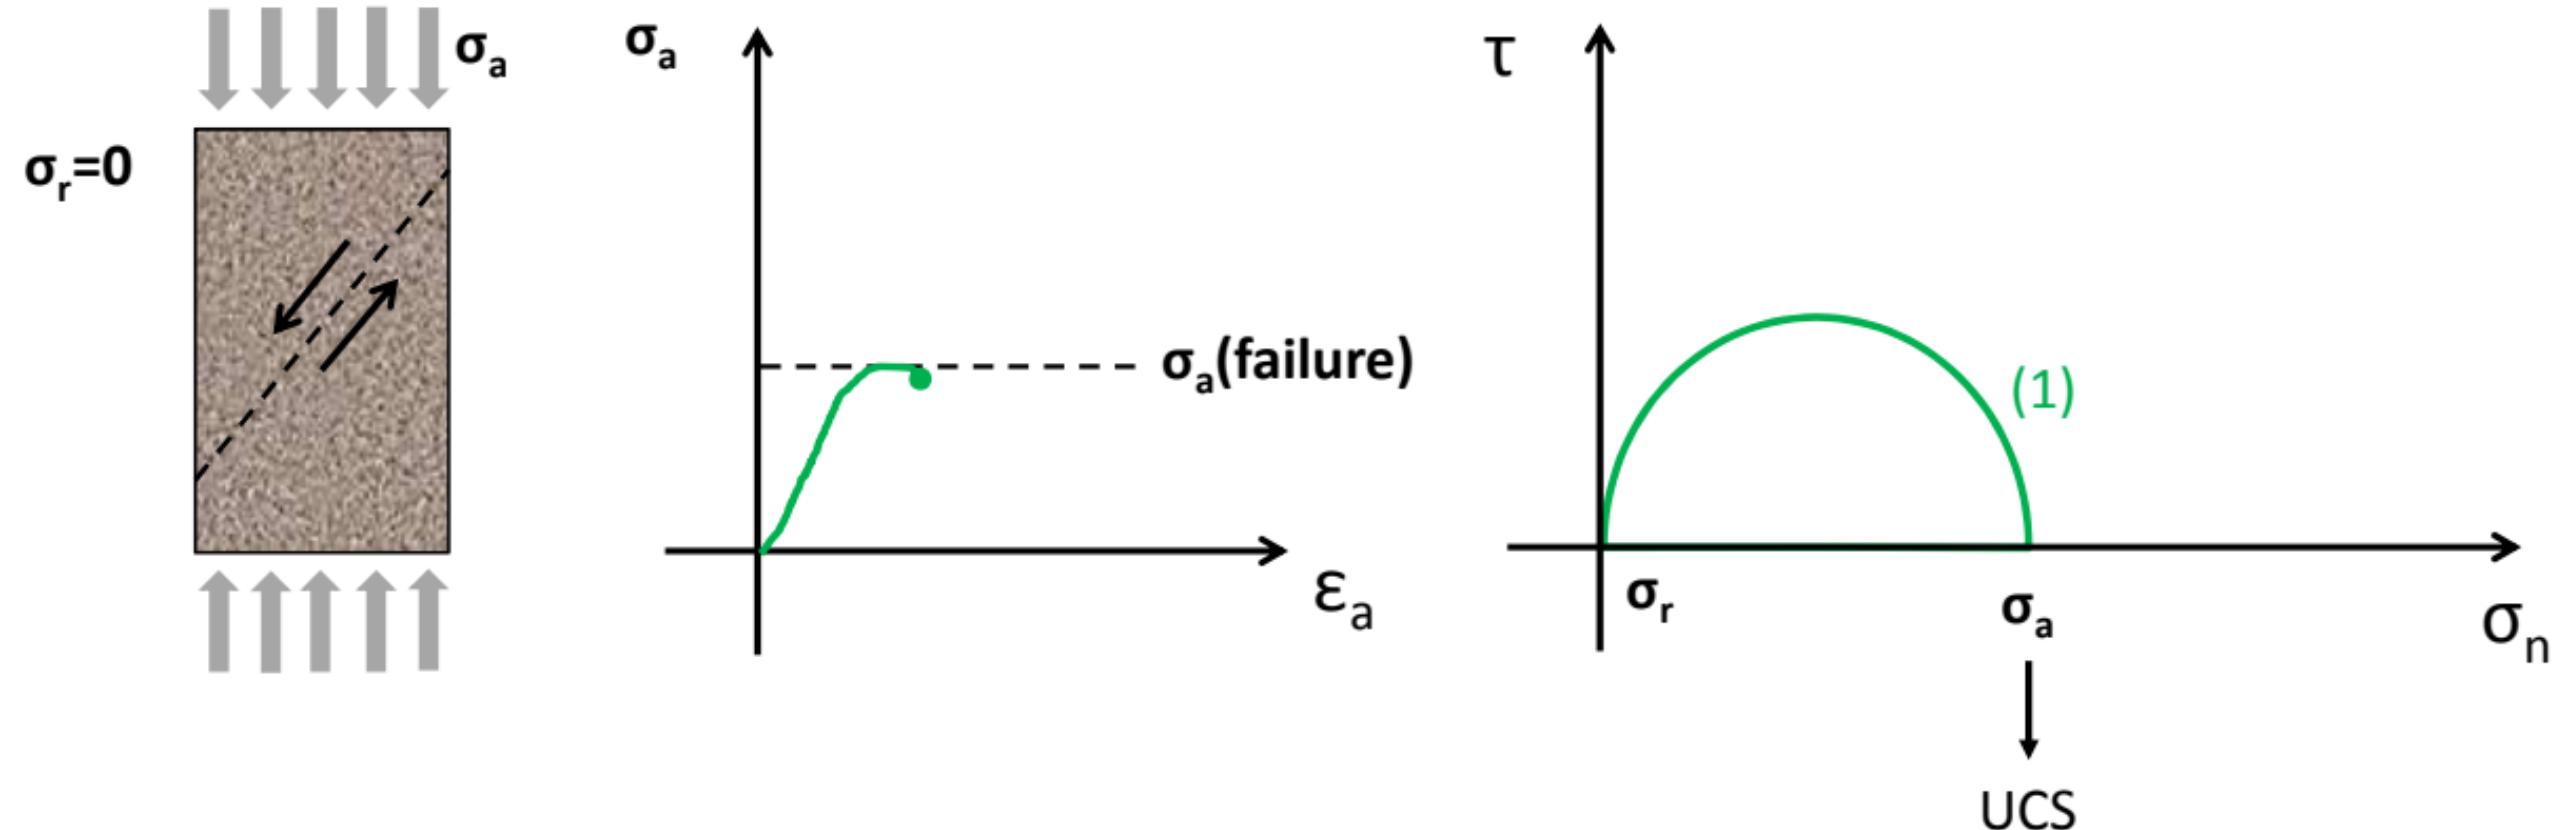


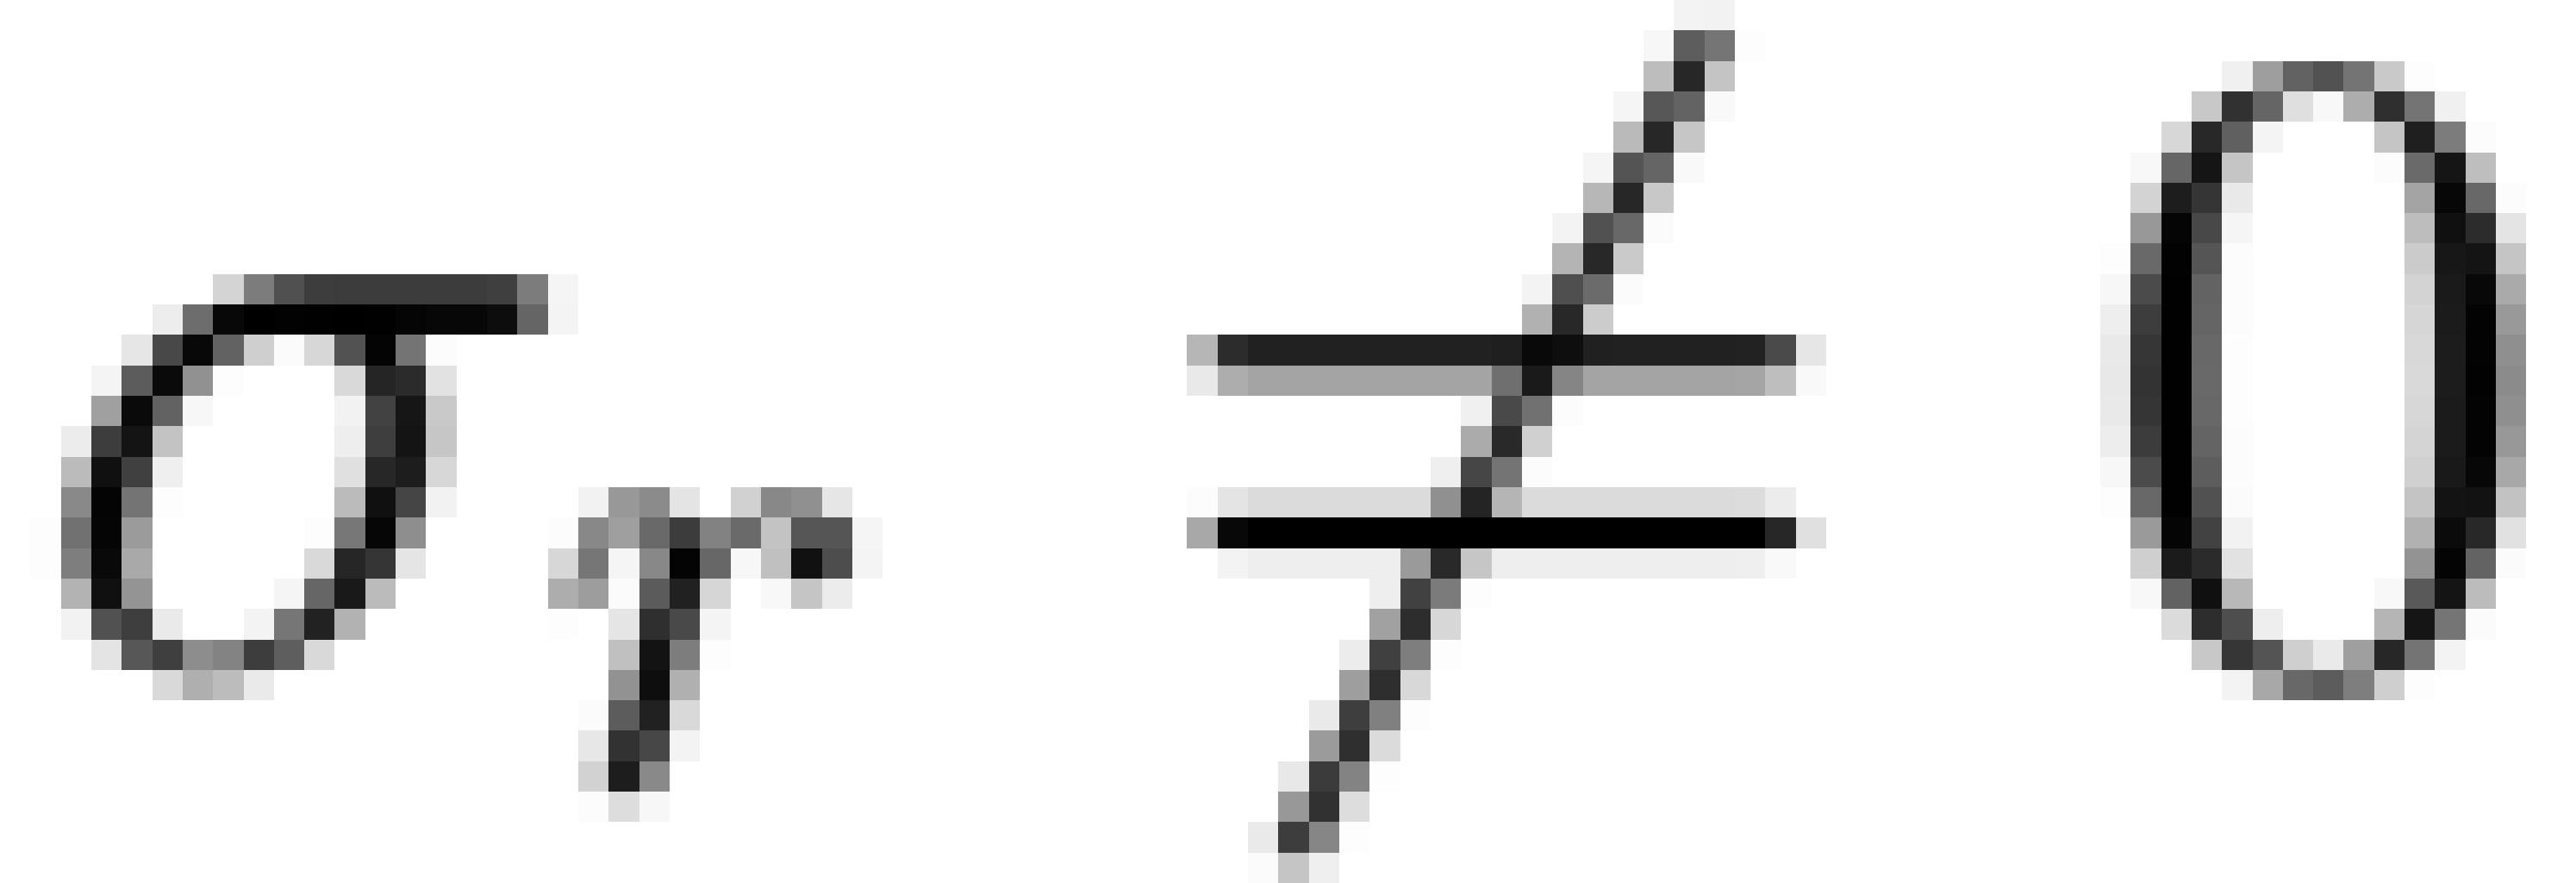

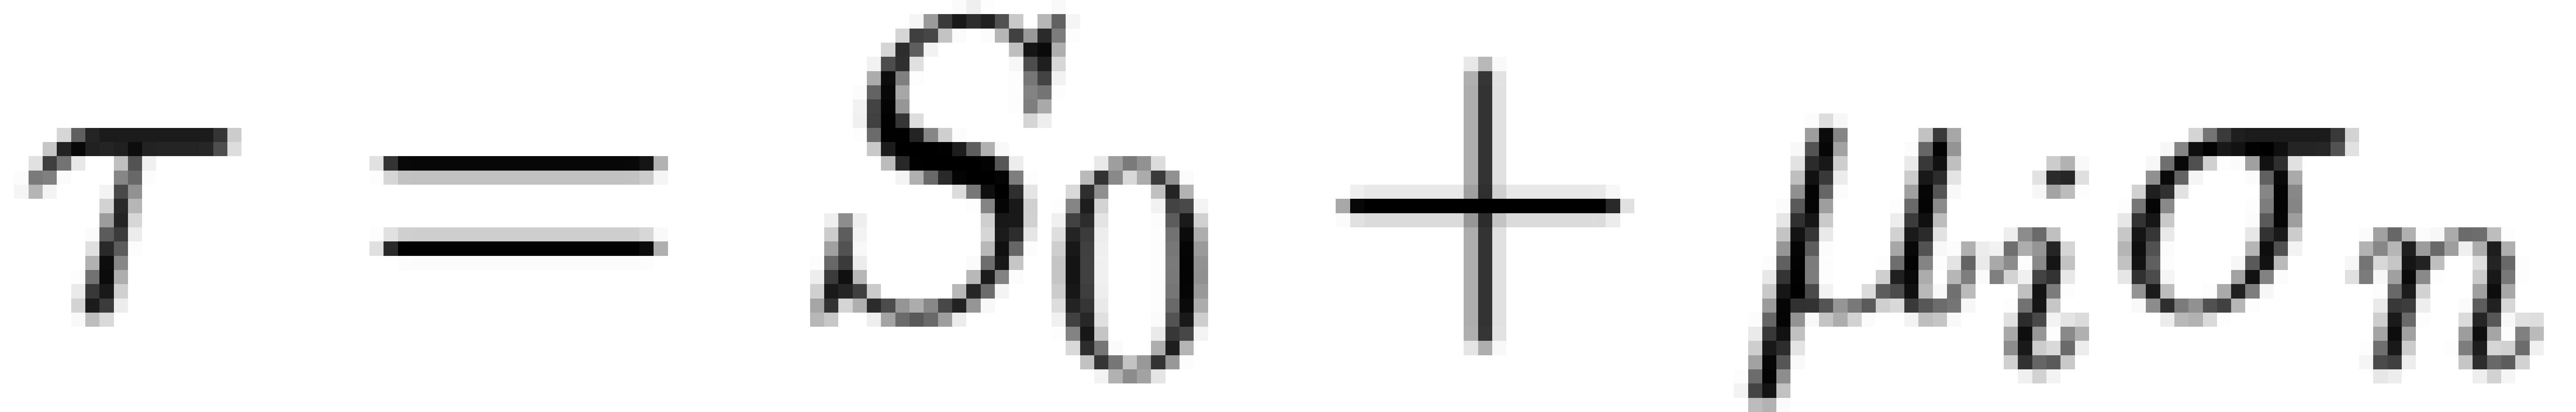



(2) Confined Loading

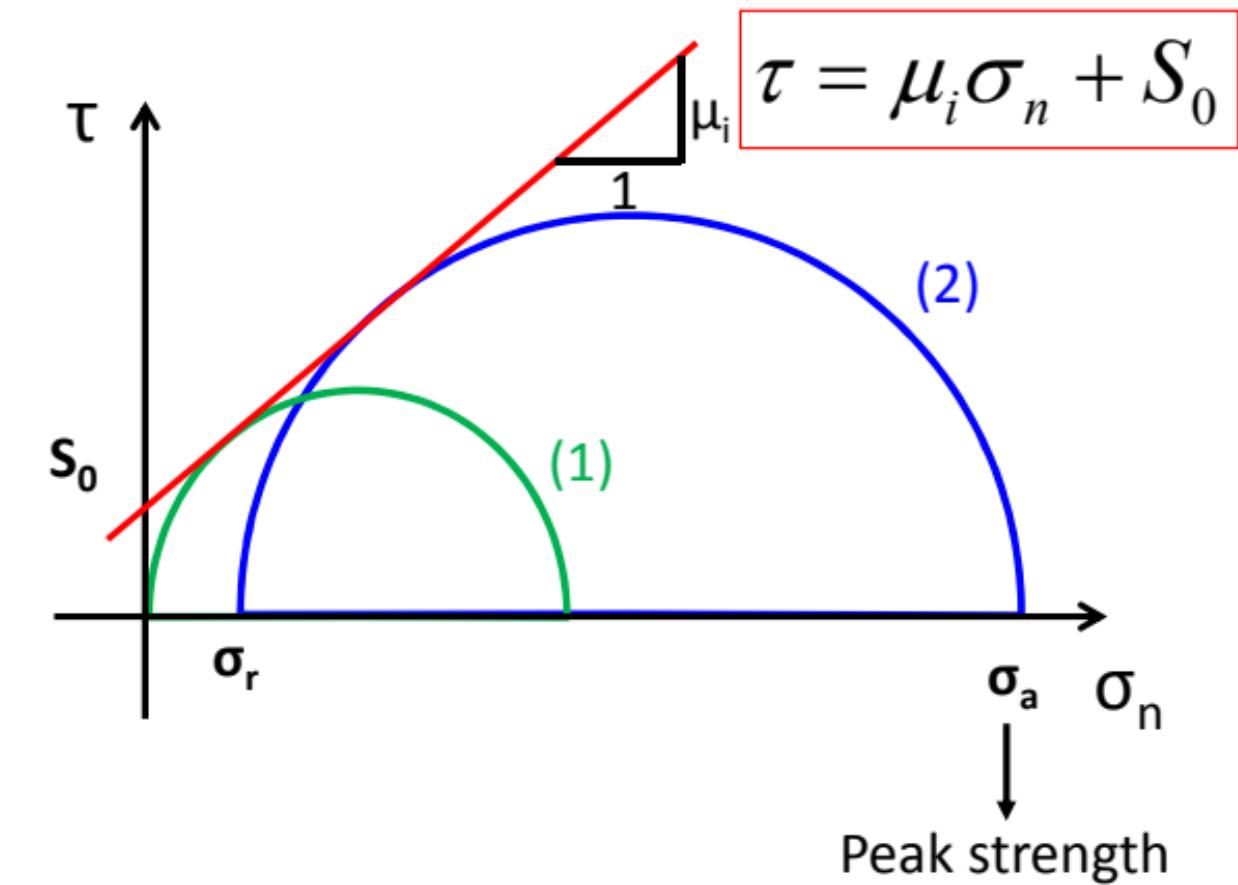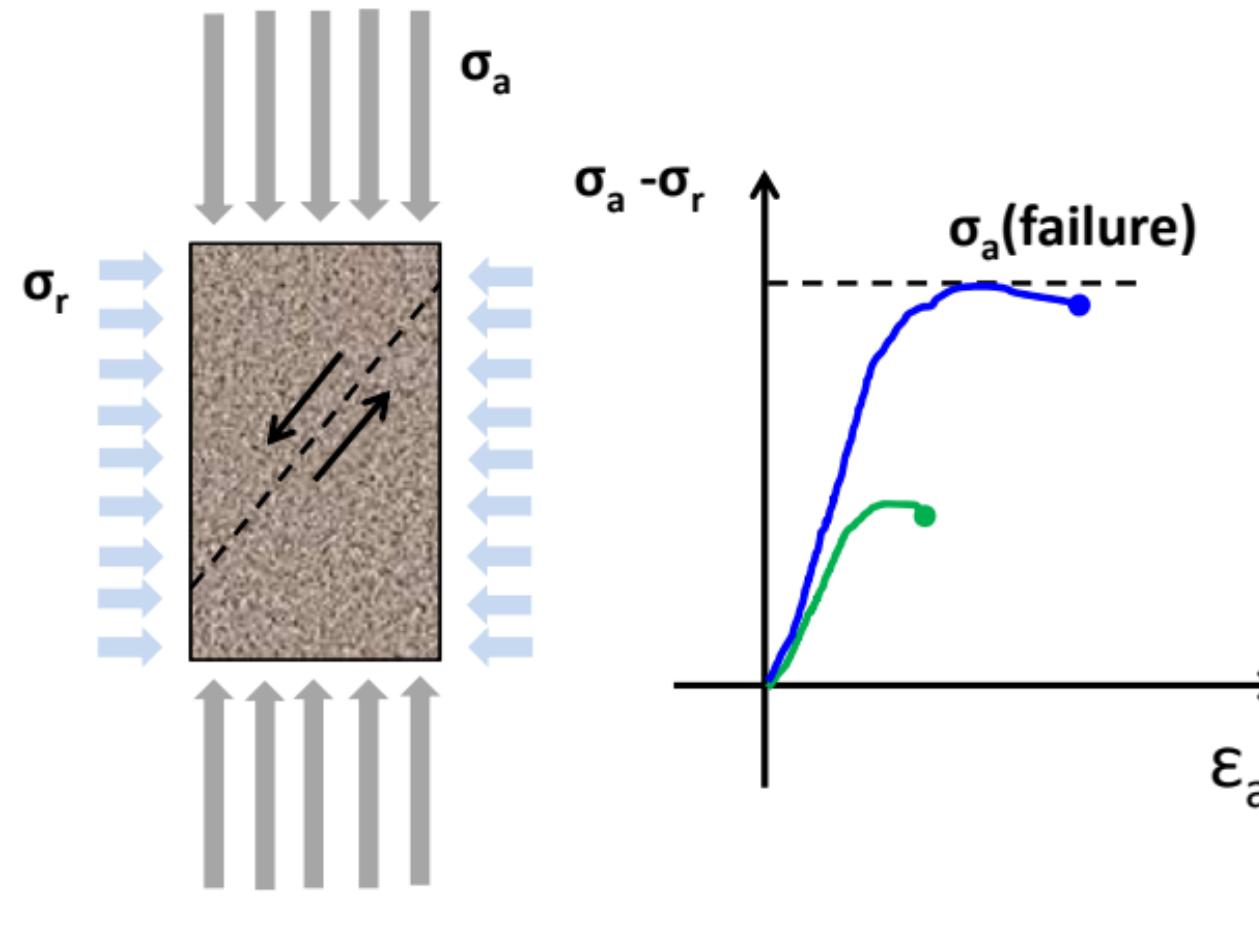










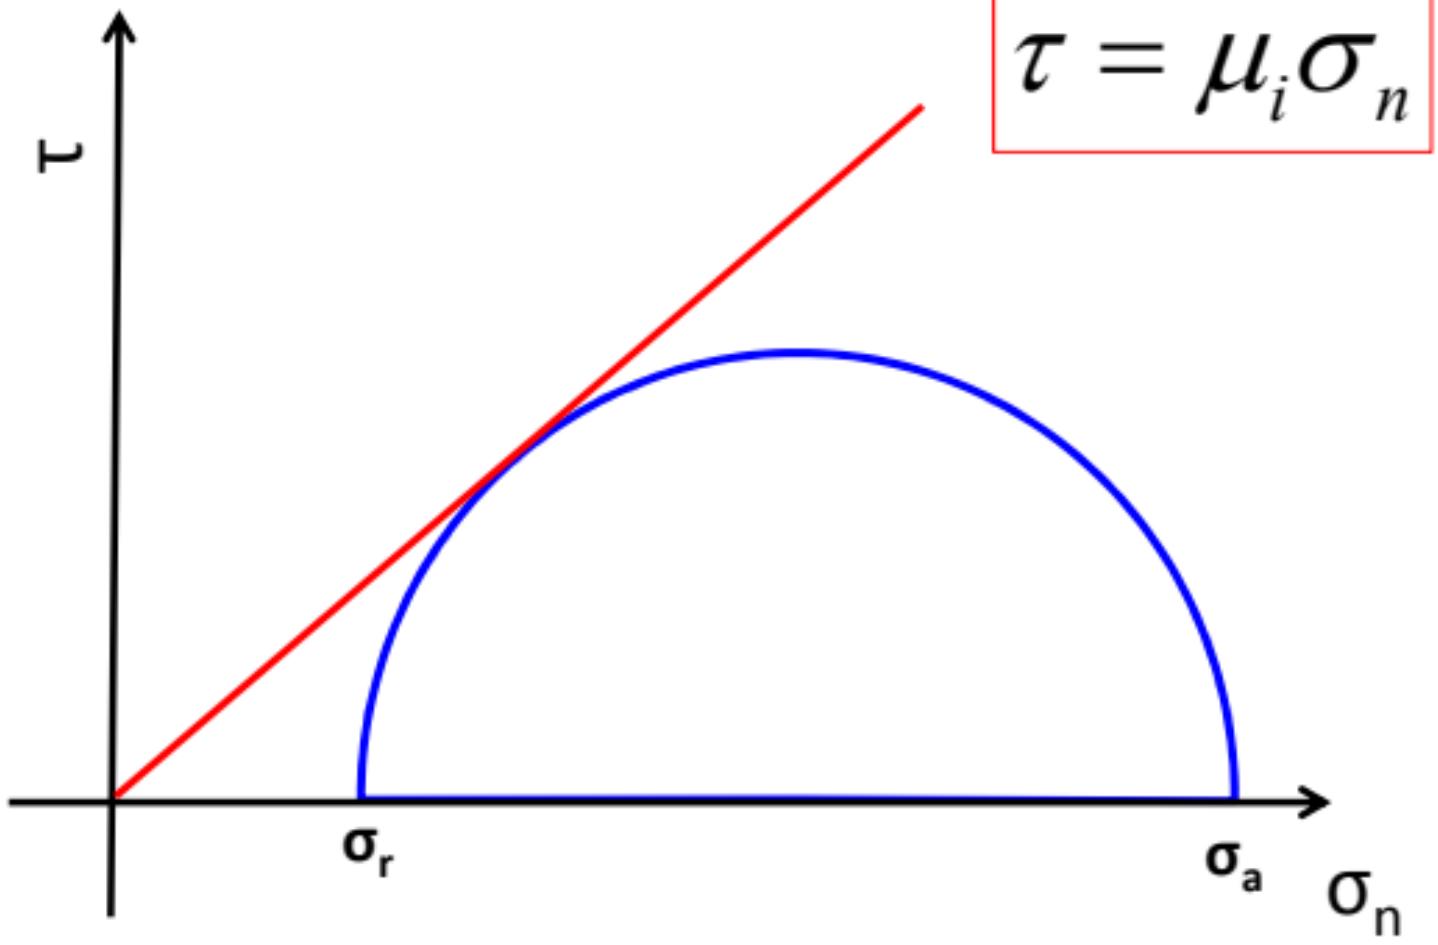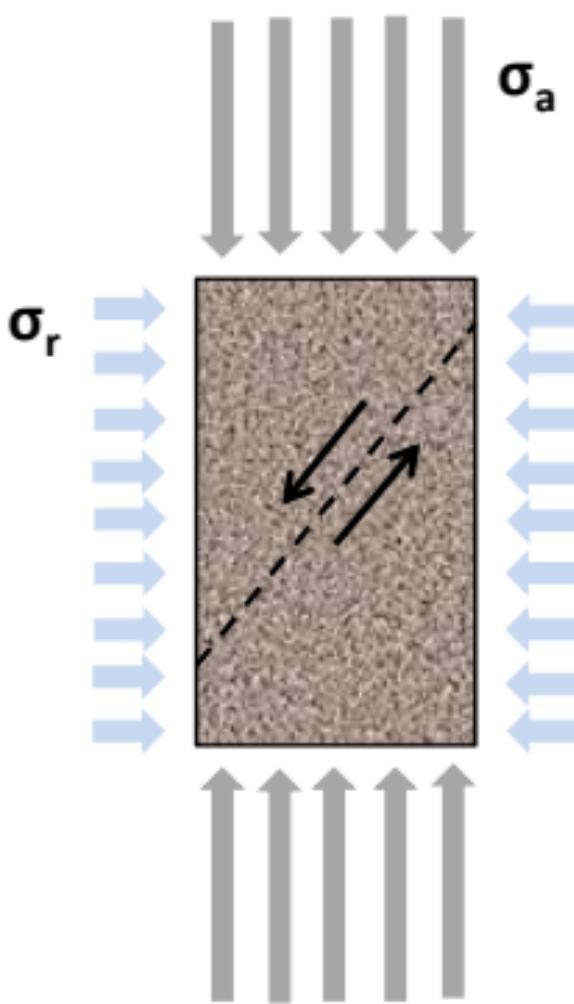




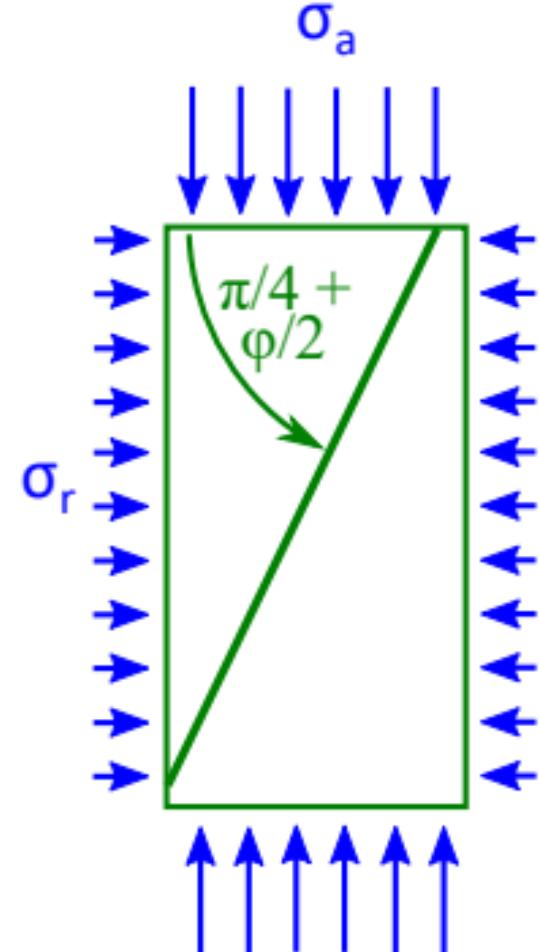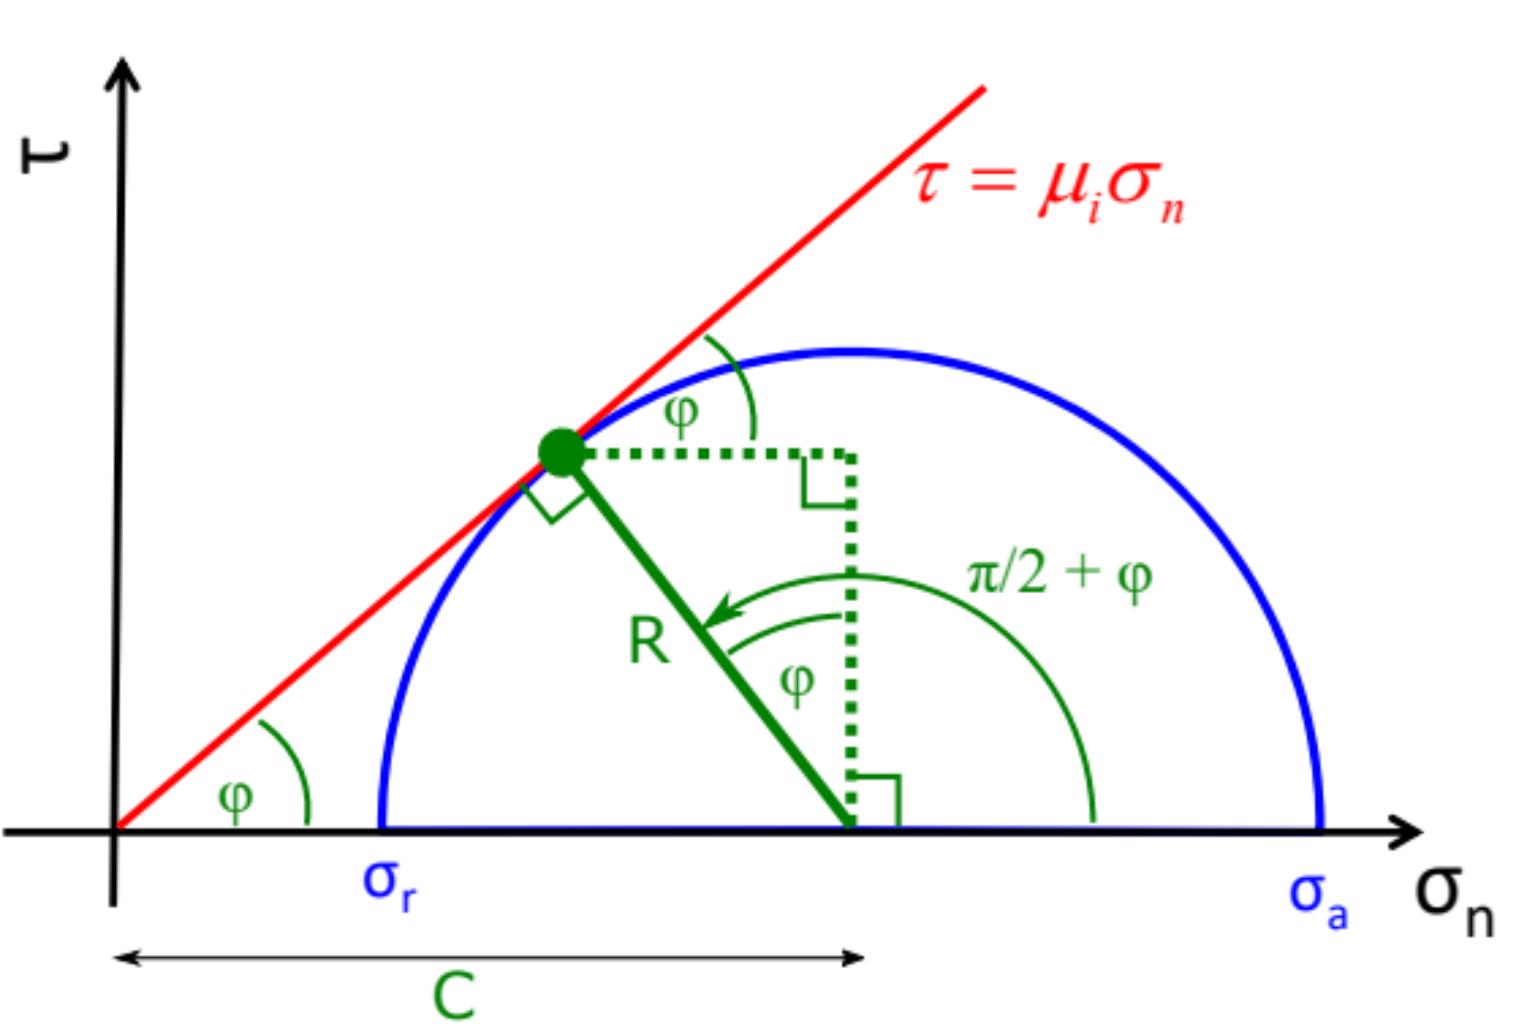


















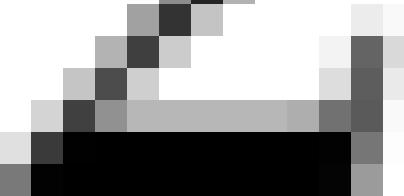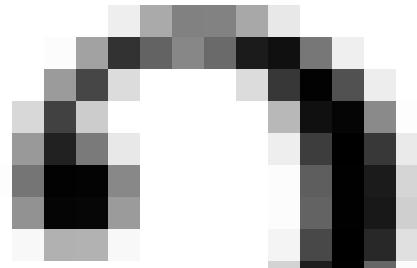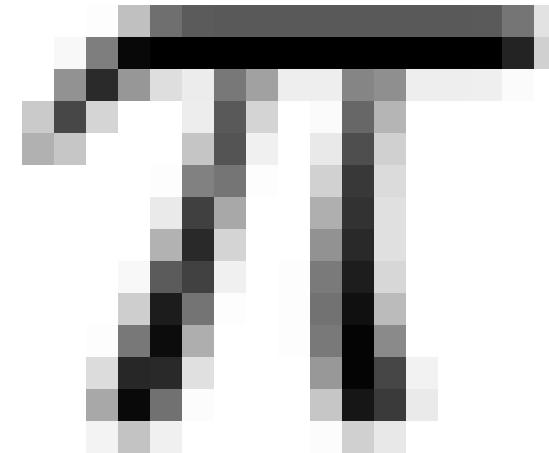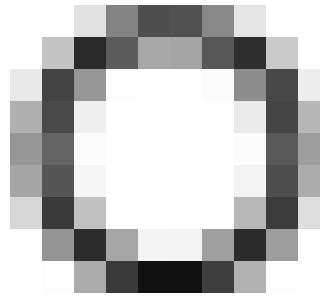




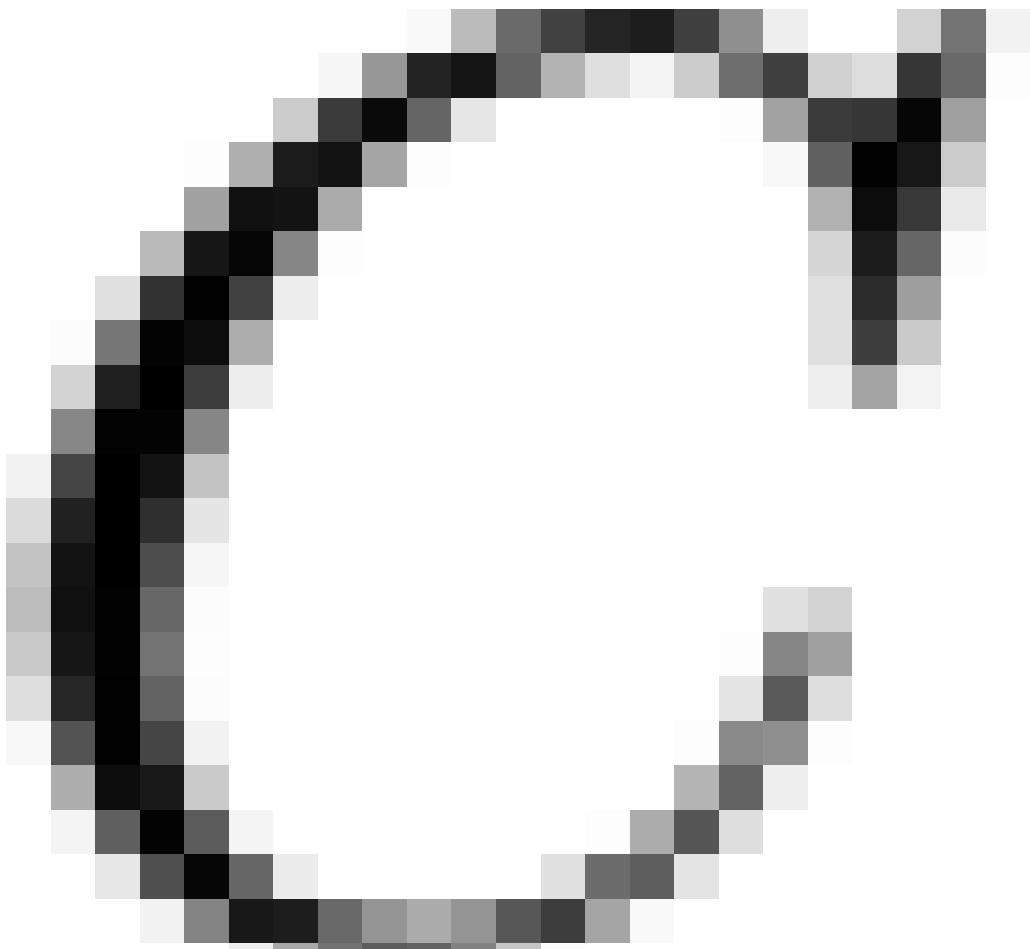


$$\begin{aligned}\sigma_a &= \frac{C + R}{C - R} \\ \sigma_r &= \frac{C - R}{C + R}\end{aligned}$$






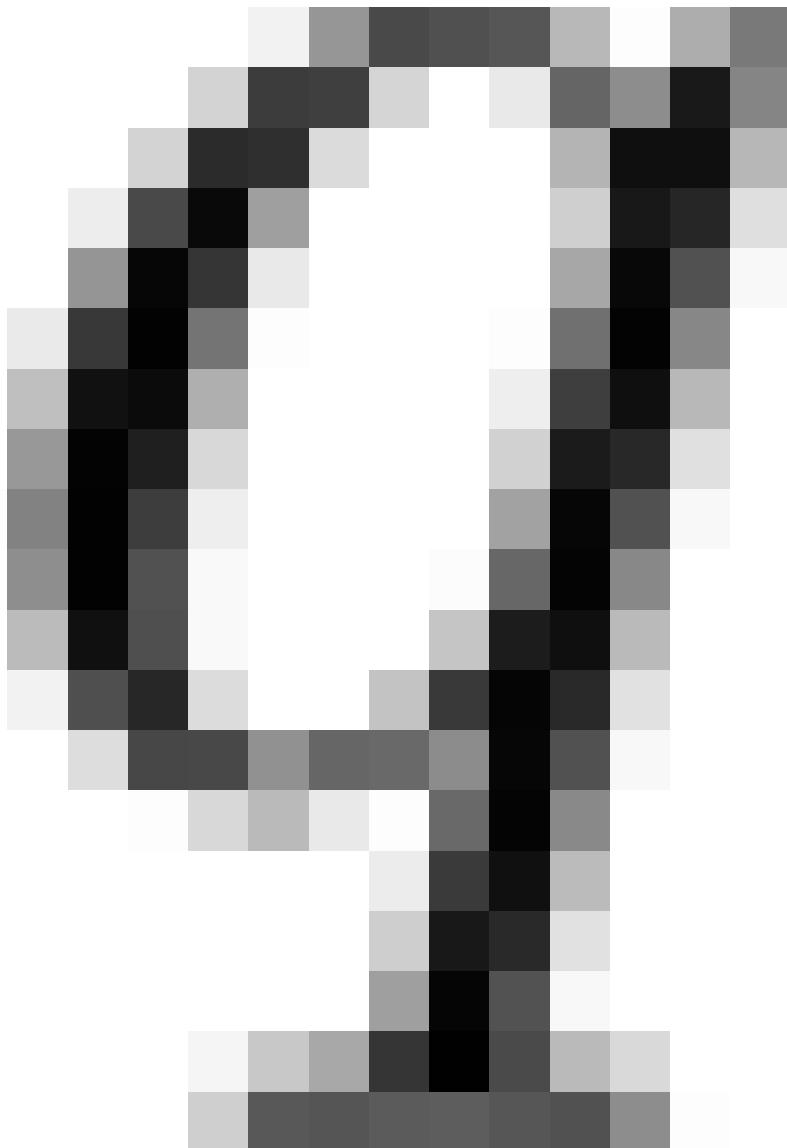



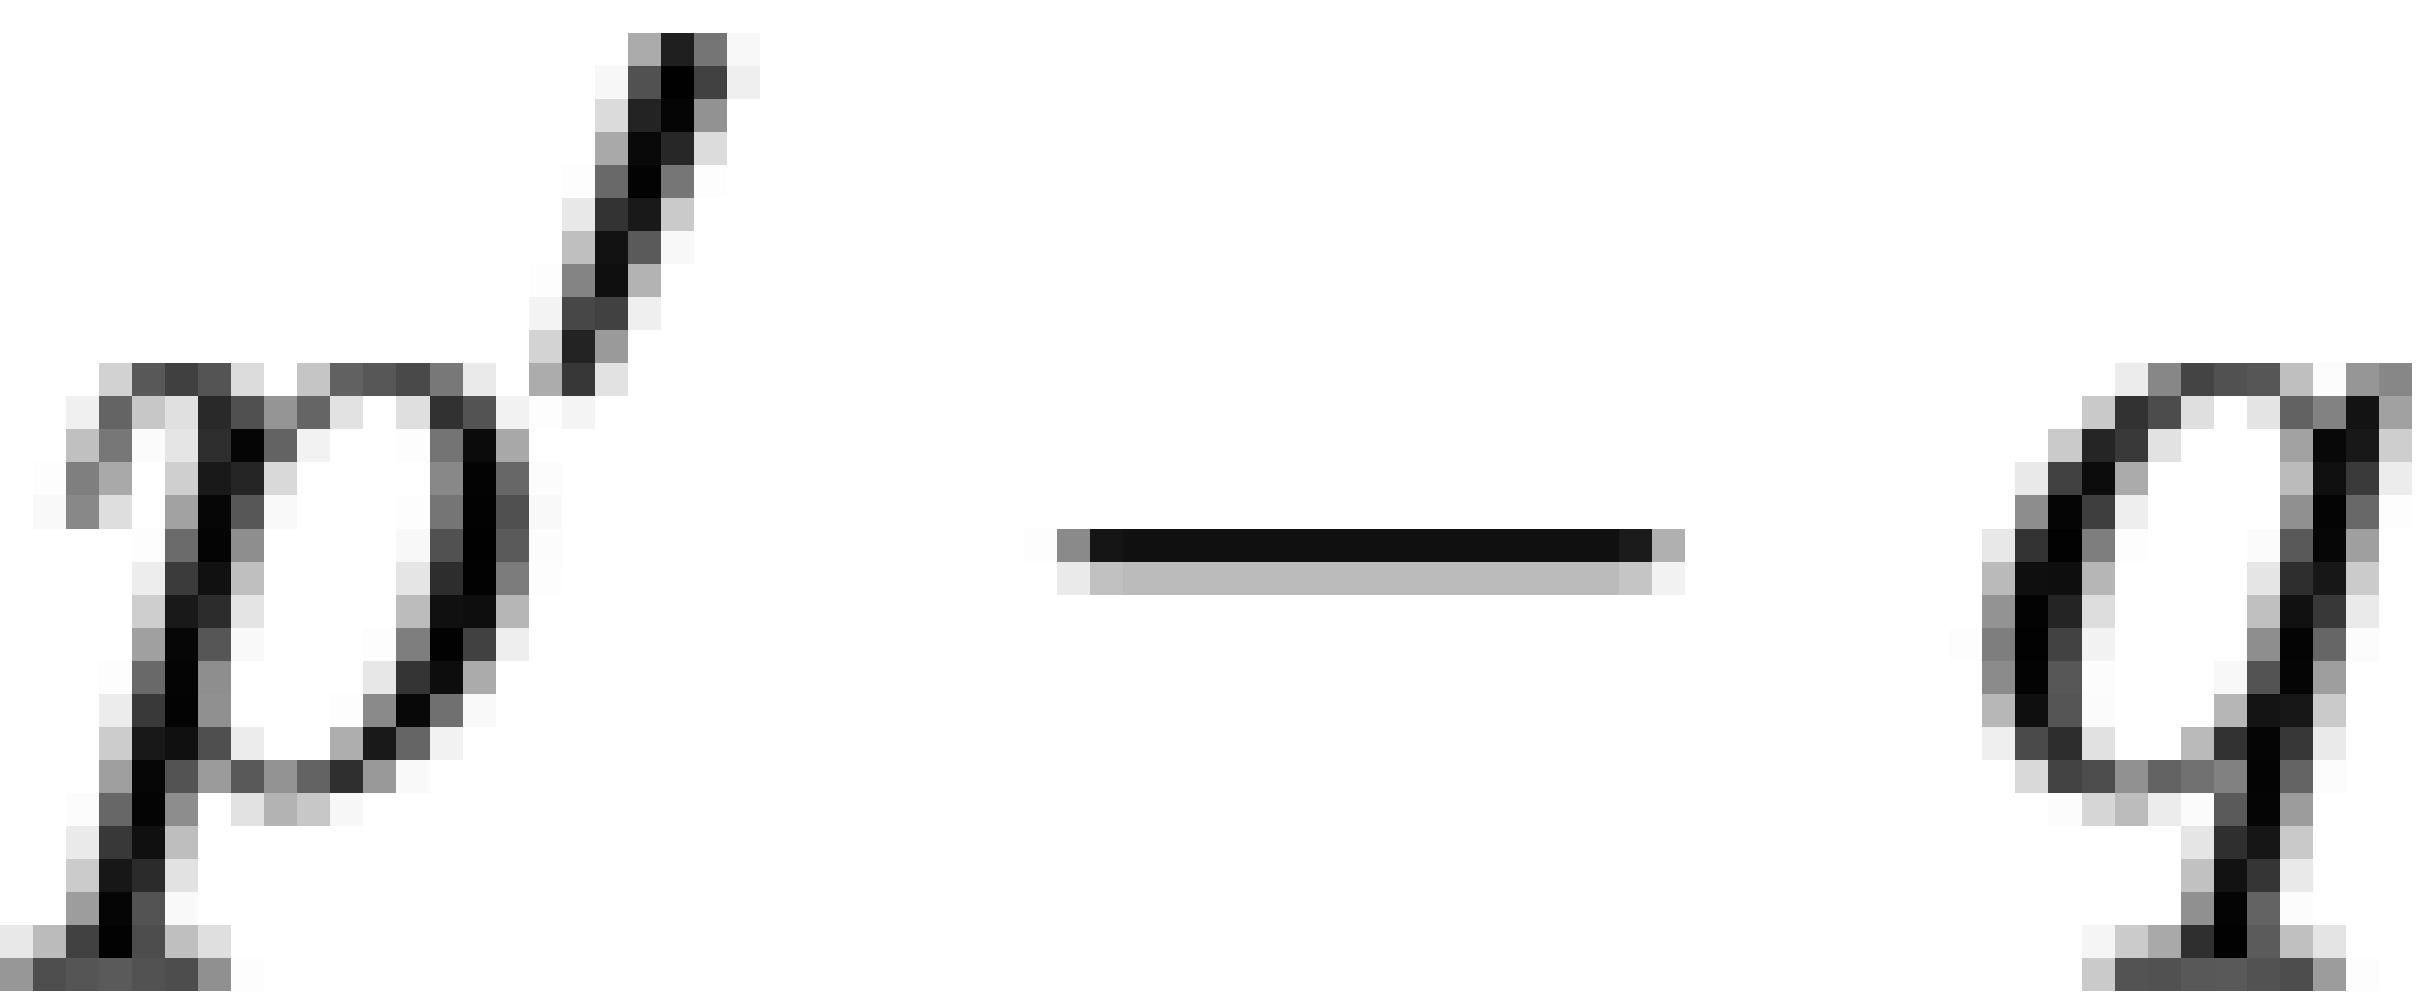


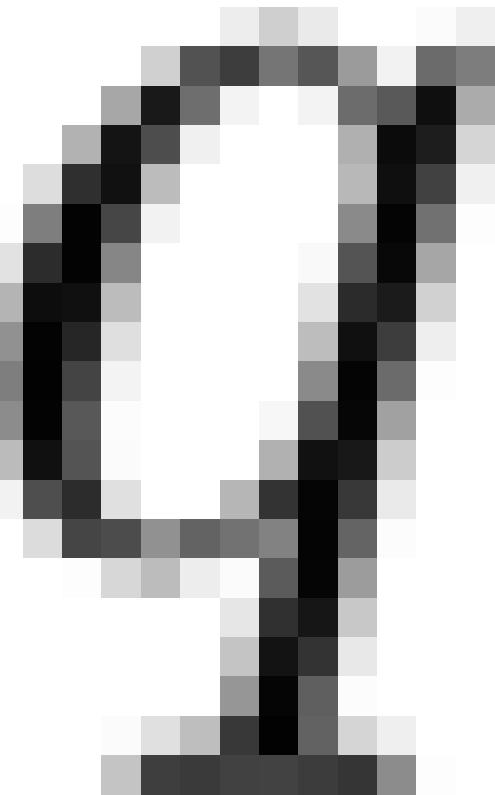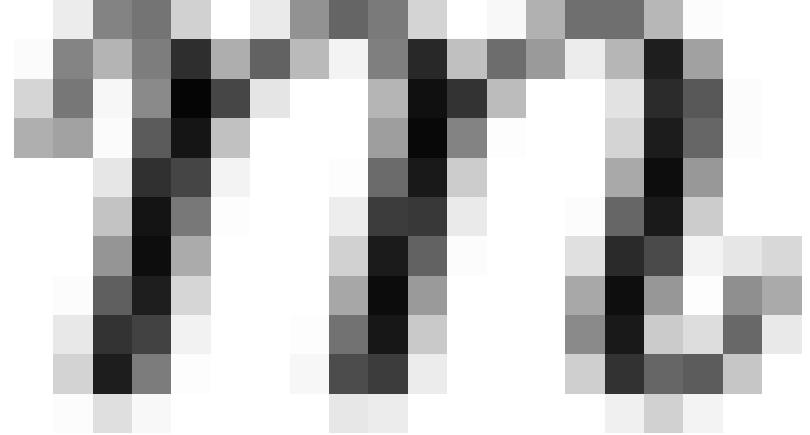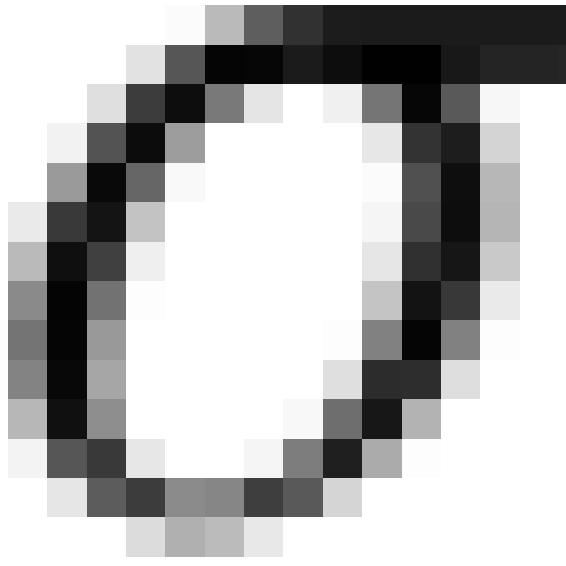

φ sin φ

φ sin φ

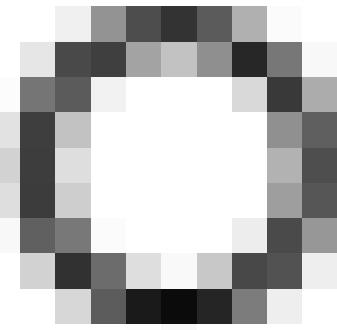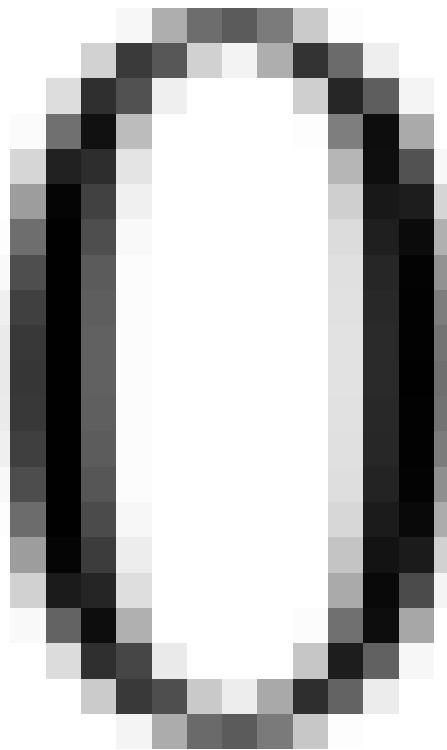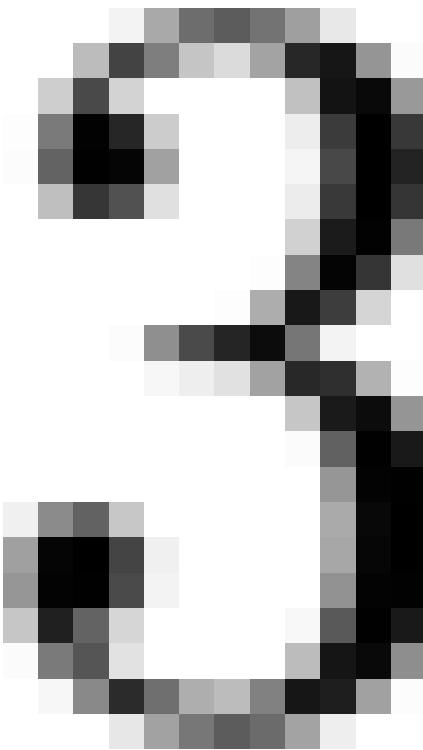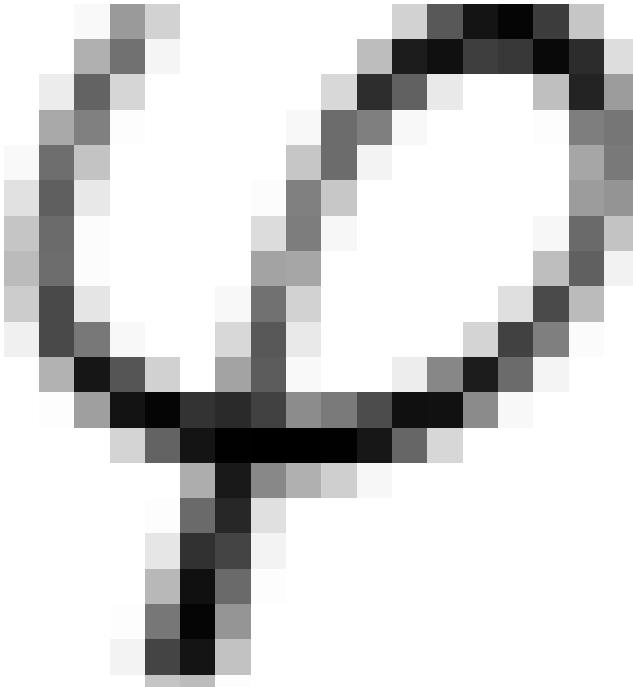

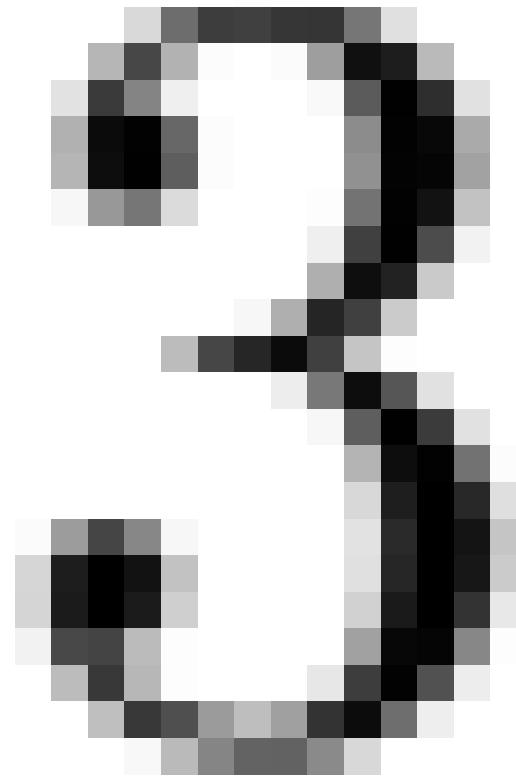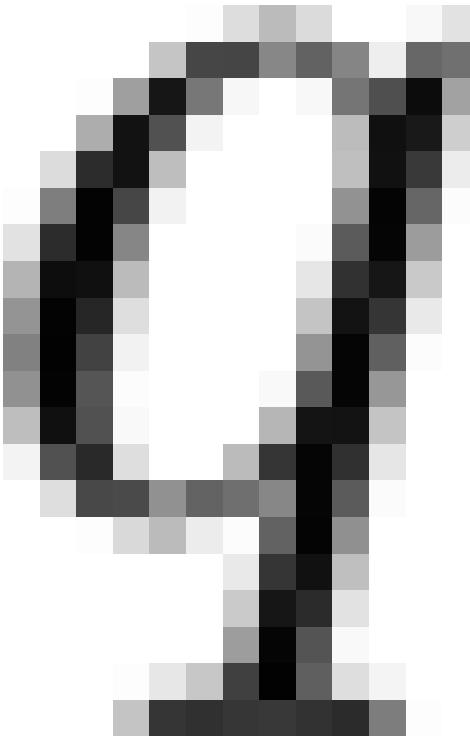




Δg



$$\frac{q}{2\sqrt{q}} - \frac{1}{1}$$


$2\sqrt{q}$


$$U_0 S = 2S_0 \left(\frac{1 + \sin \varphi}{1 - \sin \varphi} \right)^{1/2} = 2S_0 \sqrt{\frac{1 + \sin \varphi}{1 - \sin \varphi}}$$

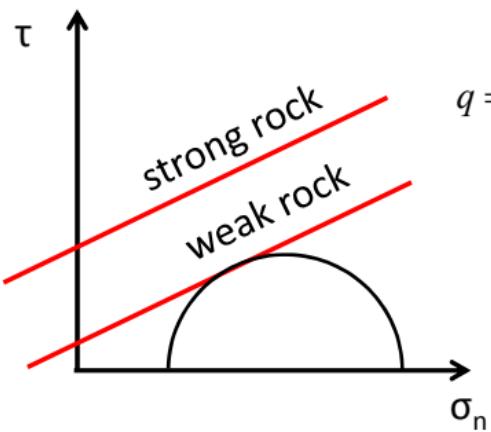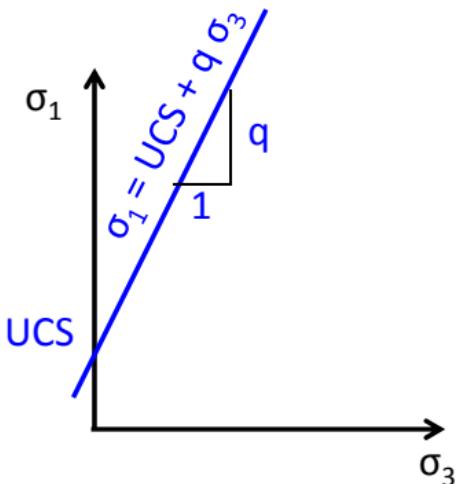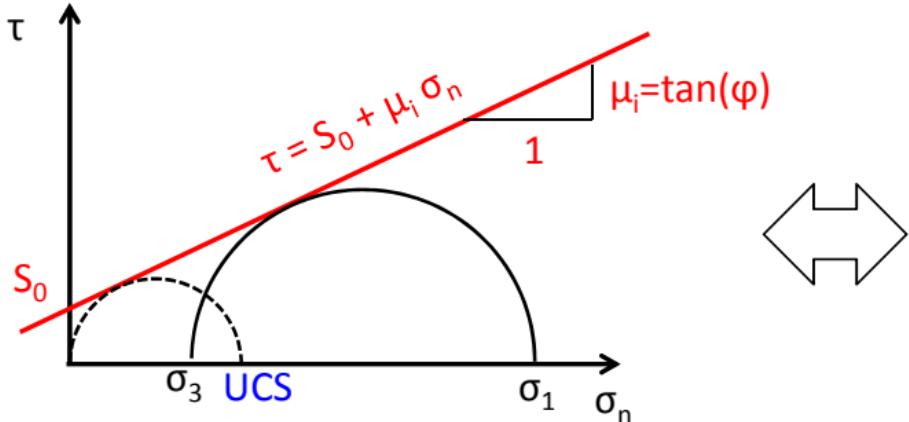

$$UCS = 2S_0 \left(\sqrt{\mu_i^2 + 1} + \mu_i \right) = 2S_0 \left(\frac{1 + \sin \varphi}{1 - \sin \varphi} \right)^{1/2}$$


$$q = \left(\sqrt{\mu_i^2 + 1} + \mu_i \right)^2 = \frac{1 + \sin \varphi}{1 - \sin \varphi}$$


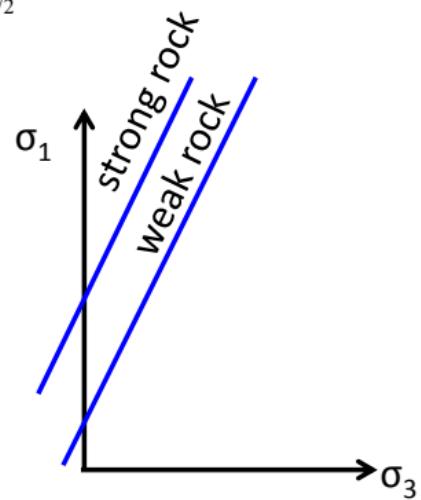


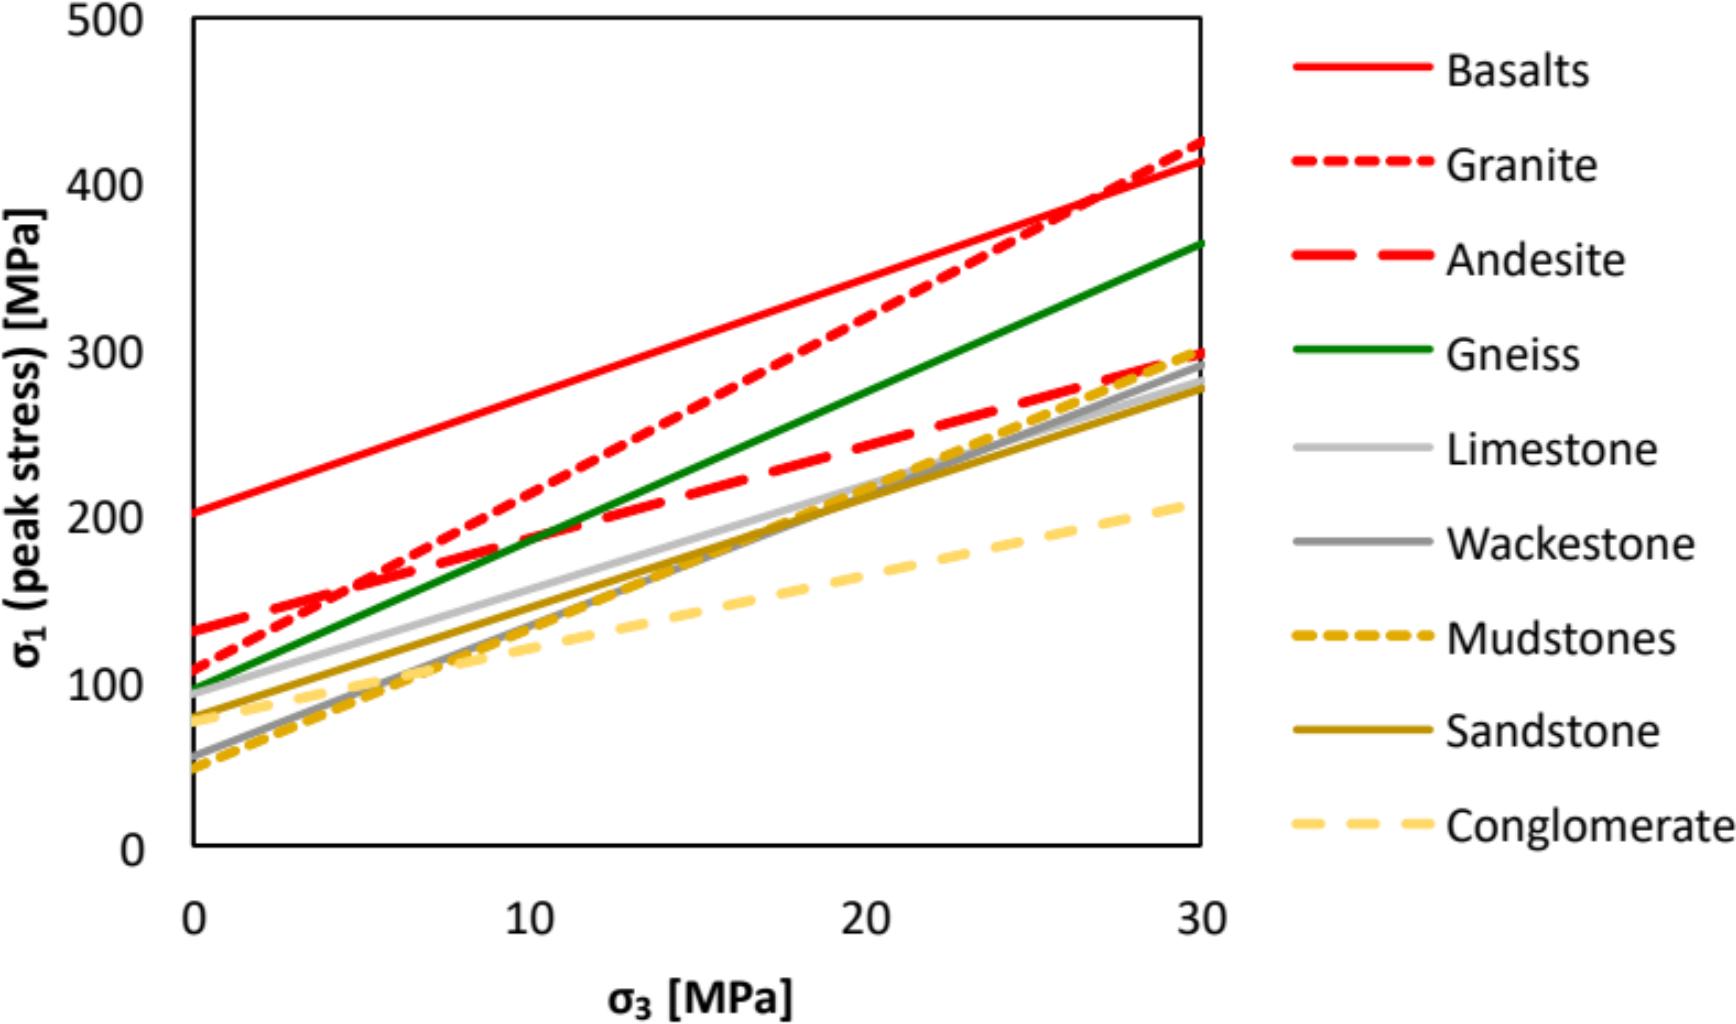






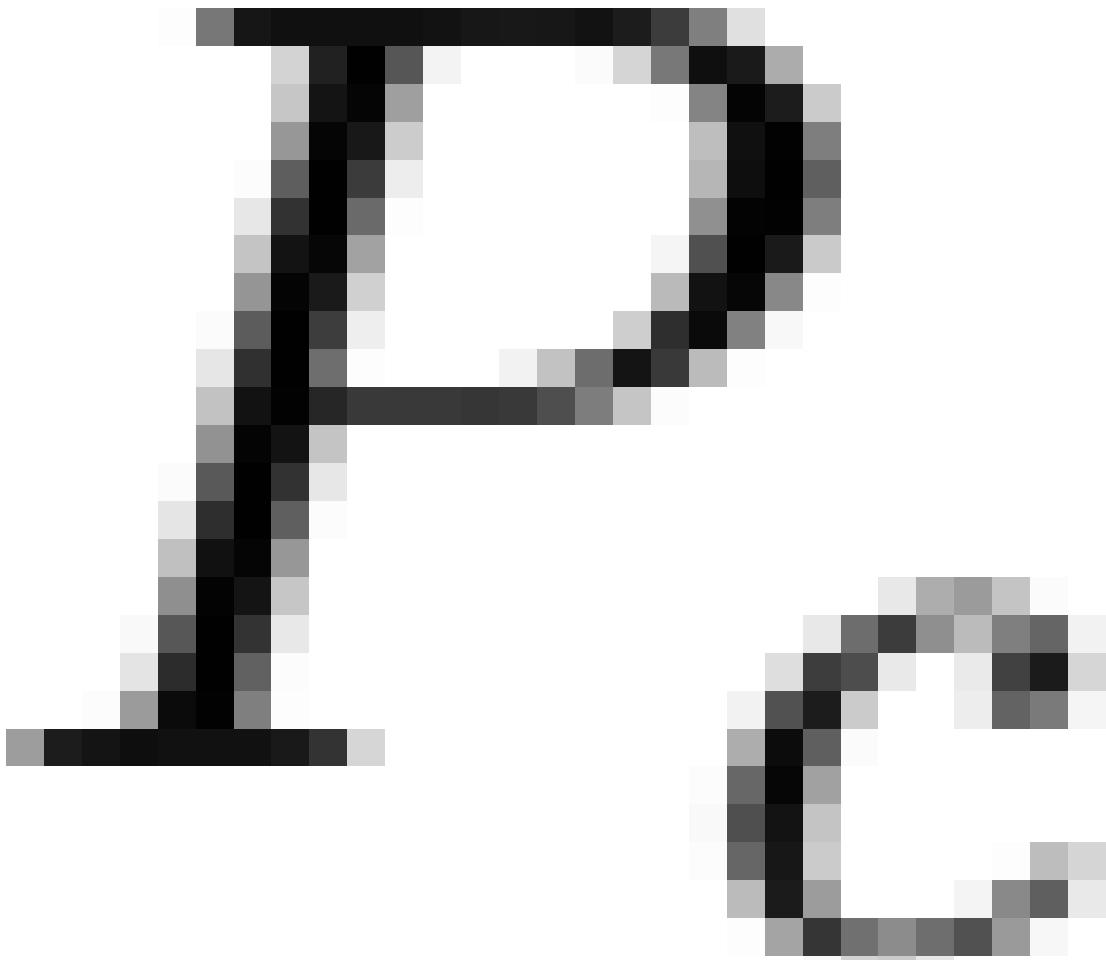

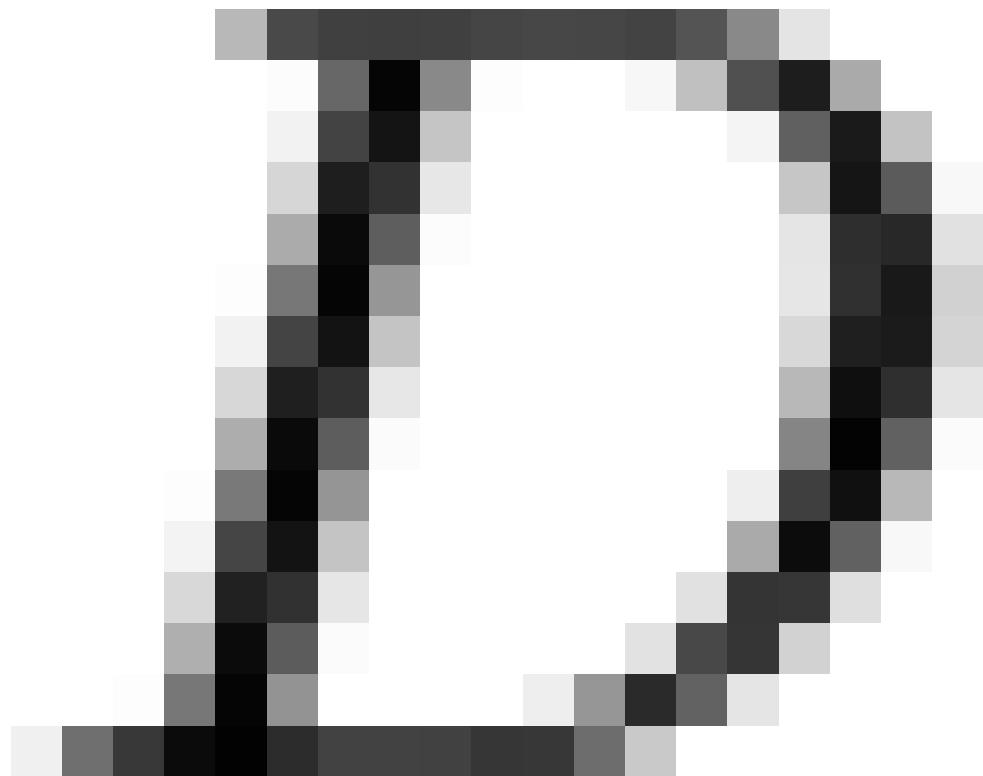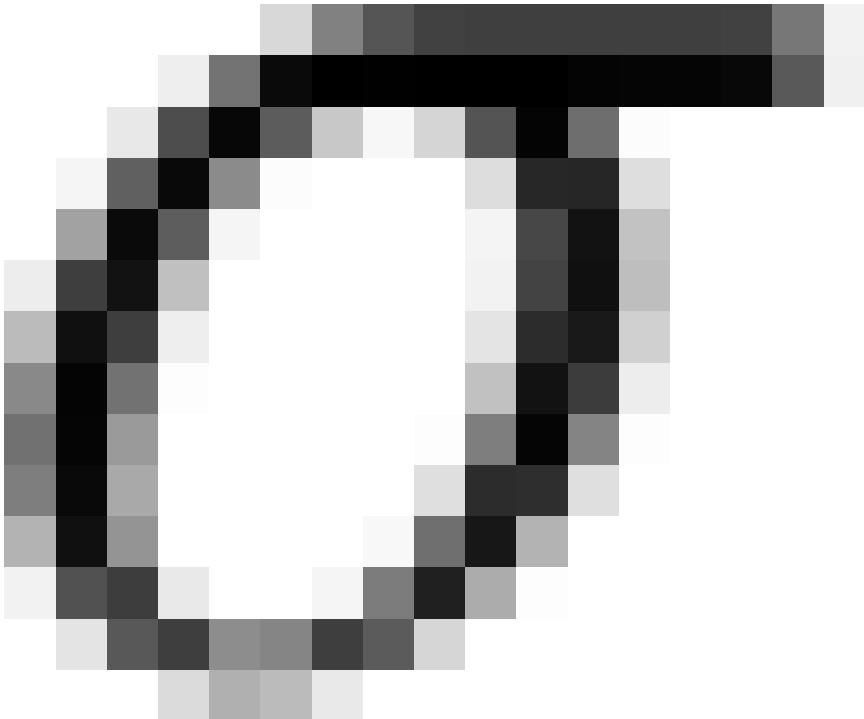



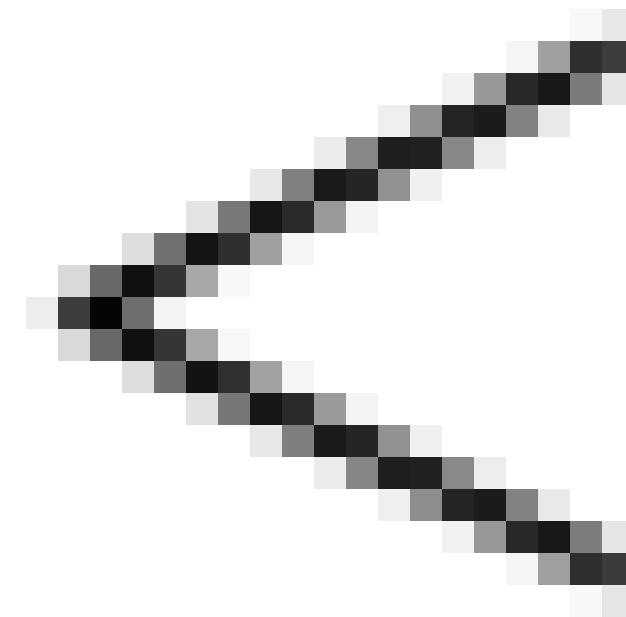





















$$\varphi = \arctan$$

$$\left(\frac{q-1}{2\sqrt{q}} \right)$$

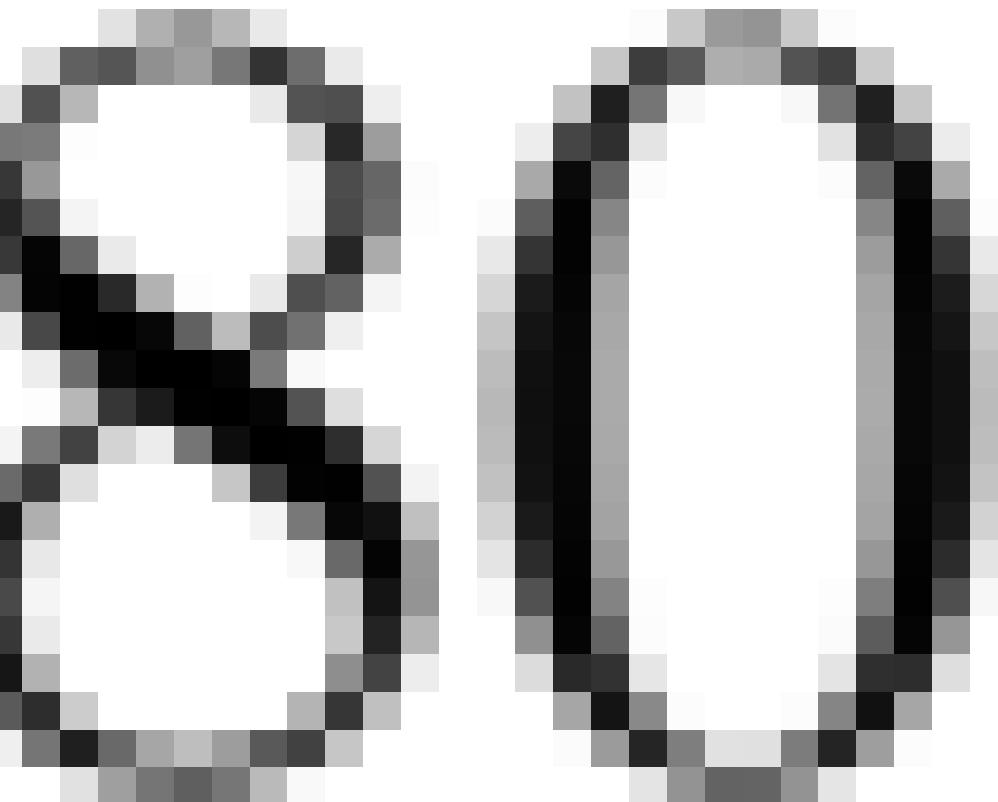

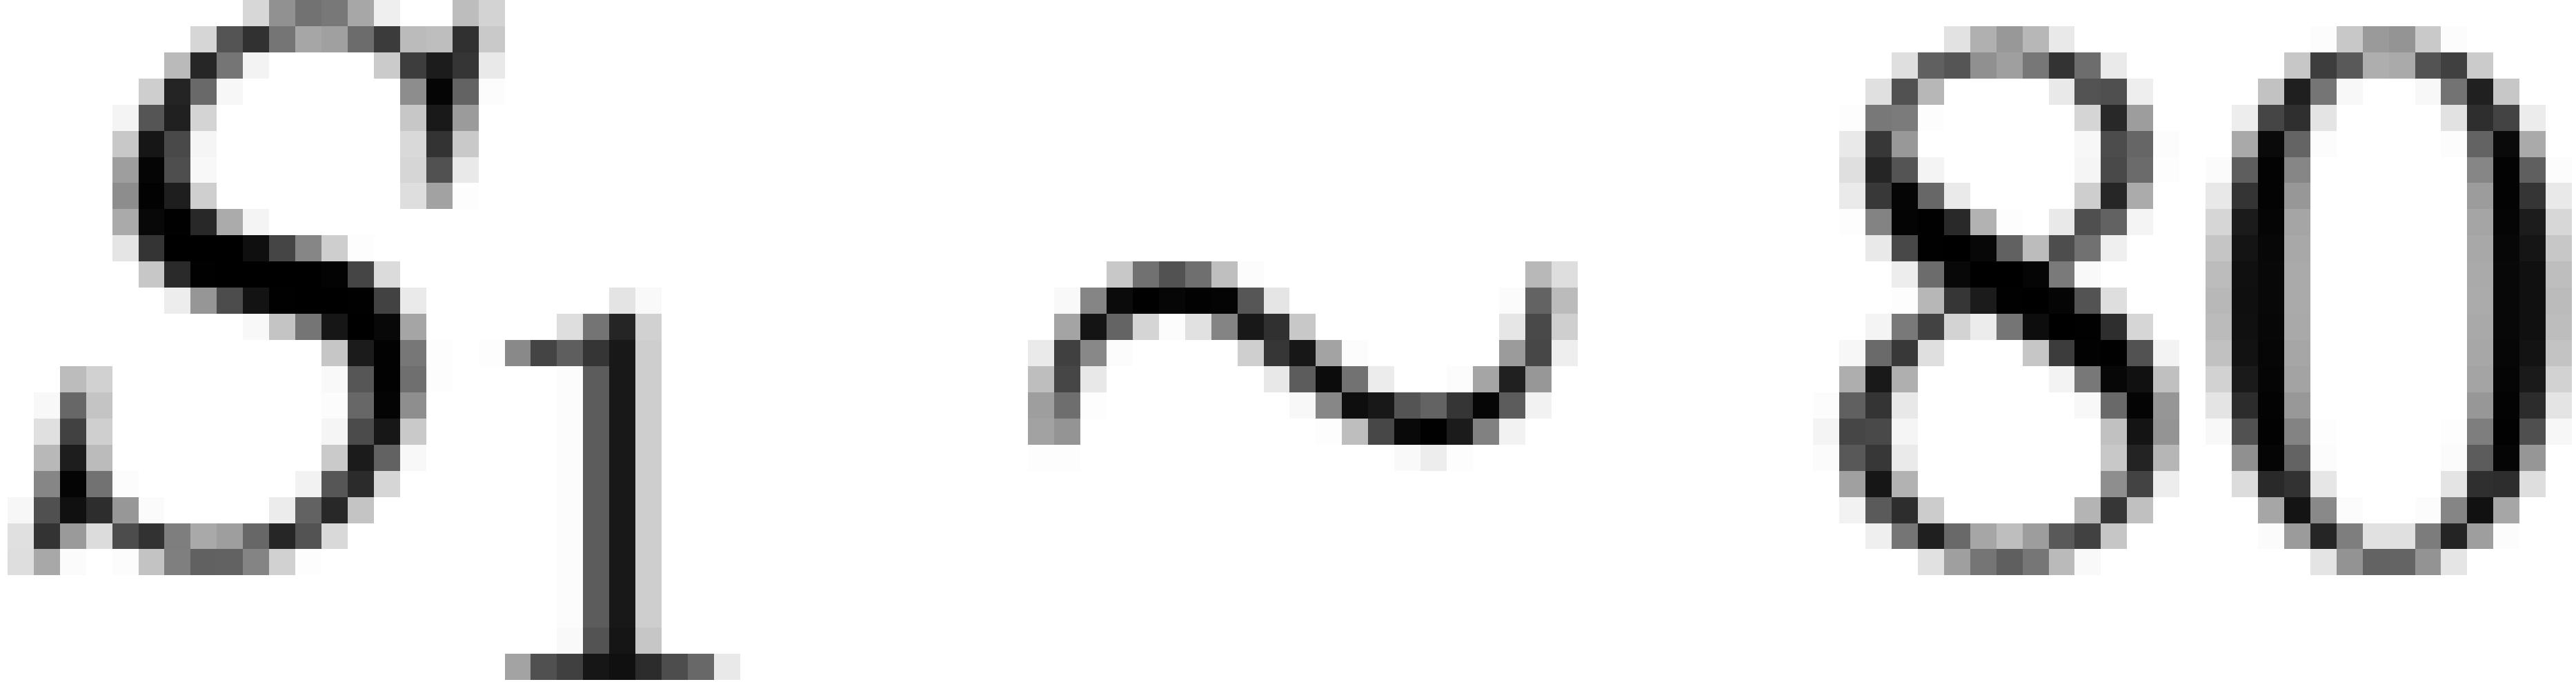

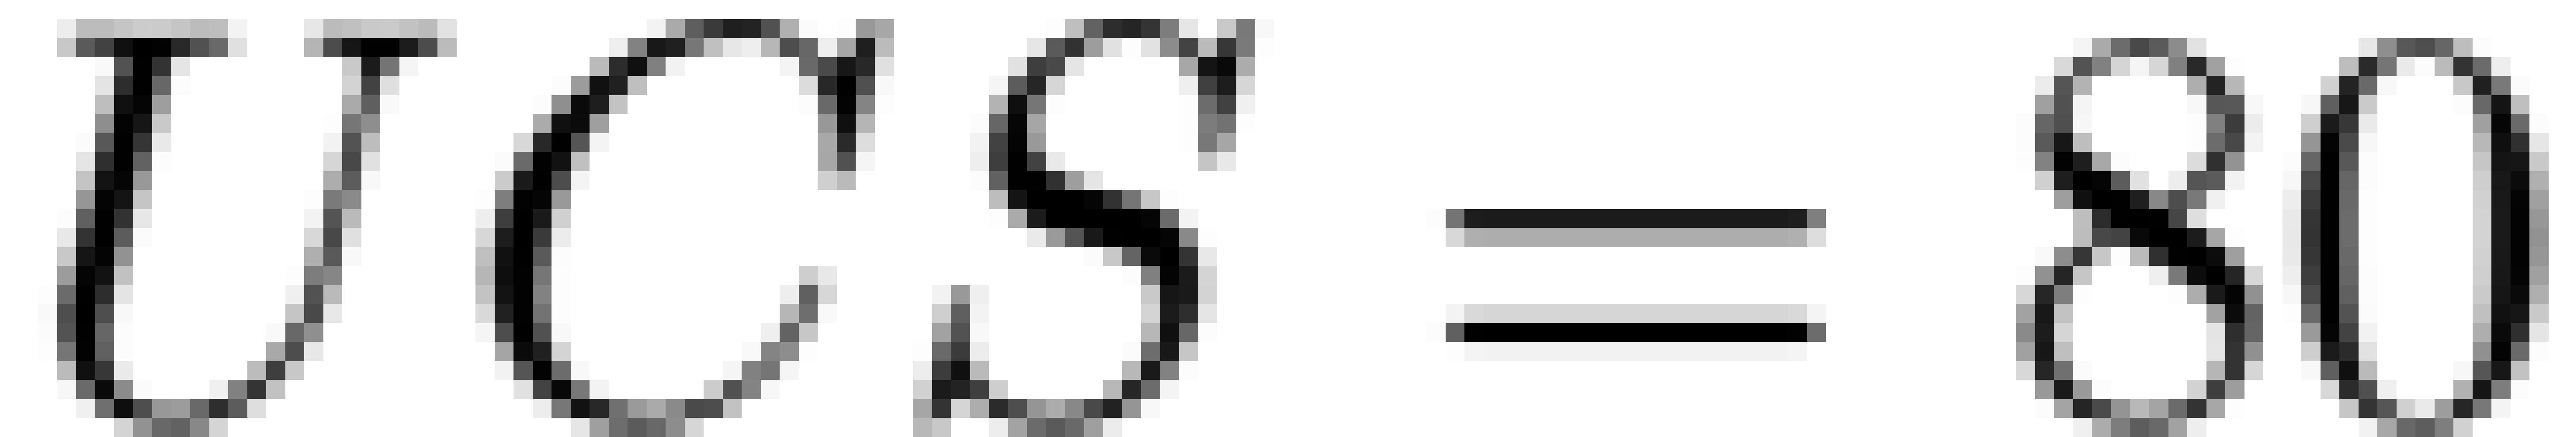

q

$=$

σ_1

$=$


σ_3

110 MPa

520 MPa

4.73

MPa

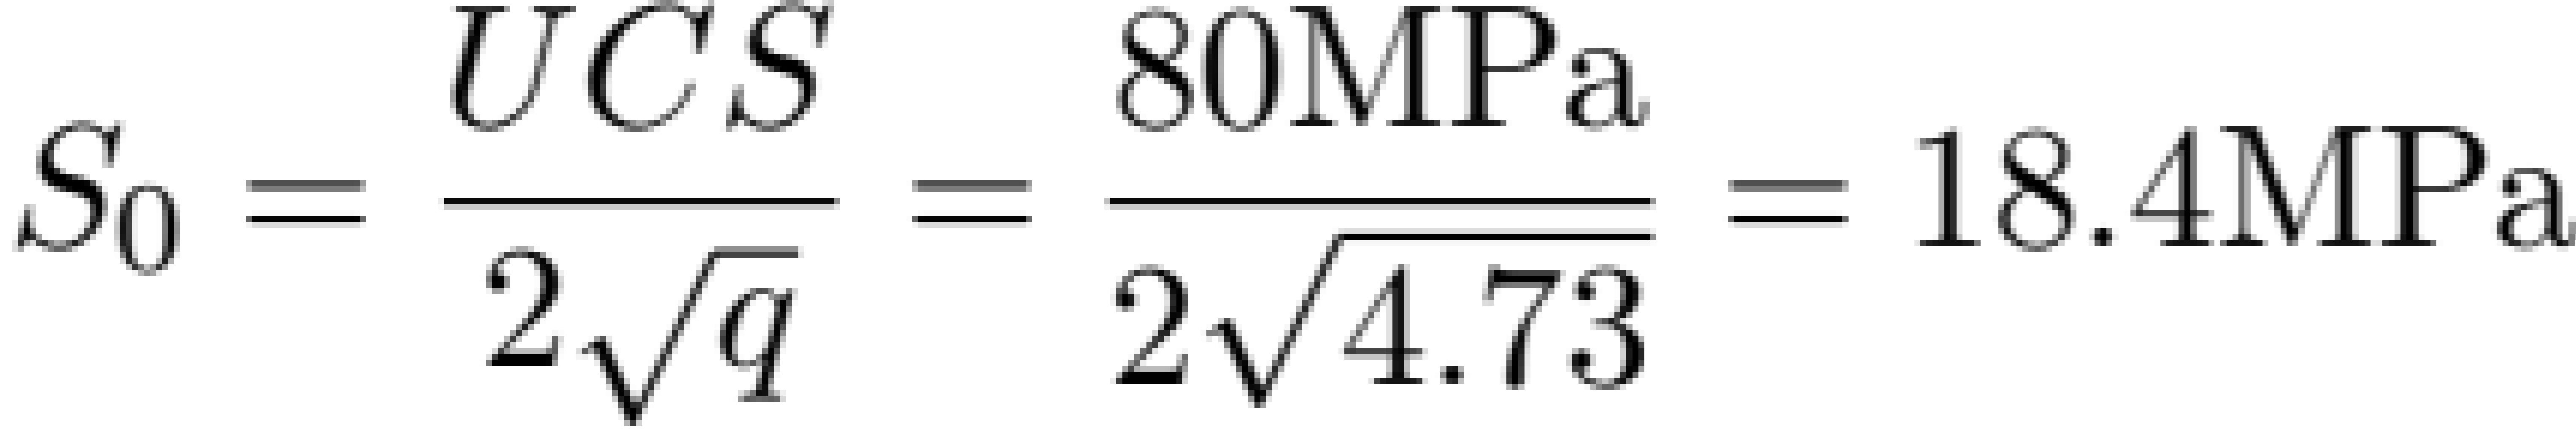





$$\varphi = \arctan \left(\frac{q-1}{2\sqrt{q}} \right) = \arctan \left(\frac{4.73 - 1}{2\sqrt{4.73}} \right) = 40.6^\circ$$









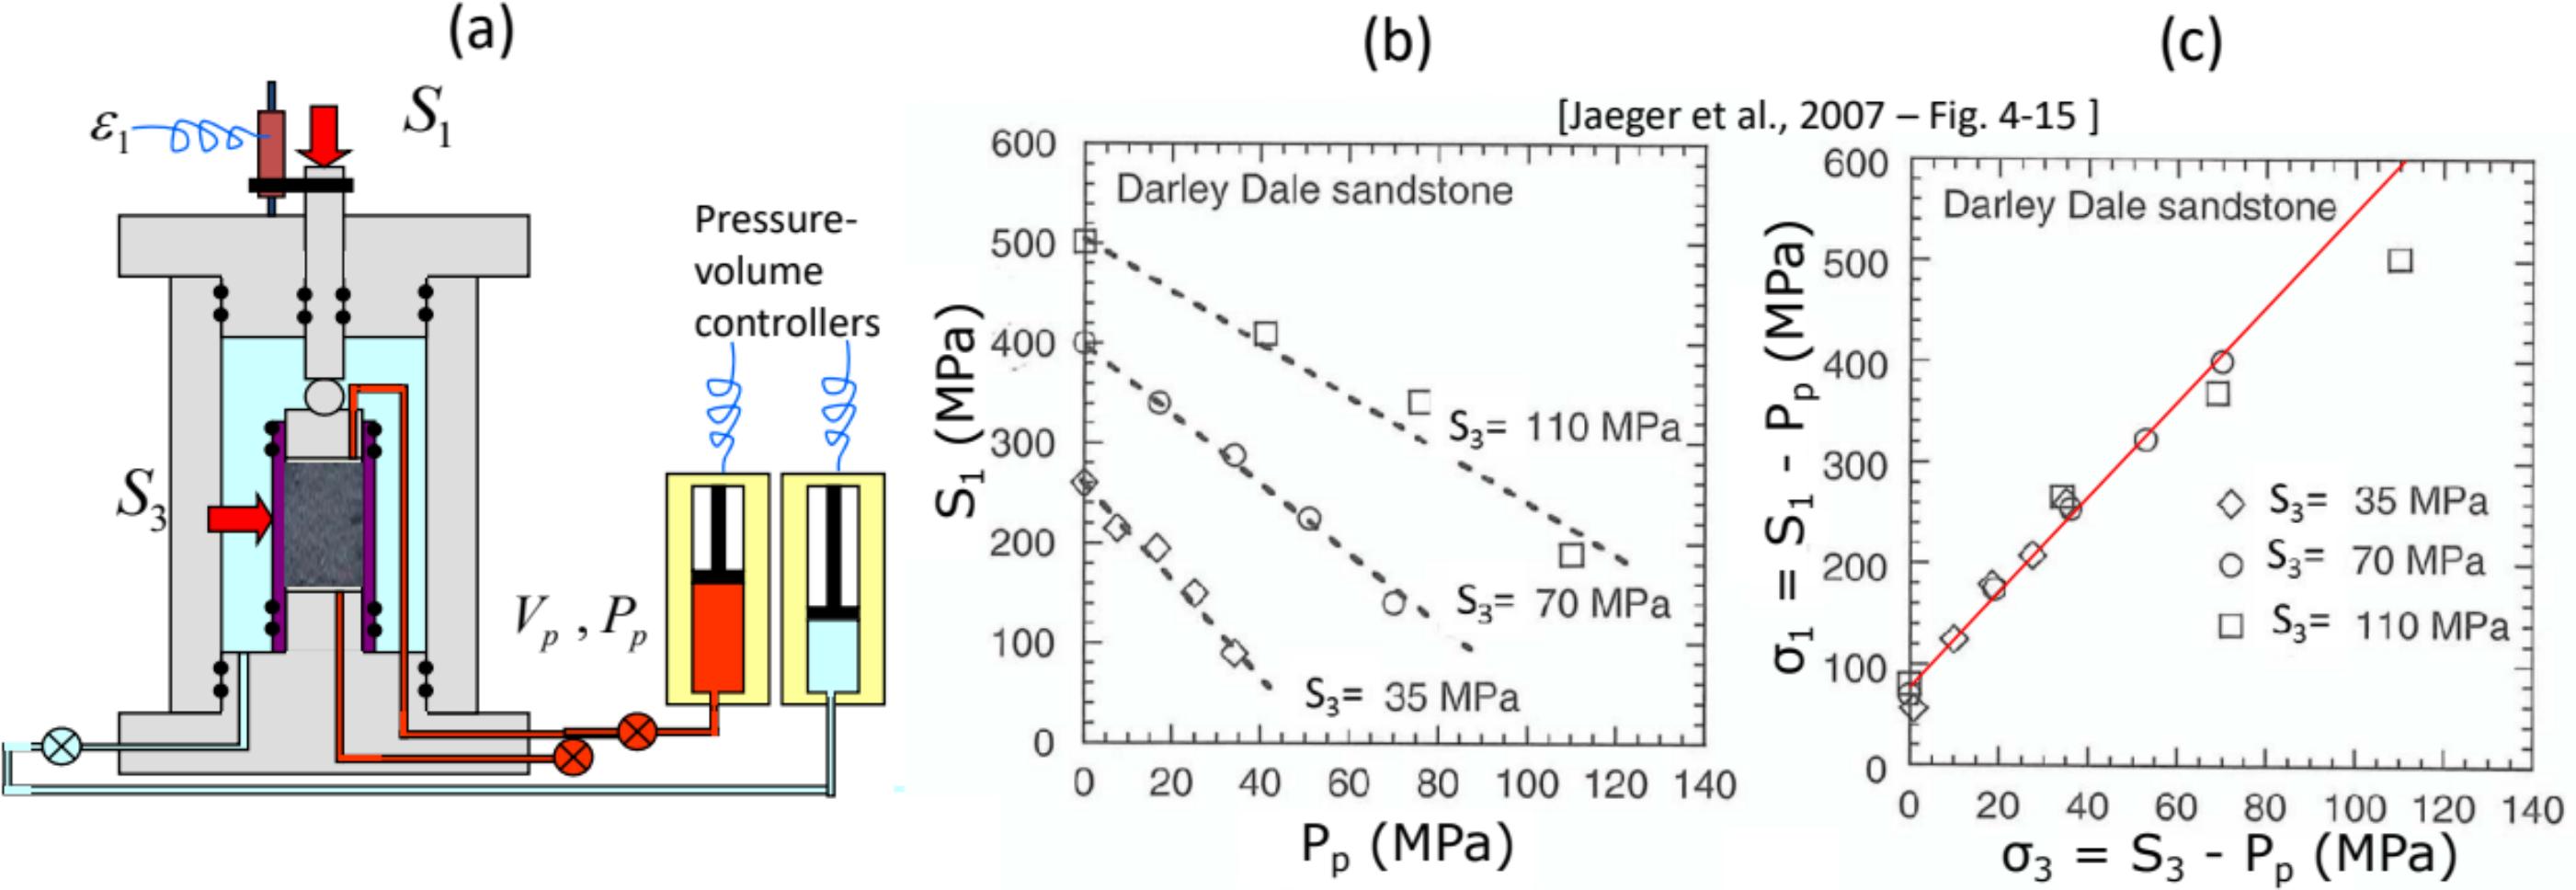

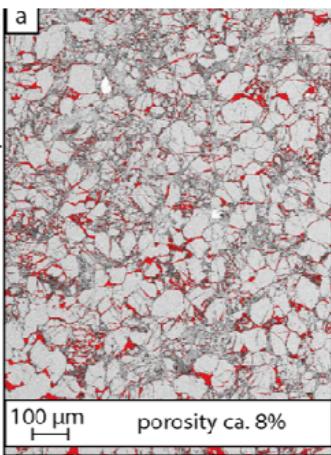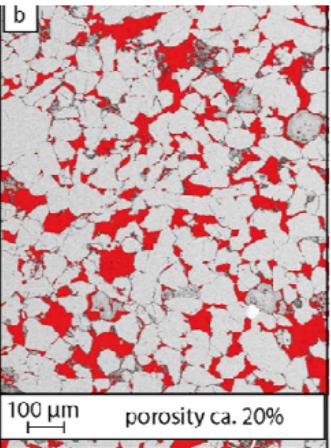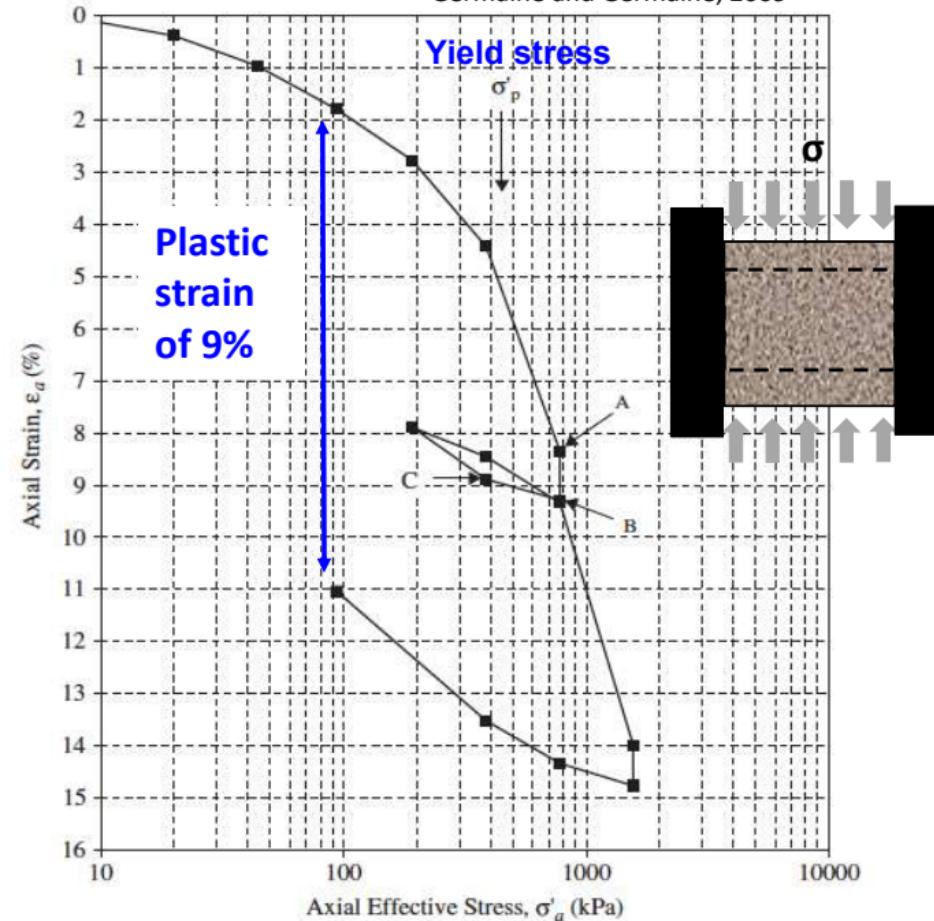

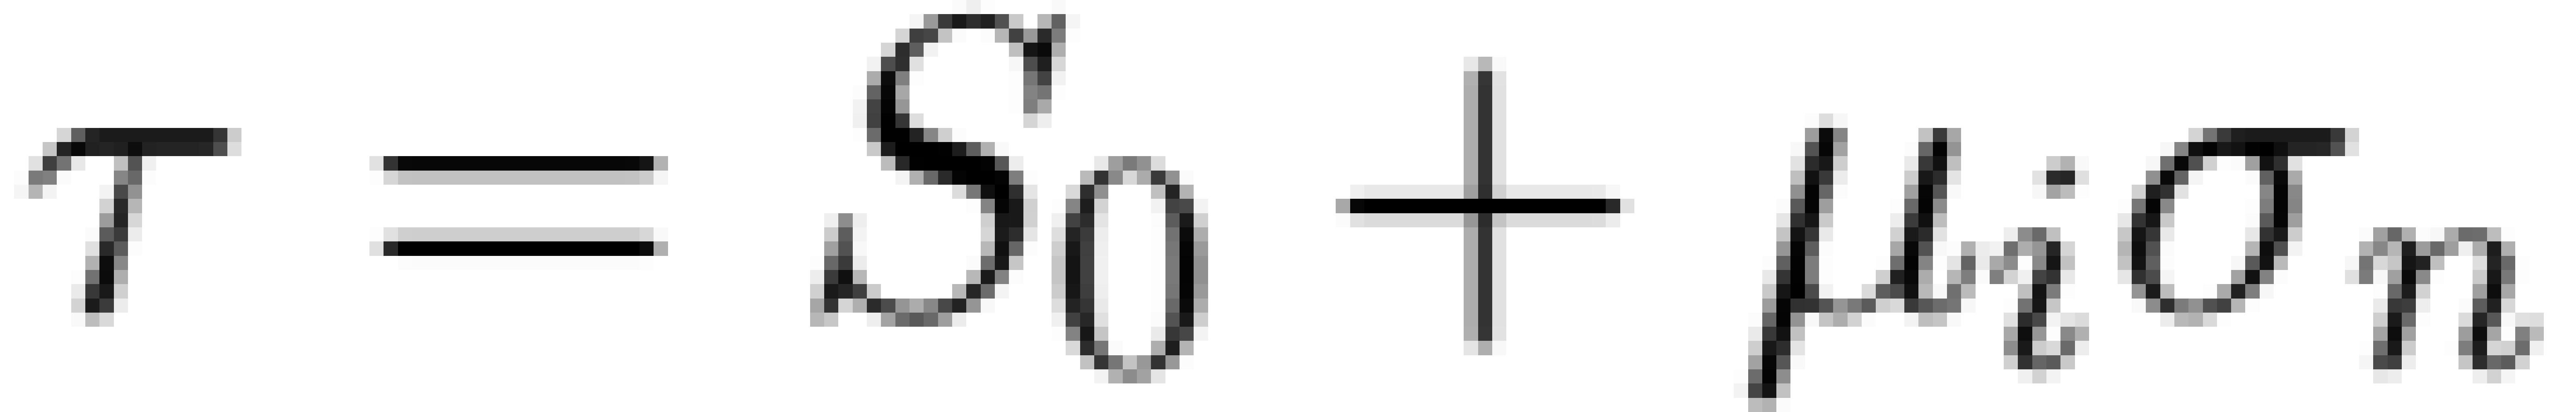


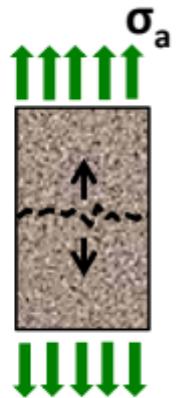τ 

$$\sigma_n = T_s$$

 T_s


$$\boxed{\tau = \mu_i \sigma_n + S_0}$$

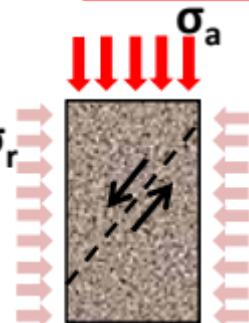


1

 μ_i

$$\boxed{\mathcal{E}_V^p = \mathcal{E}_{Vcrit}^p}$$

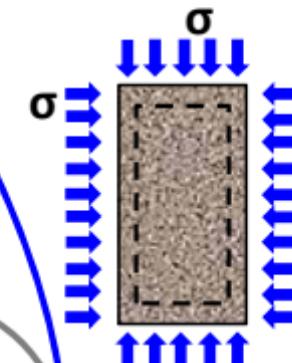 σ_n


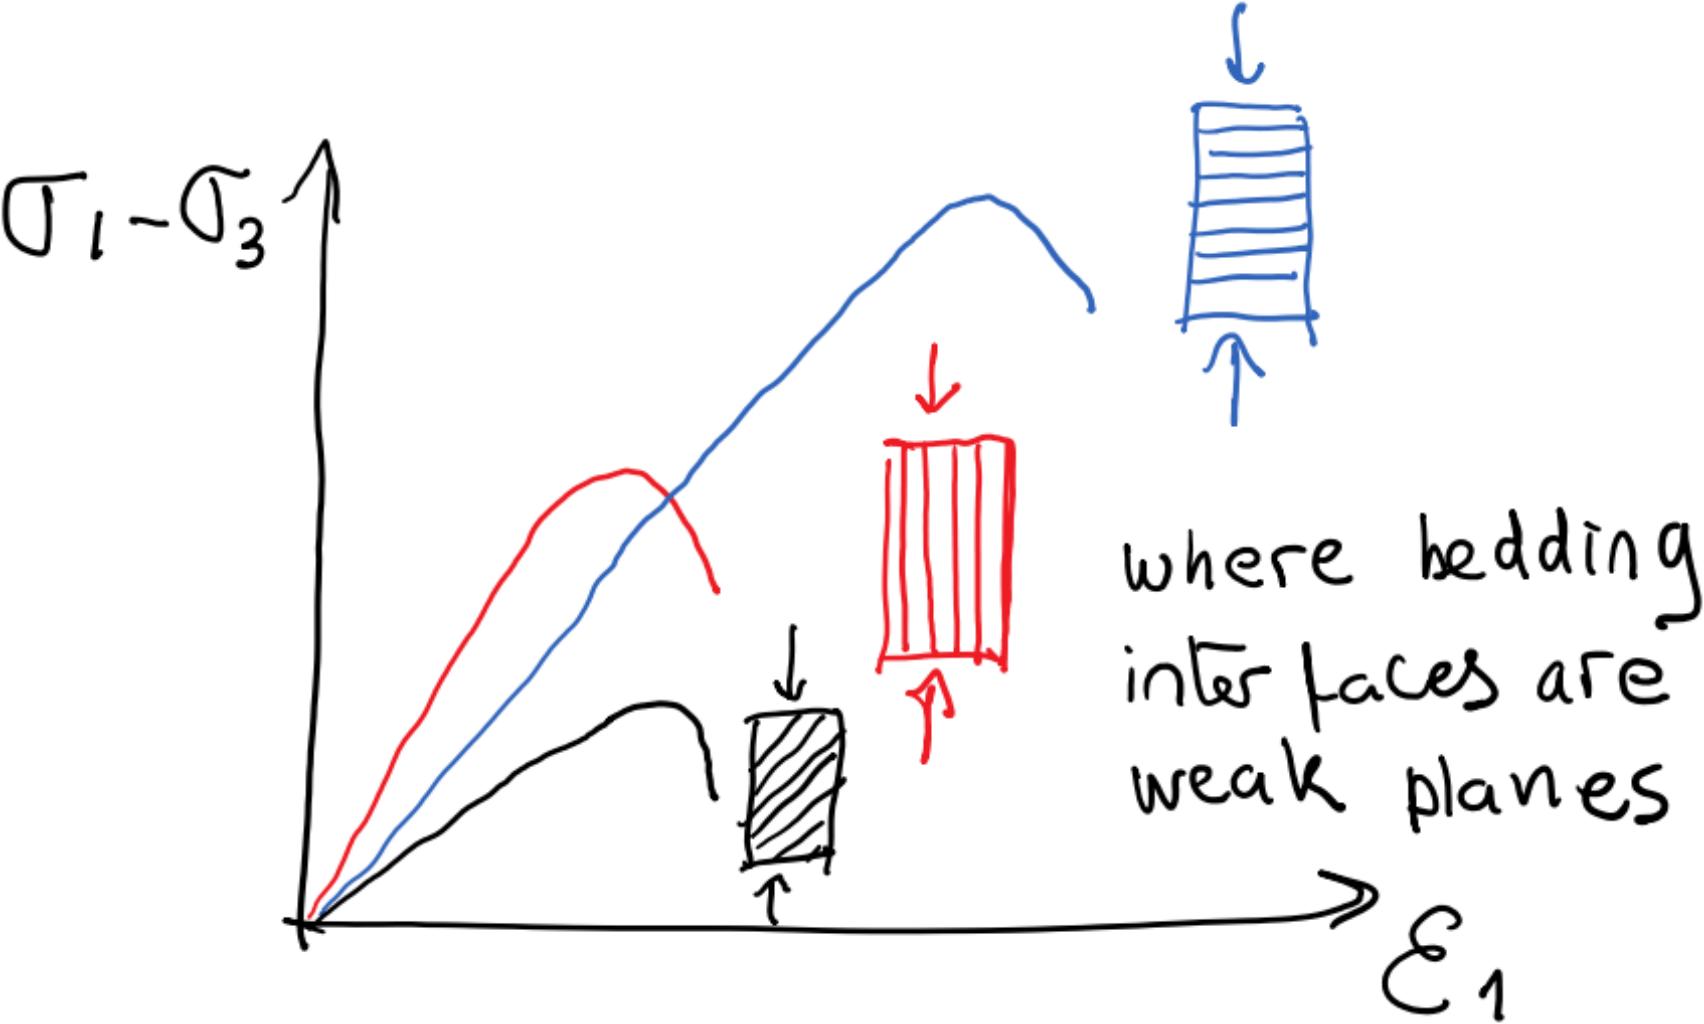


Rock deformation

Relation strain V.S. stress

Elastic (Young modulus)

Plastic (~Viscosity)

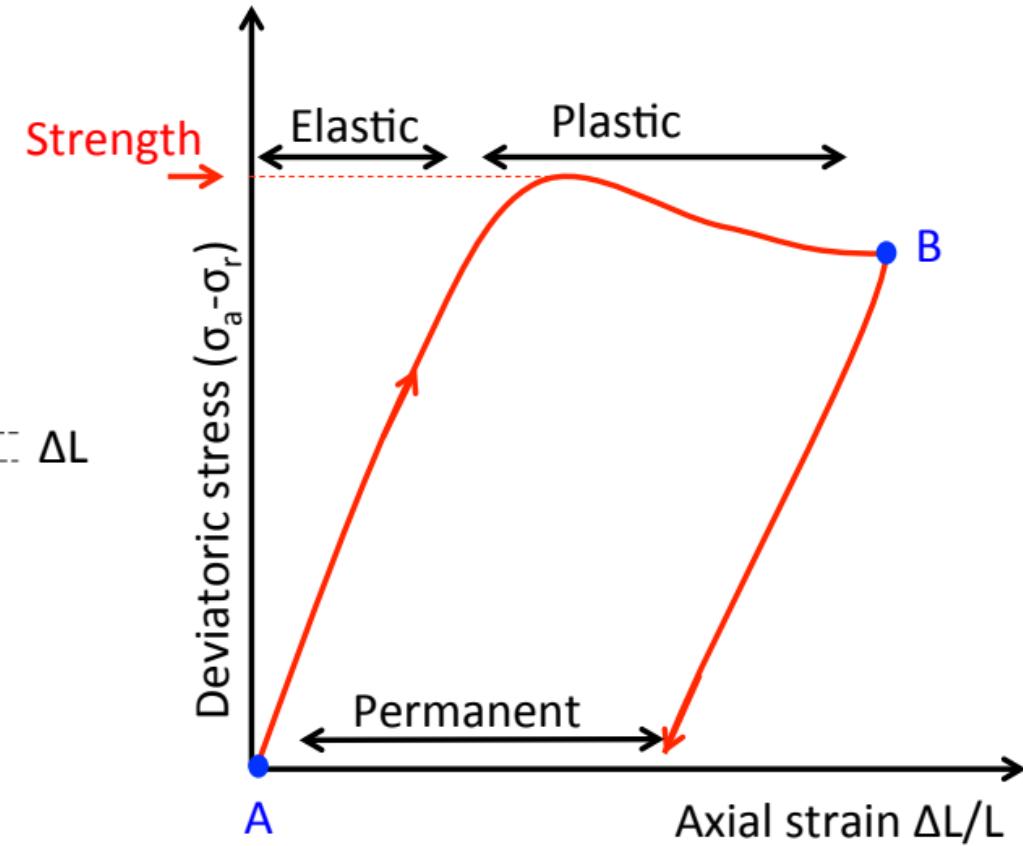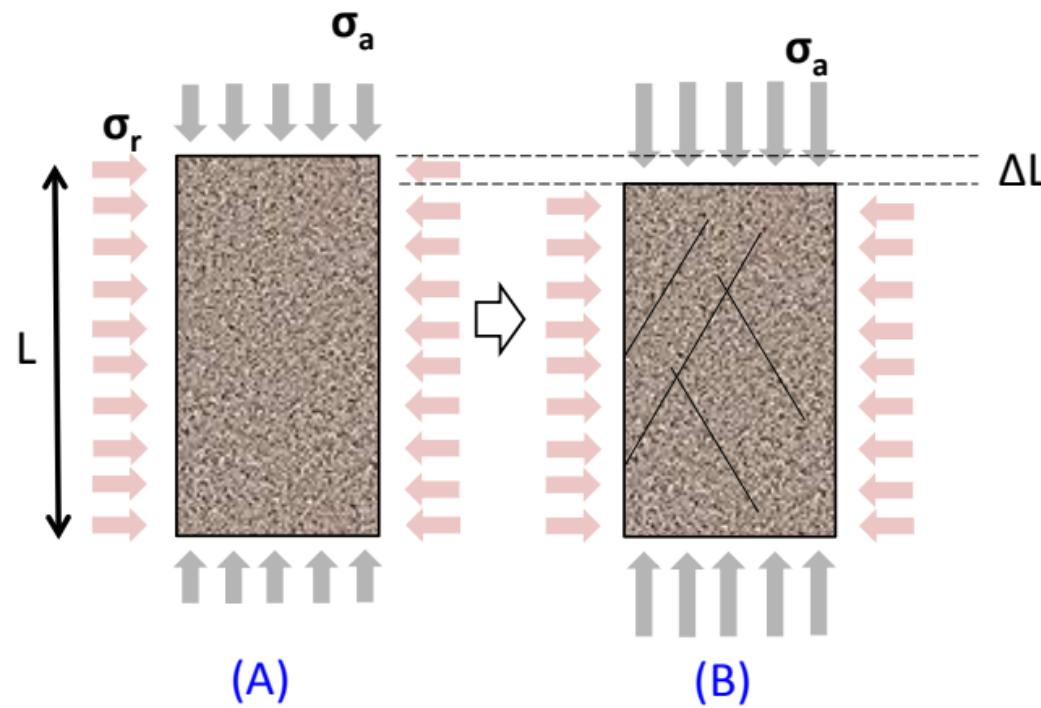




a. This is an undeformed cylinder of rock.



b. This cylinder was subjected to high confining pressure (uniform in all directions) and, at the same time, compression from above. It deformed in a ductile manner, becoming shorter and fatter.




c. An identical cylinder was subjected to the same amount of compression from above, but this time with a lower confining pressure. It deformed in a brittle manner, with many large fractures.

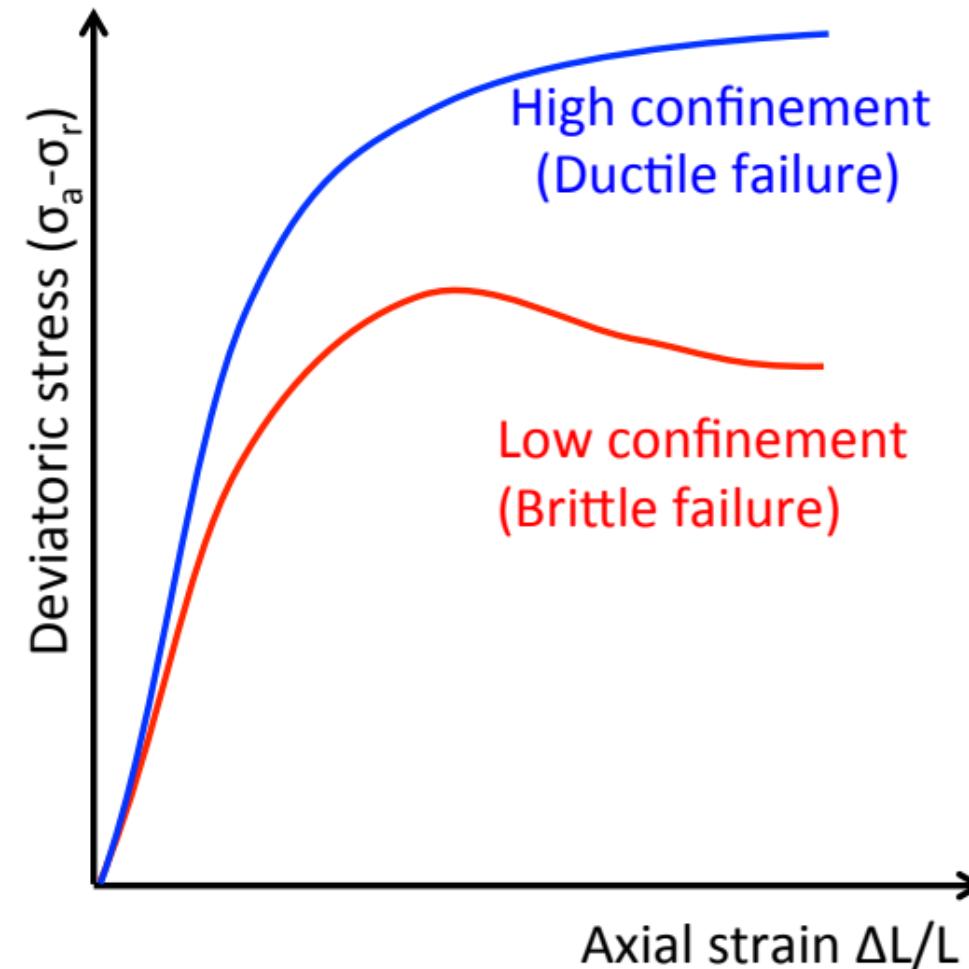











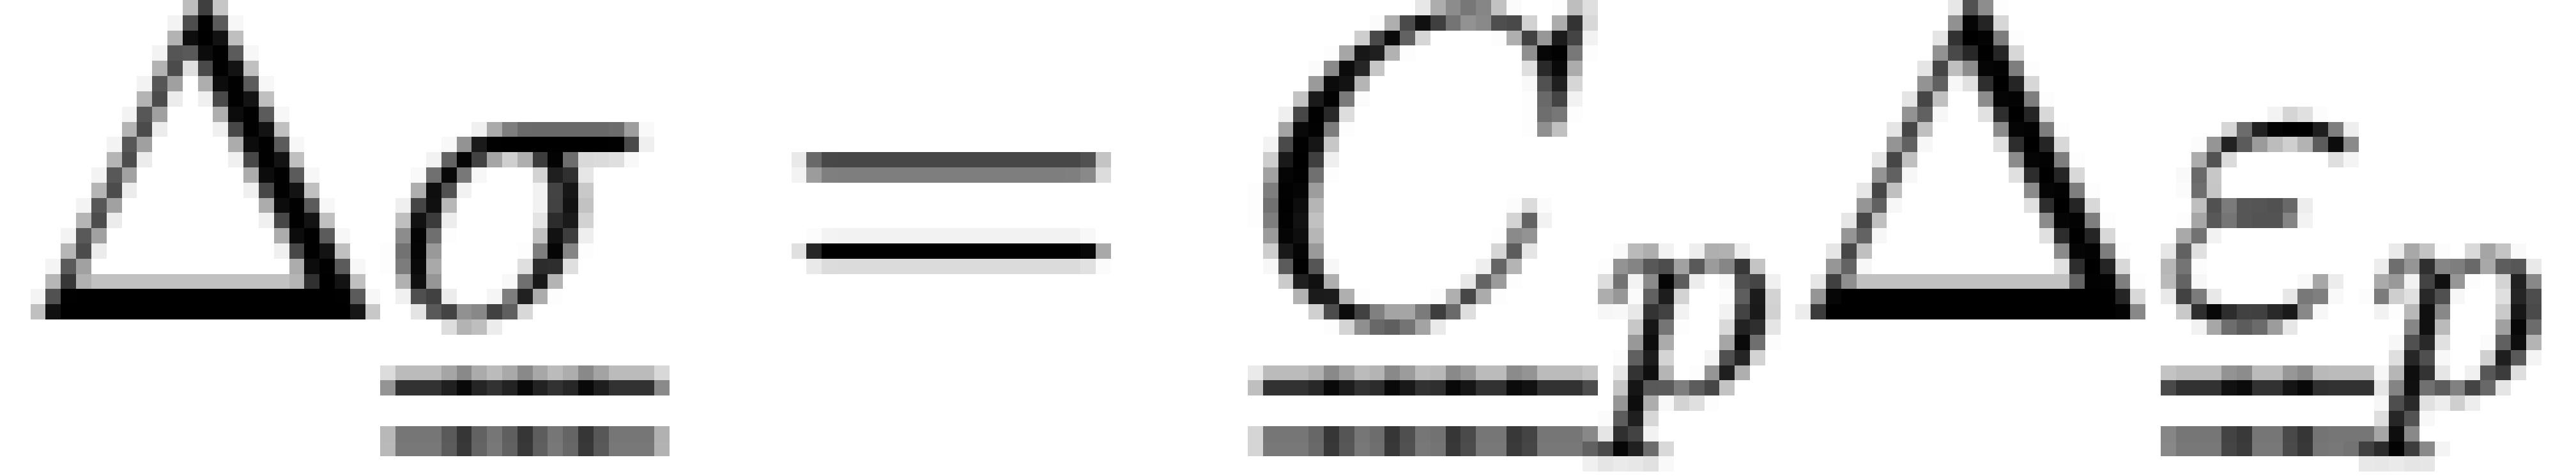

[Jaeger et al. 2007 – Fig. 4.5]

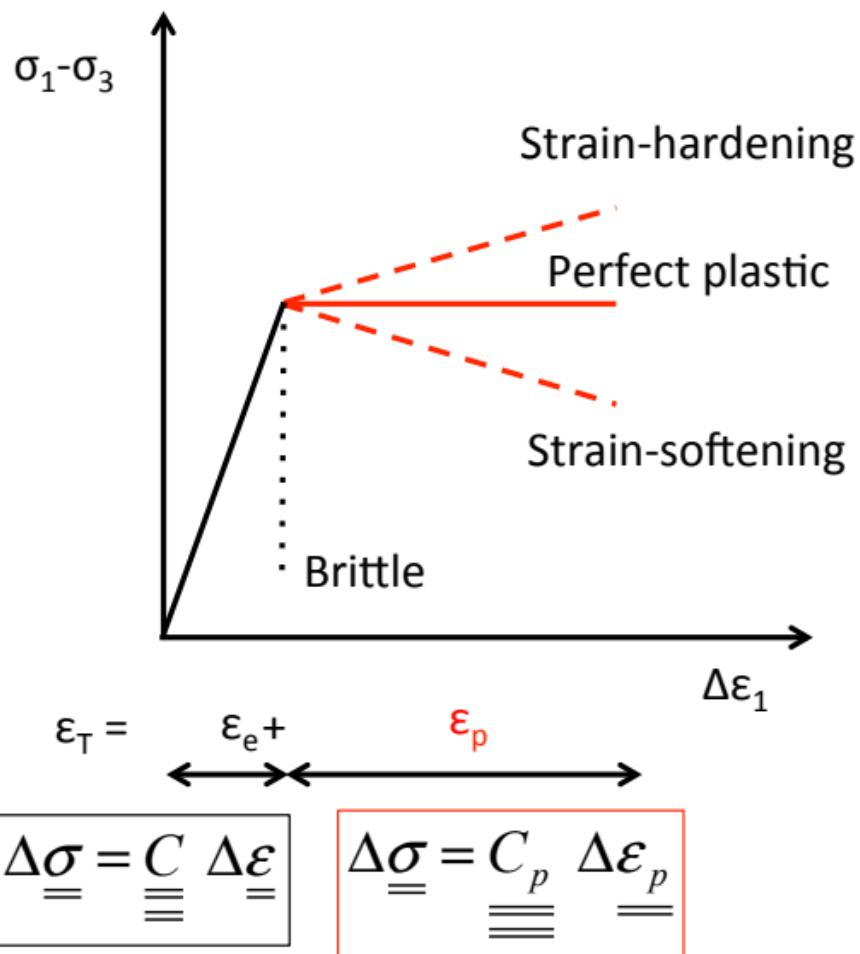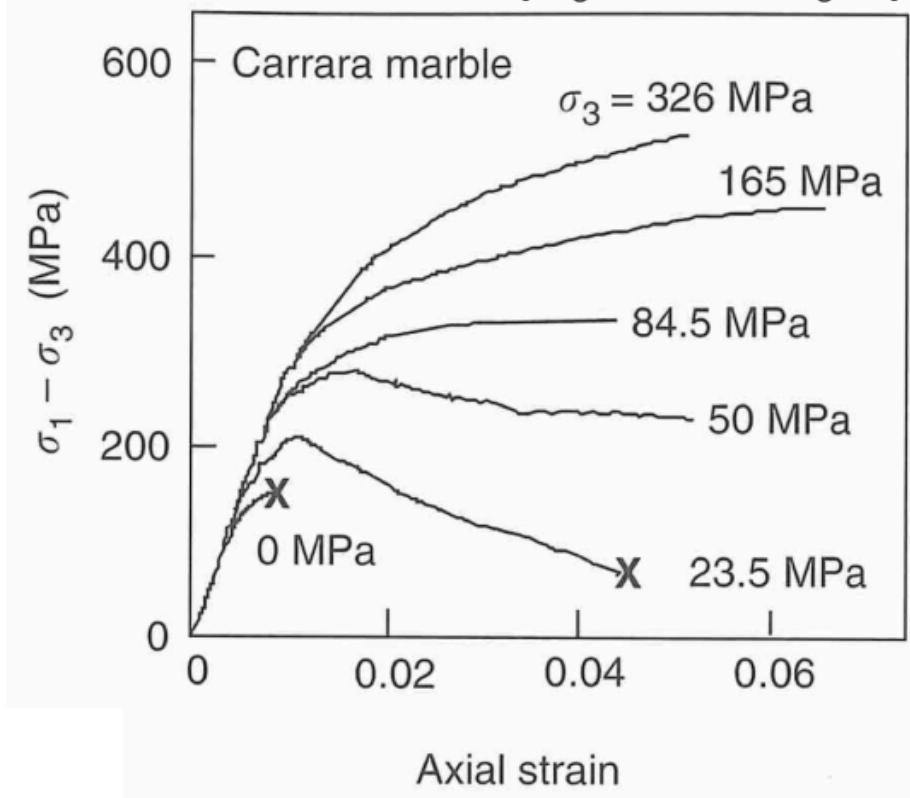


(a) Uncemented or poorly cemented rock →

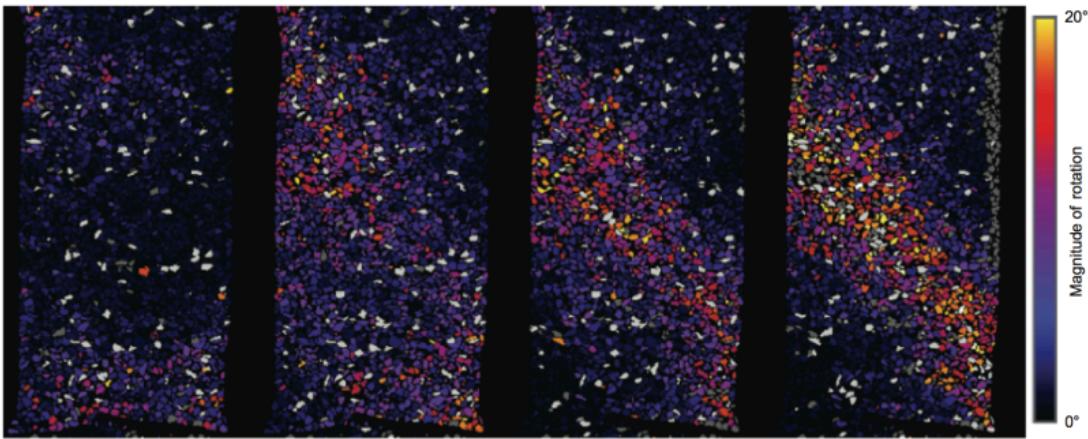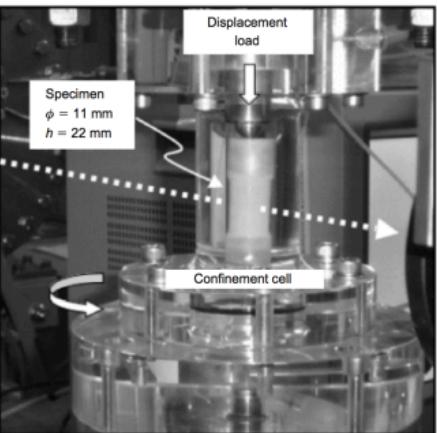

(b) Cemented rock →

Propagation of microfractures, grain friction/crushing



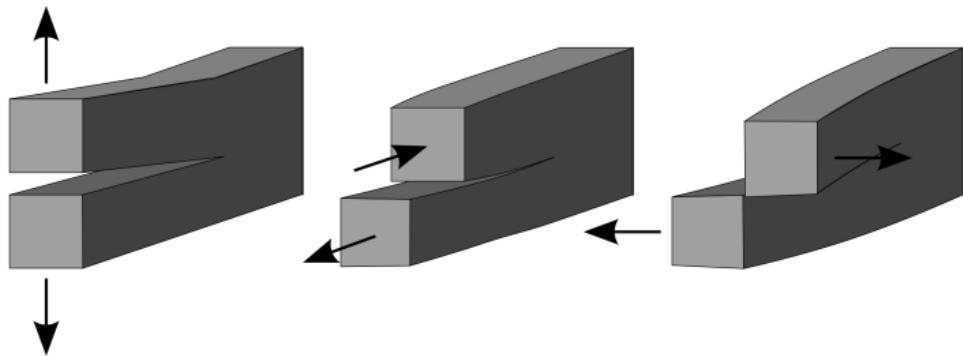


Stress intensification at the tip of fractures

Propagation starts at fracture tips

Napolitan Tuffo

[Hall et al. 2006 – Pure Appl. Geophys.]

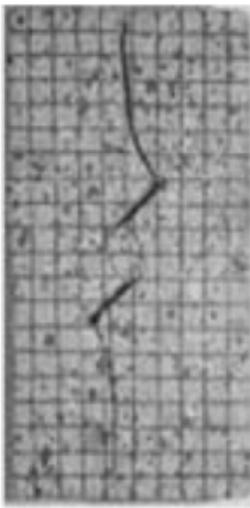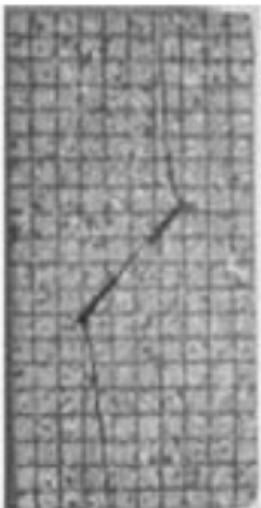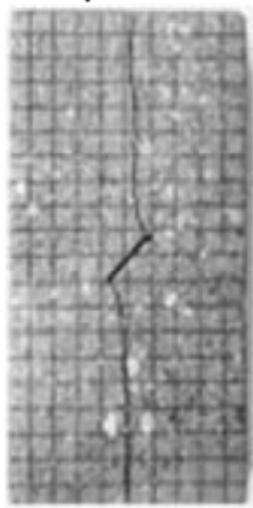


Single flaw

$\beta = 45^\circ$


$\beta = 105^\circ$






$\beta = 120^\circ$



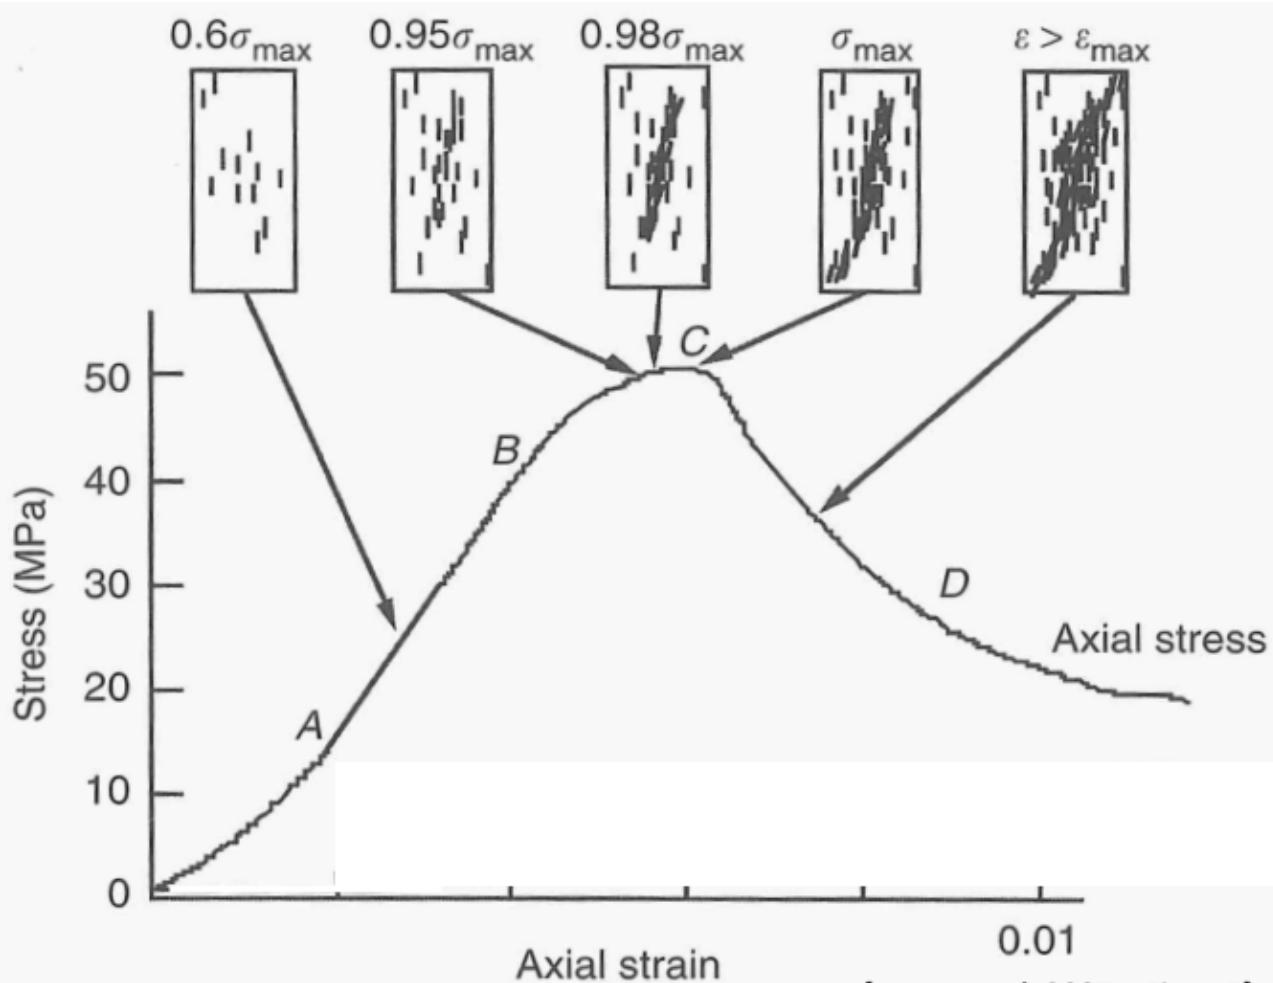

[Jaeger et al. 2007 – Fig. 4.5]




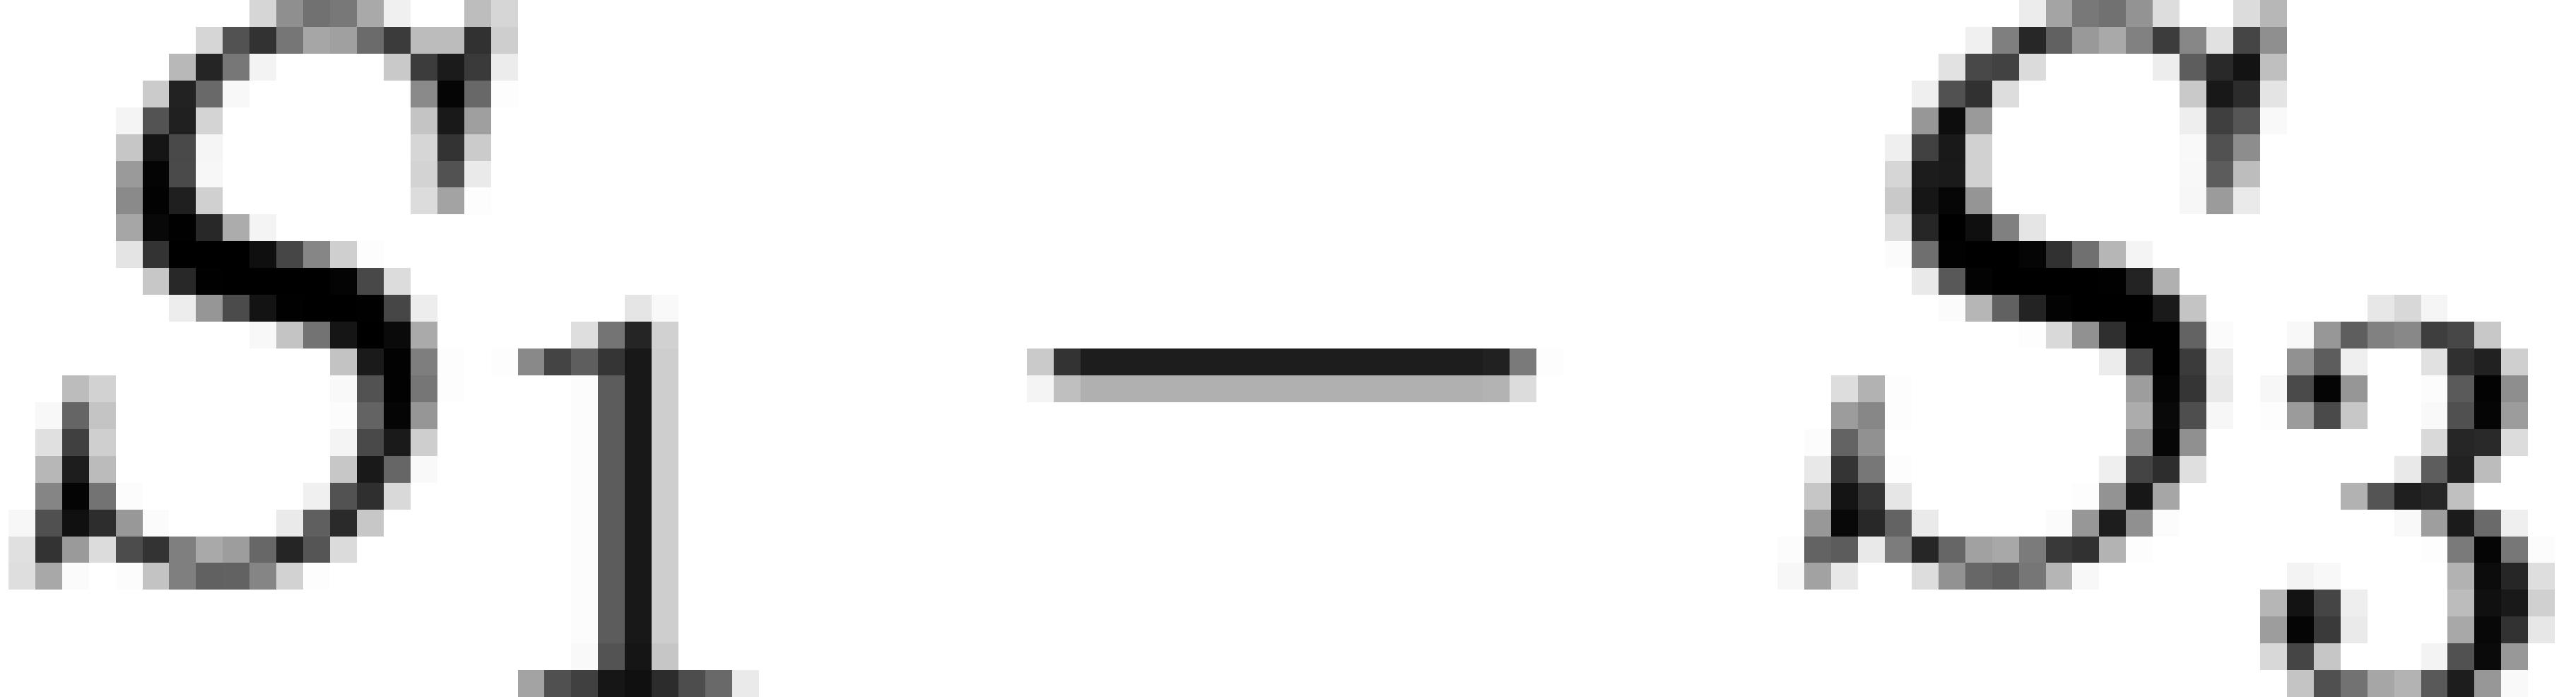


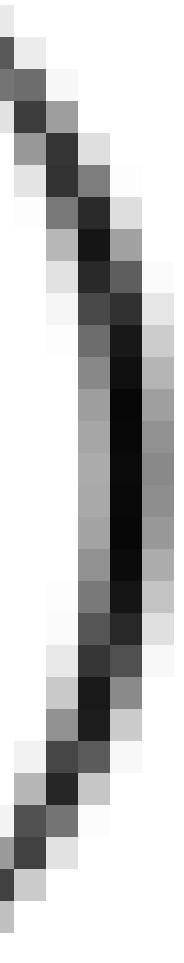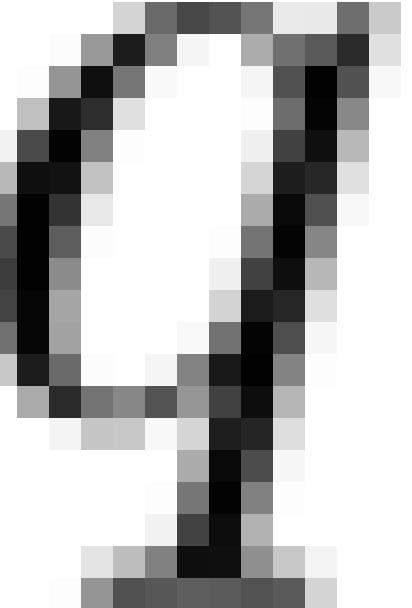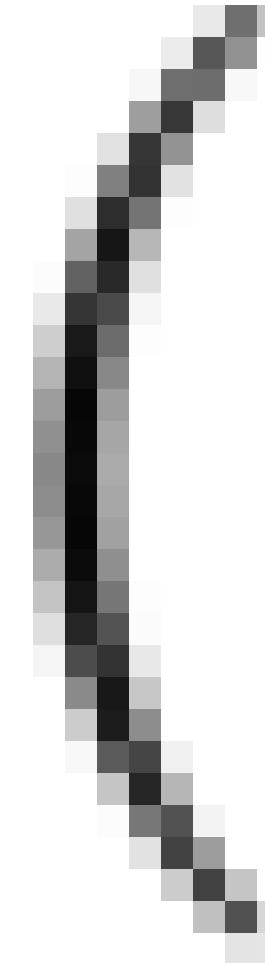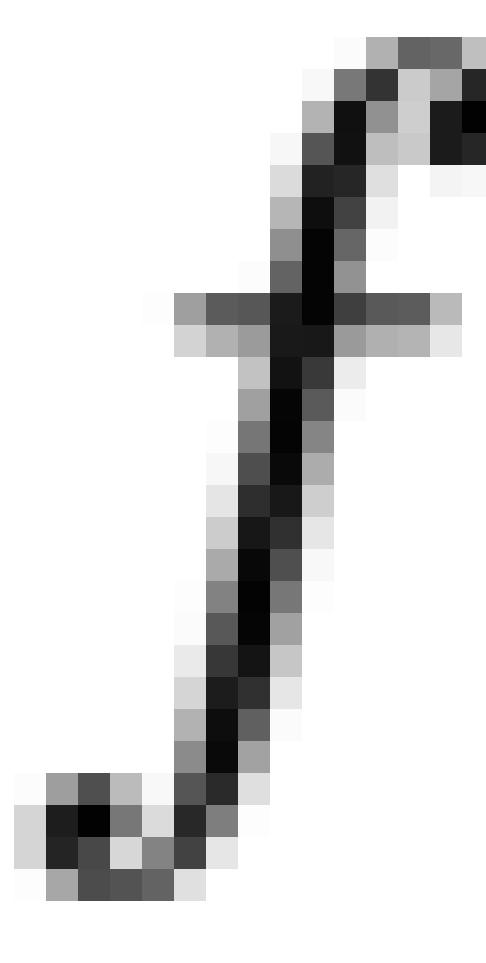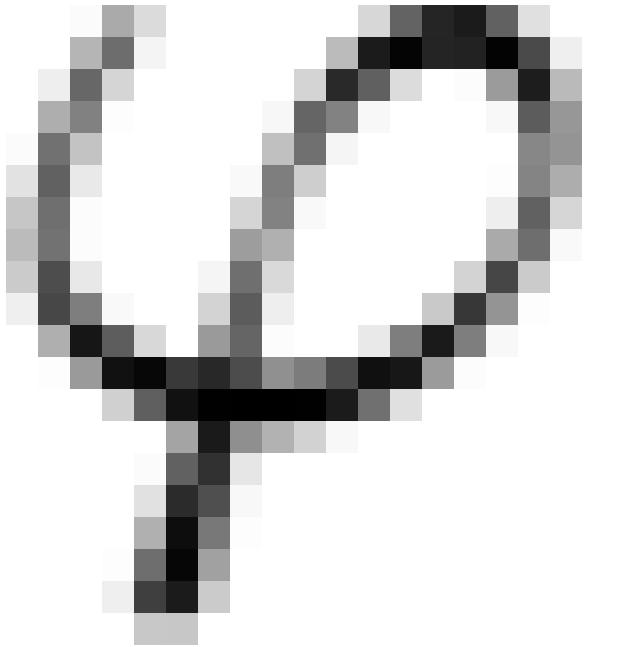







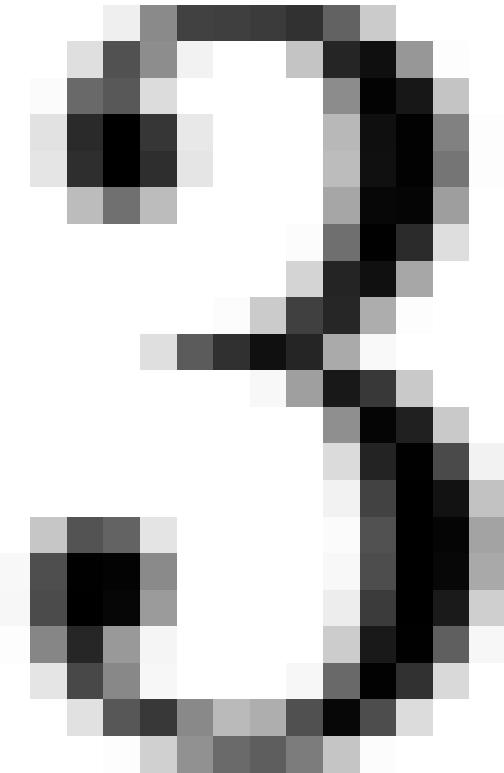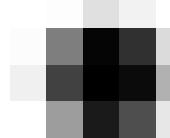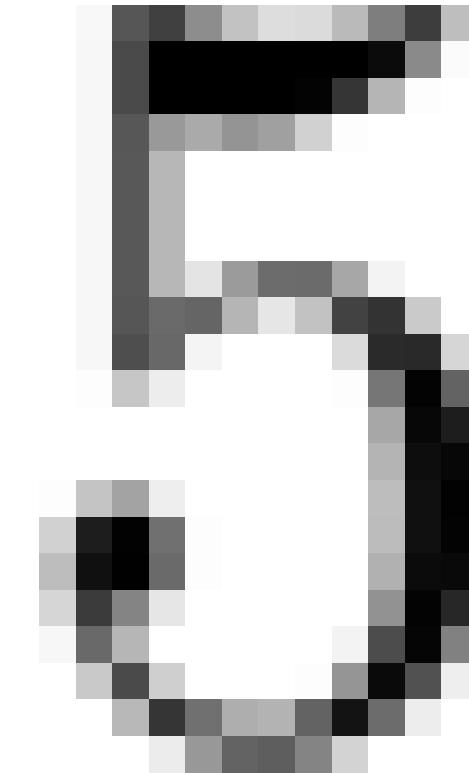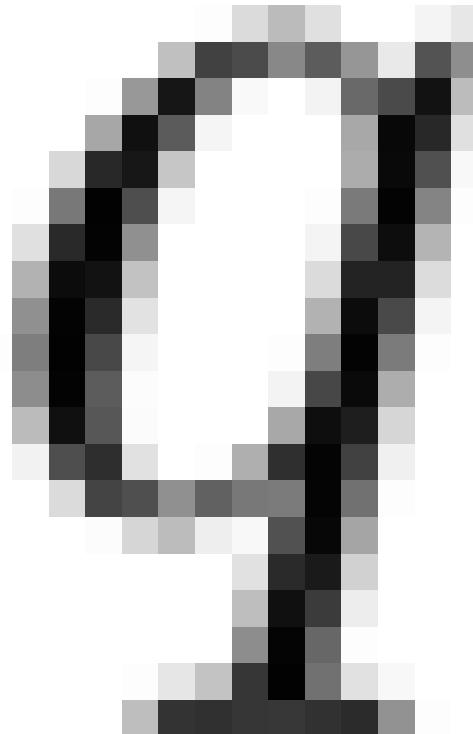








Outcrop of a normal fault in Split Mountain gorge

<http://geology.csupomona.edu/janourse/TectonicsFieldTrips.htm>




Outcrop of a normal fault on the footwall of the
Moab Fault in front of the entry of Arches National Park, Utah
(Photo: DNE. <https://bit.ly/2UDwiEt>)


**(a) Un-wrapped image
(ultrasonic)**

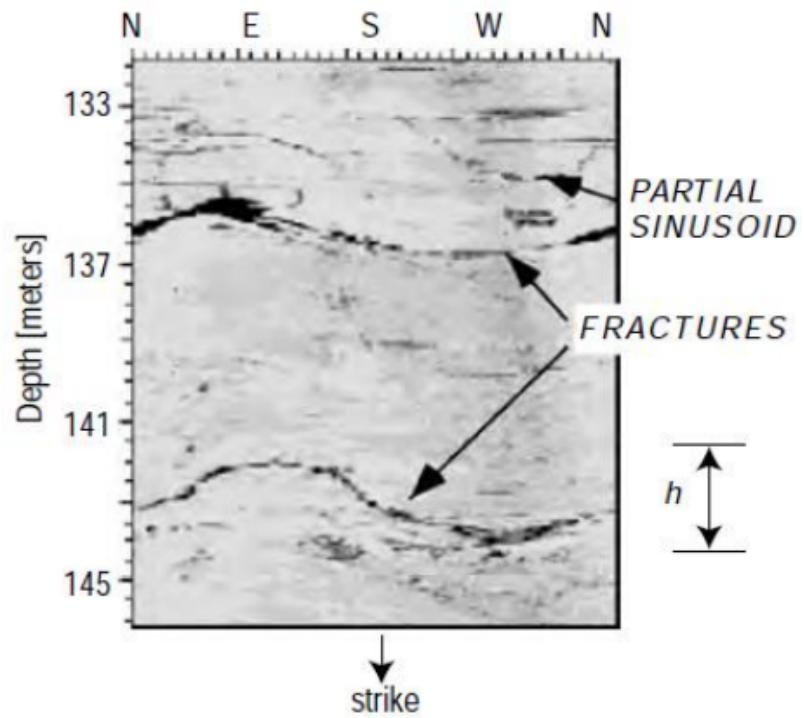

(b) 3D-representation

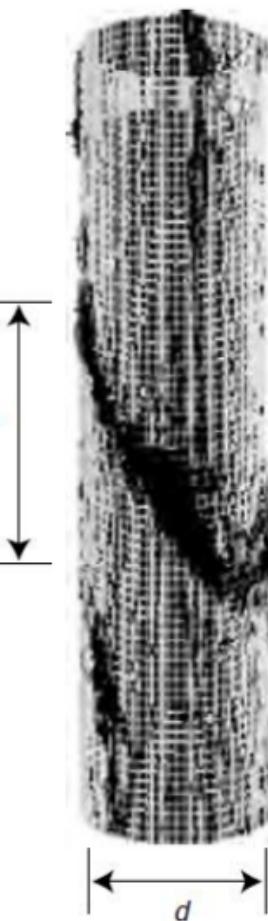


(c) Interpretation

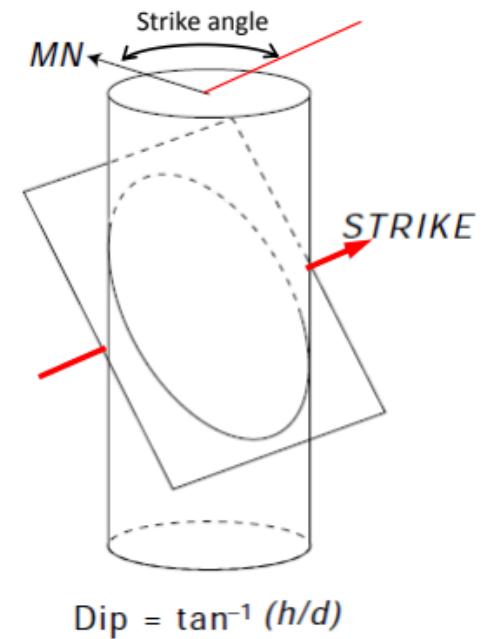


[Zoback 2013 - Figure 5.3]



a)

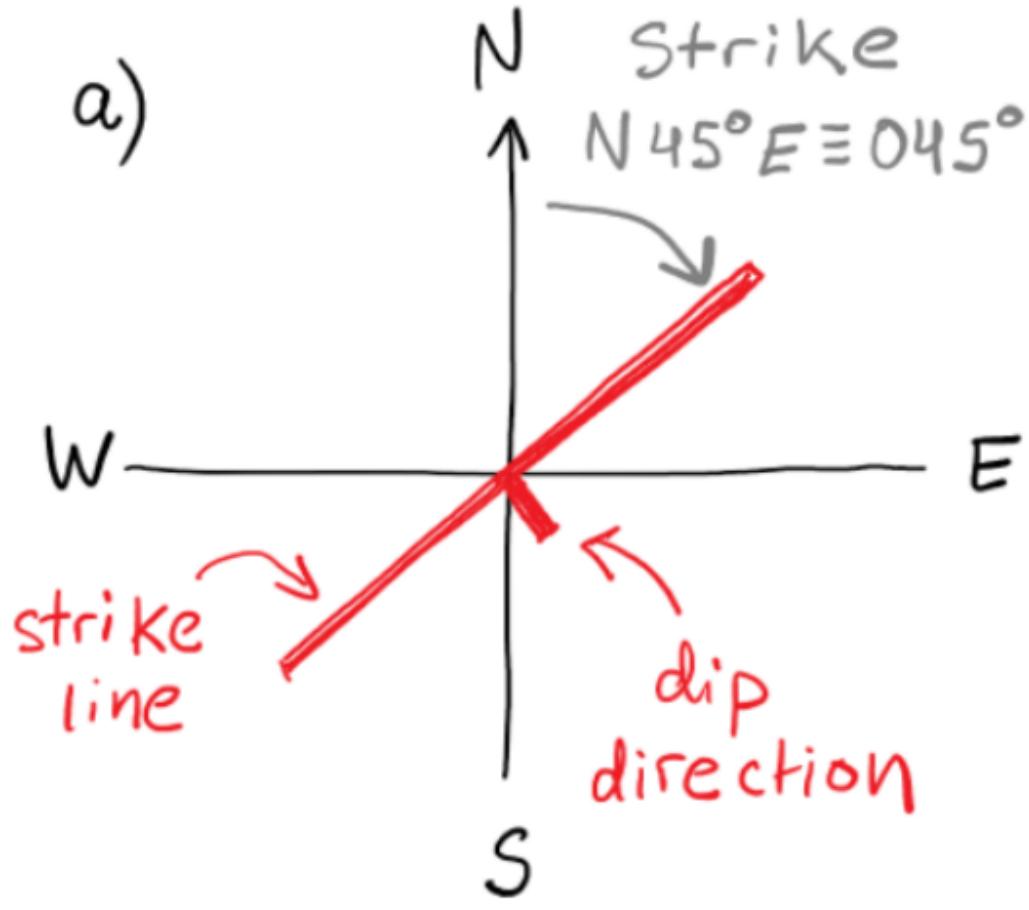

b)

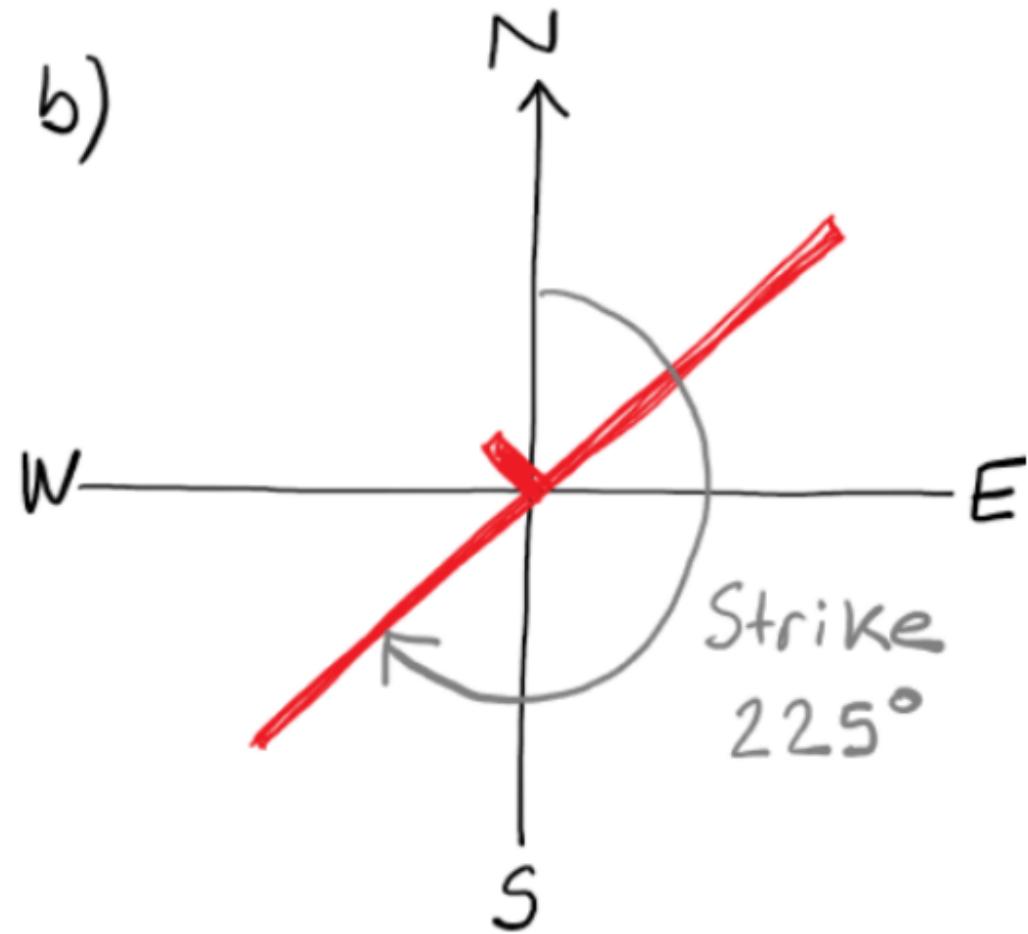

Geologic map

Figure from Prof. Prodanovic



a)

$N30^\circ E$, $45^\circ NW$

or

030° , $45^\circ NW$



b)

$N10^\circ W$, $80^\circ NE$

or

350° , $80^\circ NE$



c)


Symbols for
horizontal plane
and vertical plane














$$\begin{aligned} q &= \sin^2 \varphi + \frac{1}{\sin^2 \varphi} \\ &= \frac{1}{\sin^2 \varphi} + \frac{1}{\sin^2 \varphi} \end{aligned}$$









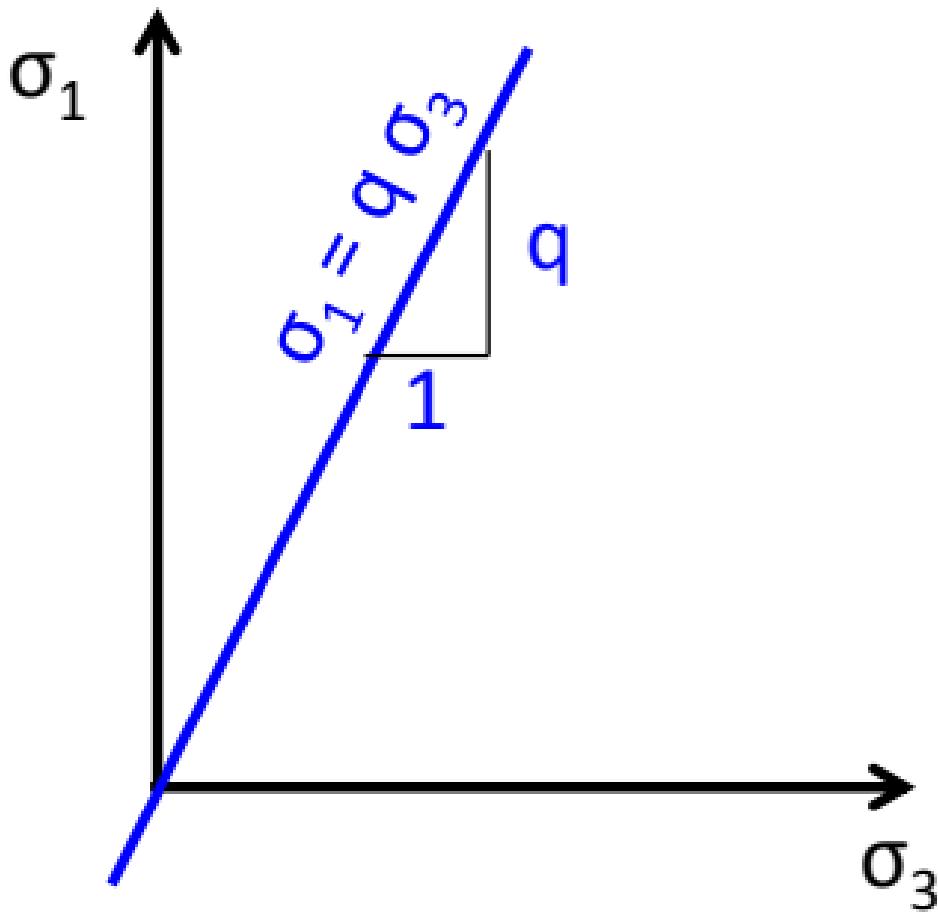








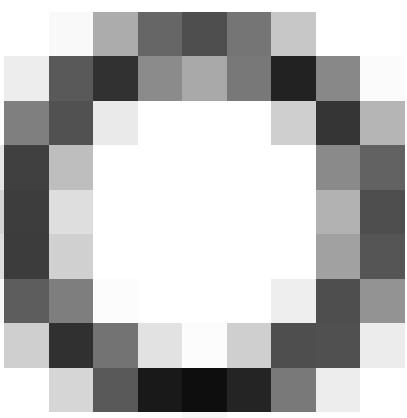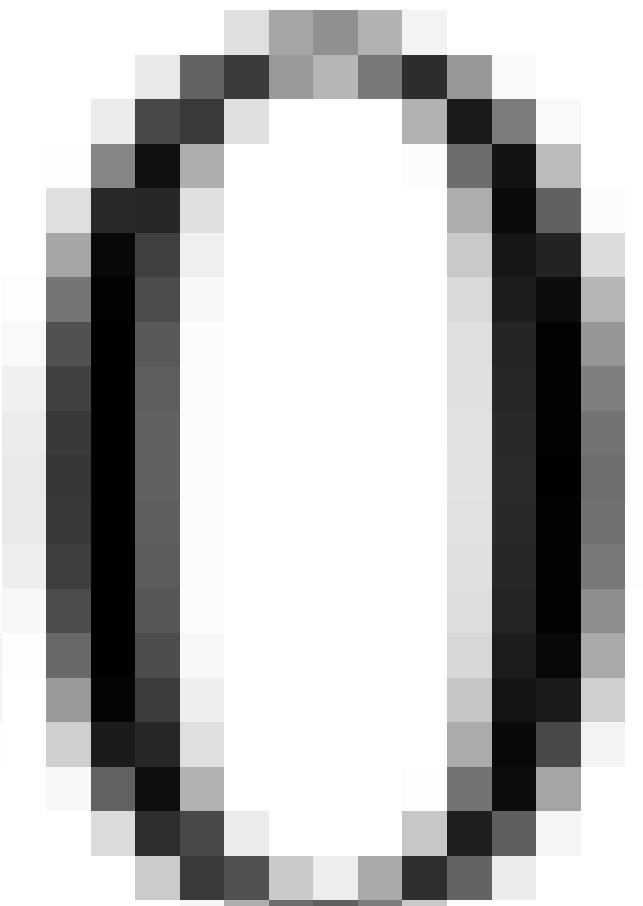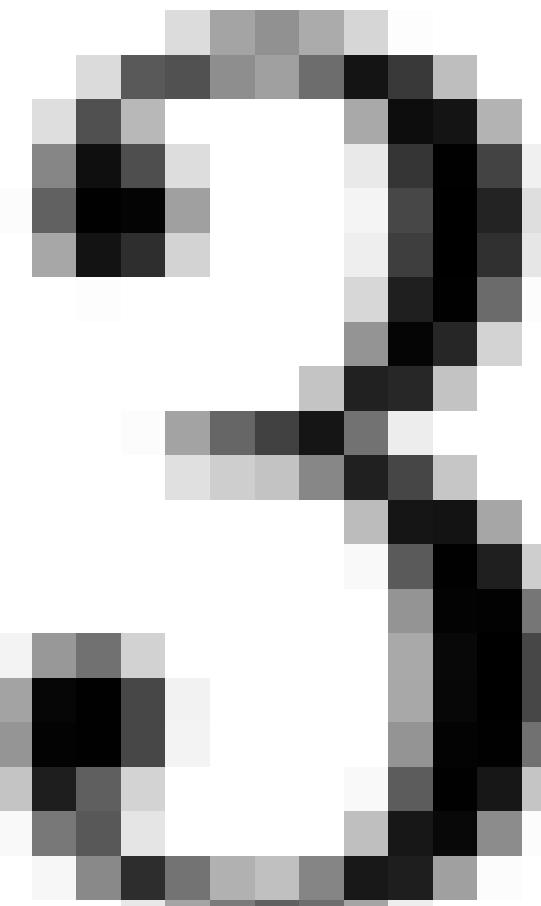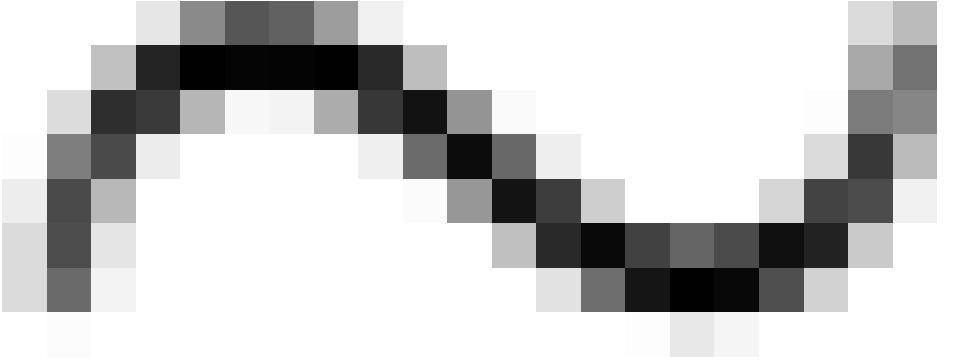


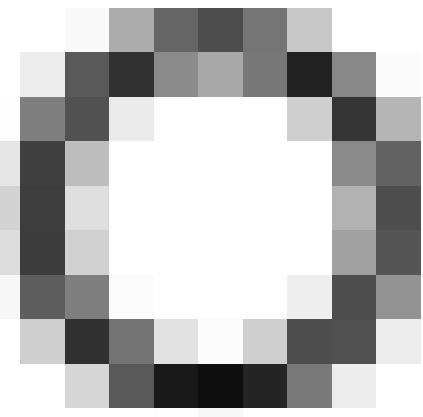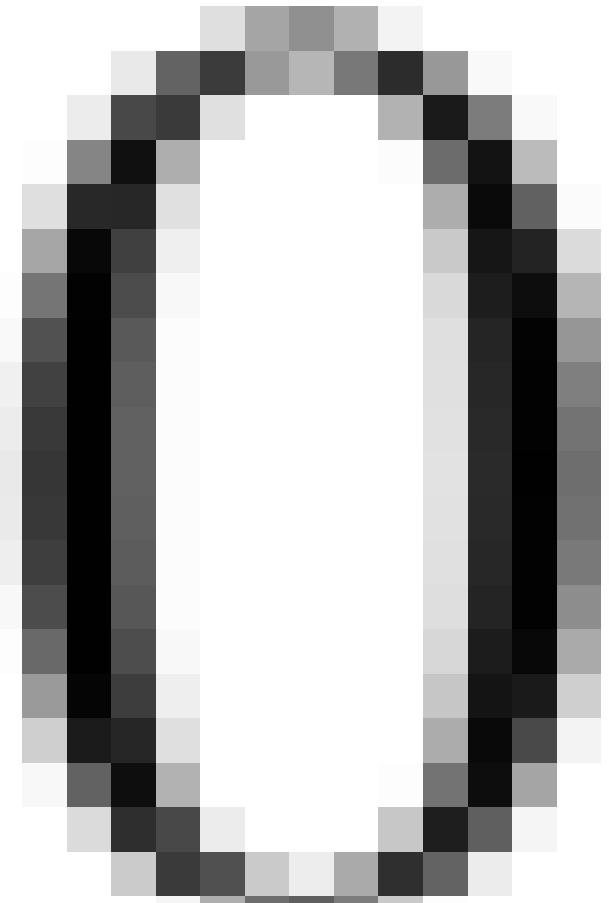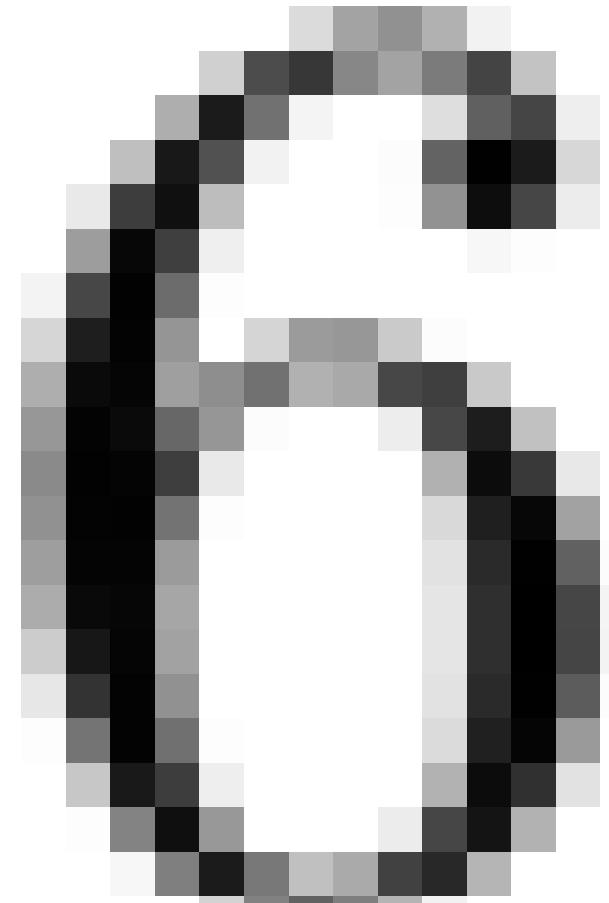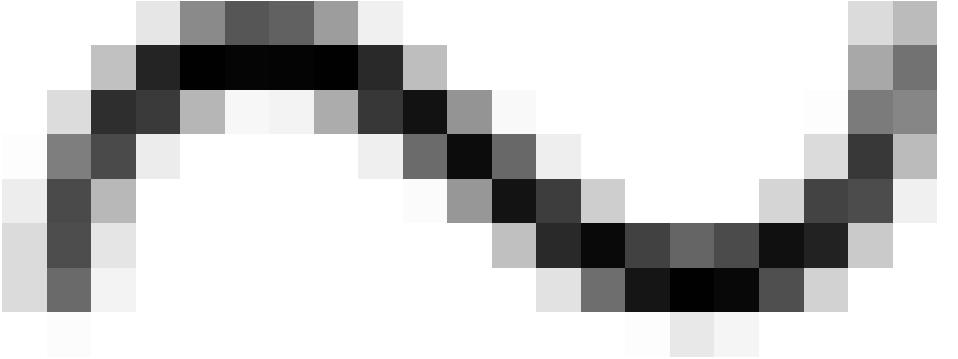


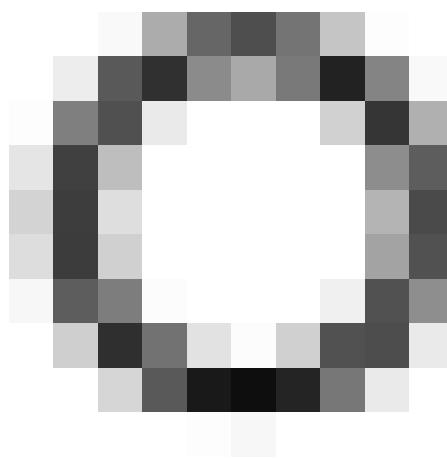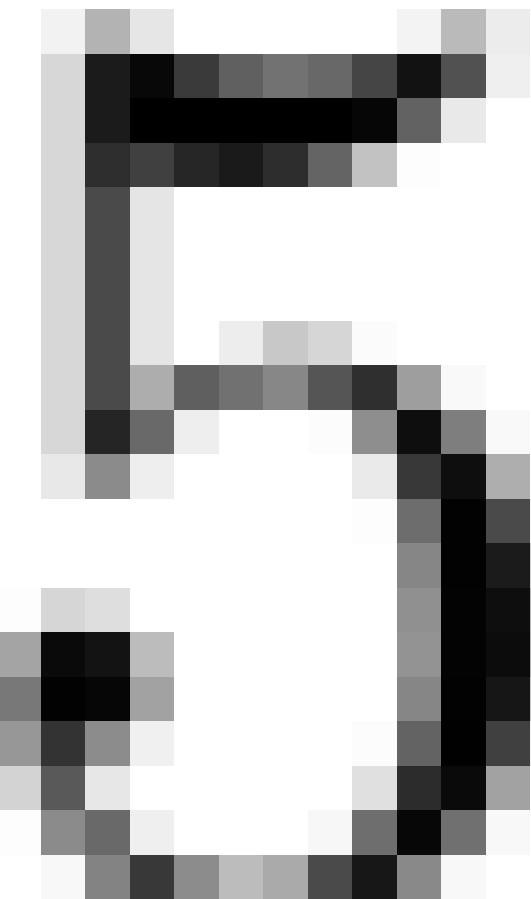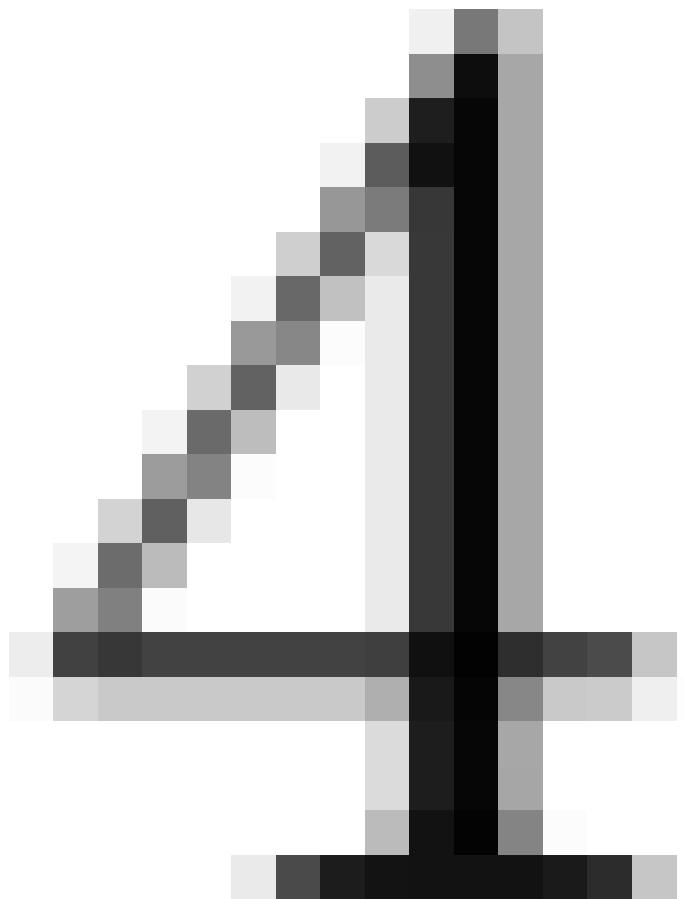

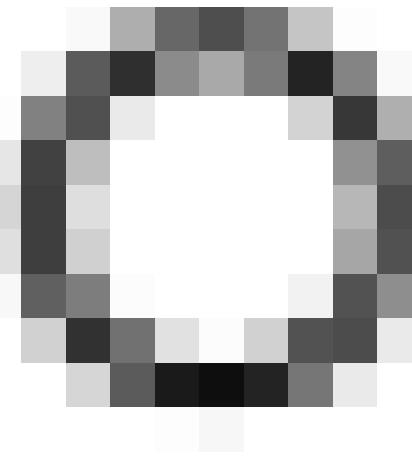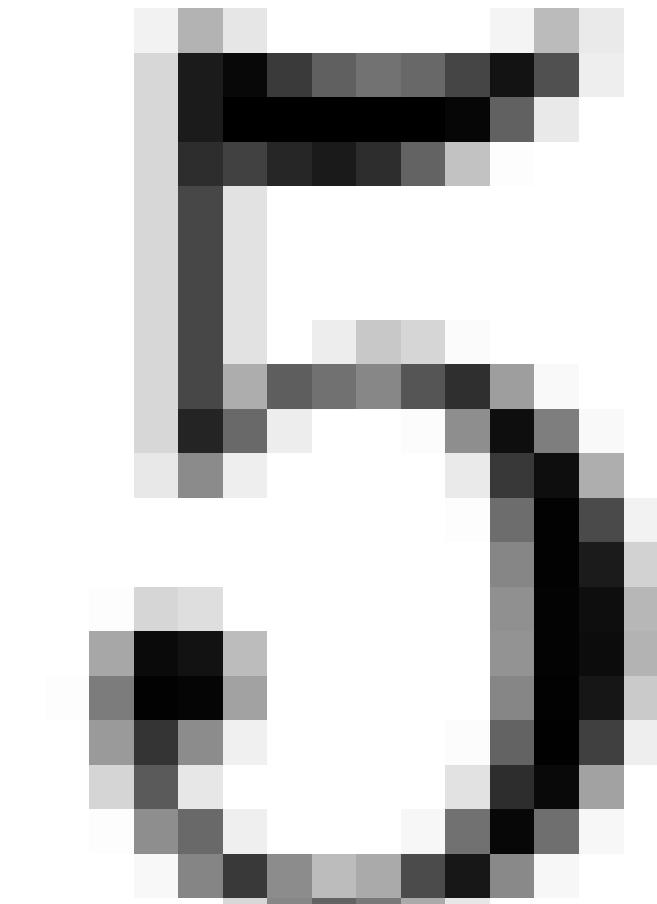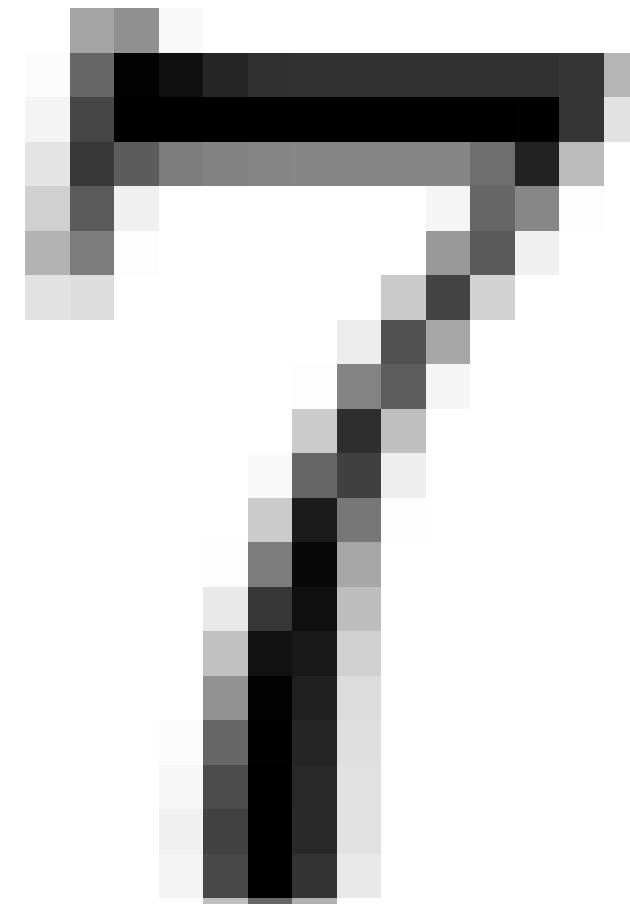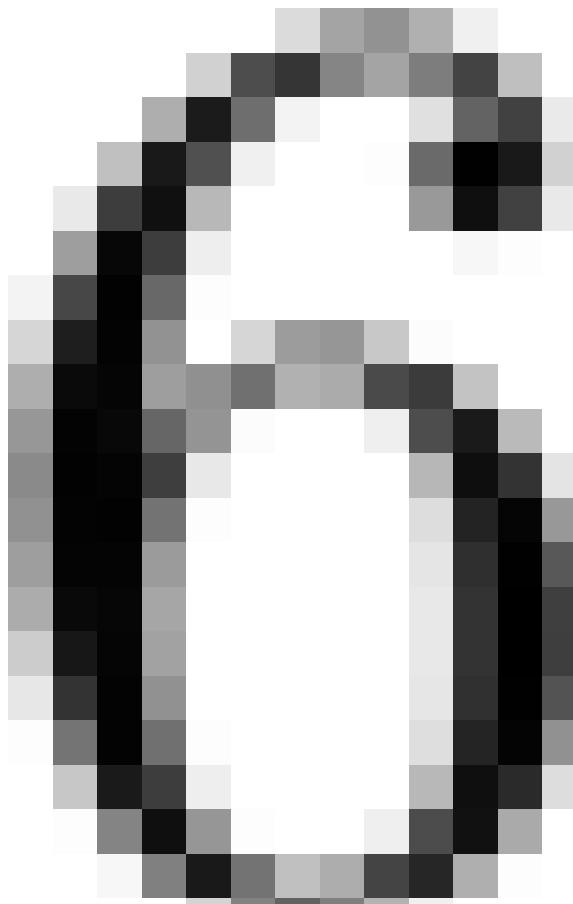

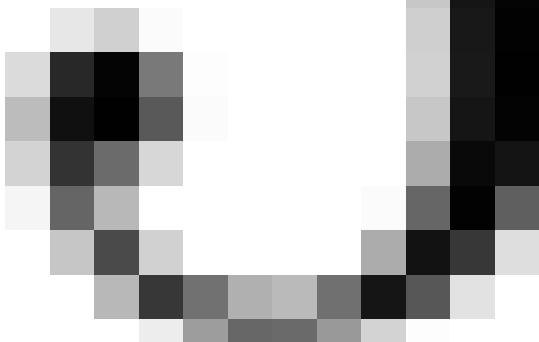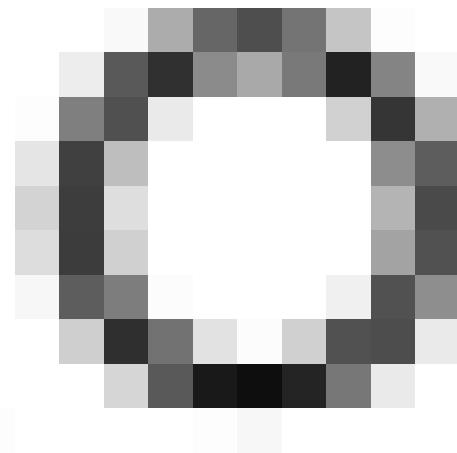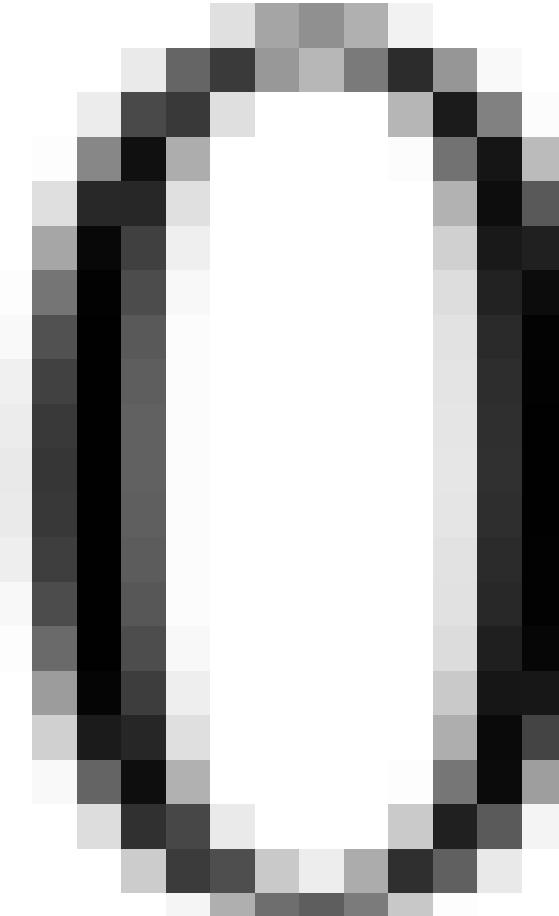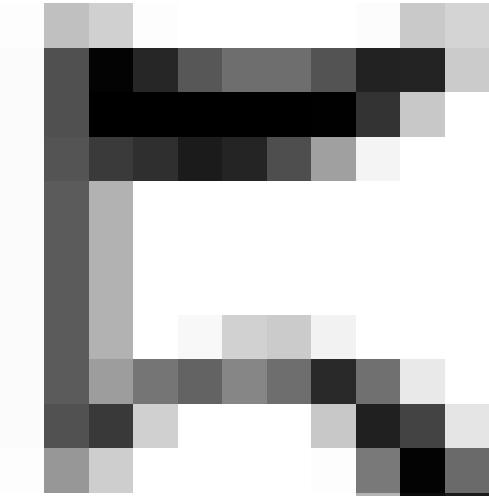

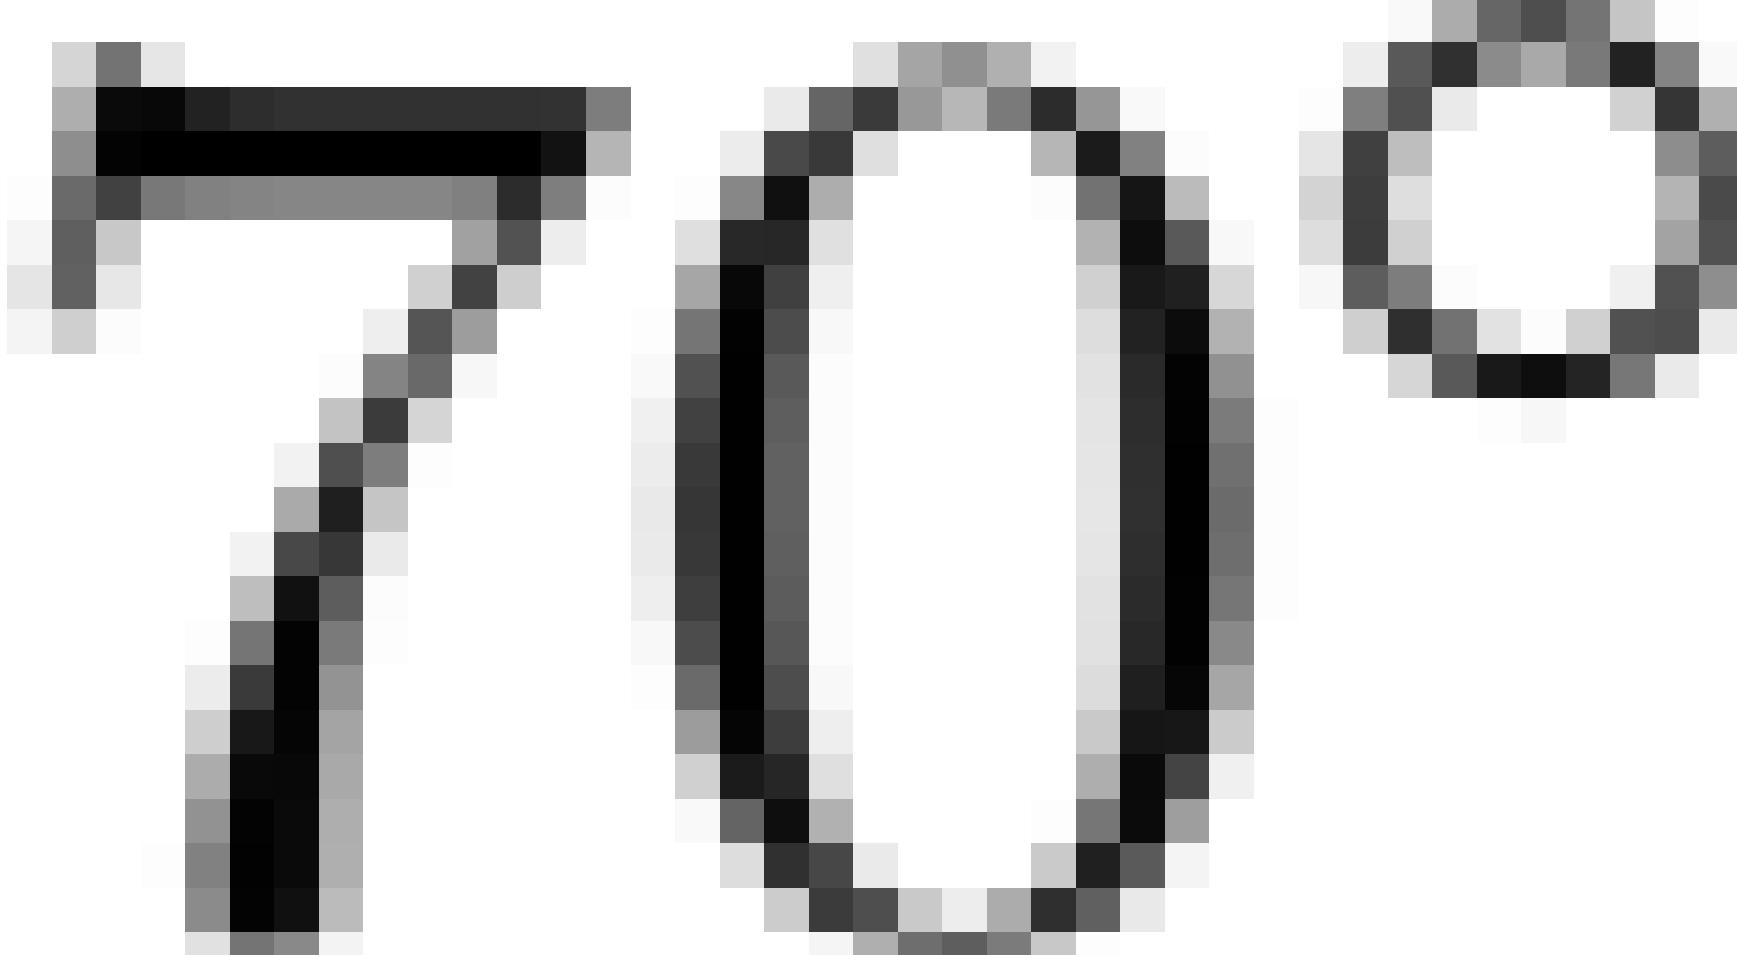

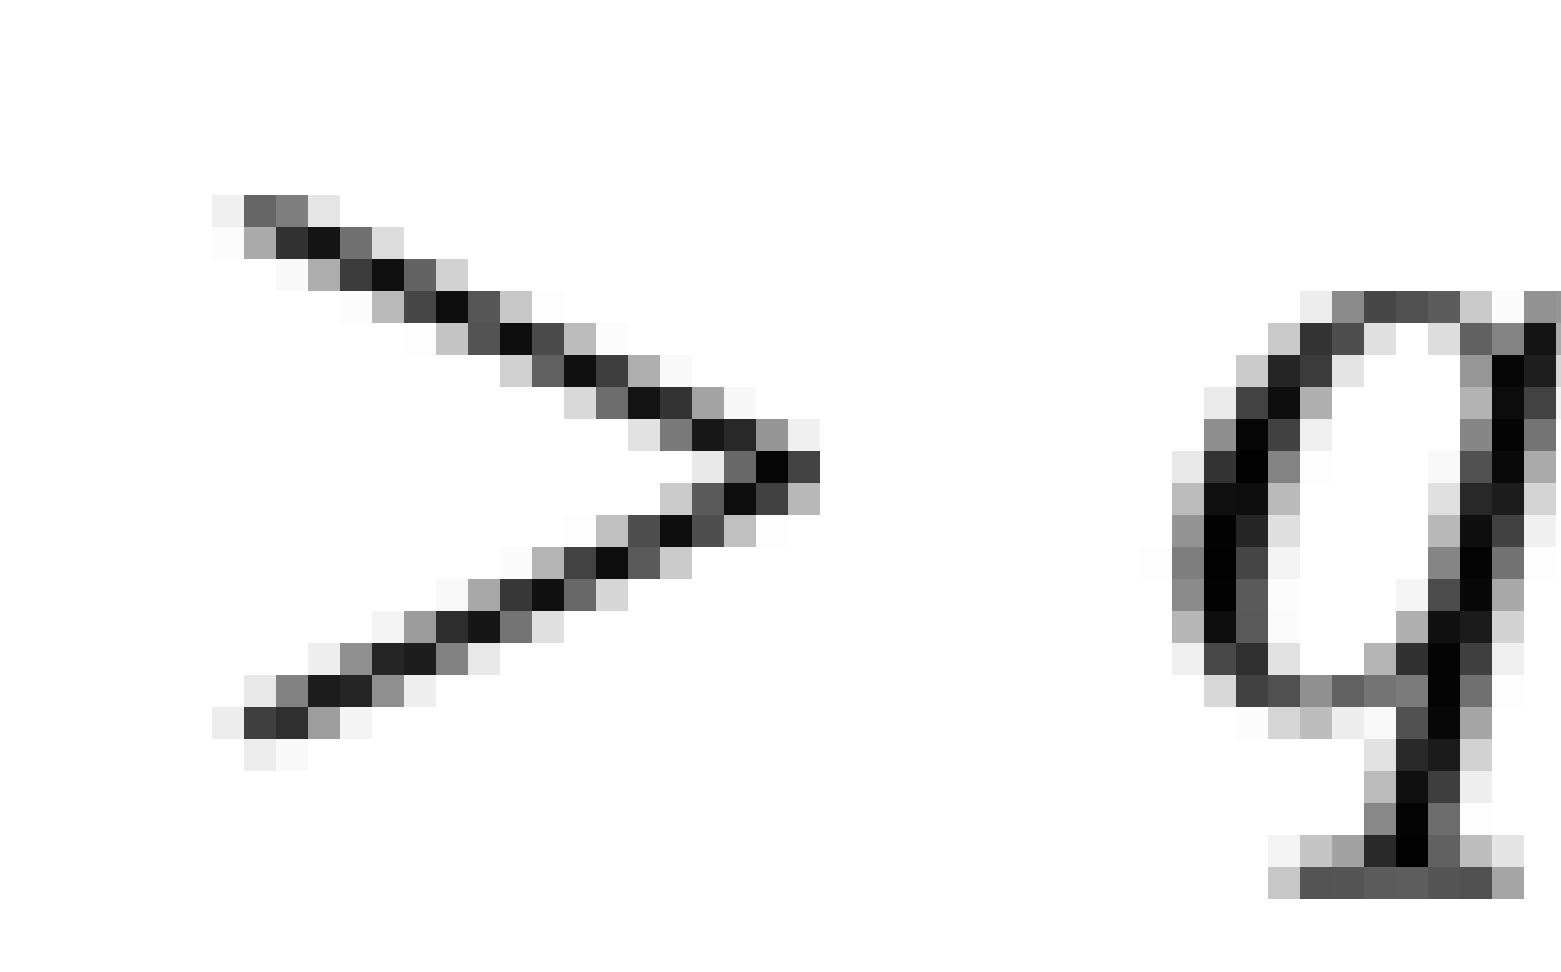



$$S_1 = s_v$$

$$S_2 = s_{H\max}$$

$$S_3 = s_{h\min}$$



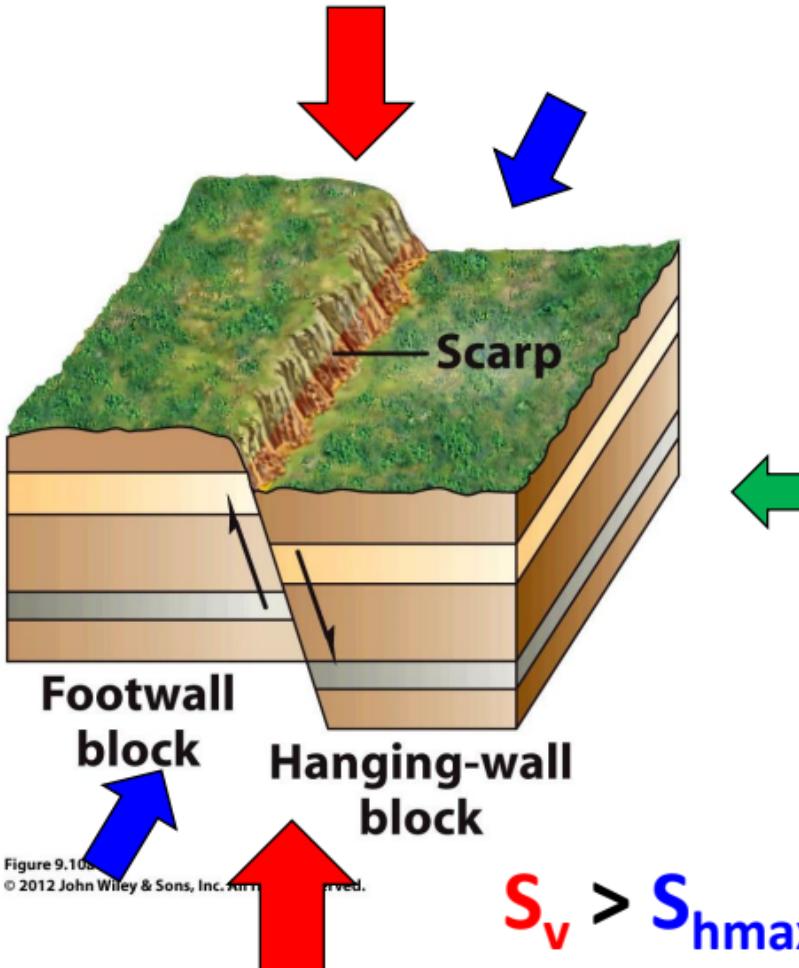


Figure 9.10b
© 2012 John Wiley & Sons, Inc. All rights reserved.



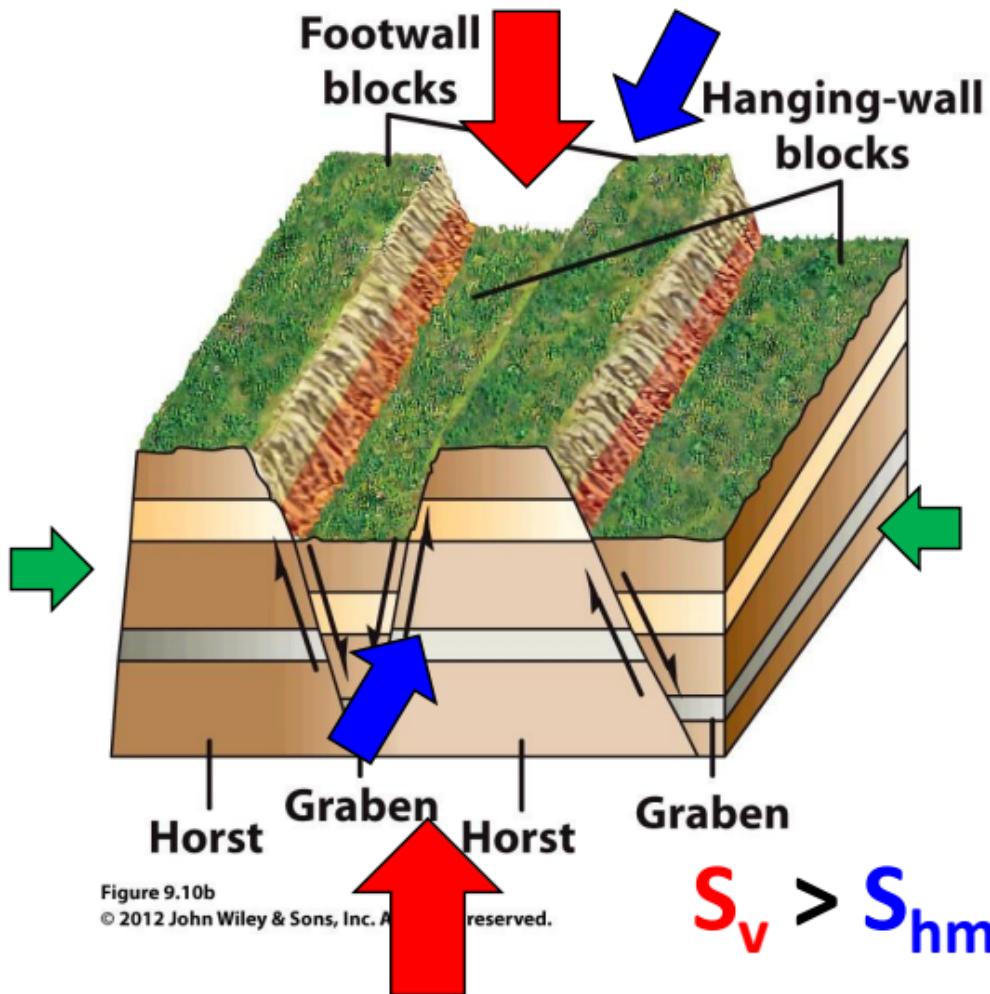



Figure 9.10b
© 2012 John Wiley & Sons, Inc. All rights reserved.

$$S_v > S_{h\max} > S_{h\min}$$

$$S_1 = S_{H\max}$$


$$S_2 = S_{h\min}$$

$$S_3 = S_v$$





**Symbols used
on a map to
indicate a
thrust fault**

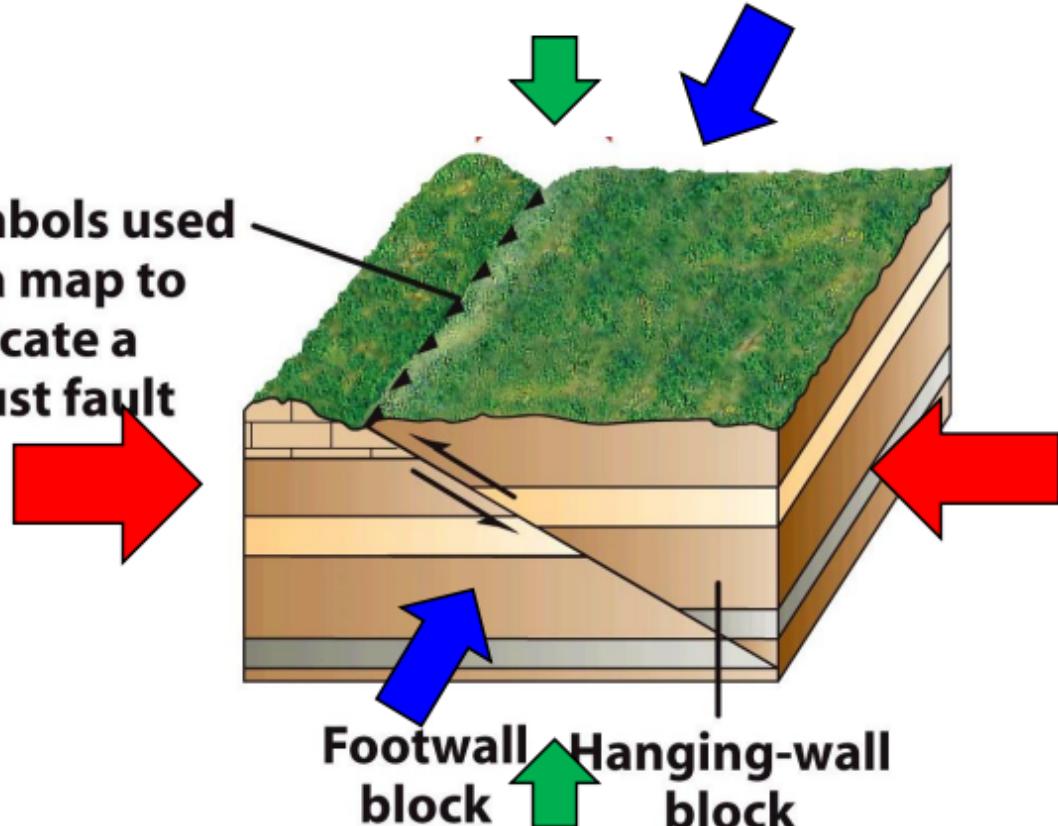

**Footwall
block** **Hanging-wall
block**

Figure 9.10d
© 2012 John Wiley & Sons, Inc. All rights reserved.

$$S_{H\max} > S_{h\min} > S_v$$



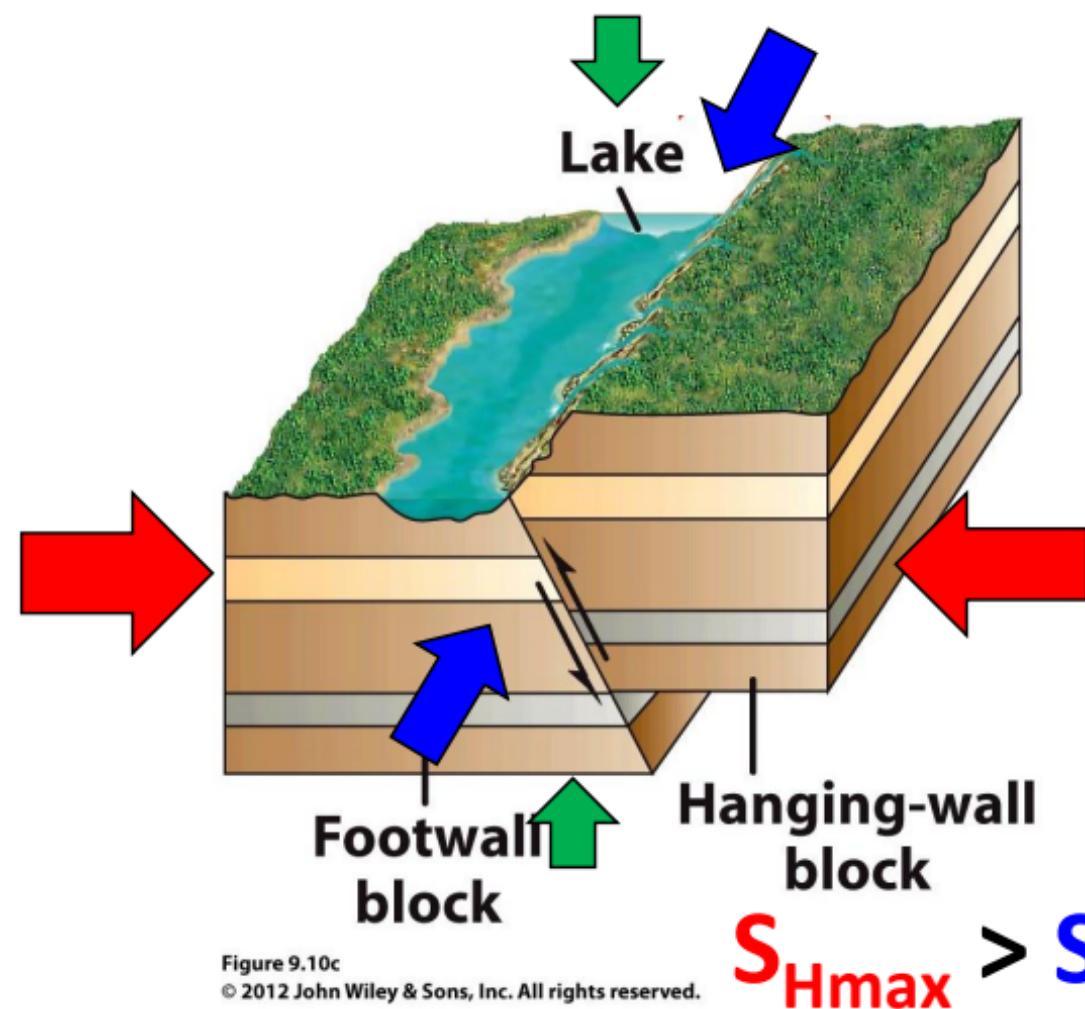


Figure 9.10c

© 2012 John Wiley & Sons, Inc. All rights reserved.

$$\left\{ \begin{array}{l} S_1 = S_{Hmax} \\ S_2 = S_v \\ S_3 = S_{hmin} \end{array} \right.$$

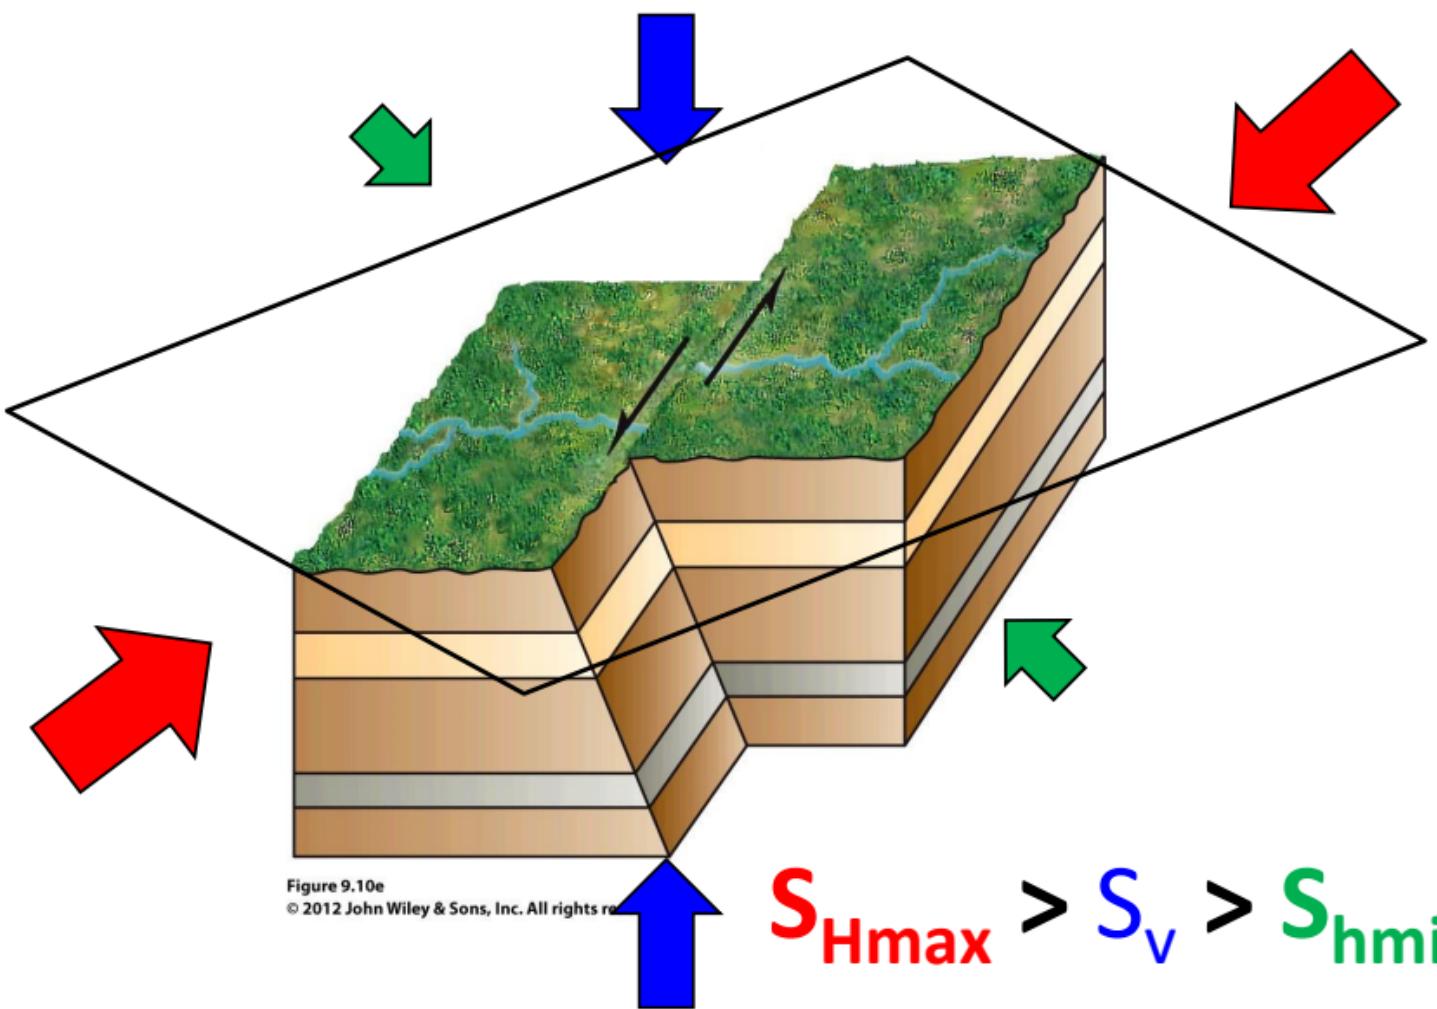

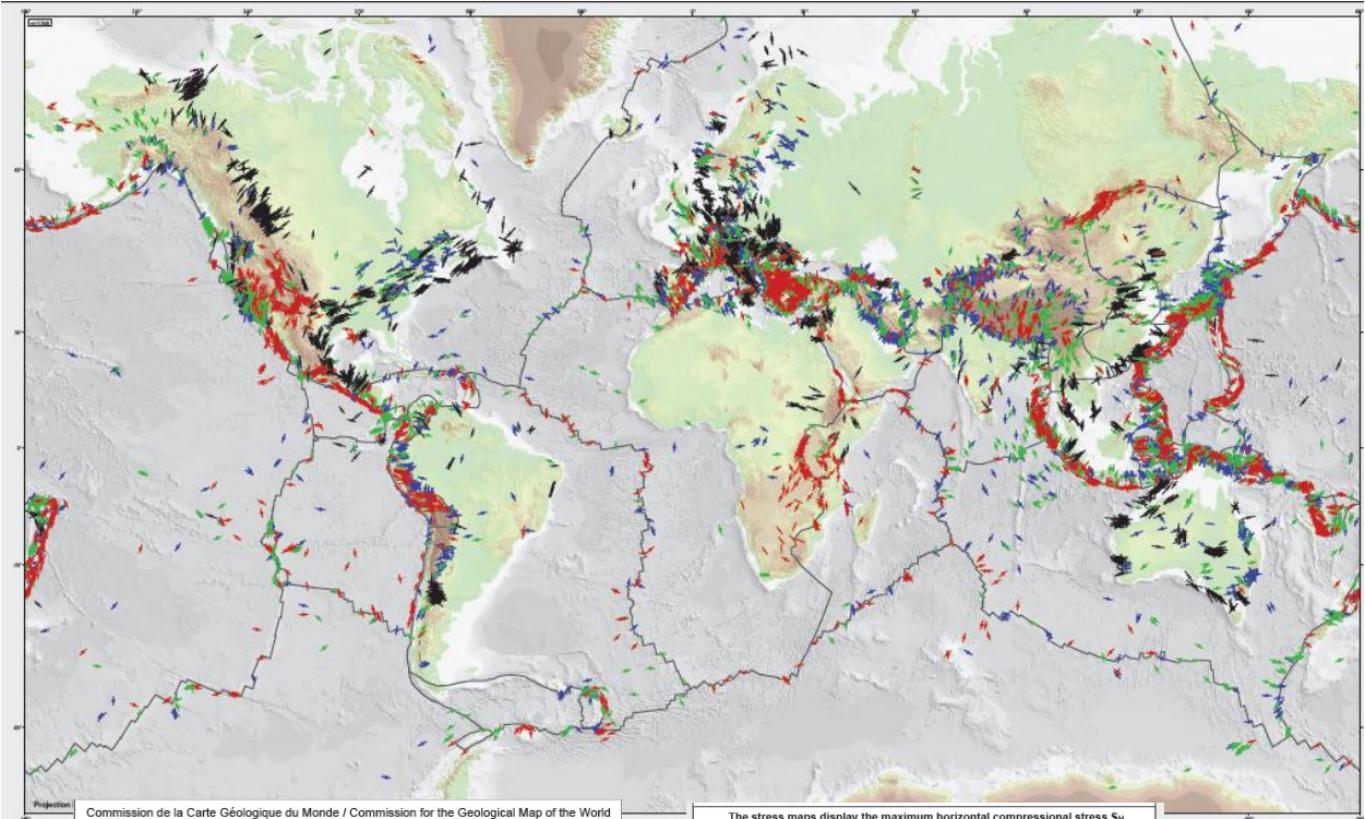

Commission de la Carte Géologique du Monde / Commission for the Geological Map of the World



WORLD STRESS MAP



2009 - 2nd edition, based on the WSM database release 2008

Helmholtz Centre Potsdam - GFZ German Research Centre for Geosciences

Authors

Oliver Heidbach, Mark Tingay, Andreas Barth, John Reinecker, Daniel Kurfürst, and Birgit Müller




The stress maps display the maximum horizontal compressional stress S_H

Method	Quality
focal mechanism	S_H is within $\pm 15^\circ$
breakouts	S_H is within $\pm 20^\circ$
drl. induced frac.	S_H is within $\pm 25^\circ$
overcoring	
hydro. fractures	
geol. indicators	

Data depth range

0-40 km


Stress Regime
Normal faulting
Strike-slip faulting
Thrust faulting
Unknown regime



normal faulting regime $S_y > S_H > S_x$



strike-slip regime $S_H > S_y > S_x$


thrust faulting regime $S_H > S_x > S_y$

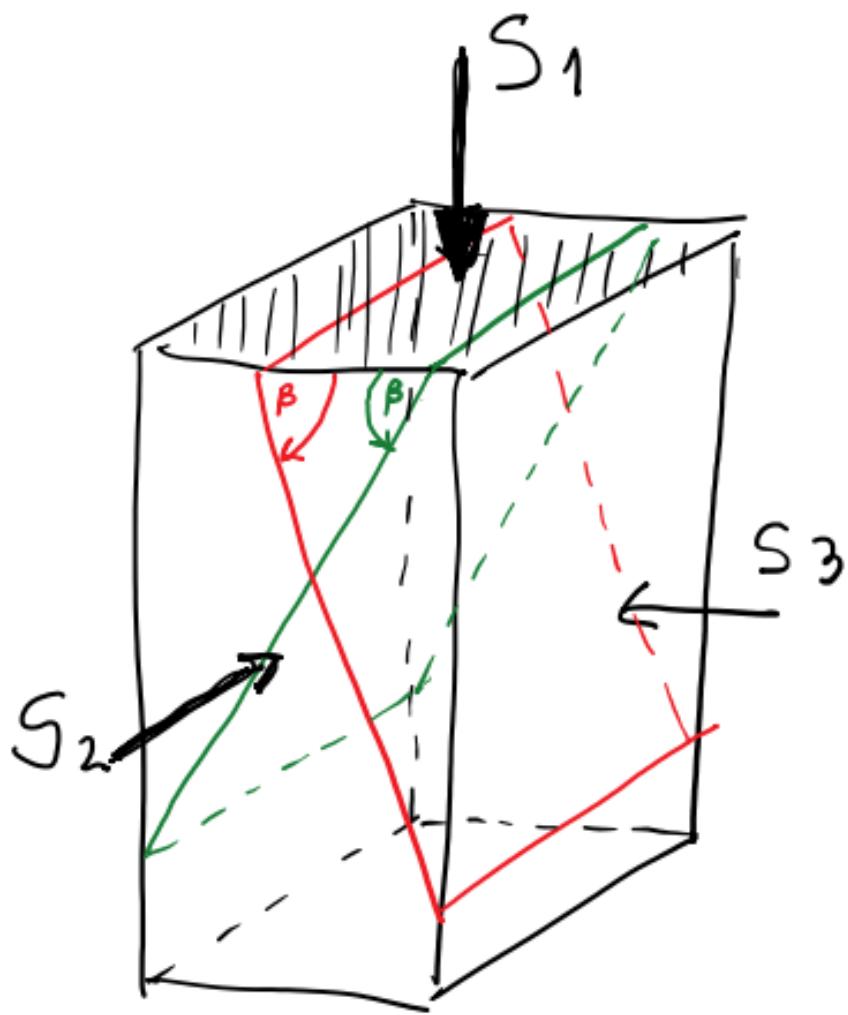


$$\beta = 45^\circ + \varphi/2$$

$$\beta = 45^\circ + \varphi/2$$

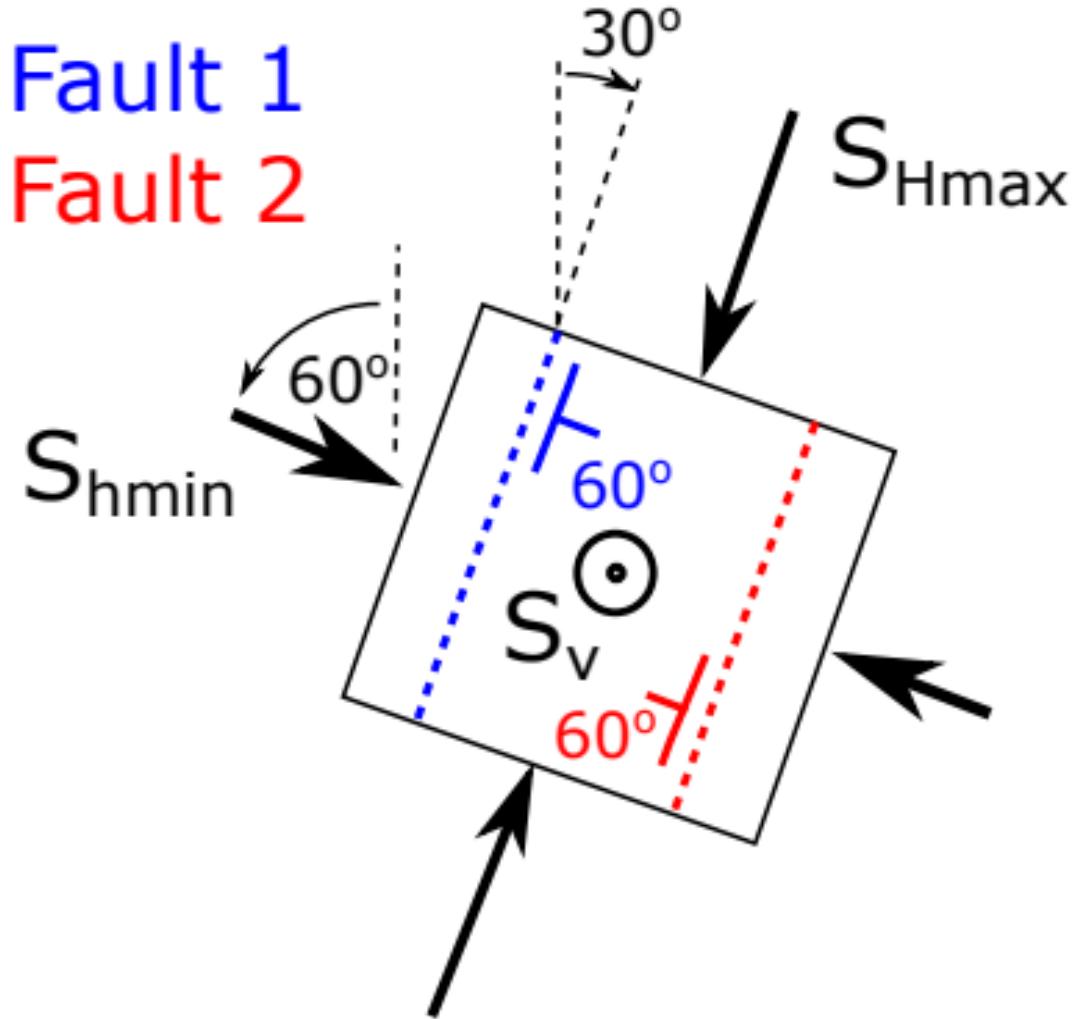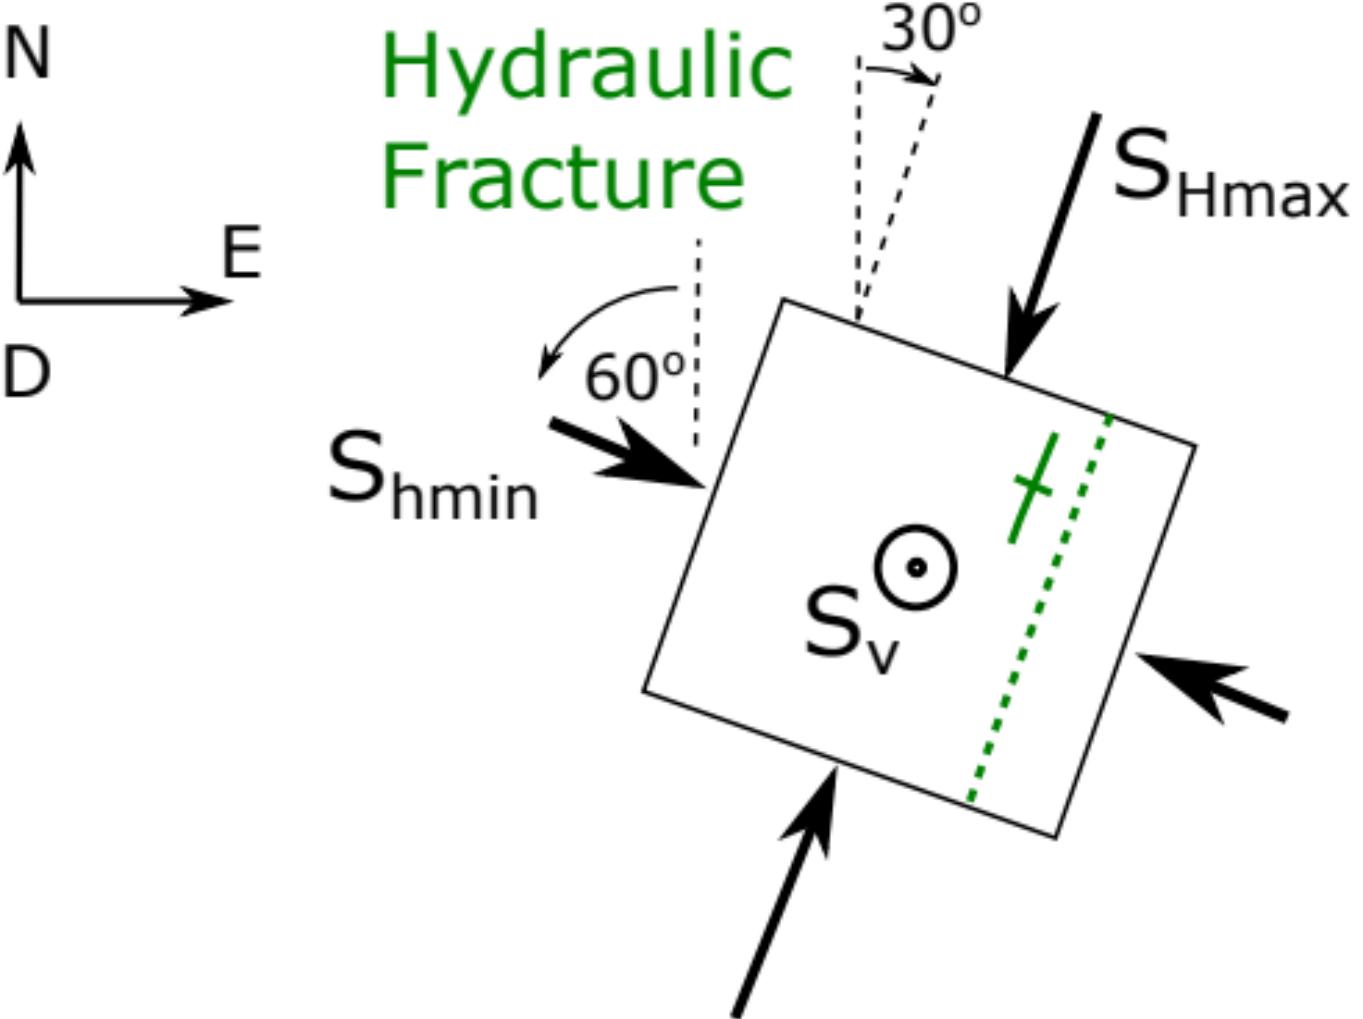



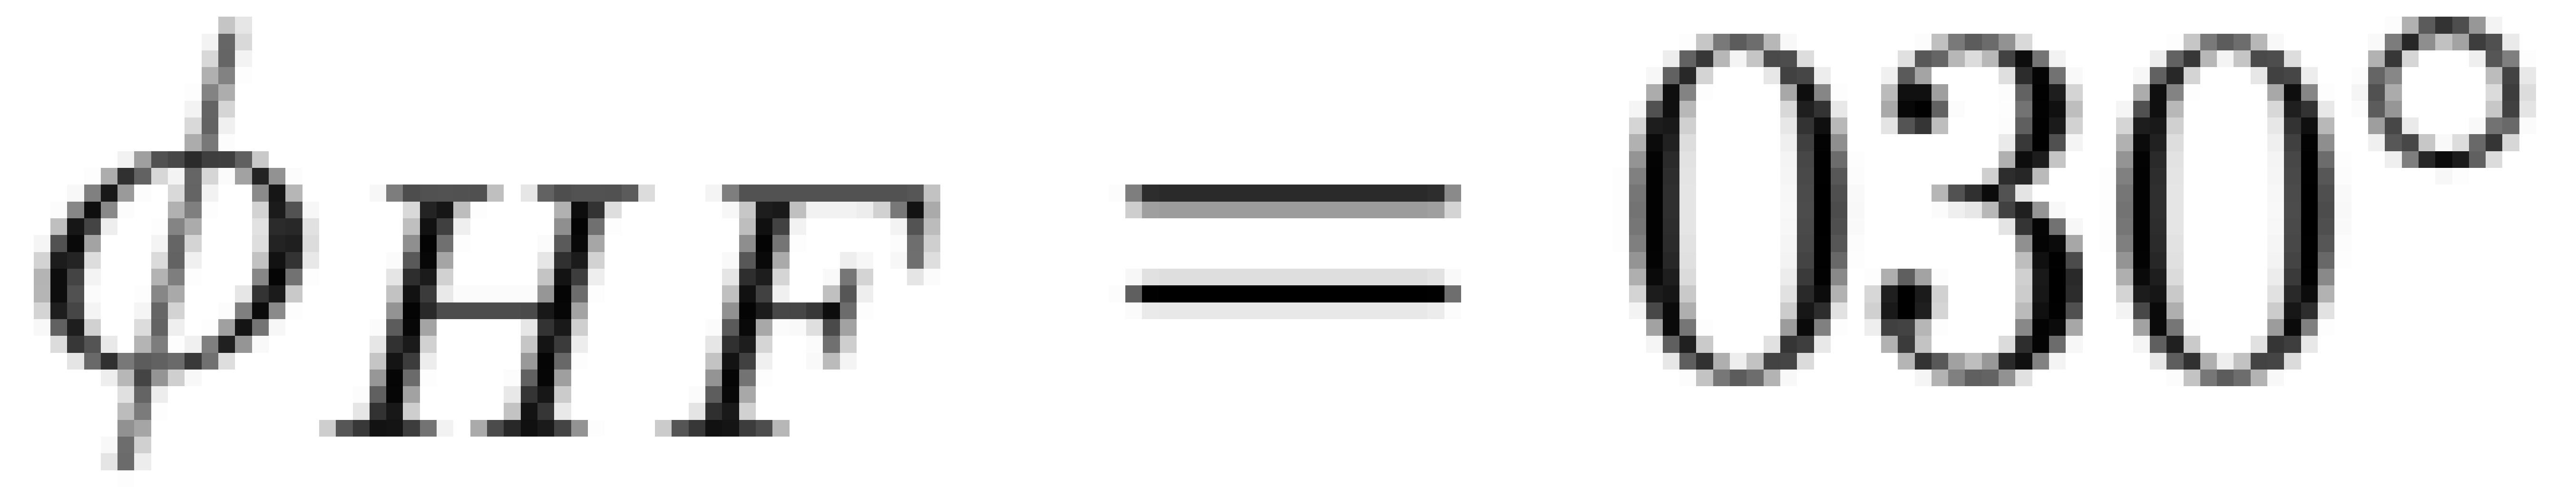











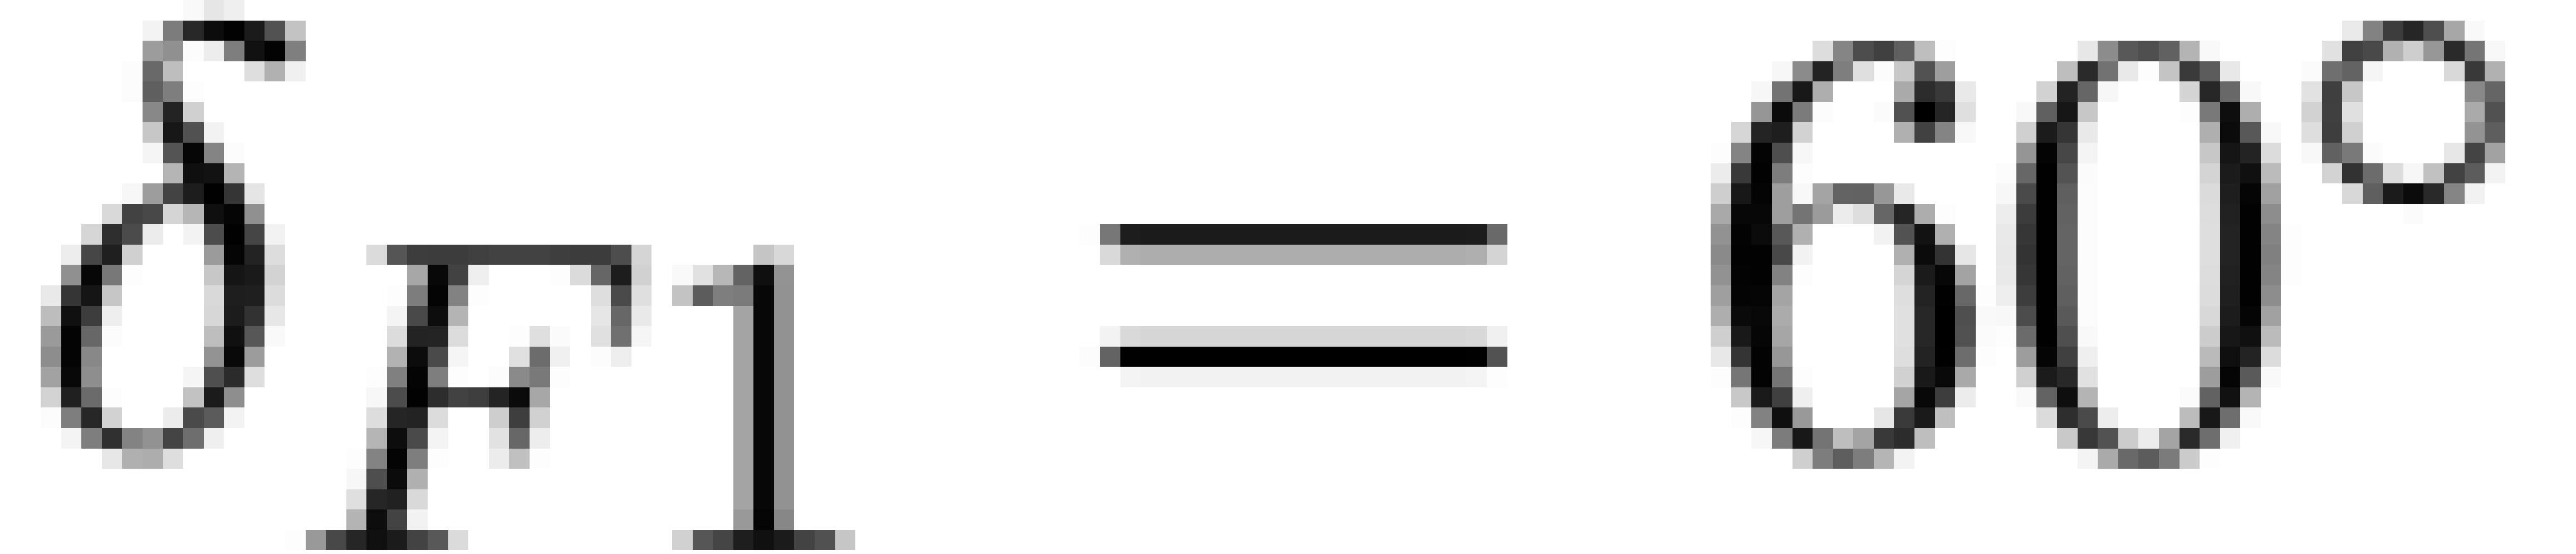


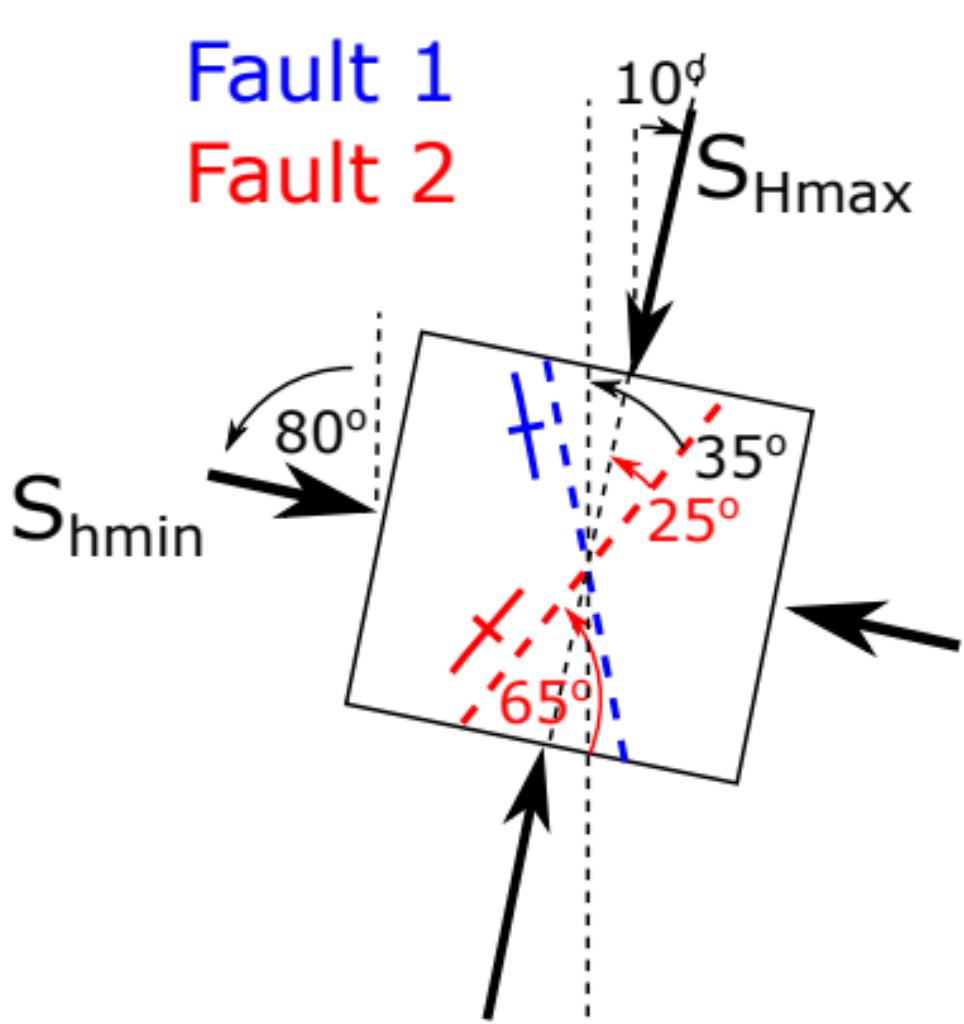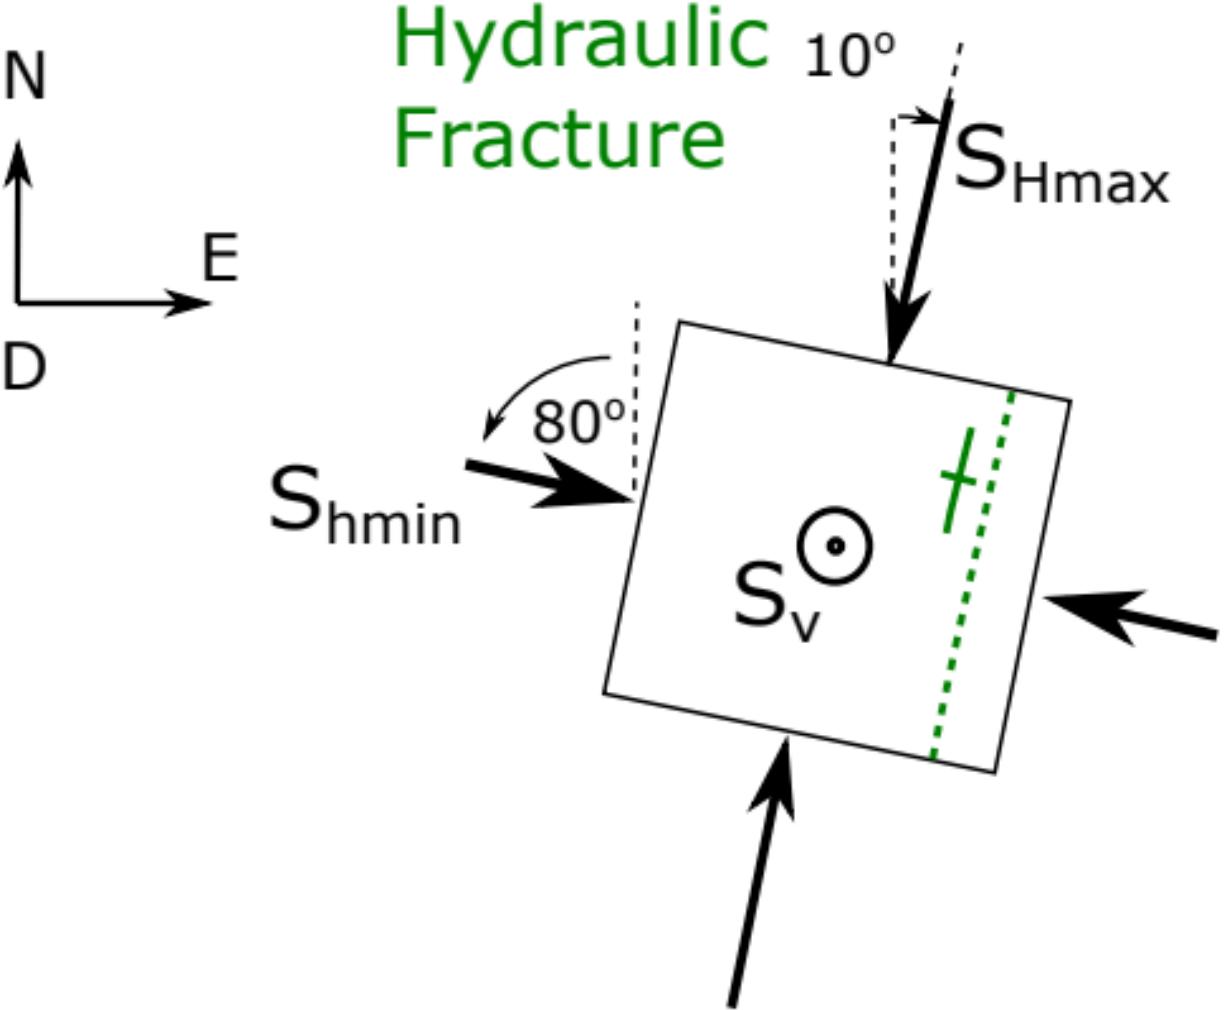

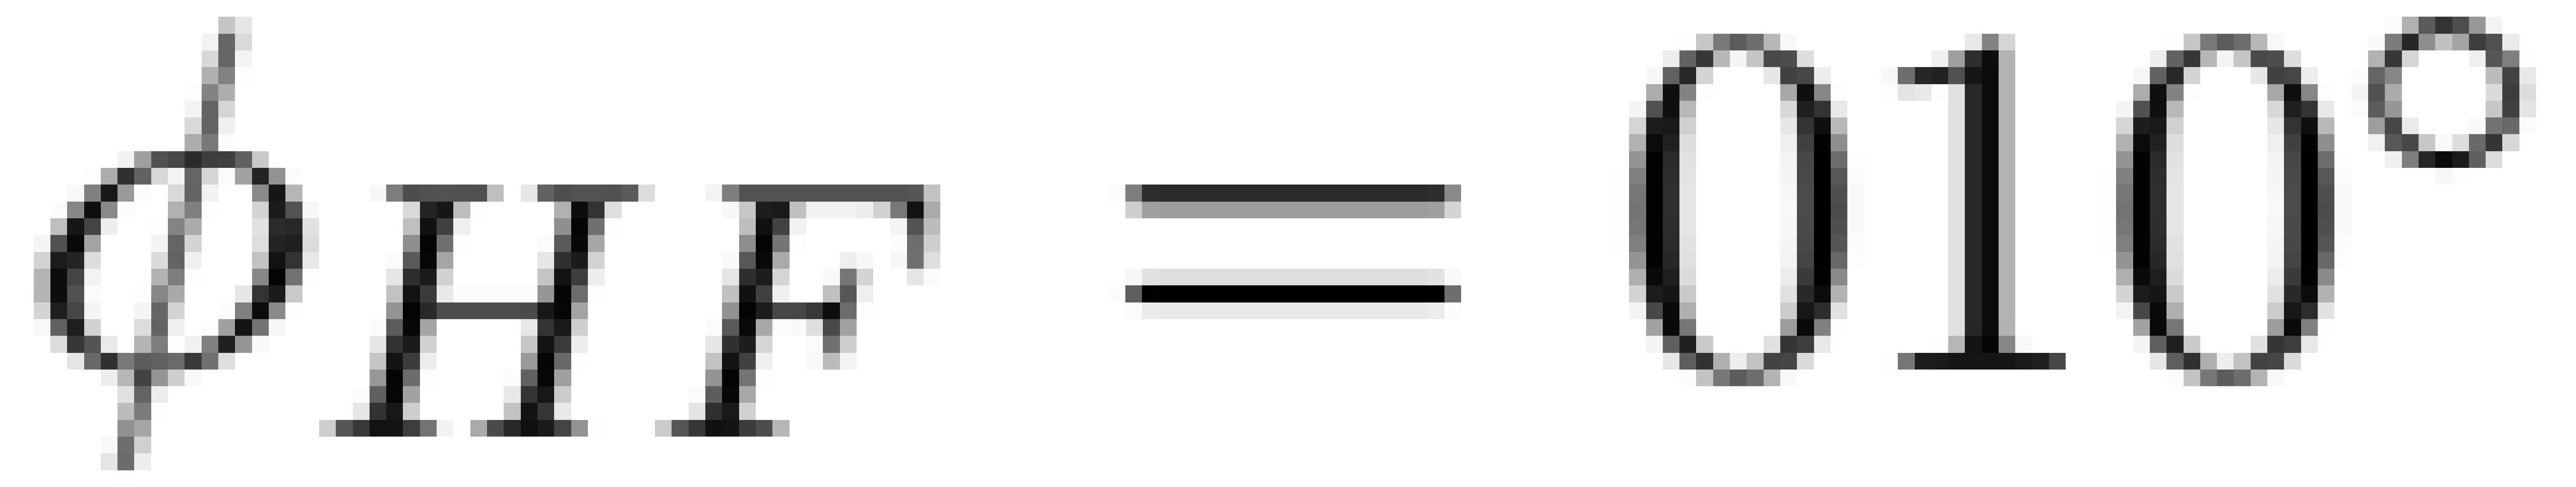






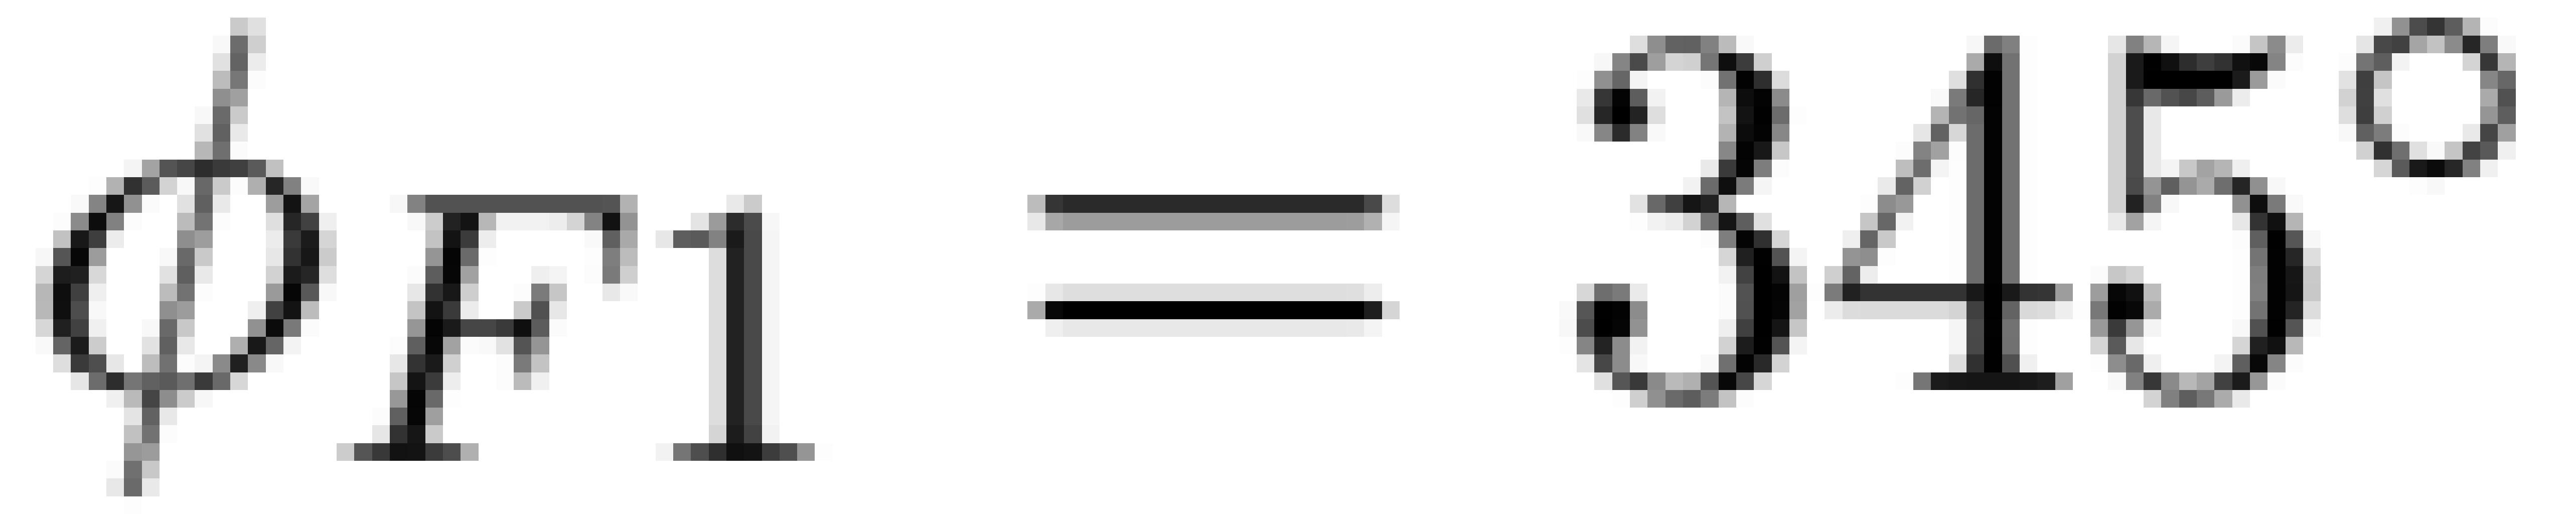


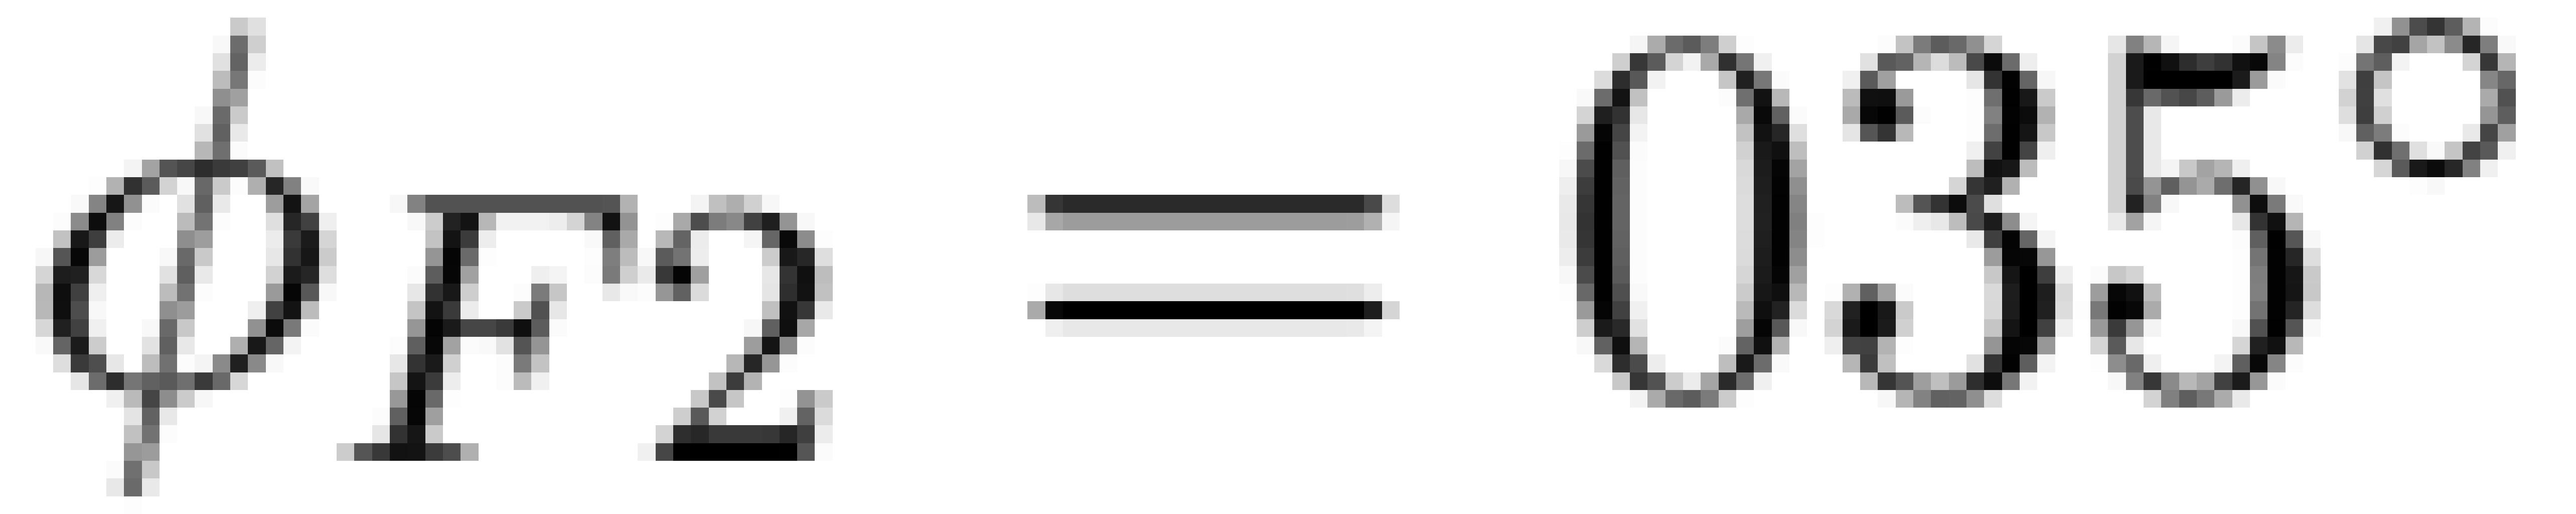




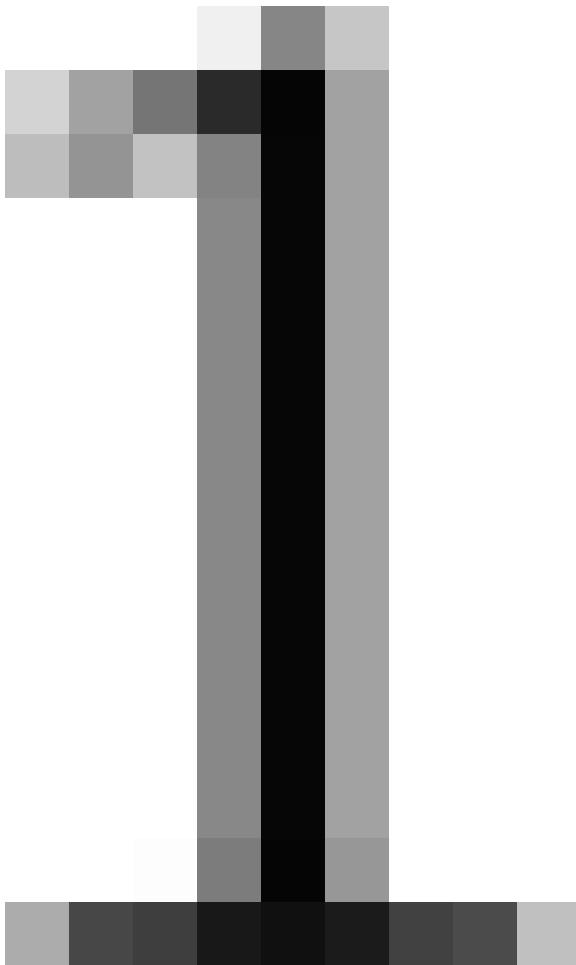










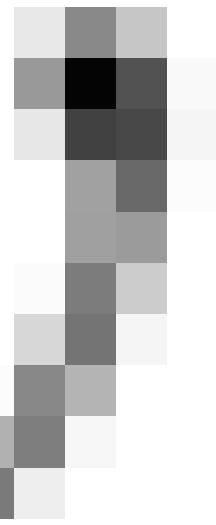
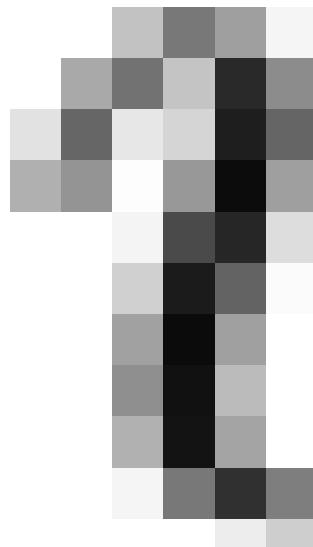
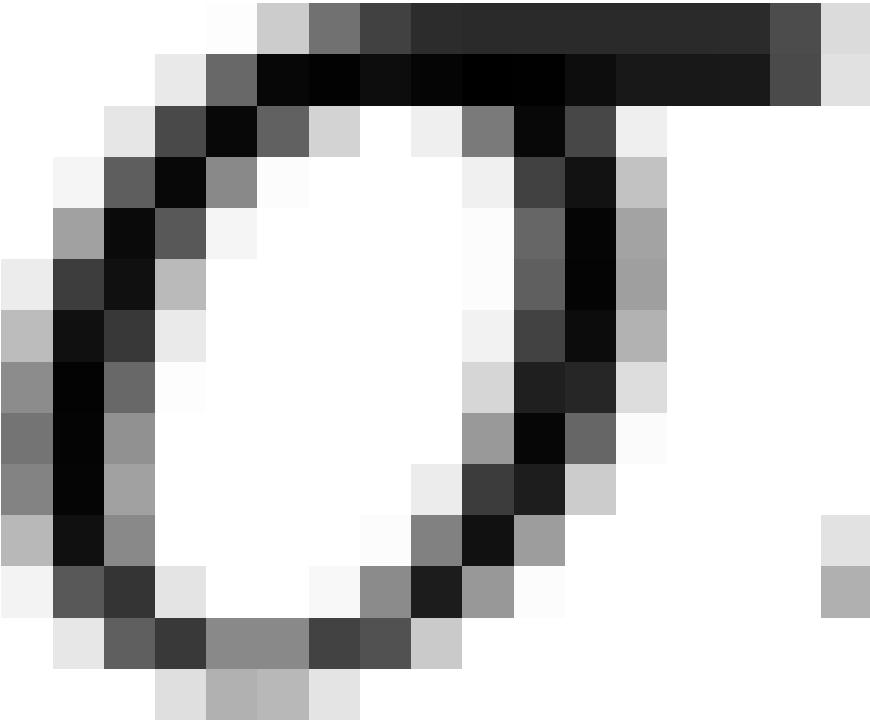







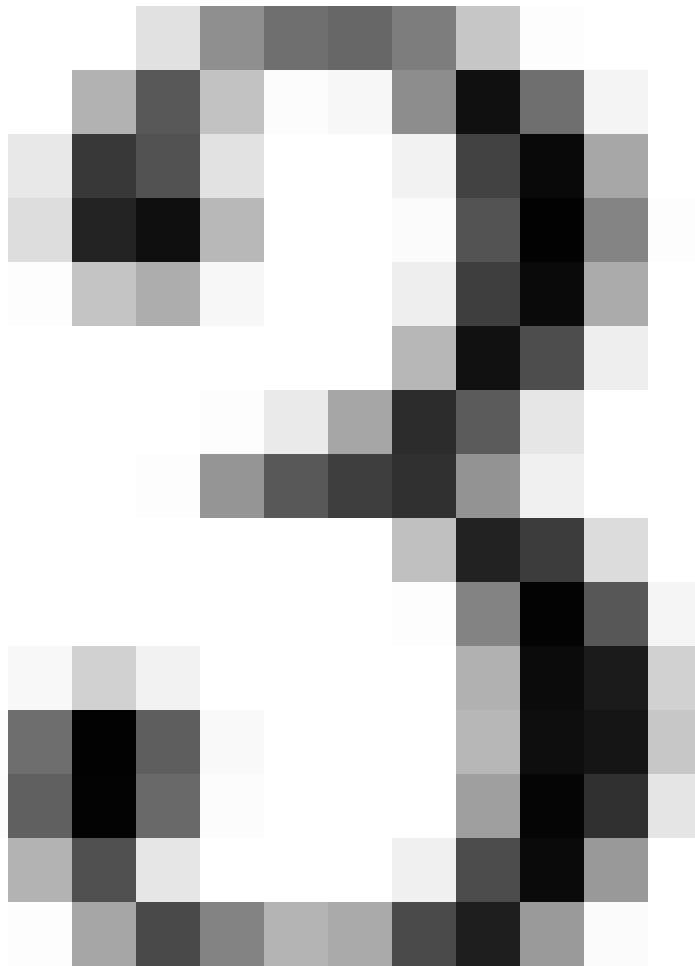




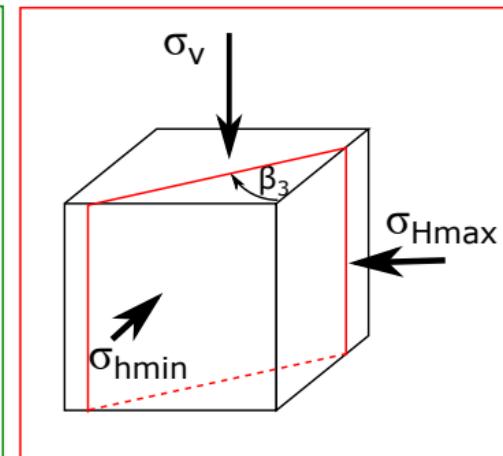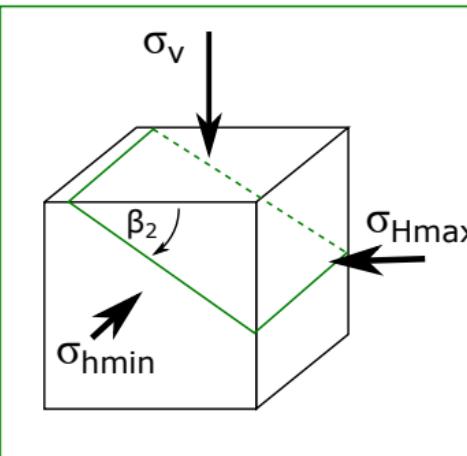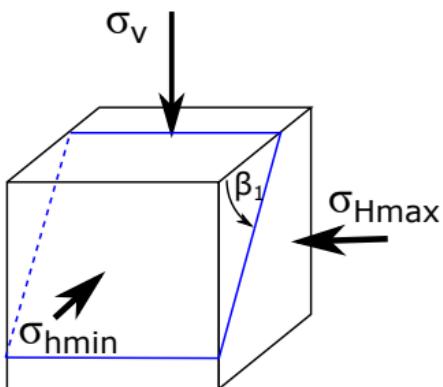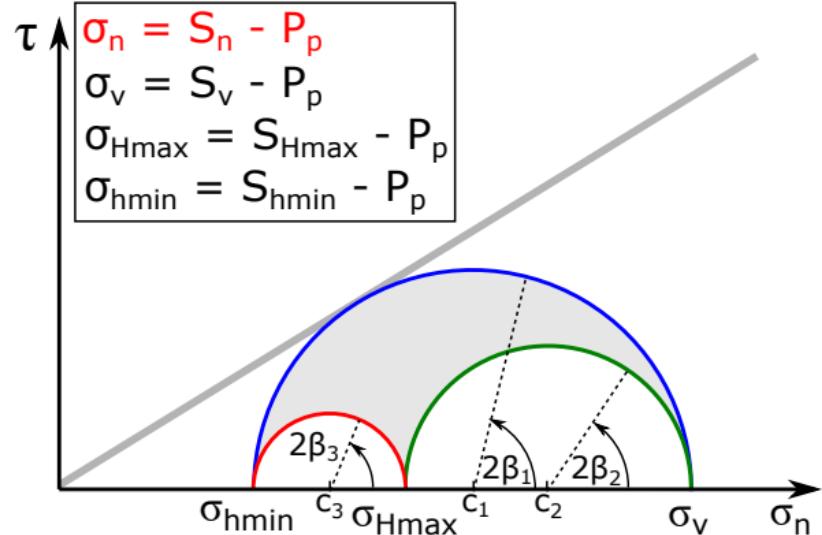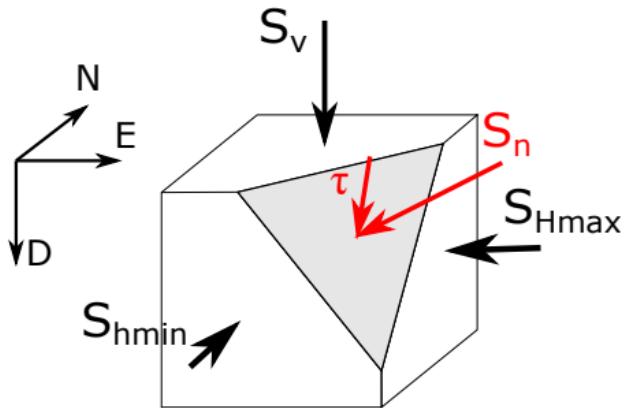


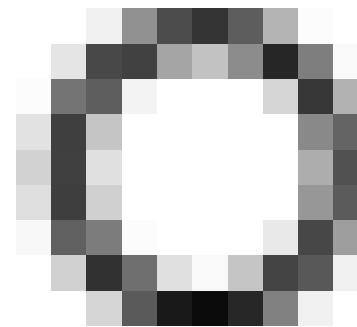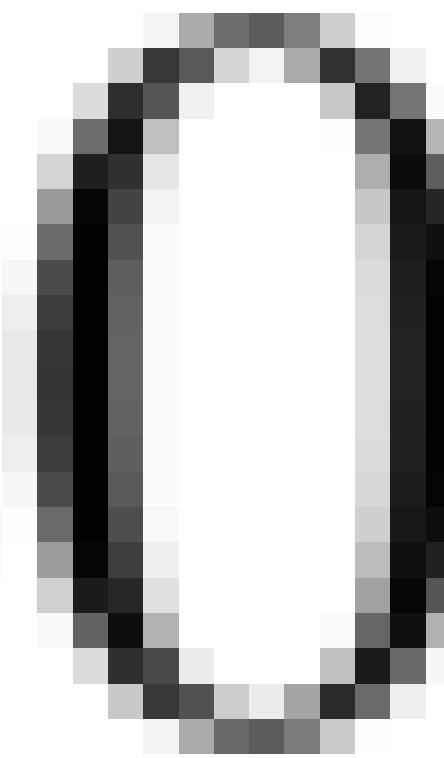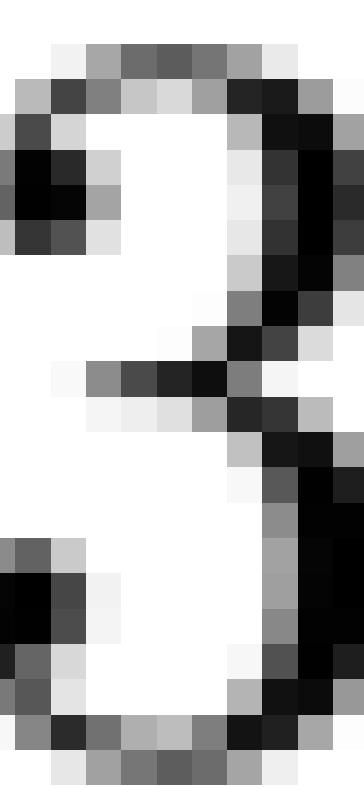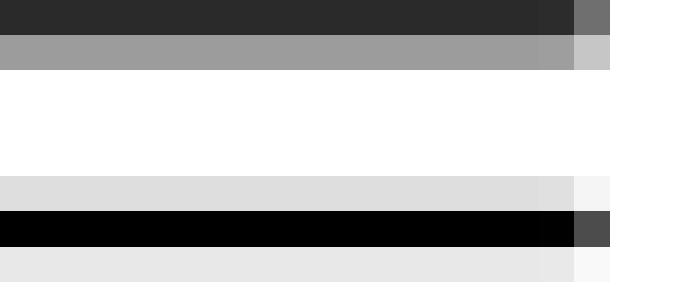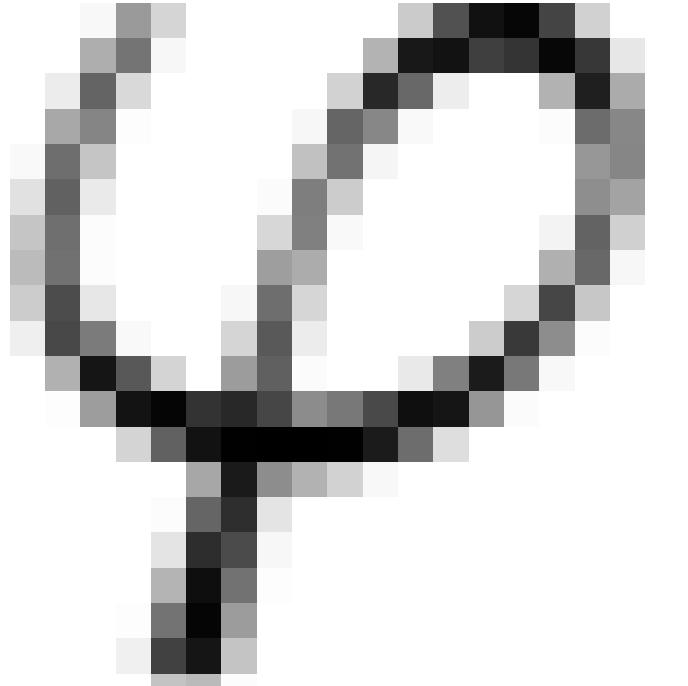

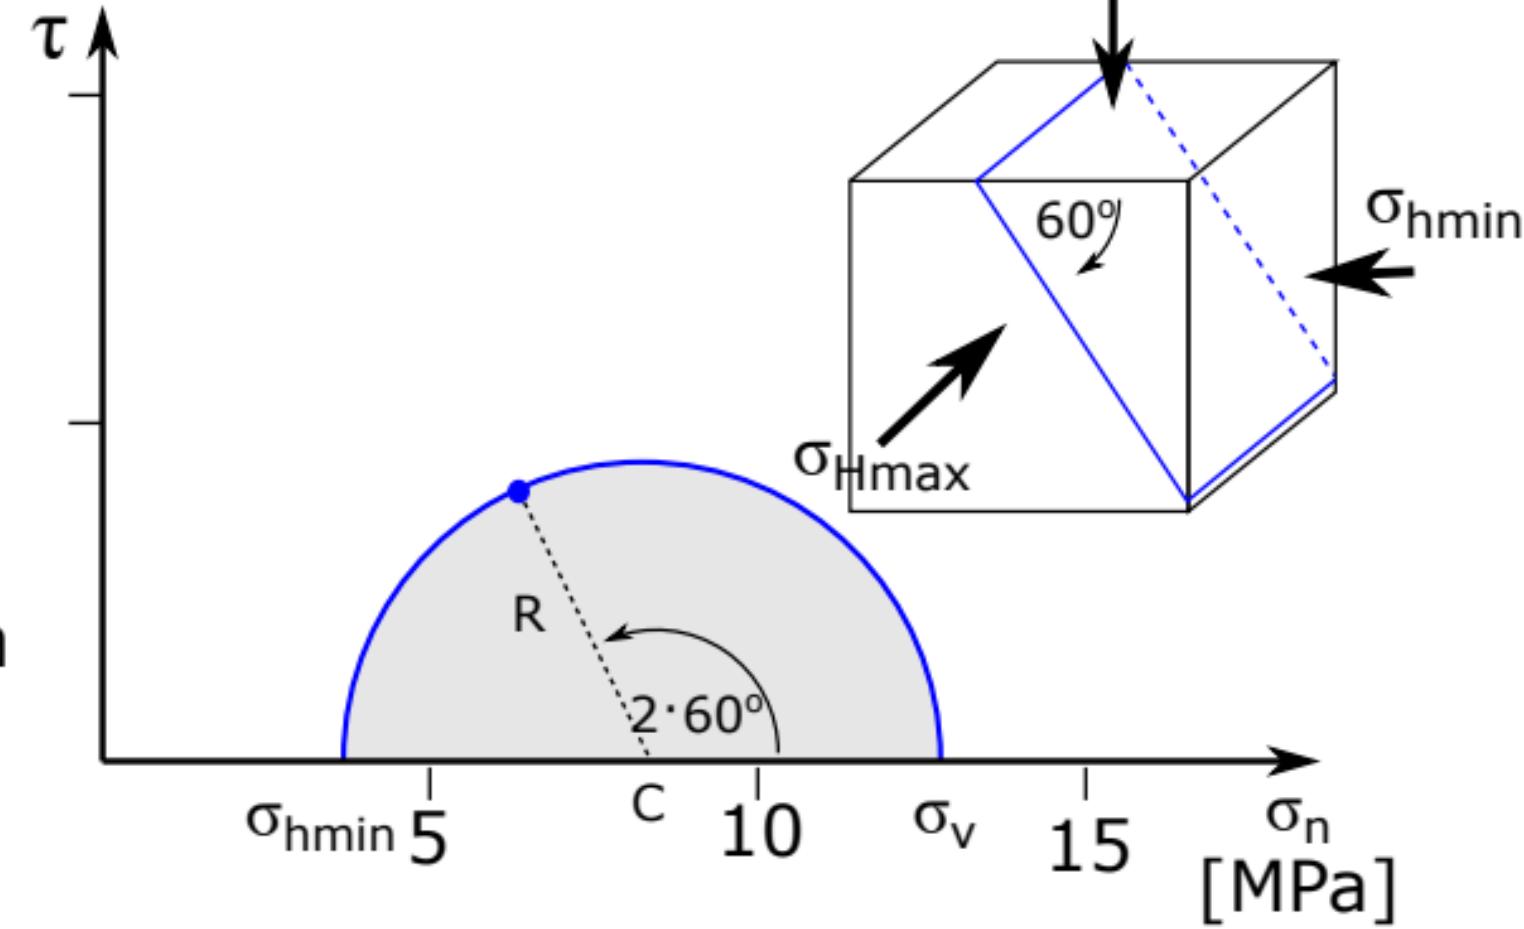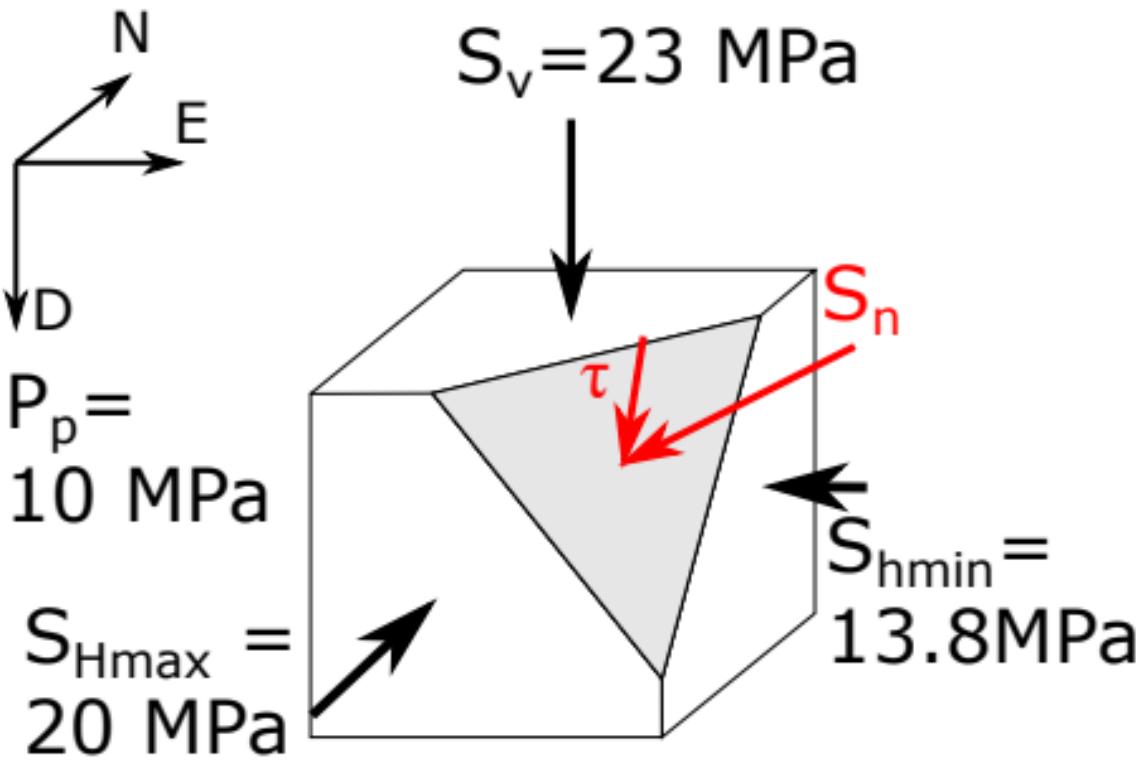

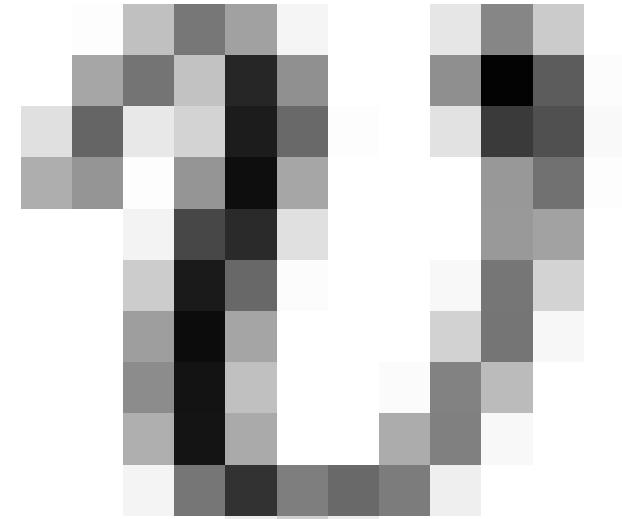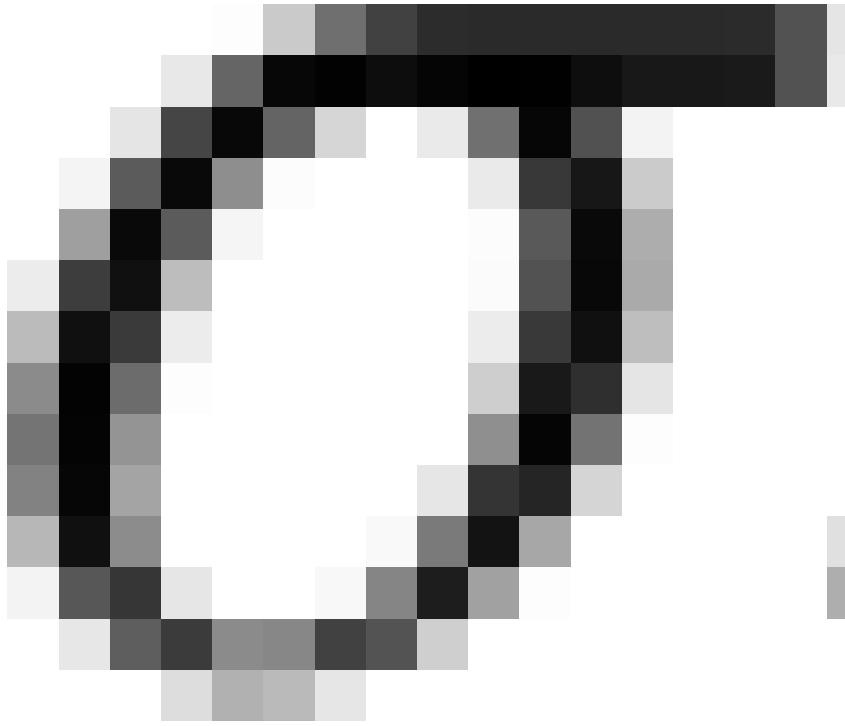





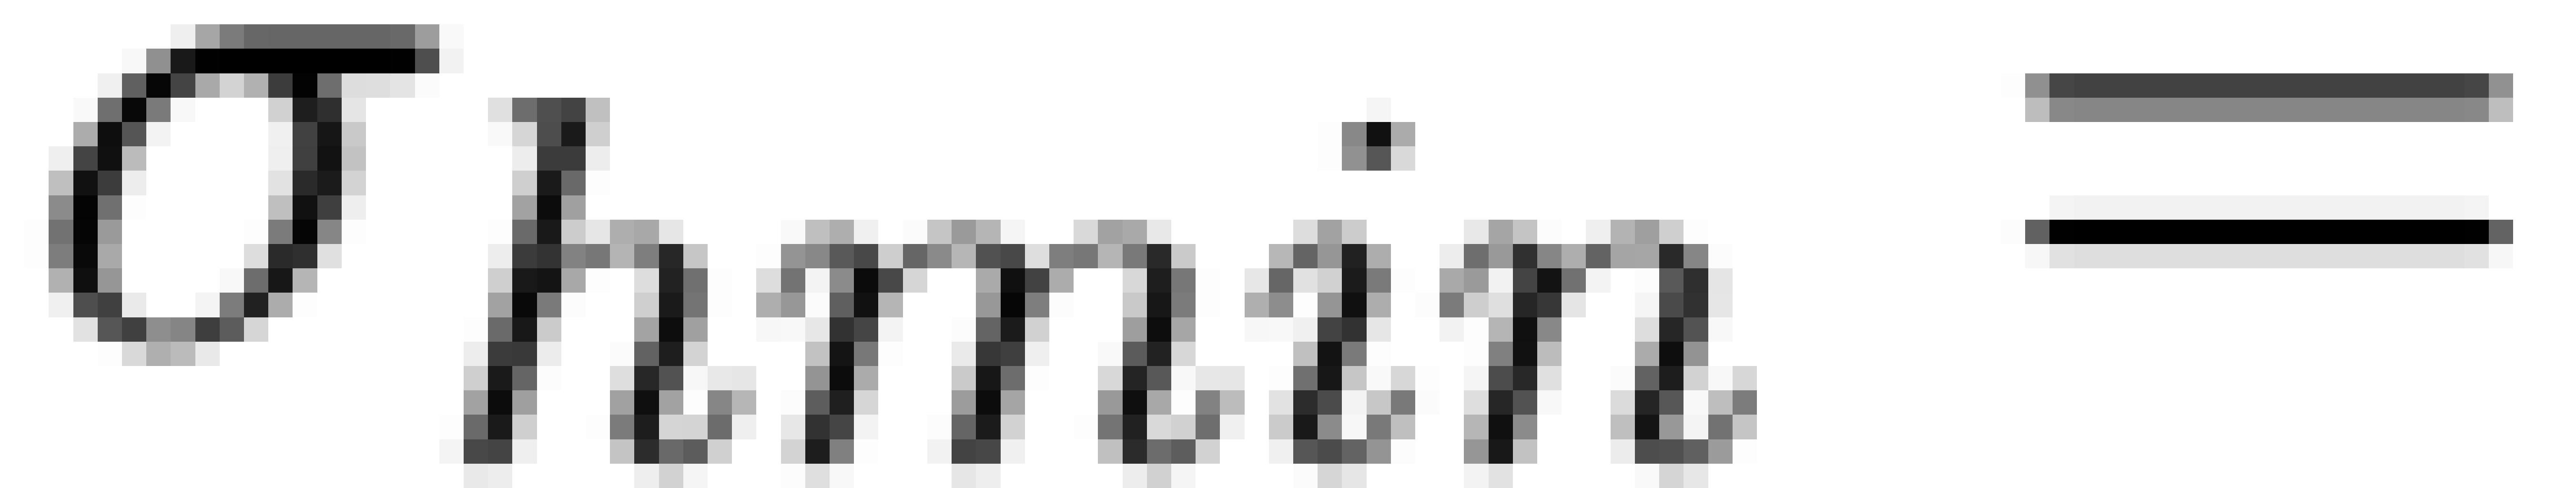

$$\sigma_n = \frac{(13 \text{ MPa} + 3.8 \text{ MPa})}{2} + \frac{(13 \text{ MPa} - 3.8 \text{ MPa}) \cos(2 \cdot 60^\circ)}{2} = 6.1 \text{ MPa}$$

$$\tau = \frac{(13 \text{ MPa} - 3.8 \text{ MPa})}{2} \sin(2 \cdot 60^\circ) = 4.0 \text{ MPa}$$

N $P_p = 15 \text{ MPa}$ $S_v = 30 \text{ MPa}$

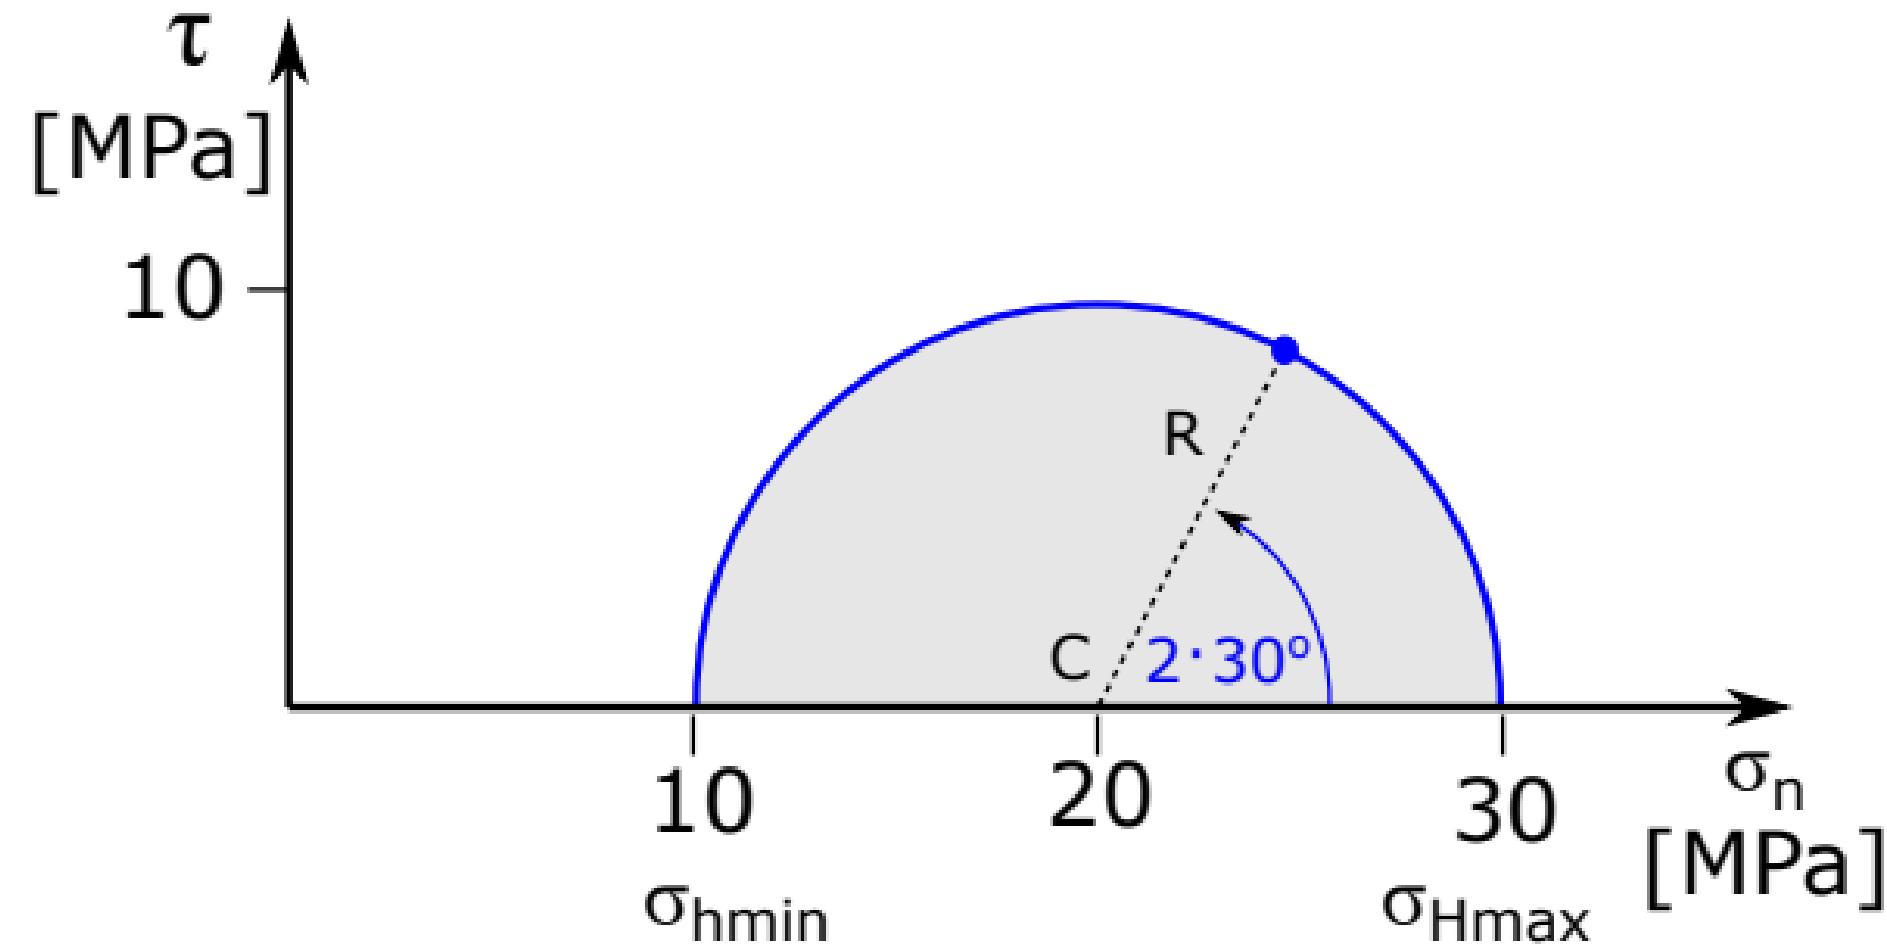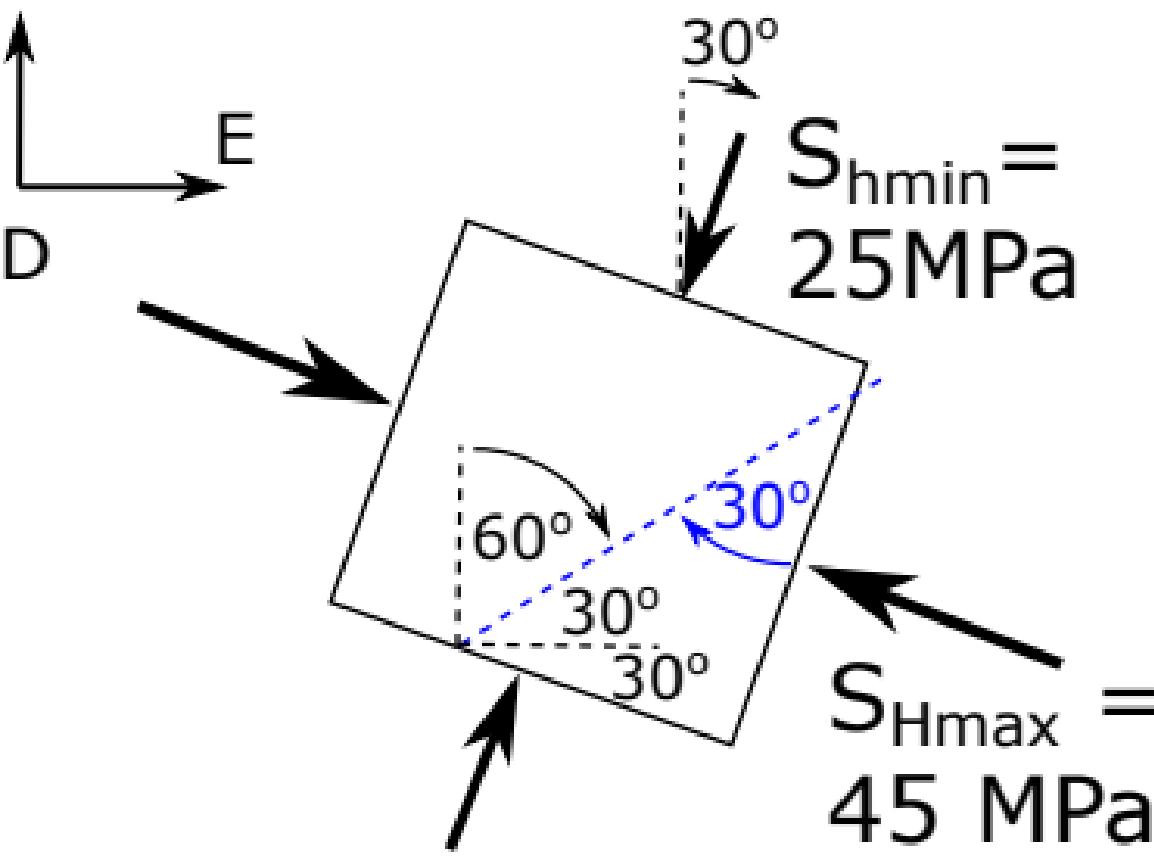


$$\sigma_n = \frac{(30 \text{ MPa} + 10 \text{ MPa})}{2} + \frac{(30 \text{ MPa} - 10 \text{ MPa}) \cos(2 \cdot 30^\circ)}{2} = 25 \text{ MPa}$$

$$\tau = \frac{(30 \text{ MPa} - 10 \text{ MPa})}{2} \sin(2 \cdot 30^\circ) = 8.7 \text{ MPa}$$








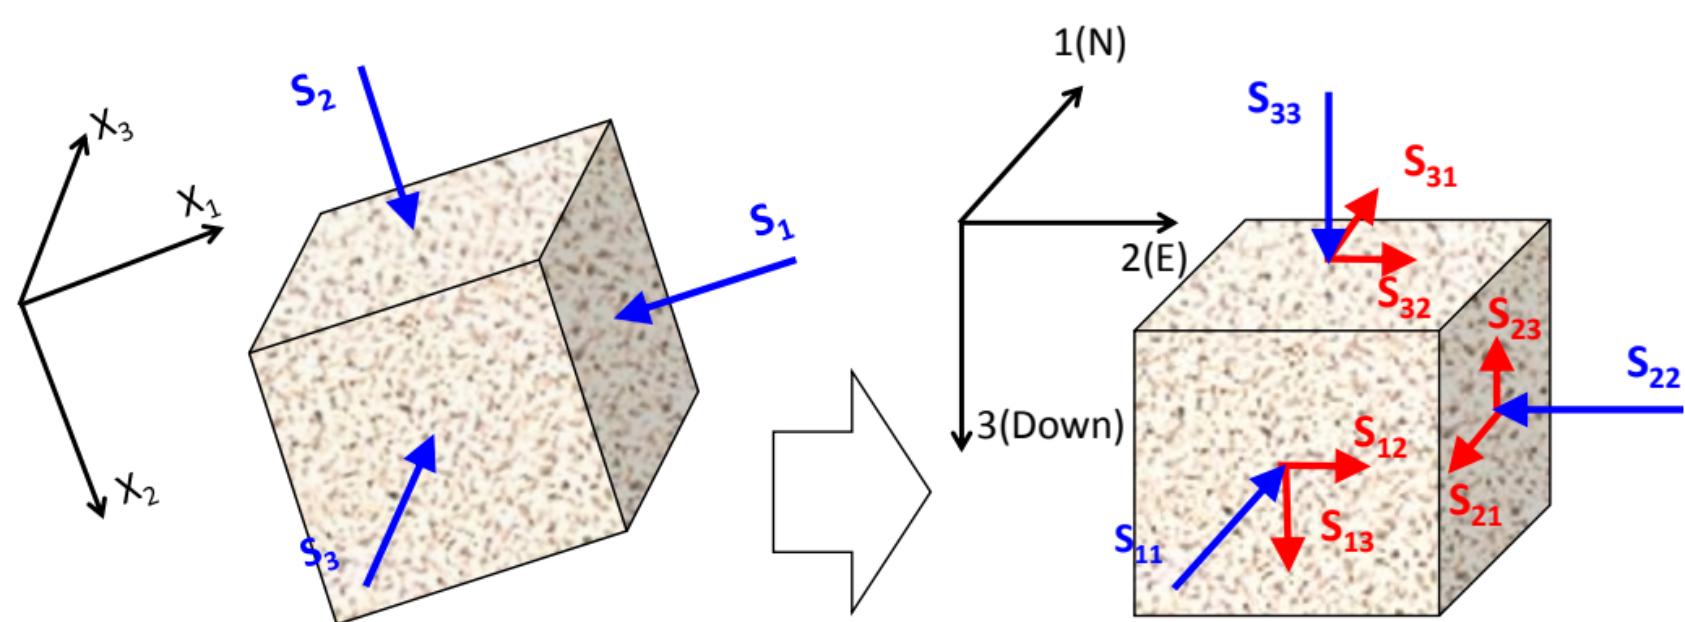

$$S_P = \begin{bmatrix} S_1 & 0 & 0 \\ 0 & S_2 & 0 \\ 0 & 0 & S_3 \end{bmatrix}$$

$$S_G = \begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$



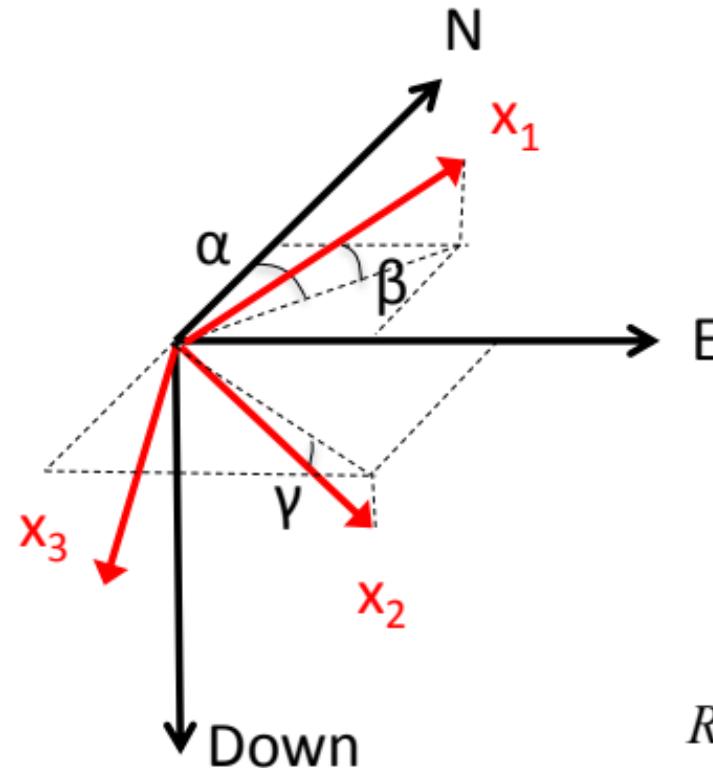

$$\underline{\underline{S}}' = \underline{\underline{A}} \underline{\underline{S}} \underline{\underline{A}}^T$$


$$\underline{\underline{A}} = \begin{bmatrix} \underline{e}'_1 \cdot \underline{e}_1 & \underline{e}'_1 \cdot \underline{e}_2 & \underline{e}'_1 \cdot \underline{e}_3 \\ \underline{e}'_2 \cdot \underline{e}_1 & \underline{e}'_2 \cdot \underline{e}_2 & \underline{e}'_2 \cdot \underline{e}_3 \\ \underline{e}'_3 \cdot \underline{e}_1 & \underline{e}'_3 \cdot \underline{e}_2 & \underline{e}'_3 \cdot \underline{e}_3 \end{bmatrix}$$


where $\underline{\underline{A}}$ is the transformation matrix from the old base \underline{e}_i to base \underline{e}'_i and the components are the projection of the elements of the new base on the old base.

- Old system: N-E-D (Right-handed) Geographical system
- New system: 1-2-3 (Right-handed) Principal stress system

$$R_{PG} = \begin{bmatrix} \cos \alpha \cos b & \sin \alpha \cos b & -\sin b \\ \cos \alpha \sin b \sin g - \sin \alpha \cos g & \sin \alpha \sin b \sin g + \cos \alpha \cos g & \cos b \sin g \\ \cos \alpha \sin b \cos g + \sin \alpha \sin g & \sin \alpha \sin b \cos g - \cos \alpha \sin g & \cos b \cos g \end{bmatrix}$$

$$R_{PG} = \begin{bmatrix} \cos \alpha \cos \beta & \sin \alpha \cos \beta \\ \cos \alpha \sin \beta \sin \gamma - \sin \alpha \cos \gamma & \sin \alpha \sin \beta \sin \gamma + \cos \alpha \cos \gamma \\ \cos \alpha \sin \beta \cos \gamma + \sin \alpha \sin \gamma & \sin \alpha \sin \beta \cos \gamma - \cos \alpha \sin \gamma \end{bmatrix}$$

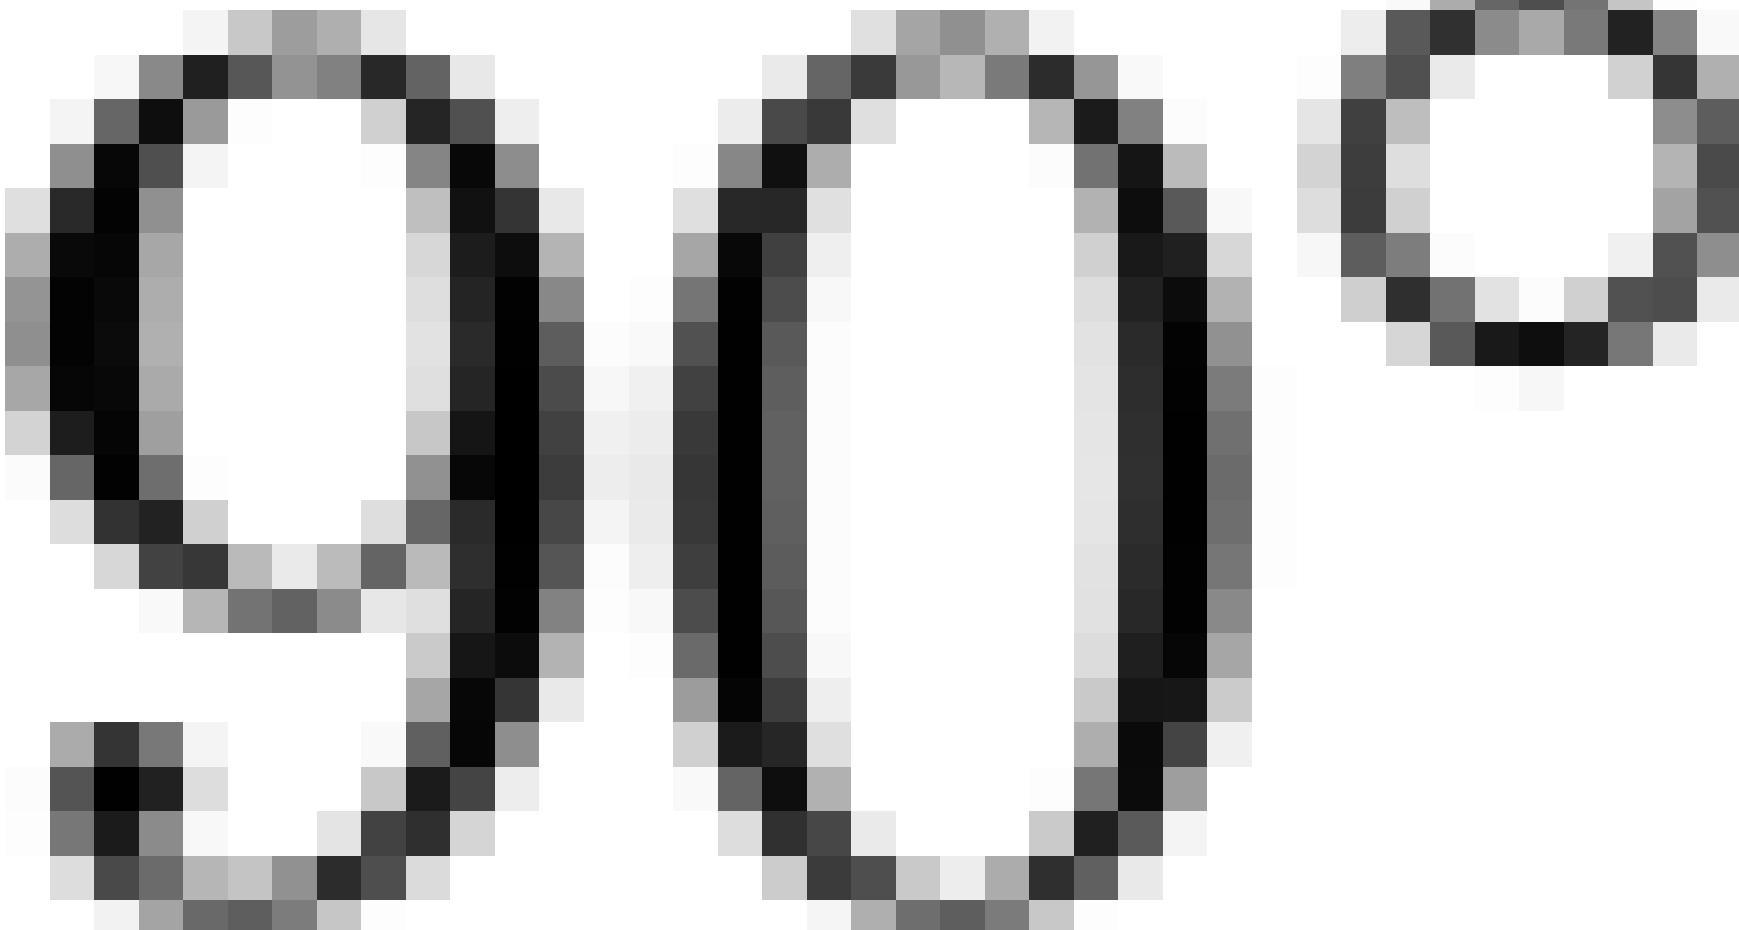

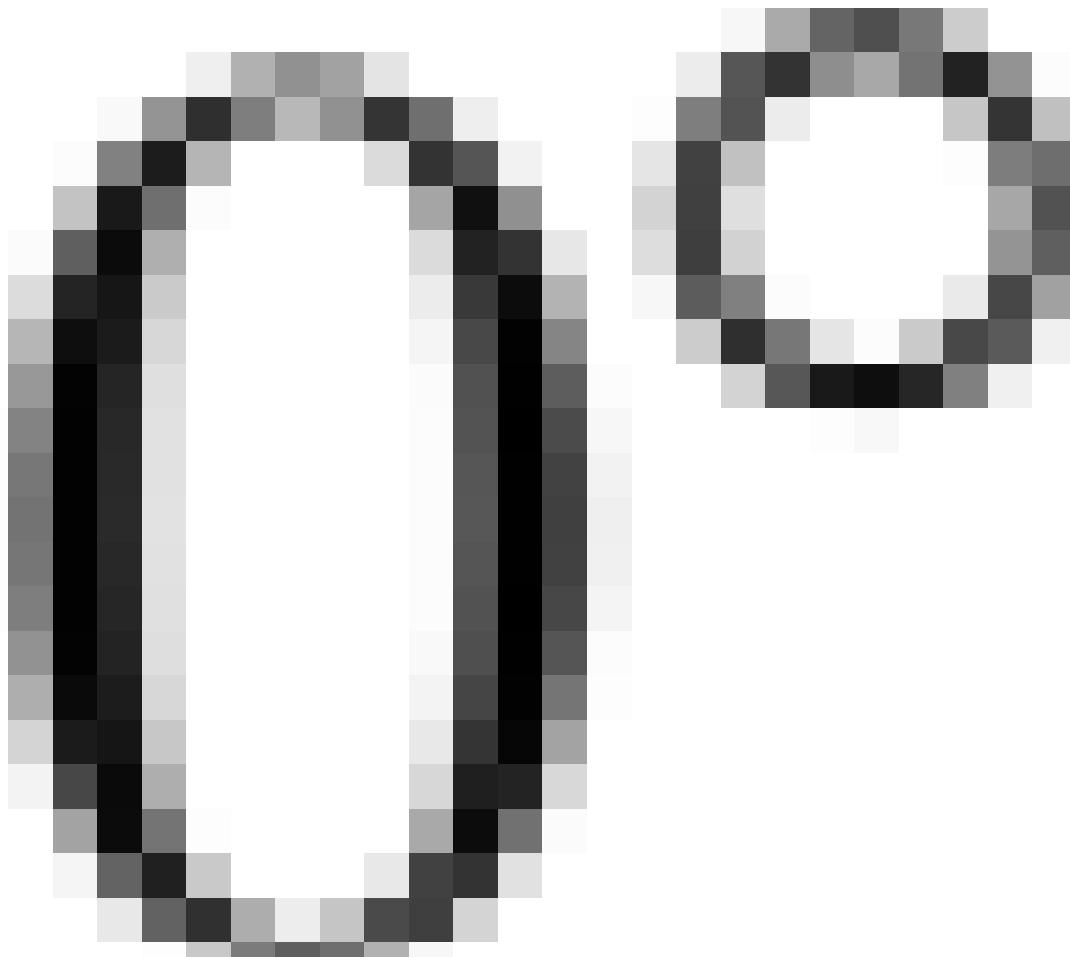



SP

GT

SP

SP


SP


SP

SP

SP







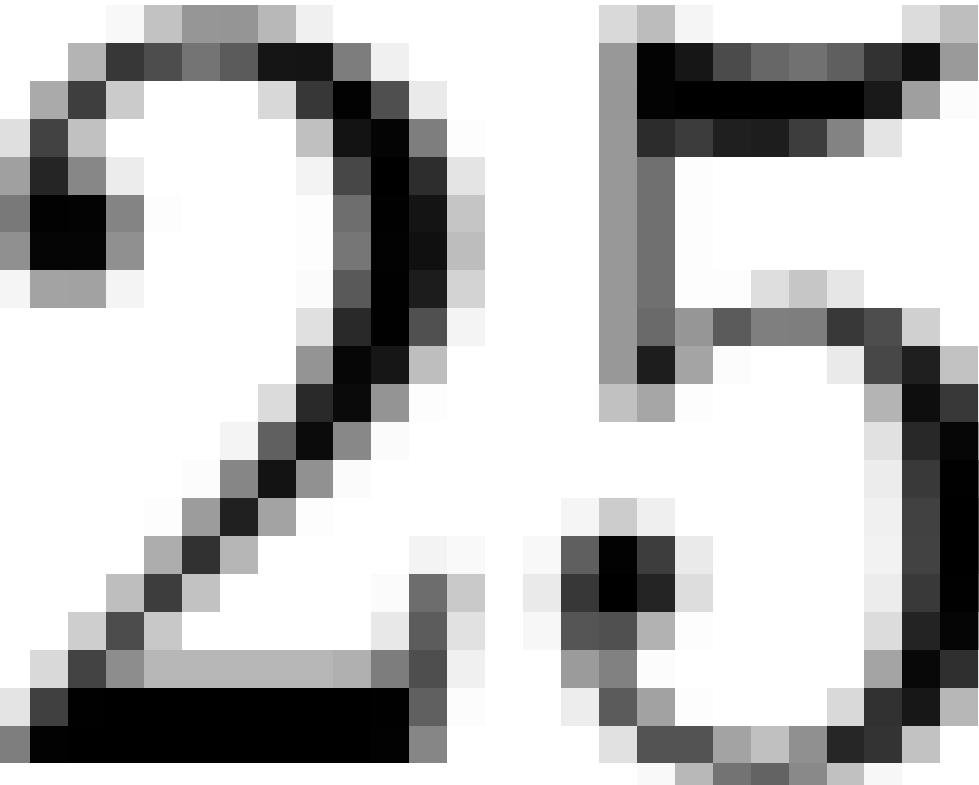


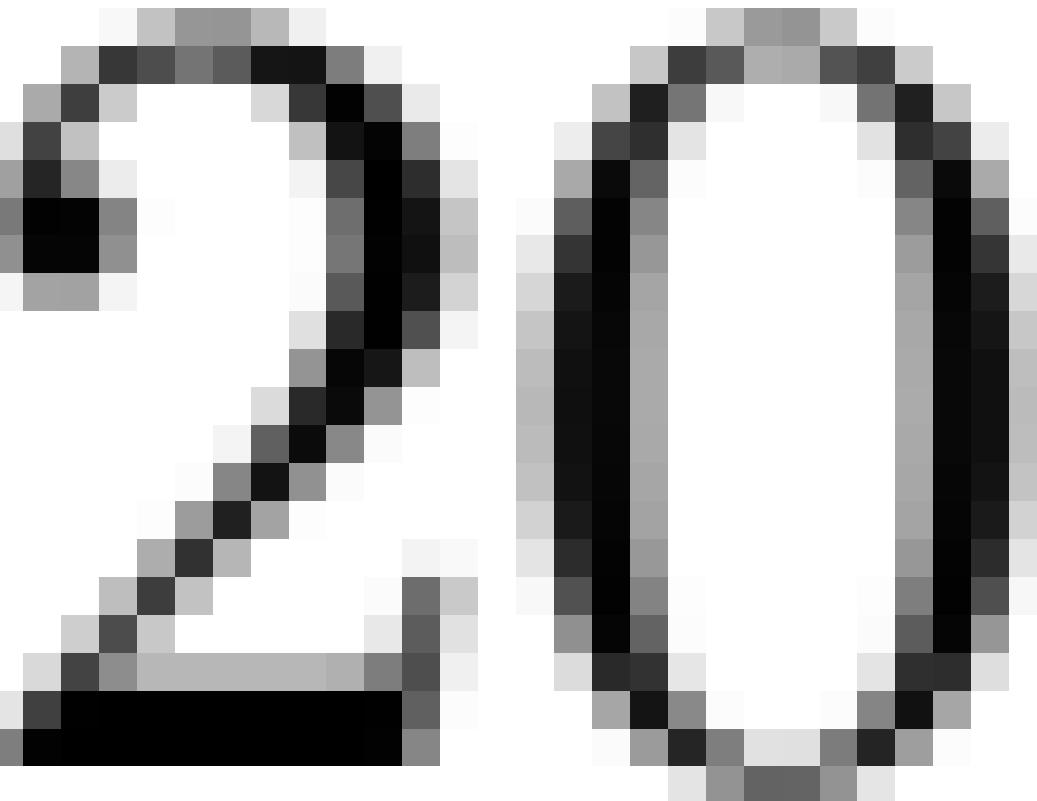

$$\underline{\underline{S}}_P =$$

$$\begin{bmatrix} 30 & 0 & 0 \\ 0 & 25 & 0 \\ 0 & 0 & 20 \end{bmatrix}$$

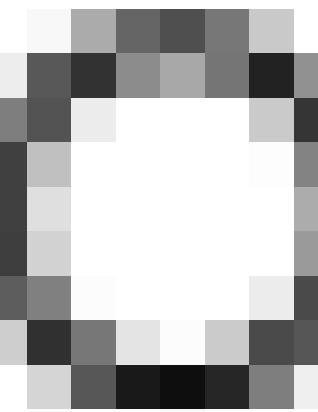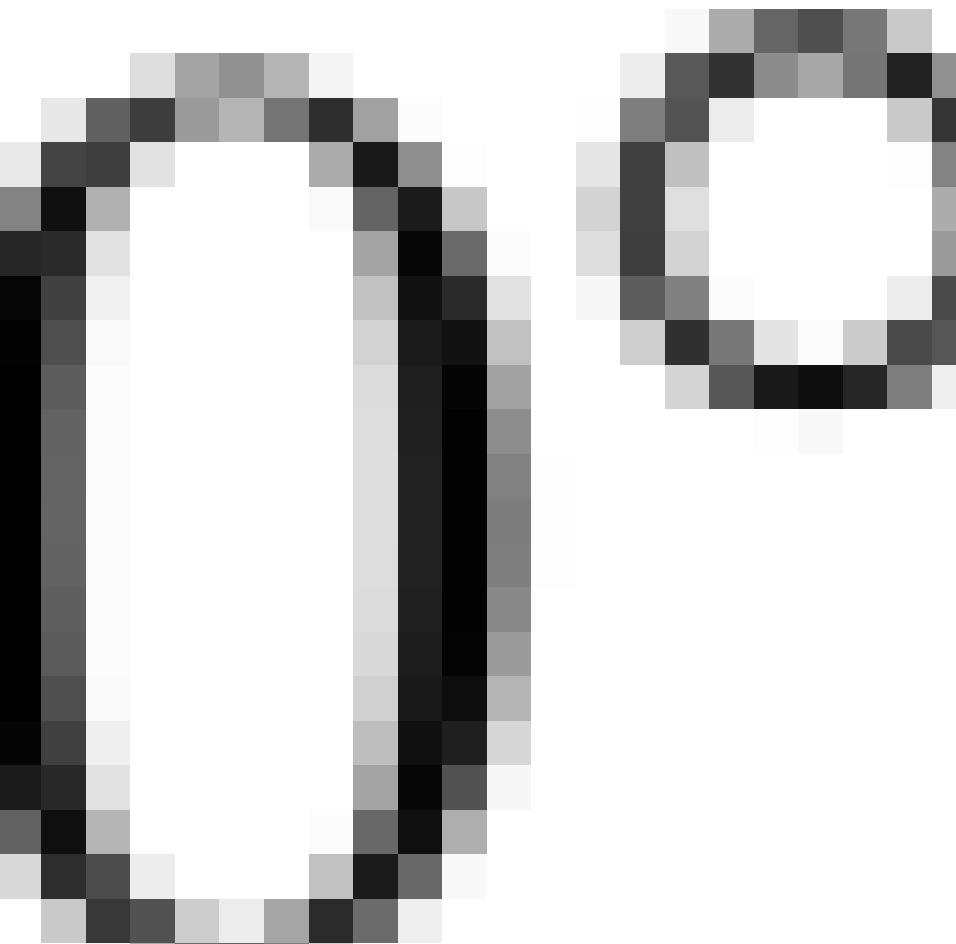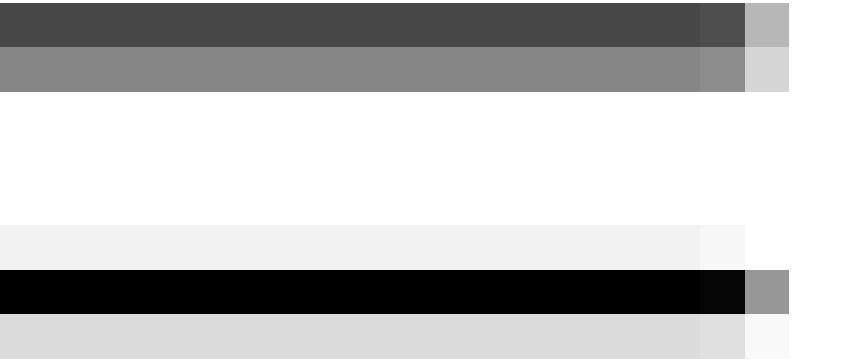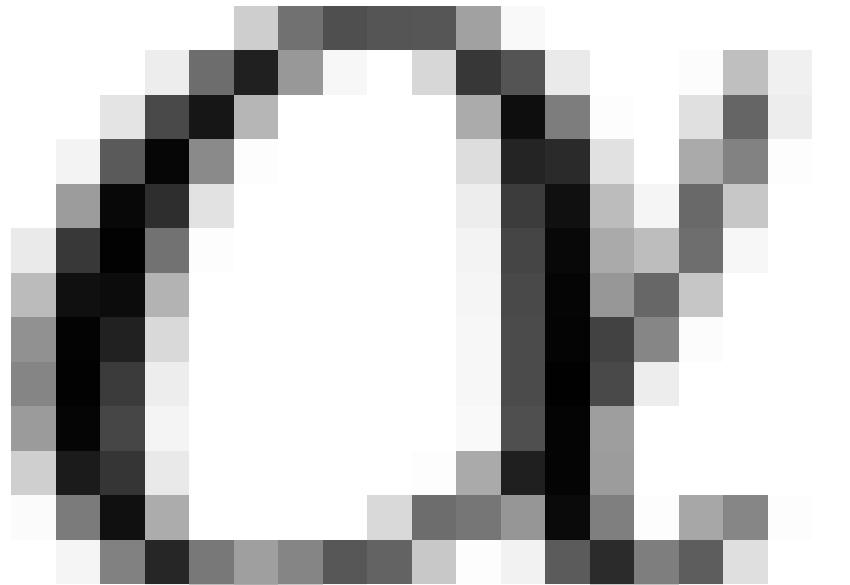

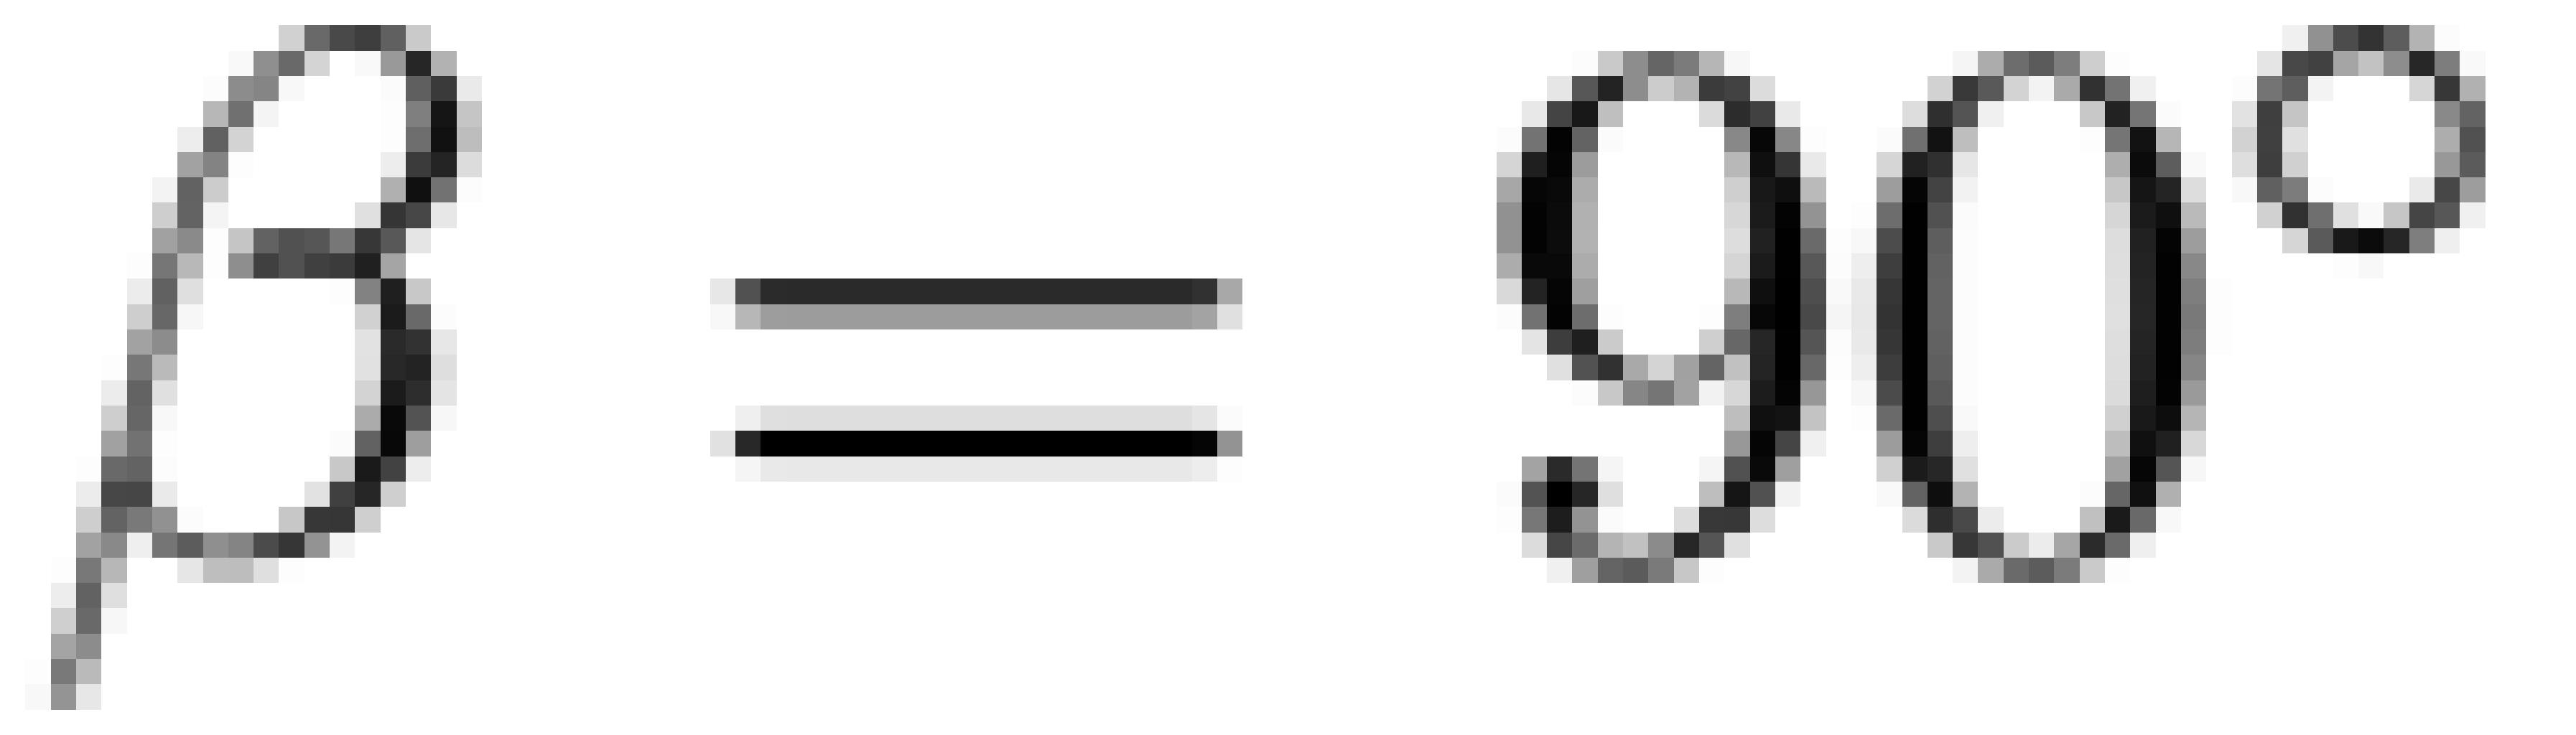





$$R_{PG} =$$

$$\begin{bmatrix} 0 & 0 & -1 \\ 0 & 1 & 0 \\ 1 & 0 & 0 \end{bmatrix}$$

$$\underline{S}_G = \begin{bmatrix} 0 & 0 & -1 \\ 0 & 10 & 5 \\ 1 & 0 & 0 \end{bmatrix}^T \begin{bmatrix} 30 & 0 & 0 \\ 0 & 25 & 0 \\ 0 & 1 & 0 \end{bmatrix} = \begin{bmatrix} 20 & 0 & 0 \\ 0 & 25 & 0 \\ 1 & 0 & 30 \end{bmatrix}$$

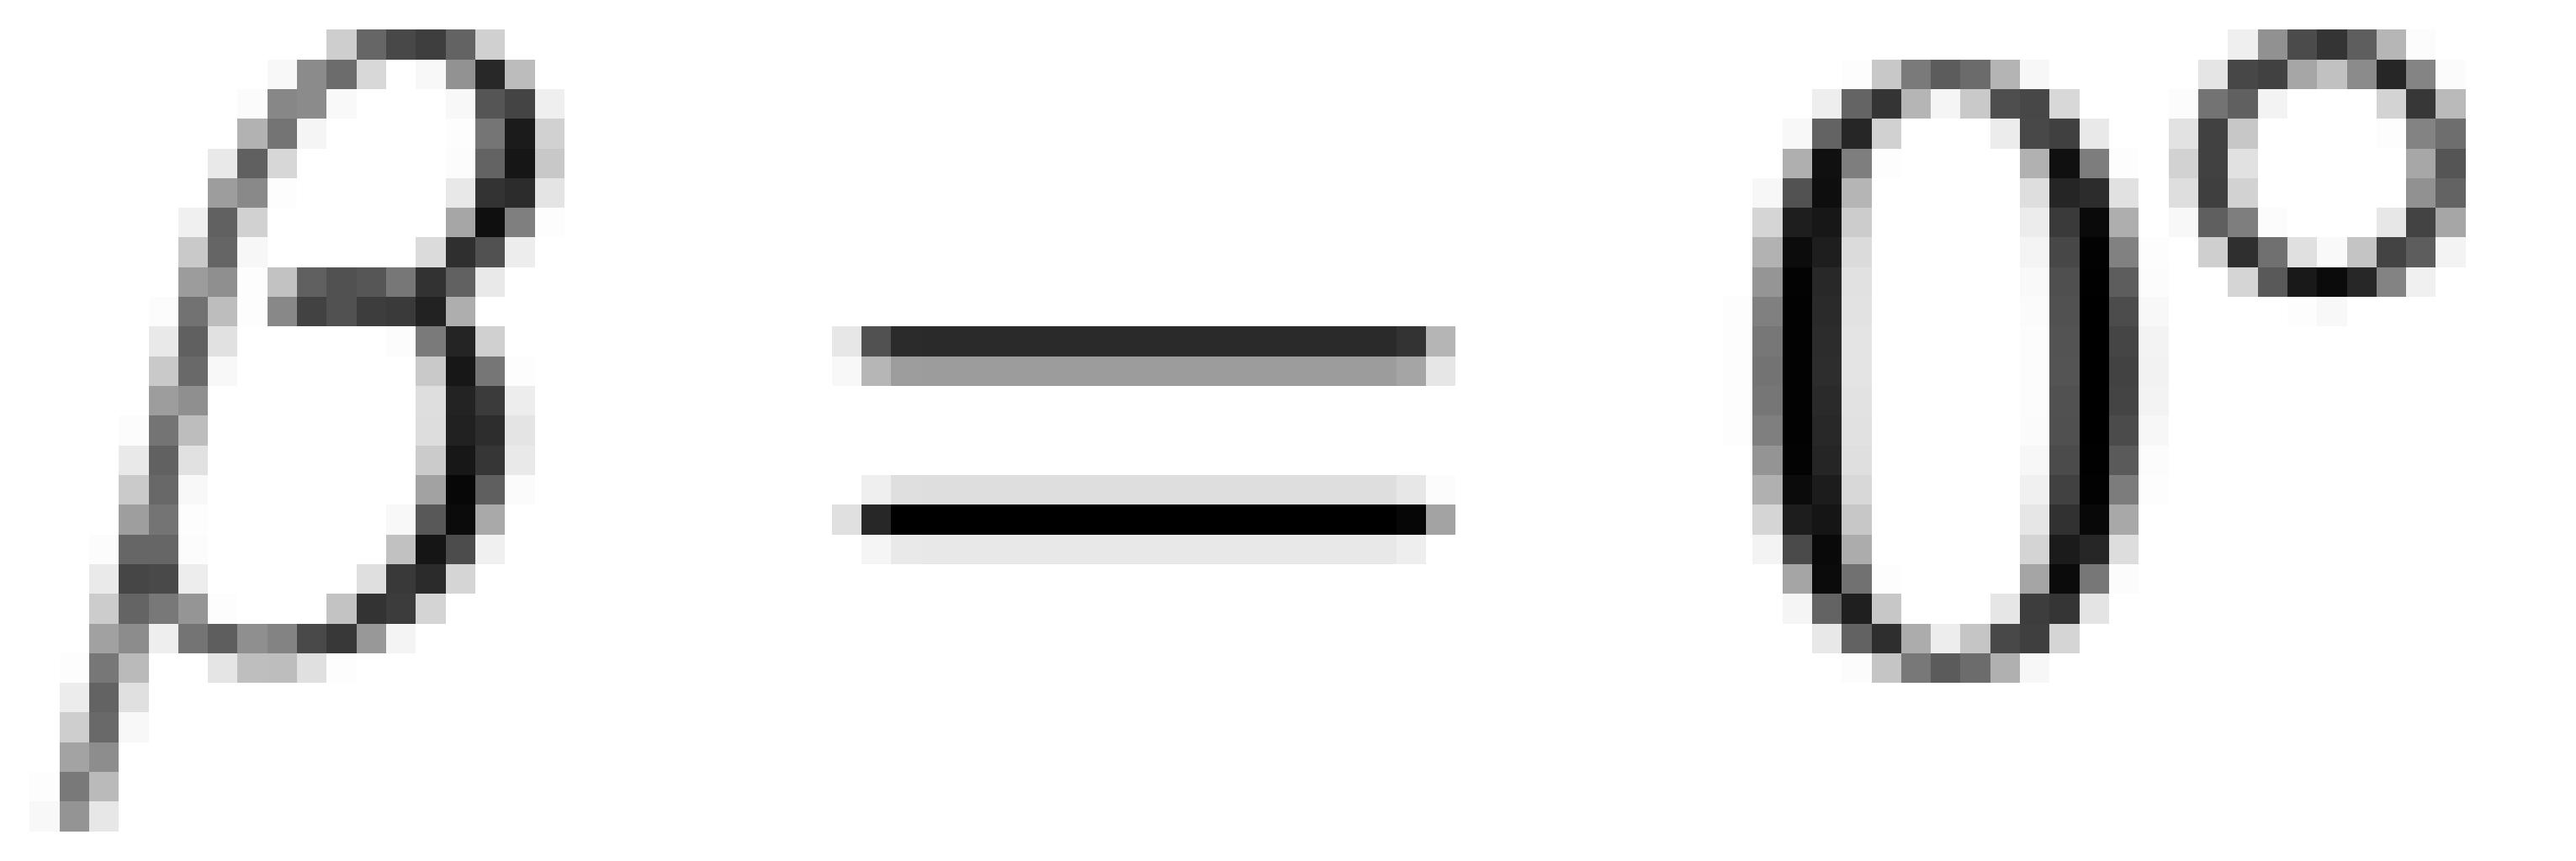


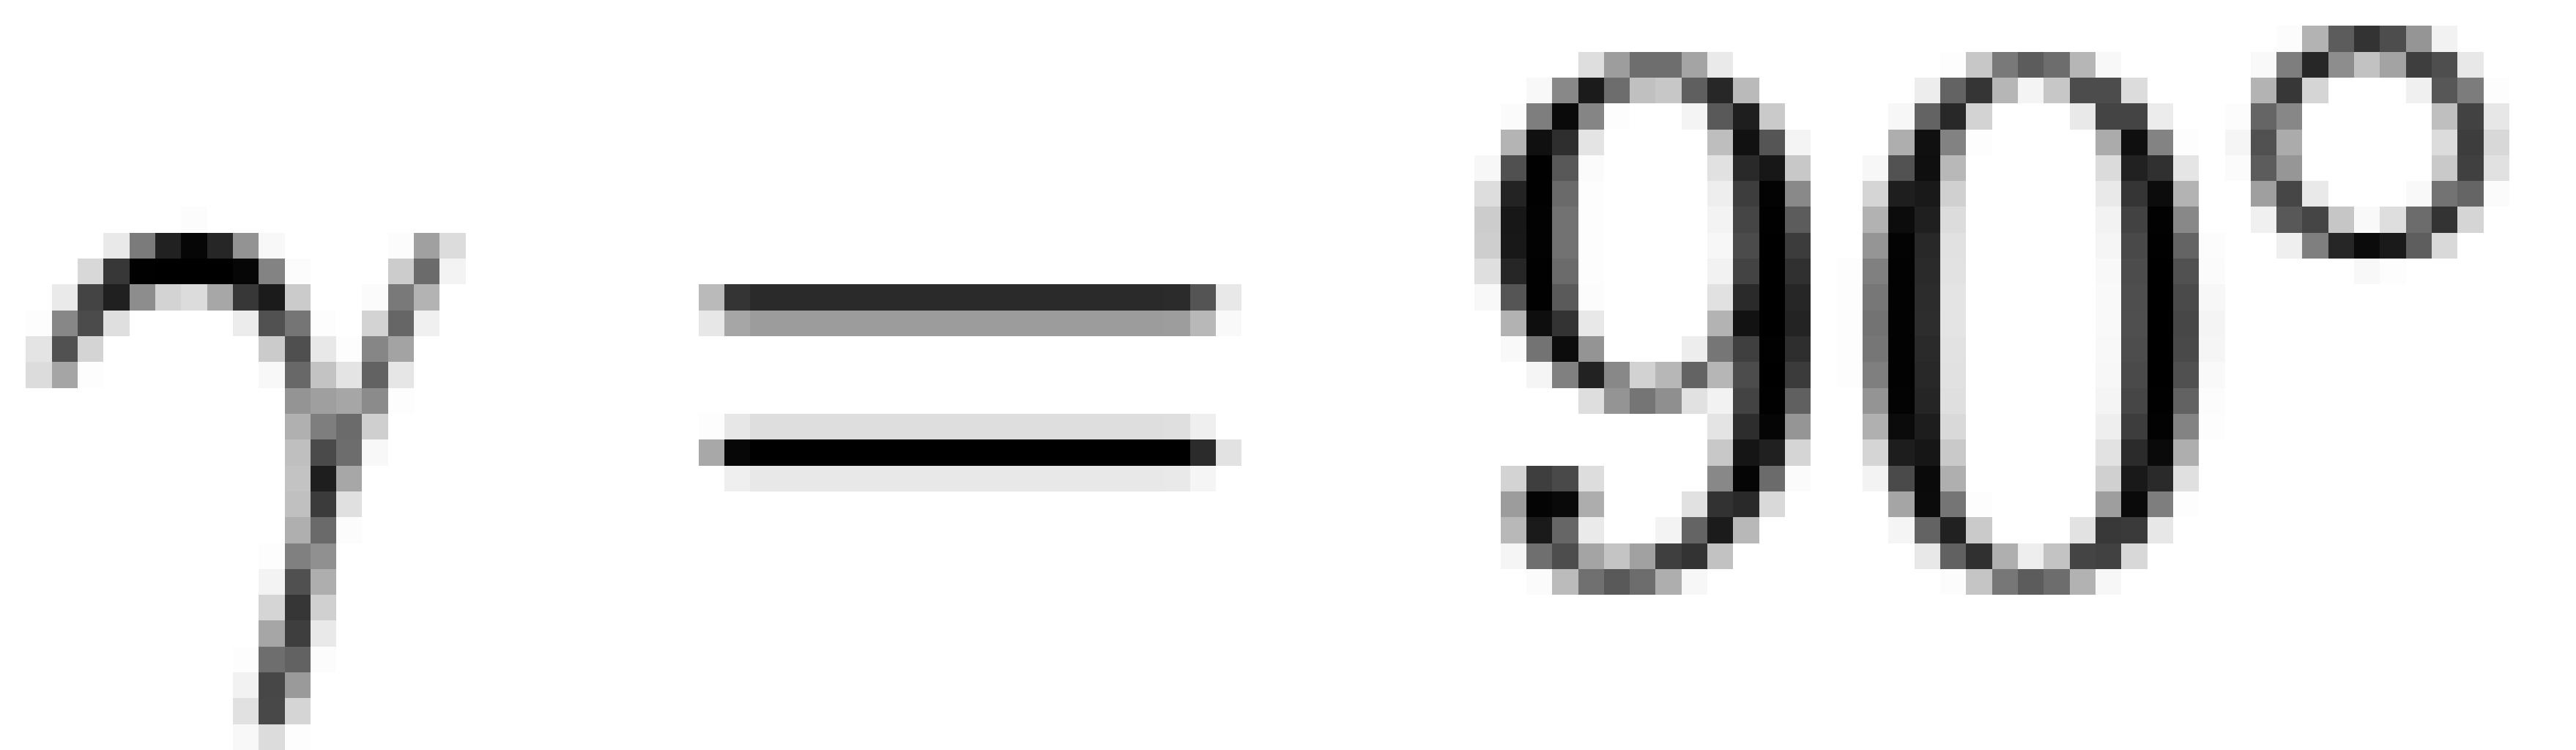

$$R_{PG} =$$

$$\begin{bmatrix} 1 & 0 & 0 \\ 0 & 0 & 1 \\ 0 & -1 & 0 \end{bmatrix}$$

$$\underline{S}_G = \begin{bmatrix} 1 & 0 & 0 \\ 0 & 0 & 10 \\ 0 & -1 & 0 \end{bmatrix}^T \begin{bmatrix} 30 & 0 & 0 \\ 0 & 25 & 0 \\ 0 & 0 & 1 \end{bmatrix} = \begin{bmatrix} 30 & 0 & 0 \\ 0 & 20 & 0 \\ 0 & -1 & 25 \end{bmatrix}$$

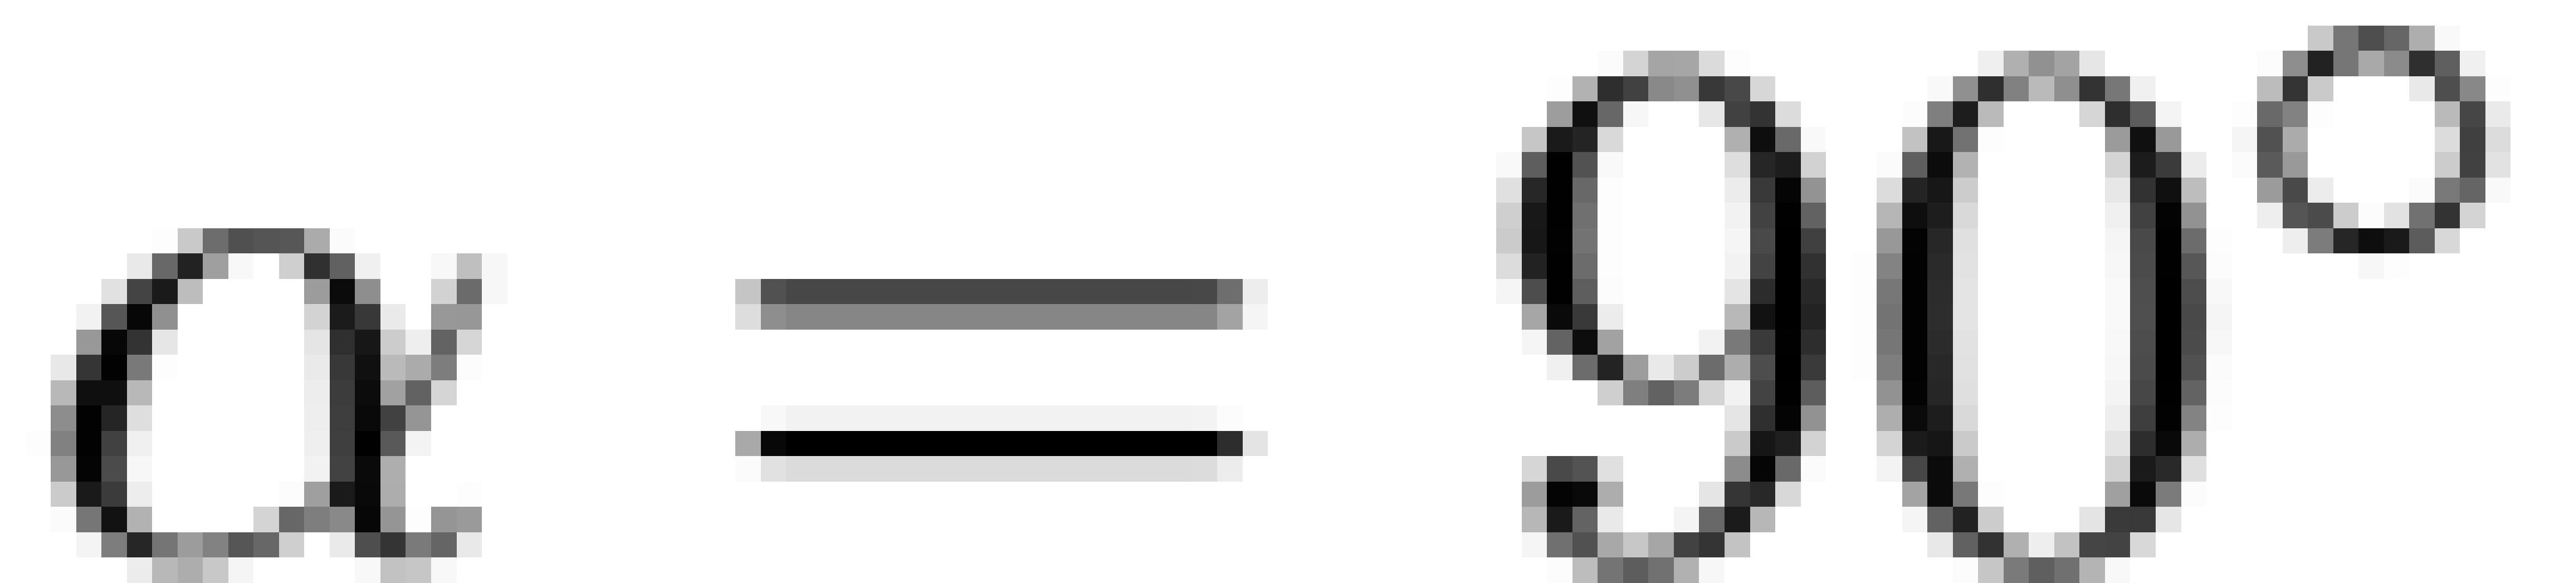




$$R_{PG} =$$

$$\begin{bmatrix} 0 & 1 & 0 \\ -1 & 0 & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

$$\underline{S}_G = \begin{bmatrix} 0 & 1 & 0 \\ -1 & 0 & 0 \\ 0 & 0 & 10 \end{bmatrix}^T \begin{bmatrix} 30 & 0 & 0 \\ 0 & 25 & 0 \\ 0 & 0 & 20 \end{bmatrix} = \begin{bmatrix} 25 & 0 & 0 \\ 0 & 30 & 0 \\ 0 & 0 & 20 \end{bmatrix}$$




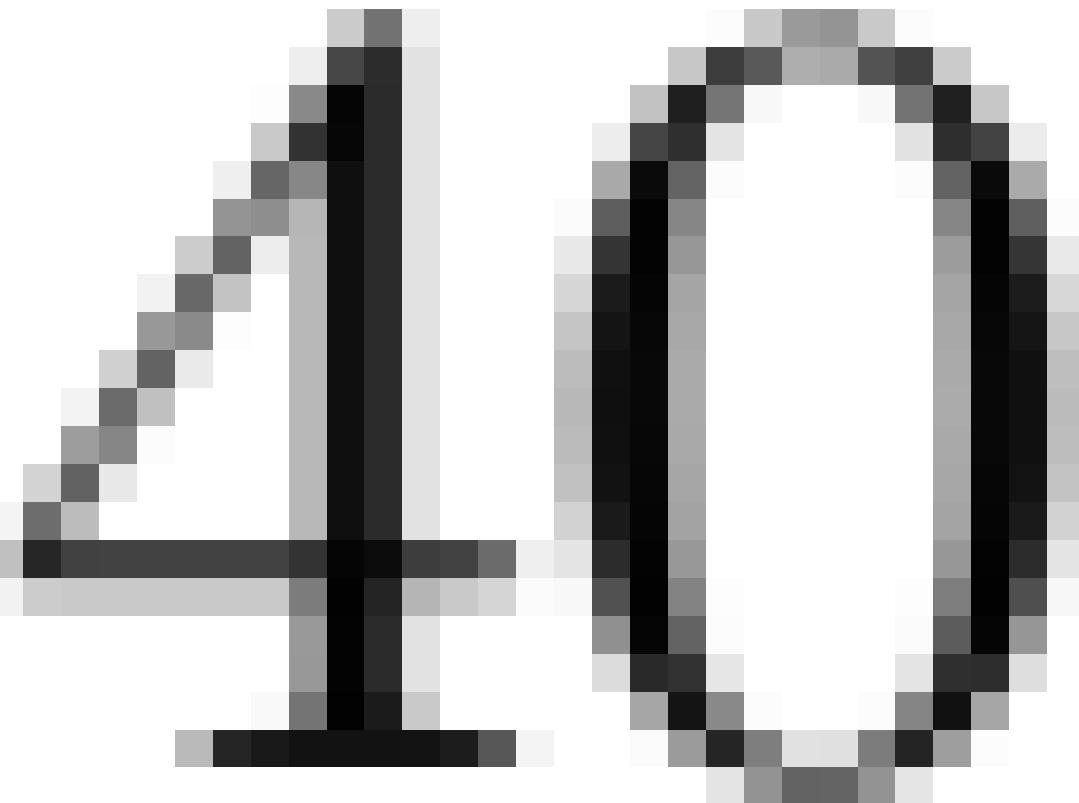

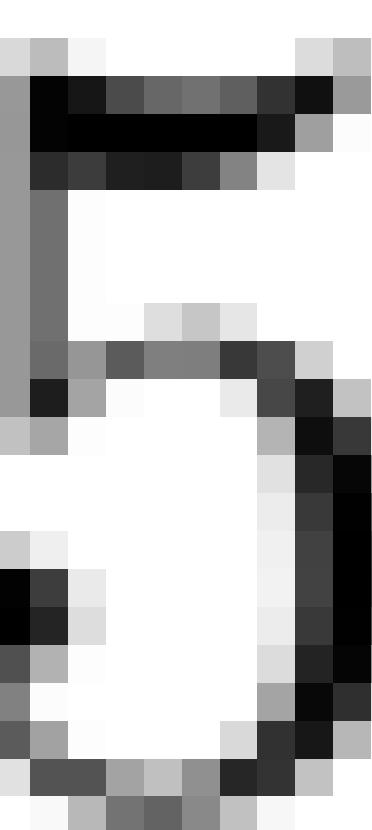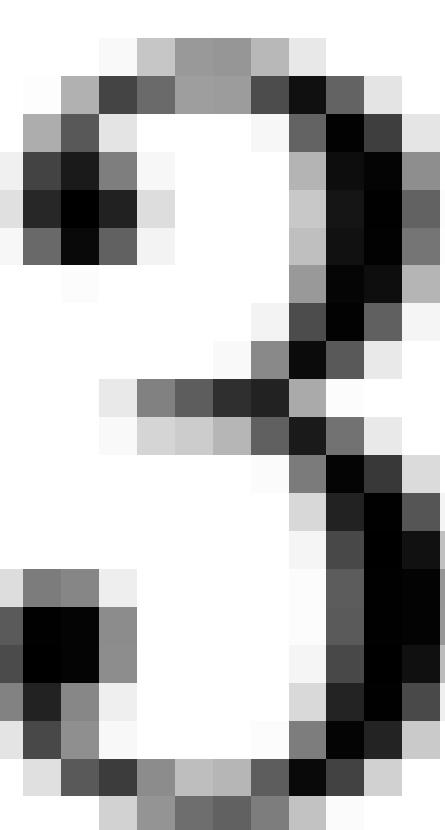

$$\underline{\underline{S}}_P =$$


$$\begin{bmatrix} 60 & 0 & 0 \\ 0 & 40 & 0 \\ 0 & 0 & 35 \end{bmatrix}$$

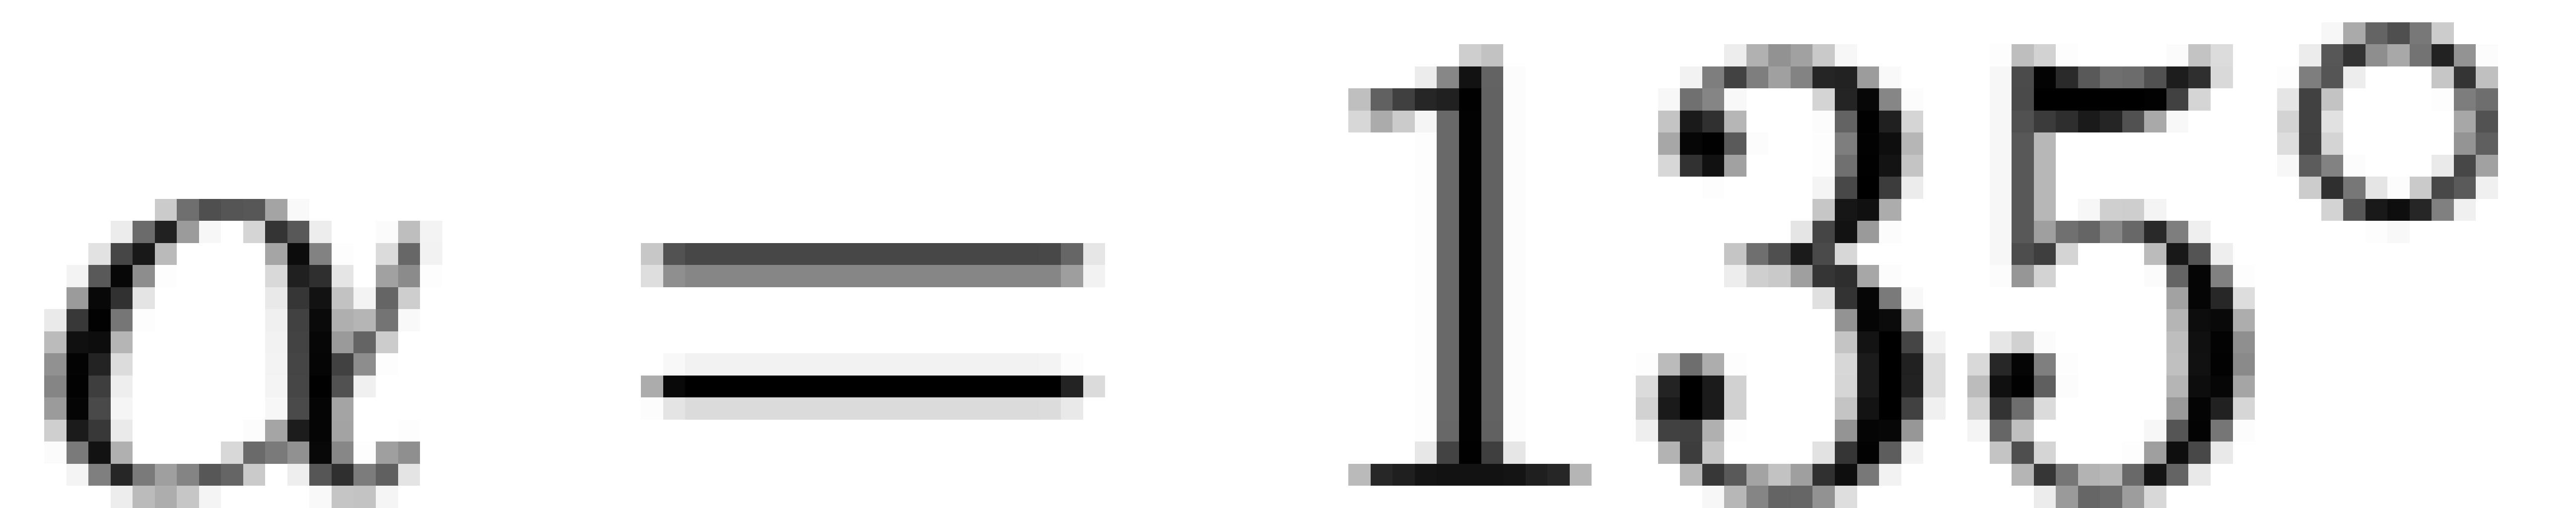

$$R_{PG} =$$


$$\begin{bmatrix} -0.707 & 0.707 & 0 \\ 0 & 0 & 1 \\ 0.707 & 0.707 & 0 \end{bmatrix}$$

$$\underline{S}_G = \begin{bmatrix} -0.707 & 0.707 & 0 \\ 0 & 0 & 1 \\ 0.707 & 0.707 & 0 \end{bmatrix}^T \begin{bmatrix} 60 & 0 & 0 \\ -0.707 & 0.707 & 0 \\ 0 & 1 & 1 \end{bmatrix} = \begin{bmatrix} -0.707 & -12.5 & 0 \\ 0 & 40 & 0 \\ 0.707 & 47.5 & 0 \end{bmatrix} = \begin{bmatrix} 0 & 0 & 35 \\ 0 & 0 & 40 \\ 0.707 & 0.707 & 0 \end{bmatrix}$$

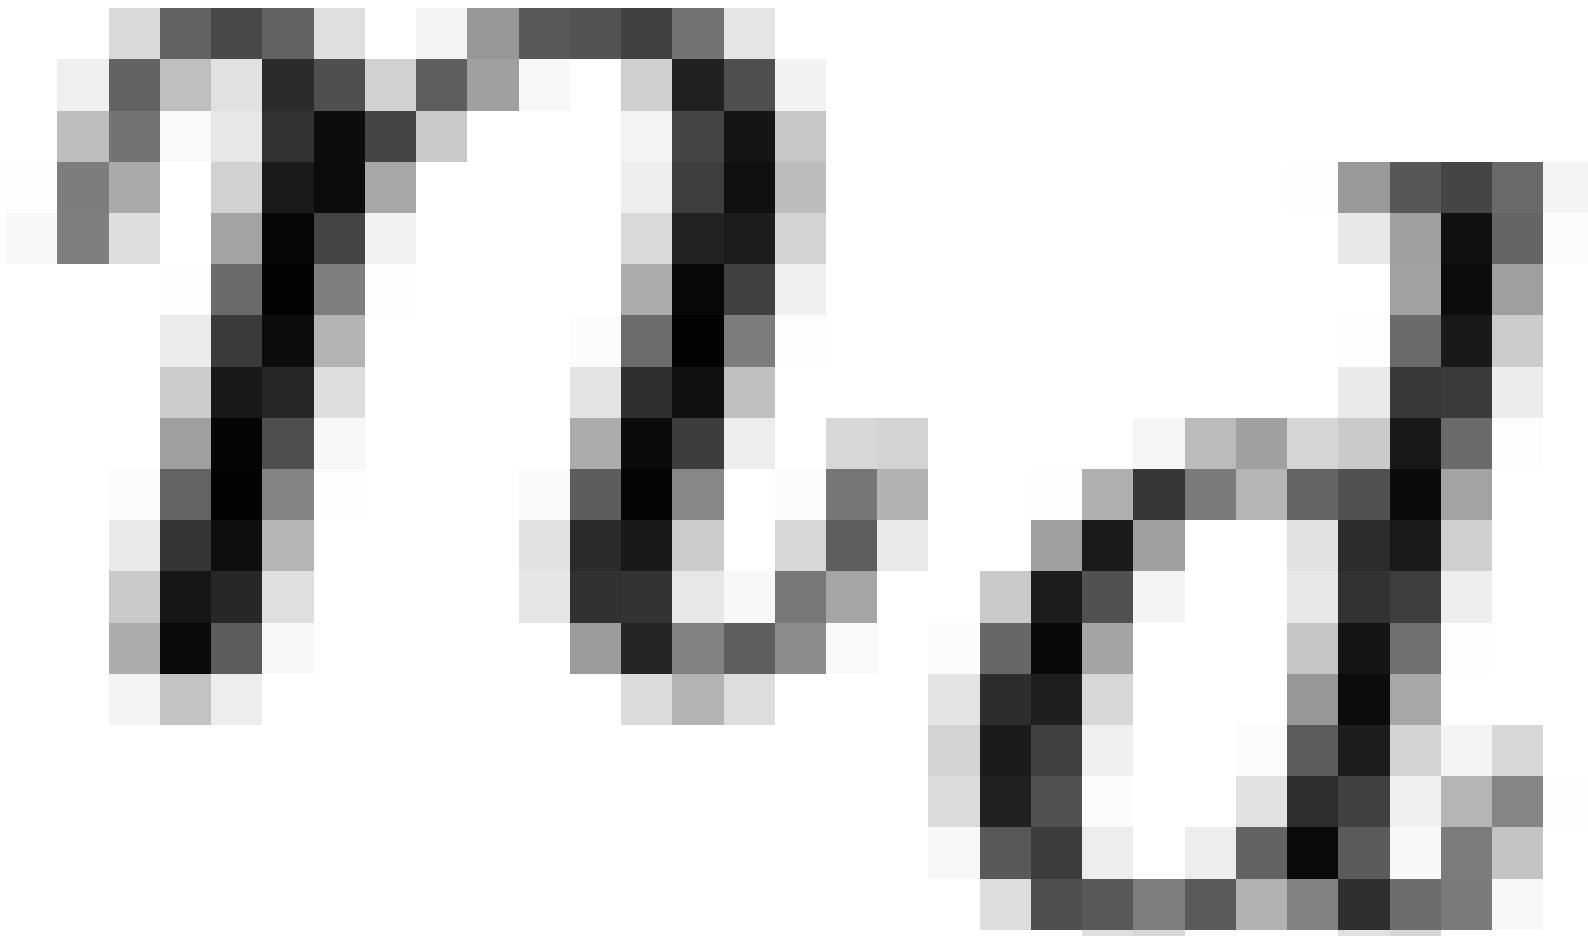






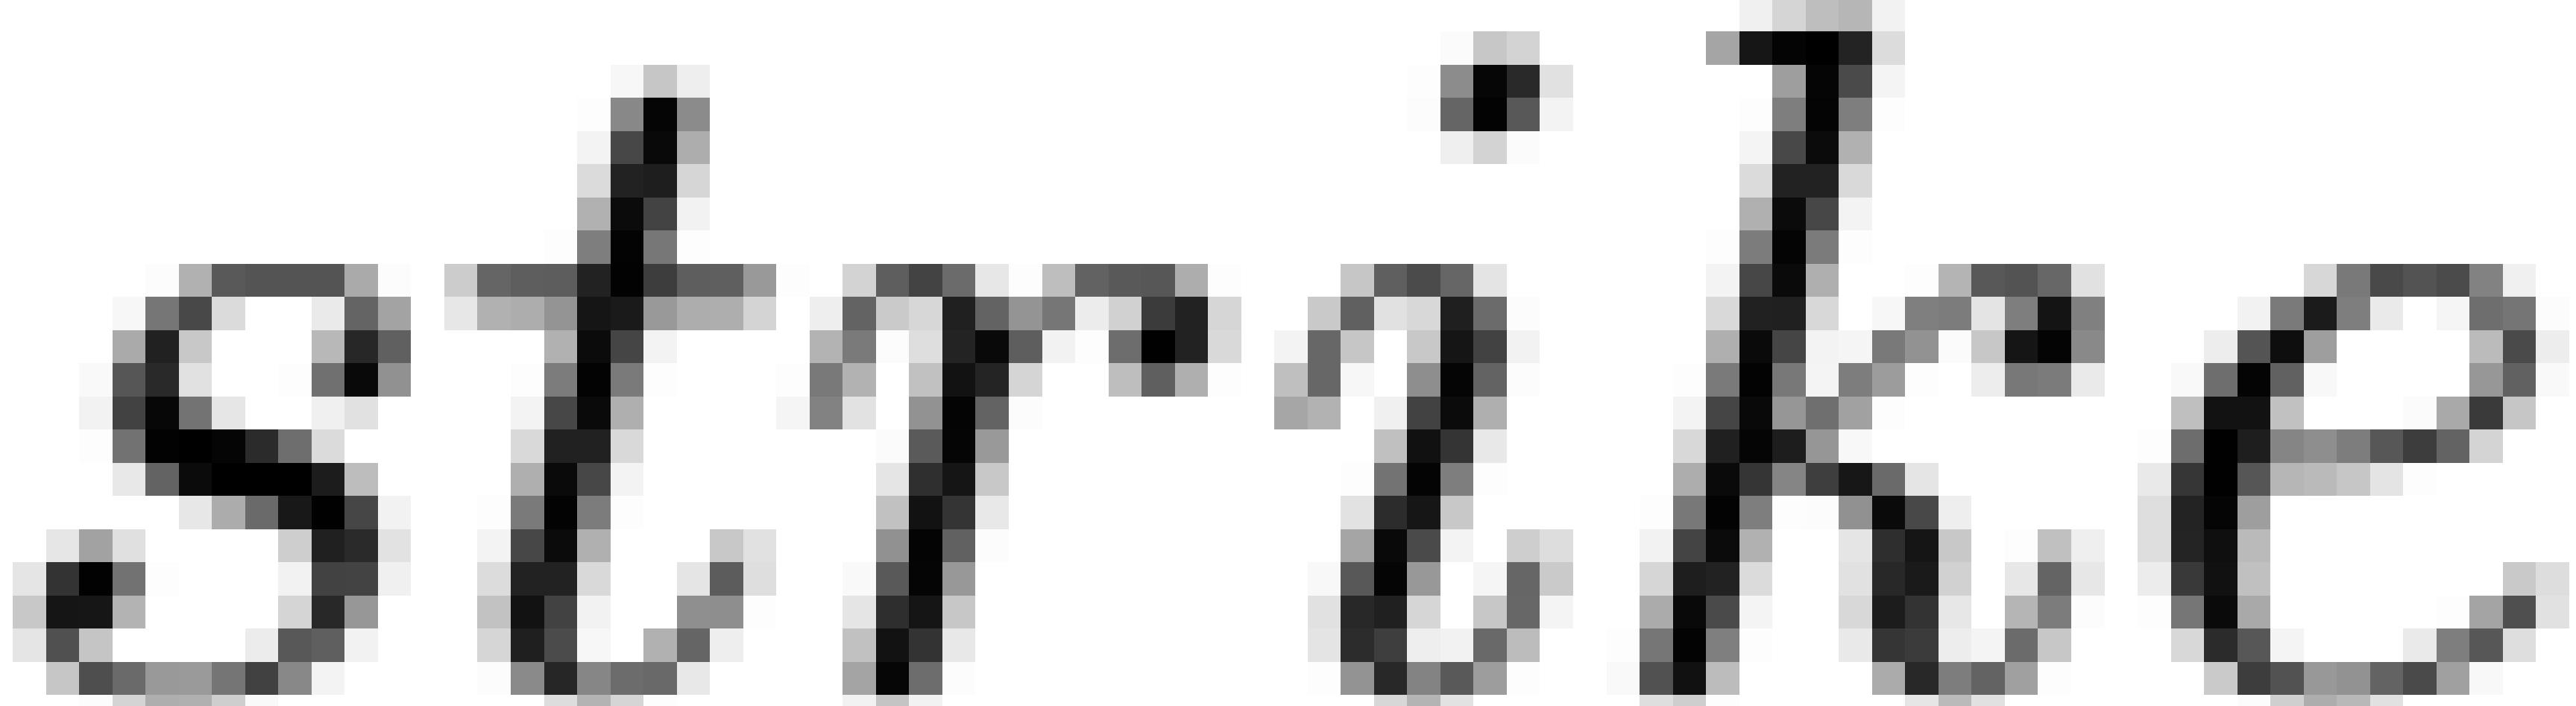

d-s-n


Right-handed
system

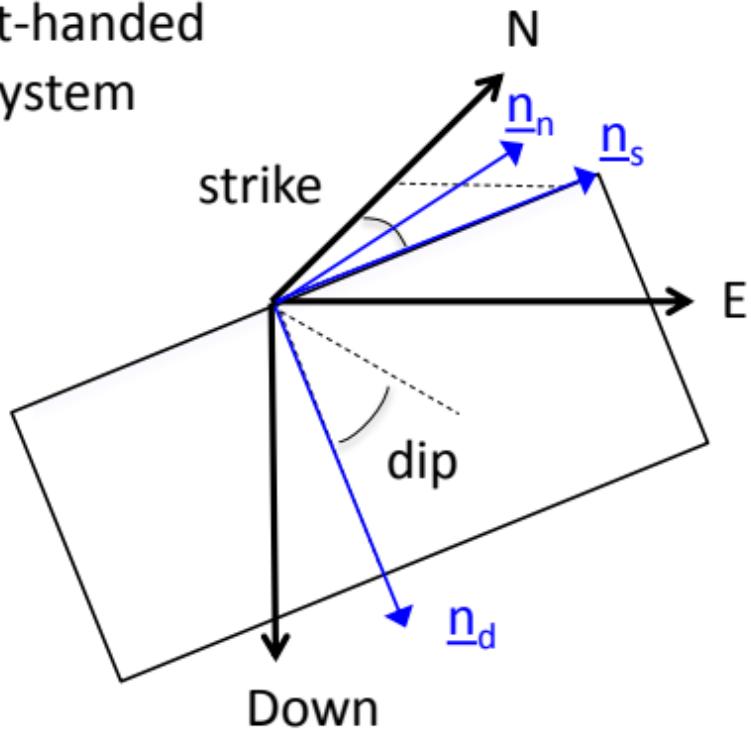


$$\underline{n}_n = \begin{bmatrix} -\sin(strike)\sin(dip) \\ \cos(strike)\sin(dip) \\ -\cos(dip) \end{bmatrix}$$

$$\underline{n}_s = \begin{bmatrix} \cos(strike) \\ \sin(strike) \\ 0 \end{bmatrix}$$

$$\underline{n}_d = \begin{bmatrix} -\sin(strike)\cos(dip) \\ \cos(strike)\cos(dip) \\ \sin(dip) \end{bmatrix}$$

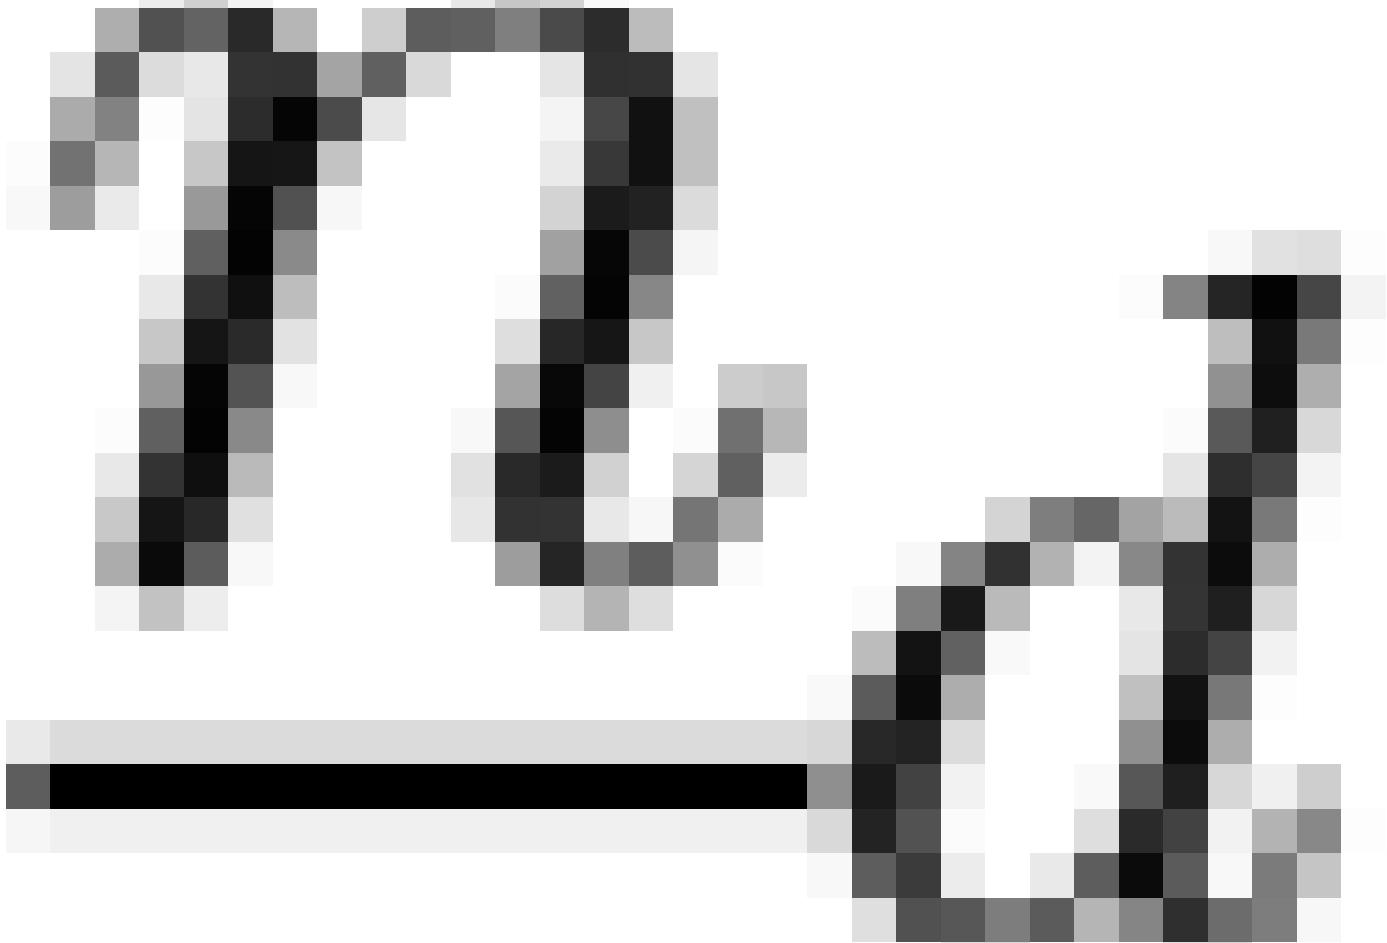


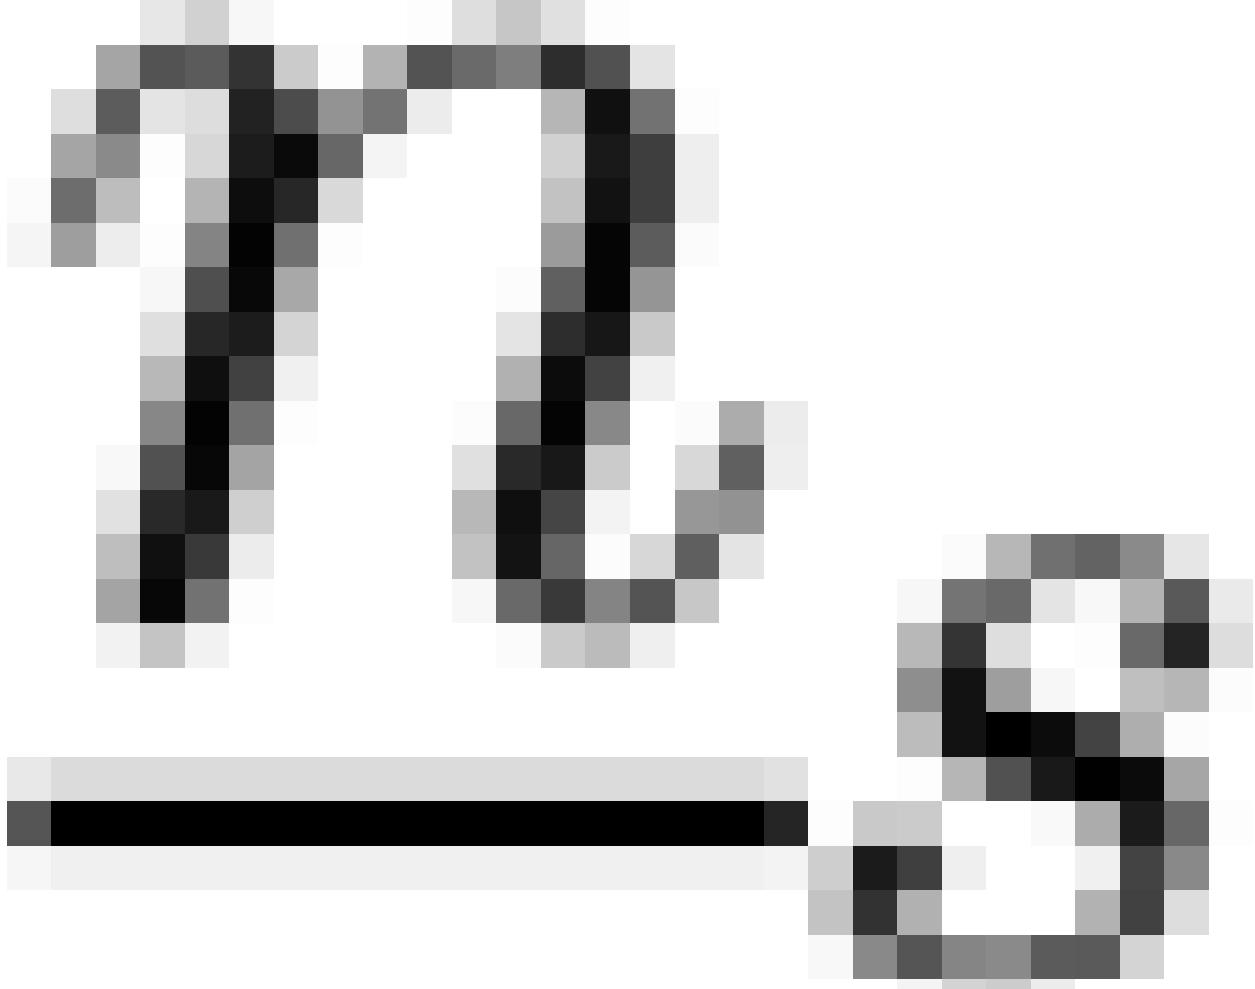








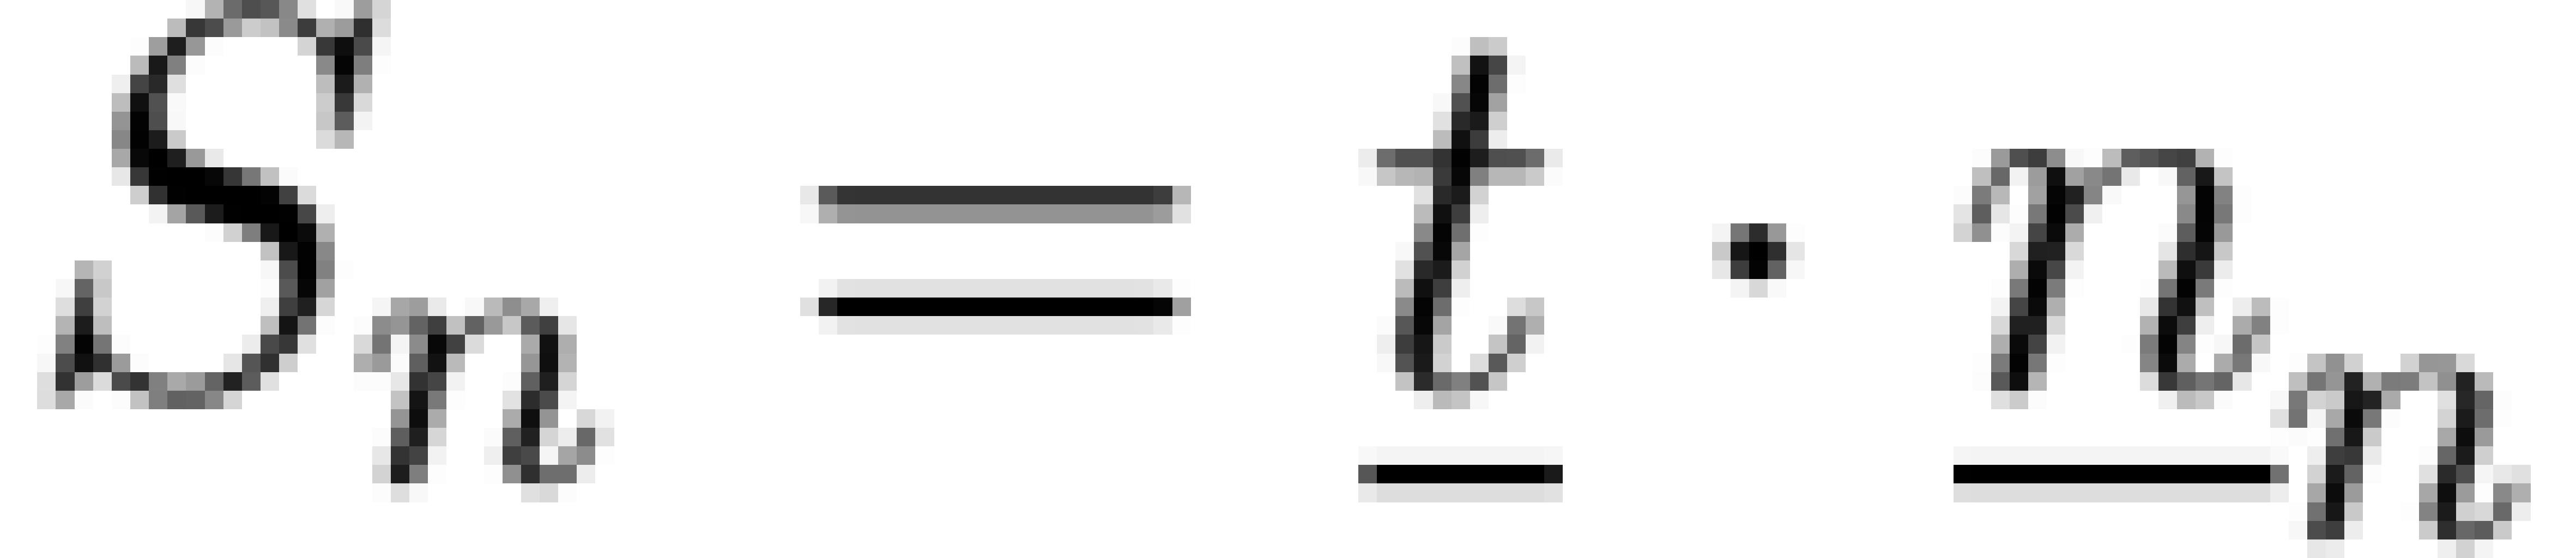






$$\tau_d = t \cdot \frac{r_d}{n_d}$$


$$\tau_s = t \cdot \frac{r_s}{n_s}$$

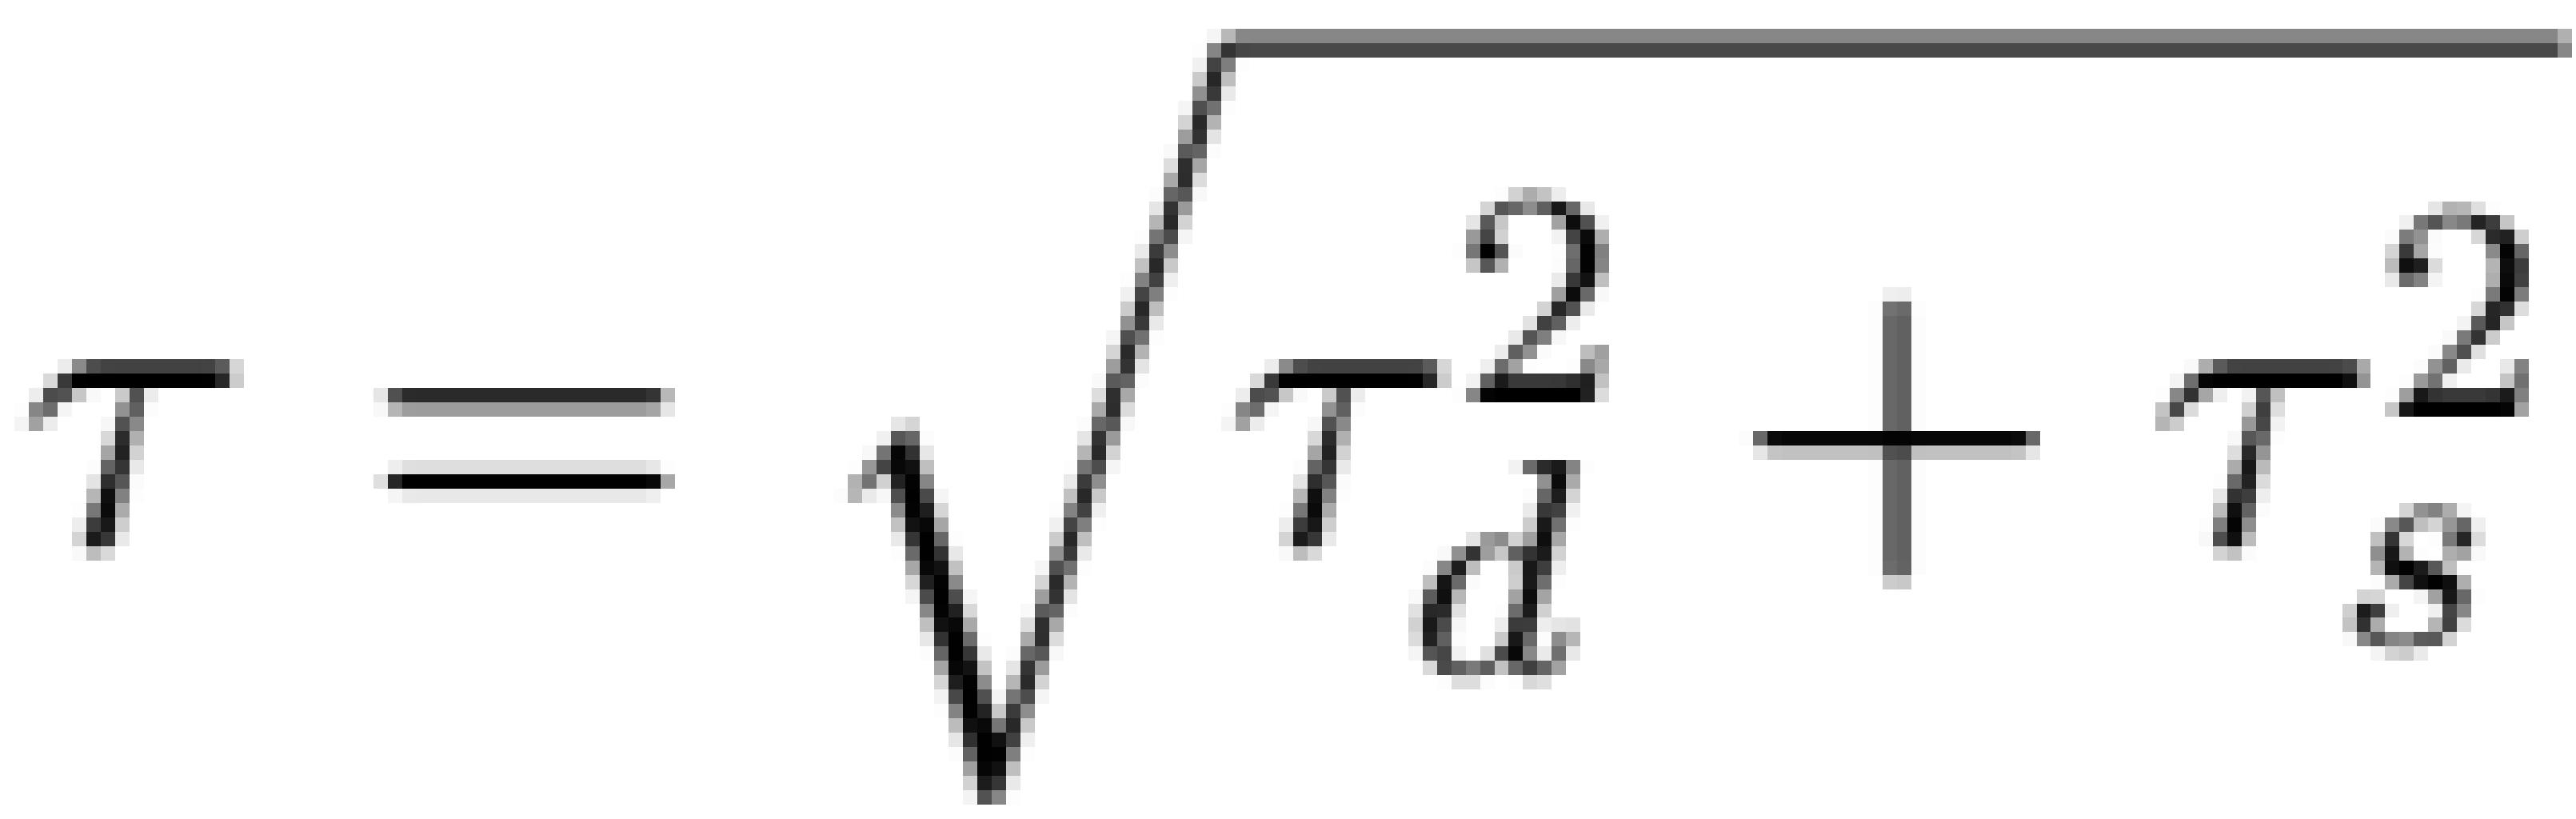



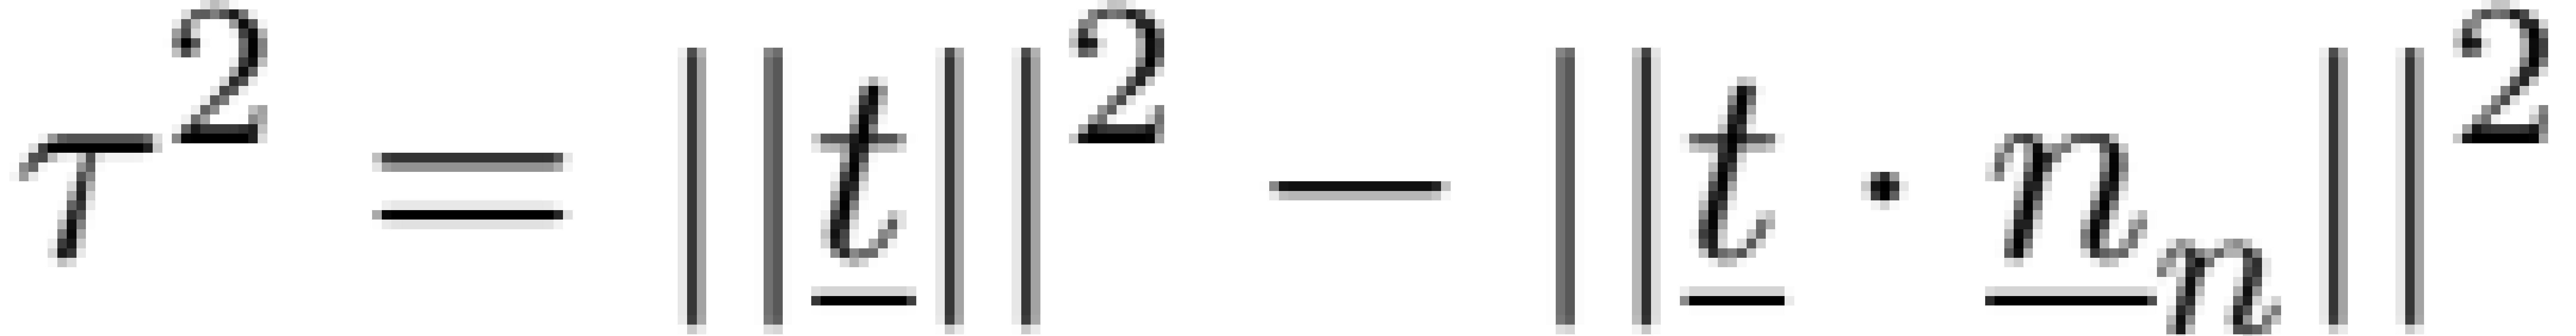


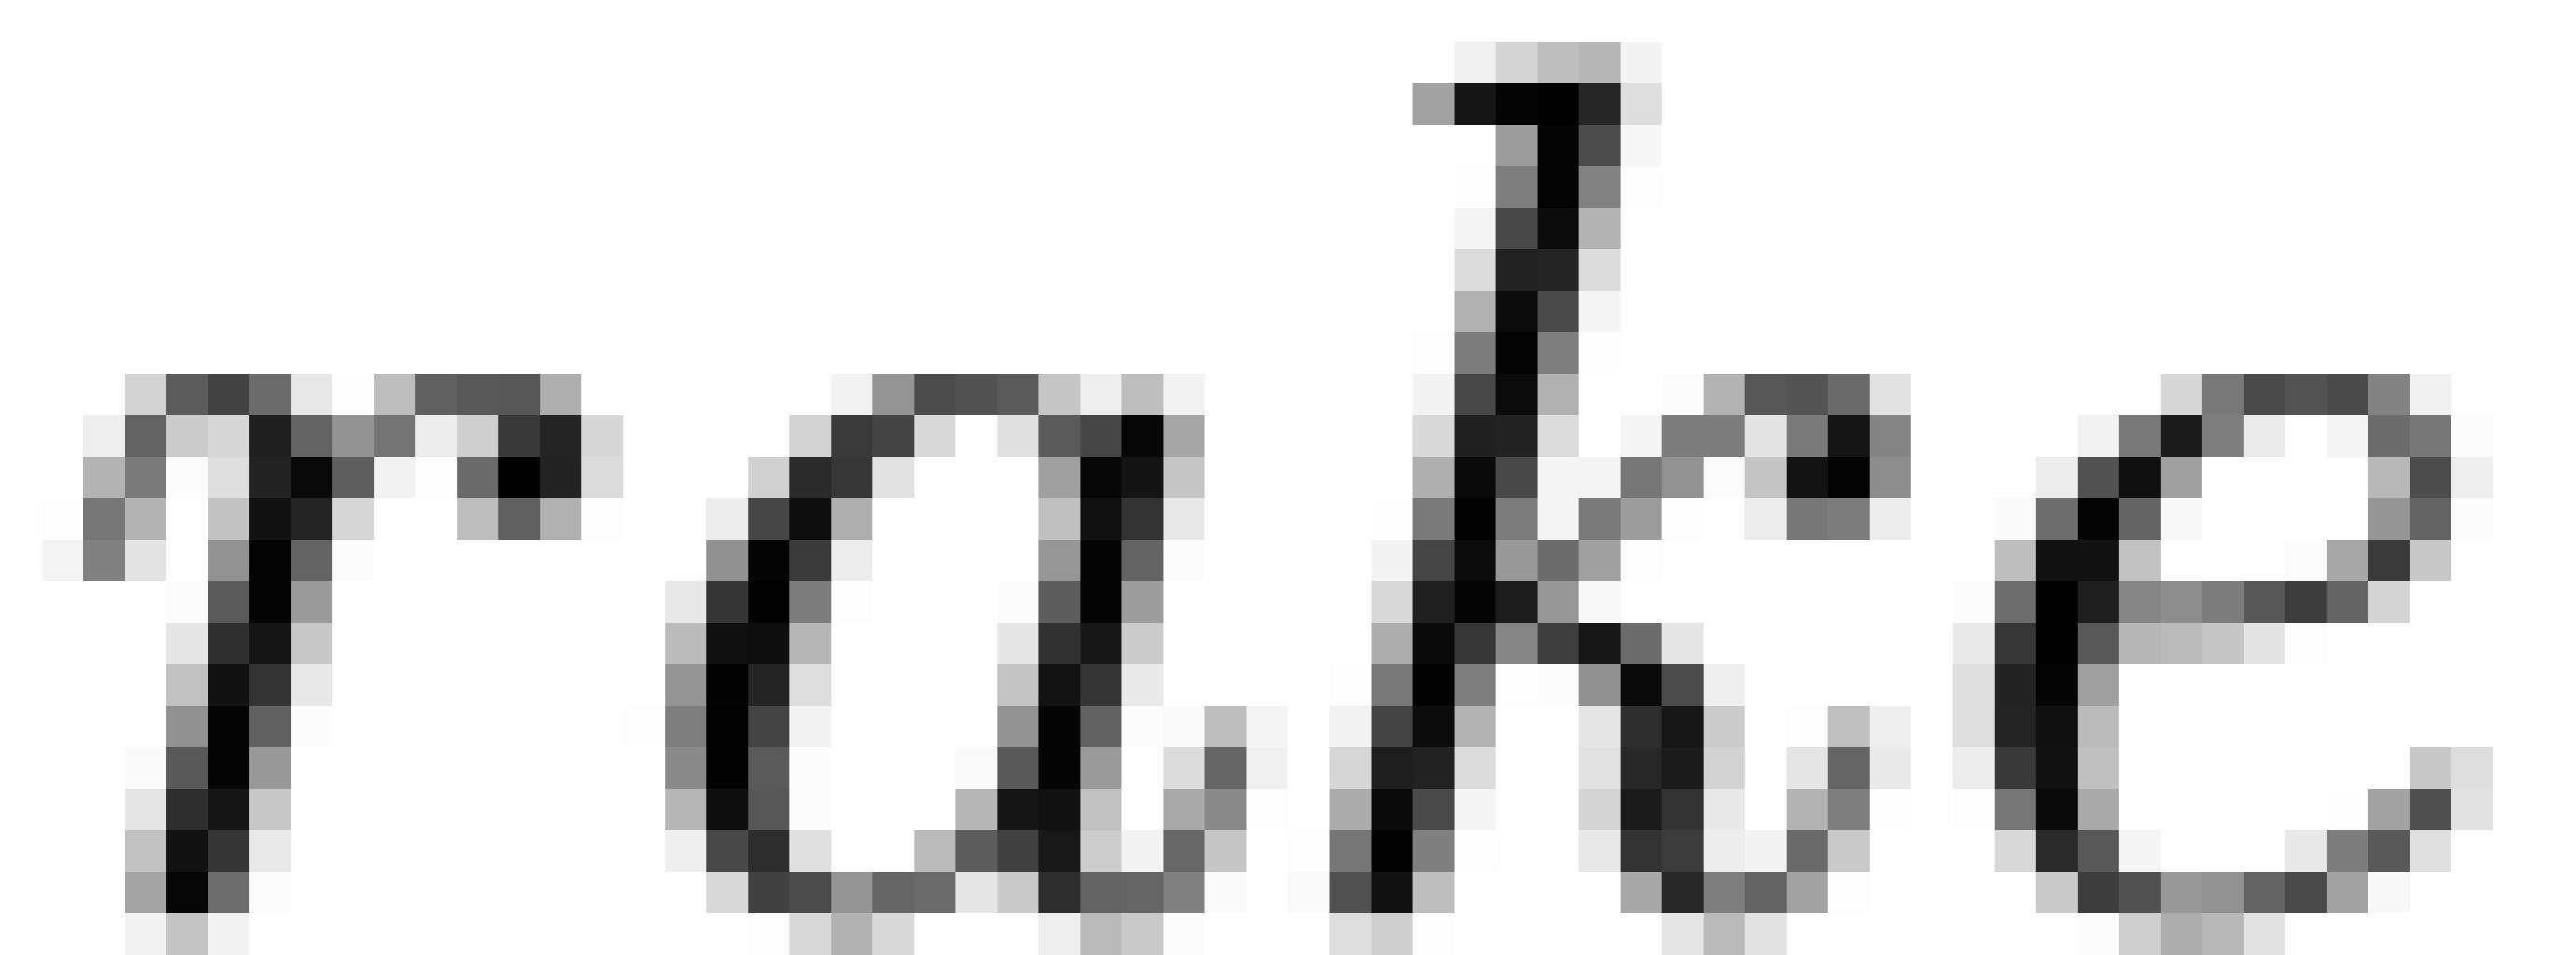


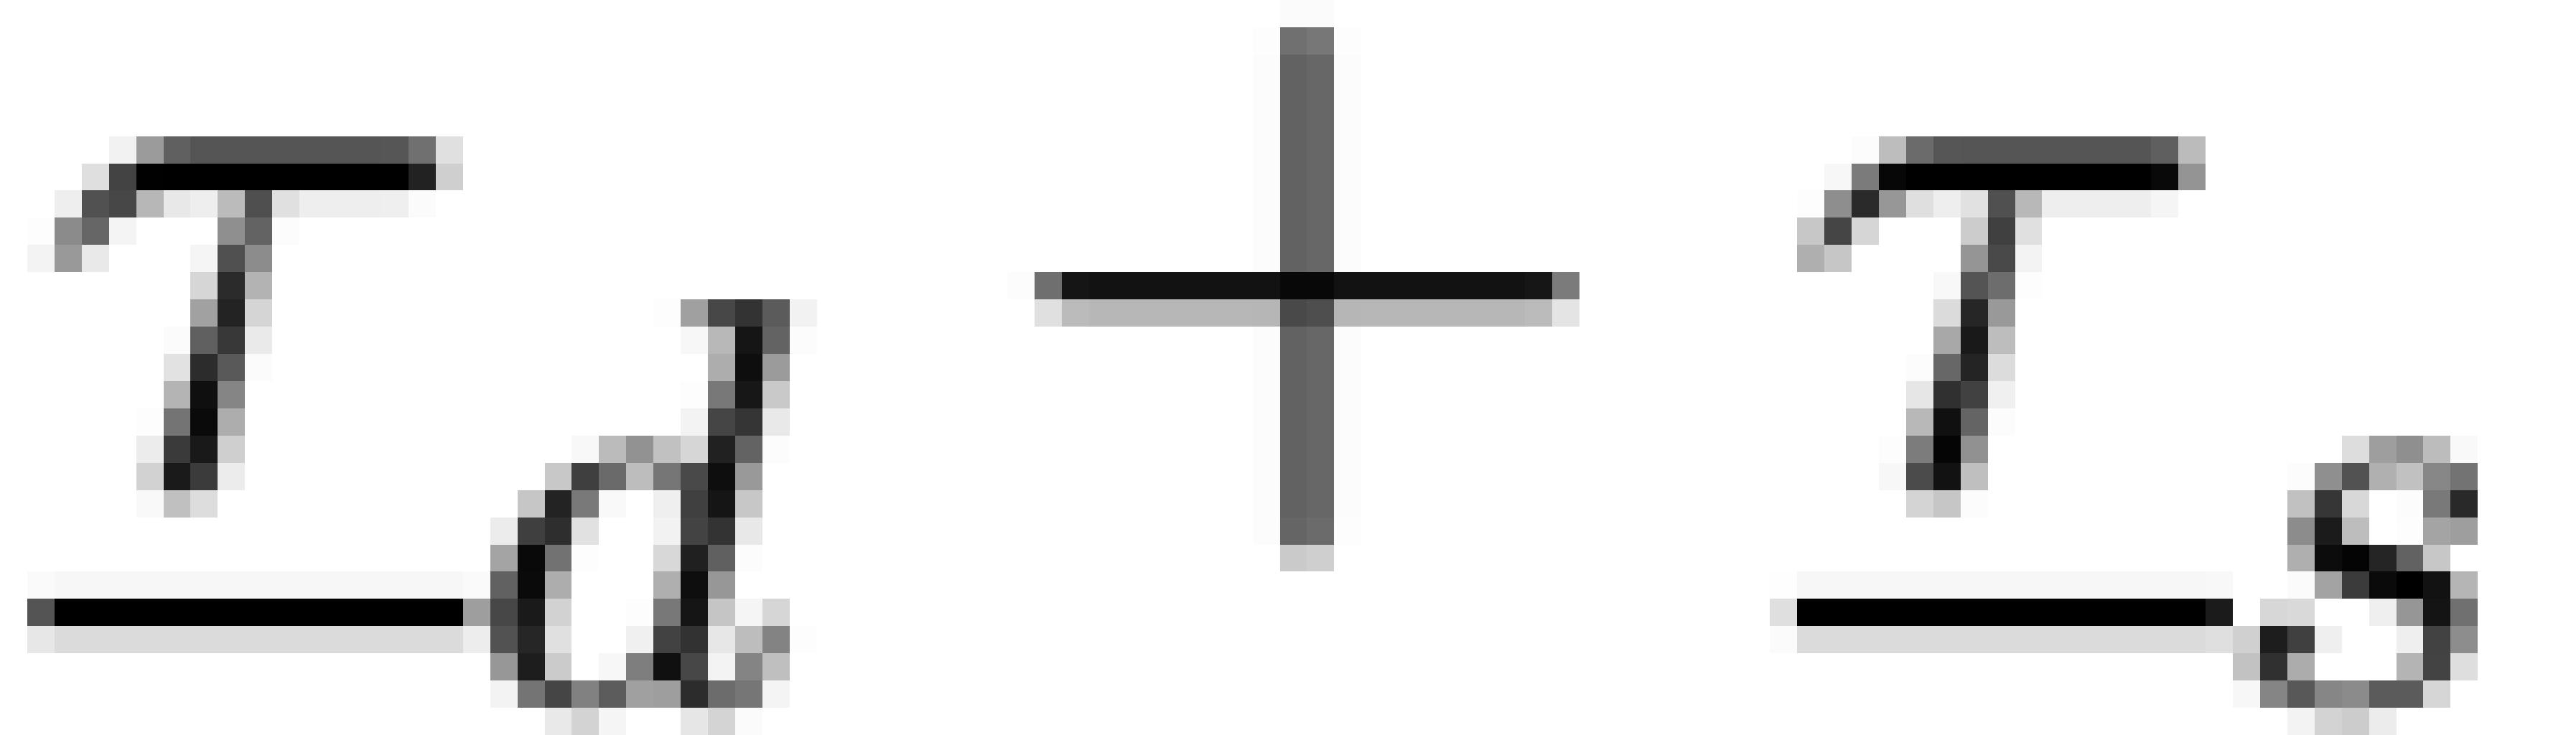



rake = arctan

$$\frac{\tau_d}{\tau_s}$$

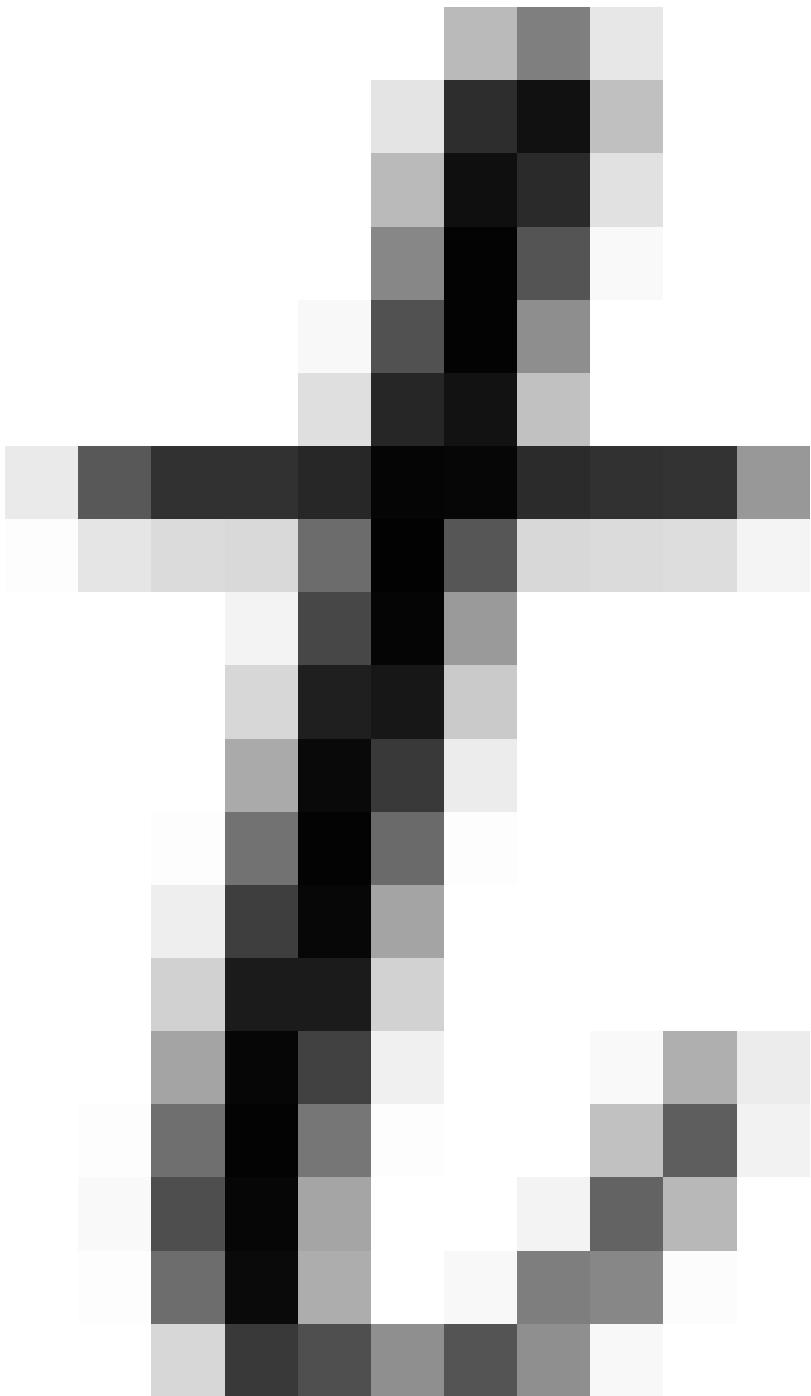


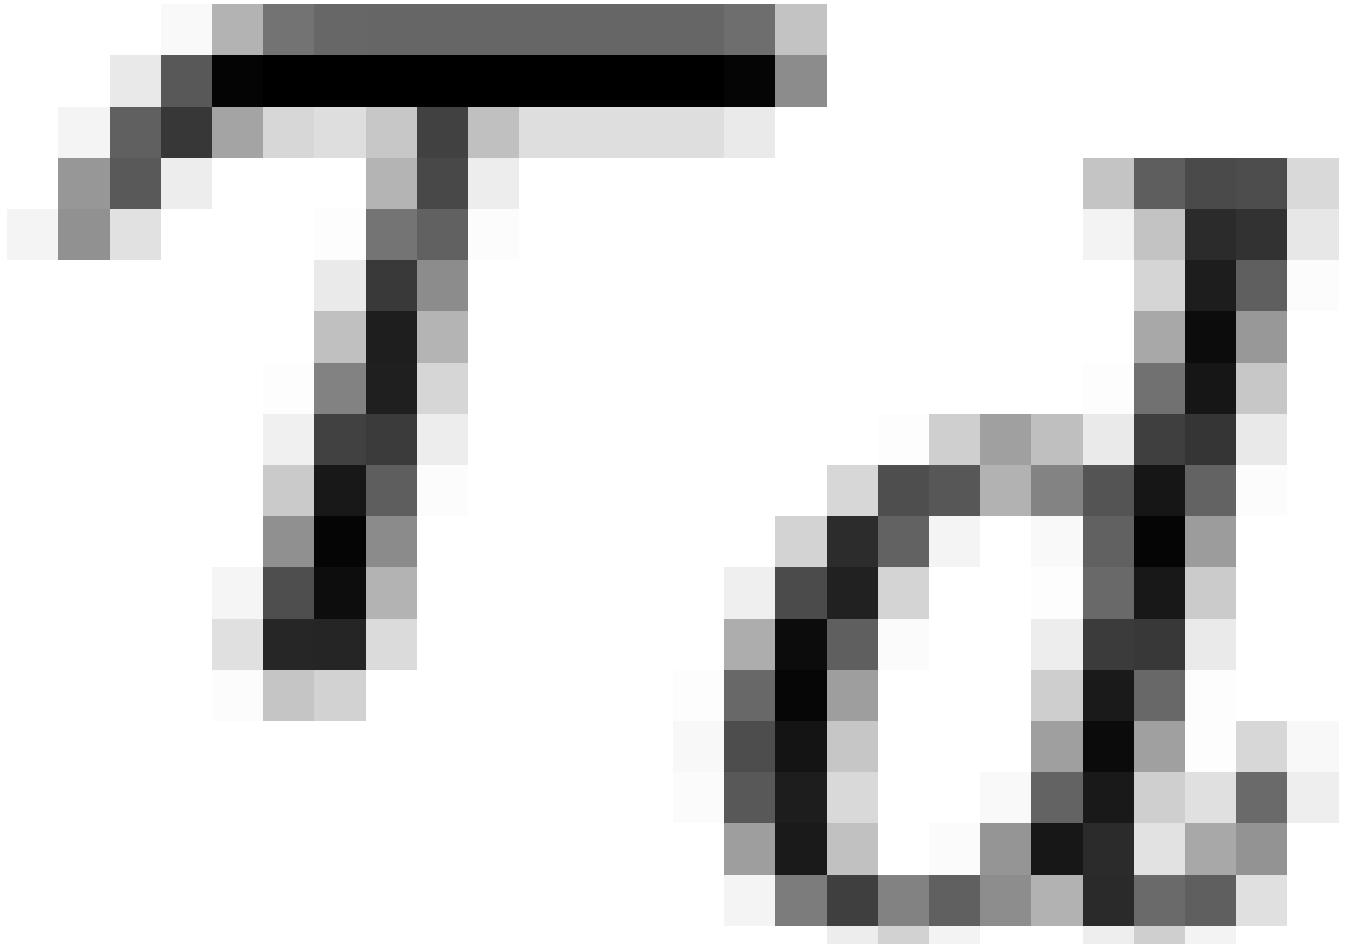

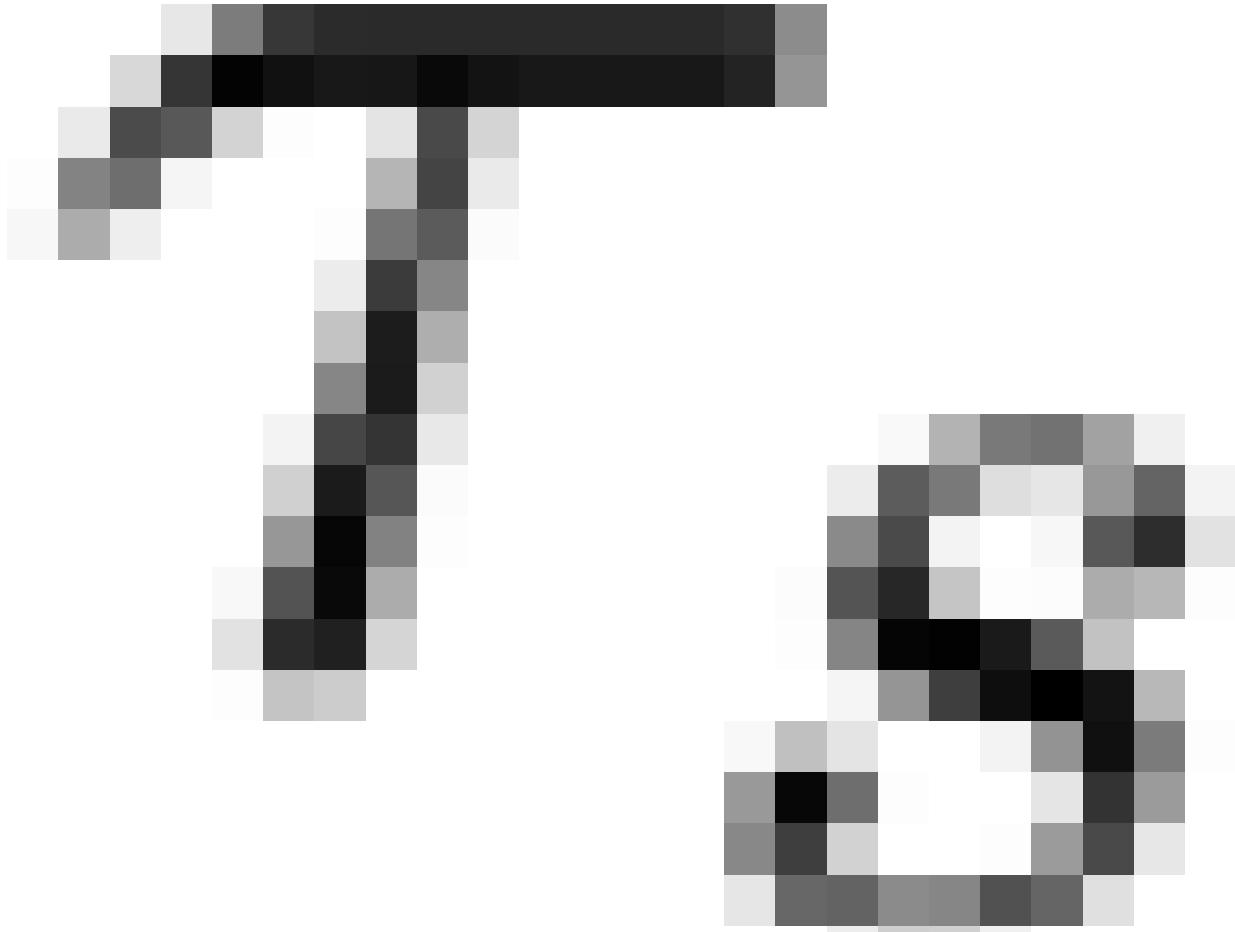

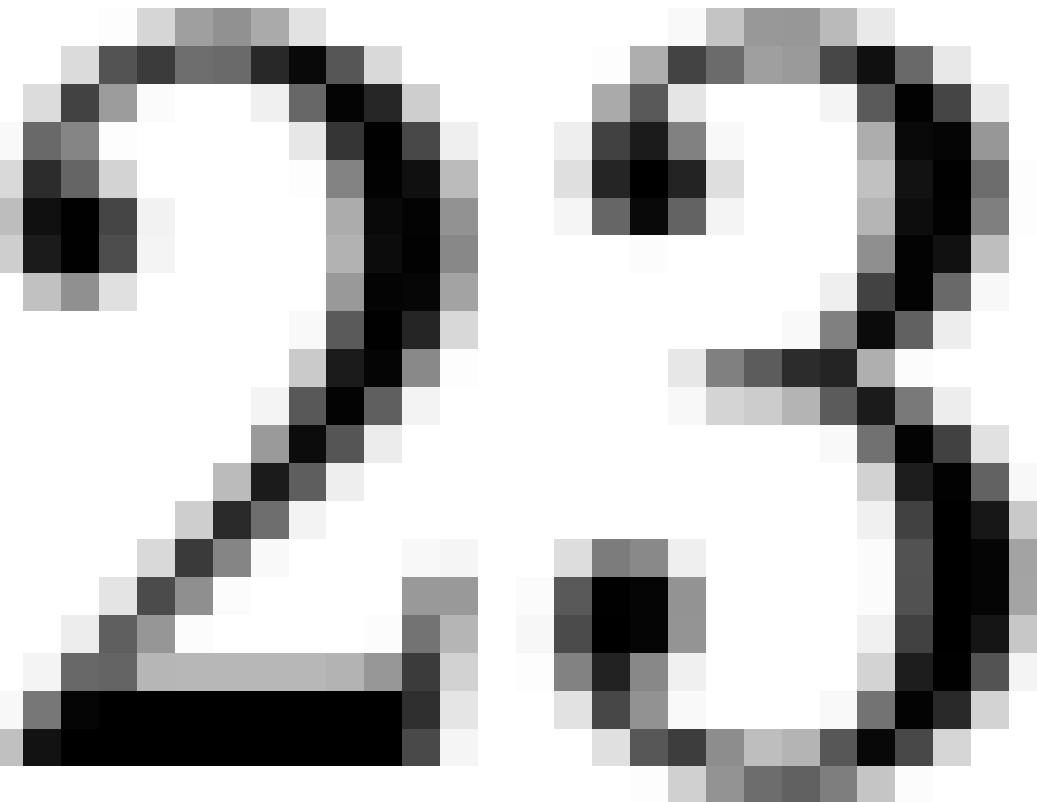



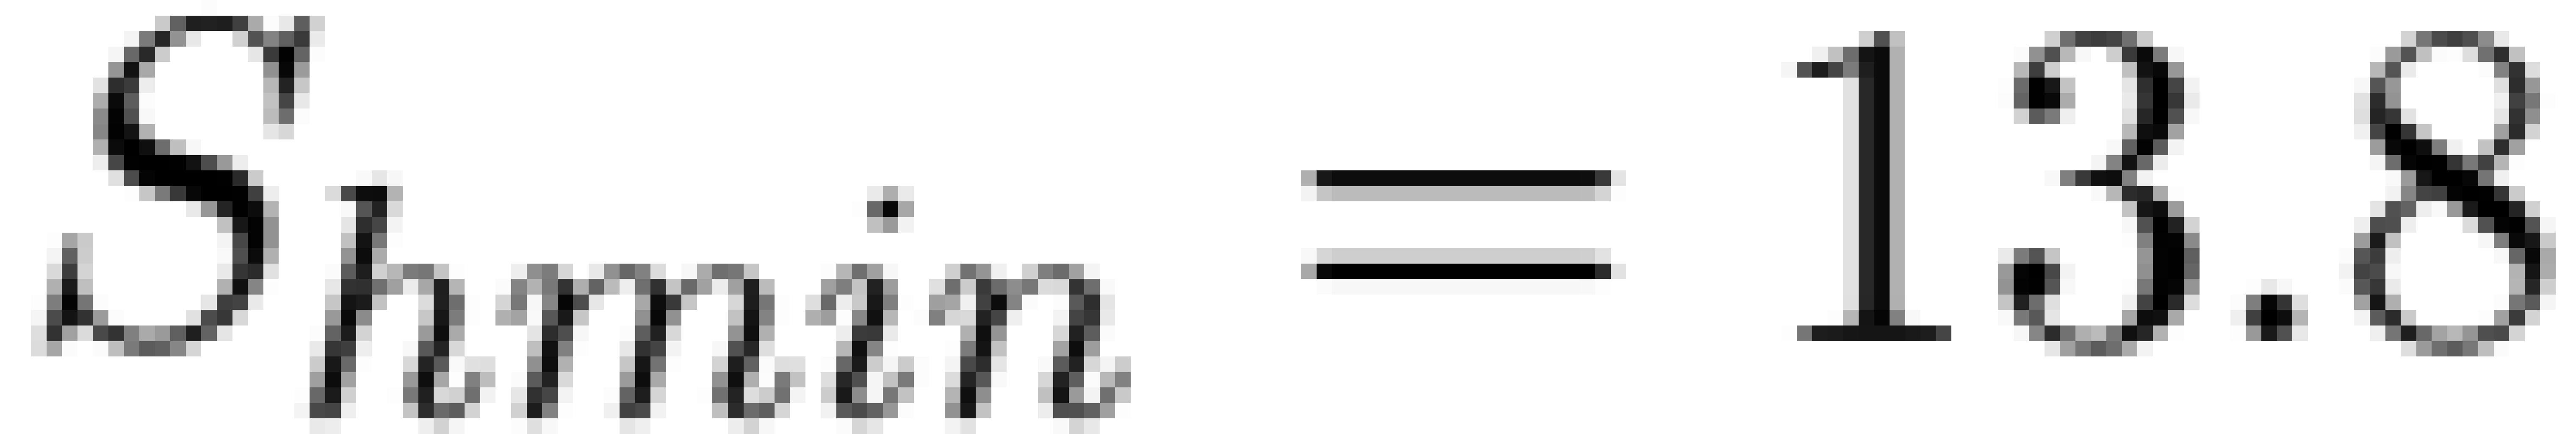

$$\underline{\underline{S}}_P =$$

$$\begin{bmatrix} 23 & 0 & 0 \\ 0 & 15 & 0 \\ 0 & 0 & 13.8 \end{bmatrix}$$

$$R_{PG} =$$

$$\begin{bmatrix} 0 & 0 & -1 \\ -1 & 0 & 0 \\ 0 & 1 & 0 \end{bmatrix}$$

$$\underline{\underline{S}}_G =$$


$$\begin{bmatrix} 15 & 0 & 0 \\ 0 & 13.8 & 0 \\ 0 & 0 & 23 \end{bmatrix}$$

$$\underline{n}_n =$$



$$\begin{bmatrix} 0 \\ 0.867 \\ -0.5 \end{bmatrix}$$






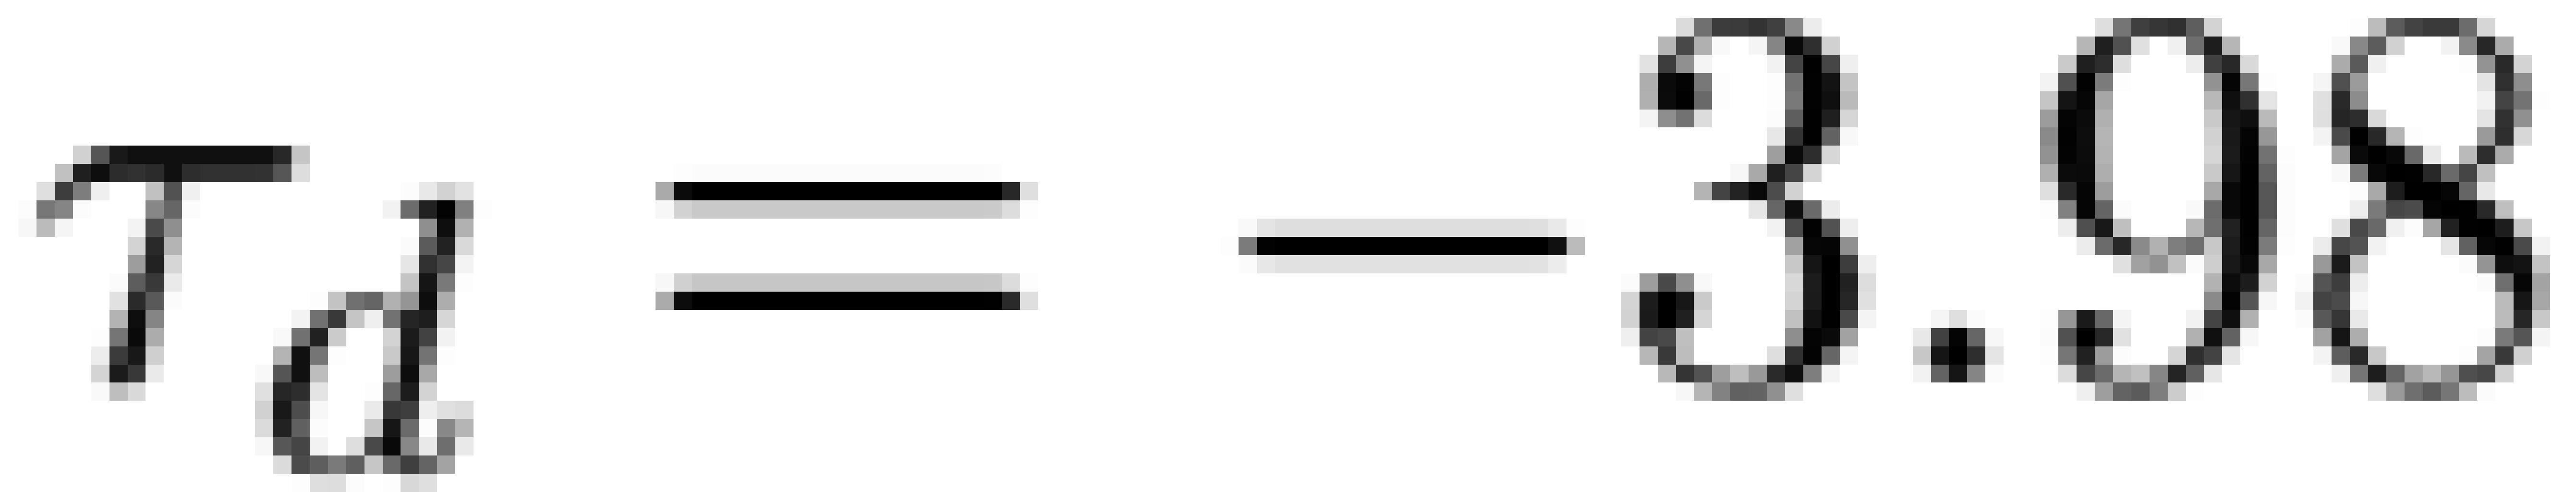



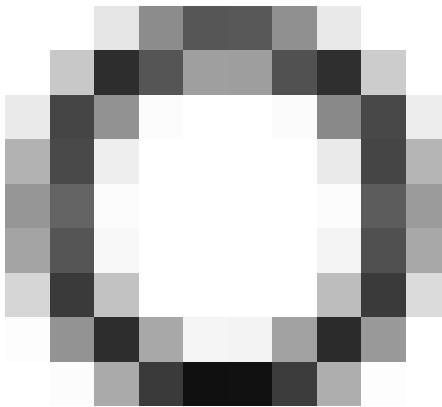

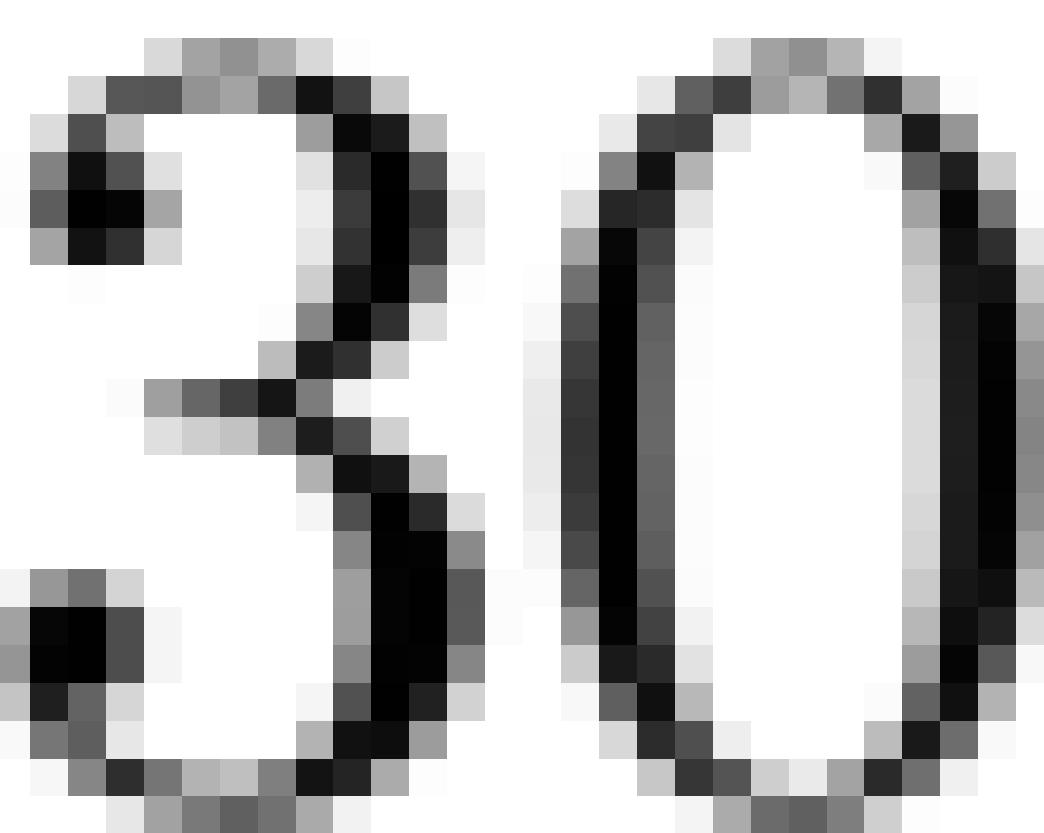






$$\underline{\underline{S}_P} =$$

$$\begin{bmatrix} 45 & 0 & 0 \\ 0 & 30 & 0 \\ 0 & 0 & 25 \end{bmatrix} \text{ MPa}$$

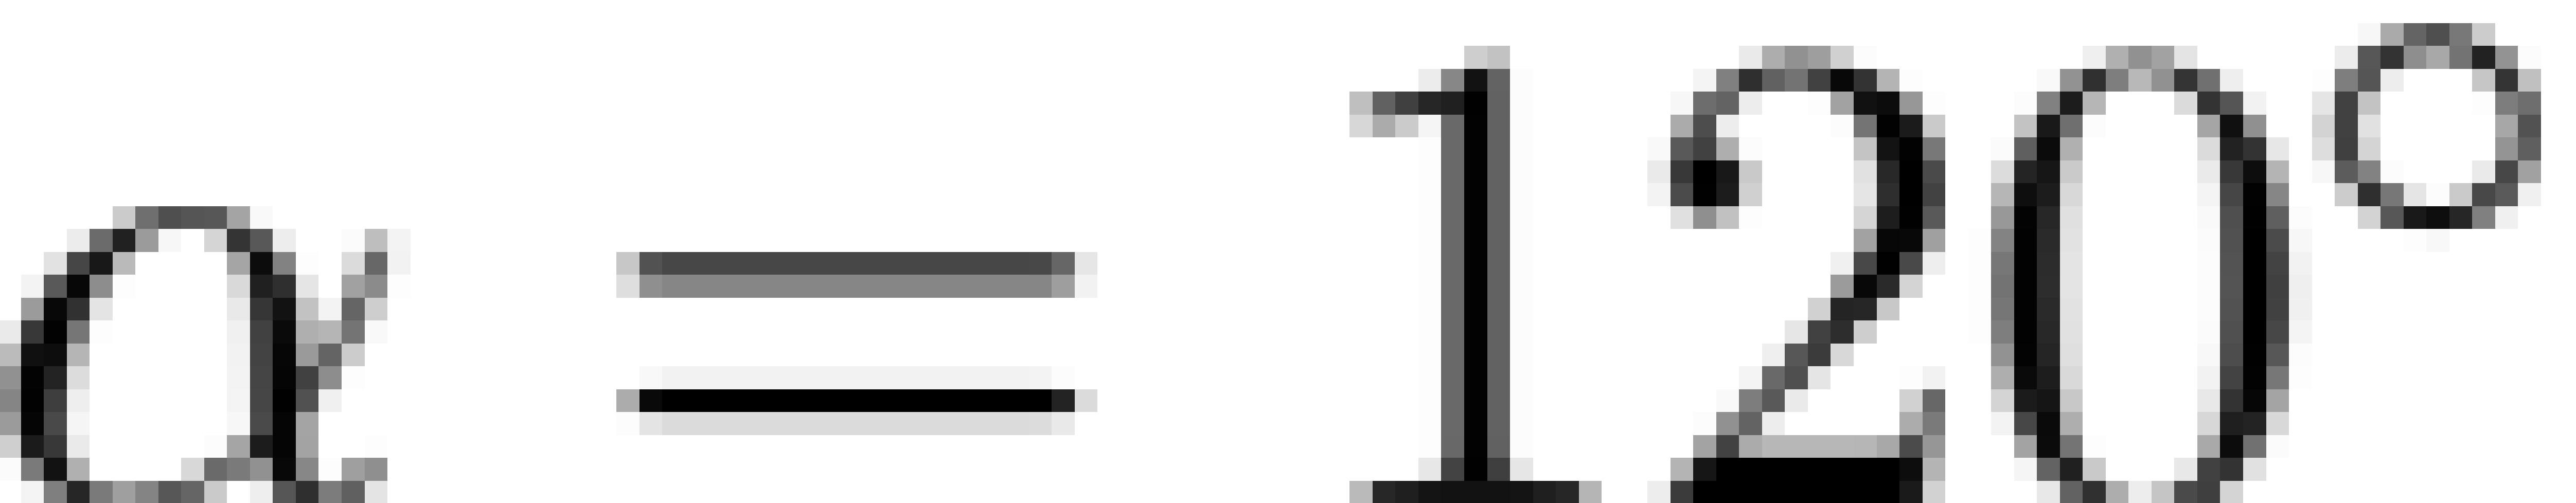

$$R_{PG} =$$

$$\begin{bmatrix} -0.5 & 0.866 & 0 \\ 0 & 0 & 1 \\ 0.866 & 0.5 & 0 \end{bmatrix}$$

$$\underline{\underline{S}_G} =$$


$$\begin{bmatrix} 30 & -8.66 & 0 \\ -8.66 & 40 & 0 \\ 0 & 0 & 30 \end{bmatrix}$$


MPa

$$\underline{n}_n =$$

$$\begin{bmatrix} -0.866 \\ 0.5 \\ 0 \end{bmatrix}$$




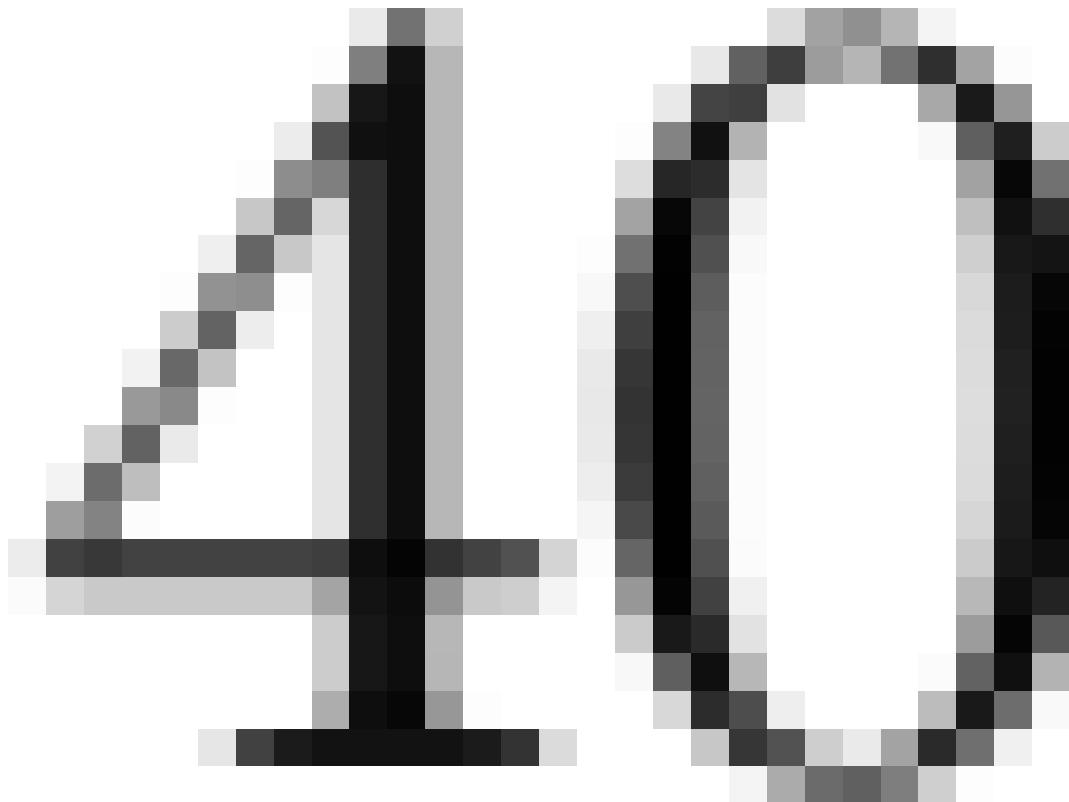

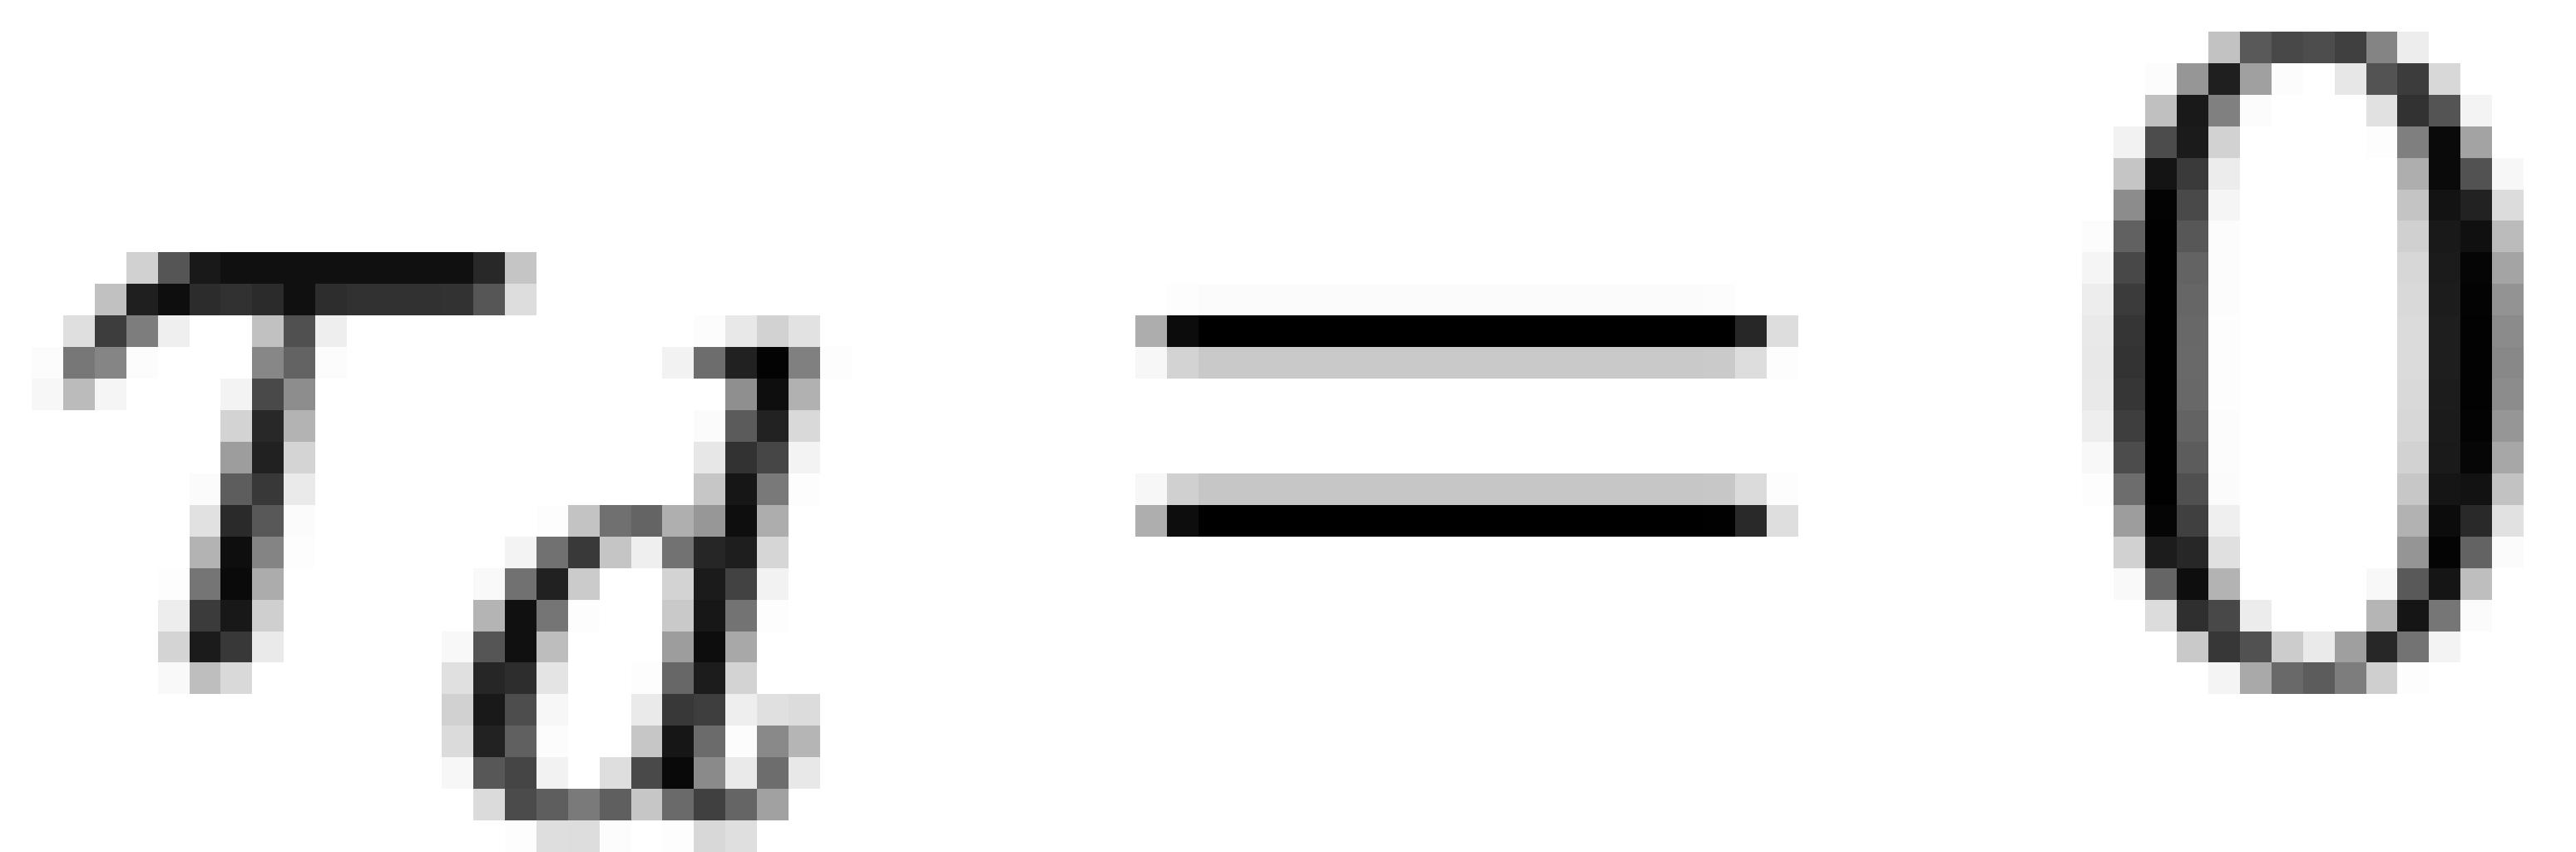





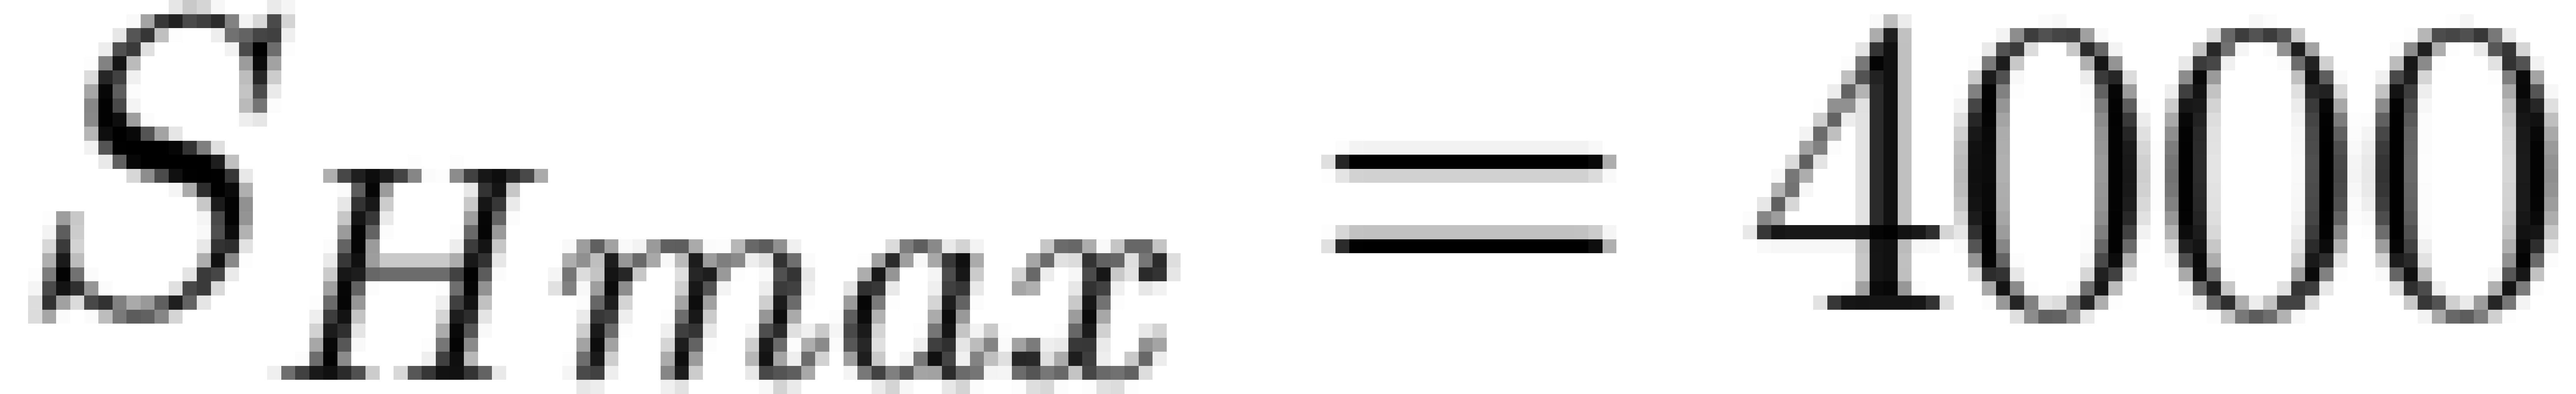



$$\underline{\underline{S}_P} =$$

$$\begin{bmatrix} 5000 & 0 & 0 \\ 0 & 4000 & 0 \\ 0 & 0 & 3000 \end{bmatrix} \text{ psi}$$

$$\underline{\underline{S}_G} =$$


$$\begin{bmatrix} 4000 & 0 & 0 \\ 0 & 3000 & 0 \\ 0 & 0 & 5000 \end{bmatrix}$$


psi

$$\underline{n}_n =$$

$$\begin{bmatrix} -0.612 \\ 0.612 \\ -0.5 \end{bmatrix}$$



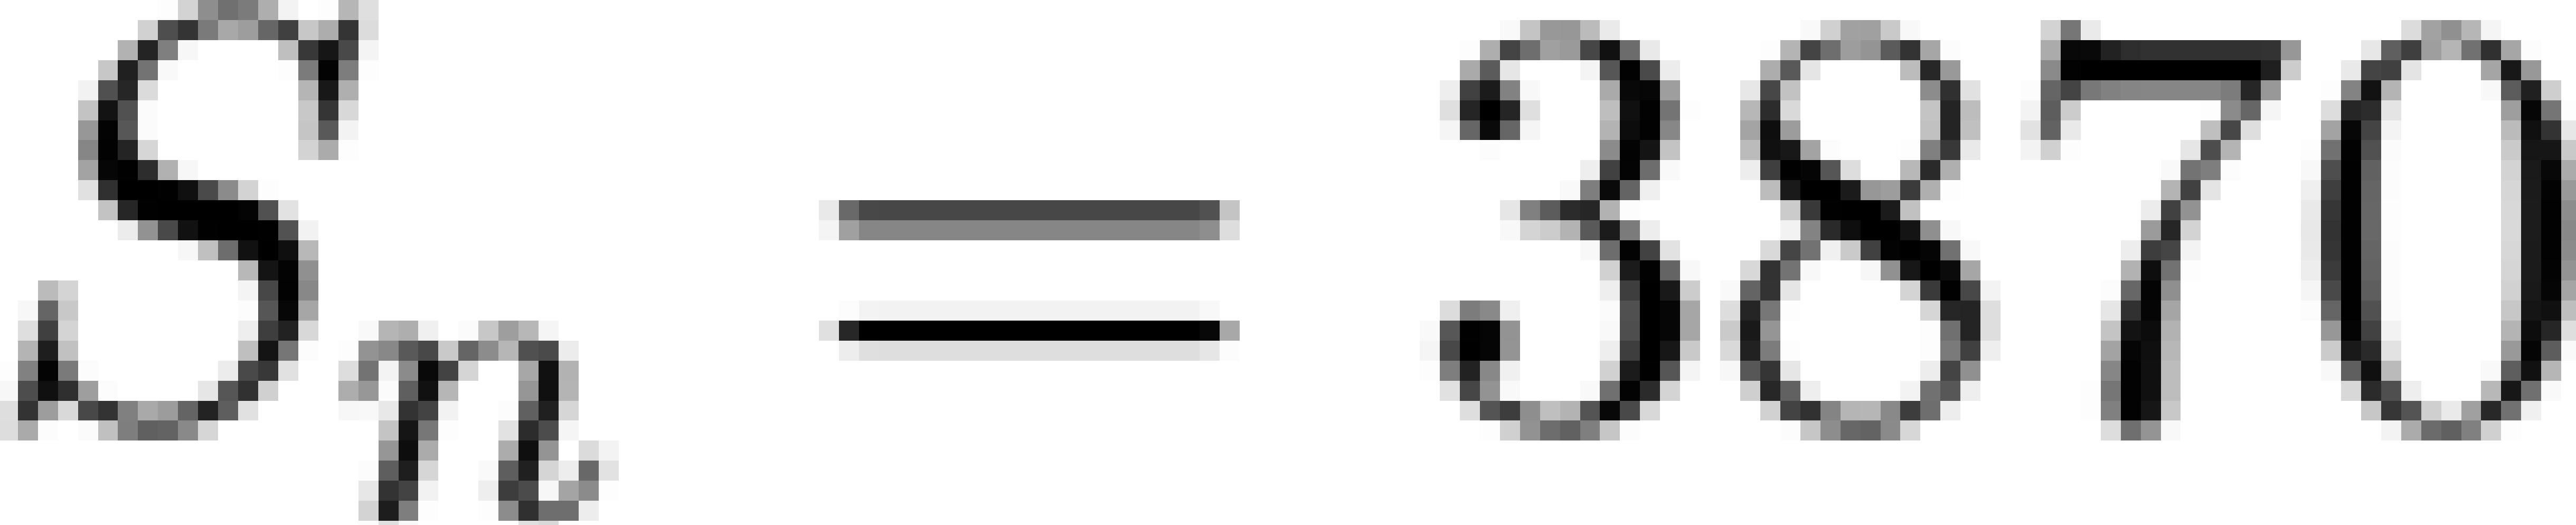


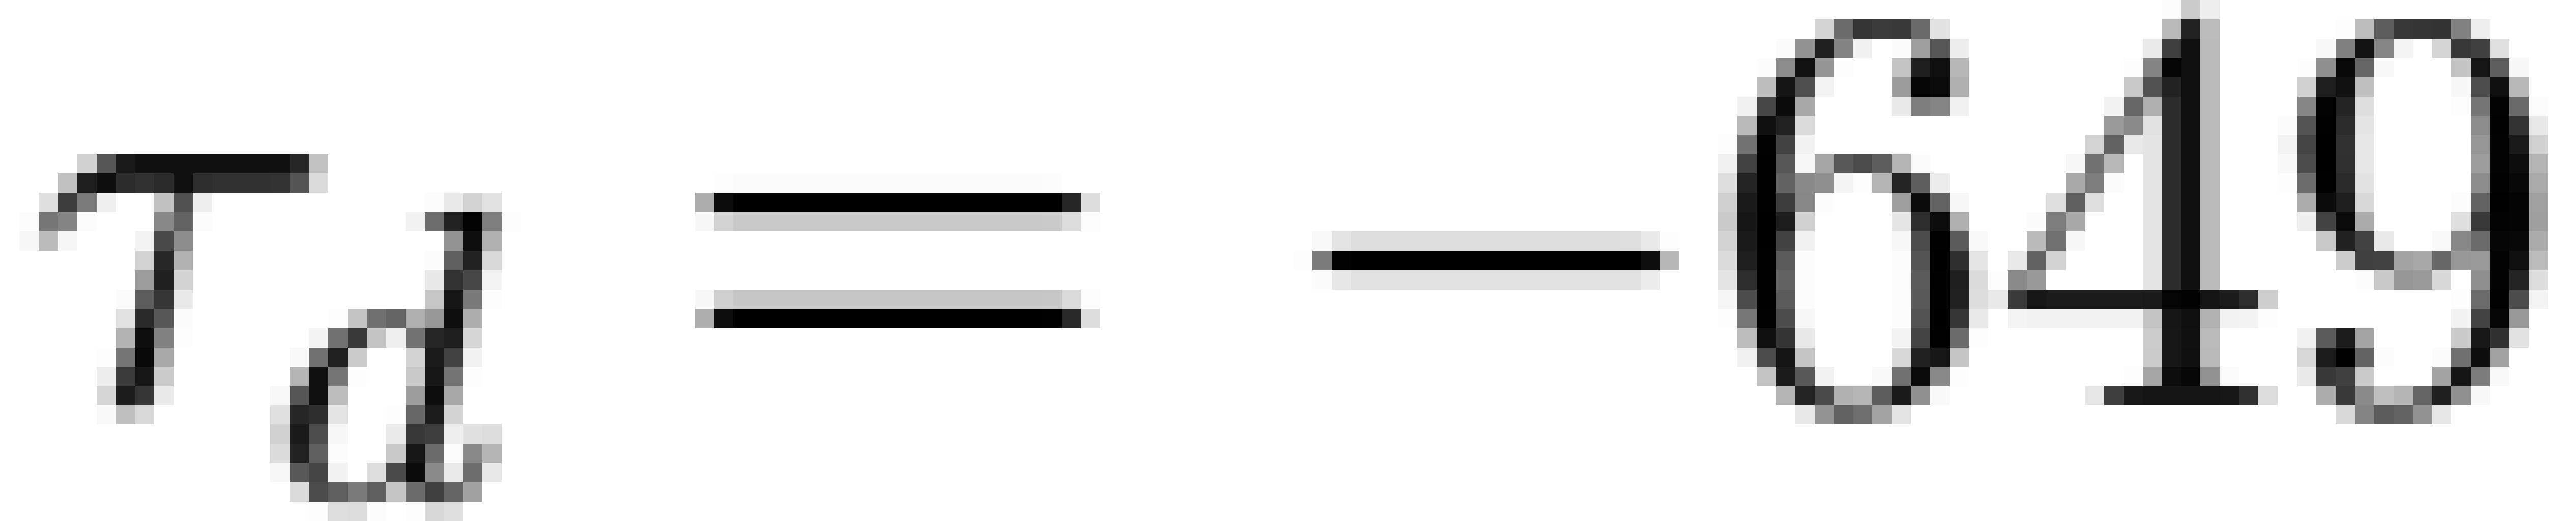





$$\underline{n}_n =$$


$$\begin{bmatrix} 0.612 \\ -0.612 \\ -0.5 \end{bmatrix}$$



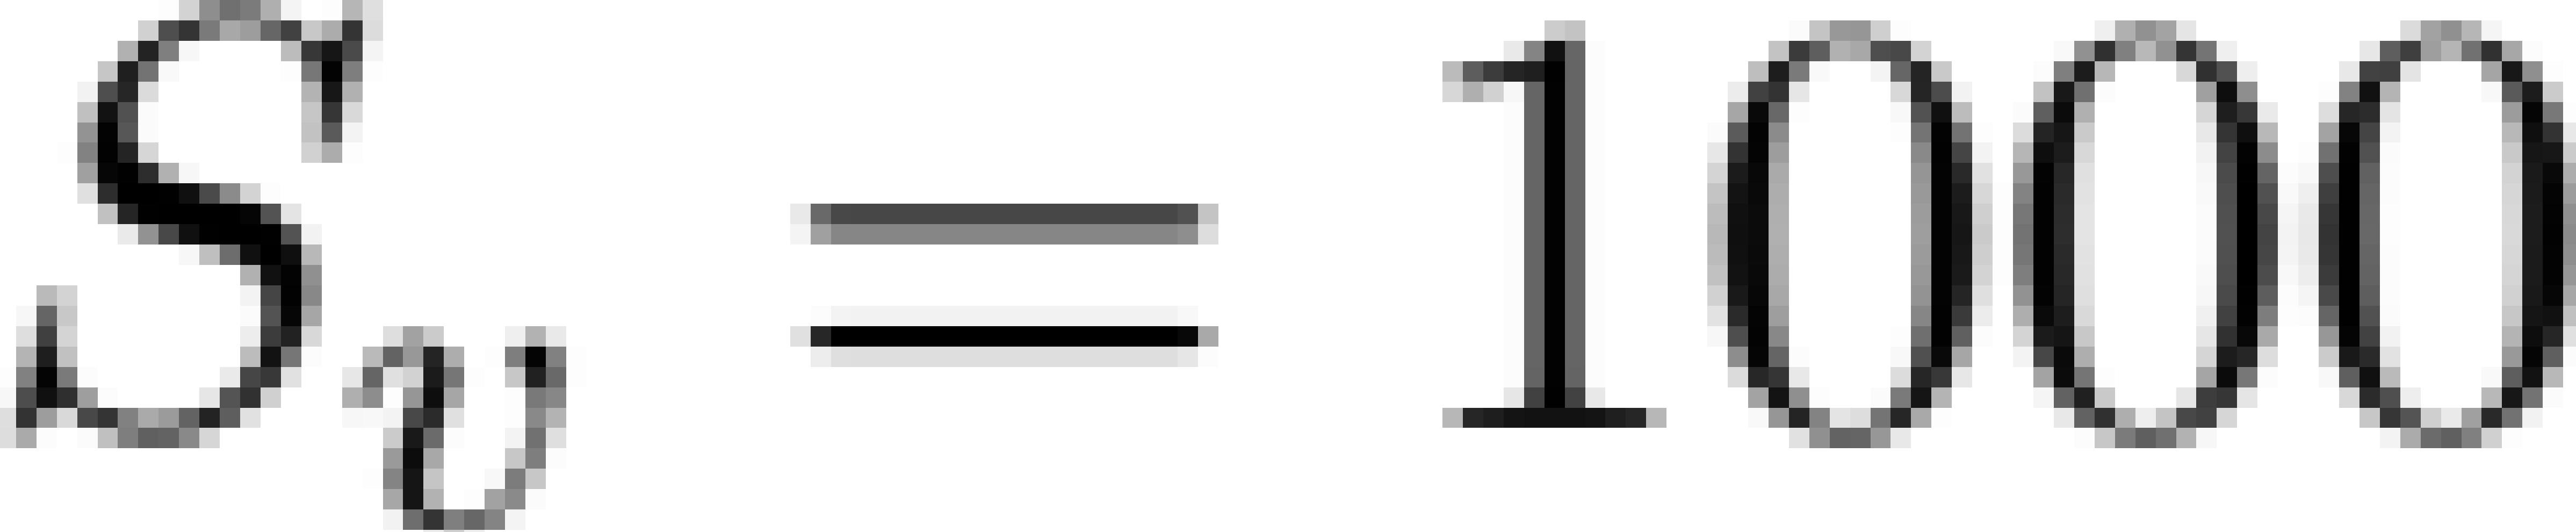

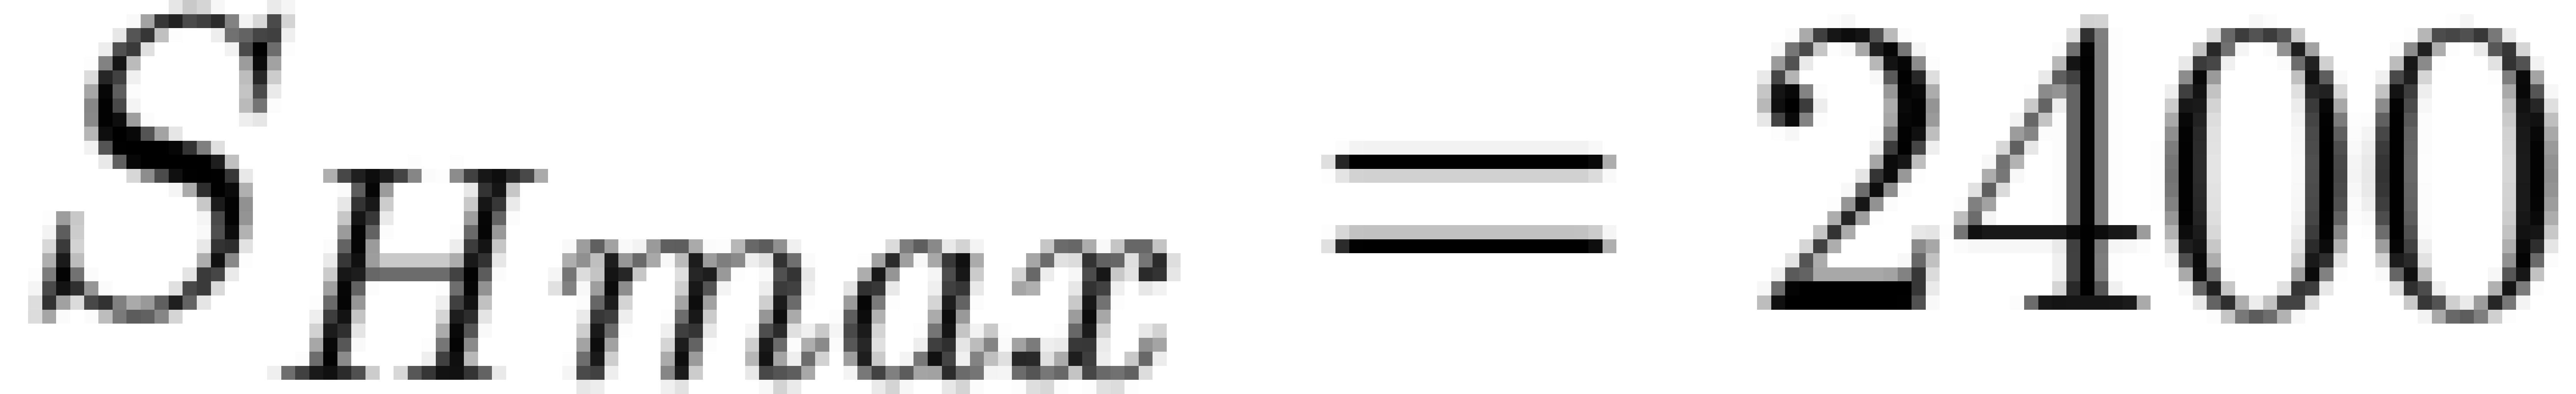




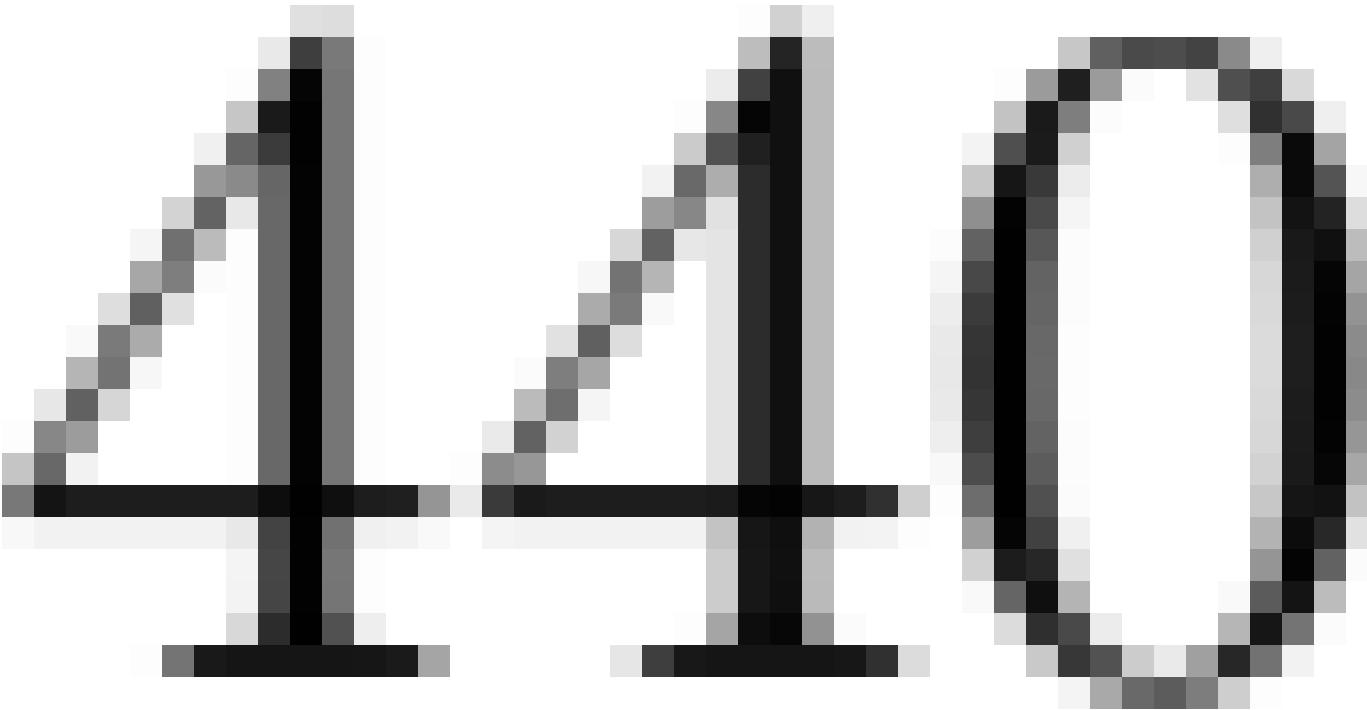

$$\underline{\underline{S}_P} =$$

$$\begin{bmatrix} 2400 & 0 & 0 \\ 0 & 1200 & 0 \\ 0 & 0 & 1000 \end{bmatrix} \text{ psi}$$

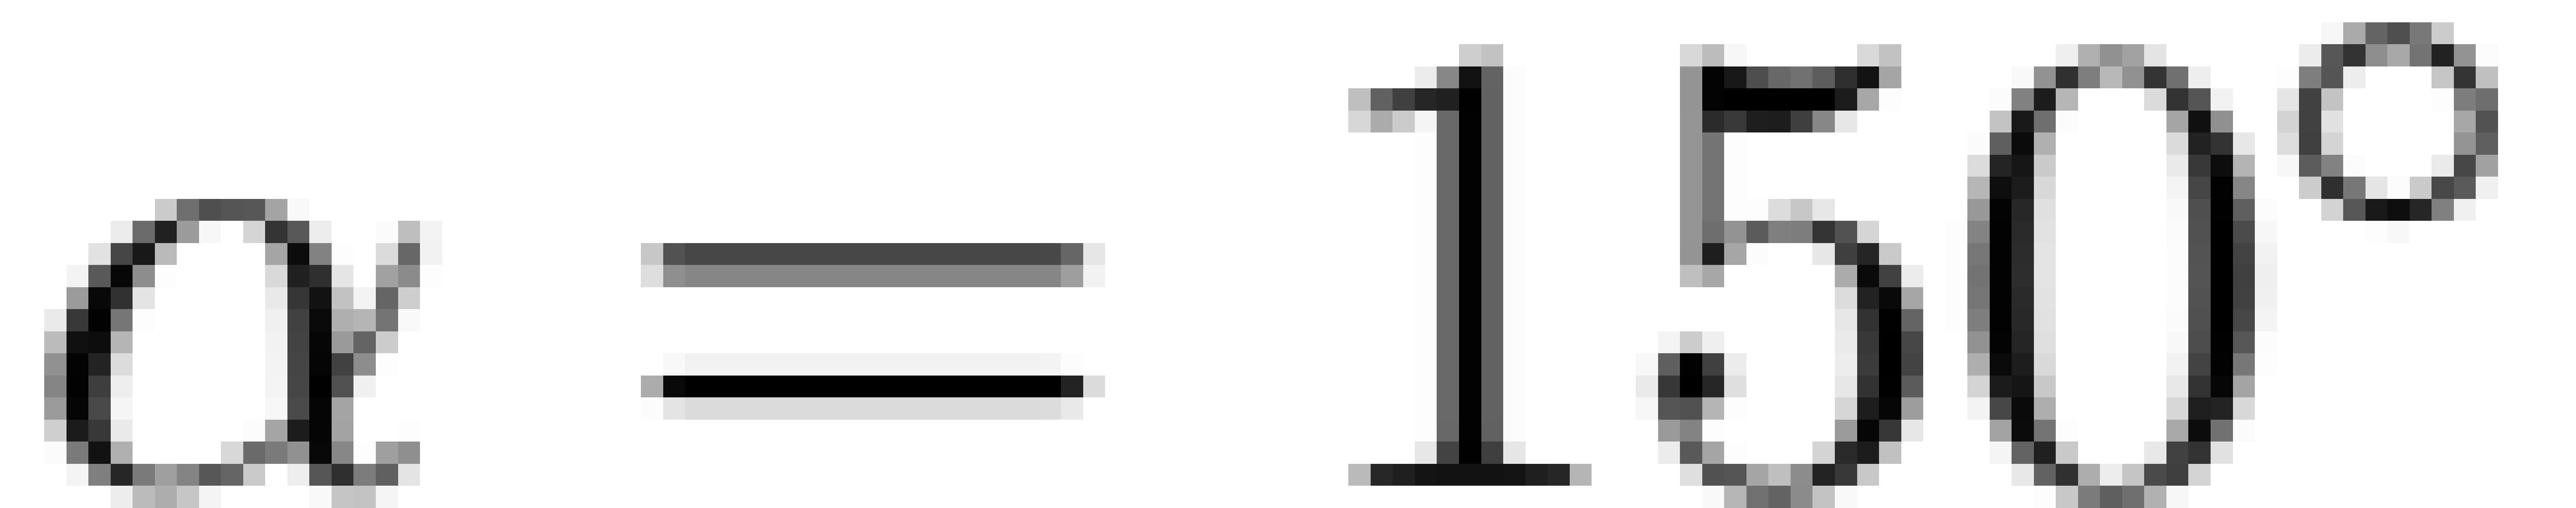

$$R_{PG} =$$

$$\begin{bmatrix} -0.866 & 0.5 & 0 \\ -0.5 & -0.866 & 0 \\ 0 & 0 & 1 \end{bmatrix}$$


$$\underline{\underline{S}_G} =$$


$$\begin{bmatrix} 2100 & -520 & 0 \\ -520 & 1500 & 0 \\ 0 & 0 & 1000 \end{bmatrix}$$


psi

$$\underline{n}_n =$$

$$\begin{bmatrix} -0.814 \\ -0.470 \\ -0.342 \end{bmatrix}$$




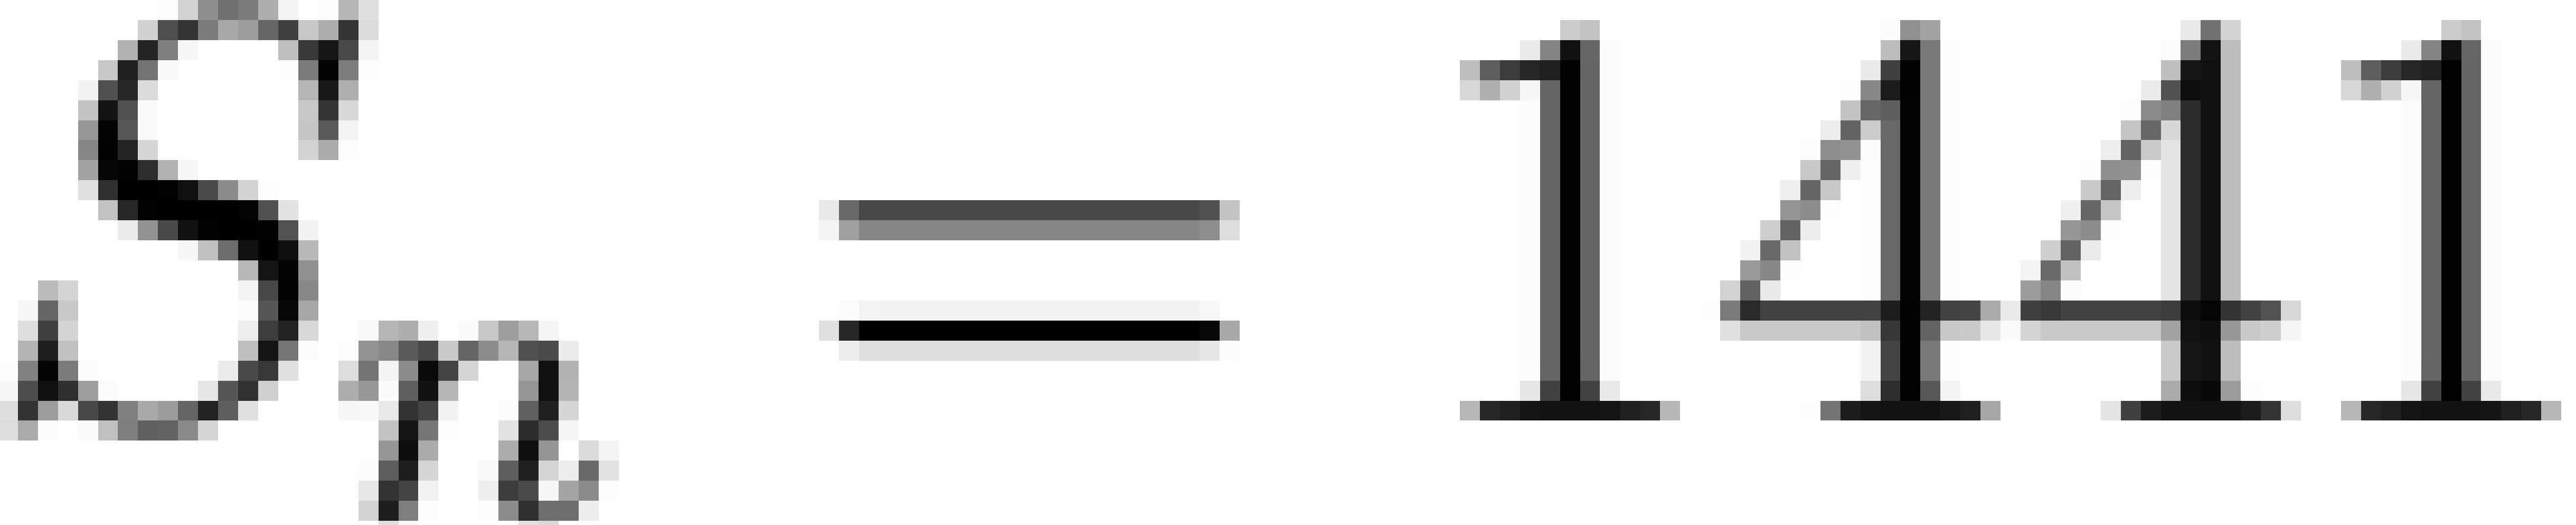


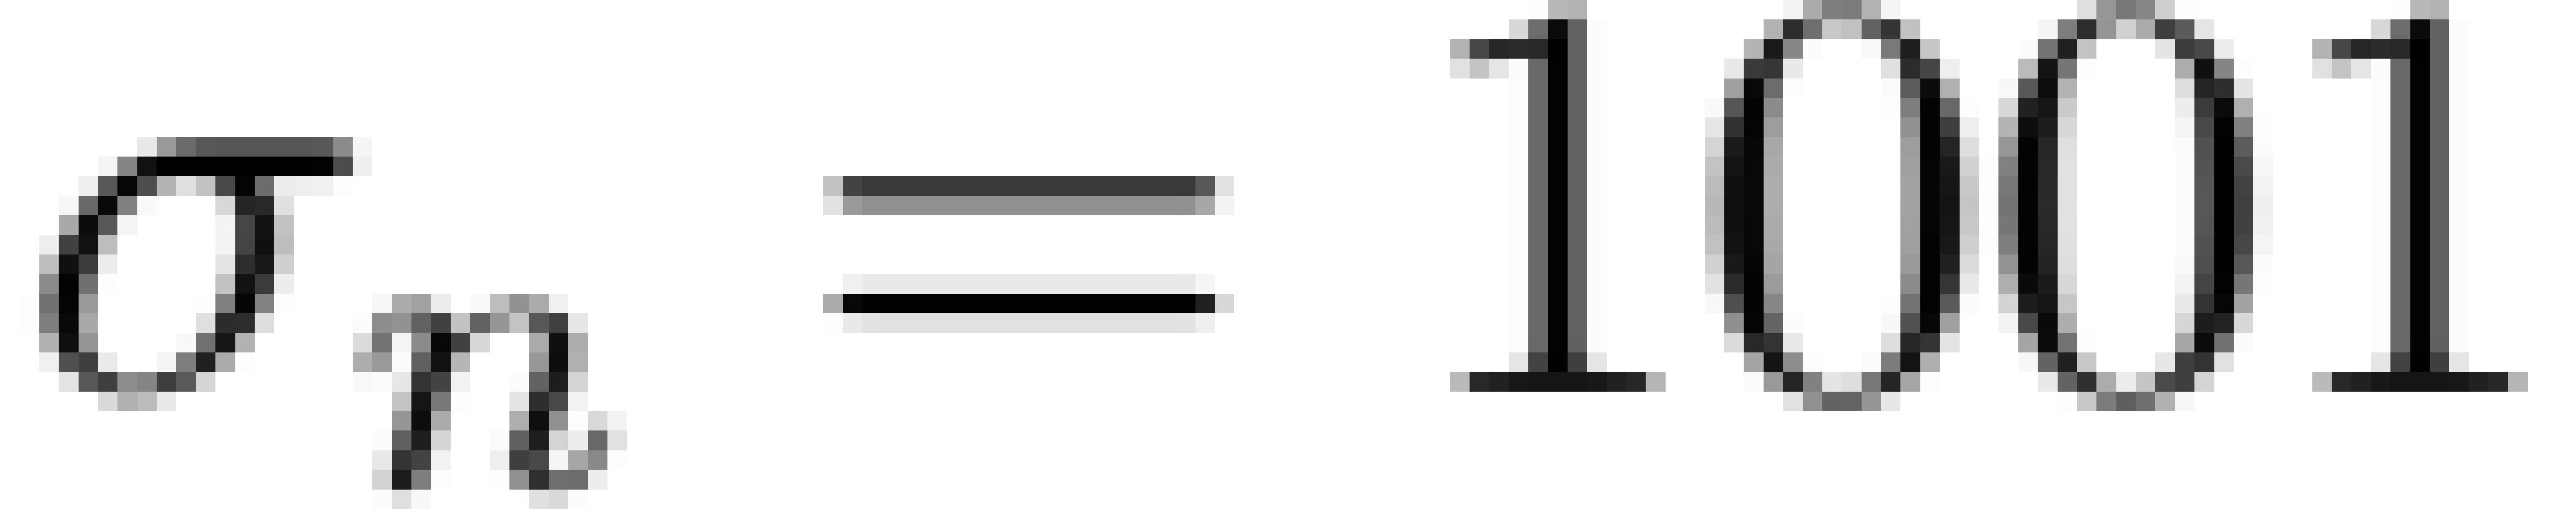







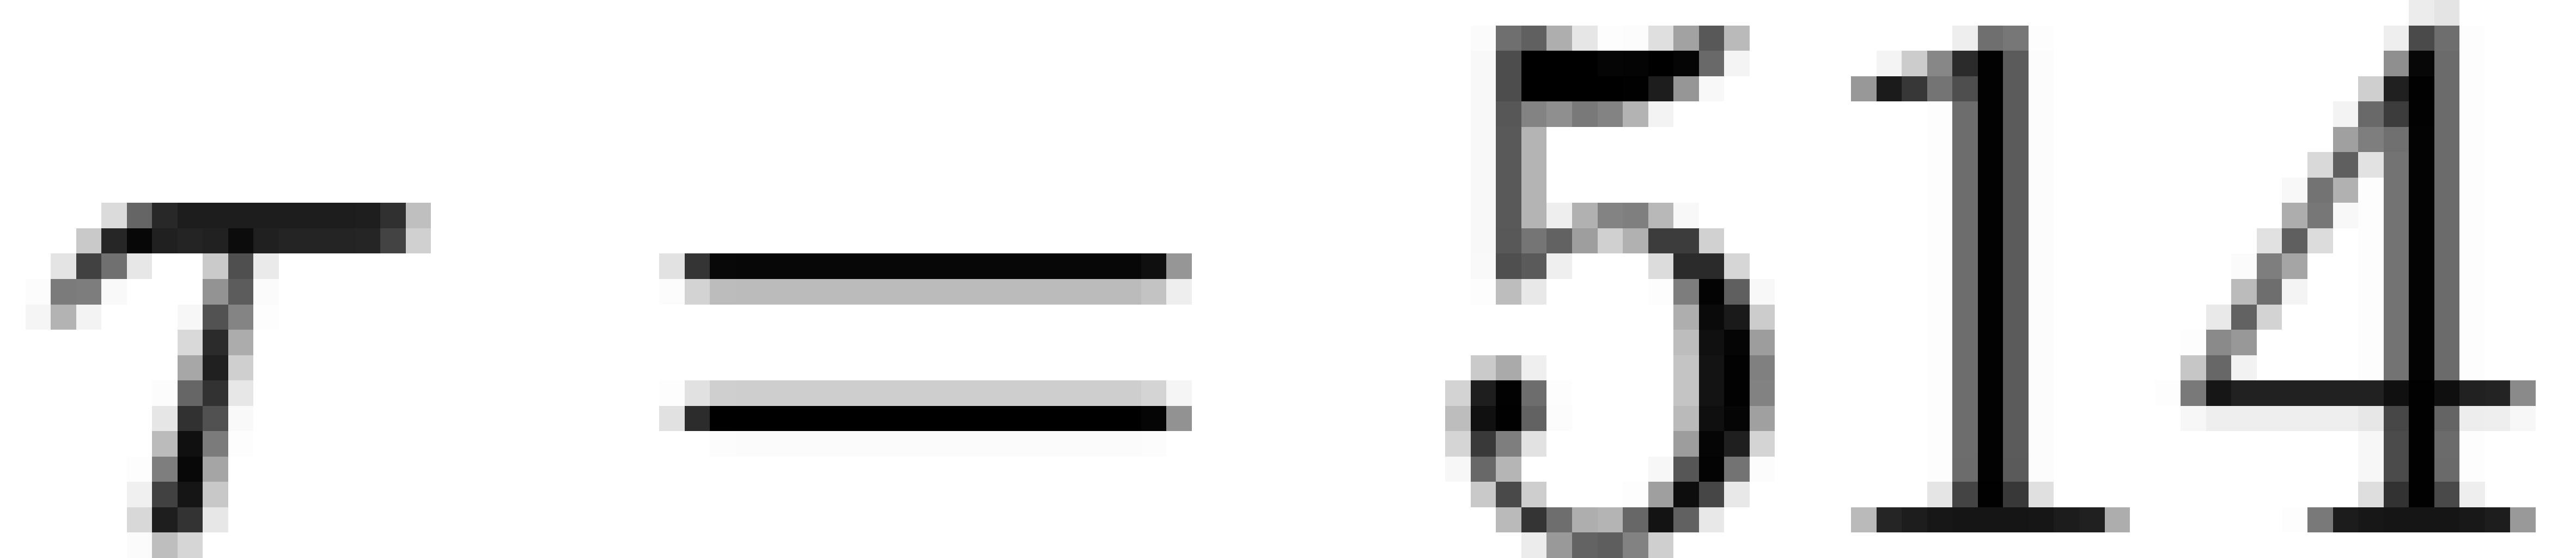







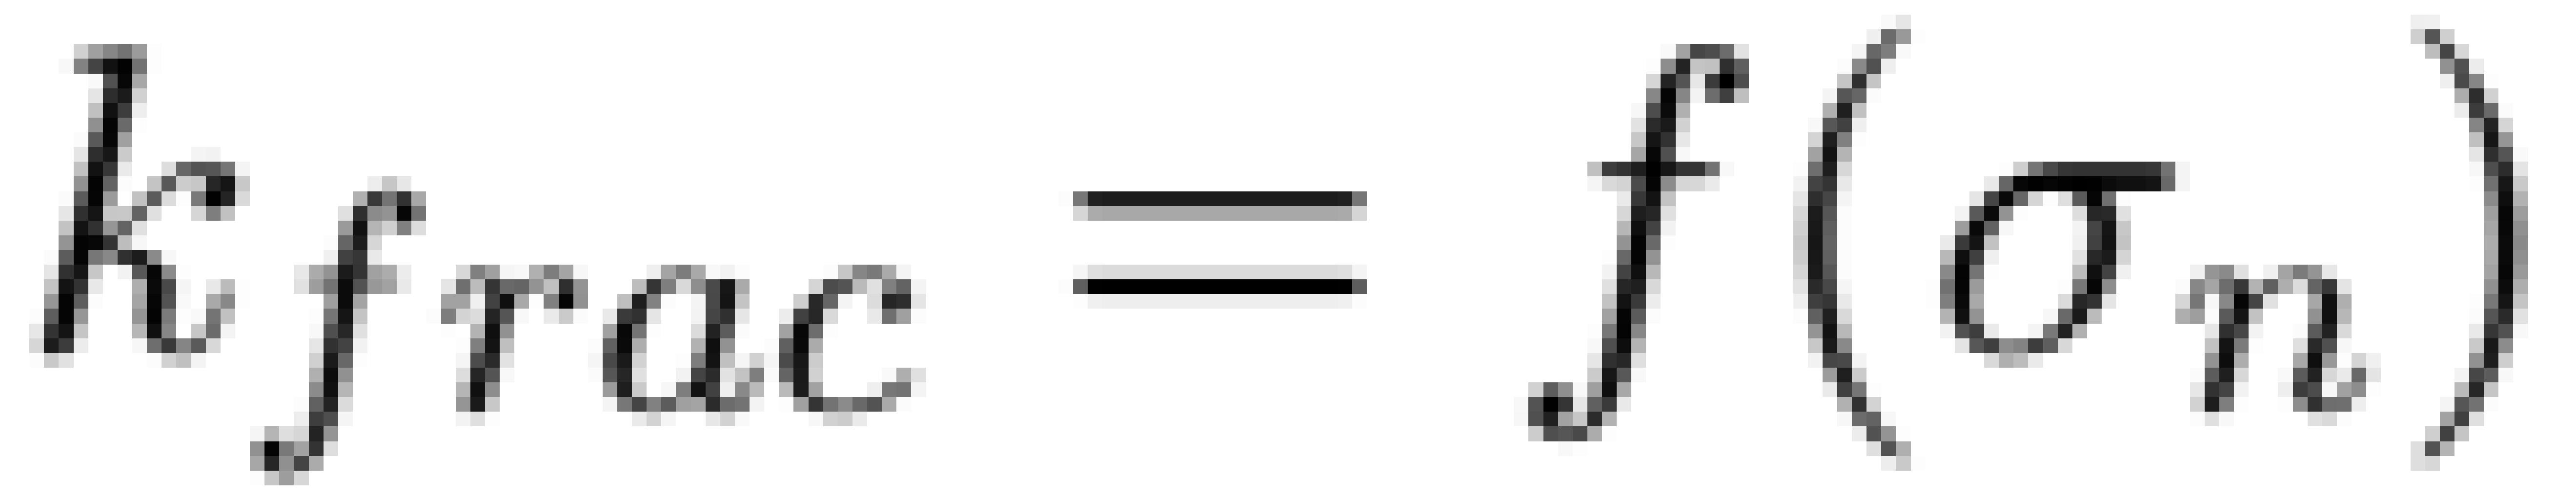

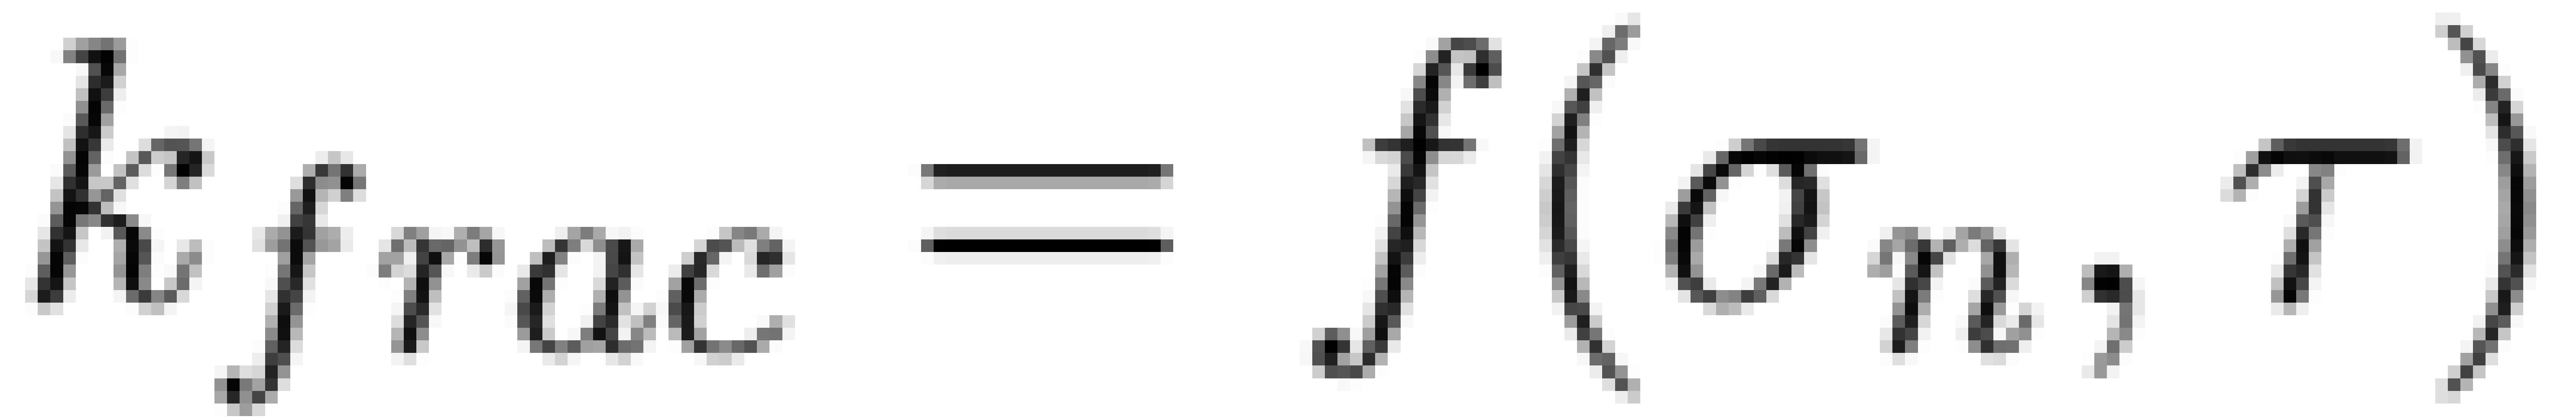


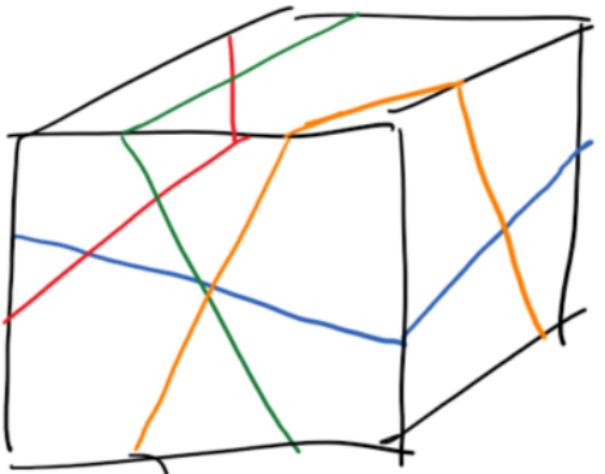



low matrix K
with fractures

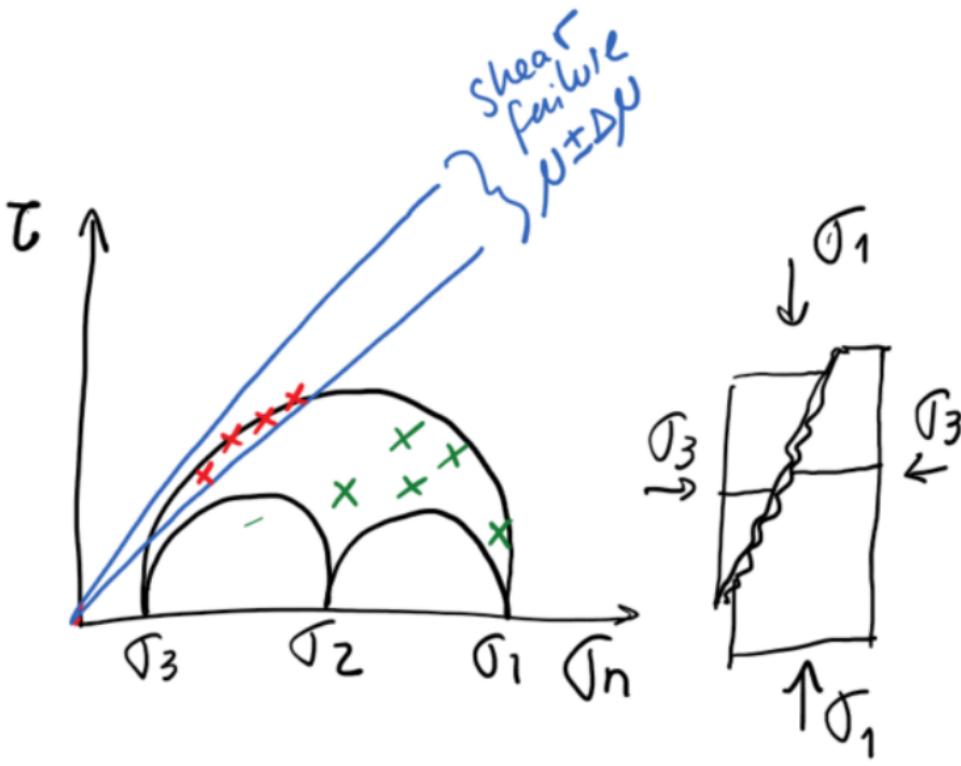


$$\uparrow \frac{\tau}{\sigma_n} \Rightarrow \uparrow K_{frac}$$



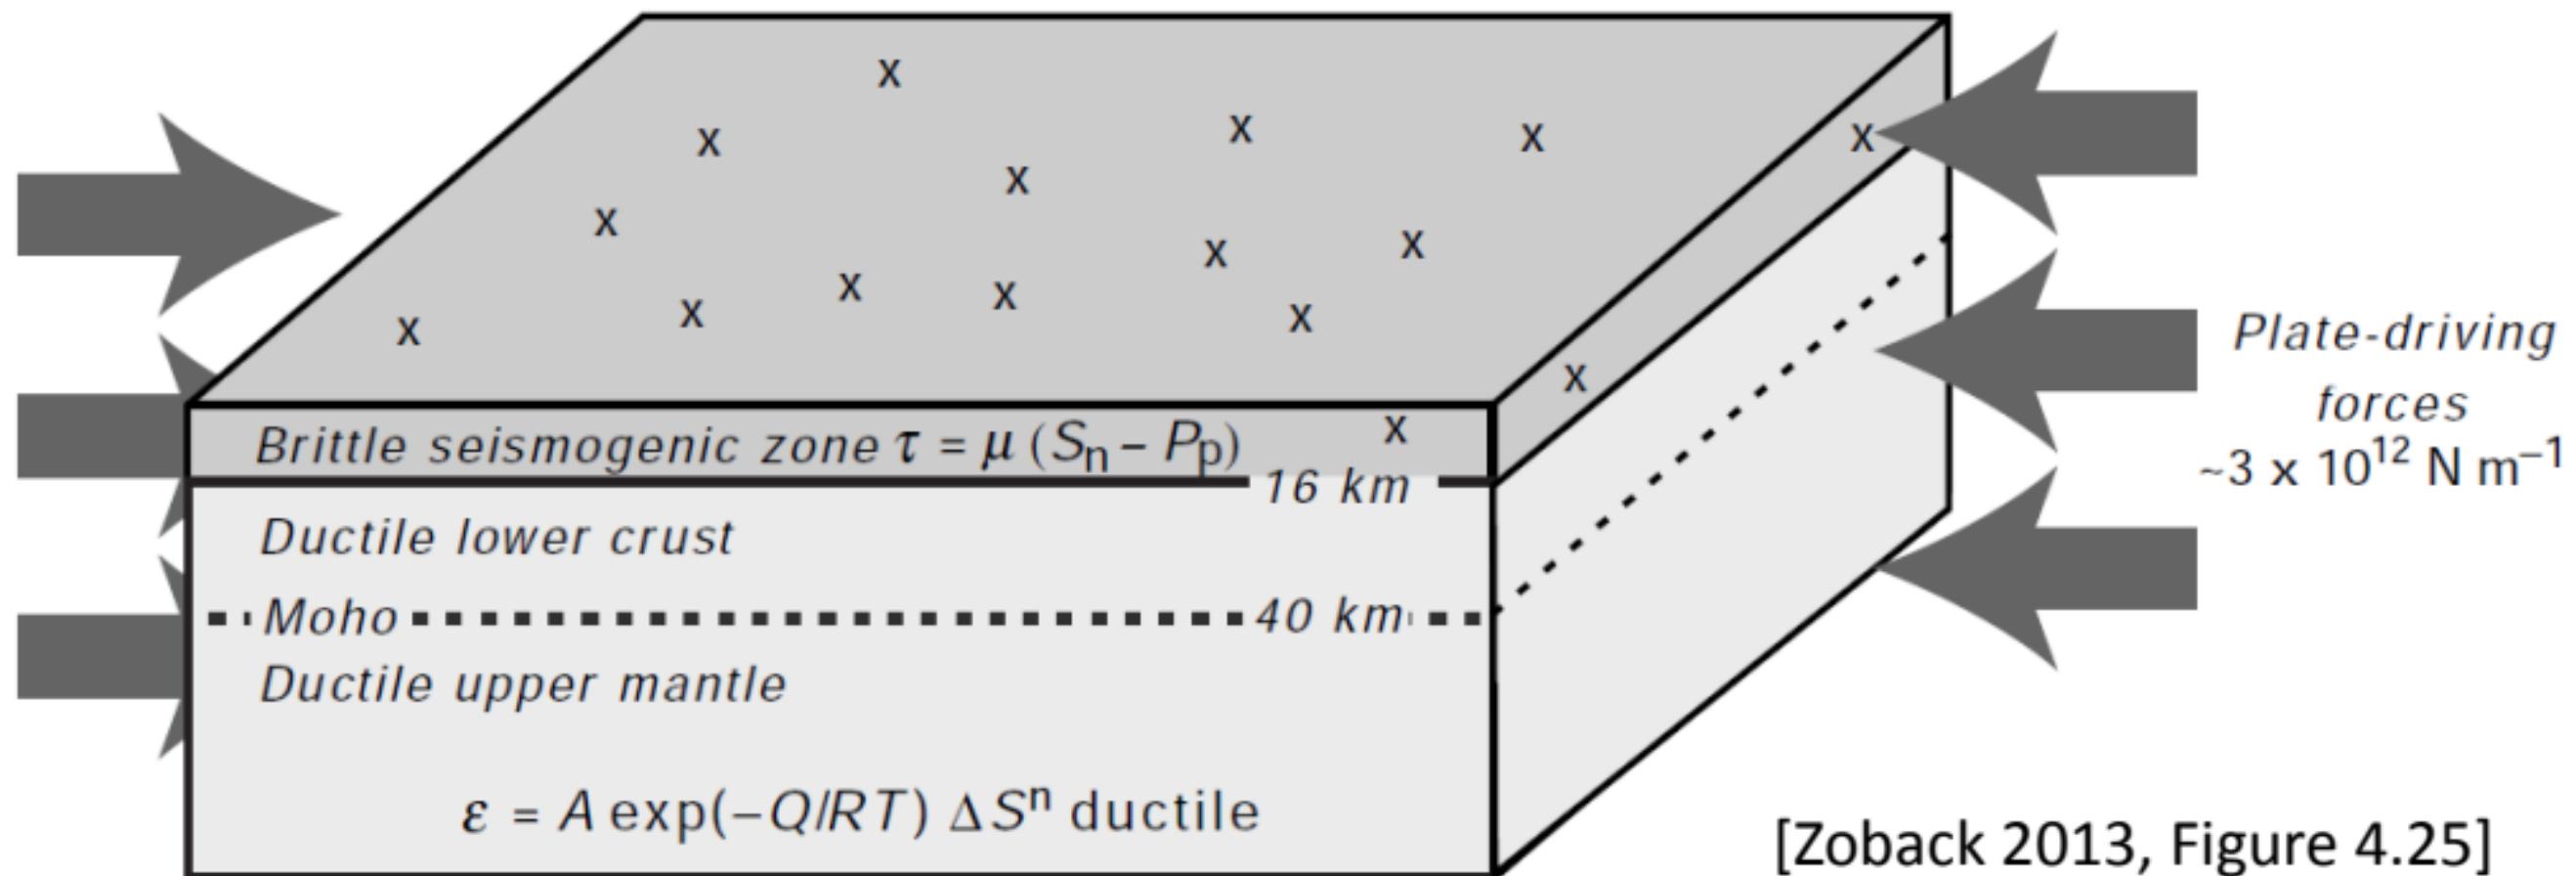




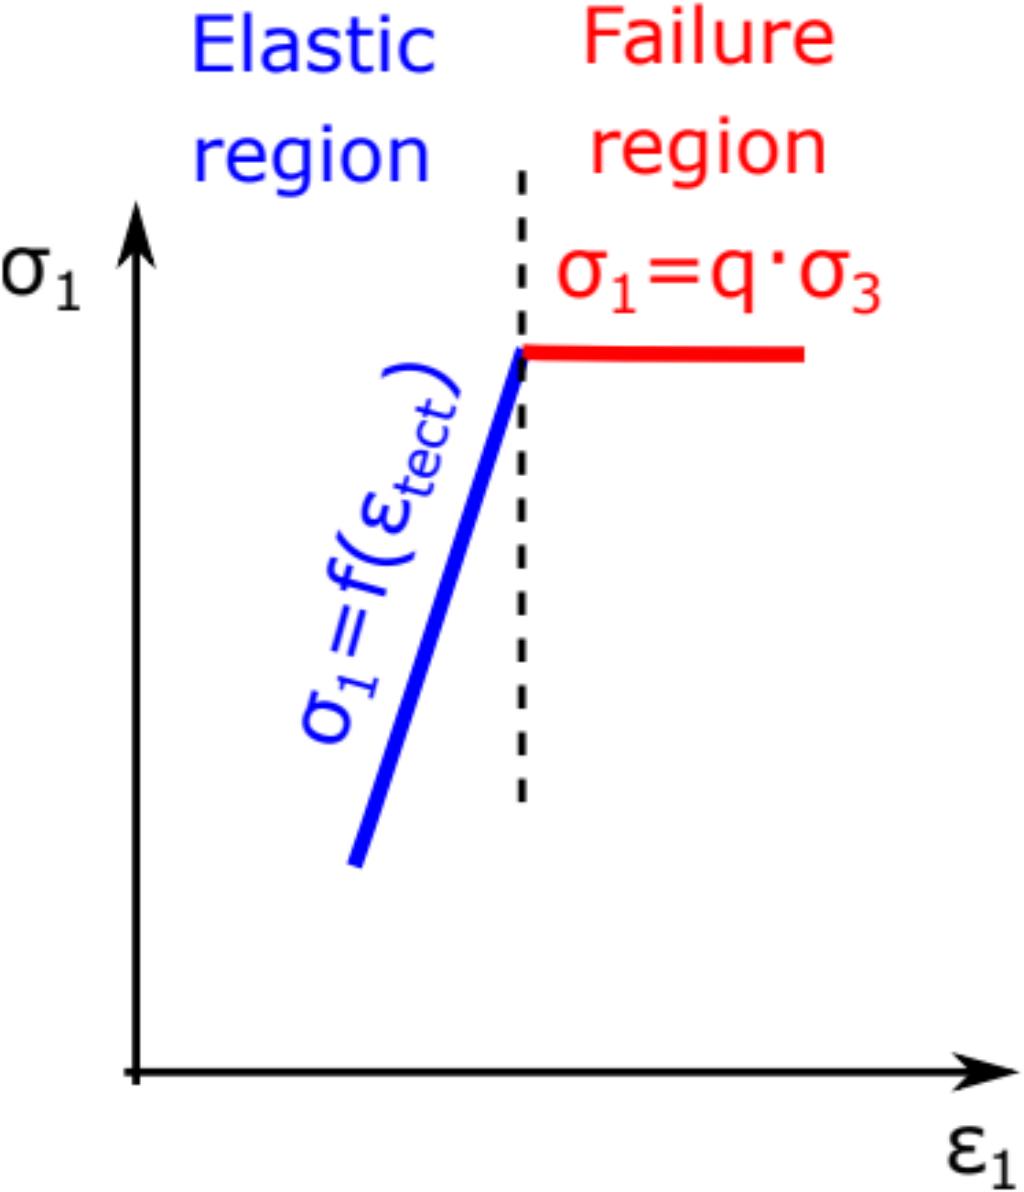







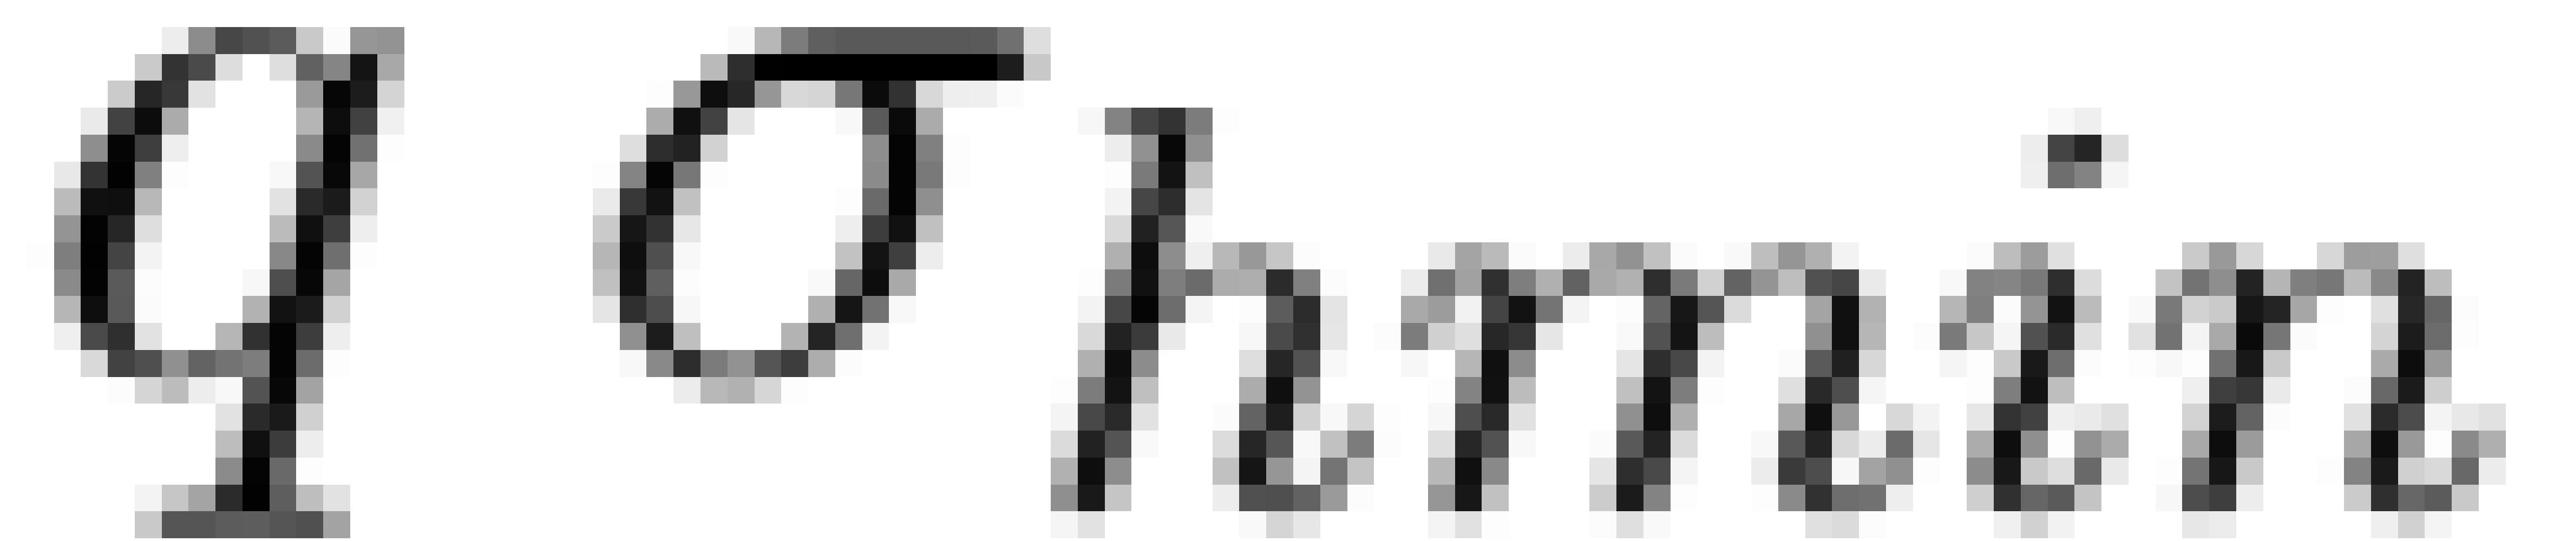


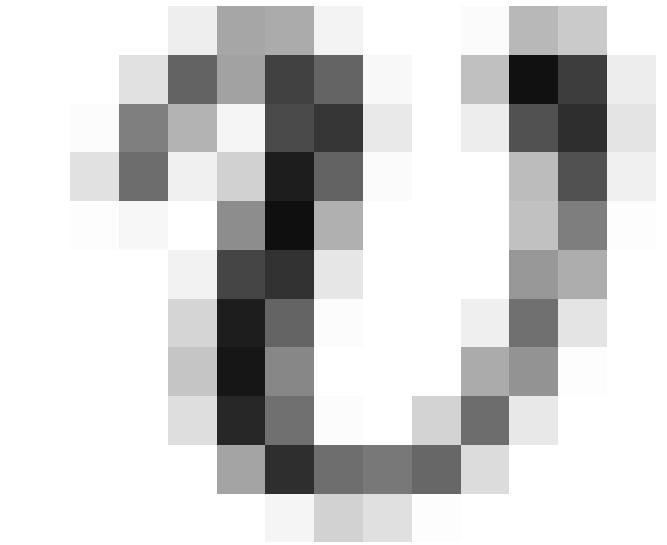
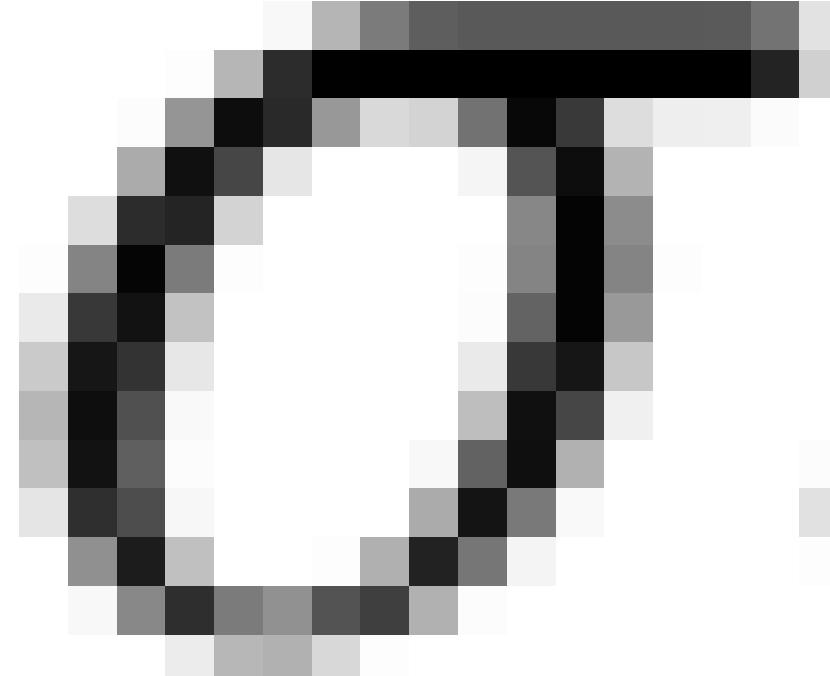
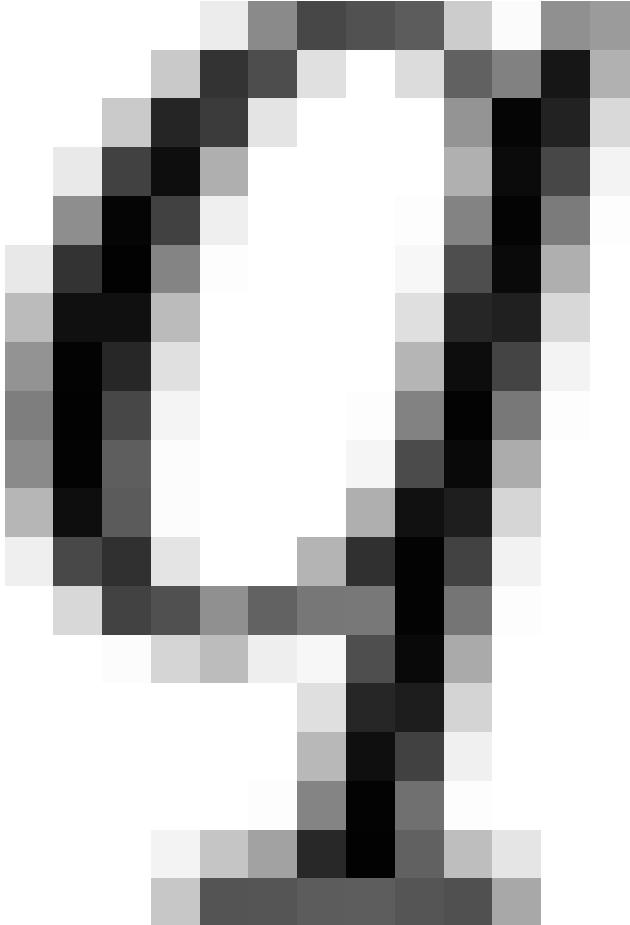


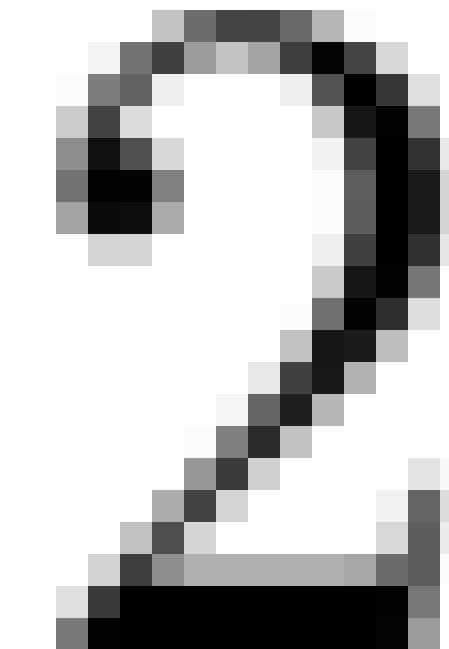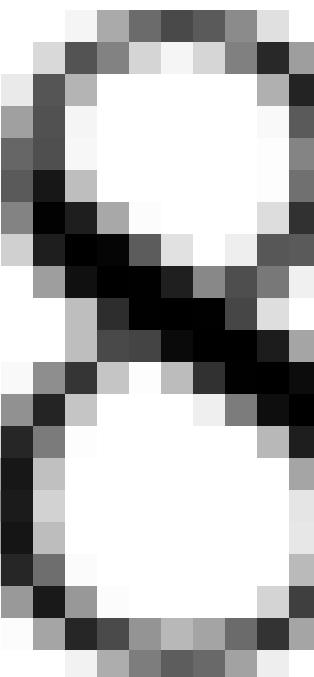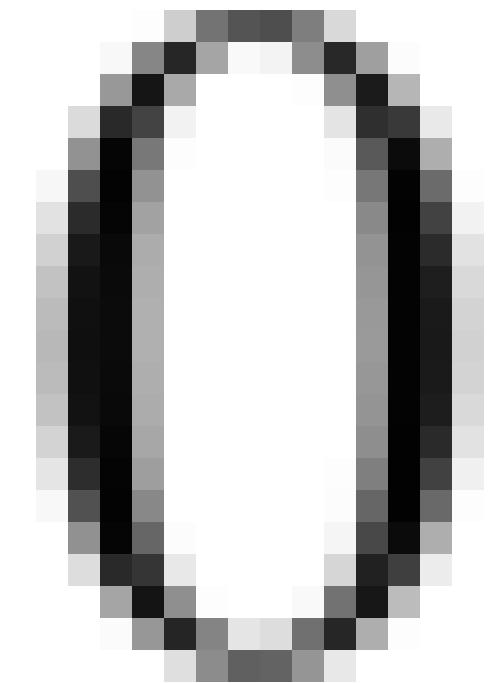









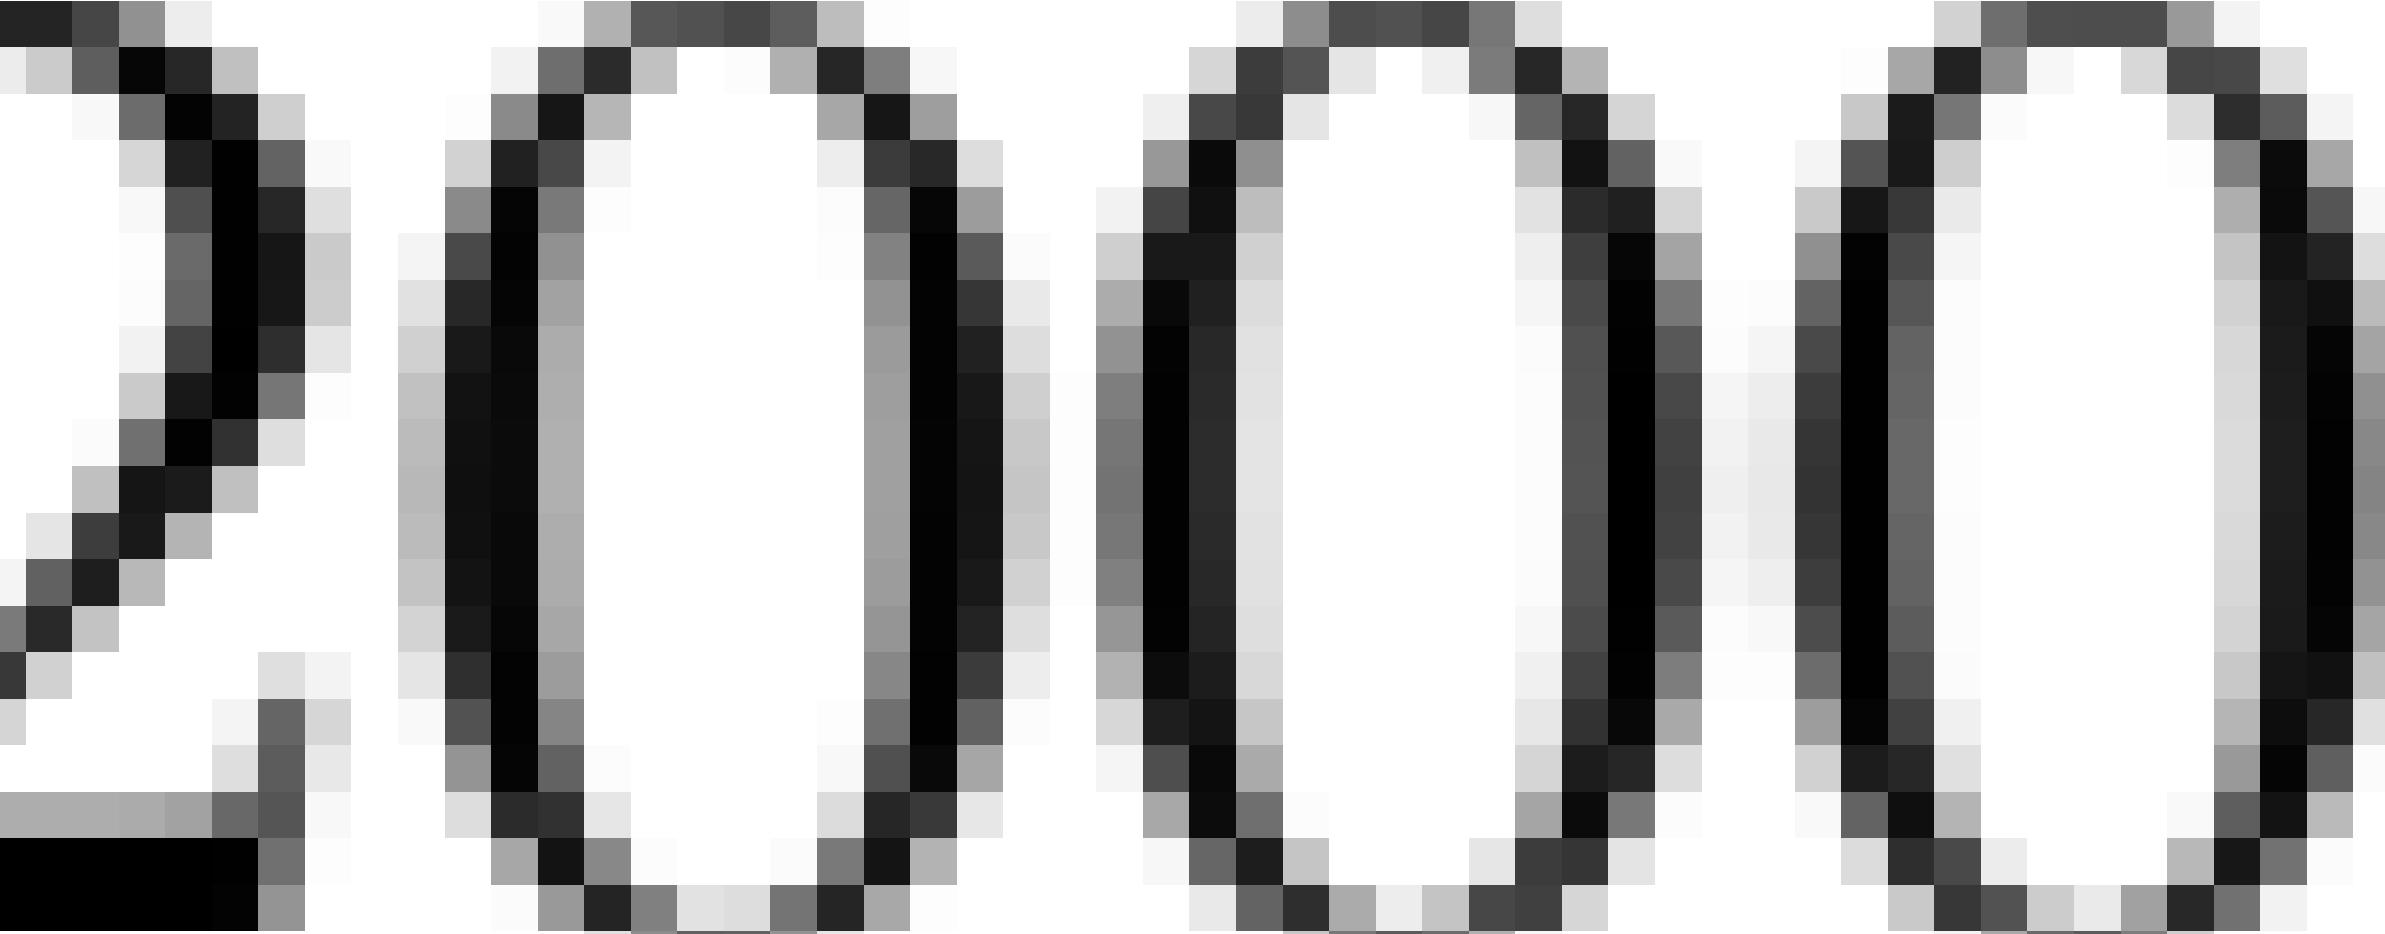




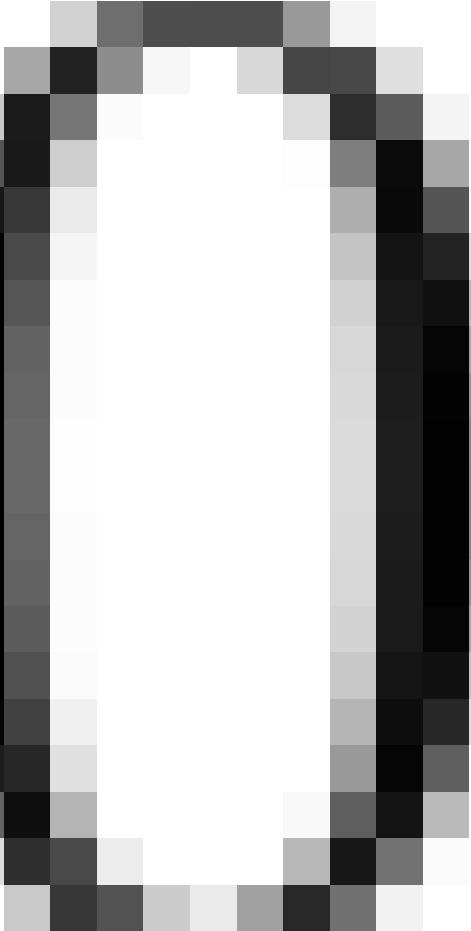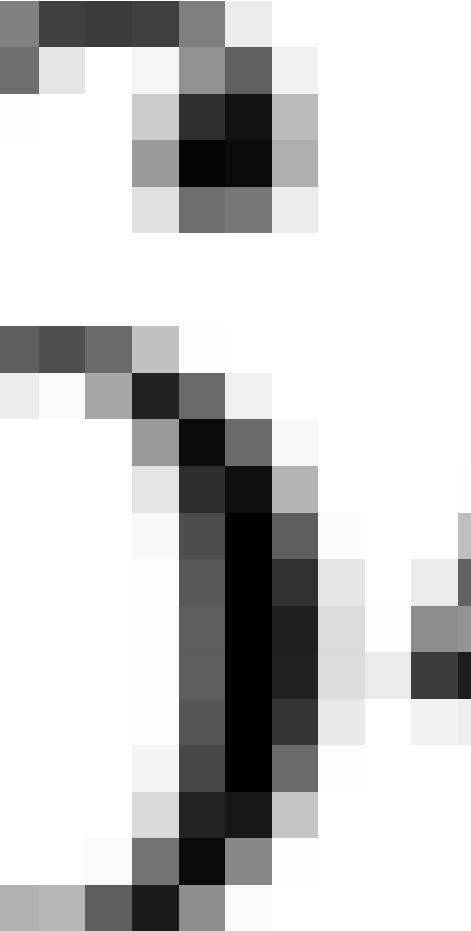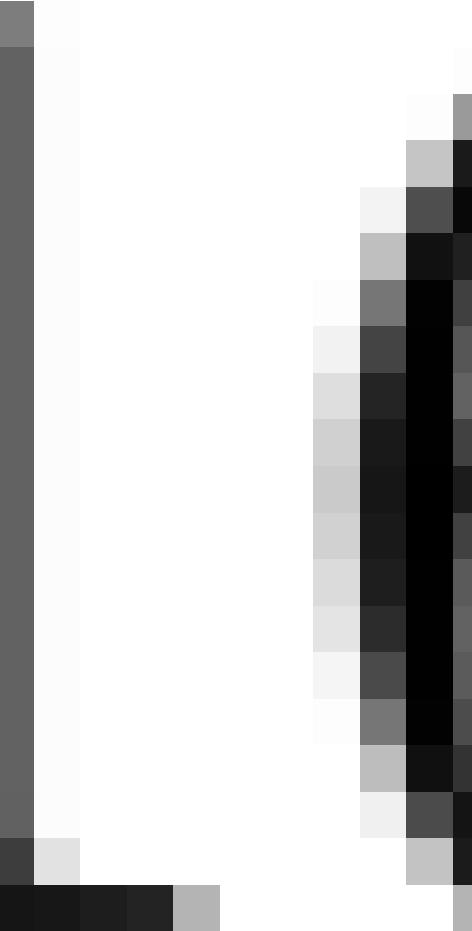



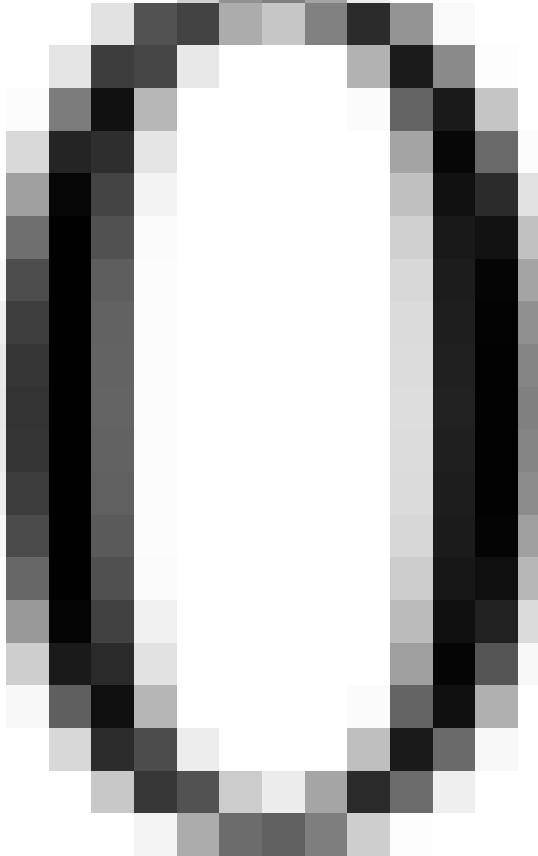
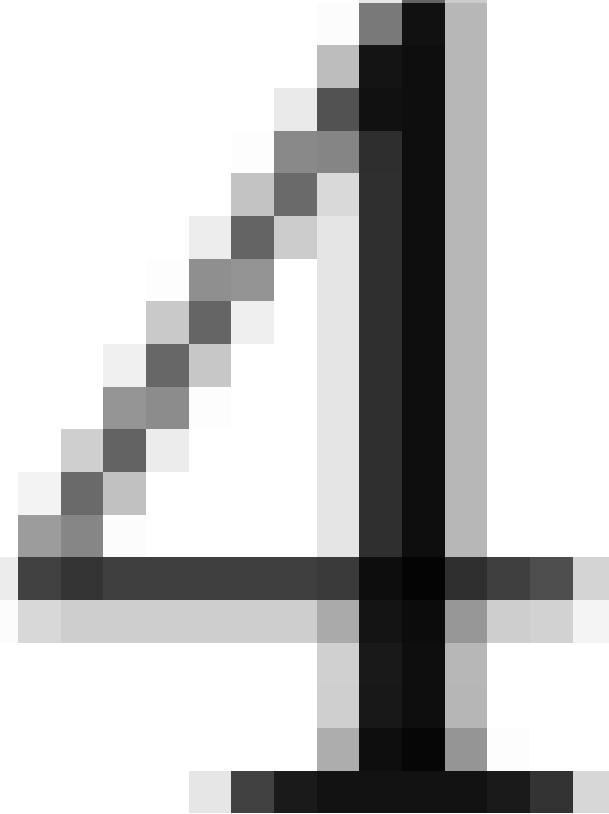
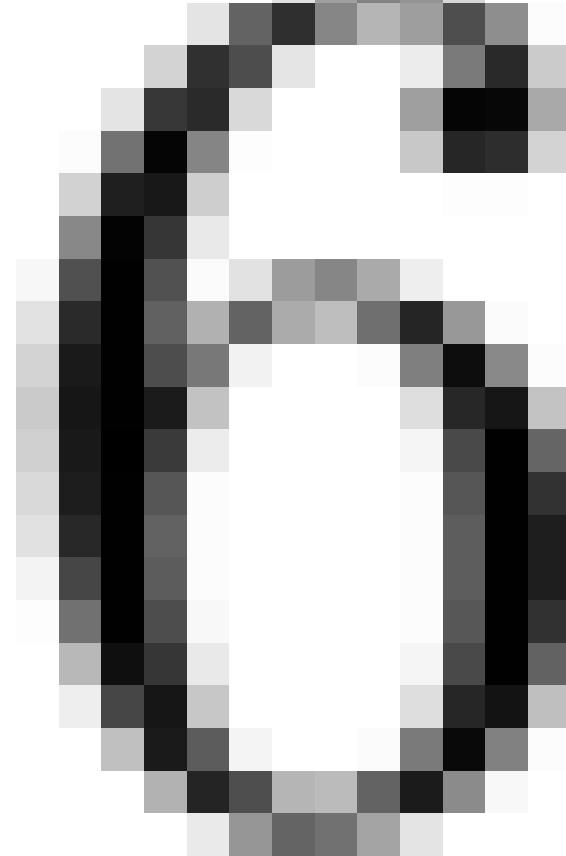
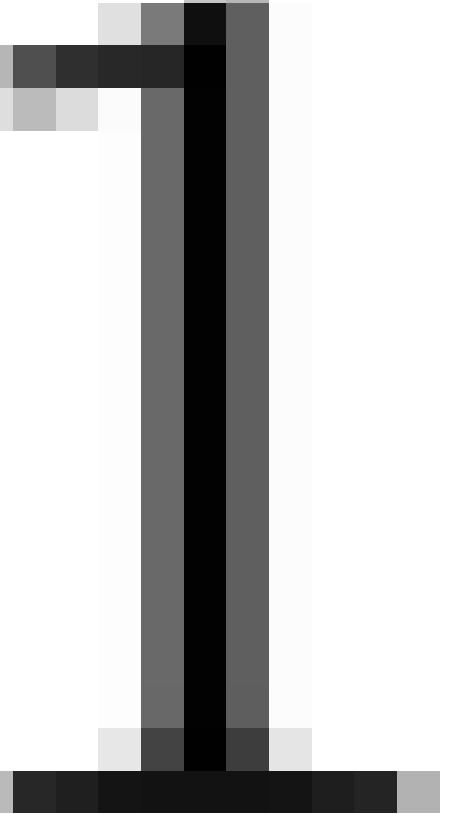


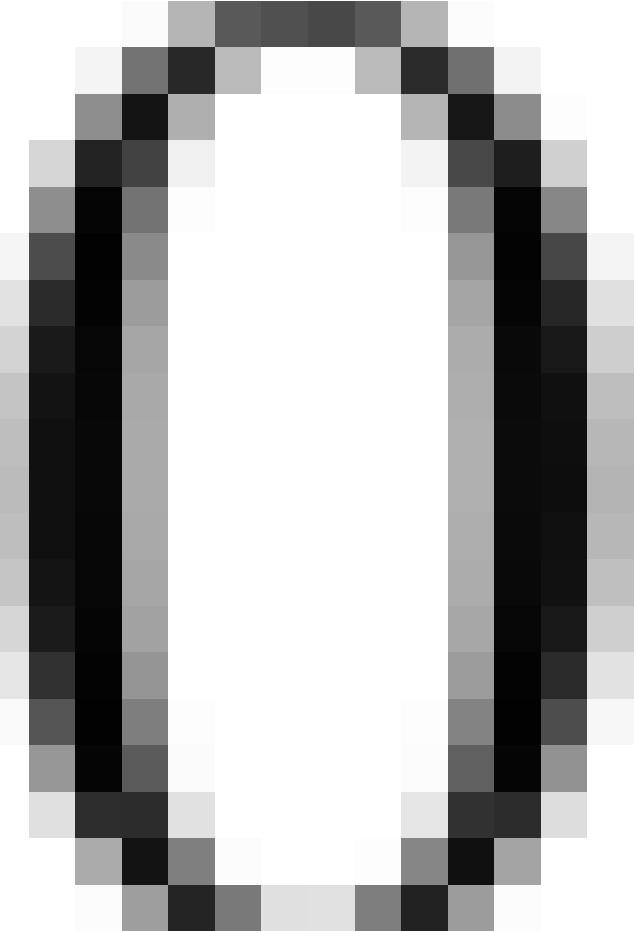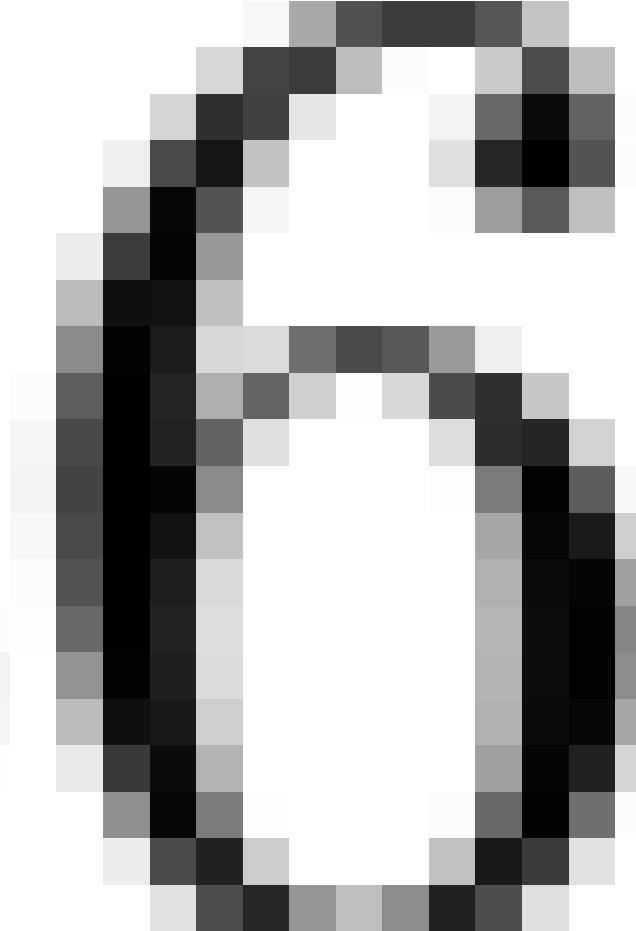



$$\sigma_{H\text{max}} =$$





$$90^\circ =$$


$$\frac{1 + \sin 30^\circ}{1 - \sin 30^\circ} 360$$

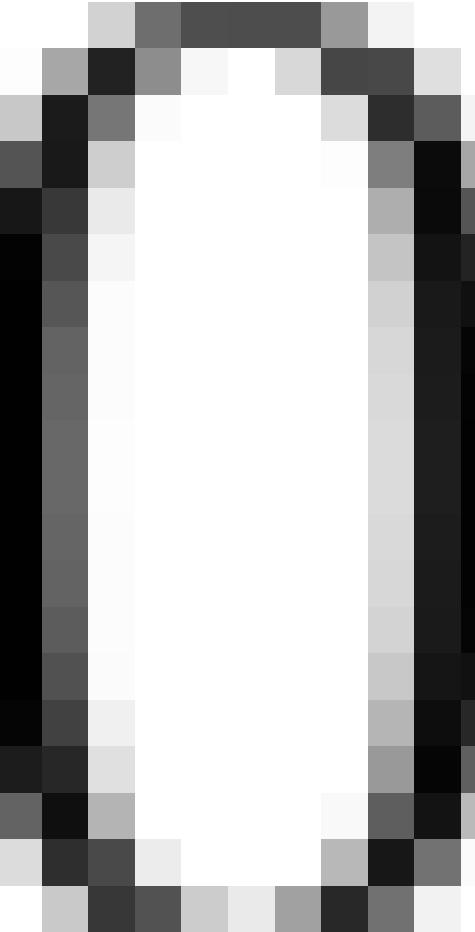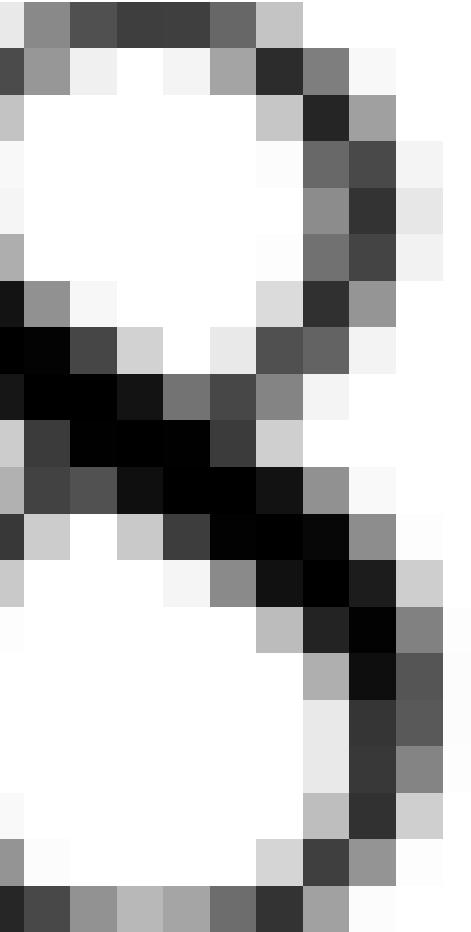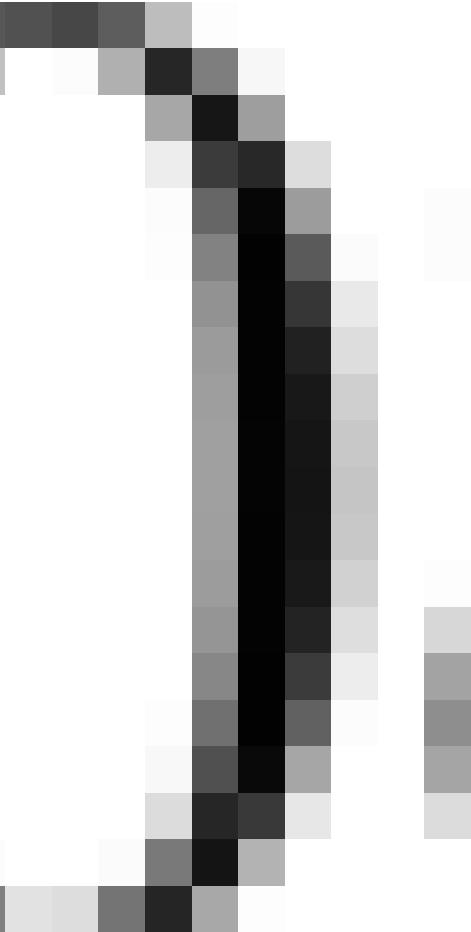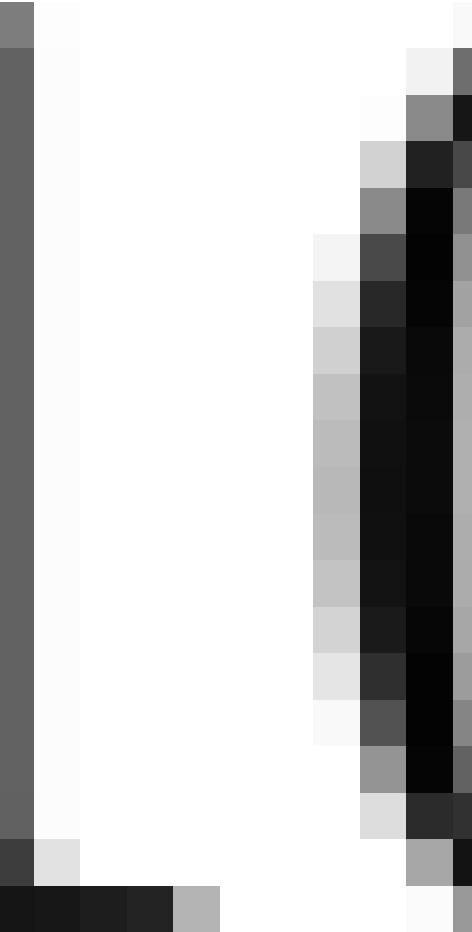





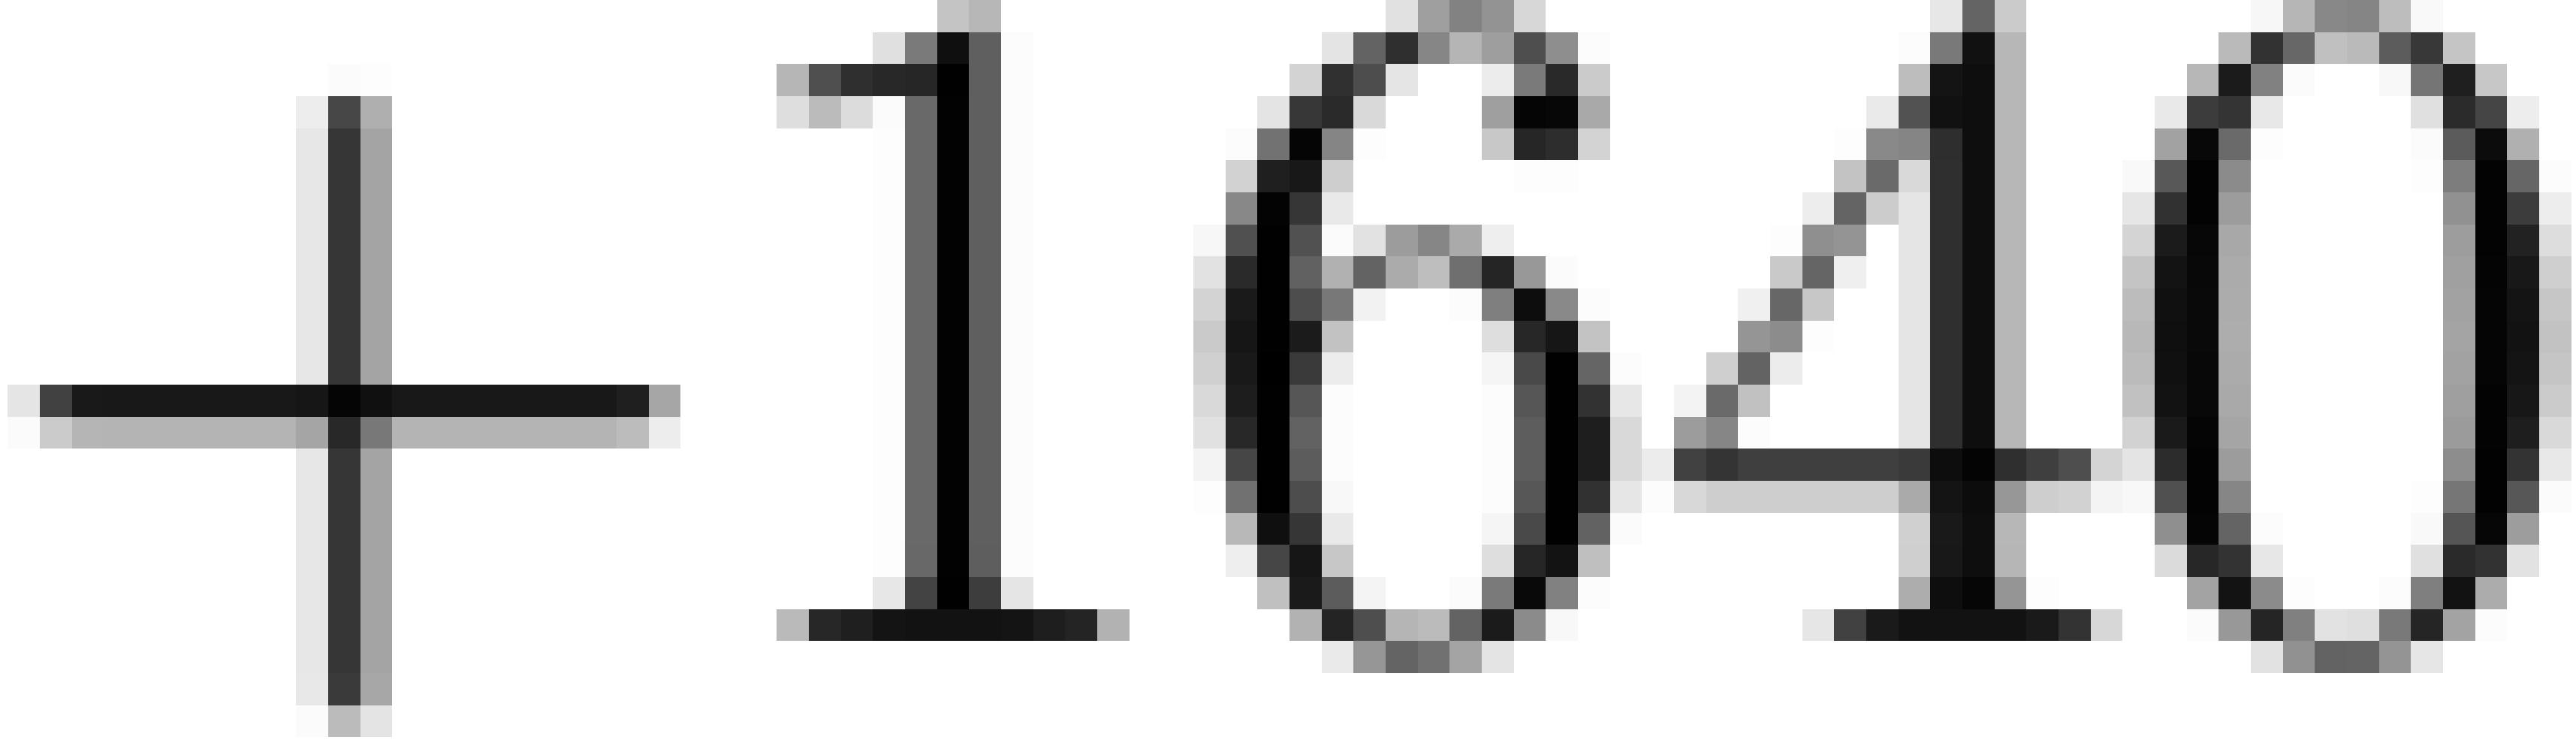


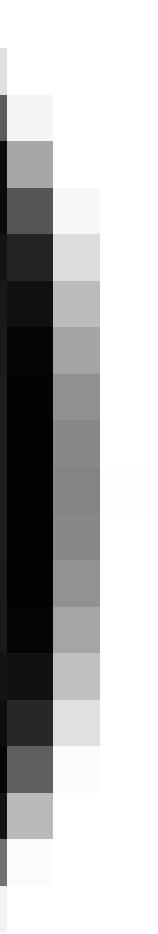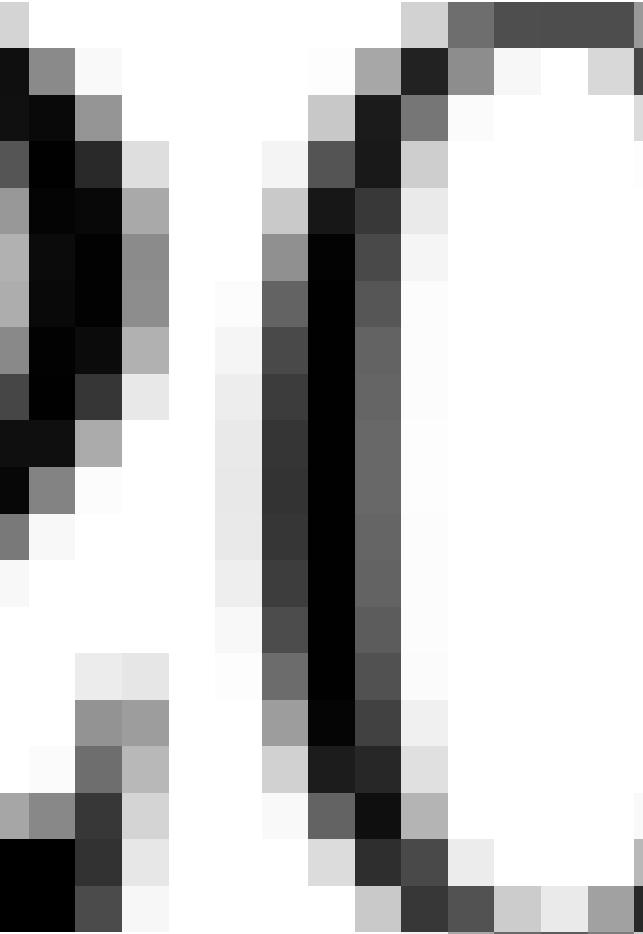
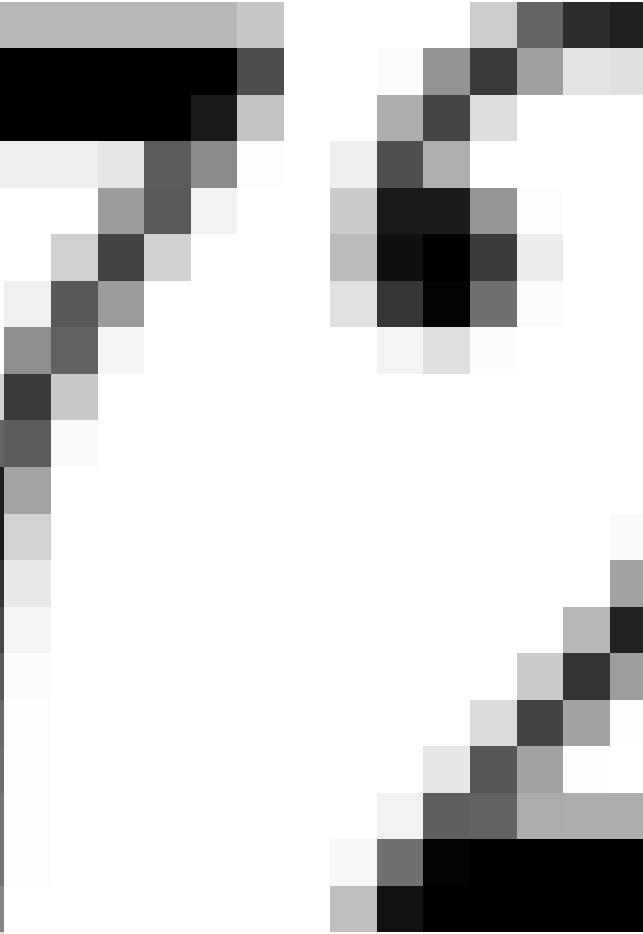
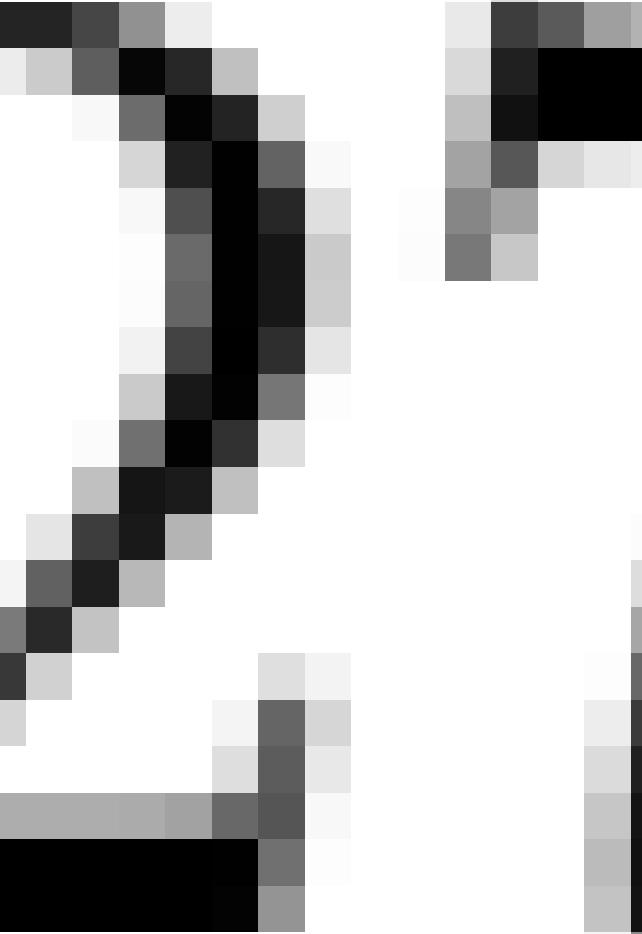


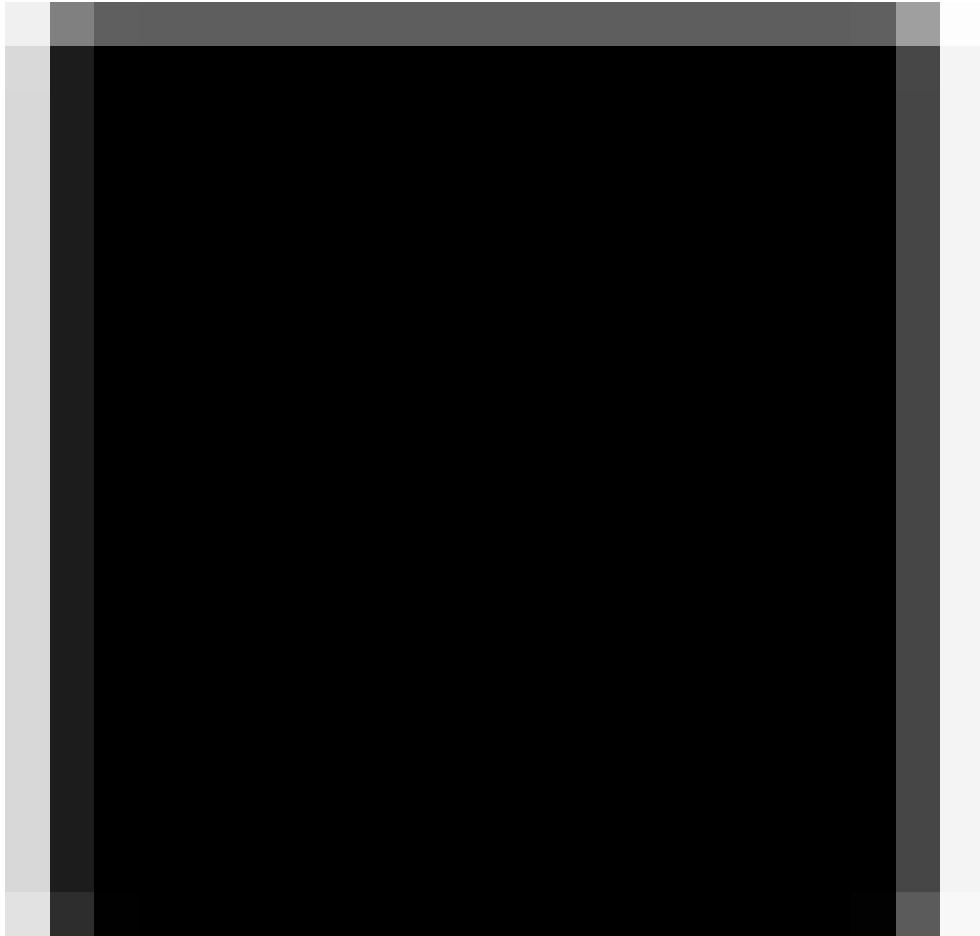

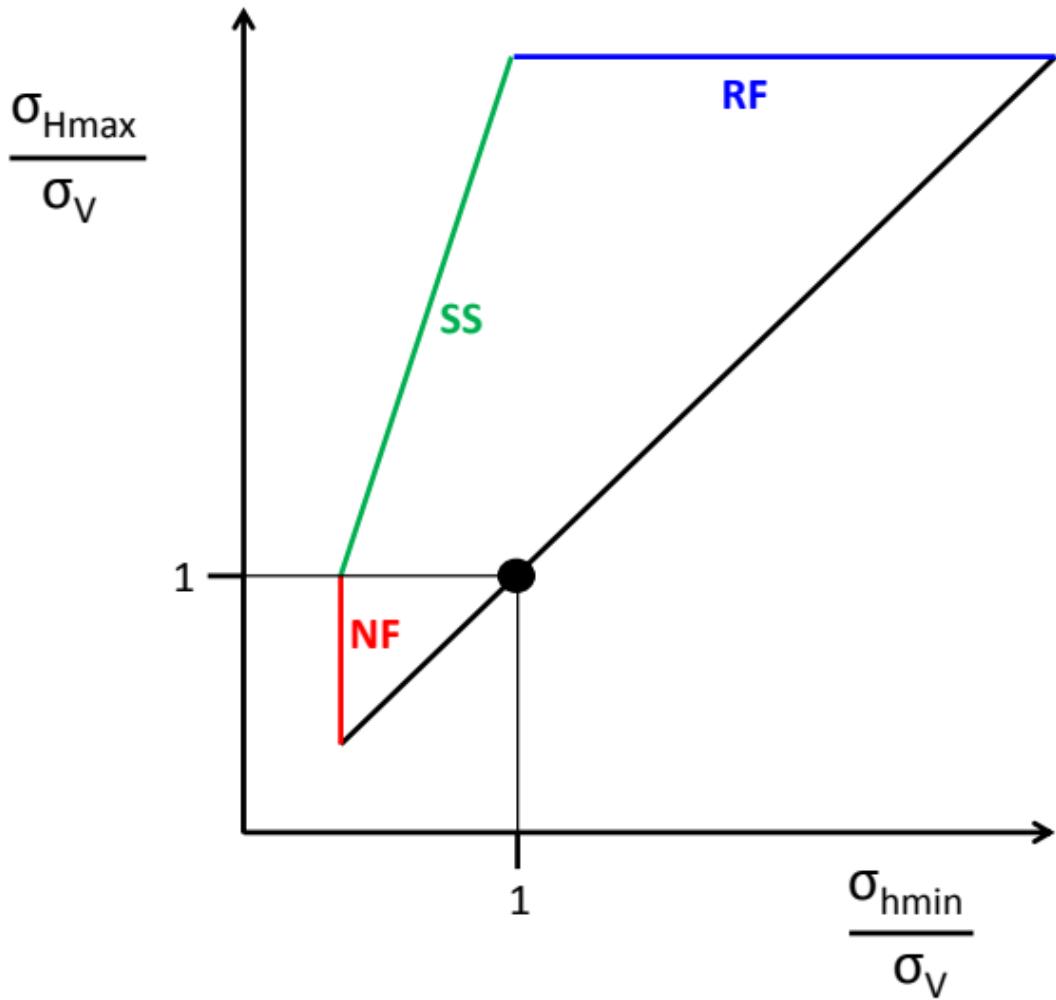

$$\sigma_{h\min} < \sigma_{H\max} \approx \sigma_v$$

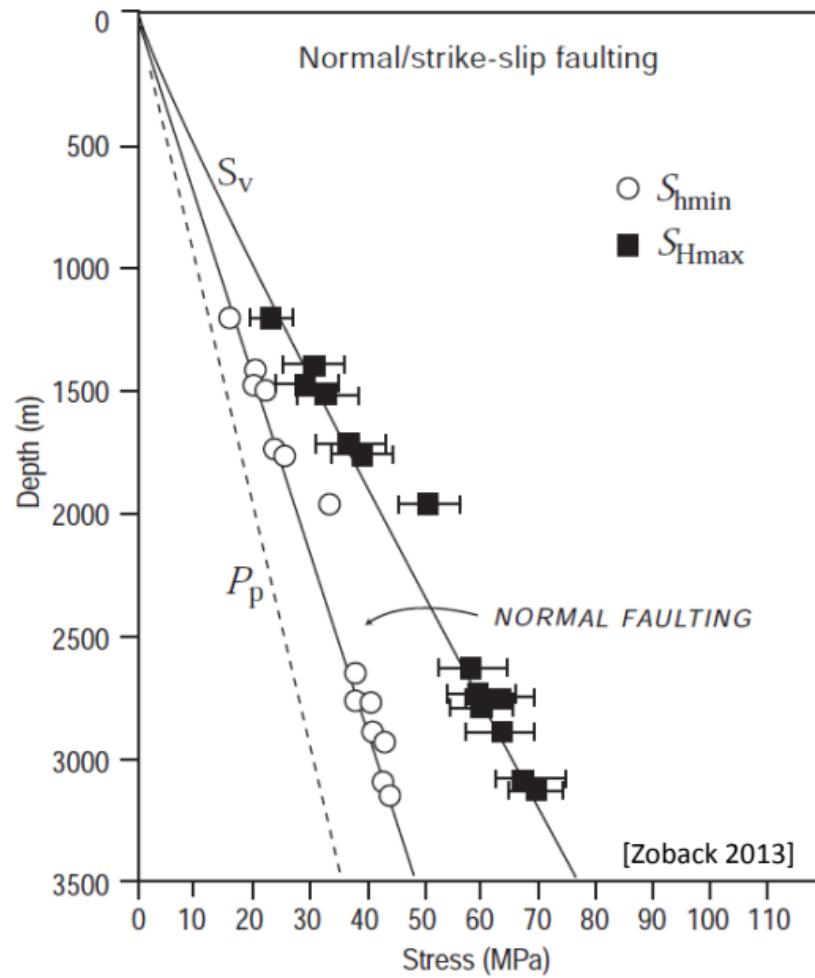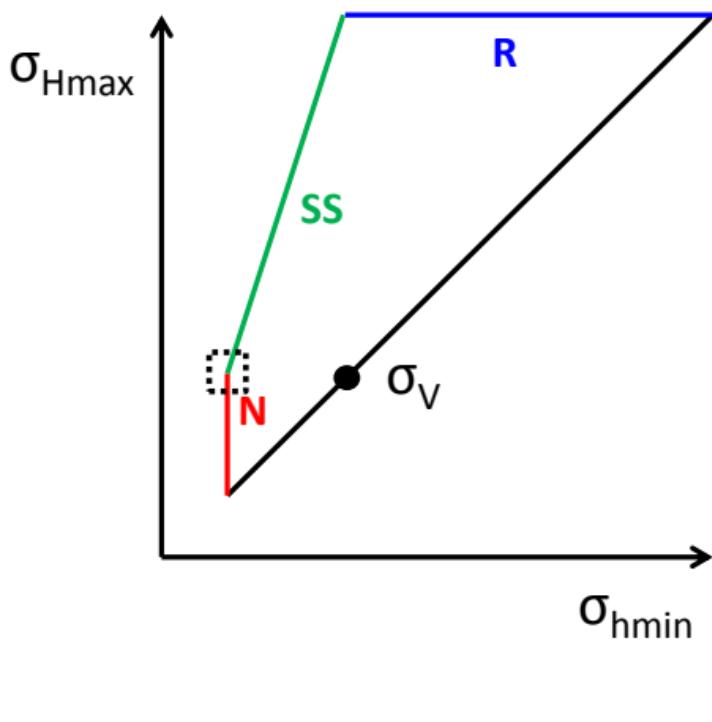


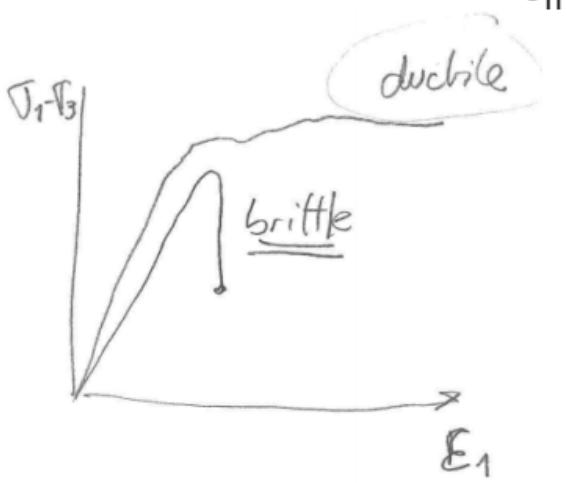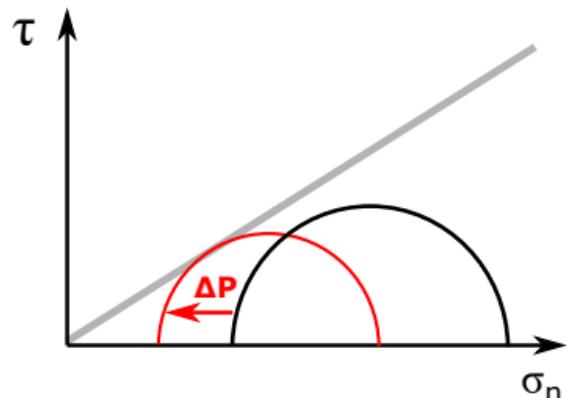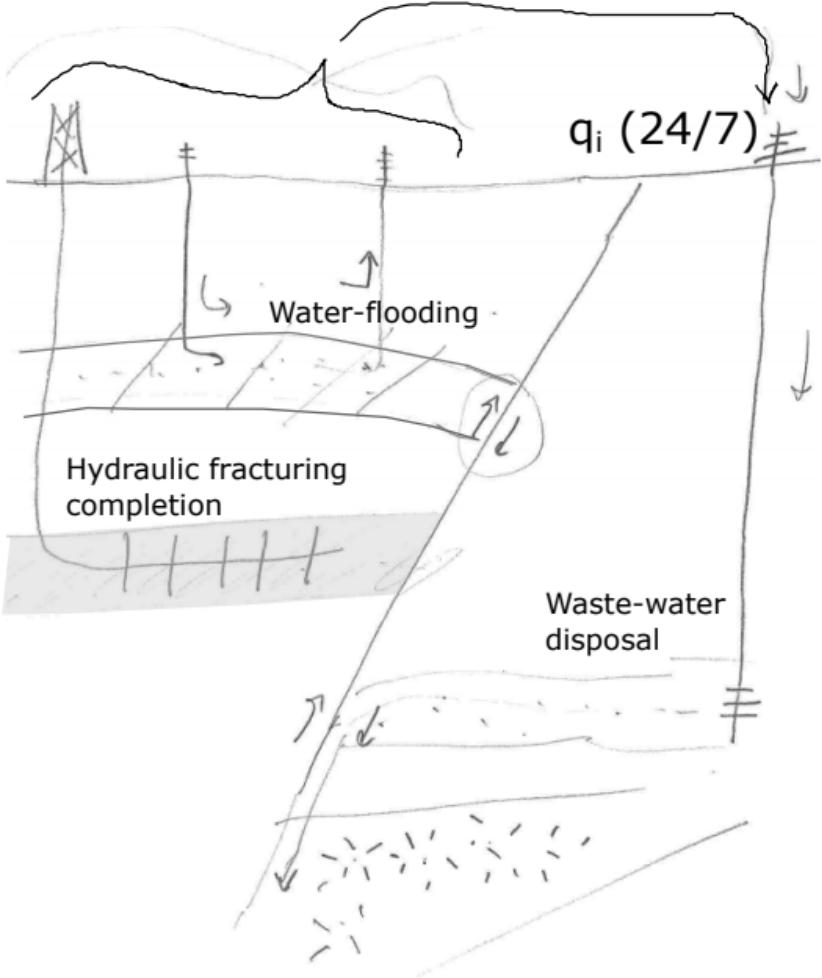

$$\Delta\sigma_a = -\Delta P_p$$

$$\Delta\sigma_{\text{Hermann}} \leq -\Delta P_p$$




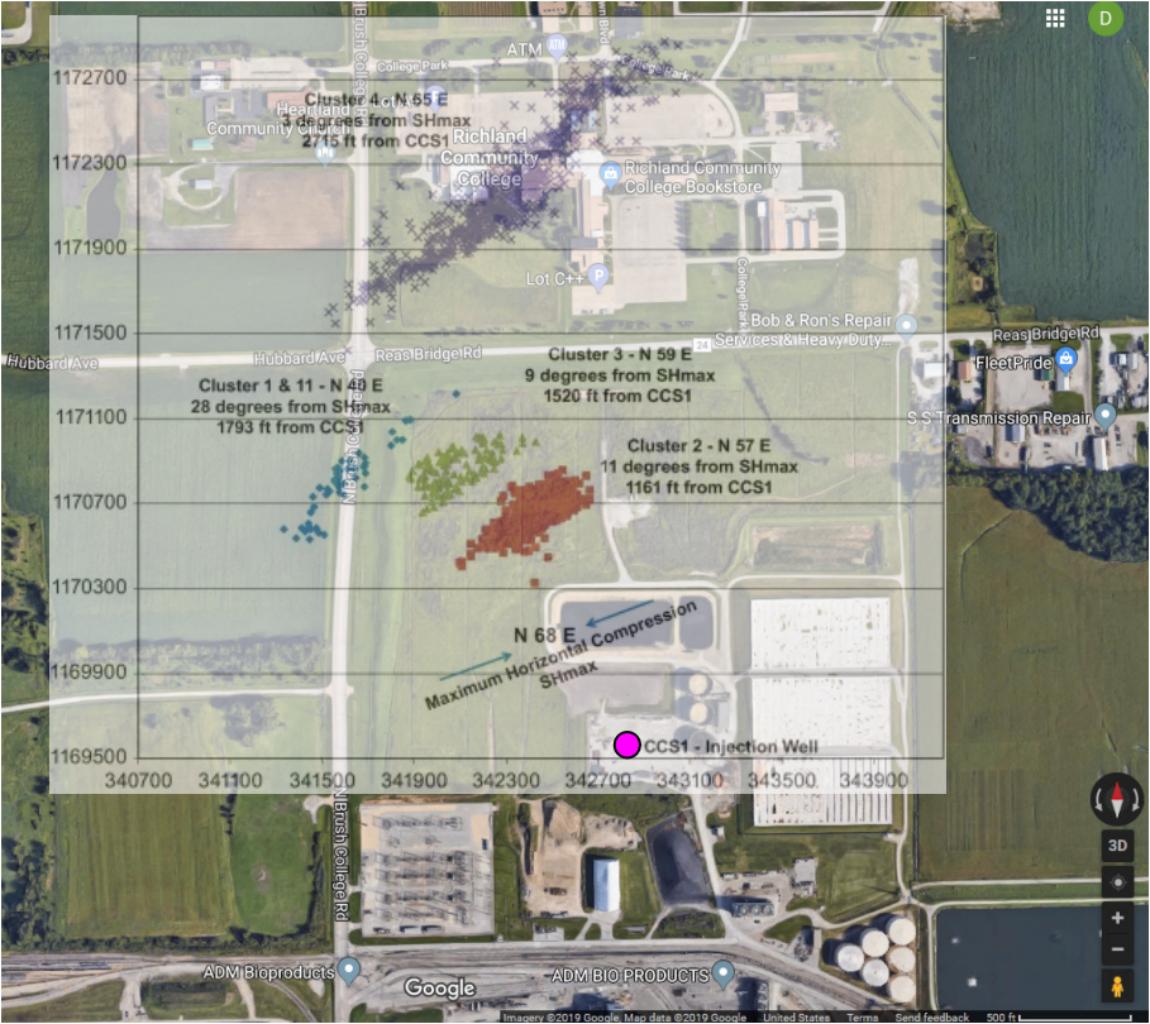











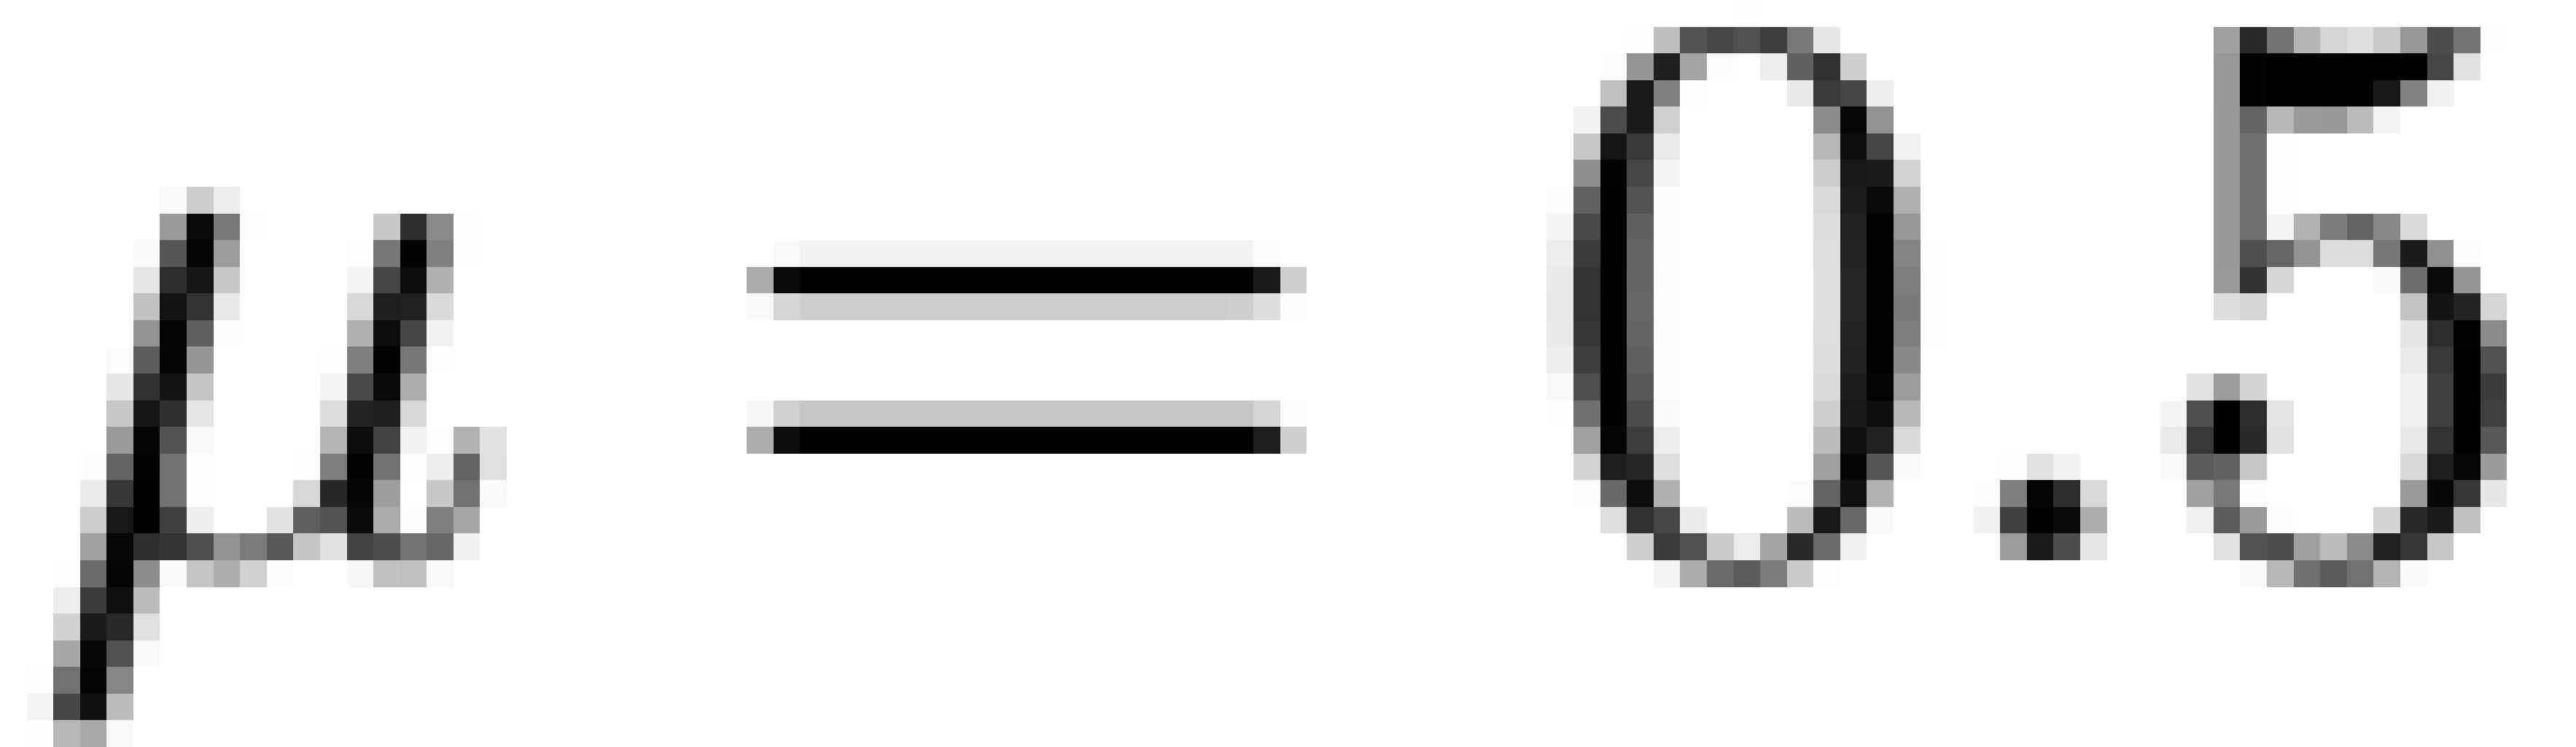


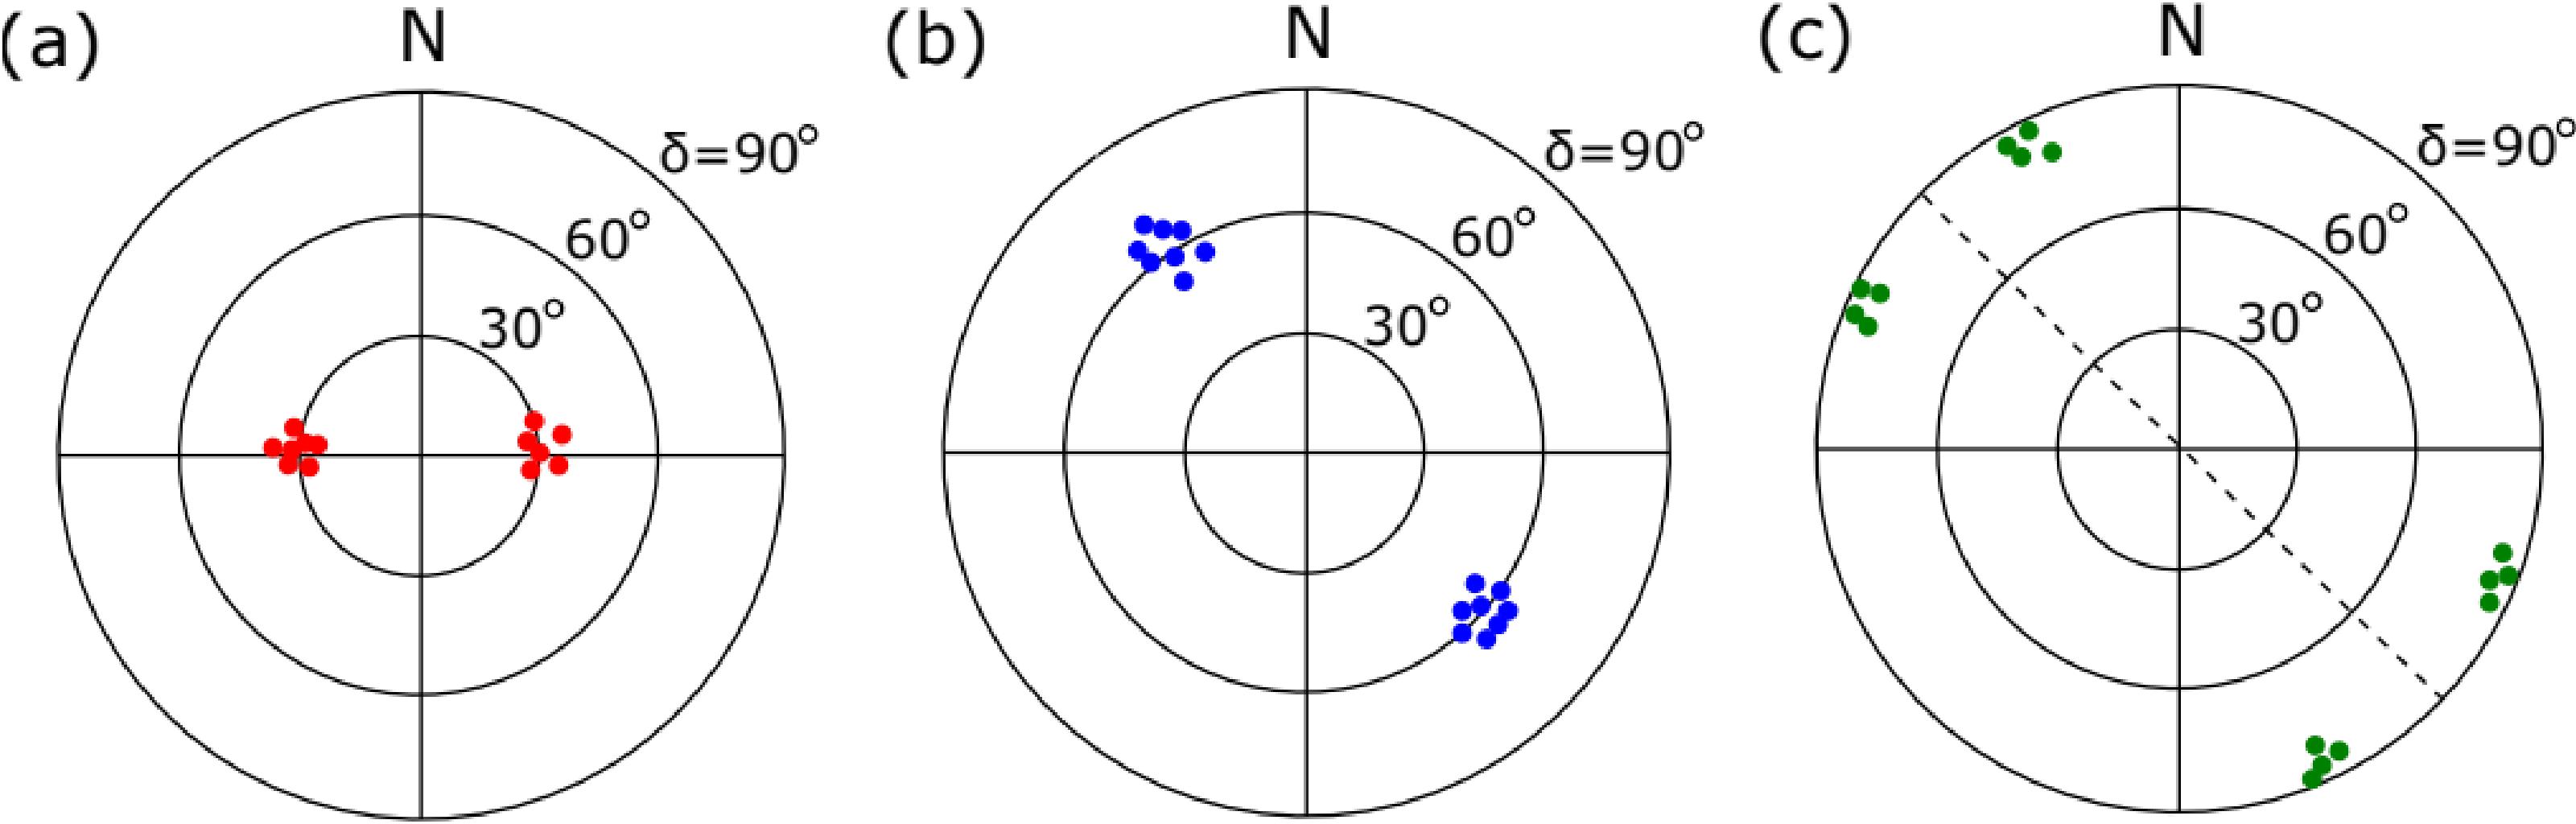



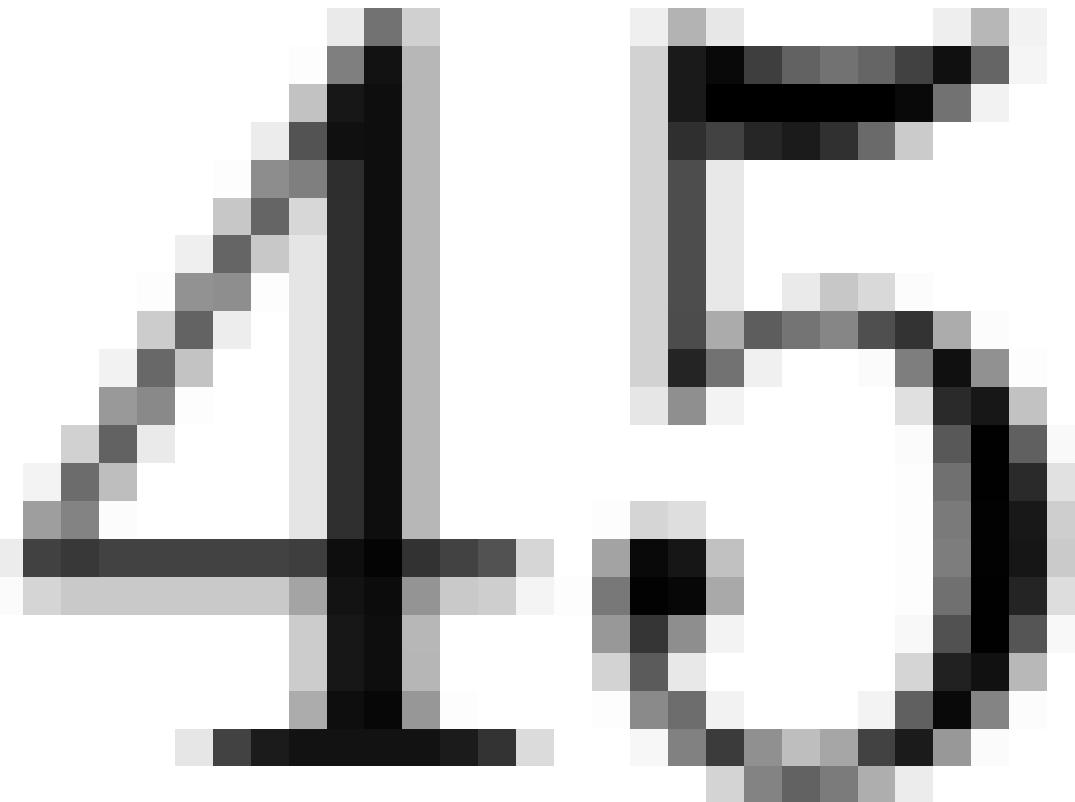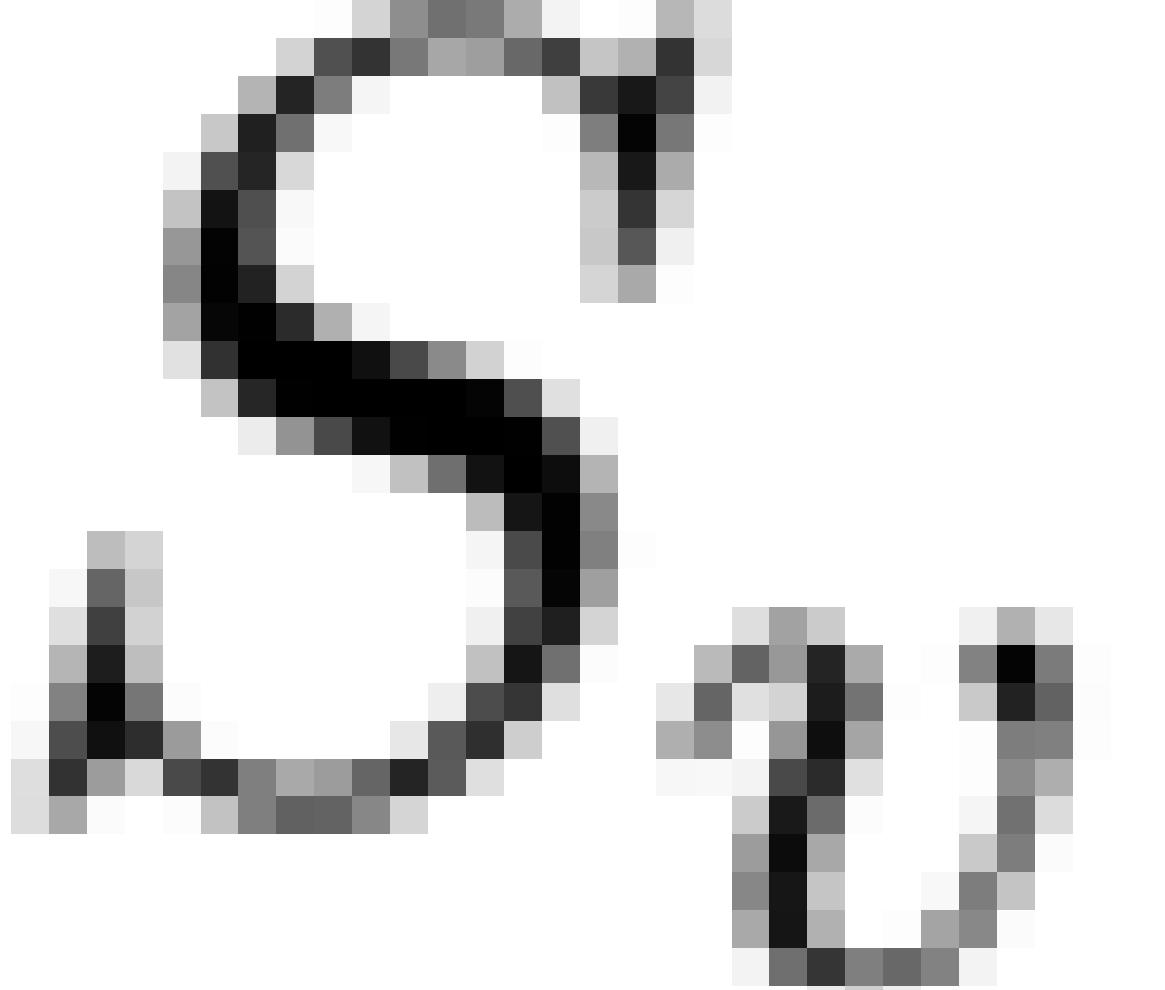



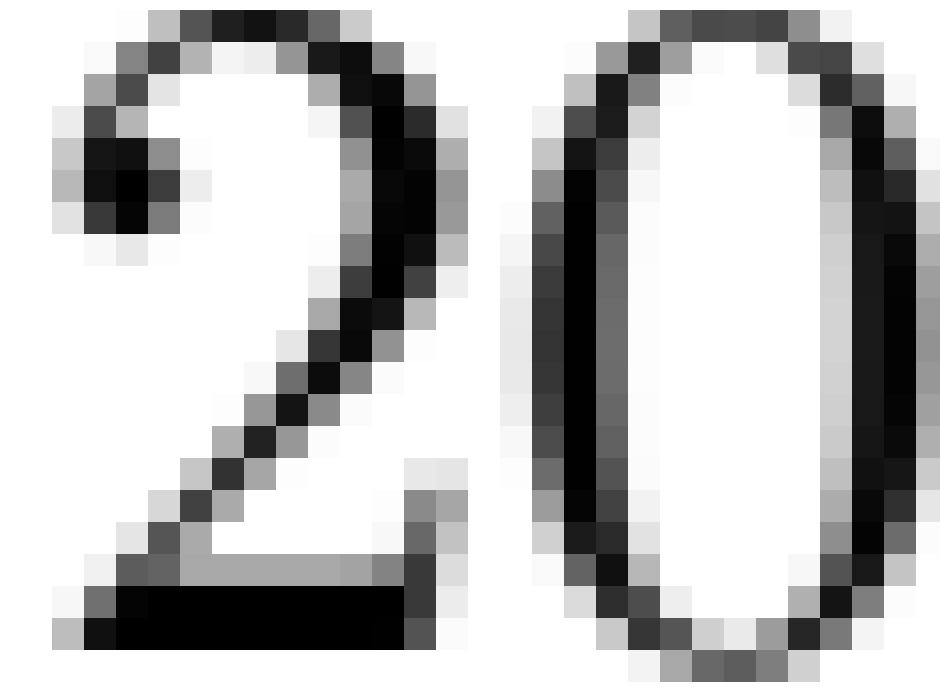





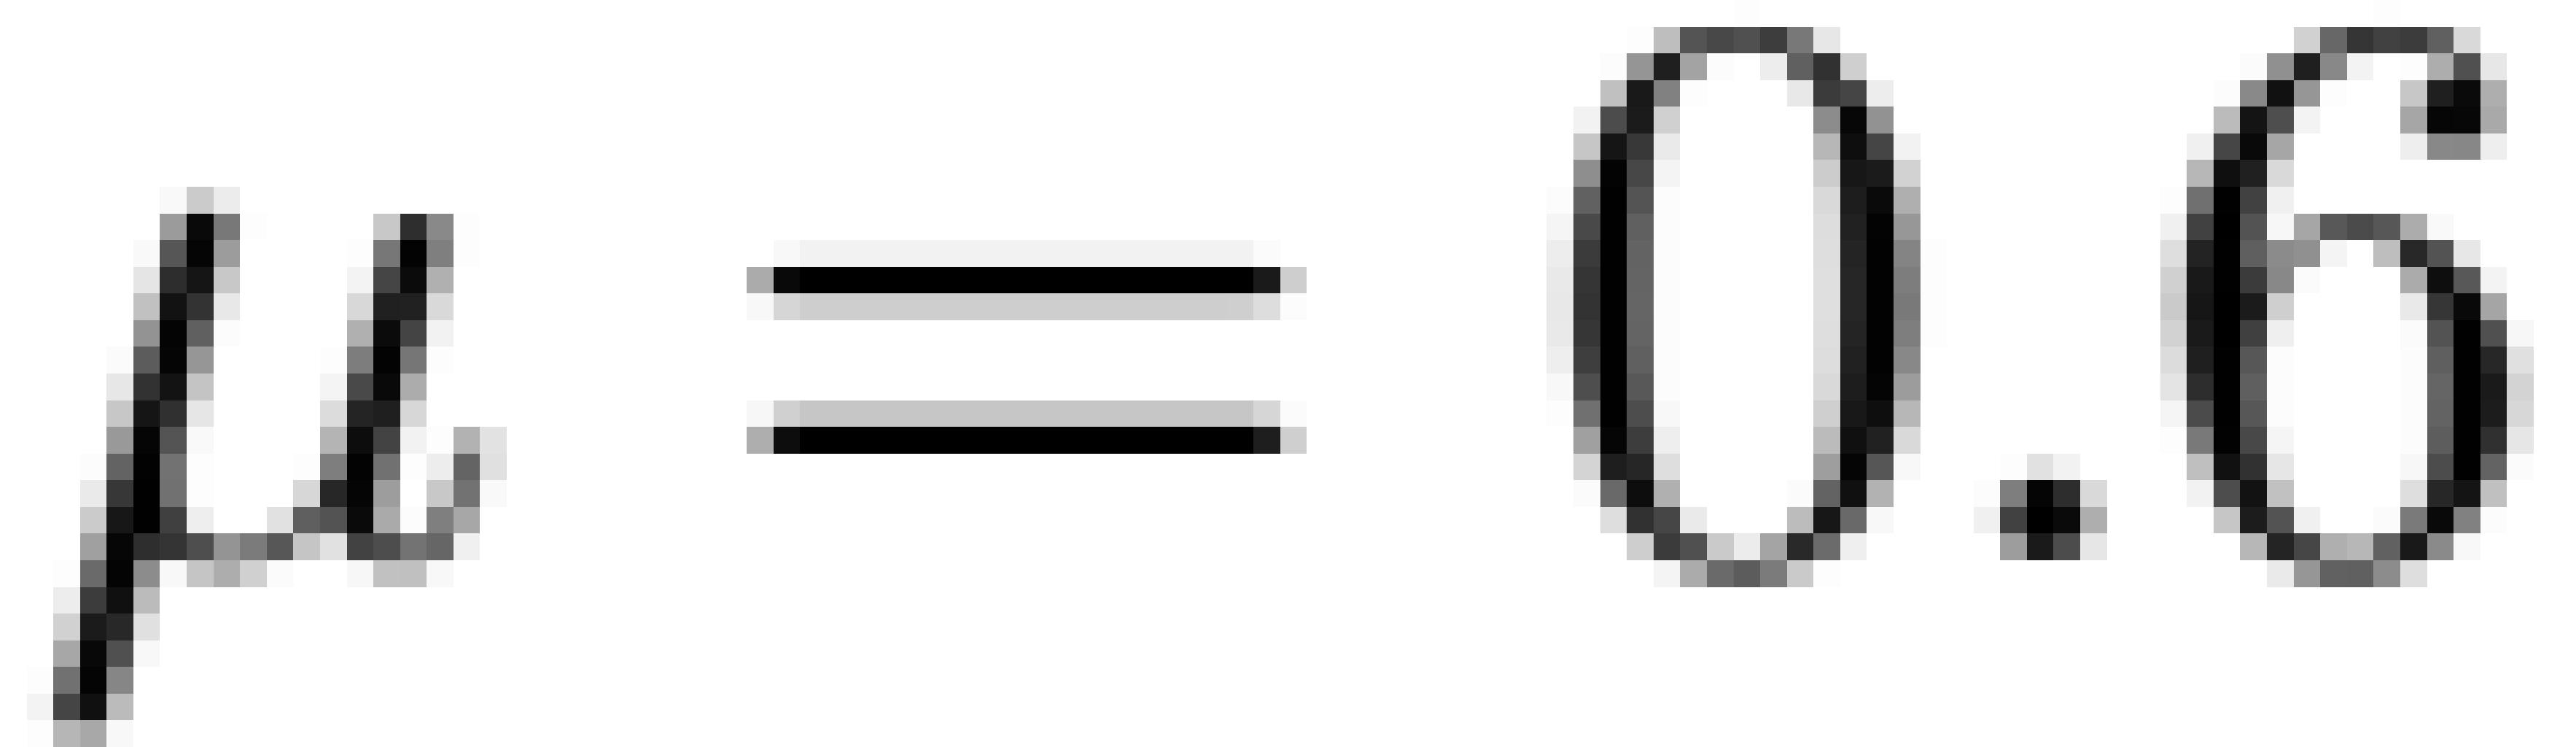







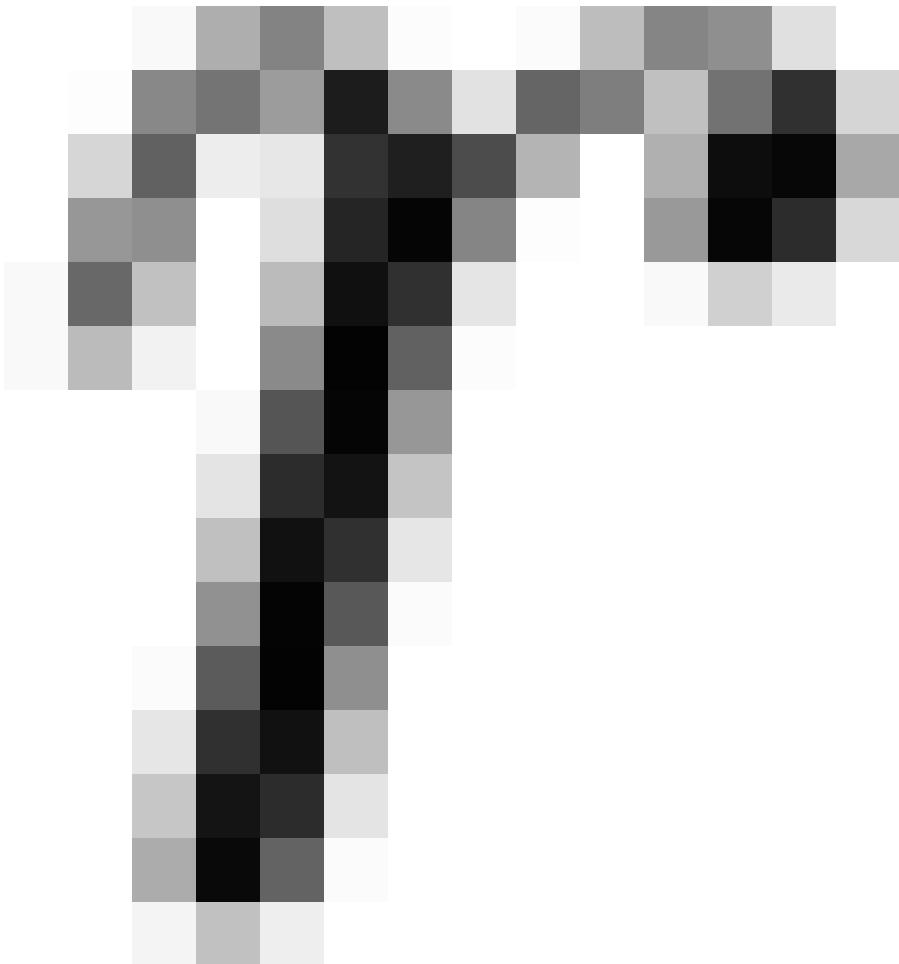

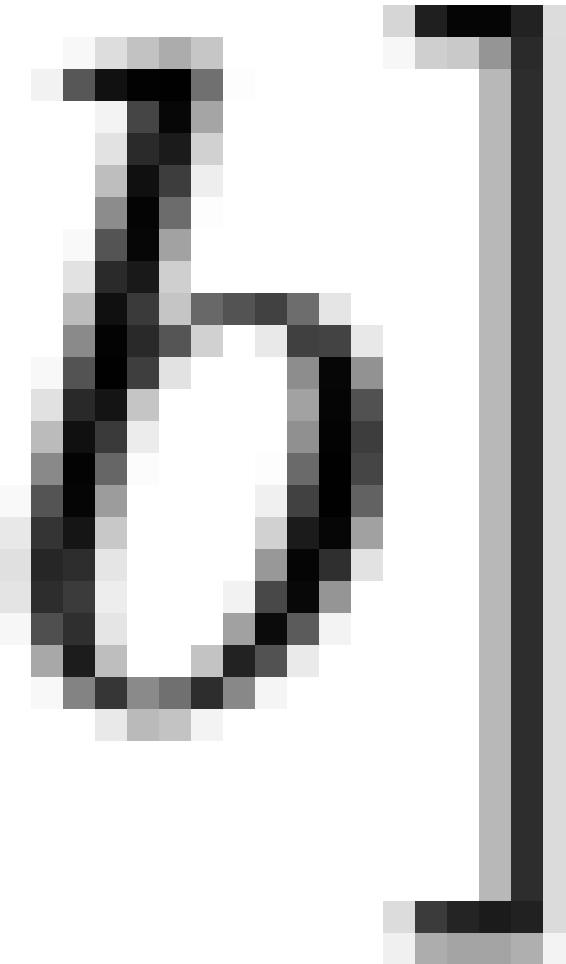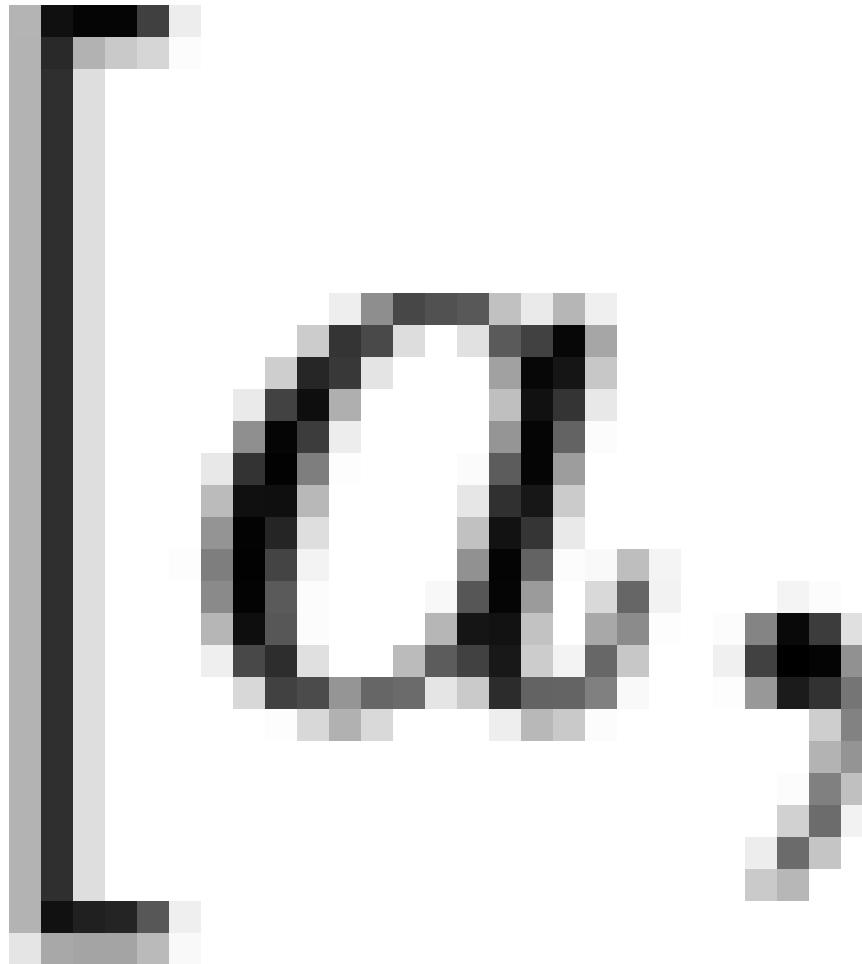


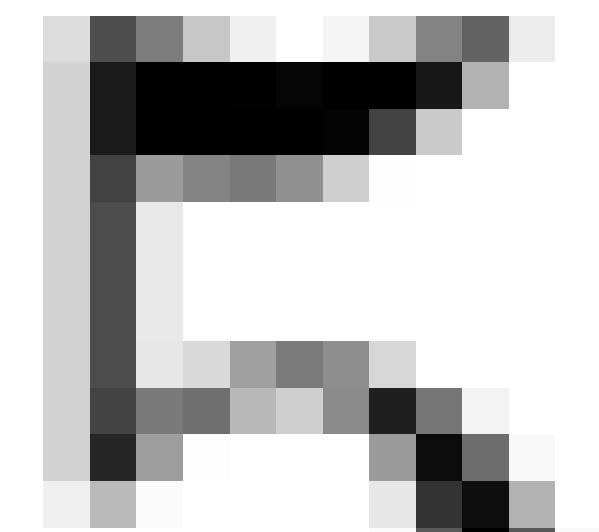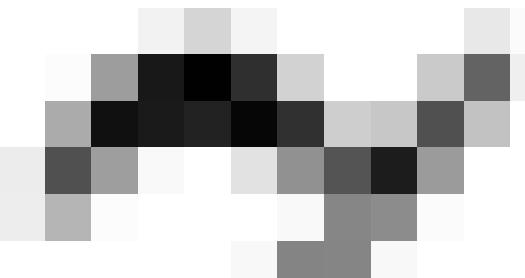
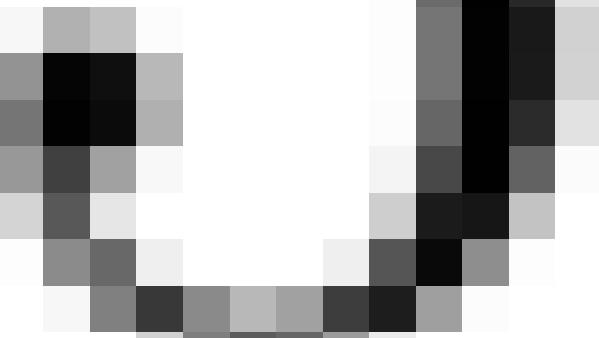
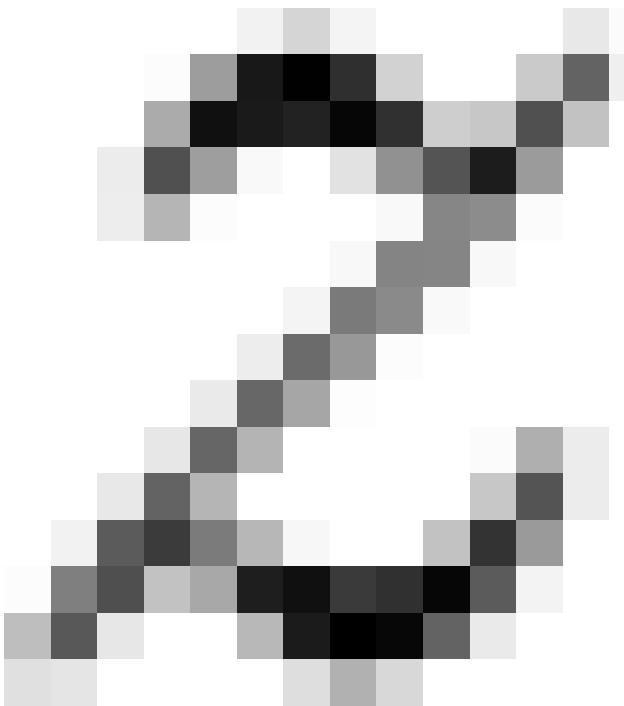






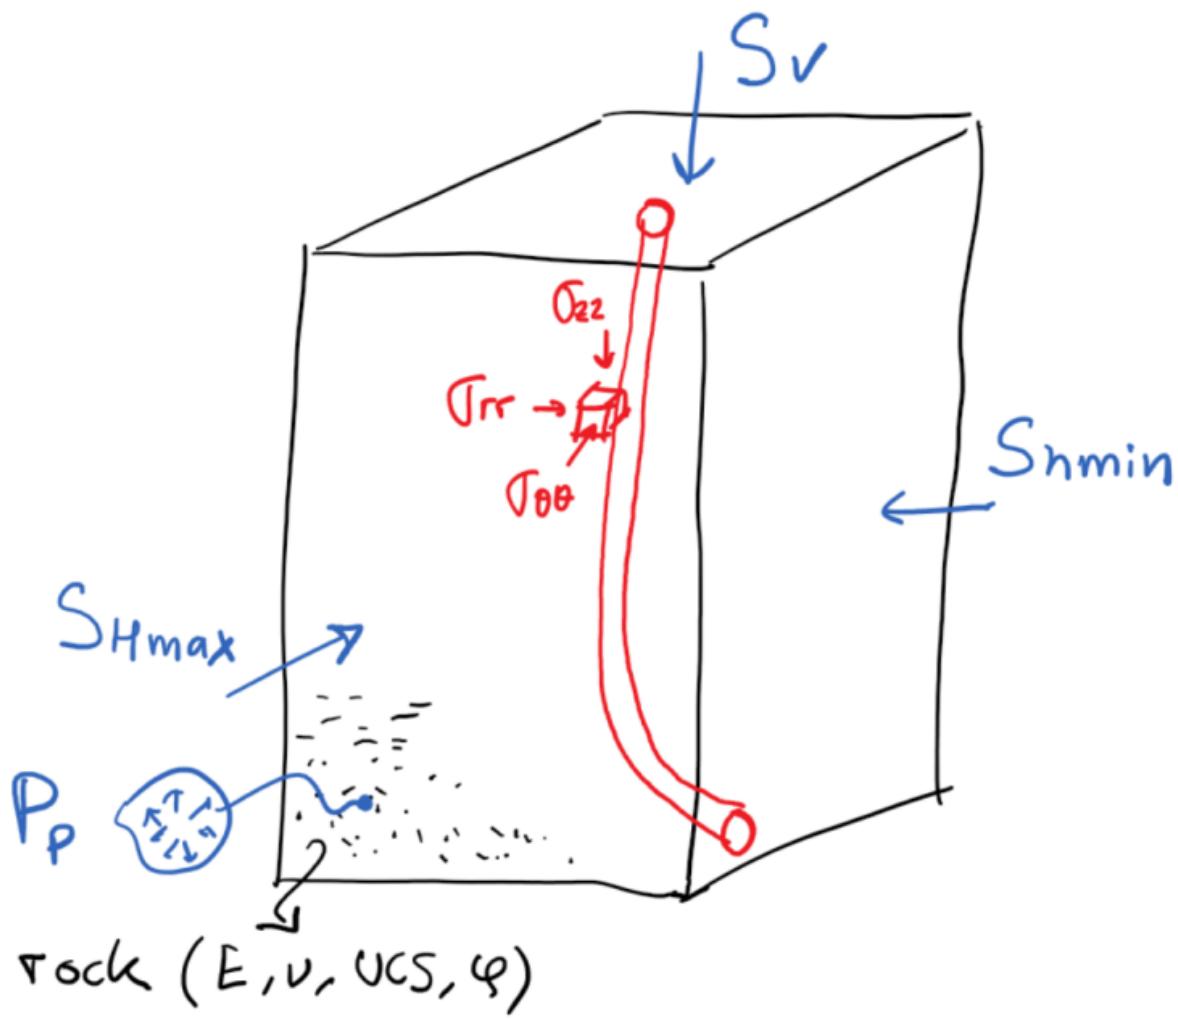









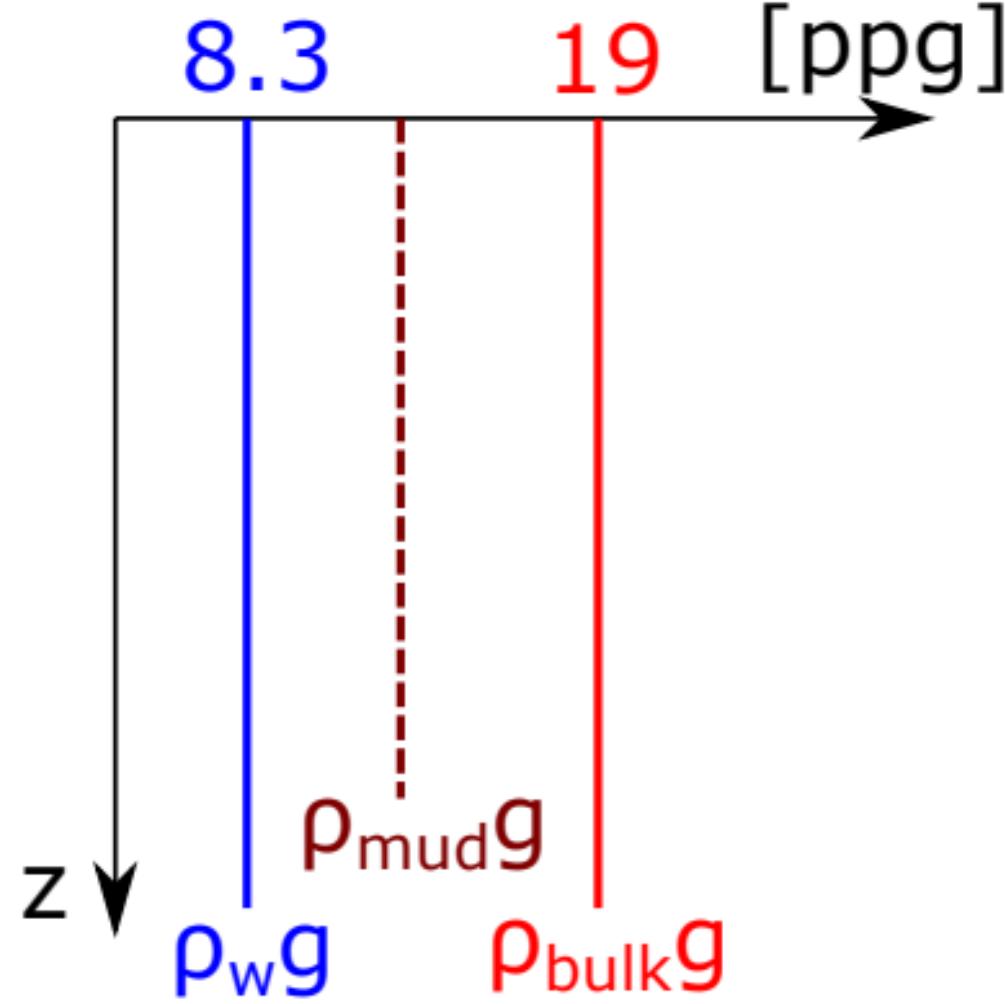
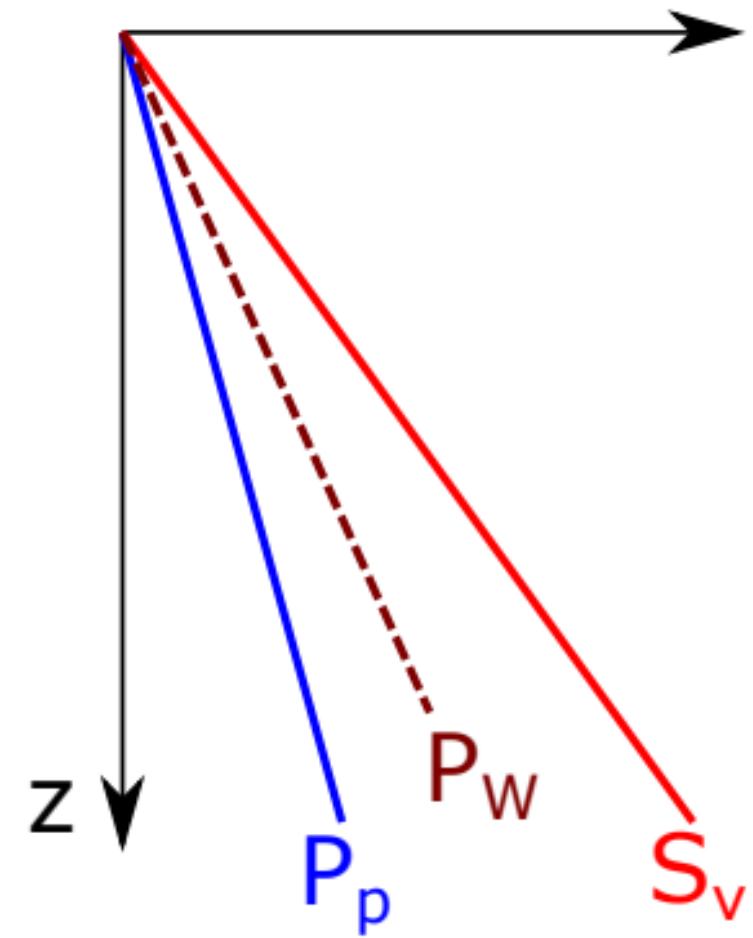
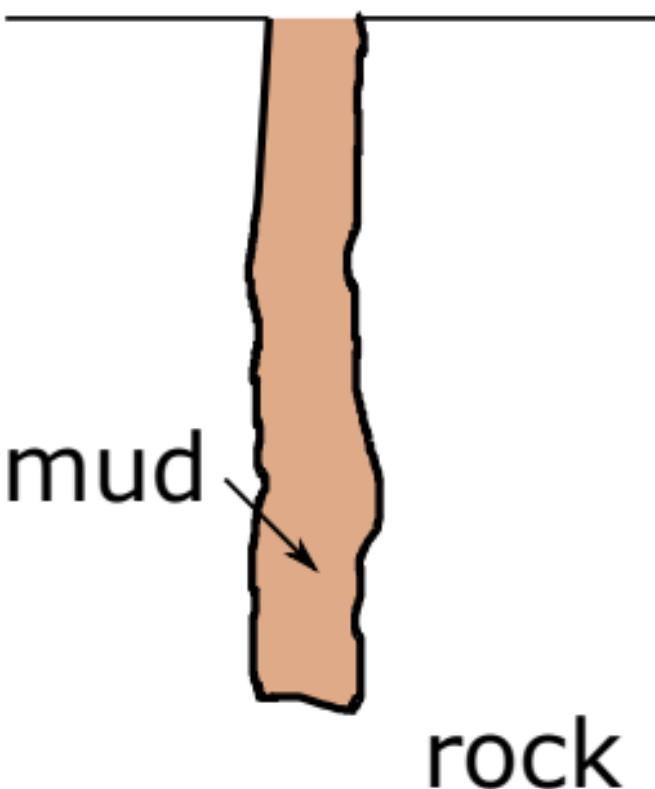



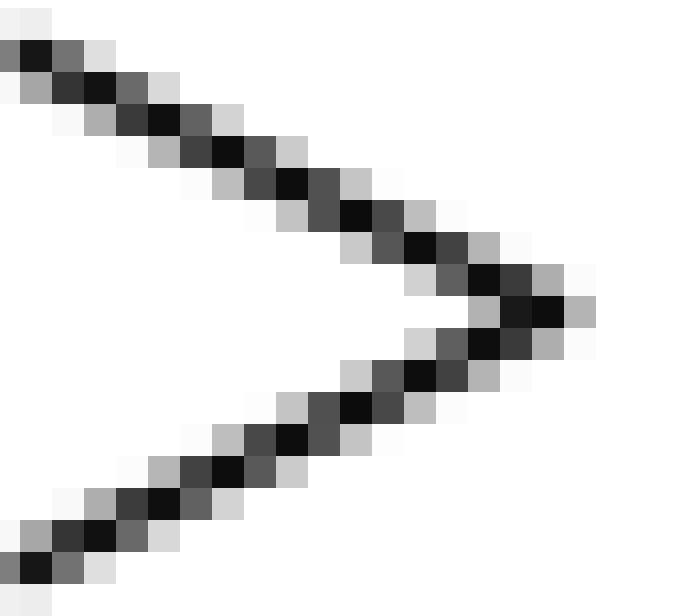
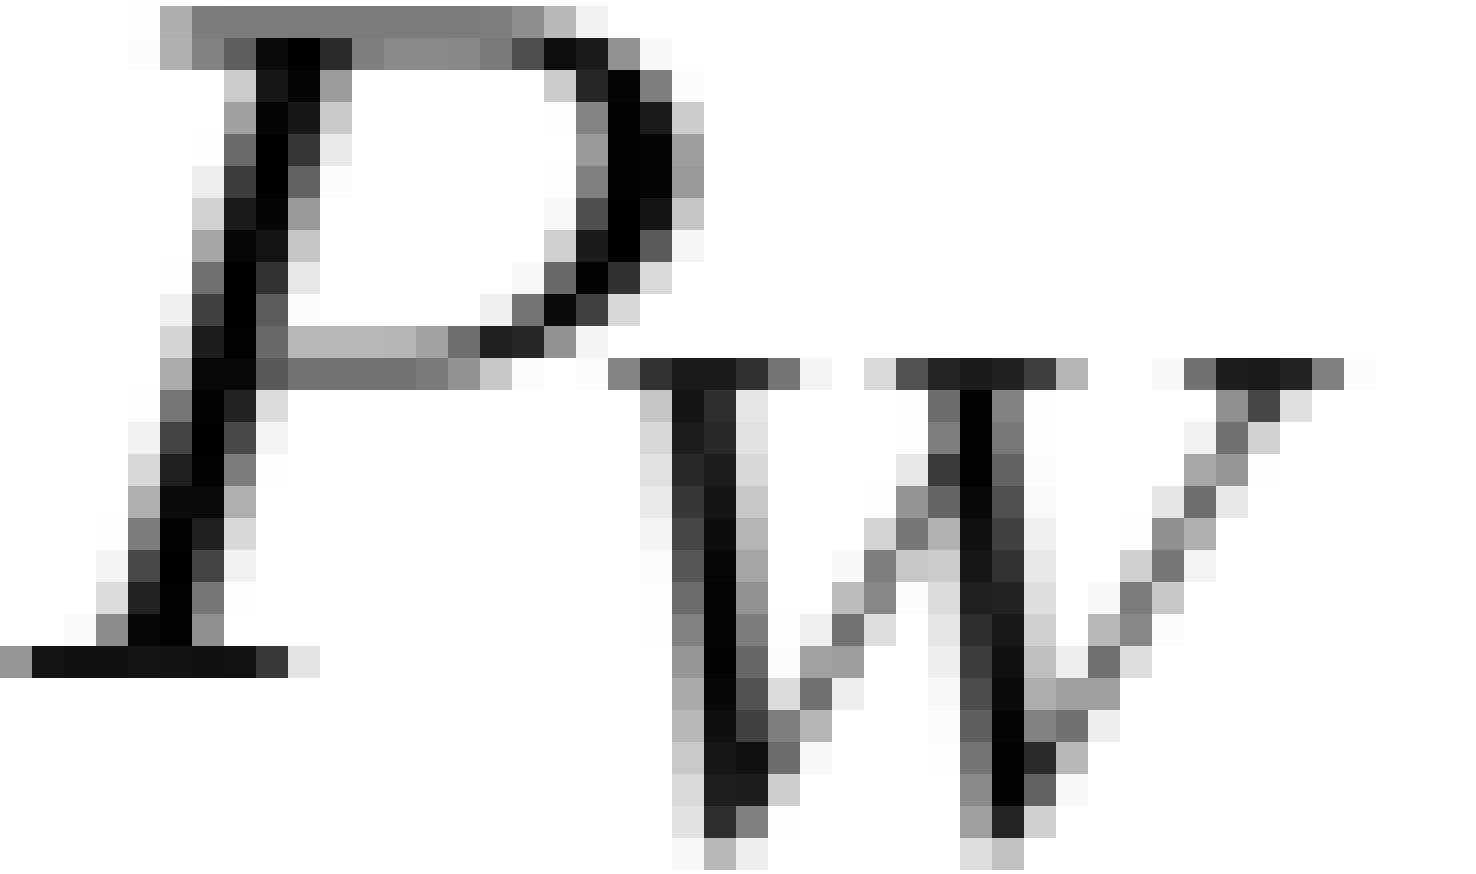




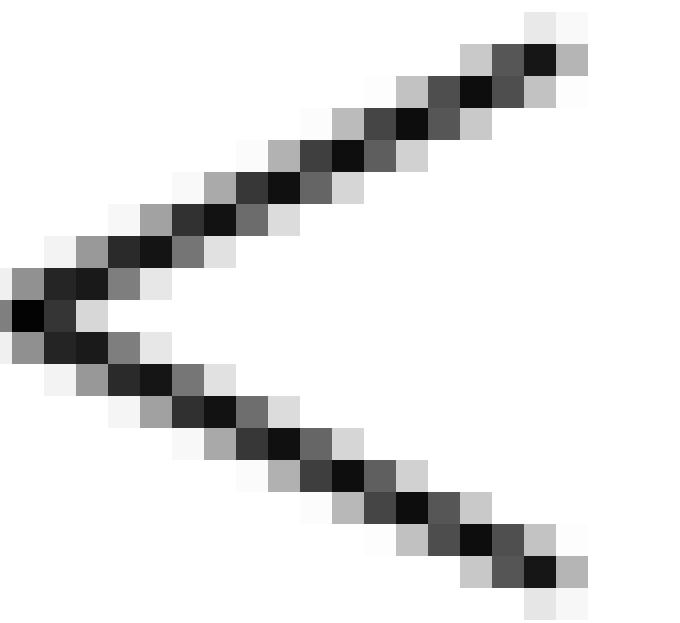


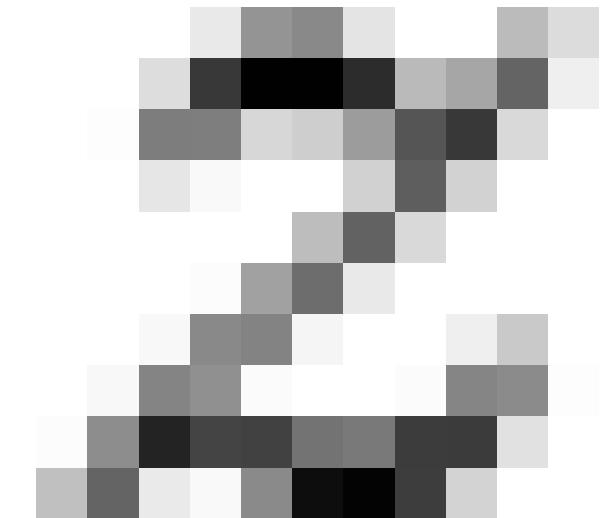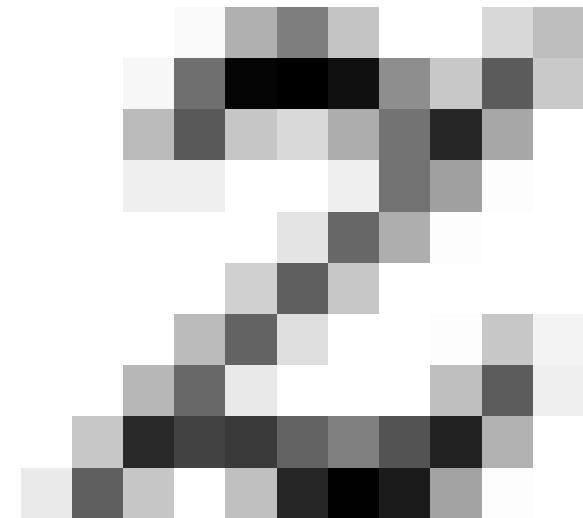
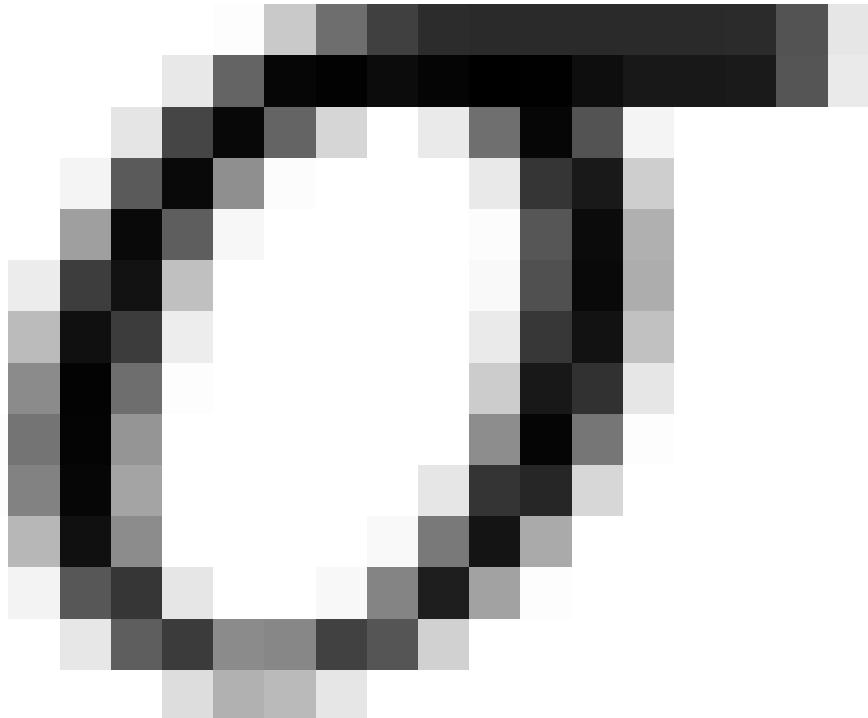


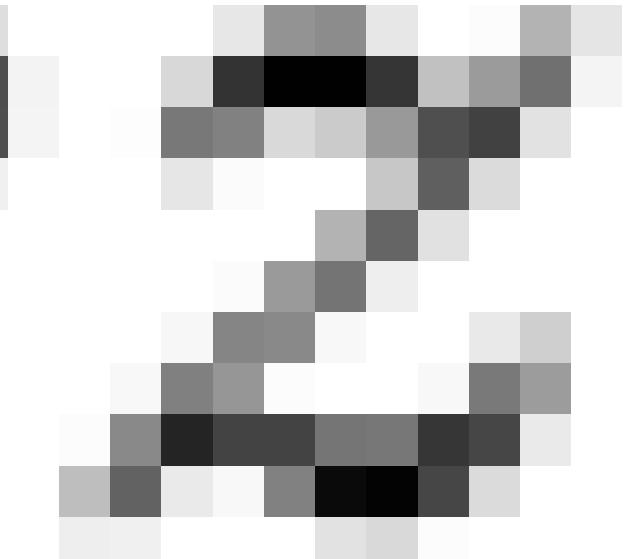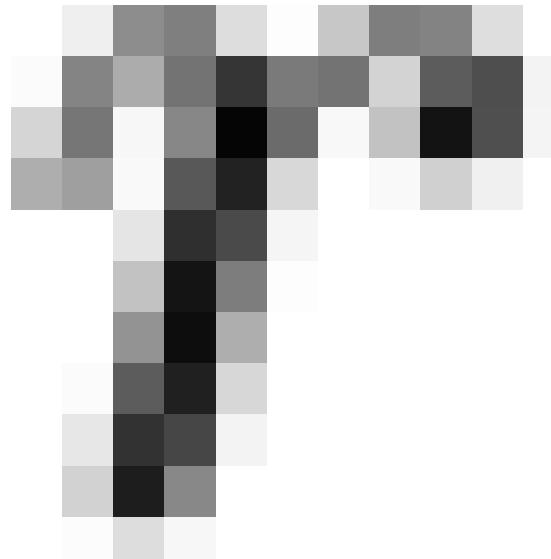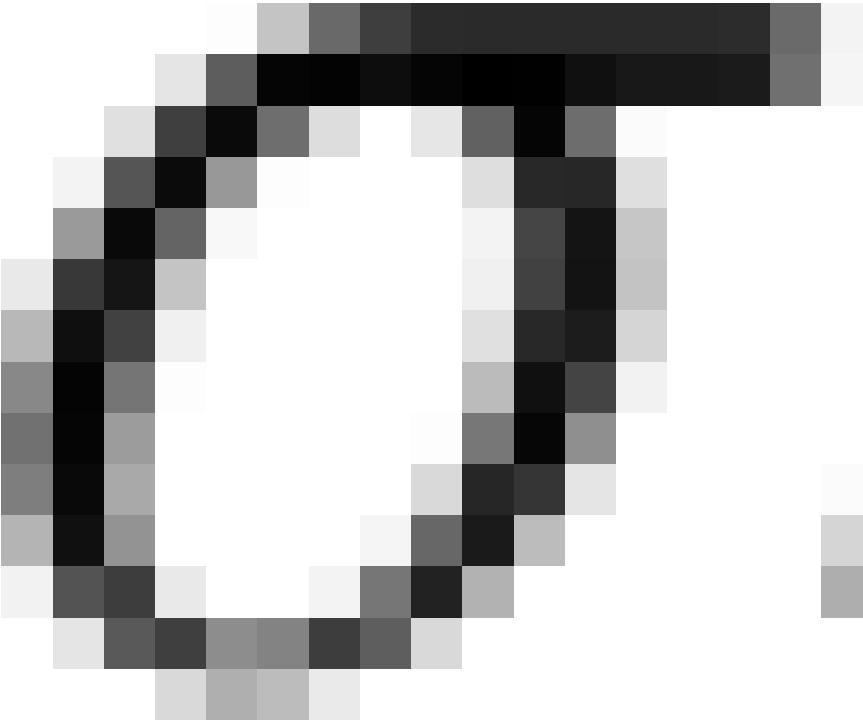

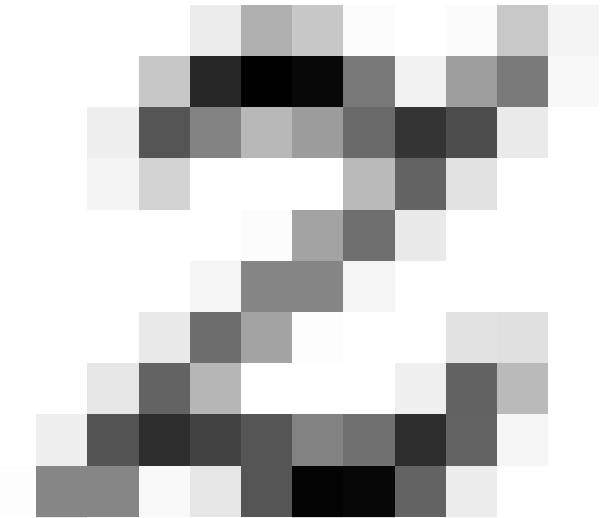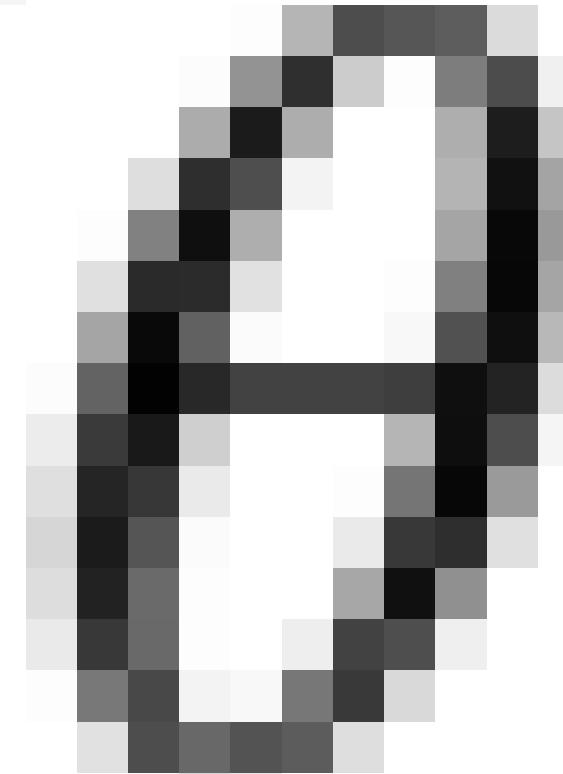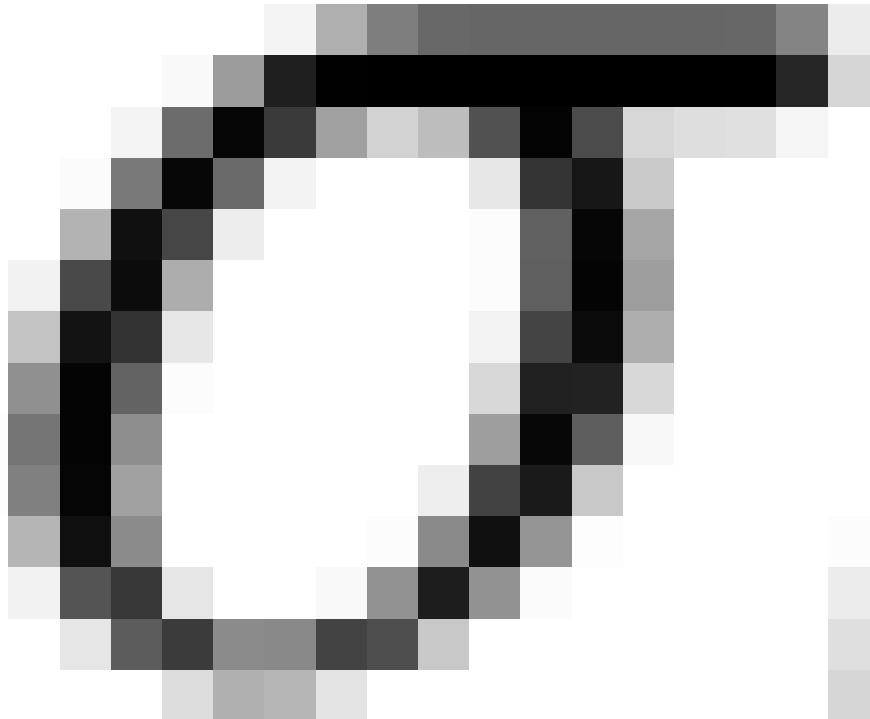









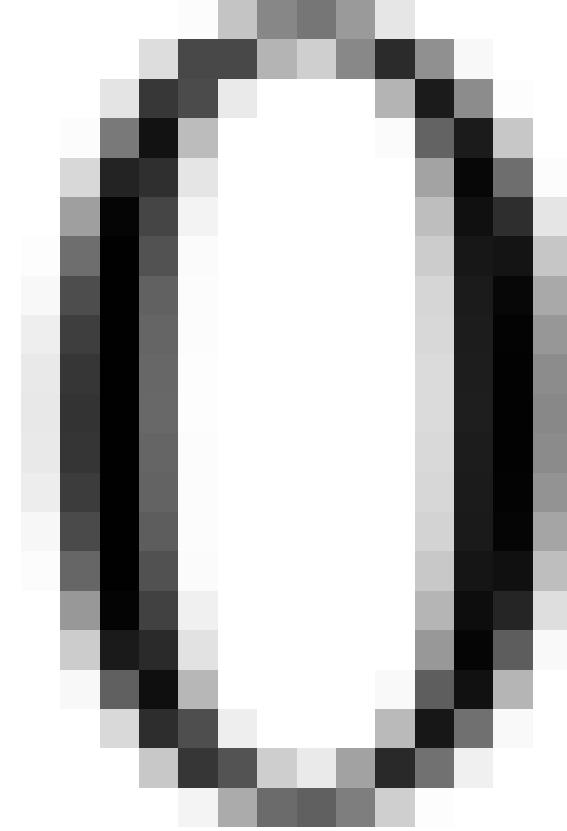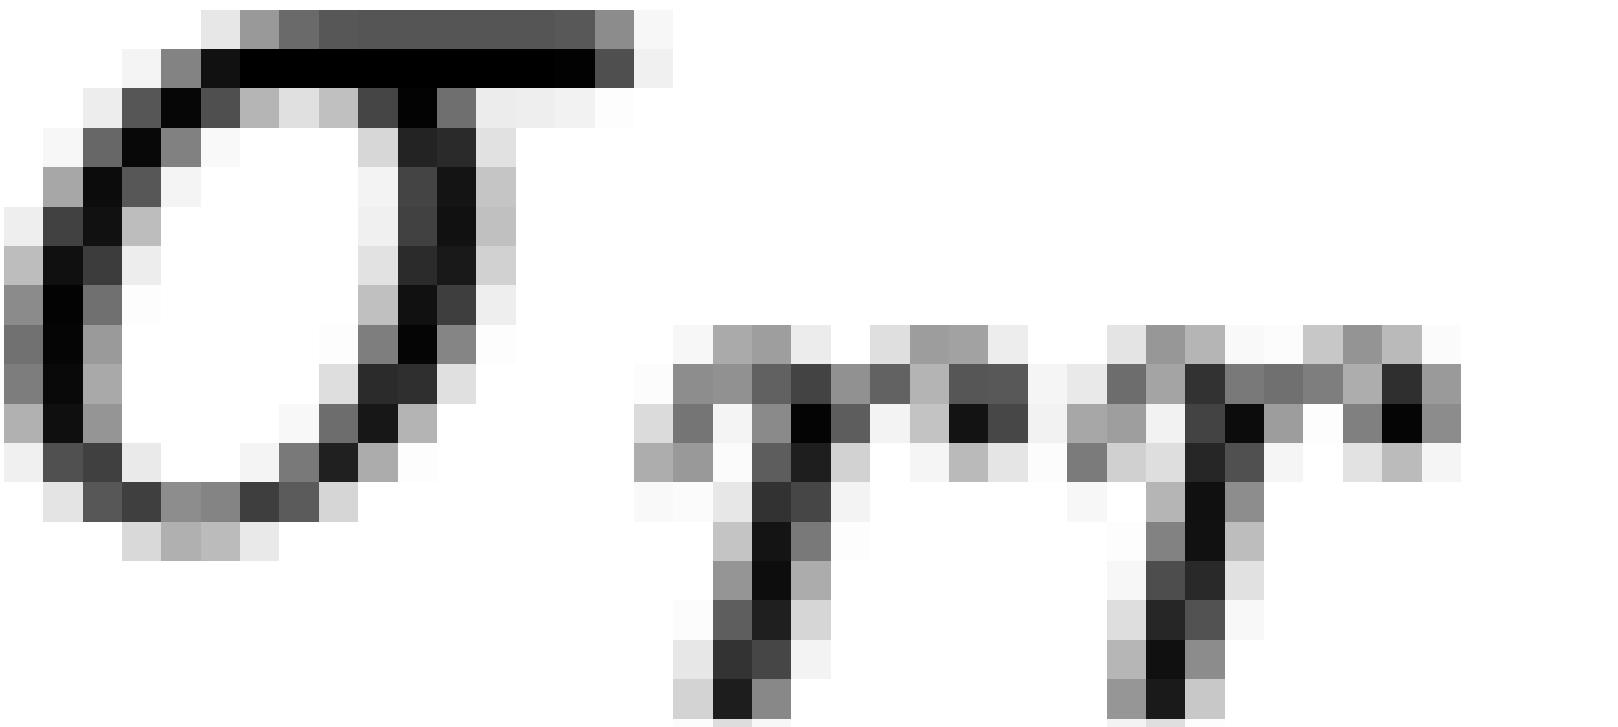







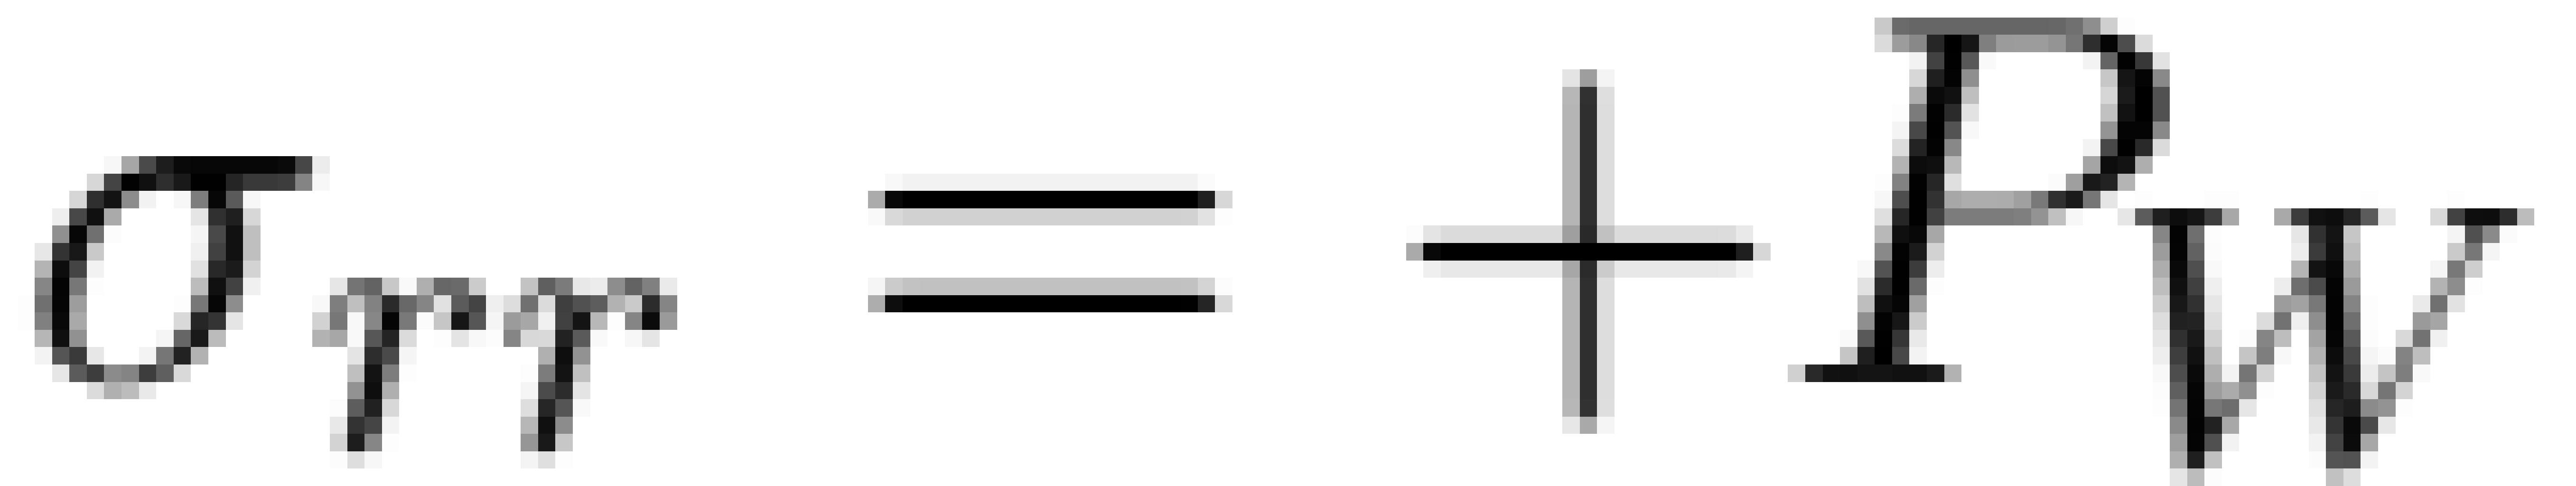


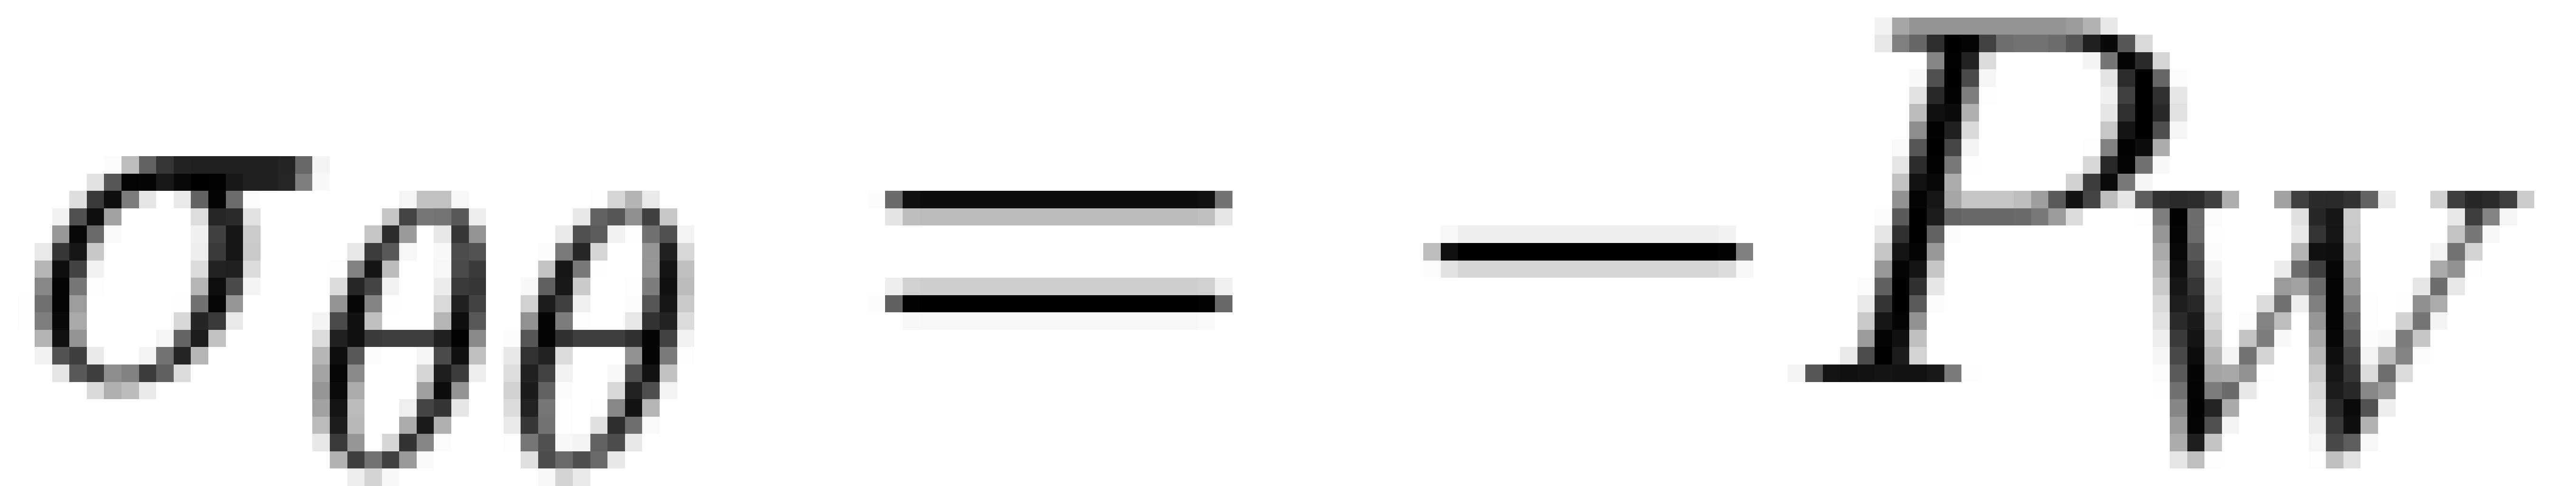


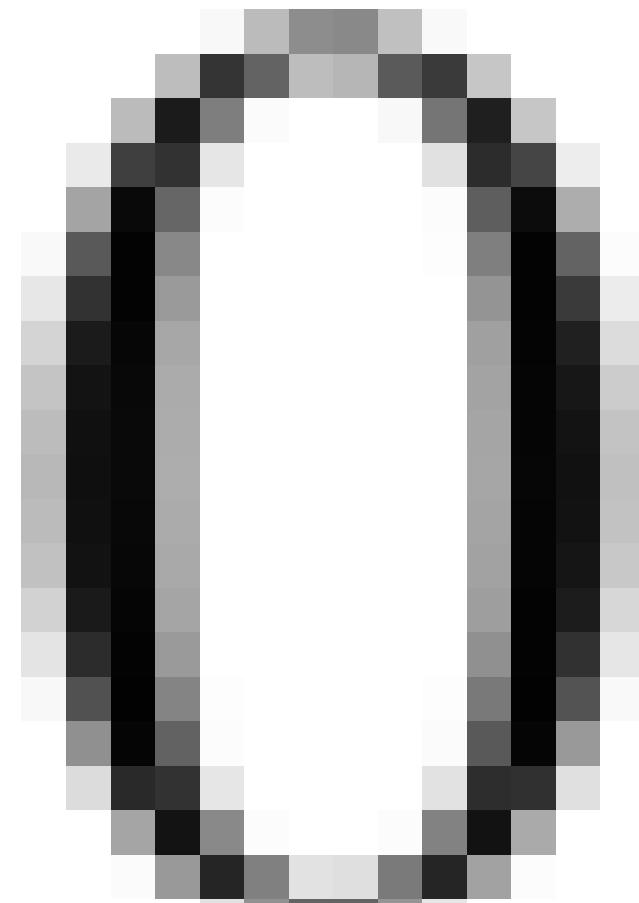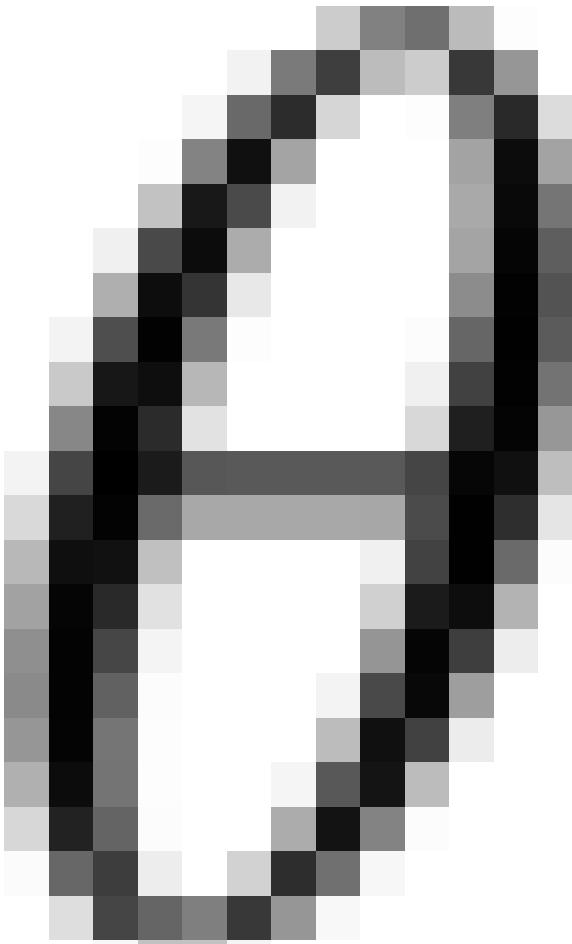


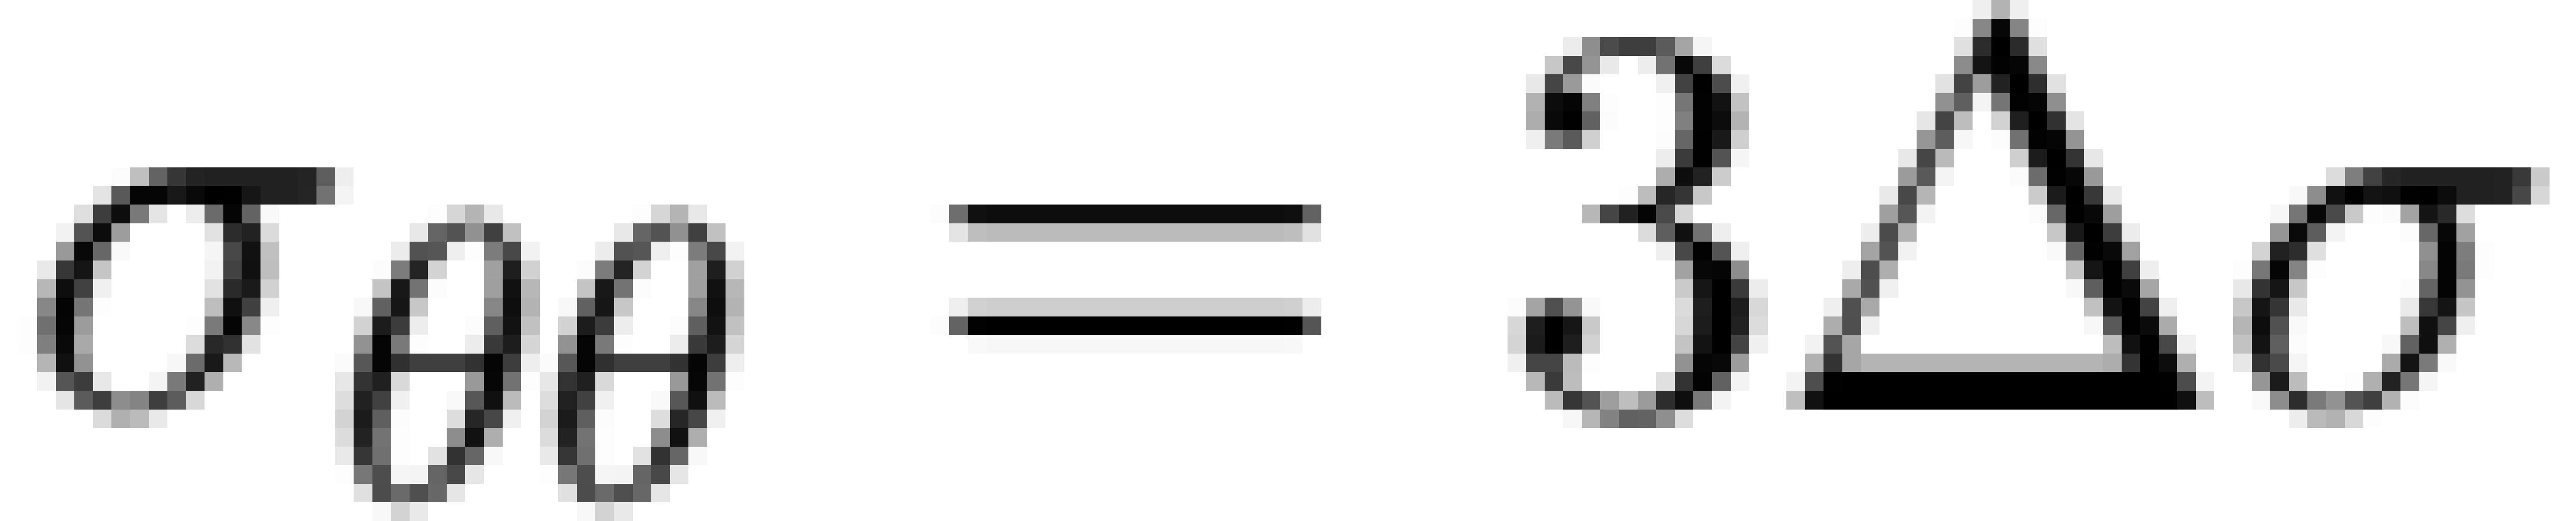

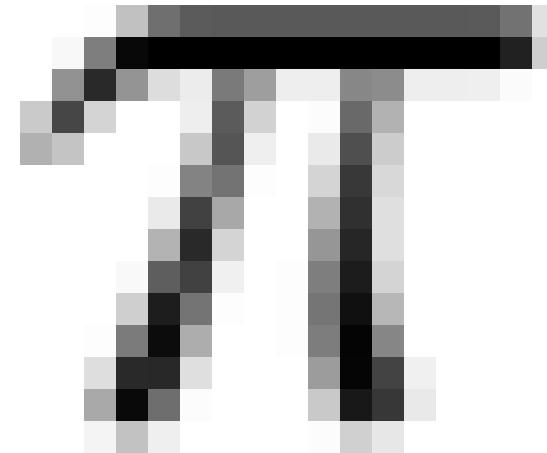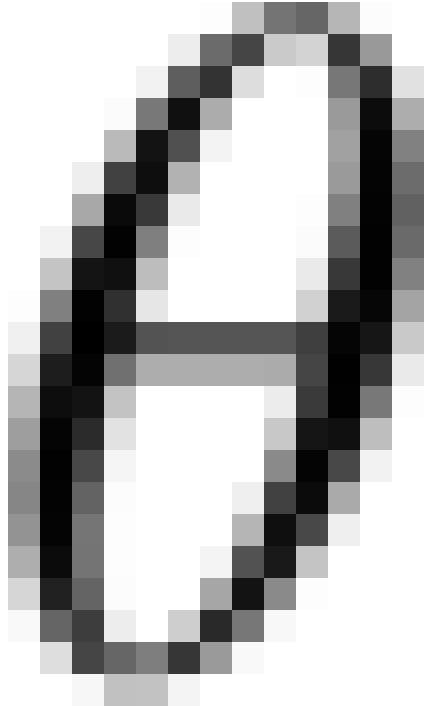


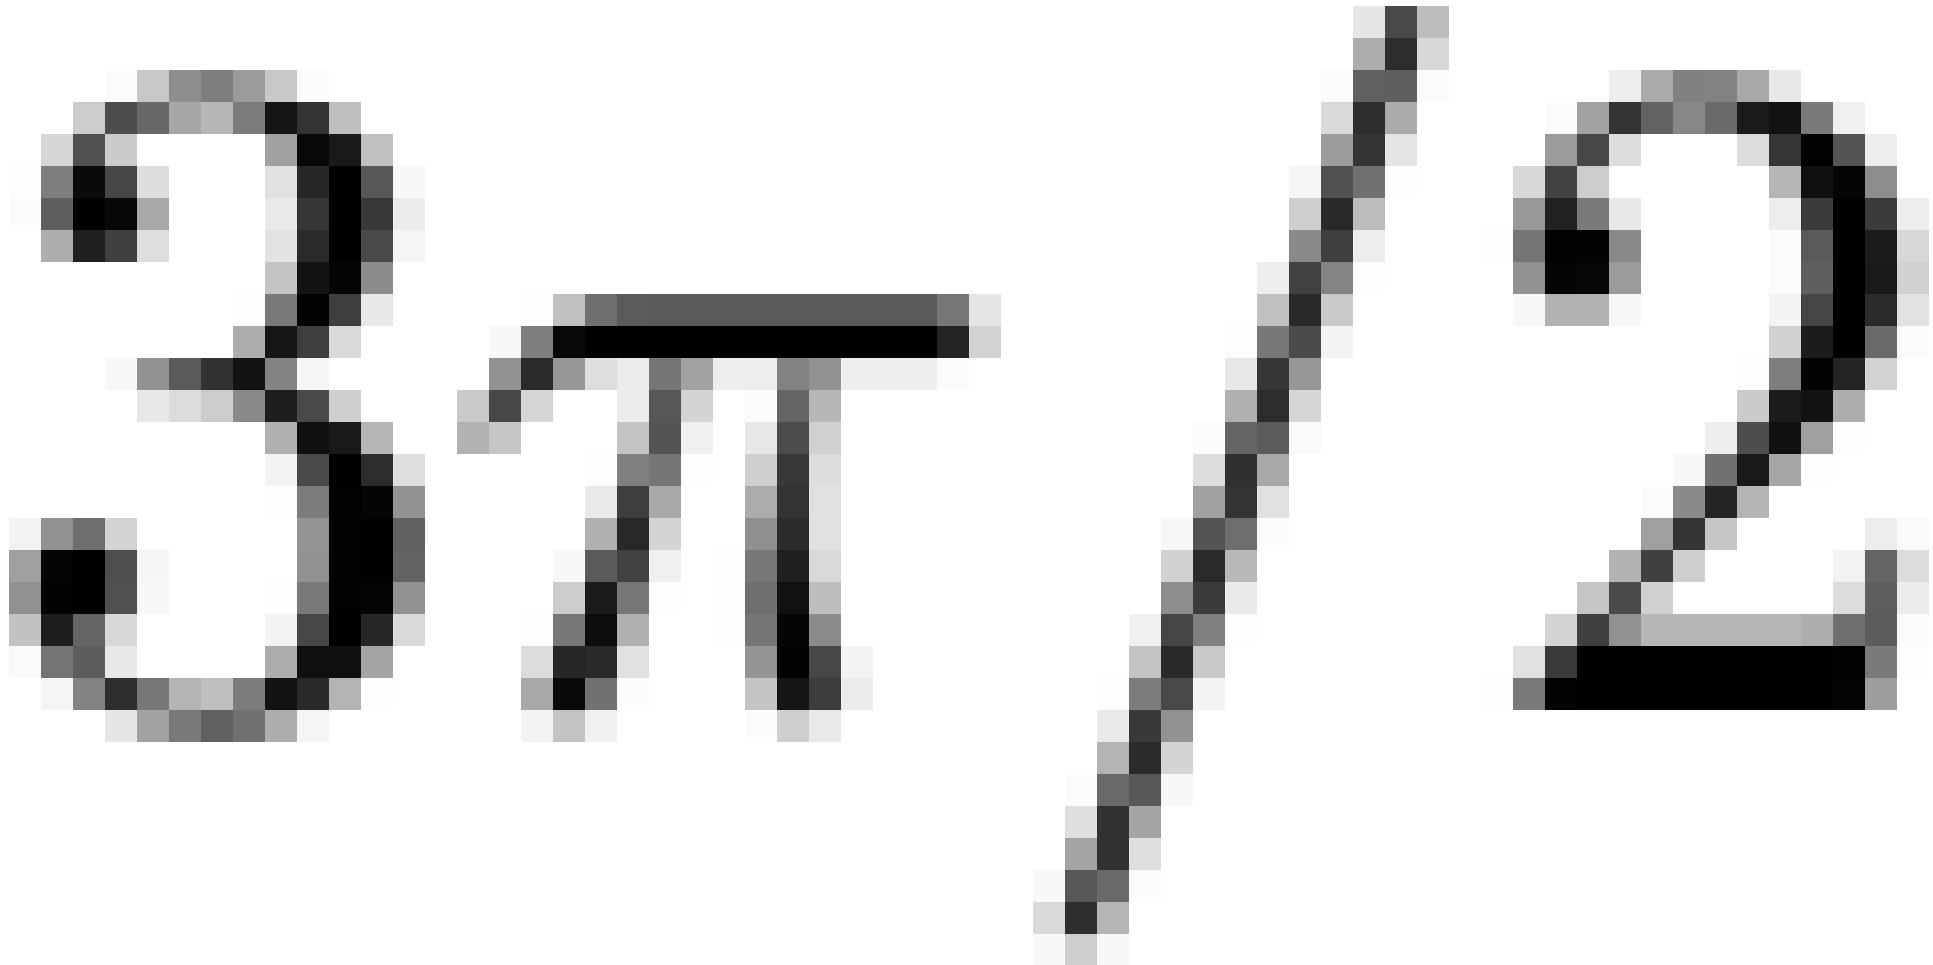

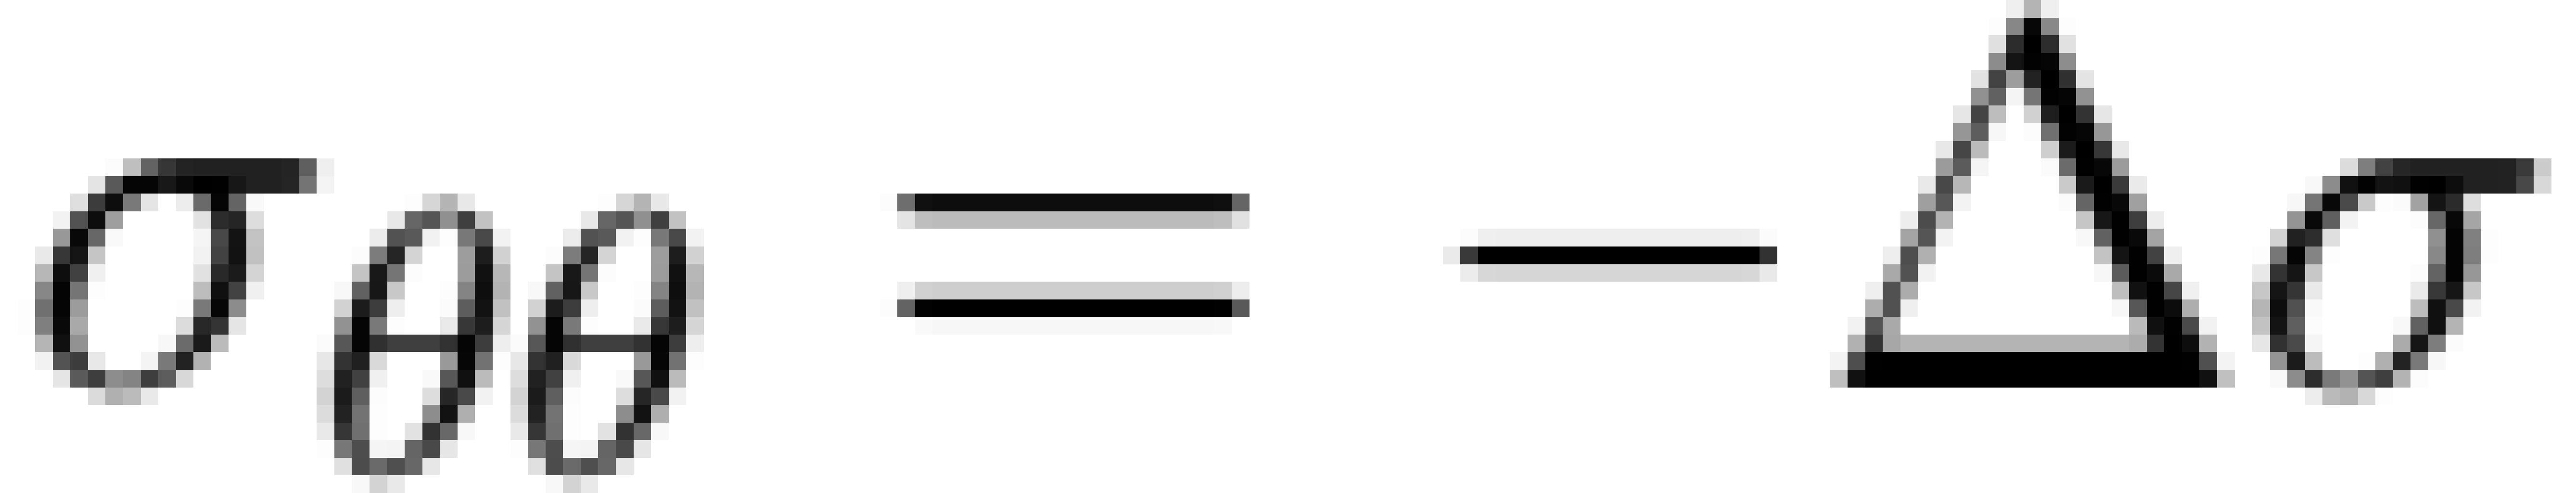


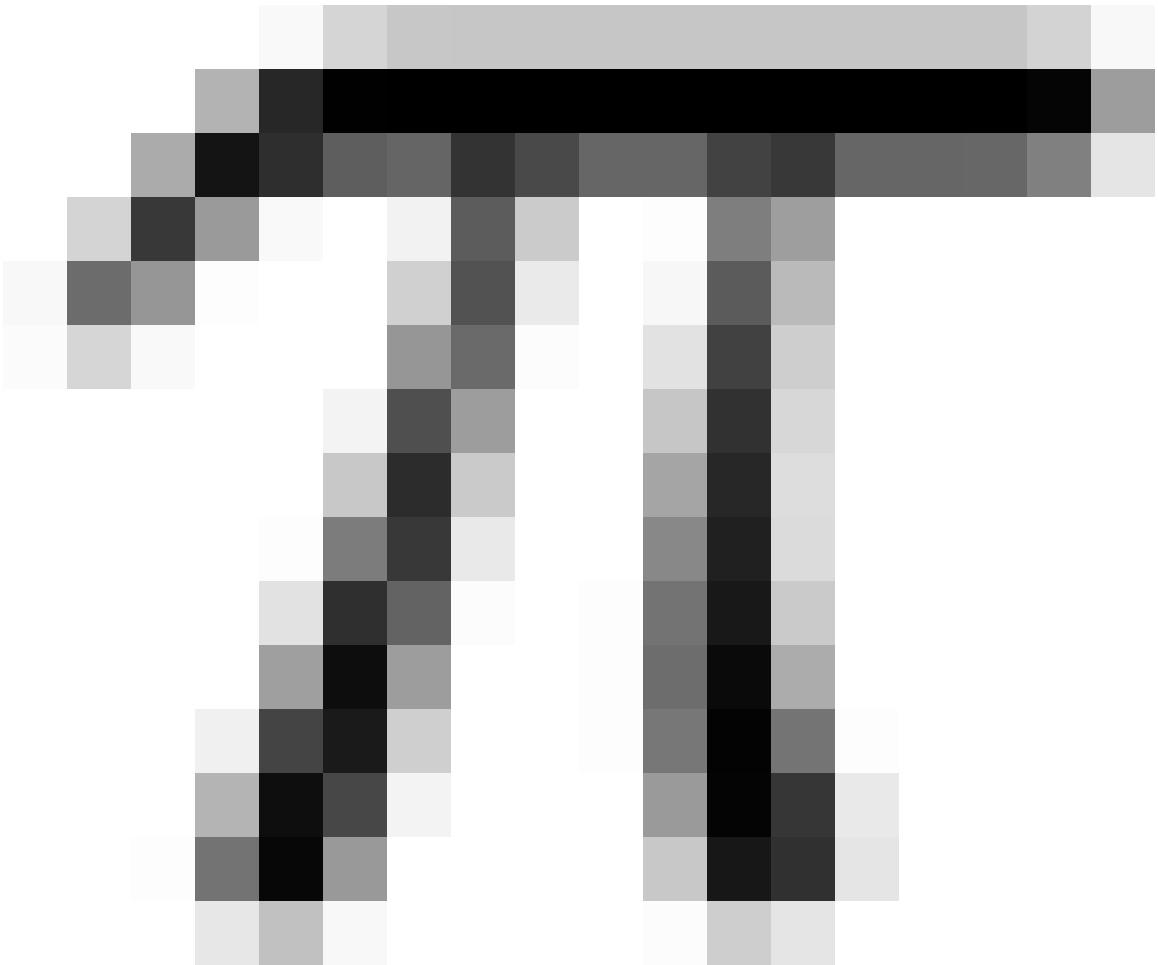










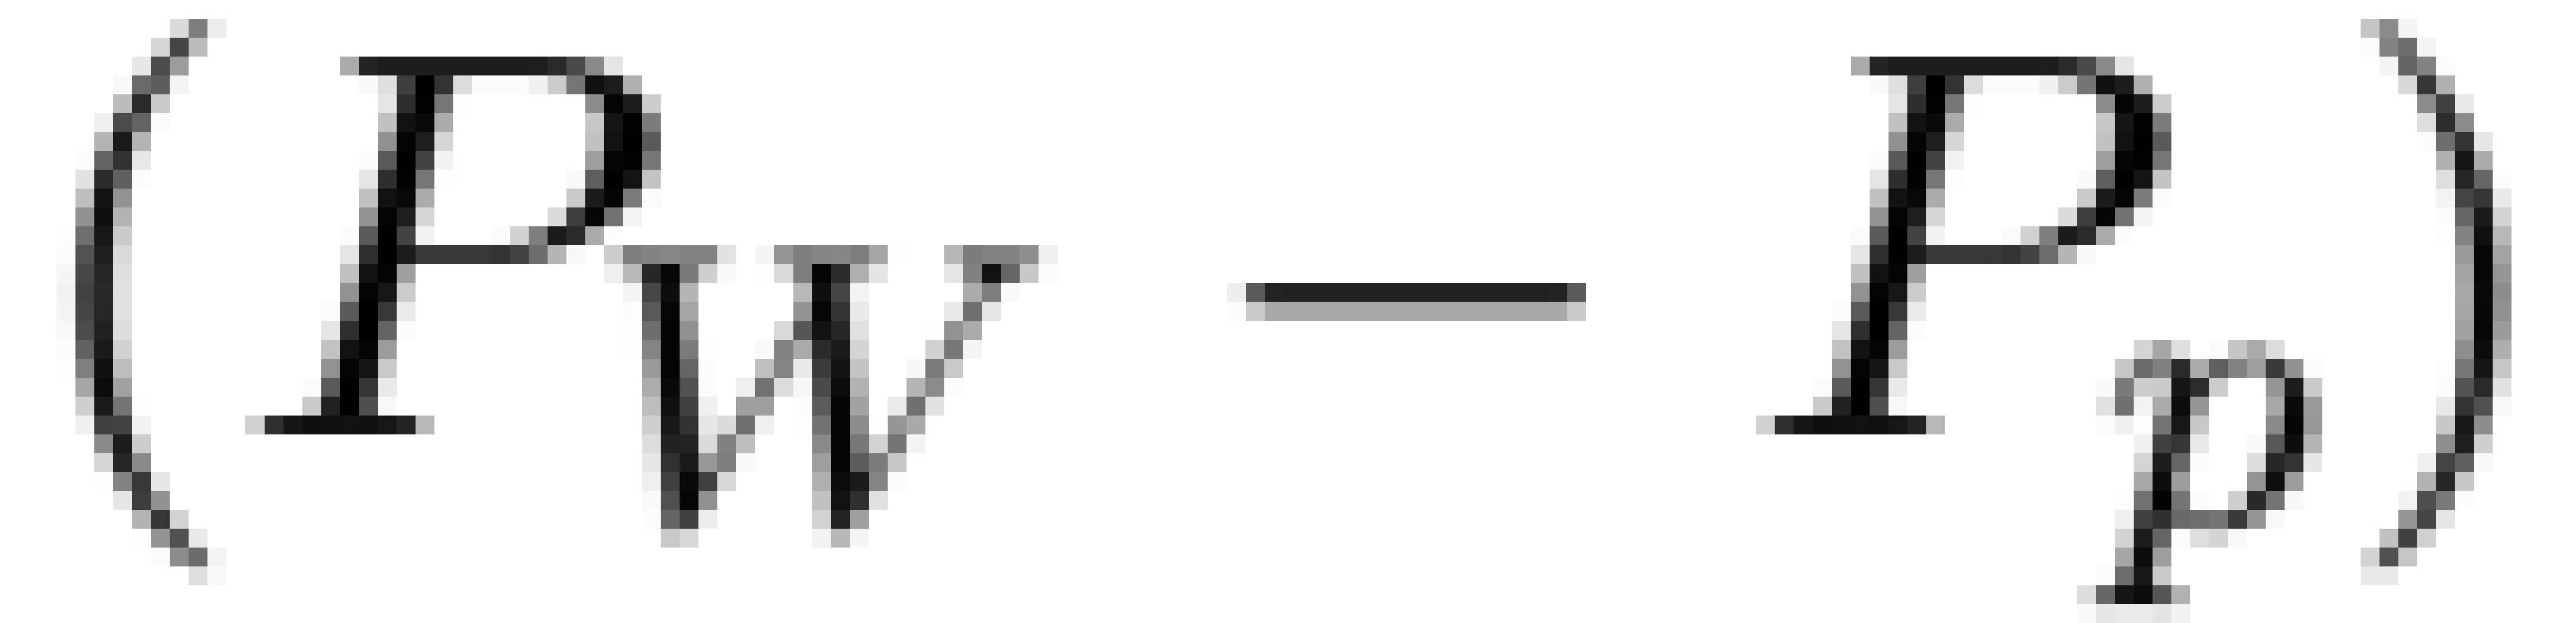

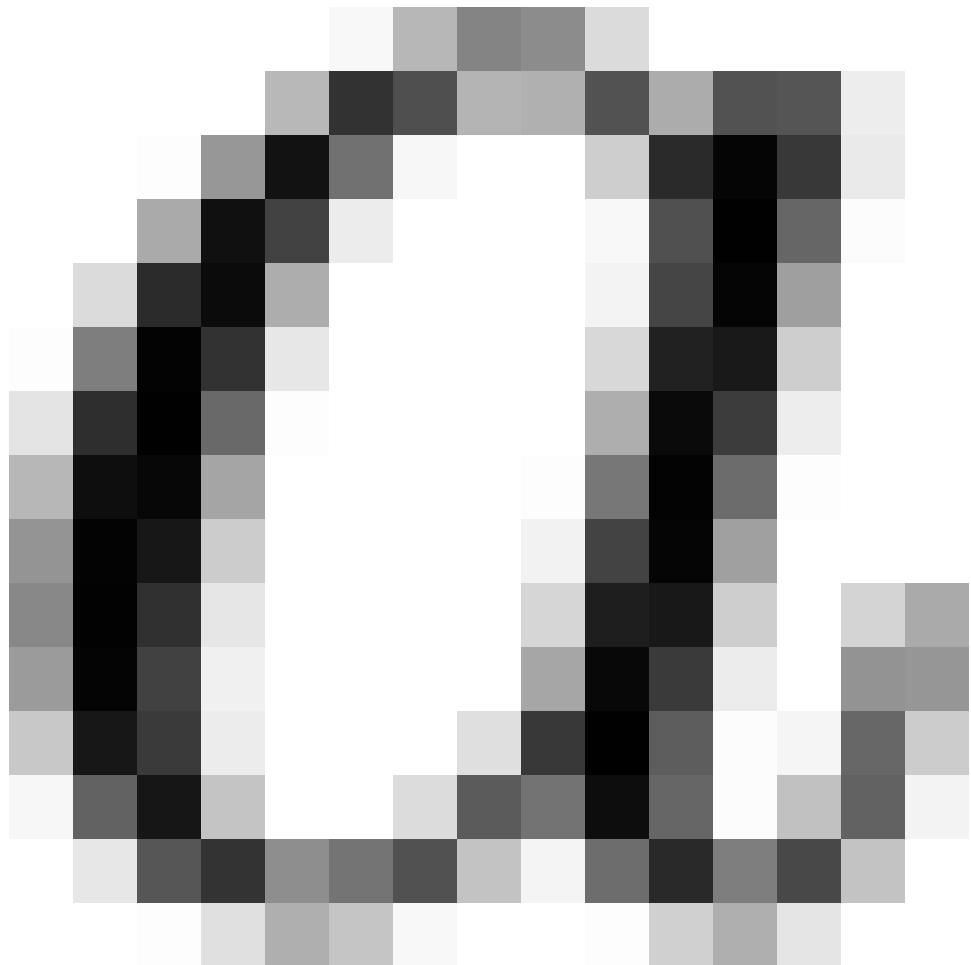


$$\left\{ \begin{array}{lcl} \sigma_{rr} & = & (P_W - P_p) \left(\frac{a^2}{r^2} \right) + \frac{\sigma_{Hmax} + \sigma_{hmin}}{2} \left(1 - \frac{a^2}{r^2} \right) + \frac{\sigma_{Hmax} - \sigma_{hmin}}{2} \left(1 - 4 \frac{a^2}{r^2} + 3 \frac{a^4}{r^4} \right) \cos(2\theta) \\ \\ \sigma_{\theta\theta} & = & -(P_W - P_p) \left(\frac{a^2}{r^2} \right) + \frac{\sigma_{Hmax} + \sigma_{hmin}}{2} \left(1 + \frac{a^2}{r^2} \right) - \frac{\sigma_{Hmax} - \sigma_{hmin}}{2} \left(1 + 3 \frac{a^4}{r^4} \right) \cos(2\theta) \\ \\ \sigma_{r\theta} & = & \frac{\sigma_{Hmax} - \sigma_{hmin}}{2} \left(1 + 2 \frac{a^2}{r^2} - 3 \frac{a^4}{r^4} \right) \sin(2\theta) \\ \\ \sigma_{zz} & = & \sigma_v - 2\nu (\sigma_{Hmax} - \sigma_{hmin}) \left(\frac{a^2}{r^2} \right) \cos(2\theta) \end{array} \right.$$

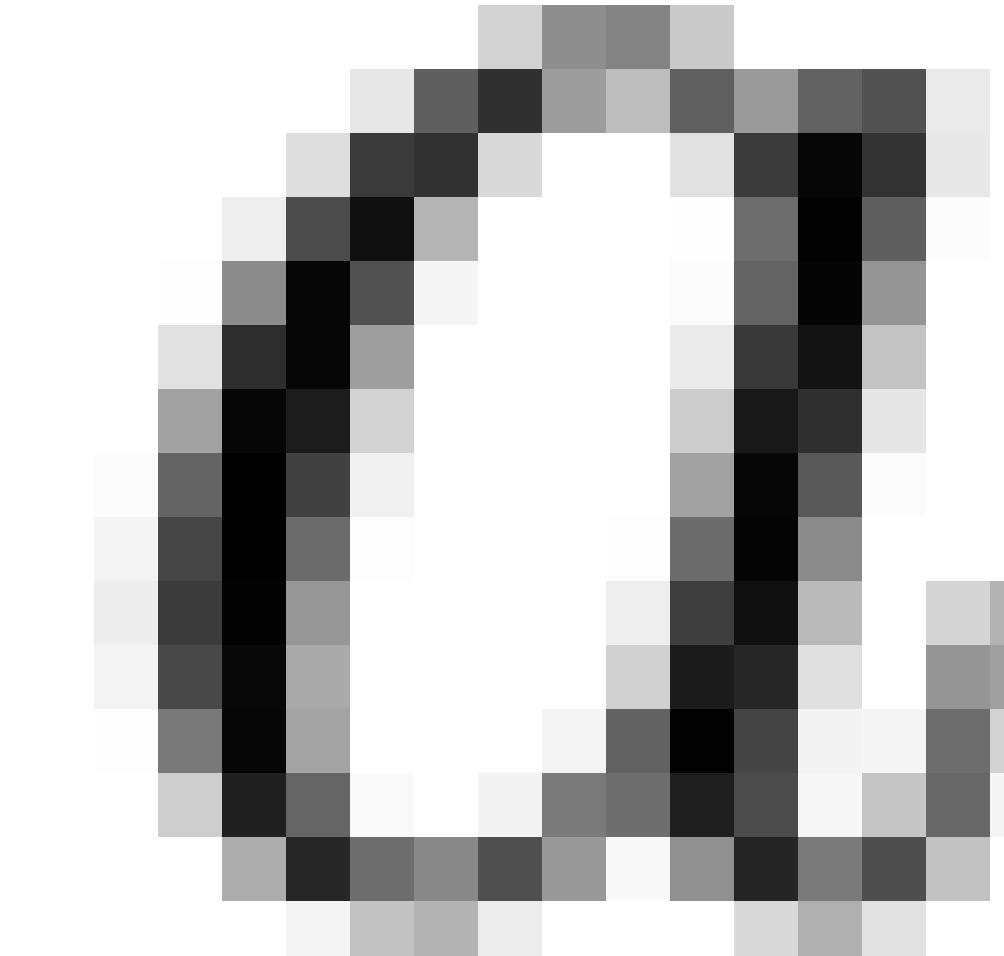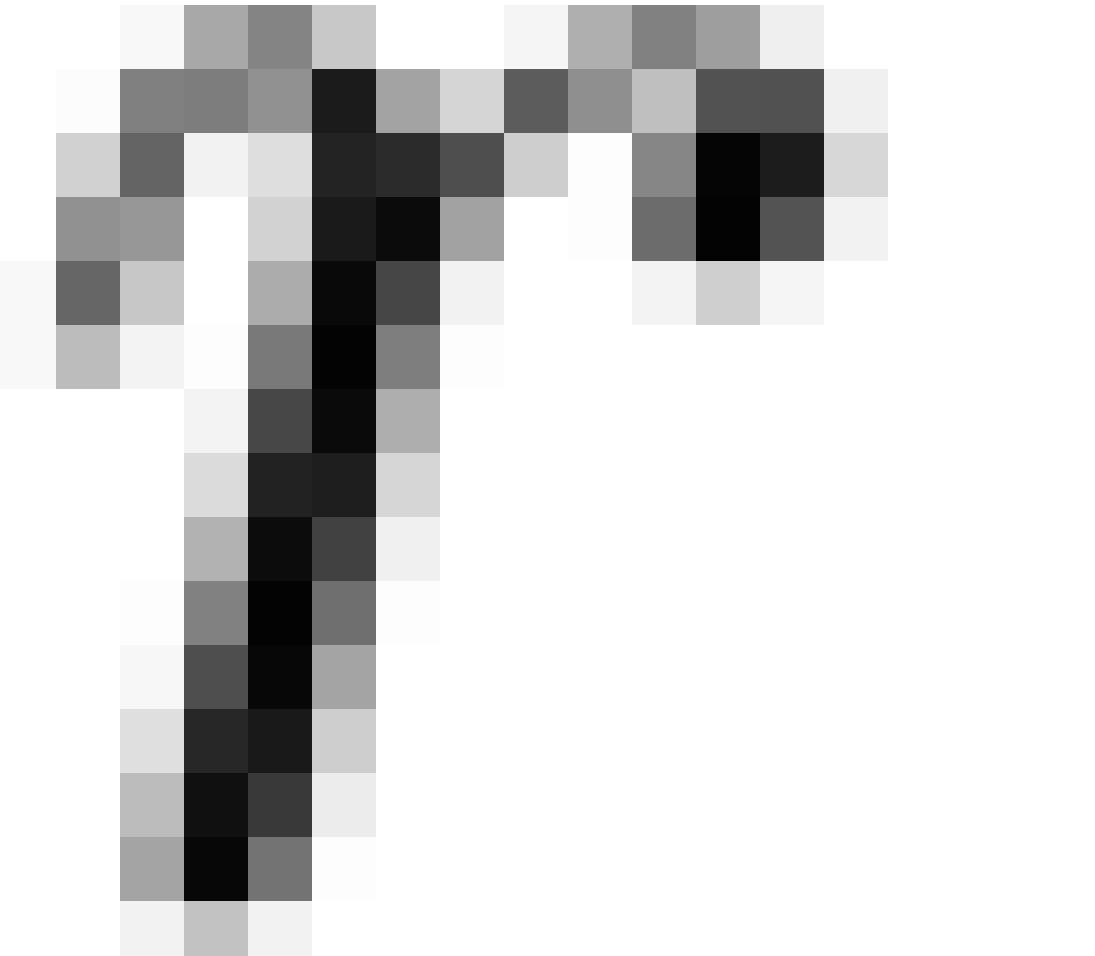














Stresses in cylindrical coordinates

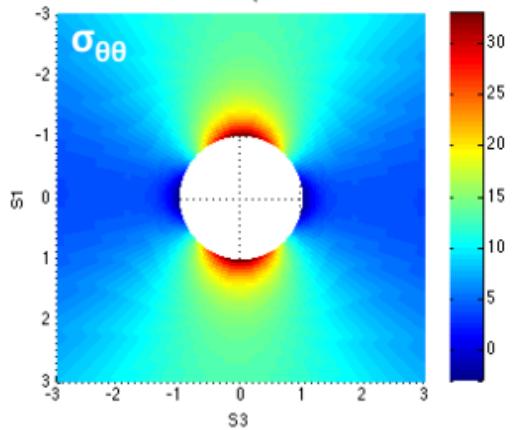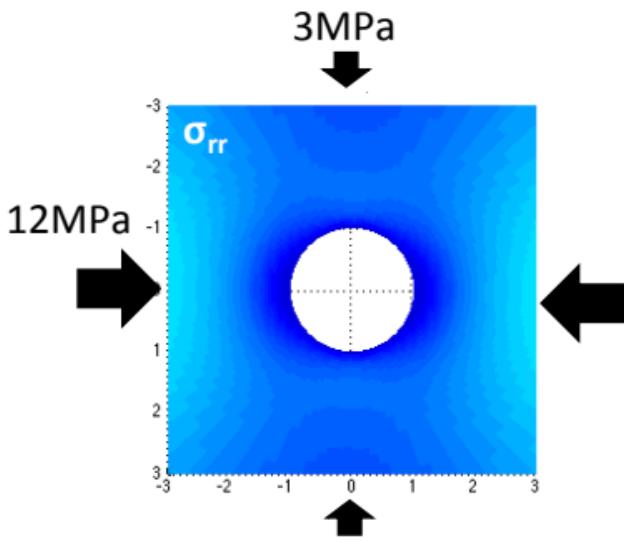

Principal Stresses

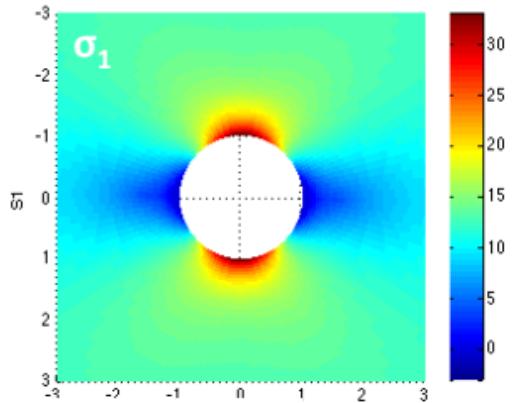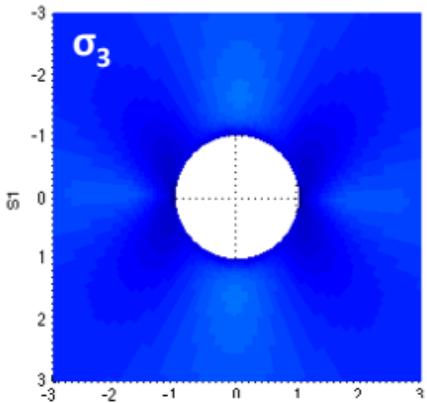

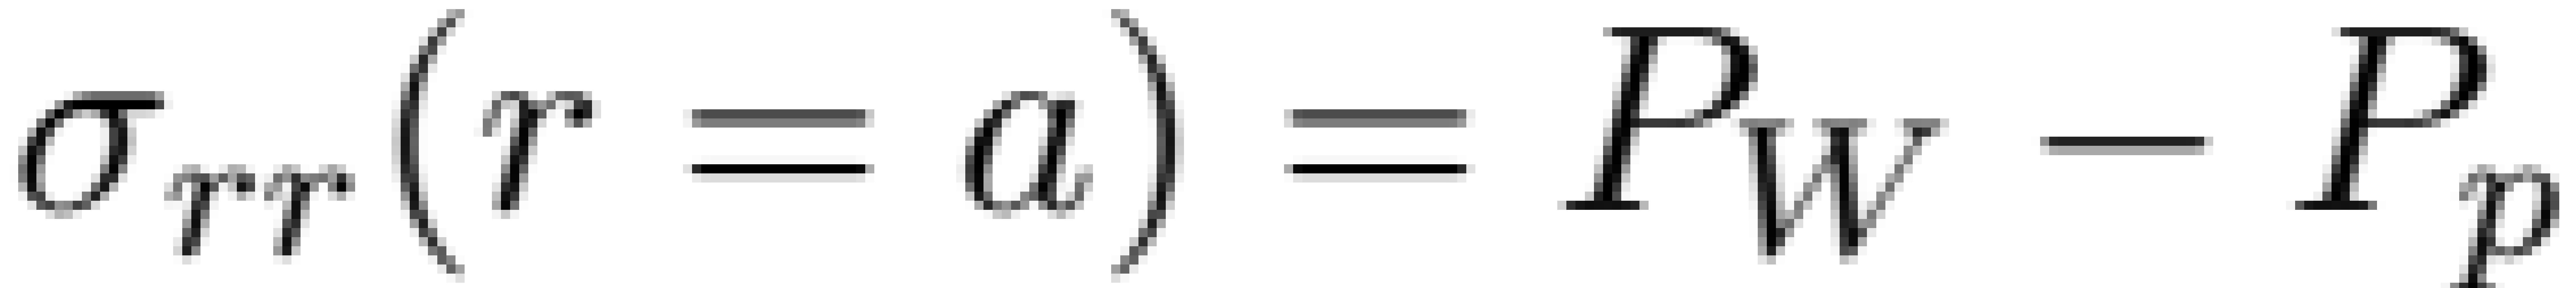

$$\sigma_{\text{H}\alpha\alpha} = \sigma_{\text{H}\alpha\alpha}^{\text{max}} + \sigma_{\text{H}\alpha\alpha}^{\text{min}} \left(\frac{P_{\text{p}}}{P_{\text{p}} + P_{\text{d}}} \right)^2 \left(\frac{\sin(\theta)}{\sin(\theta + \phi)} \right)^2$$


$$\begin{aligned} \sigma_{\theta\theta}(r=a, \theta=0) &= (P_W - P_p) + 3\sigma_{h\min} \\ \sigma_{\theta\theta}(r=a, \theta=\pi/2) &= -(P_W - P_p) + 3\sigma_{h\max} \end{aligned}$$



2020-07-20 20:08:20



$$\left\{ \begin{array}{l} \sigma_1 = \sigma_{\theta\theta} = - (P_W - P_p) + 3 \sigma_{H\max} - \sigma_{hmin} \\ \sigma_3 = \sigma_{rr} = (P_W - P_p) \end{array} \right.$$

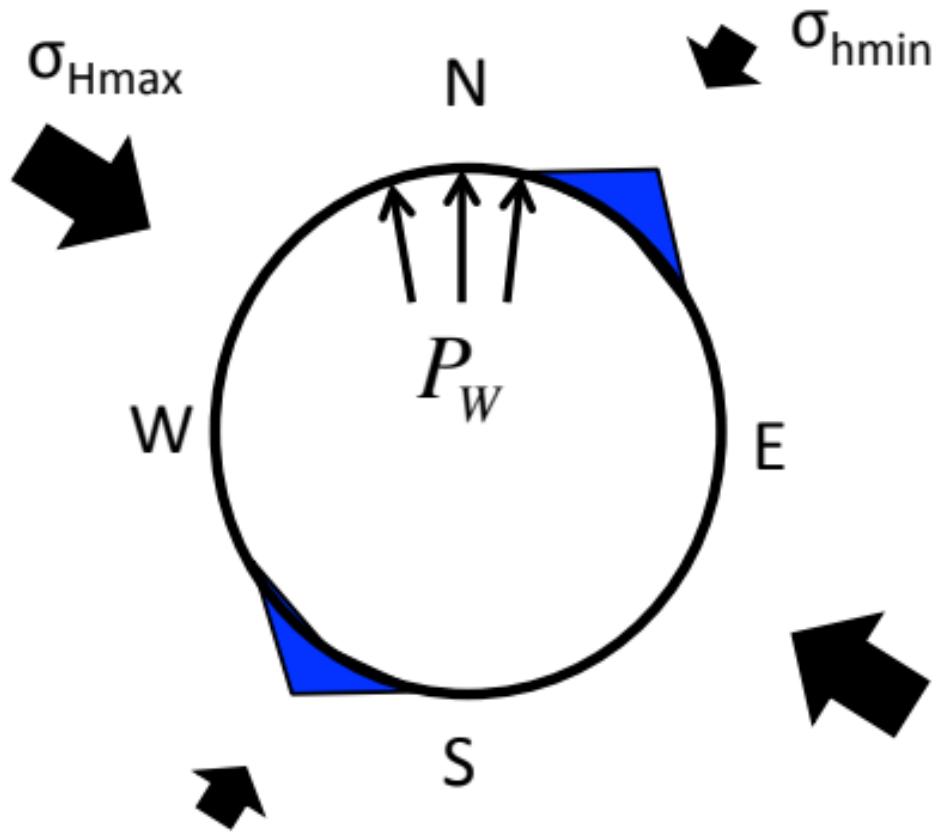

Stress anisotropy

$$P_{W\text{shear}} = P_p + \frac{3\sigma_{H\max} - \sigma_{h\min} - UCS}{1+q}$$

Pore pressure in the formation



Shear strength


$P_W \leq P_{W\text{shear}}$ leads to breakouts






$\left[\frac{1}{\sqrt{2}}(P_+ + P_-) \right] = \frac{1}{\sqrt{2}}(S^x + iS^y)$


$$P_{W\text{ shear}} = \frac{3\sigma_H \max - \sigma_{hmin} - U_{CS}}{1 + q}$$




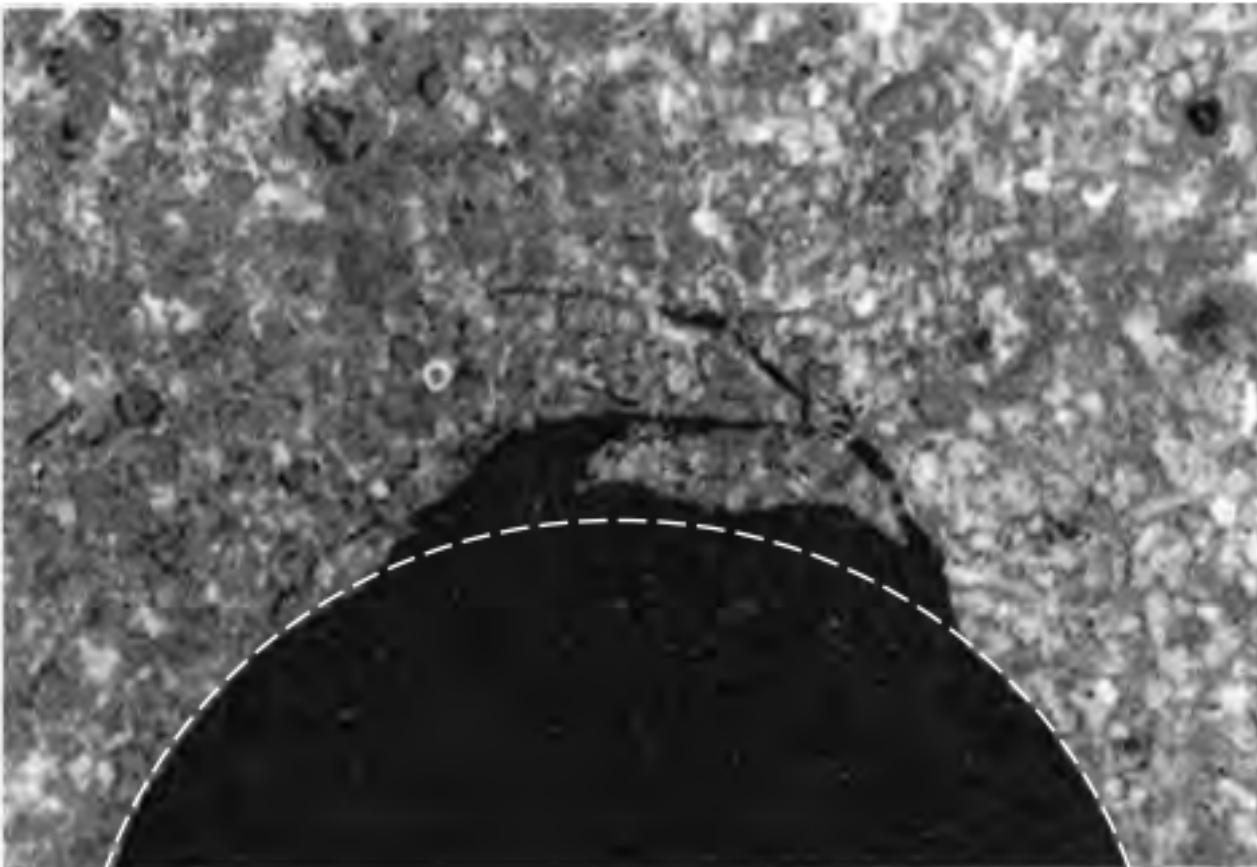
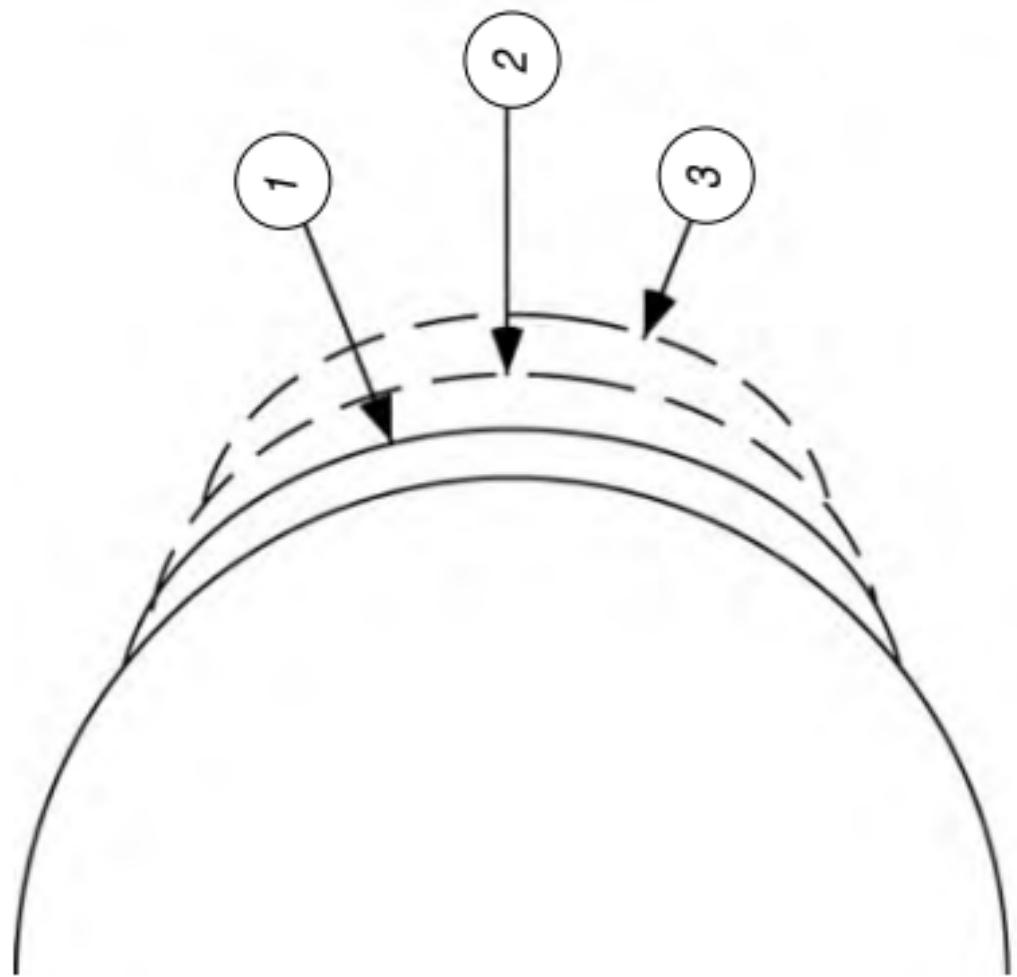





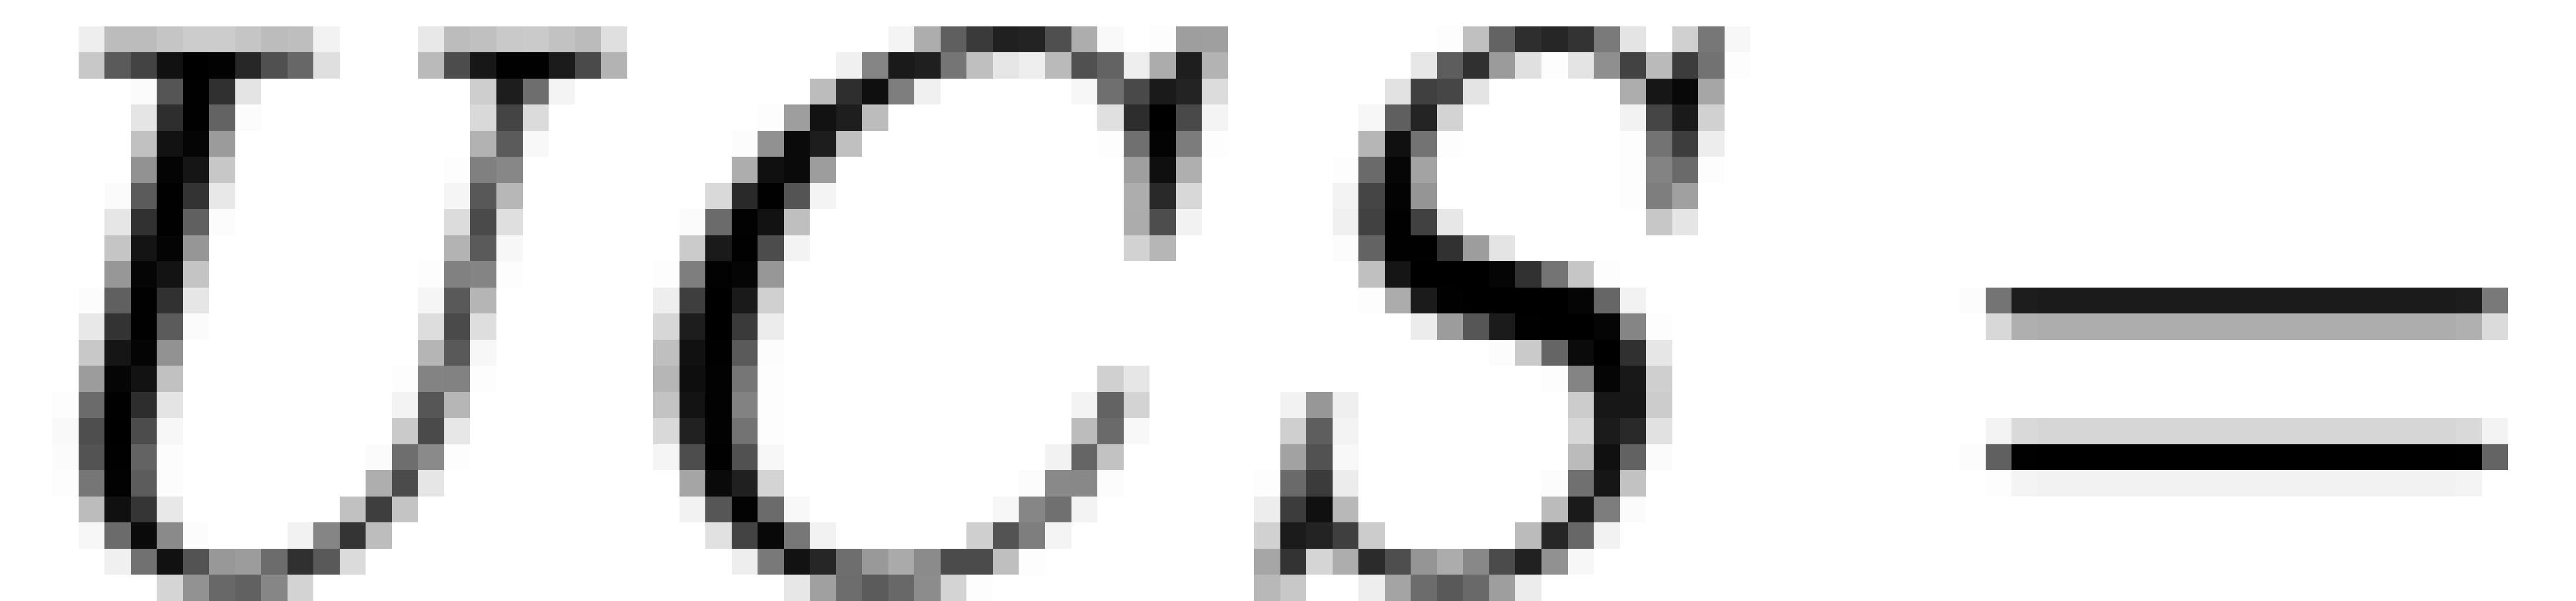


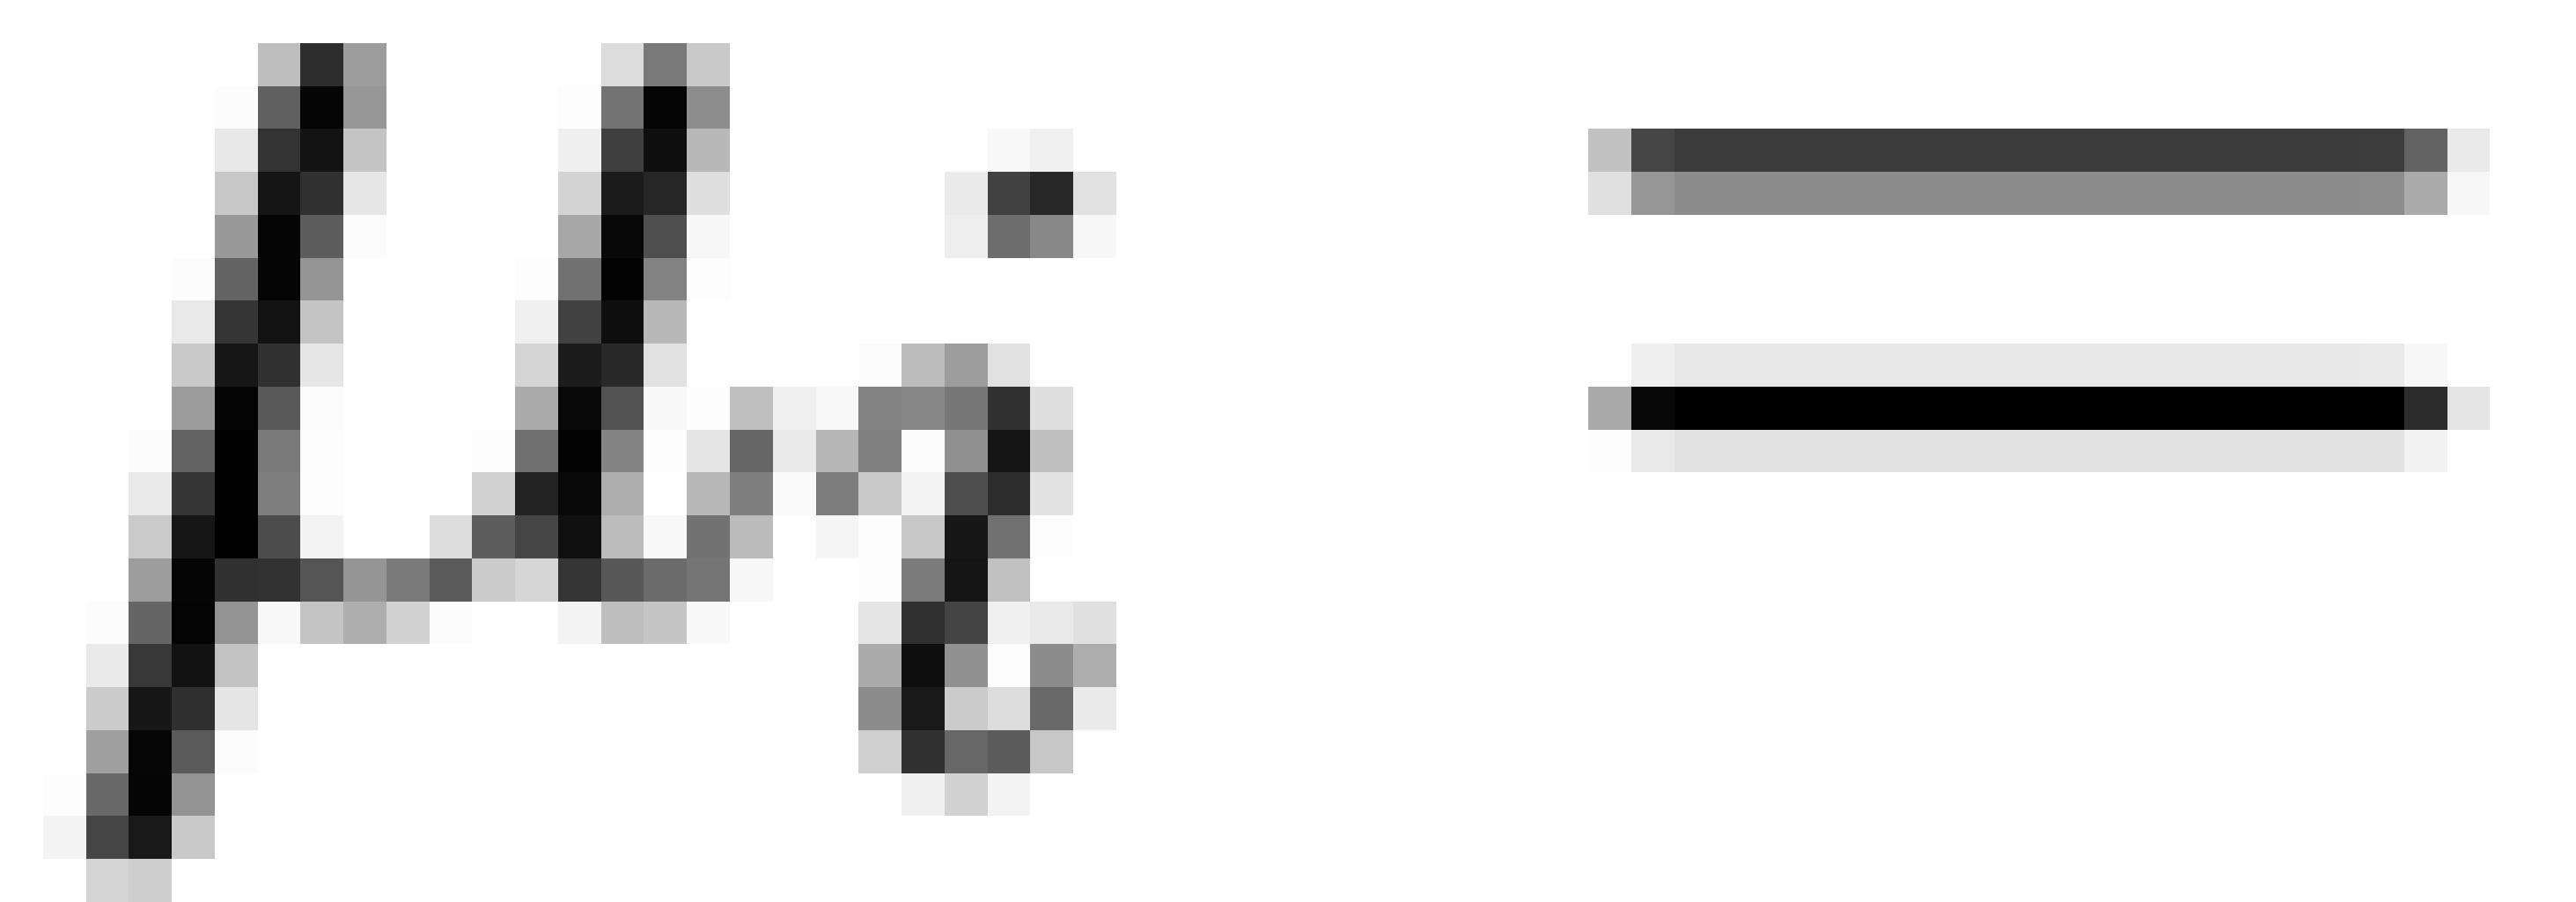



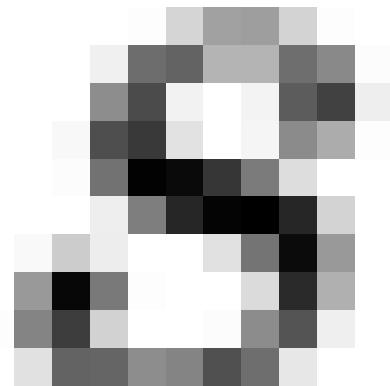
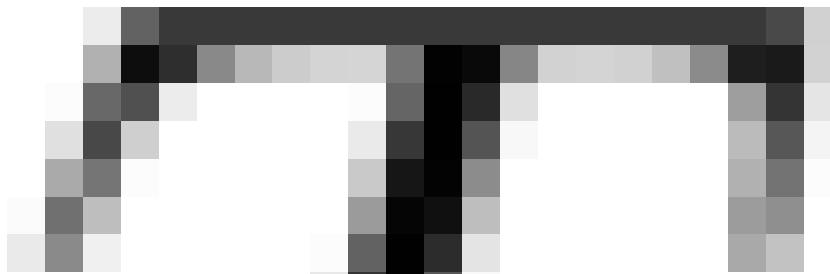




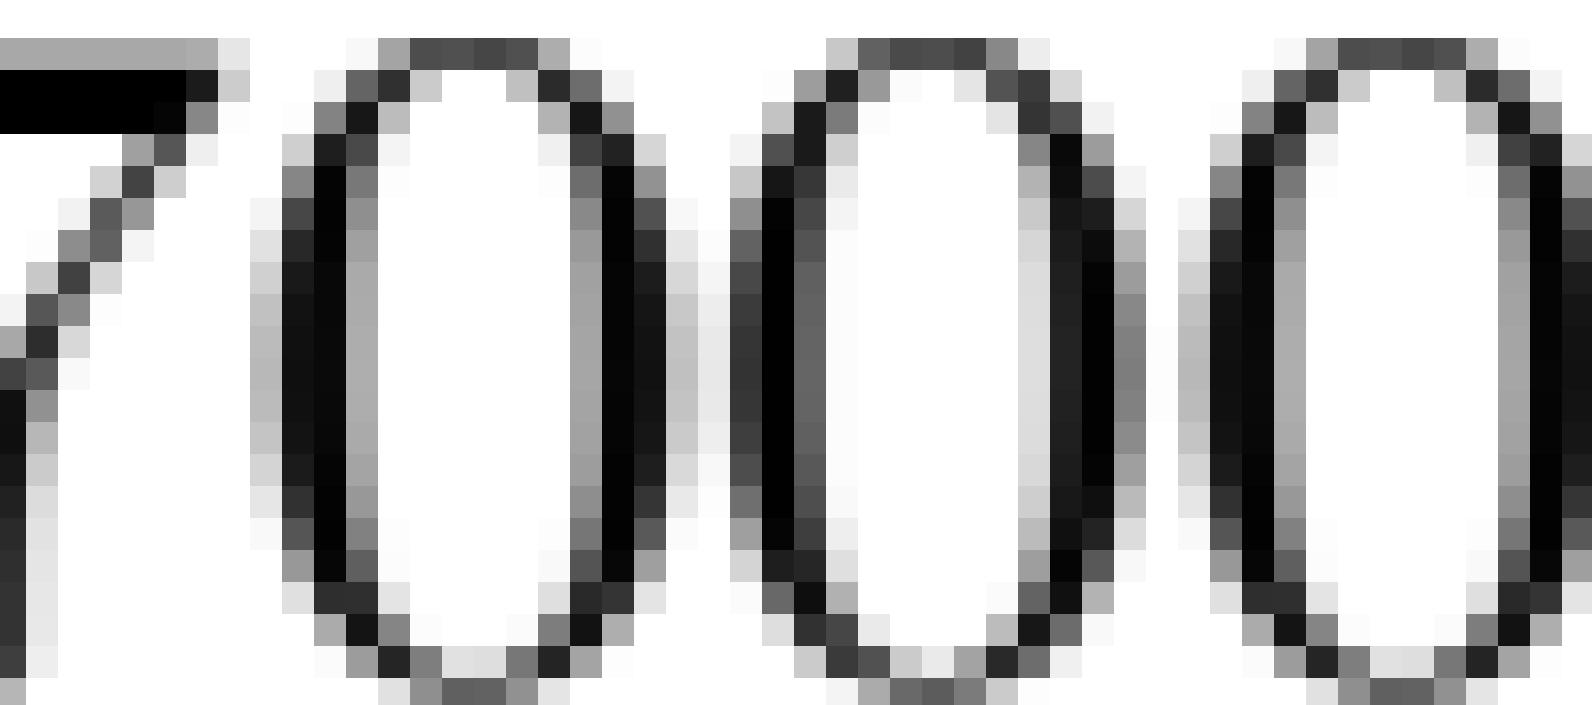


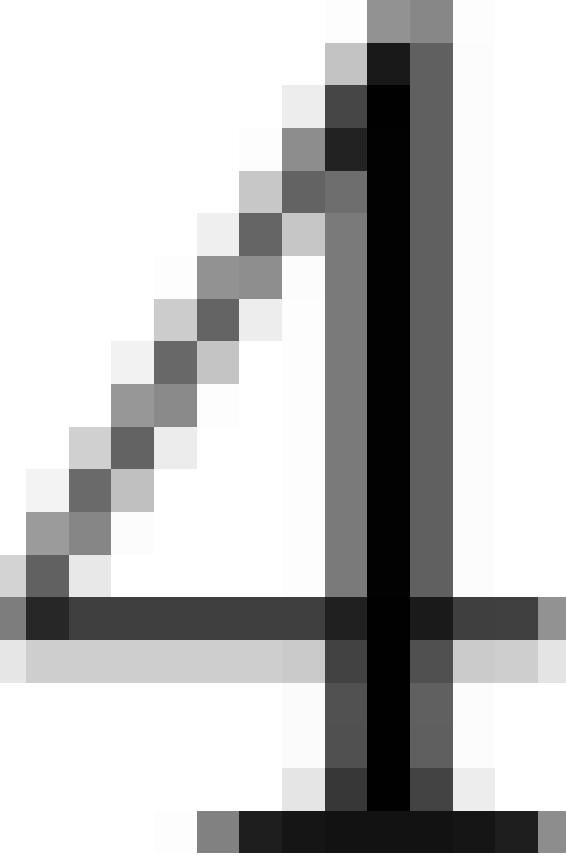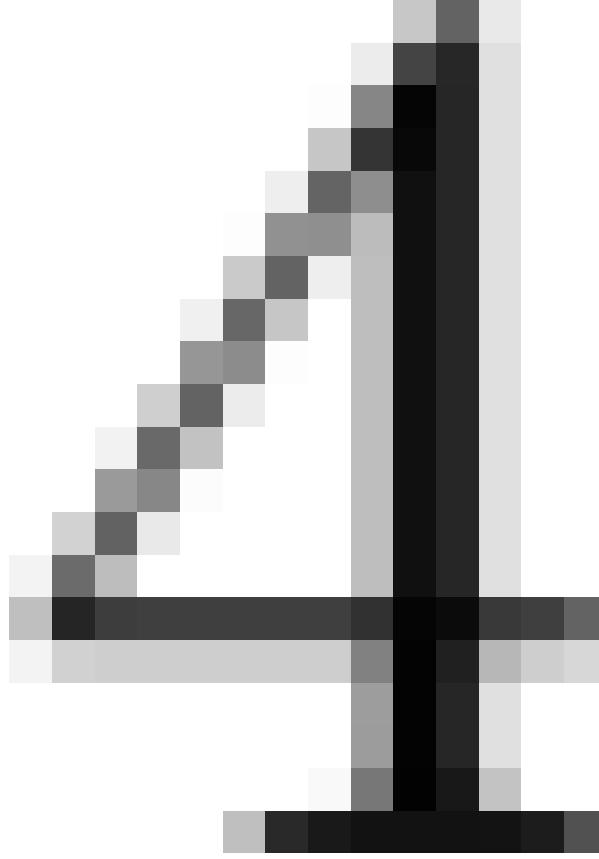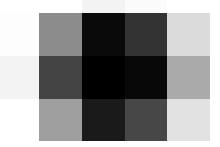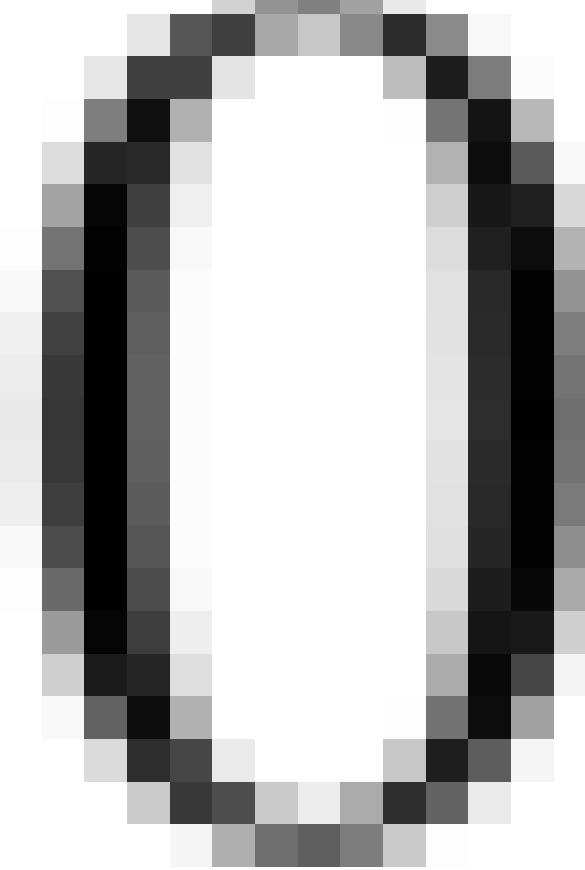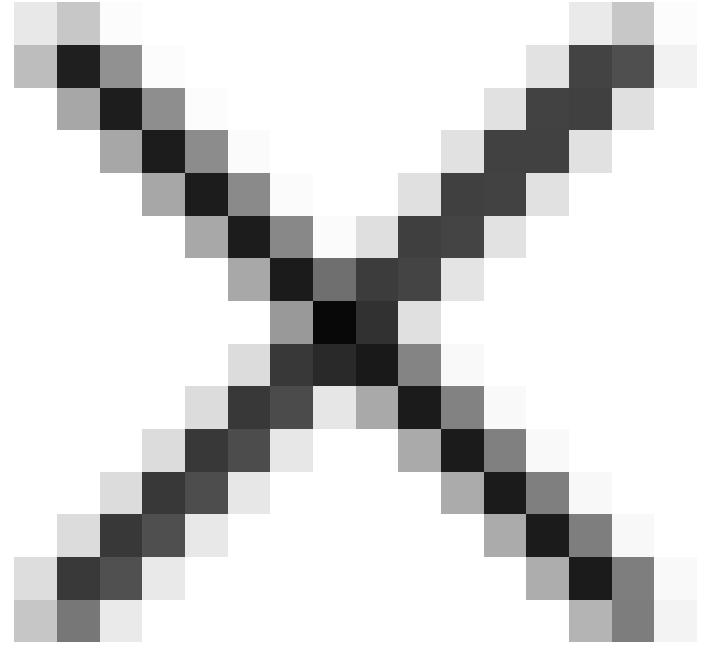


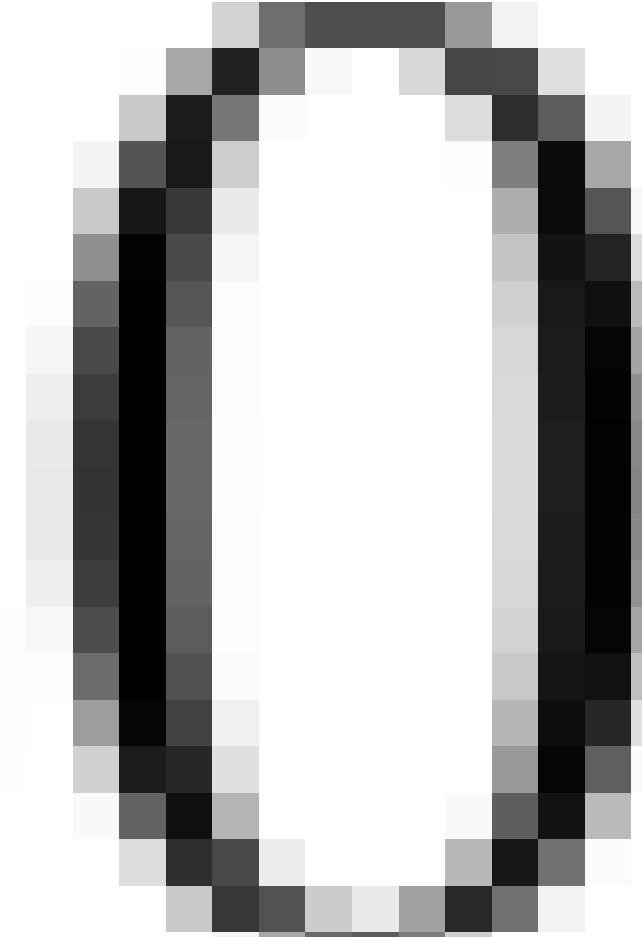
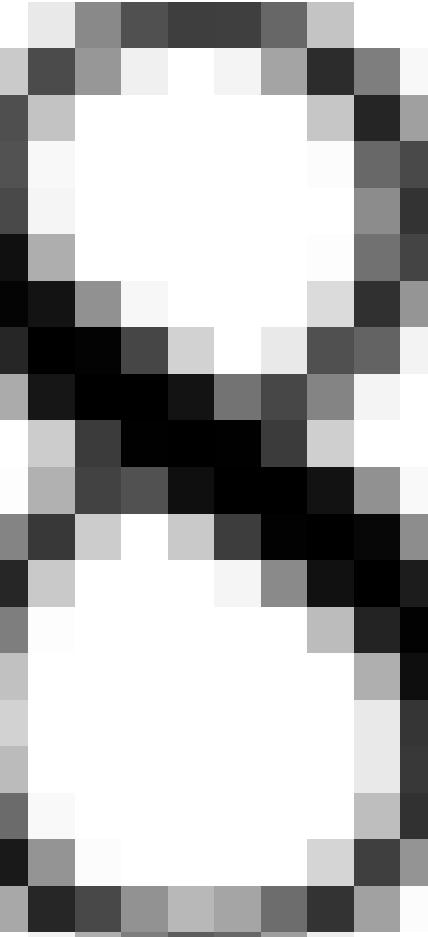
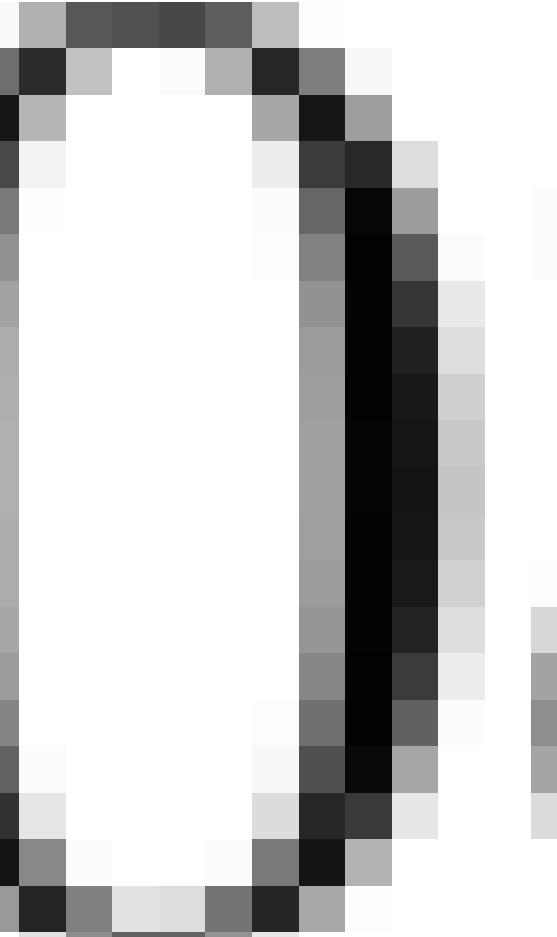
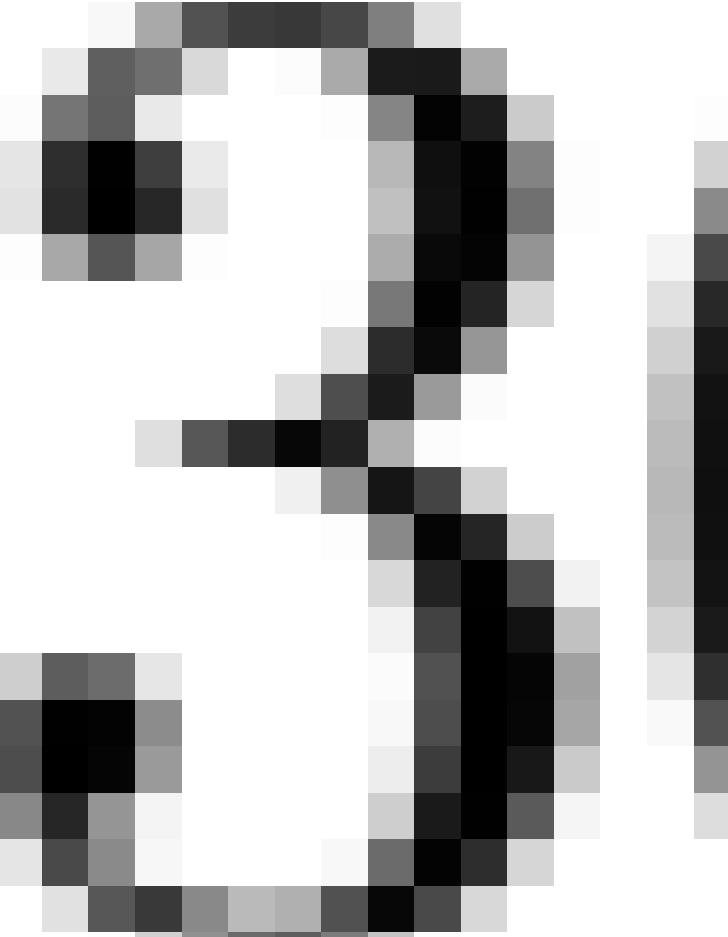




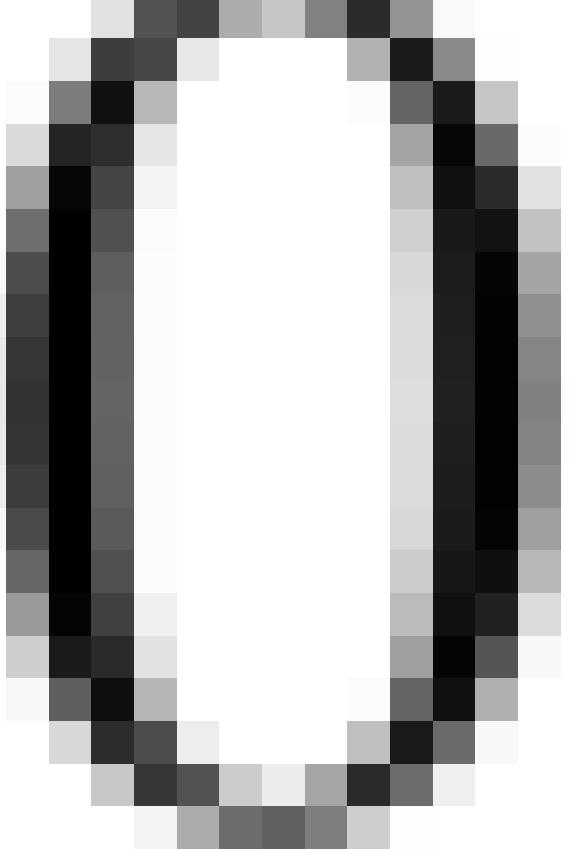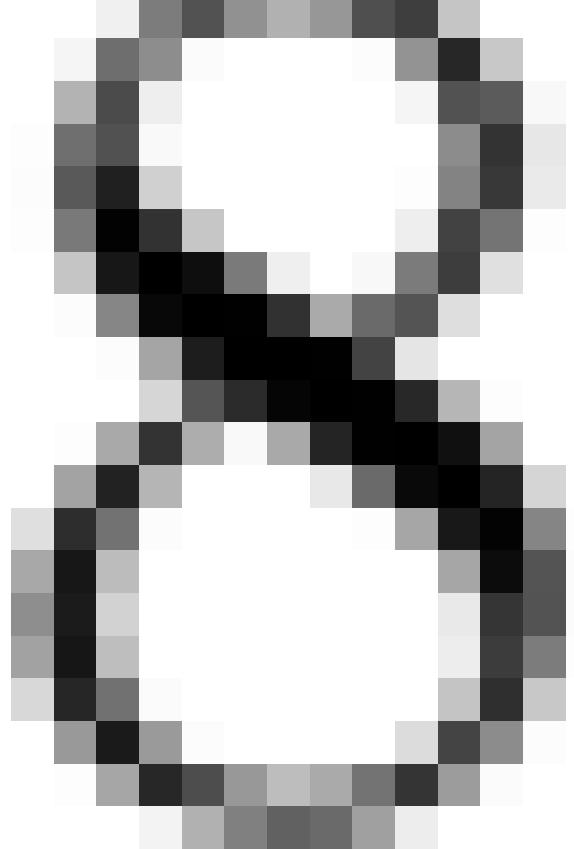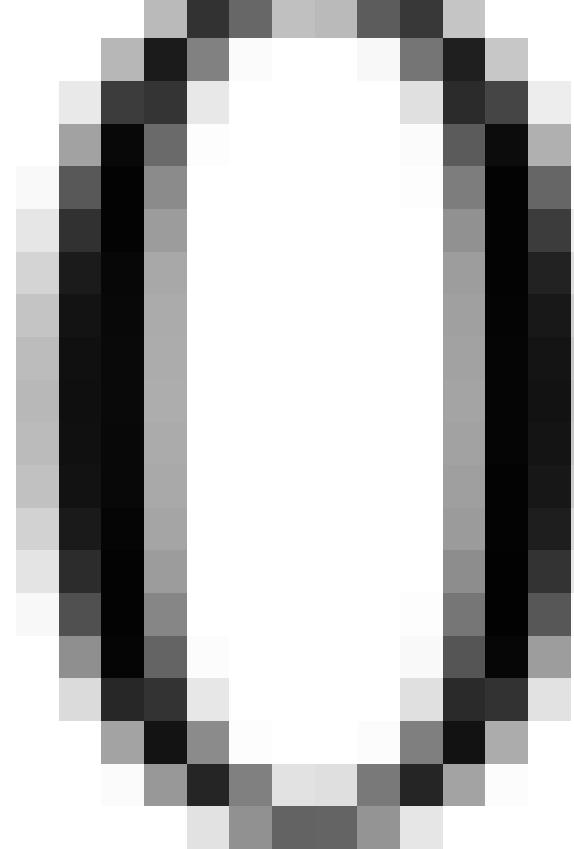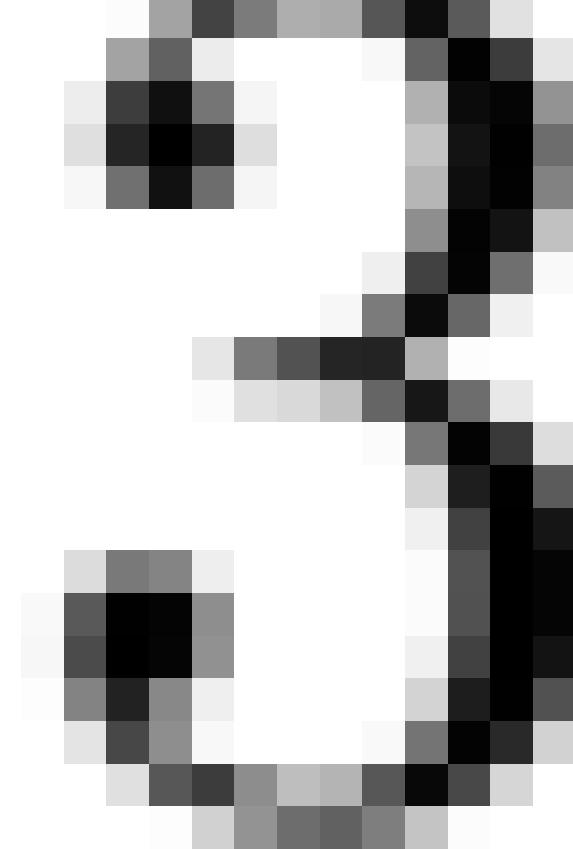

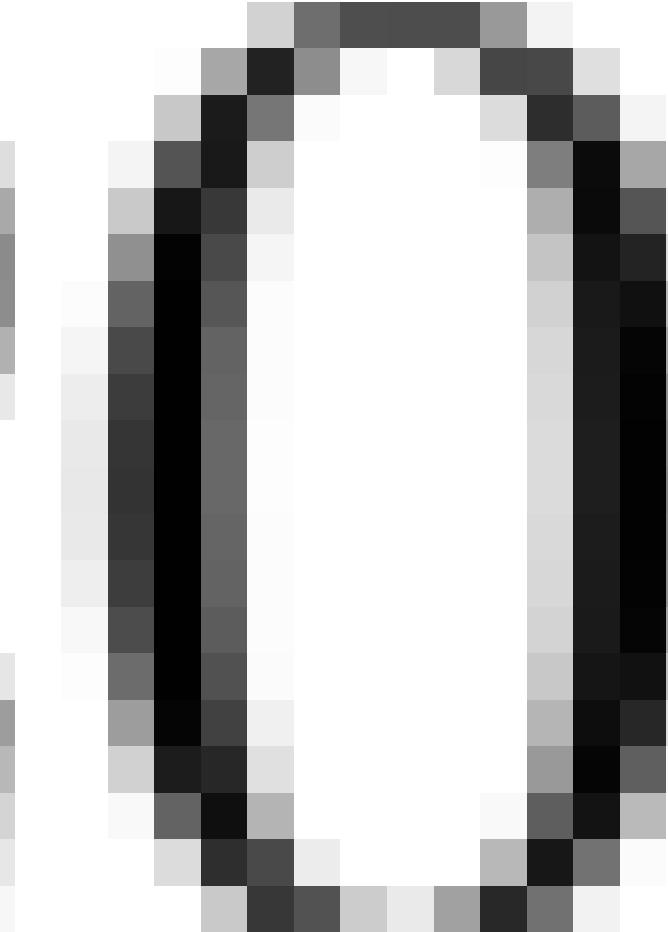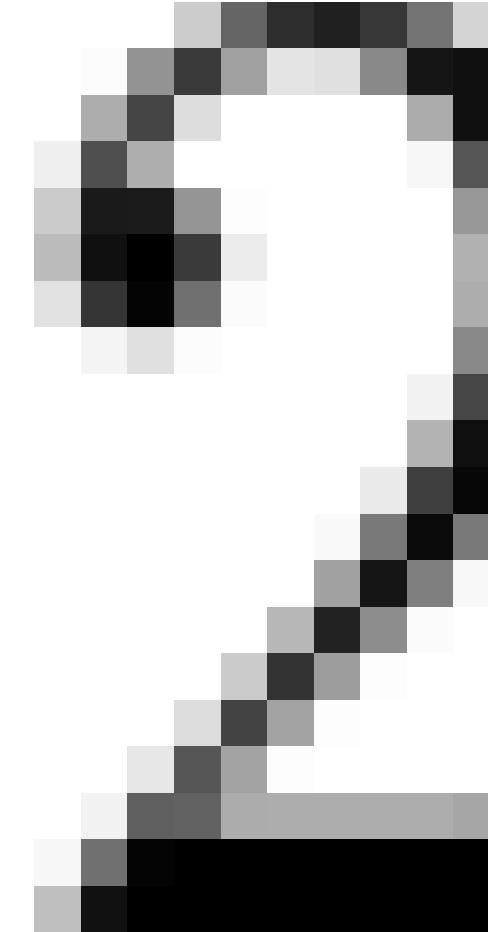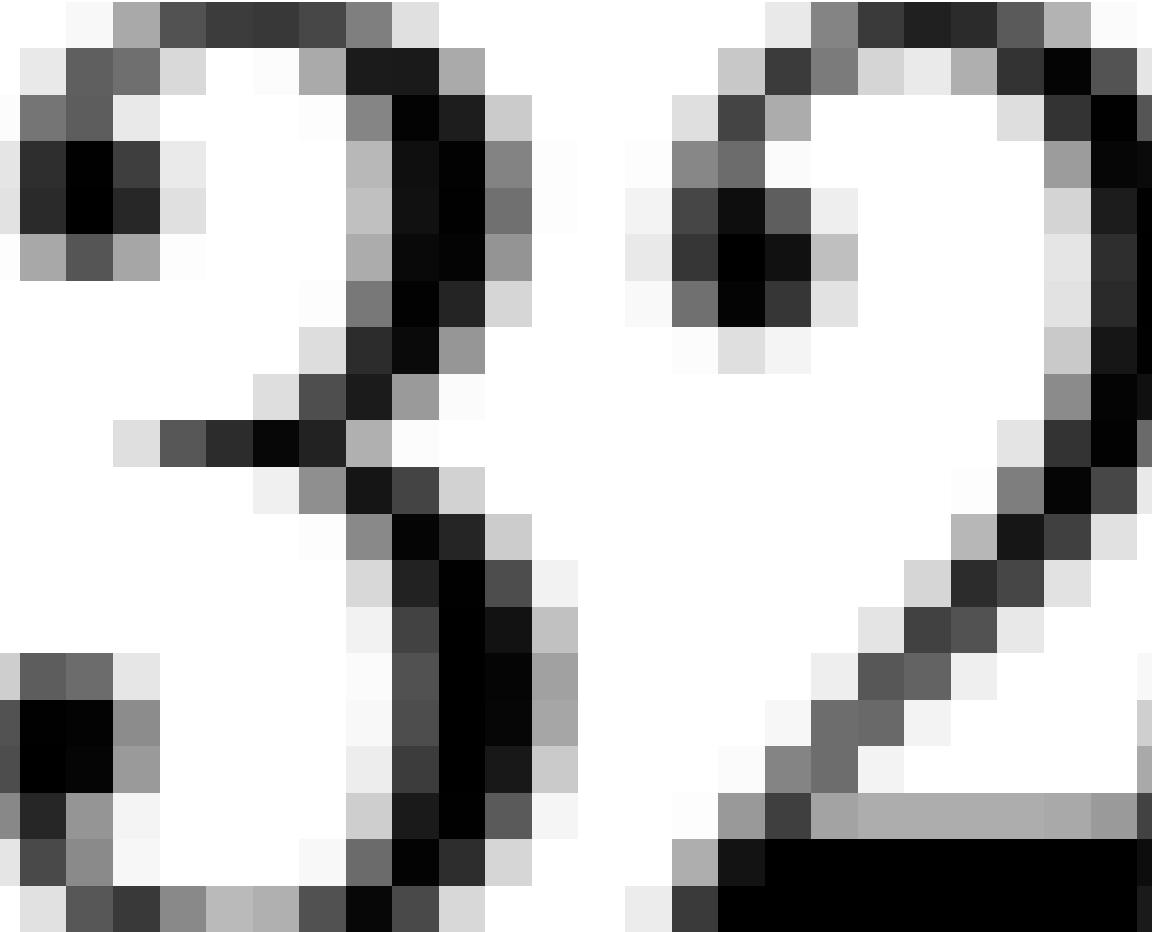

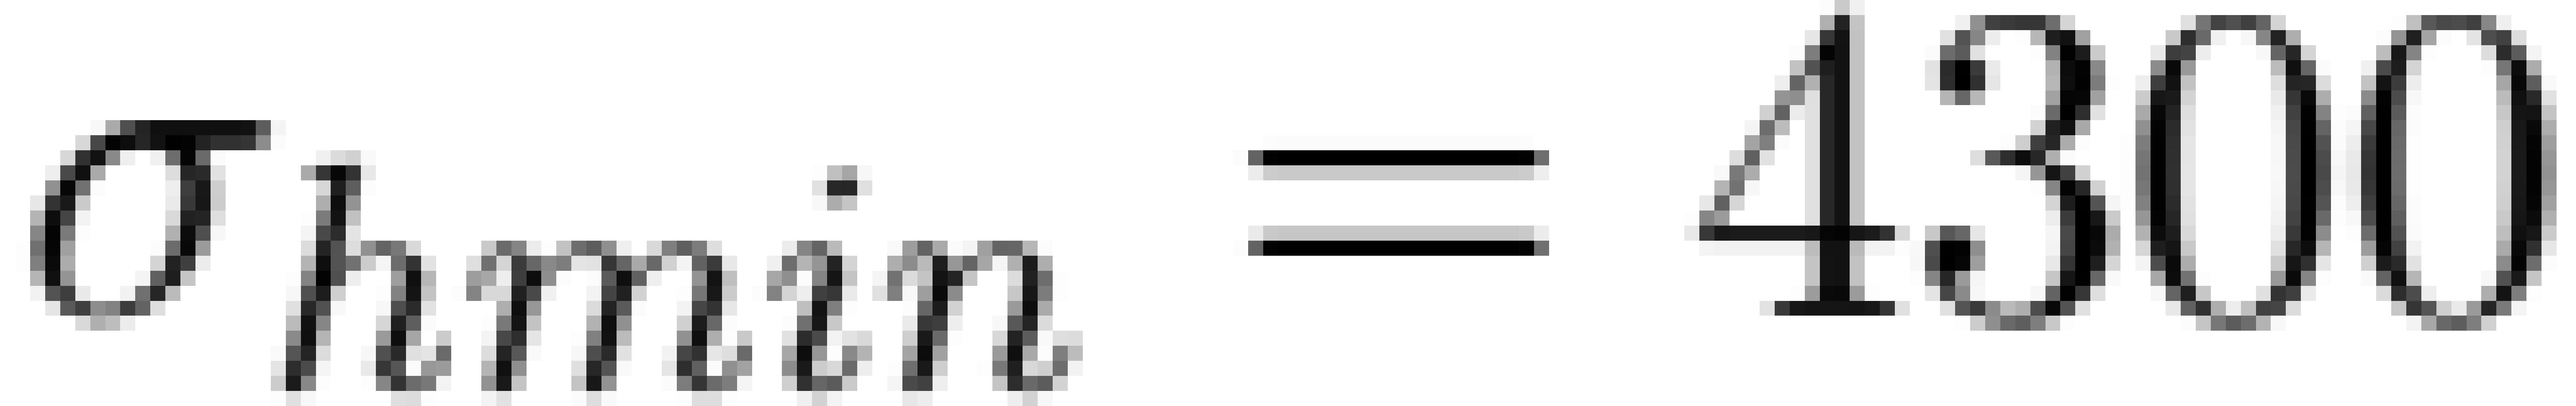

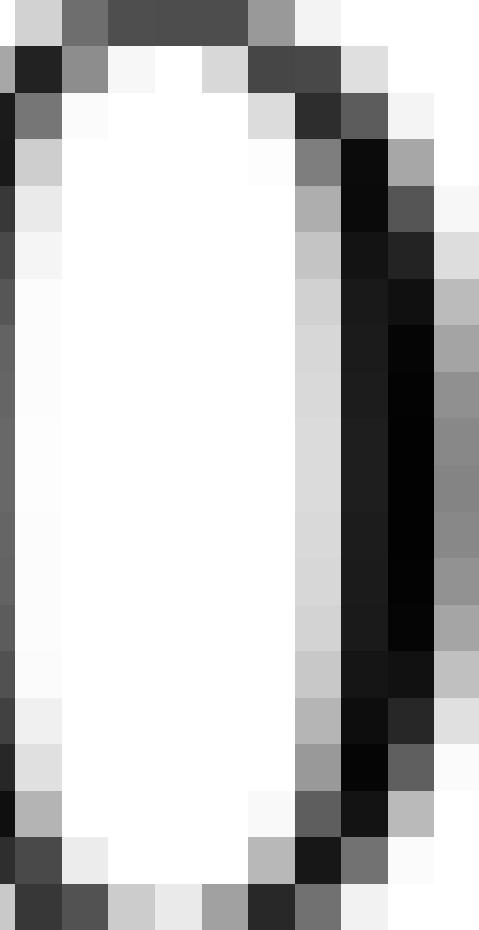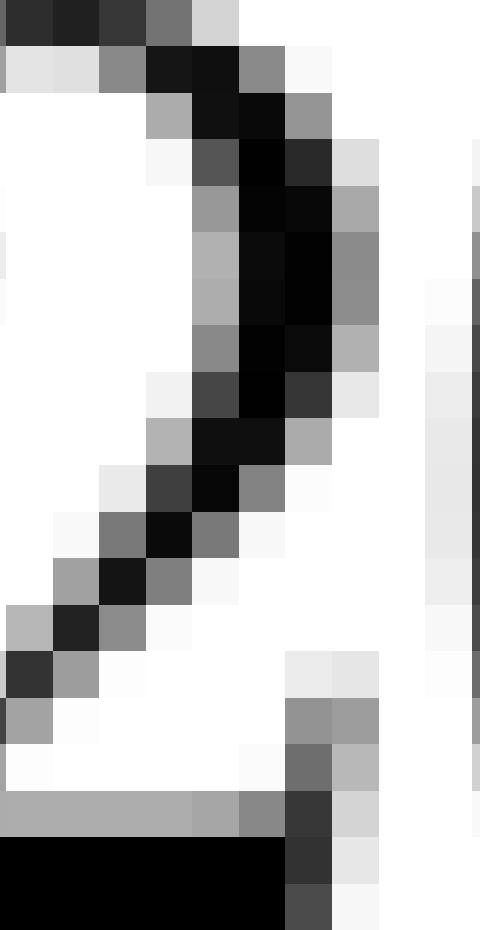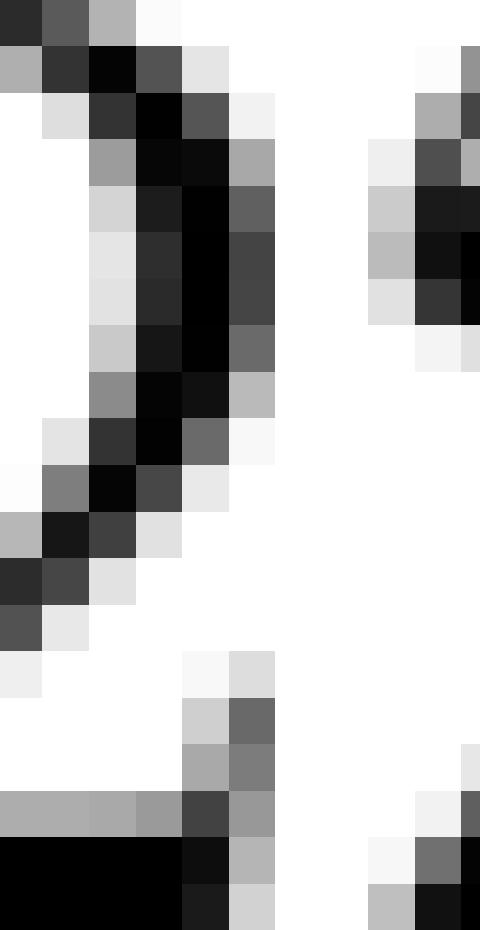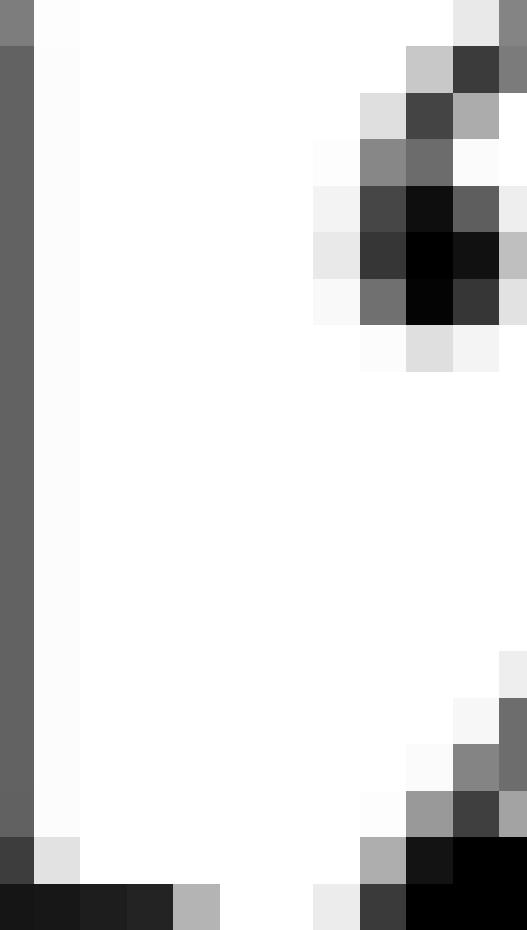



9 2

1

$$1 + \sin 30.96^\circ$$

$$- \sin 30.96^\circ$$

—

3.12







$$\frac{3 \times 3220 \text{ psi} - 1220 \text{ psi}}{1 + 3.12} = 4279 \text{ psi}$$



4279 psi
7000 ft 0.

Figure 1. The effect of the number of clusters on the classification accuracy of the proposed model. The proposed model is compared with the KNN classifier.


PS
= 11.57
1 ft

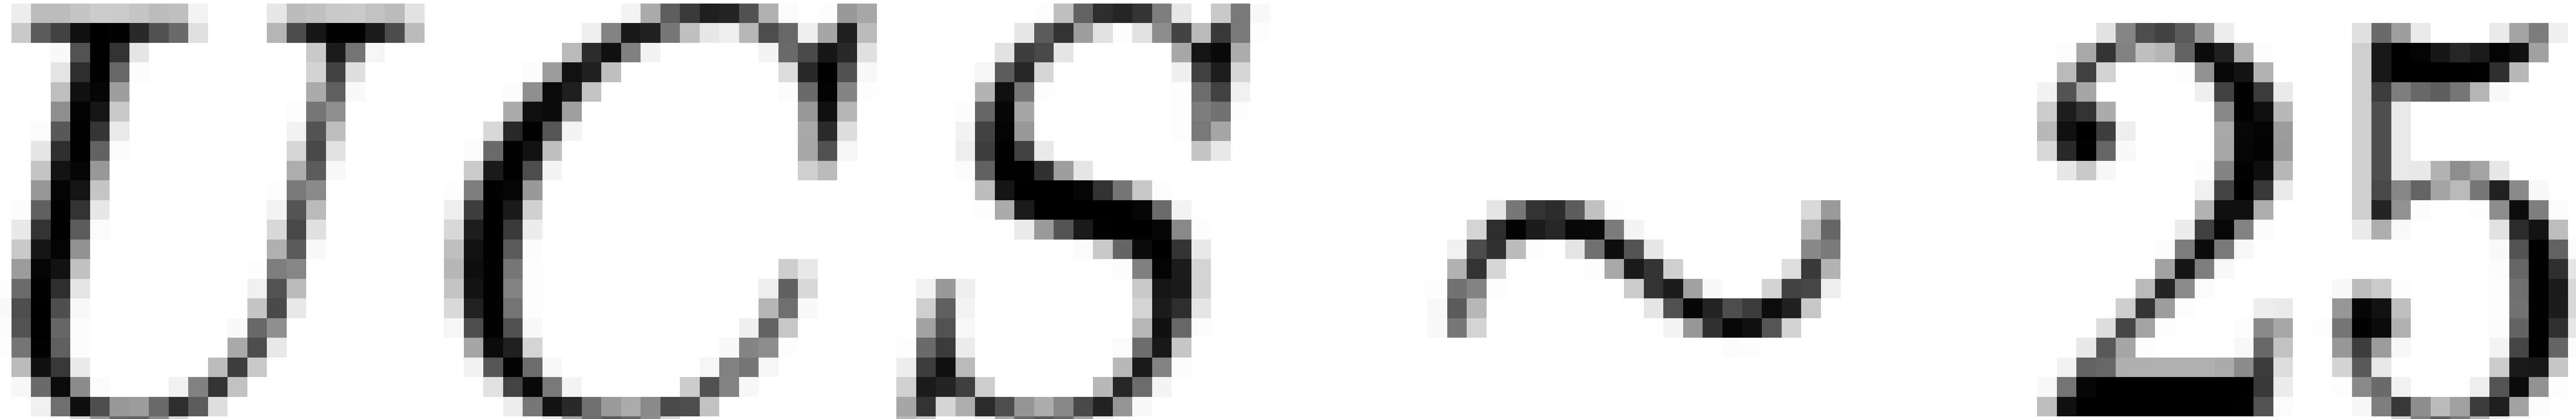


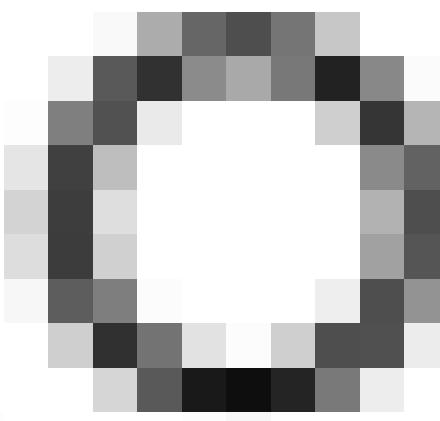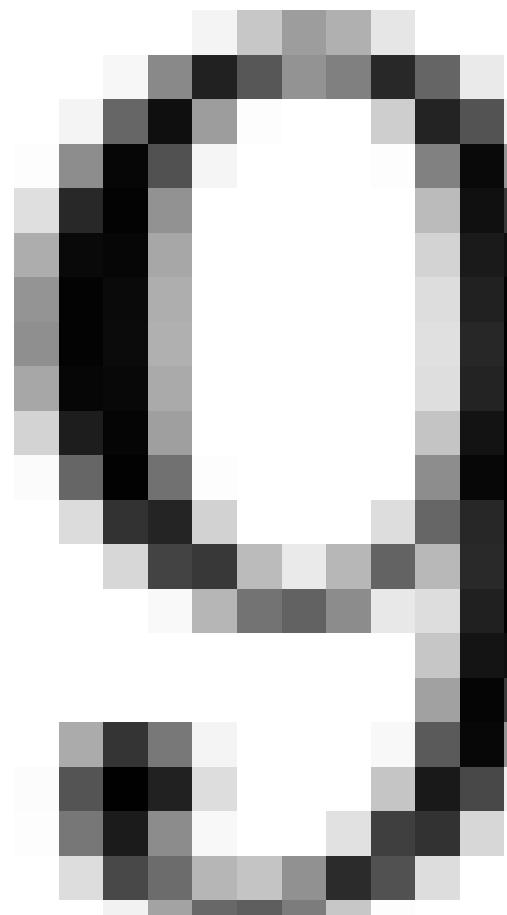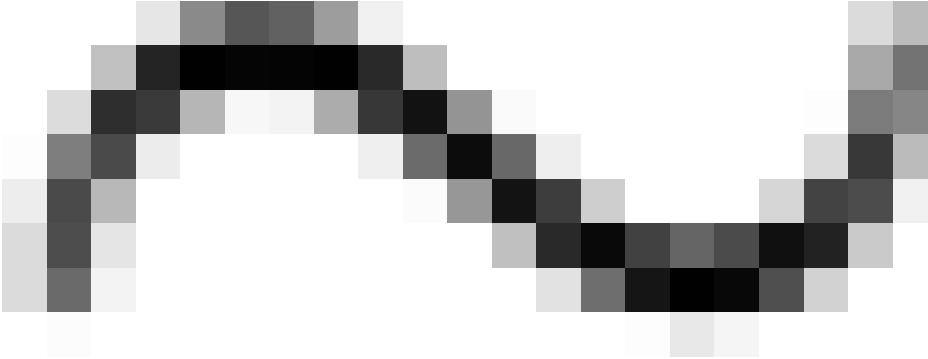

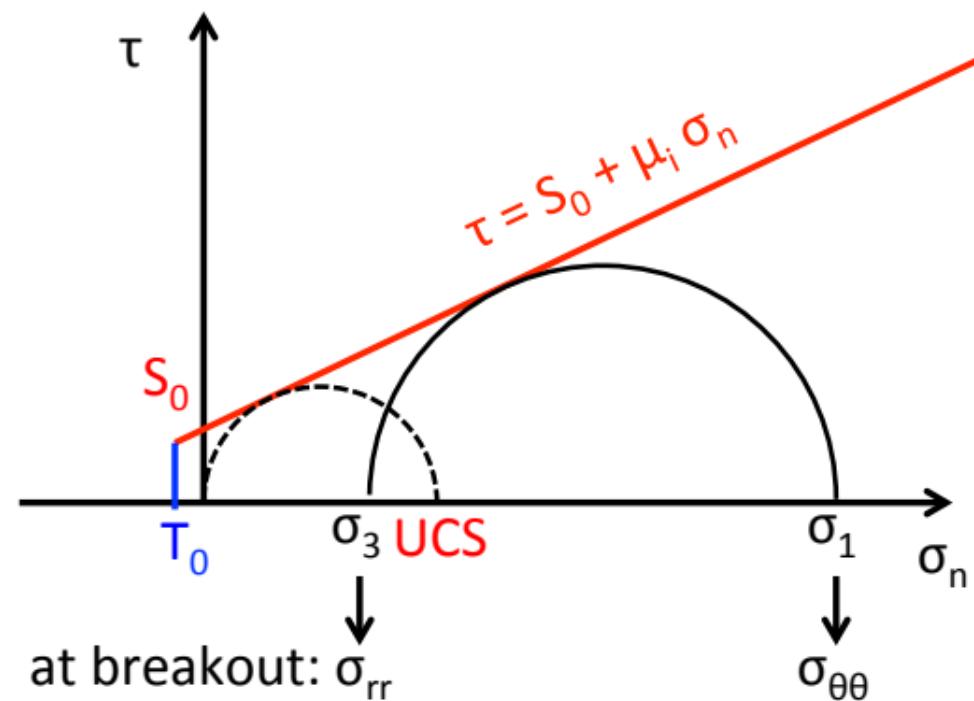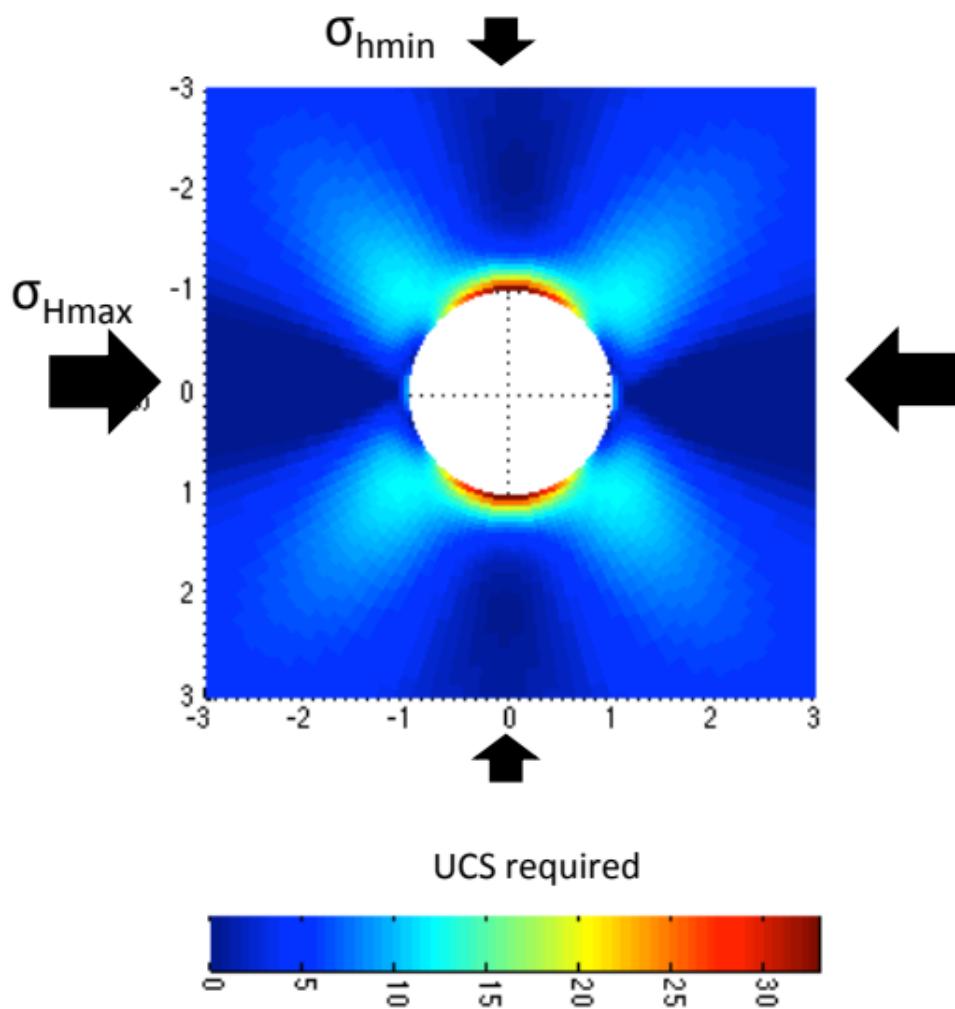









$$\begin{aligned} \sigma_{\theta\theta} &= (P_W - P_p) + 2(\sigma_{H\max} - \sigma_{h\min}) \cos(2\theta_B) \\ \sigma_{rr} &= + (P_W - P_p) \end{aligned}$$

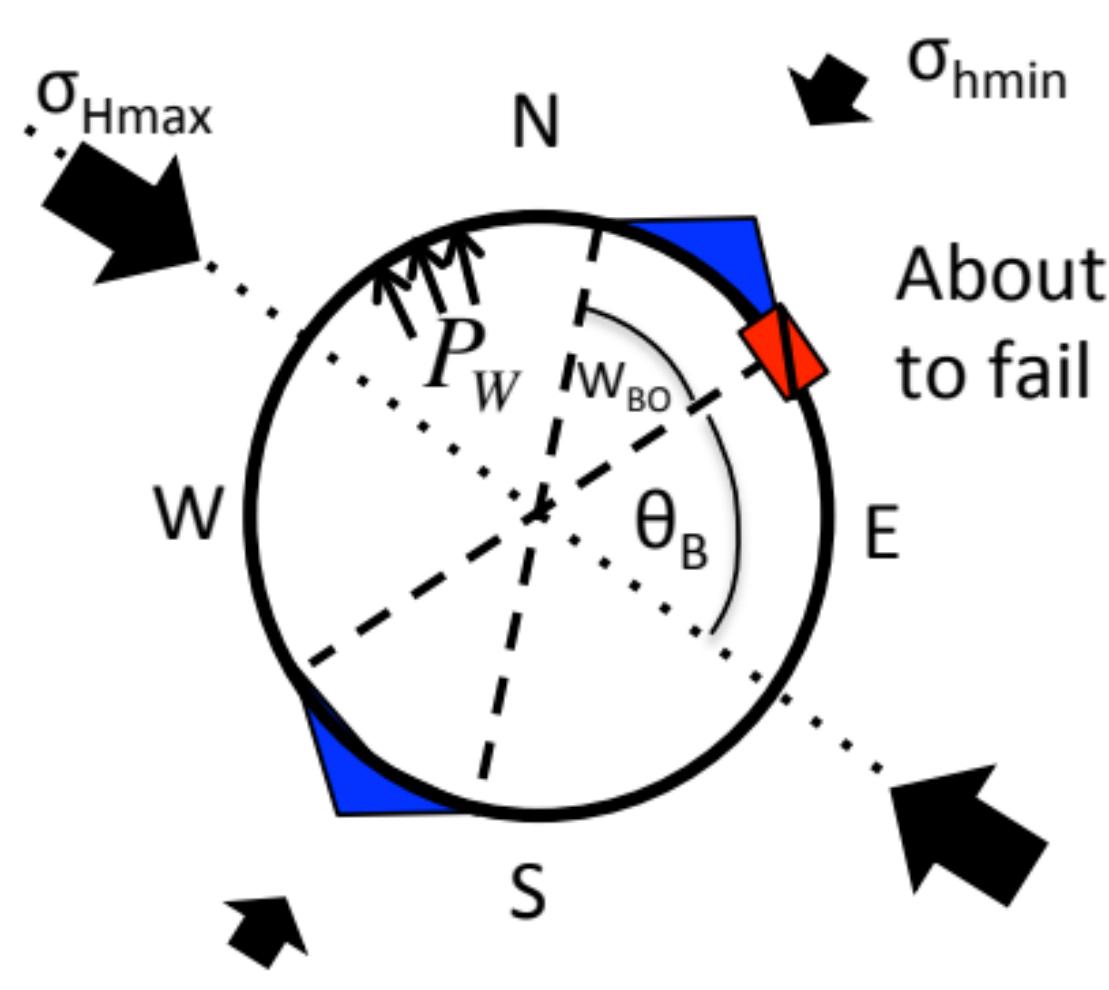





$$S_{\text{H}} = \frac{1}{2} \left[\sigma_{W-\text{P}} + \sigma_{H-\text{max}} \right] \cos(2\theta) + \sigma_{H-\text{max}} \sin(2\theta) \left[\sigma_{W-\text{P}} + \sigma_{H-\text{max}} \right]$$

$$2\theta_B = \arccos \left[\frac{\sigma_{Hmax} - \sigma_{hmin} - (1+q)(P_W - P_p)}{2(\sigma_{Hmax} - \sigma_{hmin})} \right]$$

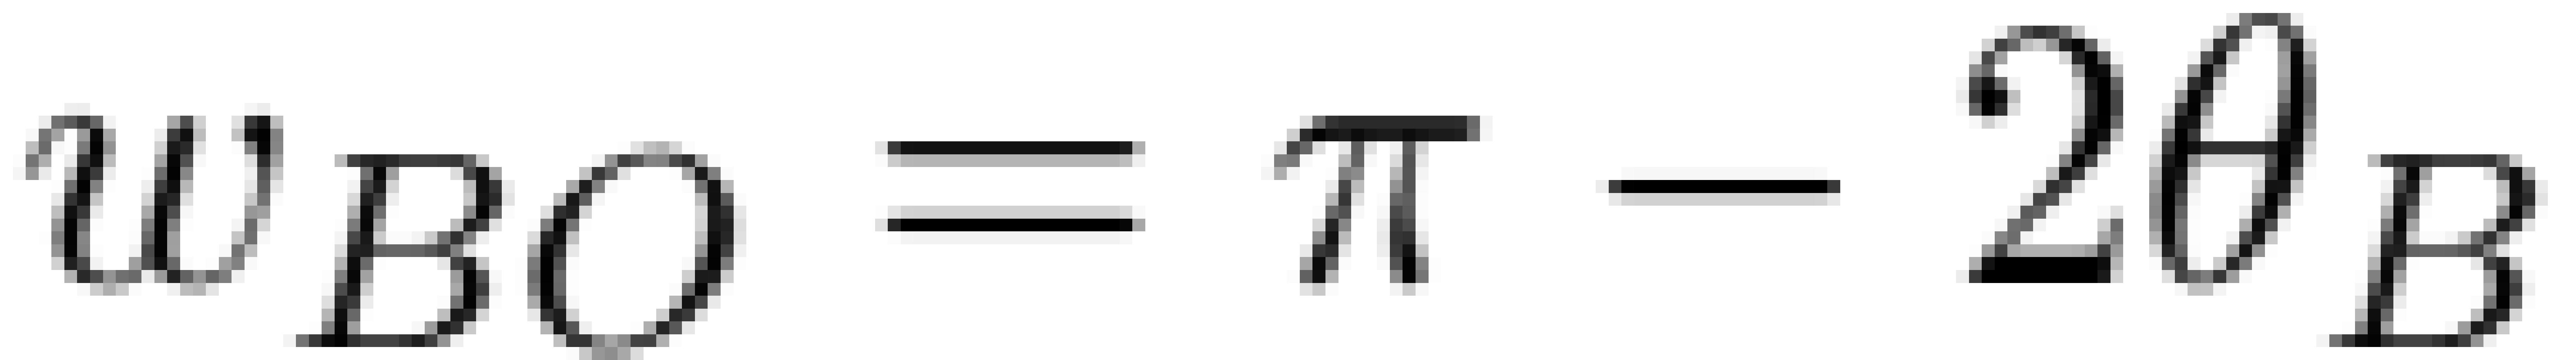



$$P_{WBO} = P + \frac{(\sigma_{Hmax} - \sigma_{hmin}) \cos(\pi - w_{BO}) - Ucs}{1 + q}$$

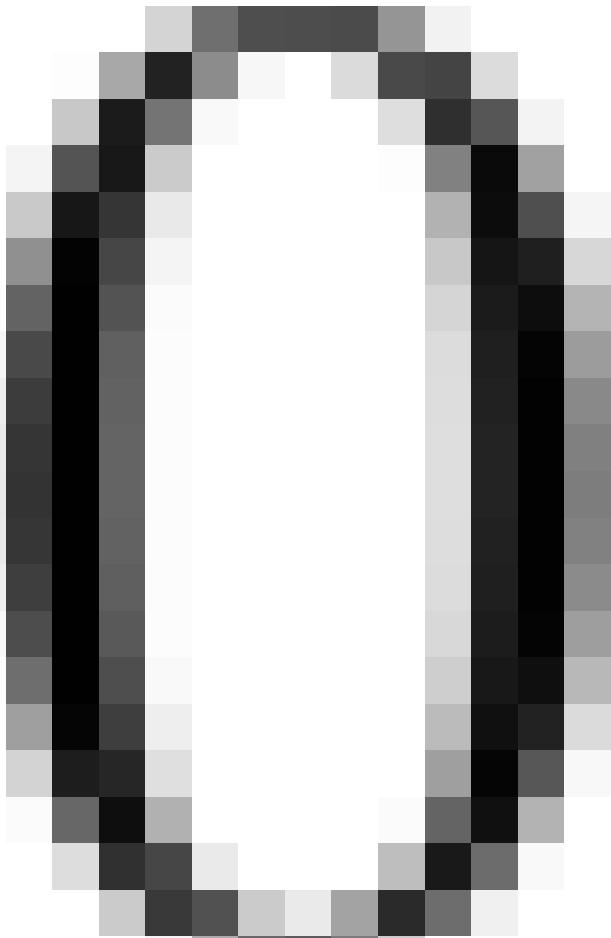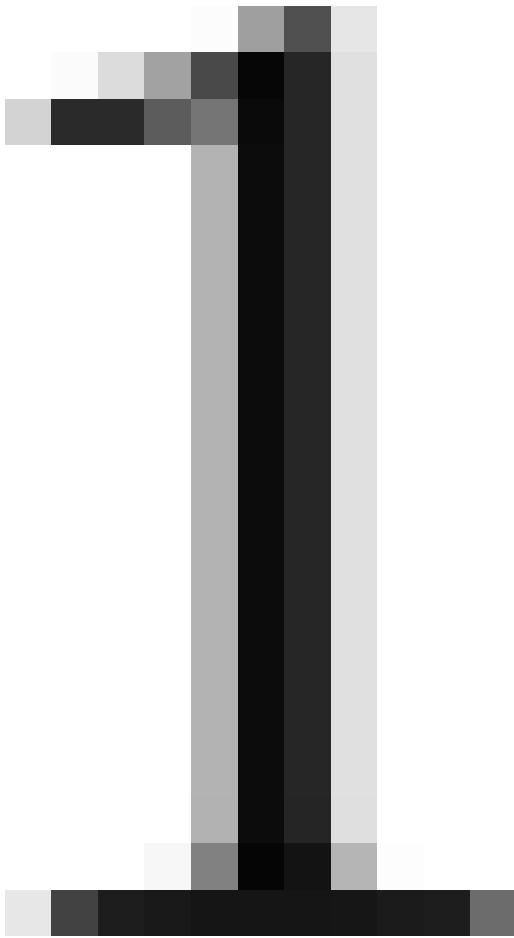


$$0.44 \text{ psi/ft} \times 8.3 \text{ PPG}$$


$$\times 7000 \text{ ft} = 3710 \text{ psi}$$

$$w_{BO}^{\circ} = 180^{\circ} - \arccos \frac{[3220 \text{ psi} + 1220 \text{ psi} - (1 + 3.12)(3710 \text{ psi} - 3080 \text{ psi})]}{2(3220 \text{ psi} - 1220 \text{ psi})} = 66^{\circ}$$

Ultrasonic P-wave




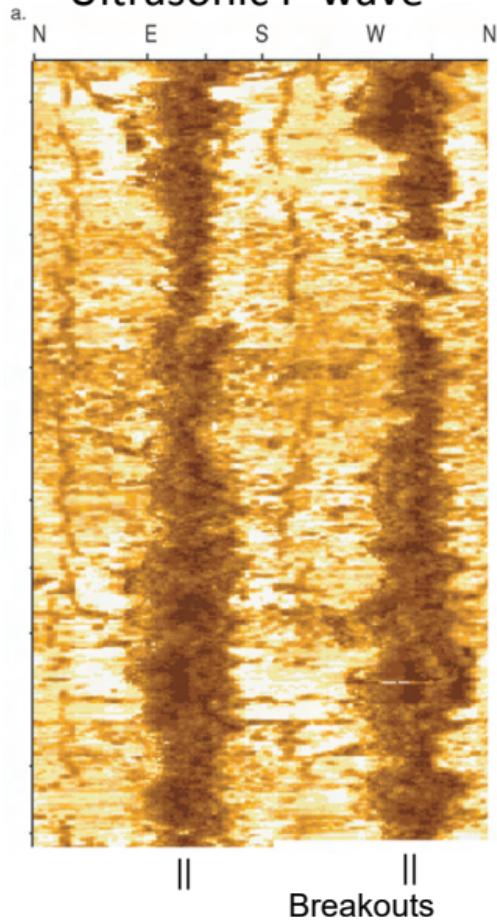


Electrical resistivity

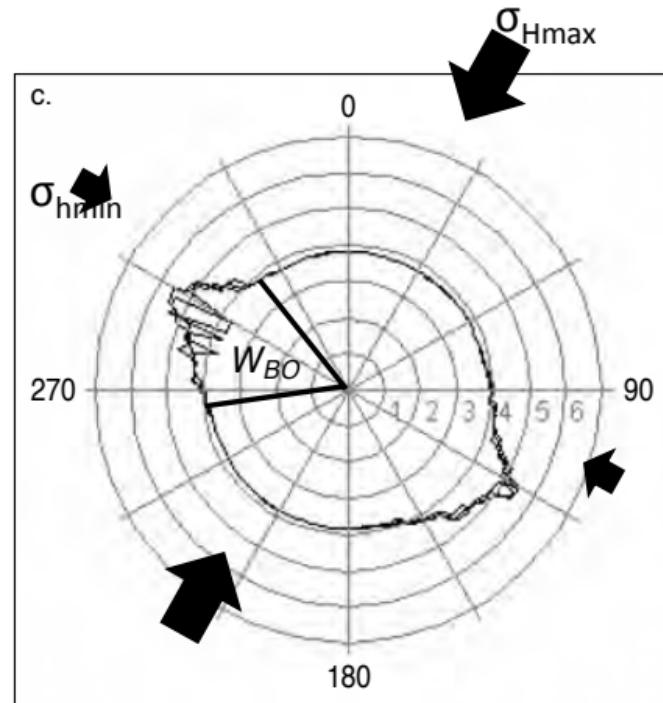


[Zoback 2013 - Figure 6.4]

$$S_{H\max} = \frac{P}{P} + \frac{UCS + (1+q)(P_W - P_p) - \sigma_{hmin}[1 + 2\cos(\pi - w_{BO})]}{1 - 2\cos(\pi - w_{BO})}$$

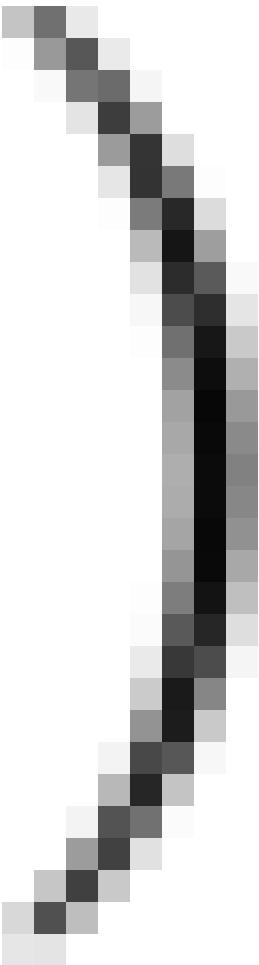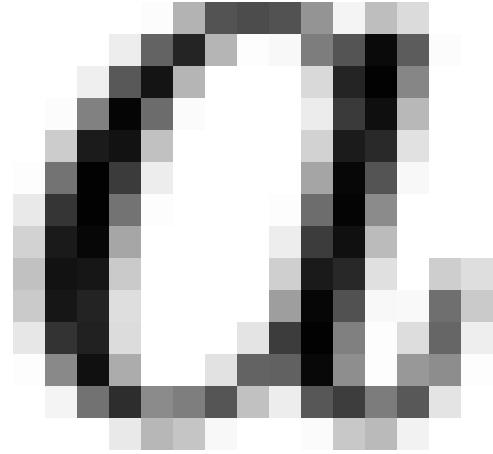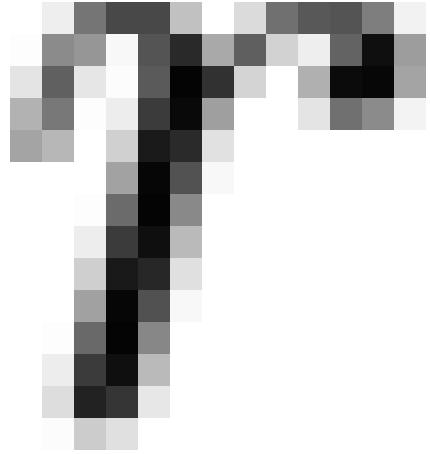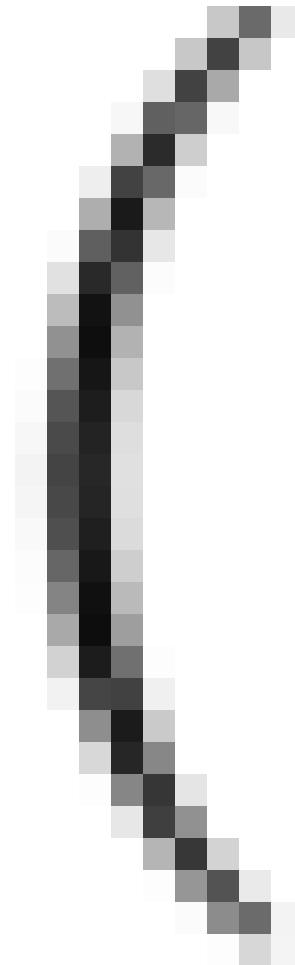

σθαντικός + σούχος + στ




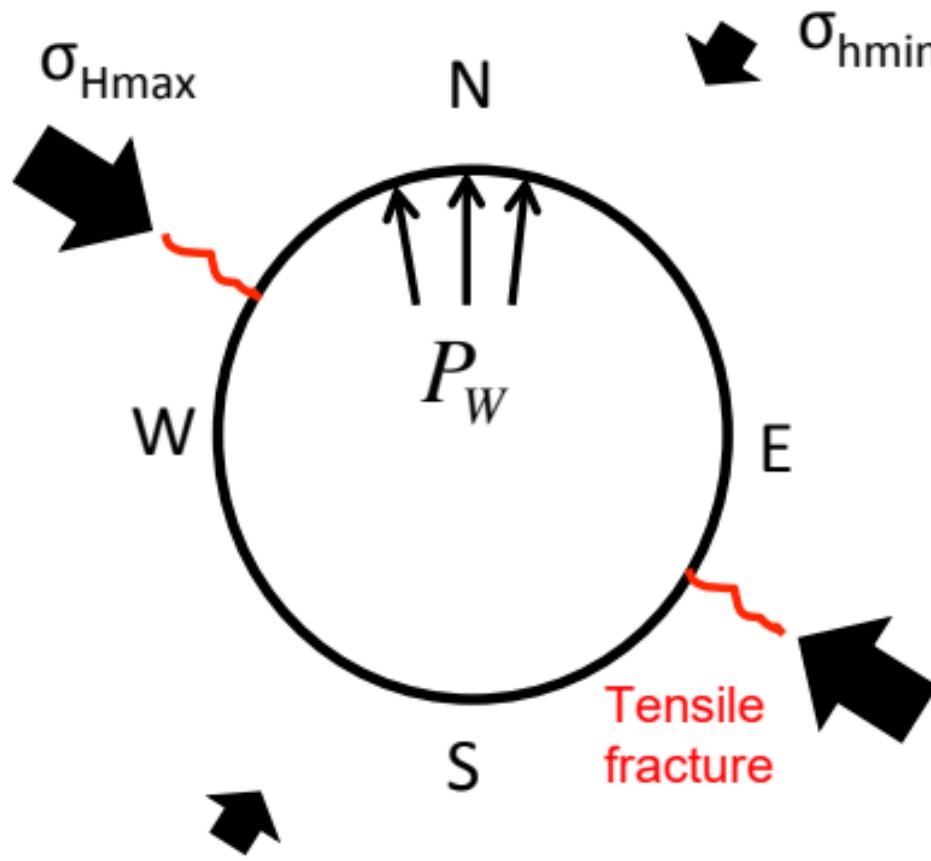


$$P_b = P_p + 3\sigma_{h\min} - \sigma_{H\max} + T_s + \sigma^{\Delta T}$$

Pore pressure
in the formation


Stress anisotropy

Tensile strength
Cooling stress

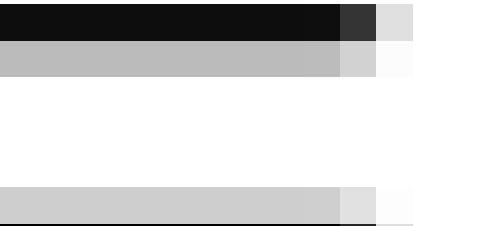
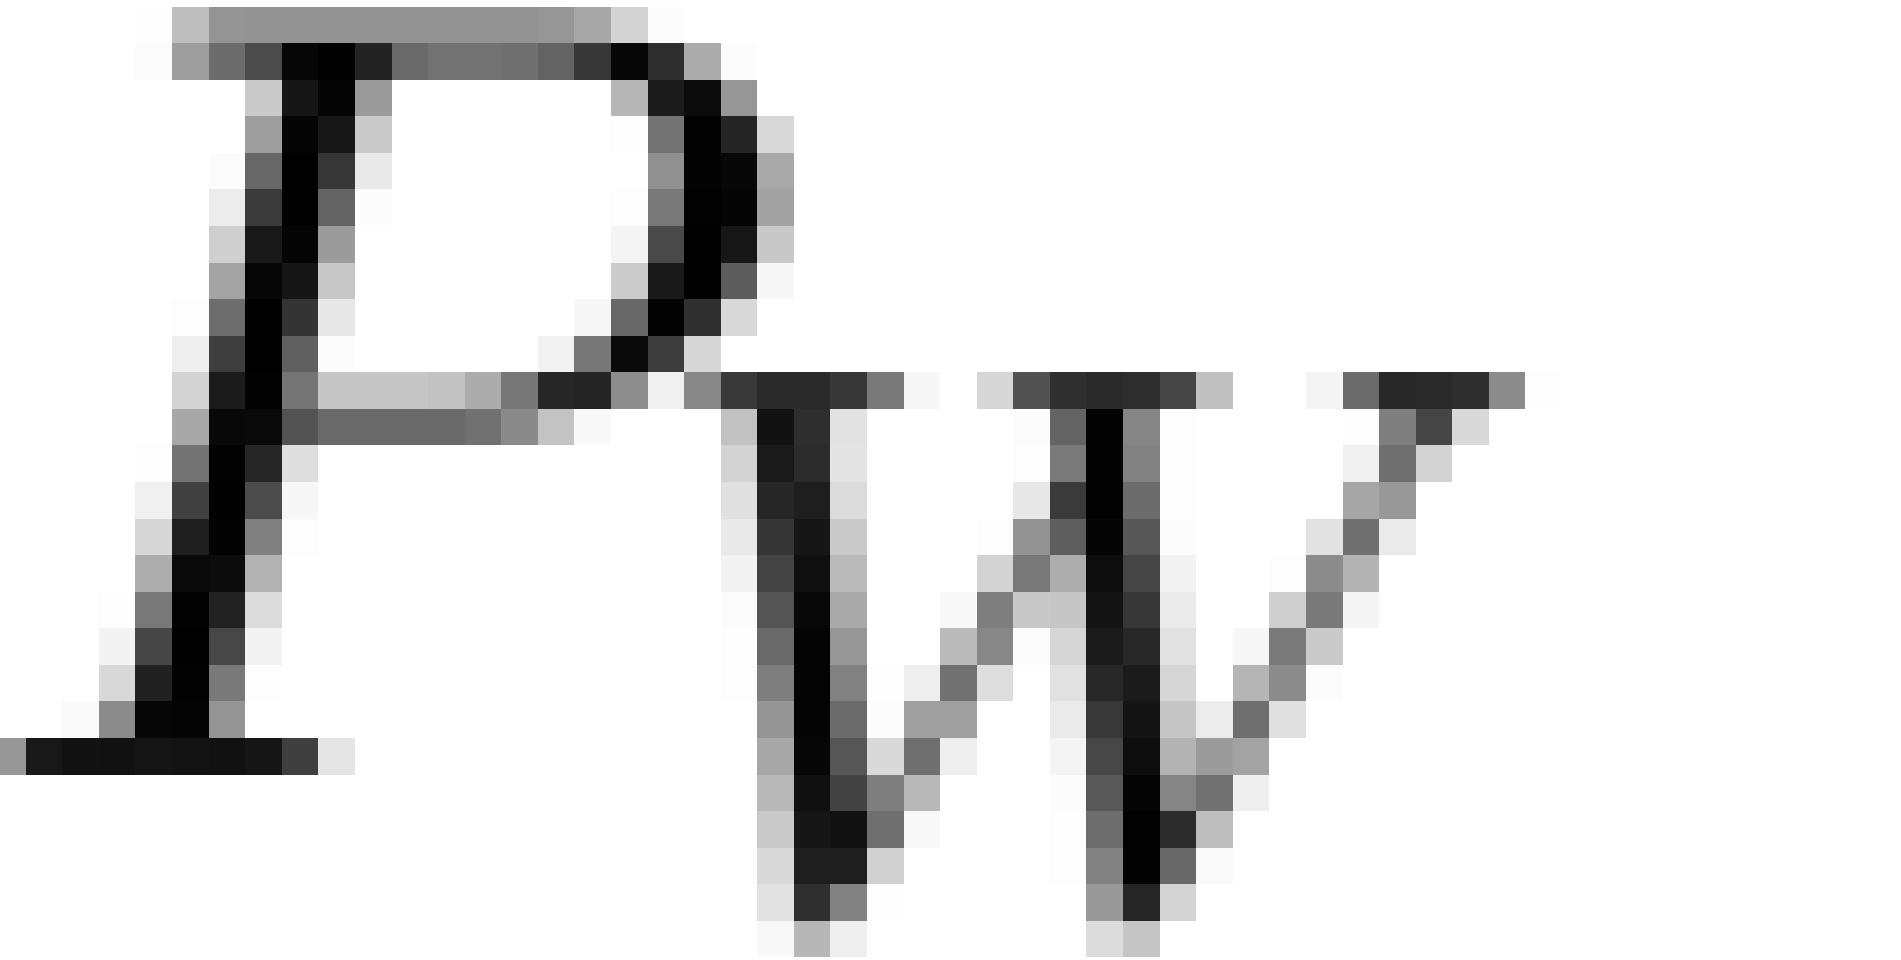




$\sigma_{\text{Hannac}} + \sigma_{\text{Hannac}}$

Bob Smith + 30 hours

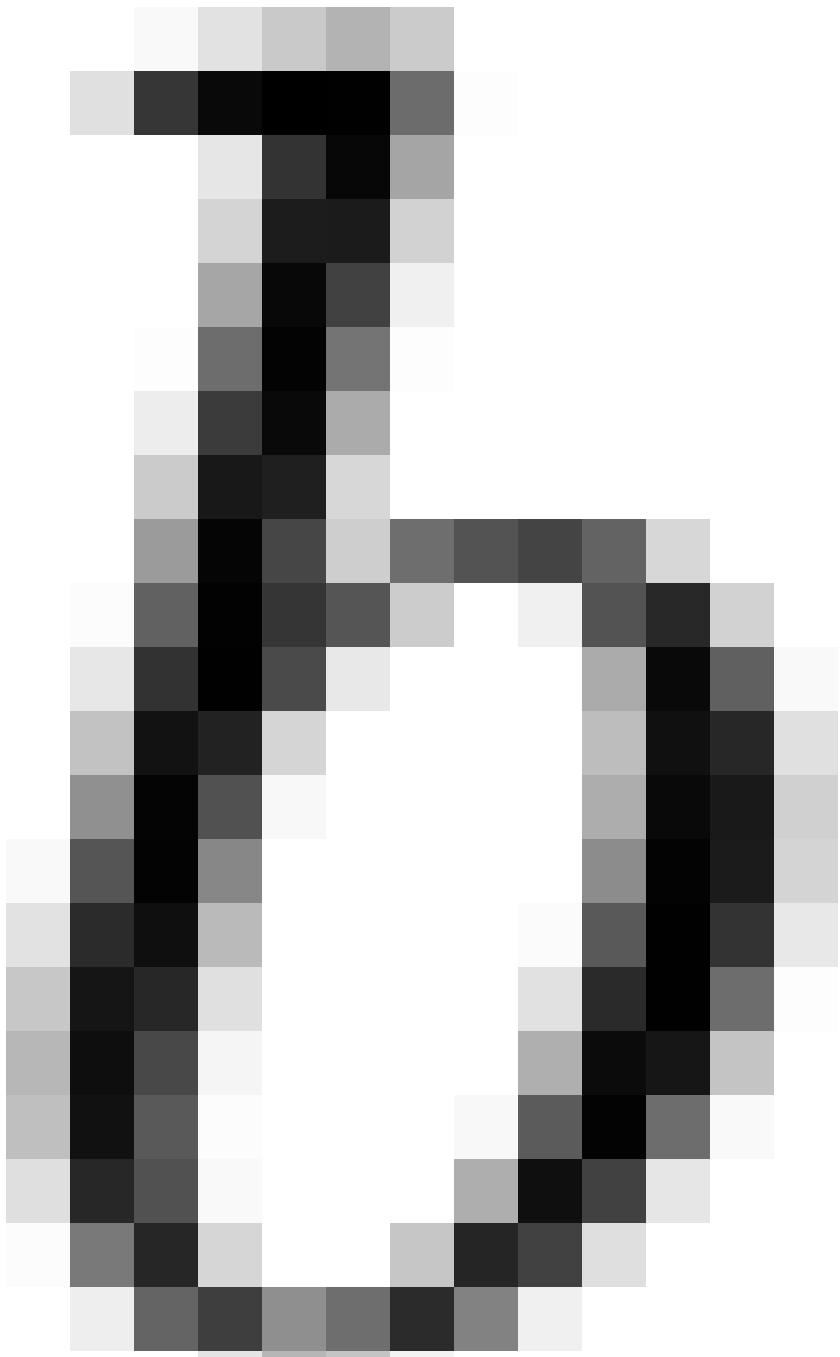





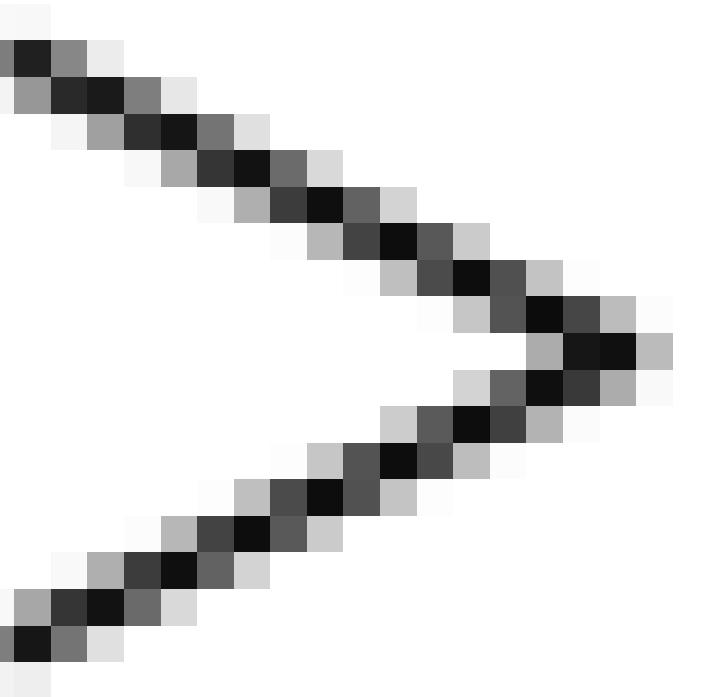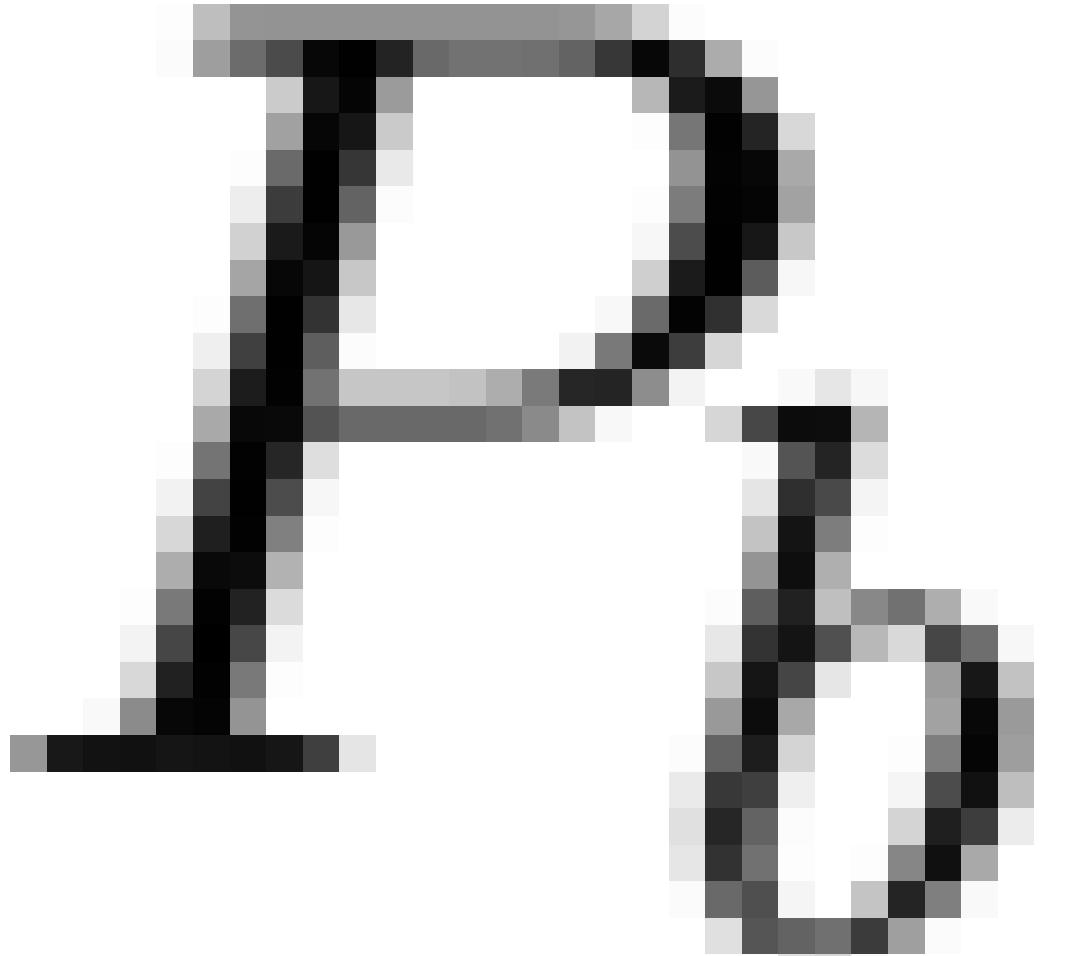


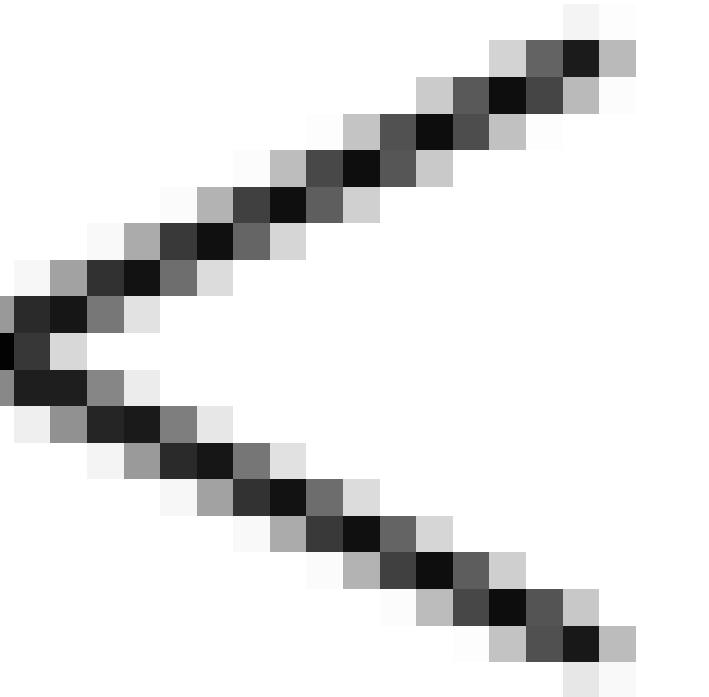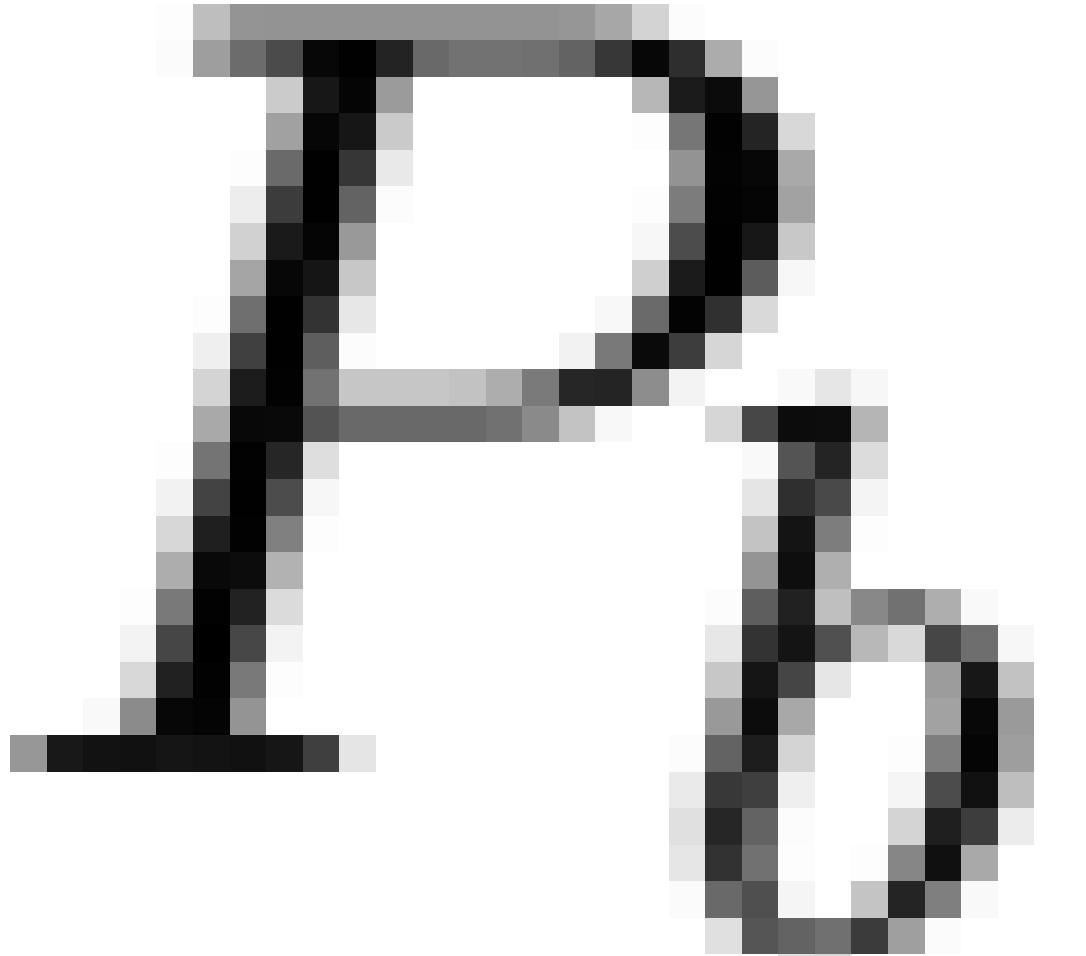






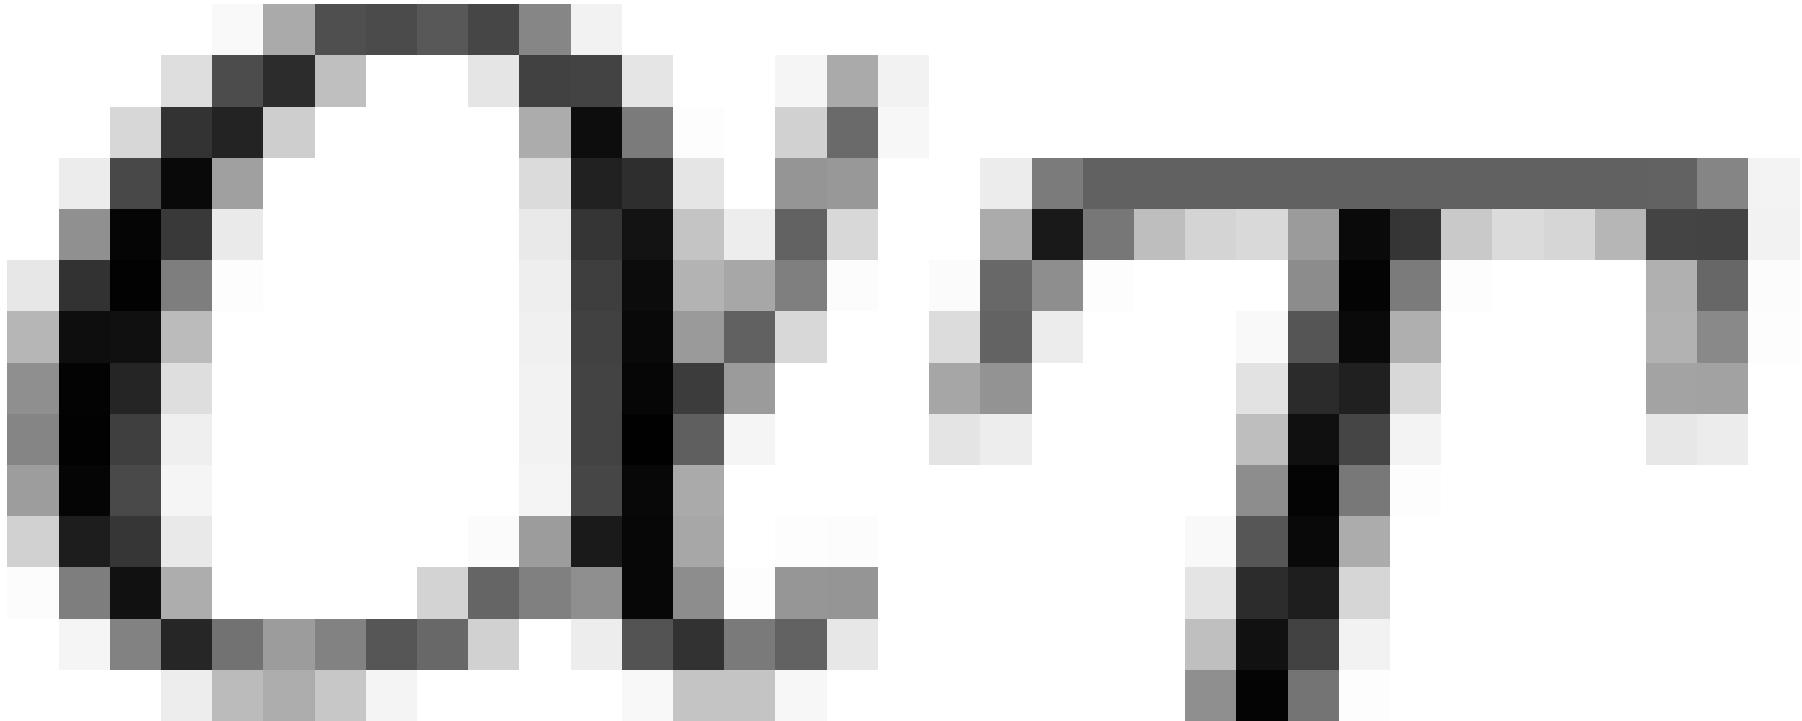





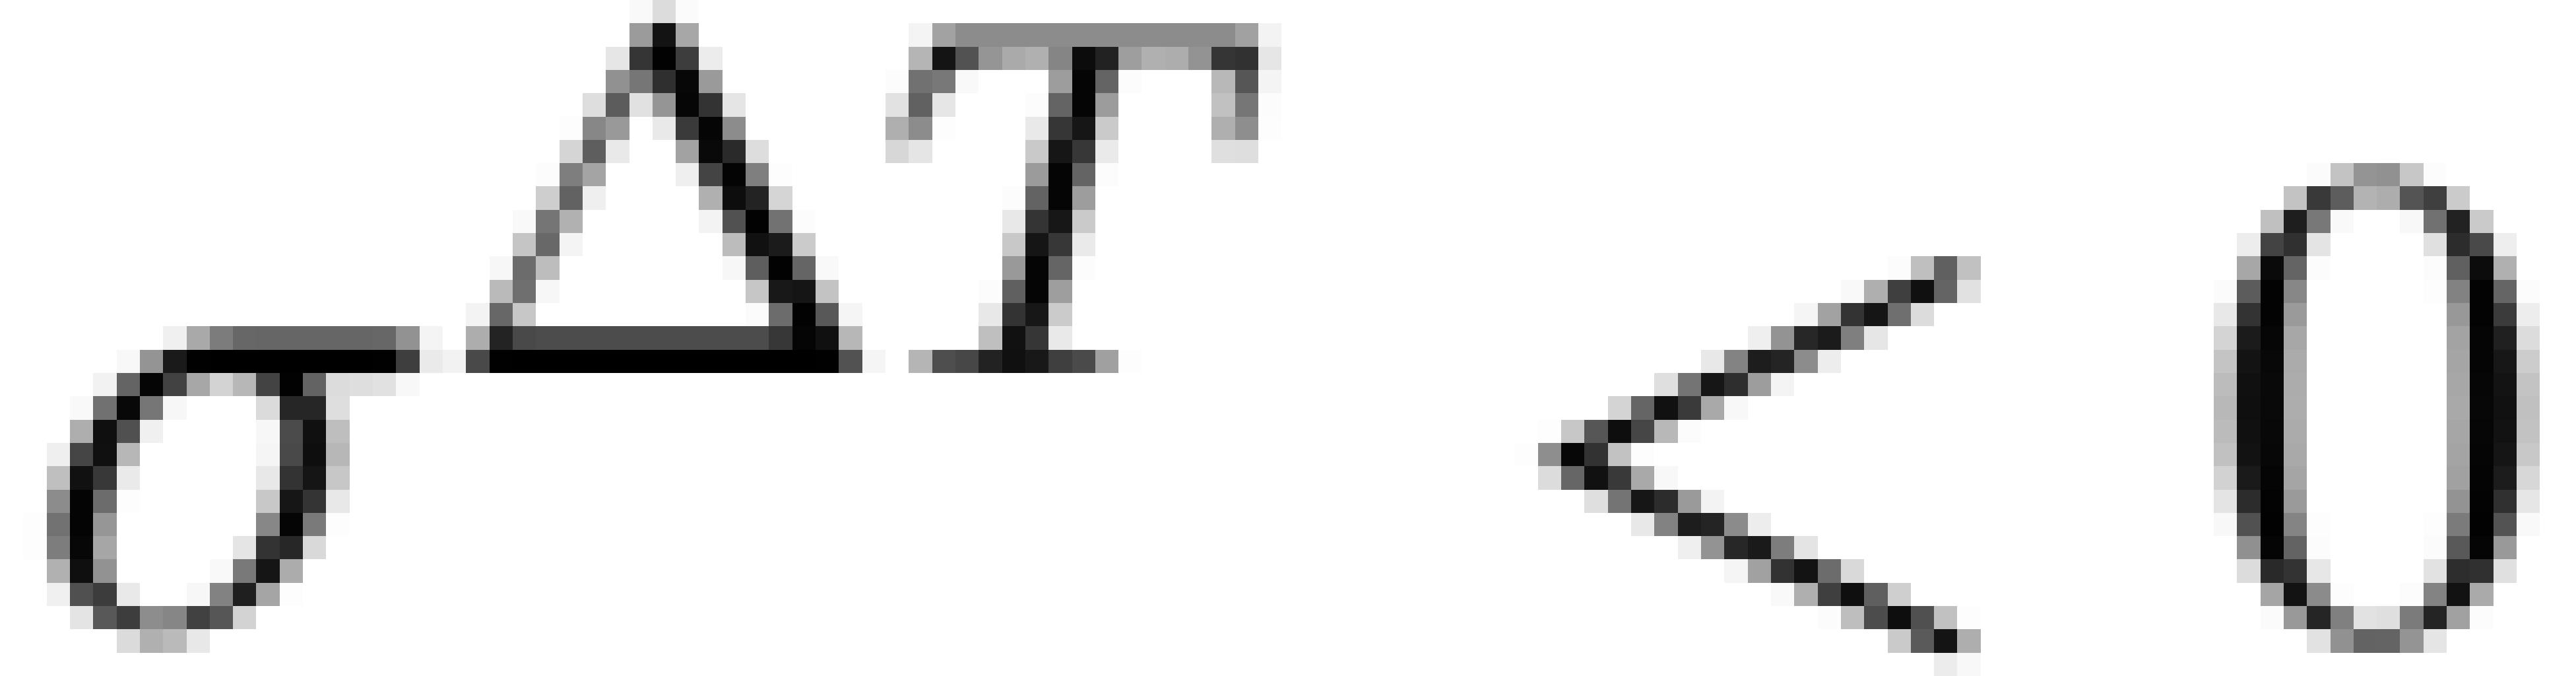


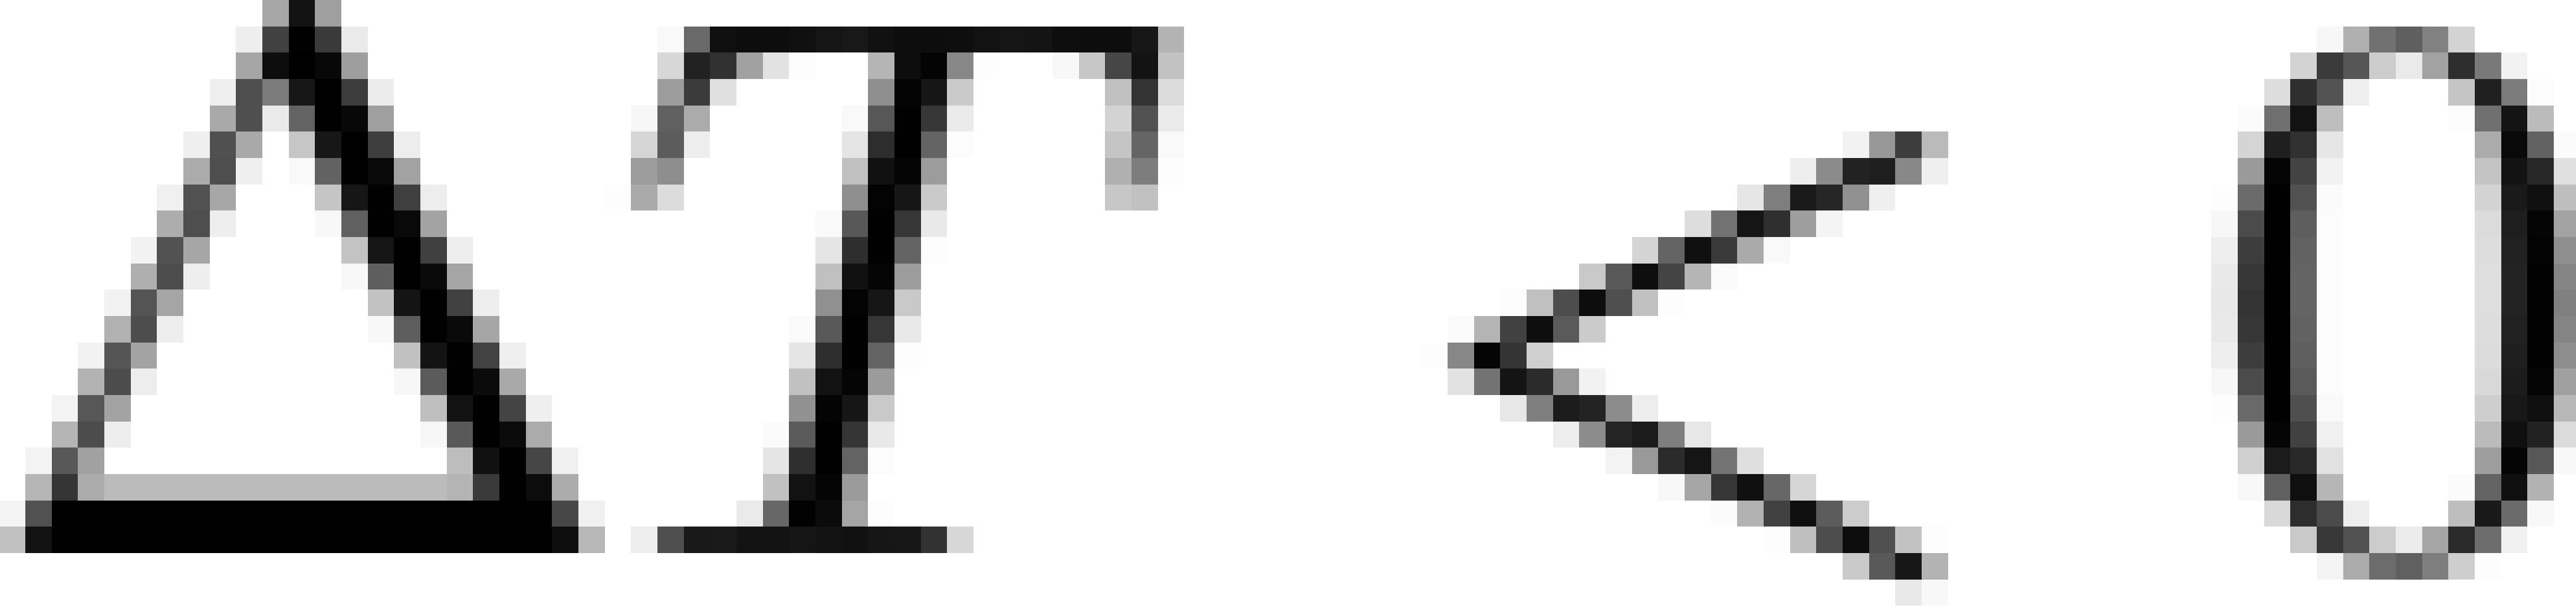


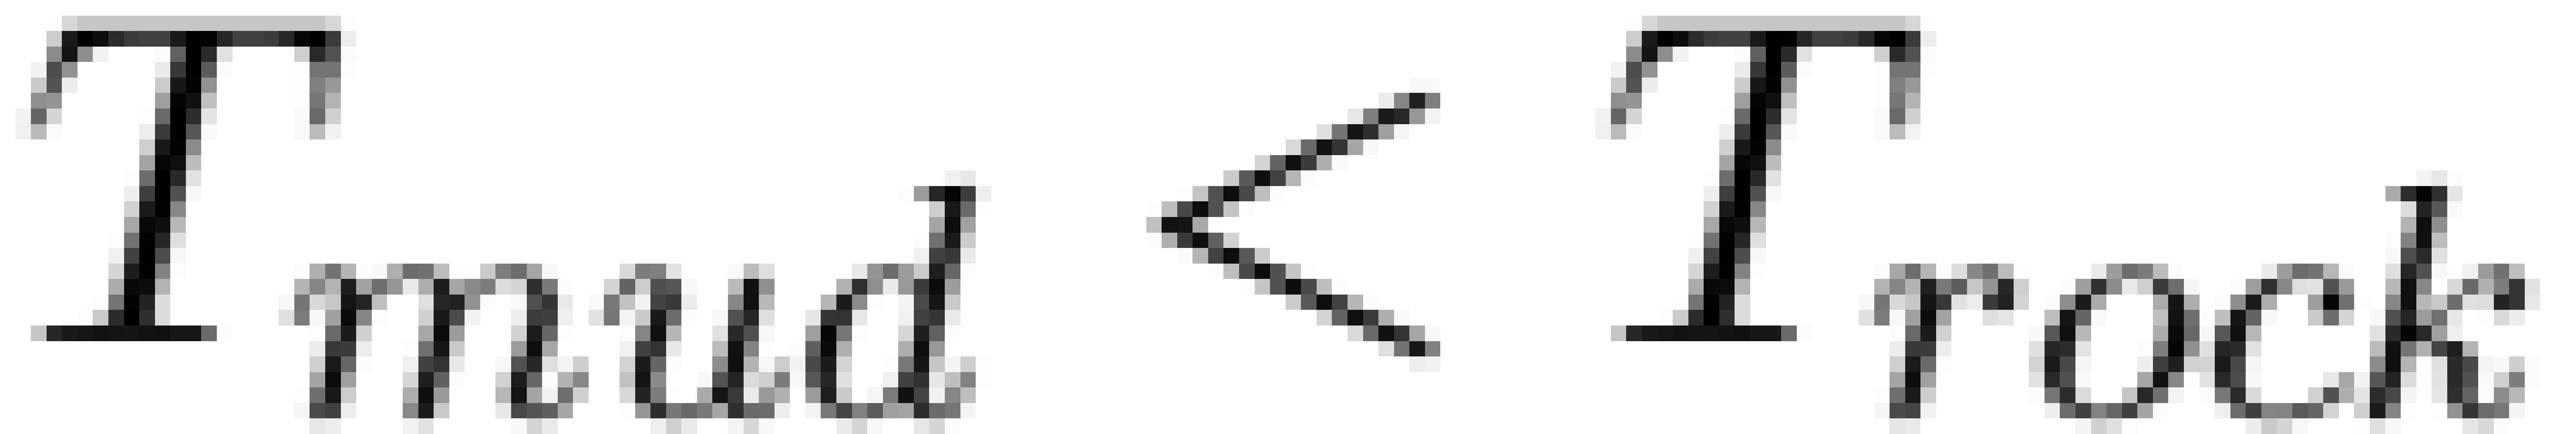




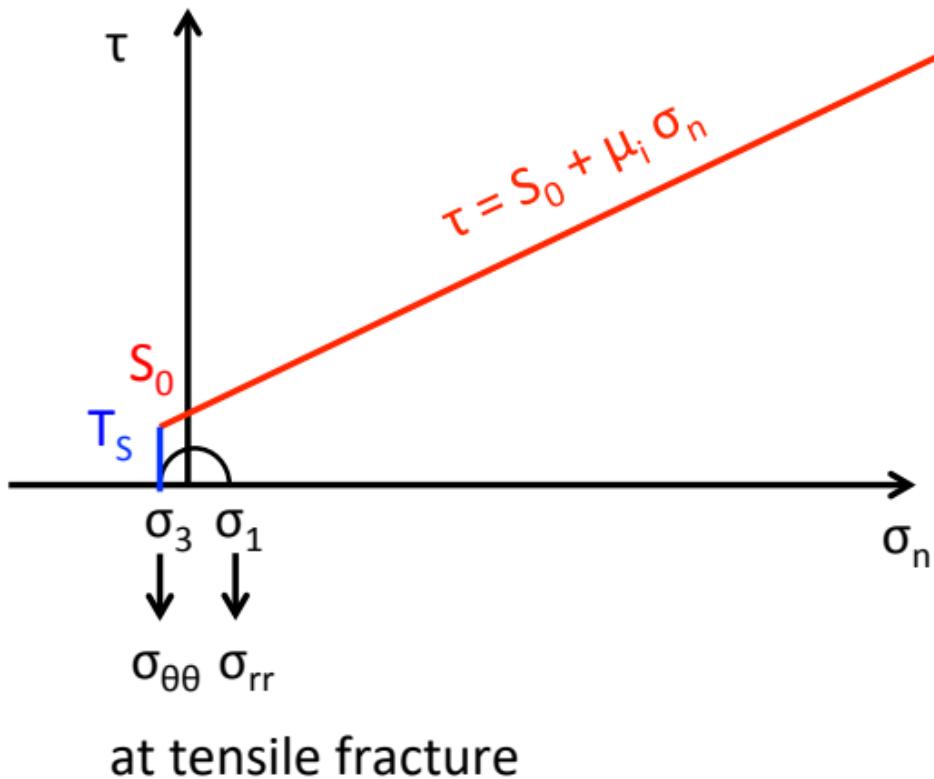
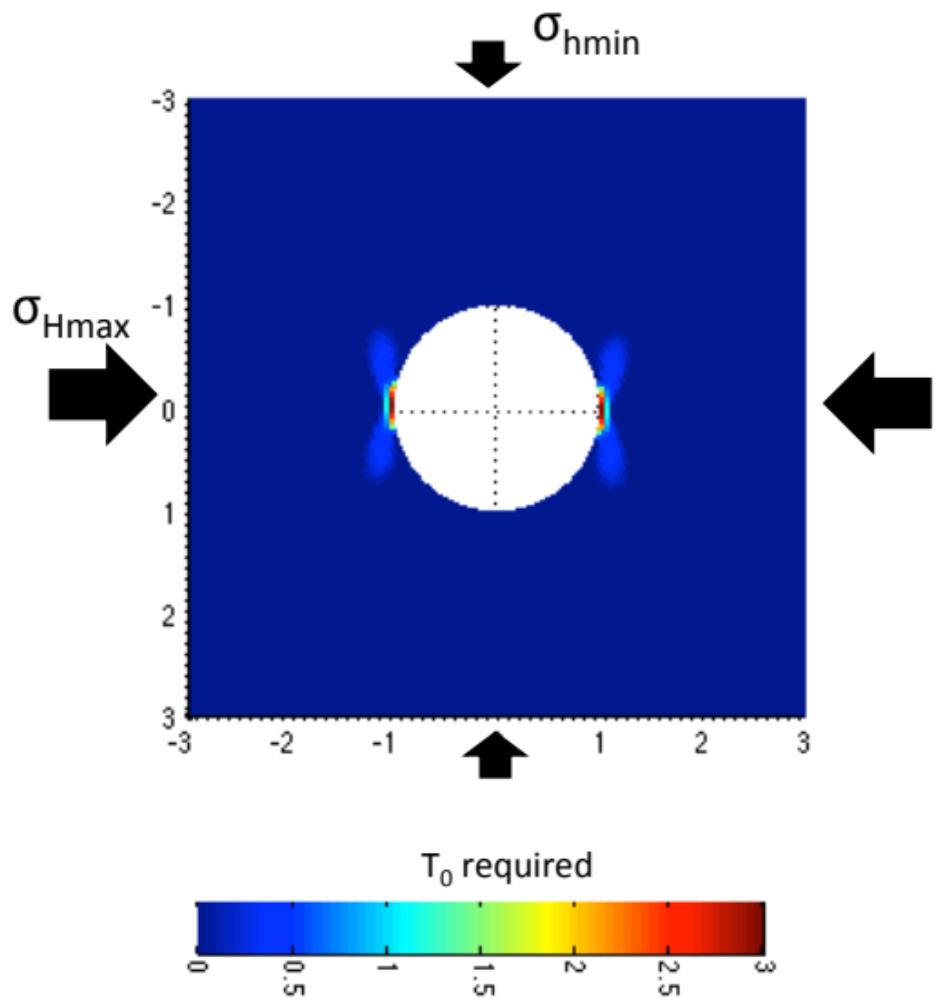


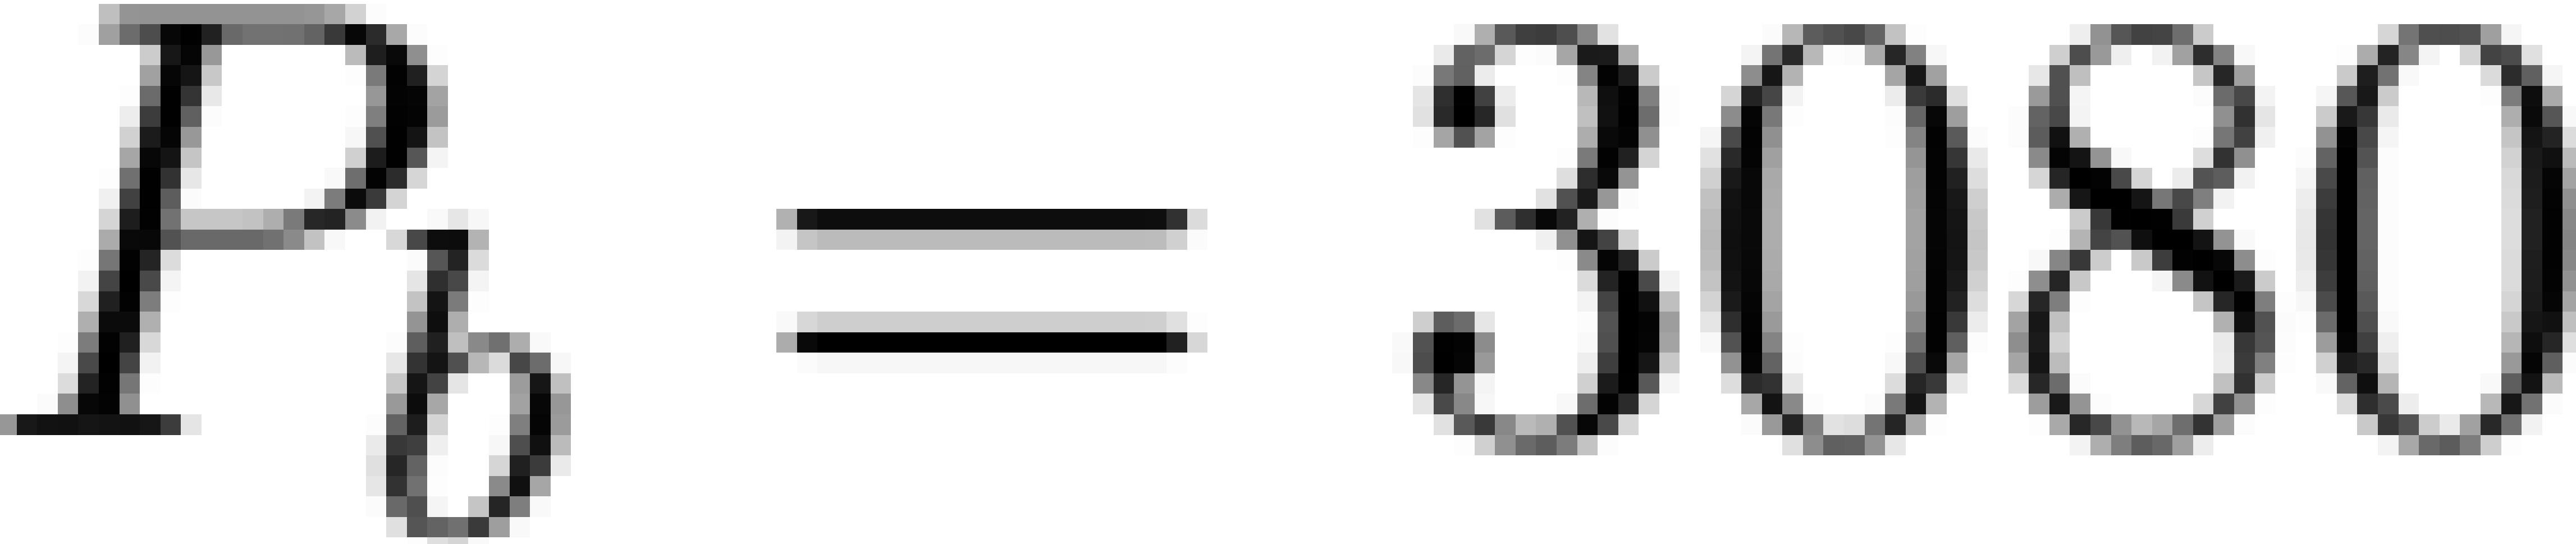

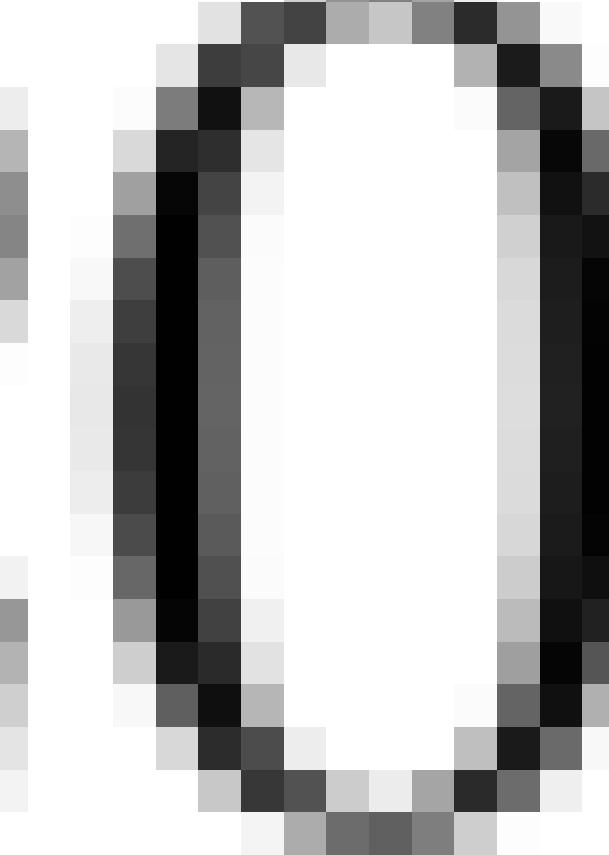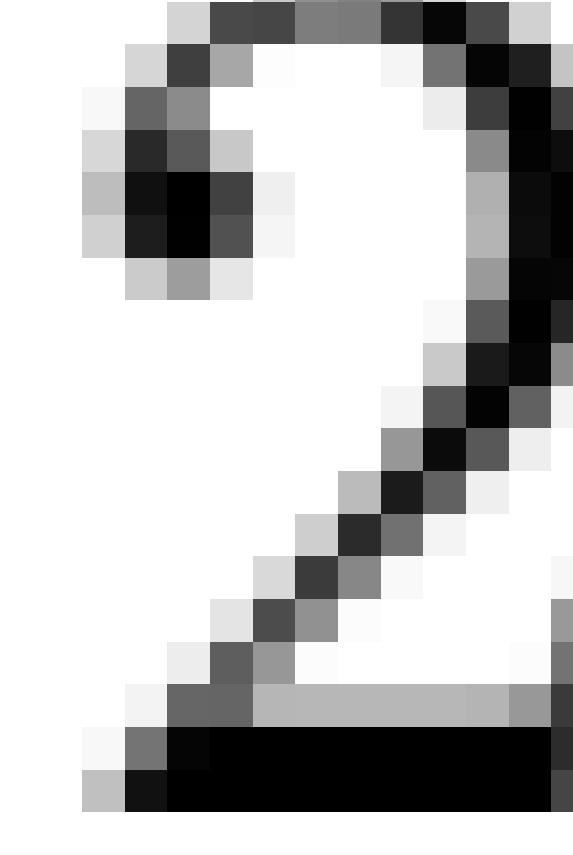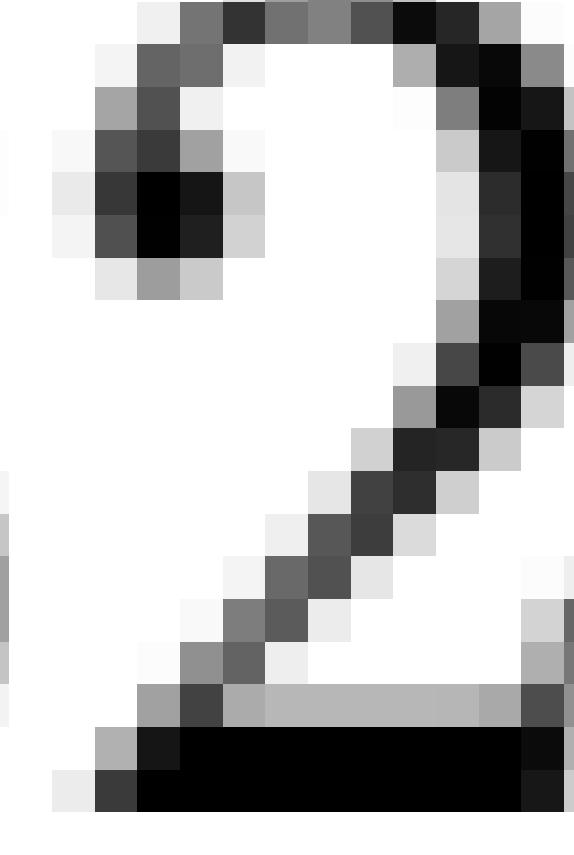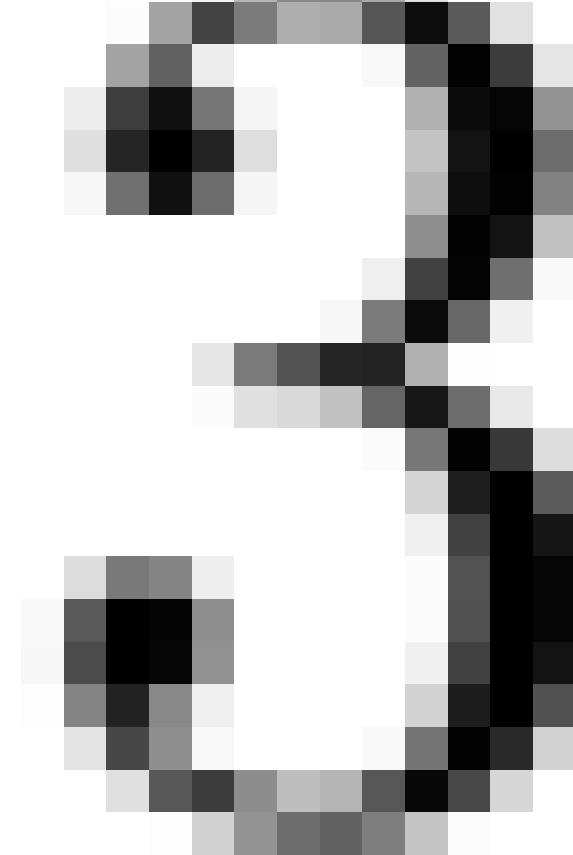

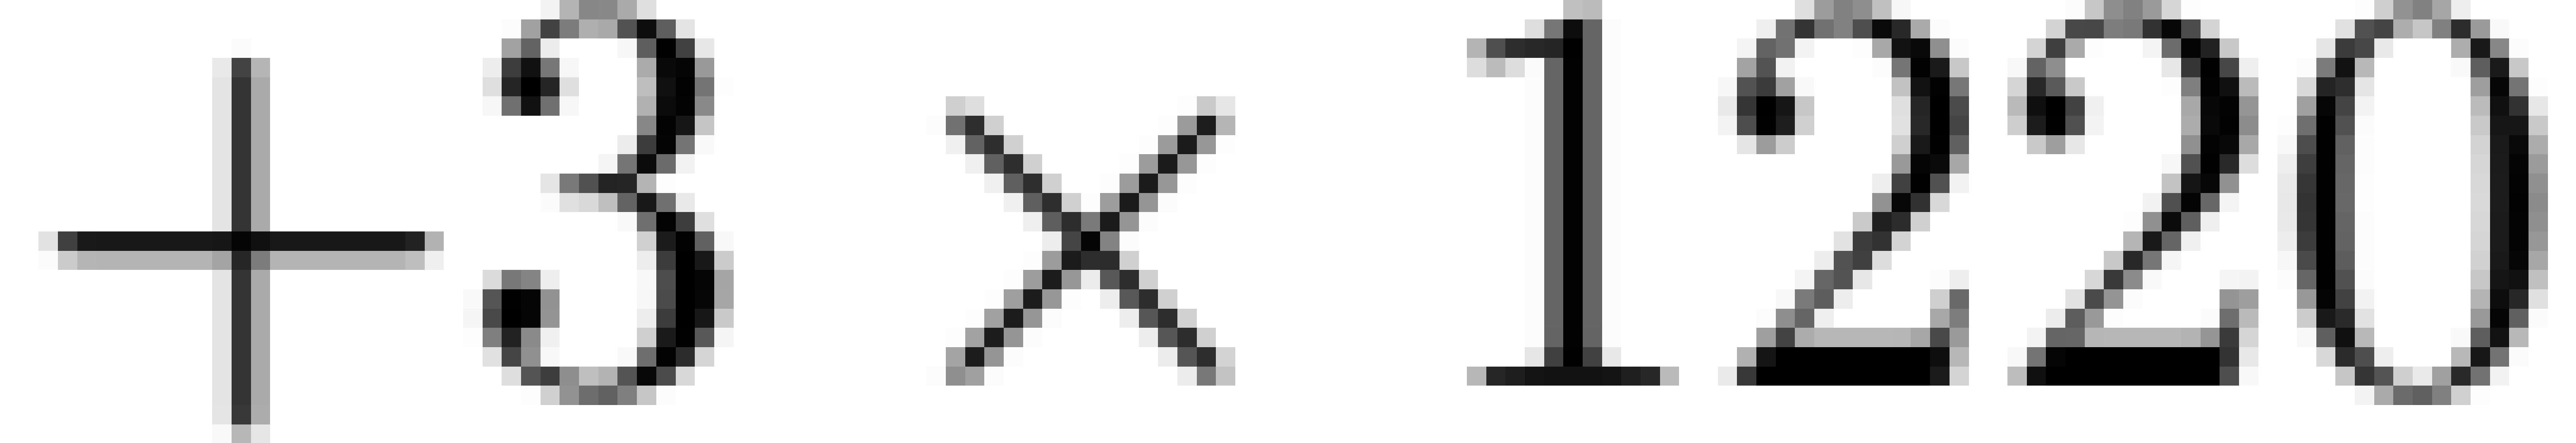

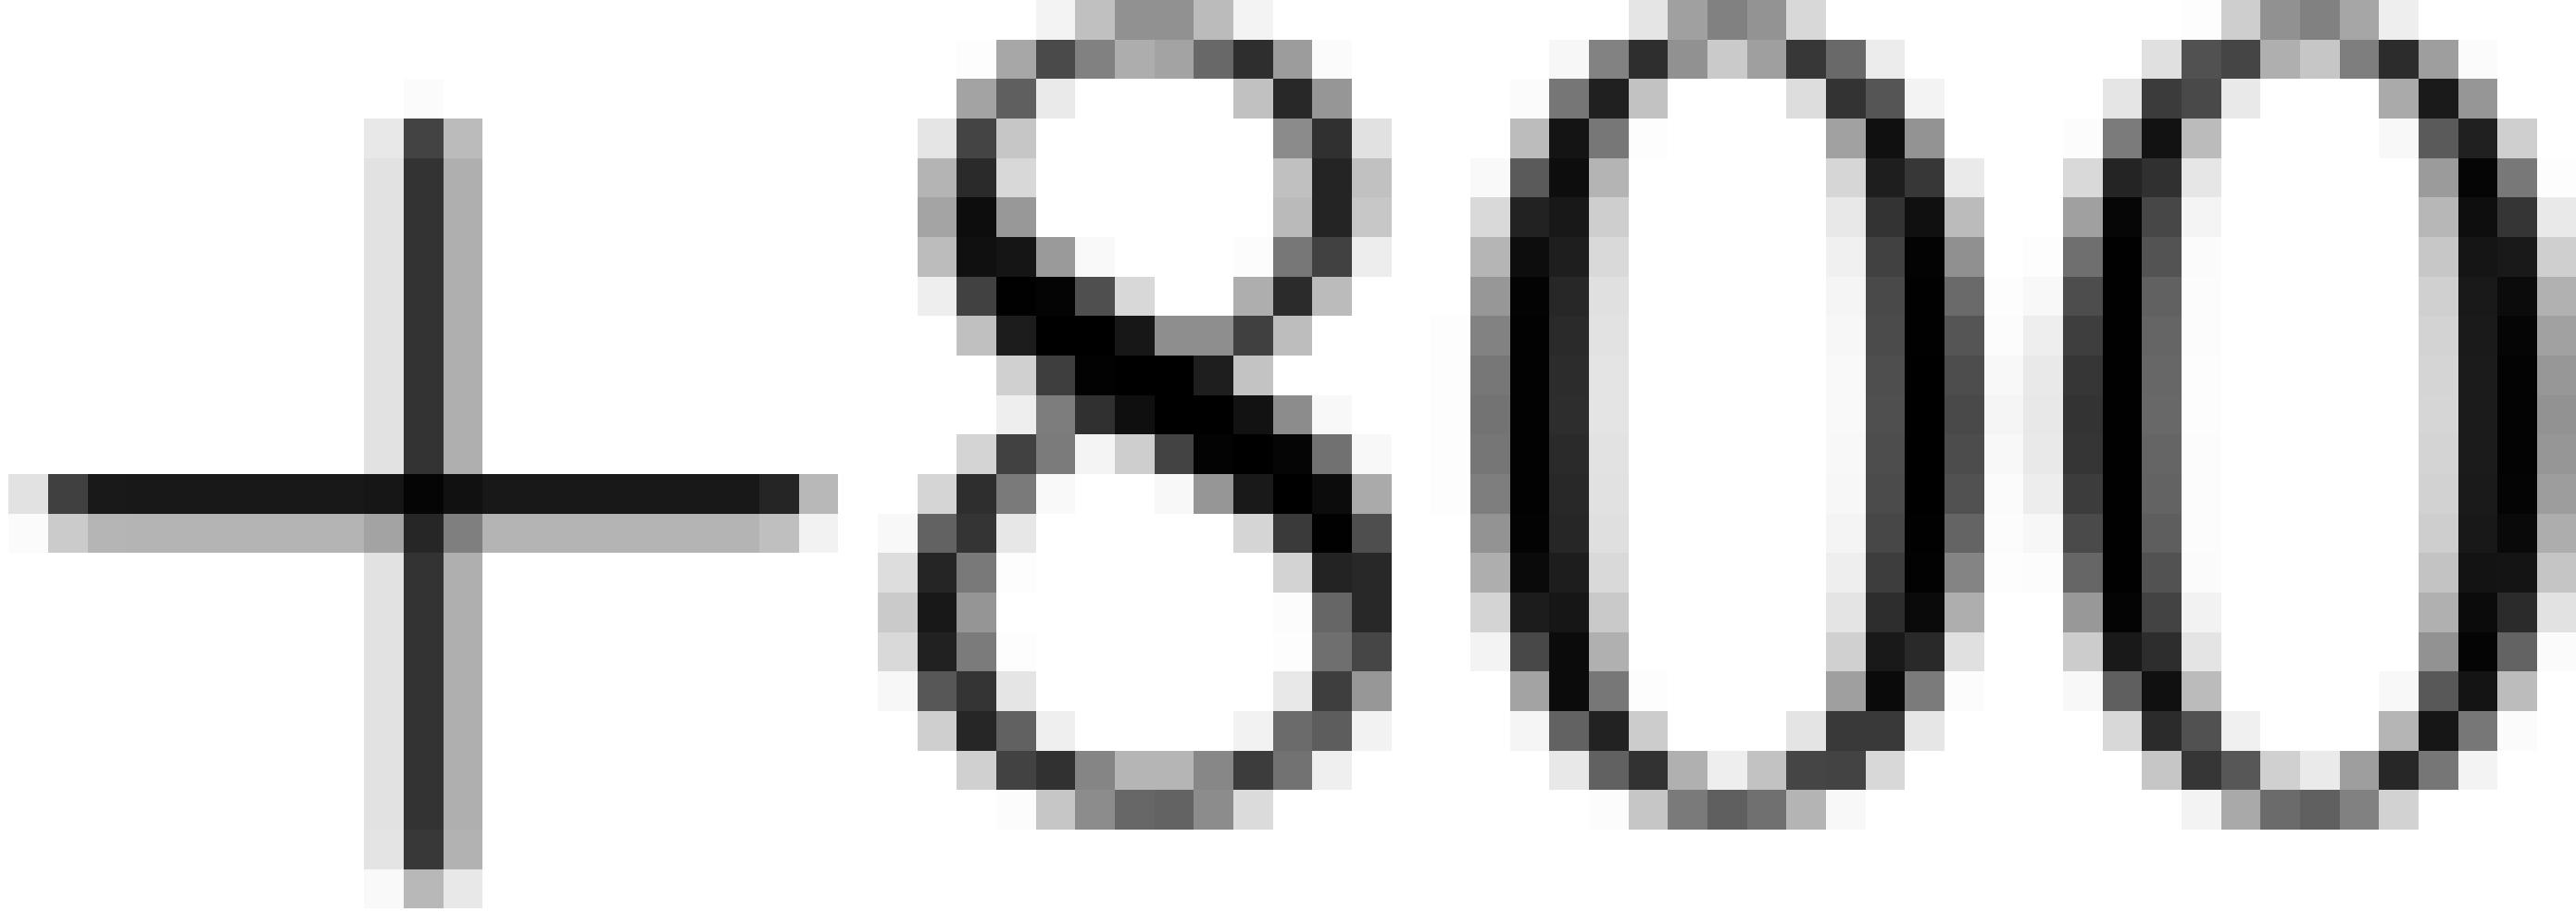

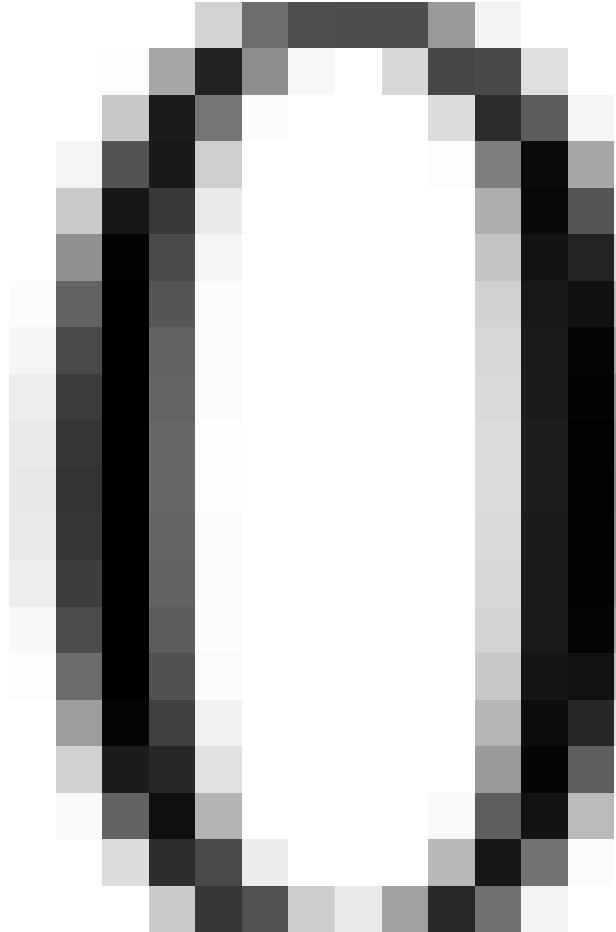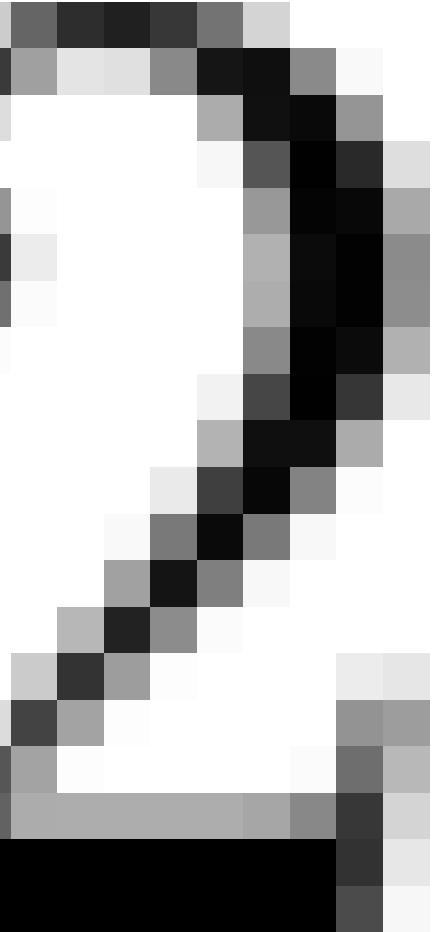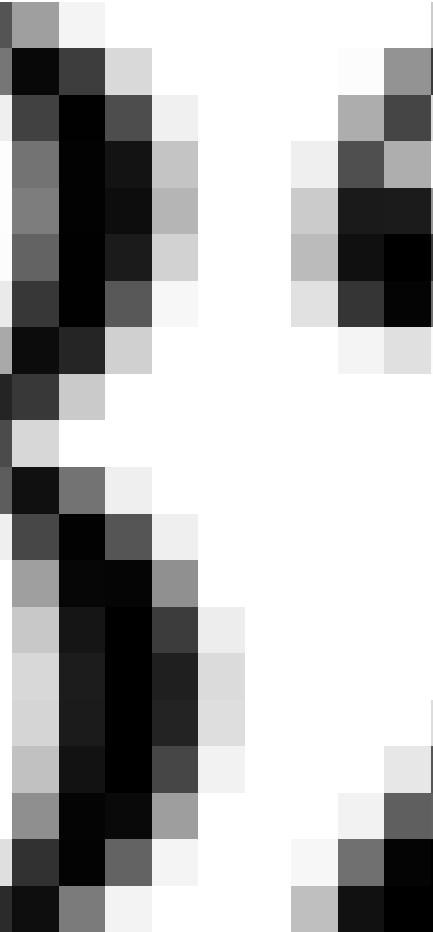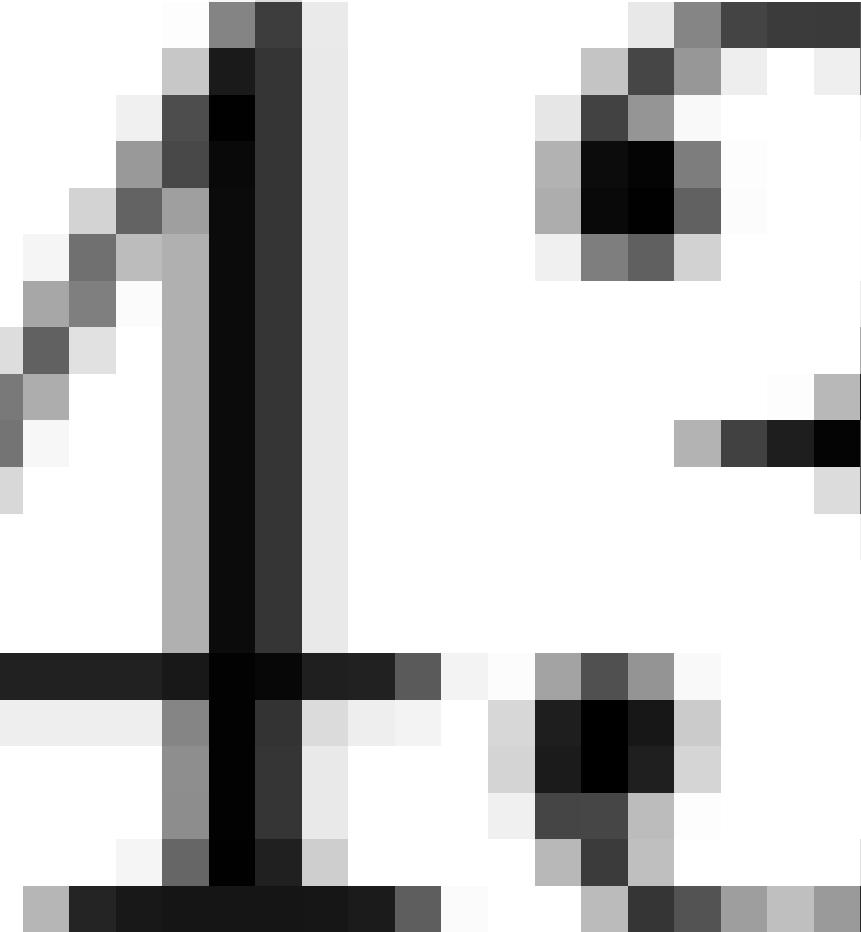

4320 psi


7000 ft

8.33 ppg


0.44 psi/ft

11.68 ppg


Ultrasonic P-wave

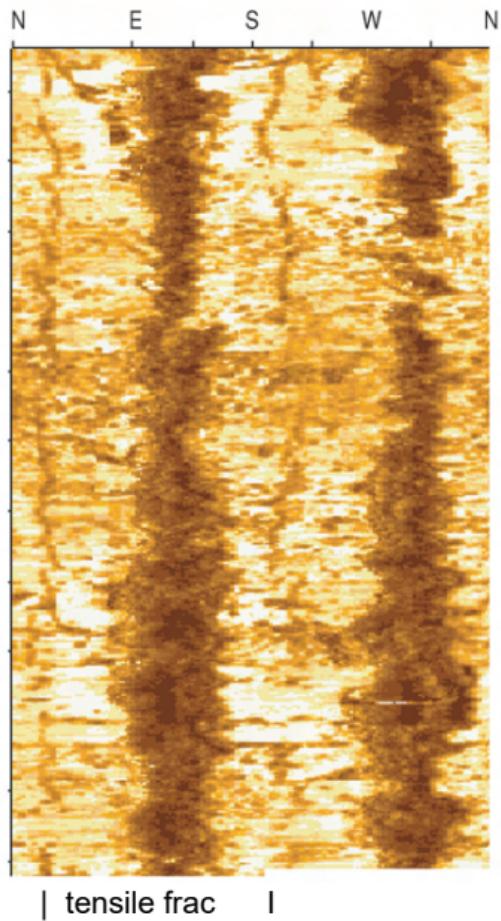


Electrical resistivity

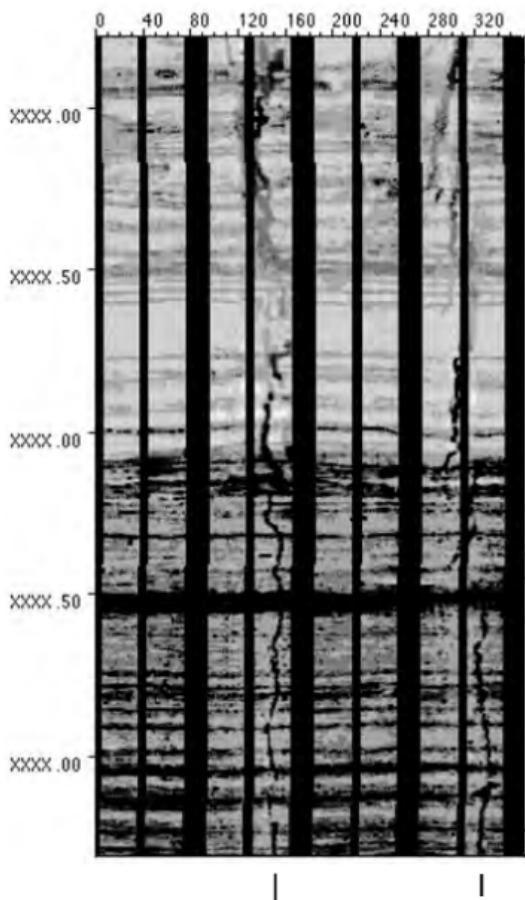

Electrical resistivity

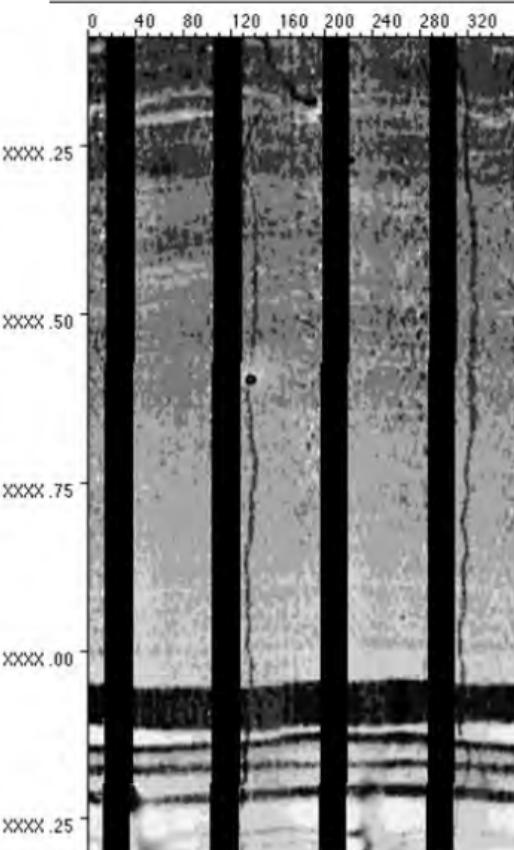

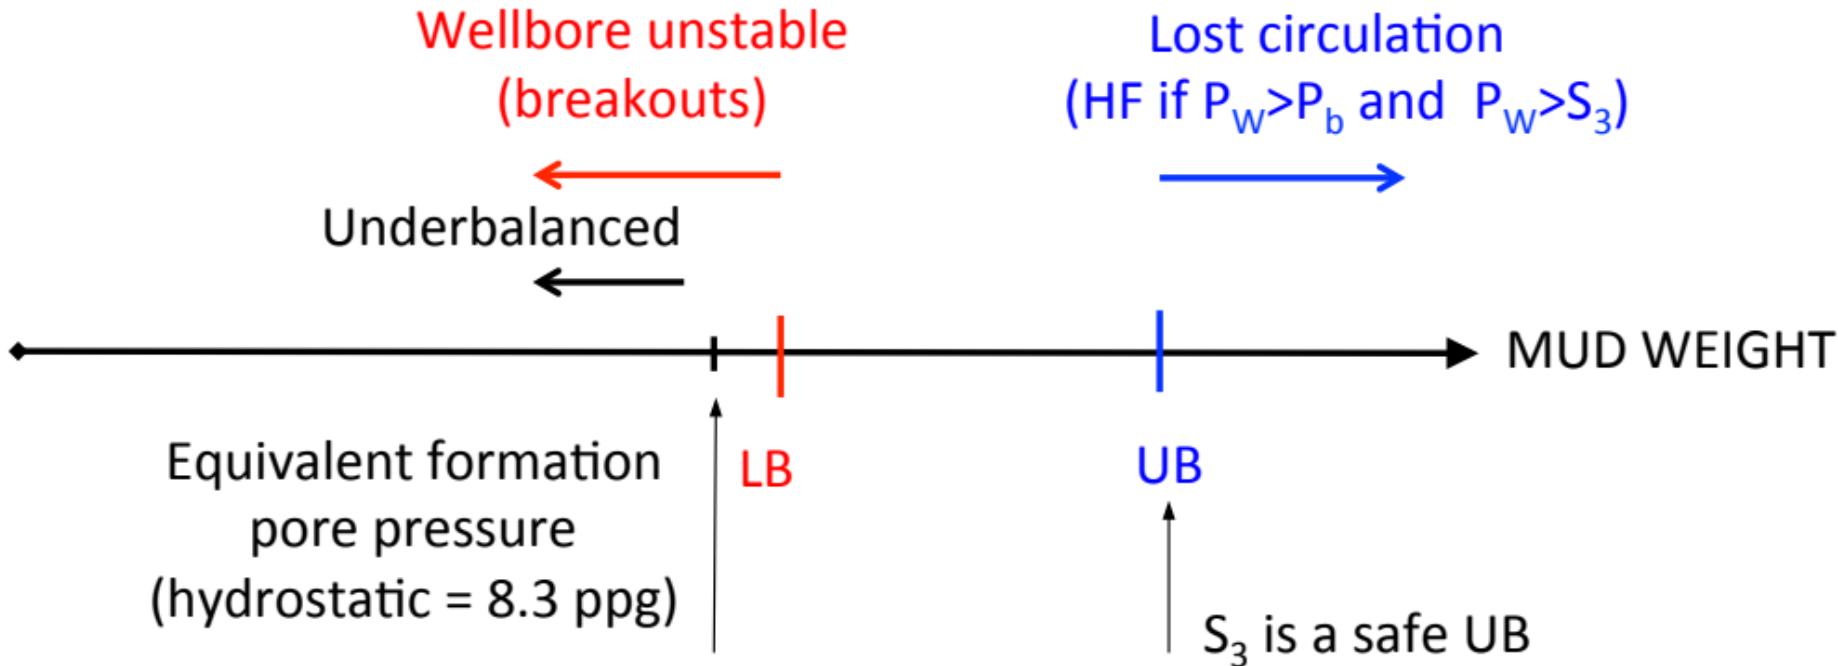



LIGHT MUDS



- May promote water production
- Compromise wellbore stability

HEAVY MUDS


- Damage formation (k) by mud infiltration
- Promote mud losses in permeable strata
- Low ROP because of stronger rock

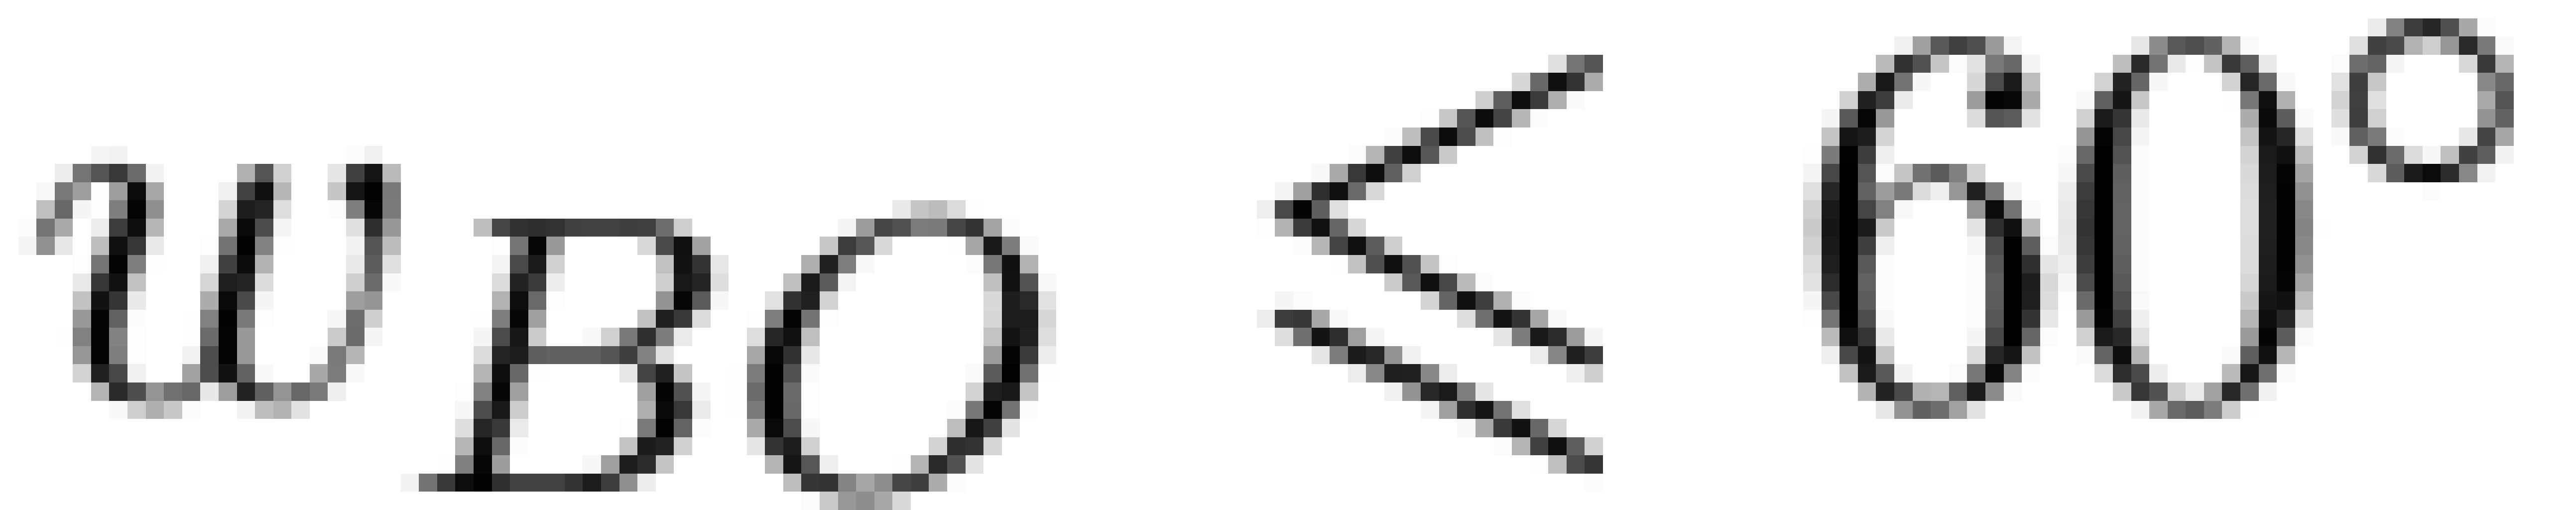


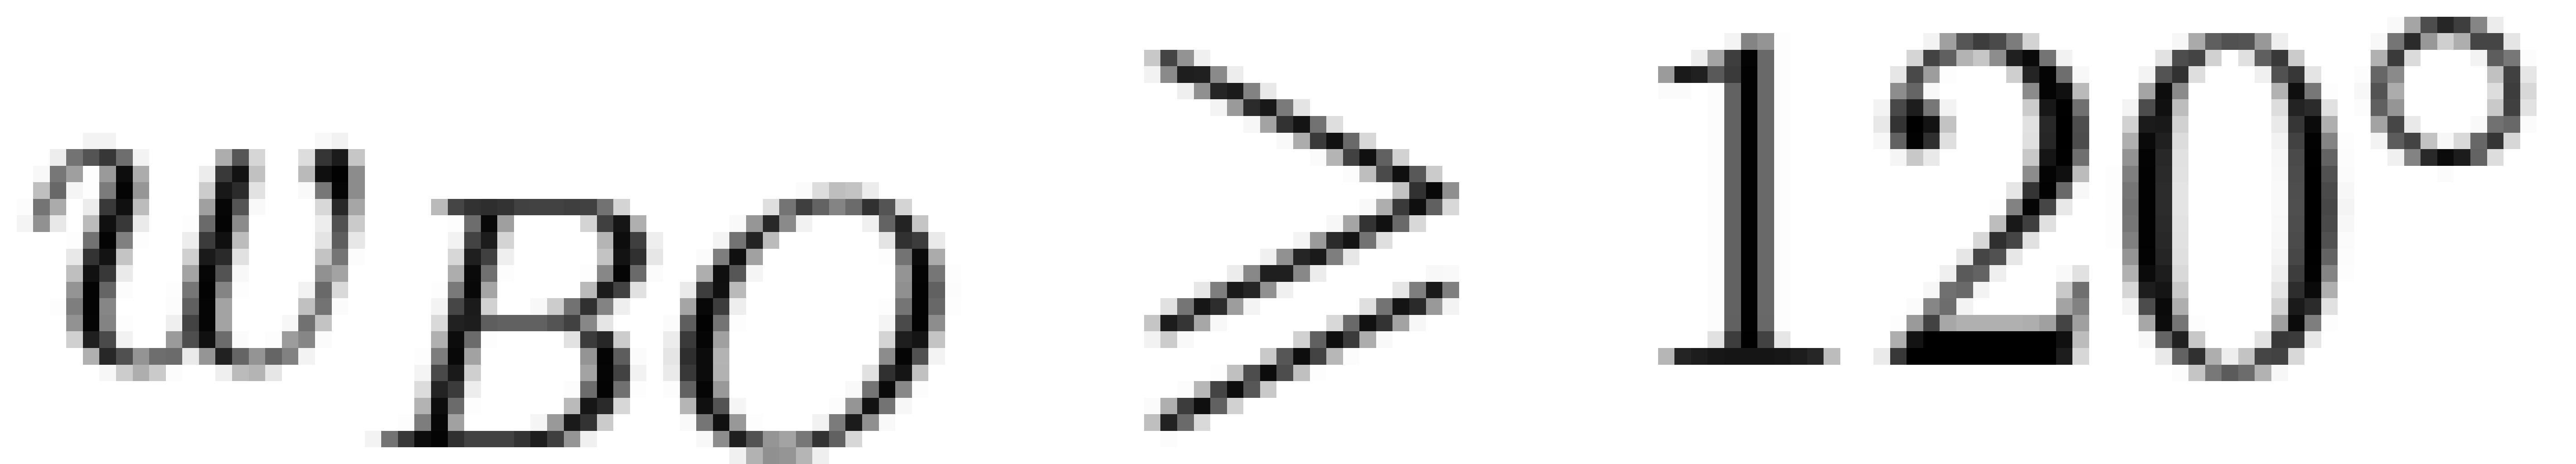


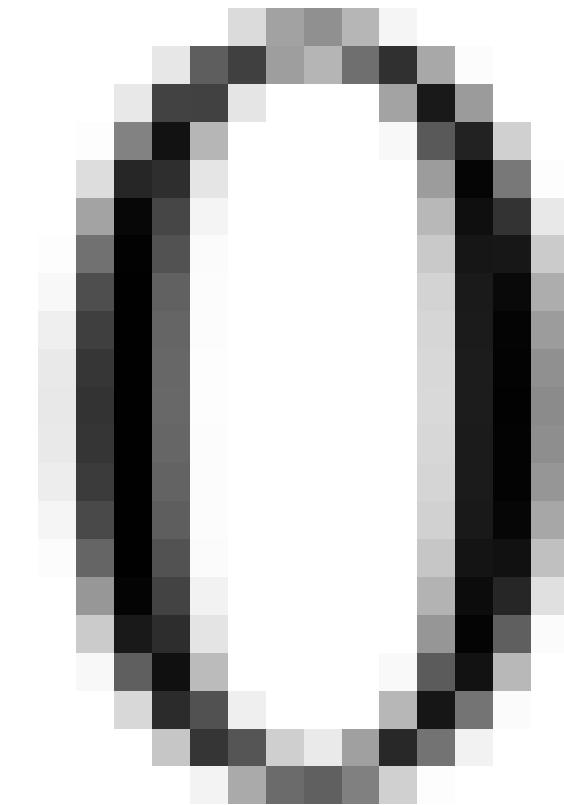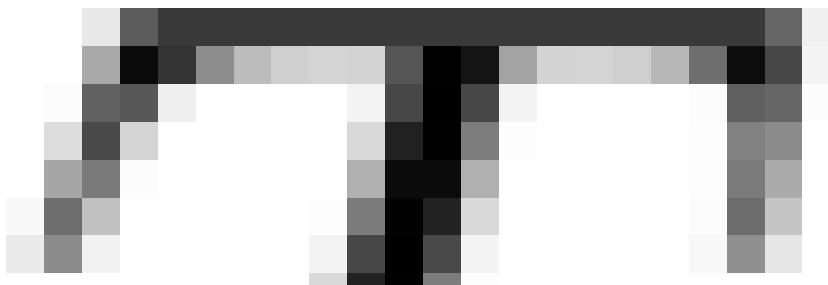





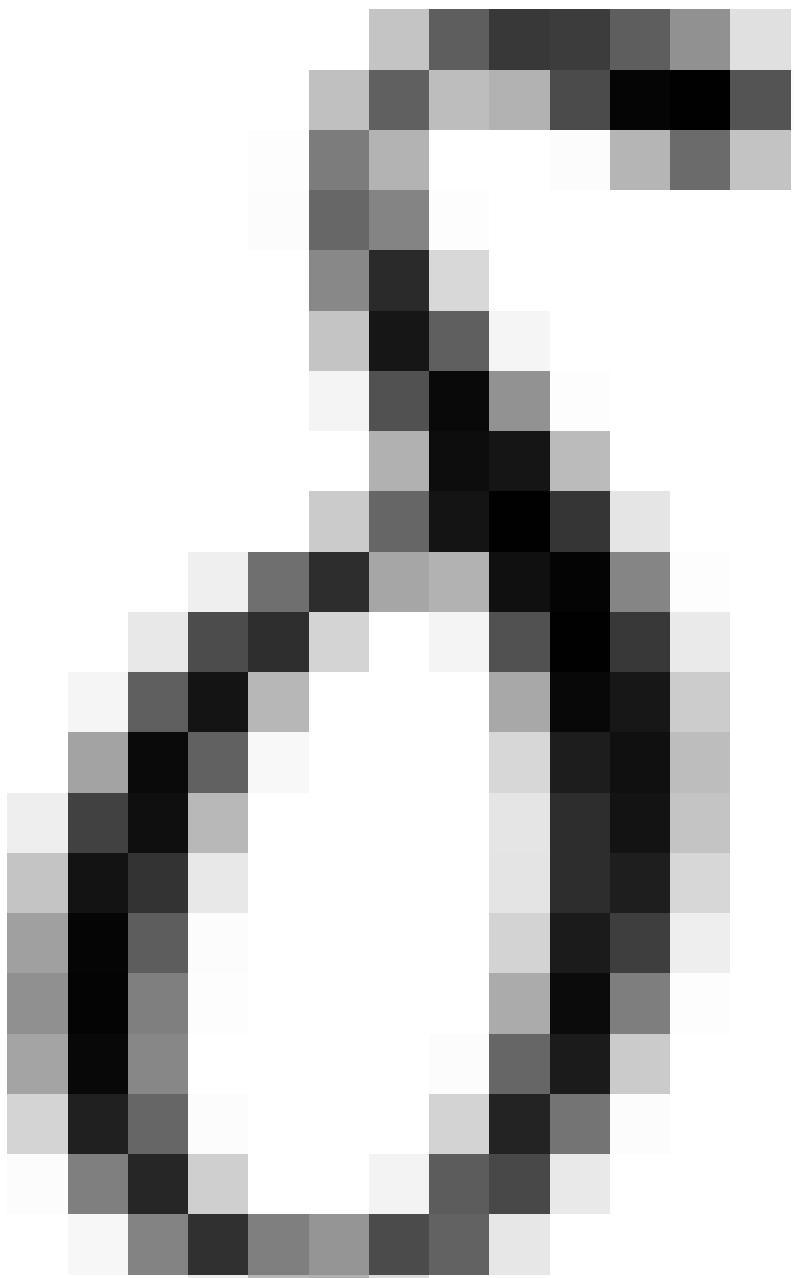


(a) Definitions

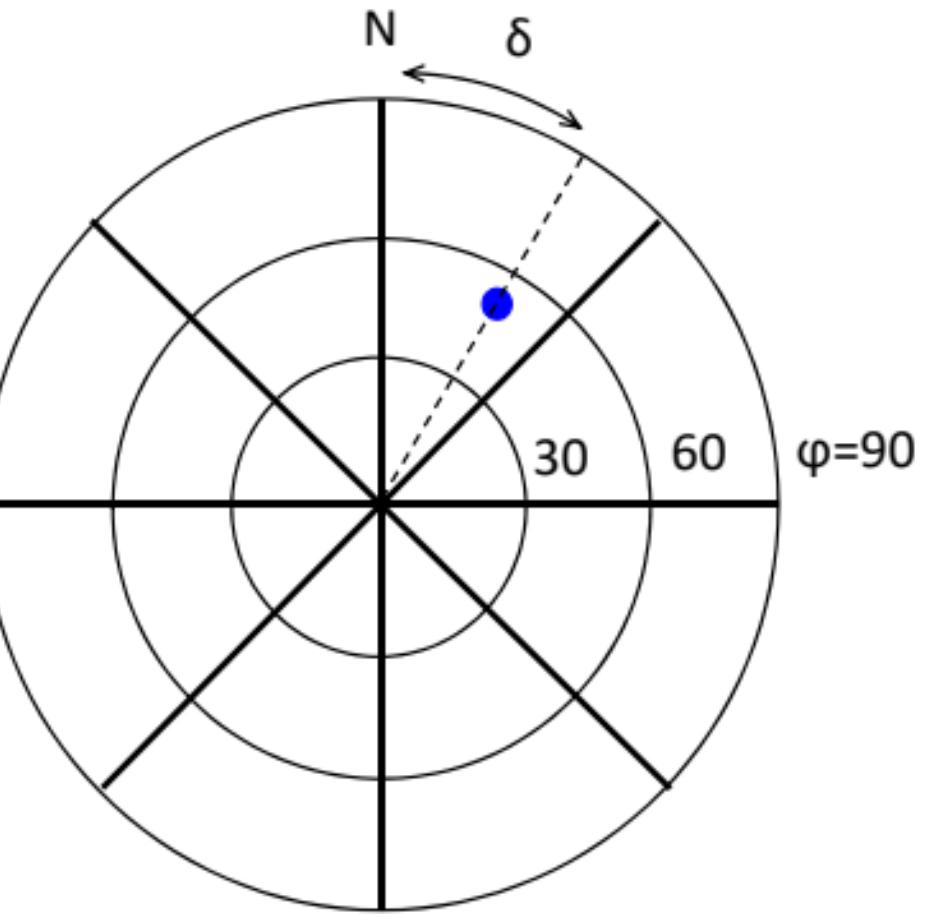
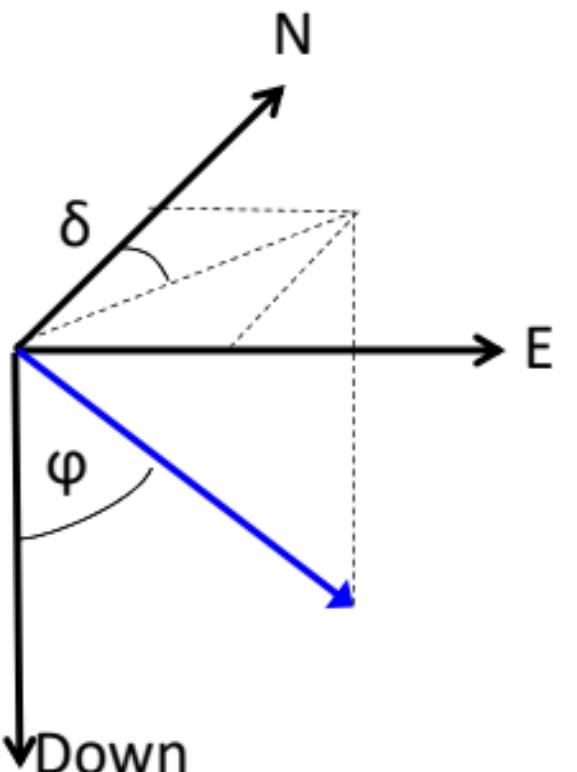



(b) Example

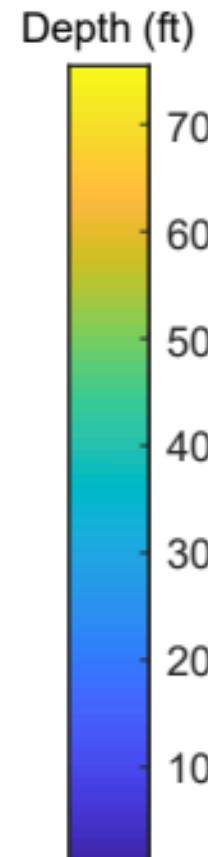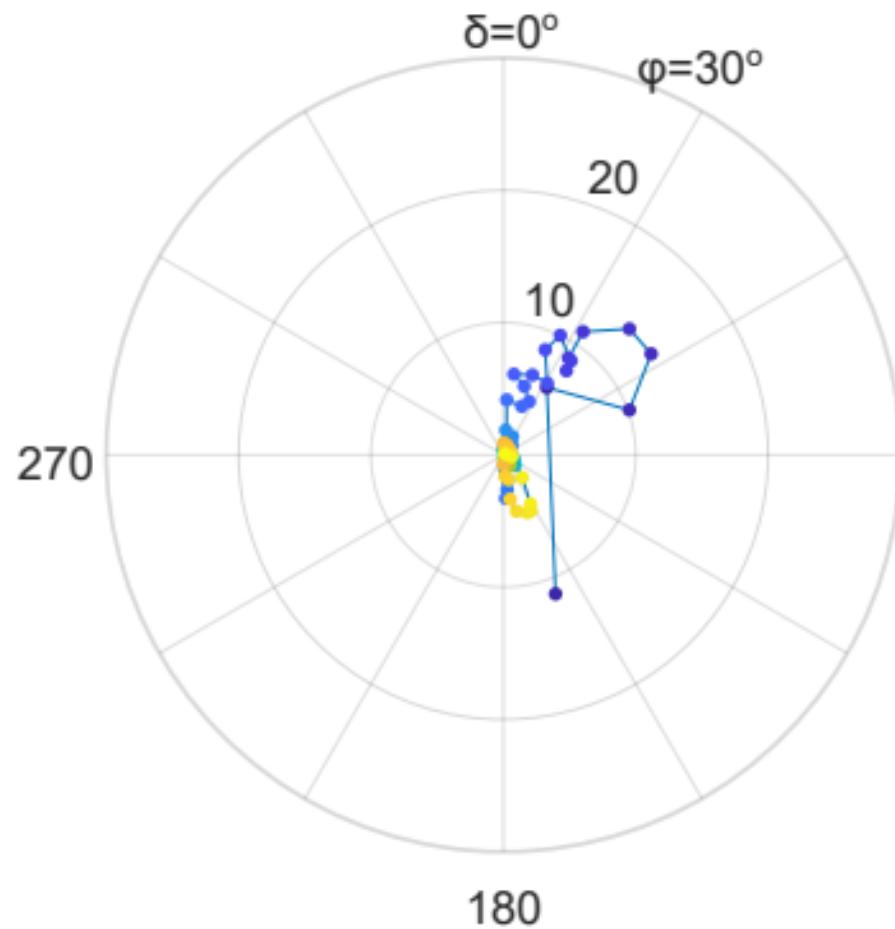


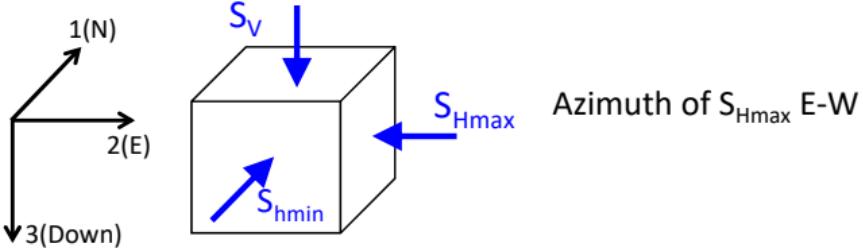


Stress Environment	NF	SS	RF
Plane with highest stress anisotropy and location of breakouts and tensile fracs	<p>3D stress element for Normal Faulting (NF) showing the orientation of the three principal stresses: S_V (vertical, downward), $S_{h\text{min}}$ (horizontal, upward), and $S_{H\text{max}}$ (horizontal, leftward).</p>	<p>3D stress element for Shear Stress (SS) showing the orientation of the three principal stresses: S_V (vertical, downward), $S_{h\text{min}}$ (horizontal, upward), and $S_{H\text{max}}$ (horizontal, leftward).</p>	<p>3D stress element for Reverse Fault (RF) showing the orientation of the three principal stresses: S_V (vertical, downward), $S_{h\text{min}}$ (horizontal, upward), and $S_{H\text{max}}$ (horizontal, leftward).</p>
Narrower drilling window in a stereonet projection	<p>Stereonet projection for Normal Faulting (NF) showing a narrow arc of red dots along the lower hemisphere, indicating a narrow drilling window.</p>	<p>Stereonet projection for Shear Stress (SS) showing a single red dot at the center of the upper hemisphere.</p>	<p>Stereonet projection for Reverse Fault (RF) showing a narrow arc of red dots along the upper hemisphere, indicating a narrow drilling window.</p>

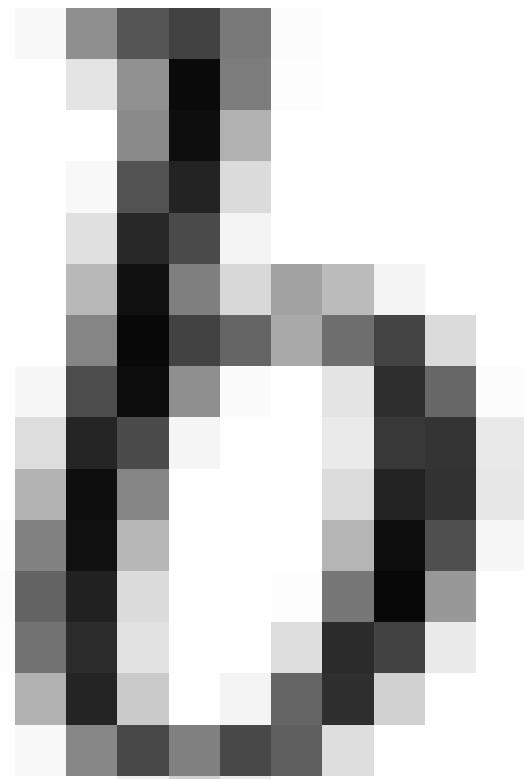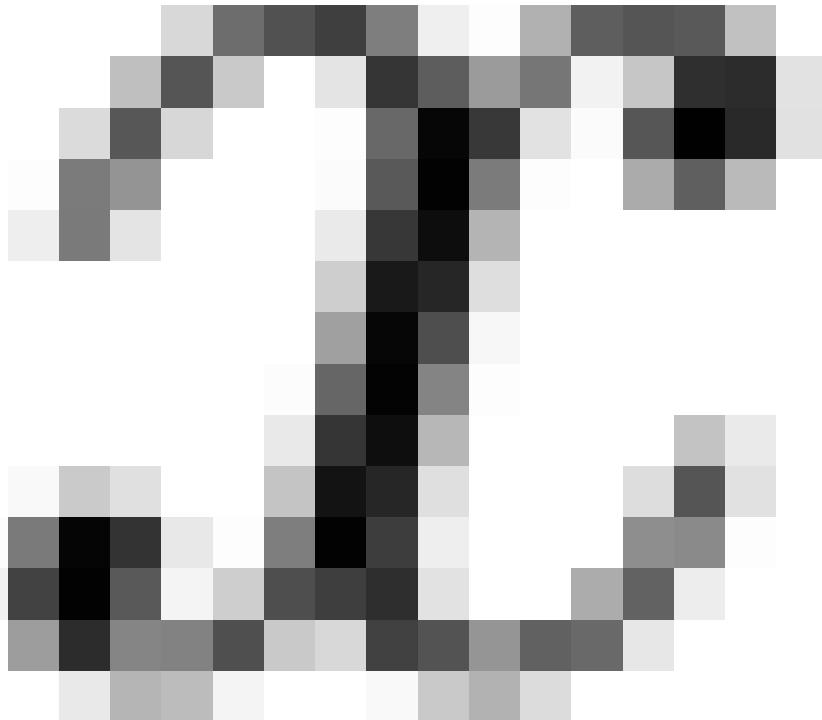


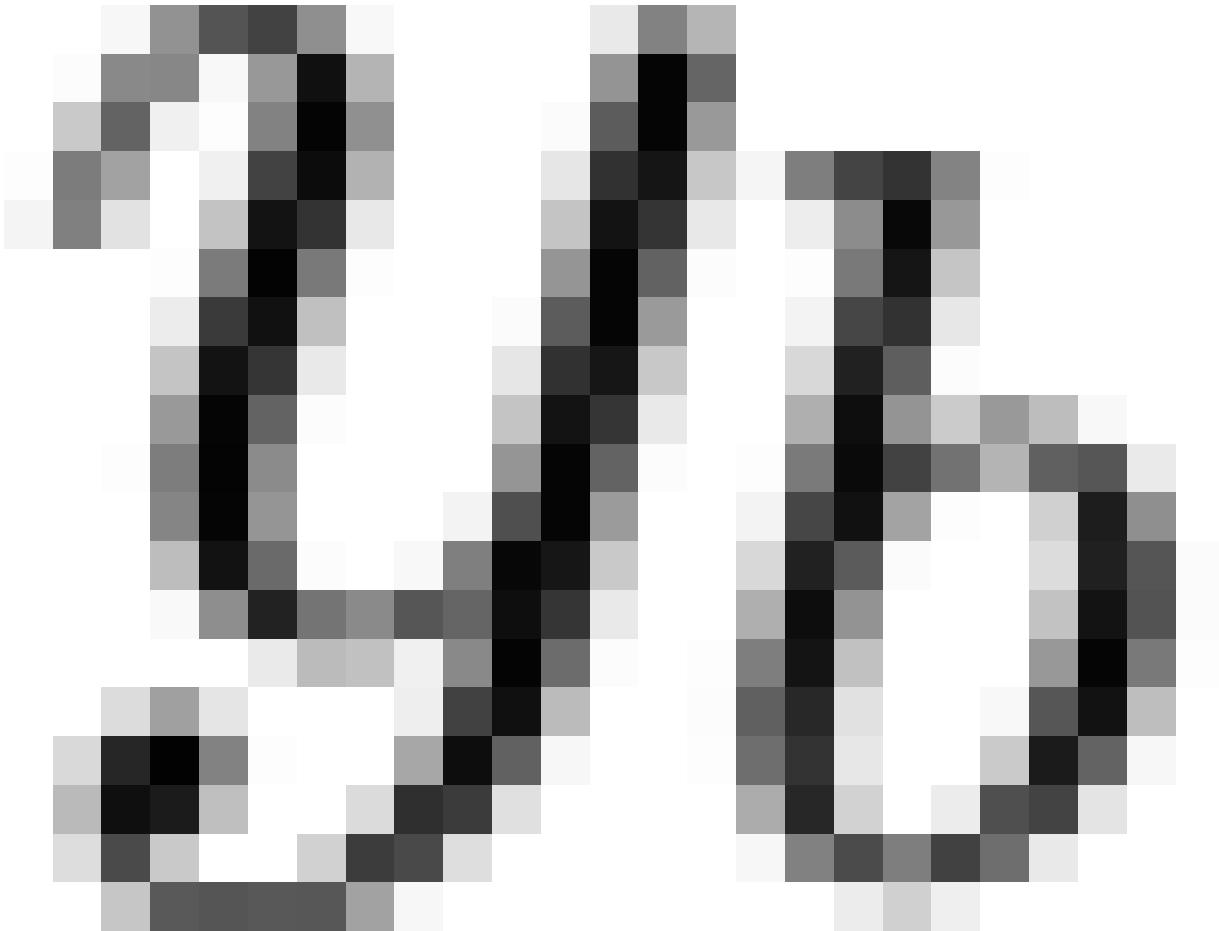

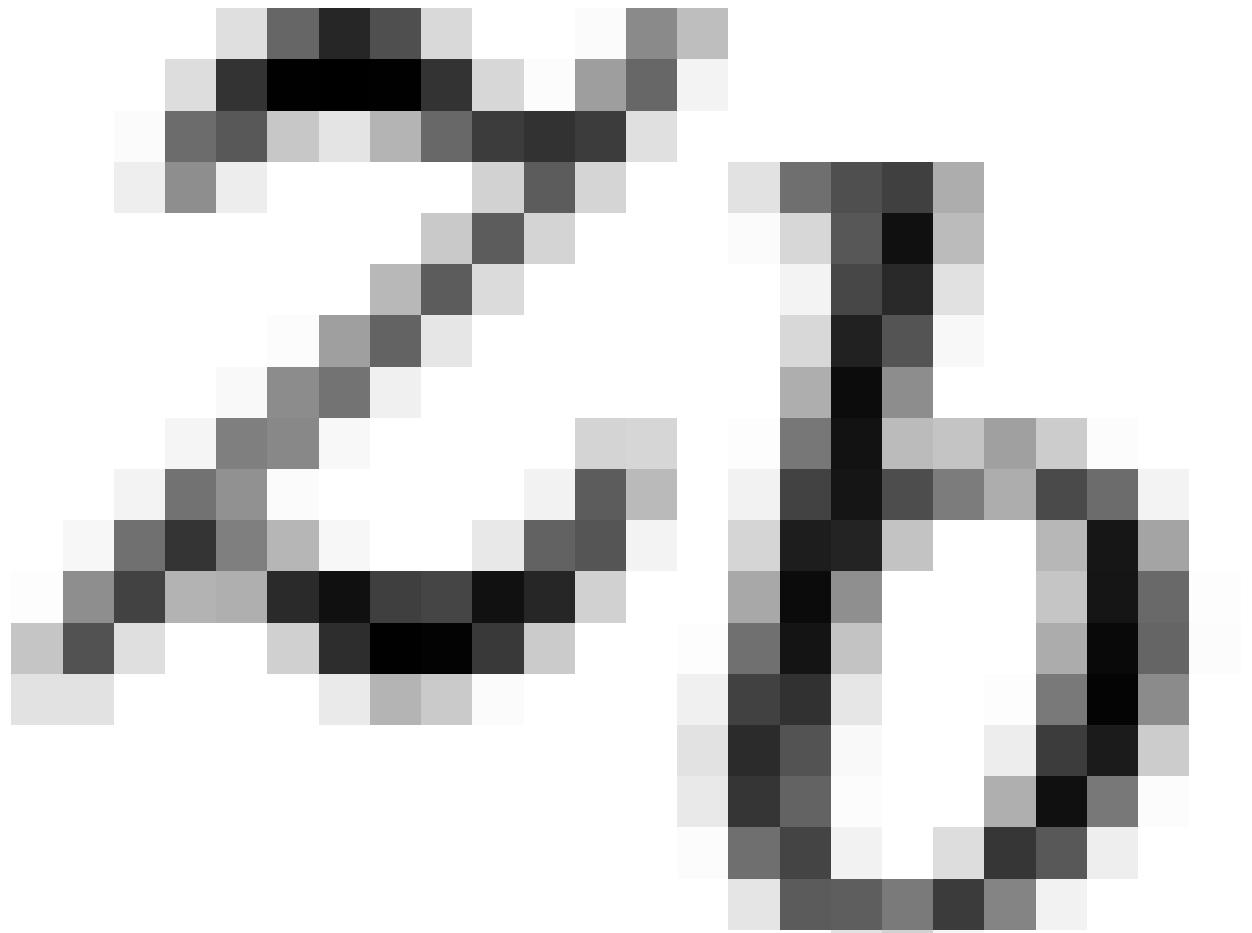

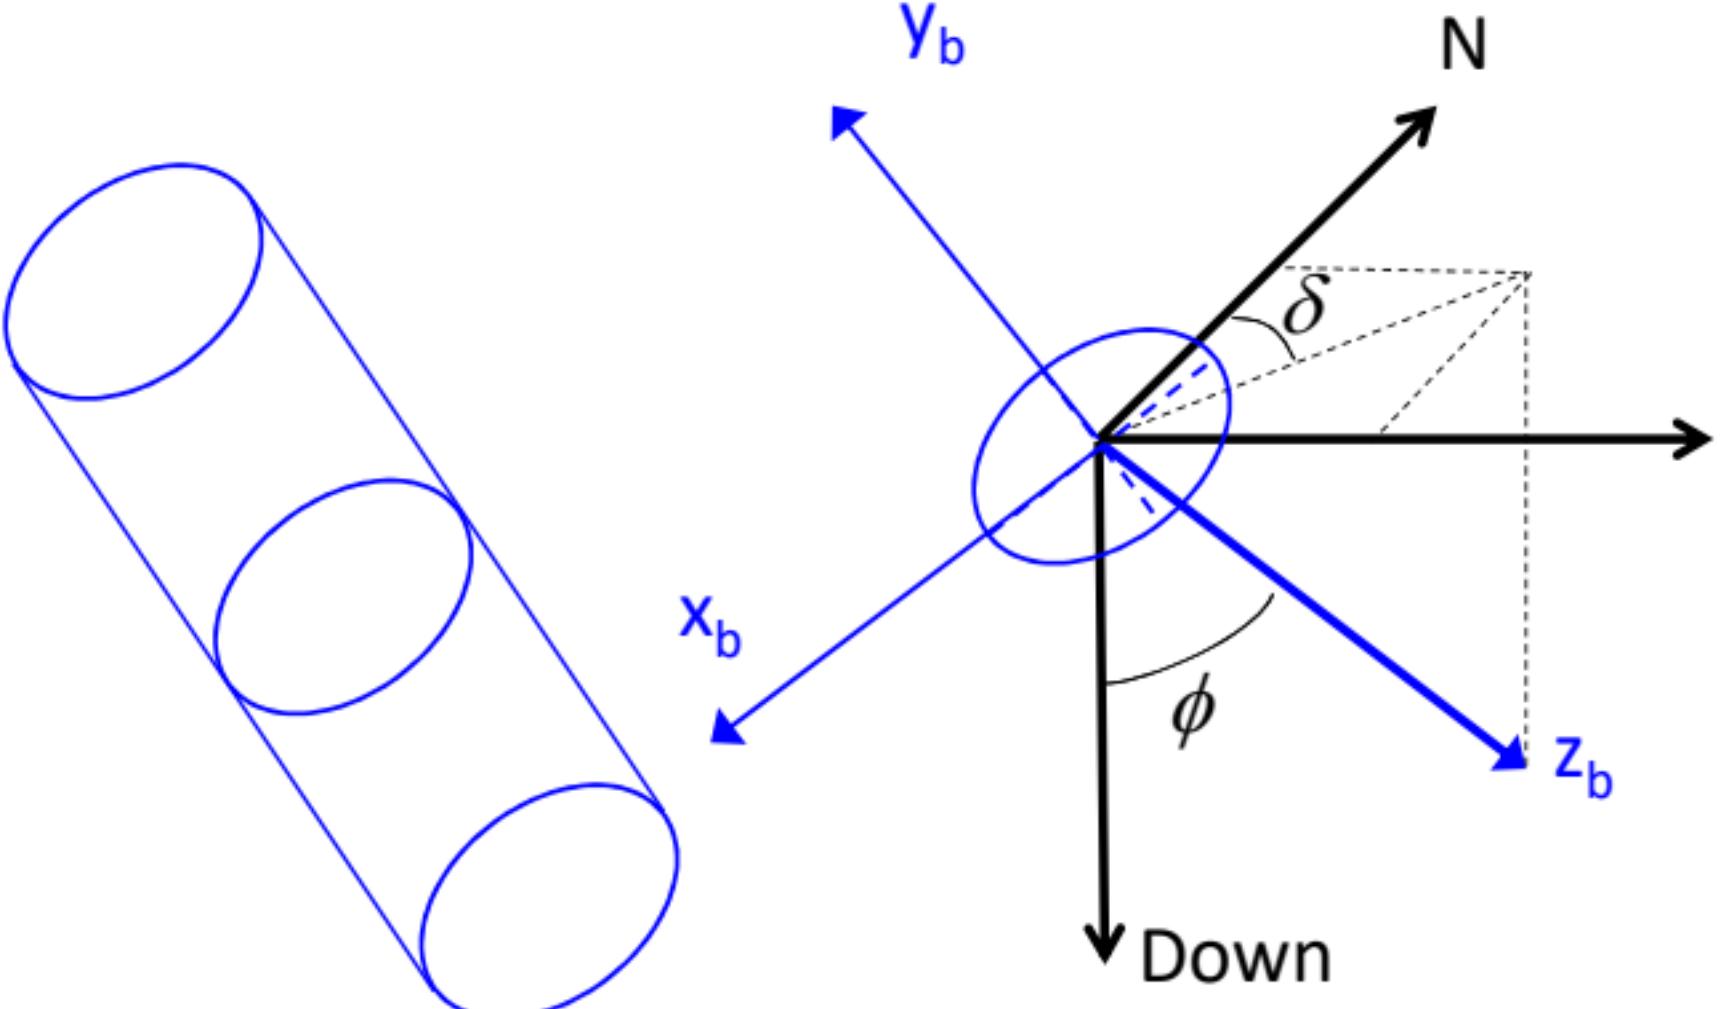

$$R_{GW} = \begin{bmatrix} -\cos\delta\cos\phi & -\sin\delta\cos\phi & \sin\phi \\ \sin\delta & -\cos\delta & 0 \\ \cos\delta\sin\phi & \sin\delta\sin\phi & \cos\phi \end{bmatrix}$$









$$\underline{\underline{S}}_W =$$

$$\begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$

























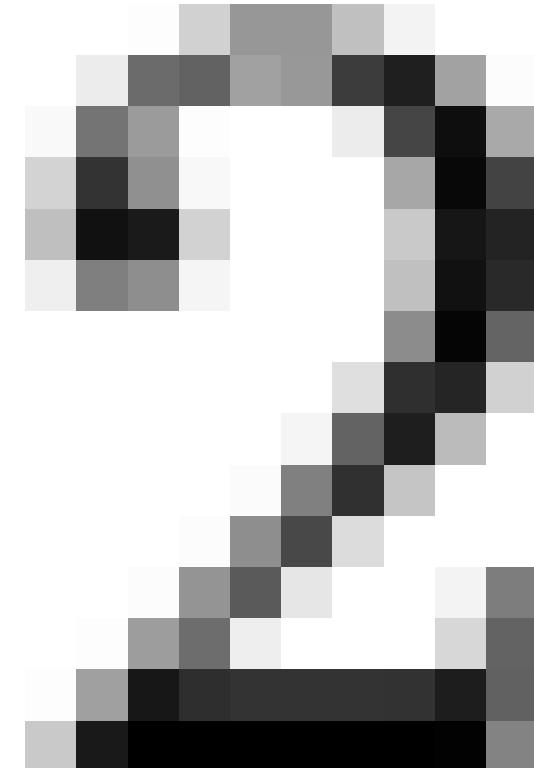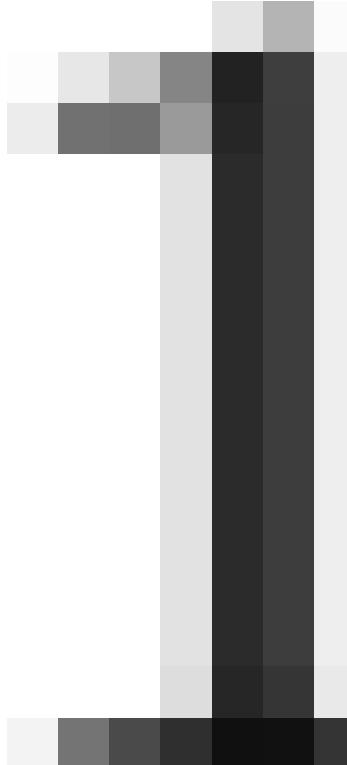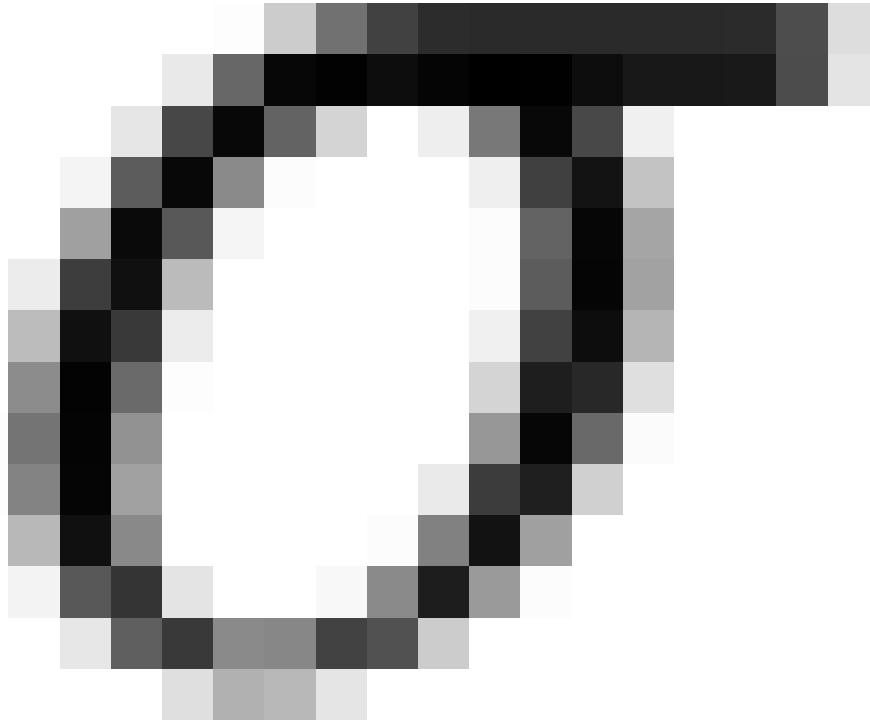

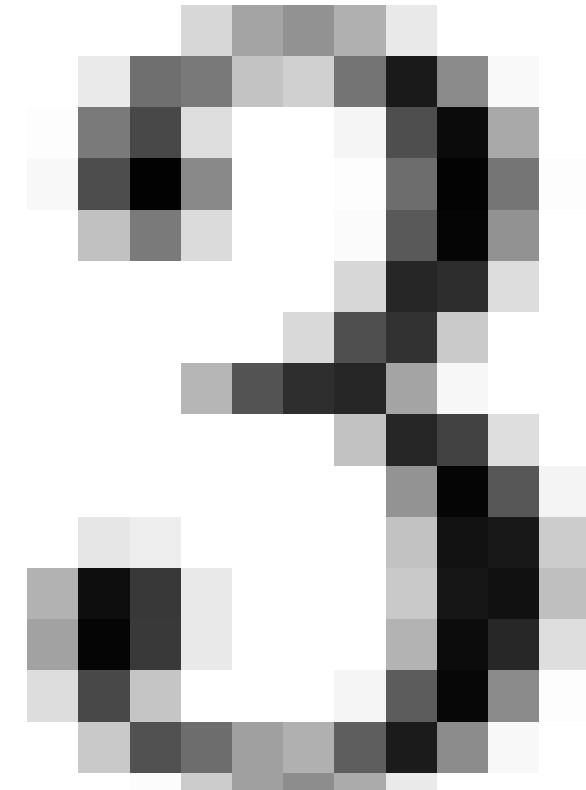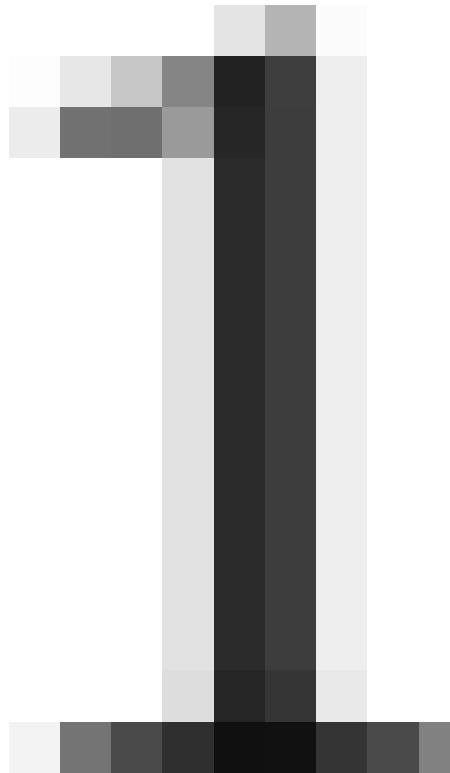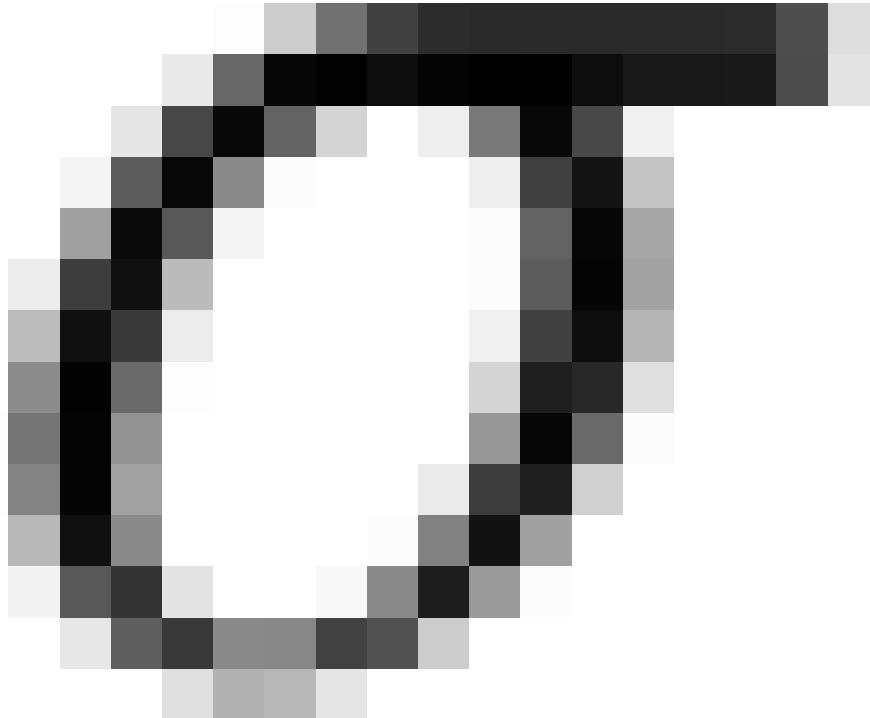

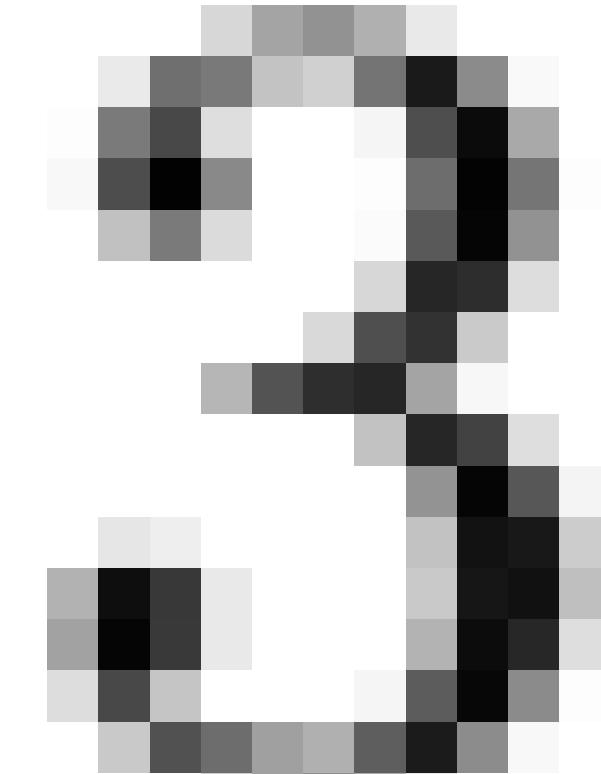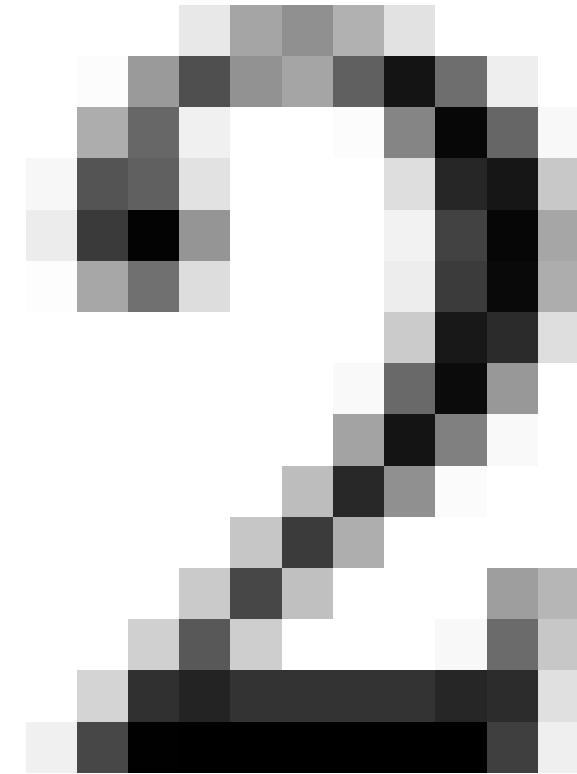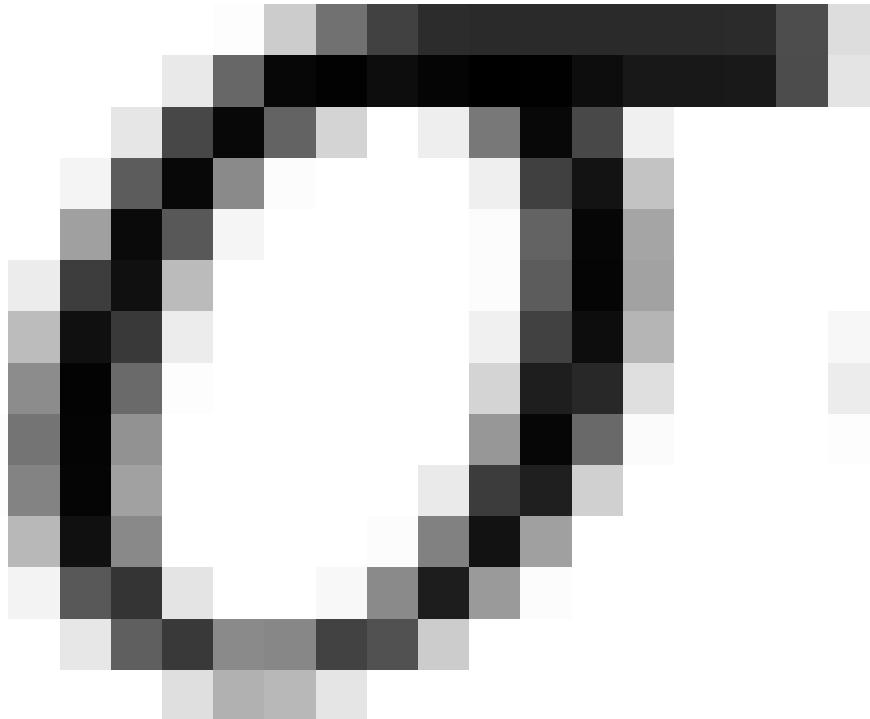


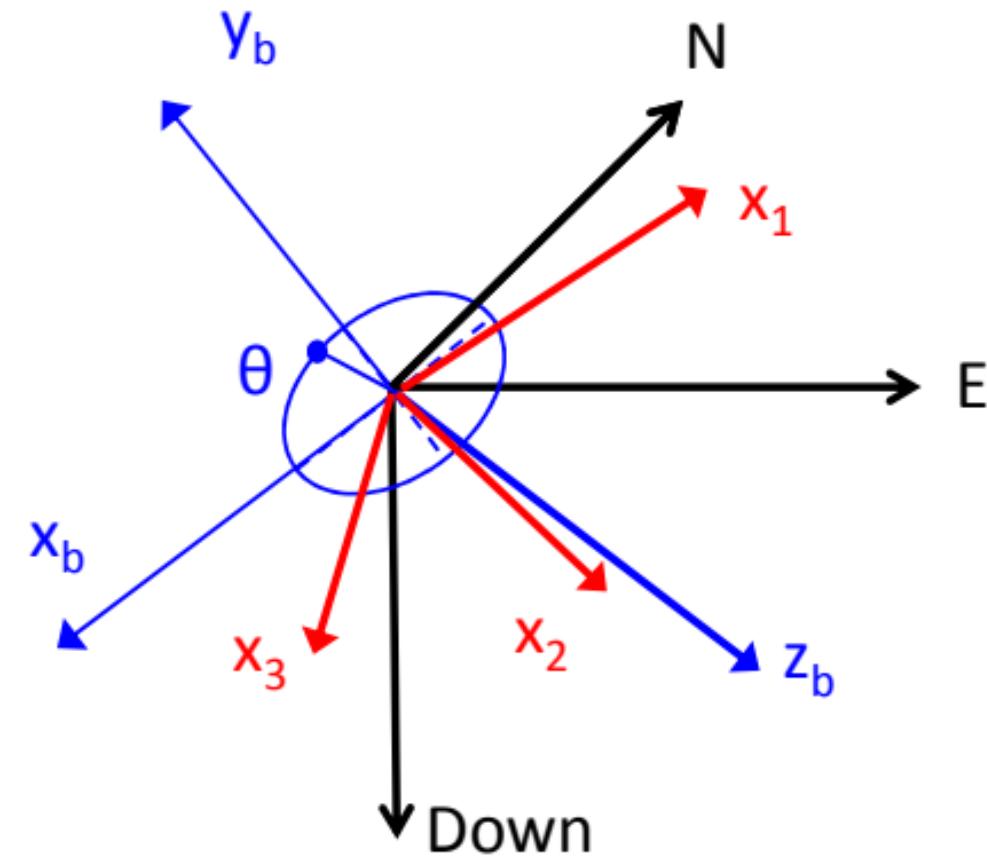


Stresses at the wellbore wall (Kirsch[PP]+Kirsch[S])

$$\begin{cases} \sigma_{rr} = \Delta P \\ \sigma_{\theta\theta} = \sigma_{11} + \sigma_{22} - 2(\sigma_{11} - \sigma_{22})\cos 2\theta - 4\sigma_{12}\sin 2\theta - \Delta P \\ \tau_{\theta z} = 2(\sigma_{23}\cos\theta - \sigma_{13}\sin\theta) \\ \sigma_{zz} = \sigma_{33} - 2\nu(\sigma_{11} - \sigma_{22})\cos 2\theta - 4\nu\sigma_{12}\sin 2\theta \end{cases}$$




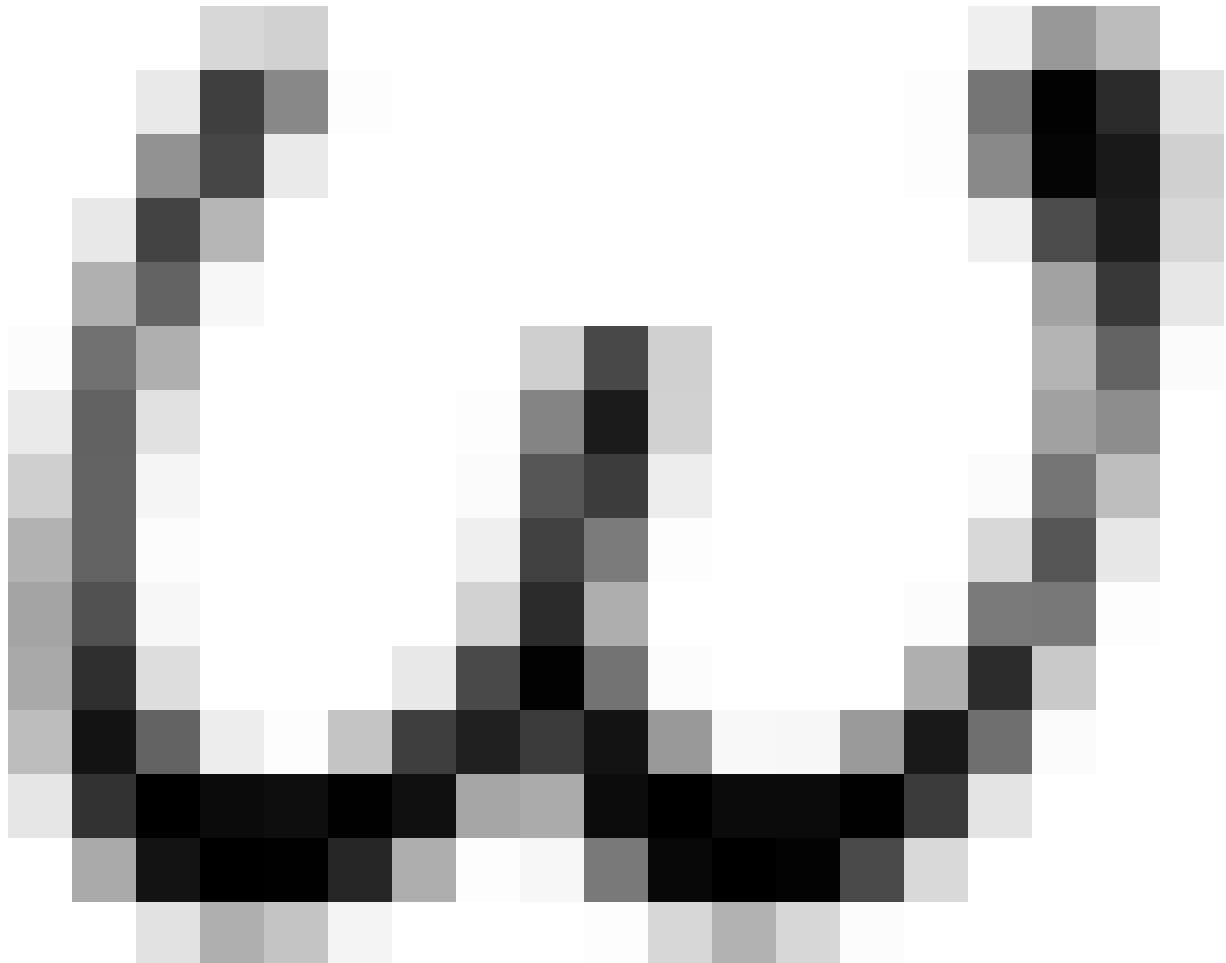




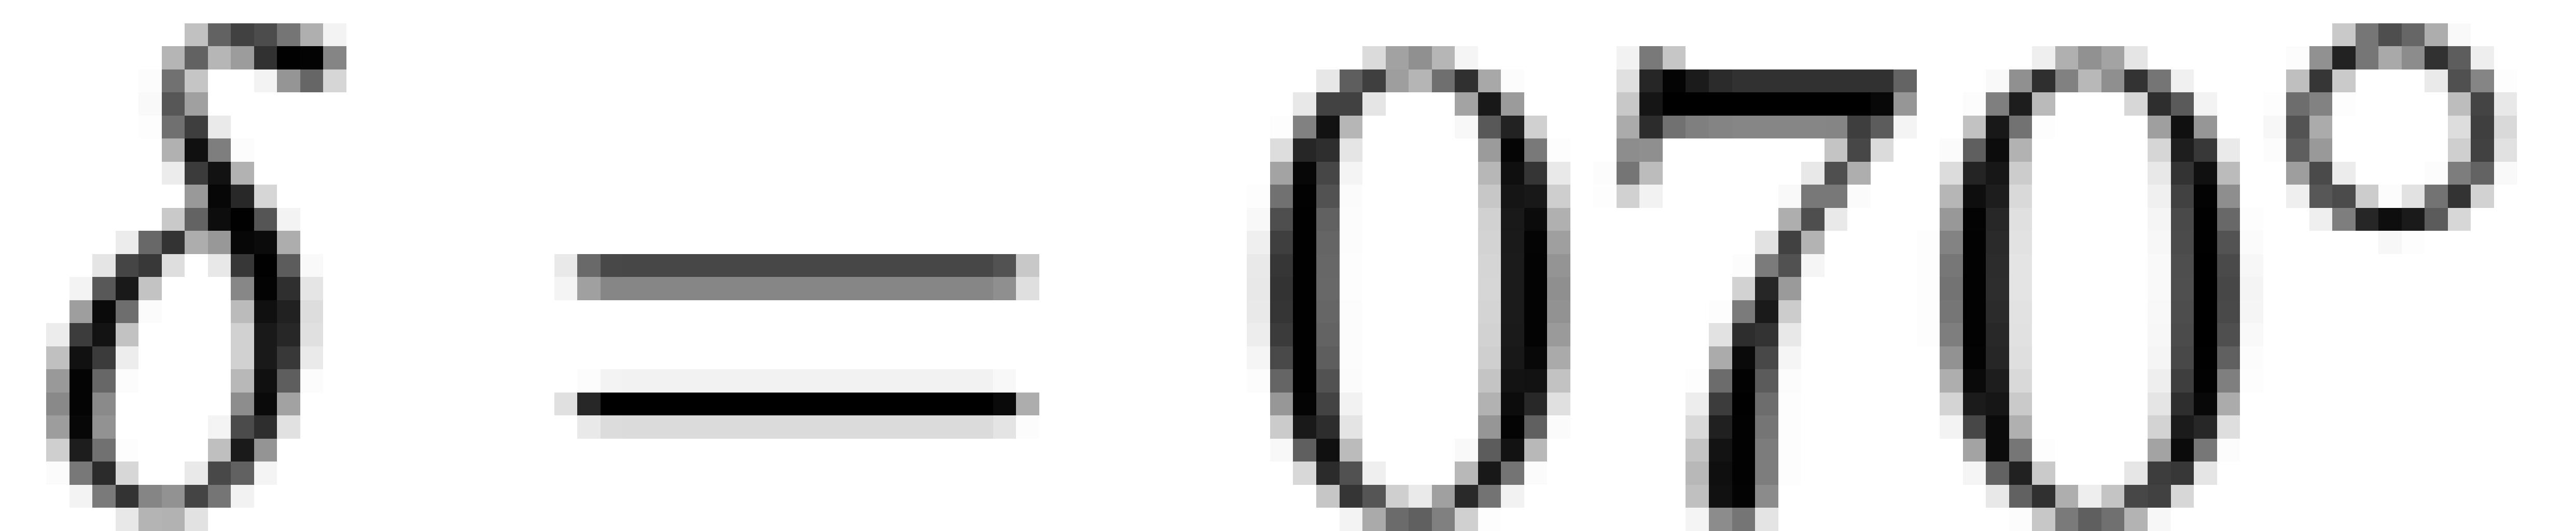


Geographical principal stresses


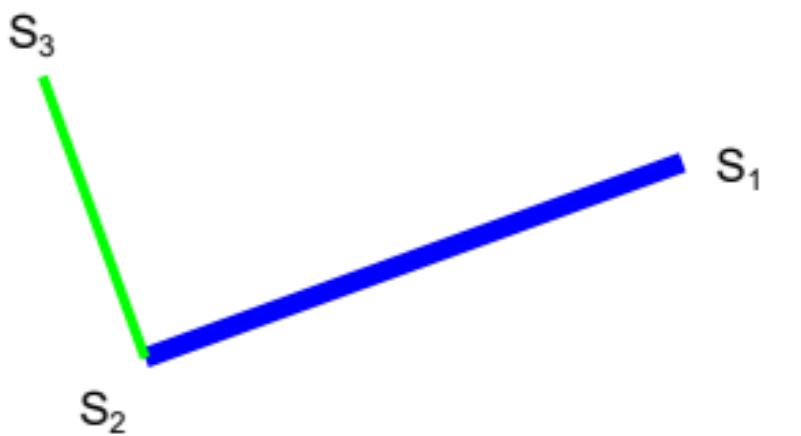


Required UCS ($P_w = P_p$)

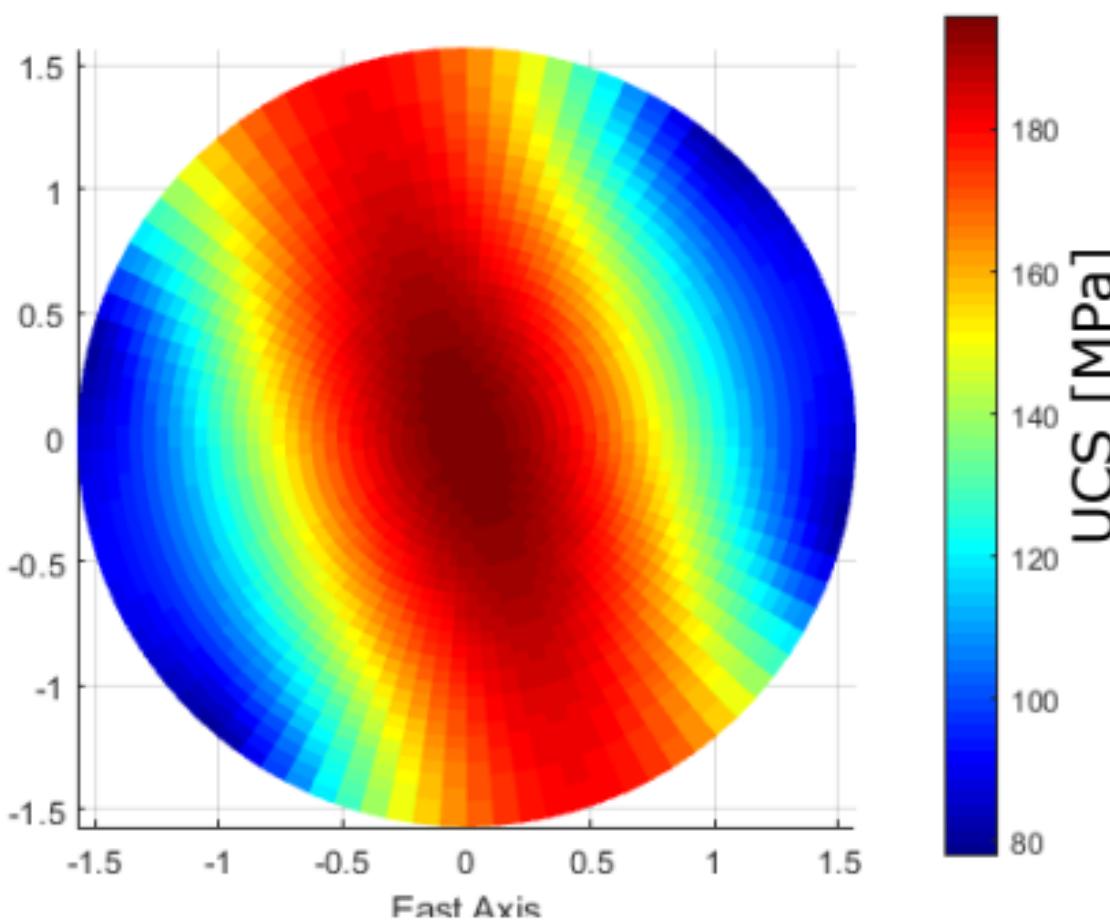


Breakout angle by Lade - $P_w = 45\text{MPa}$ UCS=80MPa


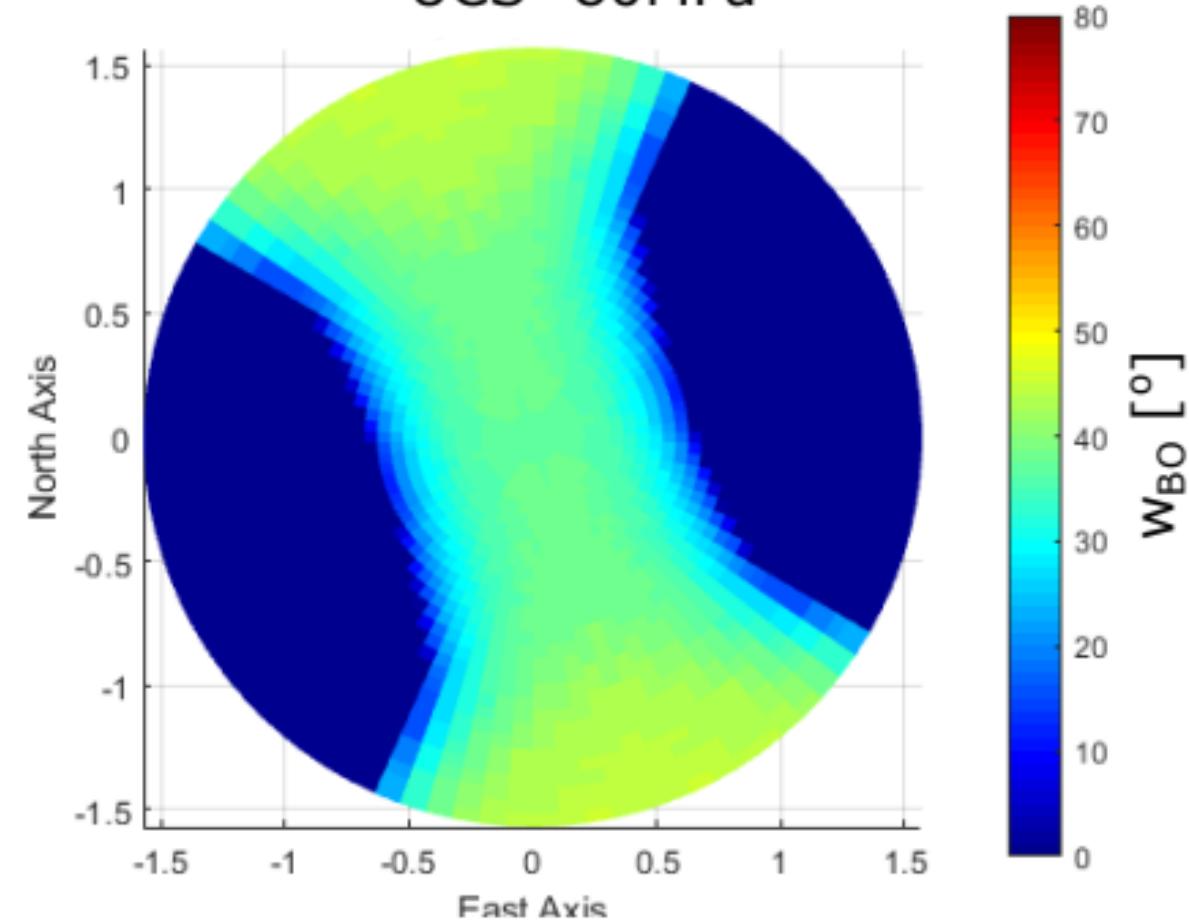


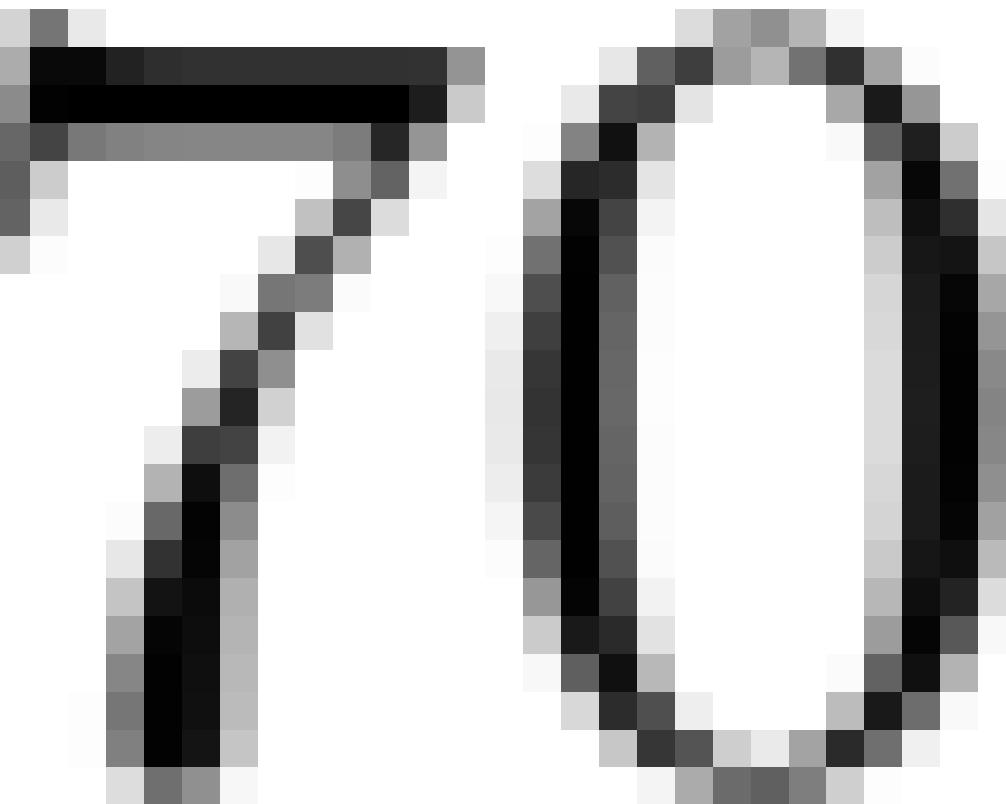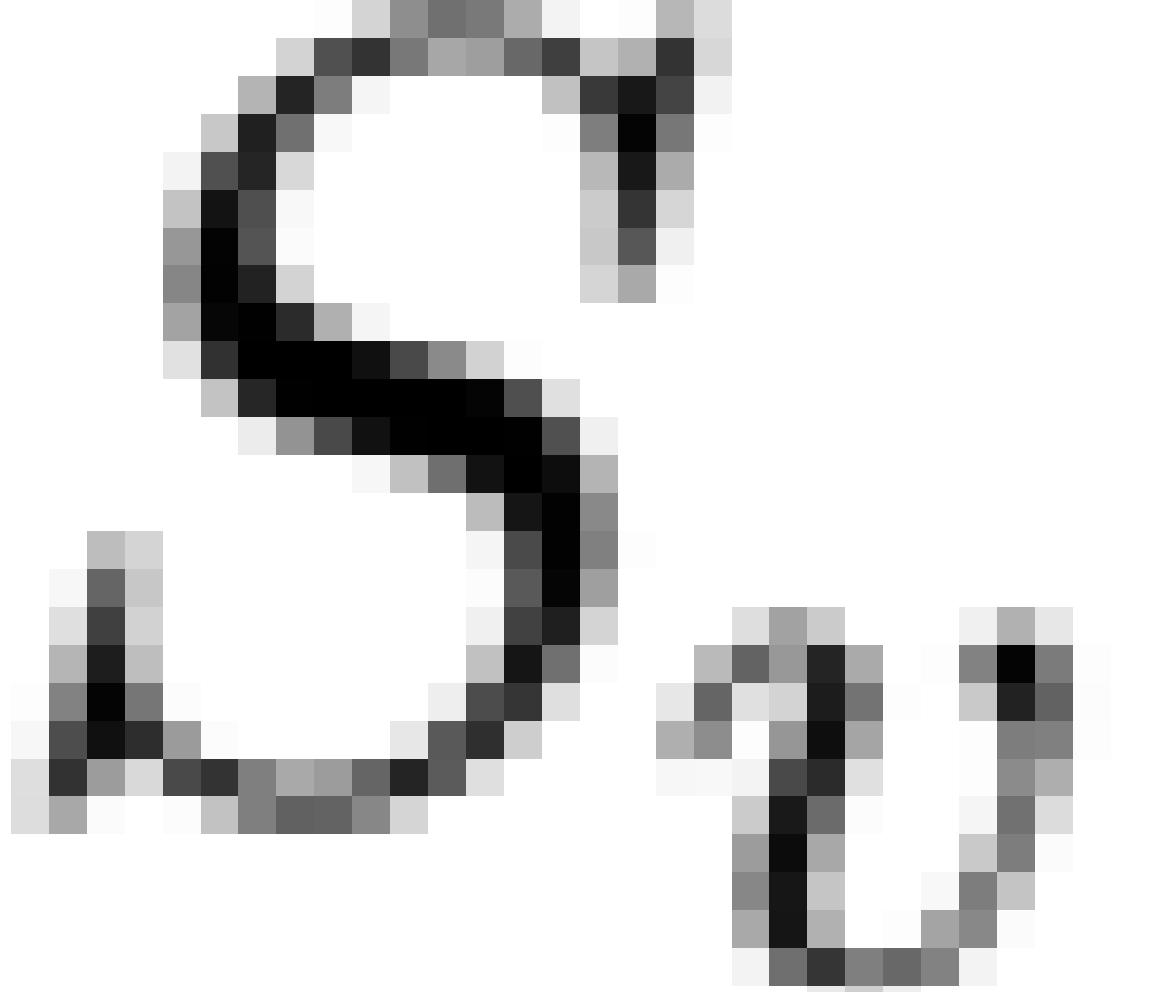







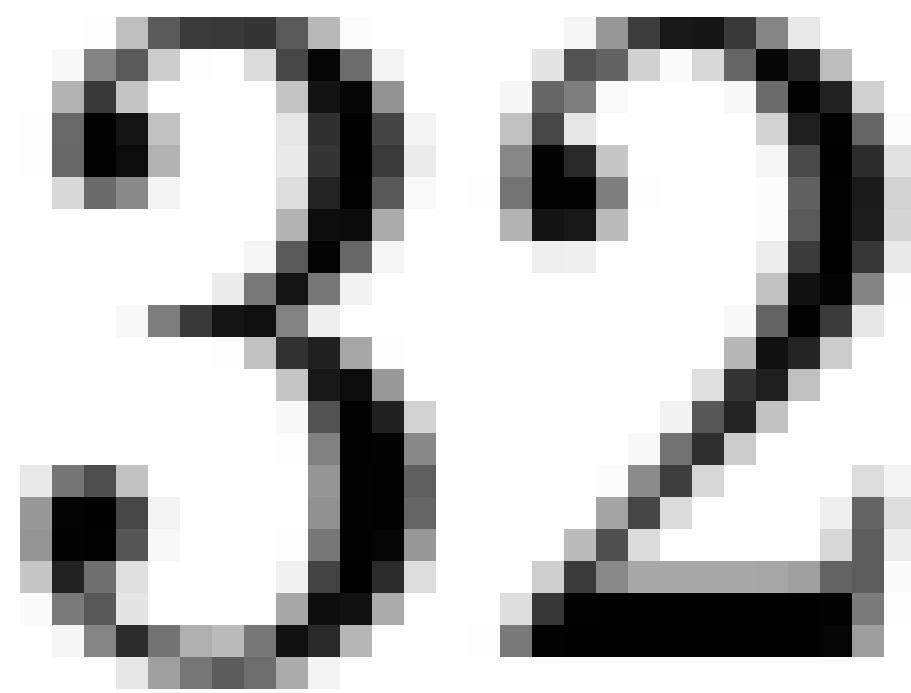

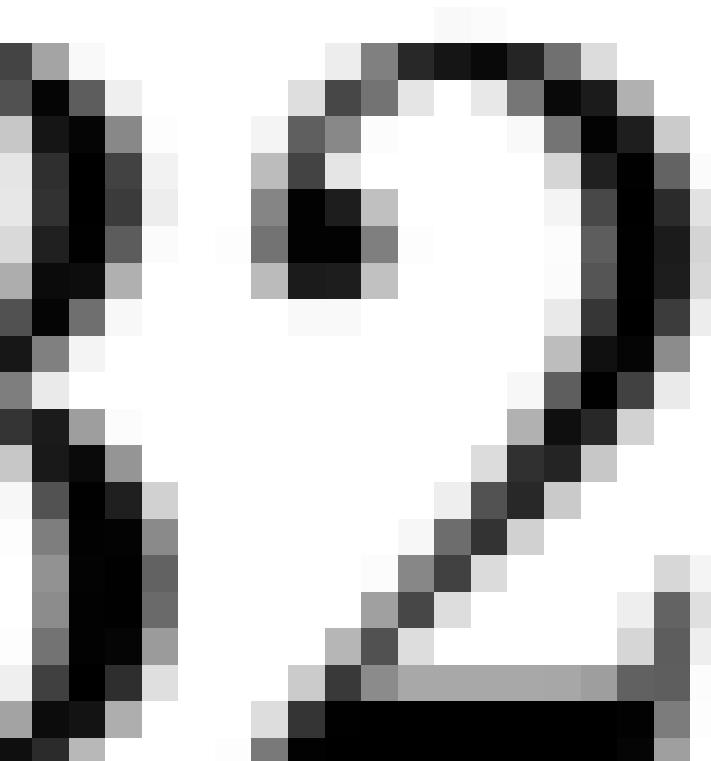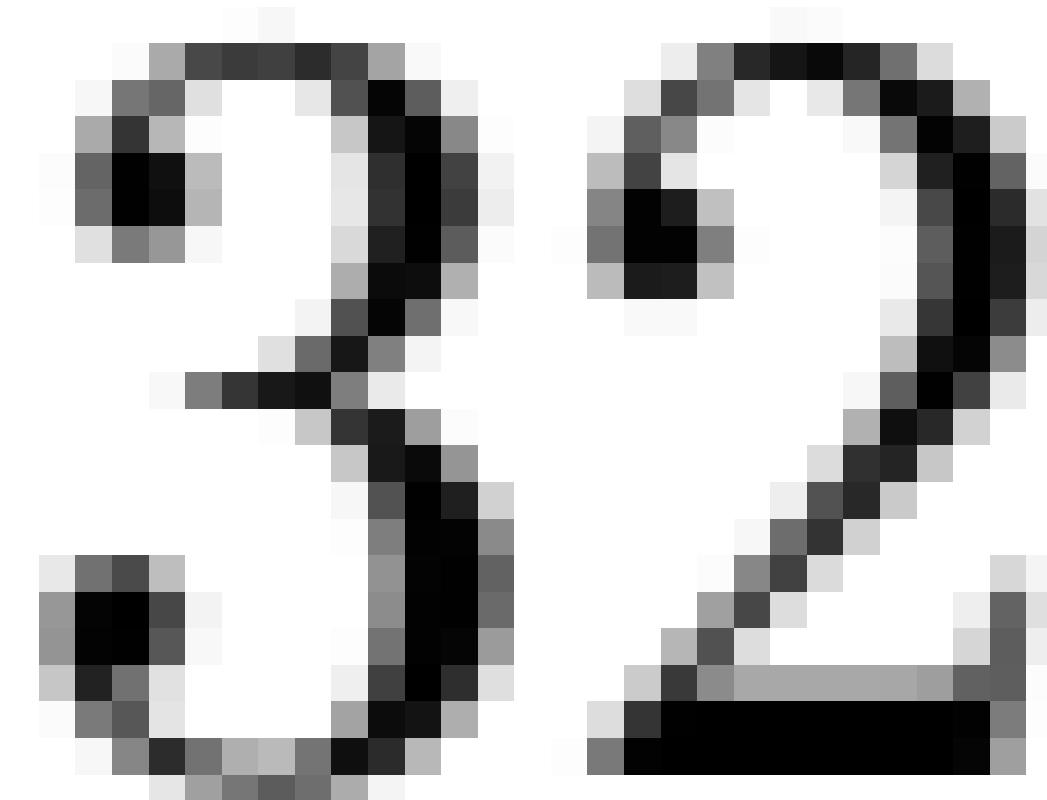


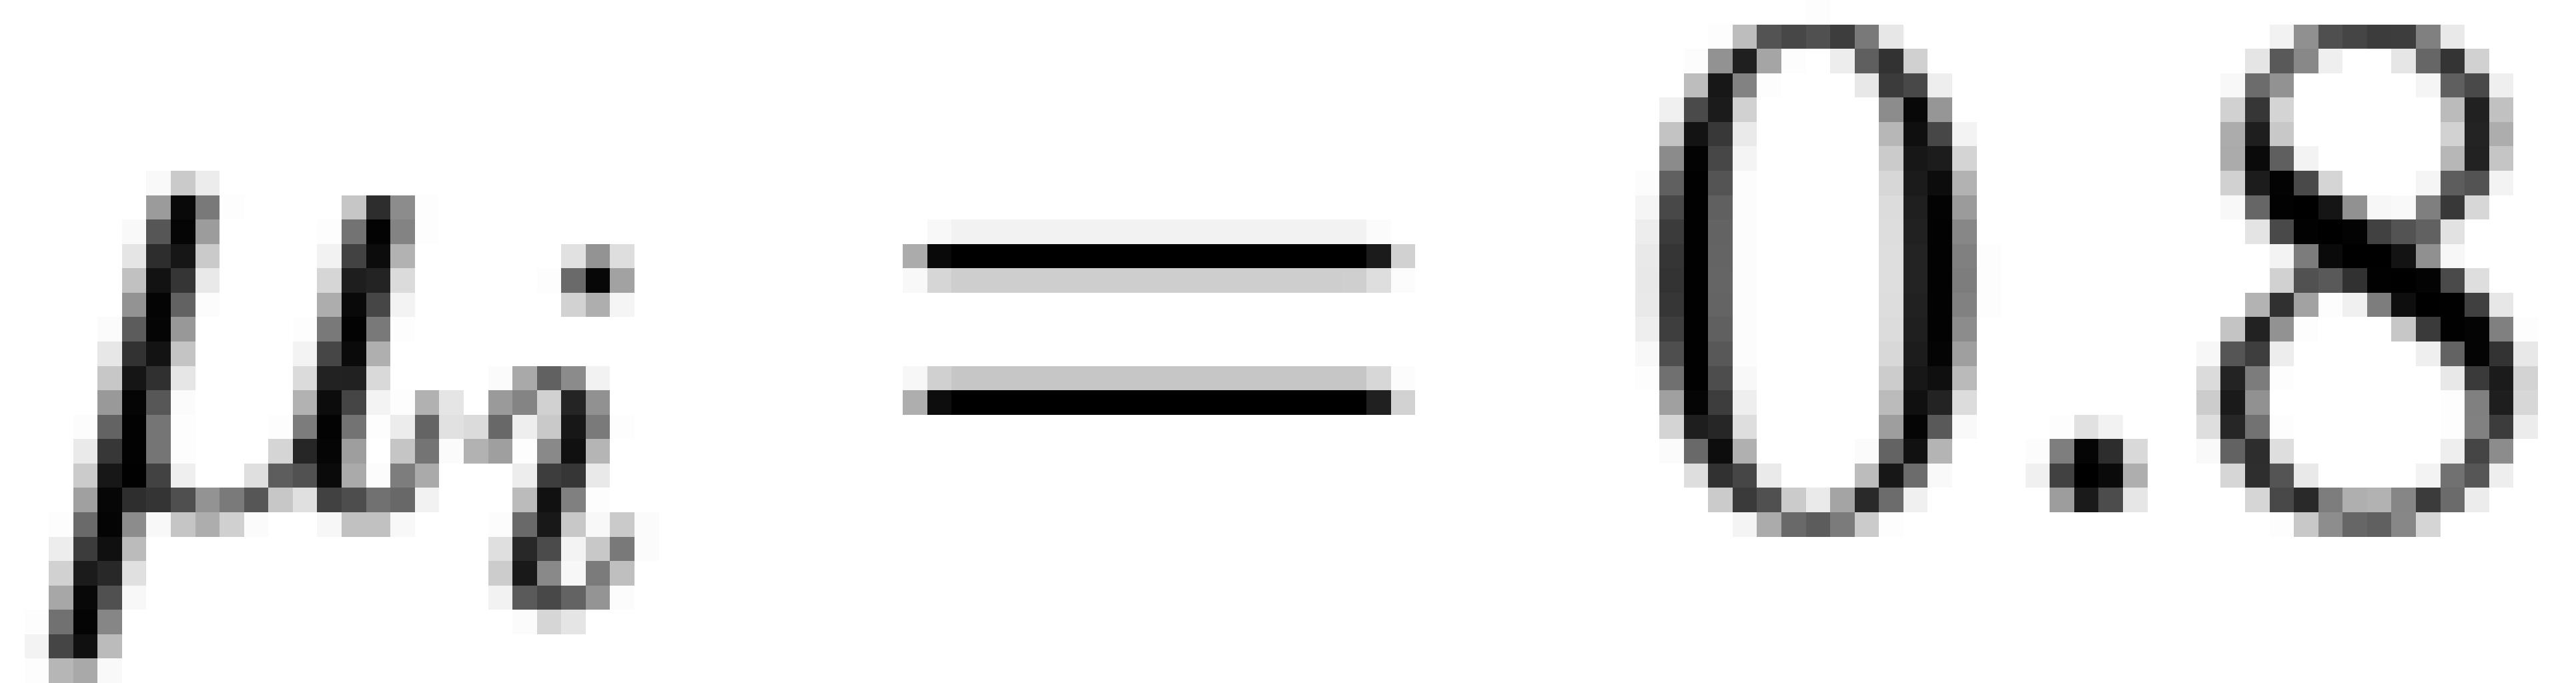

Principal stresses

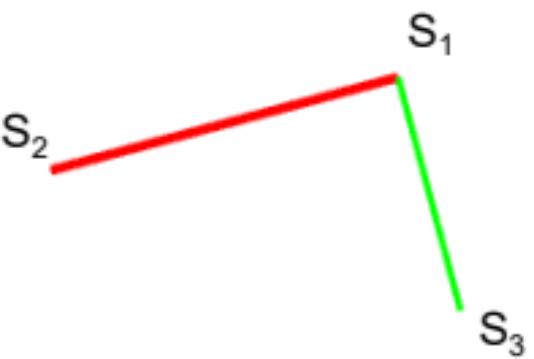


Required UCS ($P_w = P_p$)

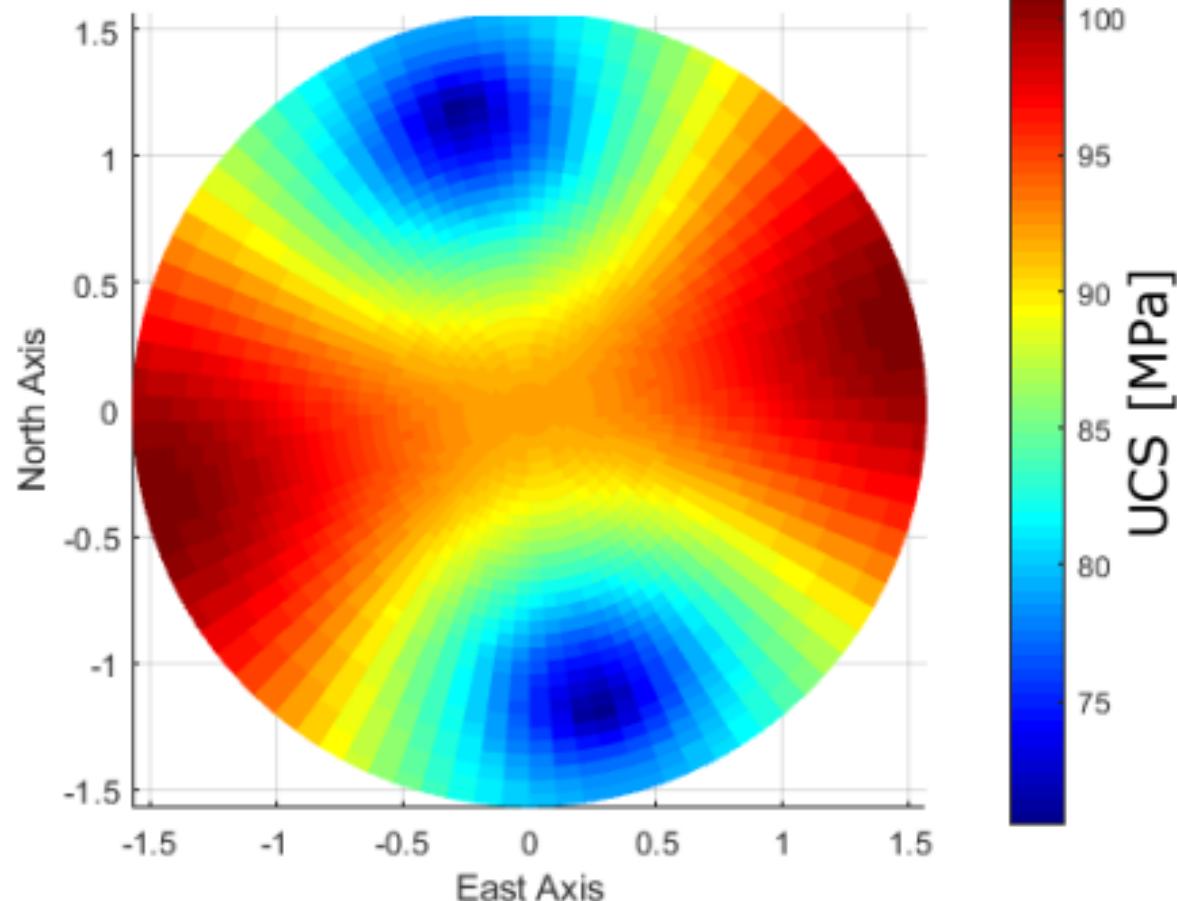







Principal stresses

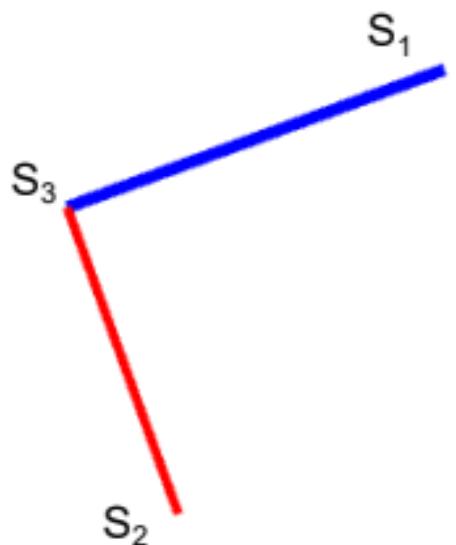


Required UCS ($P_w = P_p$)

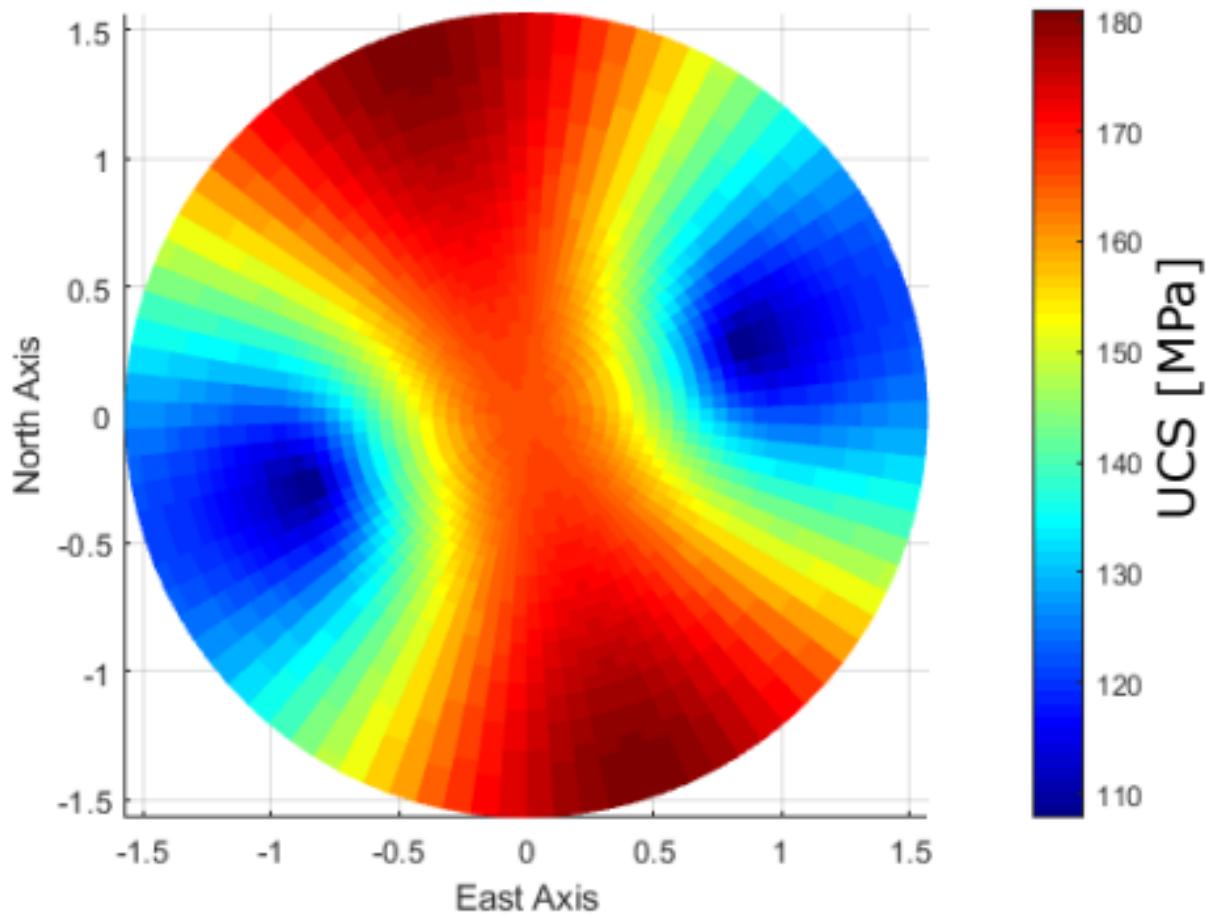


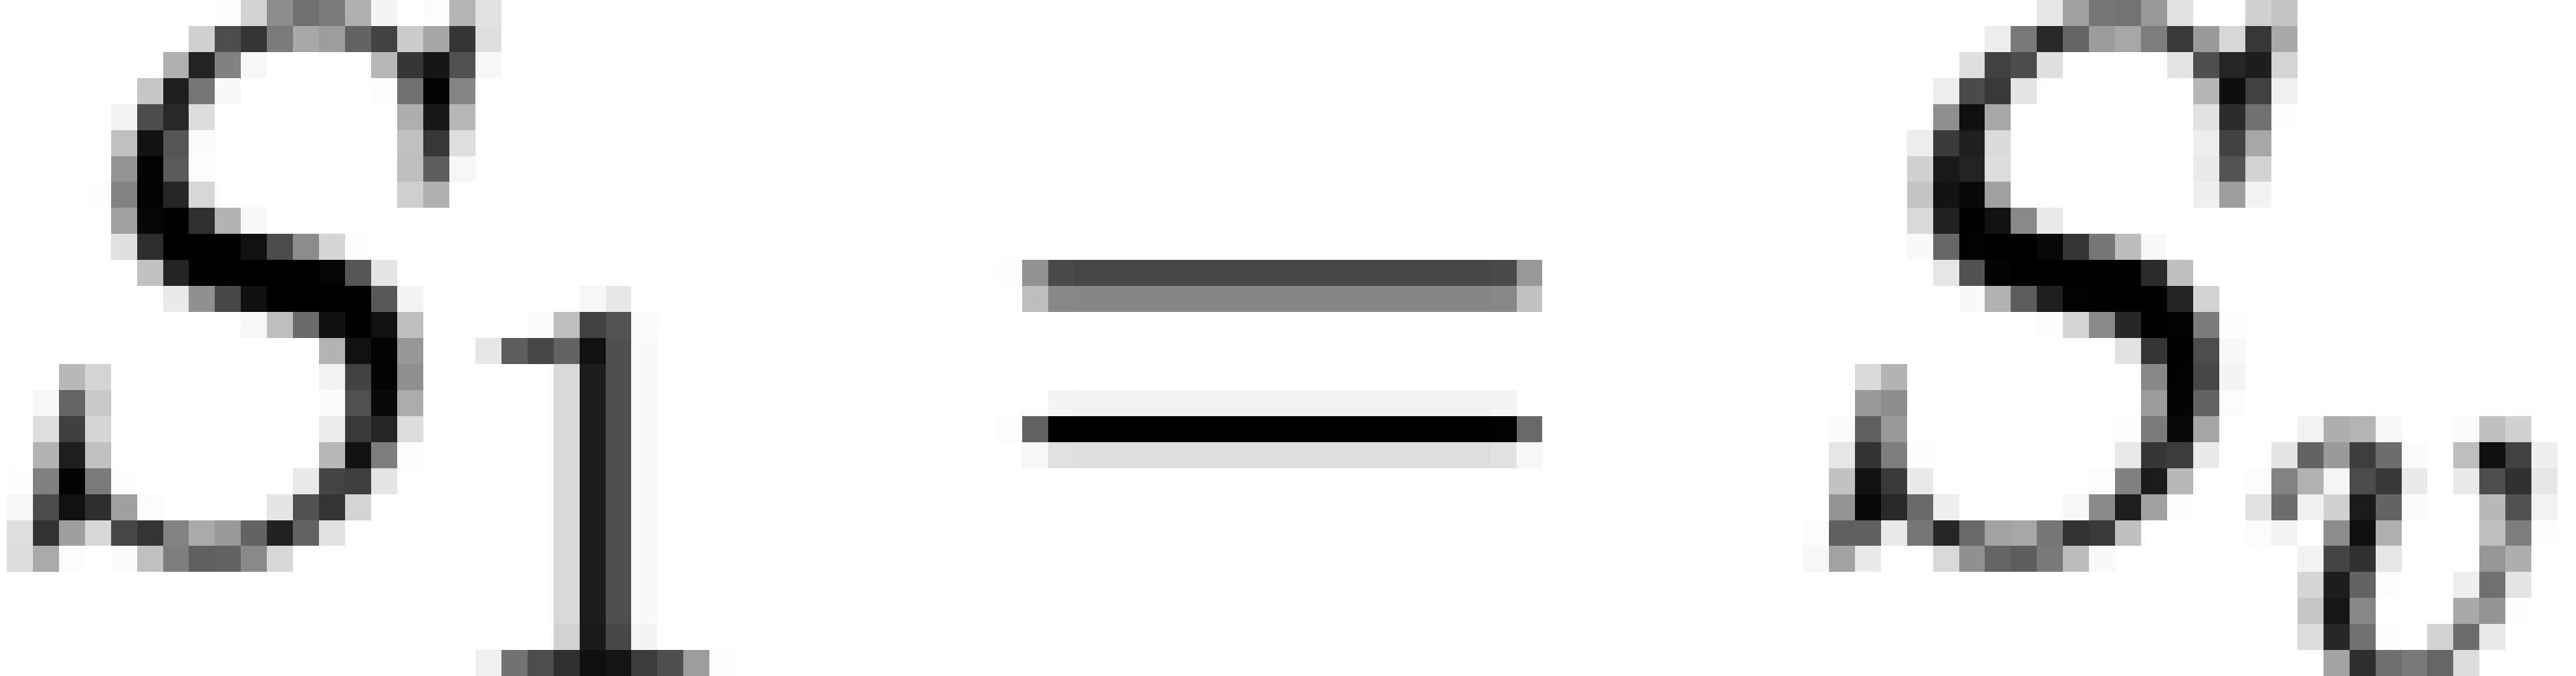

Principal stresses

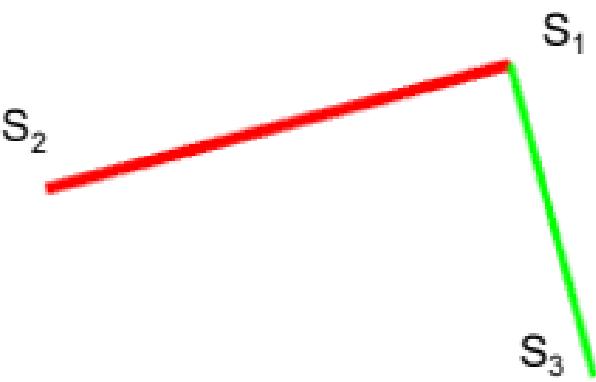

Required T_s ($P_w=35\text{MPa}$)

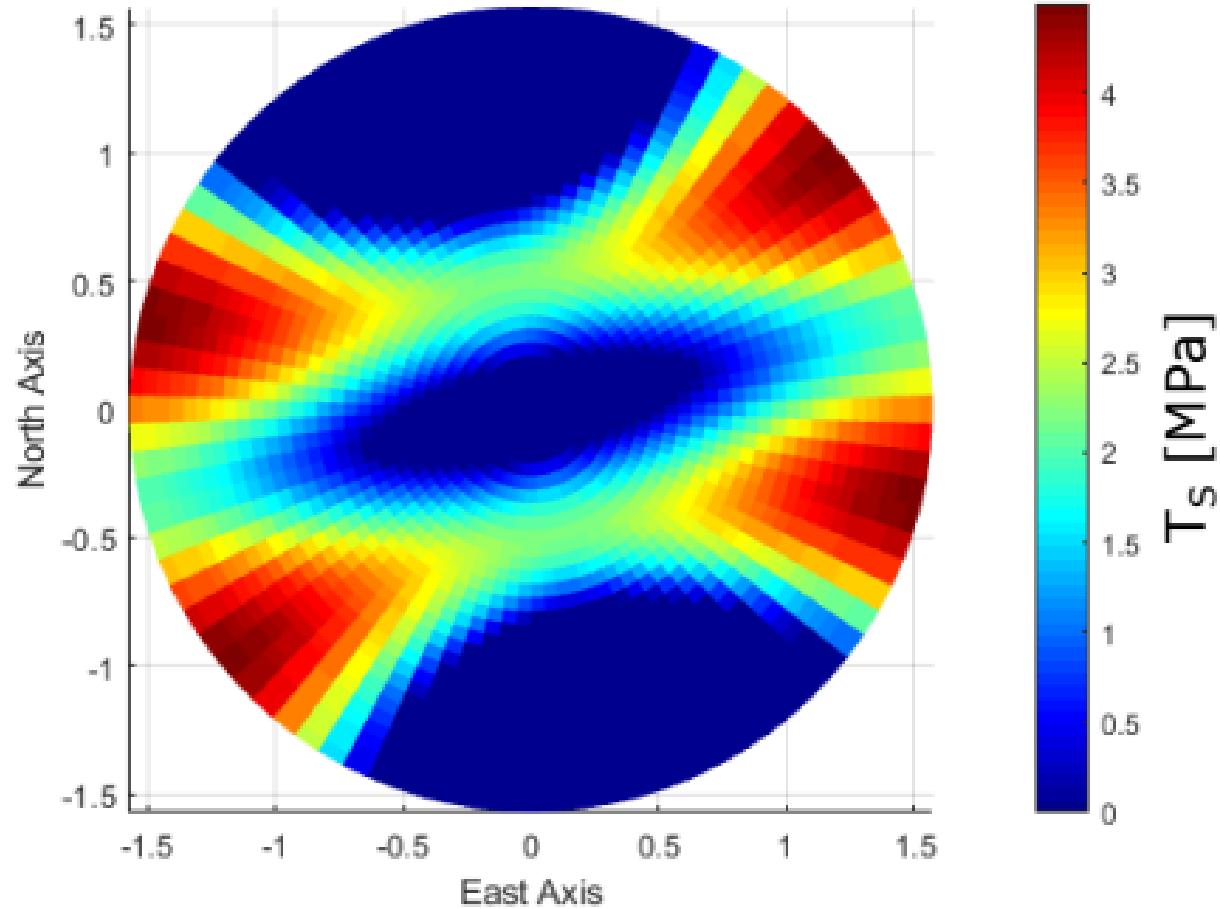



$\delta\Omega$

Δ

$\delta\Omega$

Δ

$\Delta\Omega$


$\Delta\Omega$

$\Delta\Omega$













Δ $\sigma_{\theta\theta}$

$=$

$\alpha \Gamma B^{\dagger} \Delta^{\dagger} \Gamma$

$1 - \sqrt{ }$

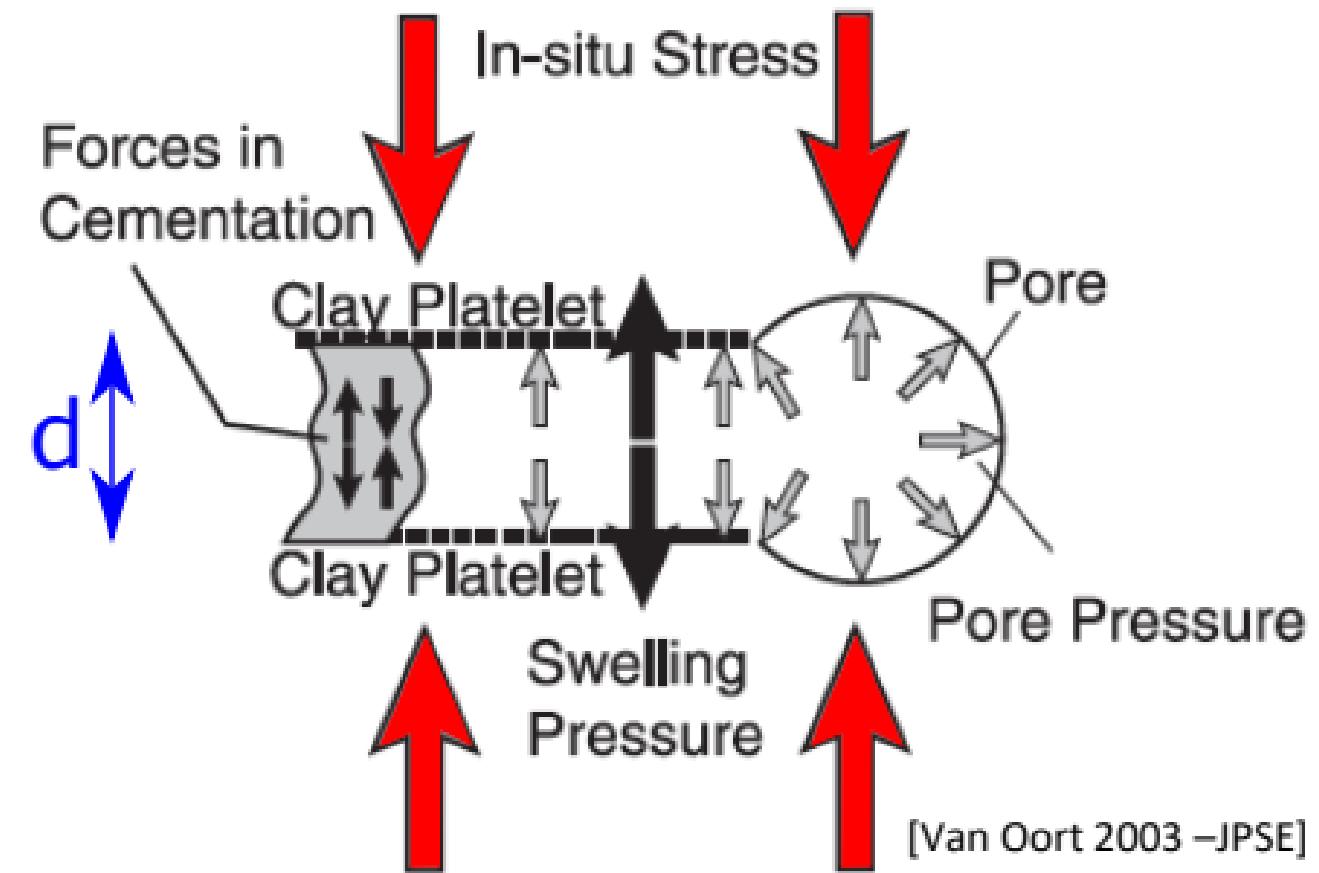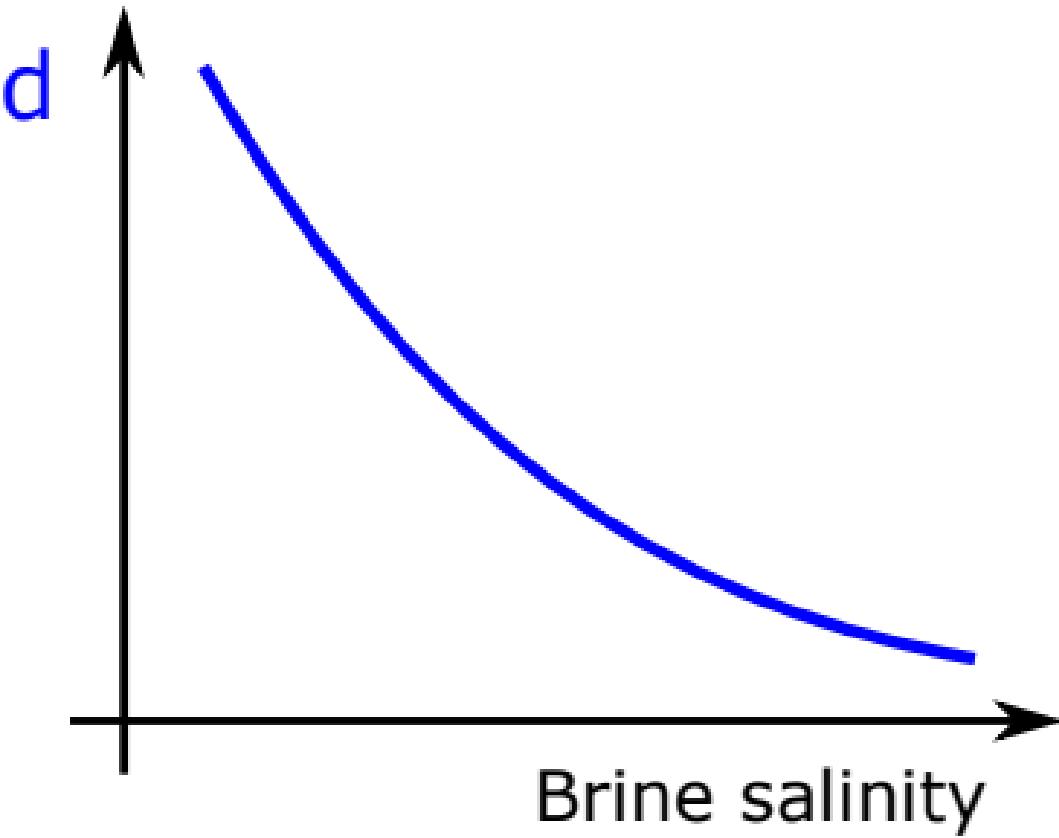



Norway shale






After 2hs exposition





CPGE – M. Chenevert

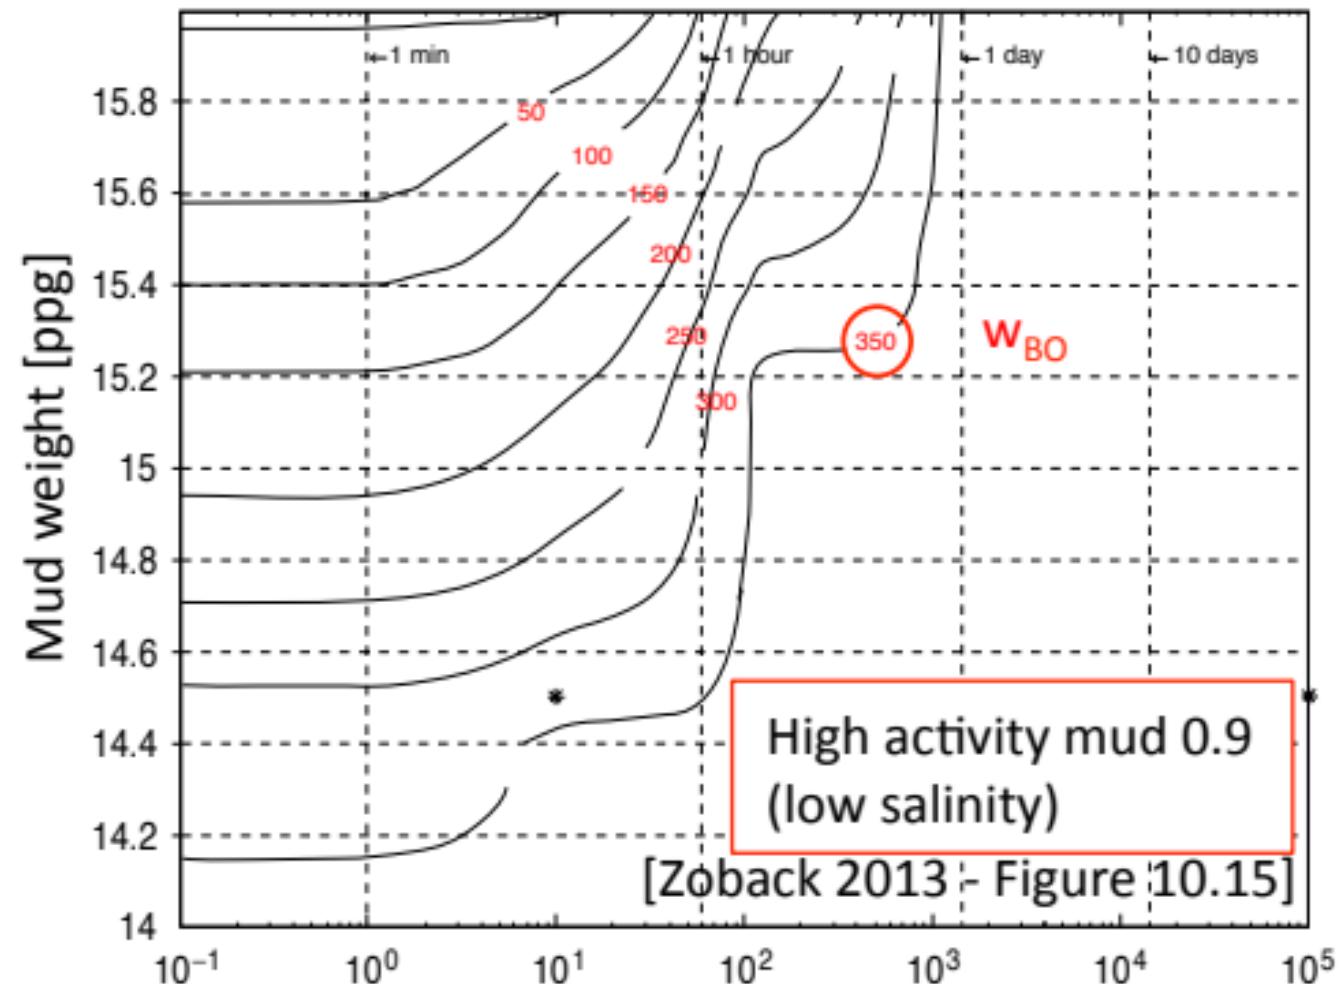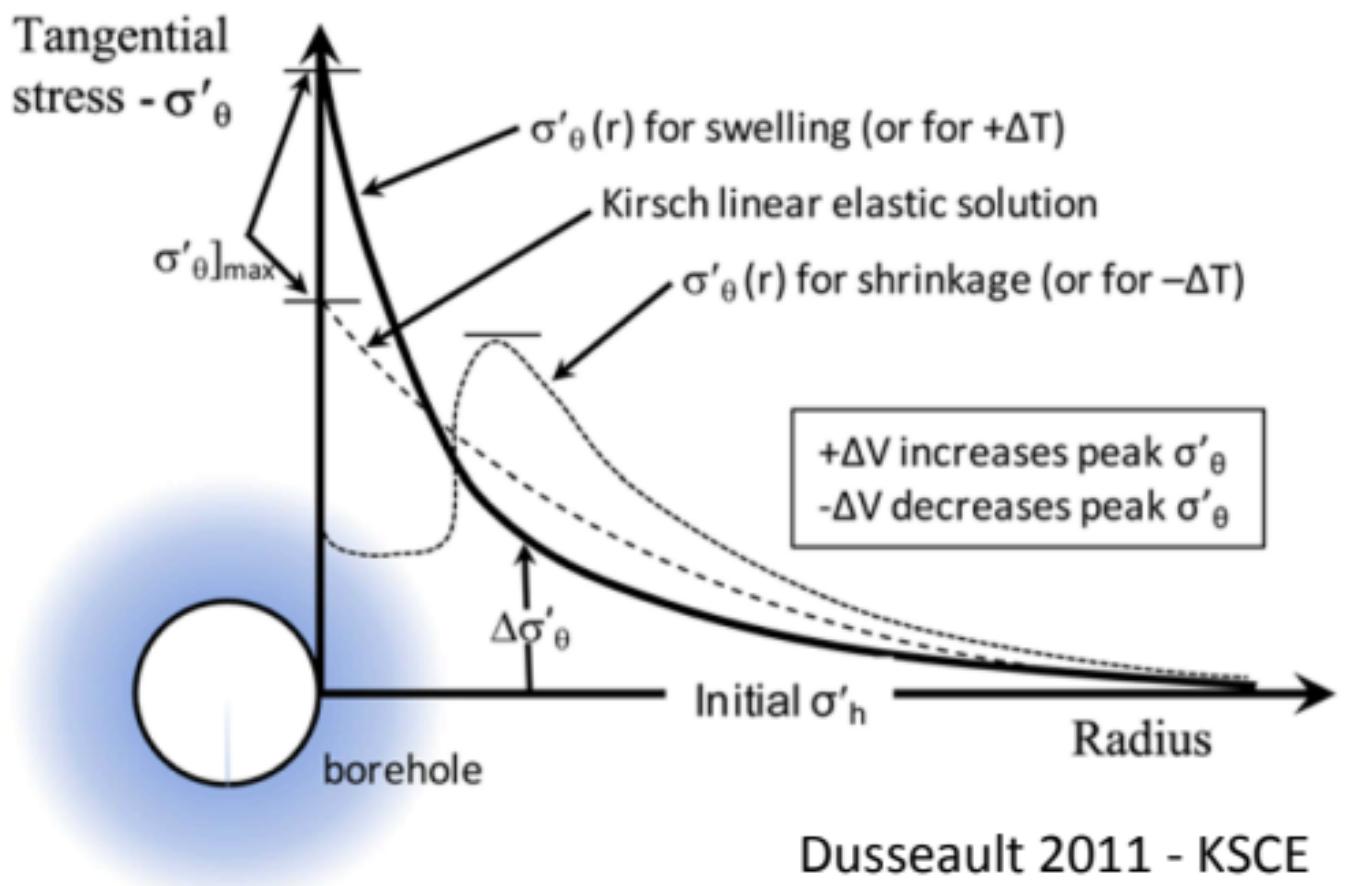







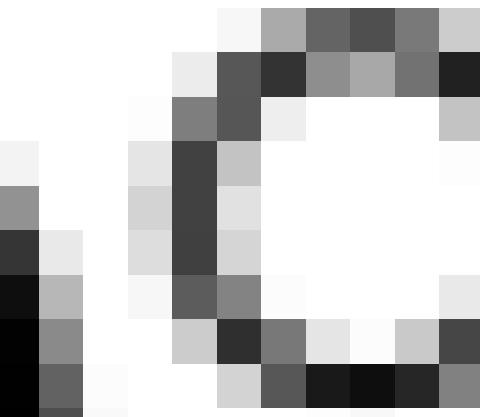
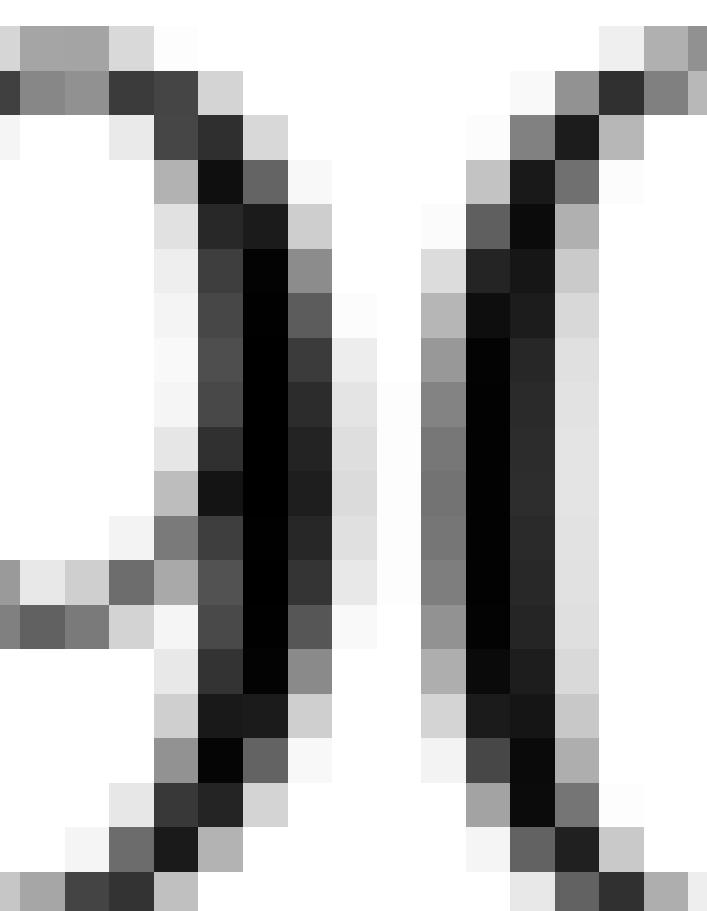
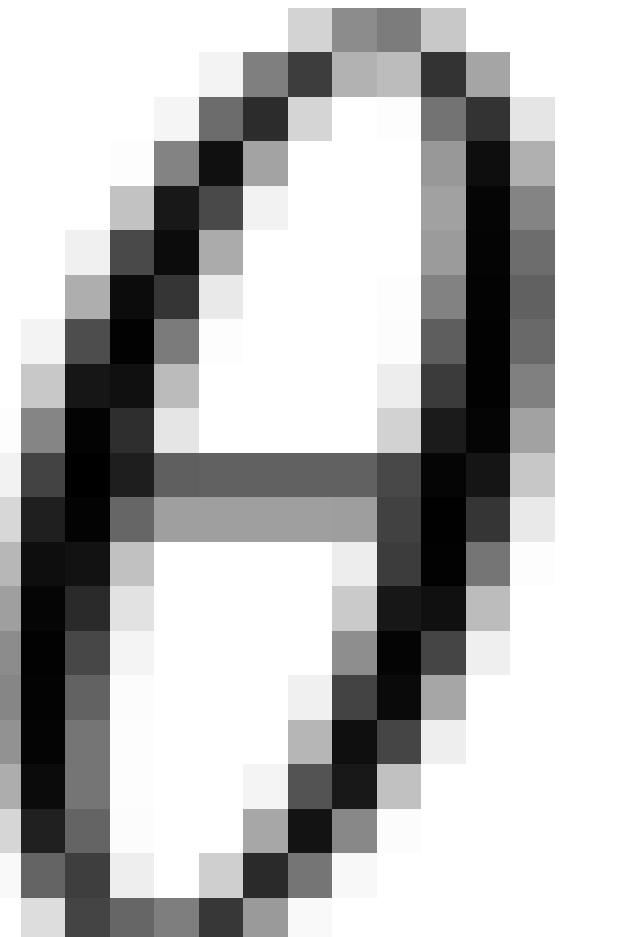



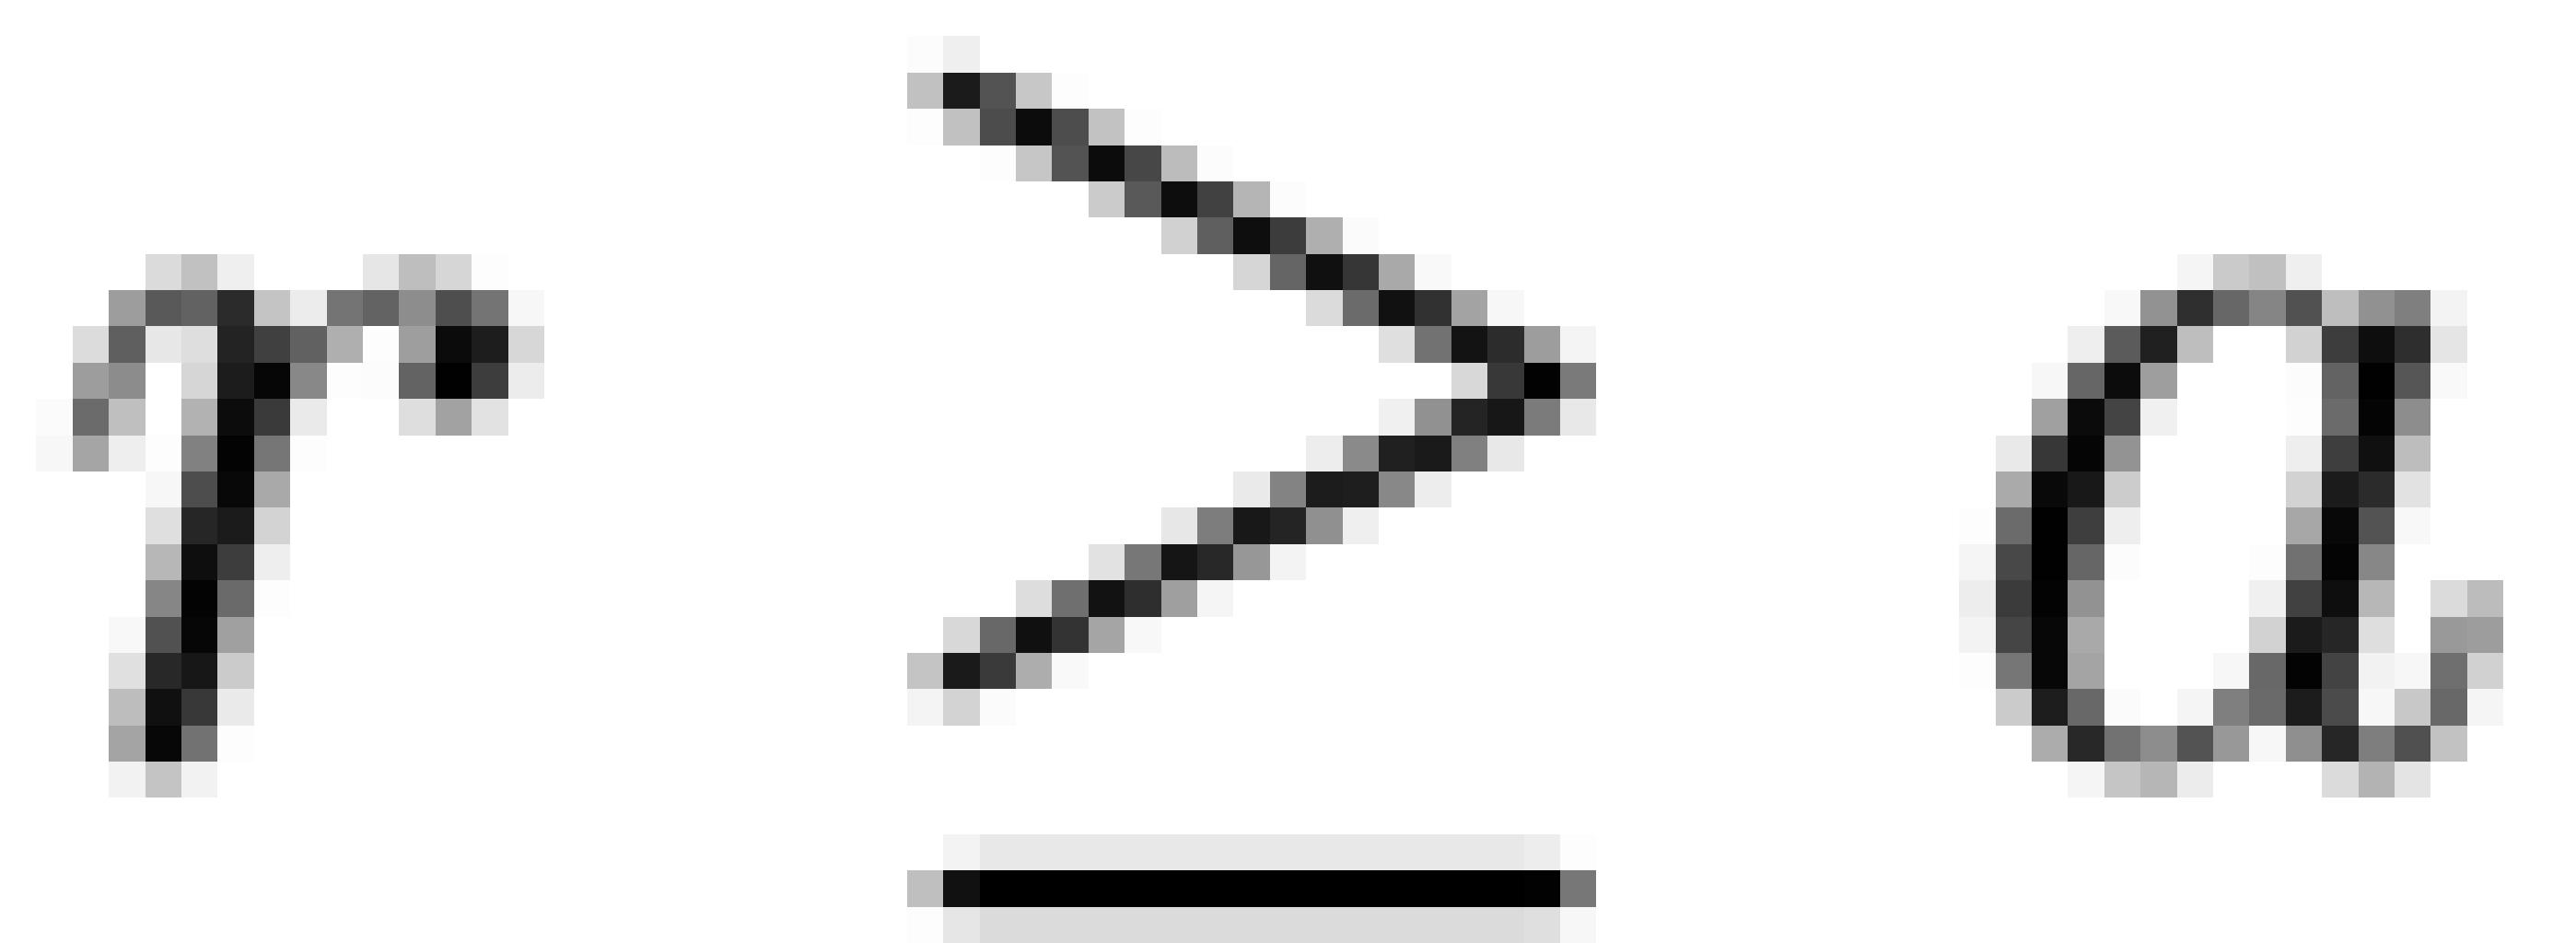


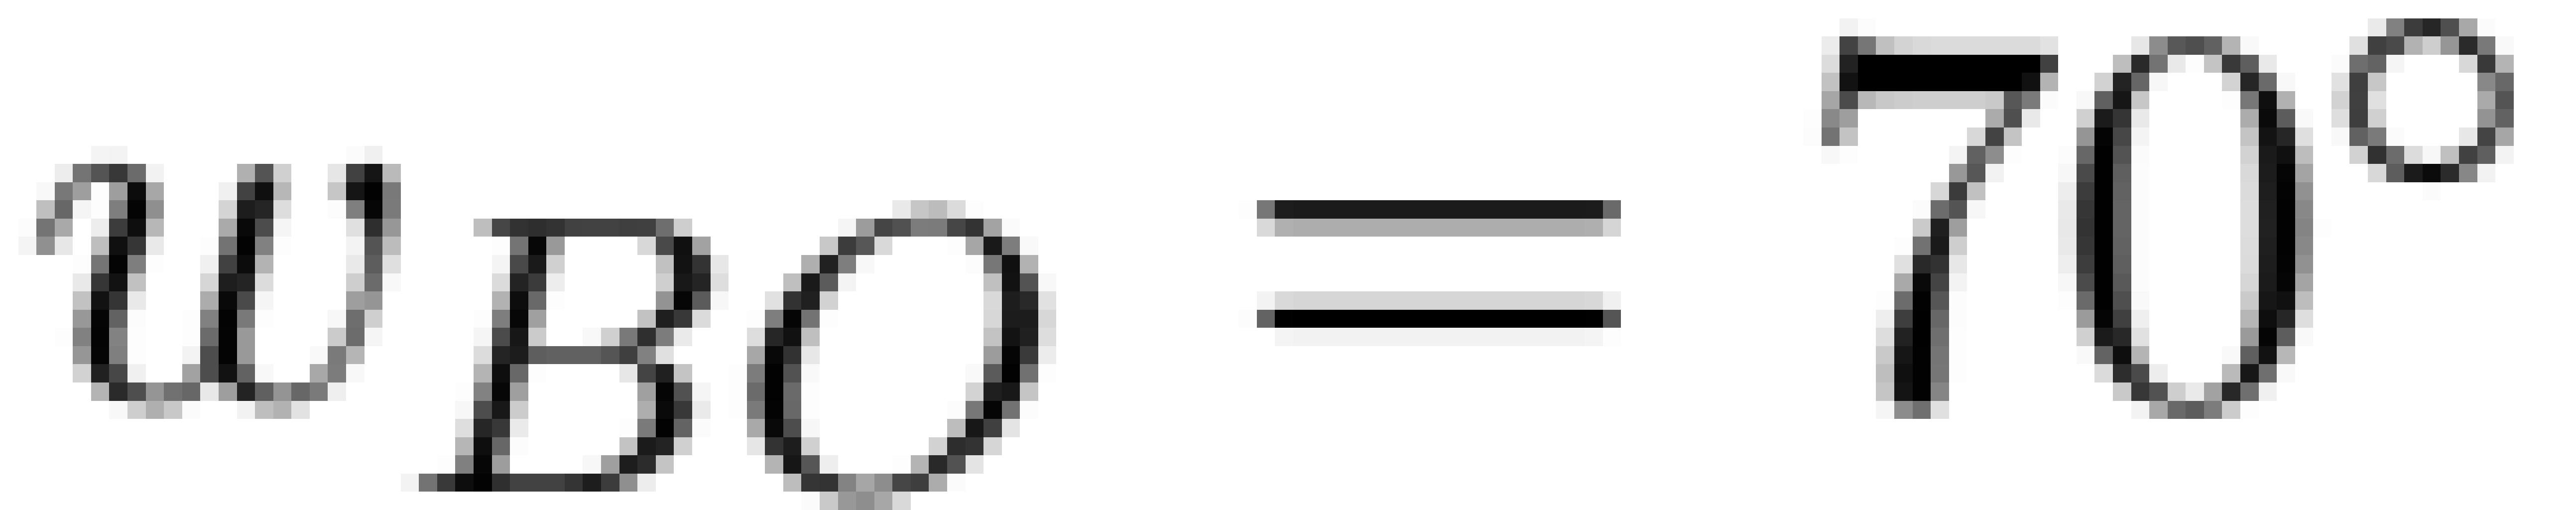




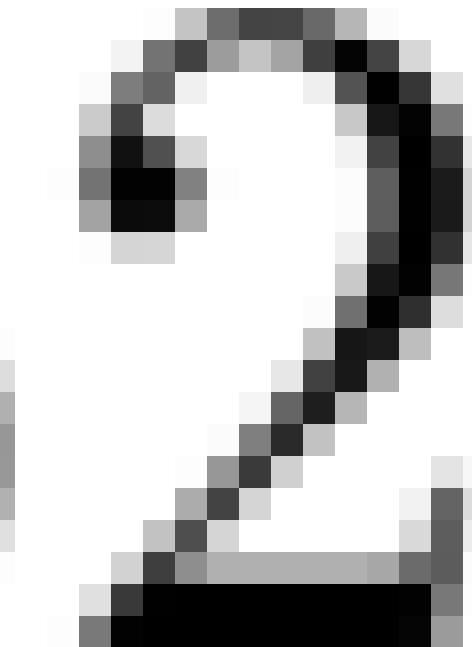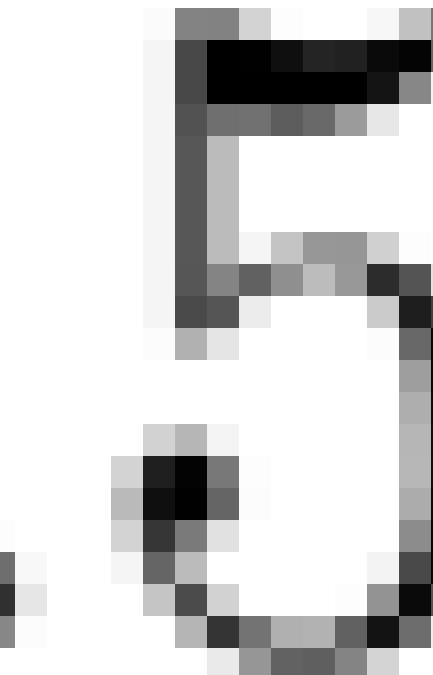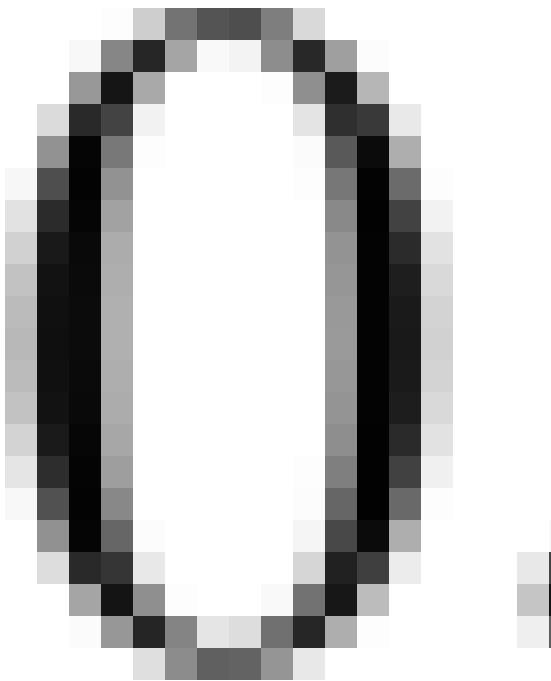


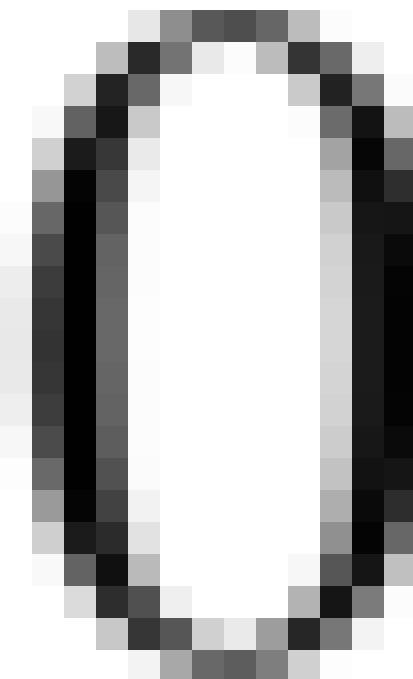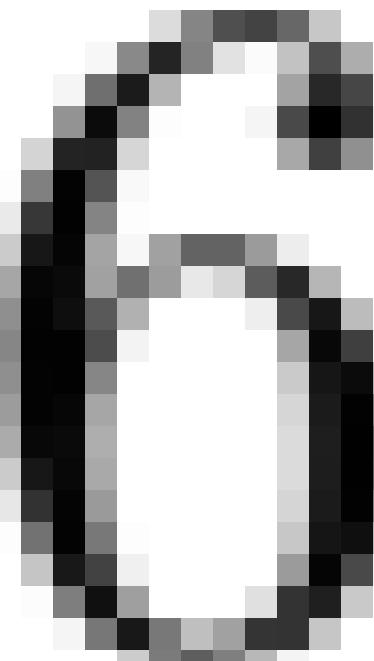
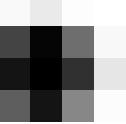
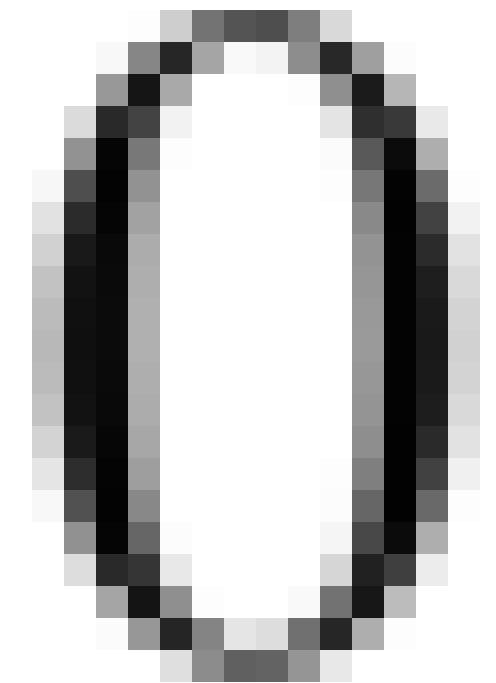


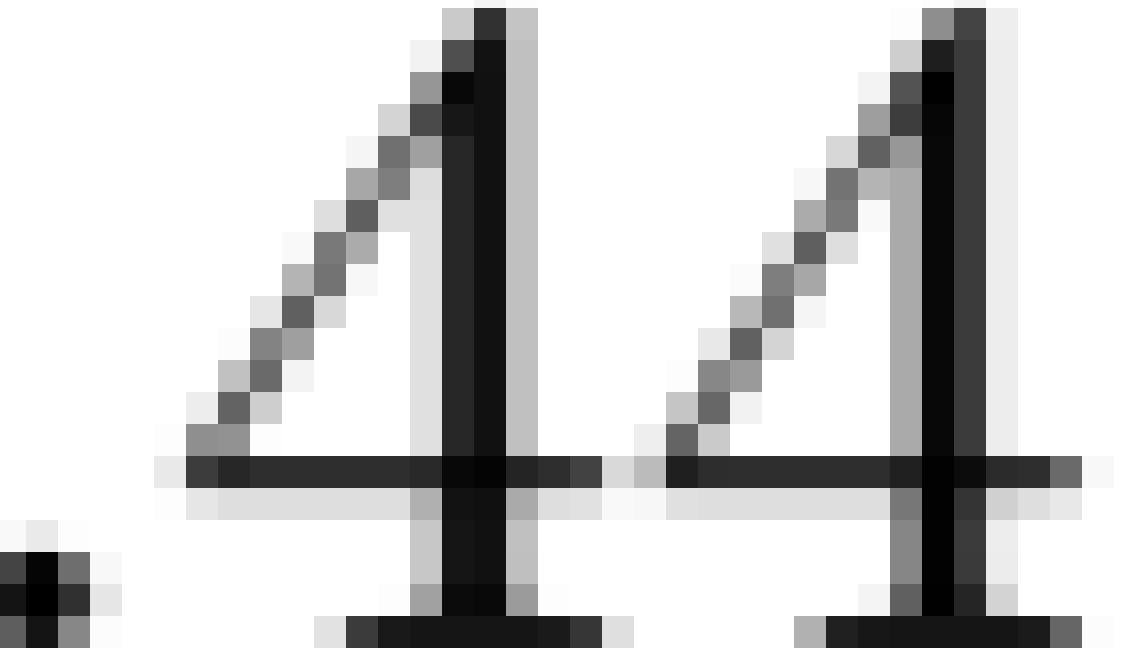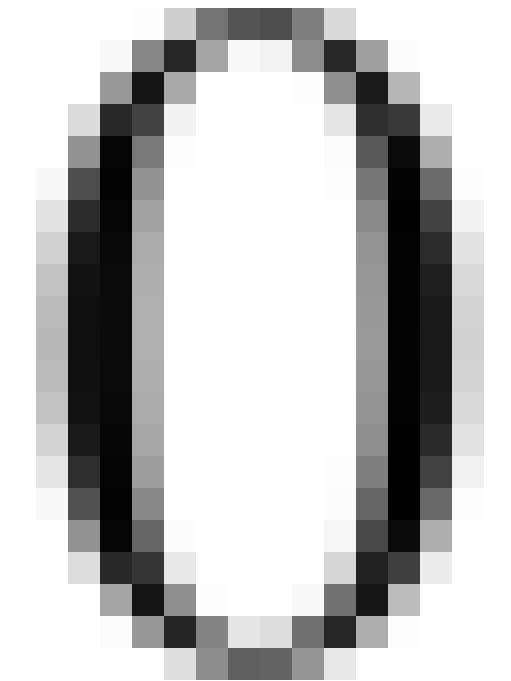






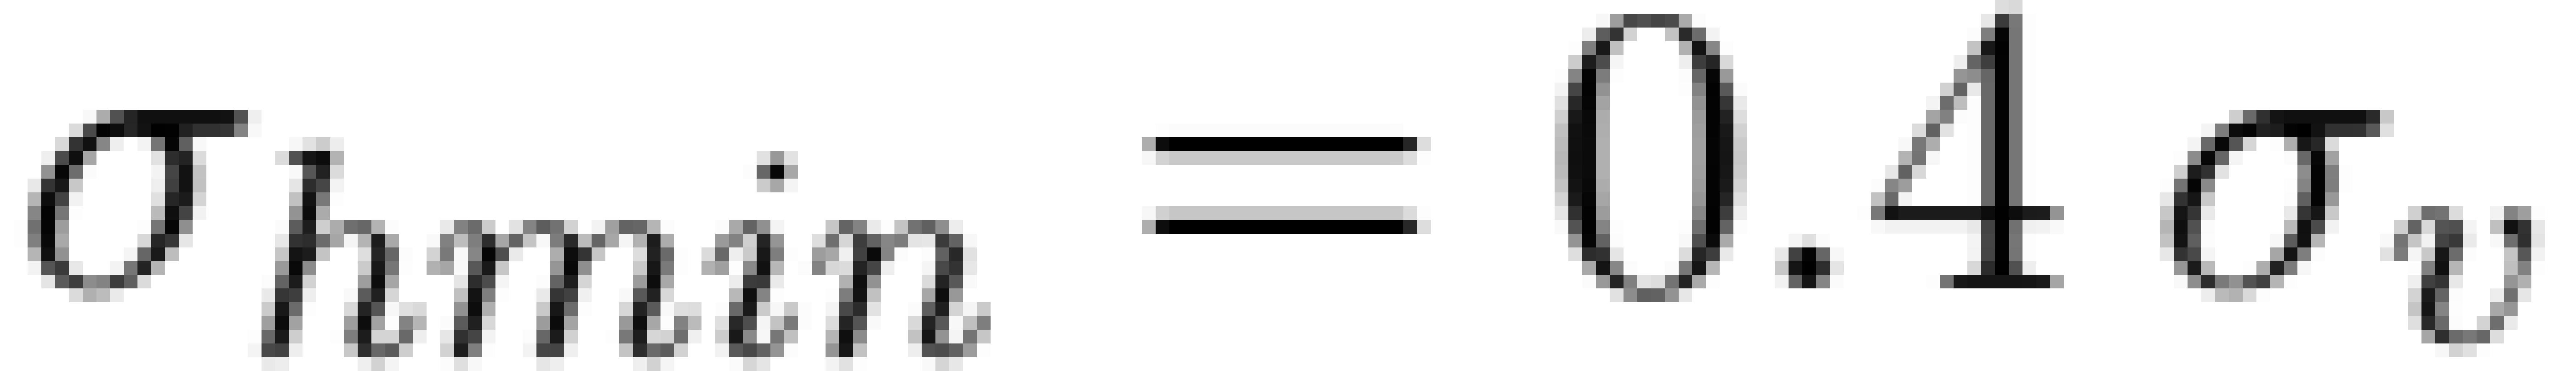

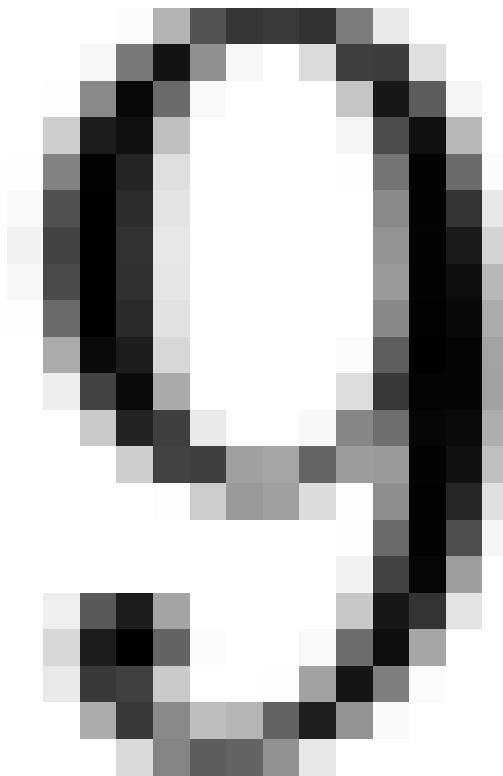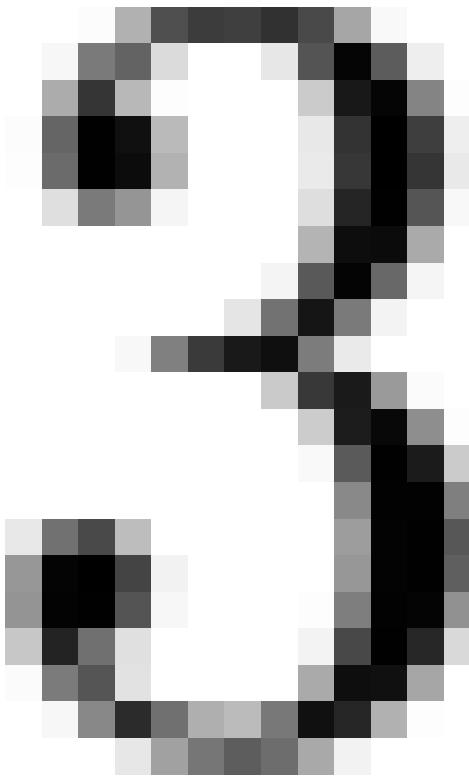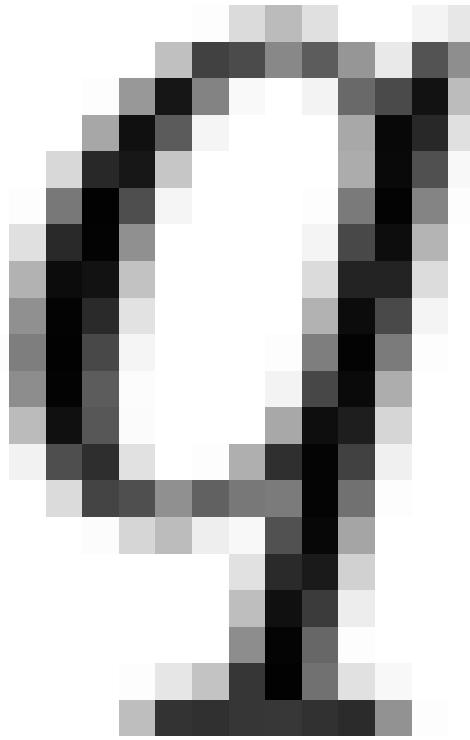



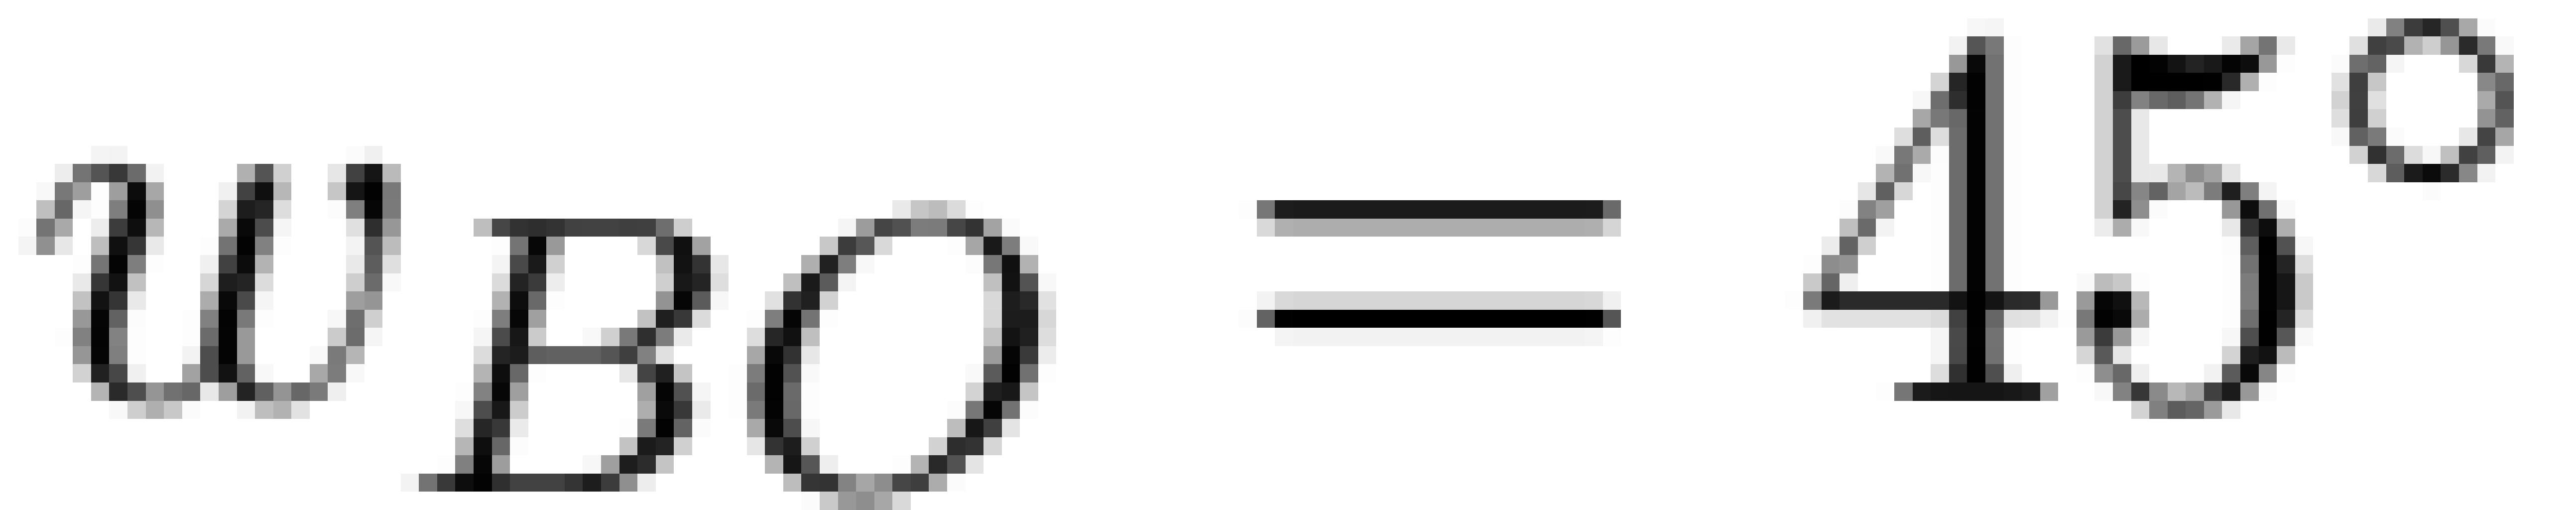













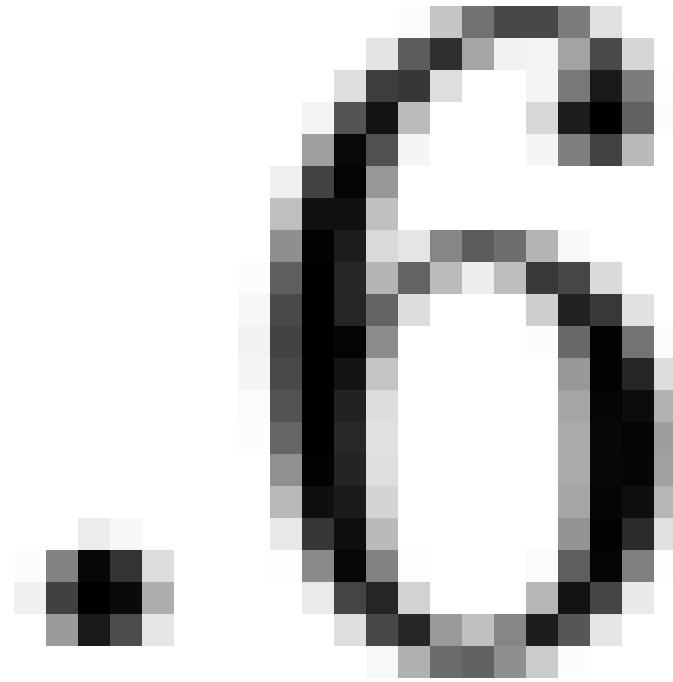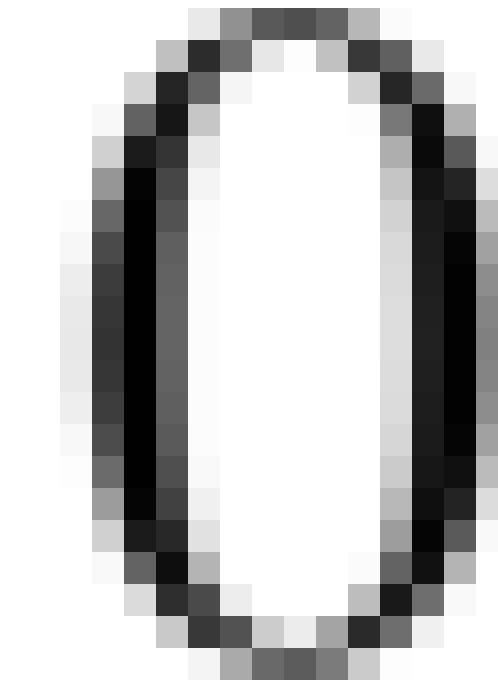

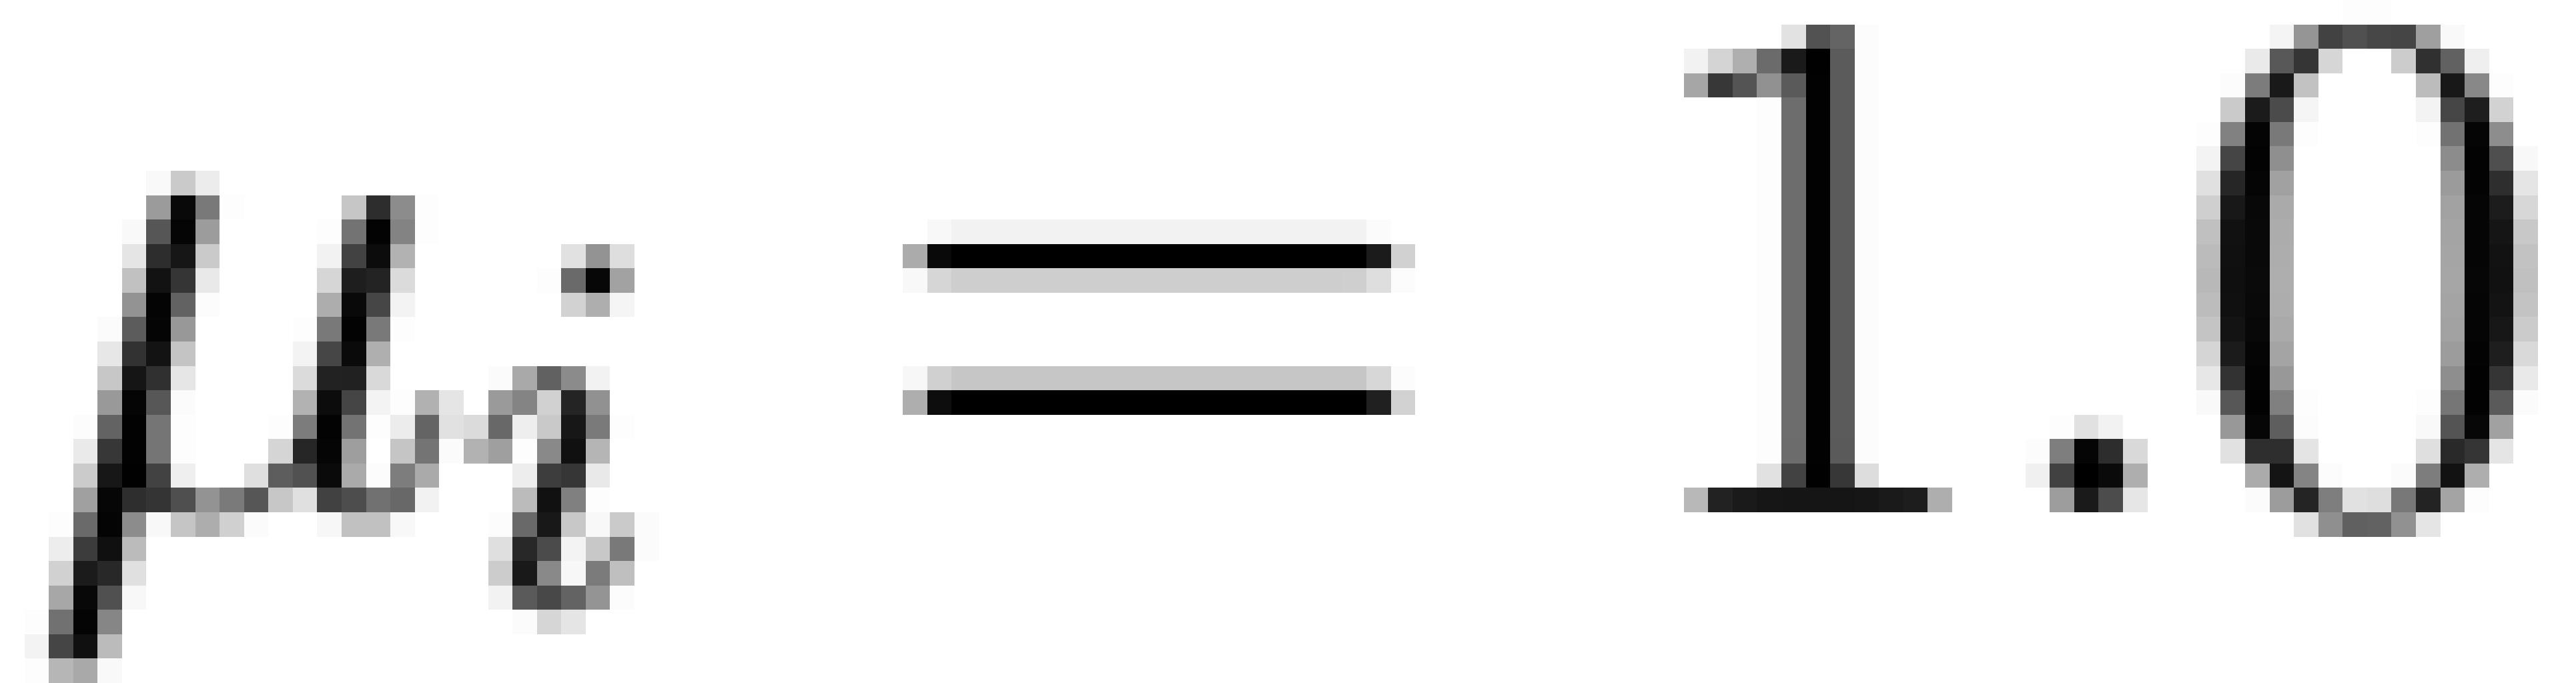

PLUTONS & VOLCANIC LANDFORMS

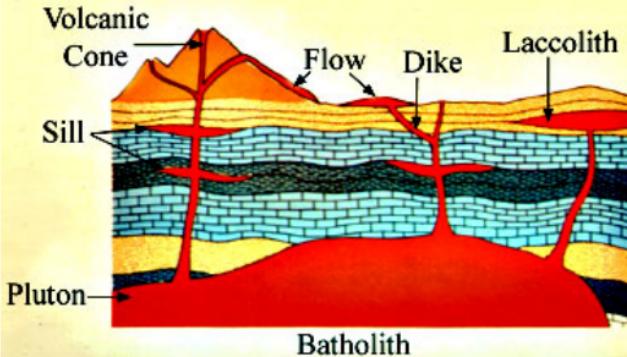

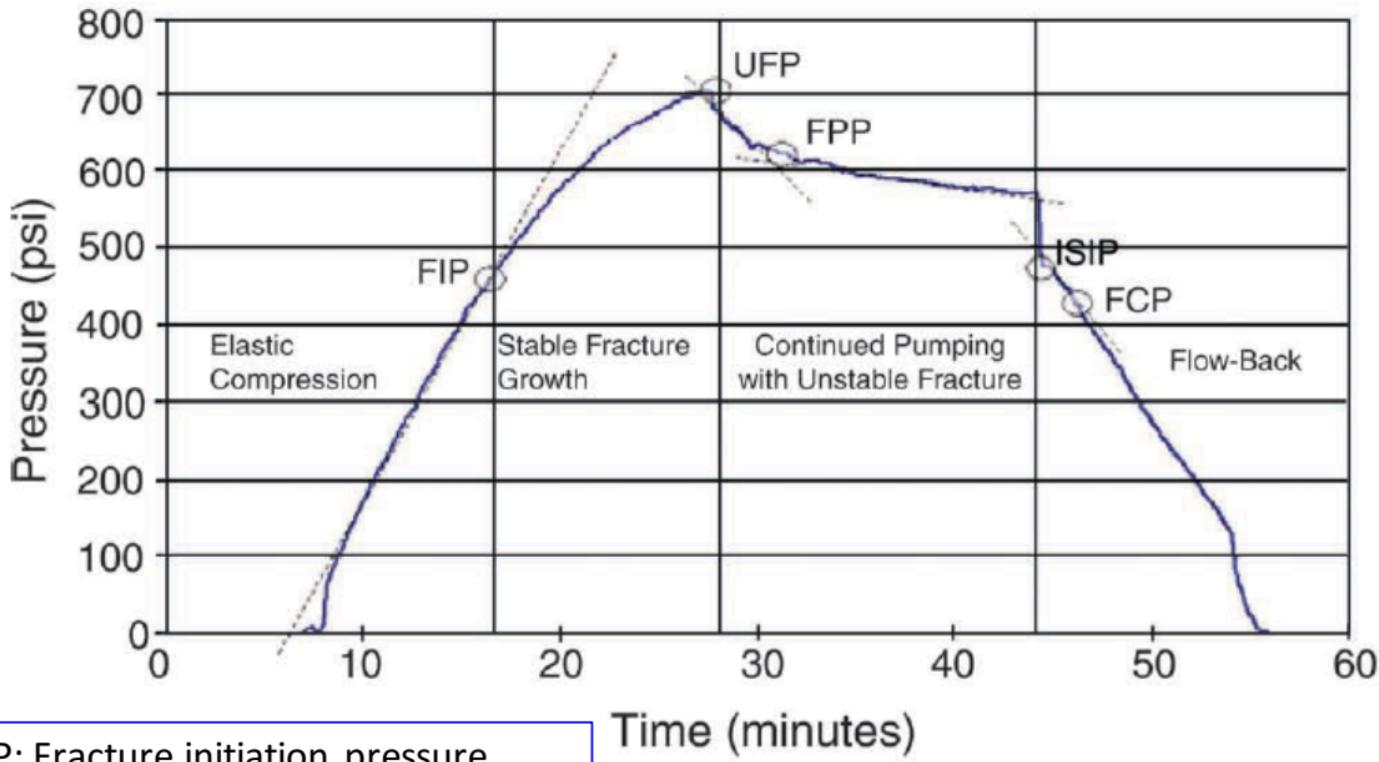

FIP: Fracture initiation pressure

UFP: Unstable fracture pressure

FPP: Fracture propagation pressure



ISIP: Instantaneous shut-in pressure


FCP: Fracture closure pressure


Time (minutes)




$$\Delta V = q \Delta t$$


[van Oort and Vargo, 2008]

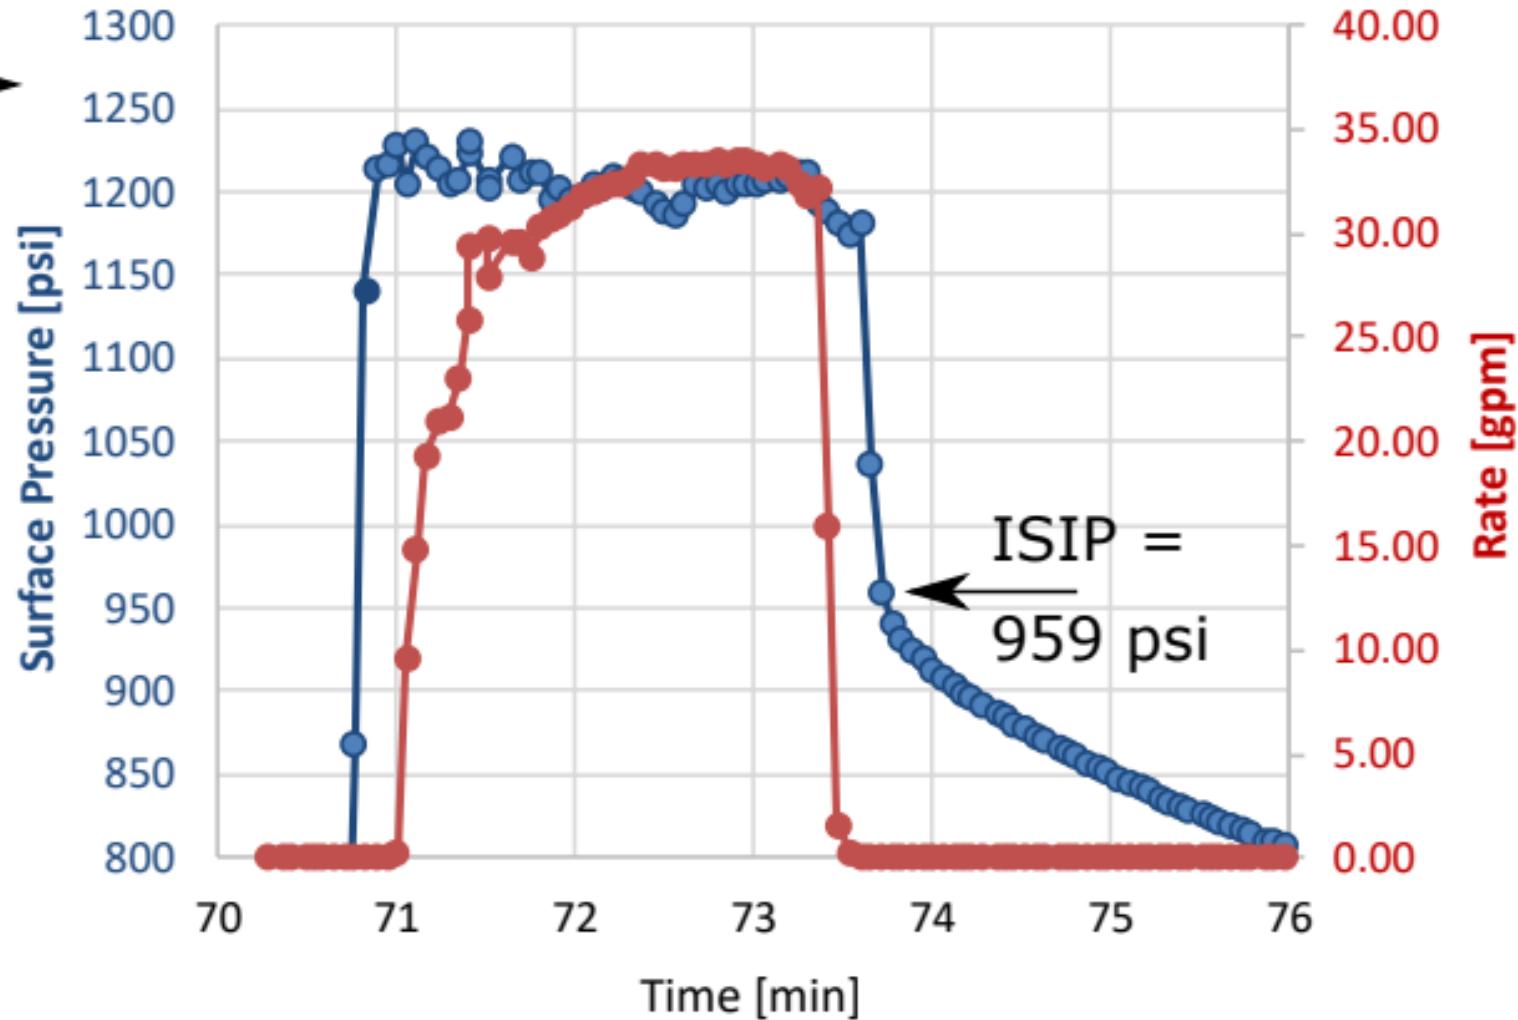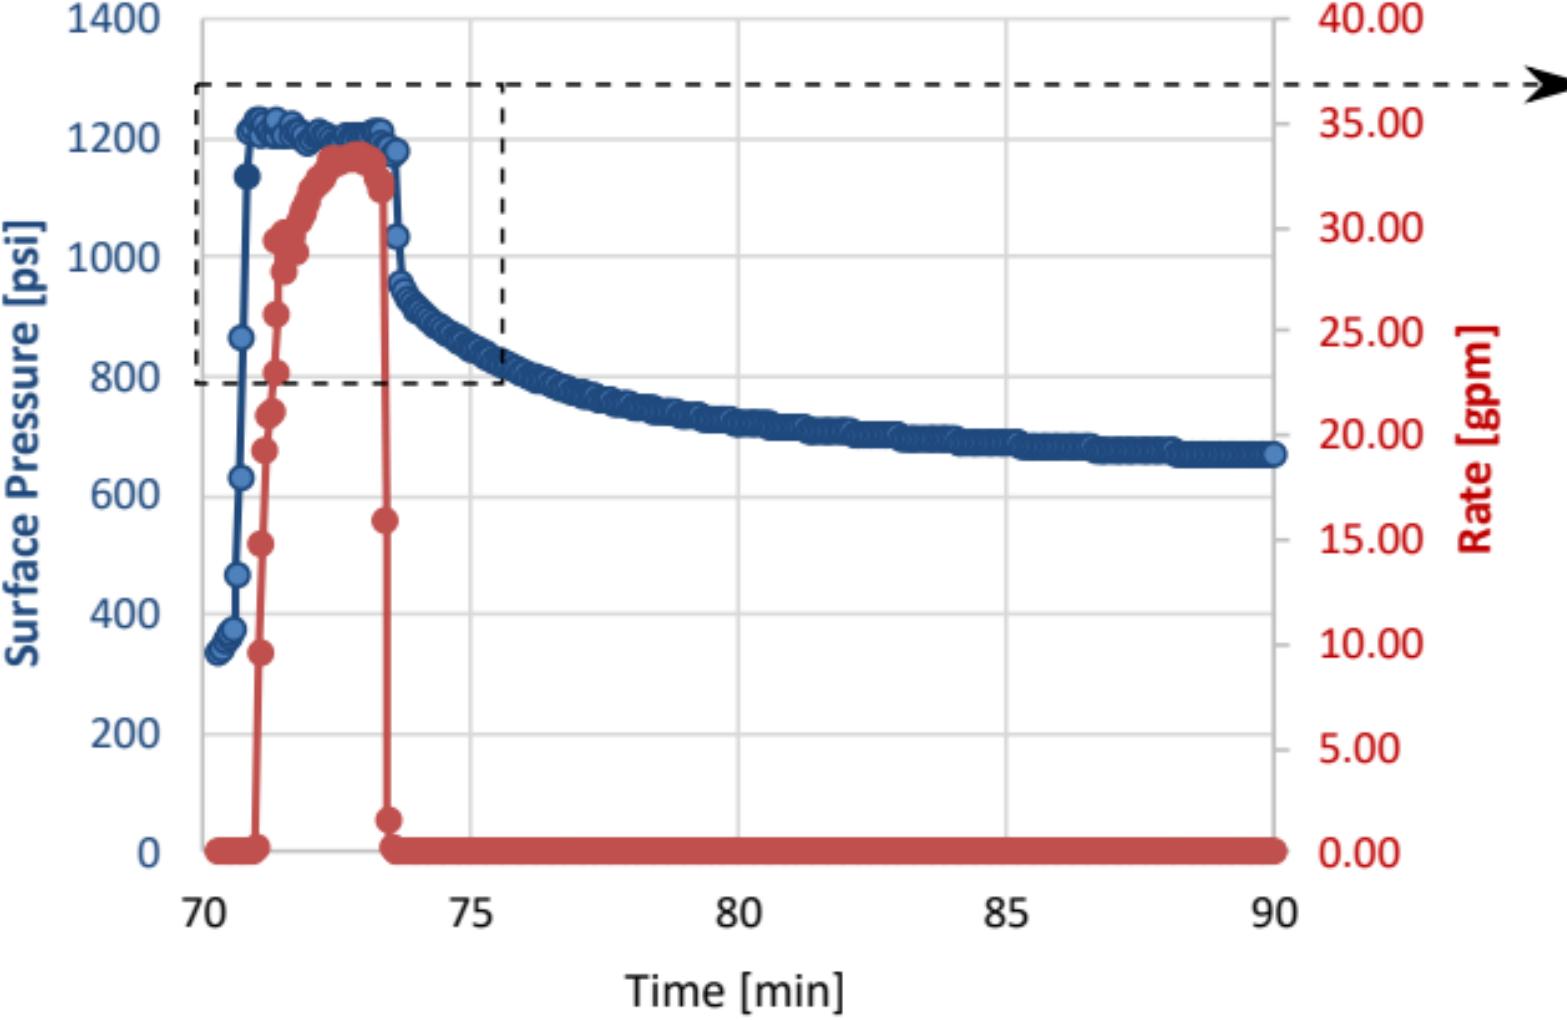

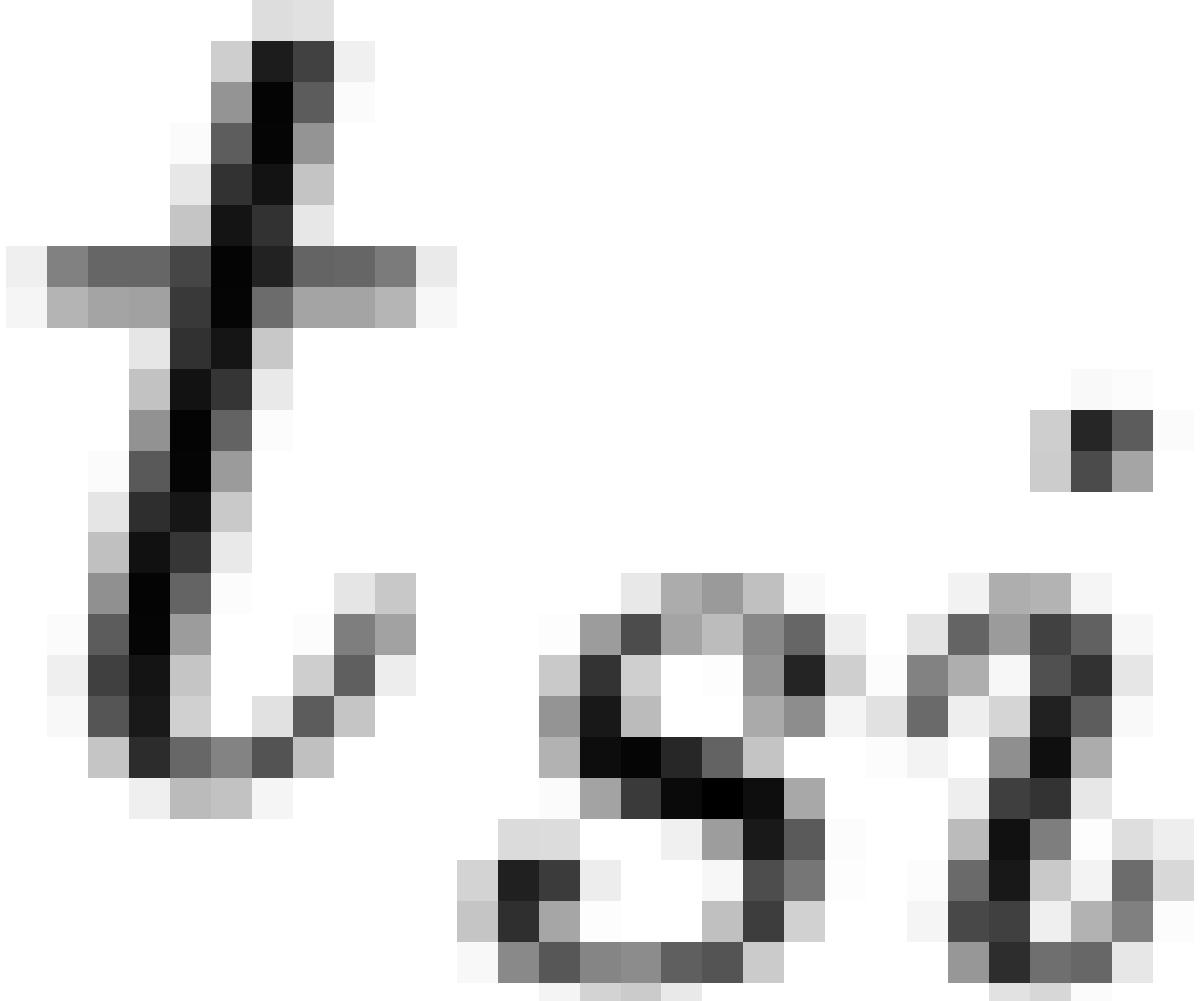


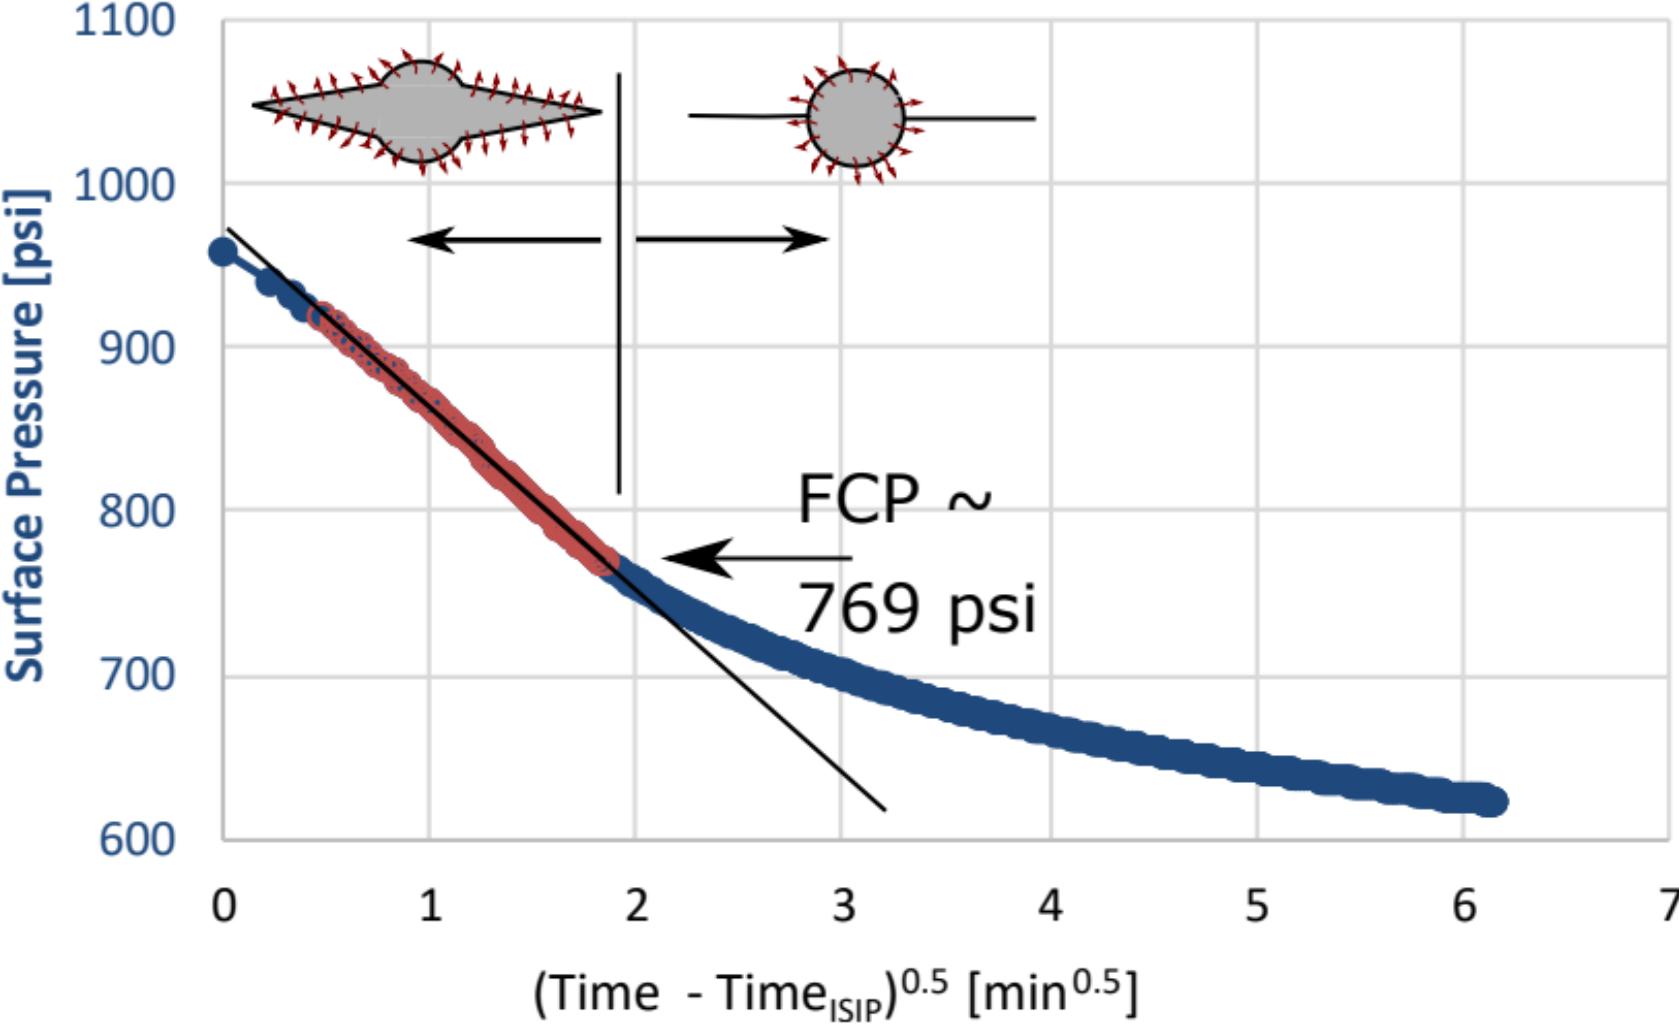

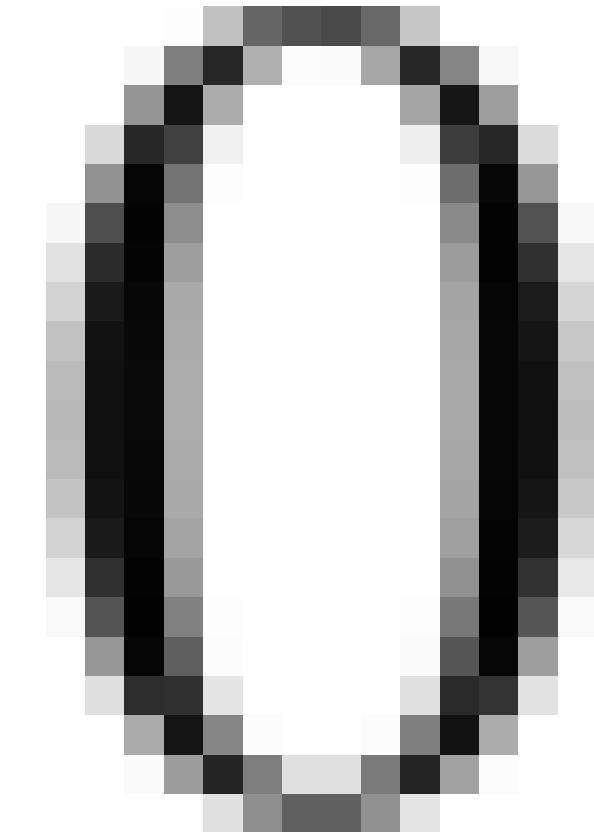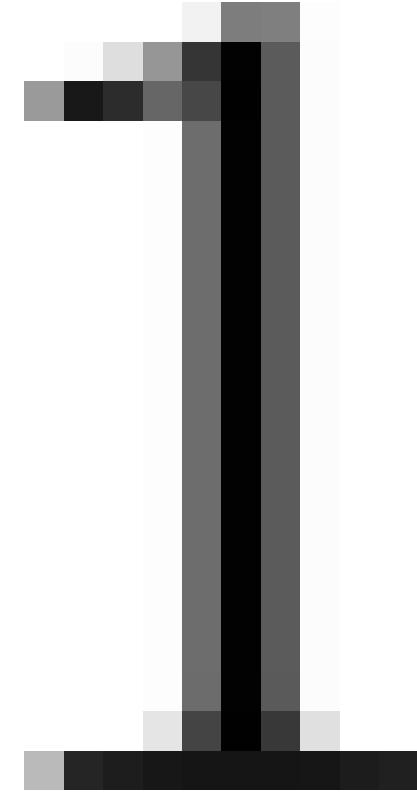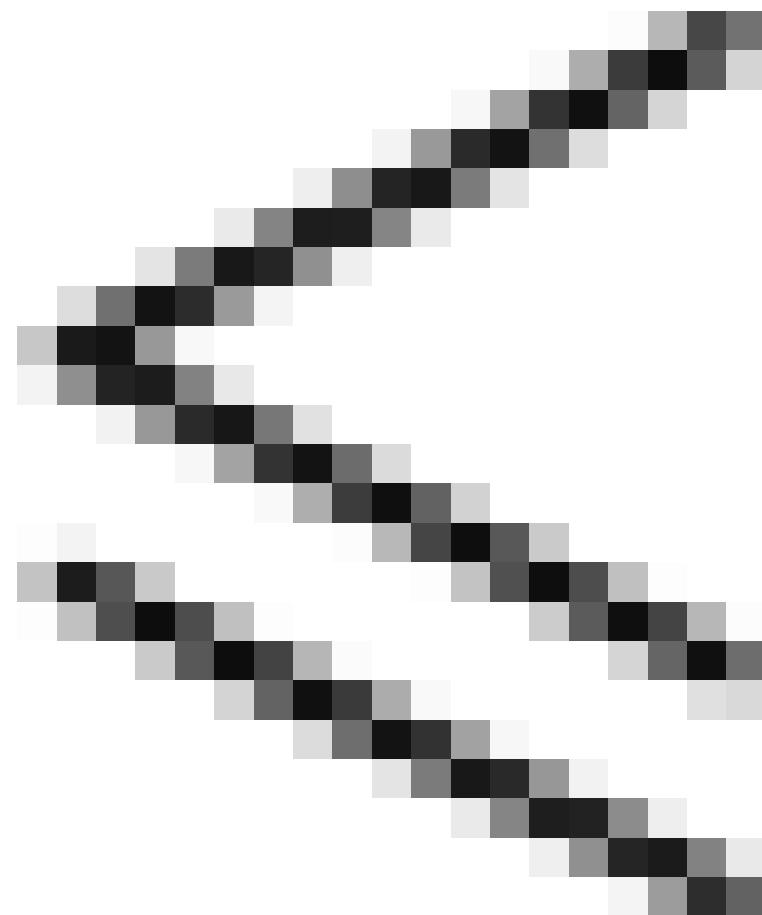

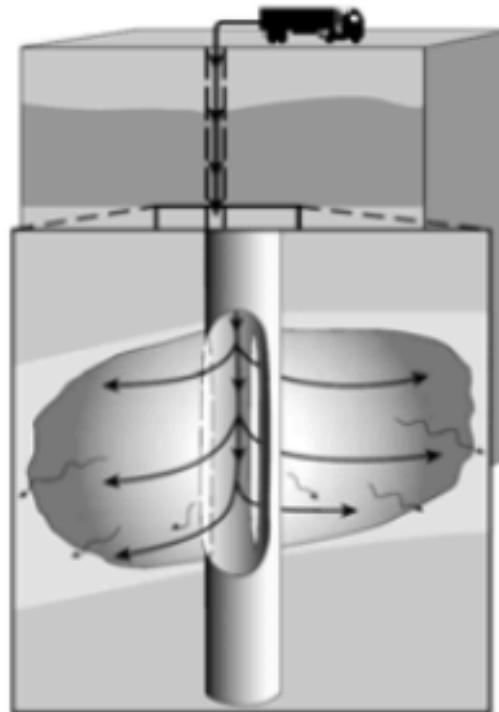



Side View

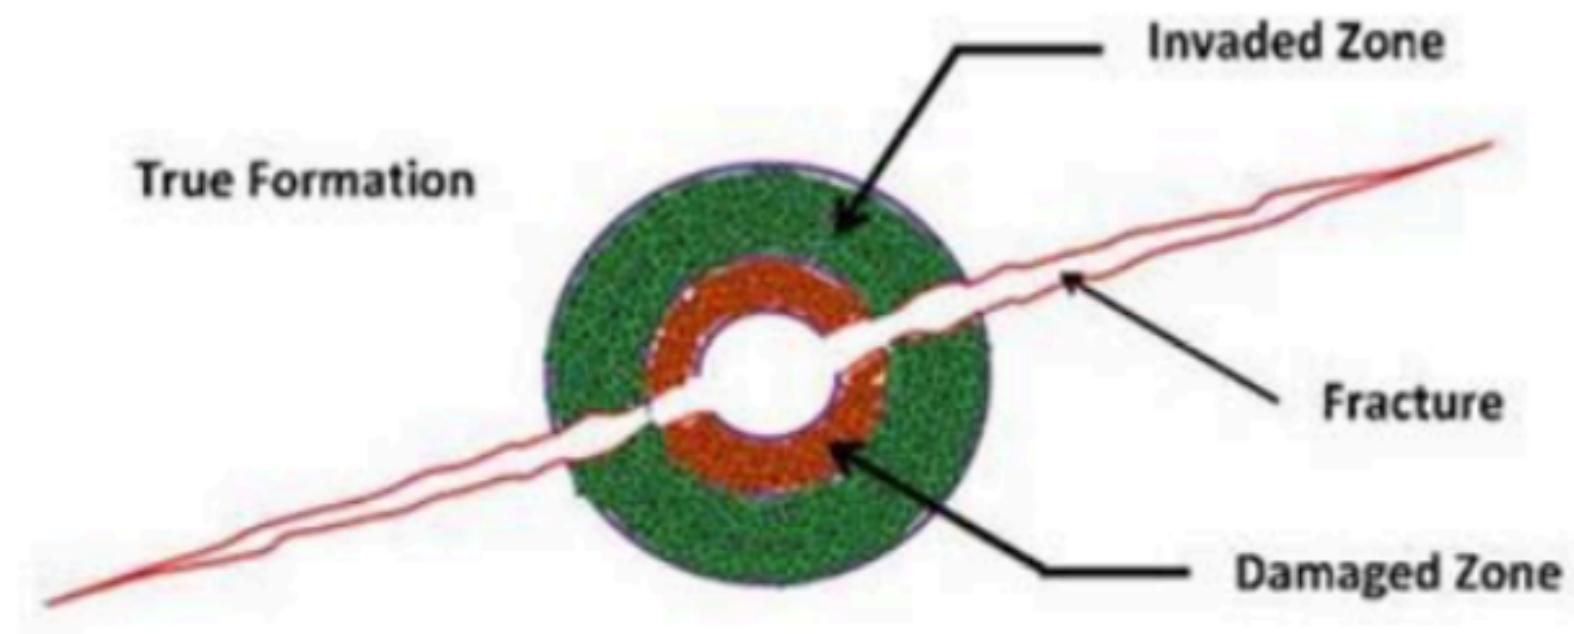


Plan View


Fekete, 2011




[SPE 163863]


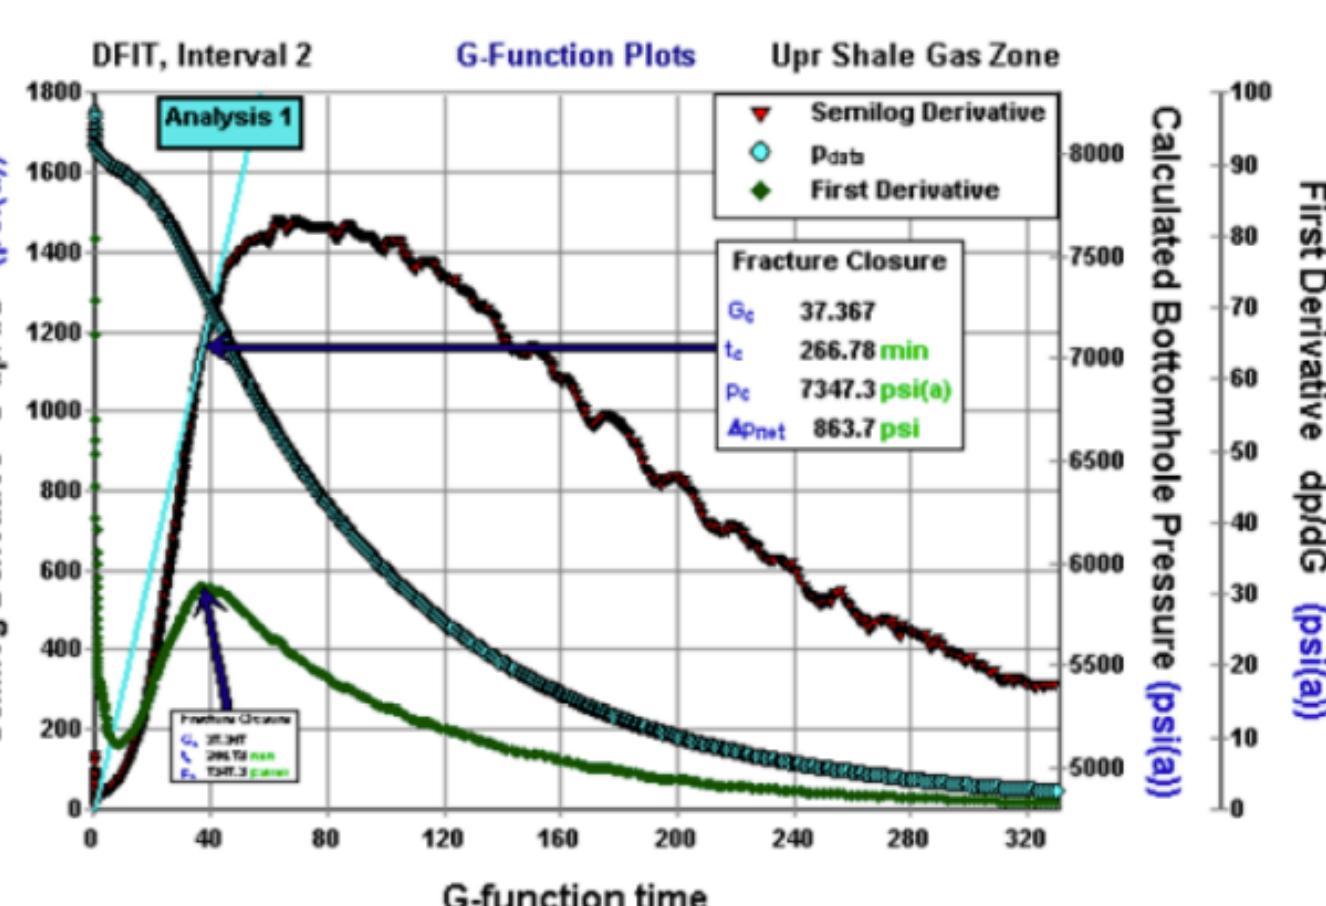
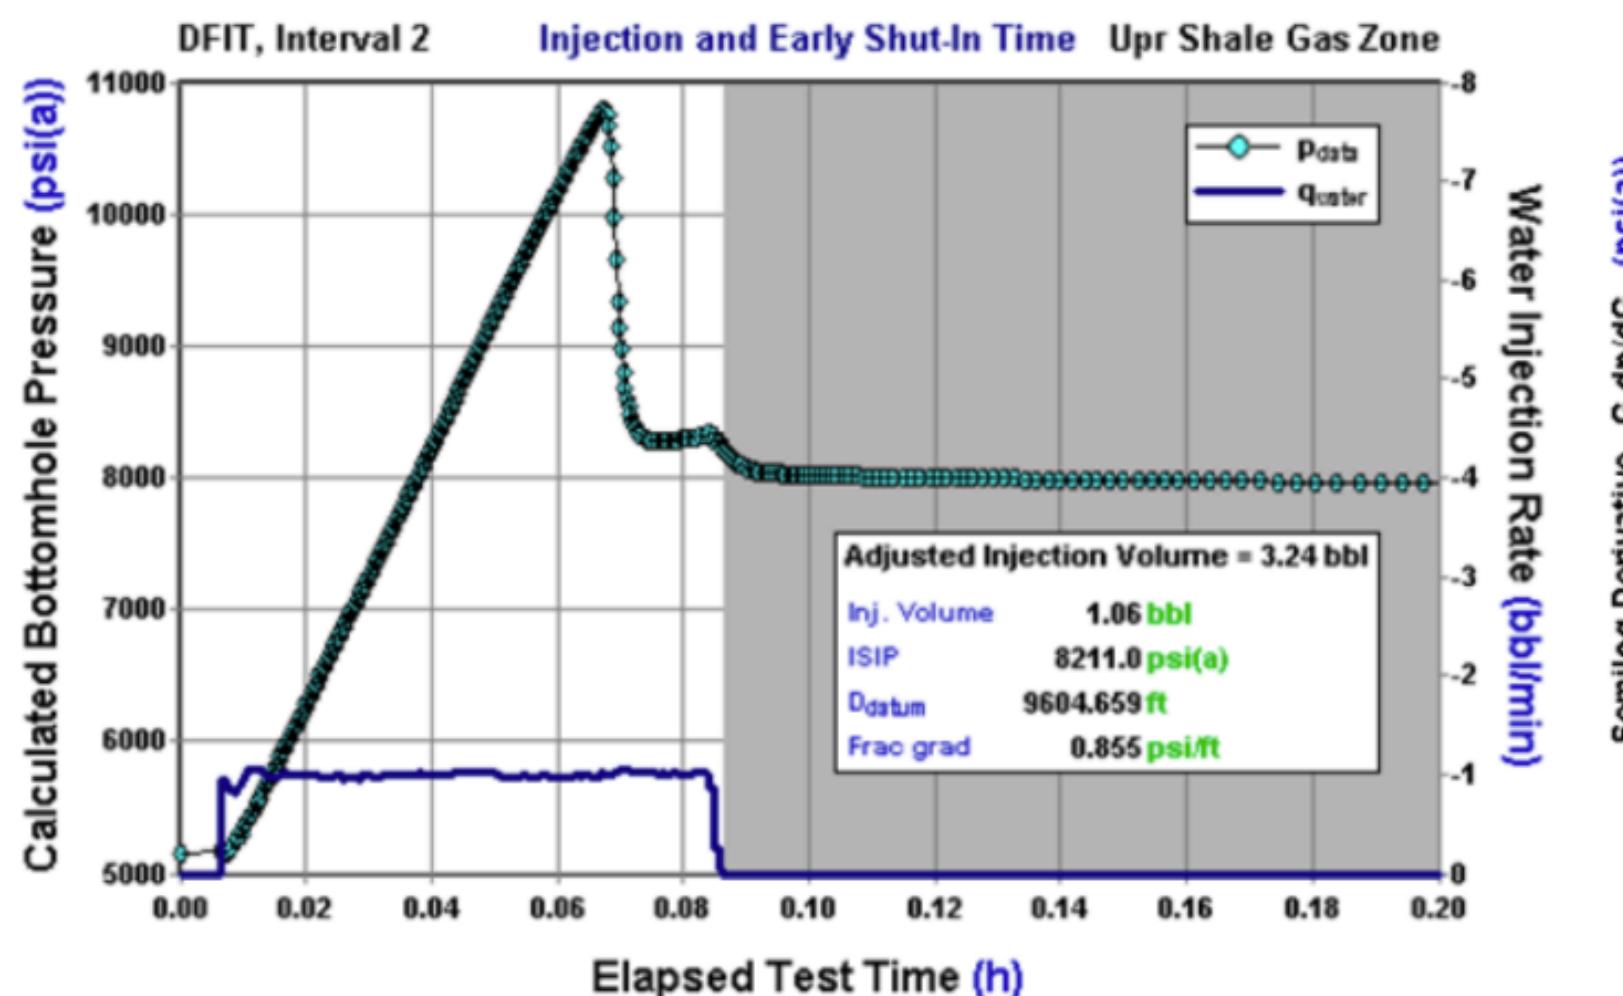


[SPE 163863]

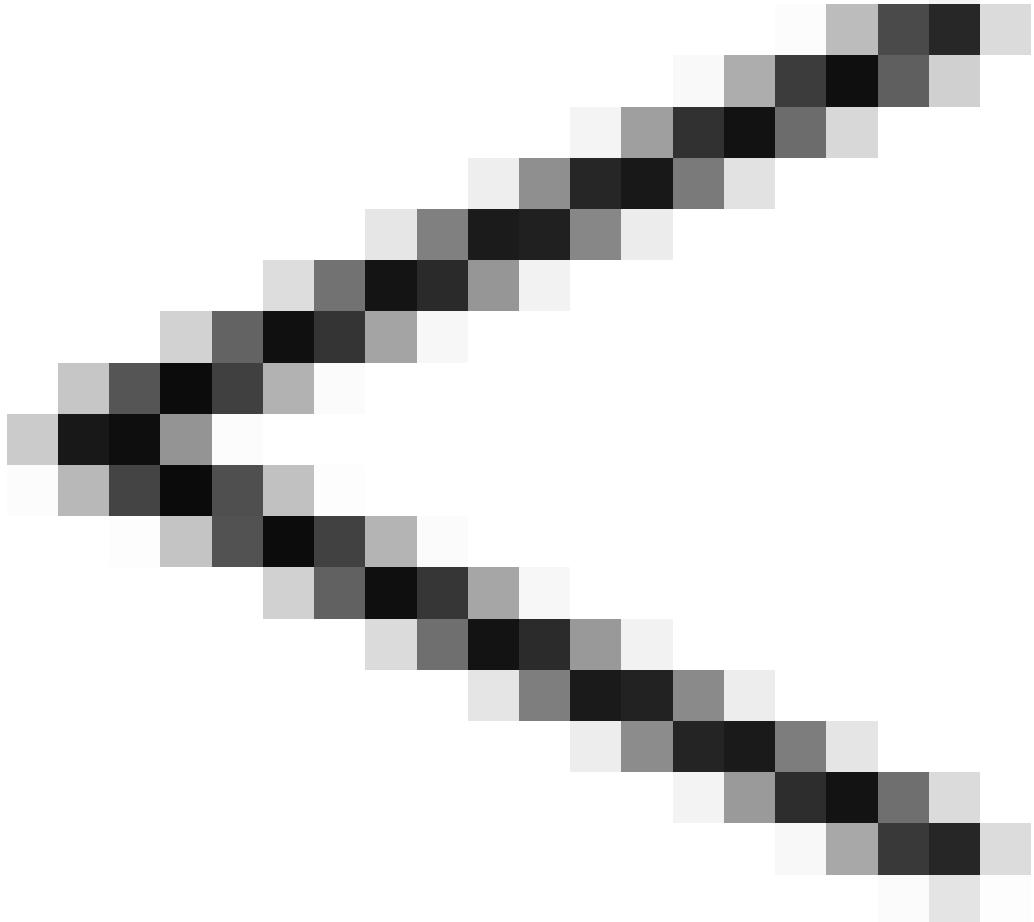

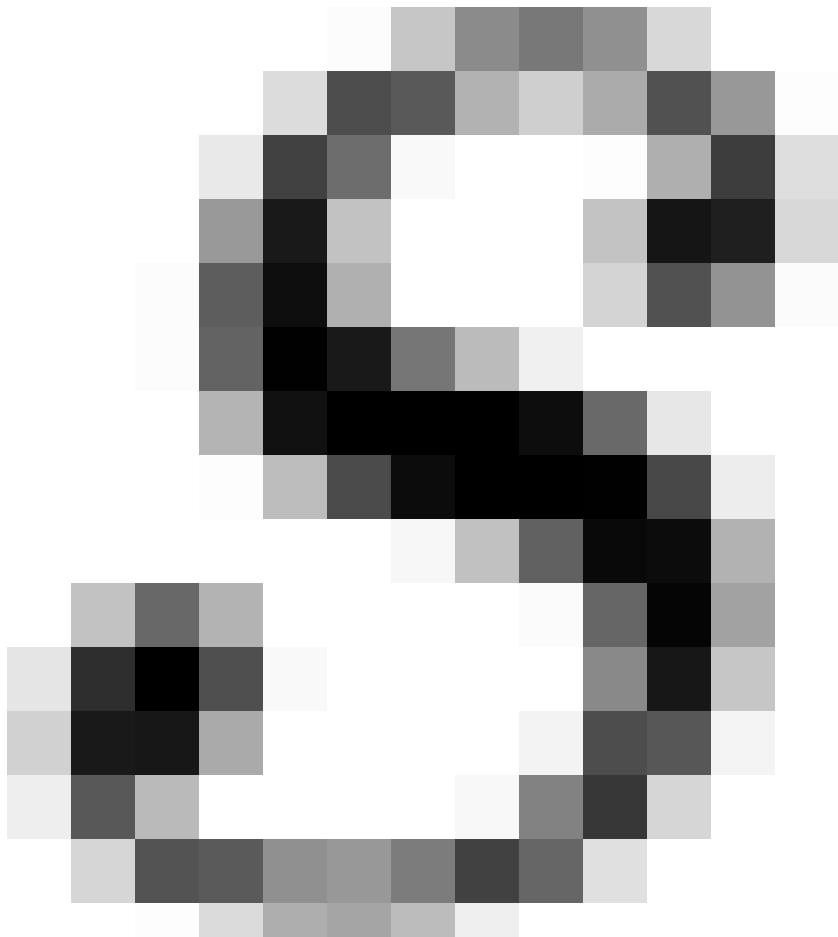

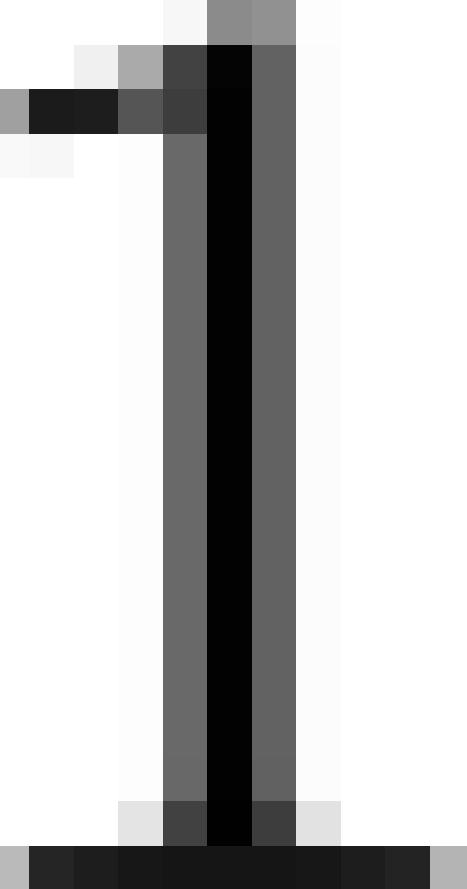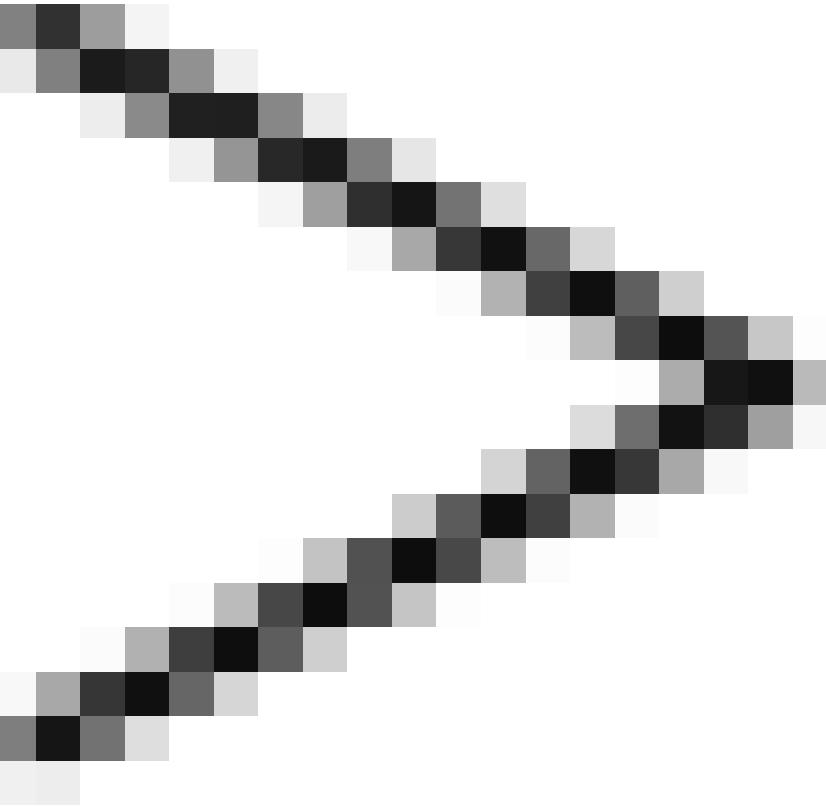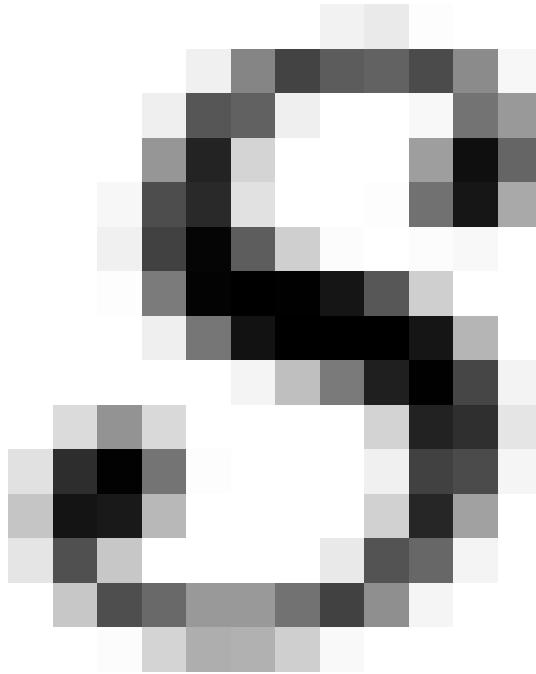

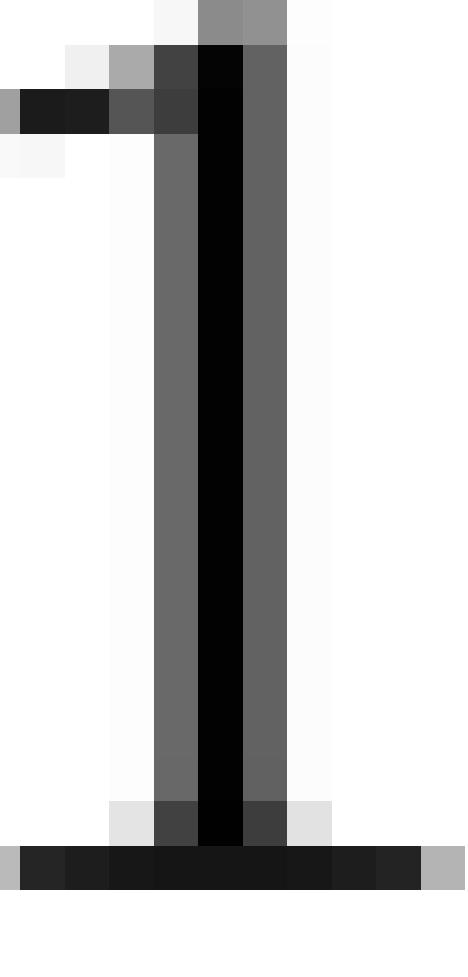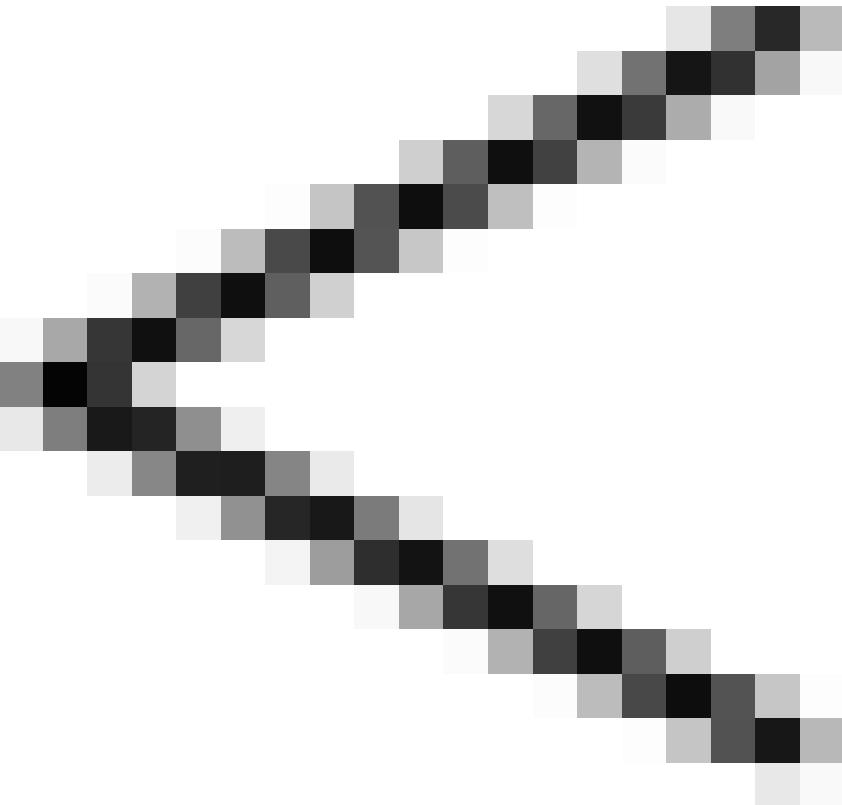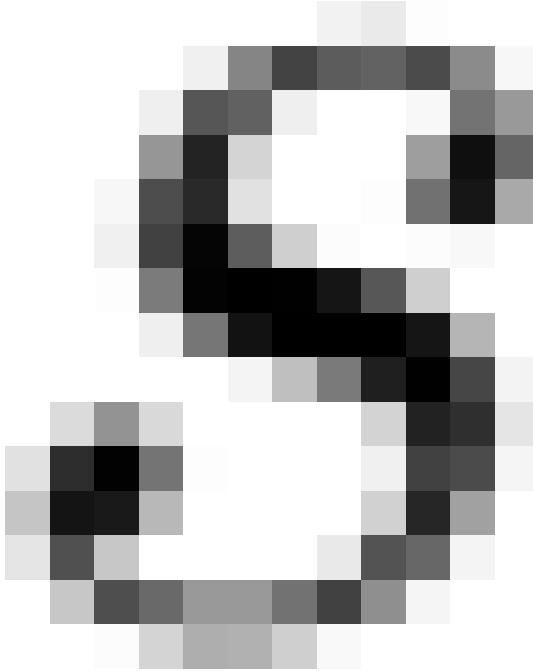


q

$$2\pi\hbar k$$

μ


$$\frac{P_e - P_w}{\ln\left(\frac{\tau_e}{\tau_w}\right) + s}$$

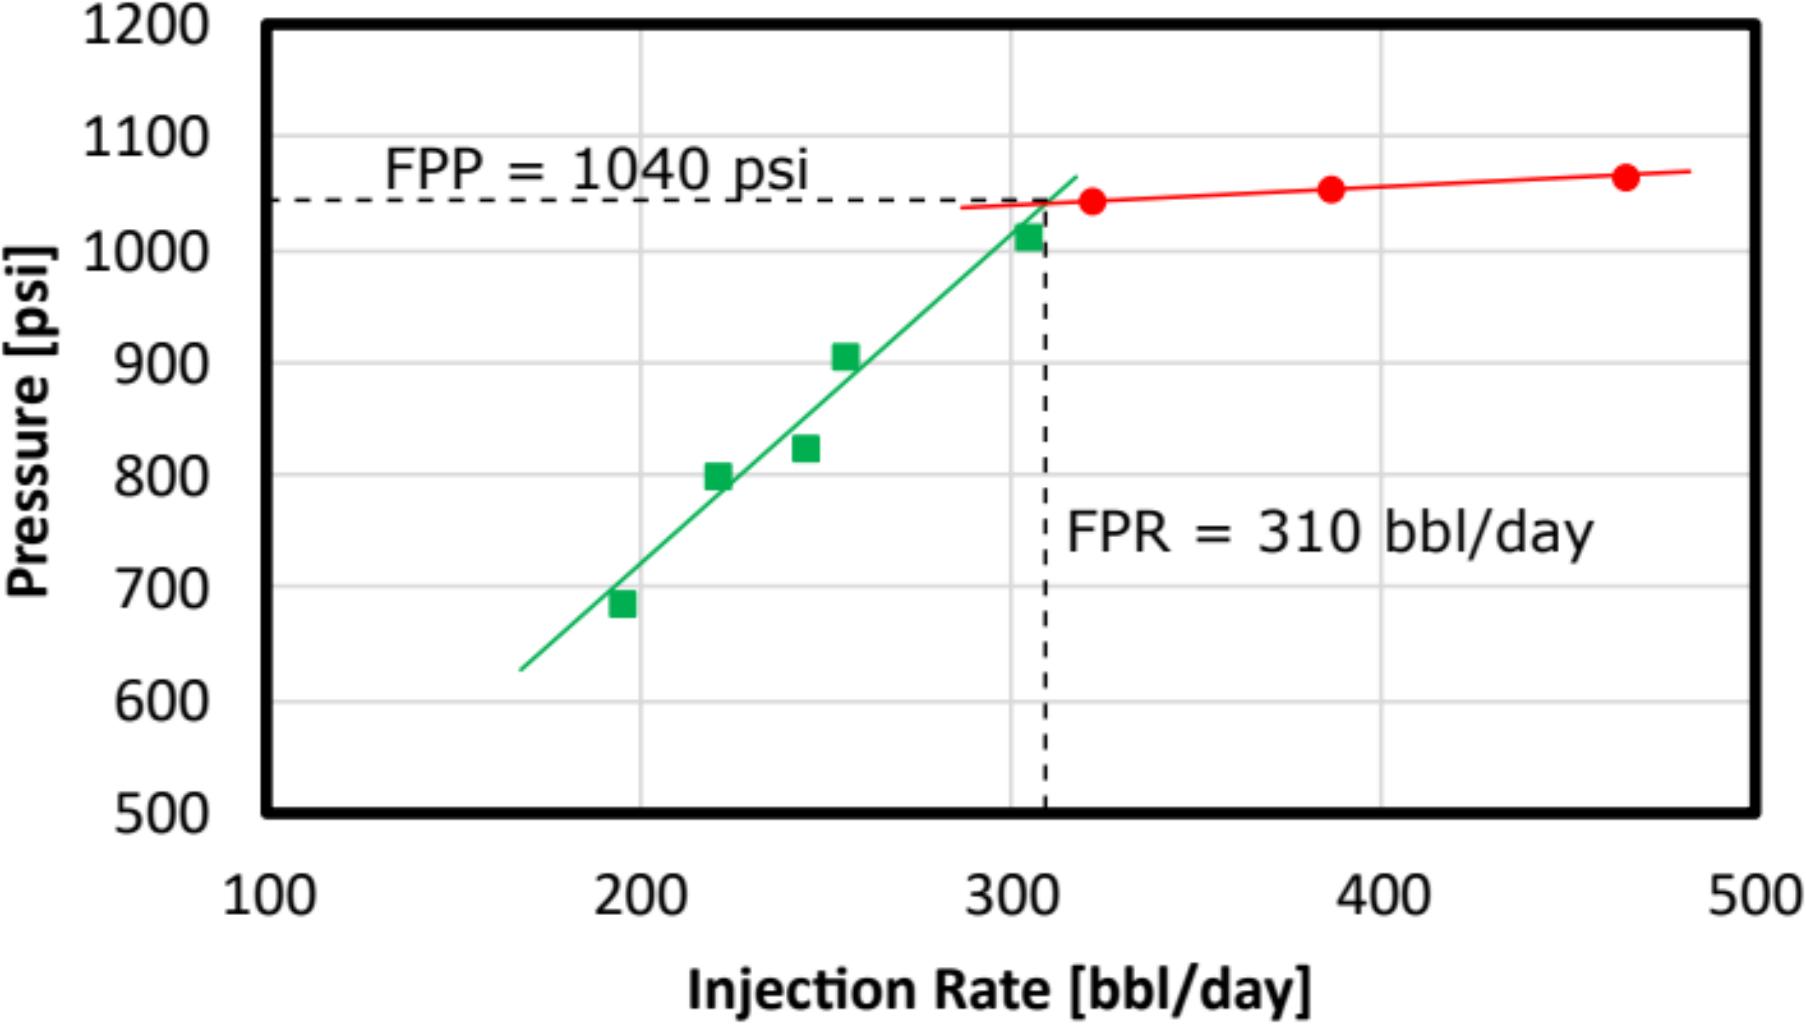


Fracture Influence on Flooding

Fractures modify :


- 1) Sweep Efficiency
- 2) Injectivity
- 3) Oil Productivity

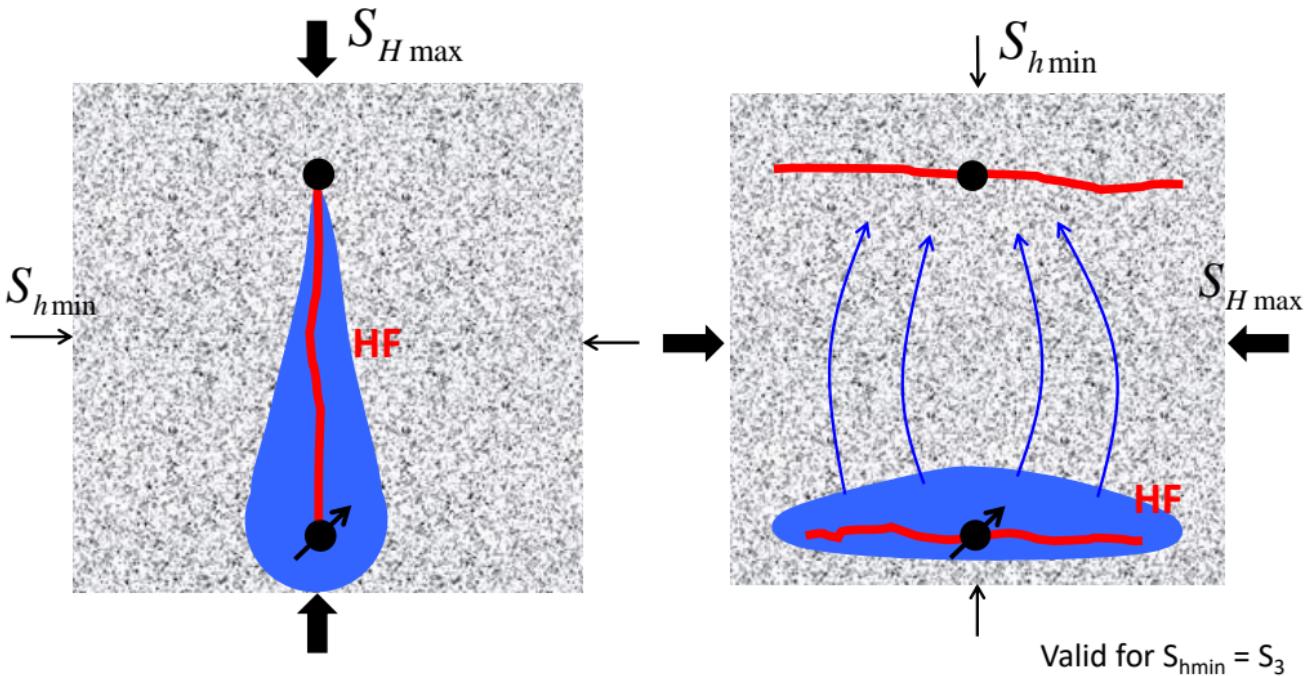



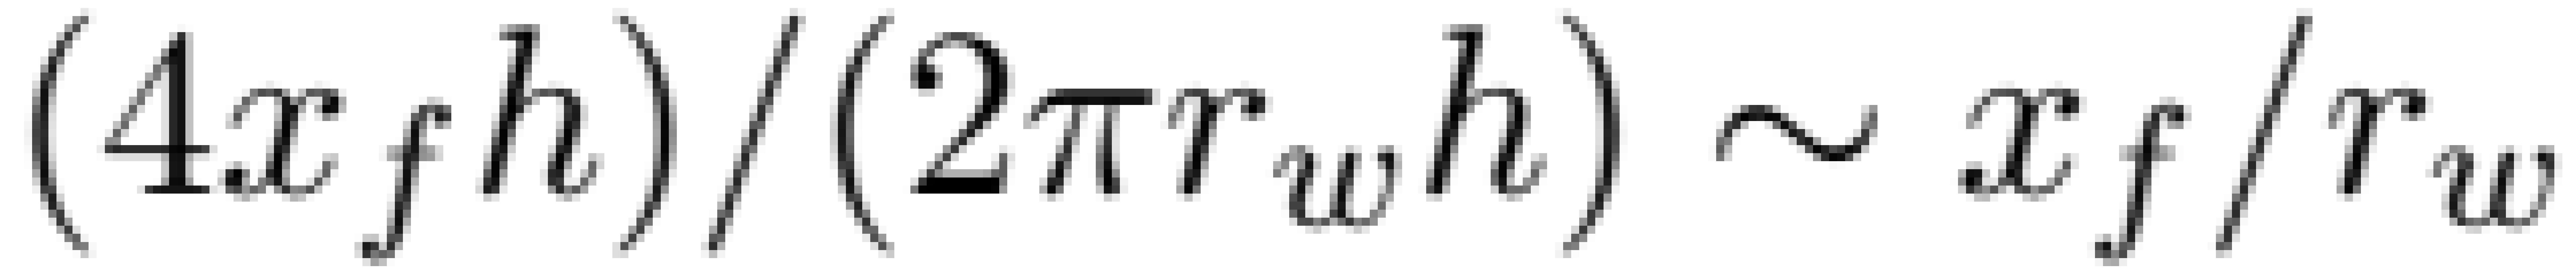

Intact


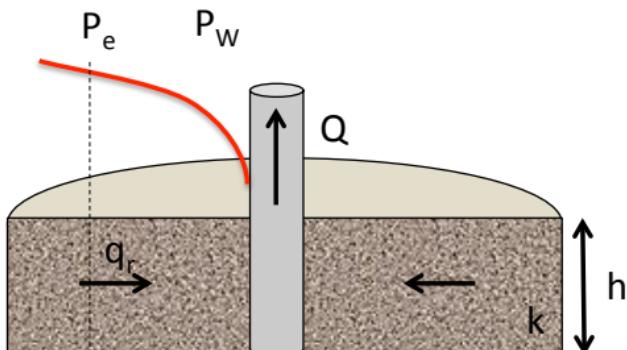


$$Q = -\frac{2\pi kh}{\mu} \frac{(P_e - P_w)}{p_D + s}$$

p_D : Dimensionless pressure
 $= \ln(r_e/r_w)$ if steady state


s : skin factor
 $> 1 \rightarrow$ damage
 $< 1 \rightarrow$ stimulation

Fractured

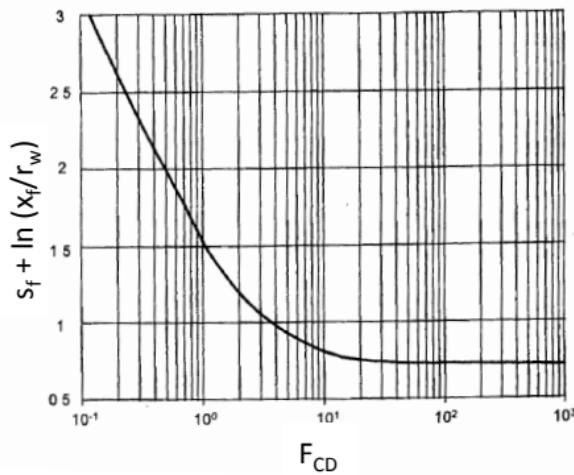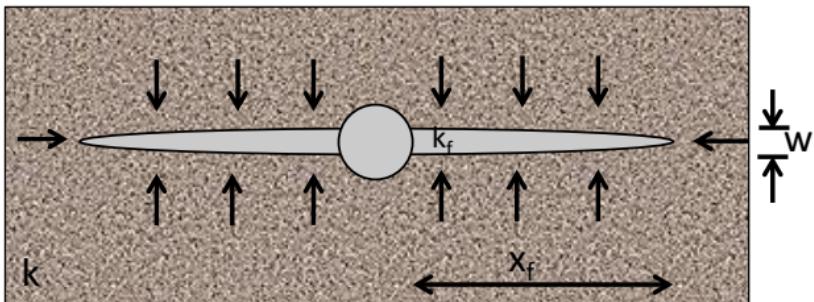

$$w, x_f, k_f \rightarrow F_{CD} = (k_f w) / (k x_f)$$

$$x_f, r_w, F_{CD} \rightarrow s_f \text{ from above plot}$$

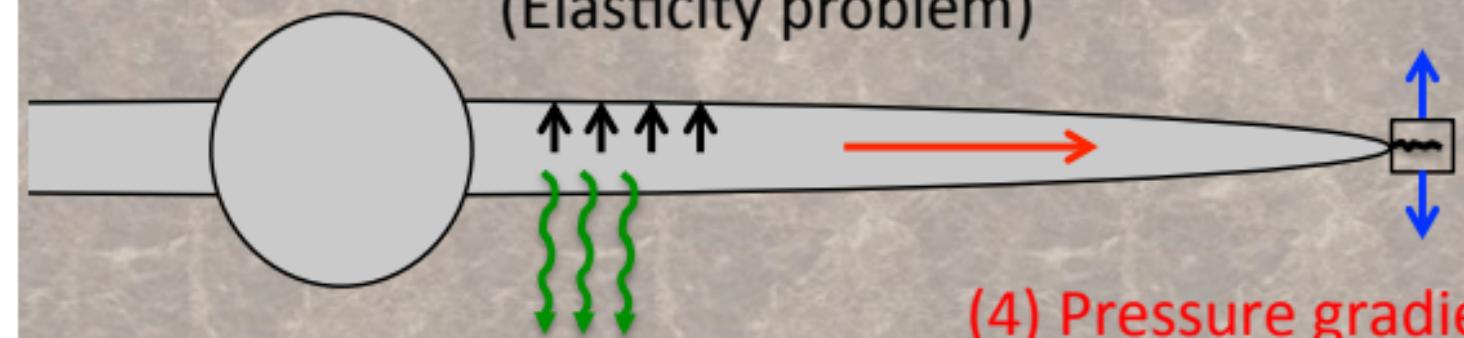



(1) Pressure on the fracture deforms adjacent rock
(Elasticity problem)

(2) Fracture propagates if the “stress intensity factor” is higher than what the rock can resist “rock toughness”
(Fracture mechanics problem)


(3) Fracturing fluids can leak off to the formation
(Mud-cake design)

(4) Pressure gradient leads to flow of fracturing fluid through the fracture
(Lubrication problem)


Net pressure
 $p_{\text{net}} = p - S_3$

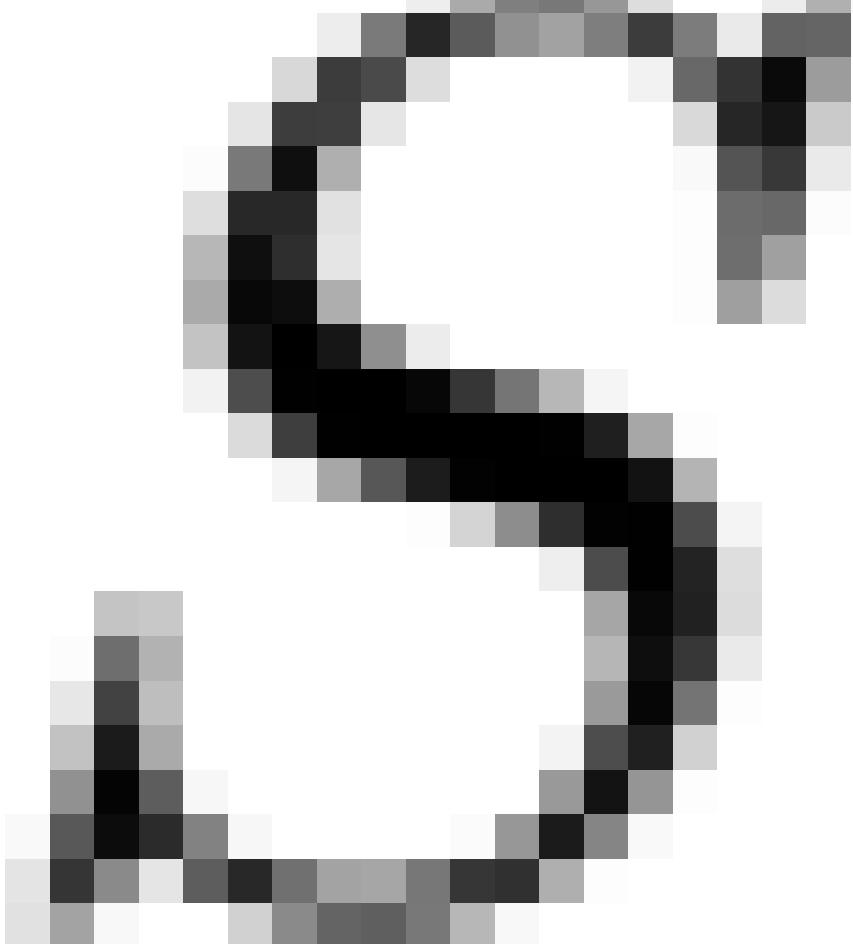




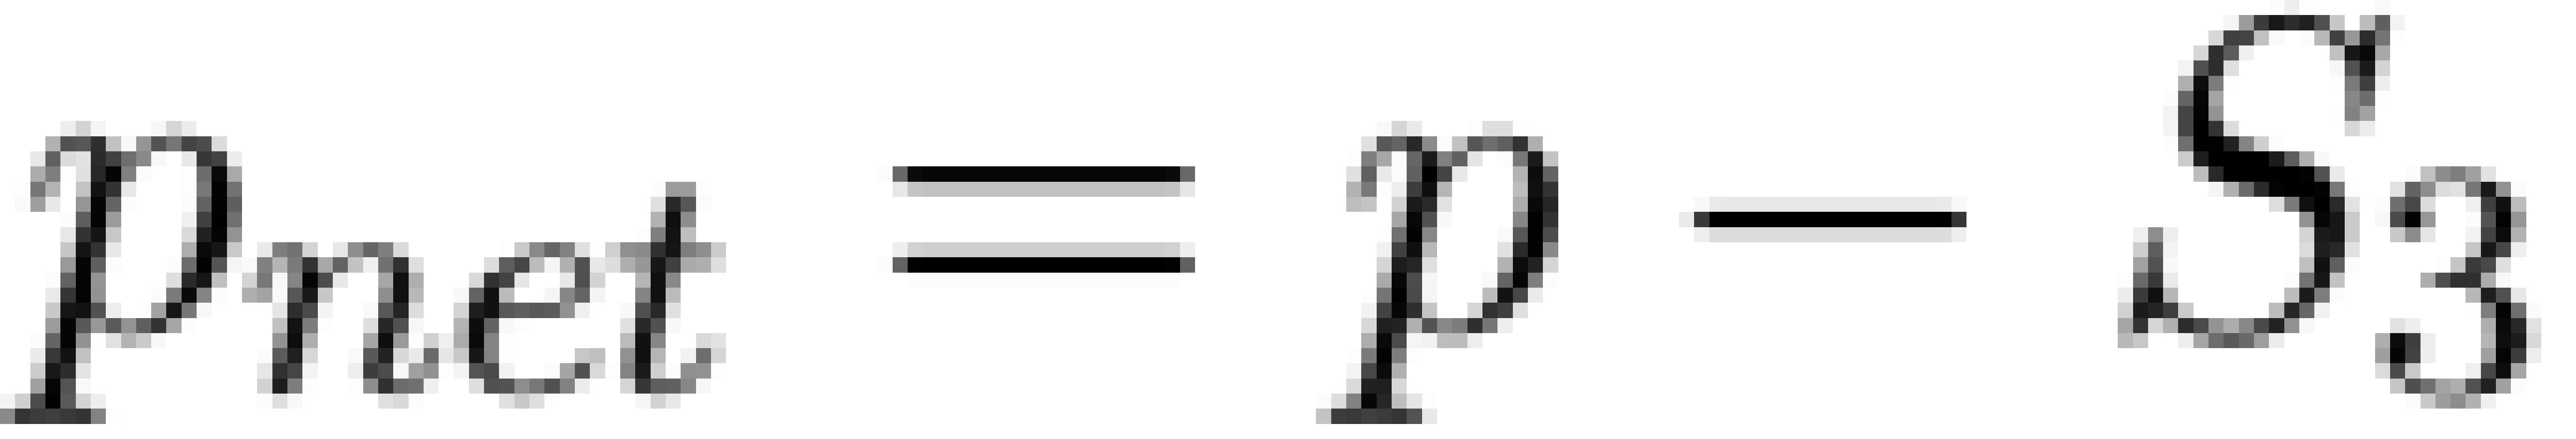




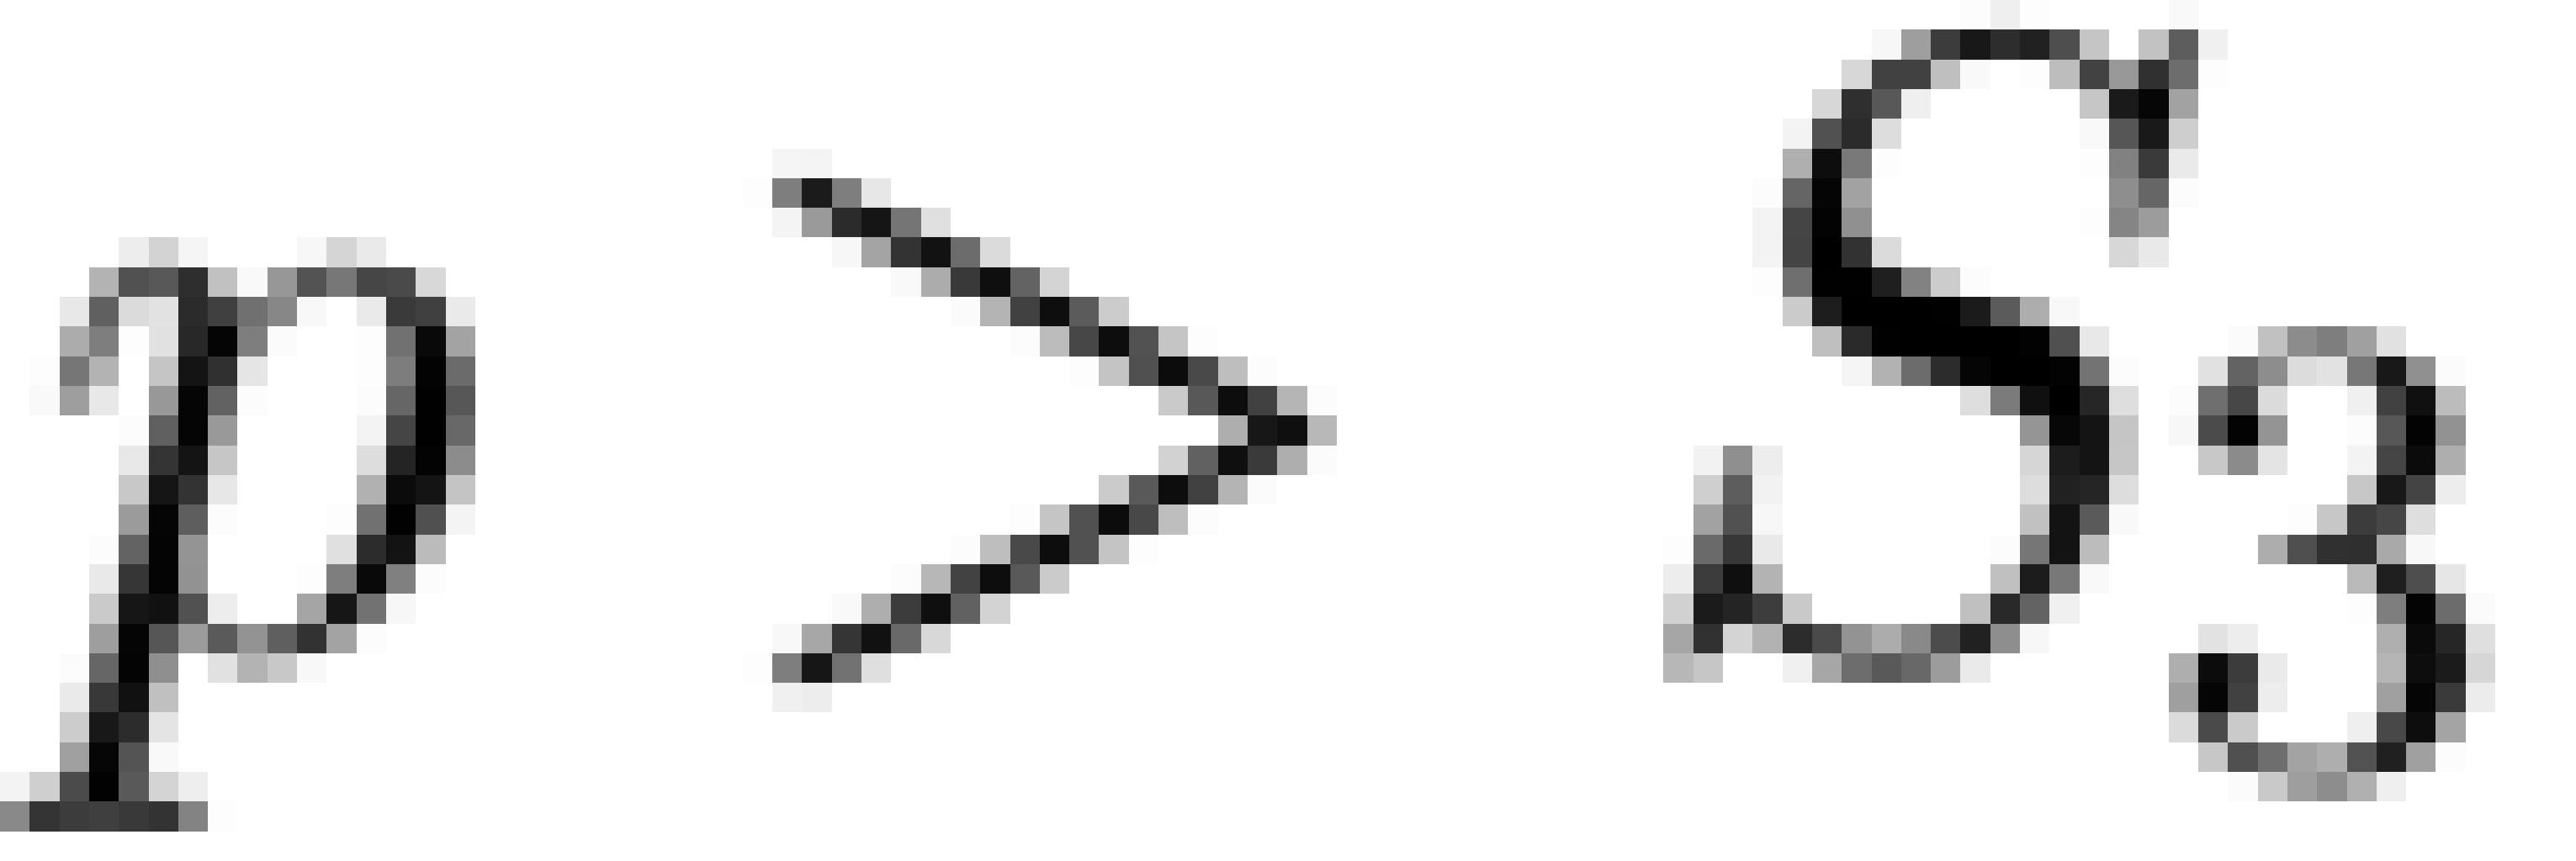

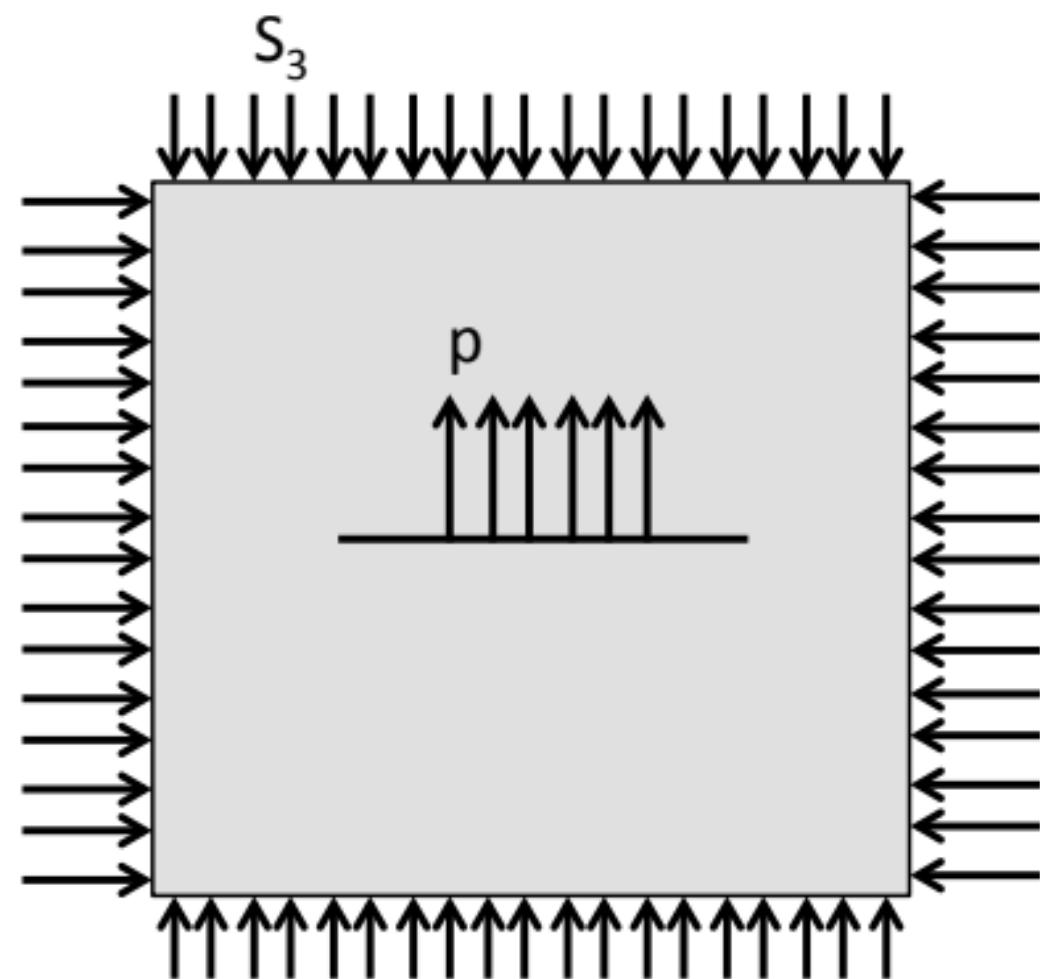


=

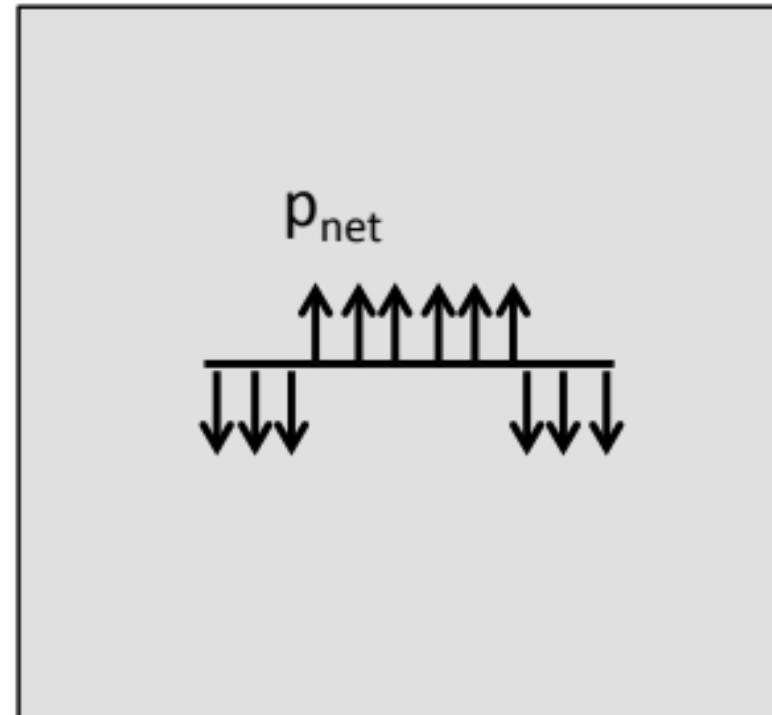






$$\begin{cases} \sigma_{yy} = p(x) & \text{for } 0 \leq x \leq c \\ u_y = 0 & \text{for } x > c \end{cases}$$


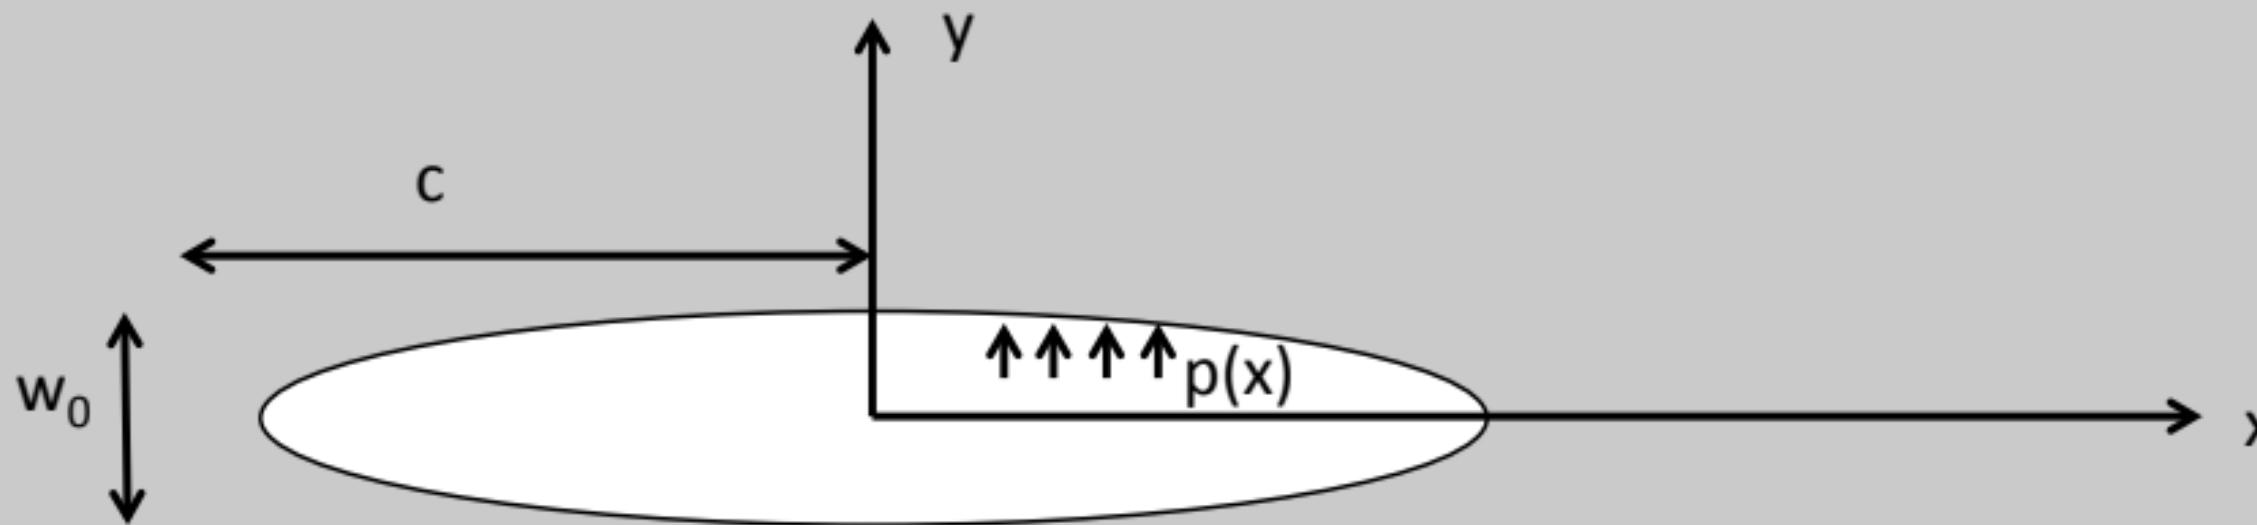


Linear elastic and homogeneous solid
(E, v)
 $E' = E / (1 - v^2)$



$$\begin{cases} u_y(x, 0) = \frac{2p_o}{E'} \sqrt{c^2 - x^2} & \text{for } 0 \leq x \leq c \\ \sigma_{yy}(x, 0) = -p_o \left(\frac{x}{\sqrt{x^2 - c^2}} - 1 \right) & \text{for } x > c \end{cases}$$



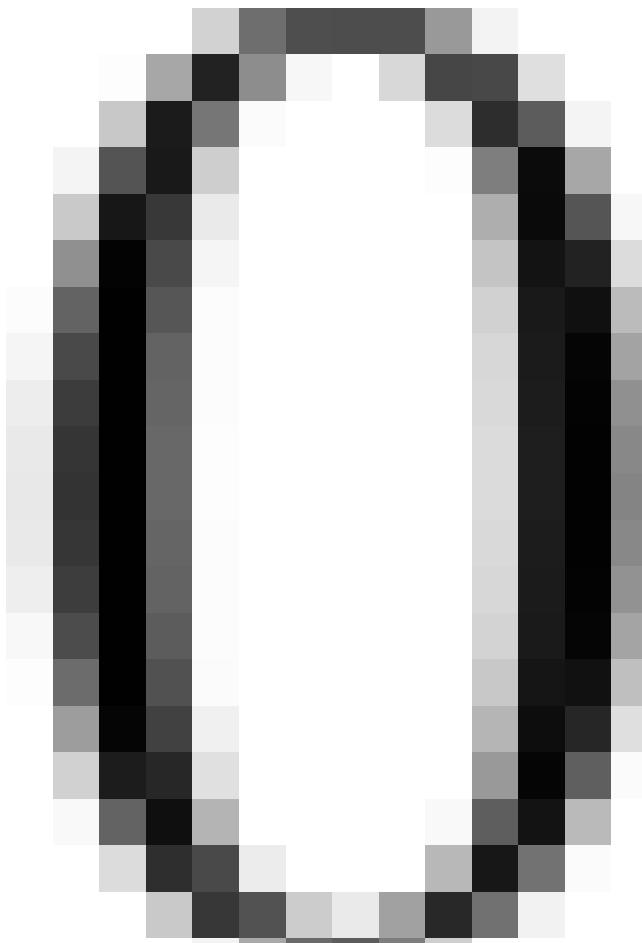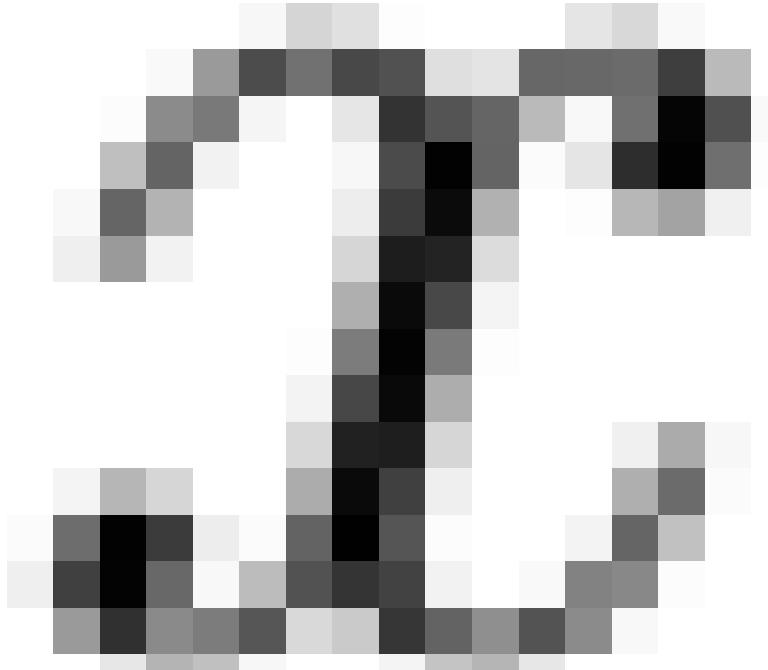





ω





4P0C



EY




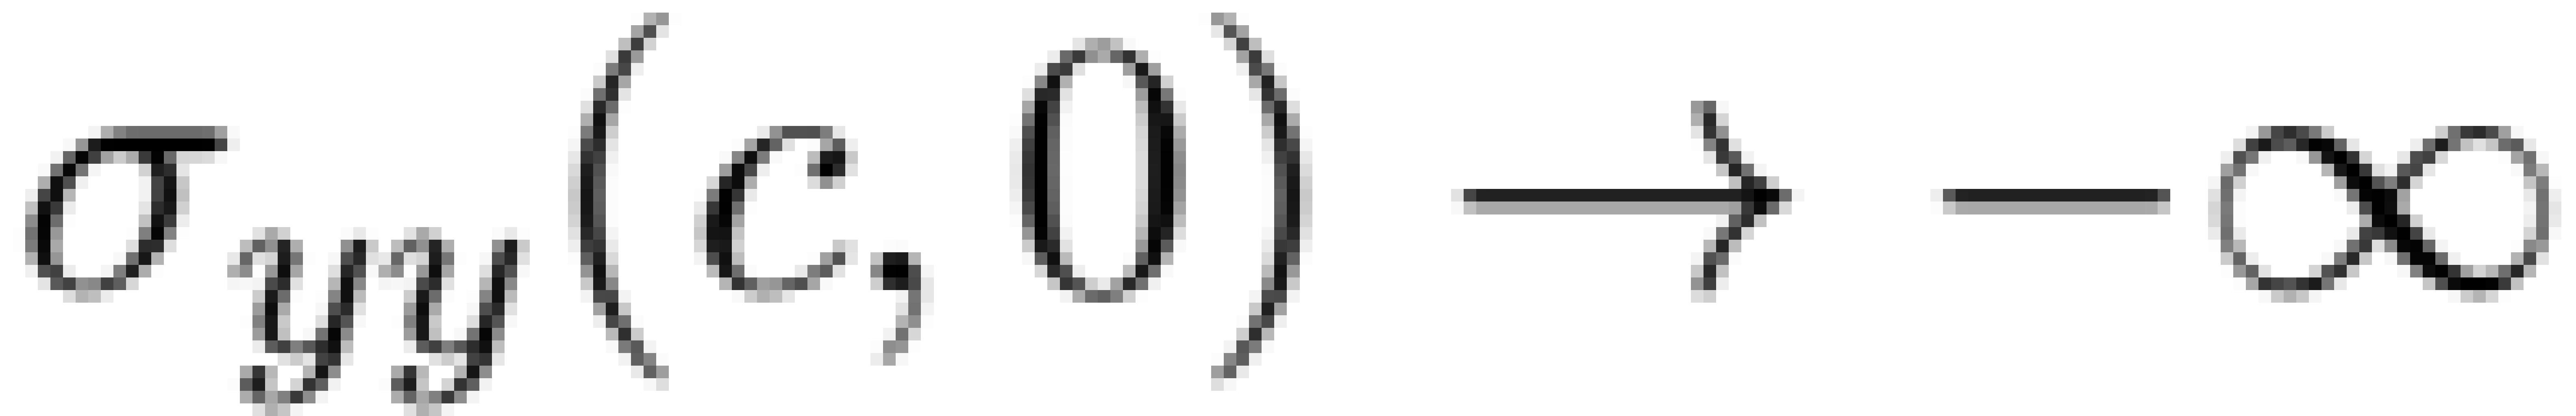




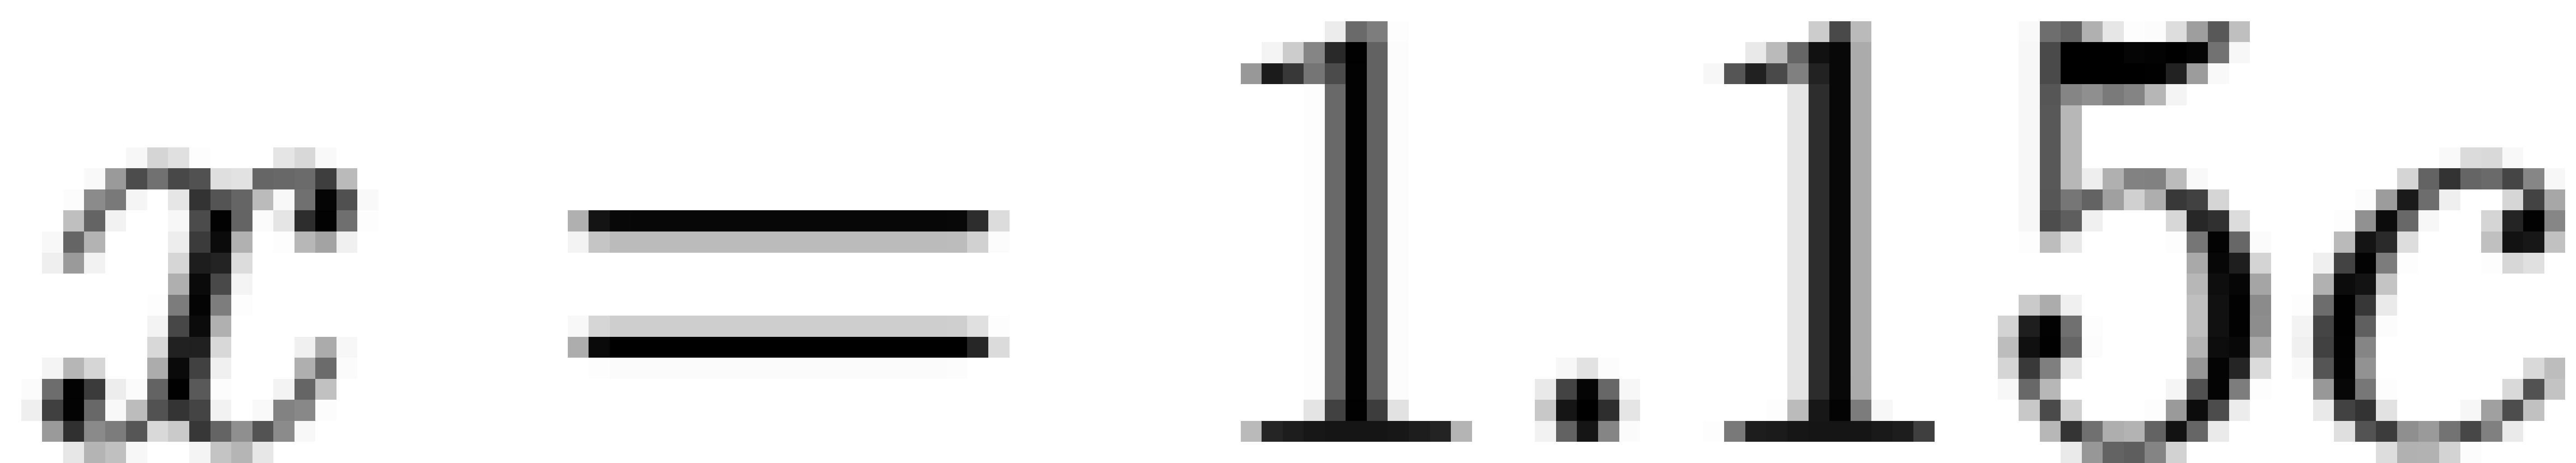





$$\kappa_I = \lim_{r \rightarrow 0^+} \left[(2\pi r)^{1/2} \sigma_{uv}(c + r, y=0) \right]$$

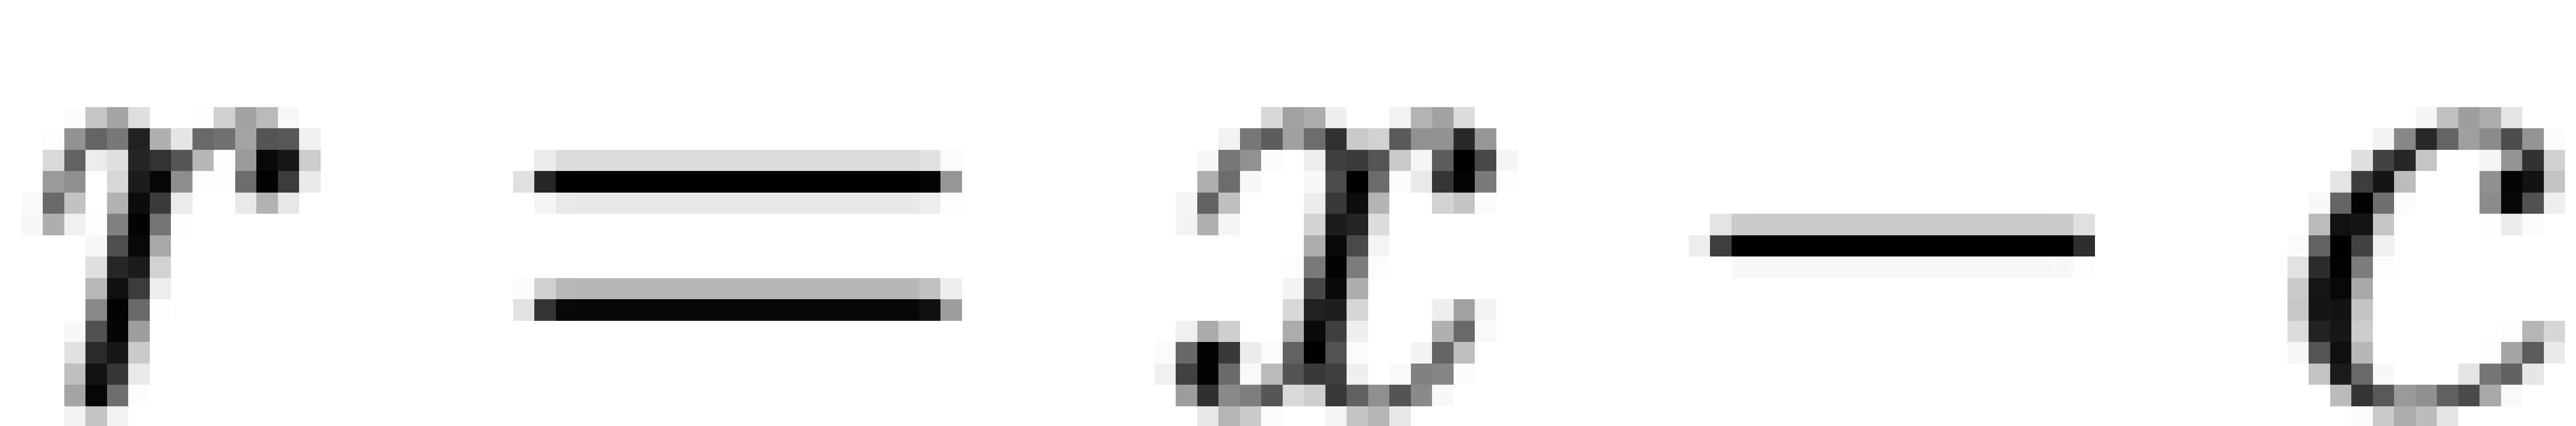


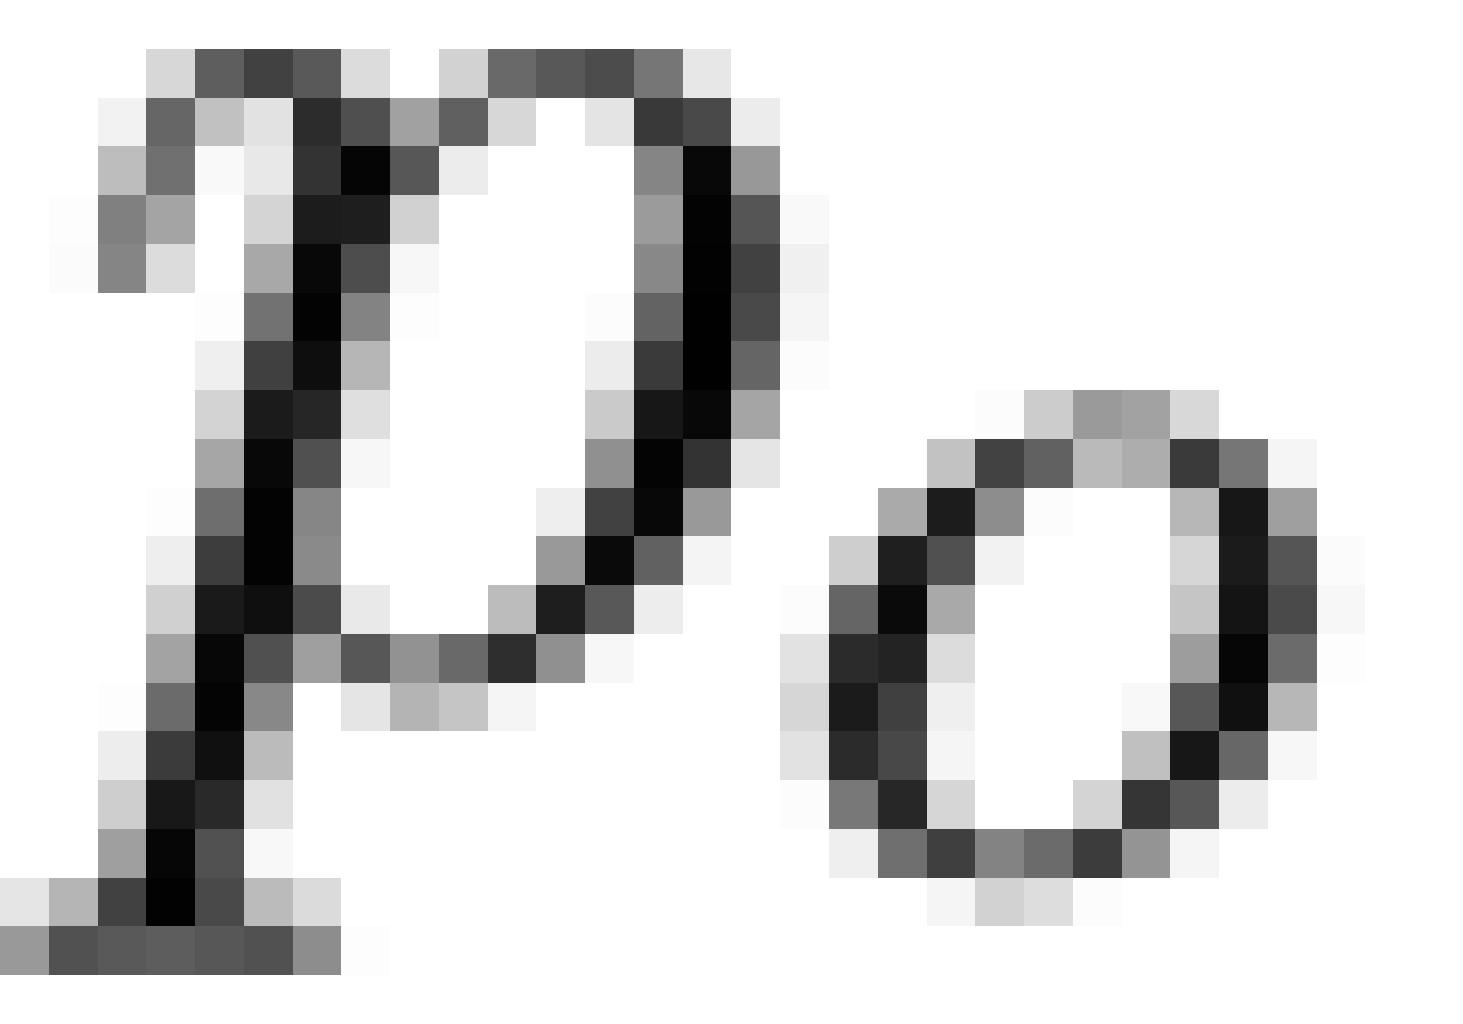


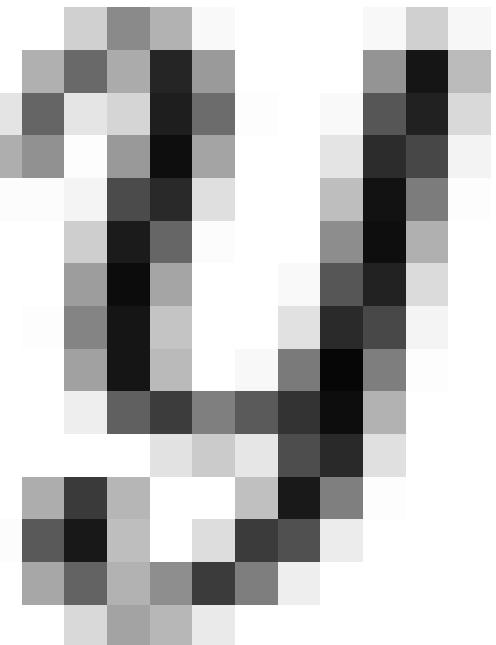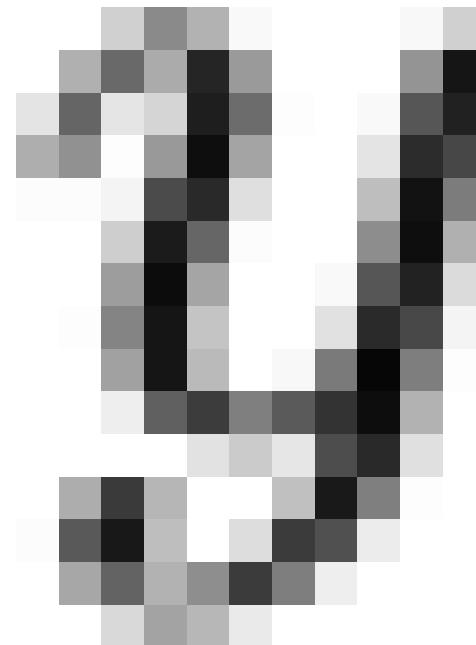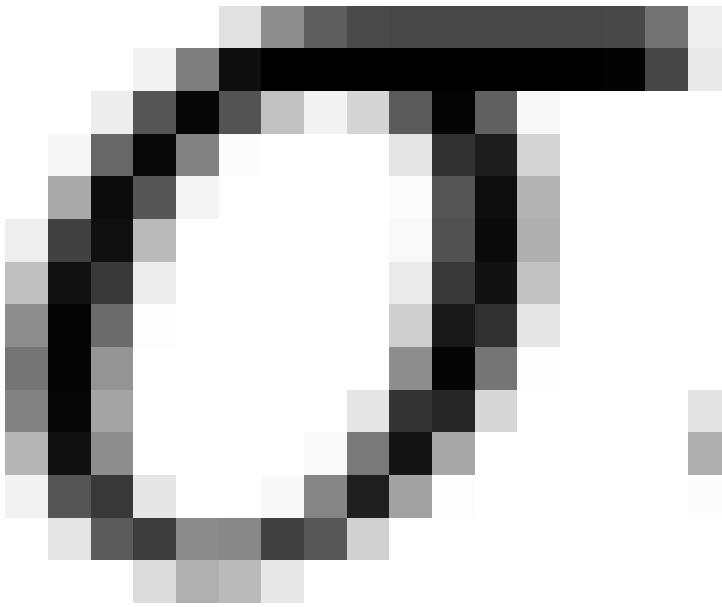




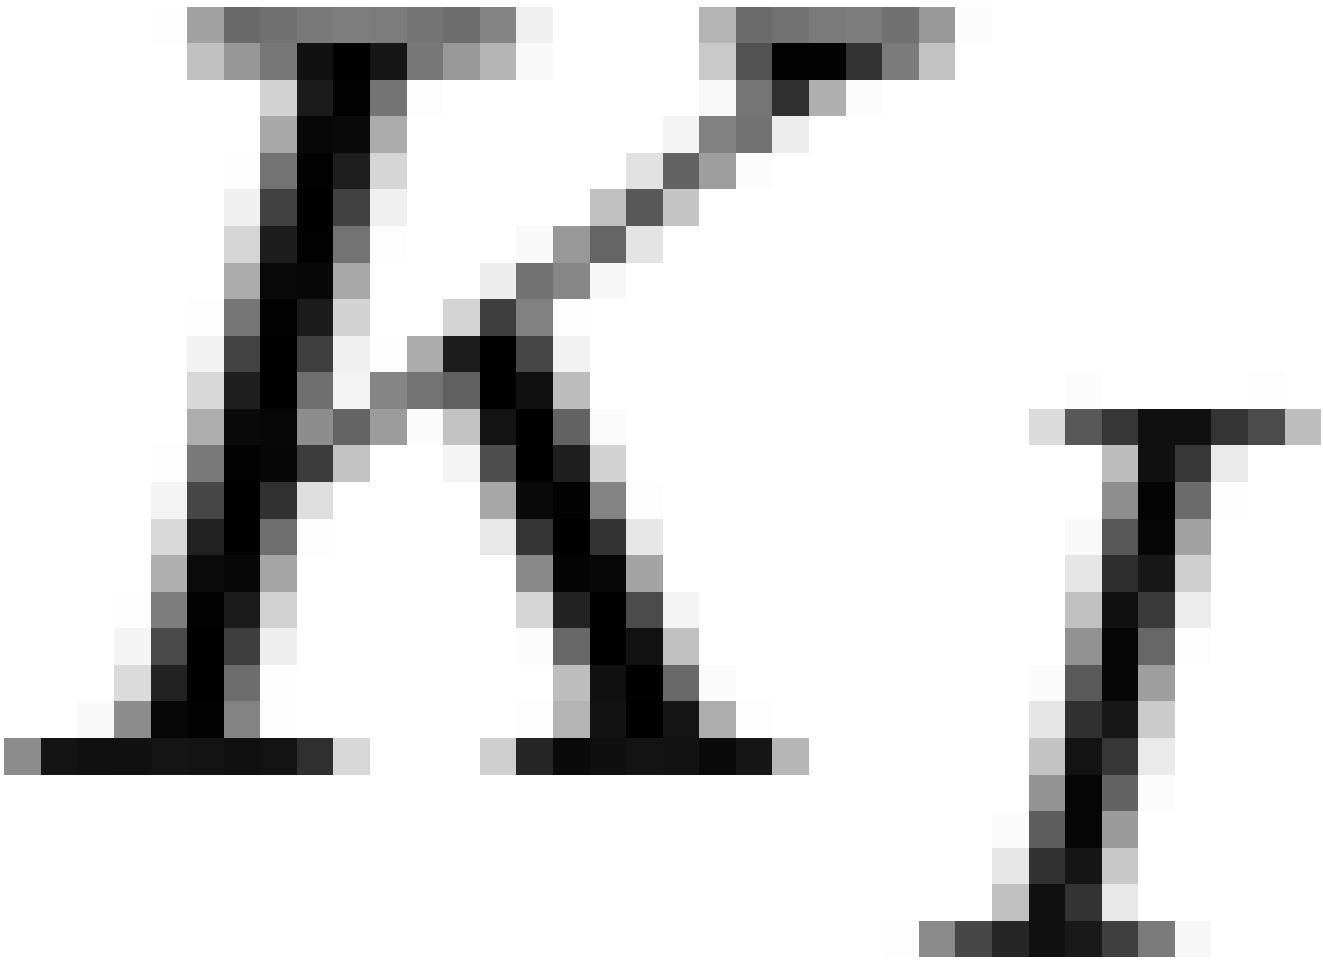

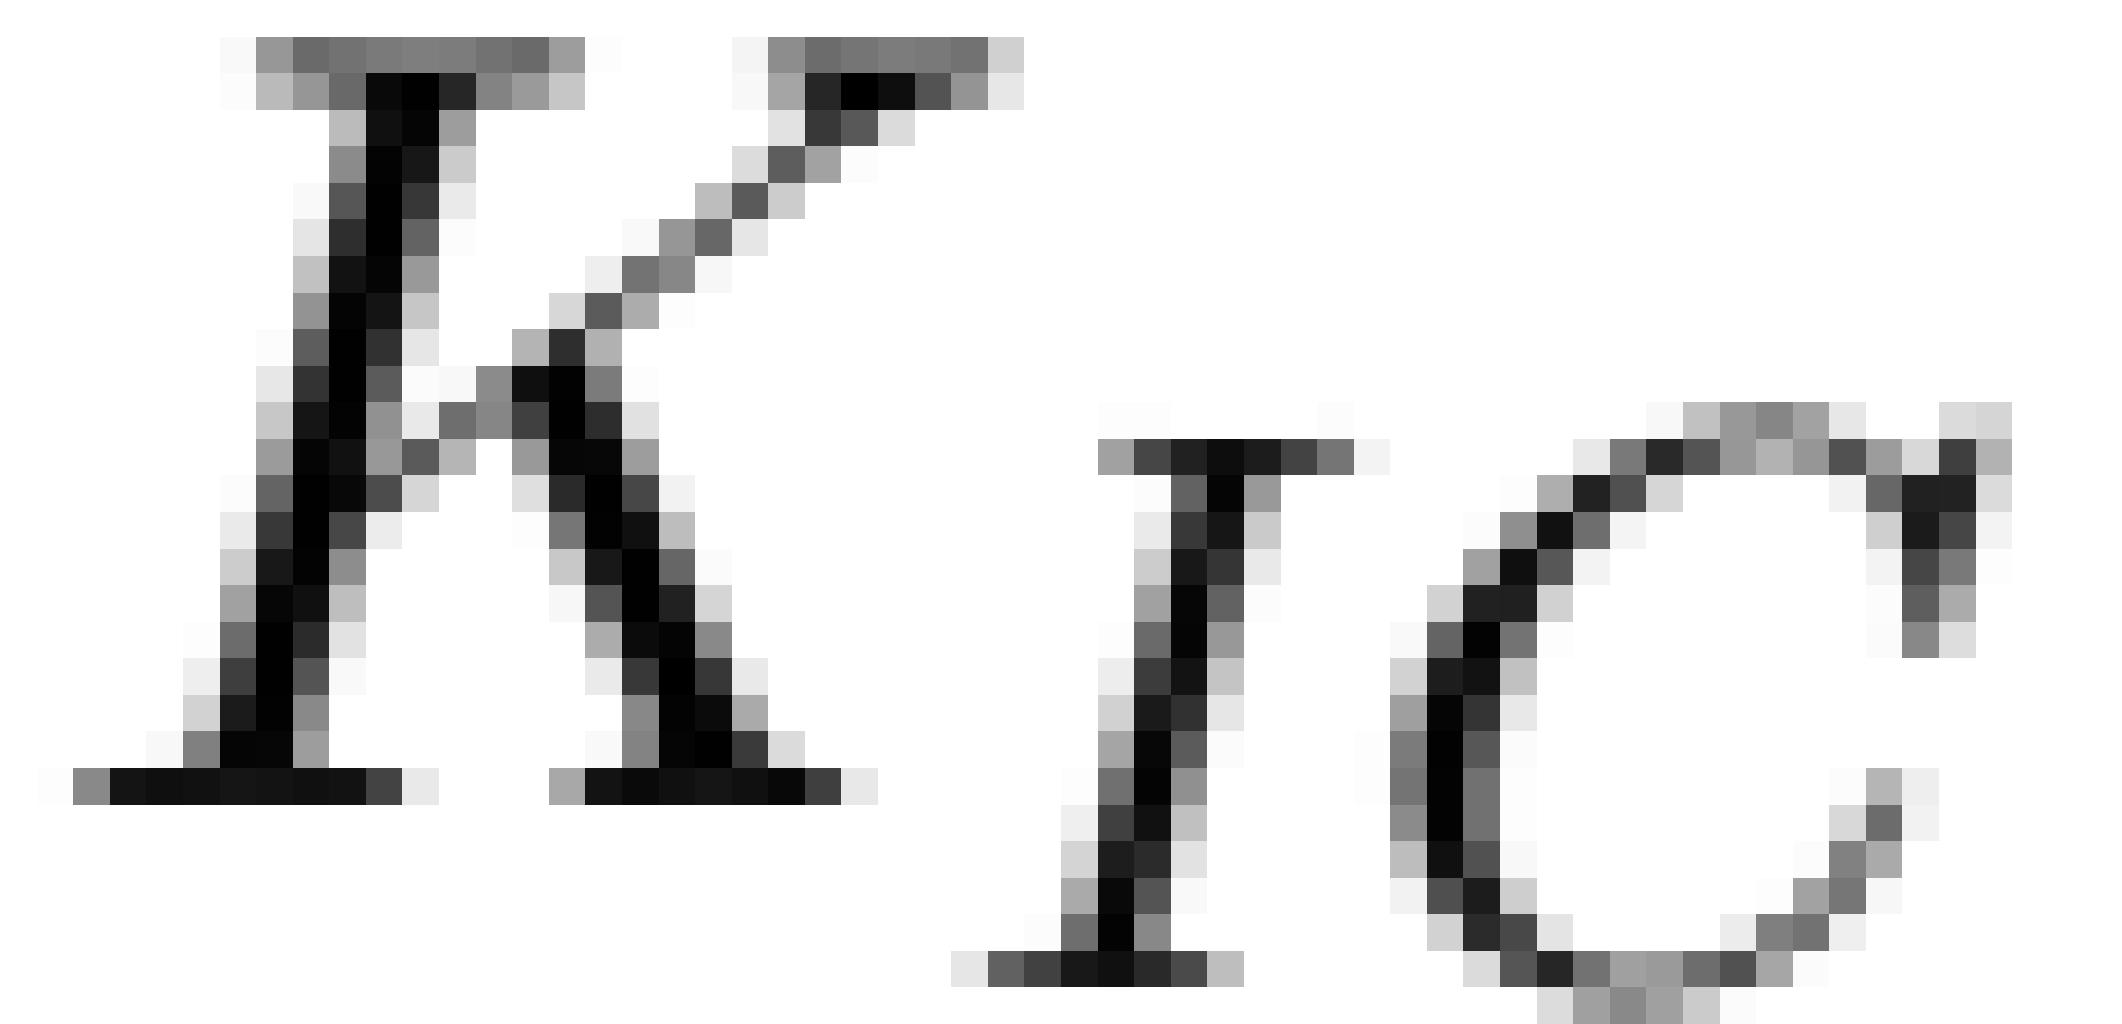




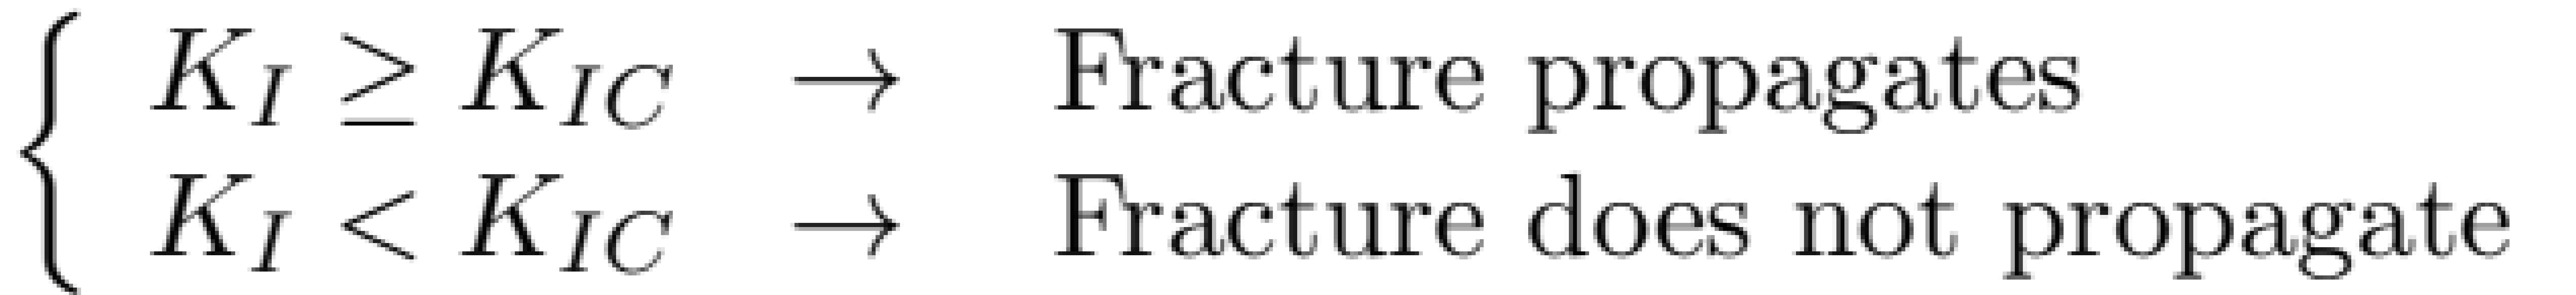






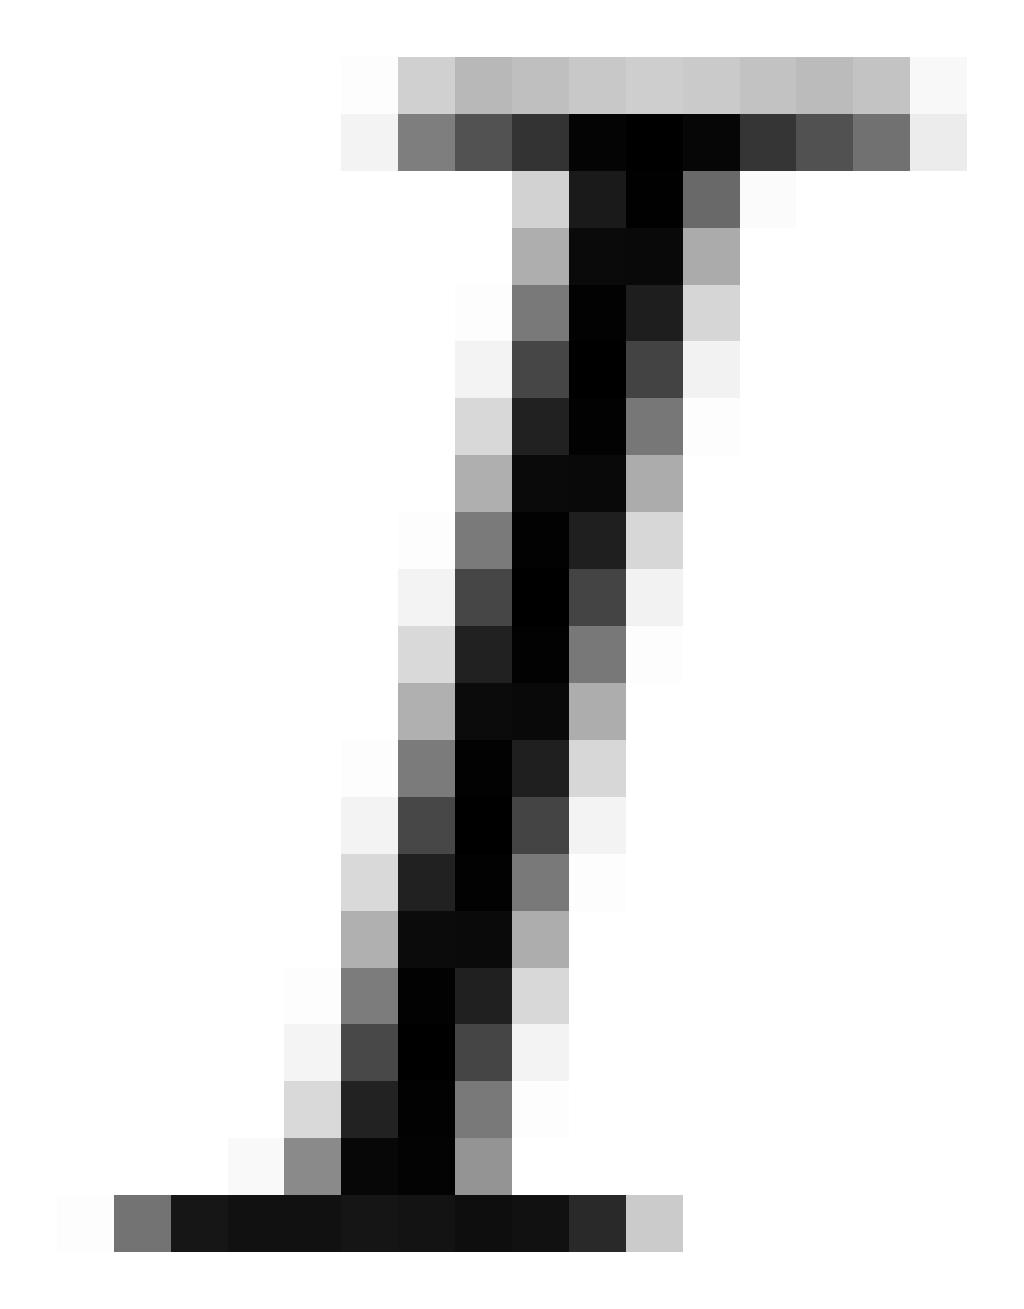




$$K_{IC} = \frac{P_{max}(\pi_0)^{1/2}}{2\pi L} M$$



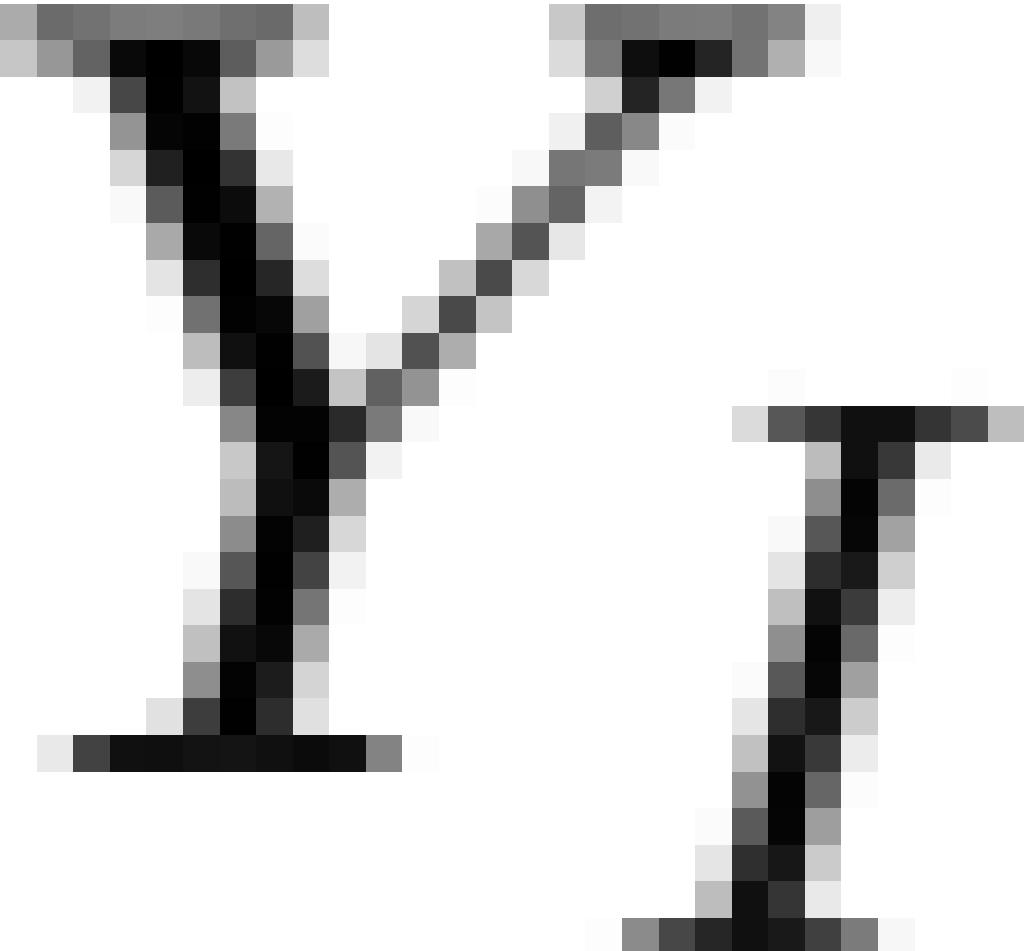


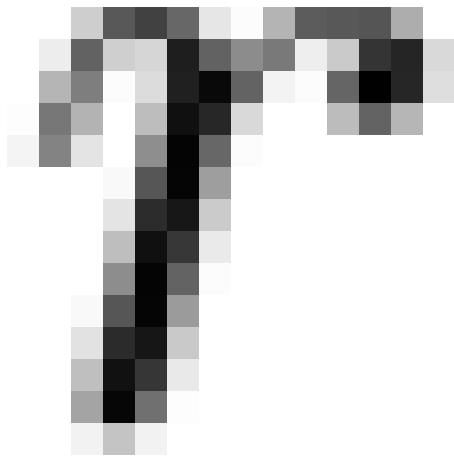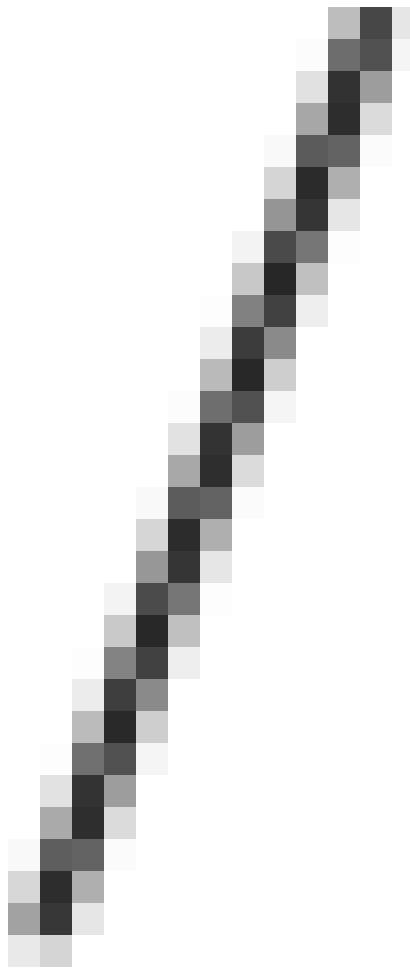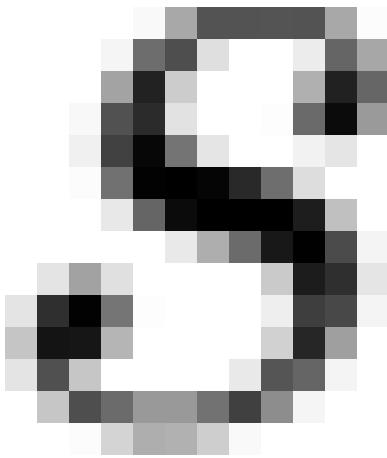


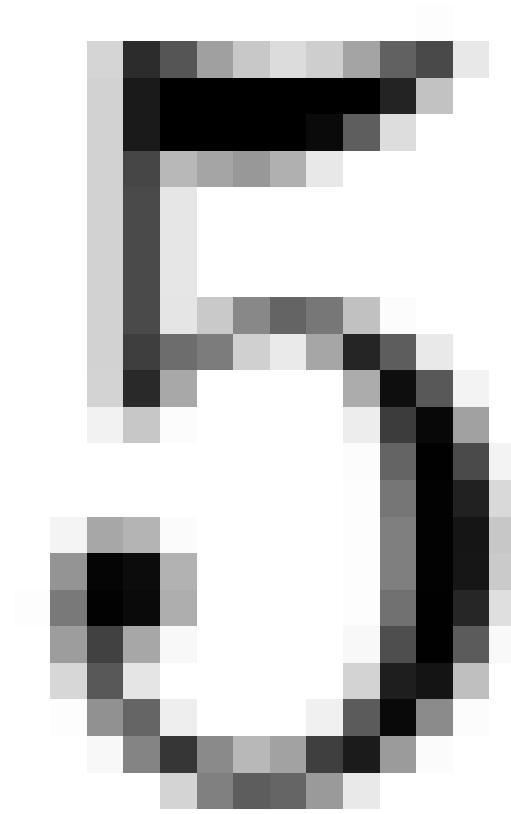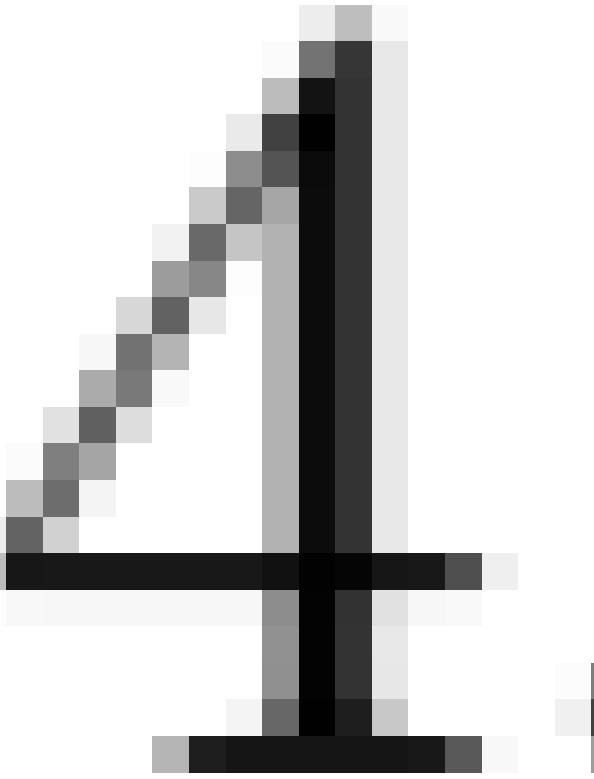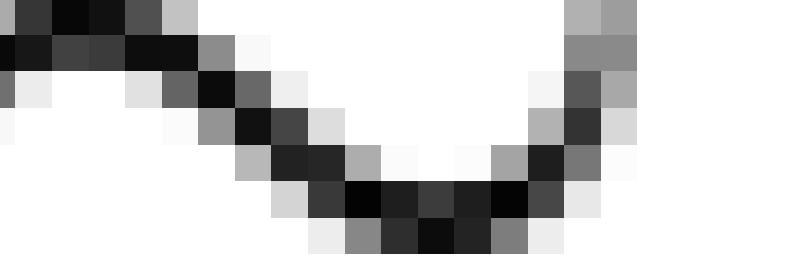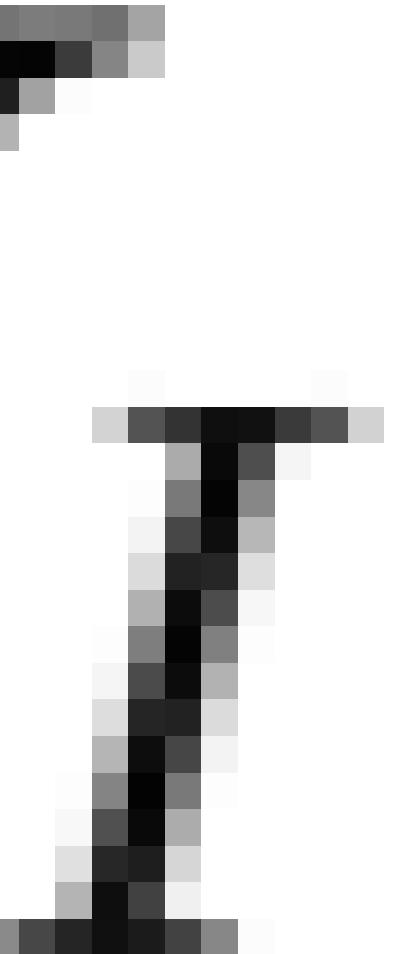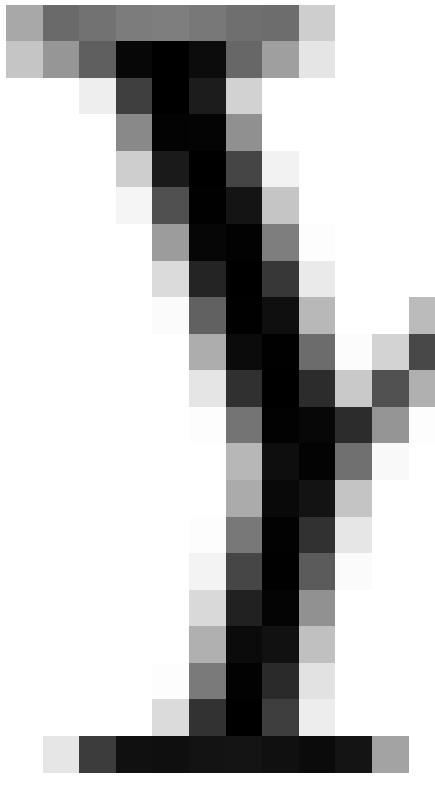

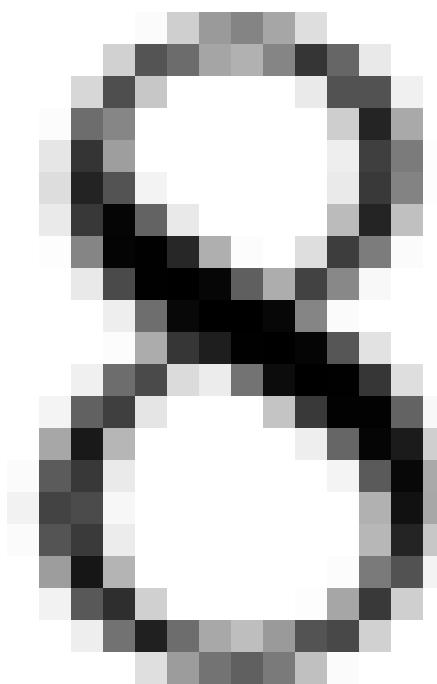
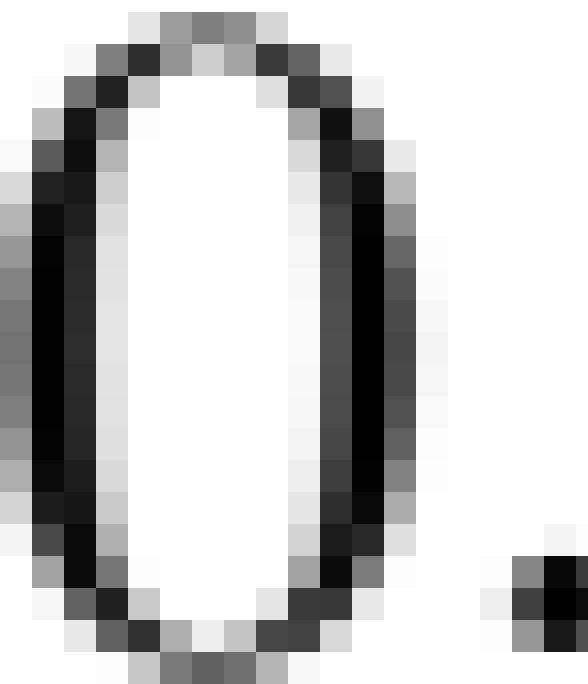




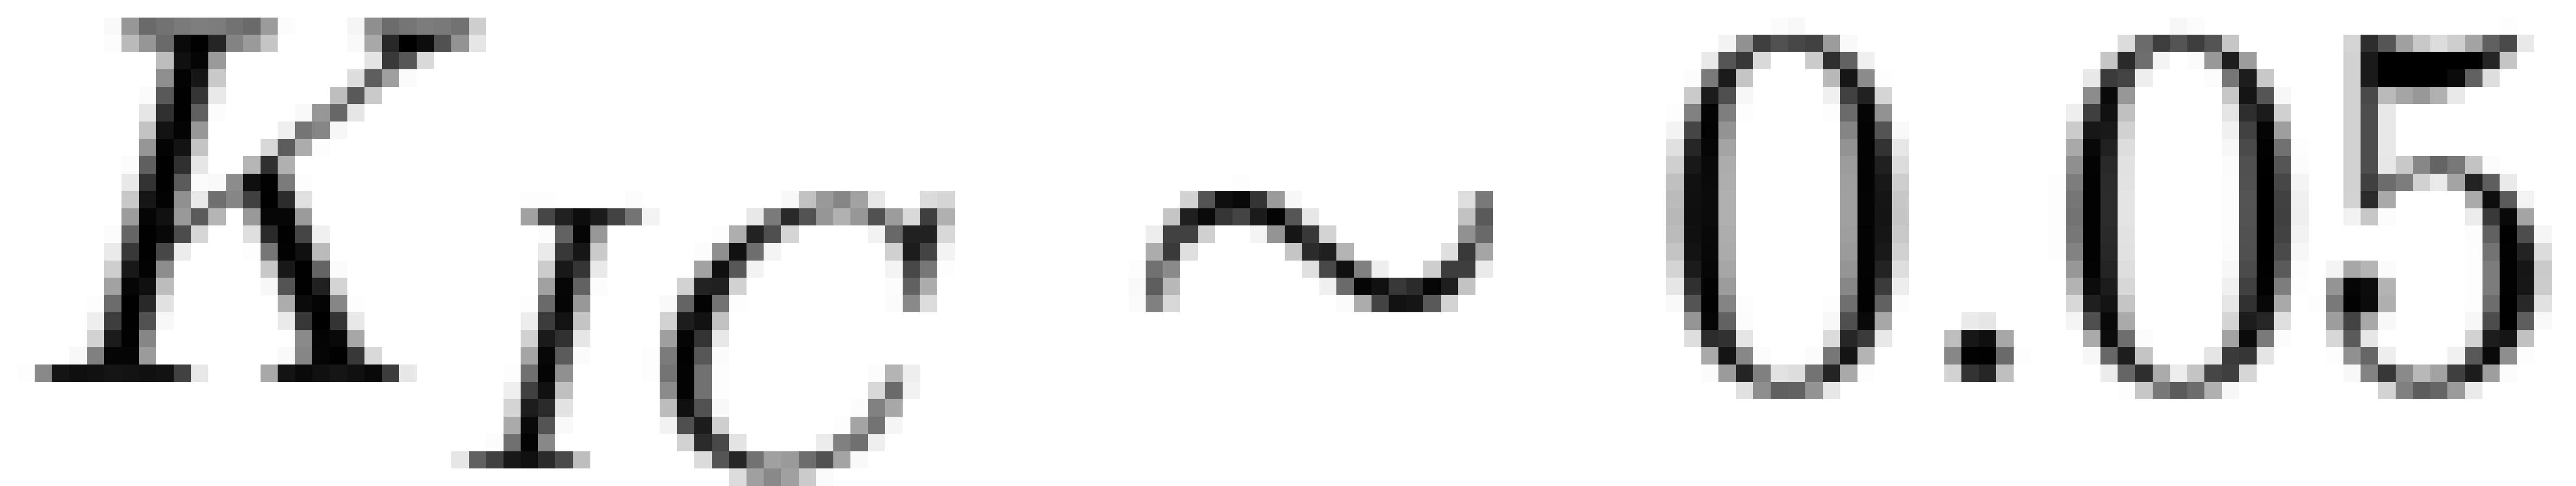


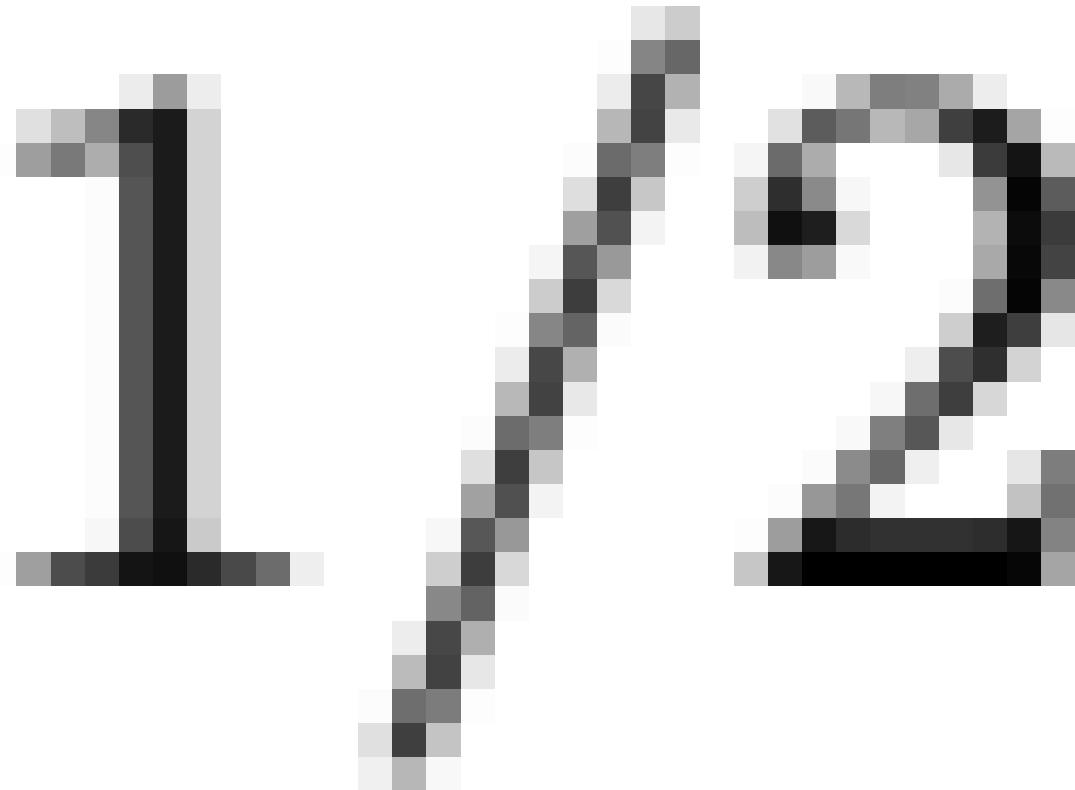




P

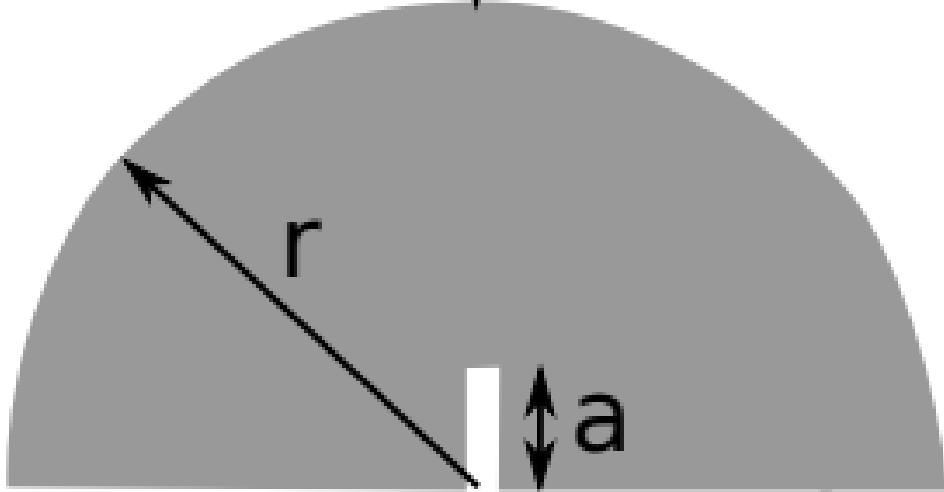


$2s$

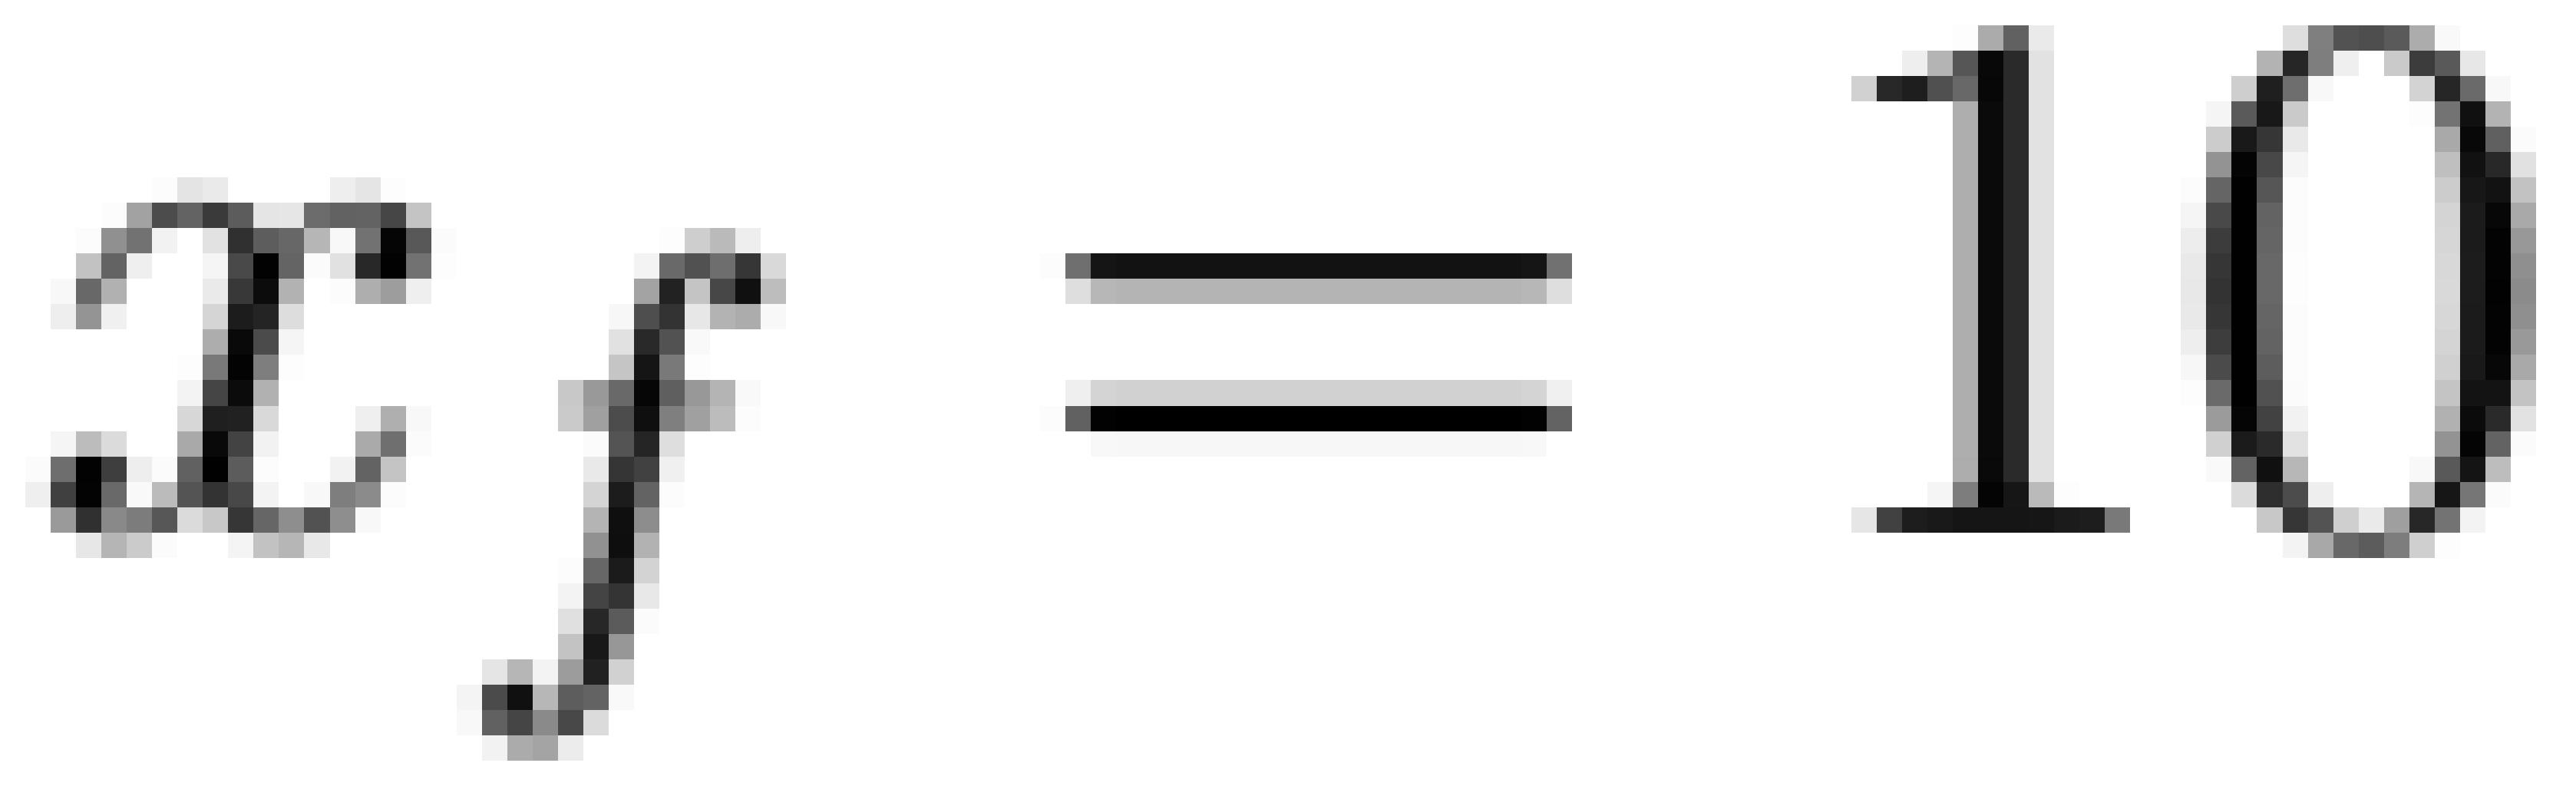


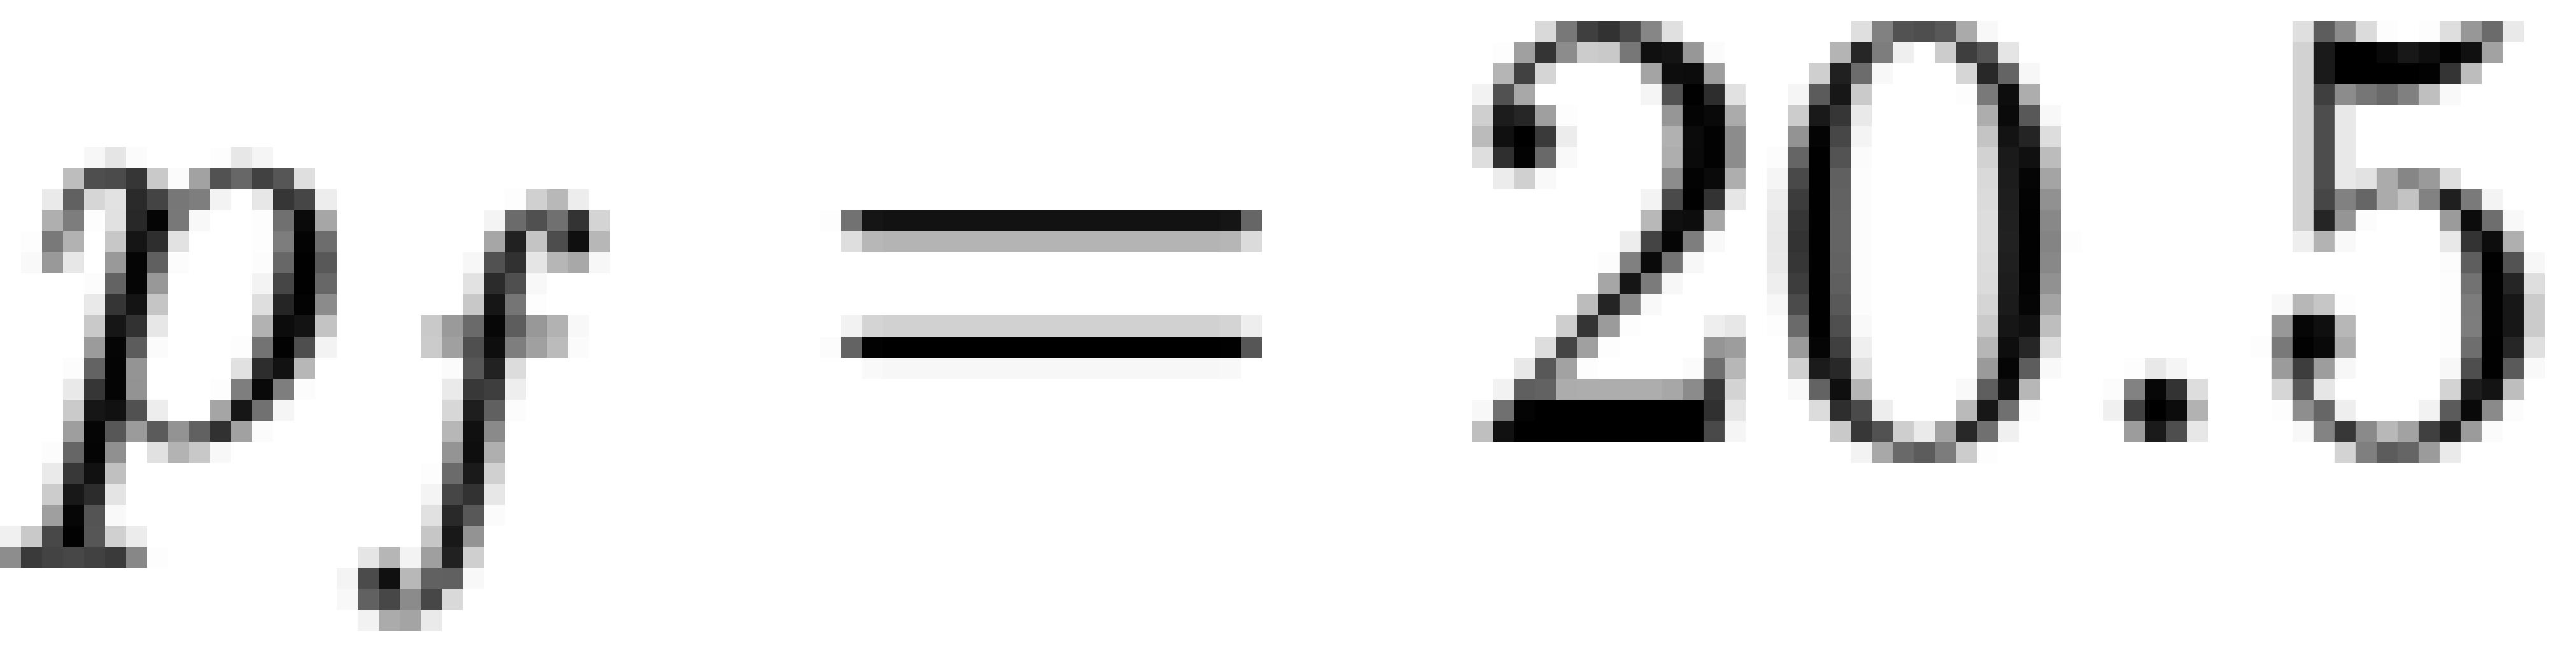

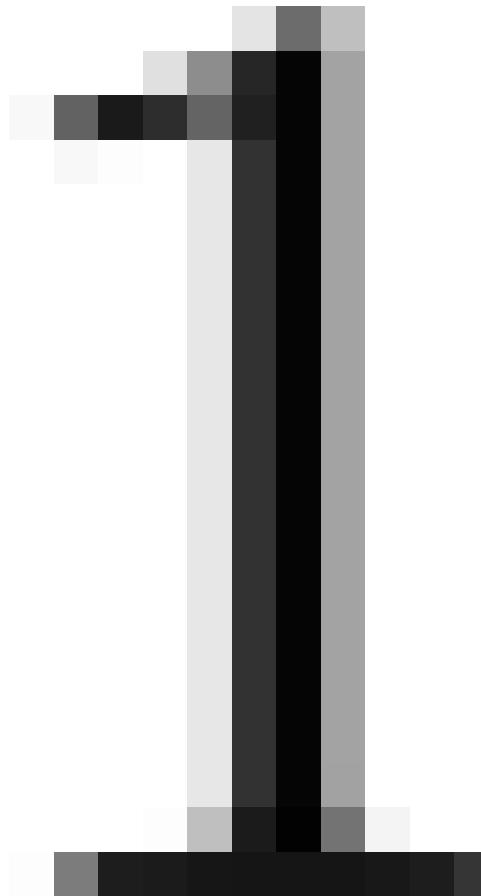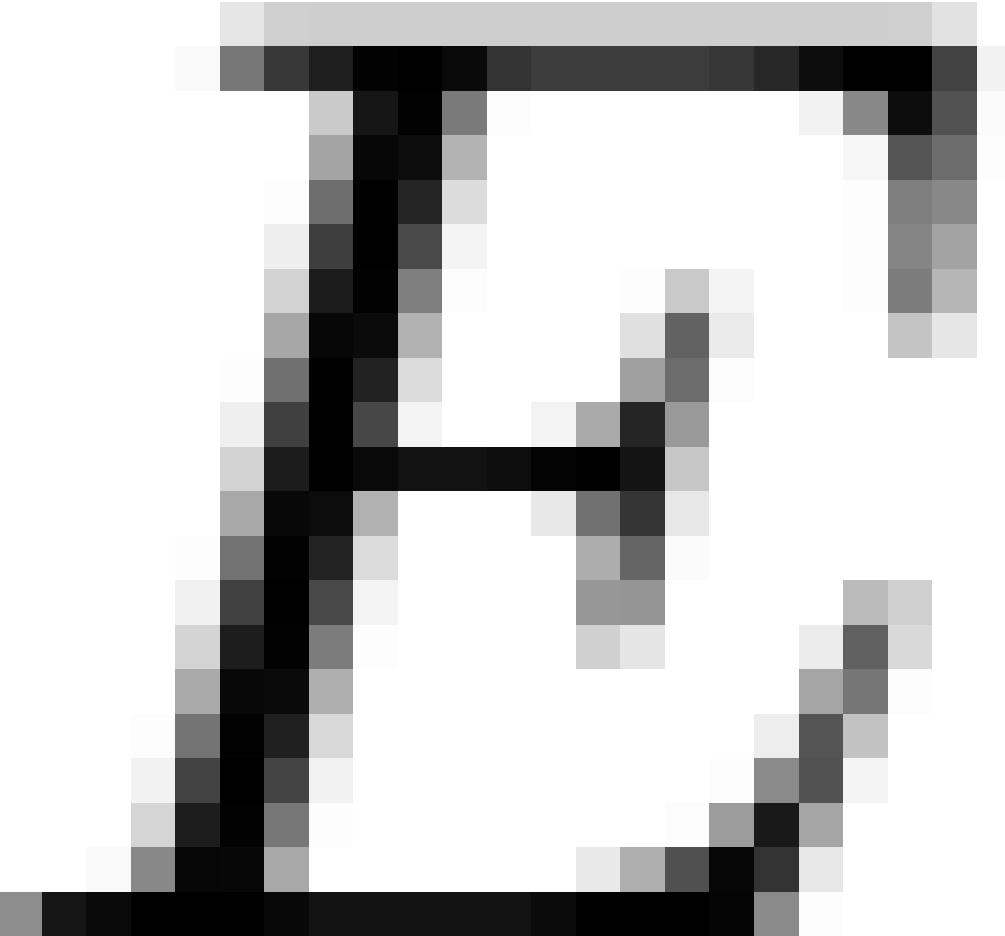





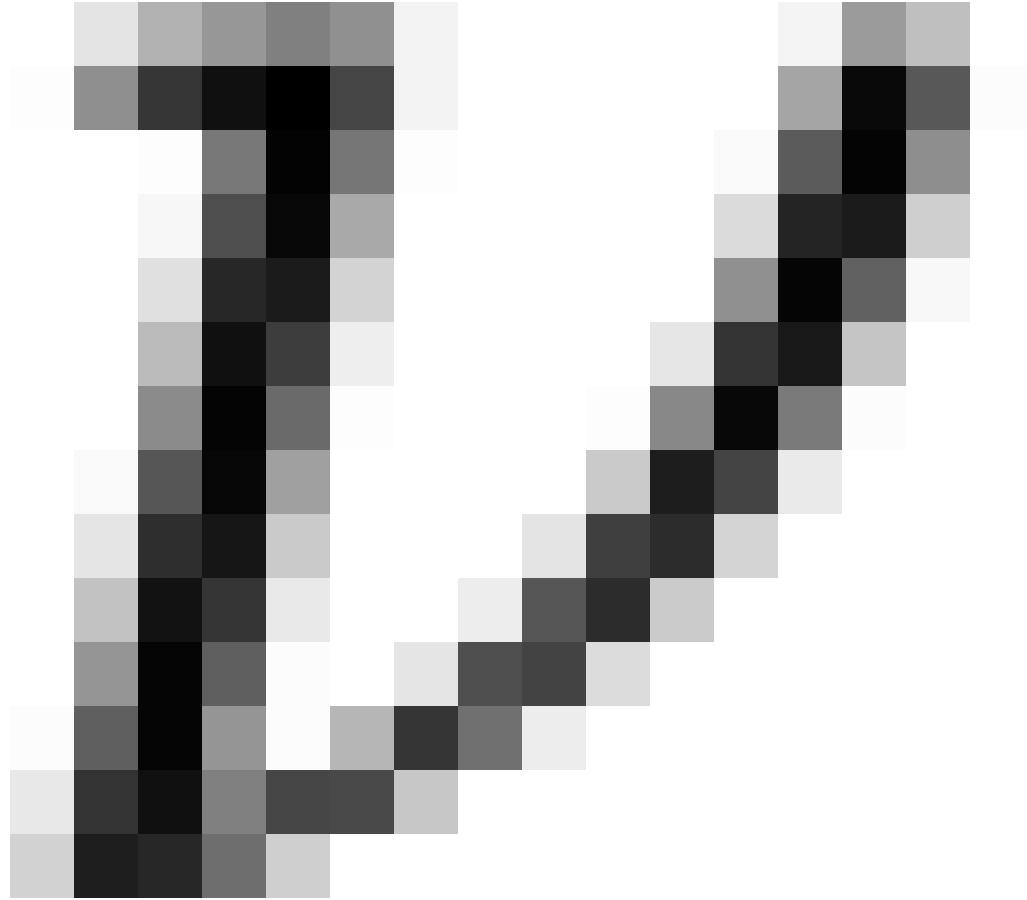



$$\frac{E}{1 - \nu^2} = \frac{1 \text{ GPa}}{1 - 0.25^2} = 1.07 \text{ GPa} = 1.07 \times 10^7 \text{ MPa}$$




$$\omega_0 = \frac{4\rho_0 c}{E'} = \frac{4 \times 0.5 \text{ MPa} \times 10 \text{ m}}{1070 \text{ MPa}} = 0.019 \text{ m} = 19 \text{ mm}$$



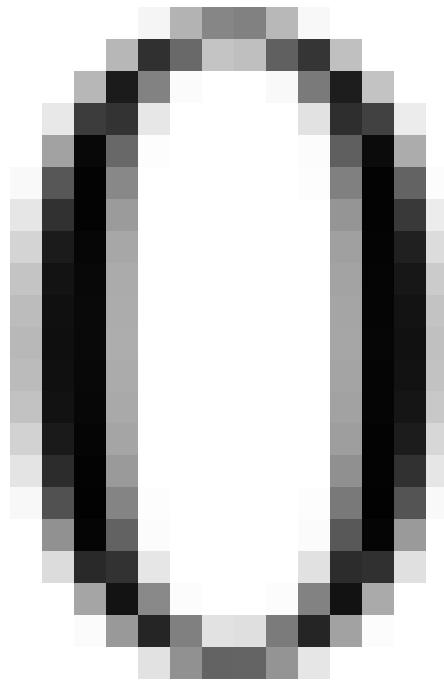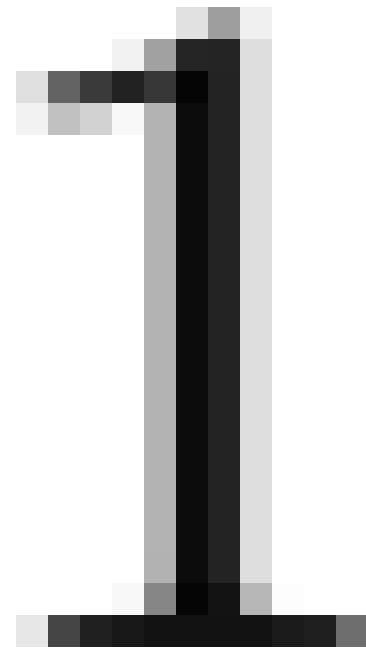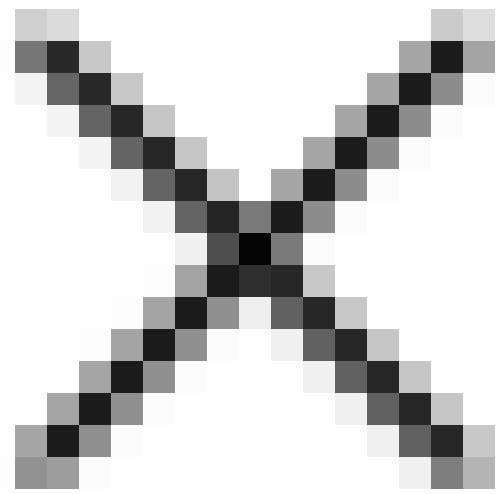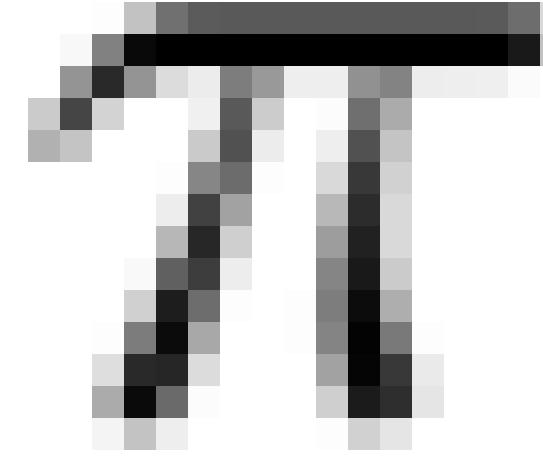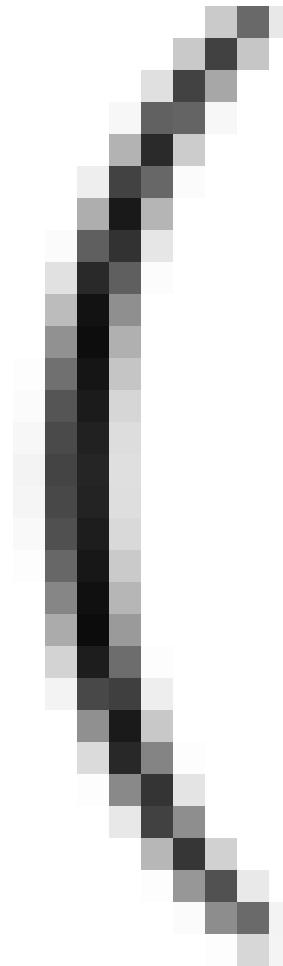


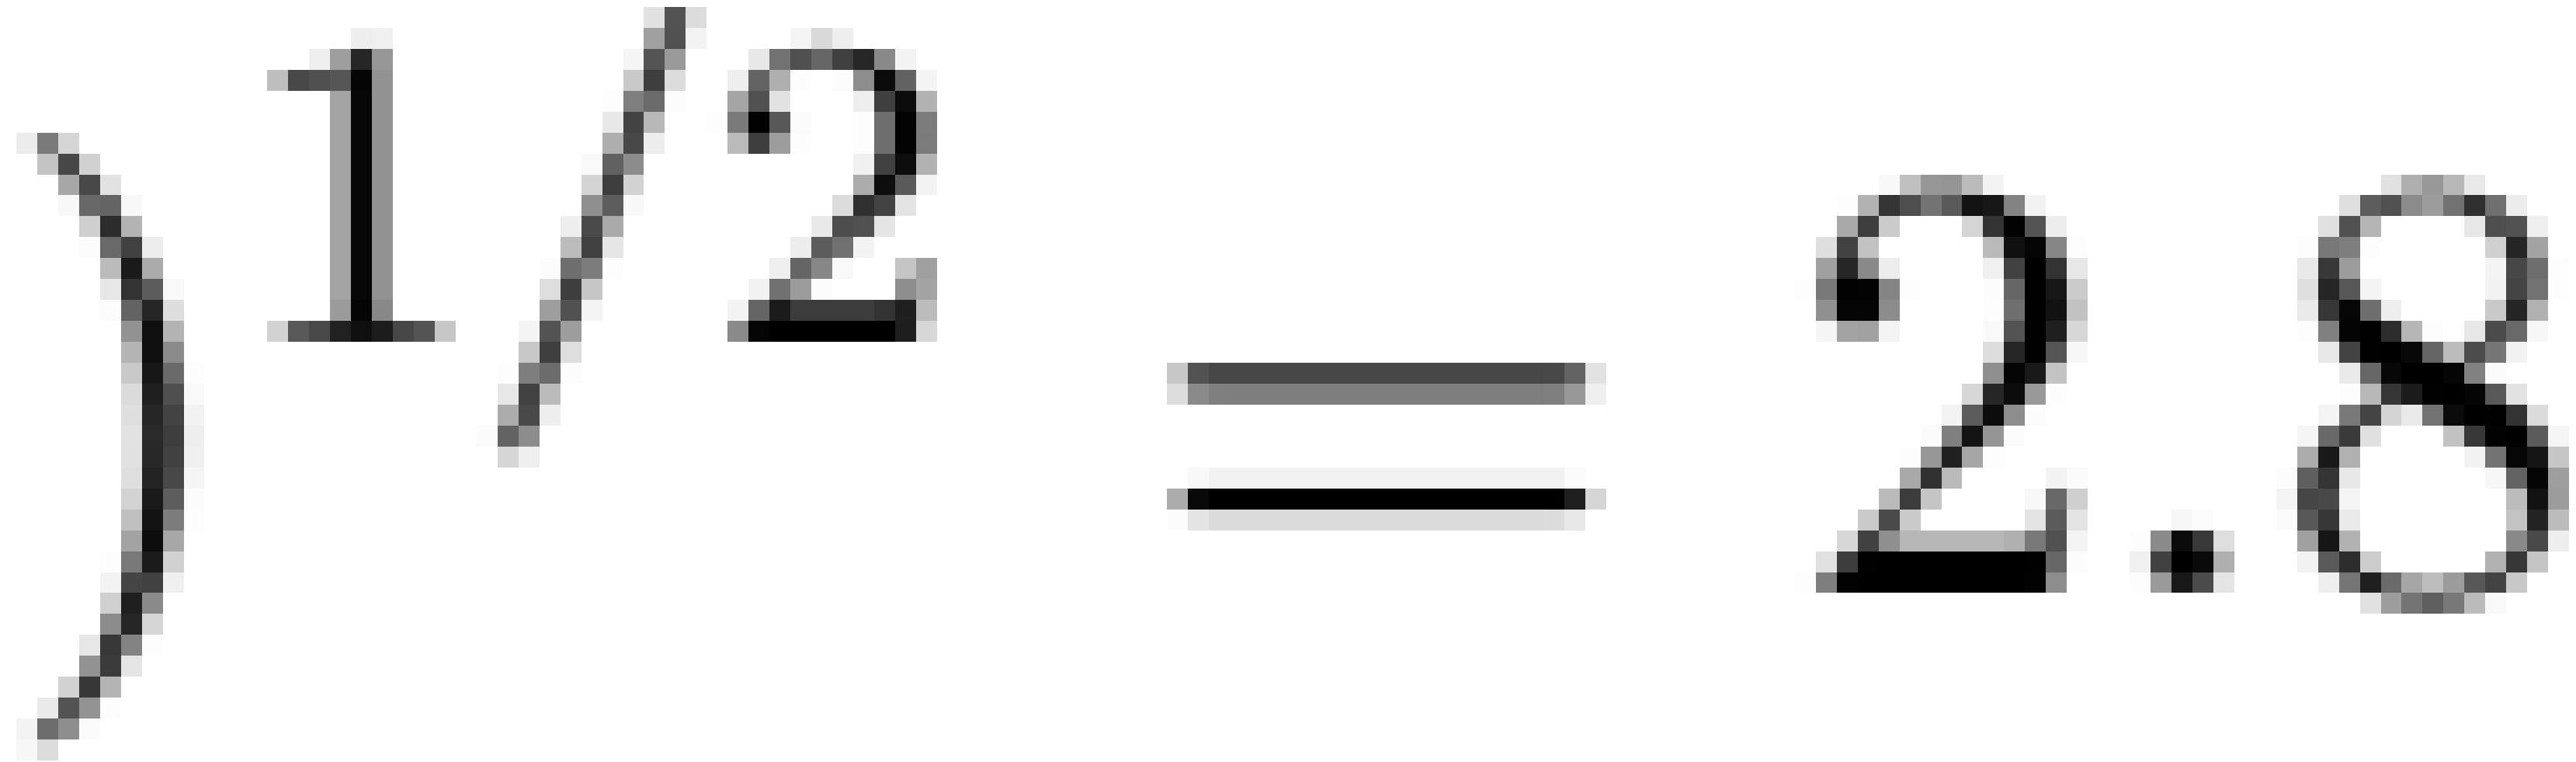


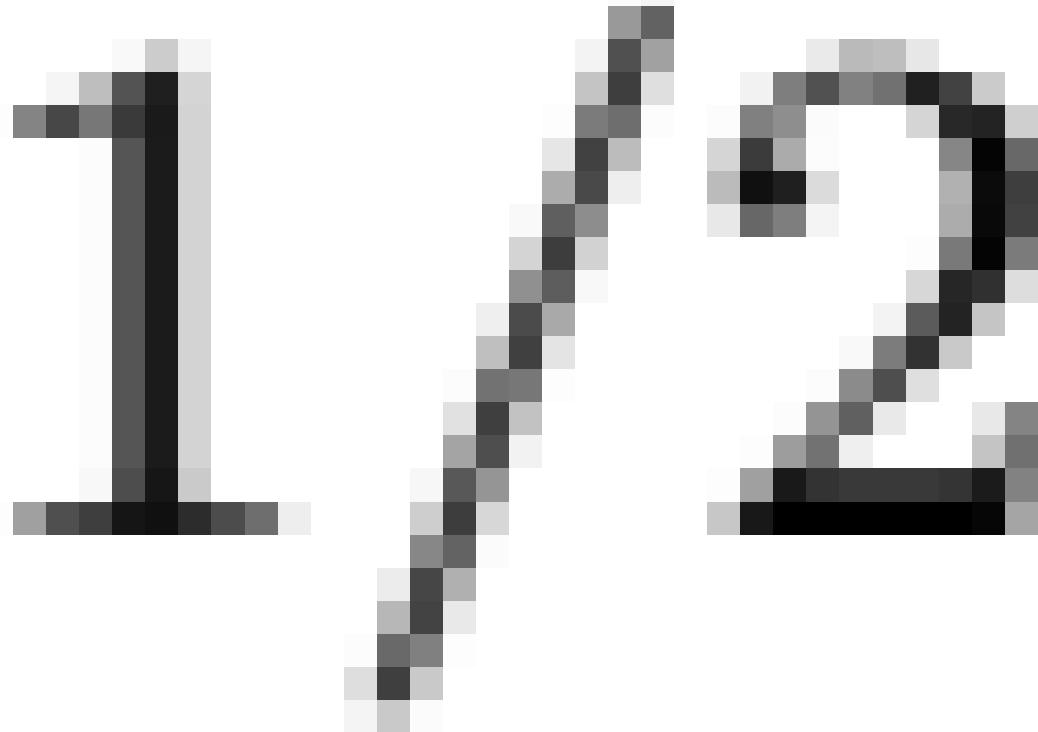


$$w_0 = \frac{2\rho_0 c}{E'} = \frac{2 \times 0.5 \text{ MPa} \times 10 \text{ m}}{1070 \text{ MPa}} = 0.0095 \text{ m} = 9.5 \text{ mm}$$


$$K_I = \left(1 - \frac{2}{\pi}\right)^{1/2} = \rho_0(\pi c)^{1/2} = 0.5$$




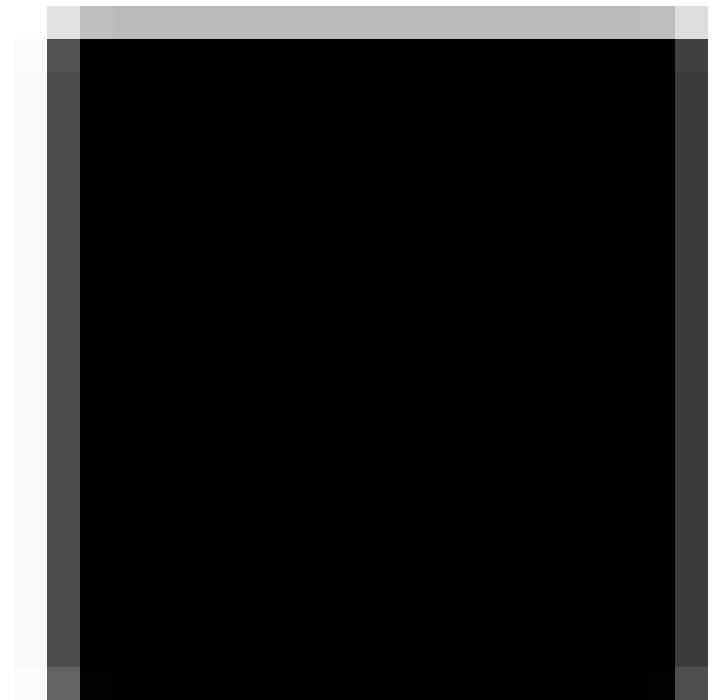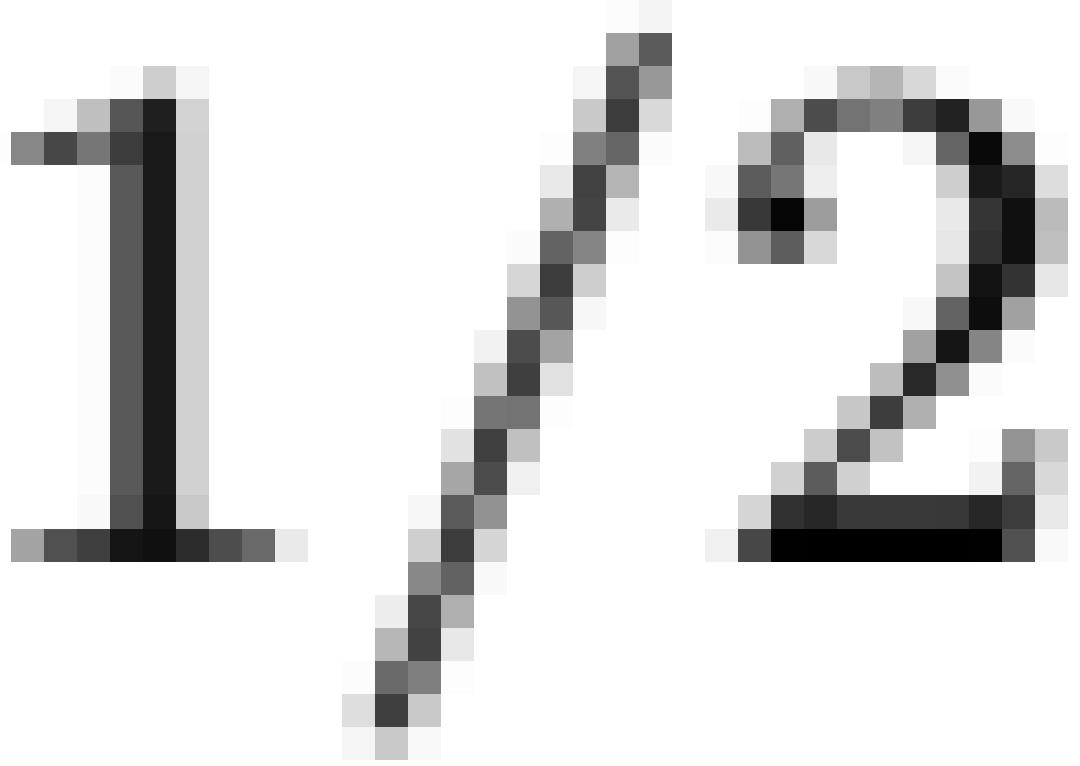


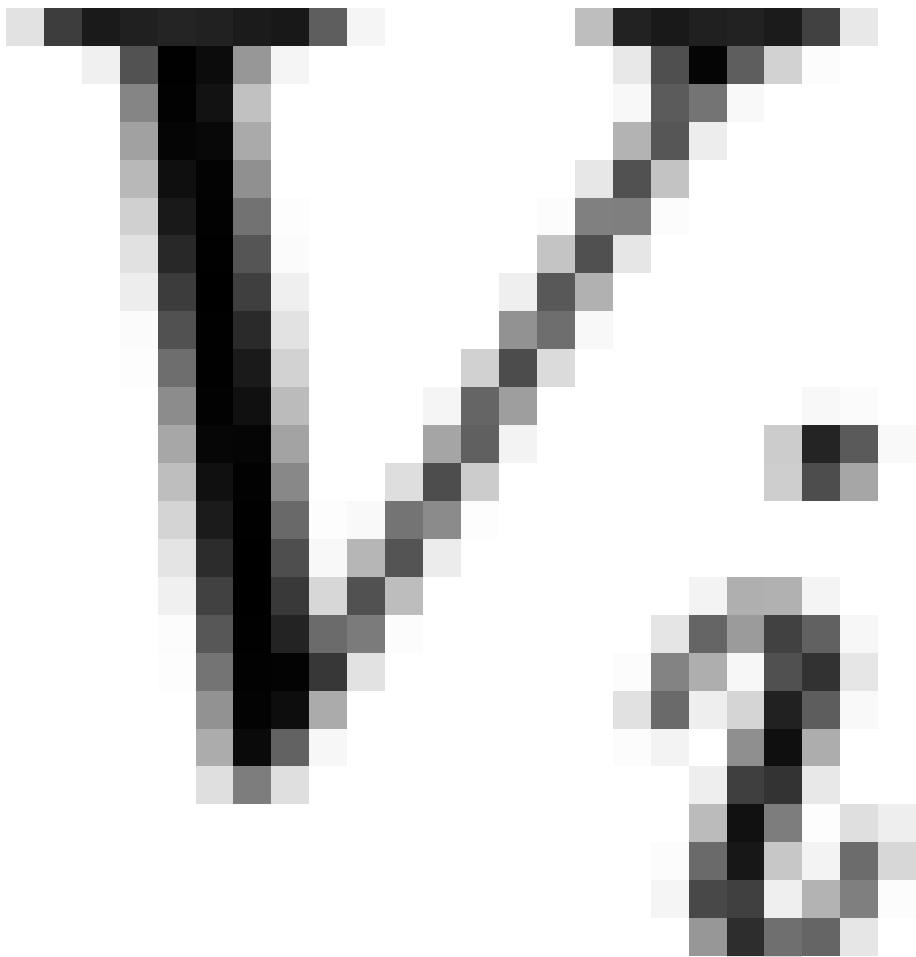



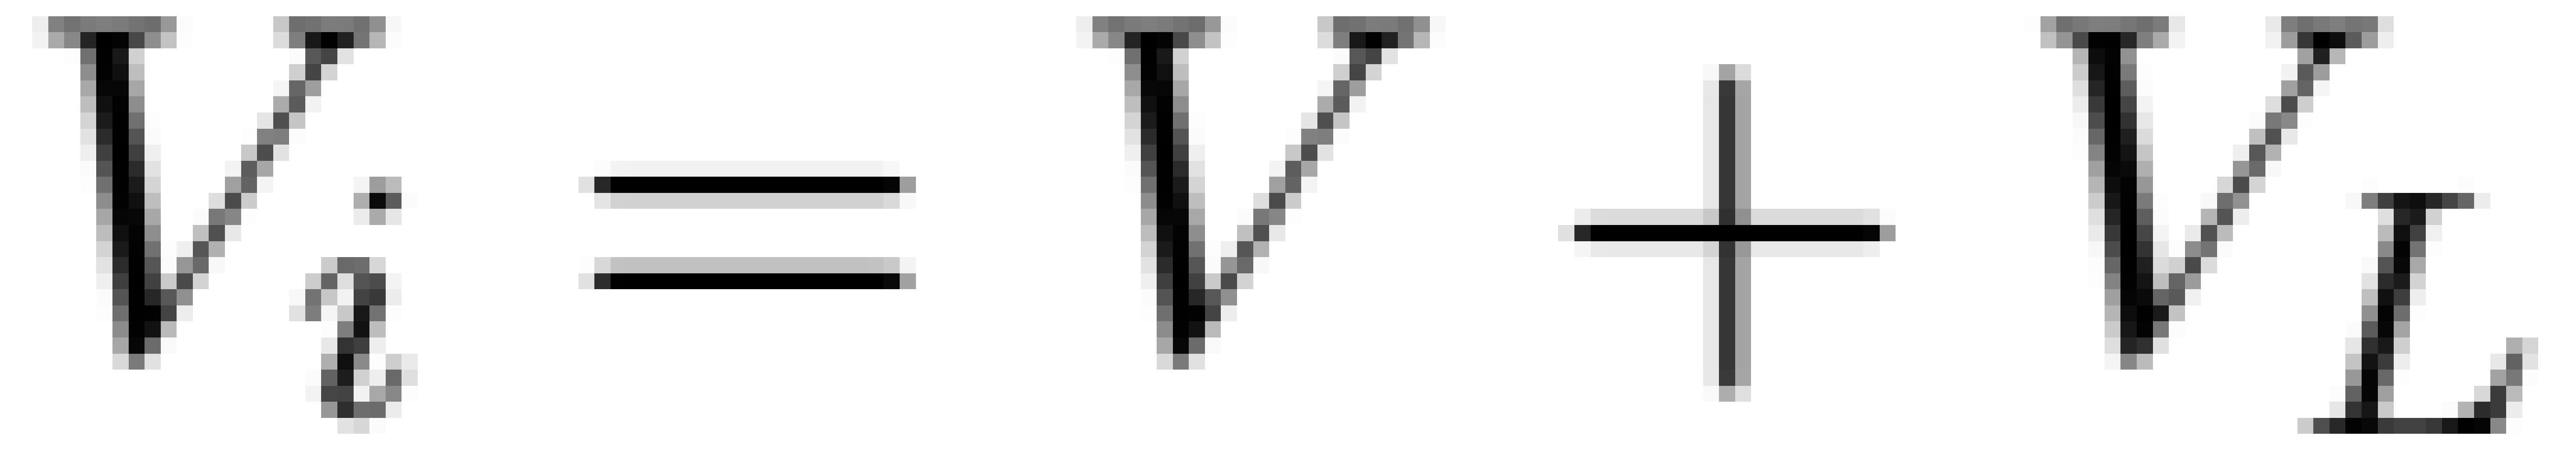

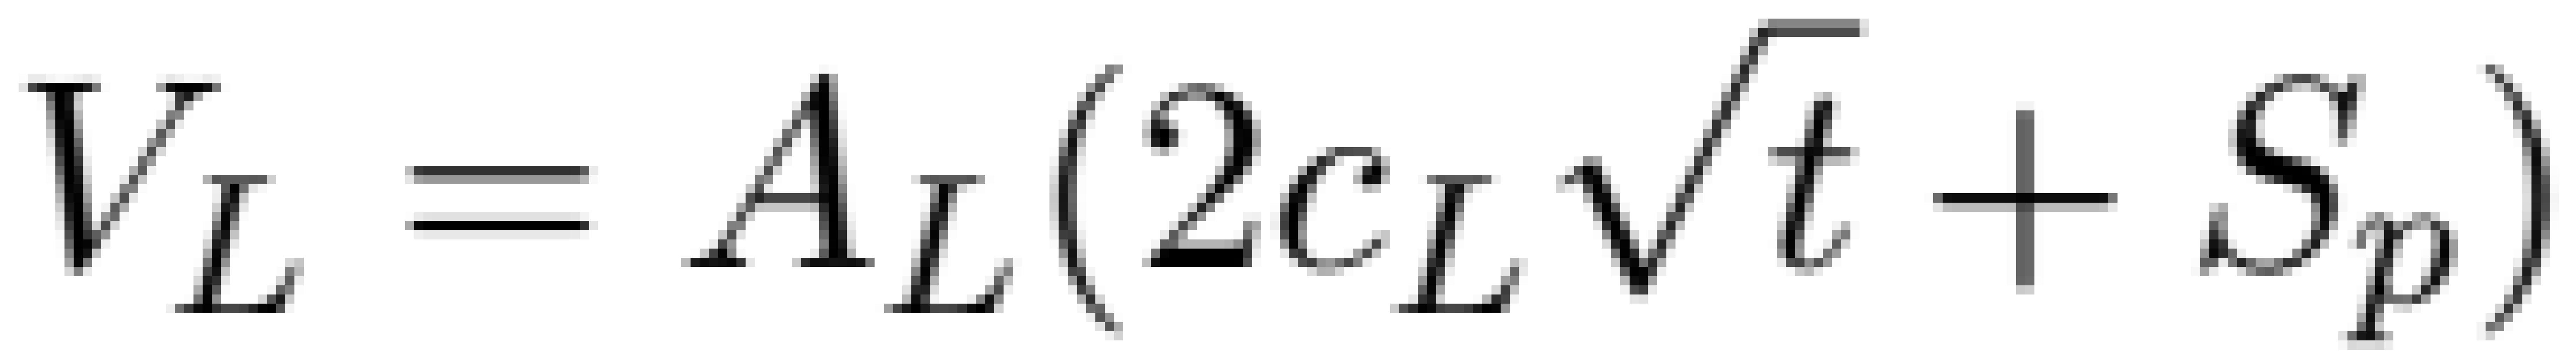

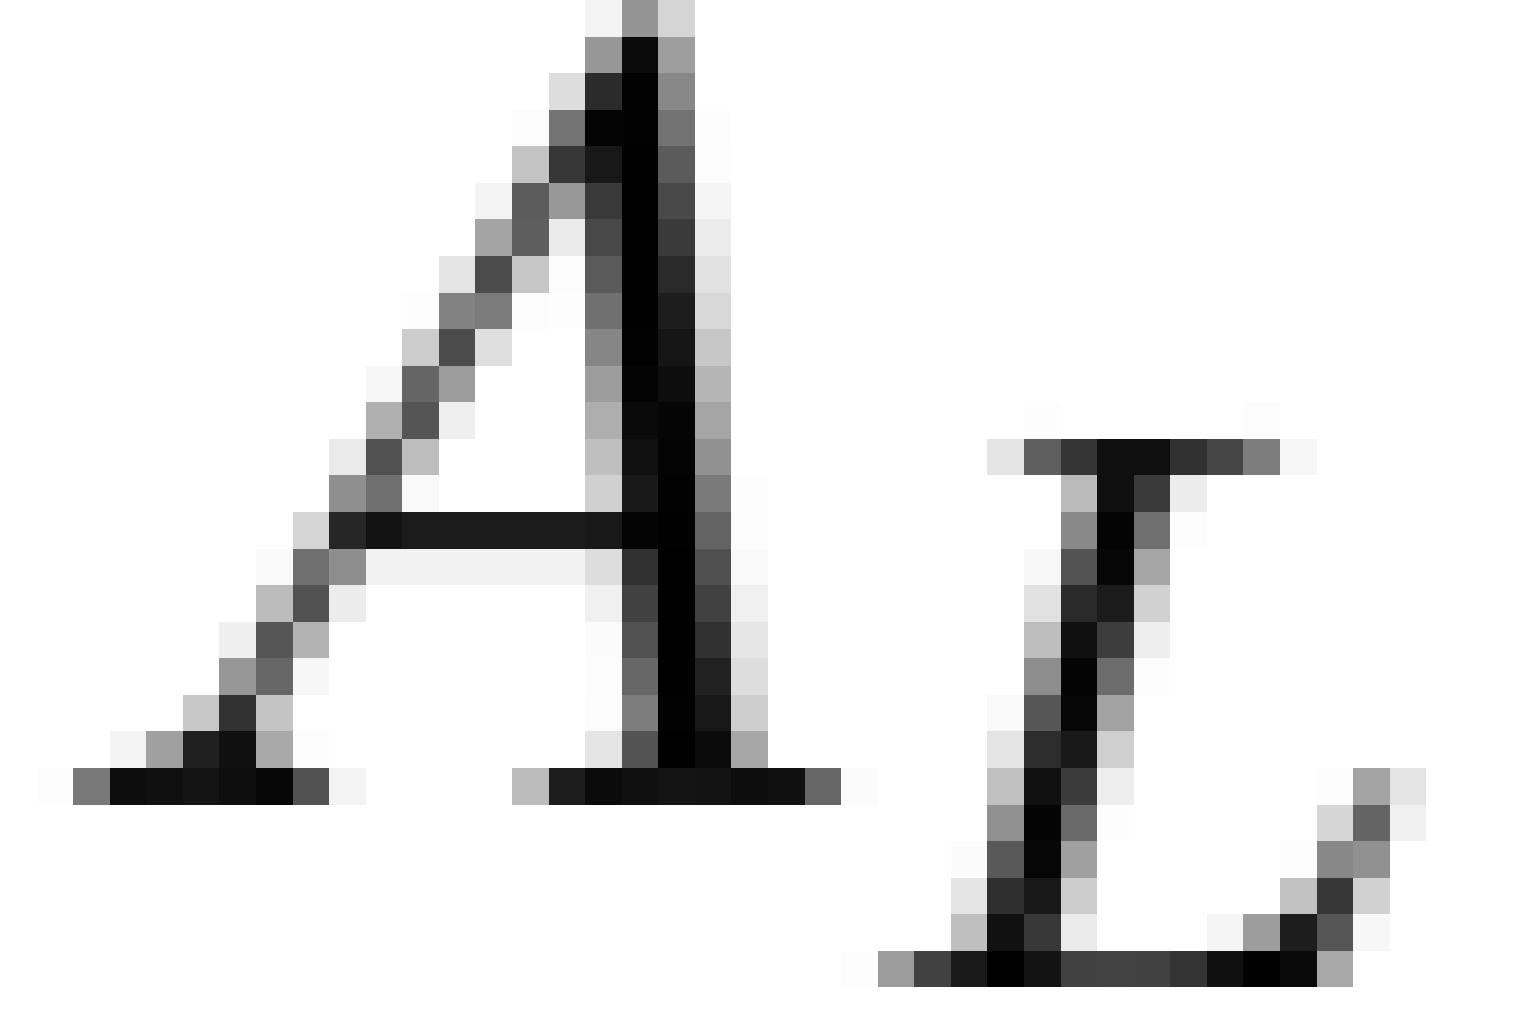





W


—


W.




—




W

?

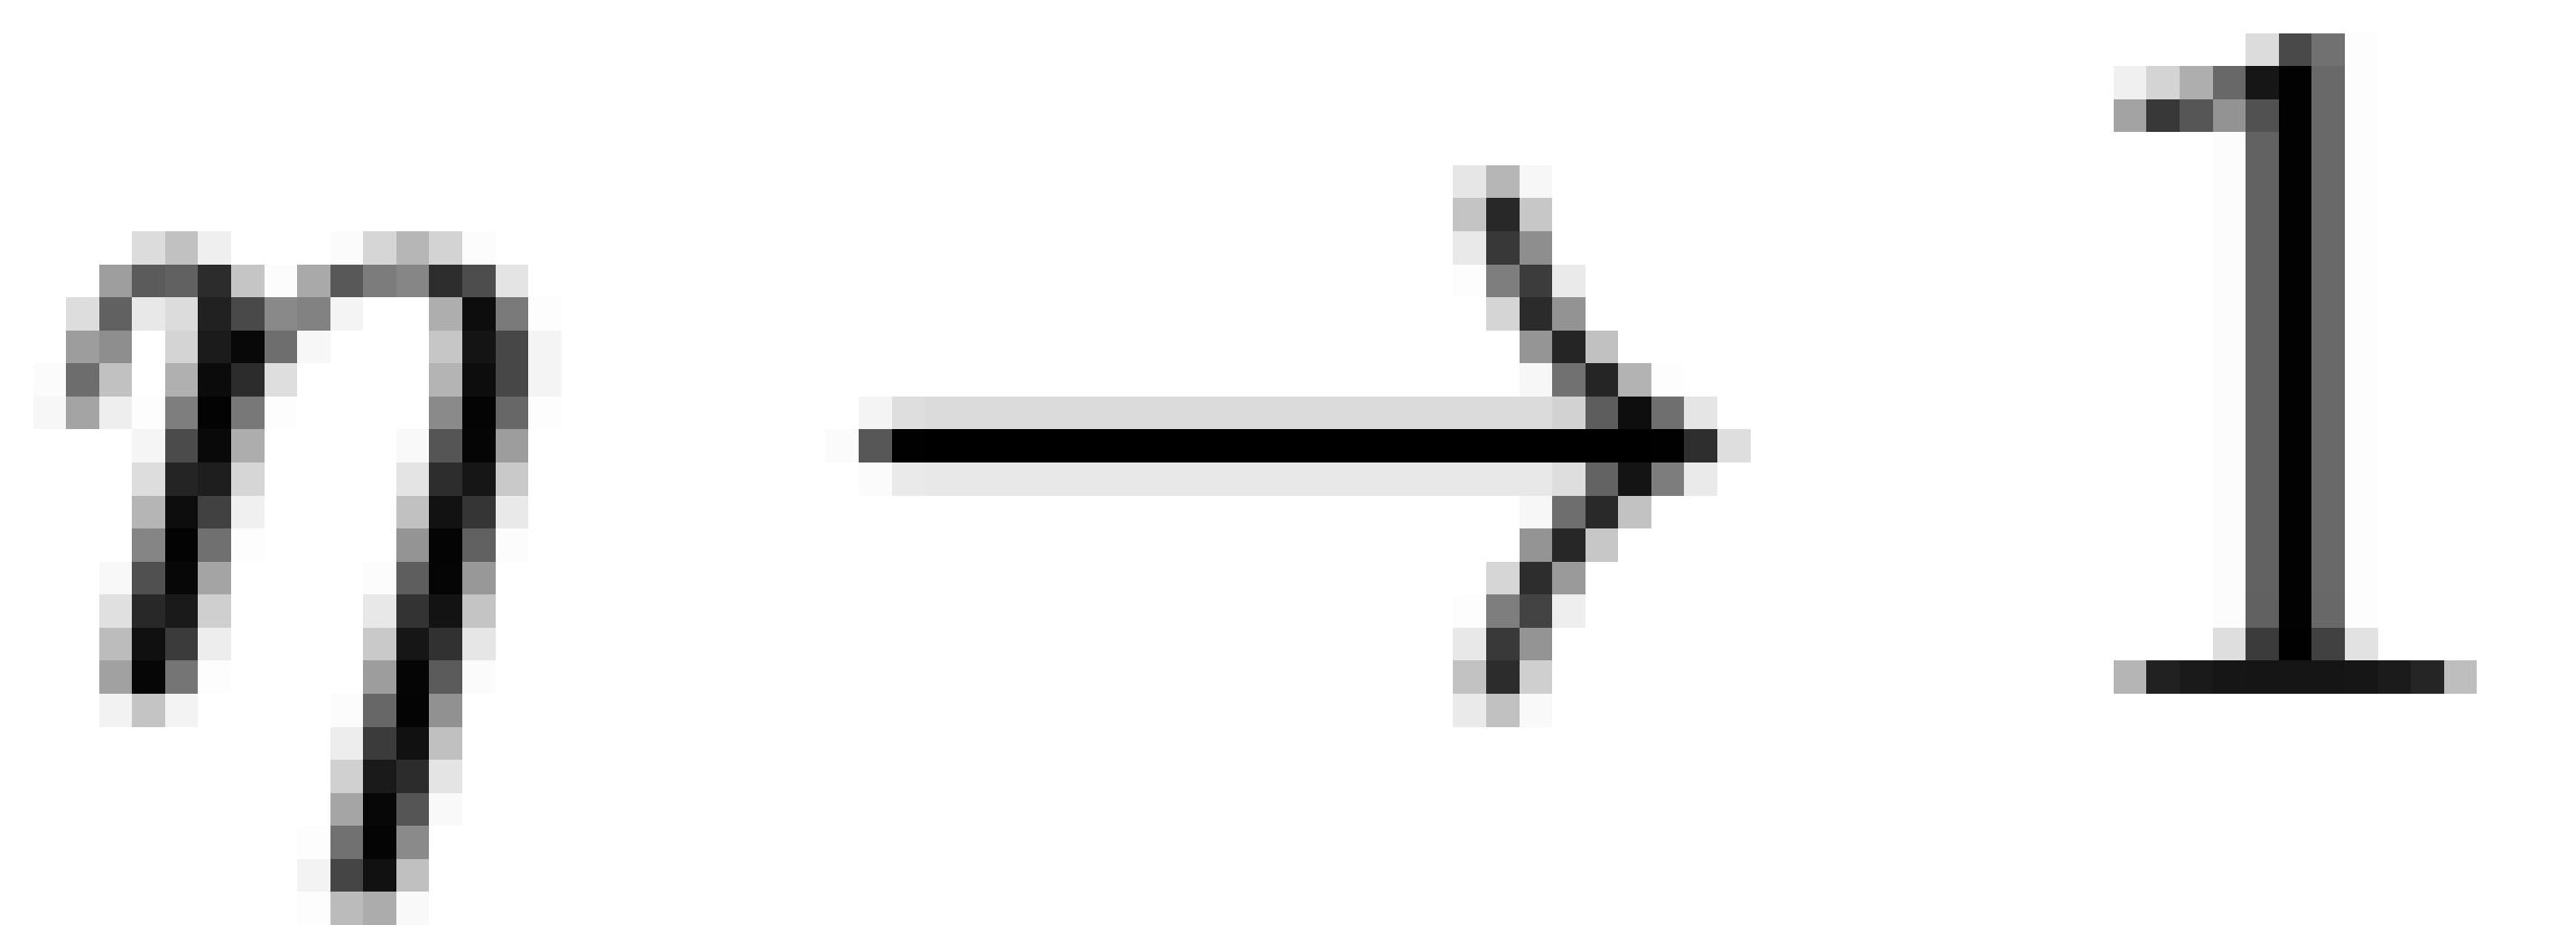

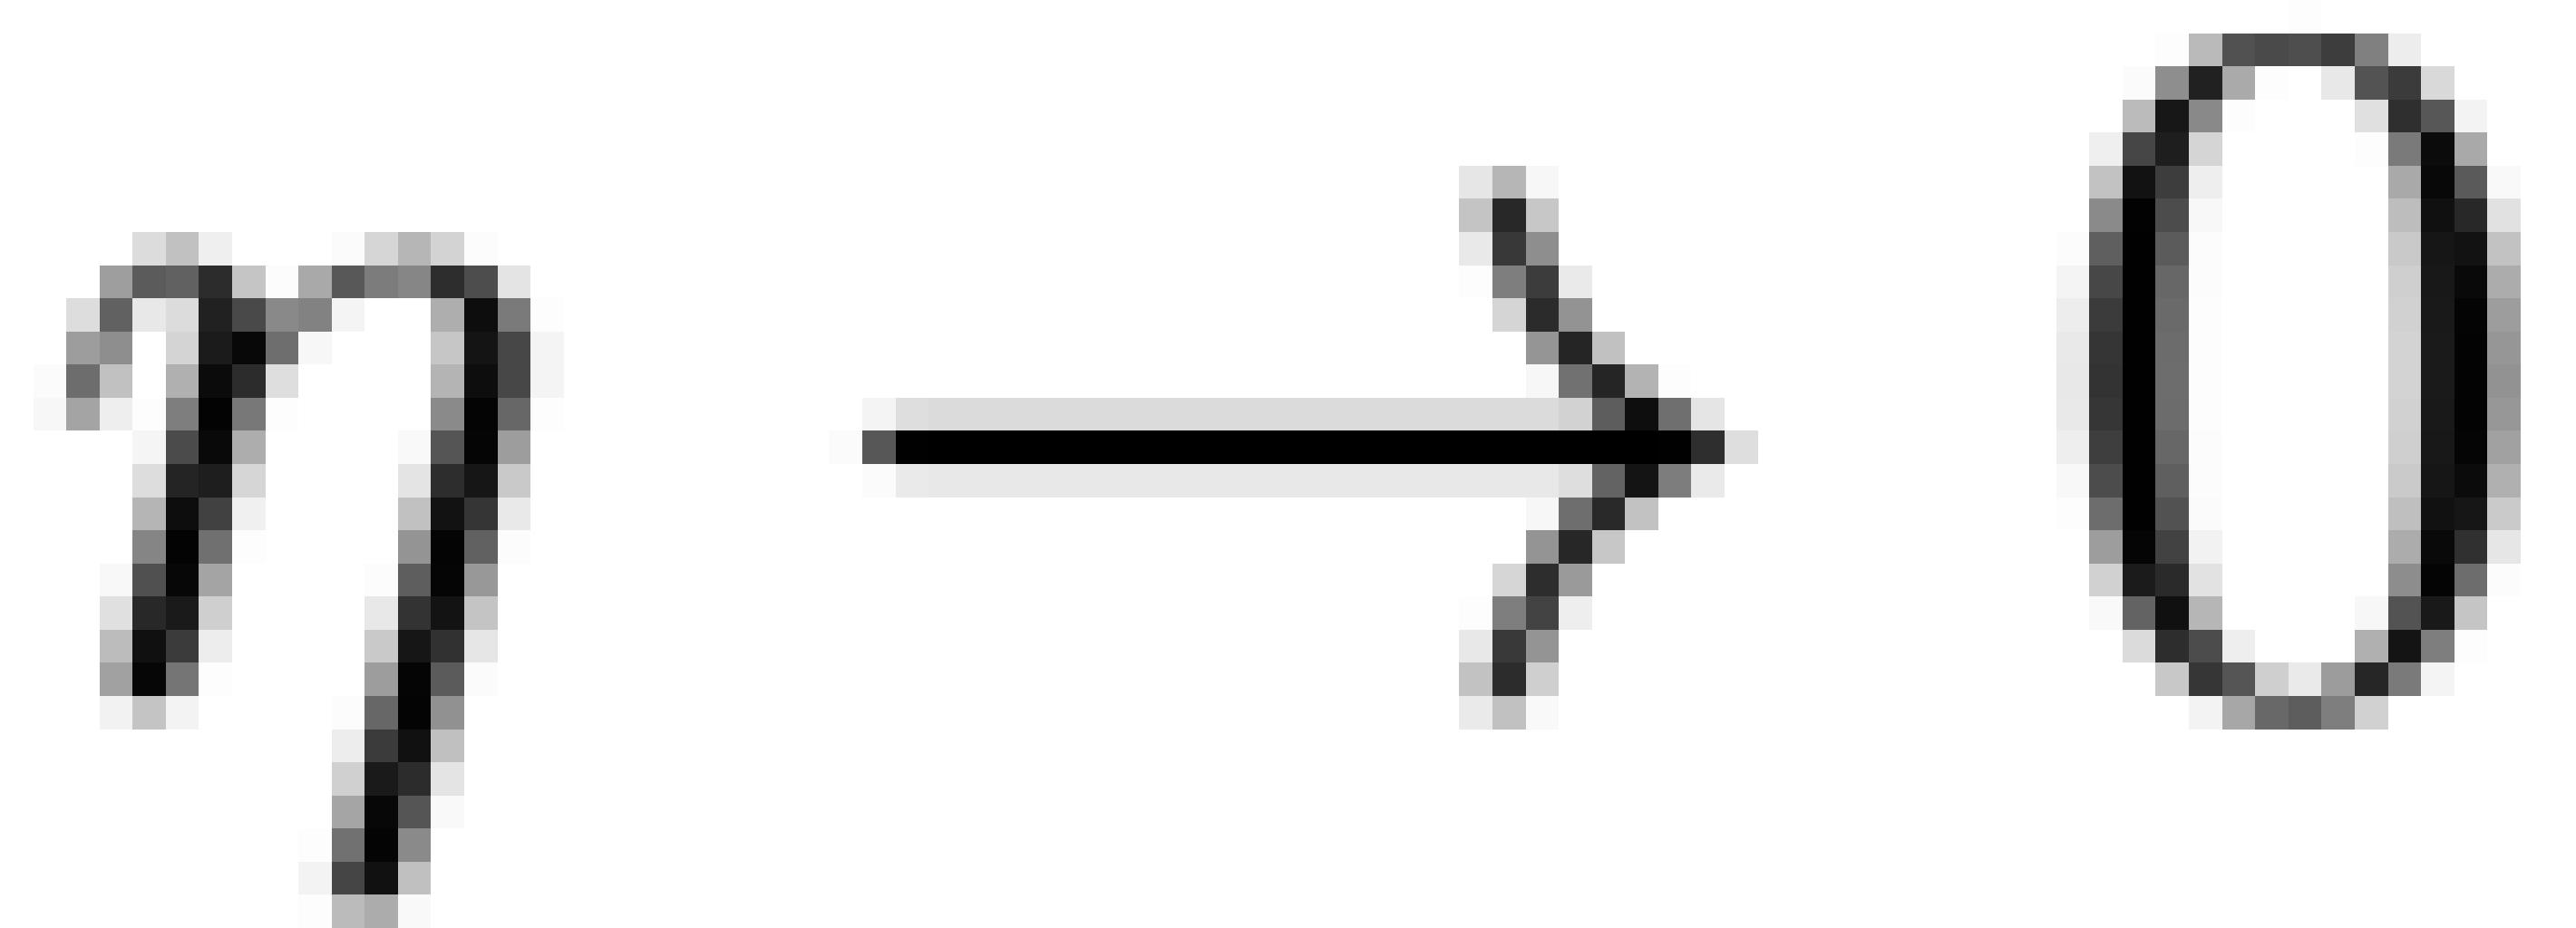

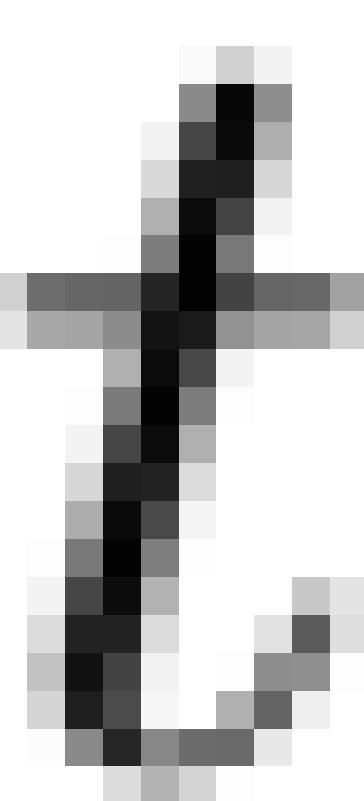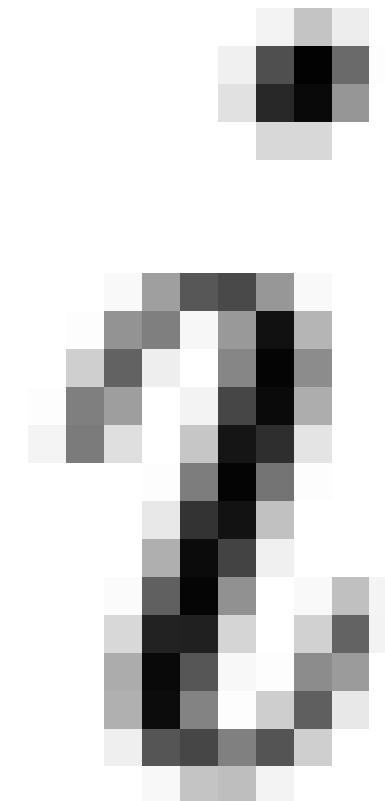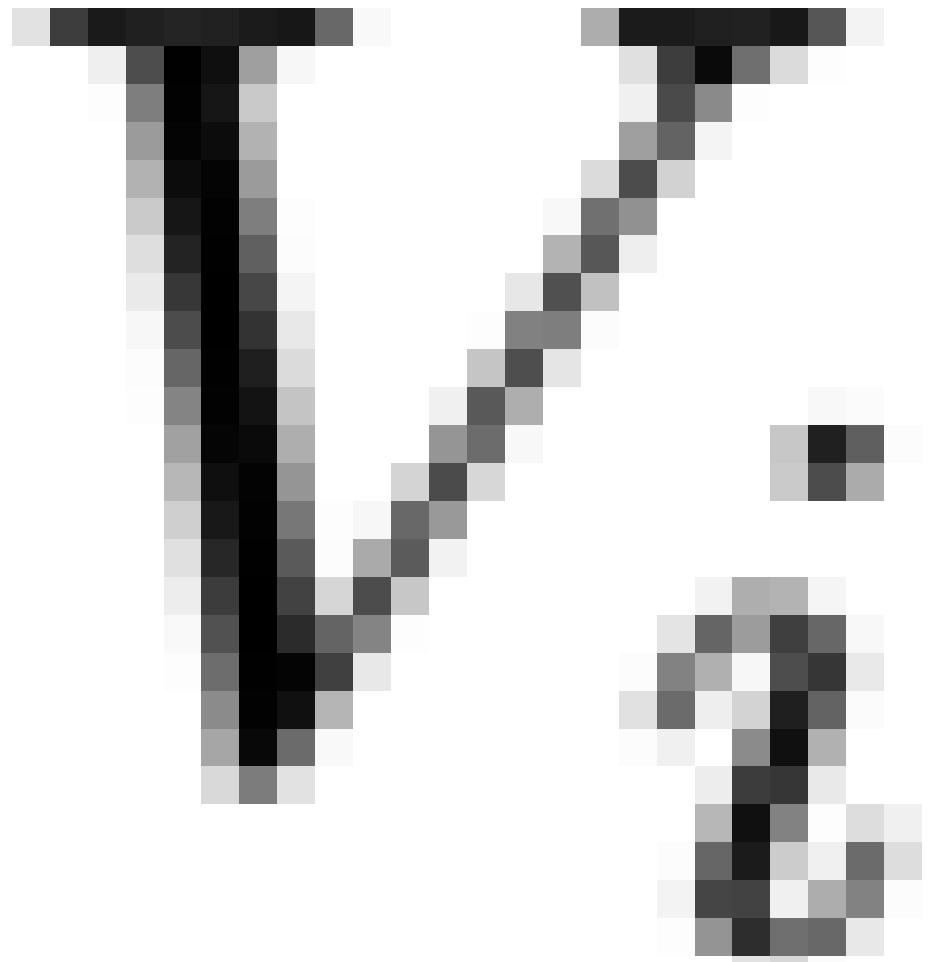


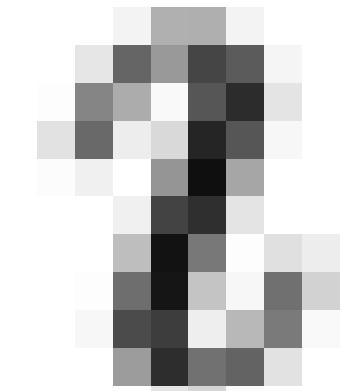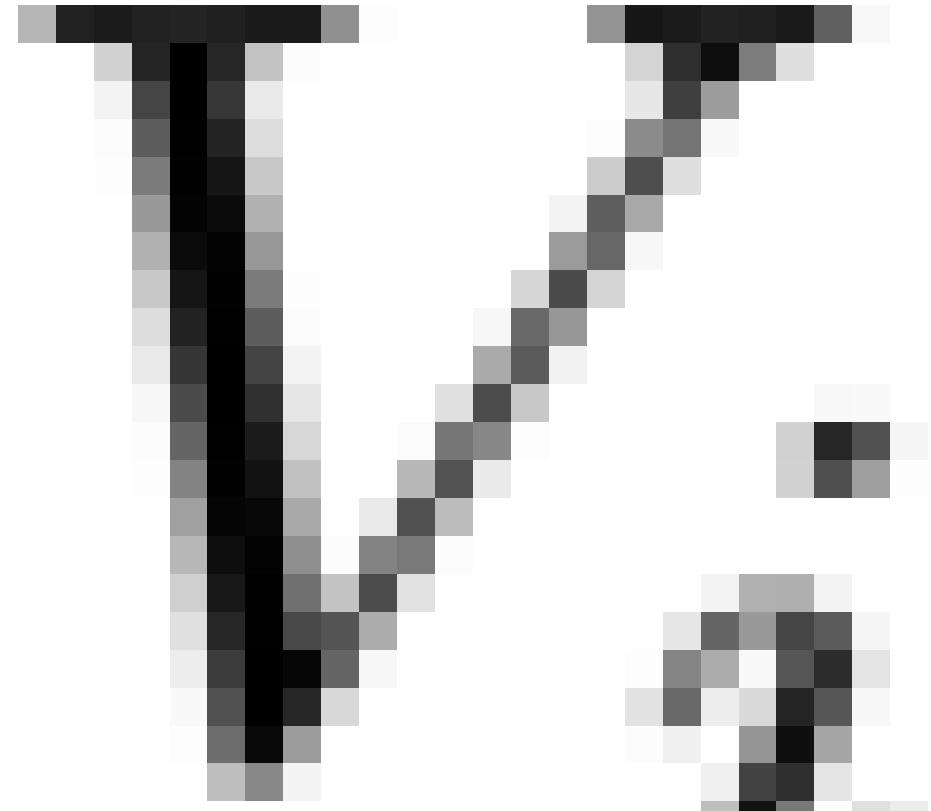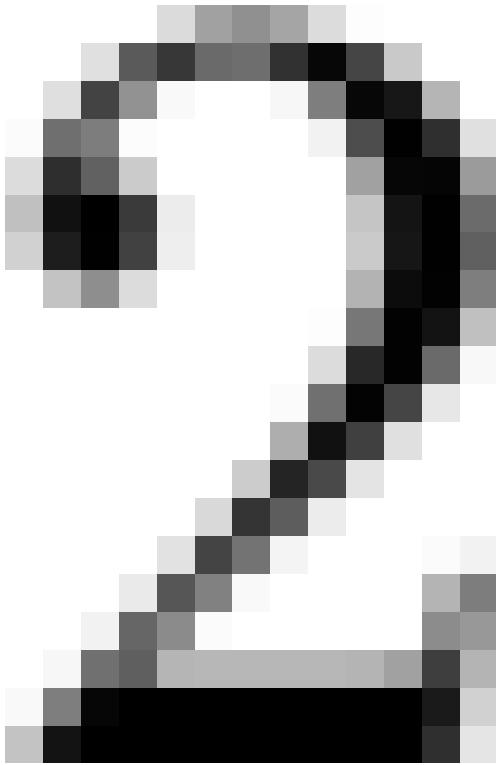


q

$\omega^3 h_f P$

$12\mu L$




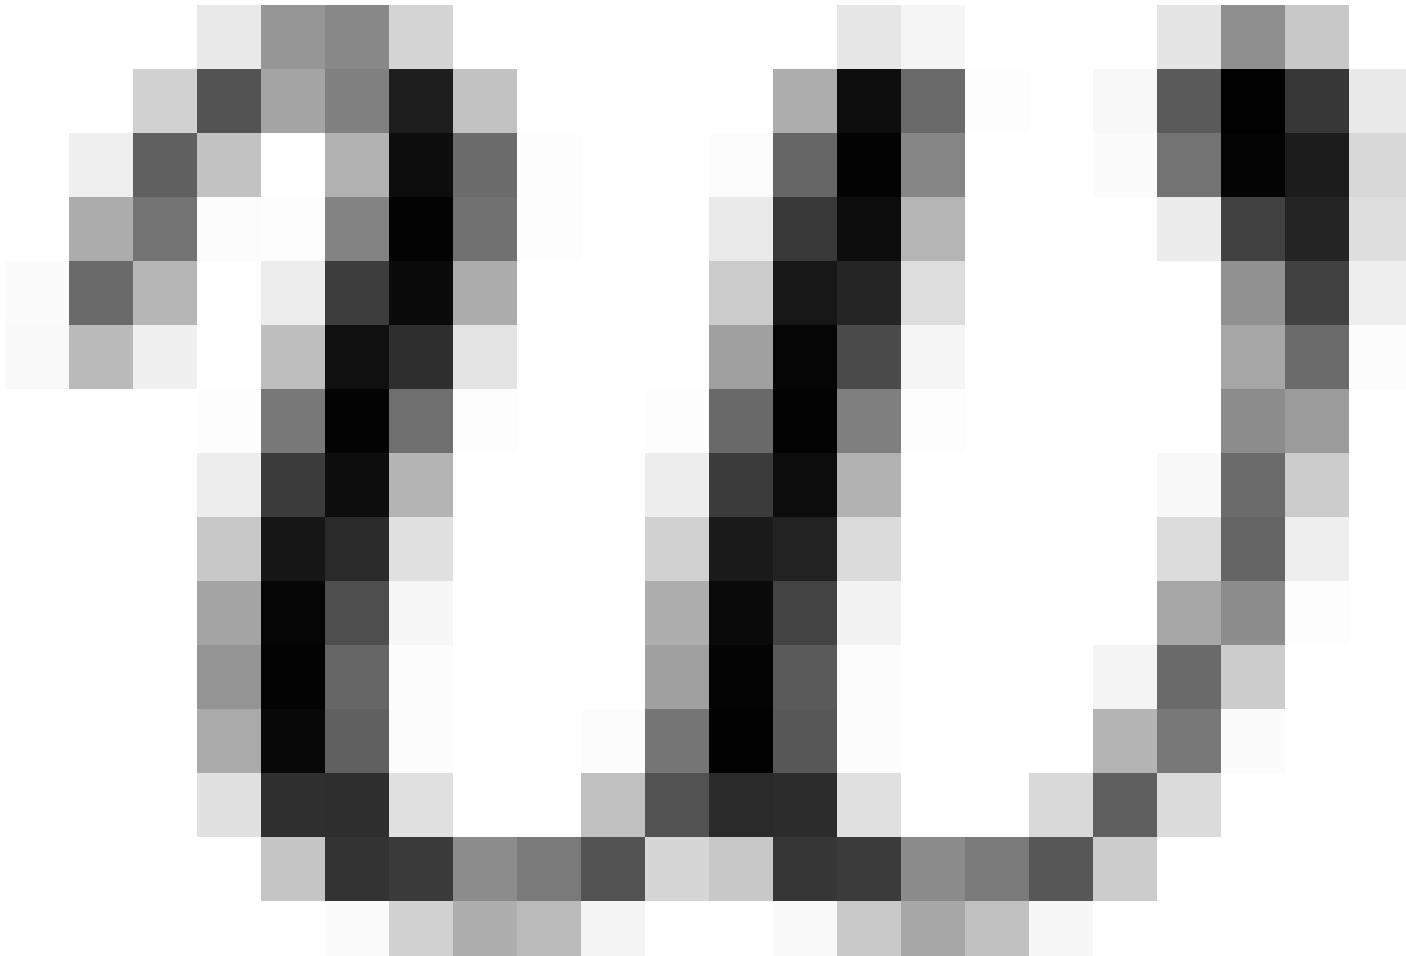


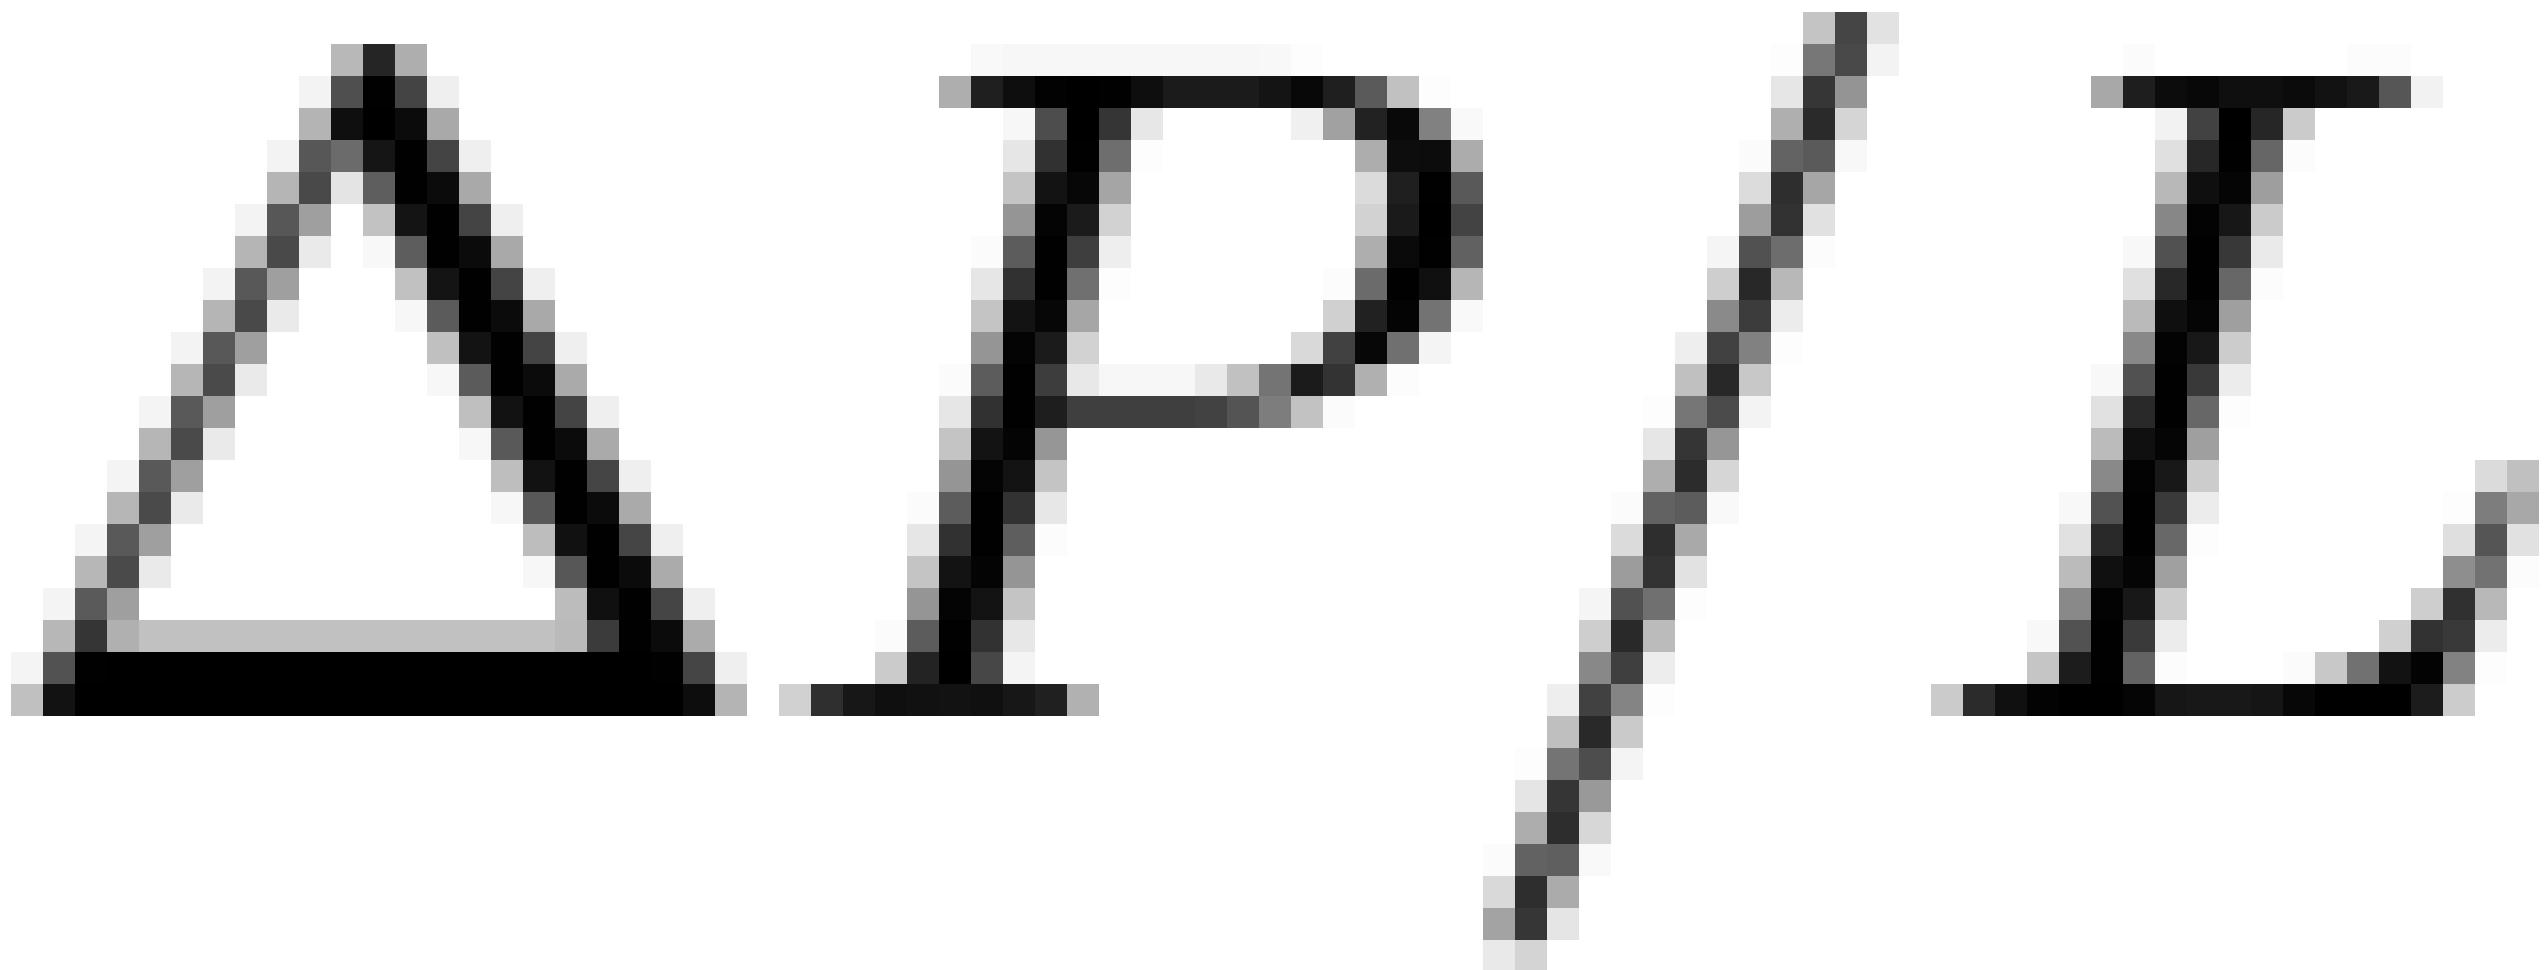






2D Fracture Models

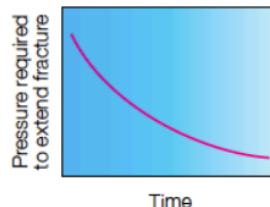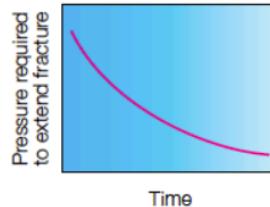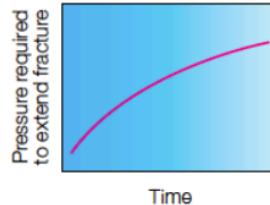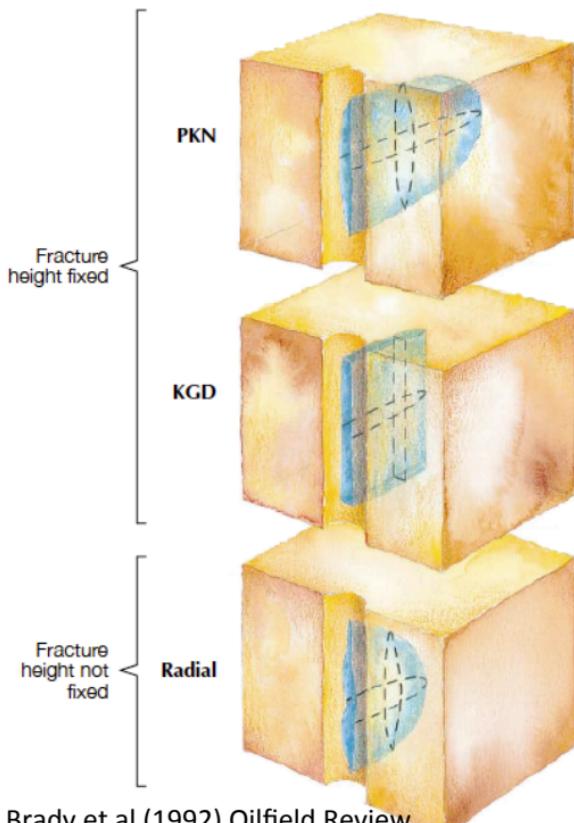

- Elliptical cross section
- Width \propto height
- Width < KGD; length > KGD
- More appropriate when fracture length > height

- Rectangular cross section
- Width \propto length
- More appropriate when fracture length < height

- Appropriate when fracture length = height

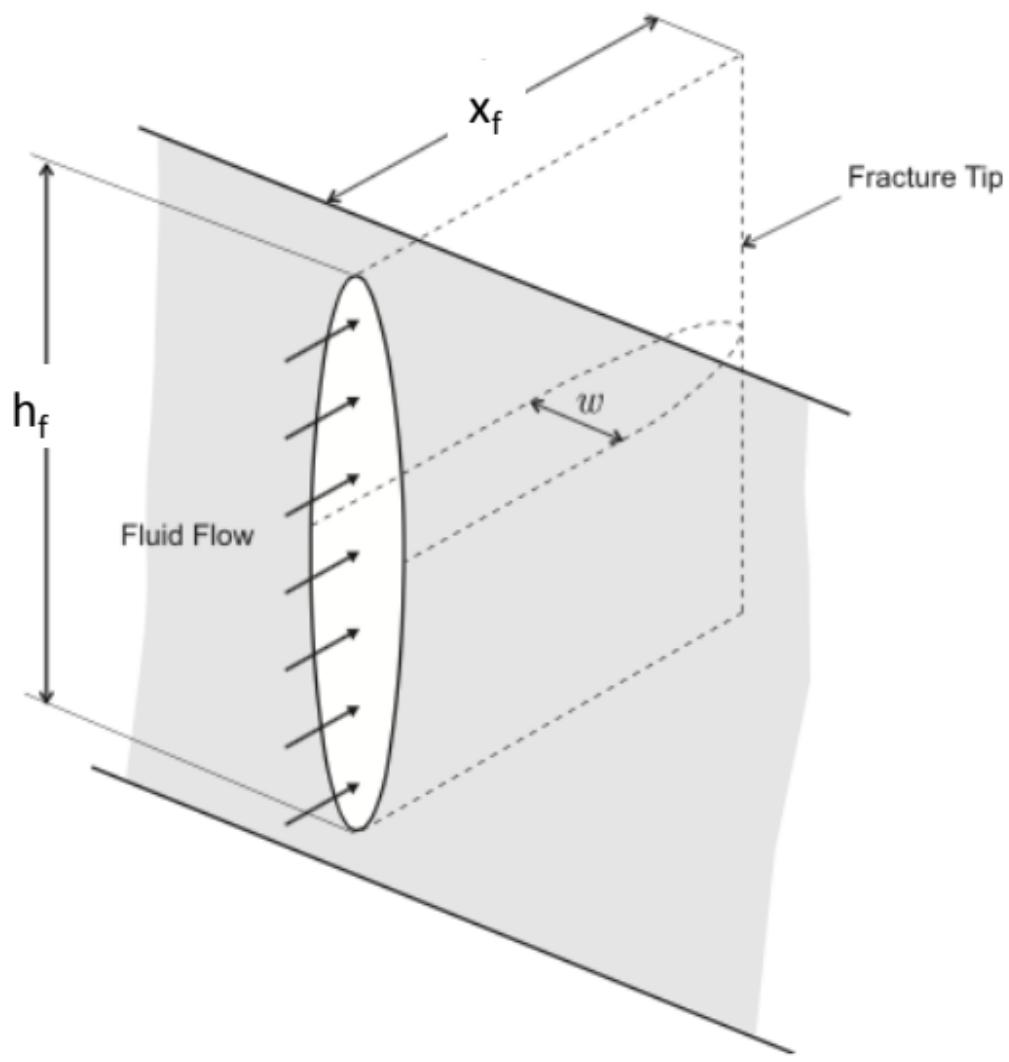


$$x_f = \left(\frac{625}{512\pi^3} \right)^{1/5} \left(\frac{i^3 E'}{\mu h_f^4} \right)^{1/5} t^{4/5} = 0.524 t^{4/5}$$

$$w_{w,0} = \left(\frac{2560}{\pi^2 h} \right)^{1/5} \left(\frac{i^2 \mu}{E' h_f} \right)^{1/5} t^{1/5} = 3.040 \left(\frac{i^2 \mu}{E' h_f} \right)^{1/5} t^{1/5}$$

$$p_{net,w} = \left(\frac{80}{\pi^2} \right)^{1/5} \left(\frac{E^4 i^2 \mu}{h_f^6} \right)^{1/5} t^{1/5} = 1.520 \left(\frac{E^4 i^2 \mu}{h_f^6} \right)^{1/5} t^{1/5}$$




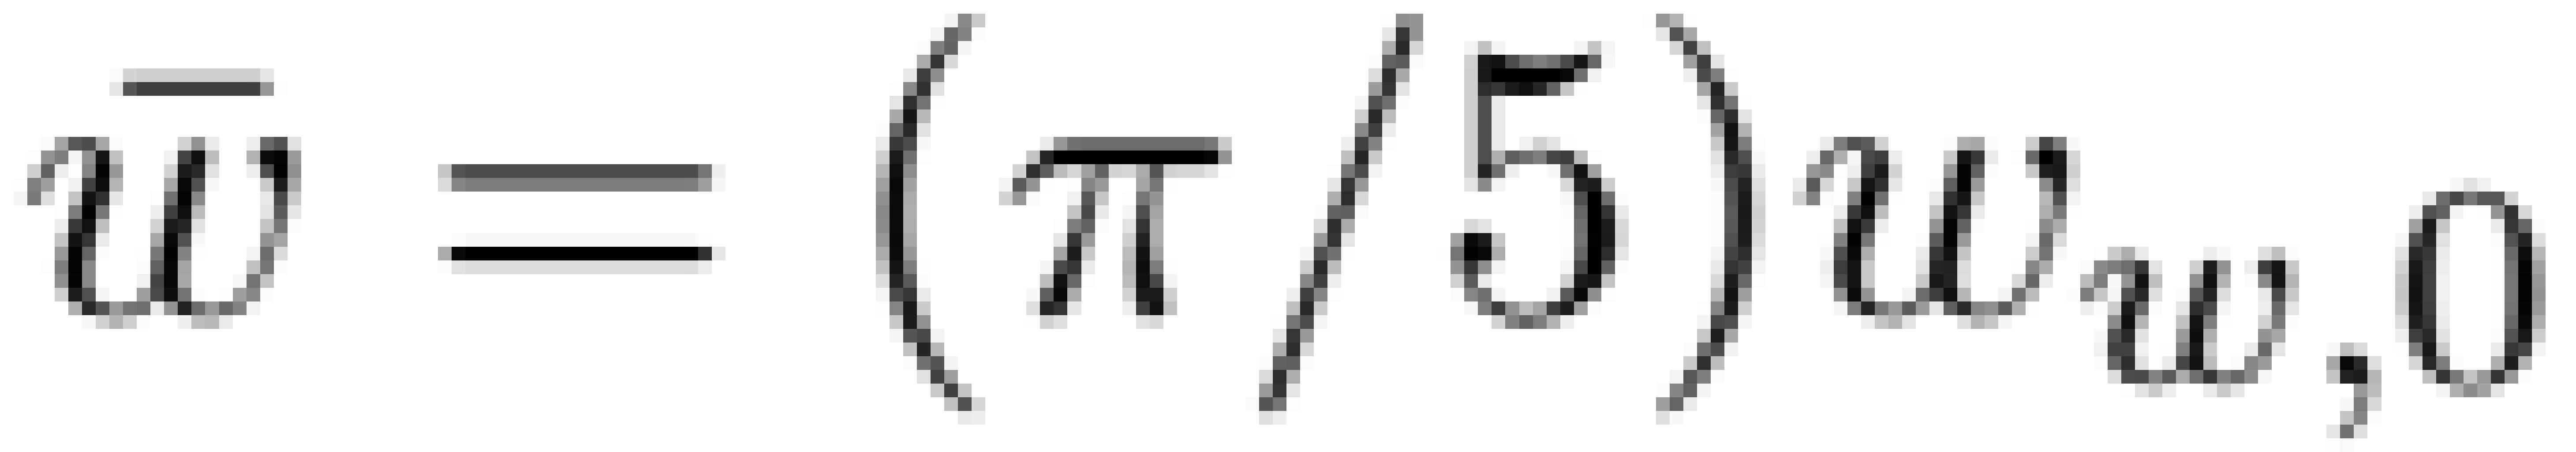









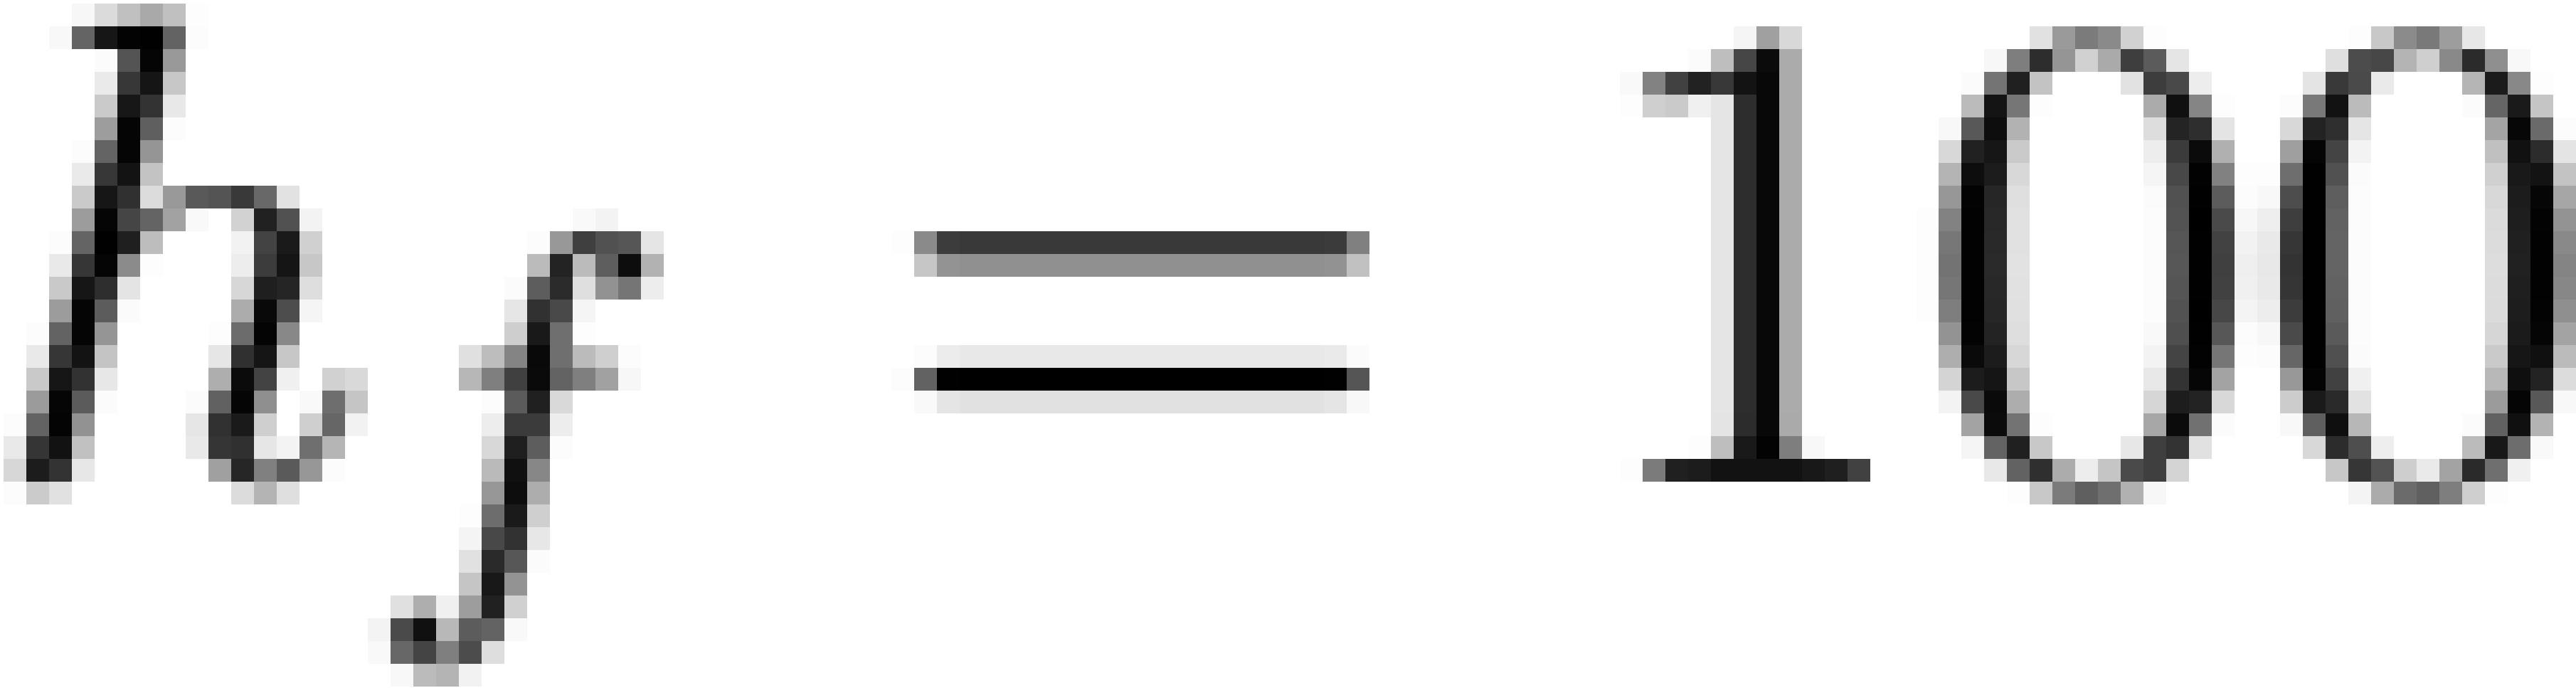







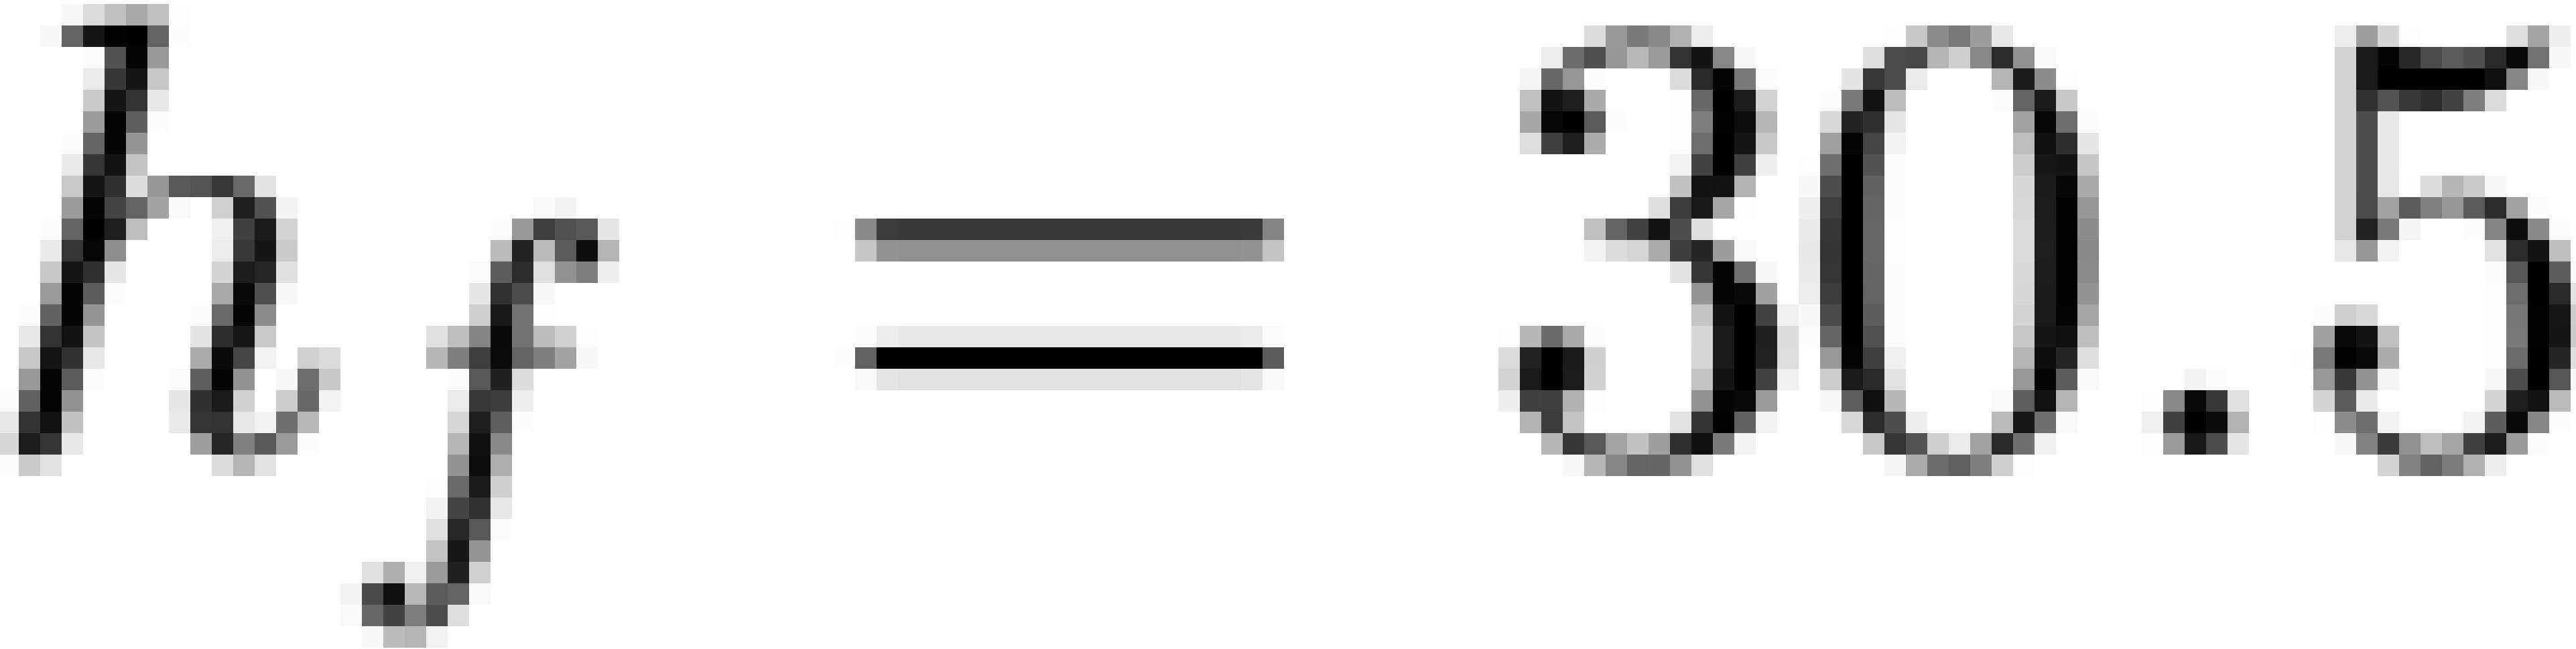

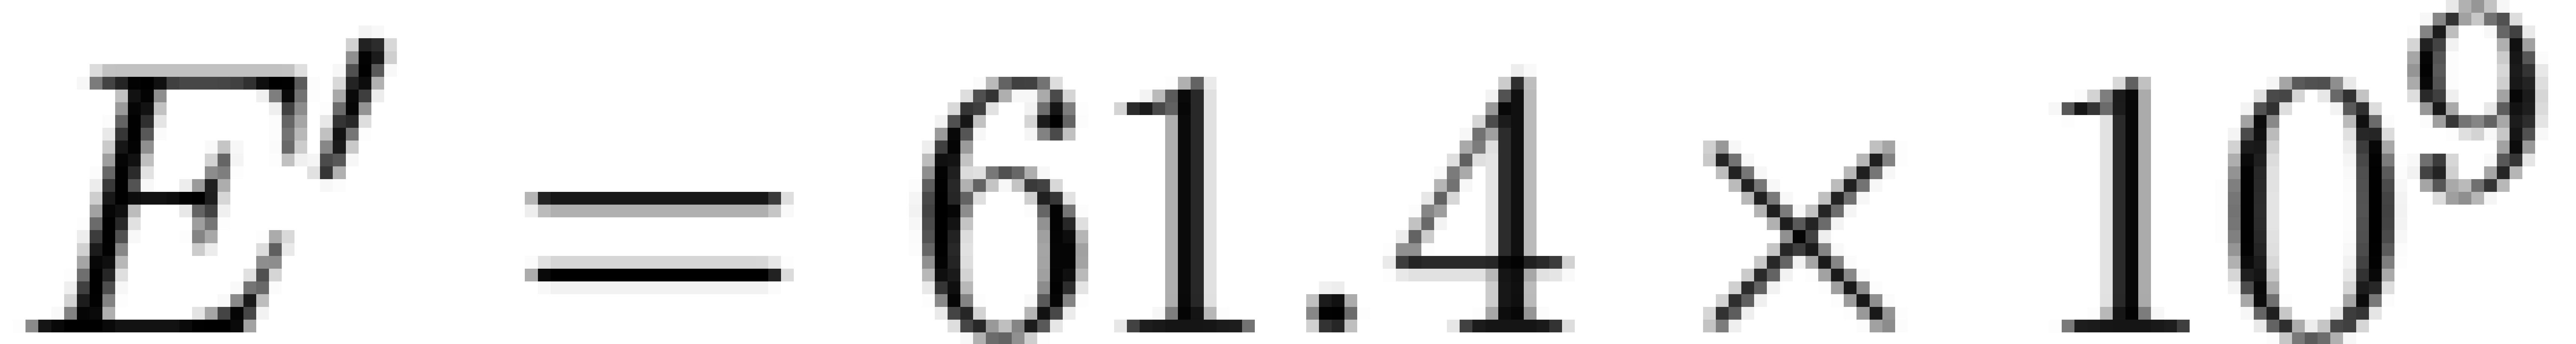

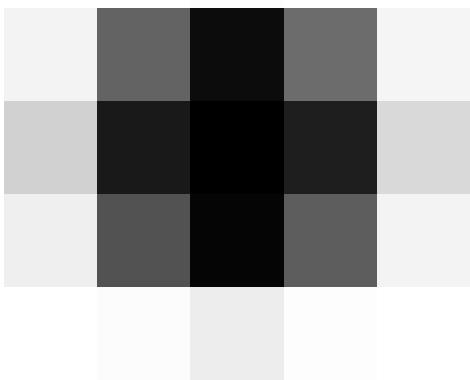

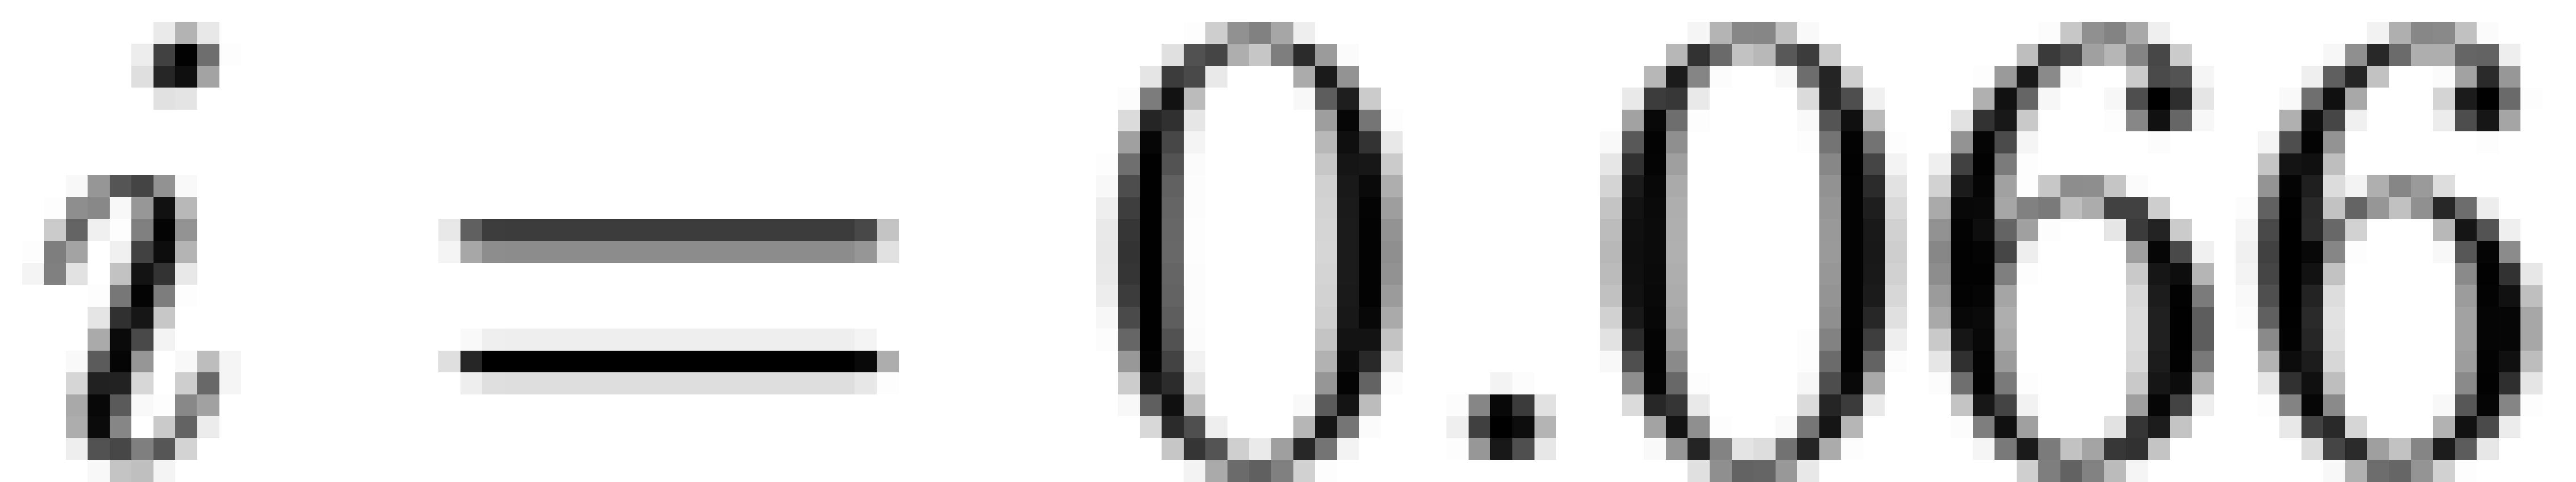






$$x_f = 0.524 \left[\frac{(0.066 \text{ m}^3/\text{s})^3 \times (61.4 \times 10^9 \text{ Pa})}{0.001 \text{ Pa s} \times (30.5 \text{ m})^4} \right]^{1/5} = 1536.2 \text{ m}$$


$$w_{w,0} = 3.040 \left[\frac{(0.066 \text{ m}^3/\text{s})^2 \times (0.001 \text{ Pa s})}{(61.4 \times 10^9 \text{ Pa}) \times (30.5 \text{ m})} \right]^{1/5} = 4.05 \times 10^{-3} \text{ m} = 4.05 \text{ mm}$$


$$p_{net,w} = 1.520 \left[\frac{(61.4 \times 10^9 \text{ Pa})^4 \times (0.066 \text{ m}^3/\text{s})^2 \times (0.001 \text{ Pa s})}{(1800 \text{ s})^{1/5} \times (30.5 \text{ m})^6} \right]^{1/5} = 4.1 \times 10^6 \text{ Pa}$$

$$2.13 \times 10^{-3} \pi$$



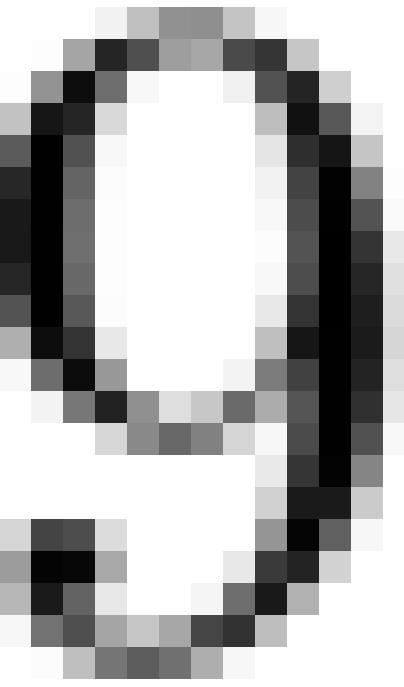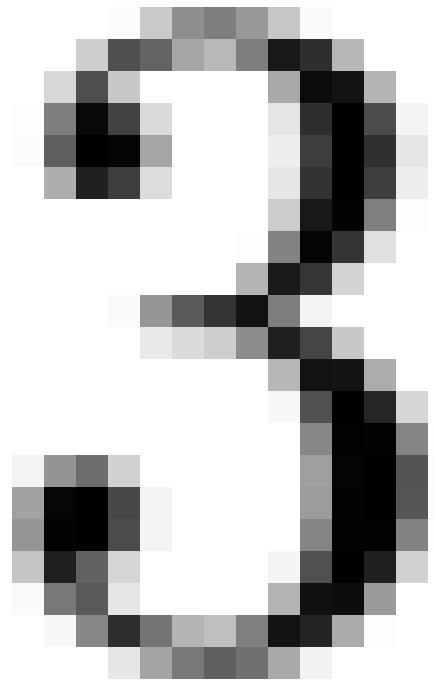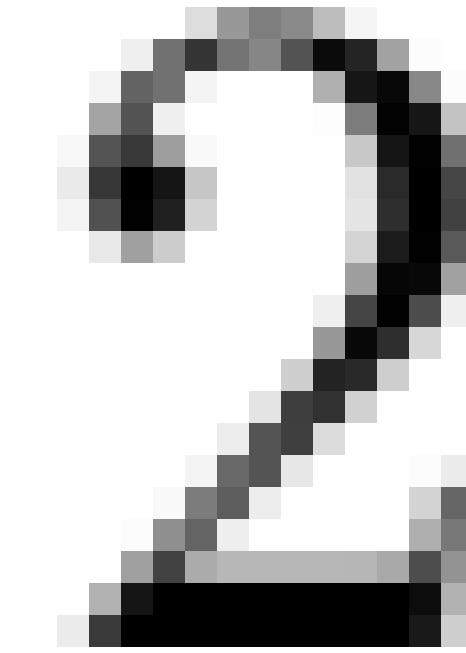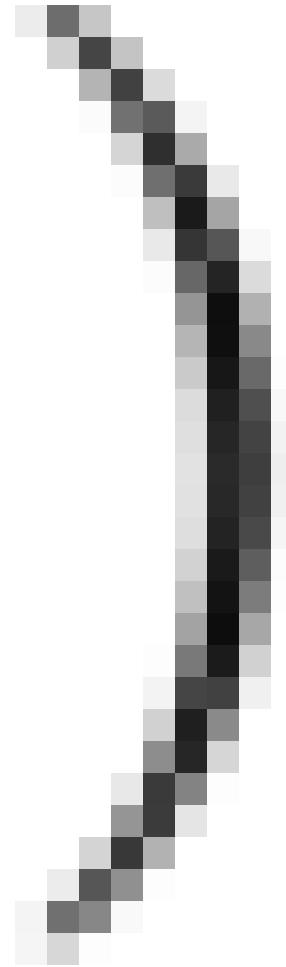

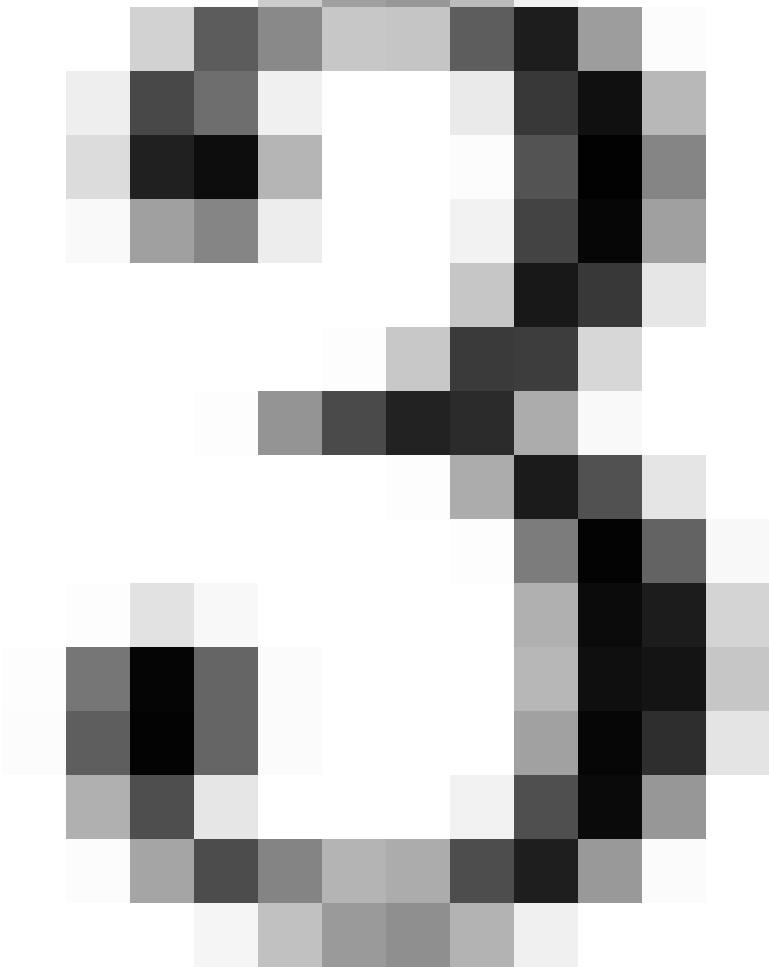




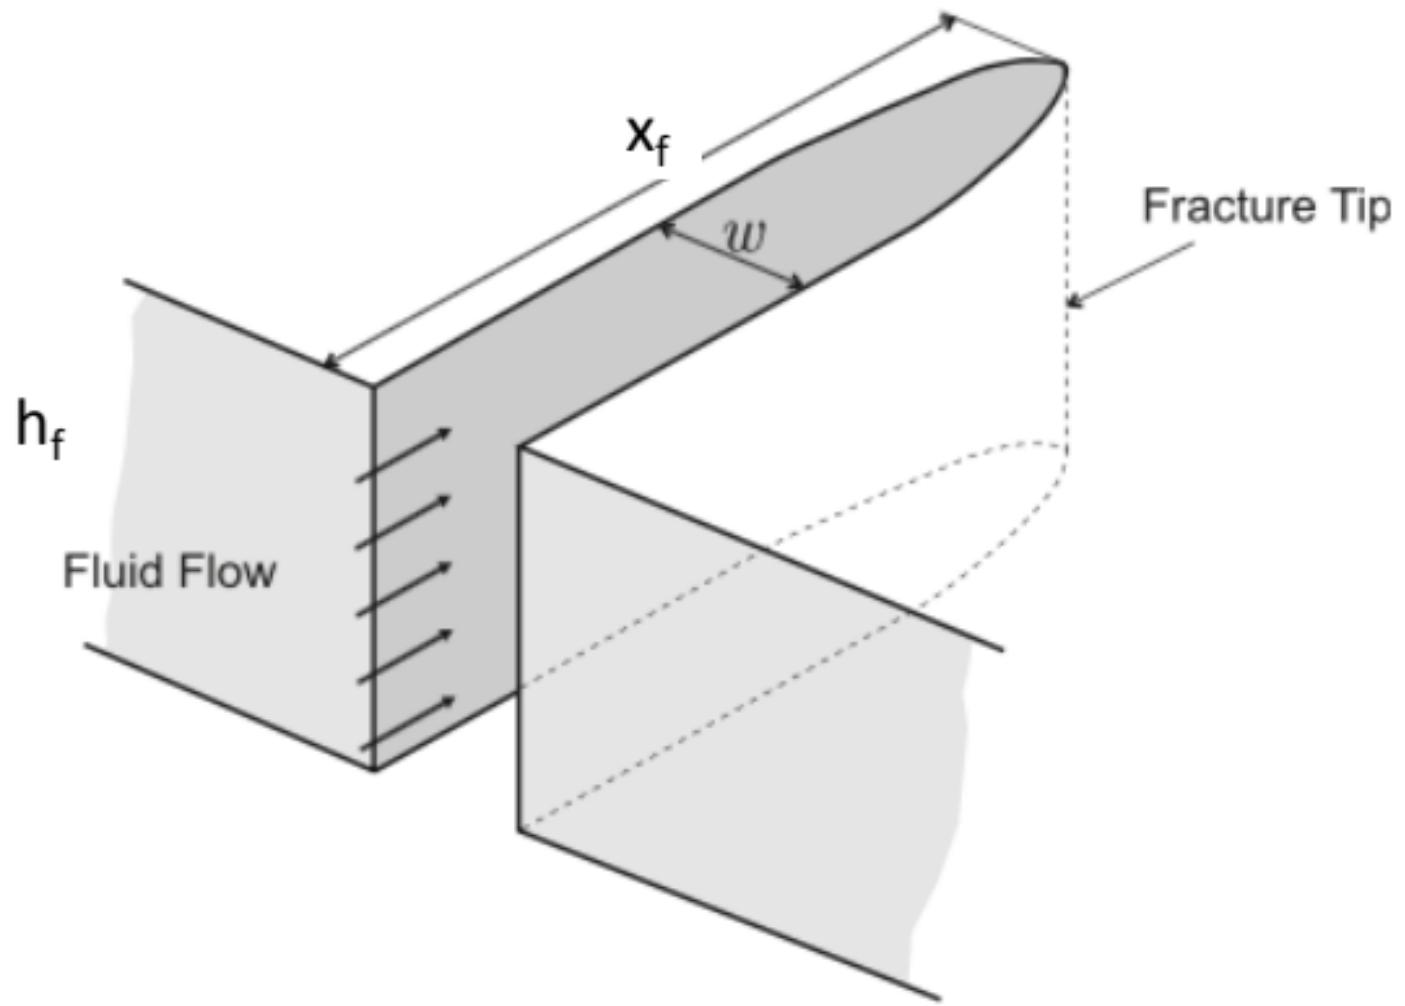


$$x_f = \left(\frac{16}{21\pi^3} \right)^{1/6} \left(\frac{i^3 E'}{\mu h_f^3} \right)^{1/5} t^{2/3} = 0.539 t^{2/3}$$

$$w_{w,0} = \left(\frac{5376}{\pi^3} \right)^{1/6} \left(\frac{\dot{x}^3 \mu}{E' h_f^3} \right)^{1/6} t^{1/3} = 2.360$$


$$p_{net,w} = \left(\frac{21}{16}\right)^{1/3} (E^2 \mu)^{1/3} t^{-1/3} = 1.090 (E^2 \mu)^{1/3} t^{-1/3}$$

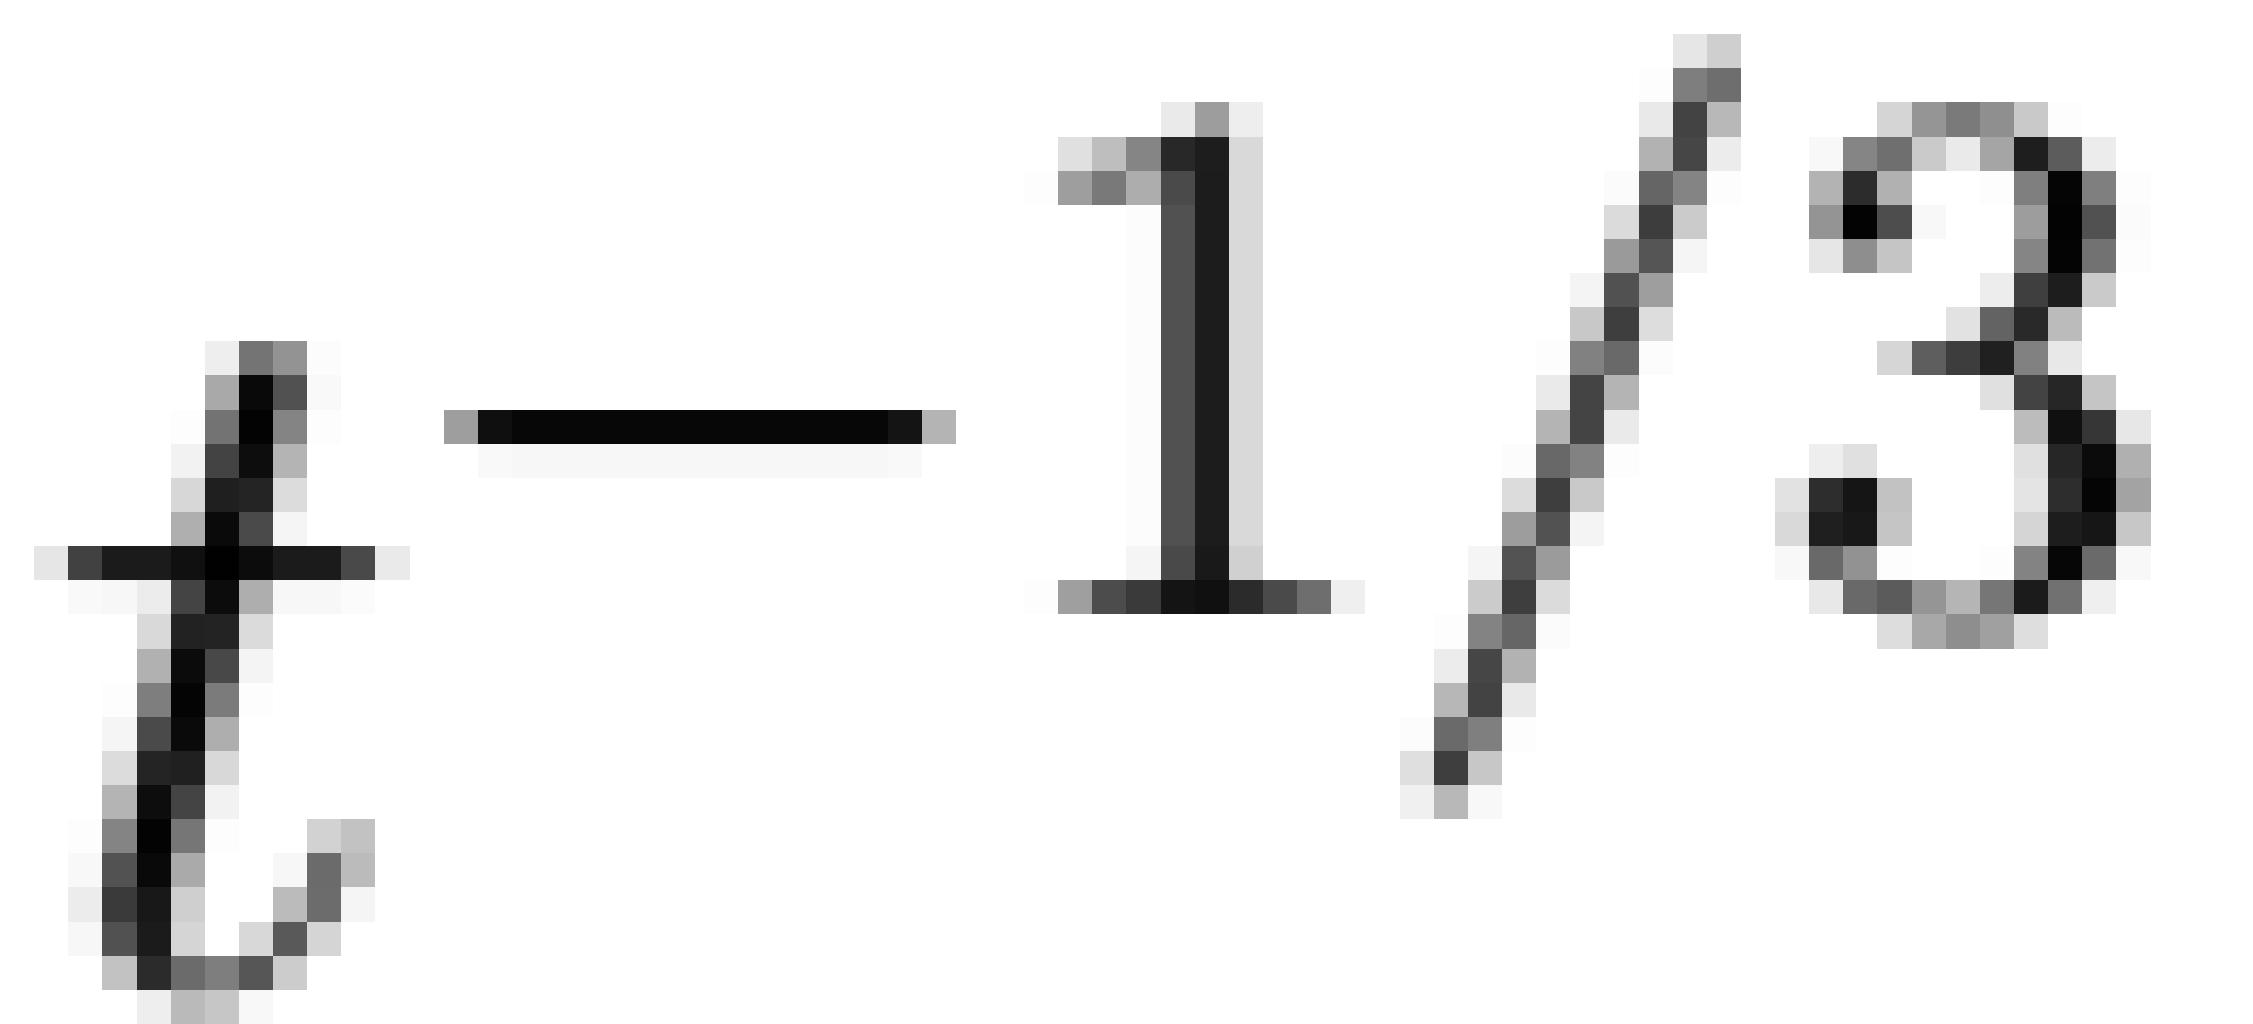


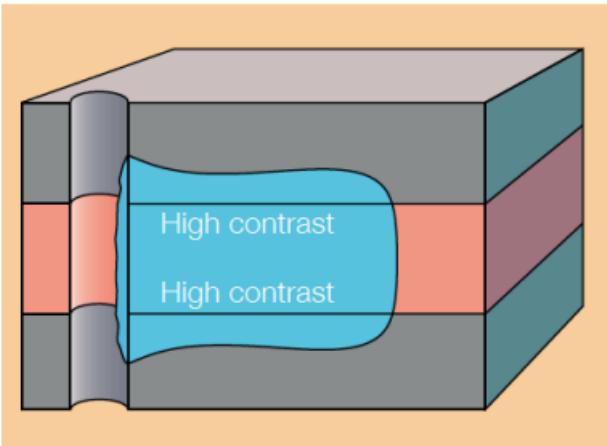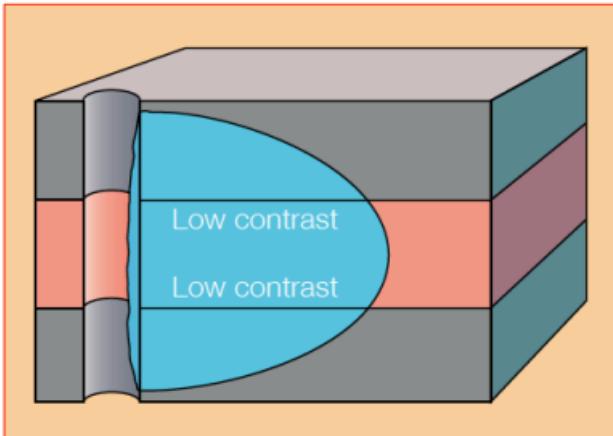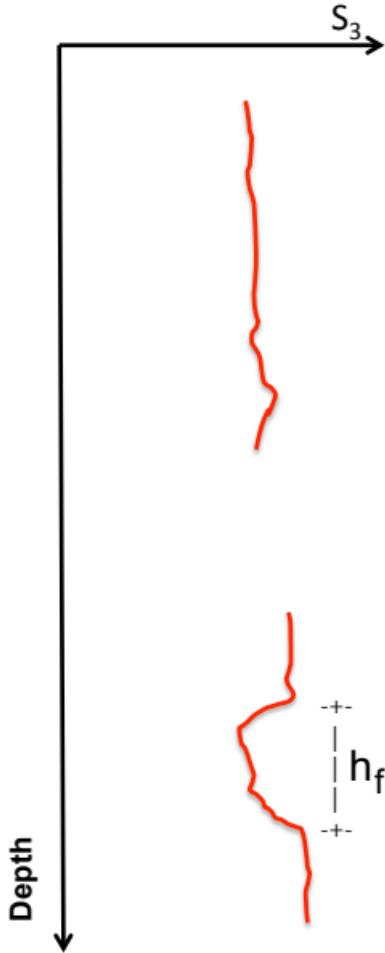





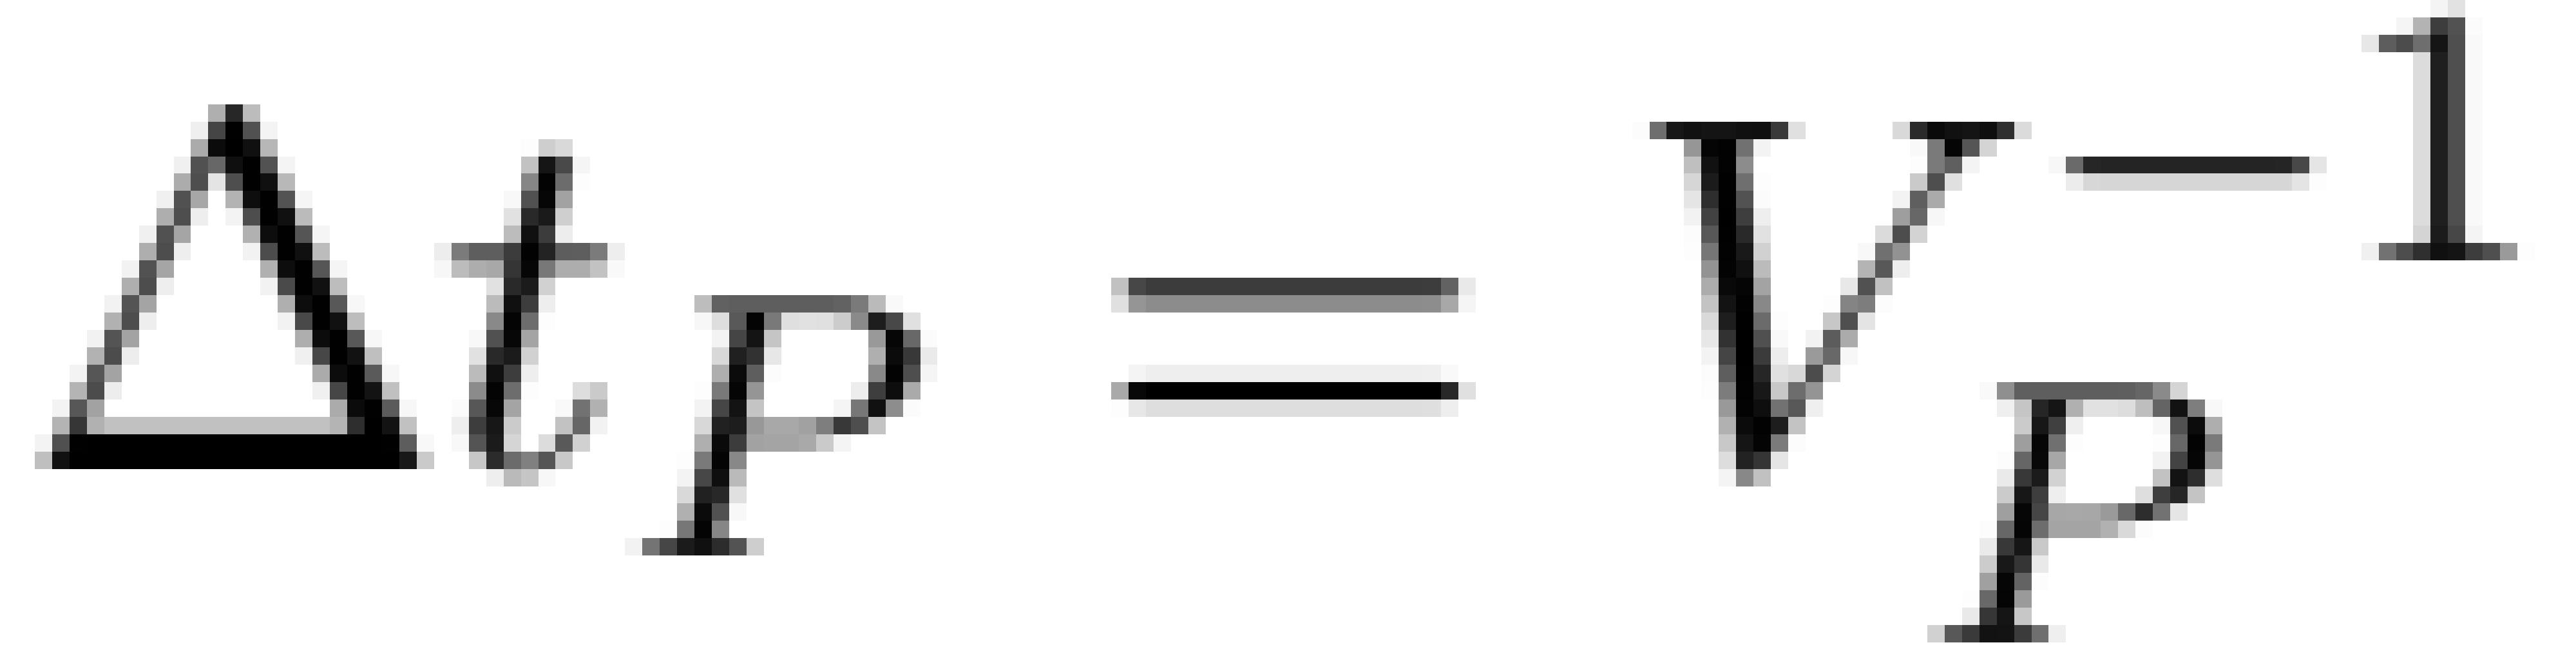

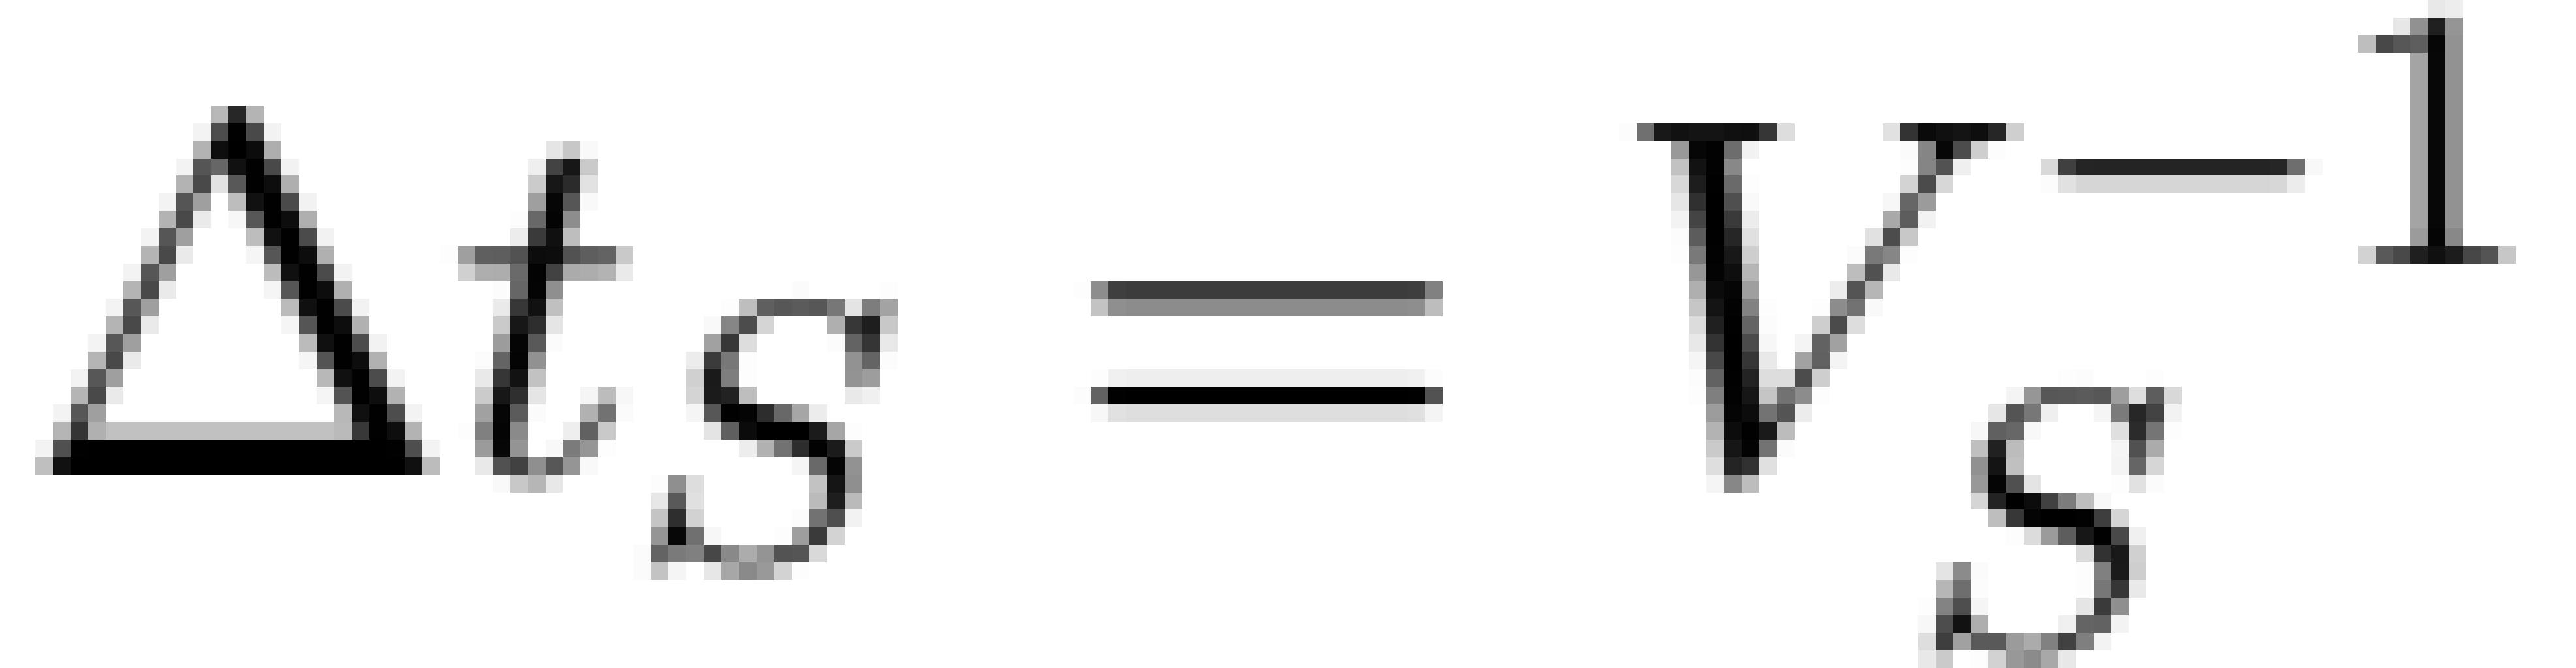




$$E_{\text{edge}} = \rho_{\text{bulk}} V_s^2 \left(\frac{3V_p^2}{V_s^2} - \frac{4V_s^2}{V_p^2} \right)$$

$$v_{dyn} = \frac{V_p^2 - 2V_s^2}{2(V_p^2 - V_s^2)}$$









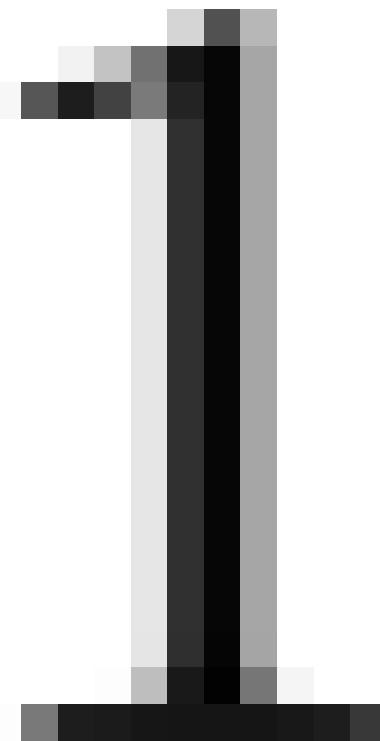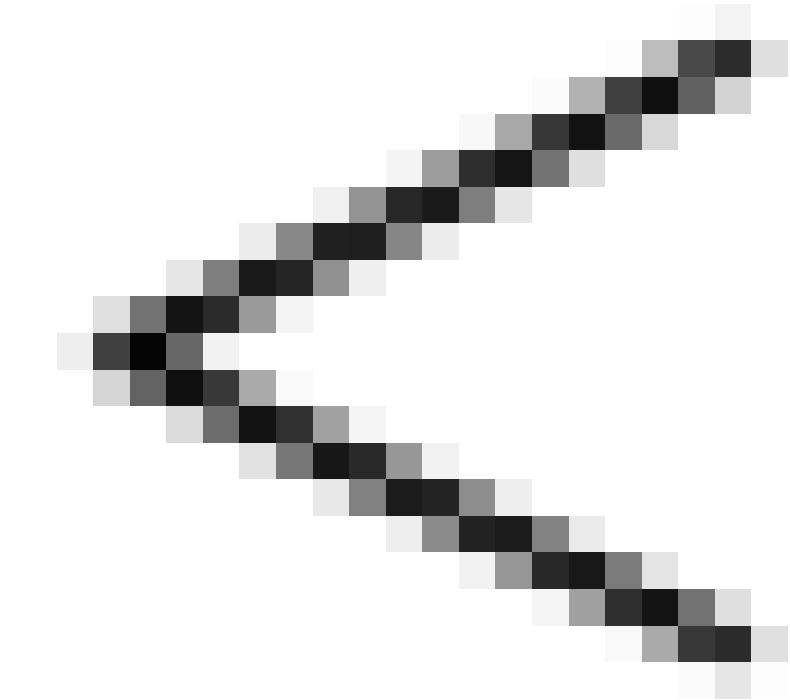







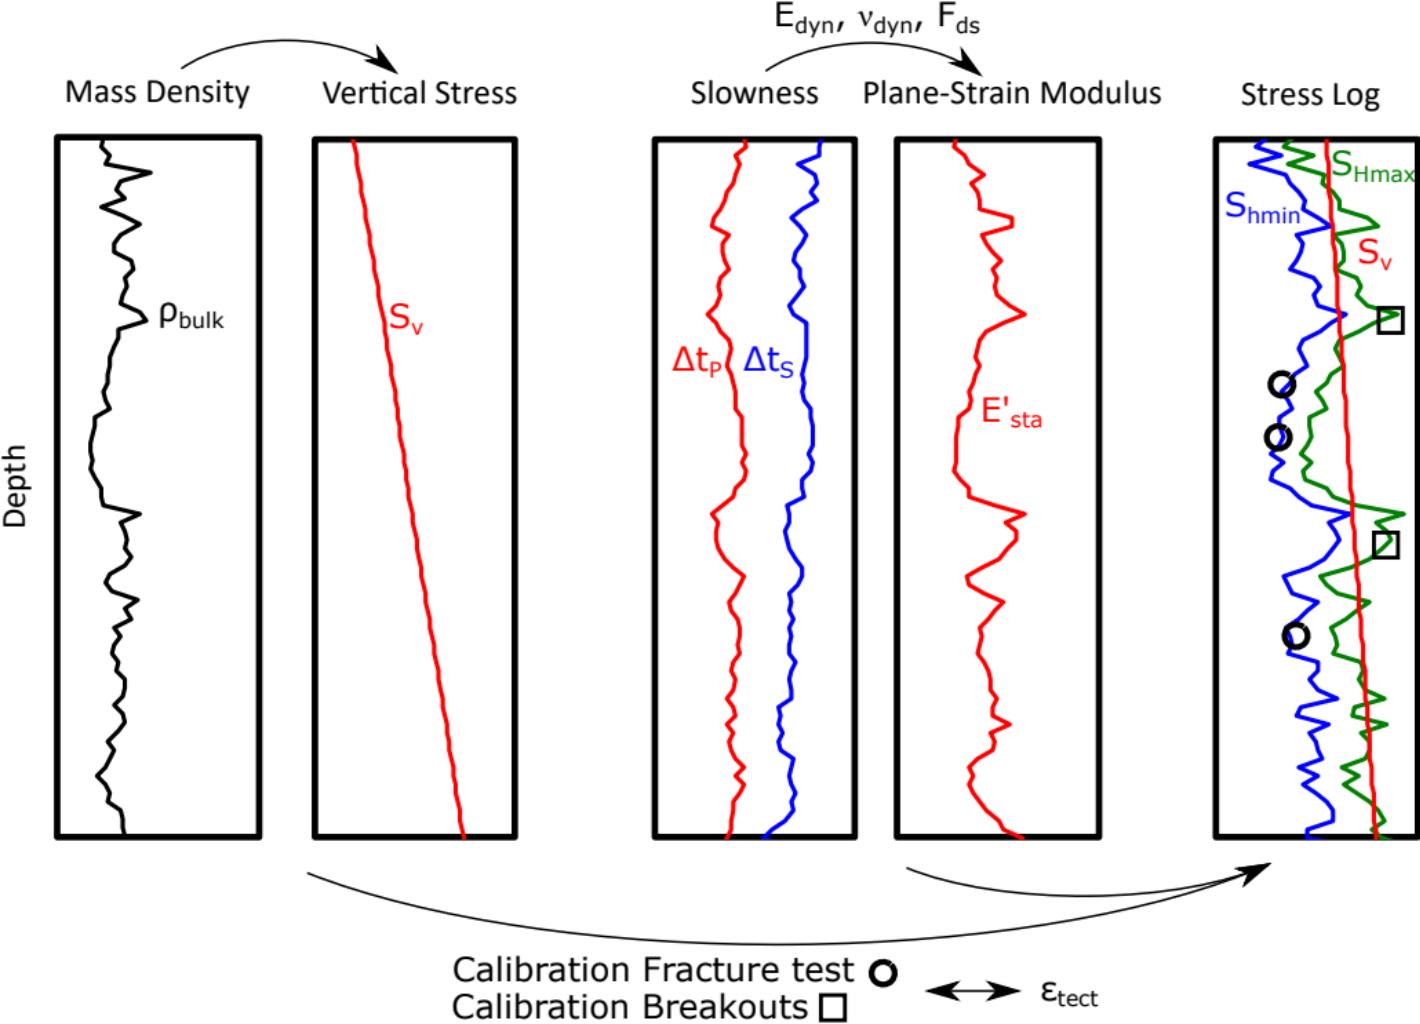


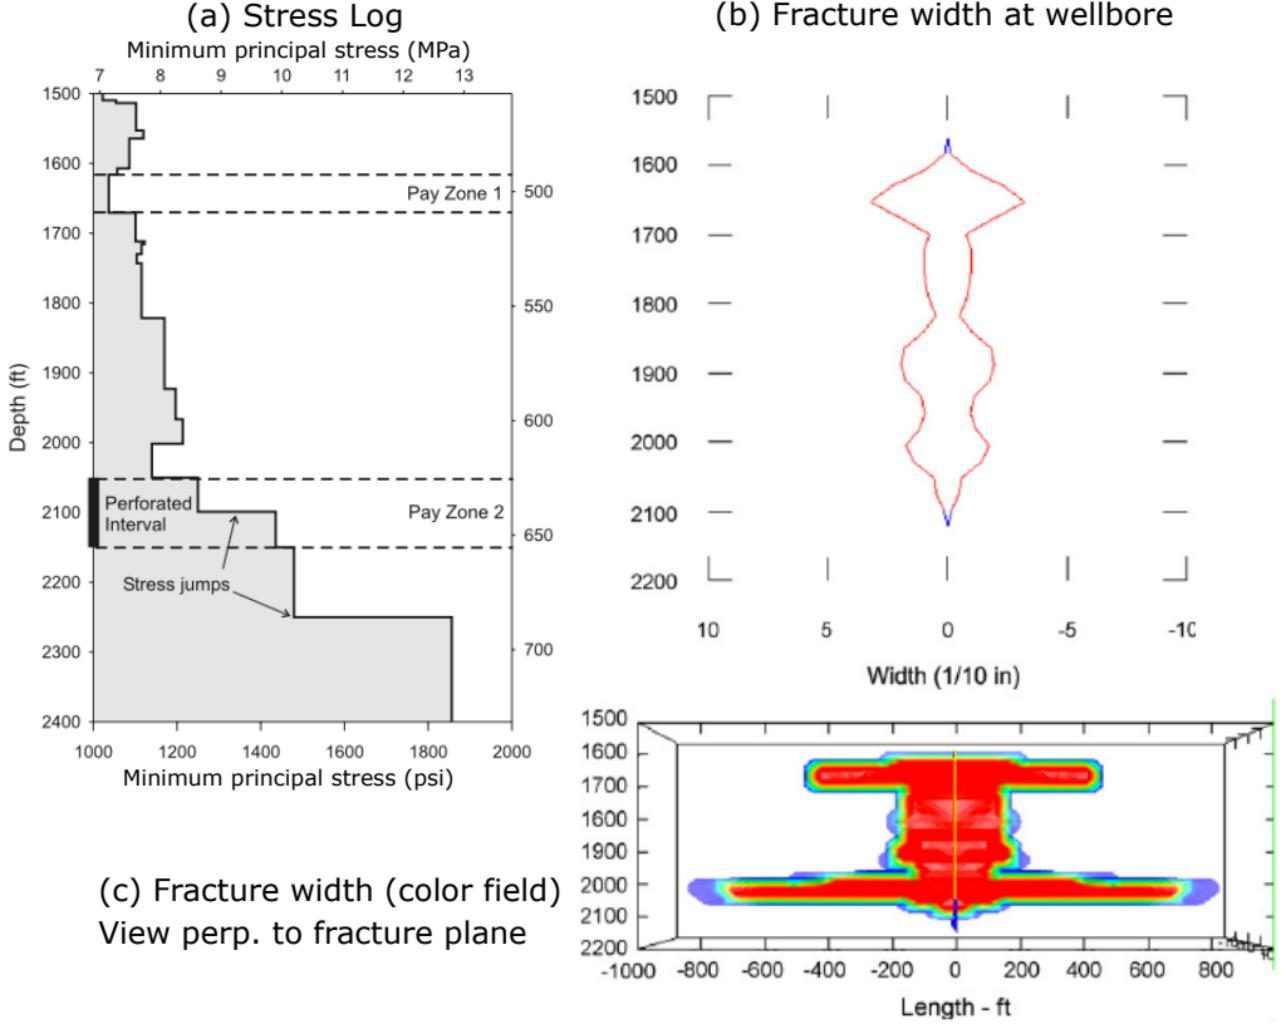


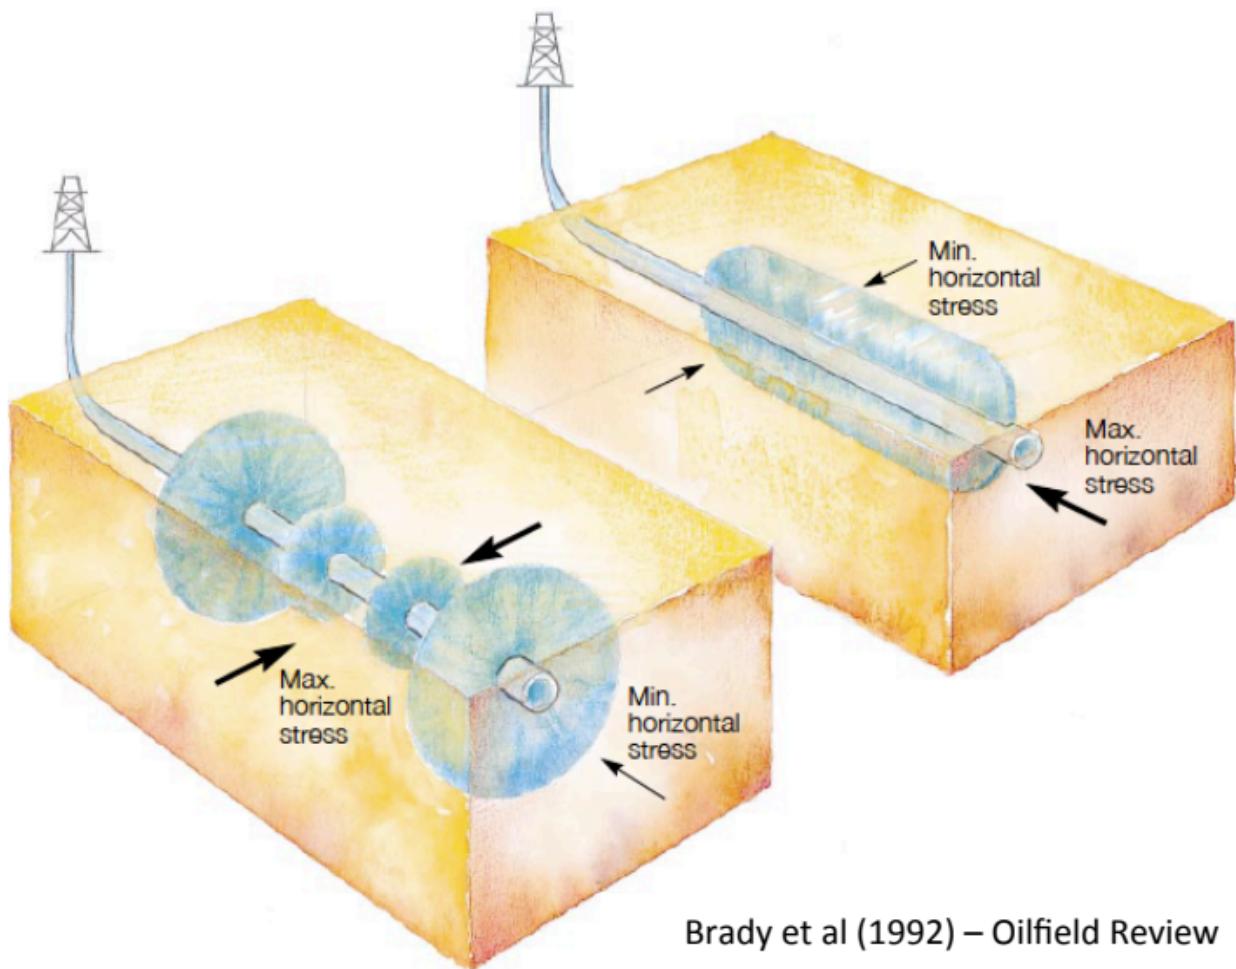


Brady et al (1992) – Oilfield Review


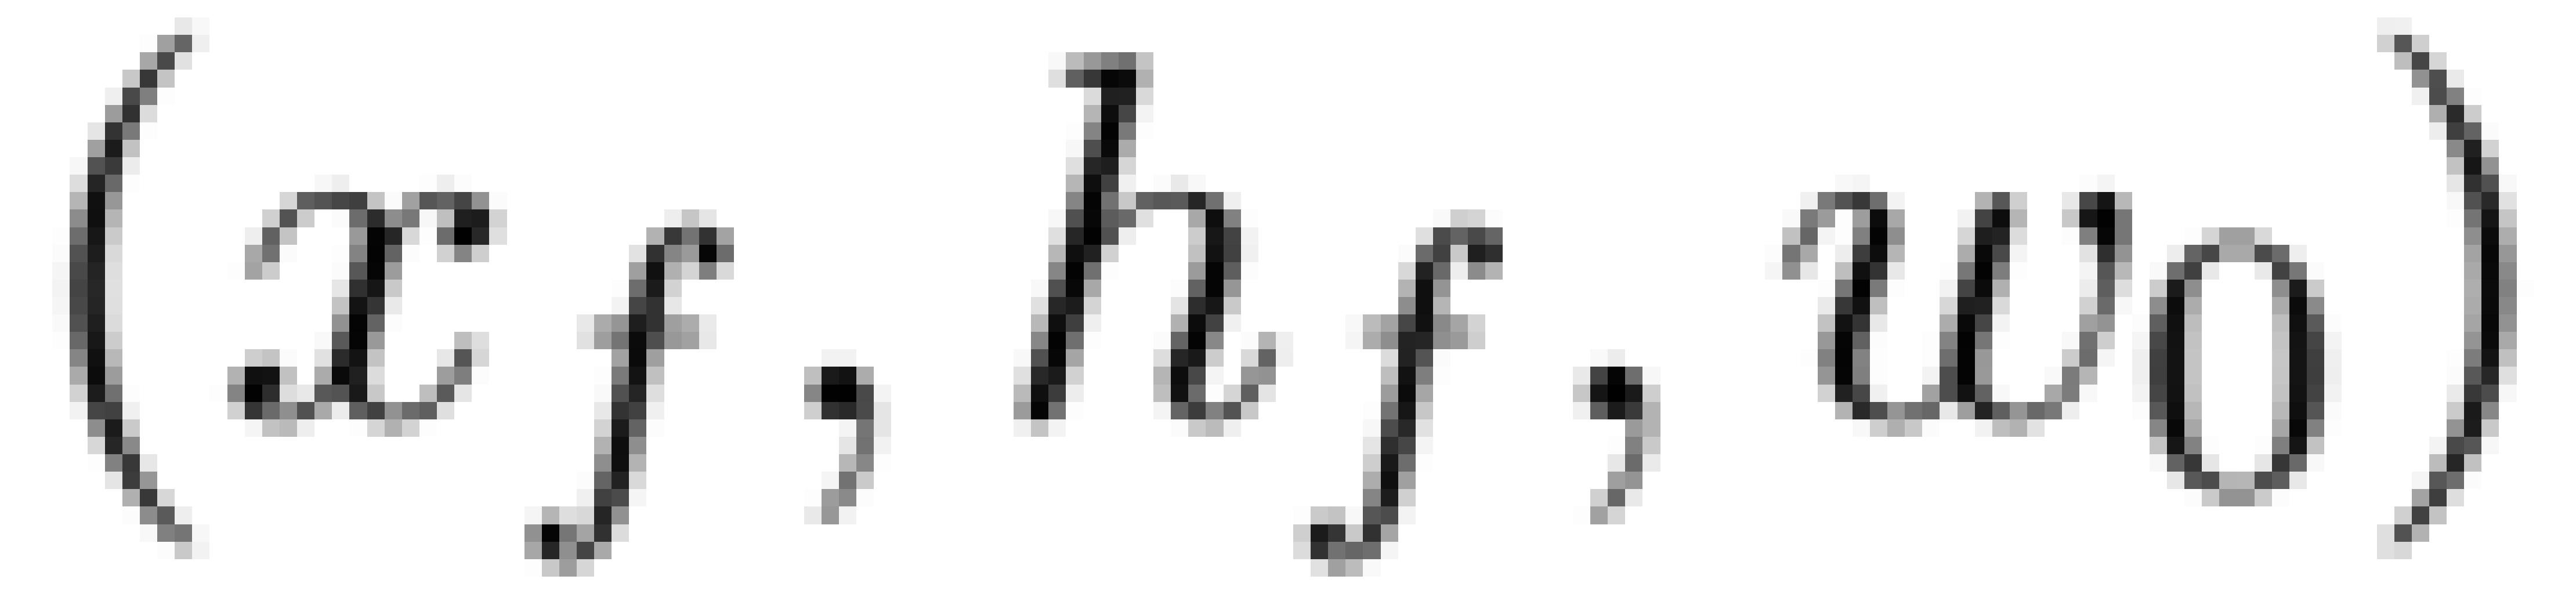


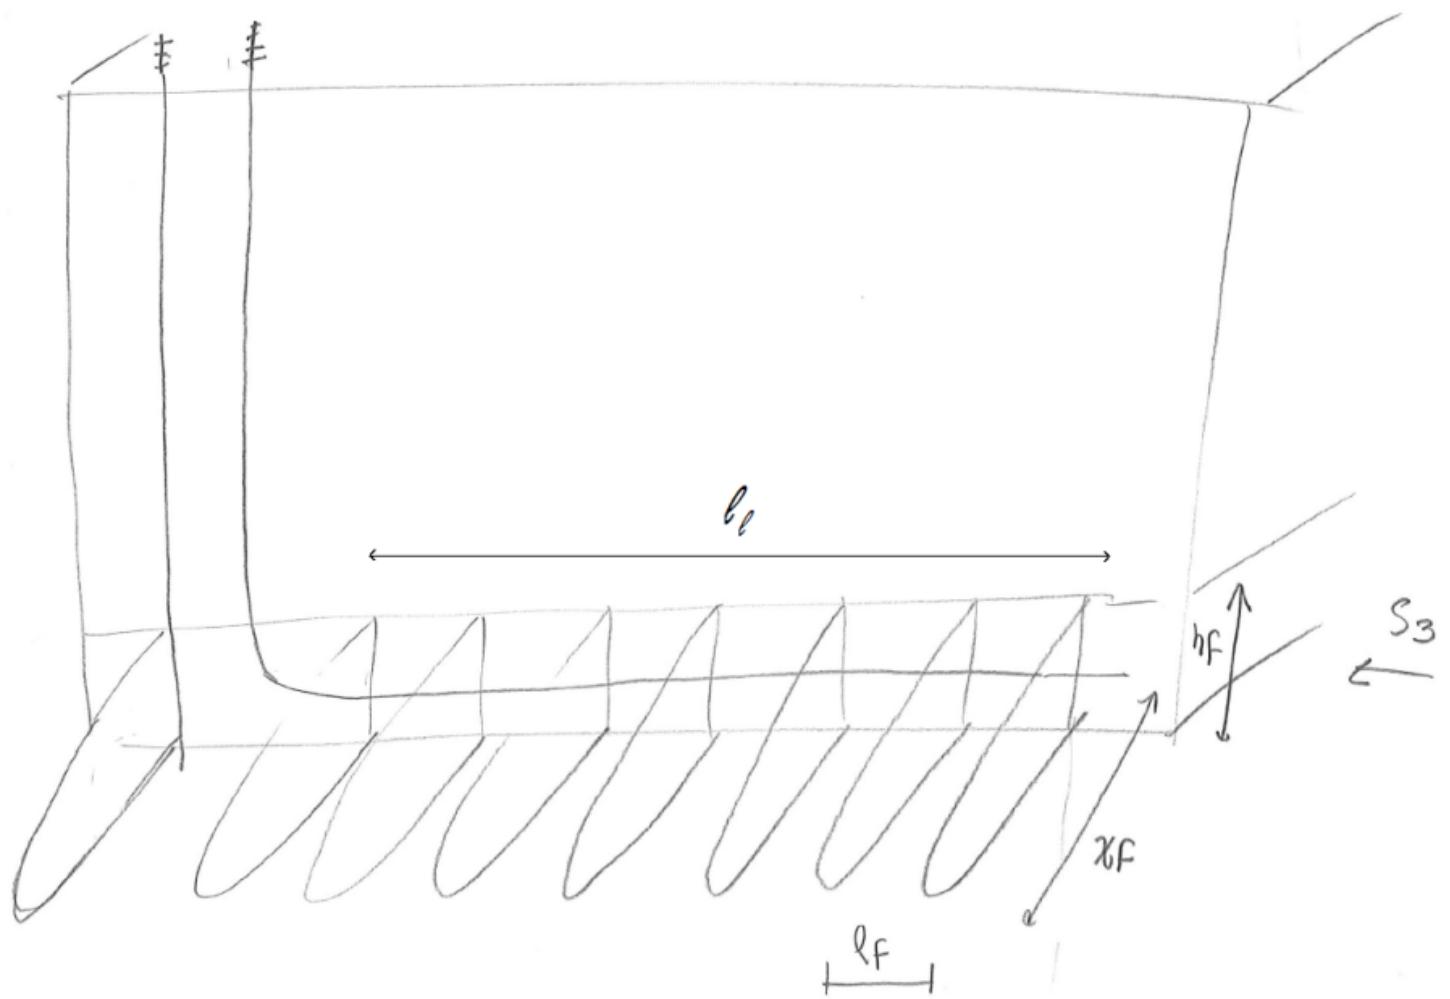


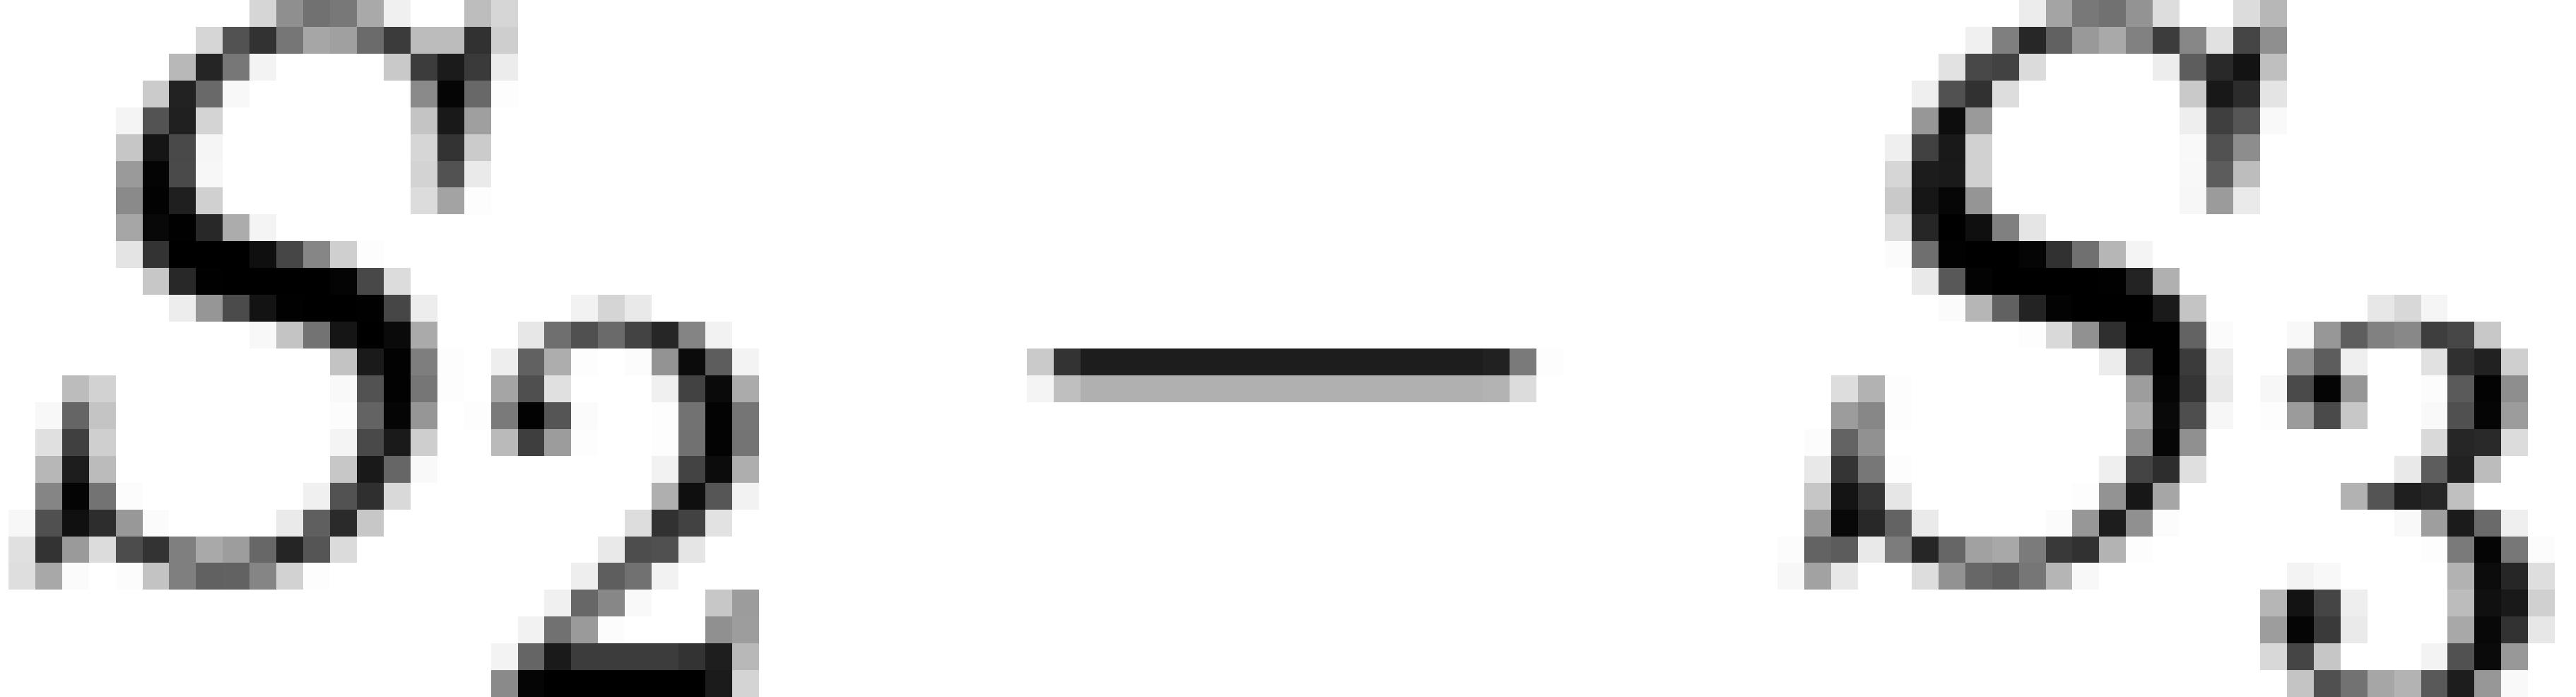




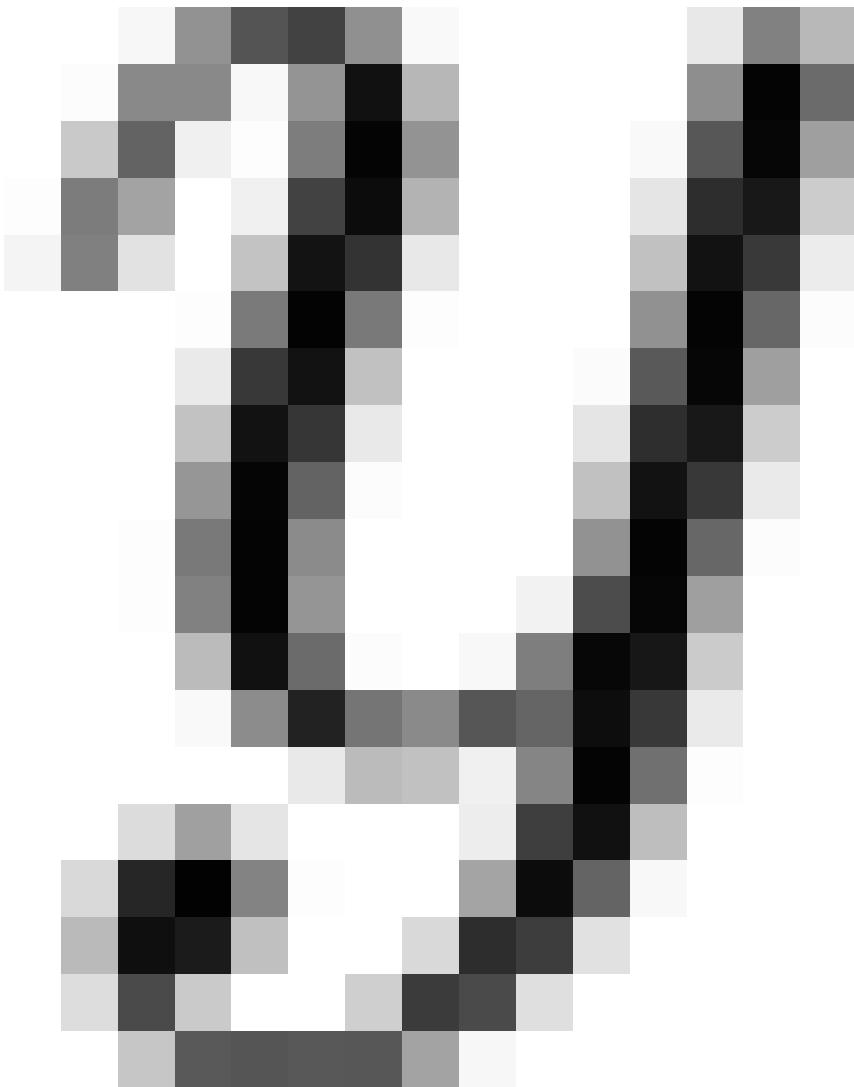

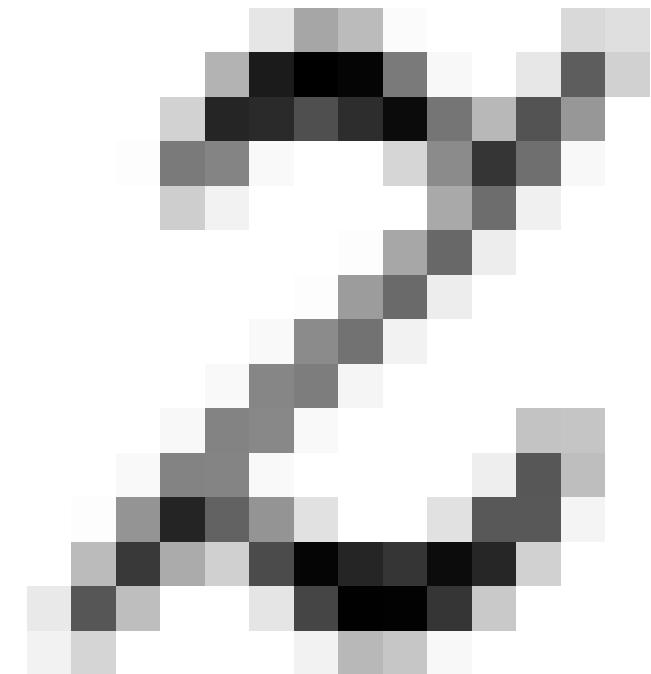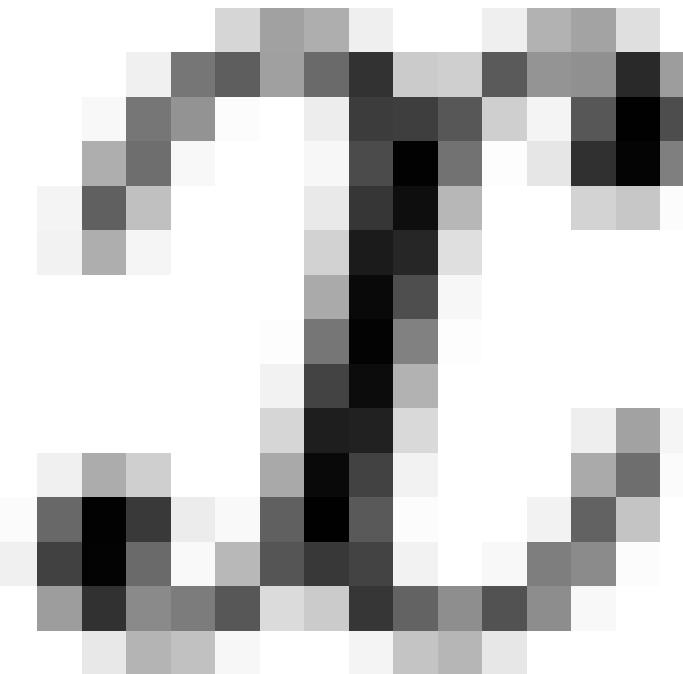

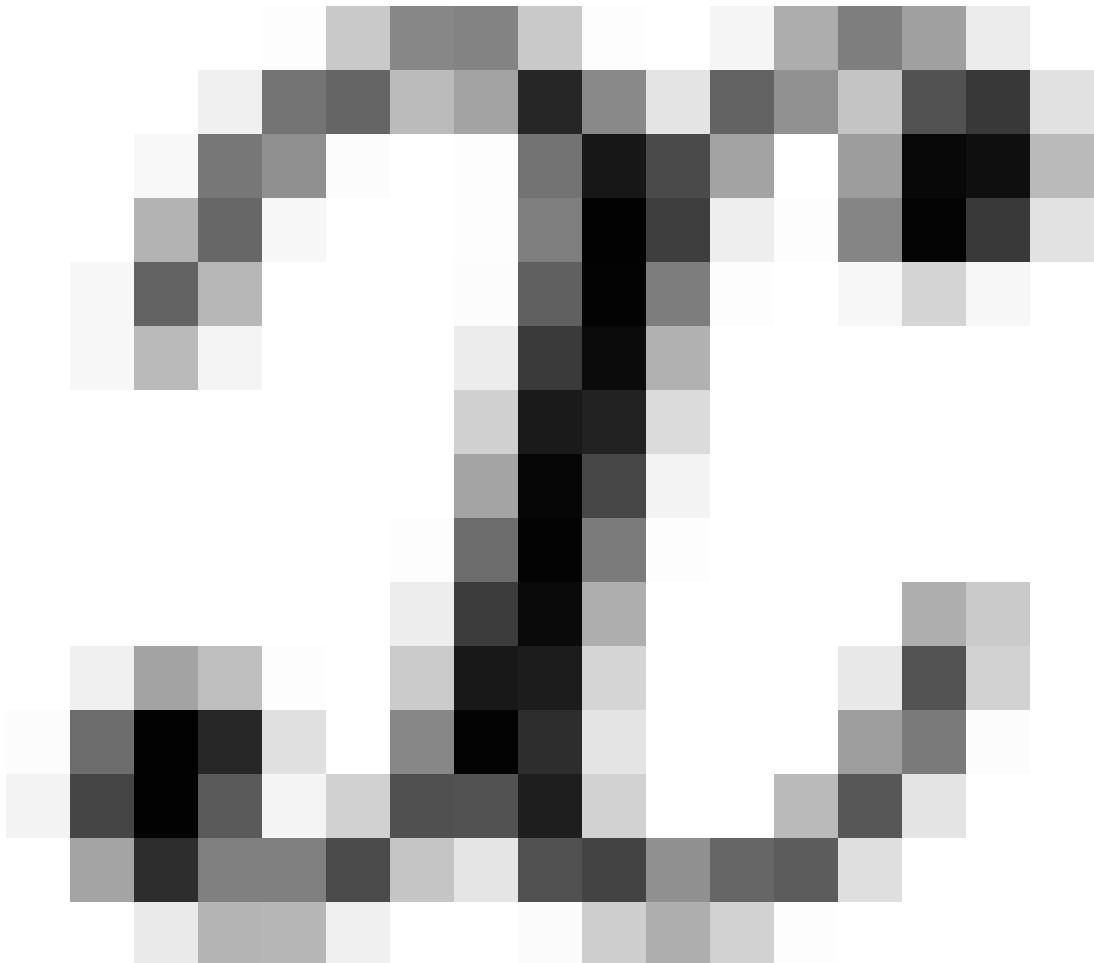


Net extension pressure
 $= p_f - S_{h\min}$

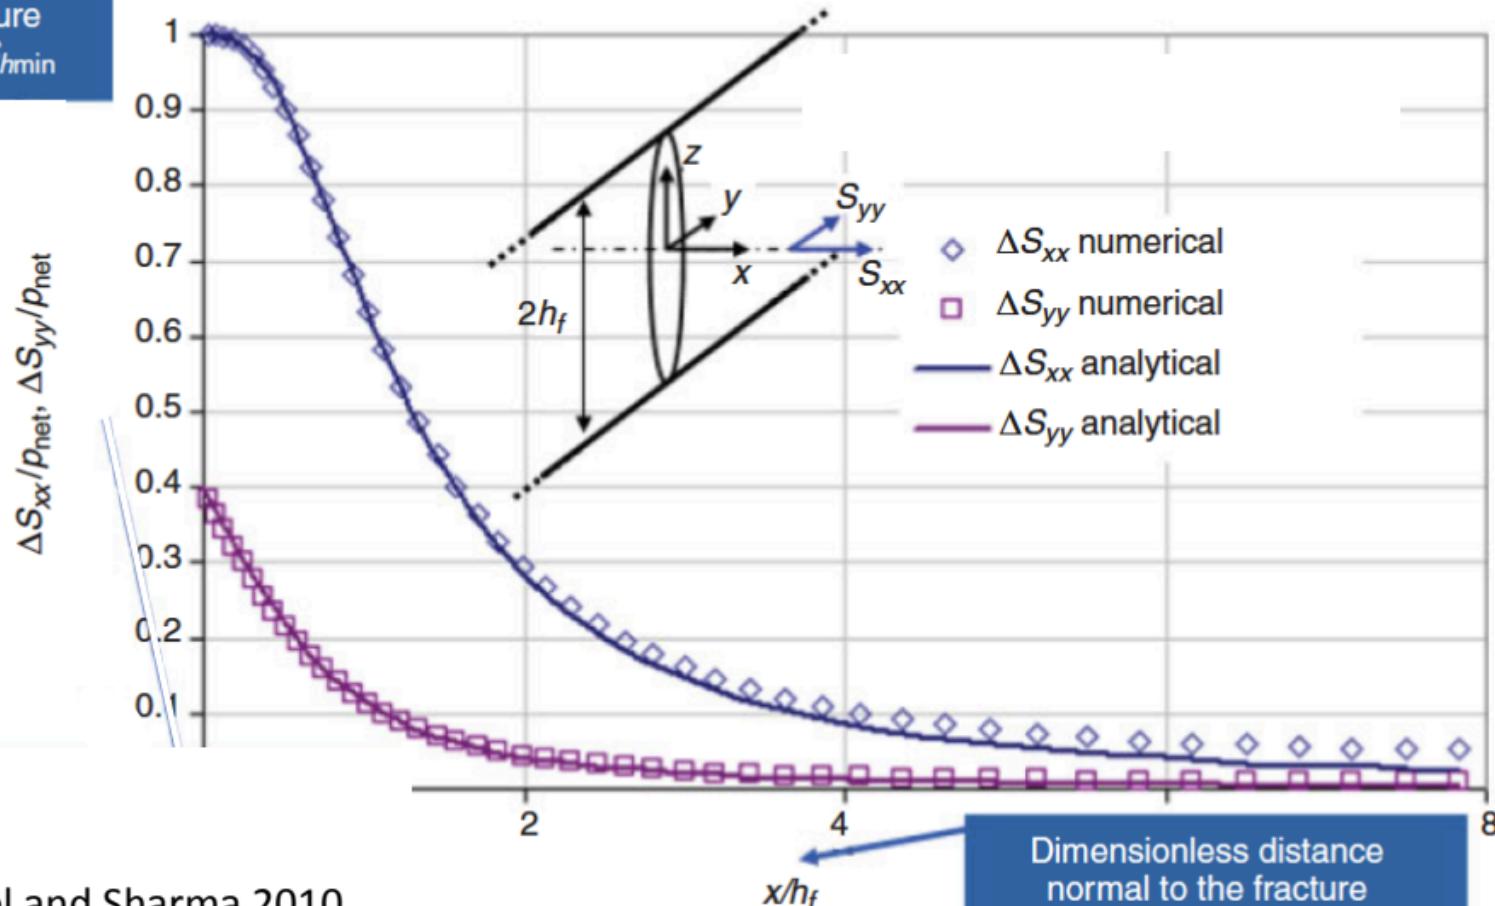


$\ell_f \propto$


Preeti f
—
 $s_2 -$ — s_3

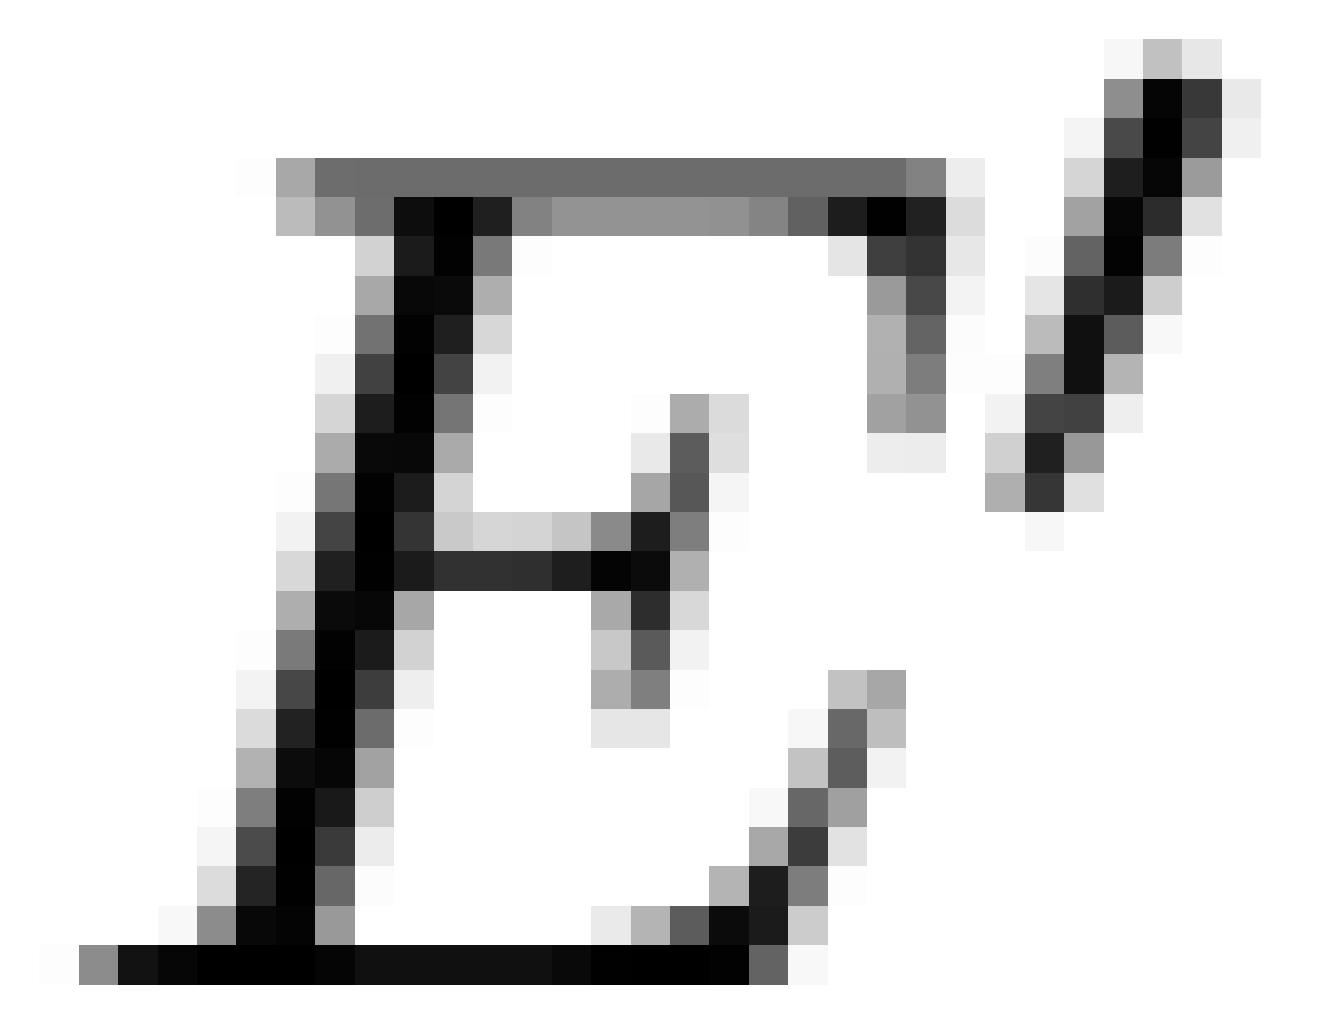






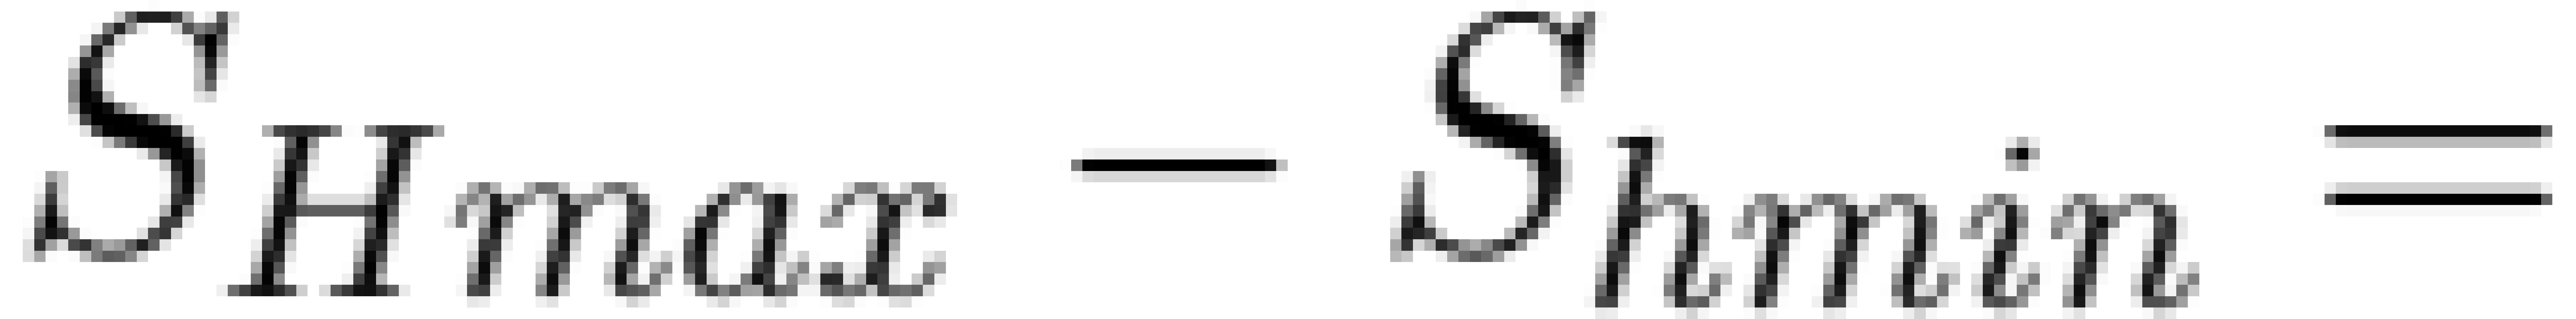



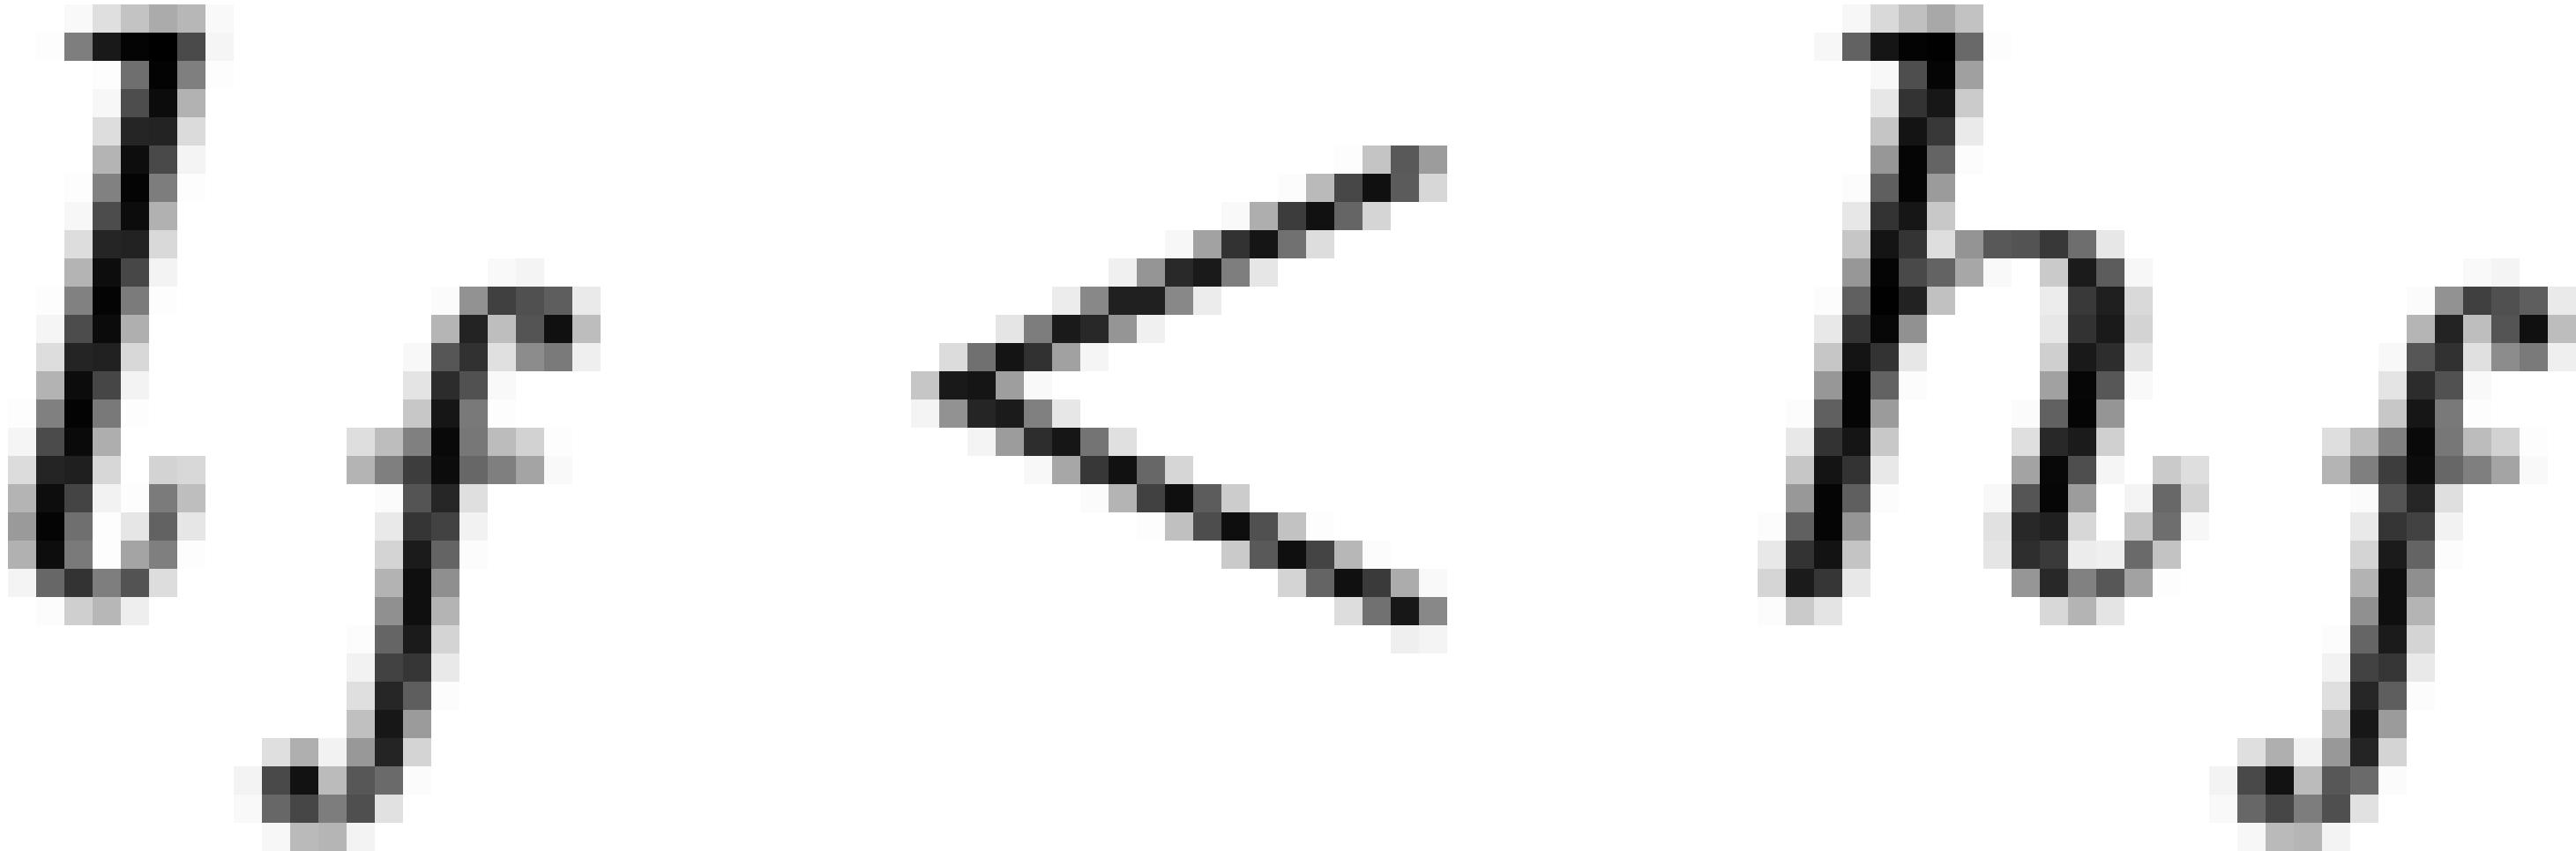


(a) Top view: consecutive fracturing with $l_f = 400\text{ft}$

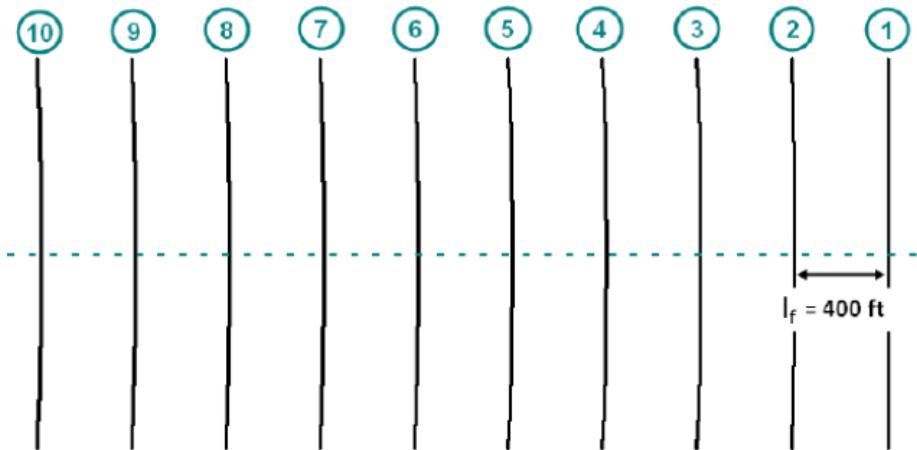

(b) Top view: consecutive fracturing with $l_f = 250\text{ft}$

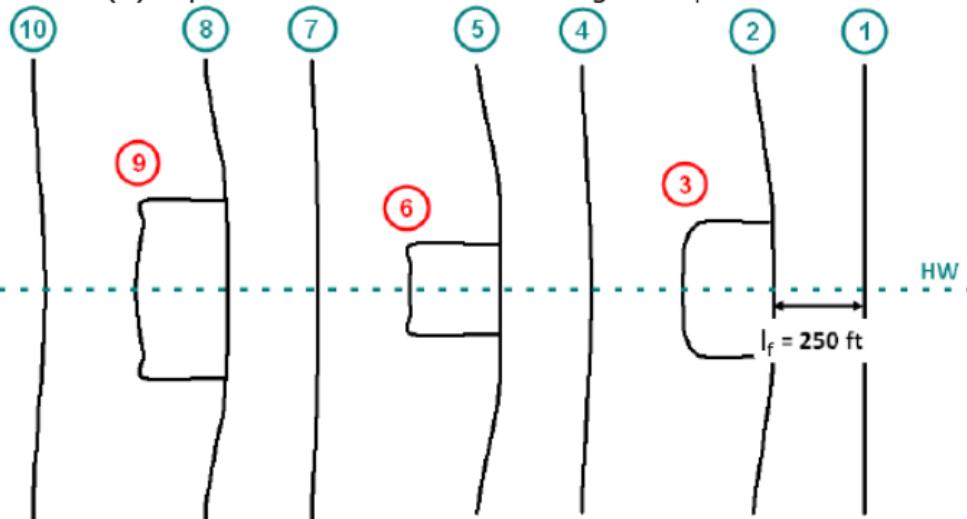


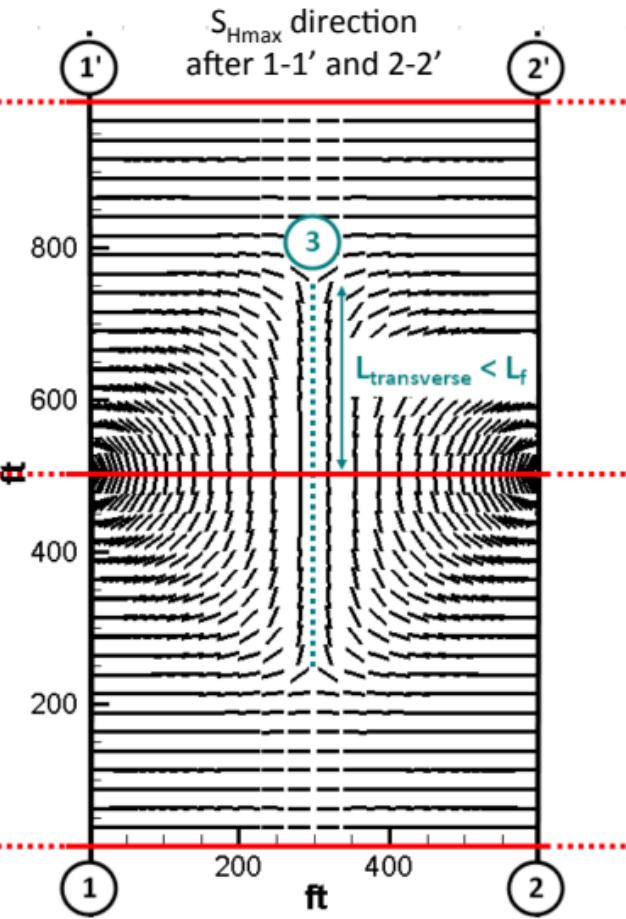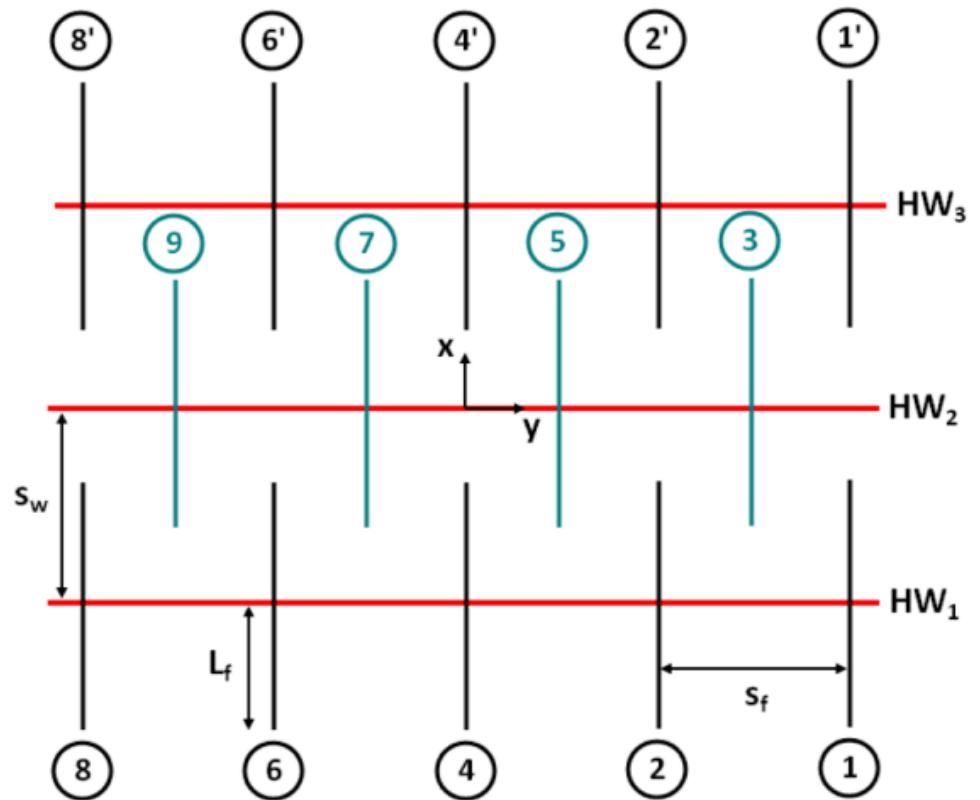




p^{wg}


Hz
well


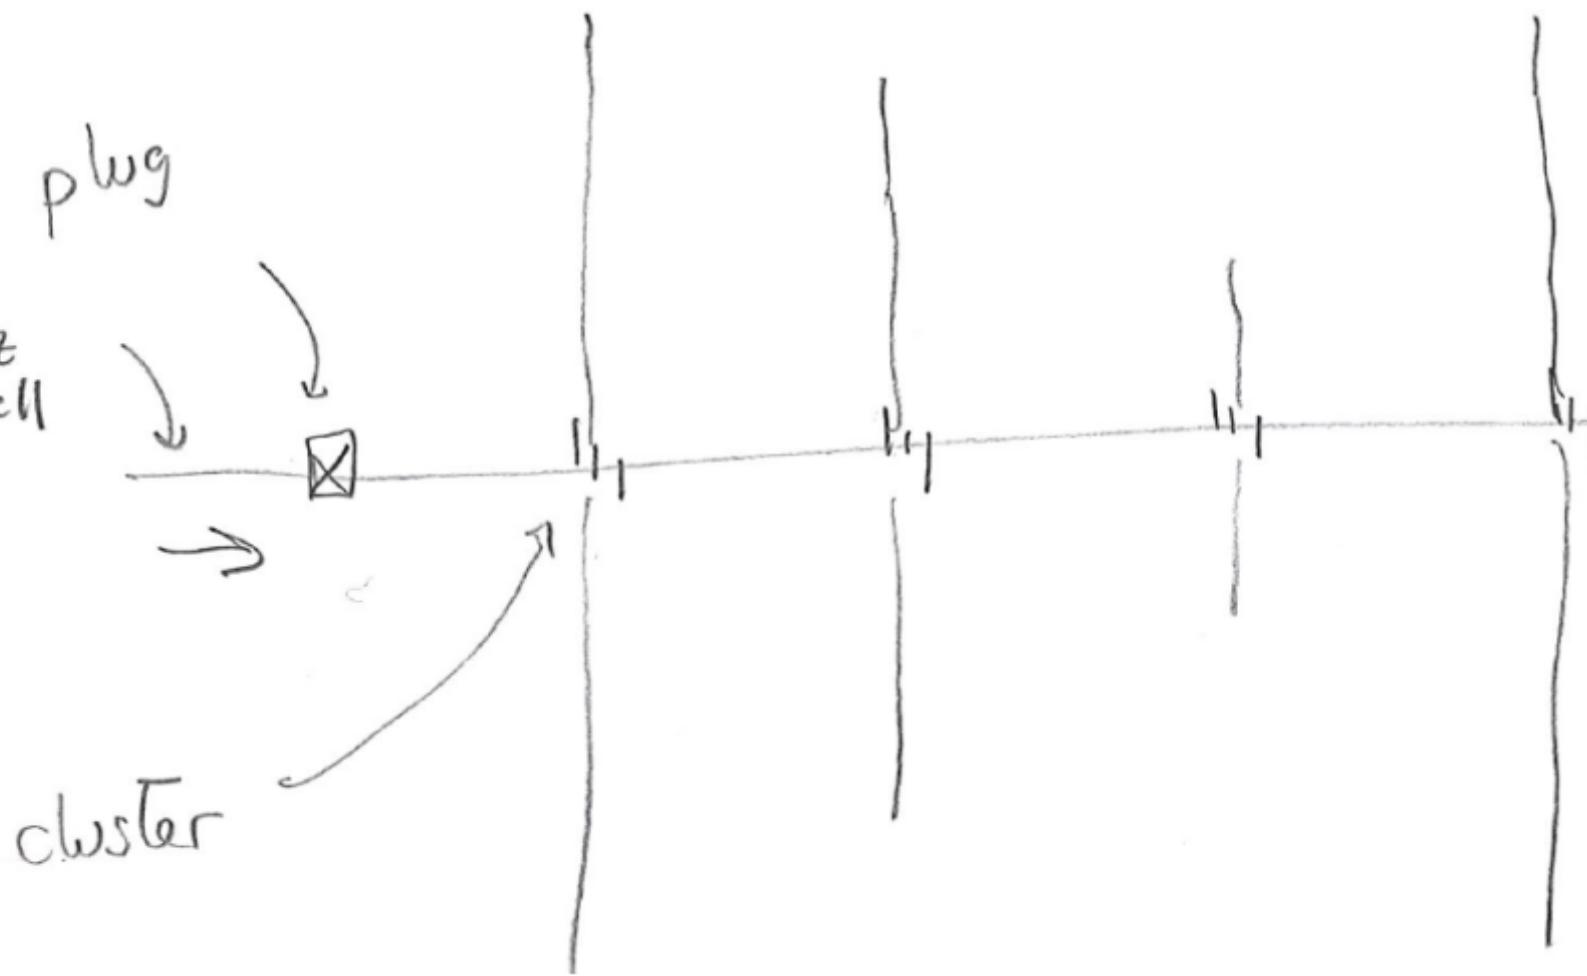





survival of the
fittest

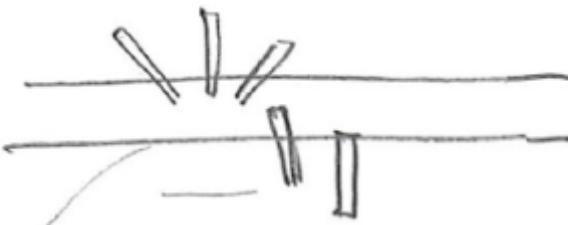


King – SPE 152596

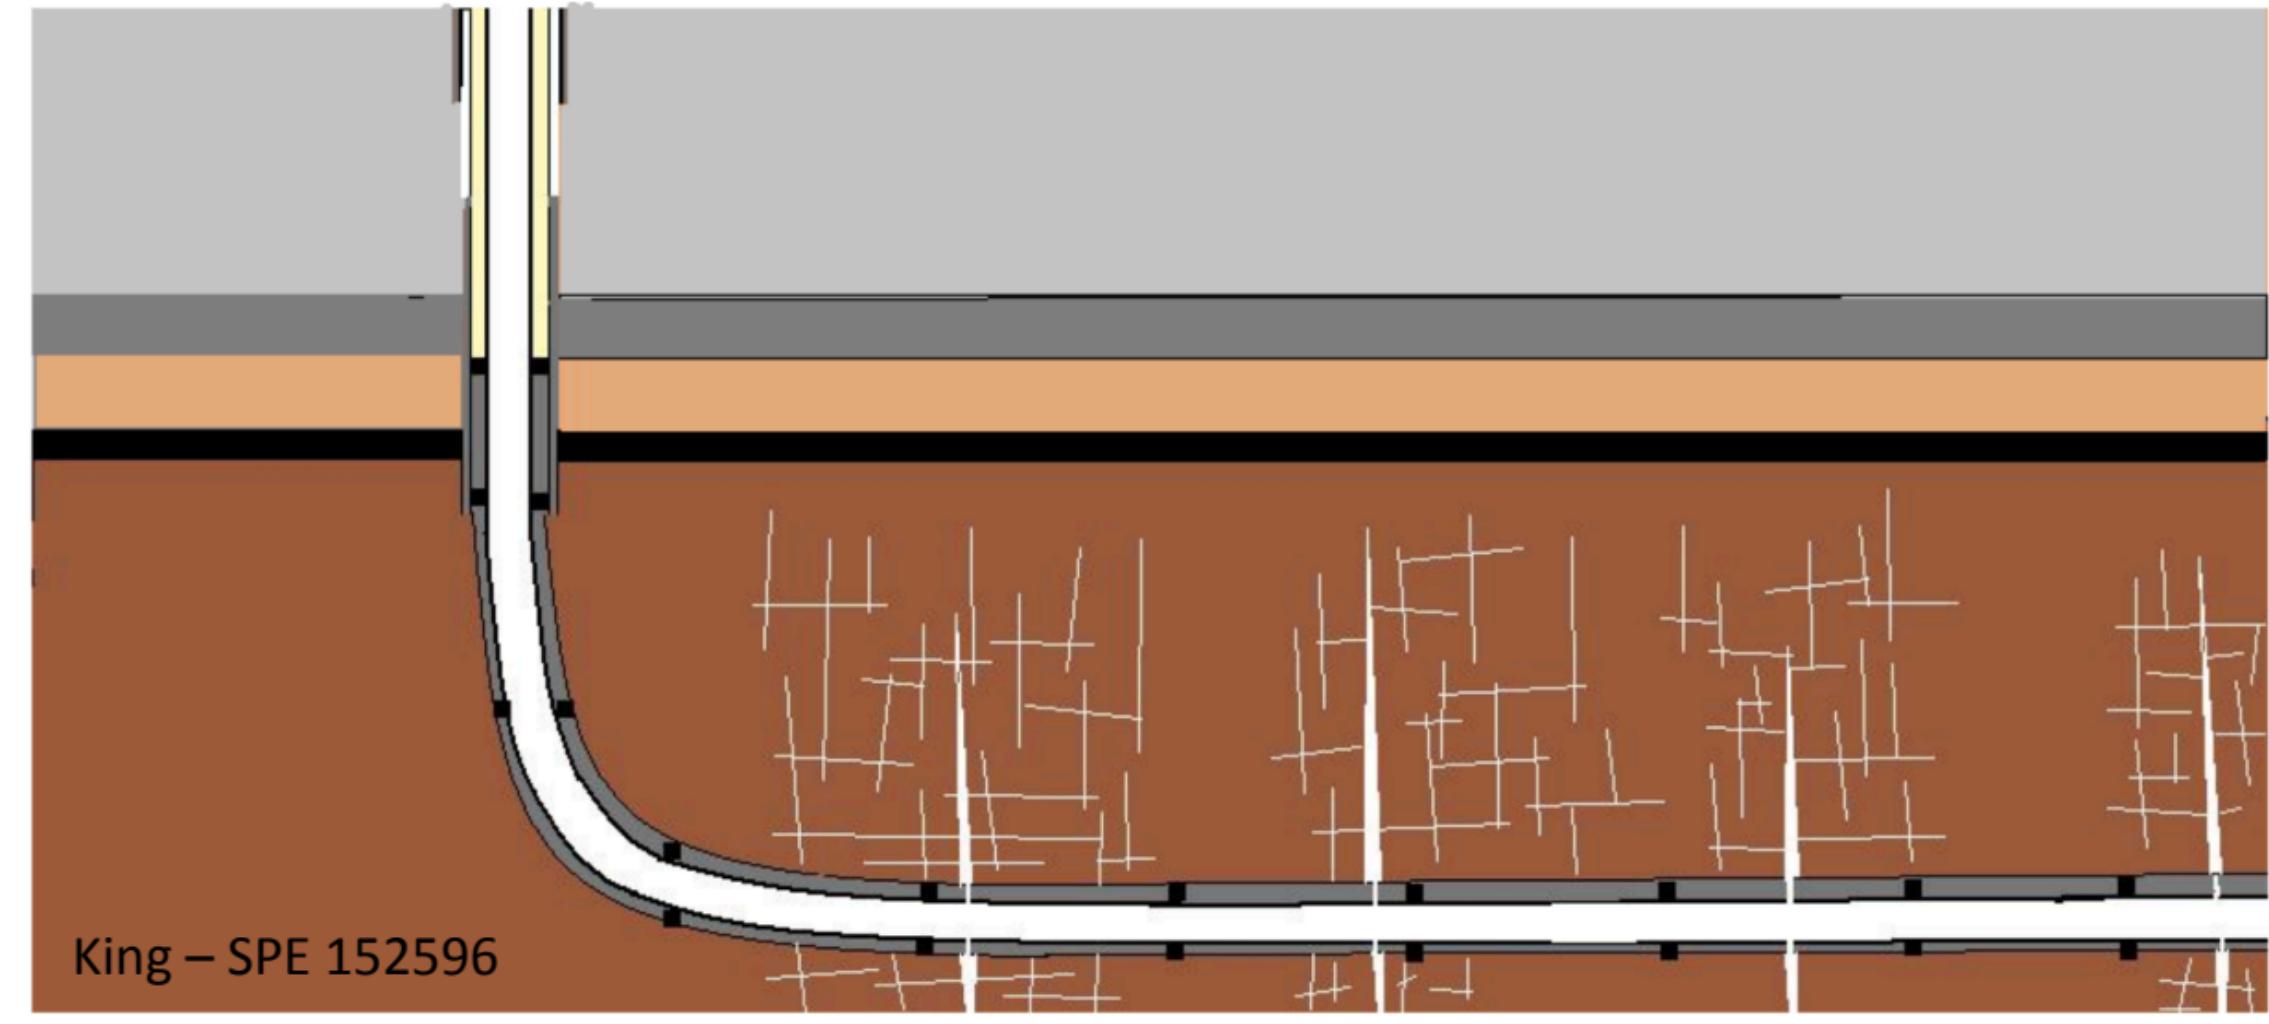

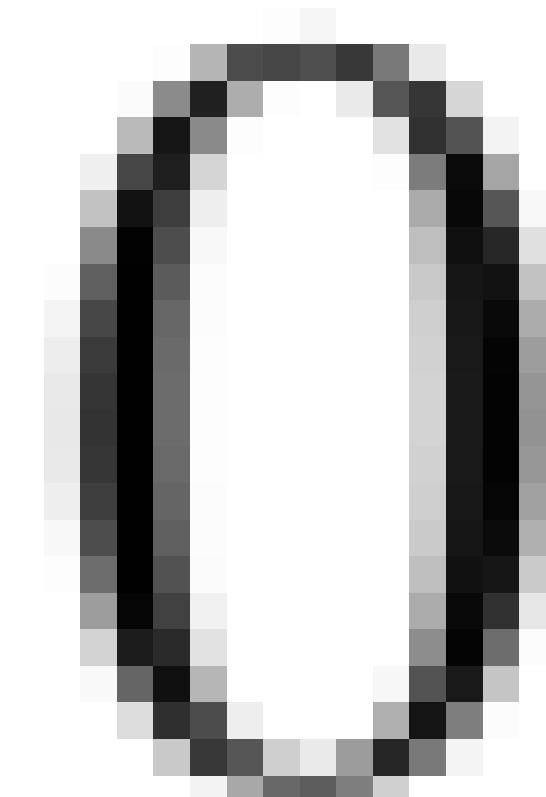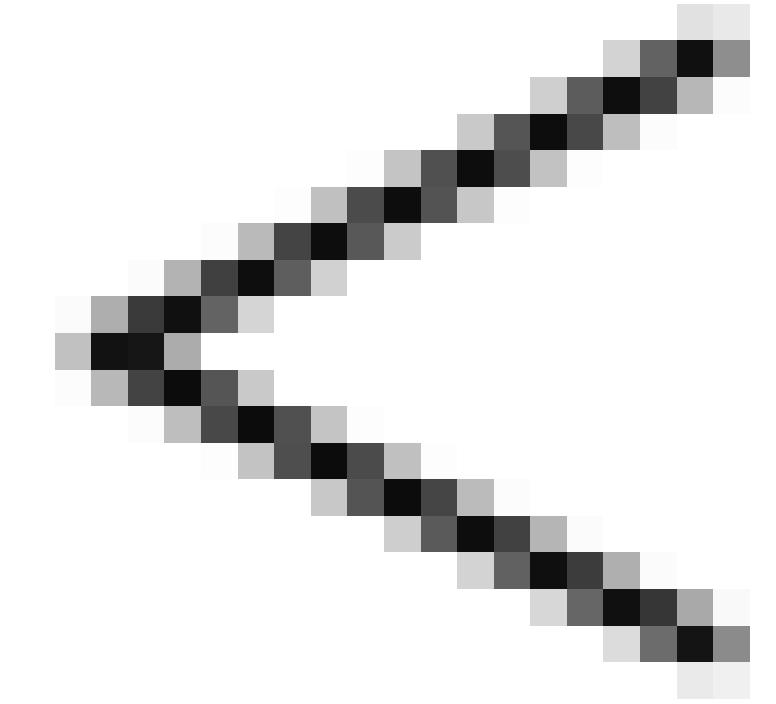

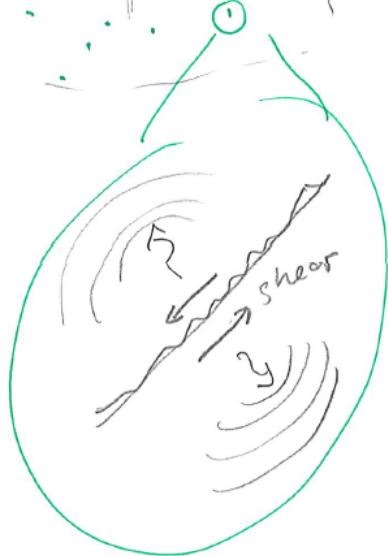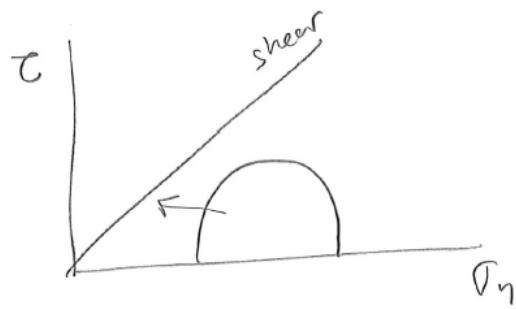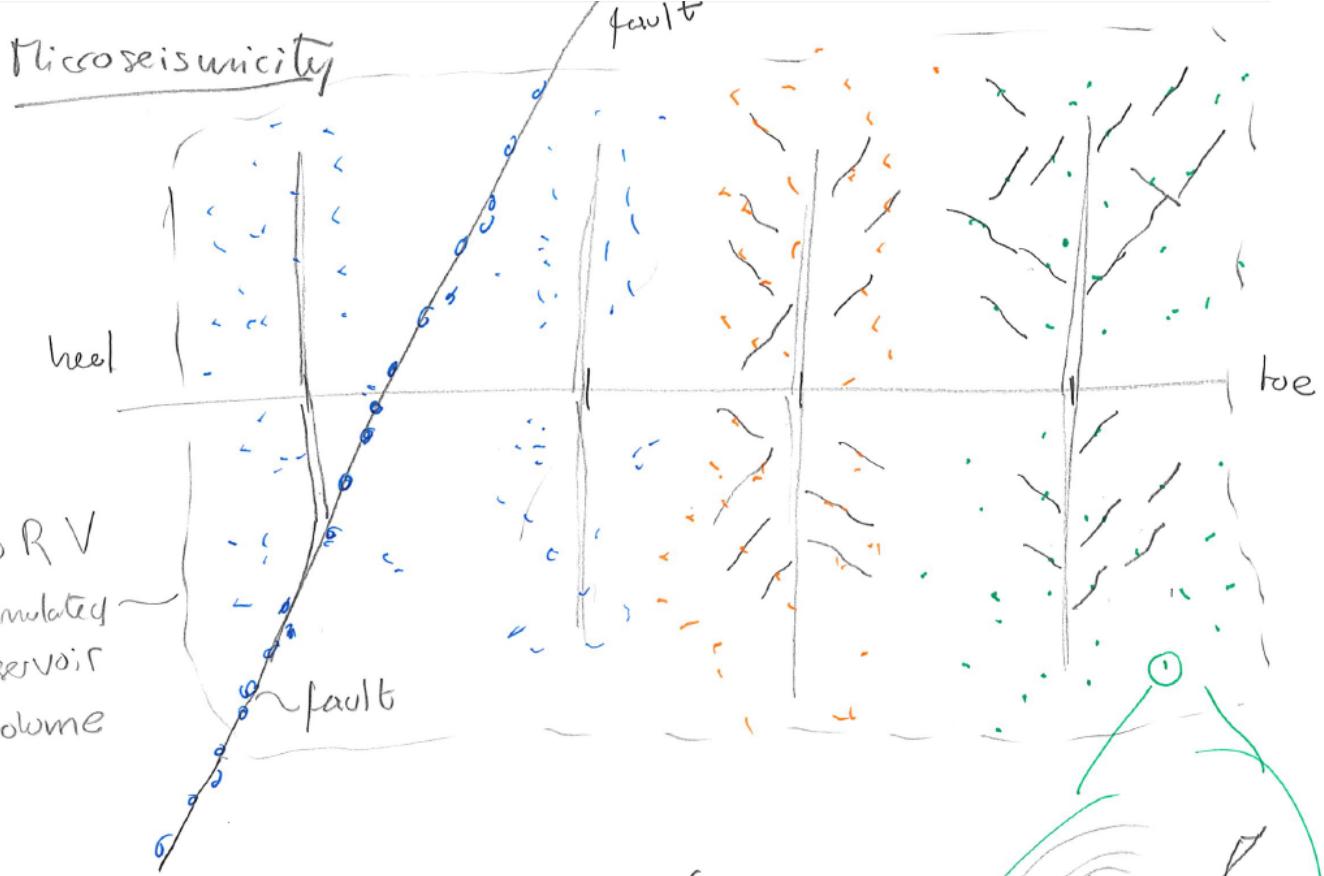


$EVR = RH - SRV(1 - \phi)$


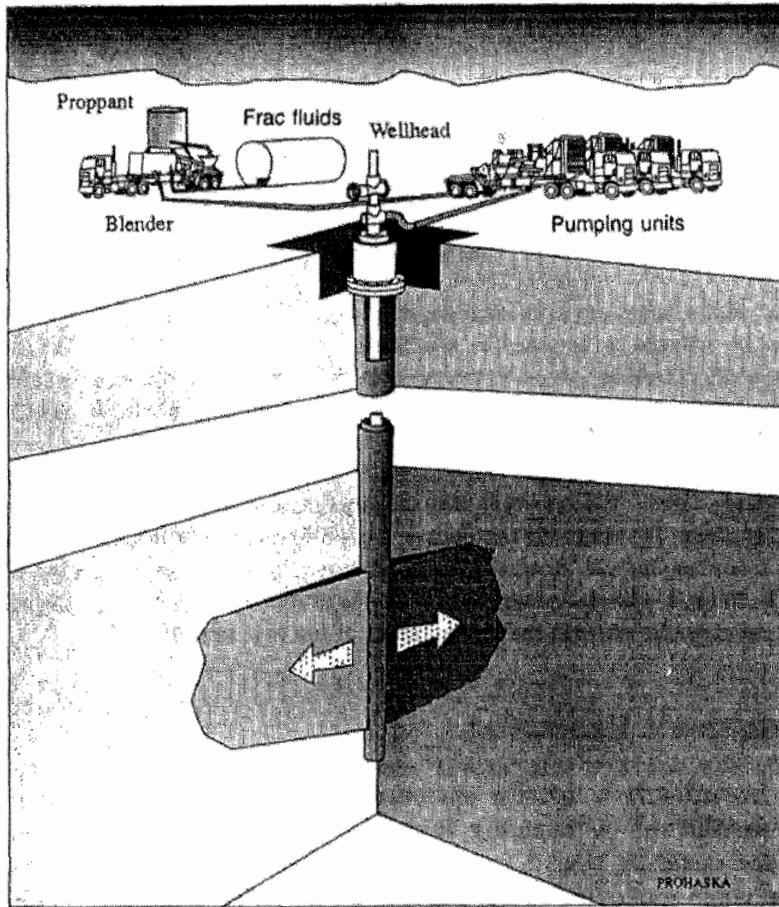


From
Valko and Economides, 1996

Surf Press [Tbg] (psi) Slurry Flow Rate (bpm)
Proppant Conc (ppg)

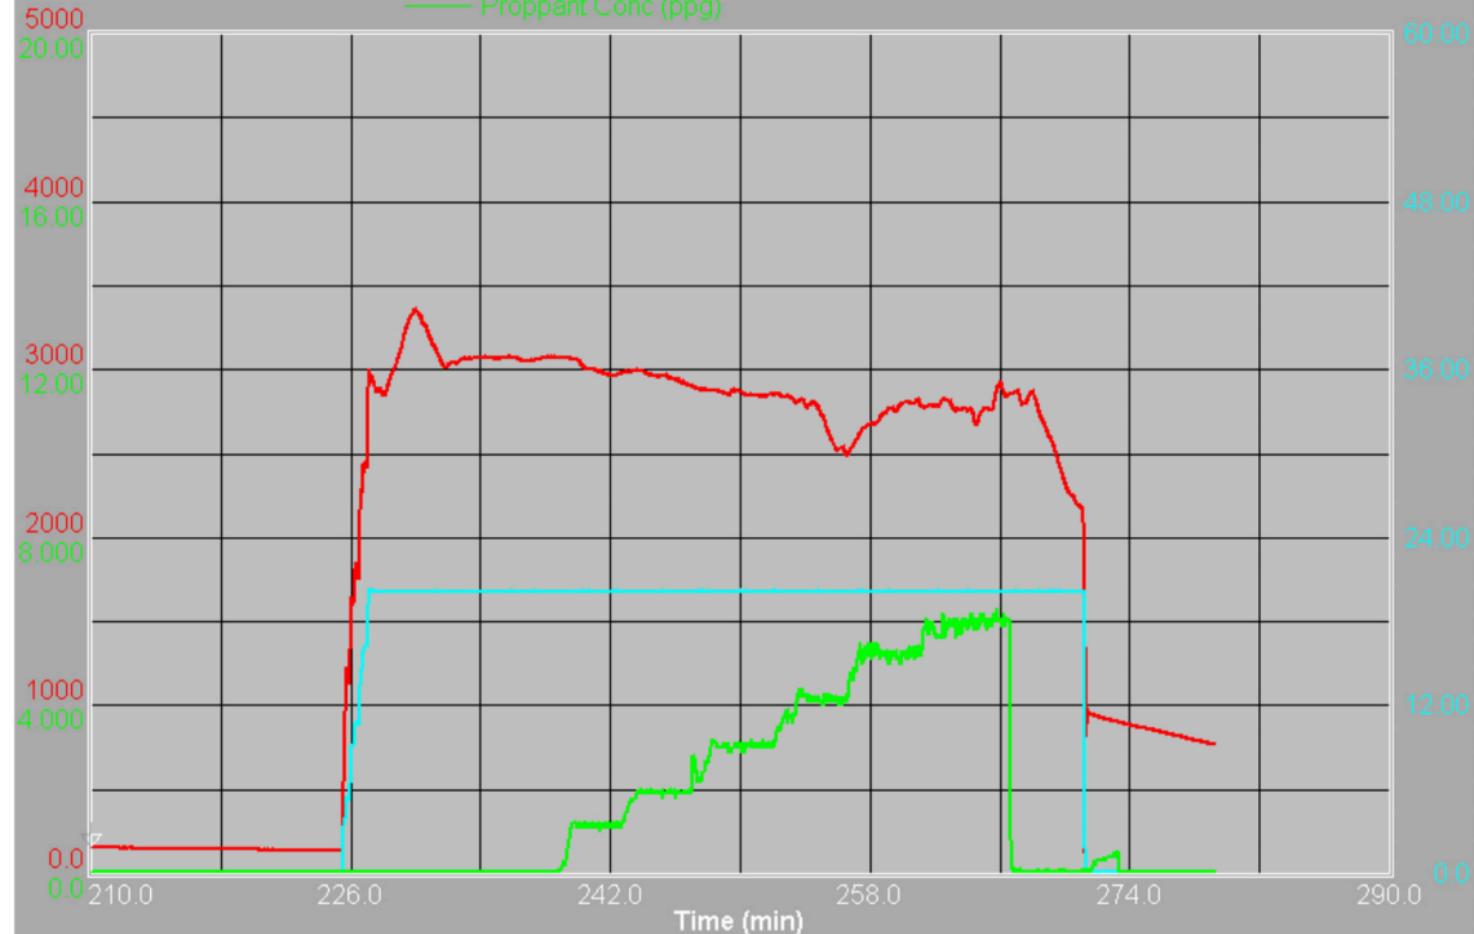





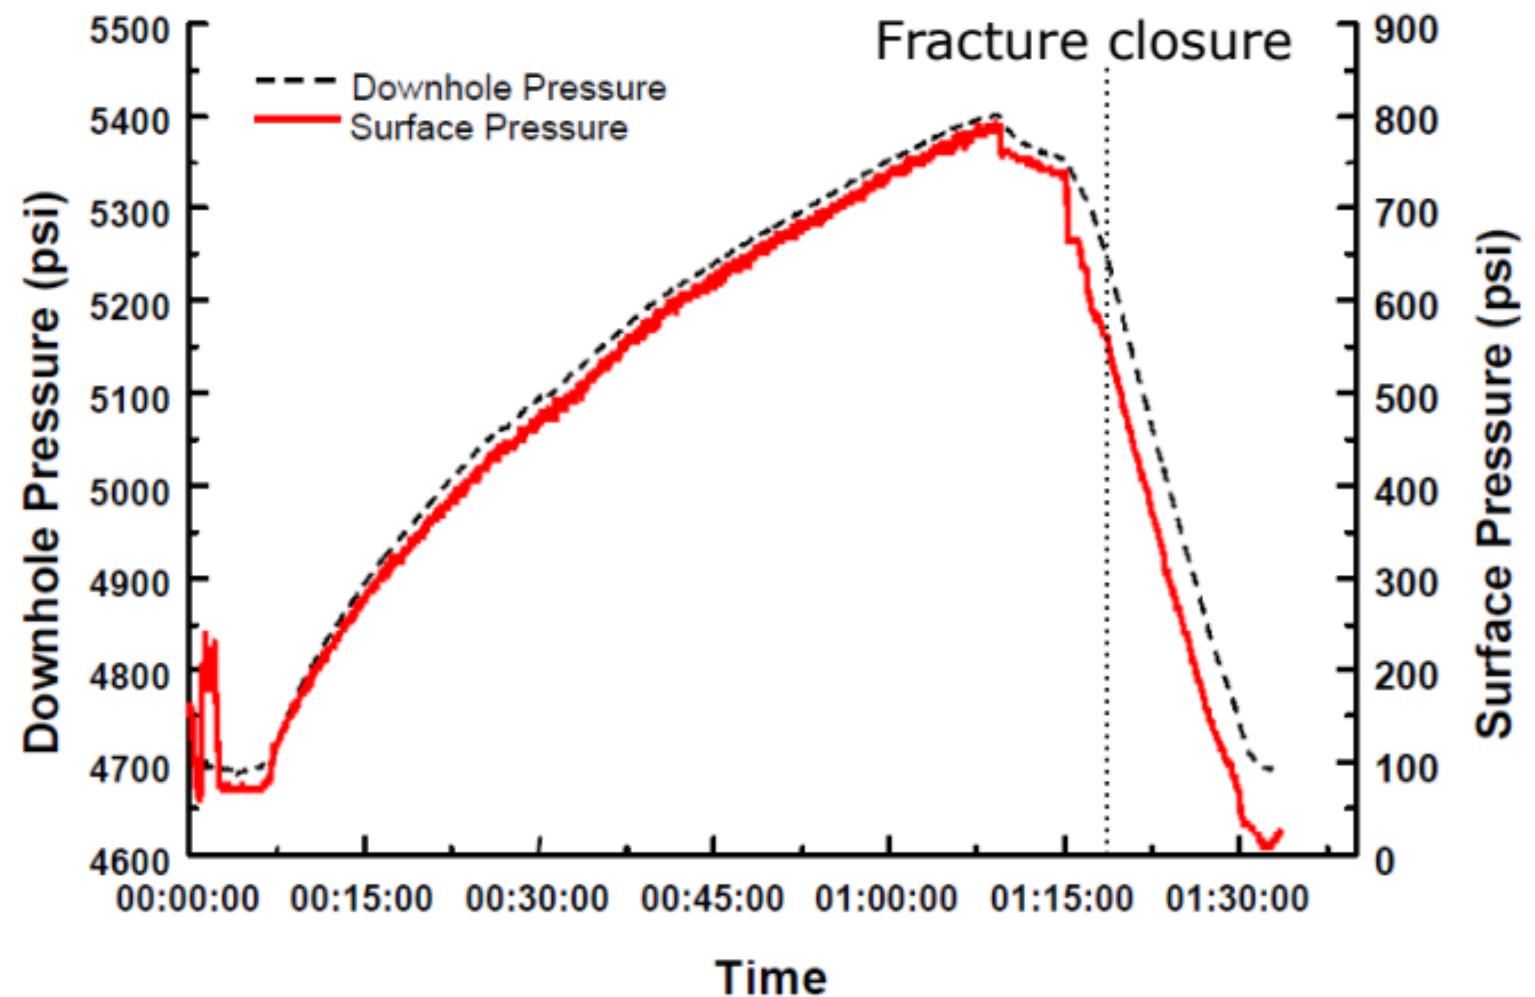
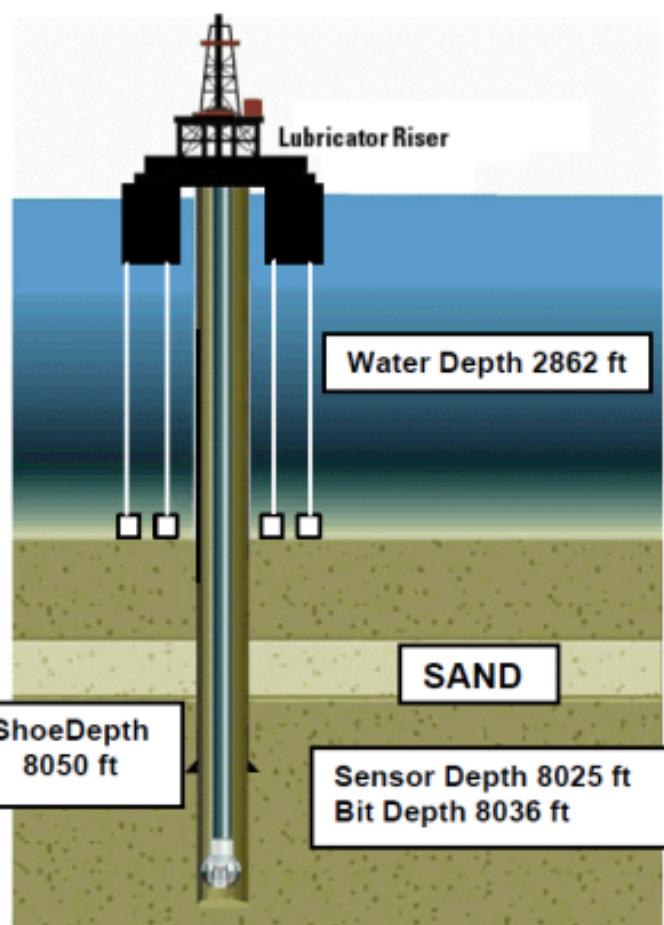



Step #	Test rate (bbl/min)	max. rate)	Test rate (% of								
			Time (min)	0	5	10	15	20	25	30	
1	0.2	5	Pressure (psi)	0	99	105	108	109	110	110	
			Time (min)	0	5	10	15	20	25	30	
2	0.4	10	Pressure (psi)	88	187	204	215	219	220	220	
			Time (min)	0	5	10	15	20	25	30	
3	0.8	20	Pressure (psi)	209	358	424	431	438	439	440	
			Time (min)	0	5	10	15	20	25	30	
4	1.6	40	Pressure (psi)	418	770	869	871	875	878	882	
			Time (min)	0	5	10	15	20	25	30	
5	2.4	60	Pressure (psi)	825	1089	1133	1199	1265	1298	1321	
			Time (min)	0	5	10	15	20	25	30	
6	3.2	80	Pressure (psi)	1210	1375	1459	1507	1529	1535	1540	
			Time (min)	0	5	10	15	20	25	30	
7	4	100	Pressure (psi)	1485	1595	1650	1683	1727	1749	1760	
			Time (min)	0	5	10	15	20	25	30	







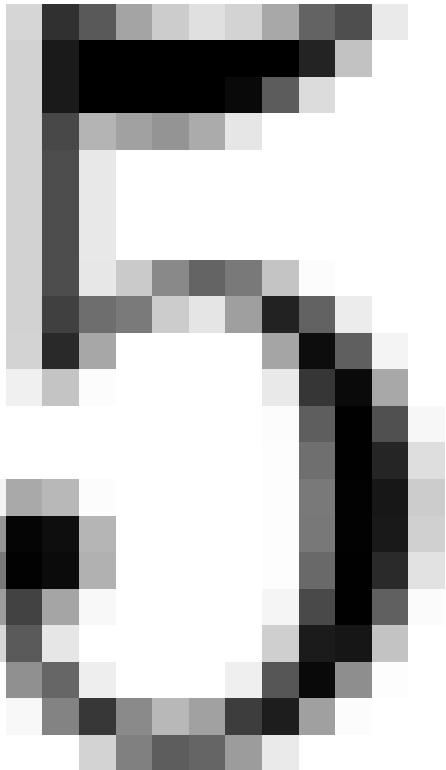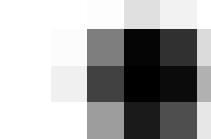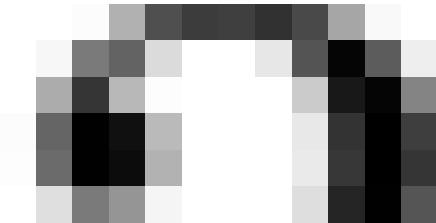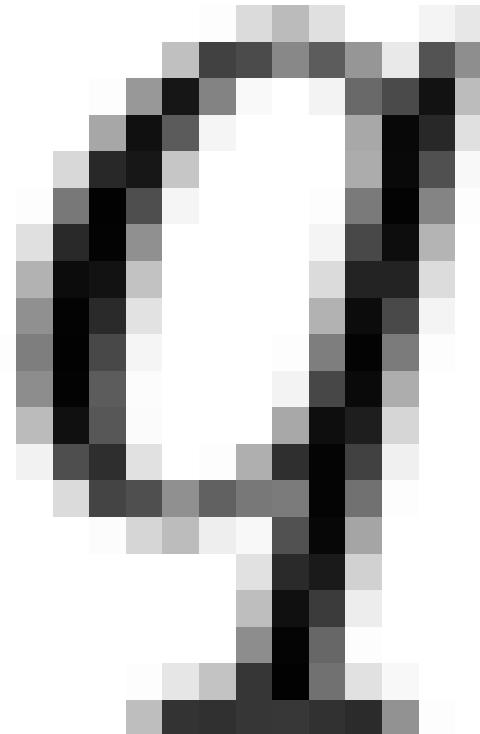

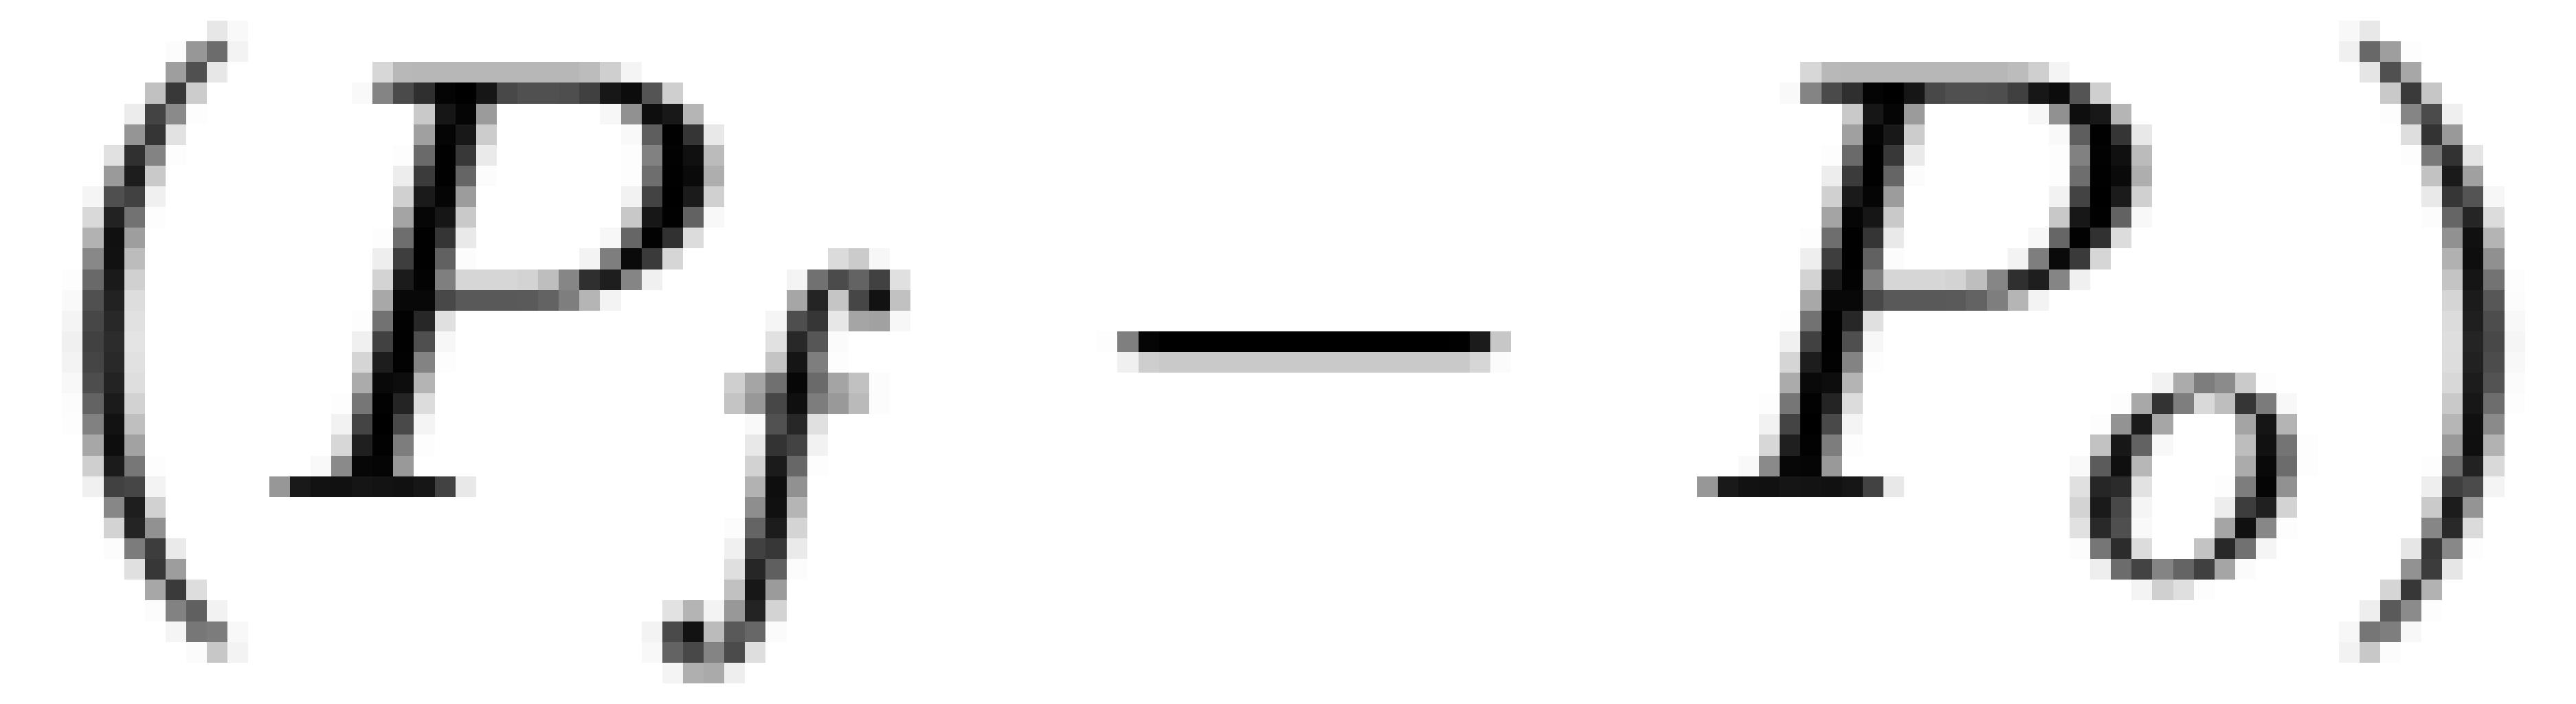






$$\begin{bmatrix} S_{11} - \alpha P_p \\ S_{22} - \alpha P_p \\ S_{33} - \alpha P_p \\ S_{12} \\ S_{13} \\ S_{23} \end{bmatrix} = \frac{E}{(1+\nu)(1-2\nu)} \begin{bmatrix} 1-\nu & \nu & \nu & 0 & 0 & 0 \\ \nu & 1-\nu & \nu & 0 & 0 & 0 \\ \nu & \nu & 1-\nu & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ 0 \\ \varepsilon_{33} \\ 0 \\ 0 \end{bmatrix}$$

$$\sigma_{33} =$$

$$\frac{S_{33} - \alpha P_p}{E(1-\nu)}$$
$$\frac{(1+\nu)(1-2\nu)}{(1+\nu)(1-2\nu)}$$



AC33

E


M

O

AP





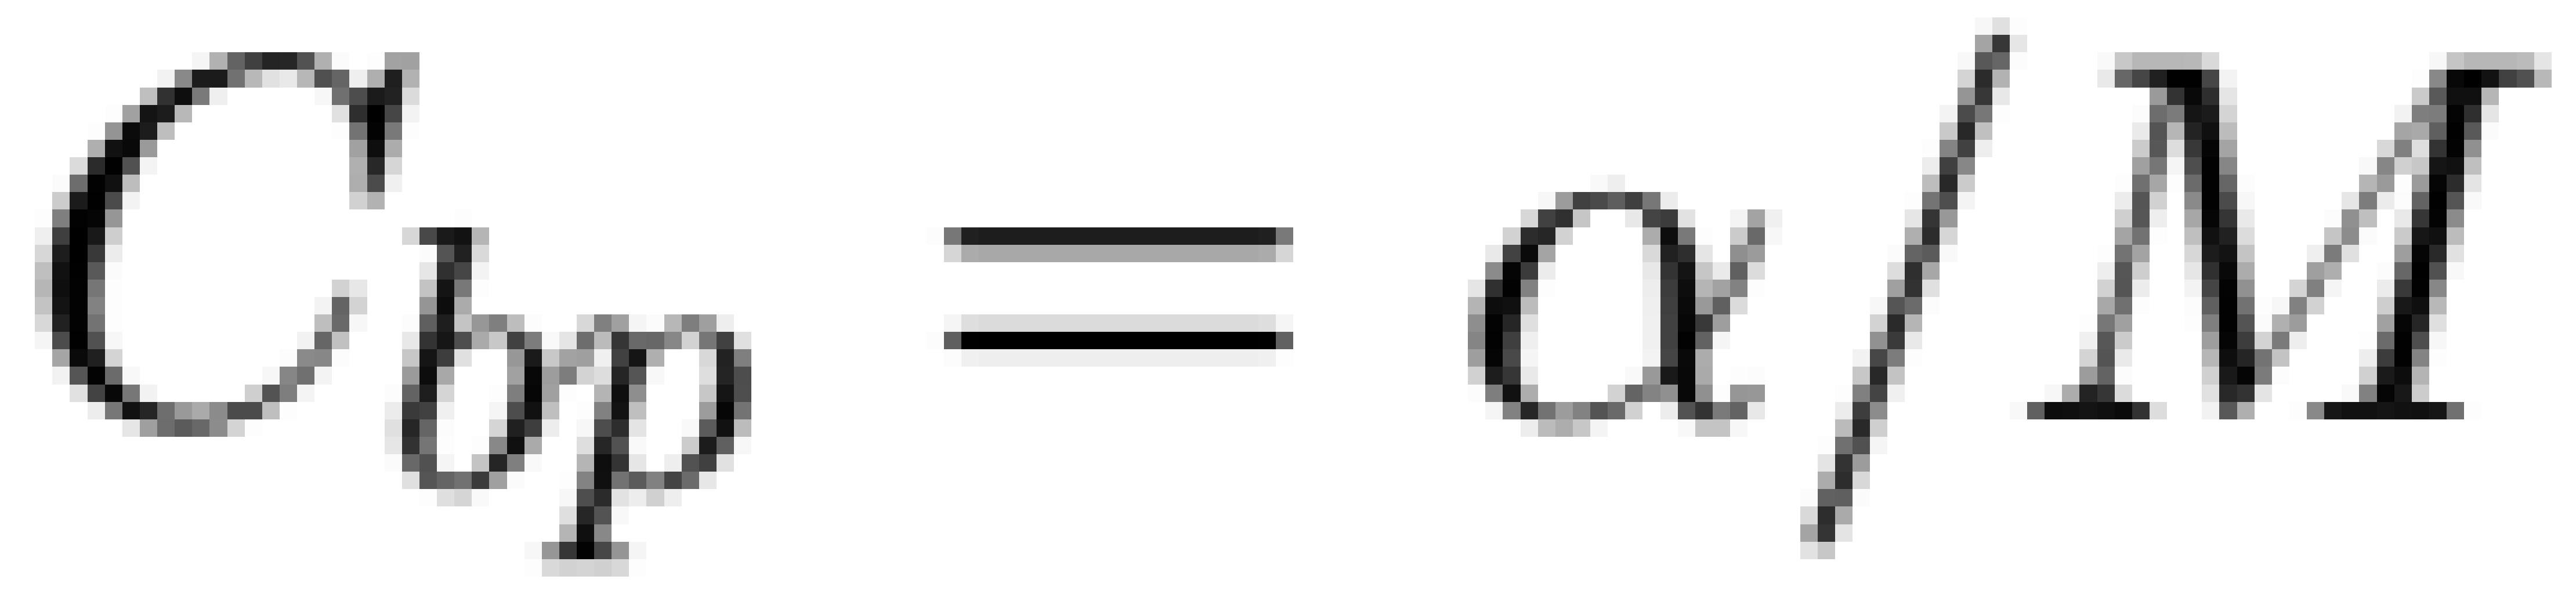

ΔS_{11}


$=$



α

$\frac{1}{2} - \frac{1}{2} \nu$


ΔP_D





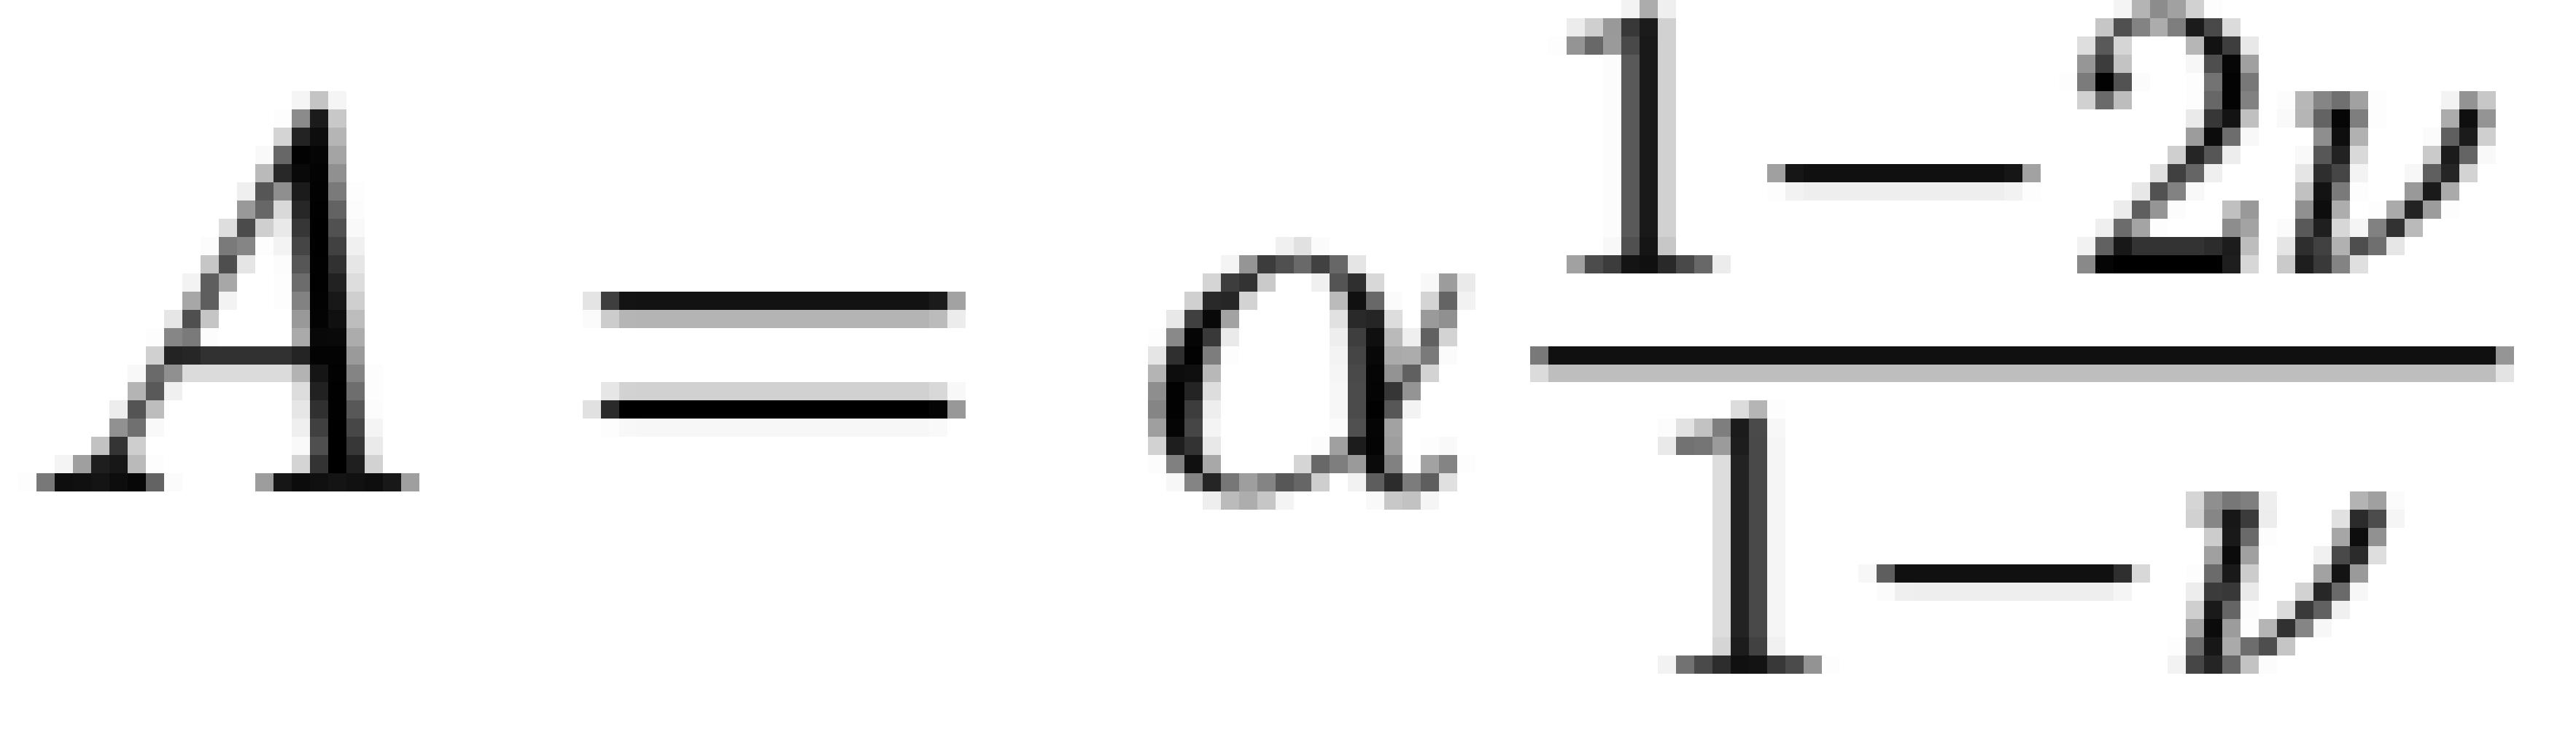


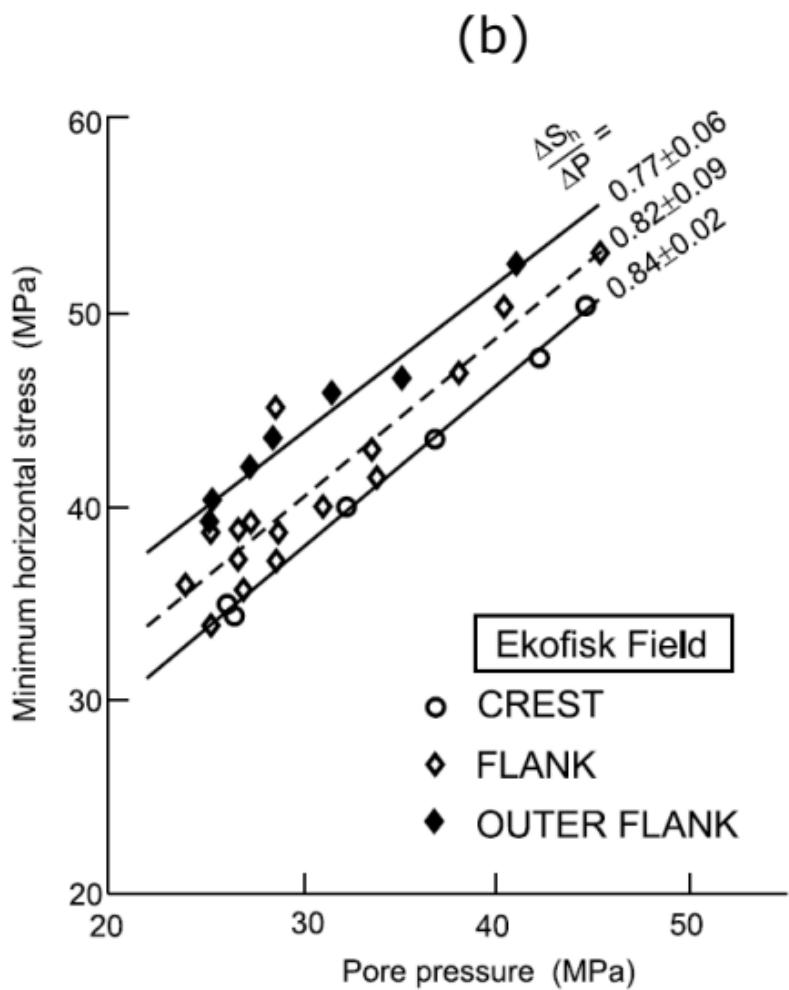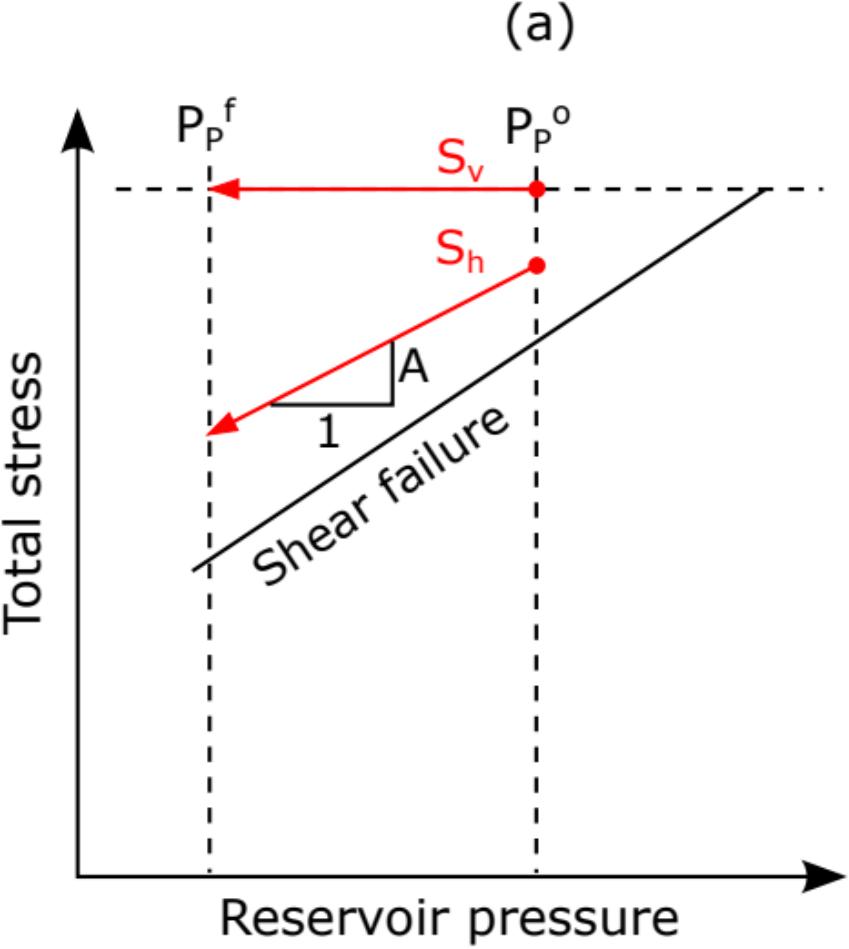






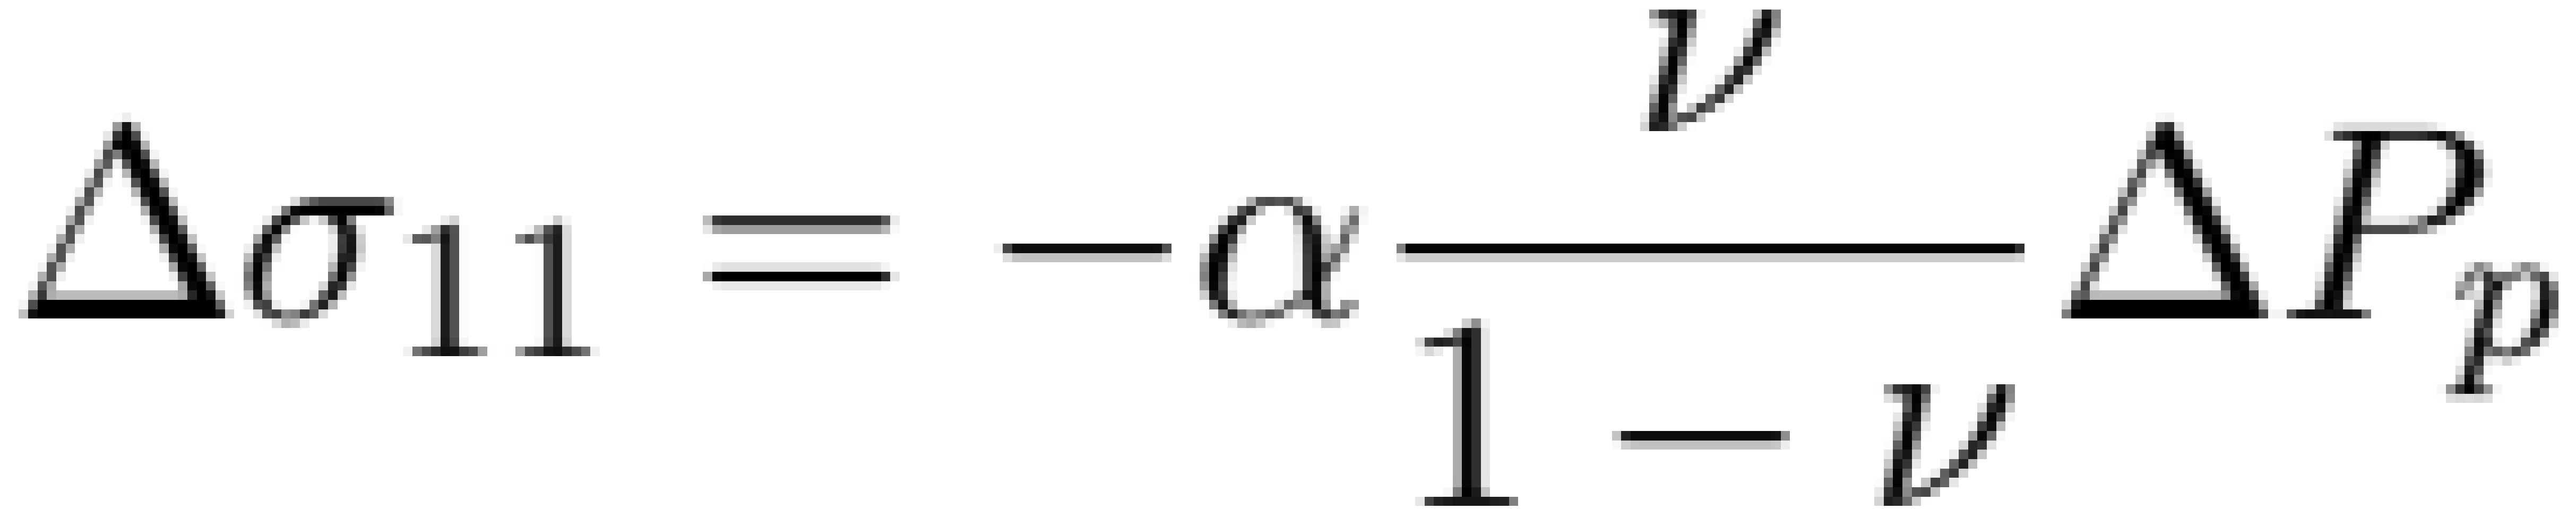





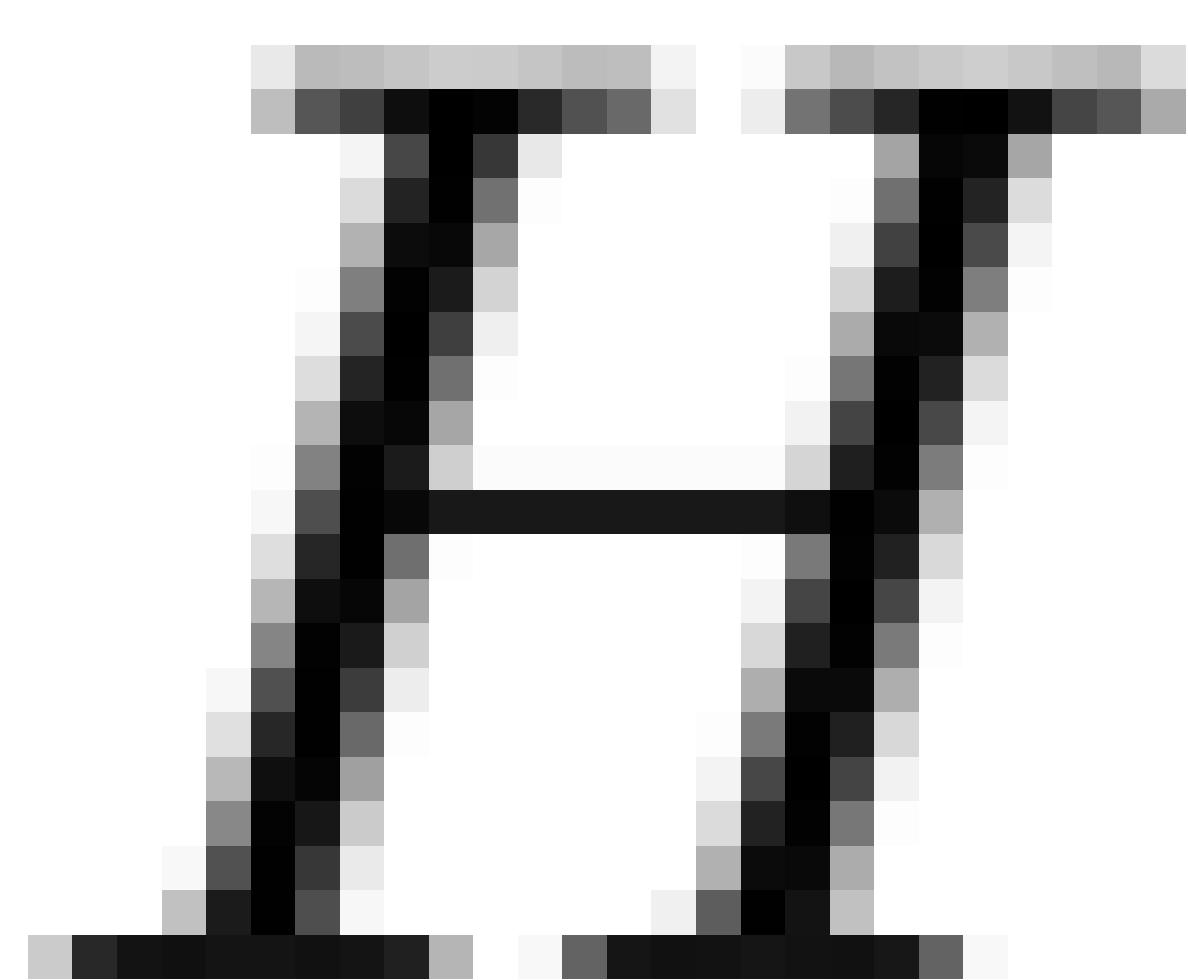
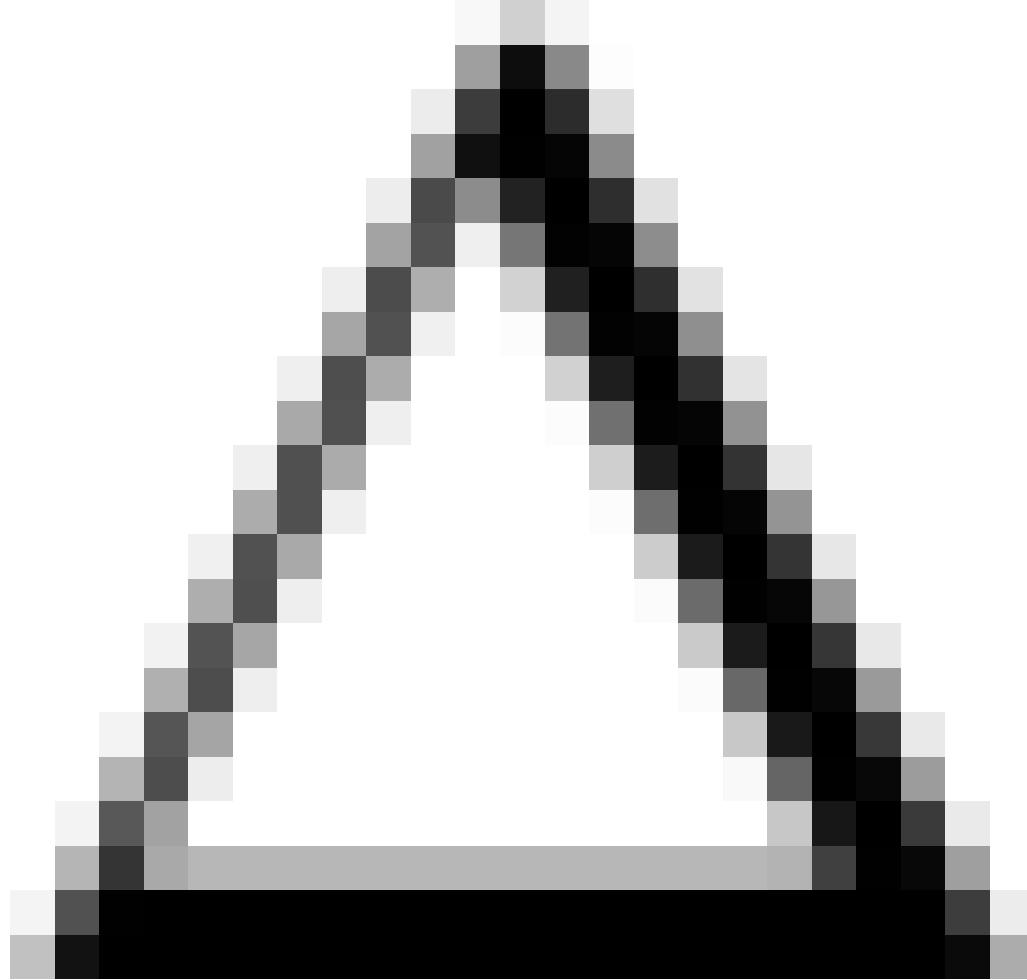







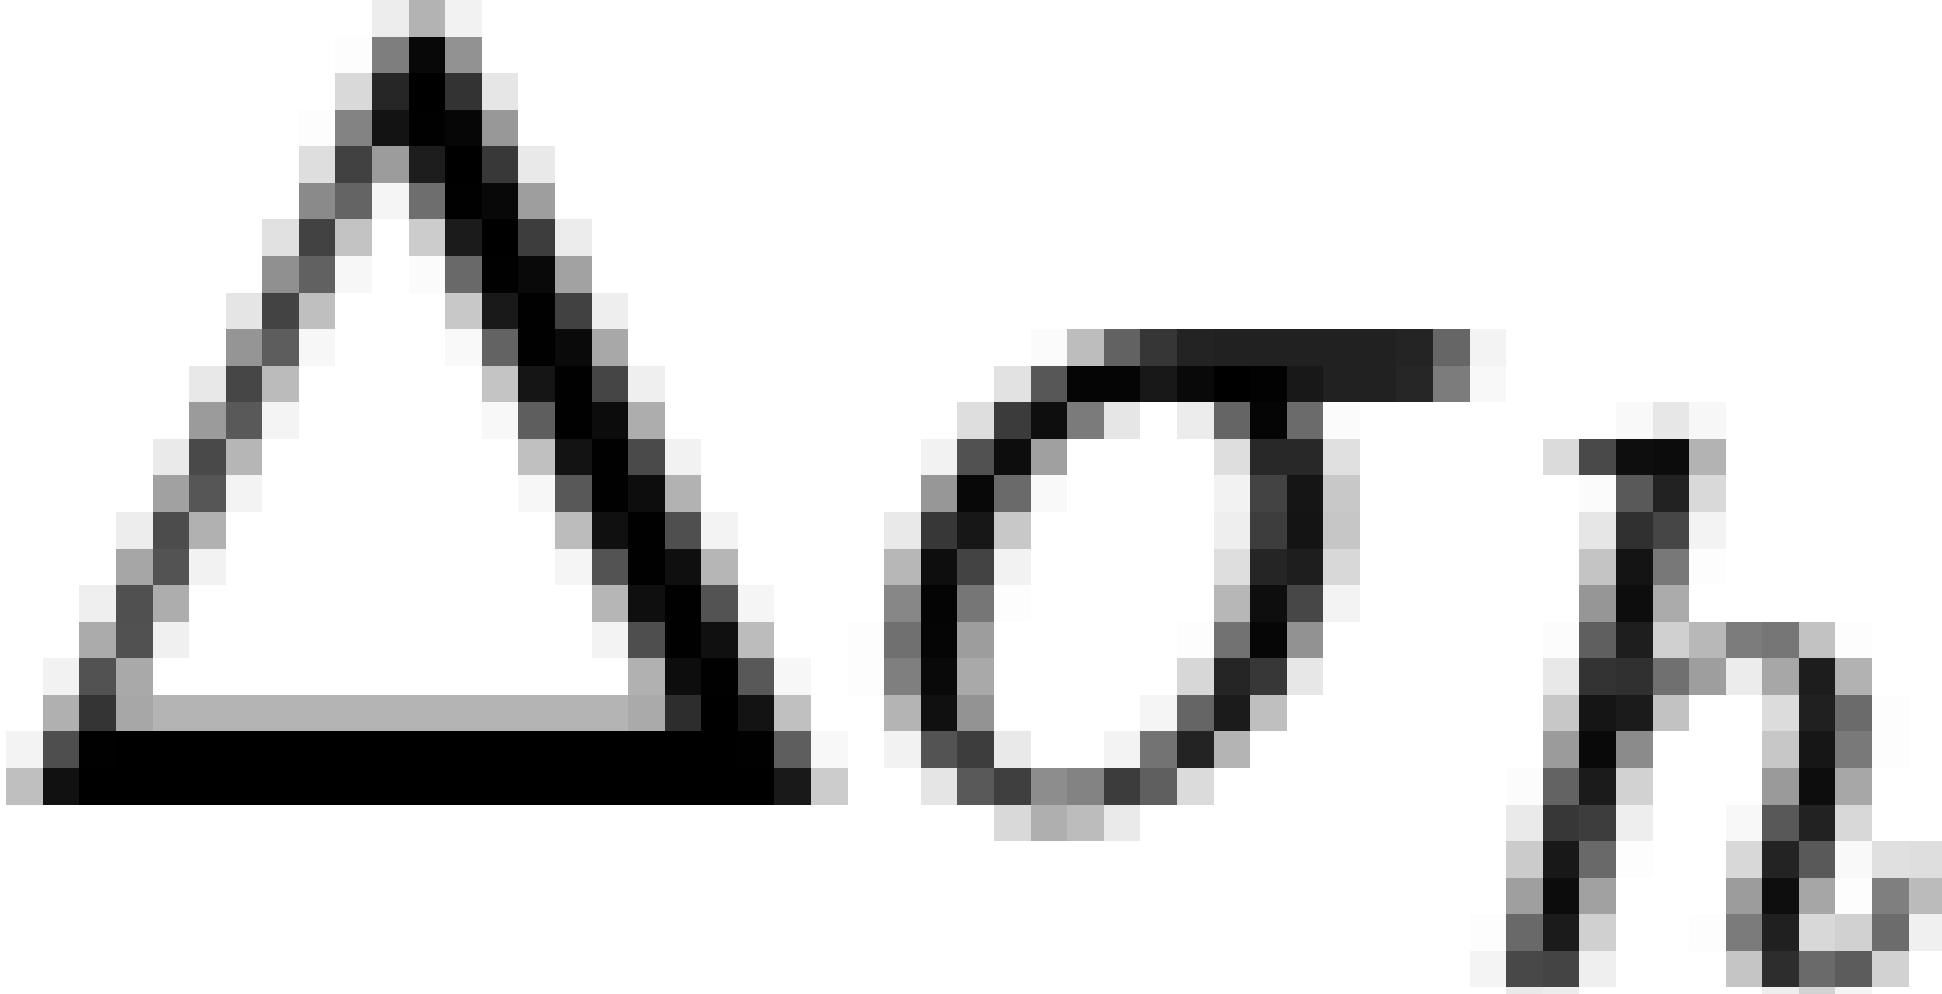



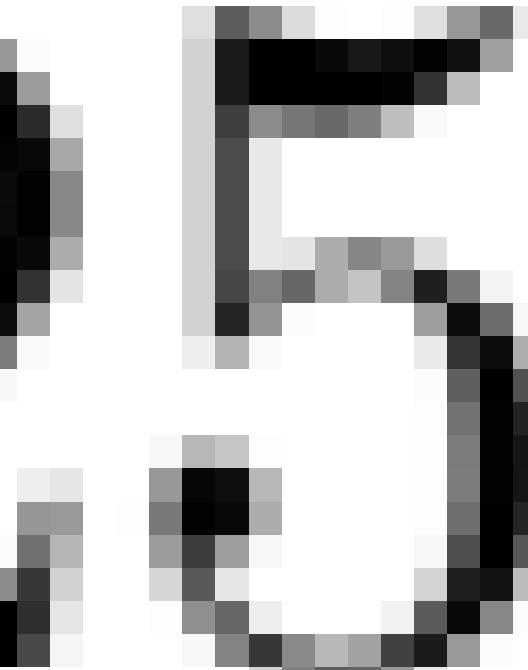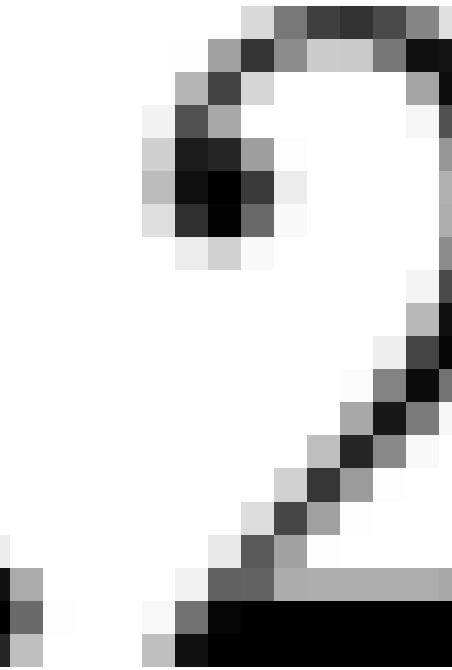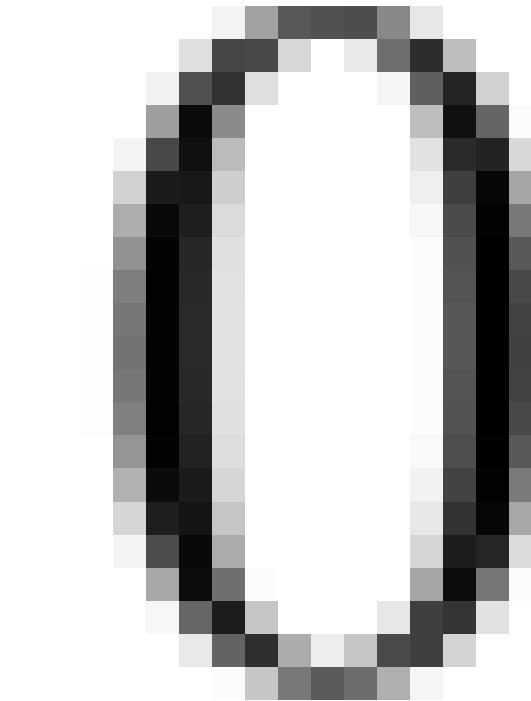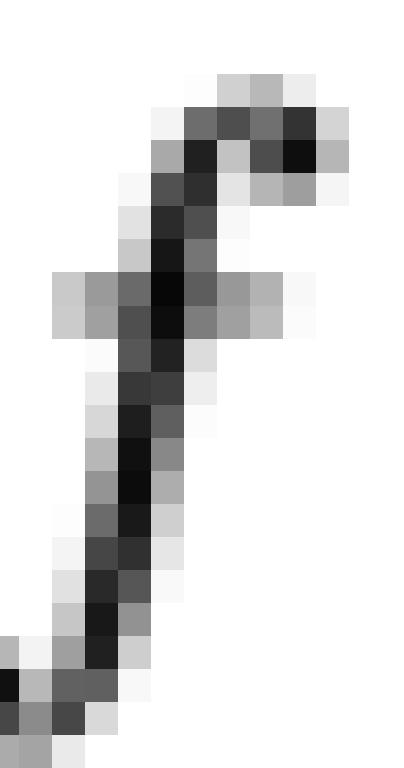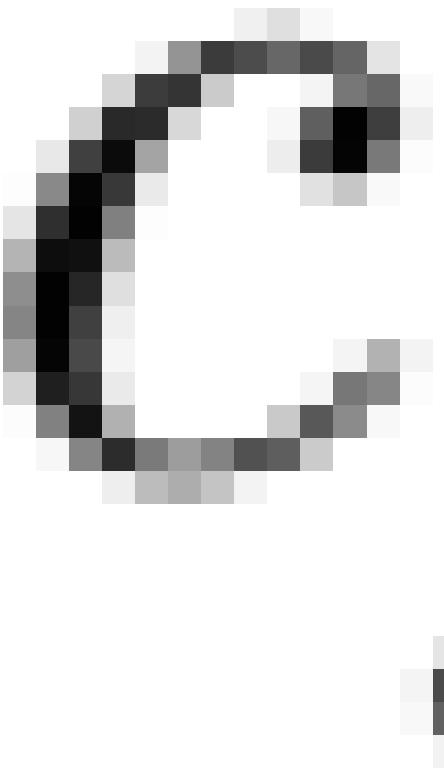

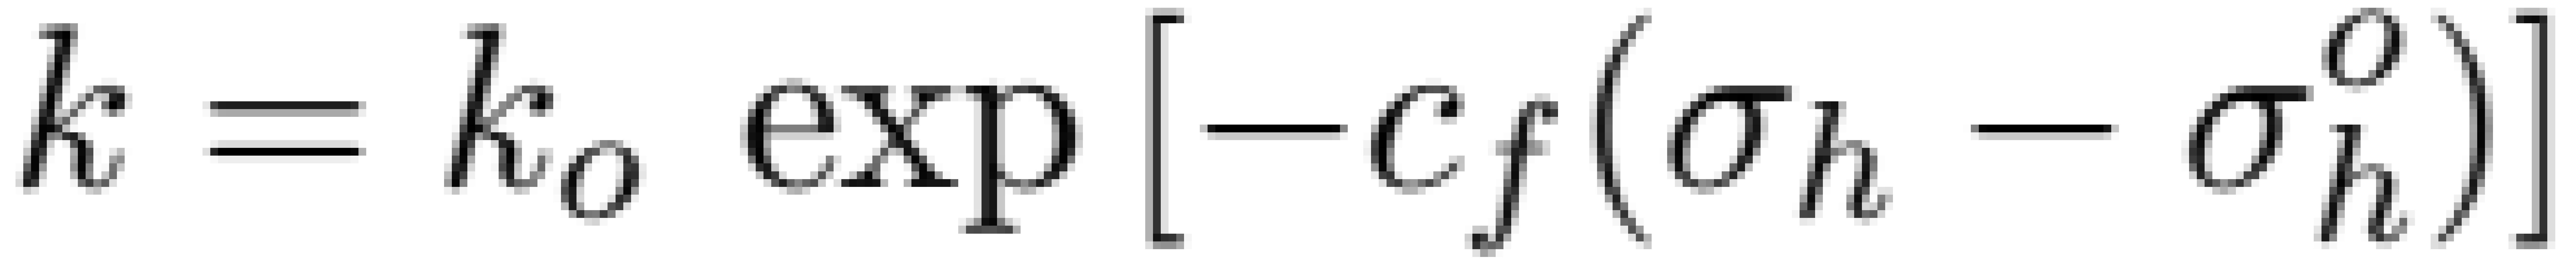


$$M_2 =$$

$$E \left(\frac{1}{1 + v} \right) \left(\frac{1 - v}{1 - 2v} \right)$$

$$=$$

$$14.8$$

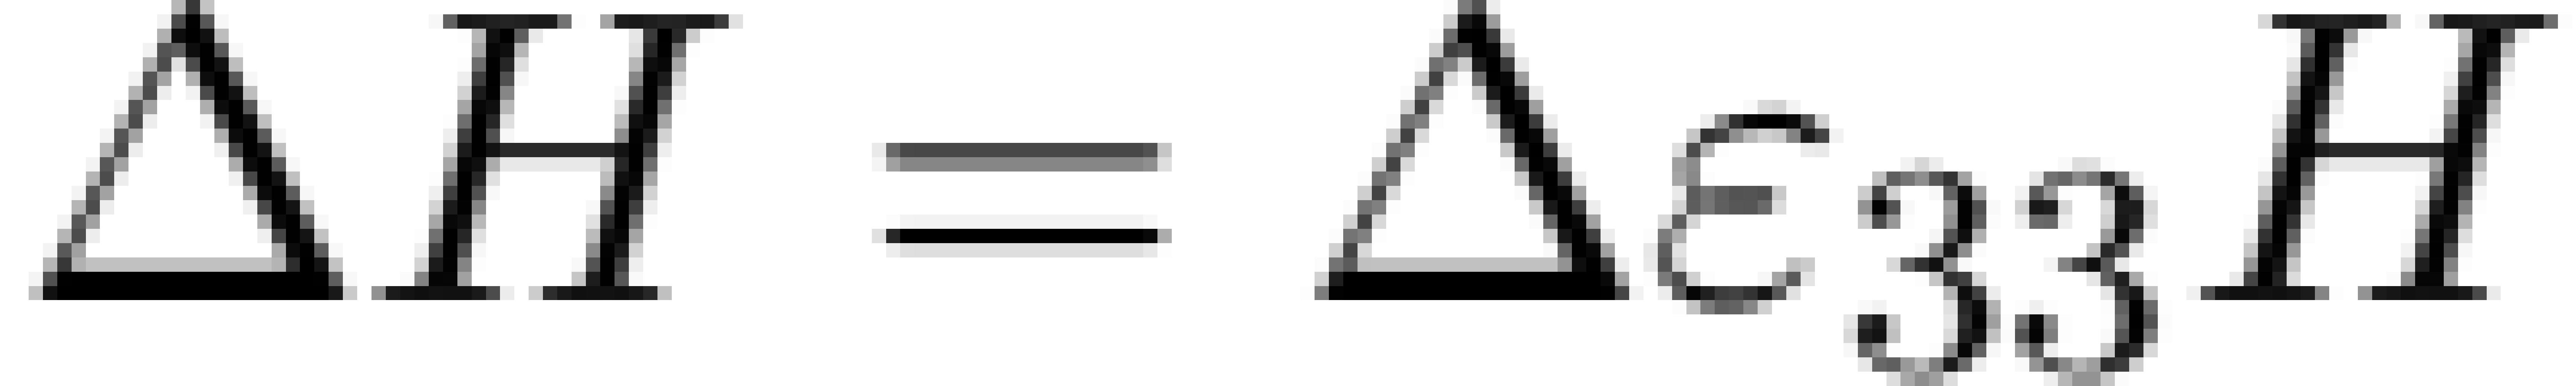

633


25





-75

0

21

0.26

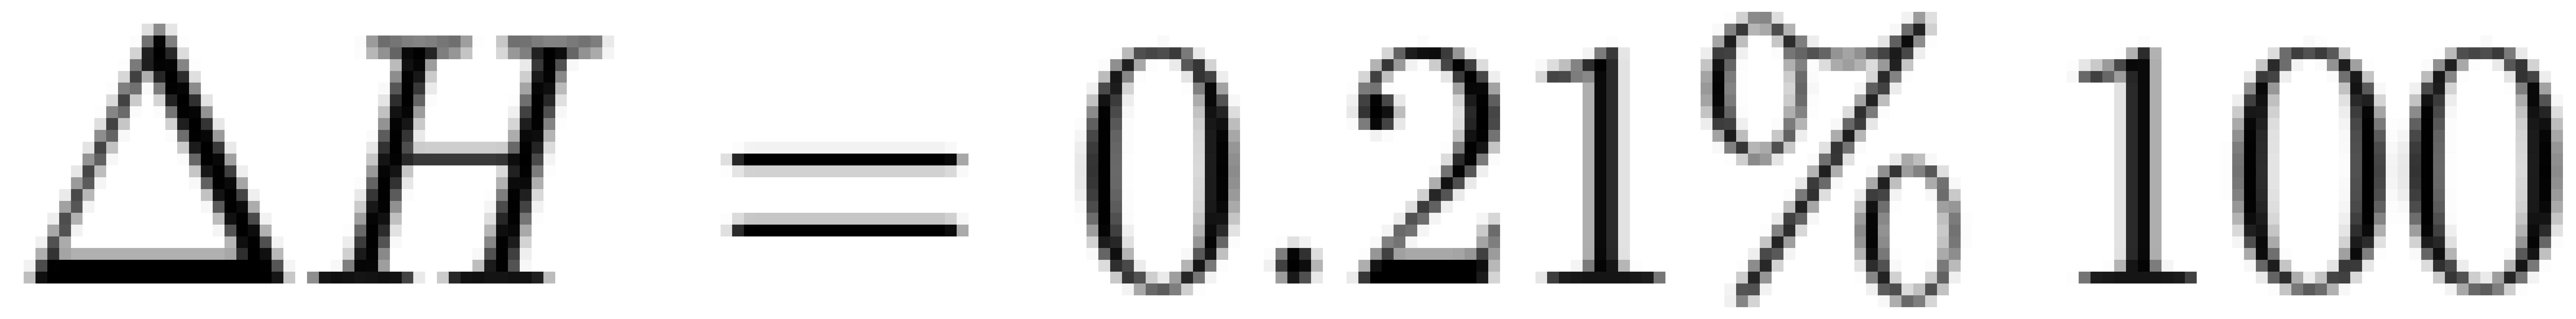

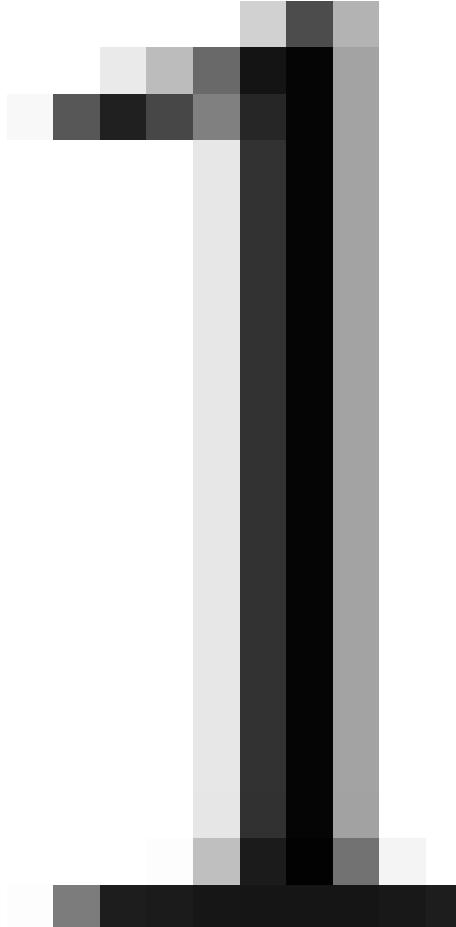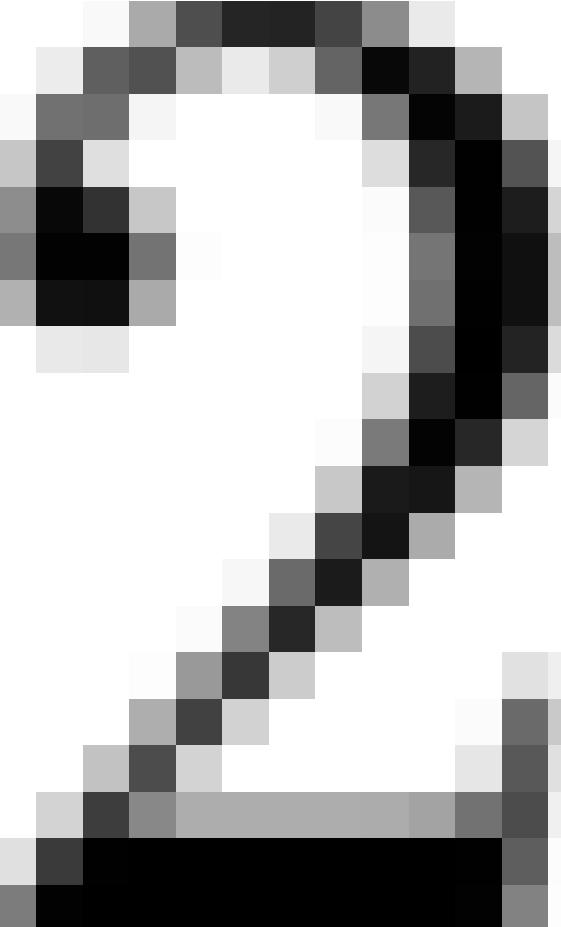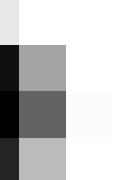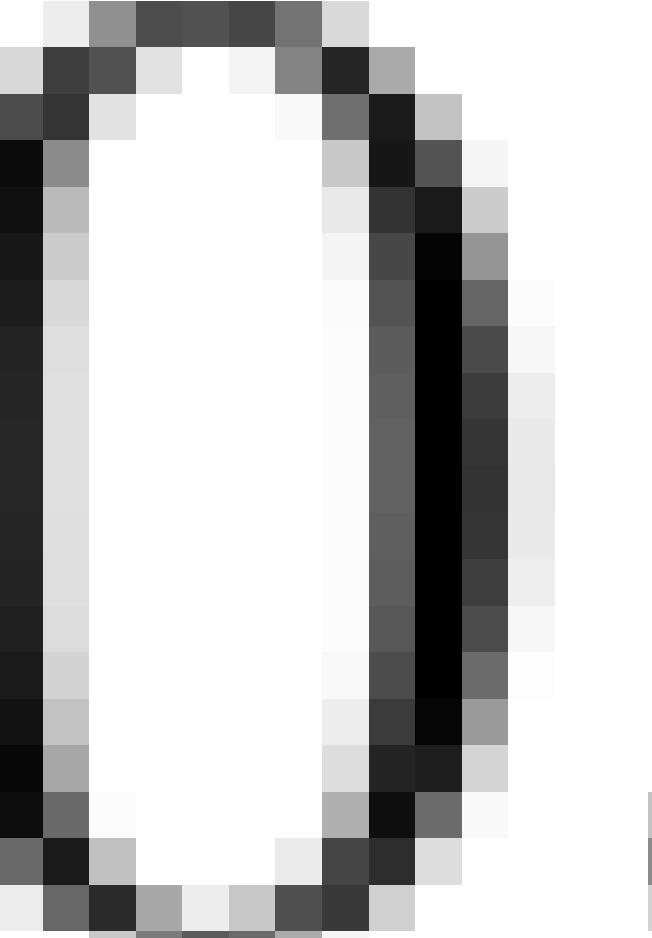



$$C_{bp} = \frac{\alpha}{M} = 0.06 \times 10^{-9} \frac{1}{Pa} = 0.42 \times 10^{-6} \frac{1}{Pa}$$


$$C_{pp} = \frac{C_{bp}}{\phi} = 2.0 \times 10^{-6} \frac{1}{\text{psi}}$$

$\Delta S_h \geq 0$

$$\frac{1}{1-\nu} - \frac{2\nu}{1-\nu}$$

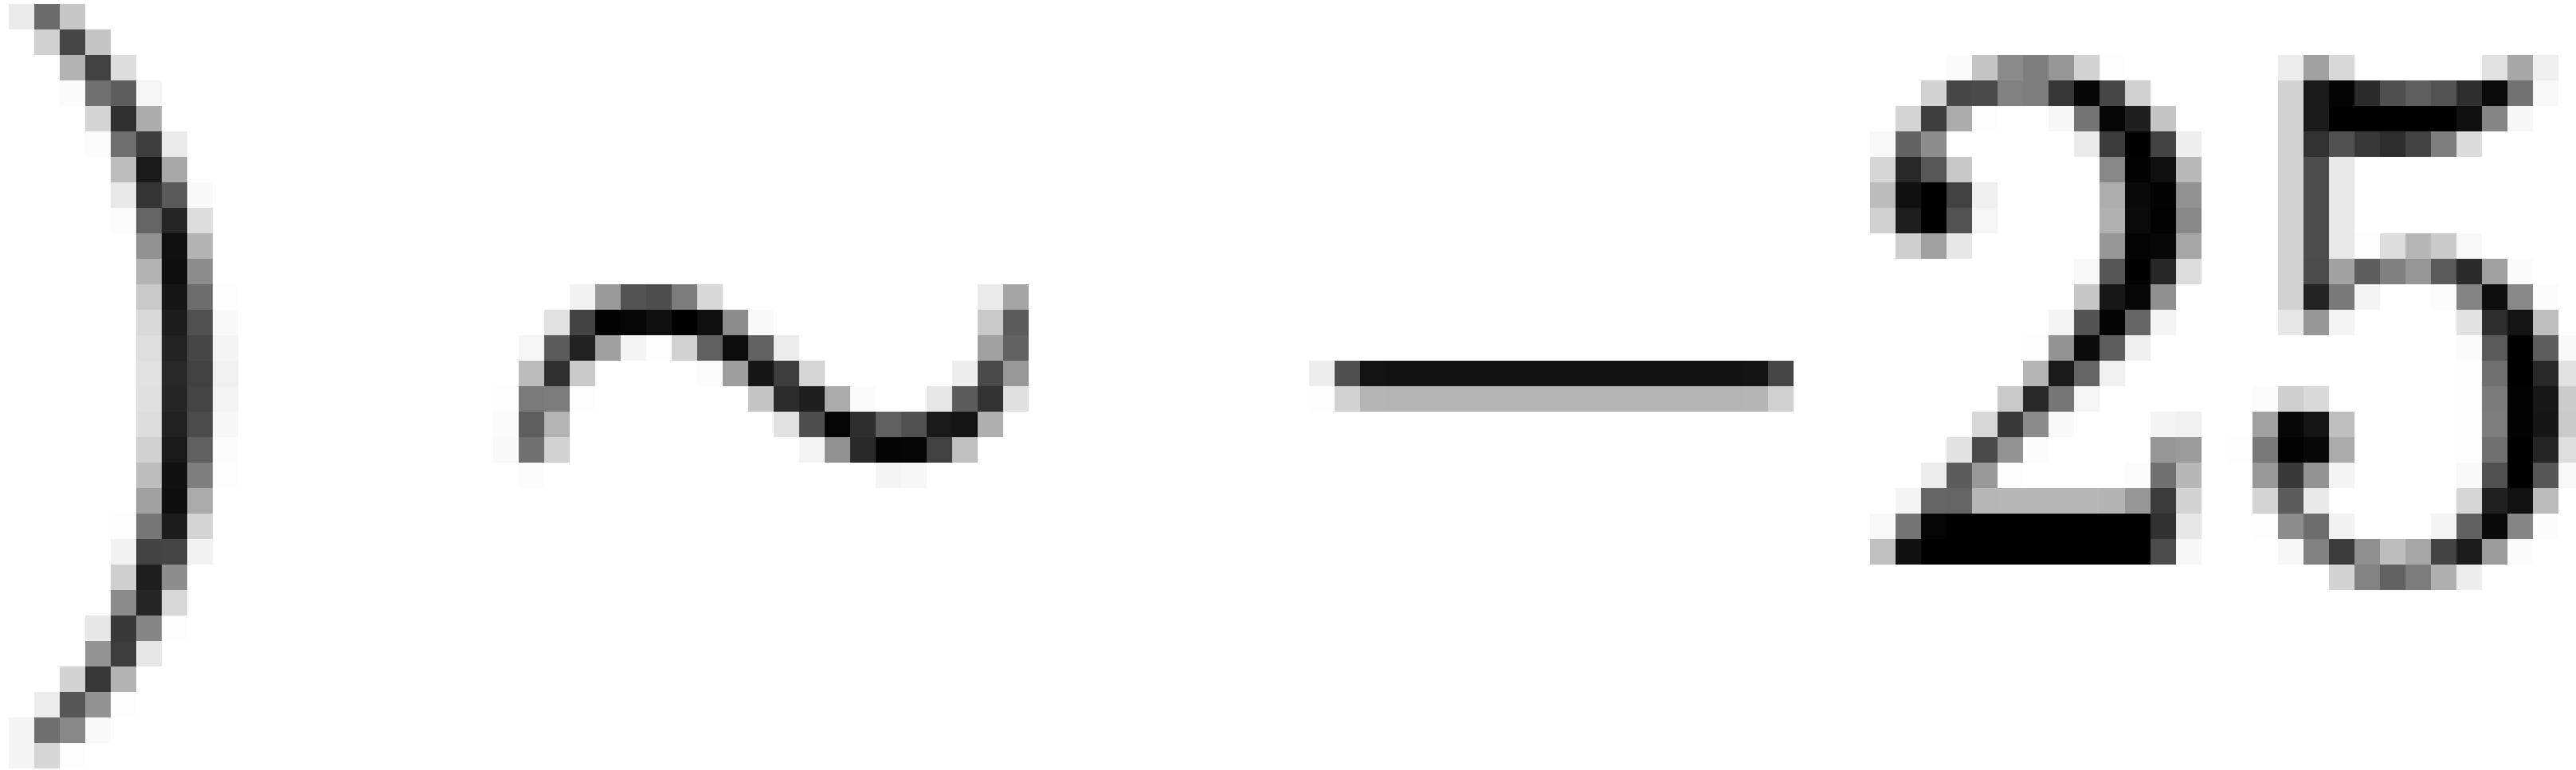





$\sigma_{11} = \alpha_1$ $P_p = 6.45$

$$\frac{k}{k_0} = \exp[-c_f(\sigma_h - \sigma_h^0)] = \exp[-0.25 \text{ MPa}^{-1} (+6.45 \text{ MPa})]$$