
Perfboard 70 × 50 mm — SOLDER SIDE — mirrored view, rev C

Seen from below: column X on the LEFT, A on the RIGHT, row 1 = USB edge. Part outlines dashed (they are on the other side).

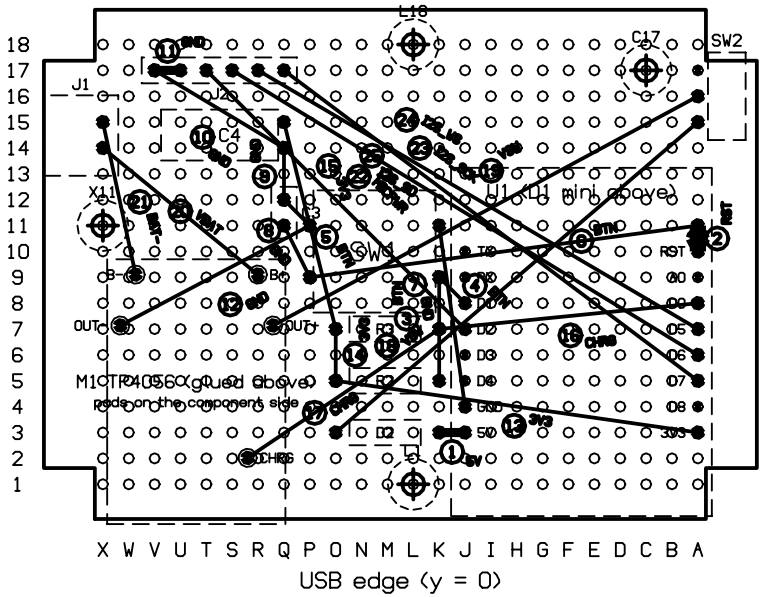

Thick short lines = bare tinned wire links; blob between A10/A11 = JP1 solder bridge (closed = battery mode). Coloured lines = insulated 26 AWG wires on this side; number in the circle = row of the legend; dots = wire ends in the holes. Max two wire ends per hole. M1 pads are on the component side (module glued): its five wires are soldered to the pads above and come down past the module edge. Source: layout/layout.json rev C (wires[]), same numbering as BUILD.md.

WIRING LEGEND (solder side)

#	net	colour	from	to	mm	cut
1	5V	bare (link)	K3	J3	2.5	—
2	RST	bare (bridge)	A10	A11	2.5	—
3	BTN	white	K5	K9	10.2	18
4	BTN	white	J8	K9	3.6	12
5	BTN	white	Q11	P9	5.7	14
6	BTN	white	A11	P9	38.4	46
7	GND	black	J4	K11	18	26
8	GND	black	P11	Q12	3.6	12
9	GND	black	Q12	Q14	5.1	13
10	GND	black	Q14	V17	14.8	23
11	GND	bare (link)	U17	V17	2.5	—
12	GND	black	M1:OUT−	P11	21	29
13	3V3	red	A3	O5	35.9	44
14	3V3	red	O5	O7	5.1	13
15	3V3	red	O7	Q15	20.9	29
16	CHRG	violet	A8	K7	25.5	34
17	CHRG	violet	K7	M1:CHRG	22.7	31
18	VSW	yellow	O3	A15	46.8	55
19	VSW	yellow	M1:OUT+	A16	47.4	55
20	VBAT	brown	M1:B+	X14	19.6	28
21	BAT−	grey	M1:B−	X15	15.3	23
22	MICPWR	green	J7	T17	35.9	44
23	I2S_SCK	blue	A5	Q17	50.8	59
24	I2S_WS	pink	A7	R17	50.1	58
25	I2S_SD	turquoise	A6	S17	53.6	62

mm = straight distance between the holes; cut = wire to cut (distance + 8 mm). 'bare' = 0.6 mm tinned wire.