2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Consoles - Insight

2000-06 ACCESSORIES & EQUIPMENT

Consoles - Insight

FRONT CONSOLE REMOVAL/INSTALLATION

NOTE:

- Use a clip remover to remove the clips.
- Take care not to scratch the seats, dashboard, and related parts.
- Remove the shift knob by turning it counterclockwise.
- 1. Remove the front console as shown.
- 2. Install the front console in the reverse order of removal, and check for damaged or stress-whitened clips, and replace them with new ones.

2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Consoles - Insight

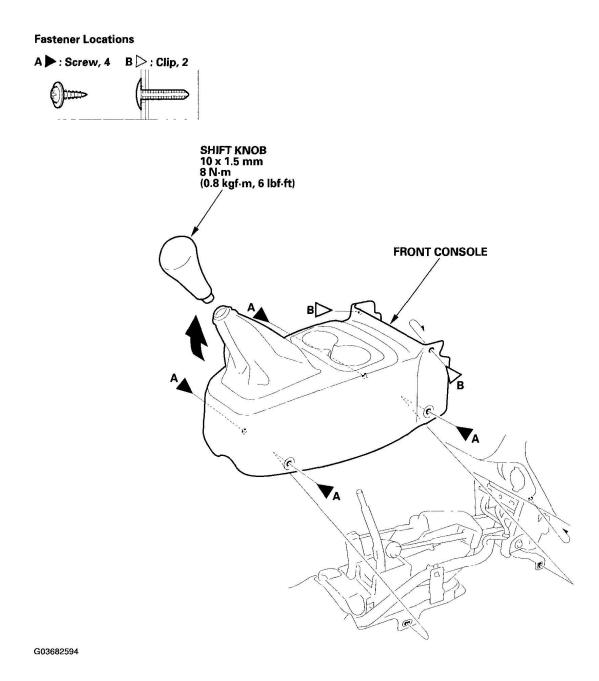


Fig. 1: Removing Front Console Courtesy of AMERICAN HONDA MOTOR CO., INC.

REAR CONSOLE REMOVAL/INSTALLATION

NOTE: Take care not to scratch the seats and related parts.

2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Consoles - Insight

- 1. Remove the rear console as shown.
- 2. Install the rear console in the reverse order of removal.

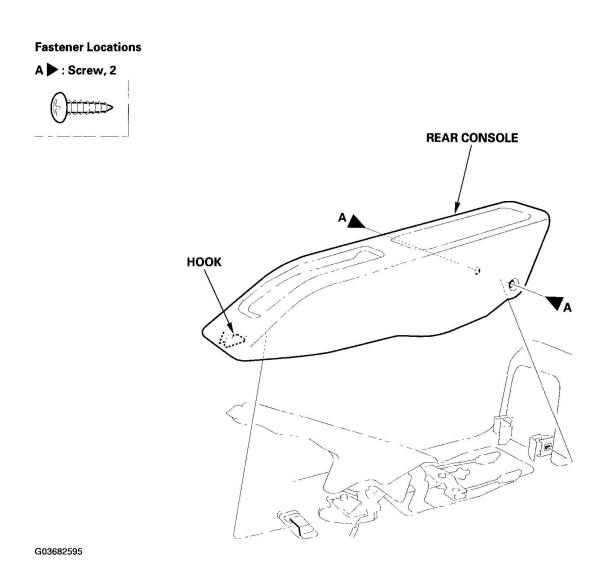


Fig. 2: Removing Rear Console Courtesy of AMERICAN HONDA MOTOR CO., INC.