



THE SIGNAL FLOW

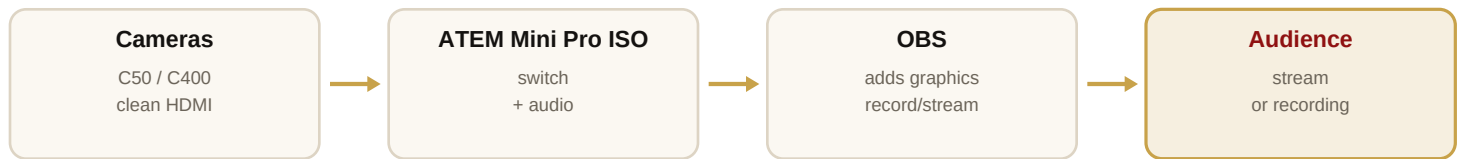

Graphics you push in the portal travel through a server “bus” that the OBS browser source polls, so they appear on the OBS overlay within about a second. OBS runs its own browser and can’t share yours — the bus is the bridge. You never paste graphics into OBS by hand.

WHAT EACH PIECE DOES

The cameras (C50 / C400)

Send a clean 1080p picture over HDMI into the switcher.

The ATEM Mini Pro ISO

Switches between cameras and mixes audio; sends one feed to the computer over USB-C.

OBS

Takes the ATEM feed, lays the Dot 1 News graphics on top, and records or streams it.

The editorial portal

Where a producer drives lower thirds, the bug, ticker, and breaking — live.

CAMERAS — CANON C50 / C400

- Turn on CLEAN HDMI output so menus, focus guides, and info don't show on air (Canon HDMI output / display-off setting).
- Set every camera to the SAME resolution and frame rate: 1920x1080 at 30p (or all 60p). Never mix frame rates.
- Run each camera's HDMI into ATEM inputs 1–4. Seat the connectors firmly; a locking HDMI adapter helps on a live set.
- Optional: let each camera also record locally as a backup while it feeds the switcher.

AUDIO

- Simplest path: plug your host mic into the ATEM's 3.5mm audio input and set its level on the ATEM.
- Or use camera audio embedded in the HDMI feed if the mic is on the camera.
- In the ATEM audio mixer, set the host mic to ON (always on). Use AFV (audio-follows-video) for sources that should only be heard when live.
- Watch levels: aim for peaks around -12 to -6 dB. If it hits red (0 dB) it's clipping — turn it down.

ATEM MINI PRO ISO

- Connect: cameras to HDMI IN 1–4; USB-C from the ATEM to the computer (it appears as a webcam); optional HDMI OUT to a monitor for multiview.
- Switch: the Program row buttons pick what's live. CUT is a hard cut; AUTO runs the selected transition at the set rate.
- Optional ISO record: plug a fast USB-C SSD into the ATEM to record every input separately for editing in Resolve later.
- The ATEM Software Control app gives deeper audio, media, and macro settings — not required for a first test.

One rule that prevents most problems:

Cameras, ATEM, and OBS should all be the same frame rate. Mixed frame rates cause stutter and sync drift.

OBS — BRING IN THE SWITCHER

- Add the ATEM feed: Sources → + → Video Capture Device → pick the Blackmagic ATEM. Set it to 1920x1080.
- Set the canvas: Settings → Video → Base and Output resolution 1920x1080, FPS matching your cameras.
- Confirm audio: the ATEM's audio arrives with that capture device — check it shows and moves in the Audio Mixer.

OBS — ADD THE DOT 1 NEWS OVERLAY

- Sources → + → Browser Source. URL: the Program URL from Broadcast → Live tools
- <https://editorial.dot1.media/broadcast/dot1-news-broadcast.html>
- Width 1920, Height 1080. Leave "Shutdown source when not visible" OFF.
- Drag the overlay ABOVE the ATEM source so graphics sit on top of the picture.
- The overlay detects OBS and runs transparent automatically — no green screen, no extra settings.

EDITORIAL — DRIVE THE GRAPHICS (from the portal, not OBS)

- Lower thirds: Broadcast → open an episode's rundown → a segment → Take to air (Clear removes it).
- Bug, ticker, breaking: Broadcast → On-air graphics → Show / Hide. Edit the ticker text and press Update.
- Anything you push appears on the OBS overlay within ~1 second. You control it from the portal; OBS just displays it.
- You need broadcast permissions (Producer or Owner) to push graphics.
- Grab the exact URLs any time from Broadcast → Live tools (Program URL for OBS, Control URL for an optional dock).

PRE-FLIGHT, IN ORDER

- ☐ Cameras: clean HDMI on, all the same 1080p frame rate, plugged into ATEM 1–4.
- ☐ Audio: mic into the ATEM, level set, mixer channel ON, no red clipping.
- ☐ ATEM: USB-C to the computer. Cut through inputs and confirm every camera shows.
- ☐ OBS: ATEM added as Video Capture Device (1080p); overlay Browser Source on top (Program URL, 1920x1080); audio visible in the mixer.
- ☐ Portal: sign in → Broadcast → On-air graphics. Show the bug → confirm it appears in OBS → Hide it.
- ☐ Lower third: open a rundown segment → Take → confirm on the OBS overlay → Clear.
- ☐ Ticker + breaking: Show each → confirm → Hide.
- ☐ Record a 60-second test: switch cameras on the ATEM while pushing a lower third and ticker. Stop and review.
- ☐ If streaming: put the stream key in OBS and go live to a private/test target first.

TROUBLESHOOTING

ATEM not listed in OBS

Re-seat USB-C; pick the ATEM in Video Capture Device; quit ATEM Software Control if it's holding the device.

A camera input is black

Check HDMI is seated and the camera outputs clean 1080p at the same fps; try another ATEM input.

Graphics don't show in OBS

Right-click the browser source → Refresh; confirm the URL is the Program URL; confirm you pushed from the portal and have broadcast rights.

Graphics won't update

Source is cached — Refresh it; confirm On-air graphics shows “On air” after you press Show.

Overlay has a black background

It's not in output mode — it must be the OBS browser source (auto), or add ?output to the URL.

No audio in OBS

Unmute the ATEM device in the OBS Audio Mixer; confirm the mic is ON in the ATEM mixer.

Stutter or lag

Match frame rates across cameras, ATEM, and OBS; use a fast USB port; close other heavy apps.