




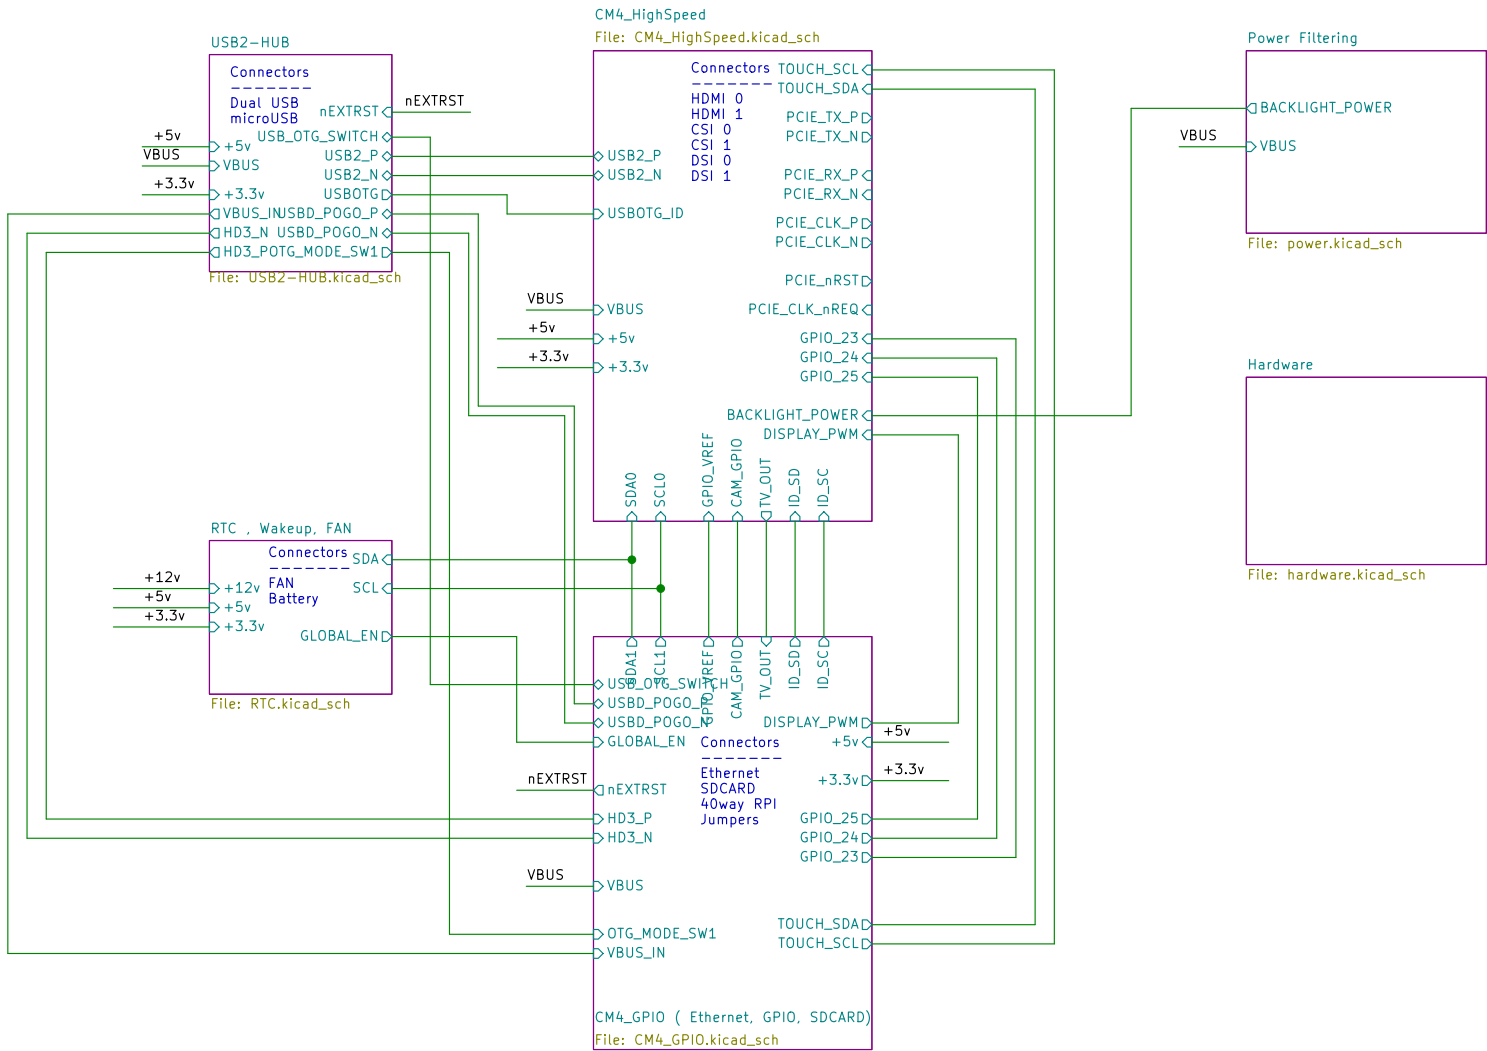


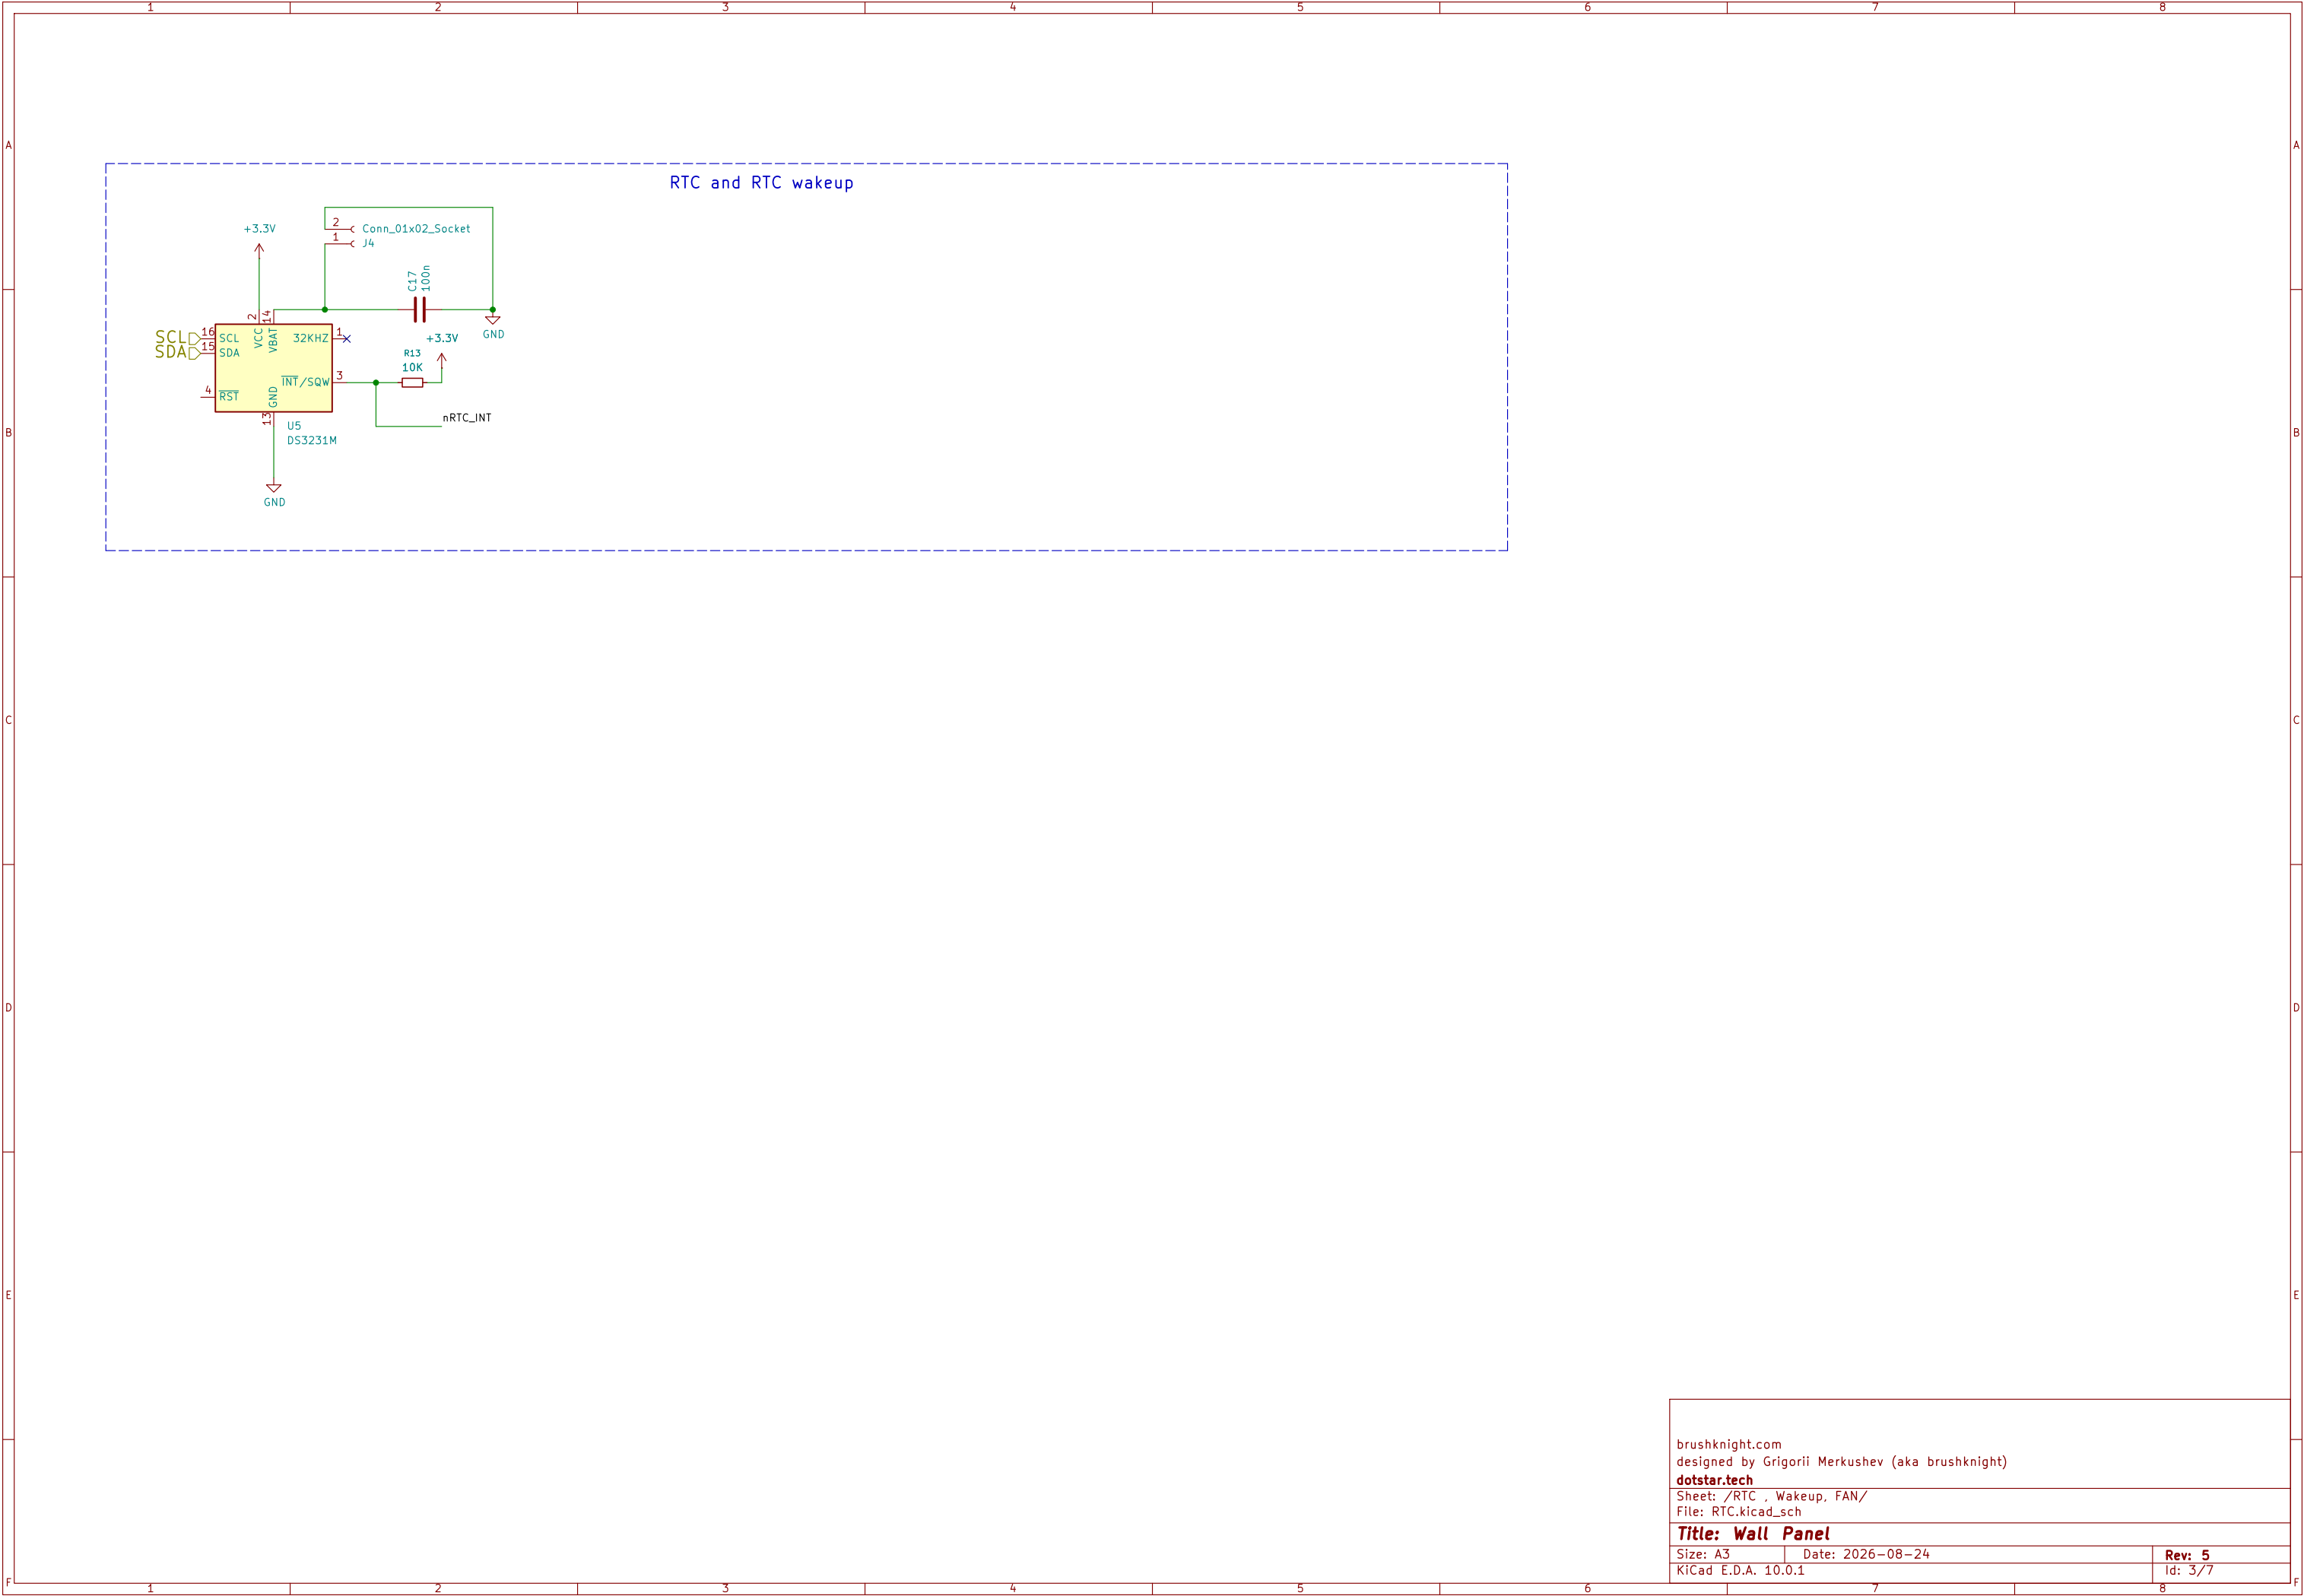


CM4 High Speed

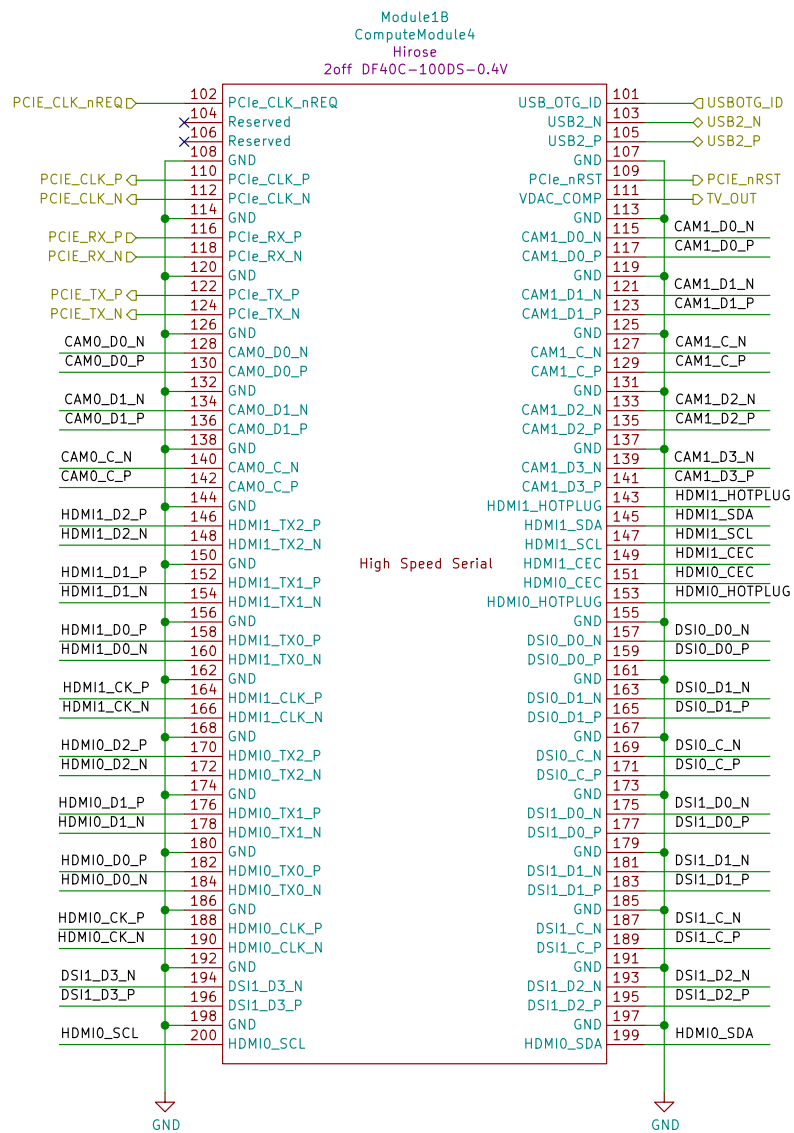


MIPI Display








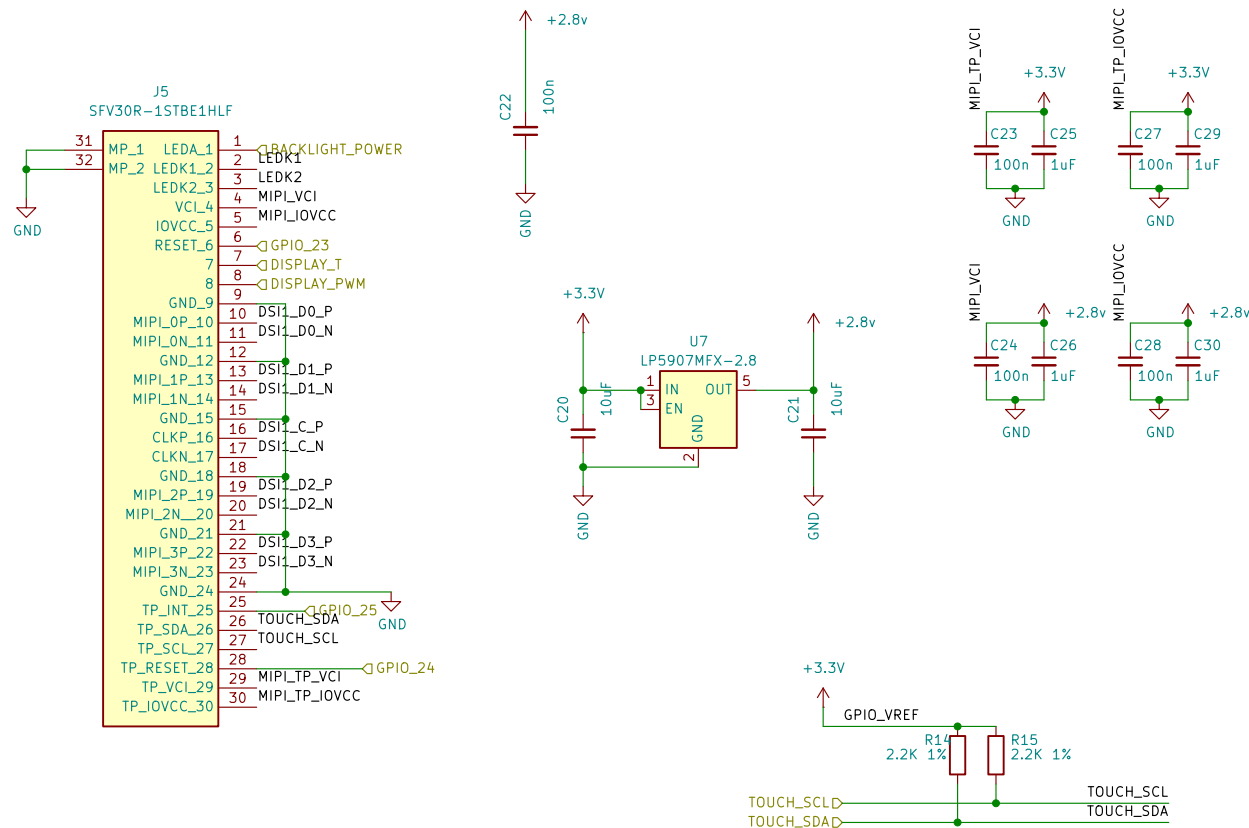


LCD backlight power



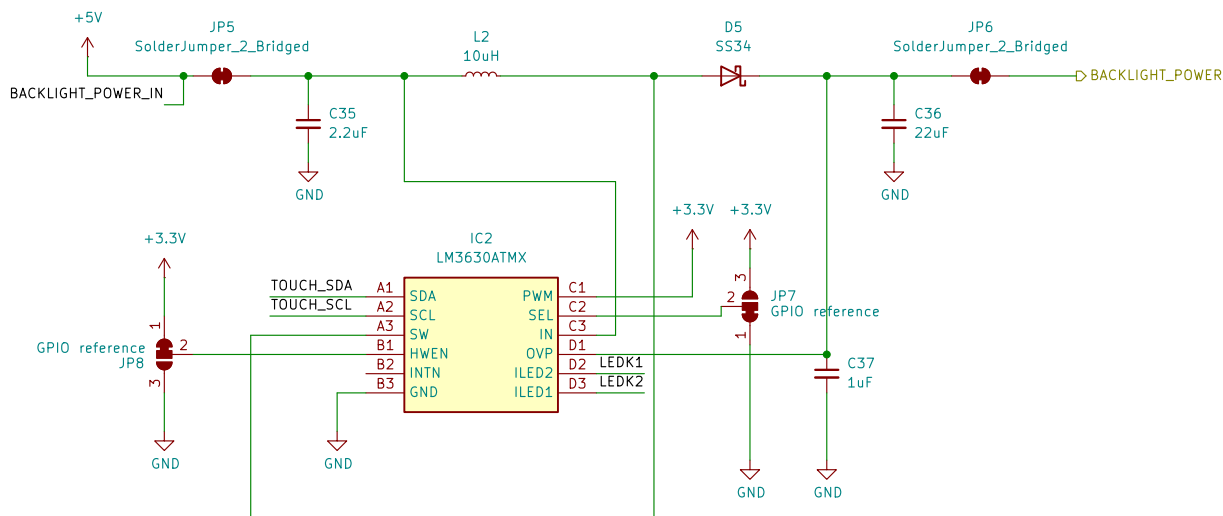


HDMI

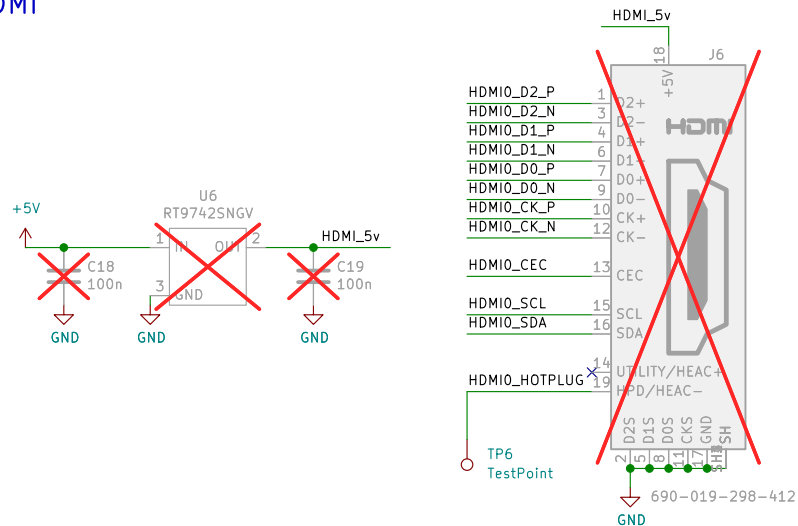

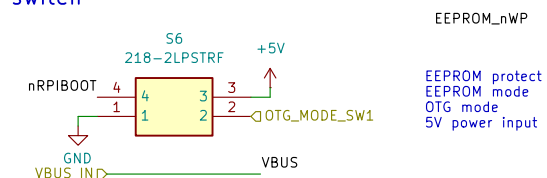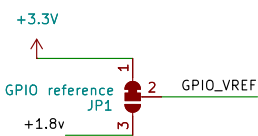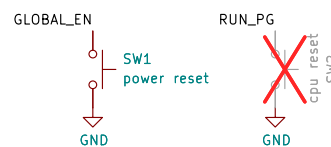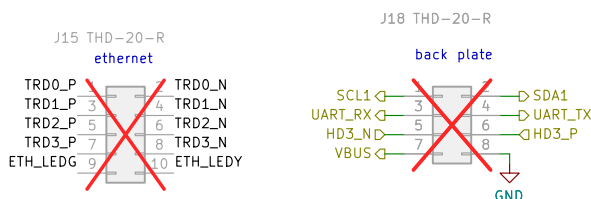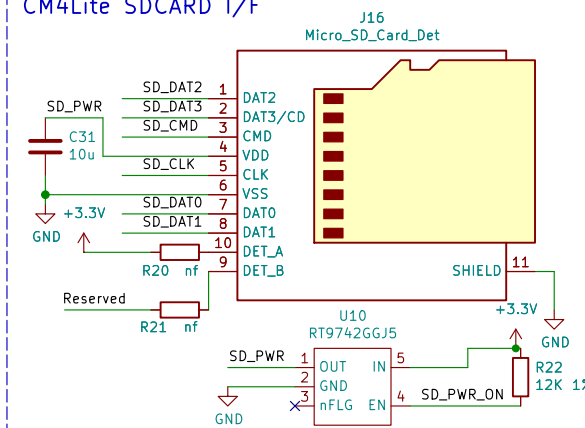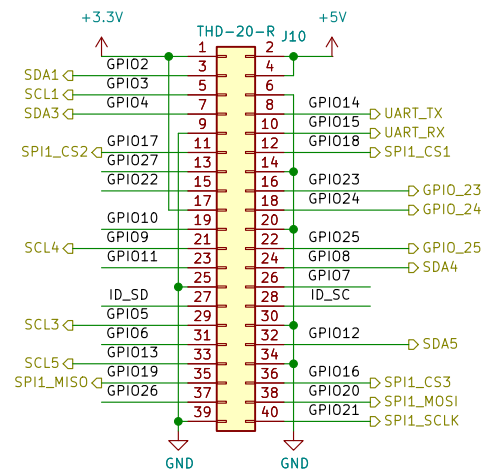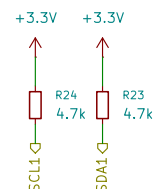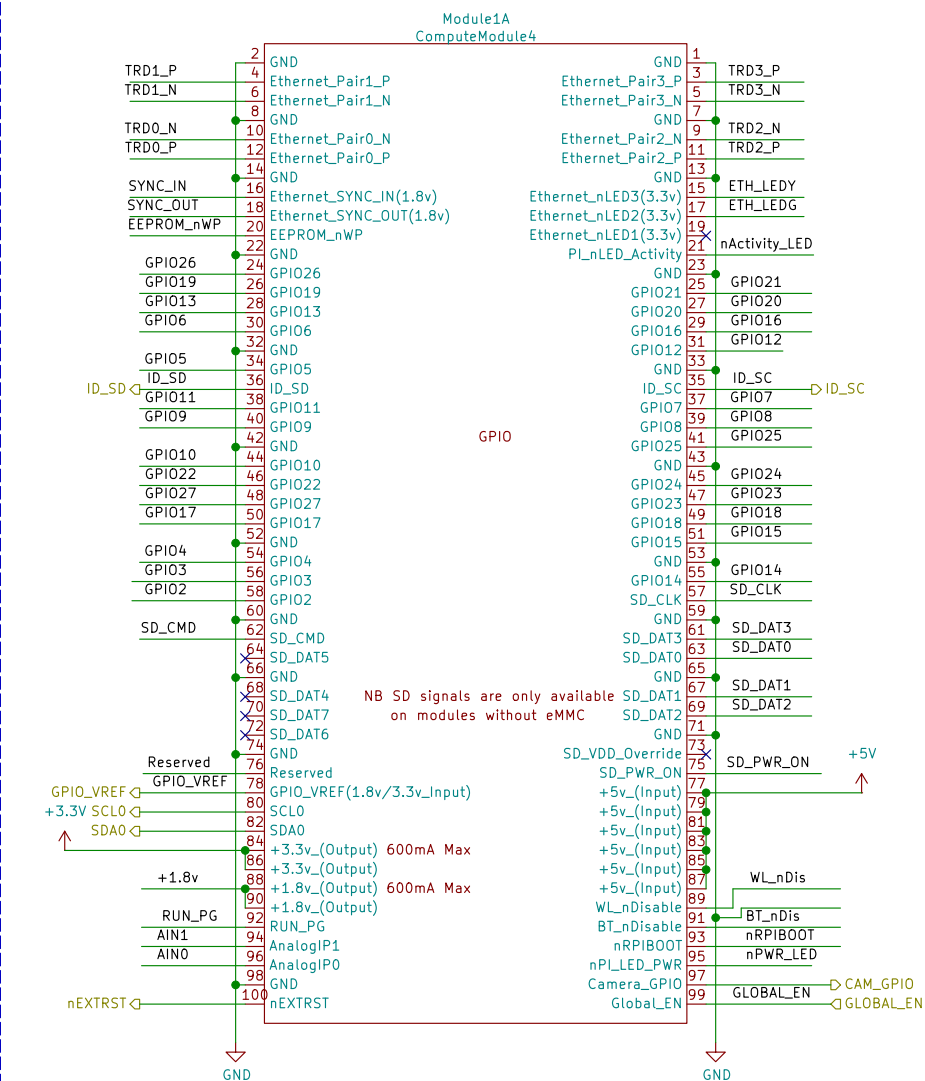


```
EEPROM_nWP
EEPROM_protect
EEPROM_mode
OTG_mode
5V_power_input
```

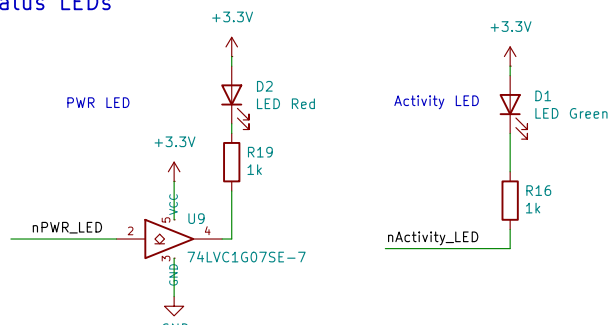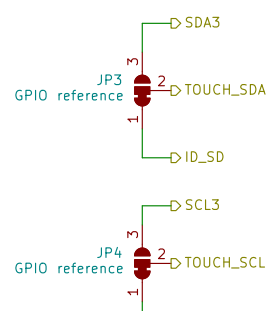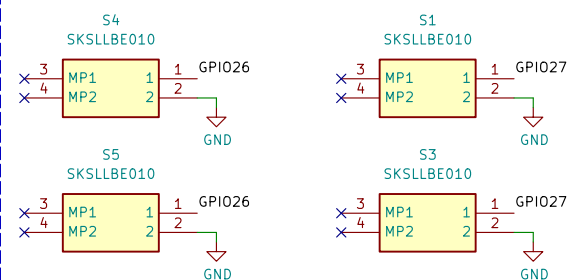

Title: Wall Panel

Rev: 5
Id: 5/7

TODO:
Add VBUS power filtering



brushknight.com
designed by Grigorii Merkushev (aka brushknight)
dotstar.tech
Sheet: /Power Filtering/
File: power.kicad_sch

Title: Wall Panel

Size: A3	Date: 2026-08-24	Rev: 5
KiCad E.D.A. 10.0.1	Id: 6/7	

