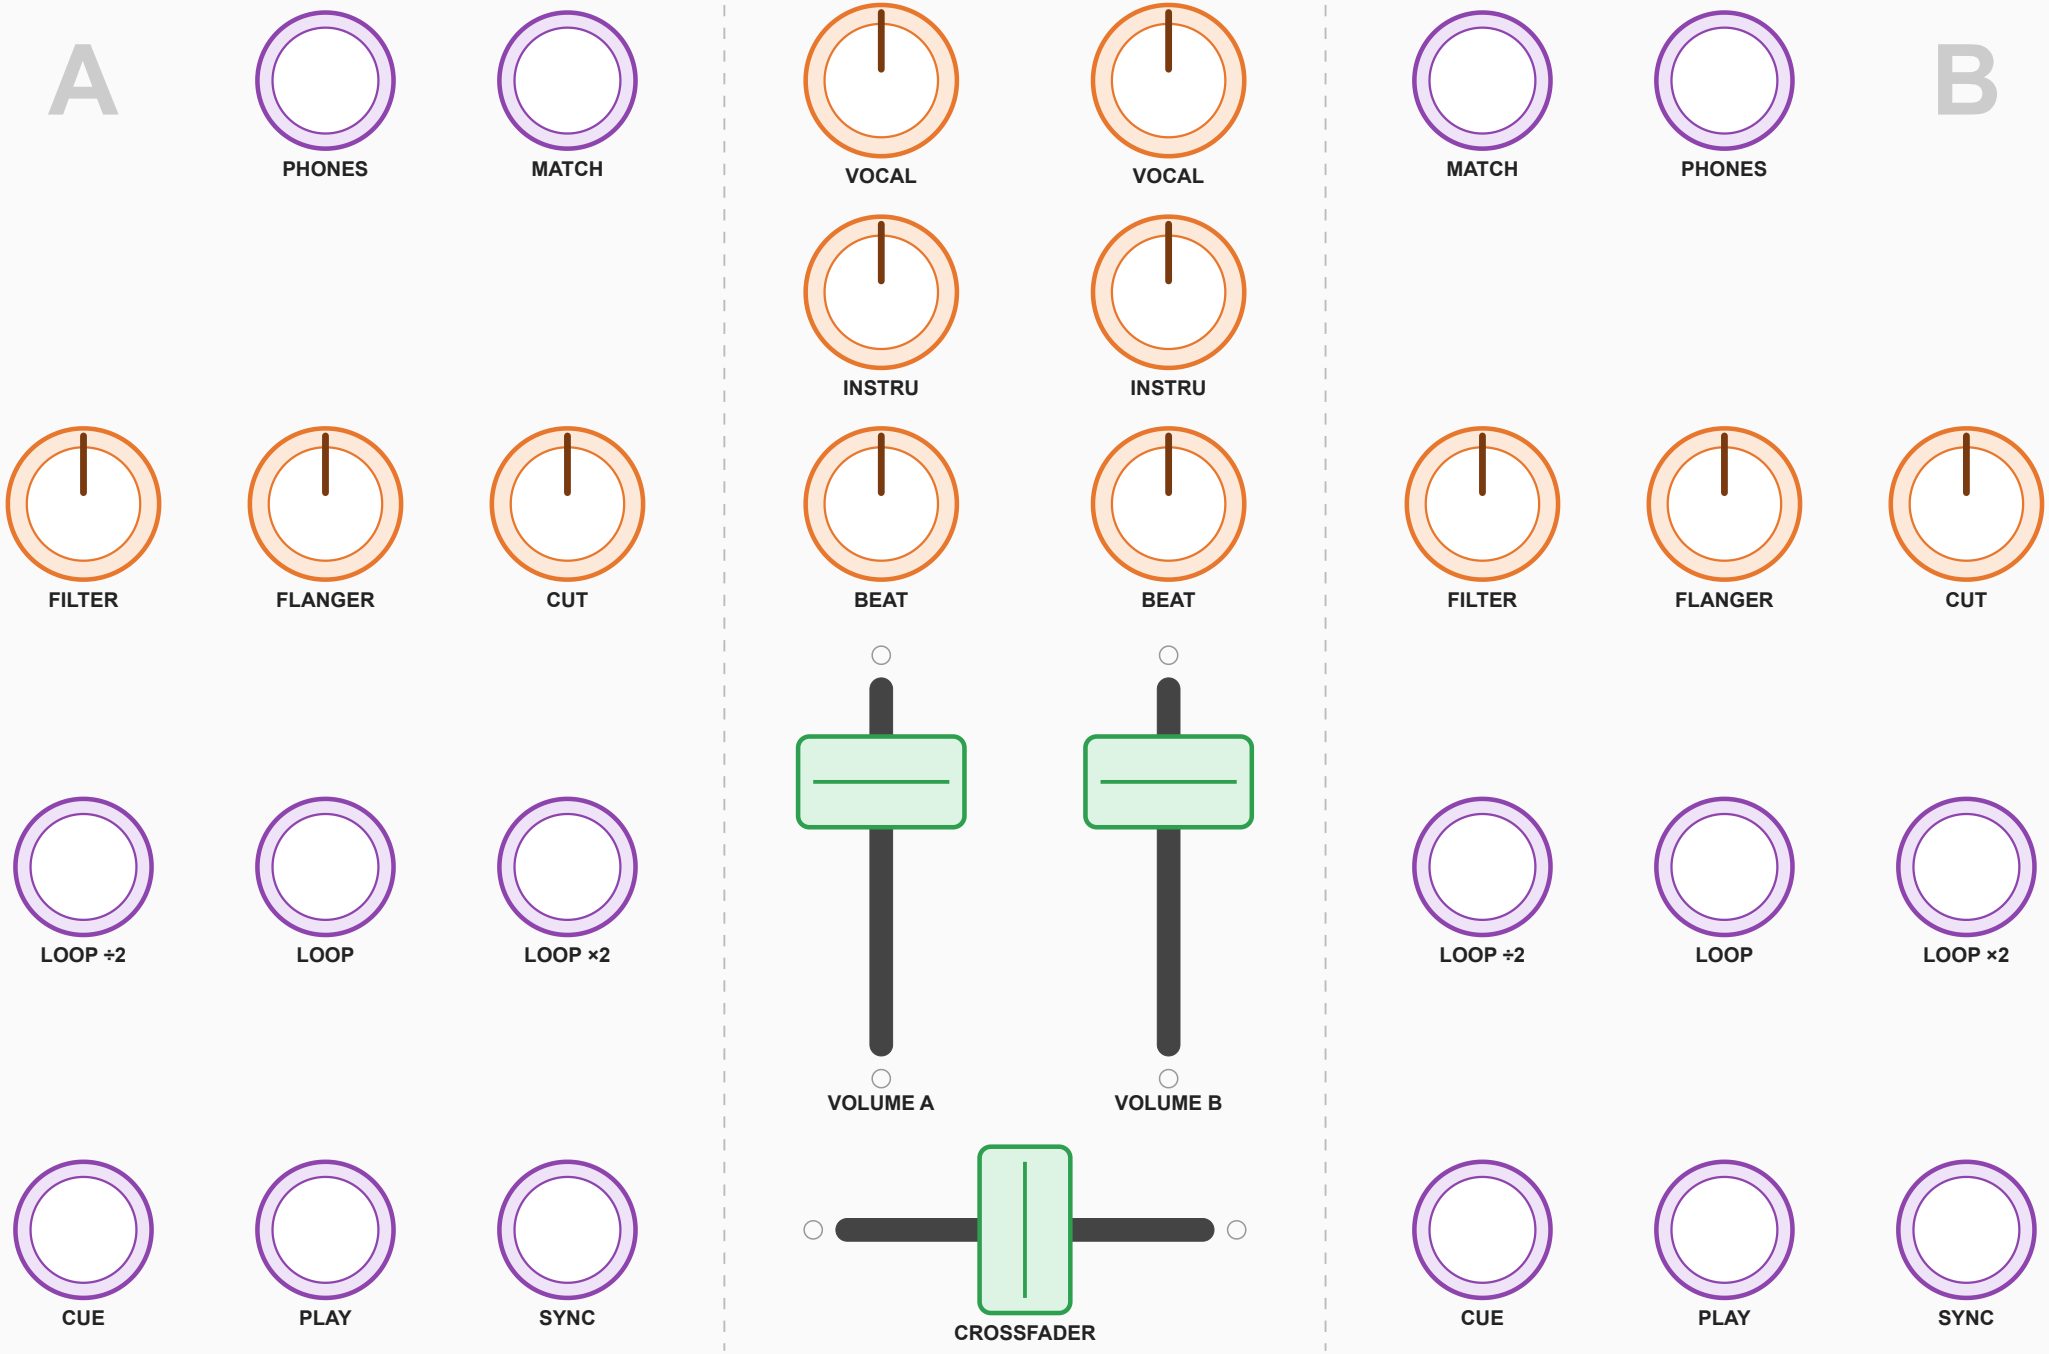


VDJ CONTROLLER · PANEL LAYOUT 1:1 · 297 × 210 mm (A4) · front view

rotary pot ×12 slide pot ×3 button ×16

Ø3.2 Ø3.2 Ø3.2

Ø16 A-PHONES

Ø16 A-MATCH

Ø7 M-VOCAL-A

Ø7 M-VOCAL-B

Ø16 B-MATCH

Ø16 B-PHONES

VDJ CONTROLLER
DRILL TEMPLATE 1:1

front view · print at 100 % / actual size

Ø7 M-INSTRU-A

Ø7 M-INSTRU-B

check both scale bars before drilling
tape to the FRONT face
centre-punch every dot, pilot Ø3, open up
M3 marks: 7 mm from both edges

Ø7 A-FILTER

Ø7 A-FLANGER

Ø7 A-CUT

Ø7 M-BEAT-A

Ø7 M-BEAT-B

Ø7 B-FILTER

Ø7 B-FLANGER

Ø7 B-CUT

Ø16 A-LOOP-HALF

Ø16 A-LOOP

Ø16 A-LOOP-DBL

50.0 mm

M2 M-VOL-A SLOT 3 × 50 M2

M2 M-VOL-B SLOT 3 × 50 M2

Ø16 B-LOOP-HALF

Ø16 B-LOOP

Ø16 B-LOOP-DBL

Ø16 A-CUE

Ø16 A-PLAY

Ø16 A-SYNC

M2 SLOT 50 × 3 M2

M-XFADER

Ø16 B-CUE

Ø16 B-PLAY

Ø16 B-SYNC

must measure 100.0 mm

Ø3.2 Ø3.2 Ø3.2

HOLE TABLE

mm from the panel's top-left corner, front view (y down)

ID	CONTROL	PART	HOLE	X	Y
A-MATCH	MATCH	button	Ø16	88.0	26.0
A-PHONES	PHONES	button	Ø16	56.0	26.0
A-FILTER	FILTER	rotary pot	Ø7	24.0	82.0
A-FLANGER	FLANGER	rotary pot	Ø7	56.0	82.0
A-CUT	CUT	rotary pot	Ø7	88.0	82.0
A-LOOP-HALF	LOOP ÷2	button	Ø16	24.0	130.0
A-LOOP	LOOP	button	Ø16	56.0	130.0
A-LOOP-DBL	LOOP ×2	button	Ø16	88.0	130.0
A-CUE	CUE	button	Ø16	24.0	178.0
A-PLAY	PLAY	button	Ø16	56.0	178.0
A-SYNC	SYNC	button	Ø16	88.0	178.0
M-VOCAL-A	VOCAL	rotary pot	Ø7	129.5	26.0
M-INSTRU-A	INSTRU	rotary pot	Ø7	129.5	54.0
M-BEAT-A	BEAT	rotary pot	Ø7	129.5	82.0
M-VOL-A	VOLUME A	slide pot	slot 3×50 vert.	129.5	130.0
M-VOL-A.1		fader screw	Ø2.4 (M2)	129.5	102.0
M-VOL-A.2		fader screw	Ø2.4 (M2)	129.5	158.0
M-VOCAL-B	VOCAL	rotary pot	Ø7	167.5	26.0
M-INSTRU-B	INSTRU	rotary pot	Ø7	167.5	54.0
M-BEAT-B	BEAT	rotary pot	Ø7	167.5	82.0
M-VOL-B	VOLUME B	slide pot	slot 3×50 vert.	167.5	130.0
M-VOL-B.1		fader screw	Ø2.4 (M2)	167.5	102.0
M-VOL-B.2		fader screw	Ø2.4 (M2)	167.5	158.0
M-XFADER	CROSSFADER	slide pot	slot 3×50 horiz.	148.5	178.0
M-XFADER.1		fader screw	Ø2.4 (M2)	120.5	178.0
M-XFADER.2		fader screw	Ø2.4 (M2)	176.5	178.0
B-MATCH	MATCH	button	Ø16	209.0	26.0
B-PHONES	PHONES	button	Ø16	241.0	26.0
B-FILTER	FILTER	rotary pot	Ø7	209.0	82.0
B-FLANGER	FLANGER	rotary pot	Ø7	241.0	82.0
B-CUT	CUT	rotary pot	Ø7	273.0	82.0
B-LOOP-HALF	LOOP ÷2	button	Ø16	209.0	130.0
B-LOOP	LOOP	button	Ø16	241.0	130.0
B-LOOP-DBL	LOOP ×2	button	Ø16	273.0	130.0
B-CUE	CUE	button	Ø16	209.0	178.0
B-PLAY	PLAY	button	Ø16	241.0	178.0
B-SYNC	SYNC	button	Ø16	273.0	178.0
FIX-1		panel fixing	Ø3.2	7.0	7.0
FIX-2		panel fixing	Ø3.2	148.5	7.0
FIX-3		panel fixing	Ø3.2	290.0	7.0
FIX-4		panel fixing	Ø3.2	7.0	203.0
FIX-5		panel fixing	Ø3.2	148.5	203.0
FIX-6		panel fixing	Ø3.2	290.0	203.0

PARTS

12 × rotary pot, cheap 16 mm (WH148 type), 10 k lin, M7 bushing: Ø7. Twist off the anti-rotation tab, or drill a Ø3 for it using the pot as a jig. Knobs up to Ø20.

3 × Bourns PTA4543-2015DPB103 (45 mm travel, 15 mm metal lever, 10 k lin). Hangs under the panel on 2 × M2 countersunk screws, 56 mm apart on the slot axis; screw length = panel + 2 mm at most, the tapped holes are shallow.

16 × TinyTronics AB6Y-M-BLACK, 16 mm momentary (not AB6Y-A: that one latches). Ø16, M16×1 nut, panel up to 7 mm, 2.8 mm spade terminals, 32 mm deep.

6 × M3 panel fixing — optional, move them to suit the enclosure.

PANEL

297 × 210 mm (A4), 2–4 mm aluminium or acrylic. The pots' M7 thread is the thickness limit; on 3 mm the fader levers stand 12 mm proud for the caps.

Leave ≥ 35 mm inside the enclosure (buttons are 32 mm deep). Behind the panel nothing comes within 12 mm of the edge, so walls up to ~11 mm thick clear everything.

Spacing: deck columns 32 mm, mixer columns 38 mm, EQ rows 28 mm, deck rows ~50 mm. Every row lines up across the whole panel.

DRILLING

Print page 2 at 100 % ("actual size", no fit-to-page). Check the 100 mm and 50 mm bars with a ruler — printers can scale x and y differently. The M3 marks are 7 mm from both edges: align the sheet by those if the printer shifted the image.

Tape it to the FRONT face. Centre-punch every dot (slot ends included), pilot Ø3 everywhere.

Ø16 and Ø7: step drill. Slots: Ø3 at both end marks, cut between with a fret/coping saw, file to the lines; that gives the lever 1 mm spare at each end of travel.

Drill the M2 holes before the slots: there is only 1.8 mm of web between them.