

Precision Illumination Signal Modulation (PrISM)

1.20

Features

- Programmable flicker-free dimming resolution from 2 to 32 bit
- Two pulse density outputs
- Programmable output signal density
- · Serial output bit stream
- Continuous run mode
- User configurable sequence start value
- Standard or custom polynomials provided for all sequence lengths
- Kill input disables pulse density outputs and forces them low
- Enable input provides synchronized operation with other components
- Reset input allows restart at sequence start value for synchronization with other components
- Terminal Count Output for 8, 16, 24 and 32-bit sequence lengths.

General Description

The Precision Illumination Signal Modulation (PrISM) component uses a linear feedback shift register (LFSR) to generate a pseudo random sequence. The sequence outputs a pseudo random bit stream as well as up to two user adjustable pseudo random pulse densities. The pulse densities may range from 0 to 100%.

The LFSR is of the Galois form (sometimes known as the modular form) and utilizes the provided maximal length codes. The PrISM component runs continuously after started and as long as the Enable input is held high. The PrISM pseudo random number generator may be started with any valid seed value excluding 0.

When to use a PrISM

The PrISM component provides modulation technology that significantly reduces low-frequency flicker and radiated electro-magnetic interference (EMI) which are common problems with high brightness LED designs. The PrISM is also useful in other applications requiring this benefit, such as motor controls and power supplies.

Input/Output Connections

This section describes the various input and output connections for PrISM.

clock - Input

The clock input defines the signal to compute Pseudo Random Sequence.

reset - Input

The Reset Input, resets the pseudo random number to the start value at high state.

kill – Input

The active high Kill input disables the PrISM pulse density outputs and sets them to 0 untill kill is released low.

enable - Input

The PrISM component runs after started and as long as the Enable input is held high. This input provides synchronized operation with other components.

pulse_den0 / pulse_den1 - Outputs

Two Pulse Density outputs are available; both are derived from the same Pseudo Random Sequence. Each output is generated by comparing the desired pulse density value with the current pseudo random number. If the pulse density type is configured as "Less Than Or Equal To" the output is high while the pseudo random number is less than or equal to the pulse density value. The second option is to set the pulse density type to "Greater Than Or Equal To" and the output is high while the pseudo random number is greater than or equal to the pulse density value.

bitstream – Output

The Bitstream output continuously outputs the LSb of the LFSR.


tc - Output



Parameters and Setup

Drag a PrISM component onto your design and double-click it to open the Configure dialog.

Figure 1 Configure PrISM Dialog

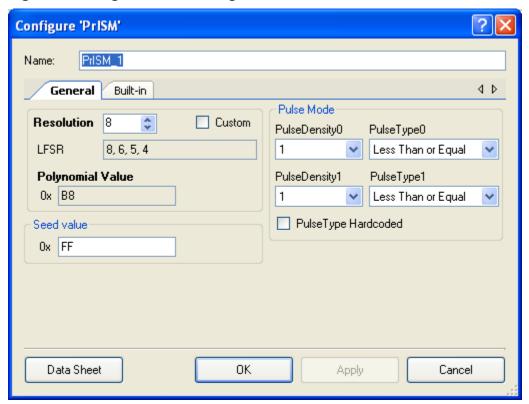

PrISM component contains the following parameters:

Resolution

This parameter defines the PrISM maximal code length (period). The maximal code length is (2^{Resolution} – 1). Possible values include 2 - 32 bits. The maximal length code sets the length of the pseudo random number generator and therefore the length of the sequence to be generated. Longer sequences increase the pulse density resolution and lower the radiated EMI. The maximal length codes listed in the following table are provided in the Galois form and require no conversion prior to use in the PSoC3 UDB ALU.

Resolution	LFSR
2	2, 1
3	3, 2
4	4, 3
5	5, 4, 3, 2
6	6, 5, 3, 2
7	7, 6, 5, 4



Resolution	LFSR
8	8, 6, 5, 4
9	9, 8, 6, 5
10	10, 9, 7, 6
11	11, 10, 9, 7
12	12, 11, 8, 6
13	13, 12, 10, 9
14	14, 13, 11, 9
15	15, 14, 13, 11
16	16, 14, 13, 11
17	17, 16, 15, 14
18	18, 17, 16, 13
19	19, 18, 17, 14
20	20, 19, 16, 14
21	21, 20, 19, 16
22	22, 19, 18, 17
23	23, 22, 20, 18
24	24, 23, 21, 20
25	25, 24, 23, 22
26	26, 25, 24, 20
27	27, 26, 25, 22
28	28, 27, 24, 22
29	29, 28, 27, 25
30	30, 29, 26, 24
31	31, 30, 29, 28
32	32, 30, 26, 25

Polynomial Value

This parameter is represented in the hexadecimal form. The correct polynomial is chosen based on the Resolution selected. You may optionally specify a custom polynomial.

Seed Value

This parameter by default is set to the maximum possible value $(2^{Resolution} - 1)$. This value can be changed to any value except 0. The Seed value is represented in the hexadecimal form.

Warning Changing the Resolution causes the Seed Value to be set to the default value.

Pulse Mode

These parameter values are chosen from combo boxes. Available values are from 1 to $2^{Resolution}$ - 1 with a step $2^{Resolution}$. Pulse compare type can be selected "Less Than Or Equal To" or "Greater Than Or Equal To".



PulseType Hardcoded

The PulseType Hardcoded parameter saves recouses (control register) when enabled, but release possibility to change Pulse Type by PrISM_SetPulse0Mode()/ PrISM_SetPulse1Mode() APIs. PrISM_Stop() function also is not available if this parameter enabled, to stop PrISM use "enable" input.

Local Parameters (For API usage)

These parameters are used in the API and not exposed in the GUI; however, these are used in the APIs.

- PolyValue (uint32) Contains polynomial value in hexadecimal form. The default is 0xB8h (LFSR= [8,6,5,4]).
- **Density0(uint32)** Contains density0 value in hexadecimal form.
- **Density1(uint32)** Contains density1 value in hexadecimal form.
- **CompareType0(CompareType)** Contains Pulse Type for Density0 which may be "Less Than or Equal" or "Greater Than or Equal".
- CompareType1 (CompareType) Contains Pulse Type for Density1 which may be "Less Than or Equal" or "Greater Than or Equal".

Clock Selection

There is no internal clock in this component. You must attach a clock source. The maximum frequency input is 67MHz.

Placement

The PrISM is placed throughout the UDB array and all placement information is provided to the API through the cyfitter.h file.

Resources

		ī	Digital Block		Memory sytes)			
Resolution	Datapaths	Macro cells	Status Registers	Control Registers	Counter7	Flash	RAM	Pins (per External I/O)
8-Bits	1	4	0	1	0	TBD	TBD	TBD
8-Bits*	1	4	0	0	0	TBD	TBD	TBD



		ſ	Digital Block		Memory ytes)			
Resolution	Datapaths	Macro cells	Status Registers	Control Registers	Counter7	Flash	RAM	Pins (per External I/O)
16-Bits	2	4	0	1	0	TBD	TBD	TBD
24-Bits	3	4	0	1	0	TBD	TBD	TBD
32-Bits	4	4	0	1	0	TBD	TBD	TBD

^{*} Parameter PulseType Hardcoded enabled.

Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name "PrISM_1" to the first instance of a component in a given design. You can rename the instance to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is "PrISM".

Function	Description
void PrISM_Start(void)	The start function sets Polynomial, Seed and Pulse Density registers provided by customizer. PrISM computation starts on rising edge of input clock.
void PrISM_Stop(void)	Stops PrISM computation. Outputs remain constant.
void PrISM_SetPulse0Mode (unit8 Pulse0Type)	Sets the pulse density type for Density0. Less than or Equal(<=) or Greater that or Equal(>=) .
void PrISM_SetPulse1Mode (unit8 Pulse1Type)	Sets the pulse density type for Density1. Less than or Equal(<=) or Greater that or Equal(>=) .
void PrISM_ReadSeed(void)	Reads the PrISM Seed register.
void PrISM_WriteSeed(unit8/16/32 Seed)	Writes the PrISM Seed register with the start value.
void PrISM_ReadPolynomial(void)	Reads the PrISM Polynomial register.
void PrISM_WritePolynomial(unit8/16/32 Polynomial)	Writes the PrISM Polynomial register with the start value.
unit8/16/32 PrISM_ReadPulse0(void)	Reads the PrISM Pulse Density0 value register.
void PrISM_WritePulse0(unit8/16/32 PulseDensity0)	Writes the PrISM Pulse Density0 value register with the new Pulse Density value.



Function	Description
unit8/16/32 PrISM_ReadPulse1(void)	Reads the PrISM Pulse Density1 value register.
void PrISM_WritePulse1(unit8/16/32 PulseDensity1)	Writes the PrISM Pulse Density1 value register with the new Pulse Density value.

void PrISM_Start(void)

Description: The start function sets polynomial, seed and pulse density registers provided by

customizer. PrISM computation starts on rising edge of input clock.

Parameters: None
Return Value: None
Side Effects: None

void PrISM_Stop(void)

Description: Stops PrISM computation. Outputs remain constant.

Parameters: None Return Value: None

Side Effects: Valid only if PulseType Hardcoded parameter disabled.

void PrISM_SetPulse0Mode(unit8 pulse0Type)

Description: Sets the pulse density type for Density0. Less than or Equal(<=) or Greater that or

Equal(>=).

Parameters: unit8 pulse0Type: Selected pulse density type.

Parameters Value	Description
PrISM_1_LESSTHAN_OR_EQUAL	The pulse_den0 output is high when the pseudo random number is less than or equal to the PulseDensity0 register value
PrISM_1_GREATERTHAN_OR_EQUAL	The pulse_den0 output is high when the pseudo random number is greater than or equal to the PulseDensity0 register value

Return Value: None

Side Effects: Valid only if PulseType Hardcoded parameter disabled.



void PrISM_SetPulse1Mode(unit8 pulse1Type)

Description: Sets the pulse density type for Density1. Less than or Equal(<=) or Greater that or

Equal(>=).

Parameters: unit8 pulse1Type: Selected pulse density type.

Parameters Value	Description
PrISM_1_LESSTHAN_OR_EQUAL	The pulse_den1 output is high when the pseudo random number is less than or equal to the PulseDensity1 register value
PrISM_1_GREATERTHAN_OR_EQUAL	The pulse_den1 output is high when the pseudo random number is greater than or equal to the PulseDensity1 register value

Return Value: None

Side Effects: Valid only if PulseType Hardcoded parameter disabled.

(uint8/16/32) PrISM_ReadSeed (void)

Description: Reads the PrISM Seed register.

Parameters: None

Return Value: (uint8/16/32) Seed register value.

Side Effects: None

void PrISM_WriteSeed (uint8/16/32 seed)

Description: Writes the PrISM Seed register with the start value.

Parameters: (unit8/16/32) seed: seed register value.

Return Value: None
Side Effects: None

(uint8/16/32) PrISM_ReadPolynomial (void)

Description: Reads the PrISM polynomial.

Parameters: None

Return Value: (uint8/16/32) value of the polynomial.

Side Effects: None



void PrISM_WritePolynomial (uint8/16/32 polynomial)

Description: Writes the PrISM polynomial.

Parameters: (unit8/16/32) polynomial: polynomial register value.

Return Value: None

Side Effects: None

(uint8/16/32) PrISM_ReadPulse0 (void)

Description: Reads the PrISM Pulse Density0 value register.

Parameters: None

Return Value: (uint8/16/32) Pulse Density0 register value.

Side Effects: None

void PrISM_WritePulse0 (uint8/16/32 pulseDensity0)

Description: Writes the PrISM Pulse Density0 value register with the new Pulse Density value.

Parameters: (unit8/16/32) pulseDensity0: Pulse Density value.

Return Value: None
Side Effects: None

(uint8/16/32) PrISM_ReadPulse1 (void)

Description: Reads the PrISM Pulse Density1 value register.

Parameters: None

Return Value: (uint8/16/32) Pulse Density1 register value.

Side Effects: None

void PrISM_WritePulse1 (uint8/16/32 pulseDensity1)

Description: Writes the PrISM Pulse Density1 value register with the new Pulse Density value.

Parameters: (unit8/16/32) pulseDensity1: Pulse Density value.

Return Value: None
Side Effects: None



Sample Firmware Source Code

The following is a C language example demonstrating the basic functionality of the PrISM component. This example assumes the component has been placed in a design with the default name PrISM_1."

Note If you rename your component you must also edit the example code as appropriate to match the component name you specify.


```
#include <device.h>
void main()
{
    PrISM_1_Start();
    PrISM_1_SetPulse0Mode(PrISM_1_LESSTHAN_OR_EQUAL);
    PrISM_1_SetPulse1Mode(PrISM_1_GREATERTHAN_OR_EQUAL);
    PrISM_1_ReadSeed();
    PrISM_1_WriteSeed(0xFF);
    PrISM_1_ReadPusle0();
    PrISM_1_WritePulse0(0x80);
    PrISM_1_ReadPusle1();
    PrISM_1_ReadPusle1();
    PrISM_1_WritePulse1(0x80);
}
```

Functional Description

The PrISM component runs continuously after started and as long as the "enable" input is held high. The PrISM pseudo random number generator may be started with any valid value excluding 0 allowing multiple PrISM components to run out of phase of each other to further reduce EMI. The "reset" Input, resets the pseudo random number to the start value. The active high "kill" input disables the PrISM pulse density outputs and sets them to 0 until kill is released low. The "bitstream" output continuously outputs the LSb of the LFSR.

Two Pulse Density outputs are available; both are derived from the same Pseudo Random Sequence. Each output is generating by comparing the desired pulse density value with the current pseudo random number.

The following timing diagram shows the PrISM output based on several pulse density ratios.

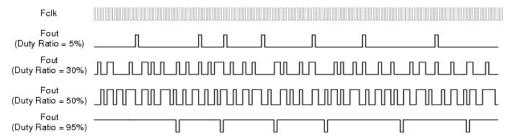


CYPRESS

Block Diagram and Configuration


The PrISM is only available as a UDB configuration. The API is described above and the registers are described here to define the overall implementation of the PrISM.

The implementation is described in the following block diagram.

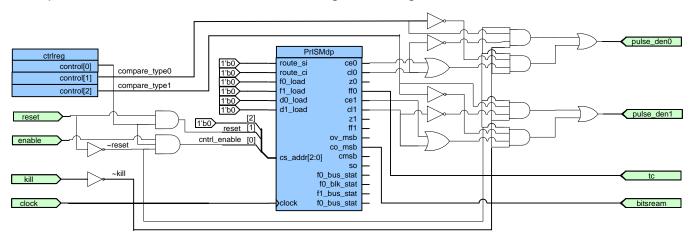

Top Level Architecture

The 2 to 32-Bit Hardware PrISM component compares the output of a pseudo-random counter with a signal density value. The comparator output asserts when the count value is less than (or greater than) and equal to the value in the Density value register.

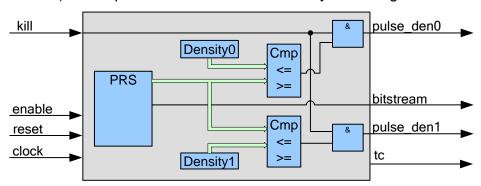

Registers

PrISM_CONTROL

Bits	7	6	5	4	3	2	1	0
Value	reserved					compare type1	compare type0	ctrl enable

ctrl enable: This bit enables generation of all internal signals described in above sections. The value can be changed by PrISM_Start() and PrISM_Stop() API.



compare type0: This bit performs compare type for pulse_den0 output. The value of this bit is determined by the choice made for the pulse compare type parameter in the component Configure dialog. Also value can be changed by PrISM_SetPulse0Mode(uint8 Pulse0Type) API.

compare type1: This bit performs compare type for pulse_den1 output. The value of this bit is determined by the choice made for the pulse compare type parameter in the component Configure dialog. Also value can be changed by PrISM_SetPulse1Mode(uint8 Pulse1Type) API.

Control register is not used if PulseType Hardcoded options is selected in customizer.

PrISM_SEED

Bits	7	6	5	4	3	2	1	0
Value				Se	ed			

Seed: Contain the initial (Seed) value and PRS residual value at the end of the computation. The value of this register is determined by the choice made for the Seed value parameter in the component Configure dialog. Also value can be changed by PrISM_WriteSeed(uint8/16/32) API and can be read by uint8/16/32 PrISM_ReadSeed() API.

PrISM SEED COPY

Bits	7	6	5	4	3	2	1	0
Value				Seed_	_Сору			

Seed_Copy: Contain the start Seed value for automatically loading PrISM_SEED register when Reset Input is active. The value of this register is determined by the choice made for the Seed value parameter in the component Configure dialog and automatically updates in case PrISM_WriteSeed(uint8/16/32) API used.

PrISM_POLYNOM

Bits	7	6	5	4	3	2	1	0
Value				Polyn	omial			

Polynomial: Correct polynomial chosen based on resolution selected. Value can be changed by PrISM_WritePolynomial(uint8/16/32) API and can be read by uint8/16/32 PrISM ReadPolynomial() API.



PrISM_DENSITY0

Bits	7	6	5	4	3	2	1	0
Value	Pulse density0							

Pulse density0 determines the value for the PrISM pulse_den0 output. The value of this register is determined by the choice made for the PulseDensity0 parameter in the Configure dialog. Also value can be changed by PrISM_WritePulse0 (uint8/16/32 PulseDensity0) API.

PrISM_DENSITY1

Bits	7	6	5	4	3	2	1	0
Value	Pulse density1							

Pulse density1 determines the value for the PrISM pulse_den1 output. The value of this register is determined by the choice made for the PulseDensity1 parameter in the Configure dialog. Also value can be changed by PrISM_WritePulse1 (uint8/16/32 PulseDensity1) API.

References

Refer also to the PRS component data sheet.

DC and AC Electrical Characteristics

The following values are indicative of expected performance and based on initial characterization data.

5.0V/3.3V DC and AC Electrical Characteristics

Parameter	Typical	Min	Max	Units	Conditions and Notes
Input					
Input Voltage Range			Vss to Vdd	V	
Maximum Clock Rate			67	MHz	



Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes			
1.20	Updated Polynomial Value and Pulse Mode. Updated APIs.			

© Cypress Semiconductor Corporation, 2009. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® Creator™, Programmable System-on-Chip™, and PSoC Express™ are trademarks and PSoC® is a registered trademark of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

CYPRESS